

Oracle® Communications Session Border Controller HDR Resource Guide



Release S-CZ8.1.0

F20248-01

February 2019

The Oracle logo, consisting of a solid red square with the word "ORACLE" in white, uppercase, sans-serif font centered within it.

ORACLE®

Copyright © 2014, 2019, Oracle and/or its affiliates.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs (including any operating system, integrated software, any programs embedded, installed or activated on delivered hardware, and modifications of such programs) and Oracle computer documentation or other Oracle data delivered to or accessed by U.S. Government end users are "commercial computer software" or "commercial computer software documentation" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, reproduction, duplication, release, display, disclosure, modification, preparation of derivative works, and/or adaptation of i) Oracle programs (including any operating system, integrated software, any programs embedded, installed or activated on delivered hardware, and modifications of such programs), ii) Oracle computer documentation and/or iii) other Oracle data, is subject to the rights and limitations specified in the license contained in the applicable contract. The terms governing the U.S. Government's use of Oracle cloud services are defined by the applicable contract for such services. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Inside are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Epyc, and the AMD logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.

Contents

About this Guide

1 Overview

What is HDR	1-1
Enabling/Disabling HDR	1-2
Protocol Use	1-3
About the CSV File	1-3
Collection Interval and Push	1-3

2 Configuring HDR

Configuring HDR via the ACLI	2-1
Enabling HDR Collection	2-1
Setting Global Collection	2-2
Setting HDR for an HA Node	2-3
Setting Multiple Collection Groups	2-4
Setting Servers as Push Receivers	2-5
Creating a Public Key Profile	2-6
SSH Operations	2-7
ACLI Instructions and Examples	2-7
Configuring SSH Properties	2-7
Import an SSH host Key	2-9
View a Public key on the OCSBC	2-10
Starting and Stopping HDR using the ACLI	2-13
Starting HDR	2-13
Stopping HDR	2-14
Purging HDR Data using the ACLI	2-14
Restarting HDR using the ACLI	2-14
Requesting HDR Collection Status	2-14

3 HDR Groups and Group Statistics

HDR Data	3-1
Windows of Time	3-2
MIB-Associated Groups and Group Statistics	3-3
system	3-3
interface	3-6
session-agent	3-7
session-realm	3-11
voltage	3-16
fan	3-17
temperature	3-18
space	3-19
network-util	3-20
thread-event	3-20
thread-usage	3-21
ACLI-Associated Groups and Group Statistics	3-22
sip-sessions	3-23
sip-acl-oper	3-24
sip-acl-status	3-24
sip-client	3-25
sip-server	3-25
sip-policy	3-26
sip-errors	3-27
sip-status	3-29
sip-invites	3-30
registration-realm	3-31
enum-stats	3-33
mgcp-state	3-33
mgcp-trans	3-34
mgcp-media-events	3-34
mgcp-oper	3-34
mgcp-acl	3-34
h323-stats	3-34
tscf-stats	3-34
sip-rate	3-38
sip-rate-per-interface	3-39
sip-rate-per-agent	3-39
dnalg-rate	3-40
enum-rate	3-40
dnalg-rate-per-addr	3-41

enum-rate	3-41
enum-rate-per-name	3-42
enum-rate-per-addr	3-42
show-memory-objects	3-43
sip-method	3-43
sip-realm-method	3-48
sip-interface-method	3-53
sip-agent-method	3-58
sip-srvcc	3-63
ext-Rx-policy-server	3-64
sa-ike	3-68
sa-imsaka	3-69
sa-srtp	3-76
sip-codec-per-realm	3-78
xcode-codec-util	3-83
xcode-session-gen-info	3-83
xcode-tcm-util	3-84

4 HDR Show Commands

Statistic Counts	4-1
Table Column Descriptions	4-1
Show Commands Associated with HDR Groups	4-2
show sipd sessions	4-2
show sipd agents	4-3
show sipd acls	4-5
show sipd client	4-6
show sipd server	4-7
show sipd policy	4-8
show sipd errors	4-9
show sipd status	4-11
show sipd invite	4-13
show sipd realms	4-13
show enum	4-17
show mgcp	4-18
show mgcp errors	4-18
show mgcp acls	4-18
show h323	4-18
show sipd rate	4-19
show sipd rate agent	4-20
show sipd rate interface	4-20

show dnsalg rate	4-22
show dnsalg rate realm-id	4-22
show dnsalg rate server-ip-addr	4-22
show enum rate	4-23
show enum rate config-name	4-23
show enum rate server-ip-addr	4-23

A CSV File Data Formats

Methods for Display and Format of CSV File Contents	A-1
Example 1 - Using the UNIX Command	A-1
Example 2 - Using the DOS Command	A-2
Example 3 - Using a Rendering Agent	A-2
Sip-invite Format of HDR Data in CSV File	A-2
Data Caveats	A-3

List of Tables

3-1 Session Agent Statistics

3-8

About this Guide

The Oracle Communications Session Border Controller HDR Resource Guide provides information about Historical Data Recording (HDR) . This document includes the following information:

- Description of HDR and how it works
- Enabling/disabling HDR
- Starting, stopping, restarting, purging, and requesting HDR status using the Acme Command Line Interface (ACLI)
- Using a Push Receiver to push the data to a server
- HDR Groups and Group Statistics
- "Show" commands associated with the HDR Groups and Group Statistics

Related Documentation

The following table describes related documentation for the Oracle Communications Session Border Controller.

Document Name	Document Description
Acme Packet 3900 Hardware Installation Guide	Contains information about the components and installation of the Acme Packet 3900.
Acme Packet 4600 Hardware Installation Guide	Contains information about the components and installation of the Acme Packet 4600.
Acme Packet 6100 Hardware Installation Guide	Contains information about the components and installation of the Acme Packet 6100.
Acme Packet 6300 Hardware Installation Guide	Contains information about the components and installation of the Acme Packet 6300.
Acme Packet 6350 Hardware Installation Guide	Contains information about the components and installation of the Acme Packet 6350.
Release Notes	Contains information about the current documentation set release, including new features and management changes.
ACLI Configuration Guide	Contains information about the administration and software configuration of the Service Provider Oracle Communications Session Border Controller.
ACLI Reference Guide	Contains explanations of how to use the ACLI, as an alphabetical listings and descriptions of all ACLI commands and configuration parameters.
Maintenance and Troubleshooting Guide	Contains information about Oracle Communications Session Border Controller logs, performance announcements, system management, inventory management, upgrades, working with configurations, and managing backups and archives.

Document Name	Document Description
MIB Reference Guide	Contains information about Management Information Base (MIBs), Oracle Communication's enterprise MIBs, general trap information, including specific details about standard traps and enterprise traps, Simple Network Management Protocol (SNMP) GET query information (including standard and enterprise SNMP GET query names, object identifier names and numbers, and descriptions), examples of scalar and table objects.
Accounting Guide	Contains information about the Oracle Communications Session Border Controller's accounting support, including details about RADIUS and Diameter accounting.
HDR Resource Guide	Contains information about the Oracle Communications Session Border Controller's Historical Data Recording (HDR) feature. This guide includes HDR configuration and system-wide statistical information.
Administrative Security Essentials	Contains information about the Oracle Communications Session Border Controller's support for its Administrative Security license.
Security Guide	Contains information about security considerations and best practices from a network and application security perspective for the Oracle Communications Session Border Controller family of products.
Installation and Platform Preparation Guide	Contains information about upgrading system images and any pre-boot system provisioning.
Call Traffic Monitoring Guide	Contains information about traffic monitoring and packet traces as collected on the system. This guide also includes WebGUI configuration used for the SIP Monitor and Trace application.
Header Manipulation Rule Guide	Contains information about configuring and using Header Manipulation Rules to manage service traffic.

Revision History

The following table describes updates to this guide.

Date	Description
April 2018	<ul style="list-style-type: none"> Initial Release
September 2018	<ul style="list-style-type: none"> Updates SRVCC group table with 810M1 feature
February 2019	<ul style="list-style-type: none"> Corrects the "MIB-Associated Groups and Group Statistics" session-agent and session-realm MIBs.

1

Overview

This section provides an overview of Historical Data Recording (HDR) and how it works on the C-Series products. It also provides information about enabling and disabling HDR on the OCSBC.

What is HDR

Historical data recording (HDR) refers to a group of management features that allow you to configure the OCSBC to collect statistics about system operation and function, and then send those records to designated servers. System statistics, defined in detail below, are saved to a comma-separated value (CSV) file, which are then sent to the designated server(s).

Information types are grouped so that you can refer to a set of statistics by simply invoking their group name (For example, the system statistics are in a group called **System**; interface statistics are in a group called **Interface**; etc.). Within each group, there are several metrics available.

The following table describes the type of HDR statistics that the OCSBC can collect and forward to a designated server.

HDR Statistics	Description
Group Name	The name of the group that contains the HDR statistics. This name is similar to the current OCSBC ACLI parameters. For example, system, interface, session-agent, session-realm, etc. The OCSBC uses the group name when generating the .CSV file (for example, system.csv, interface.csv, etc.).
Group Statistics	Various statistical parameters within a group. These statistical parameters appear in the first record of the header in each .CSV file (for example, in the system.csv file, the header would include the statistic headings of CPU Utilization, Memory Utilization, Health Score, etc.).

HDR Statistics	Description
Type	<p>Type of statistical parameter. This document makes use of the following data types:</p> <p>counter - A counter is an integer with a minimum possible value of 0 and a maximum value of 4294967295. A counter is always increasing in value or remaining unchanged. It decreases only in response to reaching its maximum possible value, at which point its next value (when the next counted entity or event occurs) will be 0.</p> <p>gauge - A gauge is an integer with the same bounds as a counter. However, it does not always have an increasing value. Its value may go up or down.</p> <p>period - A period type represents a value determined as the sum of a number of events which occurred during a specified window of time, or stated alternatively, a time period. There are three windows defined, the "current window", the "previous window", and the "sliding window". For more information about these windows, see Windows of Time .</p> <p>config - For the config type, the value for this field comes from a configuration record.</p> <p>timeticks - For the timeticks type, each tick is 1/100th of a second.</p> <p>string - A statistic type pertains to statistics that display as an alphanumeric character string.</p>
Timer Value (seconds)	For period statistics (statistics that use a period timer), this is the default value, in seconds, of the timer. This value is usually not configurable. However, this value may fall within a range of values if applicable.
Range	The range of values that a group statistic may use when the OCSBC collects statistics.

For descriptions of specific HDR Statistics and values, see **HDR Groups and Group Statistics**.

Enabling/Disabling HDR

In the system configuration, you can enable HDR by first turning on the system's collection function, then choosing the records you want to capture, and finally setting up server(s) to which you want records sent.

The main collect configuration (found within the main system configuration) allows you to create global settings that:

- Enable or disable HDR at boot time
- Set the sample rate in seconds, or the time between sample individual collections
- Set the time, in seconds, between individual pushes to designated servers (configured in the push receiver configuration accessed via the collect configuration)
- Set the time you want the collect to start and stop; time is entered in year, month, day, hours, minutes, and seconds

You also configure settings for each group of data you want to collect, and the push receiver (server) to which you want data sent.

For more information about configuring HDR on the OCSBC, see the Configuring HDR section.

Protocol Use

You can configure HDR to send files using File Transfer Protocol (FTP) or Secure File Transfer Protocol (SFTP) for added security. FTP is the default.

Note:

Public key authentication is not available when you choose SFTP. Instead, the OCSBC uses password authentication. However, for SFTP to work, it is still required that you load the SFTP's host public key on the OCSBC.

About the CSV File

When HDR is enabled, statistical records are forwarded from the OCSBC to push servers that send the data (in standard format) to a receiving server for viewing in a comma-separated value (CSV) file on the server. Before pushing a file, the collector creates the directory by group name for which the statistic belongs (for example, fan, sip-client, system, etc.), if the directory does not exist from a previous push.

The collector can push multiple CSV files per directory. Each file is formatted as <Unix timestamp>.csv (for example, 1302041977.csv). The first record of each file is a header containing the attribute name. For example, in the System directory, a file name of 13020441977.csv can contain the header names of CPU Utilization, Memory Utilization, Health Score, Redundancy State, etc. The collector appends a Timestamp heading attribute to the beginning of every record as well. You can open the CSV file for viewing with any application that reads a CSV file format. For more information about the CSV file, see **HDR Data**.

Note:

The records in a CSV file may display differently, depending on the record data included in the file, and the method used to open the file. For more information about the display of record data in a CSV file, see Appendix A, **CSV File Data Formats**.

Collection Interval and Push

In your HDR configuration, you can set parameters that allow you to:

- Select the groups for record collection
- Set the frequency of record collection
- Set the frequency of off-box record collection

After configuring and enabling HDR, the OCSBC forwards group records to push servers that send the data to a receiving server. The number of records in a push equals the push interval divided by the sample interval time multiplied by the number of groups, plus one:

push interval ÷ sample interval time x number of groups +1 header record per group = number of records in a push

For example, if you set a push interval time of 60 minutes and a sample interval time of 5 minutes, with 10 groups, the OCSBC would send 120 group records plus 10 header records (for a total of 130 records) for each push:

$$[(60 \div 5) \times 10] + 10 = 130$$

You can configure an option parameter (disabled by default) that instructs the OCSBC to send a trap when data has been successfully pushed. This trap is defined in the `ap-smgmt.mib`. It contains the name of the node that successfully pushed the HDR file to an HDR server, a unique file name for the HDR file that was pushed, and the IP address of the push receiver (configured in the global collection configuration). For more information about the HDR SNMP traps, see the product-specific OCSBC MIB Reference Guide.

**Note:**

After each push, the OCSBC clears (deletes) all records. The OCSBCSD also clears files on system reboot, and after three consecutive push failures.

2

Configuring HDR

This section provides information and procedures for configuring HDR on the C-Series products. It also includes procedures for starting and stopping the collection of data at the Acme Packet Command Line Interface (ACLI).

Configuring HDR via the ACLI

This section provides procedures for configuring HDR. HDR configuration includes:

- setting parameters to govern sample and push intervals, and start/end times for collection
- setting parameters to support HDR across a high availability (HA) node
- setting group parameters to inform the Oracle Communications Session Border Controller (OCSBC), which groups of records to collect, when to start and stop collecting, and how often to sample for a specific group.
- setting push receivers that transport the records forwarded by the OCSBC



Note:

If you modify the HDR configuration parameters using the ACLI, the changed parameters DO NOT take affect until you reboot the OCSBC

Enabling HDR Collection

You access the parameters that enable and support HDR using the ACLI **system-config** path.

To enable HDR collection:

1. In Superuser mode, type **configure terminal** and press Enter.

```
ORACLE# configure terminal
```

2. Type **system** and press Enter.

```
ORACLE(configure)# system  
ORACLE(system)#
```

3. Type **system-config** and press Enter.

```
ORACLE(system)# system-config  
ORACLE(system-config)#
```

4. Enter **collect** and press Enter. From here, you can type a question mark (?) to see individual parameters for the configuration.

```
ORACLE(system-config)# collect
ORACLE(collect)#
```

Setting Global Collection

You access the collection configuration through the ACLI system-configuration menu. Once in the collection configuration, you can establish the global settings for HDR collection.

To set HDR global collection:

1. In Superuser mode, navigate to the collect parameter level in the ACLI.

```
ORACLE# configure terminal
ORACLE(configure)# system
ORACLE(system)# system-config
ORACLE(system-config)# collect
ORACLE(collect)#
```

2. **Set global collection parameters as applicable. Parameters include:**

- **sample-interval**—Enter the time in minutes for how often you want the OCSBC to sample data records. The default is **5**. The valid range is:
 - Minimum—1
 - Maximum—120
- **push-interval**—Enter the time in minutes for how often you want the OCSBC to send collected records to push receiver(s). The default is **15**. The valid range is:
 - Minimum—1
 - Maximum—120
- **boot-state**—Set this parameter to **enabled** to start group collection, or to **disabled** to prevent the OCSBC from collecting HDR statistics. This parameter does not go into effect until the system is rebooted. You can also use the ACLI request collect start command to start collection; using this command, you can start collection for all groups, or for one specified group. The default is **disabled**. Valid values are:
 - enabled | disabled
- **start-time**—Enter the exact date and time (for your local timezone) when you want the OCSBC to start HDR collection. You can enter **now** to set the start-time to the current time, or you can specify a time in the future. If you specify a time, it must be in the format yyyy-mm-dd-hh:mm:ss, where: yyyy is the year, mm is the month, dd is the day, hh in the hour, mm is the minutes, and ss is the second (24-hour clock). The default is **now**.
- **end-time**—Enter the exact date and time (for your local timezone) when you want the OCSBC to finish HDR collection. You can enter **never** to set the time to never end, or you can specify an end time in the future. If you specify a time, it must be in the format yyyy-mm-dd-hh:mm:ss, where: yyyy is the year,

mm is the month, dd is the day, hh in the hour, mm is the minutes, and ss is the second (24-hour clock). The default is **never**.

- **push-success-trap-state**—Set this parameter to **enabled** if you want the OCSBC to send a trap confirming successful data pushes to HDR servers. Default is **disabled**. Valid values are:
 - enabled | disabled

Setting HDR for an HA Node

If you are using the HDR feature on a High Availability (HA) node (or redundant pair of OCSBCs), several parameters in the collection configuration must be set for HDR to perform properly.

Oracle recommends strongly that you do not change these parameters from their defaults for a normal HA node configuration. Therefore, if you need to change them to support HDR, you should do so with caution.

To set HDR support across an HA node:

1. In Superuser mode, navigate to the **collect** parameter level in the ACLI.

```
ORACLE# configure terminal
ORACLE(configure)# system
ORACLE(system)# system-config
ORACLE(system-config)# collect
ORACLE(collect)#
```

2. **Set HDR collection parameters for an HA node as applicable. Parameters include:**

- **red-collect-state**—The **Red-collect-state** parameter enables the HDR data files to be replicated from the Active to the standby. This functionality ensures no data loss in case the HDR files are not pushed off of the Active before a failover. The data that is pushed to the Standby is generated on the Active SBC and reflects the Active's operating state .

Set the state of HA support for the collector function. The default is **disabled**. Valid values are:

- enabled | disabled

Note:

Changing the red-collect-state setting does not take effect until SBC is rebooted. This parameter is not RTC supported.

- **red-max-trans**—Enter the maximum number of HA synchronized transactions to maintain on the active system in the HA node. The default is **1000**. The valid range is:
 - Minimum—0
 - Maximum—999999999
- **red-sync-start-time**—Enter the amount of time, in milliseconds, that the active OCSBC checks to confirm that it is still the active system in the HA

node. If the active system is still adequately healthy, this timer resets itself. If for any reason the active has become the standby, it starts to checkpoint with the newly active system when this timer expires. The default is **5000**. The valid range is:

- Minimum—0
- Maximum—999999999
- **red-sync-comp-time**—Enter amount of time, in milliseconds, that determines how frequently after synchronization the standby OCSBC checkpoints with the active OCSBC. The first interval occurs after initial synchronizations of the systems; this is the timeout for subsequent synchronization requests. The default is **1000**. The valid range is:
 - Minimum—0
 - Maximum—999999999

Setting Multiple Collection Groups

You can configure the OCSBC to collect multiple groups of statistics. Collection group settings are accessible through the collection configuration. For specific group names, group statistics, and values, see **HDR Groups and Group Statistics**.

The sample-interval, start-time, and end-time parameters that you set for multiple collection groups override the same parameters set for global collection.

Note:

For multiple collection groups, the sample-interval value must always be smaller than the global collection parameter value for push-interval. To set multiple collection groups:

1. Access the **group-settings** configuration element.

```
ORACLE# configure terminal
ORACLE(configure)# system
ORACLE(system)# system-config
ORACLE(system-config)# collect
ORACLE(collect)#group-settings
ORACLE(group-settings)#
```

2. **group-name**—Enter the group name corresponding to the records that you want to collect; there are 25 possible groups for which the OCSBC can collect data. The **system** group name is the default for this parameter. For additional group names, see **HDR Groups and Group Statistics**.
3. **sample-interval**—Enter the time in minutes for how often you want the OCSBC to sample data records for the specified group. The default is **5**. The valid range is:
 - Minimum—1
 - Maximum—120
4. **boot-state**—Set this parameter to **enabled** to start group collection, or to **disabled** to prevent the OCSBC from collecting HDR statistics for this group. This

parameter does not go into effect until the system is rebooted. You can also use the ACLI request collect start command to start collection; using this command, you can start collection for all groups, or for one specified group. The default is **disabled**. Valid values are:

- enabled | disabled
5. **start-time**—Enter the exact date and time (for your local timezone) when you want the OCSBC to start collecting records for this group. You can enter **now** to set the start-time to the current time, or you can specify a time in the future. If you specify a time, it must be in the format yyyy-mm-dd-hh:mm:ss, where: yyyy is the year, mm is the month, dd is the day, hh in the hour, mm is the minutes, and ss is the second (24-hour clock). The default is **now**.
 6. **end-time**—Enter the exact date and time (for your local timezone) when you want the OCSBC to stop collecting records for this group. You can enter **never** to set the time to never end, or you can specify an end time in the future. If you specify a time, it must be in the format yyyy-mm-dd-hh:mm:ss, where: yyyy is the year, mm is the month, dd is the day, hh in the hour, mm is the minutes, and ss is the second (24-hour clock). The default is **never**.
 7. Type **done** to save your configuration.

Setting Servers as Push Receivers

You can configure multiple push receivers that represent FTP or SFTP destination servers for which the OCSBC pushes records. Push receiver settings are accessible through the collection configuration.

If you configure more than one server, the OCSBC sends data to all of the servers. If one server fails, the OCSBC generates an SNMP trap. The OCSBC makes 3 attempts to send data to the failed server. If the server cannot receive the data, the OCSBC clears the data for that server. For example, if there are four servers configured, and the OCSBC successfully pushes data to three of them, the OCSBC generates a trap indicating the fourth server is down and after 3 attempts to send the data, the data is cleared.

To set servers as push receivers:

1. In Superuser mode, navigate to the collect parameter level in the ACLI.

```
ORACLE# configure terminal
ORACLE(configure)# system
ORACLE(system)# system-config
ORACLE(system-config)# collect
ORACLE(collect)#
```

2. Access the push receiver (**push-receiver**) parameters.

```
ORACLE(collect)# push-receiver
ORACLE(push-receiver)#
```

- **address**—Enter the IP address of the push receiver (server) to which you want records sent. The default for this parameter is **0.0.0.0**.
- **username**—Enter the username that the OCSBC uses when it tries to send records to this push server using FTP. There is no default for this parameter.

- **password**—Enter the password (corresponding to the username) that the OCSBC uses when it sends records to this push server using FTP. There is no default for this parameter. Enter this password parameter using the following procedure:

- Type the parameter name `password`, and then press Enter.

```
ORACLE(push-receiver)# password
```

- Enter the password that the OCSBC uses to send records to the push server. The display does not echo the password you enter.

```
Enter password: [enter the password]
```

- Enter the password again to confirm that you entered the password correctly. If the passwords match, the user prompt displays to continue the push server configuration.

```
Enter password again: [enter the password again]
ORACLE(push-receiver)#
```

If the passwords do not match, an error message displays. Repeat Steps a through c to set the password.

```
Error: Password mismatch - aborted.
ORACLE(push-receiver)#
```

- **data-store**—Enter the directory on the push receiver where you want collected data placed. There is no default for this parameter.
- **protocol**—Set this parameter to the protocol with which to send HDR collection record files. Default is **FTP**. Valid values are:
 - FTP | SFTP

Note:

Public key authentication is not available when you choose SFTP. Instead, the OCSBC uses password authentication. However, for SFTP to work, it is still required that you load the SFTP's host public key on the OCSBC.

Creating a Public Key Profile

The Secure Shell (SSH) and related Secure Shell File Transfer (SFTP) protocols provide for the secure transfer of audit files and for the secure transfer of management traffic across the wancom0 interface. When using password or public key authentication with push receiver configurations, use the procedures described below to create your profiles.

Create your profile by configuring:

- SSH Properties

- Import an SSH Host Key
- Create the public key profile

The following two tasks are required for public key authentication mode only.

- Generate an SSH Key Pair
- Copy the OCSBC public key to the SFTP server

After the above, you can use this profile within the context of your FTP push configuration.

SSH Operations

SSH Version 2.0, the only version supported on the OCSBC, is defined by a series of five RFCs.

- RFC 4250, *The Secure Shell (SSH) Protocol Assigned Numbers*
- RFC 4251, *The Secure Shell (SSH) Protocol Architecture*
- RFC 4252, *The Secure Shell (SSH) Authentication Protocol*
- RFC 4253, *The Secure Shell (SSH) Transport Layer Protocol*
- RFC 4254, *The Secure Shell (SSH) Connection Protocol*

RFCs 4252 and 4253 are most relevant to OCSBC operations.

The transport layer protocol (RFC 4253) provides algorithm negotiation and key exchange. The key exchange includes server authentication and results in a cryptographically secured connection that provides integrity, confidentiality and optional compression. Forward security is provided through a Diffie-Hellman key agreement. This key agreement results in a shared session key. The rest of the session is encrypted using a symmetric cipher, currently 128-bit AES, Blowfish, 3DES, CAST128, Arcfour, 192-bit AES, or 256-bit AES. The client selects the encryption algorithm to use from those offered by the server. Additionally, session integrity is provided through a cryptographic message authentication code (hmac-md5, hmac-sha1, umac-64 or hmac-ripemd160).

The authentication protocol (RFC 4252) uses this secure connection provided and supported by the transport layer. It provides several mechanisms for user authentication. Two modes are supported by the OCSBC: traditional password authentication and public-key authentication.

ACLI Instructions and Examples

This section provides ACLI procedures for SFTP push configurations, including SSH property configuration, certificate import, and public key profile configuration on your OCSBC.

Configuring SSH Properties

The single instance **ssh-config** configuration element specifies SSH re-keying thresholds.

1. From admin mode, use the following command path to access the ssh configuration element:

```
ORACLE# configure terminal
ORACLE(configure)# security
ORACLE(security)# admin-security
ORACLE(admin-security)# ssh-config
ORACLE(ssh-config)#
```

ssh configuration element properties are shown below with their default values

```
rekey-interval      60
rekey-byte-count    31
```

2. **rekey-interval**—specifies the maximum allowed interval, in minutes, between SSH key negotiations

Allowable values are integers within the range 60 through 600, with a default of 60 (minutes). Shorter lifetimes provide more secure connections.

Works in conjunction with **rekey-byte-count**, which sets a packet-based threshold, to trigger an SSH renegotiation. If either trigger is activated, an SSH renegotiation is begun.

Retain the default value, or specify a new value.

```
ORACLE(ssh-config)# rekey-interval 20
ORACLE(ssh-config)
```

3. **rekey-byte-count**—specifies the maximum allowed send and receive packet count, in powers of 2, between SSH key negotiations

Allowable values are integers within the range 20 (1,048,576 packets) through 31 (2,147,483,648 packets), with a default of 31 (2^{31}). Smaller packet counts provide more secure connections.

Works in conjunction with **rekey-interval**, which sets a time-based threshold, to trigger an SSH renegotiation. If either trigger is activated, an SSH renegotiation is begun.

Retain the default value, or specify a new value.

```
ORACLE(ssh-config)# rekey-packet-count 24
ORACLE(ssh-config)
```

A sample SSH configuration appears below:

```
ORACLE(ssh-config)# rekey-interval 20
ORACLE(ssh-config)# done
ORACLE(ssh-config)# exit
ORACLE(admin-security)#
```

Specifies a key renegotiation every 20 minutes, or at the reception/transmission of 2,147,483,648 packets, whichever comes first.

Import an SSH host Key

Importing a host key requires access to the SFTP server or servers which receive audit log transfers. Access is generally most easily accomplished with a terminal emulation program such as PuTTY, SecureCRT, or TeraTerm.

1. Use a terminal emulation program to access the SSH file system on a configured SFTP server.
2. Copy the server's base64 encoded public file making sure to include the Begin and End markers as specified by RFC 4716, *The Secure Shell (SSH) Public Key File Format*.

For OpenSSH implementations host files are generally found at `/etc/ssh/ssh_host_dsa_key.pub`, or `/etc/ssh/ssh_host_rsa.pub`. Other SSH implementations can differ.

3. From admin mode use the **ssh-pub-key** command to import the host key to the OCSBC.

For importing a host key, this command takes the format:

```
ssh-pub-key import known-host <name>
```

where name is an alias or handle assigned to the imported host key, generally the server name or a description of the server function.

```
ORACLE# ssh-pub-key import known-host fedallah
```

IMPORTANT:

Please paste ssh public key in the format defined in rfc4716.
Terminate the key with ";" to exit.....

4. Paste the public key with the bracketing Begin and End markers at the cursor point.
5. Enter a semi-colon (;) to signal the end of the imported host key.
6. Follow directions to save and activate the configuration.

The entire import sequence is shown below.

```
ORACLE# ssh-pub-key import known-host fedallah
```

IMPORTANT:

Please paste ssh public key in the format defined in rfc4716.
Terminate the key with ";" to exit.....

```
---- BEGIN SSH2 PUBLIC KEY ----
```

```
Comment: "2048-bit RSA, converted from OpenSSH by klee@acme54"
```

```
AAAAB3NzaC1yc2EAAAABIwAAAQEA70Bf08jJe7MSMgerjDTgZpbPblrX4n17LQJgPC7clL
cDGEtKSiVt5MjcSav3v6AEN2pYZih0xd2Zzismpoo019kkJ56s/IjGstEzqXMKHKUr9mBV
qvqIEOTqbowEi5sz2AP3lGUjQTCKZRF1XOQx8A44vHZCum93/jfNRsnWQ1mhHmaZMmT2LS
hOr4J/Nlp+vpsvpdrolV6Ftz5eiVfgocxrDrjNcVtsAMyLBpDdL6e9XebQzGSS92TPuKP/
yqzLJ2G5NVFhxdw5i+FvdHz1vBdvB505y2QPj/izlu3TA/307tyntB0b7beDyIrg64Azc8
G7E3AGiH49LnBtlQf/aw==
```

```
---- END SSH2 PUBLIC KEY ----
```

```
;
SSH public key imported successfully...
WARNING: Configuration changed, run "save-config" command to save it
and run "activate-config" to activate the changes
ORACLE# save-config
checking configuration
-----
...
...
...
-----
Save-Config received, processing.
waiting for request to finish
Request to 'SAVE-CONFIG' has Finished,
Save complete
Currently active and saved configurations do not match!
To sync & activate, run 'activate-config' or 'reboot activate'.
ORACLE# activate-config
Activate-Config received, processing.
waiting for request to finish
SD is not QOS-capable
Request to 'ACTIVATE-CONFIG' has Finished,
Activate Complete
ORACLE#
```

It is important to note that it is often difficult to determine whether the server is using RSA or DSA keys for your application. Unless you can definitively determine this, bear in mind that you need to try importing both.

View a Public key on the OCSBC

You can use the `show security ssh-pub-key` command to display information about SSH keys imported to the OCSBC with the `ssh-pub-key` command; you cannot display information about keys generated by the `ssh-pub-key` command.

```
ORACLE# show security ssh-pub-key brief
login-name:
  acme74
finger-print:
  51:2f:f1:dd:79:9e:64:85:6f:22:3d:fe:99:1f:c8:21
finger-print-raw:
  0a:ba:d8:ef:bb:b4:41:d0:dd:42:b0:6f:6b:50:97:31

login-name:
  fedallah
finger-print:
  c4:a0:eb:79:5b:19:01:f1:9c:50:b3:6a:6a:7c:63:d5
finger-print-raw:
  ac:27:58:14:a9:7e:83:fd:61:c0:5c:c8:ef:78:e0:9c
ORACLE#
```

This command displays summary information for all SSH imported keys.

- `login-name`: contains the name assigned to the RSA or DSA public key when it was first imported.
- `finger-print`: contains the output of an MD5 hash computed across the base64-encoded public key.
- `finger-print-raw`: contains the output of an MD5 hash computed across the binary form of the public key

```
ORACLE# show security ssh-pub-key brief fedallah
login-name:
    fedallah
finger-print:
    c4:a0:eb:79:5b:19:01:f1:9c:50:b3:6a:6a:7c:63:d5
finger-print-raw:
    ac:27:58:14:a9:7e:83:fd:61:c0:5c:c8:ef:78:e0:9c
ORACLE#
```

This command displays summary information for a specific SSH public key (in this case `fedallah`).

```
ORACLE# show security ssh-pub-key detail fedallah
host-name:
    fedallah
comment:
    "2048-bit RSA, converted from OpenSSH by klee@acme54"
finger-print:
    c4:a0:eb:79:5b:19:01:f1:9c:50:b3:6a:6a:7c:63:d5
finger-print-raw:
    ac:27:58:14:a9:7e:83:fd:61:c0:5c:c8:ef:78:e0:9c
pub-key:
```

```
AAAAB3NzaC1yc2EAAAABIwAAAQEA7OBf08jJe7MSMgerjDTgZpbPblrX4n17LQJgPC7c1LcDGET
KSiVt5MjcSav3v6AEN2pYZihOxd2Zzismpoo019kkJ56s/
IjGstEzqXMKHKU9mBVqvqIEOTqbowEi5sz2AP3lGUjQTCKZRF1XOQx8A44vHZCum93/
jfnRsnWQ1mhHmaZMmT2LShOr4J/Nlp
+vpsvpdrolV6Ftz5eiVfgocxrDrjNcVtsAMyLBpDdL6e9XebQzGSS92TPuKP/
yqzLJ2G5NVFhxdw5i+FvdHz1vBdvB505y2QPj/iz1u3TA/
307tyntBOb7beDyIrg64Azc8G7E3AGiH49LnBt1Qf/aw==
```

```
modulus: (256)
ECE05FD3C8C97BB3123207AB8C34E06696CF6E5AD7E27D7B2D02603C2EDC94B703184B4A4A2
56DE4C8DC49ABF7BFA004376A5866284EC5DD99CE2B26A68A34D7D924279EACFC88C6B2D133
A9730A1CA52BF66055AFA8810E4EA6E8C048B9B33D803F7D4652341308A6511755CE431F00
E38BC7642BA6F77FE37CD46C9D64359A11E66993264F62D284EAF827F365A7EBE9B2FA5DAE8
955E85B73E5E8957E0A1CC6B0EB8CD715B6C00CC8B0690DD2FA7BD5DE6D0CC6492F764CFB8A
3FFCAACCB2761B9355161C5DC398BE16F747CF5BC176F079D39CB640F8FF8B3D6EDD303FDCE
EEDCA7B4139BEDB783C88AE0EB803373C1BB137006887E3D2E706D9507FF6B
exponent: (1)
23
ORACLE#
```

This command displays detailed information for specific SSH public key (in this case `fedallah`, an RSA key).

- `host-name`: contains the name assigned to the RSA key when it was first imported
- `finger-print`: contains the output of an MD5 hash computed across the base64-encoded RSA public key
- `finger-print-raw`: contains the output of an MD5 hash computed across the binary form of the RSA public key
- `public key`: contains the base64-encoded RSA key
- `modulus`: contains the hexadecimal modulus (256) of the RSA key
- `exponent`: (also known as public exponent or encryption exponent) contains an integer value that is used during the RSA key generation algorithm. Commonly used values are 17 and 65537. A prime exponent greater than 2 is generally used for more efficient key generation.

```
ORACLE# show security ssh-pub-key detail acme74
host-name:
  acme74
comment:
  DSA Public Key
finger-print:
  51:2f:f1:dd:79:9e:64:85:6f:22:3d:fe:99:1f:c8:21
finger-print-raw:
  0a:ba:d8:ef:bb:b4:41:d0:dd:42:b0:6f:6b:50:97:31
pub-key:

AAAAAB3NzaC1kc3MAAACBAPY8ZOHY2yFSJA6XYC9HRwNHxaehvx5w0J0rzZdzoSOXxbETW6ToHv8
D1UJ/z+zHo9Fiko5XybZnDIaBDHtblQ
+Yp7StxyltHnXF1YLfKd1G4T6JYrdHYI140mleg9e4NnCRleaQoZPF3UGfZia6bXrGTQf3gJq2e
7Yisk/gF
+1VAAAAFQDb8D5cvwHWTZDPfX0D2s9Rd7NBvQAAAIEAlN92+Bb7D4KLYk3IwRbXblwXdkPggA4p
fdtW9vGfJ0/RHd+NjB4eo1D+0dix6tXwYGN7PKS5R/FXPNwxHPapcj9uLlJn2AWQ2dsknf+i/
FAAvioUPkmdMc0zuWoSOEsSNhVDtX3WdvVcGcBq9cetzrtOKW0ocJmJ80qadxTRHtUAAACBAN7C
Y+KKv1gHpRzFwdQm7HK9bb1LAo2KwaoXnadFgeptNBQeSXG1v0
+JsvphVMBJc9HSn24VYtYtsMu74qXviYjziVucWKjjKEb11juqnF0GD1B3VVmxHLmXnAz643WK4
2Z7dLM5sY29ouezv4Xz2PuMch5VGPP+CDqzCM4loWgV

p: (128)
F63C64E1D8DB2152240E97602F47470347C5A7A1BF1E70389D2BCD9773A12397C5B1135BA4E
81EFF03D5427FCFECC7A3D162928E57C9B6670C86810C7B5B950F98A7B4ADC7296D1E75C5D5
82DF283D46E13E8962B747608D783A6D5E83D7B836709195E6AAA193C5DD419F6626BA6D7AC
64D07F7809AB67BB622B24FE017ED55

q: (20)
DBF03E5CBF01D64D90CF7D7D03DACF5177B341BD

g: (128)
94DF76F816FB0F828B624DC8C116D76E5C177643E0800E297DDB56F6F19F274FD11DDF8D8C1
E1EA350FED1D8B1EAD5F060637B3CA4B947F1573CDC311CF6A9723F6E2F5267D80590D9DB24
9DFFA2FC5000BE2A143E499D31CD33B96A12384B12361543B57DD676F55C19C06AF5C7ADCEB
B4E2963A8709989F34A9A7714D11ED5

pub_key: (128)
DEC263E28ABF5807A51CC5C1D426EC72BD6DBD4B028D8AC1AA179DA74581EA6D34141E4971B
5BCEF89B2FA6154C04973D1D29F6E1562D62DB0CBBE2A5EF8988F3895B9C58A8E32846F5D6
```

```
3BAA9C5D060E50775559B11CB9B19C0CFAE3758AE3667B74B339B18DBDA2E7B3BF85F3D8FB8  
C721E5518F3FE083AB308CE25A16815  
ORACLE#
```

This command displays detailed information for specific SSH public key (in this case acme74, a DSA key).

- host name: contains the name assigned to the DSA public key when it was first imported
- comment: contains any comments associated with the DSA key
- finger-print: contains the output of an MD5 hash computed across the base64-encoded DSA public key
- finger-print-raw: contains the output of an MD5 hash computed across the binary form of the DSA public key
- public key: contains the base64 encoded DSA key
- p: contains the first of two prime numbers used for key generation
- q: contains the second of two prime numbers used for key generation
- g: contains an integer that together with p and q are the inputs to the DSA key generation algorithm

```
ORACLE# show security ssh-pub-key detail  
...  
...  
...  
ORACLE#
```

This command displays detailed information for all SSH imported keys.

Starting and Stopping HDR using the ACLI

For ease-of-use, you can start and stop record collection from Acme Packet's command line interface (ACLI) in Superuser Mode. You can start and stop record collection for the entire HDR process, or you can specify a group name for which you want to start and stop collection.

Starting HDR

To start record collections:

- In Superuser mode, at the root prompt, enter **request collect start all** and press **Enter**. The OCSBC starts all record collection.

```
ORACLE# request collect start all
```

To start a group-name record collection:

- In Superuser mode, at the root prompt, enter **request collect start <group-name>**, and press **Enter**. The OCSBC starts collection for that group name only. In the following example, voltage record collection is started.

```
ORACLE# request collect start voltage
```

Stopping HDR

To stop all record collections:

- In Superuser mode, at the root prompt, enter **request collect stop all** and press **Enter**. The OCSBC stops all record collection.

```
ORACLE# request collect stop all
```

To stop a group-name record collection:

- In Superuser mode, at the root prompt, enter **request collect stop <group-name>**, and press **Enter**. The OCSBC stops collection for that group name only. In the following example, voltage record collection is stopped.

```
ORACLE# request collect stop voltage
```

Purging HDR Data using the ACLI

Using the ACLI, you can delete all HDR record collections resident on the OCSBC.

To purge all record collections:

- In Superuser mode, at the root prompt, enter **request collect purge** and press **Enter**. The OCSBC deletes all record collections.

```
ORACLE# request collect purge
```

Restarting HDR using the ACLI

You can restart the collector using the boot configuration.

To restart the collector using the boot configuration:

- In Superuser mode, at the root prompt, enter **request collect restart** and press **Enter**. The OCSBC restarts all record collections using the boot configuration.

```
ORACLE# request collect restart
```

Requesting HDR Collection Status

You can display the status of collection groups and push servers on the OCSBC, when required, using the ACLI.

To display the status of collection groups and push servers:

- In Superuser mode, at the root prompt, enter **request collect status** and press **Enter**. The OCSBC displays the current status of all record collections and push receivers. In the following example, the group, fan is disabled at boot time, the start time is immediately when the system comes up, and there is no end time. The Push Receiver configured for this OCSBC is 172.30.11.16 and it is currently reachable. The date and time of the next scheduled push is also indicated as well as the interval of time between each push.

```
ORACLE# request collect status
Collector is currently collecting on:
Group    Boot-State    Start Time    End Time
fan      disabled      now           never
Next Push Scheduled for: 2008-01-11-11:12:06
Subsequent Push Interval: 15 minutes
Registered push receivers are:
IP Address    Status
172.30.11.16  reachable
```

3

HDR Groups and Group Statistics

This section provides information about the Historical Data Recording (HDR) Groups and Group Statistics that make up the HDR records on the C-Series products. It also includes information about the source of the HDR data.

HDR Data

HDR data consists of a “Group” with associated Group Statistics that apply to each group. HDR data comes from two sources:

- Simple Network Management Protocol (SNMP) Management Information Bases (MIBs) (MIB-Associated Groups and Group Statistics)
- Acme Packet’s Command Line Interface (ACLI) (ACLI-Associated Groups and Group Statistics)

When you configure HDR on the OCSBC, the Groups and associated Group Statistics are included in the collection of data. You can configure the OCSBC to collect all group statistics or specific group statistics. For information on configuring global collection, see [Setting Global Collection](#). For information on specific group collections, see [Setting Multiple Collection Groups](#).

When HDR is enabled, the OCSBC forwards statistical records to push servers which send the data (in standard format) to a receiving server for viewing in a comma-separated value (CSV) file. Before pushing a file, the collector creates the directory by group name for which the statistic belongs (for example, fan, sip-client, system, etc.), if the directory does not exist from a previous push.

The collector can push multiple CSV files per directory. Each file is formatted as <Unix timestamp>.csv (for example, 1302041977.csv). Within the file, each record also has an associated record timestamp. The **filename timestamp** is the time that the CSV file was create. The **record timestamp** is the window of time that the HDR collector used to collect the data. For more information on windows of time, see [Windows of Time](#).

The first record of each file is a header containing the attribute name. For example, in the “System” directory, a file name of 13020441977.csv can contain the header attribute names of CPU Utilization, Memory Utilization, Health Score, Redundancy State, etc. The collector appends a Timestamp heading attribute to the beginning of every record as well.

Note:

The records in a CSV file may display differently, depending on the record data included in the file, and the method used to open the file. For more information about the display of record data in a CSV file, see [Appendix A, CSV File Data Formats](#).

The following example shows the output from a “System” HDR collection. The output format reflects that the file was opened using the Unix command `cat <timestamp>.csv`.

```
[AcmePacket]$ cd system
[AcmePacket]$ ls -l

-rw-r--r-- 1 moles src 453 Apr 15 05:38 1302041737.csv
-rw-r--r-- 1 moles src 453 Apr 15 05:40 1302041857.csv
-rw-r--r-- 1 moles src 455 Apr 15 05:42 1302041977.csv

[AcmePacket]$ cat 1302041977.csv
TimeStamp,CPU Utilization,Memory Utilization,Health
Score,Redundancy State,Signaling Sessions,
Signaling Rate (CPS),CAM Utilization (NAT),
Cam Utilization (ARP),I2C Bus State,License Capacity,
Current Cached SIP Local Contact Registrations,
Current MGCP Public Endpoint Gateway Registrations,
Current H323 Number of Registrations,
Application Load Rate

1302041977,39,22,50,active,0,0,0,0,online,0,0,0,0,39
1302042037,100,22,50,active,0,0,0,0,online,0,0,0,0,100
```

Windows of Time

Each table in this chapter identifies a data type for a Group Statistic: counter, gauge, config, timeticks, and period.



Note:

For more information about Group Statistic data types, see [What is HDR?](#)

A period type represents a value determined as the sum of a number of events which occurred during a specified window of time (or a time period). There are three possible windows in which events can occur:

- current window
- previous window
- sliding window

The **current window** is the window during which events are currently being accumulated. The current window ends D seconds after the start of the current window, where D is the duration of the window. The current window is always of size $D_c < D$. Once the current window becomes of size D , it becomes the previous window, and a new current window is started.

The **previous window** is the time period of duration D which ended at the start of the current window.

The **sliding window** marks the period of time for the previous window, D , plus the time passed in the current window. For example: For the "session-agent" and "session-realm" HDR groups, the default timer value is 30 seconds. The "current

window" is between 0 and 30 seconds. When the current window reaches 30 seconds it becomes the previous window and a new current window is initialized. The "sliding window" is the sum of the current window and previous window. Therefore the initial sliding window is between 0 and 30 seconds and after that the sliding window is between 30 and 60 seconds.

For the session-agent statistics and the session-realm statistics groups, the default period timer is 30 seconds. In the OCSBC configuration, if the sustained-rate-window parameter is not configured, the default window size is 30 seconds. If the sustained-rate-window parameter is configured, the default period is set to the configured value of the sustained-rate-window.

MIB-Associated Groups and Group Statistics

The Groups and Group Statistics in this section are a subset of MIB variables on the OCSBC. Each table specifies the MIB that pertains to the Group or Group Statistics. Groups in this section include:

- Group: system
- Group: interface
- Group: session-agent *
- Group: session-realm
- Group: voltage
- Group: fan
- Group: temperature
- Group: space
- Group: network-util

*In addition to being a subset of a MIB variable, the session-agent Group maps to the **show sipd agents** command, the registration-realm Group maps to the **show sipd realms**, and some statistics in the session-realm Group map to the **show sipd realms** command. For more information, see **show sipd agents** and **show sipd realms** in Chapter 4.

system

This group consists of general system statistics.

The following table lists the system SNMP MIB.

SNMP MIB

ap-smgmt.mib
apSysMgmtGeneralObjects
1.3.6.1.4.1.9148.3.2.1.1

The following table lists and describes HDR data for system statistics, listed in the order in which they appear in the CSV file. To form the OID, add 1.3.6.1.4.1.9148.3.2.1.1 to the value in the OID # column. The OID for CPU Utilization, for example, is 1.3.6.1.4.1.9148.3.2.1.1.1.

#	Statistic	Type	Time r Valu e	Range	OID #	Description
1	CPU Utilization	gauge	N/A	0% to 100%	1	Percentage of total usage of OCSBC's central processing unit (CPU).
2	Memory Utilization	gauge	N/A	0% to 100%	2	Percentage of total memory usage on OCSBC
3	Health Score	gauge	N/A	0% to 100%	3	Percentage of system health with a value of 100% being the healthiest.
4	Redundancy State	integer	N/A	active (1) System is in active mode. standby (2) System is in standby mode. unassigned (3) System has not been assigned as active or standby. recovery (4) System is in recovery mode. outOfService (5) System is currently out of service. Contact your Technical Support representative.	4	For high availability (HA), specifies whether this OCSBC is active or standby. A standalone system has an active state.
5	Signaling Sessions	gauge	N/A	0 to 4294967295	5	Total number of global, concurrent, active sessions in real time.
6	Signaling Rate (CPS)	gauge	N/A	0 to 4294967295	6	Total number of calls per second (CPS). This is a real-time value which is the total of SIP and H.323 calls.
7	CAM Utilization (NAT)	gauge	N/A	0% to 100%	7	Percentage of Content Addressable Memory (CAM) usage for Network Address Translation (NAT).
8	CAM Utilization (ARP)	gauge	N/A	0% to 100%	8	Percentage of Content Addressable Memory (CAM) usage for Address Resolution Protocol (ARP).

#	Statistic	Type	Time r Valu e	Range	OID #	Description
9	I2C Bus State	integer	N/A	online (0) OCSBC is online and processing calls. becomingoffline (1) OCSBC is in the process of going offline. offline (2) OCSBC is offline and not processing calls. However, other administrative functions are available.	9	Current OCSBC state.
10	License Capacity	gauge	N/A	0% to 100%	10	Percentage of licensed OCSBC sessions currently in progress.
11	Current Cached SIP Local Contact Registrations	gauge	N/A	0 to 4294967295	11	Total number of currently cached registered contacts in the OCSBC.
12	Current MGCP Public Endpoint Gateway Registrations	gauge	N/A	0 to 4294967295	12	Not Supported
13	Current H323 Number of Registrations	gauge	N/A	0 to 4294967295	13	Total number of H323 registrations in the OCSBC.
16	Application Load Rate	period	30 sec.	0% to 100%	16	Average Central Processing Unit (CPU) utilization of the OCSBC during the current window. The average is computed every 10 seconds unless load-limit is configured in the SipConfig record, in which case it is 5 seconds.
26	Current Deny Entries Allocated	integer	N/A	0 to 4294967295	26	The total number of endpoints currently denied.

interface

Consists of statistics pertaining to the physical interface(s) on the OCSBC.

The following table lists and describes HDR data for interface statistics, listed in the order in which they appear in the CSV file.

#	Statistic	Type	Time r Value	Range	OID #	Description
1	Index	config	N/A	N/A	1	Unique value that identifies the interface.
2	Description	config	N/A	N/A	2	String that provides a description of the interface.
3	Type	config	N/A	N/A	3	Type of interface distinguished according to the Physical/Link Protocol(s).
4	MTU	config	N/A	N/A	4	Maximum Transmission Unit (MTU) - largest datagram size, in octets (eight-bit bytes), that can be sent/received on the interface specified in octets.
5	Speed	config	N/A	N/A	5	Estimate of the current bandwidth, in bits per second, on the interface.
6	Physical Address	config	N/A	N/A	6	IP Address of the interface at the protocol layer immediately below the network layer in the protocol stack.
7	Admin Status	config	N/A	N/A	7	Current administrative state of the interface.
8	Operational State	integer	N/A	up(1) Interface is operational and in the UP state. down(2) Interface is not operational and in the DOWN state. testing(3) Interface is in TESTING state. unknown(4) Interface state is UNKNOWN. dormant(5) Interface is inactive and in DORMANT state. notPresent(6) No interface is present. lowerLayerDown(7) Lower layer protocol on the interface is down.	8	Current operational state of the interface.
9	If Last Change	timeticks	N/A	0 to 4294967295	9	Specifies the sysUpTime (system up time) value with the time the interface entered its current operational state

#	Statistic	Type	Time r Value	Range	OID #	Description
10	In Octets	counter	N/A	0 to 4294967295	10	Total number of octets received on the interface.
11	In Unicast Packets	counter	N/A	0 to 4294967295	11	Number of subnetwork-unicast packets delivered to a higher layer protocol. A unicast packet is a regular IP packet that has a destination IP address.
12	In Non-unicast Packets	counter	N/A	0 to 4294967295	12	Number of non-unicast packets (i.e., subnetwork-broadcast or subnetwork-multicast packets) delivered to a higher layer protocol.
13	In Discards	counter	N/A	0 to 4294967295	13	Number of inbound packets that were discarded even though no errors had been detected. This prevented the packets from being delivered to a higher-layer protocol.
14	In Errors	counter	N/A	0 to 4294967295	14	Number of inbound packets that contained errors, preventing them from being delivered to a higher-layer protocol.
16	Out Octets	counter	N/A	0 to 4294967295	16	Total number of octets sent out the interface.
17	Out Unicast Packets	counter	N/A	0 to 4294967295	17	Total number of packets that higher-level protocols requested be transmitted to a subnetwork-unicast address, including packets that were discarded or not sent.
18	Out Non-unicast Packets	counter	N/A	0 to 4294967295	18	Total number of packets that higher-level protocols requested be transmitted to a non-unicast address (i.e., subnetwork-broadcast or subnetwork-multicast addresses), including packets that were discarded or not sent.
19	Out Discards	counter	N/A	0 to 4294967295	19	Number of outbound packets discarded even though no errors were detected, to prevent the packets from being transmitted.
20	Out Errors	counter	N/A	0 to 4294967295	20	Number of outbound packets that were not transmitted because of errors.

session-agent

A signaling endpoint that applies traffic-shaping attributes and information regarding next hops or previous hops.

SNMP MIB

ap-sip.mib
 apSipSessionAgentStatsEntry
 1.3.6.1.4.1.9148.3.2.1.2.2.1

Table 3-1 Session Agent Statistics

#	Statistic	Type	Time Range	Value	OID #	Description
1	Hostname	config	N/A	N/A	2	Hostname of the session agent, in Fully Qualified Domain Name (FQDN) or IP Address format, for which the group statistics are being calculated. The FQDN#IP-address (ex: sip.com#192.168.100.100) will be used for each row of HDR output when the FQDN-resolved Session Agent Statistics feature is enabled.
2	System Type	config	N/A	N/A	3	Type of the specified session agent – either SIP or H323.
3	Status	integer	N/A	disabled Session agent is disabled. outofService Session agent is out of service. standby Session agent in standby mode. inService Session agent is in service. constraintsViolation Session agent has a signaling & bandwidth constraints violation. inServiceTimedOut Session agent that is currently in Service has timed out because of inactivity.	22	Current state of the specified session agent.
4	Inbound Active Sessions	gauge	N/A	0 to 4294967295	4	Total number of current, active, inbound sessions.
5	Inbound Session Rate	period	30	0 to 4294967295	5	Current inbound session rate in calls per second (CPS) during the sliding window period.
6	Outbound Active Sessions	gauge	N/A	0 to 4294967295	6	Total number of current, active, outbound sessions.

Table 3-1 (Cont.) Session Agent Statistics

#	Statistic	Type	Time Range	Value	OID #	Description
7	Outbound Session Rate	period	30	0 to 4294967295	7	Current outbound session rate in calls per second (CPS) during the sliding window period.
8	Inbound Sessions Admitted	period	30	0 to 4294967295	8	Total number of inbound sessions admitted during the sliding window period.
9	Inbound Sessions Not Admitted	period	30	0 to 4294967295	9	Total number of inbound sessions rejected because of insufficient bandwidth during the sliding window period.
10	Inbound Concurrent Sessions High	period	30	0 to 4294967295	10	Highest number of concurrent inbound sessions during the sliding window period.
11	Inbound Average Session Rate	period	30	0 to 4294967295	11	Average rate of inbound sessions during the sliding window period in calls per second (CPS).
12	Outbound Sessions Admitted	period	30	0 to 4294967295	12	Total number of outbound sessions admitted during the sliding window period.
13	Outbound Sessions Not Admitted	period	30	0 to 4294967295	13	Total number of outbound sessions rejected due to insufficient bandwidth during the sliding window period.
14	Outbound Concurrent Sessions High	period	30	0 to 4294967295	14	Highest number of concurrent outbound sessions during the sliding window period.
15	Outbound Average Session Rate	period	30	0 to 4294967295	15	Average rate of outbound sessions during the sliding window period in calls per second (CPS).

Table 3-1 (Cont.) Session Agent Statistics

#	Statistic	Type	Time r Valu e	Range	OI D #	Description
16	Max Burst Rate	period	10	0 to 4294967295	16	Burst rate of traffic (both inbound and outbound) measured during the current window period. The time period is equal to the value of the configuration parameter burst-rate-window in the session constraint or session-agent configuration record. It is equal to 1 if not configured. Its value is the number of active calls plus 1 divided by the time period. This is different from the Max Burst Rate value in the ACLI command "show sipd agent. In the ACLI it is the high-water mark during the window period.
17	Total Seizures	period	30	0 to 4294967295	17	Total number of seizures during the sliding window period.
18	Total Answered Sessions	period	30	0 to 4294967295	18	Total number of answered sessions during the sliding window period.
19	Answer/Seizure Ratio	period	30	0% to 100%	19	Answer-to-seizure ratio expressed as a percentage during the sliding window period. For example, a value of 90 would represent 90% or .90.
20	Average One-Way Signaling Latency	period	30	0 to 4294967295	20	Average observed one-way signaling latency during the current window period. This is the average amount of time the signaling travels in one direction. Each latency measurement used to calculate this average begins with a request and ends with its first response. Subsequent responses do not affect this measurement. For example, if a 100 Trying arrives as the first response to an INVITE, the system uses that latency for this purpose. Requests that trigger these measurements include every request that receives a response.

Table 3-1 (Cont.) Session Agent Statistics

#	Statistic	Type	Time Range	Value	OID #	Description
21	Maximum One-Way Signaling Latency	period	30	0 to 4294967295	21	Maximum observed one-way signaling latency during the sliding window period. This is the maximum amount of time the signaling travels in one direction. Each latency measurement used to calculate this average begins with a request and ends with its first response. Subsequent responses do not affect this measurement. For example, if a 100 Trying arrives as the first response to an INVITE, the system uses that latency for this purpose. Requests that trigger these measurements include every request that receives a response.
25	Total Normal Call Drops	integer		0 to 4294967295	25	Total global count for externally-generated call terminations (BYE) through this session agent.
26	Total Local Call Drops	integer		0 to 4294967295	26	Total global count for locally-generated call terminations (BYE) through this session agent.
23	Total Inbound Call duration	integer		0 to 4294967295	23	Total call duration when this session agent is ingress.
24	Total Outbound Call Duration	integer		0 to 4294967295	24	Total call duration when this session agent is egress.

session-realm

A collection of Web security servers in a single Domain Name System (DNS) that are configured to share sessions. The statistic tables in this section identify the statistics that display in the “show sipd realms” output. Not all statistics are applicable to this show command.

SNMP MIB

ap-sip.mib
apSigRealmStatsEntry
1.3.6.1.4.1.9148.3.2.1.2.4.1

#	Statistic	Type	Timer Value	Range	OID #	Description
1	Realm Name	config	N/A	N/A	2	Name of the realm for which the group statistics are being calculated.
2	Inbound Active Sessions	gauge	N/A	0 to 4294967295	3	Total number of current, active, inbound sessions.
3	Inbound Session Rate	period	30	0 to 4294967295	4	Current inbound session rate in calls per second (CPS) during the sliding window period.
4	Outbound Active Sessions	gauge	N/A	0 to 4294967295	5	Total number of current, active, outbound sessions.
5	Outbound Session Rate	period	30	0 to 4294967295	6	Current outbound session rate in calls per second (CPS) during the sliding window period.
6	Inbound Sessions Admitted	period	30	0 to 4294967295	7	Total number of inbound sessions during the sliding window period.
7	Inbound Sessions Not Admitted	period	30	0 to 4294967295	8	Total number of inbound sessions rejected because of insufficient bandwidth during the sliding window period.
8	Inbound Concurrent Sessions High	period	30	0 to 4294967295	9	Highest number of concurrent inbound sessions during the sliding window period.
9	Inbound Average Session Rate	period	30	0 to 4294967295	10	Average rate of inbound sessions during the sliding window period in calls per second (CPS).
10	Outbound Sessions Admitted	period	30	0 to 4294967295	11	Total number of outbound sessions admitted during the sliding window period.
11	Outbound Sessions Not Admitted	period	30	0 to 4294967295	12	Total number of outbound sessions rejected due to insufficient bandwidth during the sliding window period.
12	Outbound Concurrent Sessions High	period	30	0 to 4294967295	13	Highest number of concurrent outbound sessions during the sliding window period.
13	Outbound Average Session Rate	period	30	0 to 4294967295	14	Average rate of outbound sessions during the sliding window period in calls per second (CPS).

#	Statistic	Type	Timer Value	Range	OID #	Description
1 4	Max Burst Rate	period	Equal to the burst-rate - window parameter in the Session Agent configuration record. If this value is less than 10, the timer value is set to 10.	0 to 4294967295	15	Burst rate of traffic (both inbound and outbound) measured during the current window period. The time period is equal to the value of the configuration parameter burst-rate-window in the session constraint or session-agent configuration record. It is equal to 1 if not configured. Its value is the number of active calls plus 1 divided by the time period. This is different from the Max Burst Rate value in the ACLI command "show sipd agent. In the ACLI it is the high-water mark during the window period.
1 5	Total Seizures	period	30	0 to 4294967295	16	Total number of seizures during the sliding window period.
1 6	Total Answered Sessions	period	30	0 to 4294967295	17	Total number of answered sessions during the sliding window period.
1 7	Answer/Seizure Ratio	period	30	0% to 100%	18	Answer-to-seizure ratio expressed as a percentage during the sliding window period. For example, a value of 90 would represent 90% or .90.
1 8	Average One-Way Signaling Latency	period	30	0 to 4294967295	19	Average observed one-way signaling latency during the current window period. This is the average amount of time the signaling travels in one direction.
1 9	Maximum One-Way Signaling Latency	period	30	0 to 4294967295	20	Maximum observed one-way signaling latency during the sliding window period. This is the maximum amount of time the signaling travels in one direction.
2 0	Average QoS RFactor	period	30	0 to 4294967295	24	Average Quality of Service (QoS) factor observed during the current window period. Quality of service shapes traffic to provide different priority and level of performance to different data flows. R-factors are metrics in VoIP, that use a formula to take into account both user perceptions and the cumulative effect of equipment impairments to arrive at a numeric expression of voice quality. This statistic defines the call or transmission quality expressed as an R factor.

#	Statistic	Type	Timer Value	Range	OID #	Description
2 1	Maximum QoS RFactor	period	30	0 to 4294967295	25	Maximum Quality of Service (QoS) factor observed during the sliding window period. Quality of service shapes traffic to provide different priority and level of performance to different data flows. R-factors are metrics in VoIP that use a formula to determine a numeric expression of voice quality. This statistic defines the call or transmission quality expressed as an R factor.
2 2	Current QoS Major Exceeded	period	30	0 to 4294967295	26	Peg counts of the number of times the major Rfactor threshold was exceeded during the sliding window period. The peg count provides counts of calls with different service classes that occur during intervals of frequency which reliability indicate the traffic load. R-factors are metrics in VoIP that use a formula to determine a numeric expression of voice quality.
2 3	Total QoS Major Exceeded	counter	N/A	0 to 4294967295	27	Count of the number of times the major Rfactor threshold was exceeded. Provides counts of calls with different service classes that occur during intervals of frequency which reliability indicate the traffic load. R-factors are metrics in VoIP that use a formula to determine a numeric expression of voice quality.
2 4	Current QoS Critical Exceeded	period	30	0 to 4294967295	28	Count of the number of times the critical Rfactor threshold was exceeded during the sliding window period. Provides counts of calls with different service classes that occur during intervals of frequency which reliability indicate the traffic load. R-factors are metrics in VoIP that use a formula to determine a numeric expression of voice quality.
2 5	Total QoS Critical Exceeded	counter	N/A	0 to 4294967295	29	Count of the number of times the critical Rfactor threshold was exceeded. Provides counts of calls with different service classes that occur during intervals of frequency which reliability indicate the traffic load. R-factors are metrics in VoIP that use a formula to determine a numeric expression of voice quality.

#	Statistic	Type	Timer Value	Range	OID #	Description
26	Early Sessions	counter	N/A	0 to 4294967295	N/A	Indicates the number of early sessions for each realm. Each time the OCSBC receives an INVITE on the ingress realm or the egress realm sends an INVITE request, a counter increments if the session is established with a 200 OK response. This counter also increments in sessions when there are no 18x responses (Ringing (180), Call is Being Forwarded (181), Queued (182), Session in Progress (183)), but a 200 OK is established. This counter represents the number of sessions that have reached the early dialog state or later.
27	Successful Sessions	counter	N/A	0 to 4294967295	N/A	Indicates the number of successful sessions for each realm. Successful sessions are when the OCSBC receives a successful 200 OK response from an initial INVITE request.

 **Note**
:
This counter is NOT incremented for re-INVITES.

28	Active Subscriptions	counter	N/A	0 to 4294967295	N/A	Current domain count of active SIP subscriptions.
29	Subscriptions Per Max	counter	N/A	0 to 4294967295	N/A	Maximum domain count of SIP subscriptions initiated during any 100 second period since the last SBC re-boot.
30	Subscriptions High	counter	N/A	0 to 4294967295	N/A	Maximum domain count of active SIP subscriptions since the last SBC re-boot.
31	Total Subscriptions	counter	N/A	N/A	35	Count of lifetime total subscriptions for the OCSBC.
32	Active Local Contacts	counter	N/A	N/A	31	Current Domain count of active SIP registrations

#	Statistic	Type	Timer Value	Range	OID #	Description
33	Total Normal Call Drops	counter		0 to 4294967295	38	Total global count for externally-generated call terminations (BYE) through this realm.
34	Total Local Call Drops	counter		0 to 4294967295	39	Total global count for locally-generated call terminations (BYE) through this realm.
35	Total Inbound Call duration	counter		0 to 4294967295	36	Total call duration when this realm is ingress.
36	Total Outbound Call Duration	counter		0 to 4294967295	37	Total call duration when this realm is egress.

voltage

Current operating voltages for components in the OCSBC.

SNMP MIB

ap-env-monitor.mib
apEnvMonVoltageStatusEntry
1.2.6.1.4.1.9148.3.3.1.2.1.1

The following table lists and describes HDR data for voltage, listed in the order in which they appear in the CSV file.



Note:

To form the OID, add 1.2.6.1.4.1.9148.3.3.1.2.1.1 to the value in the OID # column. The OID for Voltage, for example, is 1.2.6.1.4.1.9148.3.3.1.2.1.1.4

#	Statistic	Type	Time Value	Range	OID #	Description
1	Type	string	N/A	v2p5 Uses a 2.5V power supply v3p3 Uses a 3.3V power supply v5 Uses a 5V power supply vdd Uses a positive supply of voltage cpu Uses the computer processing unit (CPU) power supply	N/A	Type of power supply currently used on the OCSBC hardware.

#	Statistic	Type	Time r Valu e	Range	OID #	Description
2	Description	string	N/A	2.5V voltage 2.5V power supply 3.3V voltage 3.3V power supply 5V voltage 5V power supply VDD voltage Positive voltage power supply CPU voltage Computer processing unit (CPU) power supply	N/A	Textual description of the voltage currently used on the power supply in the OCSBC.
3	Voltage (millivolts)	gauge	N/A	0 to 4294967295	4	Current measurement of voltage, in millivolts (if available).

fan

Environmental fan statistics

SNMP MIB

ap-env-monitor.mib
apEnvMonFanStatusEntry
1.3.6.1.4.1.9148.3.3.1.4.1.1

The following table lists and describes HDR data for fan statistics, listed in the order in which they appear in the CSV file.

#	Statistic	Type	Time r Valu e	Range	OID #	Description
1	Location	string	N/A	left Located on the left of the circuit board. middle Located in the middle of the circuit board. right Located on the right of the circuit board.	N/A	Physical location of the cooling fan on the circuit board in the OCSBC.
2	Description	string	N/A	Fan 1 speed Slow speed fan Fan 2 speed Medium speed fan Fan 3 speed Fast speed fan	N/A	Textual description that specifies the speed of the cooling fan currently installed in the OCSBC.

#	Statistic	Type	Time r Valu e	Range	OID #	Description
3	Speed	gaug e	N/A	0% to 100%	4	Current measurement of the fan speed expressed as a percentage.

temperature

Environmental temperature statistics.

SNMP MIB

ap-env-monitor.mib
apEnvMonTemperatureStatusEntry
1.3.6.1.4.1.9148.3.3.1.3.1.1

The following table lists and describes HDR data for temperature statistics, listed in the order in which they appear in the CSV file.



Note:

To form the OID, add 1.3.6.1.4.1.9148.3.3.1.3.1.1 to the value in the OID # column. The OID for CPU Utilization, for example, is 1.3.6.1.4.1.9148.3.3.1.3.1.1.4.

#	Statistic	Type	Time r Valu e	Range	OID #	Description
1	Type	string	N/A	ds 1624s Main Main board on the OCSBC ds 1624s CPU Central processing unit (CPU) ds 1624s Phy0 Physical Interface 0 ds 1624s Phy1 Physical Interface 1 NE1775s SDRAM Synchronous dynamic random access memory (SDRAM) NE1775s PMC Polymer matrix composites (PMC)	N/A	Indicates the entity being monitored for temperature.

#	Statistic	Type	Timer Value	Range	OID #	Description
2	Description	string	N/A	Main board PROM Temperature Monitoring temperature on the programmable read-only memory (PROM) on the main board. Host processor PROM Temperature Monitoring temperature on the host processor PROM. PHY0 PROM Temperature Monitoring temperature on the Physical Interface 0 PROM. PHY1 PROM Temperature Monitoring temperature on the Physical Interface 1 PROM. SDRAM Temperature Monitoring temperature on the synchronous dynamic random access memory (SDRAM) PMC Temperature Monitoring temperature on the polymer matrix composites (PMC)	N/A	Textual description of the entity being monitored for temperature.
3	Temperature (Celsius)	gauge	N/A	0° to 100°	4	Current temperature on the main board's programmable read-only memory (PROM), in Celsius.

space

Statistics that display storage space information on the OCSBC

The following table lists and describes HDR data for space statistics, listed in the order in which they appear in the CSV file.

#	Statistic	Type	Timer Value	Range	Description
1	Volume Name	string	N/A	hard-disk0 Hard disk volume 0 hard-disk1 Hard disk volume 1 hard-disk2 Hard disk volume 2 hard-disk3 Hard disk volume 4 /ramdrv Random Access Memory (RAM) drive /boot/code Boot code volume /boot Boot volume	Name of the volume used for storage space.
2	Space Used	gauge	N/A	0 to 4294967295	Total space used on the volume in Megabytes (Mb)

#	Statistic	Type	Timer Value	Range	Description
3	Space Available	gauge	N/A	0 to 4294967295	Total space available on the volume in Megabytes (Mb)

network-util

Statistics that display network utilization information

SNMP MIB

ap-env-monitor.mib
apSysMgmtPhyUtilTableEntry
1.3.6.1.4.1.9148.3.2.1.8.1.1

The following table lists and describes HDR data for network-util statistics, listed in the order in which they appear in the CSV file.



Note:

To form the OID, add 1.3.6.1.4.1.9148.3.2.1.8.1.1 to the value in the OID # column. The OID for Rx Utilization, for example, is 1.3.6.1.4.1.9148.3.2.1.8.1.1.1.

#	Statistic	Type	Timer Value	Range	OID #	Description
1	Index	counter	N/A	0 to 4294967295	N/A	An integer that contains the ifIndex of a media port
2	Rx Utilization	gauge	N/A	0% to 100%	1	Receive (Rx) network utilization of the physical port measured over a one second period
3	Tx Utilization	gauge	N/A	0% to 100%	2	Transmit (Tx) network utilization of the physical port measured over a one second period

thread-event

Reports pending and dropped events per protocol as well as calculates latency.

Position	Statistic	Type	Timer Value	Range	Description
1	TimeStamp	N/A	N/A	N/A	Time Stamp
2	Thread Name	string	N/A	alphanumeric	Protocol (sipd, atcpd or mbcd) and optional numeric

Position	Statistic	Type	Timer Value	Range	Description
3	Event Pending Current	counter	N/A	32767	Pending Event: Current count; number of occurrences in the current window
4	Event Pending CurHigh	counter	N/A	32767	Pending Event: Highest count between position 3 and the previous high
5	Event Pending Window	counter	N/A	32767	Pending Event: Total count in the current window plus the previous window
6	Event Pending Total	counter	N/A	32767	Pending Event: Total count after reset
7	Event Pending Maximum	counter	N/A	32767	Pending Event: Maximum count in the current window
8	Event Pending High	counter	N/A	32767	Pending Event: Highest count in a window after reset
9	Event Dropped Current	counter	N/A	32767	Dropped Event: Current count; number of occurrences in the current window
10	Event Dropped CurHigh	counter	N/A	32767	Dropped Event: Highest count between position 9 and the previous high
11	Event Dropped Window	counter	N/A	32767	Dropped Event: Total count in the current window plus the previous window
12	Event Dropped Total	counter	N/A	32767	Dropped Event: Total count after reset
13	Event Dropped Maximum	counter	N/A	32767	Dropped Event: Maximum count in the current window
14	Event Dropped High	counter	N/A	32767	Dropped Event: Highest count in a window after reset
15	Latency Pending Average	integer	millisecond	32767	Average pending latency in a window
16	Latency Pending Max	integer	millisecond	32767	Maximum pending latency in a window
17	Latency Processing Average	integer	millisecond	32767	Average pending latency in a window; PegStat
18	Latency Processing Max	integer	millisecond	32767	Maximum pending latency in a window; PegStat

thread-usage

Reports CPU thread usage per protocol and an overload condition.

Position	Statistic	Type	Timer Value	Range	Description
1	TimeStamp	N/A	N/A	N/A	Time Stamp
2	Thread Name	string	N/A	alphanumeric	Protocol (sipd, atcpd or mbcd) and optional numeric
3	Current Usage	gauge	N/A	0-100	Percentage usage of CPU thread
4	Overloaded	integer	N/A	1; 2; 3	1 Not applicable; 2 True; 3 False

ACLI-Associated Groups and Group Statistics

The Groups and Group Statistics in this section correspond to the data that displays as output from some of the current ACLI commands. For example, the output for the **show sipd sessions** command, when run from the ACLI, is shown in the figure below:

Example of Show Command Output

```
ORACLE> show sipd sessions
12:50:45-131
SIP Session Status      -- Period --  ----- Lifetime -----
                        Active  High  Total      Total  PerMax  High
Sessions                0      0      0          0      0      0
  Initial                0      0      0          0      0      0
  Early                  0      0      0          0      0      0
  Established            0      0      0          0      0      0
  Terminated           0      0      0          0      0      0
Dialogs                  0      0      0          0      0      0
  Early                  0      0      0          0      0      0
  Confirmed              0      0      0          0      0      0
  Terminated           0      0      0          0      0      0
```

For the **sip-session group**, the HDR Collector stores the same data that would display in the Lifetime/Total column if you ran the ACLI command at the same time the Collector sampled the statistics. In the ACLI output, the data is grouped by Sessions and Dialogs. When mapped into the HDR data for the sip-session group header, the ACLI names are further clarified, as shown in the table below:

ACLI Name	Group Header Name
Sessions	Sessions
Initial	Sessions Initial
Early	Sessions Early
Established	Sessions Established
Terminated	Sessions Terminated
Dialogs	Dialogs
Early	Dialogs Early
Confirmed	Dialogs Confirmed
Terminated	Dialogs Terminated

The following is an example of a CSV file containing the HDR statistics for the sip-session Group generated by the HDR Collector. The output format reflects that the file was opened using an application compatible with a CSV file.

Example of a CSV File for the sip-session Group

Timestamp	Sessions	Sessions Initial	Sessions Early	...
1301702288	45	45	28	...
1301702456	35	35	35	...

 **Note:**

The records in a CSV file may display differently, depending on the record data included in the file, and the method used to open the file. For more information about the display of record data in a CSV file, see Appendix A, CSV File Data Formats.

This section provides a description of each Group and Group Statistic associated with the ACLI. Each Group table identifies the ACLI Show command for which it is associated, and provides a link to the applicable command in the "HDR Show Commands" chapter.

sip-sessions

Consists of statistics pertaining to the Session Initiation Protocol (SIP) sessions. Use "show sipd sessions" to view statistics.

Position	Statistic	Type	Timer Value	Range	Description
1	Sessions	counter	N/A	0 to 4294967295	Total number of sessions established by INVITE and SUBSCRIBE messages
2	Sessions Initial	counter	N/A	0 to 4294967295	Total number of sessions for which an INVITE or SUBSCRIBE is being forwarded
3	Sessions Early	counter	N/A	0 to 4294967295	Total number of sessions for which the first provisional response (1xx other than 100) is received.
4	Sessions Established	counter	N/A	0 to 4294967295	Total number of sessions for which a success (2xx) response is received.
5	Sessions Terminated	counter	N/A	0 to 4294967295	Total number of sessions that have ended by receiving or sending a BYE for an Established session or forwarding an error response for an Initial or Early session. The session remains in the terminated state until all the resources for the session are freed up.
6	Dialogs	counter	N/A	0 to 4294967295	Total number of end-to-end SIP signaling connections.
7	Dialogs Early	counter	N/A	0 to 4294967295	Total number of dialogs that were created by a provisional response.

Position	Statistic	Type	Timer Value	Range	Description
8	Dialogs Confirmed	counter	N/A	0 to 4294967295	Total number of dialogs that were created by a success response. An Early dialog transitions to Confirmed when a success response is received.
9	Dialogs Terminated	counter	N/A	0 to 4294967295	Total number of dialogs that were ended by a receiving/sending of a BYE for an Established session, or a receiving/sending error response Early dialog. The dialog remains in the Terminated state until all the resources for the session are freed up.

sip-acl-oper

Consists of statistics pertaining to the Session Initiation Protocol (SIP) access control list (ACL) operations. Use "show sipd acls" to view statistics.

Position	Statistic	Type	Timer Value	Range	Description
1	ACL Requests	counter	N/A	0 to 4294967295	Total number of ACL requests
2	Bad Messages	counter	N/A	0 to 4294967295	Total number of bad messages
3	Promotions	counter	N/A	0 to 4294967295	Total number of ACL entry promotions. These are the ACL entries that have been promoted from untrusted to trusted status.
4	Demotions	counter	N/A	0 to 4294967295	Total number of ACL entry demotions.
5	Demote Trust- Untrust	counter	N/A	0 to 4294967295	Total number of ACL entries demoted from trusted to untrusted.
6	Demote Untrust- Deny	counter	N/A	0 to 4294967295	Total number of ACL entries demoted from untrusted to deny.

sip-acl-status

Consists of statistics pertaining to the Session Initiation Protocol (SIP) access control list (ACL) state. Use "show sipd acls" to view statistics.

Position	Statistic	Type	Timer Value	Range	Description
1	Total Entries	counter	N/A	0 to 4294967295	Total number of ACL entries, both trusted and blocked.
2	Trusted	counter	N/A	0 to 4294967295	Total number of trusted ACL entries
3	Blocked	counter	N/A	0 to 4294967295	Total number of blocked ACL entries

sip-client

Consists of statistics pertaining to the Session Initiation Protocol (SIP) client state. Use "show sipd client" to view statistics.

Position	Statistic	Type	Timer Value	Range	Description
1	AllStates	counter	N/A	0 to 4294967295	Total number of all client session transactions
2	Initial	counter	N/A	0 to 4294967295	Total number of times the Initial state was entered due to the receipt of a request.
3	Trying	counter	N/A	0 to 4294967295	Total number of times the Trying state was entered due to the receipt of a request
4	Calling	counter	N/A	0 to 4294967295	Total number of times the Calling state was entered due to the receipt of an INVITE request
5	Proceeding	counter	N/A	0 to 4294967295	Total number of times the Proceeding state was entered due to the receipt of a provisional response while in the Calling state
6	Cancelled	counter	N/A	0 to 4294967295	Total number of INVITE transactions that received a CANCEL
7	EarlyMedia	counter	N/A	0 to 4294967295	Total number of times the Proceeding state was entered due to the receipt of a provisional response that contained a Session Description Protocol (SDP) while in the Calling state
8	Completed	counter	N/A	0 to 4294967295	Total number of times that the Completed state was entered due to the receipt of a status code in the range of 300-699 when either in the Calling or Proceeding state
9	Setmedia	counter	N/A	0 to 4294967295	Total number of transactions in which the OCSBC was setting up NAT and steering ports
10	Established	counter	N/A	0 to 4294967295	Total number of times the client received a 2xx response to an INVITE, but could not forward it because the NAT and steering port information was missing
11	Terminated	counter	N/A	0 to 4294967295	Total number of times the Terminated state was entered after a 2xx message

sip-server

Consists of statistics pertaining to the Session Initiation Protocol (SIP) server state. Use "show sipd server" to view statistics.

Position	Statistic	Type	Timer Value	Range	Description
1	AllStates	counter	N/A	0 to 4294967295	Total number of all server session transactions
2	Initial	counter	N/A	0 to 4294967295	Total number of times the Initial state was entered due to the receipt of a request
3	Trying	counter	N/A	0 to 4294967295	Total number of times the Trying state was entered due to the receipt of a request
4	Proceeding	counter	N/A	0 to 4294967295	Total number of times the Proceeding state was entered due to the receipt of a provisional response while in the Calling state
5	Cancelled	counter	N/A	0 to 4294967295	Total number of INVITE transactions that received a CANCEL
6	Established	counter	N/A	0 to 4294967295	Total number of times the server received a 2xx response to an INVITE, but could not forward it because the NAT and steering port information was missing
7	Completed	counter	N/A	0 to 4294967295	Total number of times that the Completed state was entered due to the receipt of a status code in the range of 300-699 when either in the Calling or Proceeding state
8	Confirmed	counter	N/A	0 to 4294967295	Total number of times that an ACK was received while the server was in the Completed state and then transitioned to Confirmed state
9	Terminated	counter	N/A	0 to 4294967295	Total number of times the Terminated state was entered after a 2xx message, or never received an ACK in the Completed state, and then transitioned to the Terminated state.

sip-policy

Consists of statistics pertaining to the Session Initiation Protocol (SIP) local policy / routing statistics. Use "show sipd policy" to view statistics.

Position	Statistic	Type	Timer Value	Range	Description
1	Local Lookup	counter	N/A	0 to 4294967295	Total number of local policy lookups
2	Local Hits	counter	N/A	0 to 4294967295	Total number of successful local policy lookups
3	Local Misses	counter	N/A	0 to 4294967295	Total number of local policy lookup failures
4	Local Drops	counter	N/A	0 to 4294967295	Total number of local policy lookups where the next hop session agent group is H323

Position	Statistic	Type	Timer Value	Range	Description
5	Agent Group Hits	counter	N/A	0 to 4294967295	Total number of successful local policy lookups for session agent groups
6	Agent Group Misses	counter	N/A	0 to 4294967295	Total number of successful local policy lookups where no session agent was available for the session agent group
7	No Routes Found	counter	N/A	0 to 4294967295	Total number of successful local policy lookups, but temporarily unable to route (for example, session agent out of service)
8	Missing Dialog	counter	N/A	0 to 4294967295	Total number of local policy lookups where the dialog was not found for a request addressed to the OCSBC with a To tag or for a NOTIFY-SUBSCRIBE SIP request
9	Inb SA Constraints	counter	N/A	0 to 4294967295	Total number of successful local policy lookups where the inbound session agent (SA) exceeded constraints
10	Outb SA Constraints	counter	N/A	0 to 4294967295	Total number of successful local policy lookups where the outbound SA exceeded constraints
11	Inb REG SA Constraints	counter	N/A	0 to 4294967295	Total number of successful inbound local policy lookups where the registrar (REG) SA exceeded constraints
12	Outb REG SA Constraints	counter	N/A	0 to 4294967295	Total number of successful outbound local policy lookups where the registrar (REG) SA exceeded constraints
13	Requests Challenged	counter	N/A	0 to 4294967295	Total number of requests that were challenged.
14	Challenges Found	counter	N/A	0 to 4294967295	Total number of challenges found.
15	Challenges Not Found	counter	N/A	0 to 4294967295	Total number of challenges not found.
16	Challenge Drops	counter	N/A	0 to 4294967295	Total number of challenges dropped.

sip-errors

Consists of statistics pertaining to errors that occur in SIP media events. Use "show sipd errors" to view statistics.

Position	Statistic	Type	Timer Value	Range	Description
1	SDP Offer Errors	counter	N/A	0 to 4294967295	Total number of errors encountered in setting up the media session for a session description in a SIP request or response which is a Session Description Protocol (SDP) Offer in the Offer/Answer model (RFC 3264)

Position	Statistic	Type	Timer Value	Range	Description
2	SDP Answer Errors	counter	N/A	0 to 4294967295	Total number of errors encountered in setting up the media session for a session description in a SIP request or response which is a Session Description Protocol (SDP) Answer in the Offer/Answer model (RFC 3264)
3	Drop Media Errors	counter	N/A	0 to 4294967295	Total number of errors encountered in tearing down the media for a dialog or session that is being terminated due to: a) non-successful response to an INVITE transaction, or b) a BYE transaction received from one of the participants in a dialog/session, or c) a BYE initiated by the OCSBC due to a timeout notification from the Middlebox Control Daemon (MBCD).
4	Transaction Errors	counter	N/A	0 to 4294967295	Total number of errors in continuing the processing of the SIP client transaction associated with setting up or tearing down of the media session.
5	Application Errors	counter	N/A	0 to 4294967295	Total number of miscellaneous errors in the SIP application that are otherwise uncategorized
6	Media Exp Events	counter	N/A	0 to 4294967295	Total number of flow timer expiration notifications received from the Middlebox Control Daemon (MBCD).
7	Early Media Exps	counter	N/A	0 to 4294967295	Total number of flow timer expiration notifications received for media sessions that were not completely set up due to an incomplete or pending INVITE transaction
8	Exp Media Drops	counter	N/A	0 to 4294967295	Total number of flow timer expiration notifications from the Middlebox Control Daemon (MBCD) that resulted in the termination of the dialog/session by the SIP application.
9	Expired Sessions	counter	N/A	0 to 4294967295	Total number of sessions terminated due to the session timer expiring
10	Multiple OK Drops	counter	N/A	0 to 4294967295	Total number of dialogs terminated upon reception of a 200 OK response from multiple User Agent Servers (UASs) for a given INVITE transaction that was forked by a downstream proxy
11	Multiple OK Terms	counter	N/A	0 to 4294967295	Total number of dialogs terminated upon reception of a 200 OK response that conflicts with an existing established dialog on the OCSBC
12	Media Failure Drops	counter	N/A	0 to 4294967295	Total number of dialogs terminated due to a failure in establishing the media session.

Position	Statistic	Type	Timer Value	Range	Description
13	Non-ACK 2xx Drops	counter	N/A	0 to 4294967295	Total number of sessions terminated because an ACK was not received for a 2xx response
14	Invalid Requests	counter	N/A	0 to 4294967295	Total number of invalid requests (for example, an unsupported header was received).
15	Invalid Responses	counter	N/A	0 to 4294967295	Total number of invalid responses (for example, no Via header in response)
16	Invalid Messages	counter	N/A	0 to 4294967295	Total number of messages dropped due to parse failure
17	CAC Session Drop	counter	N/A	0 to 4294967295	Total number of call admission control (CAC) session setup failures
18	CAC BW Drop	counter	N/A	0 to 4294967295	Total number of call admission control (CAC) session setup failures due to insufficient bandwidth (BW)
19	Call Rejects	counter	N/A	0 to 4294967295	Total number of calls rejected during the window.

sip-status

Consists of statistics pertaining to Session Initiation Protocol (SIP) transactions. Use "show sipd status" to view statistics.

Position	Statistic	Type	Timer Value	Range	Description
1	Sessions	counter	N/A	0 to 4294967295	Total number of sessions established by INVITE messages
2	Subscriptions	counter	N/A	0 to 4294967295	Total number of sessions established by SUBSCRIBE messages
3	Dialogs	counter	N/A	0 to 4294967295	Total number of end-to-end SIP signaling connections
4	CallID Maps	counter	N/A	0 to 4294967295	Total number of successful session header Call ID mappings
5	Rejections	counter	N/A	0 to 4294967295	Total number of rejected INVITES
6	ReINVITES	counter	N/A	0 to 4294967295	Total number of ReINVITES
7	Media Sessions	counter	N/A	0 to 4294967295	Total number of successful media sessions
8	Media Pending	counter	N/A	0 to 4294967295	Total number of media sessions waiting to be established
9	Client Trans	counter	N/A	0 to 4294967295	Total number of client transactions
10	Server Trans	counter	N/A	0 to 4294967295	Total number of server transactions that have taken place on the OCSBC
11	Resp Contexts	counter	N/A	0 to 4294967295	Total number of response contexts

Position	Statistic	Type	Timer Value	Range	Description
12	Saved Contexts	counter	N/A	0 to 4294967295	Total number of saved contexts
13	Sockets	counter	N/A	0 to 4294967295	Total number of SIP sockets
14	Req Drops	counter	N/A	0 to 4294967295	Total number of dropped requests
15	DNS Trans	counter	N/A	0 to 4294967295	Total number of Domain Name System (DNS) transactions
16	DNS Sockets	counter	N/A	0 to 4294967295	Total number of Domain Name System (DNS) sockets
17	DNS Results	counter	N/A	0 to 4294967295	Total number of Domain Name System (DNS) results
18	Session Rate	fixed decimal	30	0 to 4294967295	The rate, per second, of SIP invites allowed to or from the OCSBC during the sliding window period. The rate is computed every 10 seconds .
19	Load Rate	guage	30	0% to 100%	Average Central Processing Unit (CPU) utilization of the OCSBC during the current window. The average is computed every 10 seconds unless the load-limit is configured in the SIPConfig record, in which case it is 5 seconds.
20	Active Subscriptions	counter	N/A	0 to 4294967295	specifies the current global count of active SIP subscriptions.
21	SubscriptionsPerMax	counter	N/A	0 to 4294967295	specifies the maximum global count of SIP subscriptions initiated during any 100 second period since the last SBC re-boot.
22	Subscriptions High	counter	N/A	0 to 4294967295	specifies the maximum global count of active SIP subscriptions since the last SBC re-boot.

sip-invites

Consists of statistics pertaining to Session Initiation Protocol (SIP) INVITEs. Use "show sipd invite" to view statistics.

Position	Statistic	Type	Timer Value	Range	Description
1	INVITE Requests	counter	N/A	0 to 4294967295	Total number of INVITE requests
2	Retrans	counter	N/A	0 to 4294967295	Total number of retransmissions of INVITEs
3	Response Retrans	counter	N/A	0 to 4294967295	Total number of response retransmissions

Position	Statistic	Type	Timer Value	Range	Description
4	Transaction Timeouts	counter	N/A	0 to 4294967295 for client. Server values are always “—”; transaction timeout statistics are not valid for server operations.	Total number of INVITE request transaction timeouts
5	Locally Throttled	counter	N/A	0 to 4294967295 for client. Server values are always “—”; locally throttled statistics are not valid for server operations.	Total number of INVITE requests locally throttled

registration-realm

Statistics that display registration information (counters) for the total registrations received, number of successful registrations, and number of unsuccessful registrations for each of the following categories: initial registrations, refresh registrations, and de-registrations. Use "show sipd realms" to view statistics.

Position	Statistic	Type	Timer Value	Range	Description
1	Realm Name	config	N/A	N/A	Name of the realm for which the group statistics are being calculated.
2	Total Initial Registrations	counter	N/A	0 to 4294967295	Total number of initial registrations. This counter is incremented once for each initial REGISTER message even when the REGISTER is challenged. This counter is based on ingress (received) messages only. Note: This counter is not incremented when registrations are challenged by the following response messages: 401 (Unauthorized - user authentication required) 407 (Proxy authentication required) 423 (Interval too brief - expiration time of the resource is too short)
3	Successful Initial Registrations	counter	N/A	0 to 4294967295	Number of successful initial registrations. This counter is incremented once for each successful initial registration with a 200 OK response. This counter is based on ingress (received) messages only.

Position	Statistic	Type	Timer Value	Range	Description
4	Unsuccessful Initial Registrations	counter	N/A	0 to 4294967295	<p>Number of unsuccessful initial registrations. This counter is incremented once for each unsuccessful initial registration when the response to the initial REGISTER has a non-success status code. This counter is based on ingress (received) messages only.</p> <p>Note: This counter is not incremented when registrations are challenged by the following response messages:</p> <p>401 (Unauthorized - user authentication required)</p> <p>407 (Proxy authentication required)</p> <p>423 (Interval too brief - expiration time of the resource is too short)</p>
5	Total Refresh Registrations	counter	N/A	0 to 4294967295	<p>Total number of registrations that were refreshed. This counter is incremented once for every refresh registration. This counter is based on ingress (received) messages only.</p>
6	Successful Refresh Registrations	counter	N/A	0 to 4294967295	<p>Total number of registrations that were successfully refreshed. This counter is incremented once for each successful refresh registration. This counter is based on ingress (received) messages only.</p>
7	Unsuccessful Refresh Registrations	counter	N/A	0 to 4294967295	<p>Total number of registrations that were unsuccessfully refreshed. This counter is incremented once for each unsuccessful refresh registration. This counter is based on ingress (received) messages only.</p>
8	Total De-Registrations	counter	N/A	0 to 4294967295	<p>Total number of registrations that de-registered. This counter is incremented once for every de-registration. This counter is based on ingress (received) messages only. In the event a de-registration message is received on a realm that is different than that of the initial registration message, the de-registration counter for the ingress realm of that de-registration message is incremented.</p>

Position	Statistic	Type	Timer Value	Range	Description
9	Successful De-Registrations	counter	N/A	0 to 4294967295	Total number of registrations that successfully de-registered. This counter is incremented once for each successful de-registration. This counter is based on ingress (received) messages only. In the event a successful de-registration message is received on a realm that is different than that of the initial registration message, the de-registration counter for the ingress realm of that successful de-registration message is incremented.
10	Unsuccessful De-Registrations	counter	N/A	0 to 4294967295	Total number of registrations that unsuccessfully de-registered. This counter is incremented once for each unsuccessful de-registration. This counter is based on ingress (received) messages only. In the event an unsuccessful de-registration message is received on a realm that is different than that of the initial registration message, the de-registration counter for the ingress realm of that unsuccessful de-registration message is incremented.

enum-stats

Consists of statistics pertaining to the Telephone Number Mapping (ENUM) Agent on the OCSBC. Use **show enum** to view statistics.

Position	Statistic	Type	Timer Value	Range	Description
1	Enum Agent	config	N/A	N/A	Name of the ENUM Agent
2	Queries Total	counter	N/A	0 to 4294967295	Total number of ENUM queries
3	Successful Total	counter	N/A	0 to 4294967295	Total number of successful ENUM queries
4	Not found Total	counter	N/A	0 to 4294967295	Total number of ENUM queries returning a not found
5	Timeout Total	counter	N/A	0 to 4294967295	Total number of ENUM query timeouts

mgcp-state

Not Supported.

mgcp-trans

Not Supported.

mgcp-media-events

Not Supported.

mgcp-oper

Not Supported.

mgcp-acl

Not Supported.

h323-stats

Consists of statistics pertaining to H323 events on the OCSBC. Use **show h323** to view statistics.

Position	Statistic	Type	Timer Value	Range	Description
1	Incoming Calls	counter	N/A	0 to 4294967295	Total number of incoming H.323 calls
2	Outgoing Calls	counter	N/A	0 to 4294967295	Total number of outgoing H.323 calls
3	Connected Calls	counter	N/A	0 to 4294967295	Total number of connected H.323 calls
4	Incoming Channels	counter	N/A	0 to 4294967295	Total number of established incoming calls
5	Outgoing Channels	counter	N/A	0 to 4294967295	Total number of established outgoing calls
6	Contexts	counter	N/A	0 to 4294967295	Total number of established H.323 contexts (or call terminations)
7	Queued Messages	counter	N/A	0 to 4294967295	Total number of messages queued
8	TPKT Channels	counter	N/A	0 to 4294967295	Total number of ThroughPacket (TPKT) channels open(ed)
9	UDP Channels	counter	N/A	0 to 4294967295	Total number of User Datagram Protocol (UDP) channels open(ed)

tscf-stats

Consists of statistics pertaining to TSCF. Use "show tscf stats" to view statistics.

Statistic	Data Type	Description
Time Stamp	counter	Time Stamp

Statistic	Data Type	Description
Active Tunnels	gauge (0-2 ³² -1)	Number of active tunnels
Established Tunnels	counter	Number of established tunnels
Finished Tunnels	counter	Number of finished tunnels
Released Tunnels	counter	Number of released tunnels
Max Active Tunnels	counter	Maximum number of active tunnels
Total number of tunnels timed out	counter	Total number of timed out tunnels
Config requests received	counter	Number of config requests received
Nagle option requests	counter	Number of config requests with nagle received
Config responses sent	counter	Number of config responses sent
Config release requests received	counter	Number of config release requests received
Config release responses sent	counter	Number of config release responses sent
Client service requests received	counter	Total number of client service requests received
Client service responses sent	counter	Number of client service responses sent
Enable DDT requests	counter	Number of Dynamic Datagram Tunnel enable client service responses received
Disable DDT requests	counter	Number of Dynamic Datagram Tunnel Disable client service responses received
Enable redundancy requests	counter	Number of Dynamic Datagram Tunnel Enable client service responses received
Disable redundancy requests	counter	Number of Dynamic Datagram Tunnel disable client service responses received
Failed Tunnels-Malformed Requests	counter	Number of failed tunnels due to malformed requests
Unknown Control messages	counter	Number of failed tunnels due to unknown control messages
Client assigned internal IP	counter	Number of failed tunnels due to client assigned internal IP addresses
Cannot provision internal IP	counter	Number of failed tunnels due to internal IP that cannot be provisioned
Internal IP already provisioned	counter	Number of failed tunnels due to internal IP addresses that are already provisioned
Internal IP error	counter	Number of failed tunnels due to general IP error
Client assigned internal IP mask	counter	Number of failed tunnels due to internal IP masks assigned by client
Cannot provision internal IP mask	counter	Number of failed tunnels due to IP masks that cannot be provisioned
Internal IP mask already provisioned	counter	Number of failed tunnels due to internal IP masks already provisioned
Internal IP mask error	counter	Number of failed tunnels due to General IP mask error
Client assigned SIP server address	counter	Number of failed tunnels due to client assigned SIP server addresses

Statistic	Data Type	Description
Cannot provision SIP server address	counter	Number of failed tunnels due to not being able to provision SIP server addresses
SIP server address already provisioned	counter	Number of failed tunnels due to SIP server address already provisioned
SIP server address error	counter	Number of failed tunnels due to SIP server general address errors
Client assigned Keep Alive value	counter	Number of failed tunnels due to client assigned keep alive values
Cannot provision Keep Alive value	counter	Number of failed tunnels not being able to provision keep alive values
Keep Alive value already provisioned	counter	Number of failed tunnels due to keep alive value already provisioned
Keep alive value error	counter	Number of failed tunnels due to keep alive value errors
Failed Tunnels - Non Existing Tunnel Id	counter	Number of failed tunnels due to non-existing tunnel IDs
Failed Tunnels - Out of Resources	counter	Number of failed tunnels due to a lack of resources
Failed Tunnels - Internal IP address exhausted	counter	Number of failed tunnels due to tunnel ID exhaustion
Failed Tunnels - Non null IP address	counter	Number of failed tunnels due to non null IP address
Failed Tunnels - Non null IP mask	counter	Number of failed tunnels due to non null IP mask
Failed Tunnels - Non Null SIP server	counter	Number of failed tunnels due to non null SIP server
Failed Tunnels - Non zero keep alive	counter	Number of failed tunnels due to non zero keep alive
Failed Tunnels - No listening socket	counter	Number of failed tunnels due to a missing (listening socket?) file description
Failed Tunnels - Server Failure	counter	Number of failed tunnels due to server failure
Failed Tunnels - Redundancy not enabled	counter	Number of failed tunnels due to disabled redundancy feature
Failed Tunnels - Redundancy factor limit exceeded	counter	Number of failed tunnels due to redundancy factor limit being exceeded on server
Failed Tunnels - Tunnel Id exhausted	counter	Number of failed tunnels due to tunnel ID exhausted on server
Failed Tunnels - Timer failures	counter	Number of failed tunnels due to timer failure on server
Failed Tunnels - DDT service not enabled	counter	Number of failed tunnels due to Dynamic Datagram Tunnel not being enabled on server
Failed Tunnels - DDT request on wrong transport	counter	Number of failed tunnels due to Dynamic Datagram Tunnel request wrong transport on the server

Statistic	Data Type	Description
Failed Tunnels - DDT service only fordatagram transport	counter	Number of failed tunnels due to Dynamic Datagram Tunnel service being available only on datagram transports
Failed Tunnels - Inconsistent transport for DDT	counter	Number of failed tunnels due to inconsistent transport for Dynamic Datagram Tunnel on server
Failed Tunnels - Unknown service type requested	counter	Number of failed tunnels due to unknown service type requested on server
Failed Tunnels - Incorrect CM for established tunnel	counter	Number of failed tunnels due to incorrect control messages for established tunnels on server
Failed Tunnels - Address pool unavailable	counter	Number of failed tunnels due to unavailable address pools on server
Failed Tunnels - No listening socket	counter	Number of failed tunnels due to a unavailable (listening socket?) file descriptor on server
Failed Tunnels - Versions Not Supported	counter	Number of failed tunnels due to version not being supported
Failed Tunnels - License Exceeded	counter	Number of failed tunnels due to exceeding the TSCF license/entitlement limit
Packets sent to unused TSCF IP address	counter	Number of packets dropped due to being sent to an unused TSCF IP address
Control messages with wrong sequence number	counter	Number of control messages with a wrong sequence number
Config requests dropped due to license limit	counter	Number of config requests dropped due to the TSCF license limit
Config requests dropped due to per interface limit	counter	Number of config requests dropped due to per interface limit
Stats memory allocations	counter	Number of stats memory allocations
Packets dropped due to inter-client communication	counter	Number of packets dropped due to inter-client communication
Stats memory frees	counter	Number of stats memory frees
Stats memory allocations failures	counter	Number of stats memory allocation failures
Switches to Active system	counter	Number of times existing tunnels were switched to Active system
Switched to Stand by system	counter	Number of times existing tunnels were switched to Stand-by system
Get DTLS Context Requests	counter	Number of times a successful Get Datagram Transport Layer Security context request was sent
Get DTLS Context Request Success	counter	Number of successful Datagram Transport Layer Security context request were sent
Get DTLS Context Request Failure	counter	Number of Get Datagram Transport Layer Security Context Request failed
Set DTLS Context Requests	counter	Number of Set Datagram Transport Layer Security Context Requests were sent
Set DTLS Context Requests Success	counter	Number of successful Set Datagram Transport Layer Security Context Requests were sent

Statistic	Data Type	Description
Set DTLS Context Request Failure	counter	Number of Set Datagram Transport Layer Security Context Request failed
FD Table size	Gauge (0-2^32-1)	The current number of entries in the File Descriptor Table
Address Table Size	Gauge (0-2^32-1)	The current number of entries in the Address Table
Tunnel Table Size	Gauge (0-2^32-1)	The current number of entries in the Tunnel Table
Active Tunnel Table Size	Gauge (0-2^32-1)	The current number of entries in the Active Tunnel Table
Peer Tunnel Table Size	Gauge (0-2^32-1)	The current number of entries in the Peer Tunnel Table
Peer Table Size	Gauge (0-2^32-1)	The current number of entries in the Peer Table
Flow ID Table Size	Gauge (0-2^32-1)	The current number of entries in the Flow ID Table
License Tunnel Count	Gauge (0-2^32-1)	The current number of Licensed Tunnels ??????
Specific address count	Gauge (0-2^32-1)	Total number of specific address allocation requests
Total number tunneled packet drops	counter	Total number of specific address allocation requests
Total number untunneled packet drops	counter	Total number of un-tunneled packet drops

sip-rate

Records SIP processing level in terms of messages per method (i.e. both request and response) per second on system-wide basis.

Position	Statistic	Type	Timer Value	Range	Description
1	Method Name	string	N/A	N/A	SIP method name for which the group statistics are being calculated
2	Messages Received Rate	counter	N/A	0.0 to 429496729.5	Messages per second for messages received for a SIP method on all SIP interfaces
3	Messages Sent Rate	counter	N/A	0.0 to 429496729.5	Messages per second for messages sent for a SIP method on all SIP interfaces
4	Requests Received Rate	counter	N/A	0.0 to 429496729.5	Messages per second for requests received for a SIP method on all SIP interfaces
5	Requests Sent Rate	counter	N/A	0.0 to 429496729.5	Messages per second for requests sent for a SIP method on all SIP interfaces

Position	Statistic	Type	Timer Value	Range	Description
6	Responses Received Rate	counter	N/A	0.0 to 429496729.5	Messages per second for responses received for a SIP method on all SIP interfaces
7	Responses sent Rate	counter	N/A	0.0 to 429496729.5	Messages per second for responses sent for a SIP method on all SIP interfaces

sip-rate-per-interface

Records SIP message rates in terms of messages per method (i.e. both request and response) per second per SIP interface.

Position	Statistic	Type	Timer Value	Range	Description
1	Interface Name	string	N/A	N/A	SIP interface where these statistics are being calculated
2	Method Name	string	N/A	N/A	SIP method name for which the group statistics are being calculated
3	Messages Received Rate	counter	N/A	0.0 to 429496729.5	Messages per second for messages received for a SIP method on all SIP interfaces
4	Messages Sent Rate	counter	N/A	0.0 to 429496729.5	Messages per second for messages sent for a SIP method on all SIP interfaces
5	Requests Received Rate	counter	N/A	0.0 to 429496729.5	Messages per second for requests received for a SIP method on all SIP interfaces
6	Requests Sent Rate	counter	N/A	0.0 to 429496729.5	Messages per second for requests sent for a SIP method on all SIP interfaces
7	Responses Received Rate	counter	N/A	0.0 to 429496729.5	Messages per second for responses received for a SIP method on all SIP interfaces
8	Responses sent Rate	counter	N/A	0.0 to 429496729.5	Messages per second for responses sent for a SIP method on all SIP interfaces

sip-rate-per-agent

Records SIP message rates in terms of messages per method (i.e. both request and response) per second per SIP session agent.

Position	Statistic	Type	Timer Value	Range	Description
1	Agent Name	string	N/A	N/A	SIP Agent where these statistics are being calculated
2	Method Name	string	N/A	N/A	SIP method name for which the group statistics are being calculated

Position	Statistic	Type	Timer Value	Range	Description
3	Messages Received Rate	counter	N/A	0.0 to 429496729.5	Messages per second for messages received for a SIP method on all SIP interfaces
4	Messages Sent Rate	counter	N/A	0.0 to 429496729.5	Messages per second for messages sent for a SIP method on all SIP interfaces
5	Requests Received Rate	counter	N/A	0.0 to 429496729.5	Messages per second for requests received for a SIP method on all SIP interfaces
6	Requests Sent Rate	counter	N/A	0.0 to 429496729.5	Messages per second for requests sent for a SIP method on all SIP interfaces
7	Responses Received Rate	counter	N/A	0.0 to 429496729.5	Messages per second for responses received for a SIP method on all SIP interfaces
8	Responses sent Rate	counter	N/A	0.0 to 429496729.5	Messages per second for responses sent for a SIP method on all SIP interfaces

dnsg-rate

Records DNS Message rate (i.e. both request and response) per second on system-wide basis.

Position	Statistic	Type	Timer Value	Range	Description
1	Messages Received Rate	counter	N/A	0 to 4294967295	Messages per second for all DNS messages received by the system
2	Messages Sent Rate	counter	N/A	0 to 4294967295	Messages per second for all DNS messages sent on the system
3	Requests Received Rate	counter	N/A	0 to 4294967295	Messages per second for DNS requests received on the system.
4	Requests Sent Rate	counter	N/A	0 to 4294967295	Messages per second for DNS requests sent by the system.
5	Responses Received Rate	counter	N/A	0 to 4294967295	Messages per second for DNS responses received on the system.
6	Responses sent Rate	counter	N/A	0 to 4294967295	Messages per second for DNS responses sent by the system.

enum-rate

Records ENUM Message rate (i.e. both request and response) per second on system-wide basis.

Position	Statistic	Type	Timer Value	Range	Description
1	Messages Received Rate	counter	N/A	0 to 4294967295	Messages per second for all ENUM messages received by the system
2	Messages Sent Rate	counter	N/A	0 to 4294967295	Messages per second for all ENUM messages sent on the system
3	Requests Received Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM requests received on the system.
4	Requests Sent Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM requests sent by the system.
5	Responses Received Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM responses received on the system.
6	Responses sent Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM responses sent by the system.

dnsgroup-rate-per-addr

Records DNS Message rate (i.e. both request and response) per second on system-wide basis.

Position	Statistic	Type	Timer Value	Range	Description
1	Server IP Address	string	N/A	N/A	DNS Server Address for which the group statistics are being calculated
2	Messages Received Rate	counter	N/A	0 to 4294967295	Messages per second for all DNS messages received by the system
3	Messages Sent Rate	counter	N/A	0 to 4294967295	Messages per second for all DNS messages sent on the system
4	Requests Received Rate	counter	N/A	0 to 4294967295	Messages per second for DNS requests received on the system.
5	Requests Sent Rate	counter	N/A	0 to 4294967295	Messages per second for DNS requests sent by the system.
6	Responses Received Rate	counter	N/A	0 to 4294967295	Messages per second for DNS responses received on the system.
7	Responses sent Rate	counter	N/A	0 to 4294967295	Messages per second for DNS responses sent by the system.

enum-rate

Records ENUM Message rate (i.e. both request and response) per second on system-wide basis.

Position	Statistic	Type	Timer Value	Range	Description
1	Messages Received Rate	counter	N/A	0 to 4294967295	Messages per second for all ENUM messages received by the system
2	Messages Sent Rate	counter	N/A	0 to 4294967295	Messages per second for all ENUM messages sent on the system
3	Requests Received Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM requests received on the system.
4	Requests Sent Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM requests sent by the system.
5	Responses Received Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM responses received on the system.
6	Responses sent Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM responses sent by the system.

enum-rate-per-name

Records ENUM Message rate (i.e. both request and response) per second on per-interface (i.e. the network interface on which the ENUM config's realm exists) basis.

Position	Statistic	Type	Timer Value	Range	Description
1	ENUM Config Name	string	N/A	N/A	Enum config name for which the group statistics are being calculated
2	Messages Received Rate	counter	N/A	0 to 4294967295	Messages per second for all ENUM messages received by this configuration object.
3	Messages Sent Rate	counter	N/A	0 to 4294967295	Messages per second for all ENUM messages by this configuration object.
4	Requests Received Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM requests received by this configuration object.
5	Requests Sent Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM requests sent by this configuration object.
6	Responses Received Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM responses received by this configuration object.
7	Responses sent Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM responses sent by this configuration object.

enum-rate-per-addr

Records ENUM Message rate (i.e. both request and response) per second on system-wide basis. Records ENUM Message rate (i.e. both request and response) per second on a per-address basis (i.e. ENUM server provisioned in the ENUM Config).

Position	Statistic	Type	Timer Value	Range	Description
1	Server IP Address	string	N/A	N/A	ENUM Server Address for which the group statistics are being calculated
2	Messages Received Rate	counter	N/A	0 to 4294967295	Messages per second for all ENUM messages received by this server.
3	Messages Sent Rate	counter	N/A	0 to 4294967295	Messages per second for all ENUM messages sent by this server.
4	Requests Received Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM requests received by this server.
5	Requests Sent Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM requests sent by this server.
6	Responses Received Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM responses received by this server.
7	Responses sent Rate	counter	N/A	0 to 4294967295	Messages per second for ENUM responses sent by this server.

show-memory-objects

Records memory use reported by the ACLI's **show memory objects** command's data. Records appear in the format **<time stamp>,<class name>,<count>** where class-name is the name of each object, and count is the number of objects currently being used by the application. These records always includes all applicable objects, which number in the hundreds, even when their current count is zero.

sip-method

This HDR group identifies global counts for listed responses to SIP Methods across the system. **sip-method** is this HDR group's configured name. These counters are otherwise retrieved at the ACLI with the **show sipd <method>** command. Although this HDR group delivers the same information in the apSipMethodStatsTable (1.3.6.1.4.1.9148.3.15.1.2.10) in ap-sip.mib, the HDR is a contiguous output whereas the MIB table is delivered tabularly.

CSV position	HDR Column Name	Description
1	TimeStamp	Timestamp of this HDR record
2	Message/Event	Name of the SIP Method
3	Request Server Total	Total number of server requests.
4	Request Client Total	Total number of client requests.
5	Retransmissions Server Total	Total number of server retransmission requests.
6	Retransmissions Client Total	Total number of client retransmission requests.
7	100 Trying Server Total	Total number of 100 Trying server response

CSV position	HDR Column Name	Description
8	100 Trying Client Total	Total number of 100 Trying client response
9	180 Ringing Server Total	Total number of 180 Ringing server response.
10	180 Ringing Client Total	Total number of 180 Ringing client response.
11	181 Forward Server Total	Total number of 181 Forward server response.
12	181 Forward Client Total	Total number of 181 Forward client response.
13	182 Queued Server Total	Total number of Invite 182 Queued Server response
14	182 Queued Client Total	Total number of 182 Queued client response.
15	183 Progress Server Total	Total Invite 182 Queued Server response
16	183 Progress Client Total	Total number of 183 Progress client response.
17	1xx Server Total	Total number of 1xx server response
18	1xx Client Total	Total number of 1xx client response
19	200OK Server Total	Total number of 200OK server response
20	200OK Client Total	Total number of 200OK client response
21	202 Accepted Server Total	Total number of 202Accepted server response
22	202 Accepted Client Total	Total number of 202 Accepted client response
23	2xx Success Server Total	Total number of 2xx Success server response
24	2xx Client Total	Total number of 2xx Success client response
25	30x Moved Server Total	Total number of 30x Moved server response
26	30x Moved Client Total	Total number of 30x Moved client response
27	305 Use ProxyServer Total	Total number of 305 Use Proxy server response
28	305 Use ProxyClient Total	Total number of 305 Use Proxy client response
29	380 Alternative Server Total	Total number of 380 Alternative server response
30	380 Alternative Client Total	Total number of 380 Alternative client response
31	3xx Redirect Server Total	Total number of 3xx Redirect server response.
32	3xx Redirect Client Total	Total number of 3xx Redirect client response.

CSV position	HDR Column Name	Description
33	400 Bad Request Server Total	Total number of 400 Bad Request server response.
34	400 Bad Request Client Total	Total number of 400 Bad Request client response.
35	401 Unauthorized Server Total	Total number of 401 Unauthorized server response.
36	401 Unauthorized Client Total	Total number of 401 Unauthorized client response.
37	403 Forbidden Server Total	Total number of 403 Forbidden server response.
38	403 Forbidden Client Total	Total number of 403 Forbidden client response.
39	404 Not Found Server Total	Total number of 404 Not Found server response.
40	404 Not Found Client Total	Total number of 404 Not Found client response.
41	405 Not Allowed Server Total	Total number of 405 Not Allowed server response.
42	405 Not Allowed Client Total	Total number of 405 Not Allowed client response.
43	406 Not Acceptable Server Total	Total number of 406 Not Acceptable server response.
44	406 Not Acceptable Client Total	Total number of 406 Not Acceptable client response.
45	407 Proxy Auth Req Server Total	Total number of 407 Proxy Auth Req server response.
46	407 Proxy Auth Req Client Total	Total number of 407 Proxy Auth Req client response.
47	408 Request Timeout Server Total	Total number of 408 Request Timeout server response.
48	408 Request Timeout Client Total	Total number of 408 Request Timeout client response.
49	415 Bad Media Type Server Total	Total number of 415 Bad Media Type server response.
50	415 Bad Media Type Client Total	Total number of 415 Bad Media Type client response.
51	420 Bad Extension Server Total	Total number of 420 Bad Extension server response.
52	420 Bad Extension Client Total	Total number of 420 Bad Extension client response.
53	421 Extension Req Server Total	Total number of 421 Extension Req server response.
54	421 Extension Req Client Total	Total number of 421 Extension Req client response.
55	422 Too Short Server Total	Total number of 422 Too Short server response.
56	422 Too Short Client Total	Total number of 422 Too Short client response.
57	423 Too Brief Server Total	Total number of 423 Too Brief server response.

CSV position	HDR Column Name	Description
58	423 Too Brief Client Total	Total number of 423 Too Brief client response.
59	480 Unavailable Server Total	Total number of 480 Unavailable server response.
60	480 Unavailable Client Total	Total number of 480 Unavailable client response.
61	481 Does Not Exist Server Total	Total number of 481 Does Not Exist server response.
62	481 Does Not Exist Client Total	Total number of 481 Does Not Exist client response.
63	482 Loop Detected Server Total	Total number of 482 Loop Detected server response.
64	482 Loop Detected Client Total	Total number of 482 Loop Detected client response.
65	483 Too Many Hops Server Total	Total number of 483 Too Many Hops server response.
66	483 Too Many Hops Client Total	Total number of 483 Too Many Hops client response.
67	484 Address Incompl Server Total	Total number of 484 Address Incompl server response.
68	484 Address Incompl Client Total	Total number of 484 Address Incompl client response.
69	485 Ambiguous Server Total	Total number of 485 Ambiguous server response.
70	485 Ambiguous Client Total	Total number of 485 Ambiguous client response.
71	486 Busy Here Server Total	Total number of 486 Busy Here server response.
72	486 Busy Here Client Total	Total number of 486 Busy Here client response.
73	486 Busy Here Server Total	Total number of 486 Busy Here server response.
74	486 Busy Here Client Total	Total number of 486 Busy Here client response.
75	487 Terminated Server Total	Total number of 487 Terminated server response.
76	487 Terminated Client Total	Total number of 487 Terminated client response.
77	488 Not Acceptable Server Total	Total number of 488 Not Acceptable server response.
78	488 Not Acceptable Client Total	Total number of 488 Not Acceptable client response.
79	489 Bad Event Server Total	Total number of 489 Bad Event server response.
80	489 Bad Event Client Total	Total number of 489 Bad Event client response.
81	491 Req Pending Server Total	Total number of 491 Req Pending server response.
82	491 Req Pending Client Total	Total number of 491 Req Pending client response.

CSV position	HDR Column Name	Description
83	4xx Server Total	Total number of 4xx error server response.
84	4xx Client Total	Total number of 4xx error client response.
85	500 Internal Error Server Total	Total number of 500 Internal Error server response.
86	500 Internal Error Client Total	Total number of 500 Internal Error client response.
87	501 Not Implemented Server Total	Total number of 501 Not Implemented error server response.
88	501 Not Implemented Client Total	Total number of 501 Not Implemented error client response.
89	502 Bad Gateway Server Total	Total number of 502 Bad Gateway error server response.
90	502 Bad Gateway Client Total	Total number of 502 Bad Gateway error client response.
91	503 Service Unavail Server Total	Total number of 503 Service Unavail error server response.
92	503 Service Unavail Client Total	Total number of 503 Service Unavail error client response.
93	504 Gateway Timeout Server Total	Total number of 504 Gateway Timeout error server response.
94	504 Gateway Timeout Client Total	Total number of 504 Gateway Timeout error client response.
95	513 Msg Too Large Server Total	Total number of 513 Msg Too Large error server response.
96	513 Msg Too Large Client Total	Total number of 513 Msg Too Large error client response.
97	580 Precon Failure Server Total	Total number of 580 Precon Failure error server response.
98	580 Precon Failure Client Total	Total number of 580 Precon Failure error client response.
99	5xx Server Total	Total number of 5xx error server response.
100	5xx Client Total	Total number of 5xx error client response.
101	600 Busy Everywhere Server Total	Total number of 600 Busy Everywhere error server response.
102	600 Busy Everywhere Client Total	Total number of 600 Busy Everywhere error client response.
103	603 Decline Server Total	Total number of 603 Decline error server response.
104	603 Decline Client Total	Total number of 603 Decline error client response.
105	604 Not Found Server Total	Total number of 604 Not Found error server response.

CSV position	HDR Column Name	Description
106	604 Not Found Client Total	Total number of 604 Not Found error client response.
107	606 Not Acceptable Server Total	Total number of 606 Not Acceptable error server response.
108	606 Not Acceptable Client Total	Total number of 606 Not Acceptable error client response.
109	6xx Server Total	Total number of 6xx error server response.
110	6xx Client Total	Total number of 6xx error client response.
111	Response Retrans Server Total	Total number of server Response retransmission requests
112	Response Retrans Client Total	Total number of client Response retransmission requests
113	Transaction Timeouts Server Total	Total number of server transaction timeouts.
114	Transaction Timeouts Client Total	Total number of client transaction timeouts.

sip-realm-method

This HDR group identifies global counts for listed responses to SIP Methods across a chosen realm. **sip-realm-method** is this HDR group's configured name.

CSV position	HDR Column Name	Description
1	TimeStamp	Timestamp of this HDR record.
2	Realm	Name of this realm.
3	Message/Event	Name of the SIP Method.
4	Request Server Total	Total number of server requests.
5	Request Client Total	Total number of client requests.
6	Retransmissions Server Total	Total number of server retransmission requests.
7	Retransmissions Client Total	Total number of client retransmission requests.
8	100 Trying Server Total	Total number of 100 Trying server response
9	100 Trying Client Total	Total number of 100 Trying client response
10	180 Ringing Server Total	Total number of 180 Ringing server response.
11	180 Ringing Client Total	Total number of 180 Ringing client response.

CSV position	HDR Column Name	Description
12	181 Forward Server Total	Total number of 181 Forward server response.
13	181 Forward Client Total	Total number of 181 Forward client response.
14	182 Queued Server Total	Total number of Invite 182 Queued Server response
15	182 Queued Client Total	Total number of 182 Queued client response.
16	183 Progress Server Total	Total Invite 182 Queued Server response
17	183 Progress Client Total	Total number of 183 Progress client response.
18	1xx Server Total	Total number of 1xx server response
19	1xx Client Total	Total number of 1xx client response
20	200OK Server Total	Total number of 200OK server response
21	200OK Client Total	Total number of 200OK client response
22	202 Accepted Server Total	Total number of 202Accepted server response
23	202 Accepted Client Total	Total number of 202 Accepted client response
24	2xx Success Server Total	Total number of 2xx Success server response
25	2xx Client Total	Total number of 2xx Success client response
26	30x Moved Server Total	Total number of 30x Moved server response
27	30x Moved Client Total	Total number of 30x Moved client response
28	305 Use ProxyServer Total	Total number of 305 Use Proxy server response
29	305 Use ProxyClient Total	Total number of 305 Use Proxy client response
30	380 Alternative Server Total	Total number of 380 Alternative server response
31	380 Alternative Client Total	Total number of 380 Alternative client response
32	3xx Redirect Server Total	Total number of 3xx Redirect server response.
33	3xx Redirect Client Total	Total number of 3xx Redirect client response.
34	400 Bad Request Server Total	Total number of 400 Bad Request server response.
35	400 Bad Request Client Total	Total number of 400 Bad Request client response.
36	401 Unauthorized Server Total	Total number of 401 Unauthorized server response.

CSV position	HDR Column Name	Description
37	401 Unauthorized Client Total	Total number of 401 Unauthorized client response.
38	403 Forbidden Server Total	Total number of 403 Forbidden server response.
39	403 Forbidden Client Total	Total number of 403 Forbidden client response.
40	404 Not Found Server Total	Total number of 404 Not Found server response.
41	404 Not Found Client Total	Total number of 404 Not Found client response.
42	405 Not Allowed Server Total	Total number of 405 Not Allowed server response.
43	405 Not Allowed Client Total	Total number of 405 Not Allowed client response.
44	406 Not Acceptable Server Total	Total number of 406 Not Acceptable server response.
45	406 Not Acceptable Client Total	Total number of 406 Not Acceptable client response.
46	407 Proxy Auth Req Server Total	Total number of 407 Proxy Auth Req server response.
47	407 Proxy Auth Req Client Total	Total number of 407 Proxy Auth Req client response.
48	408 Request Timeout Server Total	Total number of 408 Request Timeout server response.
49	408 Request Timeout Client Total	Total number of 408 Request Timeout client response.
50	415 Bad Media Type Server Total	Total number of 415 Bad Media Type server response.
51	415 Bad Media Type Client Total	Total number of 415 Bad Media Type client response.
52	420 Bad Extension Server Total	Total number of 420 Bad Extension server response.
53	420 Bad Extension Client Total	Total number of 420 Bad Extension client response.
54	421 Extension Req Server Total	Total number of 421 Extension Req server response.
55	421 Extension Req Client Total	Total number of 421 Extension Req client response.
56	422 Too Short Server Total	Total number of 422 Too Short server response.
57	422 Too Short Client Total	Total number of 422 Too Short client response.
58	423 Too Brief Server Total	Total number of 423 Too Brief server response.
59	423 Too Brief Client Total	Total number of 423 Too Brief client response.
60	480 Unavailable Server Total	Total number of 480 Unavailable server response.
61	480 Unavailable Client Total	Total number of 480 Unavailable client response.

CSV position	HDR Column Name	Description
62	481 Does Not Exist Server Total	Total number of 481 Does Not Exist server response.
63	481 Does Not Exist Client Total	Total number of 481 Does Not Exist client response.
64	482 Loop Detected Server Total	Total number of 482 Loop Detected server response.
65	482 Loop Detected Client Total	Total number of 482 Loop Detected client response.
66	483 Too Many Hops Server Total	Total number of 483 Too Many Hops server response.
67	483 Too Many Hops Client Total	Total number of 483 Too Many Hops client response.
68	484 Address Incompl Server Total	Total number of 484 Address Incompl server response.
69	484 Address Incompl Client Total	Total number of 484 Address Incompl client response.
70	485 Ambiguous Server Total	Total number of 485 Ambiguous server response.
71	485 Ambiguous Client Total	Total number of 485 Ambiguous client response.
72	486 Busy Here Server Total	Total number of 486 Busy Here server response.
73	486 Busy Here Client Total	Total number of 486 Busy Here client response.
74	486 Busy Here Server Total	Total number of 486 Busy Here server response.
75	486 Busy Here Client Total	Total number of 486 Busy Here client response.
76	487 Terminated Server Total	Total number of 487 Terminated server response.
77	487 Terminated Client Total	Total number of 487 Terminated client response.
78	488 Not Acceptable Server Total	Total number of 488 Not Acceptable server response.
79	488 Not Acceptable Client Total	Total number of 488 Not Acceptable client response.
80	489 Bad Event Server Total	Total number of 489 Bad Event server response.
81	489 Bad Event Client Total	Total number of 489 Bad Event client response.
82	491 Req Pending Server Total	Total number of 491 Req Pending server response.
83	491 Req Pending Client Total	Total number of 491 Req Pending client response.
84	4xx Server Total	Total number of 4xx error server response.
85	4xx Client Total	Total number of 4xx error client response.
86	500 Internal Error Server Total	Total number of 500 Internal Error server response.

CSV position	HDR Column Name	Description
87	500 Internal Error Client Total	Total number of 500 Internal Error client response.
88	501 Not Implemented Server Total	Total number of 501 Not Implemented error server response.
89	501 Not Implemented Client Total	Total number of 501 Not Implemented error client response.
90	502 Bad Gateway Server Total	Total number of 502 Bad Gateway error server response.
91	502 Bad Gateway Client Total	Total number of 502 Bad Gateway error client response.
92	503 Service Unavail Server Total	Total number of 503 Service Unavail error server response.
93	503 Service Unavail Client Total	Total number of 503 Service Unavail error client response.
94	504 Gateway Timeout Server Total	Total number of 504 Gateway Timeout error server response.
95	504 Gateway Timeout Client Total	Total number of 504 Gateway Timeout error client response.
97	513 Msg Too Large Client Total	Total number of 513 Msg Too Large error client response.
98	580 Precon Failure Server Total	Total number of 580 Precon Failure error server response.
99	580 Precon Failure Client Total	Total number of 580 Precon Failure error client response.
100	5xx Server Total	Total number of 5xx error server response.
101	5xx Client Total	Total number of 5xx error client response.
102	600 Busy Everywhere Server Total	Total number of 600 Busy Everywhere error server response.
103	600 Busy Everywhere Client Total	Total number of 600 Busy Everywhere error client response.
104	603 Decline Server Total	Total number of 603 Decline error server response.
105	603 Decline Client Total	Total number of 603 Decline error client response.
106	604 Not Found Server Total	Total number of 604 Not Found error server response.
107	604 Not Found Client Total	Total number of 604 Not Found error client response.
108	606 Not Acceptable Server Total	Total number of 606 Not Acceptable error server response.
109	606 Not Acceptable Client Total	Total number of 606 Not Acceptable error client response.

CSV position	HDR Column Name	Description
110	6xx Server Total	Total number of 6xx error server response.
111	6xx Client Total	Total number of 6xx error client response.
112	Response Retrans Server Total	Total number of server Response retransmission requests
113	Response Retrans Client Total	Total number of client Response retransmission requests
114	Transaction Timeouts Server Total	Total number of server transaction timeouts.
115	Transaction Timeouts Client Total	Total number of client transaction timeouts.

sip-interface-method

This HDR group identifies global counts for listed responses to SIP Methods across a unique SIP Interface. **sip-interface-method** is this HDR group's configured name.

CSV position	HDR Column Name	Description
1	TimeStamp	Timestamp of this HDR record.
2	Interface	Name of this SIP Interface.
3	Message/Event	Name of the SIP Method.
4	Request Server Total	Total number of server requests.
5	Request Client Total	Total number of client requests.
6	Retransmissions Server Total	Total number of server retransmission requests.
7	Retransmissions Client Total	Total number of client retransmission requests.
8	100 Trying Server Total	Total number of 100 Trying server response
9	100 Trying Client Total	Total number of 100 Trying client response
10	180 Ringing Server Total	Total number of 180 Ringing server response.
11	180 Ringing Client Total	Total number of 180 Ringing client response.
12	181 Forward Server Total	Total number of 181 Forward server response.
13	181 Forward Client Total	Total number of 181 Forward client response.
14	182 Queued Server Total	Total number of Invite 182 Queued Server response
15	182 Queued Client Total	Total number of 182 Queued client response.

CSV position	HDR Column Name	Description
16	183 Progress Server Total	Total Invite 182 Queued Server response
17	183 Progress Client Total	Total number of 183 Progress client response.
18	1xx Server Total	Total number of 1xx server response
19	1xx Client Total	Total number of 1xx client response
20	200OK Server Total	Total number of 200OK server response
21	200OK Client Total	Total number of 200OK client response
22	202 Accepted Server Total	Total number of 202Accepted server response
23	202 Accepted Client Total	Total number of 202 Accepted client response
24	2xx Success Server Total	Total number of 2xx Success server response
25	2xx Client Total	Total number of 2xx Success client response
26	30x Moved Server Total	Total number of 30x Moved server response
27	30x Moved Client Total	Total number of 30x Moved client response
28	305 Use ProxyServer Total	Total number of 305 Use Proxy server response
29	305 Use ProxyClient Total	Total number of 305 Use Proxy client response
30	380 Alternative Server Total	Total number of 380 Alternative server response
31	380 Alternative Client Total	Total number of 380 Alternative client response
32	3xx Redirect Server Total	Total number of 3xx Redirect server response.
33	3xx Redirect Client Total	Total number of 3xx Redirect client response.
34	400 Bad Request Server Total	Total number of 400 Bad Request server response.
35	400 Bad Request Client Total	Total number of 400 Bad Request client response.
36	401 Unauthorized Server Total	Total number of 401 Unauthorized server response.
37	401 Unauthorized Client Total	Total number of 401 Unauthorized client response.
38	403 Forbidden Server Total	Total number of 403 Forbidden server response.
39	403 Forbidden Client Total	Total number of 403 Forbidden client response.
40	404 Not Found Server Total	Total number of 404 Not Found server response.

CSV position	HDR Column Name	Description
41	404 Not Found Client Total	Total number of 404 Not Found client response.
42	405 Not Allowed Server Total	Total number of 405 Not Allowed server response.
43	405 Not Allowed Client Total	Total number of 405 Not Allowed client response.
44	406 Not Acceptable Server Total	Total number of 406 Not Acceptable server response.
45	406 Not Acceptable Client Total	Total number of 406 Not Acceptable client response.
46	407 Proxy Auth Req Server Total	Total number of 407 Proxy Auth Req server response.
47	407 Proxy Auth Req Client Total	Total number of 407 Proxy Auth Req client response.
48	408 Request Timeout Server Total	Total number of 408 Request Timeout server response.
49	408 Request Timeout Client Total	Total number of 408 Request Timeout client response.
50	415 Bad Media Type Server Total	Total number of 415 Bad Media Type server response.
51	415 Bad Media Type Client Total	Total number of 415 Bad Media Type client response.
52	420 Bad Extension Server Total	Total number of 420 Bad Extension server response.
53	420 Bad Extension Client Total	Total number of 420 Bad Extension client response.
54	421 Extension Reqd Server Total	Total number of 421 Extension Reqd server response.
55	421 Extension Reqd Client Total	Total number of 421 Extension Reqd client response.
56	422 Too Short Server Total	Total number of 422 Too Short server response.
57	422 Too Short Client Total	Total number of 422 Too Short client response.
58	423 Too Brief Server Total	Total number of 423 Too Brief server response.
59	423 Too Brief Client Total	Total number of 423 Too Brief client response.
60	480 Unavailable Server Total	Total number of 480 Unavailable server response.
61	480 Unavailable Client Total	Total number of 480 Unavailable client response.
62	481 Does Not Exist Server Total	Total number of 481 Does Not Exist server response.
63	481 Does Not Exist Client Total	Total number of 481 Does Not Exist client response.
64	482 Loop Detected Server Total	Total number of 482 Loop Detected server response.
65	482 Loop Detected Client Total	Total number of 482 Loop Detected client response.

CSV position	HDR Column Name	Description
66	483 Too Many Hops Server Total	Total number of 483 Too Many Hops server response.
67	483 Too Many Hops Client Total	Total number of 483 Too Many Hops client response.
68	484 Address Incompl Server Total	Total number of 484 Address Incompl server response.
69	484 Address Incompl Client Total	Total number of 484 Address Incompl client response.
70	485 Ambiguous Server Total	Total number of 485 Ambiguous server response.
71	485 Ambiguous Client Total	Total number of 485 Ambiguous client response.
72	486 Busy Here Server Total	Total number of 486 Busy Here server response.
73	486 Busy Here Client Total	Total number of 486 Busy Here client response.
74	486 Busy Here Server Total	Total number of 486 Busy Here server response.
75	486 Busy Here Client Total	Total number of 486 Busy Here client response.
76	487 Terminated Server Total	Total number of 487 Terminated server response.
77	487 Terminated Client Total	Total number of 487 Terminated client response.
78	488 Not Acceptable Server Total	Total number of 488 Not Acceptable server response.
79	488 Not Acceptable Client Total	Total number of 488 Not Acceptable client response.
80	489 Bad Event Server Total	Total number of 489 Bad Event server response.
81	489 Bad Event Client Total	Total number of 489 Bad Event client response.
82	491 Req Pending Server Total	Total number of 491 Req Pending server response.
83	491 Req Pending Client Total	Total number of 491 Req Pending client response.
84	4xx Server Total	Total number of 4xx error server response.
85	4xx Client Total	Total number of 4xx error client response.
86	500 Internal Error Server Total	Total number of 500 Internal Error server response.
87	500 Internal Error Client Total	Total number of 500 Internal Error client response.
88	501 Not Implemented Server Total	Total number of 501 Not Implemented error server response.
89	501 Not Implemented Client Total	Total number of 501 Not Implemented error client response.

CSV position	HDR Column Name	Description
90	502 Bad Gateway Server Total	Total number of 502 Bad Gateway error server response.
91	502 Bad Gateway Client Total	Total number of 502 Bad Gateway error client response.
92	503 Service Unavail Server Total	Total number of 503 Service Unavail error server response.
93	503 Service Unavail Client Total	Total number of 503 Service Unavail error client response.
94	504 Gateway Timeout Server Total	Total number of 504 Gateway Timeout error server response.
95	504 Gateway Timeout Client Total	Total number of 504 Gateway Timeout error client response.
97	513 Msg Too Large Client Total	Total number of 513 Msg Too Large error client response.
98	580 Precon Failure Server Total	Total number of 580 Precon Failure error server response.
99	580 Precon Failure Client Total	Total number of 580 Precon Failure error client response.
100	5xx Server Total	Total number of 5xx error server response.
101	5xx Client Total	Total number of 5xx error client response.
102	600 Busy Everywhere Server Total	Total number of 600 Busy Everywhere error server response.
103	600 Busy Everywhere Client Total	Total number of 600 Busy Everywhere error client response.
104	603 Decline Server Total	Total number of 603 Decline error server response.
105	603 Decline Client Total	Total number of 603 Decline error client response.
106	604 Not Found Server Total	Total number of 604 Not Found error server response.
107	604 Not Found Client Total	Total number of 604 Not Found error client response.
108	606 Not Acceptable Server Total	Total number of 606 Not Acceptable error server response.
109	606 Not Acceptable Client Total	Total number of 606 Not Acceptable error client response.
110	6xx Server Total	Total number of 6xx error server response.
111	6xx Client Total	Total number of 6xx error client response.
112	Response Retrans Server Total	Total number of server Response retransmission requests

CSV position	HDR Column Name	Description
113	Response Retrans Client Total	Total number of client Response retransmission requests
114	Transaction Timeouts Server Total	Total number of server transaction timeouts.
115	Transaction Timeouts Client Total	Total number of client transaction timeouts.

sip-agent-method

This HDR group identifies global counts for listed responses to SIP Methods across a unique session agent. **sip-agent-method** is this HDR group's configured name.

CSV position	HDR Column Name	Description
1	TimeStamp	Timestamp of this HDR record.
2	Agent	Name of this session agent.
3	Message/Event	Name of the SIP Method.
4	Request Server Total	Total number of server requests.
5	Request Client Total	Total number of client requests.
6	Retransmissions Server Total	Total number of server retransmission requests.
7	Retransmissions Client Total	Total number of client retransmission requests.
8	100 Trying Server Total	Total number of 100 Trying server response
9	100 Trying Client Total	Total number of 100 Trying client response
10	180 Ringing Server Total	Total number of 180 Ringing server response.
11	180 Ringing Client Total	Total number of 180 Ringing client response.
12	181 Forward Server Total	Total number of 181 Forward server response.
13	181 Forward Client Total	Total number of 181 Forward client response.
14	182 Queued Server Total	Total number of Invite 182 Queued Server response
15	182 Queued Client Total	Total number of 182 Queued client response.
16	183 Progress Server Total	Total Invite 182 Queued Server response
17	183 Progress Client Total	Total number of 183 Progress client response.
18	1xx Server Total	Total number of 1xx server response
19	1xx Client Total	Total number of 1xx client response

CSV position	HDR Column Name	Description
20	200OK Server Total	Total number of 200OK server response
21	200OK Client Total	Total number of 200OK client response
22	202 Accepted Server Total	Total number of 202Accepted server response
23	202 Accepted Client Total	Total number of 202 Accepted client response
24	2xx Success Server Total	Total number of 2xx Success server response
25	2xx Client Total	Total number of 2xx Success client response
26	30x Moved Server Total	Total number of 30x Moved server response
27	30x Moved Client Total	Total number of 30x Moved client response
28	305 Use ProxyServer Total	Total number of 305 Use Proxy server response
29	305 Use ProxyClient Total	Total number of 305 Use Proxy client response
30	380 Alternative Server Total	Total number of 380 Alternative server response
31	380 Alternative Client Total	Total number of 380 Alternative client response
32	3xx Redirect Server Total	Total number of 3xx Redirect server response.
33	3xx Redirect Client Total	Total number of 3xx Redirect client response.
34	400 Bad Request Server Total	Total number of 400 Bad Request server response.
35	400 Bad Request Client Total	Total number of 400 Bad Request client response.
36	401 Unauthorized Server Total	Total number of 401 Unauthorized server response.
37	401 Unauthorized Client Total	Total number of 401 Unauthorized client response.
38	403 Forbidden Server Total	Total number of 403 Forbidden server response.
39	403 Forbidden Client Total	Total number of 403 Forbidden client response.
40	404 Not Found Server Total	Total number of 404 Not Found server response.
41	404 Not Found Client Total	Total number of 404 Not Found client response.
42	405 Not Allowed Server Total	Total number of 405 Not Allowed server response.
43	405 Not Allowed Client Total	Total number of 405 Not Allowed client response.
44	406 Not Acceptable Server Total	Total number of 406 Not Acceptable server response.

CSV position	HDR Column Name	Description
45	406 Not Acceptable Client Total	Total number of 406 Not Acceptable client response.
46	407 Proxy Auth Req Server Total	Total number of 407 Proxy Auth Req server response.
47	407 Proxy Auth Req Client Total	Total number of 407 Proxy Auth Req client response.
48	408 Request Timeout Server Total	Total number of 408 Request Timeout server response.
49	408 Request Timeout Client Total	Total number of 408 Request Timeout client response.
50	415 Bad Media Type Server Total	Total number of 415 Bad Media Type server response.
51	415 Bad Media Type Client Total	Total number of 415 Bad Media Type client response.
52	420 Bad Extension Server Total	Total number of 420 Bad Extension server response.
53	420 Bad Extension Client Total	Total number of 420 Bad Extension client response.
54	421 Extension Reqd Server Total	Total number of 421 Extension Reqd server response.
55	421 Extension Reqd Client Total	Total number of 421 Extension Reqd client response.
56	422 Too Short Server Total	Total number of 422 Too Short server response.
57	422 Too Short Client Total	Total number of 422 Too Short client response.
58	423 Too Brief Server Total	Total number of 423 Too Brief server response.
59	423 Too Brief Client Total	Total number of 423 Too Brief client response.
60	480 Unavailable Server Total	Total number of 480 Unavailable server response.
61	480 Unavailable Client Total	Total number of 480 Unavailable client response.
62	481 Does Not Exist Server Total	Total number of 481 Does Not Exist server response.
63	481 Does Not Exist Client Total	Total number of 481 Does Not Exist client response.
64	482 Loop Detected Server Total	Total number of 482 Loop Detected server response.
65	482 Loop Detected Client Total	Total number of 482 Loop Detected client response.
66	483 Too Many Hops Server Total	Total number of 483 Too Many Hops server response.
67	483 Too Many Hops Client Total	Total number of 483 Too Many Hops client response.
68	484 Address Incompl Server Total	Total number of 484 Address Incompl server response.
69	484 Address Incompl Client Total	Total number of 484 Address Incompl client response.

CSV position	HDR Column Name	Description
70	485 Ambiguous Server Total	Total number of 485 Ambiguous server response.
71	485 Ambiguous Client Total	Total number of 485 Ambiguous client response.
72	486 Busy Here Server Total	Total number of 486 Busy Here server response.
73	486 Busy Here Client Total	Total number of 486 Busy Here client response.
74	486 Busy Here Server Total	Total number of 486 Busy Here server response.
75	486 Busy Here Client Total	Total number of 486 Busy Here client response.
76	487 Terminated Server Total	Total number of 487 Terminated server response.
77	487 Terminated Client Total	Total number of 487 Terminated client response.
78	488 Not Acceptable Server Total	Total number of 488 Not Acceptable server response.
79	488 Not Acceptable Client Total	Total number of 488 Not Acceptable client response.
80	489 Bad Event Server Total	Total number of 489 Bad Event server response.
81	489 Bad Event Client Total	Total number of 489 Bad Event client response.
82	491 Req Pending Server Total	Total number of 491 Req Pending server response.
83	491 Req Pending Client Total	Total number of 491 Req Pending client response.
84	4xx Server Total	Total number of 4xx error server response.
85	4xx Client Total	Total number of 4xx error client response.
86	500 Internal Error Server Total	Total number of 500 Internal Error server response.
87	500 Internal Error Client Total	Total number of 500 Internal Error client response.
88	501 Not Implemented Server Total	Total number of 501 Not Implemented error server response.
89	501 Not Implemented Client Total	Total number of 501 Not Implemented error client response.
90	502 Bad Gateway Server Total	Total number of 502 Bad Gateway error server response.
91	502 Bad Gateway Client Total	Total number of 502 Bad Gateway error client response.
92	503 Service Unavail Server Total	Total number of 503 Service Unavail error server response.
93	503 Service Unavail Client Total	Total number of 503 Service Unavail error client response.

CSV position	HDR Column Name	Description
94	504 Gateway Timeout Server Total	Total number of 504 Gateway Timeout error server response.
95	504 Gateway Timeout Client Total	Total number of 504 Gateway Timeout error client response.
97	513 Msg Too Large Client Total	Total number of 513 Msg Too Large error client response.
98	580 Precon Failure Server Total	Total number of 580 Precon Failure error server response.
99	580 Precon Failure Client Total	Total number of 580 Precon Failure error client response.
100	5xx Server Total	Total number of 5xx error server response.
101	5xx Client Total	Total number of 5xx error client response.
102	600 Busy Everywhere Server Total	Total number of 600 Busy Everywhere error server response.
103	600 Busy Everywhere Client Total	Total number of 600 Busy Everywhere error client response.
104	603 Decline Server Total	Total number of 603 Decline error server response.
105	603 Decline Client Total	Total number of 603 Decline error client response.
106	604 Not Found Server Total	Total number of 604 Not Found error server response.
107	604 Not Found Client Total	Total number of 604 Not Found error client response.
108	606 Not Acceptable Server Total	Total number of 606 Not Acceptable error server response.
109	606 Not Acceptable Client Total	Total number of 606 Not Acceptable error client response.
110	6xx Server Total	Total number of 6xx error server response.
111	6xx Client Total	Total number of 6xx error client response.
112	Response Retrans Server Total	Total number of server Response retransmission requests
113	Response Retrans Client Total	Total number of client Response retransmission requests
114	Transaction Timeouts Server Total	Total number of server transaction timeouts.
115	Transaction Timeouts Client Total	Total number of client transaction timeouts.

sip-srvcc

Displays SIP/SRVCC statistics regarding counters of the states of calls handovers. This HDR group corresponds to the **show sipd srvcc** command and the apSipSRVCCStatsGroup found in ap-sip.mib.

Position	HDR Column Name	Data Type	Range	Description
1	Timestamp	Integer		The window of time the HDR collector used to collect the data. The value is in seconds.
2	Total Calls	Counter	0-2147483647	Total calls subjected to SRVCC
3	Total Success	Counter	0-2147483647	Total successful SRVCC HO
4	Total Failed	Counter	0-2147483647	Total failed SRVCC HO
5	Total Cancelled	Counter	0-2147483647	Total cancelled SRVCC HO
6	Calls After Answer	Counter	0-2147483647	Total calls subjected to SRVCC after answer
7	After Answer Success	Counter	0-2147483647	Total successful SRVCC HO after answer
8	After Answer Failed	Counter	0-2147483647	Total failed SRVCC HO after answer
9	Calls During Alerting	Counter	0-2147483647	Total calls subjected to SRVCC during alerting.
10	During Alerting Success	Counter	0-2147483647	Total successful SRVCC HO during alerting.
11	During Alerting Failed	Counter	0-2147483647	Total failed SRVCC HO during alerting.
12	ATCF Cancellation	Counter	0-2147483647	Total ATCF cancellations
13	Total Emergency Calls	Counter	0-2147483647	Total SRVCC HO for Emergency calls
14	Emergency Success	Counter	0-2147483647	Total successful SRVCC HO for Emergency calls
15	Emergency Failed	Counter	0-2147483647	Total failed SRVCC HO for Emergency calls

Position	HDR Column Name	Data Type	Range	Description
16	EATF Cancellation	Counter	0-2147483647	Total EATF Cancellations
17	Calls During Pre-Alerting	Counter	0-2147483647	Total calls subjected to SRVCC during pre-alerting
18	During Pre-Alerting Success	Counter	0-2147483647	Total successful SRVCC HO during pre-alerting
19	During Per-Alerting Failed	Counter	0-2147483647	Total failed SRVCC HO during pre-alerting

ext-Rx-policy-server

Displays external policy server statistics per configured policy server. This HDR group corresponds to the **show policy-server <name>** command and the apDiamRxPolicyServerStatsTable found in ap-diameter.mib.

Position	HDR Column Name	Data Type	Range	Description
1	Timestamp	Integer		The window of time the HDR collector used to collect the data. The value is in seconds.
2	Policy Server Name	String		Name of the Rx policy Server
3	Sockets	Counter	0-2147483647	Total number of sockets created for Rx Policy Server
4	Connections	Counter	0-2147483647	Total number of transport connections created for Rx Policy Server
5	Client Transactions (CT)	Counter	0-2147483647	Total number of client transactions for Rx Policy Server
6	CT Reserve Requests Sent	Counter	0-2147483647	Total number of client transactions reserve requests sent for Rx Policy Server

Position	HDR Column Name	Data Type	Range	Description
7	CT Update Requests Sent	Counter	0-2147483647	Total number of client transactions Update requests sent for Rx Policy Server
8	CT Remove Requests Sent	Counter	0-2147483647	Total number of client transactions Remove requests sent for Rx Policy Server
9	CT Requests Re-Trans	Counter	0-2147483647	Total number of re-transmitted request for client transactions for Rx Policy Server
10	CT Install Resp Received	Counter	0-2147483647	Total number of client transactions Install response received for Rx Policy Server
11	CT Reject Resp Received	Counter	0-2147483647	Total number of client transactions Reject response received for Rx Policy Server
12	CT Remove Resp Received	Counter	0-2147483647	Total number of client transactions Remove response received for Rx Policy Server
13	CT Errors Received	Counter	0-2147483647	Total number of client transactions Errors received for Rx Policy Server
14	CT Transaction Timeouts	Counter	0-2147483647	Total number of client transaction timeouts for Rx Policy Server
15	CT Errors	Counter	0-2147483647	Total number of client transaction errors for Rx Policy Server
16	Server Transactions (ST)	Counter	0-2147483647	Total number of server transaction for Rx Policy Server

Position	HDR Column Name	Data Type	Range	Description
17	ST Requests Received	Counter	0-2147483647	Total number of request received on server transaction for Rx Policy Server
18	ST Dup Req Received	Counter	0-2147483647	Total number of duplicate request received on server transaction for Rx Policy Server
19	ST Success Resp Sent	Counter	0-2147483647	Total number of success responses sent by server transactions for Rx Policy Server
20	ST Error Resp Sent	Counter	0-2147483647	Total number of error responses sent by server transactions for Rx Policy Server
21	ST Requests Dropped	Counter	0-2147483647	Total number of requests dropped by server transactions for Rx Policy Server
22	CER Sent	Counter	0-2147483647	Total number of CER messages sent by this Rx Policy Server.
23	CEA Success	Counter	0-2147483647	Total number of CEA success messages for this Rx Policy Server.
24	CEA Errors	Counter	0-2147483647	Total number of CEA error messages for this Rx Policy Server.
25	AAR Sent	Counter	0-2147483647	Total number of AAR messages sent by this Rx Policy Server.
26	AAA Success	Counter	0-2147483647	Total number of AAA success messages for this Rx Policy Server.
27	AAA Errors	Counter	0-2147483647	Total number of AAA error messages for this Rx Policy Server.

Position	HDR Column Name	Data Type	Range	Description
28	STR Sent	Counter	0-2147483647	Total number of STR messages sent by this Rx Policy Server.
29	STA Success	Counter	0-2147483647	Total number of STA success messages for this Rx Policy Server.
30	STA Errors	Counter	0-2147483647	Total number of STA error messages for this Rx Policy Server.
31	RAR Rcvd	Counter	0-2147483647	Total number of RAR messages sent by this Rx Policy Server.
32	RAA Rcvd Success	Counter	0-2147483647	Total number of RAA success messages for this Rx Policy Server.
33	RAA Rcvd Errors	Counter	0-2147483647	Total number of RAA error messages for this Rx Policy Server.
34	DWR Sent	Counter	0-2147483647	Total number of DWR messages sent by this Rx Policy Server.
35	DWA Success	Counter	0-2147483647	Total number of DWA success messages for this Rx Policy Server.
36	DWA Errors	Counter	0-2147483647	Total number of DWA error messages for this Rx Policy Server.
37	DWR Rcvd	Counter	0-2147483647	Total number of DWR messages received by this Rx Policy Server.
38	DWA Rcvd Success	Counter	0-2147483647	Total number of DWA success messages sent by this Rx Policy Server.
39	DWA Rcvd Errors	Counter	0-2147483647	Total number of DWA error messages sent by this Rx Policy Server.

Position	HDR Column Name	Data Type	Range	Description
40	ASR Rcvd	Counter	0-2147483647	Total number of ASR messages sent by this Rx Policy Server.
41	ASA Rcvd Success	Counter	0-2147483647	Total number of ASA success messages for this Rx Policy Server.
42	ASA Rcvd Errors	Counter	0-2147483647	Total number of ASA error messages for this Rx Policy Server.

sa-ike

Displays IKE Session Agent counters. This HDR group corresponds to the **show sa stats ike** command and the apSecuritySAIKEStats found in ap-security.mib.

Position	HDR Column Name	Data Type	Range	Description
1	Timestamp	Integer		The window of time the HDR collector used to collect the data. The value is in seconds.
2	ADD-SA Req Rcvd	Counter	0-2147483647	Total IKE ADD-SA Requests received
3	ADD-SA Success Resp Sent	Counter	0-2147483647	Total IKE ADD-SA success response sent
4	ADD-SA Fail Resp Sent	Counter	0-2147483647	Total IKE ADD-SA fail response sent
5	DEL-SA Req Rcvd	Counter	0-2147483647	Total IKE DEL-SA Requests received.
6	DEL-SA Success Resp Sent	Counter	0-2147483647	Total IKE DEL-SA Success response sent
7	DEL-SA Fail Resp Sent	Counter	0-2147483647	Total IKE DEL-SA Fail response sent.
8	ACQUIRE-SA Req Sent	Counter	0-2147483647	Total IKE ACQUIRE-SA Requests sent.

Position	HDR Column Name	Data Type	Range	Description
9	ACQUIRE-SA Success Resp Rcvd	Counter	0-2147483647	Total IKE ACQUIRE -SA Success response received.
10	ACQUIRE-SA Fail Resp Rcvd	Counter	0-2147483647	Total IKE ACQUIRE -SA Fail response received.
11	ACQUIRE-SA Trans Timeouts	Counter	0-2147483647	Total IKE ACQUIRE -SA Transaction timeouts.
12	SA Added	Counter	0-2147483647	Total number of SA Added.
13	SA Add Failed	Counter	0-2147483647	Total number of SA Add Failed
14	SA Deleted	Counter	0-2147483647	Total number of SA Deleted.
15	SA Delete Failed	Counter	0-2147483647	Total number of SA Delete failed.

sa-imsaka

Displays IMS-AKA Session Agent counters. This HDR group corresponds to the **show sa stats ims-aka all** command and the apSipSRVCCStatsobjects found in ap-sip.mib.

Position	HDR Column Name	Data Type	Range	Description
1	TimeStamp	Integer		The window of time the HDR collector used to collect the data. The value is in seconds.
2	ADD-SA Req Sent	Counter	0-2147483647	Total IMS-AKA ADD-SA Requests sent
3	ADD-SA Req Rcvd	Counter	0-2147483647	Total IMS-AKA ADD-SA Requests received
4	ADD-SA Success Resp Sent	Counter	0-2147483647	Total IMS-AKA ADD-SA success response sent
5	ADD-SA Success Resp Rcvd	Counter	0-2147483647	Total IMS-AKA ADD-SA success response received

Position	HDR Column Name	Data Type	Range	Description
6	ADD-SA Fail Resp Sent	Counter	0-2147483647	Total IMS-AKA ADD-SA fail response sent
7	ADD-SA Fail Invalid Param Sent	Counter	0-2147483647	Total IMS-AKA ADD-SA Fail Message sent due to invalid parameter.
8	ADD-SA Fail Resp Rcvd	Counter	0-2147483647	Total IMS-AKA ADD-SA fail response received
9	ADD-SA Fail Addr Mask Mismatch	Counter	0-2147483647	Total IMS-AKA ADD-SA Fail Message sent due to Address Mask Mismatch.
10	ADD-SA Fail Inv Proto Params	Counter	0-2147483647	Total IMS-AKA ADD-SA Fail Message sent due to invalid Protocol parameters.
11	ADD-SA Fail Inv Proto Data	Counter	0-2147483647	Total IMS-AKA ADD-SA Fail Message sent due to invalid Protocol data.
12	ADD-SA Trans Timeouts	Counter	0-2147483647	Total IMS-AKA ADD-SA Transaction timeouts.
13	DEL-SA Req Sent	Counter	0-2147483647	Total IMS-AKA DEL-SA Requests sent
14	DEL-SA Req Rcvd	Counter	0-2147483647	Total IMS-AKA DEL-SA Requests received.
15	DEL-SA Success Resp Sent	Counter	0-2147483647	Total IMS-AKA DEL-SA Success response sent
16	DEL-SA Success Resp Rcvd	Counter	0-2147483647	Total IMS-AKA DEL-SA Success response received.
17	DEL-SA Fail Resp Sent	Counter	0-2147483647	Total IMS-AKA DEL-SA Fail Response sent.

Position	HDR Column Name	Data Type	Range	Description
18	DEL-SA Fail Invalid Param Sent	Counter	0-2147483647	Total IMS-AKA DEL-SA Fail Message sent due to invalid parameter
19	DEL-SA Fail Resp Rcvd	Counter	0-2147483647	Total IMS-AKA DEL-SA Fail responses received.
20	DEL-SA Trans Timeouts	Counter	0-2147483647	Total IMS-AKA DEL-SA Messages resulting from Transaction timeouts
21	DEL-SA Due to Timeout	Counter	0-2147483647	Total IMS-AKA DEL-SA Messages resulting from timeouts.
22	MOD-SA Req Sent	Counter	0-2147483647	Total IMS-AKA MOD-SA Requests sent
23	MOD-SA Req Rcvd	Counter	0-2147483647	Total IMS-AKA MOD-SA Requests received.
24	MOD-SA Success Resp Sent	Counter	0-2147483647	Total IMS-AKA MOD-SA Success response sent
25	MOD-SA Success Resp Rcvd	Counter	0-2147483647	Total IMS-AKA MOD-SA Success response received.
26	MOD-SA Fail Resp Sent	Counter	0-2147483647	Total IMS-AKA MOD-SA Fail Response sent.
27	MOD-SA Fail Invalid Param Sent	Counter	0-2147483647	Total IMS-AKA MOD-SA Fail Message sent due to invalid parameter
28	MOD-SA Fail Resp Rcvd	Counter	0-2147483647	Total IMS-AKA MOD-SA Fail responses received.
29	MOD-SA Trans Timeouts	Counter	0-2147483647	Total IMS-AKA MOD-SA Messages resulting from Transaction timeouts

Position	HDR Column Name	Data Type	Range	Description
30	SA Added	Counter	0-2147483647	Total number of SA Added.
31	SA Added Inbound	Counter	0-2147483647	Total IMS-AKA SA added in inbound.
32	SA Added Outbound	Counter	0-2147483647	Total IMS-AKA SA added in outbound.
33	SA Add Failed	Counter	0-2147483647	Total SA addition failed.
34	SA Add Inbound PPM Failed	Counter	0-2147483647	Total SA Add Inbound PPM Failed
35	SA Add Outbound PPM Failed	Counter	0-2147483647	Total SA Add Outbound PPM Failed
36	SA Deleted	Counter	0-2147483647	Total number of SA deleted.
37	SA Deleted Inbound	Counter	0-2147483647	Total number of SA deleted in the inbound.
38	SA Deleted Outbound	Counter	0-2147483647	Total number of SA deleted in the outbound.
39	SA Delete Failed	Counter	0-2147483647	Total number of SA delete failed.
40	SA Delete Inbound PPM Failed	Counter	0-2147483647	Total number of SA Delete Inbound PPM Failed
41	SA Delete Outbound PPM Failed	Counter	0-2147483647	Total number of SA Delete Outbound PPM Failed
42	SA Del Fail Addr Mask Mismatch	Counter	0-2147483647	Total number of SA Delete Failed due to Addr Mask Mismatch
43	SA Del Fail Inv Proto Params	Counter	0-2147483647	Total number of SA Delete Failed due to Invalid Protocol Parameters.
44	SA Del Fail Inv Proto Data	Counter	0-2147483647	Total number of SA Delete Failed due to invalid Protocol Data.
45	SA Collision	Counter	0-2147483647	Total number of SA collisions.
46	SA CollisionRecoveryFail	Counter	0-2147483647	Total number of SA collision recovery failed

Position	HDR Column Name	Data Type	Range	Description
47	SA CollisionRecoverySucc	Counter	0-2147483647	Total number of SA collision recovery successful
48	SA CollisionRecoveryLkupFail	Counter	0-2147483647	Total number of SA collisions recovery lookup failed.
49	SA Key Not Found	Counter	0-2147483647	Total number of SA Key not Found event.
50	SA Key Not Found Timeout	Counter	0-2147483647	Total number of SA Key not Found timeout event.
51	SA Key Exists	Counter	0-2147483647	Total number of SA Key exists event.
52	SA Recovery	Counter	0-2147483647	Total number of SA recovery event.
53	SA Recovery Fail	Counter	0-2147483647	Total number of SA recovery fail event.
54	SA Trans Queue	Counter	0-2147483647	Total count of SA Trans Queue.
55	SA Red Queue	Counter	0-2147483647	Total count of SA Redundancy Queue.
56	SA inbound record(SATable)	Counter	0-2147483647	Total count of SA inbound record (SA Table)
57	SA outbound record(SATable)	Counter	0-2147483647	Total count of SA outbound record (SA Table)
58	SA invalid timer	Counter	0-2147483647	Total number of times SA Invalid timer event occurred.
59	SA add fail in table	Counter	0-2147483647	Total number of times SA Add fail in table.
60	SA send ADD to Red	Counter	0-2147483647	Total number of times SA sent ADD event to redundant peer.
61	SA send MOD to Red	Counter	0-2147483647	Total number of times SA sent modify event to redundant peer.

Position	HDR Column Name	Data Type	Range	Description
62	SA Rcvd ADD from Active	Counter	0-2147483647	Total number of times SA received ADD event from Active
63	SA Rcvd MOD from Active	Counter	0-2147483647	Total number of times SA received MODIFY event from Active
64	SA Add Red Queue Failed	Counter	0-2147483647	Total number of SA Add to Redundancy Queue failed event.
65	Invalid Red Action	Counter	0-2147483647	Total number of Invalid Redundant action
66	Send Timed Del To Red	Counter	0-2147483647	Total number of times Timed Del sent to redundant pair.
67	Rcvd Timed Del Frm Act	Counter	0-2147483647	Total number of times Timed Del from Active received.
68	SA request transaction queue size	integer		SA request transaction queue size of the security association agent
69	Allow transaction quota	integer		Allowed transaction quota of the security association agent
70	Delay delete count	integer		Delay delete count of the security association agent
71	max trans queue size	integer		Maximum transaction queue size of the security association agent
72	Total Regmsg	Counter	0-2147483647	Total number of registration messages received.
73	Unprotect Msg	Counter	0-2147483647	Total number of unprotected registration messages received.

Position	HDR Column Name	Data Type	Range	Description
74	Unprotect Msg Before Expiry	Counter	0-2147483647	Total number of unprotected registration messages received before expiry.
75	Inbound Prior Disconnects	Counter	0-2147483647	Total number of prior disconnects on the inbound.
76	Outbound Prior Disconnects	Counter	0-2147483647	Total number of prior disconnects on the outbound.
77	Answer Before Challenge	Counter	0-2147483647	Total number of registration answer messages received before challenge.
78	Protect Msg	Counter	0-2147483647	Total number of protected registration messages received.
79	Initial Reg Rej too busy	Counter	0-2147483647	Total number of initial registration messages rejected with busy error code.
80	Initial Reg Rej no resource	Counter	0-2147483647	Total number of initial registration messages rejected because of resource unavailability.
81	Initial Reg Fail alloc mem	Counter	0-2147483647	Total number of initial registration messages rejected because of memory allocation failure.
82	Initial Reg lms entry exist	Counter	0-2147483647	Total number of initial registration messages for which IMS entry already exists.
83	Initial Reg Bad sec hdr	Counter	0-2147483647	Total number of initial registration messages received with bad security header.
84	Initial Reg Passed quota	Counter	0-2147483647	Total number of initial registration messages that passed the quota.

Position	HDR Column Name	Data Type	Range	Description
85	Re-Reg Rej too busy	Counter	0-2147483647	Total number of re-registration messages rejected with busy error code.
86	Re-Reg Rej no resource	Counter	0-2147483647	Total number of re-registration messages rejected because of resource unavailability.
87	Re-Reg Bad sec hdr	Counter	0-2147483647	Total number of re-registration messages received with bad security header.
88	Re-Reg No ims entry	Counter	0-2147483647	Total number of re-registration messages for which no IMS entry exists.
89	Re-Reg Passed quota	Counter	0-2147483647	Total number of re-registration messages that passed the quota.
90	Re-Reg Fwd unpro Reg	Counter	0-2147483647	Total number of unprotected re-registration messages that were forwarded.
91	Re-Reg Reuse spi false	Counter	0-2147483647	Total number of re-registration messages for which re-use SPI is false.
92	Re-Reg Reuse spi true	Counter	0-2147483647	Total number of re-registration messages for which re-use SPI is true.
93	Re-Reg Incomplete reg	Counter	0-2147483647	Total number of re-registration messages resulting in incomplete registration.

sa-srtp

Displays SRTP Session Agent counters. This HDR group corresponds to the **show sa stats srtp** command and the apSecuritySAS RTPStats found in ap-security.mib.

Position	HDR Column Name	Data Type	Range	Description
1	Timestamp	Integer		The window of time the HDR collector used to collect the data. The value is in seconds.
2	ADD-SA Req Sent	Counter	0-2147483647	Total SRTP ADD-SA Requests sent
3	ADD-SA Req Rcvd	Counter	0-2147483647	Total SRTP ADD-SA Requests received
4	ADD-SA Success Resp Sent	Counter	0-2147483647	Total SRTP ADD-SA success response sent
5	ADD-SA Success Resp Rcvd	Counter	0-2147483647	Total SRTP ADD-SA success response received
6	ADD-SA Fail Resp Sent	Counter	0-2147483647	Total SRTP ADD-SA fail response sent
7	ADD-SA Fail Resp Rcvd	Counter	0-2147483647	Total SRTP ADD-SA Fail response received.
8	ADD-SA Trans Timeouts	Counter	0-2147483647	Total SRTP ADD-SA Transaction timeouts.
9	DEL-SA Req Sent	Counter	0-2147483647	Total SRTP DEL-SA Requests sent
10	DEL-SA Req Rcvd	Counter	0-2147483647	Total SRTP DEL-SA Requests received.
11	DEL-SA Success Resp Sent	Counter	0-2147483647	Total SRTP DEL-SA Success response sent
12	DEL-SA Success Resp Rcvd	Counter	0-2147483647	Total SRTP DEL-SA Success response received.
13	DEL-SA Fail Resp Sent	Counter	0-2147483647	Total SRTP DEL-SA Fail Response sent.
14	DEL-SA Fail Resp Rcvd	Counter	0-2147483647	Total SRTP DEL-SA Fail response received.
15	DEL-SA Trans Timeouts	Counter	0-2147483647	Total SRTP DEL-SA Transaction timeouts.
16	MOD-SA Req Sent	Counter	0-2147483647	Total SRTP MOD-SA Requests sent

Position	HDR Column Name	Data Type	Range	Description
17	MOD-SA Req Rcvd	Counter	0-2147483647	Total SRTP MOD-SA Requests received.
18	MOD-SA Success Resp Sent	Counter	0-2147483647	Total SRTP MOD-SA Success response sent
19	MOD-SA Success Resp Rcvd	Counter	0-2147483647	Total SRTP MOD-SA Success response received.
20	MOD-SA Fail Resp Sent	Counter	0-2147483647	Total SRTP MOD-SA Fail Response sent.
21	MOD-SA Fail Resp Rcvd	Counter	0-2147483647	Total SRTP MOD-SA Fail response received.
22	MOD-SA Trans Timeouts	Counter	0-2147483647	Total SRTP MOD-SA transaction timeouts.
23	SA Added	Counter	0-2147483647	Total SRTP SA Added
24	SA Add Failed	Counter	0-2147483647	Total SRTP SA Add failed.
25	SA Deleted	Counter	0-2147483647	Total SRTP SA deleted.
26	SA Delete Failed	Counter	0-2147483647	Total SRTP SA delete failed.
27	SA Collision	Counter	0-2147483647	Total SRTP SA collision
28	SA Key Not Found	Counter	0-2147483647	Total SRTP SA Key not found event.

sip-codec-per-realm

Captures codec usage on a per-realm basis. This HDR group corresponds to the **show sipd codecs <realm_id>** command and the apCodecRealmStatsTable found in ap-codec.mib.

Position	HDR Column Name	Data Type	Range	Description
1	TimeStamp	Integer		The window of time the HDR collector used to collect the data. The value is in seconds.
2	Realm Name	String		Name of the Realm
3	Transcoded	Counter	0-2147483647	Lifetime total of all sessions for which transcoding between two or more codecs was applied.
4	Transrated	Counter	0-2147483647	Lifetime total of all sessions for which the packetization interval among dialogs in the session was changed.
5	Transparent	Counter	0-2147483647	Lifetime total of all sessions for which no transcoding was applied.
6	PCMU Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to PCMU codec.
7	PCMA Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to PCMA codec.
8	G722 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to G722 codec.
9	G723 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to G723 codec.

Position	HDR Column Name	Data Type	Range	Description
10	G726-16 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to G726-16 codec.
11	G726-24 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to G726-24 codec.
12	G726-32 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to G726-32 codec.
13	G726-40 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to G726-40 codec.
14	G728 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to G728 codec.
15	G729 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to G729 codec.
16	GSM Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to GSM codec.
17	iLBC Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to iLBC codec.

Position	HDR Column Name	Data Type	Range	Description
18	H261 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to H261 codec.
19	H263 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to H263 codec.
20	T38 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to T38 codec.
21	AMR Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to AMR codec.
22	AMR-WB Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to AMR-WB codec.
23	EVRC Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to EVRC codec.
24	EVRC0 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to EVRC0 codec.
25	EVRC1 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to EVRC1 codec.

Position	HDR Column Name	Data Type	Range	Description
26	EVRCB Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to EVRCB codec.
27	EVRCB0 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to EVRCB0 codec.
28	EVRCB1 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to EVRCB1 codec.
29	opus Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to opus codec.
30	SILK Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to SILK codec.
31	T140 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to T140 codec.
32	BAUDOT Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to BAUDOT codec.
33	H264 Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to H264 codec.

Position	HDR Column Name	Data Type	Range	Description
34	EVS Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to EVS codec.
35	Other Count	Counter	0-2147483647	Lifetime total of all SDP media streams received in the realm which negotiated to Other (Unknown) codec.

xcode-codec-util

Displays licensed codecs, the total provisioned capacity, and the current number of sessions in use. This HDR group corresponds to the **show xcode load** command and `apLicenseEntry` found in `ap-license.mib` and `apCodecTranscodingResourceUtilMIBObjects` found in `ap-codec.mib`.

Position	HDR Column Name	Data Type	Range	Description
1	TimeStamp	Integer		The window of time the HDR collector used to collect the data. The value is in seconds.
2	Licensed Codec Name	String		Name of the licensed Codec
3	Sessions	Gauge	0-2147483647	Total number of active transcoded session for this codec.
4	Capacity	Integer		Total licensed capacity of the codec. If the licensed capacity is uncapped, a zero is displayed.

xcode-session-gen-info

Displays general counters about transcoding sessions. This HDR group corresponds to the **show xcode load** command and the `apCodecTranscodingTCULoadStatsTable` found in `ap-codec.mib`.

Position	HDR Column Name	Data Type	Range	Description
1	TimeStamp	Integer		The window of time the HDR collector used to collect the data. The value is in seconds.
2	Total Transcoded Sessions	Gauge	0 - 2^63-1	Total number of active transcoded sessions in the system.
3	DSP MIPS Protection	String		Indication whether DSP MIPS Protection is active or not.

xcode-tcm-util

Displays transcoding resources load statistics. This HDR group corresponds to the **show xcode load** command and the apCodecTranscodingTCULoadStatsTable found in ap-codec.mib.

Position	HDR Column Name	Data Type	Range	Description
1	TimeStamp	Integer		The window of time the HDR collector used to collect the data. The value is in seconds.
2	TCU Num	Integer		Transcoding Unit Number
3	TCM Num	Integer		Transcoding Module for the particular TCU
4	DSP Num	Integer		DSP Number for the particular TCM
5	Session Count	Gauge	0-2147483647	The number of active sessions for a DSP
6	Current Load	Gauge	0.00% to 100.00%	The current load (in percentage) for a DSP. The precision of the value will be maintained up to two places of decimal as in acli.

Position	HDR Column Name	Data Type	Range	Description
7	Peak Load	Counter	0.00% to 100.00%	The peak lifetime load (in percentage) for a DSP. The precision of the value will be maintained up to two places of decimal as in acli.
8	DSP Overloaded	String		Indication whether the DSP is overloaded or not

4


HDR Show Commands

This section provides information about the Oracle Communications Session Border Controller (OCSBC) Show commands you can enter at the root level of the Acme Packet Command Line Interface (ACLI). The parameters in these tables map to the Historical Data Recording (HDR) data used by the HDR Collector when generating comma-separated value (CSV) reports.

For more information about the HDR Collection data, see [HDR Groups and Group Statistics](#).

Statistic Counts

For each Show command table output, statistical counts are based on the OCSBC defining a period as 100 seconds. The recent window represents the previous complete period (period 1 shown below) PLUS the time incurred into the current period (period 2 shown below). Period 1 = 100 seconds and period 2 = 75 seconds. The complete window period = 175 seconds. After period 3 is entered (not pictured below), the Recent window will begin at the 100 second mark.

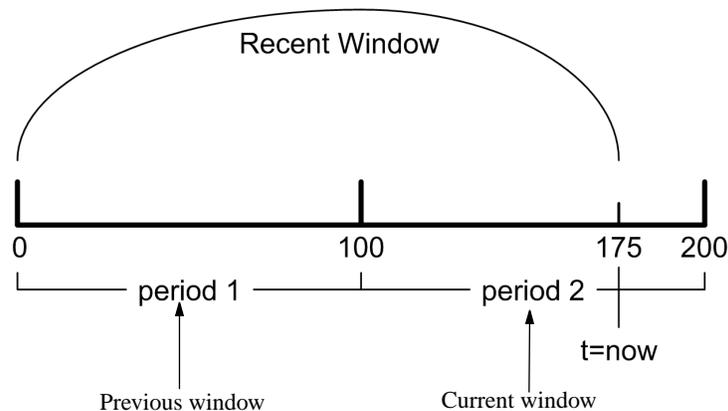

When you execute a **show** command, a timestamp and period count display.

```
ORACLE> show sipd sessions
10:37:25-141
```

In the period count, the number after the dash, indicates the number of seconds into the recent period. In the above example, the number of seconds into the recent period is 158 seconds. Therefore, the recent window ranges from 100 to 199 seconds.

Table Column Descriptions

For each Show command table, the columns are defined as follows:

Column	Description
Period Active	Represents the current number of active counts
Period High	Represents the highest number during the recent window
Period Total	Represents the total accumulated count during the recent window
Lifetime Total	Represents the total accumulated count
Lifetime PerMax	Represents the maximum recorded in one period
Lifetime High	Represents the highest momentary count



Note:

The Lifetime statistics begin accumulating from the last reboot.

Show Commands Associated with HDR Groups

This section provides ACLI show command output tables and descriptions. These show commands are associated with the HDR Groups described in the section, **ACLI-Associated Groups and Group Statistics**.



Note:

The **show sipd agents** command is associated with the **session-agent** HDR Group, and the **show sipd realms** command is associated with the **session-realm** HDR Group (in the section **MIB-Associated Groups and Group Statistics**). The **show sipd realm** command is also associated with the registration-realm HDR Group in the section, **ACLI-Associated Groups and Group Statistics**.

show sipd sessions

The **show sipd sessions** command displays information about SIP session transactions on the OCSBC. These statistics include session information over Period and Lifetime monitoring spans, as well as information on active sessions. For associated HDR Group and Group Statistics, see **sip-sessions**.

```
ORACLE> show sipd sessions
09:40:09-105
SIP Session Status      -- Period --  ----- Lifetime -----
                        Active  High  Total      Total  PerMax  High
Sessions                10    10    10         65    10     55
  Initial                10    30    40         65    50     5
  Early                  20    10    30         65    45    10
  Established            15    10    25         60    30    35
  Terminated            3     0     3           5    10    10
Dialogs                  10     3    13         45    20    30
  Early                   7     8    15         47    25    25
```

Confirmed	15	0	15	60	40	10
Terminated	4	0	4	45	25	20

Parameter	Description
Sessions	Number of sessions established by INVITE and SUBSCRIBE messages
Initial	Number of sessions for which an INVITE or SUBSCRIBE is being forwarded.
Early	Number of sessions for which the first provisional response (1xx other than 100) is received.
Established	Number of sessions for which a success (2xx) response is received.
Terminated	Number of sessions for which the session is ended by receiving or sending a BYE for an "Established" session or forwarding an error response for an "Initial" or "Early" session. The session remains in the Terminated state until all the resources for the session are freed.
Dialogs	Number of end-to-end SIP signaling connections.
Early	Number of dialogs created by a provisional response.
Confirmed	Number of dialogs created by a success response. An "Early" dialog transitions to Confirmed when a success response is received.
Terminated	Number of dialogs that ended by receiving/sending a BYE for an "Established" session or receiving/sending error response "Early" dialog. The dialog remains in the Terminated state until all the resources for the session are freed.

show sipd agents

The **show sipd agents** command displays statistics related to defined SIP session agents. SIP session agents can be softswitches, SIP proxies, application servers, SIP gateways, or SIP endpoints.

In addition to functioning as a single logical next hop for a signaling message (for example, where a SIP INVITE is forwarded), session agents can provide information about next or previous hops for packets in a SIP agent, including providing a list of equivalent next hops.

Entering this show command without arguments, list all SIP session agents. By adding the IP address or hostname of a session agent as well as a specified method at the end of the command, you can display statistics for that specific session agent and method. For associated HDR Group and Group Statistics, see **session-agent**.

When the FQDN-resolved Session Agent Statistics are enabled with the sa-routes-stats parameter set to enabled, the format session-agent-hostname#IP-address is used to indicate each IP address returned for a DNS query on a session agent configured as a hostname.

Show sipd agents Command

```
ORACLE> show sipd agents
11:44:S1-49 (recent)
```

```
-----Inbound----- ---- Outbound ---- -- Latency -- Max
```

Session Agent	Active	Rate	Confix	Active	Rate	Confix	Avg	Max	Burst	
session-agent1	I	0	0.0	0	0	0.0	0	0.000	0.000	0
session-agent2	I	0	0.0	0	0	0.0	0	0.000	0.000	0

Parameter	Description
Session Agent	Host name of the session agent in Fully Qualified Domain Name (FQDN) or IP Address format (softswitch, SIP proxy, application server, SIP gateway or SIP endpoint).
Inbound	
Active	Total number of current, active inbound sessions sent to the session agent.
Rate	Average rate of inbound session invitations (per second) sent to the session agent.
ConEx	Number of times that signaling & bandwidth constraints for inbound packets sent to the session agent were exceeded on the session agent. This helps determine resource availability.
Outbound	
Active	Total number of current, active outbound sessions sent to the session agent.
Rate	Average rate of outbound session invitations (per second) sent to the session agent.
ConEx	Number of times that signaling & bandwidth constraints for outbound packets were exceeded on the session agent. This helps determine resource availability.
Latency	
Avg	Average amount of time between the moment the session-agent transmits a SIP packet and the moment it reaches its destination.
Max	Maximum amount of time between the moment the session-agent transmits a SIP packet and the moment it reaches its destination.
Max Burst	Maximum burst rate for each session agent as total number of session invitations sent to or received from the session agent within the amount of time configured for the burst-rate window.

Show sipd agents <IP address or hostname> Command

```
AcmePacket> show sipd agents session-agent1
12:11:17-51
Session Agent session-agent1(public) [In Service]
----- Period ----- ----- Lifetime -----
Active High Total Total PerMax High
Inbound Sessions          0  0  0  0  0  0
Rate Exceeded             -  -  0  0  0  -
Num Exceeded              -  -  0  0  0  -
Burst Rate                0  0  0  0  0  0
Reg Rate Exceeded         -  -  0  0  0  -
Outbound Sessions         0  1  11  11  11  1
Rate Exceeded             -  0  0  0  0  -
Num Exceeded              -  -  0  0  0  -
Burst Rate                0  11  0  0  0  11
Reg Rate Exceeded         -  -  0  0  0  -
Out of Service            -  -  0  0  0  -
Trans Timeout             0  0  0  0  0  0
Requests Sent             -  -  0  0  0  -
```

```

Requests Complete      -    -    0    0    0    -
Seizure                -    -    0    0    0    -
Answer                 -    -    0    0    0    -
ASR Exceeded           -    -    0    0    0    -
Messages Received      -    -    30   30   30   -
Latency=0.000: max=0.000
  
```

Parameter	Description
Inbound Sessions	Number of inbound SIP sessions for this session agent.
Rate Exceeded	Number of times session rate was exceeded for inbound SIP sessions on this session agent.
Num Exceeded	Number of times that signaling & bandwidth constraints for inbound SIP sessions were exceeded on this session agent. This helps determine resource availability.
Burst Rate	Number of times burst rate was exceeded for this session agent on inbound SIP sessions.
Reg Rate Exceeded	Number of times the registration rate was exceeded for this session agent on inbound SIP sessions.
Outbound Sessions	Number of outbound SIP sessions for this session agent.
Rate Exceeded	Number of times session rate was exceeded for outbound SIP sessions.
Num Exceeded	Number of times time constraints were exceeded for outbound SIP sessions.
Burst Rate	Maximum burst rate of traffic (both inbound and outbound).
Reg Rate Exceeded	Number of times the registration rate was exceeded for this session agent on outbound SIP sessions.
Out of Service	Number of times this session agent went out of service.
Trans Timeout	Number of SIP transactions that timed out for this session agent.
Requests Sent	Number of SIP requests sent via this session agent.
Requests Complete	Number of SIP requests completed for this session agent.
Seizure	Number of seizures that occurred on this session agent.
Answer	Number of answered SIP sessions on this session agent.
ASR Exceeded	Number of times that Access Service Requests (ASRs) were exceeded on this session agent.
Messages Received	Number of SIP messages received by this session agent.
Latency	Average and maximum amount of time between the moment the session-agent transmits a SIP packet and the moment it reaches its destination.

show sipd acls

An access control list (ACL) allows/denies specific sources (IP or IP:port) to access the OCSBC.

The **show sipd acls** command displays information about SIP ACL activity on the OCSBC. These statistics include ACL information over Period and Lifetime monitoring spans, as well as information on active ACL status. For associated HDR Group and Group Statistics, see **sip-acl-oper** and **sip-acl-status**.

```

ORACLE> show sipd acls
09:12:04-120
SIP ACL Status          -- Period -- ----- Lifetime -----
  
```

	Active	High	Total	Total	PerMax	High
Total Entries	0	0	0	0	0	0
Trusted	0	0	0	0	0	0
Blocked	0	0	0	0	0	0
Blocked NATs	0	0	0	0	0	0
ACL Operations				----	Lifetime	----
		Recent	Total	PerMax		
ACL Requests		0	0	0		
Bad Messages		0	0	0		
Promotions		0	0	0		
Demotions		0	0	0		
Trust->Untrust		0	0	0		
Untrust->Deny		0	0	0		

Parameter	Description
SIP ACL Status	
Total Entries	Total number of ACL entries, both trusted and blocked.
Trusted	Number of trusted ACL entries
Blocked	Number of blocked ACL entries
ACL Operations	
ACL Requests	Number of ACL requests
Bad Messages	Number of bad messages
Promotions	Total number of ACL entry promotions. These are the ACL entries that have been promoted from untrusted to trusted status.
Demotions	Number of ACL entry demotions.
Trust->Untrust	Number of ACL entries demoted from trusted to untrusted
Untrust->Deny	Number of ACL entries demoted from untrusted to deny

show sipd client

A SIP client can initiate and terminate SIP sessions. The **show sipd client** command displays statistics for SIP client events when the OCSBC is acting as a SIP client in its back-to-back User Agent (B2BUA) role. These statistics include SIP client information over Period and Lifetime monitoring spans, as well as information on active SIP client status. For associated HDR Group and Group Statistics, see **sip-client**.

```
ORACLE> show sipd client
09:28:15-191
SIP Client Trans      -- Period --  ----- Lifetime -----
Active  High  Total      Total  PerMax  High
All States           0     0     0         0     0     0
<Initial>           0     0     0         0     0     0
<Trying>            0     0     0         0     0     0
<Calling>           0     0     0         0     0     0
<Proceeding>       0     0     0         0     0     0
<Cancelled>        0     0     0         0     0     0
<EarlyMedia>       0     0     0         0     0     0
<Completed>        0     0     0         0     0     0
<SetMedia>         0     0     0         0     0     0
```

```
<Established>      0      0      0      0      0      0
<Terminated>      0      0      0      0      0      0
```

Parameter	Description
All States	Number of all client session transactions
Initial	Number of times the Initial state was entered due to the receipt of a request
Trying	Number of times the Trying state was entered due to the receipt of a request
Calling	Number of times the Calling state was entered due to the receipt of an INVITE request
Proceeding	Number of times the "Proceeding" state was entered due to the receipt of a provisional response while in the Calling state
Cancelled	Number of INVITE transactions that received a CANCEL
EarlyMedia	Number of times the "Proceeding" state was entered due to the receipt of a provisional response that contained a Session Description Protocol (SDP) while in the Calling state
Completed	Number of times that the "Completed" state was entered due to the receipt of a status code in the range of 300-699 when either in the "Calling" or Proceeding state
SetMedia	Number of transactions in which the OCSBC was setting up NAT and steering ports
Established	Number of times the client received a 2xx response to an INVITE, but could not forward it because the NAT and steering port information was missing
Terminated	Number of times the Terminated state was entered after a 2xx message

show sipd server

A SIP server can receive and terminate SIP sessions. The **show sipd server** command displays statistics for SIP server events when the OCSBC is acting as a SIP server in its back-to-back User Agent (B2BUA) role. These statistics include SIP server information over Period and Lifetime monitoring spans, as well as information on active SIP server status. For associated HDR Group and Group Statistics, see **sip-server**.

```
ORACLE> show sipd server
09:39:22-158
SIP Server Trans      -- Period --  ----- Lifetime -----
                        Active  High  Total      Total  PerMax  High
All States             0      0      0          0      0      0
<Initial>             0      0      0          0      0      0
<Queued>              0      0      0          0      0      0
<Trying>              0      0      0          0      0      0
<Proceeding>         0      0      0          0      0      0
<Cancelled>          0      0      0          0      0      0
<Established>        0      0      0          0      0      0
<Completed>          0      0      0          0      0      0
<Confirmed>          0      0      0          0      0      0
<Terminated>         0      0      0          0      0      0
```

Parameter	Description
All States	Number of all server session transactions
Initial	Number of times the Initial state was entered due to the receipt of a request
Queued	Number of times the Queued state was entered due to the receipt of a request
Trying	Number of times the Trying state was entered due to the receipt of a request
Proceeding	Number of times the "Proceeding" state was entered due to the receipt of a provisional response while in the Calling state
Cancelled	Number of INVITE transactions that received a CANCEL
Established	Number of times the server received a 2xx response to an INVITE, but could not forward it because the NAT and steering port information was missing
Completed	Number of times that the "Completed" state was entered due to the receipt of a status code in the range of 300-699 when either in the "Calling" or Proceeding state
Confirmed	Number of times that an ACK was received while the server was in "Completed" state, and then transitioned to the Confirmed state
Terminated	Number of times the Terminated state was entered after a 2xx message, or never received an ACK in the "Completed" state, and then transitioned to the Terminated state.

show sipd policy

Multistage local policy routing enables the OCSBC to perform multiple stages of route lookups where the result from one stage is used as the lookup key for the next routing stage.

The **show sipd policy** command displays single and multistage local policy lookups. All counters are reported for the recent, lifetime total, and lifetime maximum periods. For associated HDR Group and Group Statistics, see **sip-policy**.

```
ORACLE> show sipd policy
09:38:43-118
SIP Policy/Routing          ---- Lifetime ----
                          Recent      Total    PerMax
Local Policy Lookups        0         0        0
Local Policy Hits           0         0        0
Local Policy Misses         0         0        0
Local Policy Drops          0         0        0
Agent Group Hits            0         0        0
Agent Group Misses          0         0        0
No Routes Found             0         0        0
Missing Dialog              0         0        0
Inb SA Constraints          0         0        0
Outb SA Constraints         0         0        0
Inb REG SA Constraint       0         0        0
Out REG SA Constraint       0         0        0
Requests Challenged        0         0        0
Challenge Found             0         0        0
Challenge Not Found         0         0        0
```

Challenge Dropped	0	0	0
Local Policy Inits	0	0	0
Local Policy Results	0	0	0
Local Policy Exceeded	0	0	0
Local Policy Loops	0	0	0

Parameter	Description
Local Policy Lookups	Number of local policy lookups
Local Policy Hits	Number of successful local policy lookups
Local Policy Misses	Number of local policy lookup failures
Local Policy Drops	Number of local policy lookups where the next hop session agent group is H.323
Agent Group Hits	Number of successful local policy lookups for session agent groups
Agent Group Misses	Number of successful local policy lookups where no session agent was available for the session agent group
No Routes Found	Number of successful local policy lookups, but temporarily unable to route (for example, session agent out of service)
Missing Dialog	Number of local policy lookups where the dialog was not found for a request addressed to the OCSBC with a To tag or for a NOTIFY-SUBSCRIBE SIP request
Inb SA Constraints	Number of successful local policy lookups where the inbound session agent (SA) exceeded constraints
Outb SA Constraints	Number of successful local policy lookups where the outbound SA exceeded constraints
Inb REG SA Constraint	Number of successful inbound local policy lookups where the registrar (REG) SA exceeded constraints
Outb REG SA Constraint	Number of successful outbound local policy lookups where the registrar (REG) SA exceeded constraints
Request Challenged	Number of requests that were challenged.
Challenge Found	Number of challenges found.
Challenge Not Found	Number of challenges not found.
Challenge Dropped	Number of challenges dropped.
Local Policy Inits	Number of times the OCSBC made an initial local policy lookup
Local Policy Results	Number of times the OCSBC truncated the number of routes returned for a local policy lookup because the maximum number of routes per local policy lookup (max local policy lookups routes per lookup) threshold was reached.
Local Policy Exceeded	Number of times the OCSBC truncated the number of routes returned for a local policy lookup because the maximum number of routes per message request (total local policy routes) threshold was reached.
Local Policy Loops	Number of times the OCSBC detected a loop while performing a multistage local policy lookup

show sipd errors

The **show sipd errors** command displays statistics for SIP media event errors. These statistics are errors encountered by the SIP application in processing SIP media sessions, dialogs, and session descriptions (SDP). Error statistics display for the

lifetime monitoring span only. For associated HDR Group and Group Statistics, see **sip-errors**.

```
ORACLE> show sipd errors
09:31:49-105
SIP Errors/Events          ---- Lifetime ----
                           Recent      Total    PerMax
SDP Offer Errors           0          0        0
SDP Answer Errors          0          0        0
Drop Media Errors          0          0        0
Transaction Errors         0          0        0
Application Errors         0          0        0
Media Exp Events           0          0        0
Early Media Exps           0          0        0
Exp Media Drops            0          0        0
Expired Sessions           0          0        0
Multiple OK Drops          0          0        0
Multiple OK Terms          0          0        0
Media Failure Drops        0          0        0
Non-ACK 2xx Drops          0          0        0
Invalid Requests           0          0        0
Invalid Responses          0          0        0
Invalid Messages           0          0        0
CAC Session Drop           0          0        0
Nsep User Exceeded         0          0        0
Nsep SA Exceeded           0          0        0
CAC BW Drop                 0          0        0
```

Parameter	Description
SDP Offer Errors	Number of errors encountered in setting up the media session for a session description in a SIP request or response which is a Session Description Protocol (SDP) Offer in the Offer/Answer model (RFC 3264)
SDP Answer Errors	Number of errors encountered in setting up the media session for a session description in a SIP request or response which is a Session Description Protocol (SDP) Answer in the Offer/Answer model (RFC 3264)
Drop Media Errors	Number of errors encountered in tearing down the media for a dialog or session that is being terminated due to: a) non-successful response to an INVITE transaction, or b) a BYE transaction received from one of the participants in a dialog/session, or c) a BYE initiated by the OCSBC due to a timeout notification from the Middlebox Control Daemon (MBCD).
Transaction Errors	Number of errors in continuing the processing of the SIP client transaction associated with setting up or tearing down of the media session.
Application Errors	Number of miscellaneous errors in the SIP application that are otherwise uncategorized
Media Exp Events	Number of flow timer expiration notifications received from the Middlebox Control Daemon (MBCD).
Early Media Exps	Number of flow timer expiration notifications received for media sessions that were not completely set up due to an incomplete or pending INVITE transaction

Parameter	Description
Exp Media Drops	Number of flow timer expiration notifications from the Middlebox Control Daemon (MBCD) that resulted in the termination of the dialog/session by the SIP application.
Expired Sessions	Number of sessions terminated due to the session timer expiring
Multiple OK Drops	Number of dialogs terminated upon reception of a 200 OK response from multiple User Agent Servers (UASs) for a given INVITE transaction that was forked by a downstream proxy
Multiple OK Terms	Number of dialogs terminated upon reception of a 200 OK response that conflicts with an existing established dialog on the OCSBC
Media Failure Drops	Number of dialogs terminated due to a failure in establishing the media session.
Non-Ack 2xx Drops	Number of sessions terminated because an ACK was not received for a 2xx response
Invalid Requests	Number of invalid requests (for example, an unsupported header was received).
Invalid Responses	Number of invalid responses (for example, no Via header in response)
Invalid Messages	Number of messages dropped due to parse failure
CAC Session Drop	Number of call admission control (CAC) session setup failures
CAC BW Drop	Number of call admission control (CAC) session setup failures due to insufficient bandwidth (BW)
Nsep User Exceeded	Number of Emergency Telecommunications Service (ETS), user call sessions that exceeded the calls-per-second rate configured on the OCSBC for National Security and Emergency Preparedness (NSEP).
Nsep SA Exceeded	Number of Emergency Telecommunications Service (ETS), Session Agent (SA) call sessions that exceeded the calls-per-second rate configured on the OCSBC for National Security and Emergency Preparedness (NSEP).

show sipd status

The **show sipd status** command displays information about Session Initiation Protocol (SIP) transactions. These statistics are given for the Period and Lifetime monitoring spans. This display also provides statistics related to SIP media events. These statistics include SIP status information over Period and Lifetime monitoring spans, as well as information on active SIP status. For associated HDR Group and Group Statistics, see **sip-status**.

```
ORACLE> show sipd status
09:41:00-156
SIP Status
```

	Active	-- Period --		----- Lifetime -----		
		High	Total	Total	PerMax	High
Sessions	0	0	0	0	0	0
Subscriptions	0	0	0	0	0	0
Dialogs	0	0	0	0	0	0
CallID Map	0	0	0	0	0	0
Rejections	-	-	0	0	0	
ReINVITES	-	-	0	0	0	
ReINV Suppress	-	-	0	0	0	

Media Sessions	0	0	0	0	0	0
Media Pending	0	0	0	0	0	0
Client Trans	0	0	0	0	0	0
Server Trans	0	0	0	0	0	0
Resp Contexts	0	0	0	0	0	0
Saved Contexts	0	0	0	0	0	0
Sockets	0	0	0	0	0	0
Req Dropped	-	-	0	0	0	0
DNS Trans	0	0	0	0	0	0
DNS Sockets	0	0	0	0	0	0
DNS Results	0	0	0	0	0	0
Rejected Msgs	0	0	0	0	0	0

Session Rate = 0.0

Load Rate = 0.0

Remaining Connections = 200000 (max 200000)

Parameter	Description
Sessions	Number of sessions established by INVITE and SUBSCRIBE messages
Subscriptions	Number of sessions established by SUBSCRIPTION
Dialogs	Number of end-to-end SIP signaling connections
CallID Map	Number of successful session header Call ID mappings
Rejections	Number of rejected INVITEs
ReINVITEs	Number of ReINVITEs
ReINV Suppress	Number of ReINVITEs that were suppressed
Media Sessions	Number of successful media sessions
Media Pending	Number of media sessions waiting to be established
Client Trans	Number of client transactions
Server Trans	Number of server transactions that have taken place on the OCSBC
Resp Contexts	Number of response contexts
Saved Contexts	Number of saved contexts
Sockets	Number of SIP sockets
Req Dropped	Number of dropped requests
DNS Trans	Number of Domain Name System (DNS) transactions
DNS Sockets	Number of Domain Name System (DNS) sockets
DNS Results	Number of Domain Name System (DNS) results
Rejected Msgs	Number of rejected messages
Session Rate	The rate, per second, of SIP invites allowed to or from the OCSBC during the sliding window period. The rate is computed every 10 seconds .
Load Rate	Average Central Processing Unit (CPU) utilization of the OCSBC during the current window. The average is computed every 10 seconds unless the load-limit is configured in the SIPConfig record, in which case it is 5 seconds.
Remaining Connections	Number of SIP connections currently available

show sipd invite

The **show sipd invite** command displays information about Session Initiation Protocol (SIP) INVITE requests. These statistics are given for both Server and Client and display recent, per maximum, and total for each. For associated HDR Group and Group Statistics, see **sip-invites**.

```
ORACLE> show sipd invite
09:05:20-106
INVITE (20:02:28-127)
```

Message/Event	Server			Client		
	Recent	Total	PerMax	Recent	Total	PerMax
INVITE Requests	0	0	0	0	0	0
Retransmissions	0	0	0	0	0	0
Response Retrans	0	0	0	0	0	0
Transaction Timeouts	-	-	-	0	0	0
Locally Throttled	-	-	-	0	0	0

Avg Latency=0.000 for 0
 Max Latency=0.000

Parameter	Description
INVITE Requests	Number of INVITE requests
Retransmissions	Number of retransmissions of INVITES
Response Retrans	Number of response retransmissions
Transaction Timeouts	Number of INVITE request transaction timeouts
Locally Throttled	Number of INVITE requests locally throttled
Avg Latency	Average latency of traffic flow for inbound and outbound packets
Max Latency	Maximum latency of traffic flow for inbound and outbound packets.

show sipd realms

Realms are a logical distinction representing routes (or groups of routes) reachable by the OCSBC and what kinds of resources and special functions apply to those routes. Realms are used as a basis for determining ingress and egress associations to network interfaces, which can reside in different VPNs. The ingress realm is determined by the signaling interface on which traffic arrives. The egress realm is determined by the following:

- Routing policy - Where the egress realm is determined in the session agent configuration or external address of a SIP-NAT
- Realm-bridging - As applied in the SIP-NAT configuration and H.323 stack configurations
- Third-party routing/redirect (i.e., SIP redirect or H.323 LCF) 170

Realms can also be nested in order to form nested realm groups. Nested realms consist of separate realms that are arranged within a hierarchy to support network architectures that have separate backbone networks and VPNs for signaling and media.

The **show sipd realms** command displays information about sessions (both inbound and outbound), out of service sessions, early and successful sessions, and session registration information for realms. This information displays for Period and Lifetime monitoring spans, as well as for active sessions. For associated HDR Group and Group Statistics, see the **session-realm**, and **registration-realm**.



Note:

The following example shows the statistics for the realm name of public.

```
ORACLE> show sipd realms public
15:23:54-47
Realm access() [In Service]

```

	-- Period --			----- Lifetime -----		
	Active	High	Total	Total	PerMax	High
Inbound Sessions	0	0	0	0	0	0
Rate Exceeded	-	-	0	0	0	0
Num Exceeded	-	-	0	0	0	0
Burst Rate	0	0	0	0	0	0
Reg Rate Exceeded	0	0	0	0	0	0
Reg Burst Rate	0	0	0	0	0	0
Outbound Sessions	0	0	0	0	0	0
Rate Exceeded	-	-	0	0	0	0
Num Exceeded	-	-	0	0	0	0
Burst Rate	0	0	0	0	0	0
Reg Rate Exceeded	0	0	0	0	0	0
Local Contacts	2	2	0	0	2	2
HNT Entries	0	0	0	0	0	0
Non-HNT Entries	2	2	0	0	2	2
Subscriptions	0	42	23	112	48	48
Out of Service	0	0	0	0	0	0
Trans Timeout	0	0	0	0	0	0
Requests Sent	-	-	46	222	96	-
Requests Complete	-	-	0	0	0	-
Seizure	-	-	0	0	0	-
Answer	-	-	0	0	0	-
ASR Exceeded	-	-	0	0	0	-
Requests Received	-	-	46	226	96	-
QoS Major Exceeded	-	-	0	0	0	-
QoS Critical Exceeded	-	-	0	0	0	-

Parameter	Description
Inbound Sessions	Total number of active inbound sessions during an Active and Lifetime period.
Rate Exceeded	Number of times session rate was exceeded for inbound SIP sessions on this realm.
Num Exceeded	Number of times time constraints were exceeded for inbound sessions.
Burst Rate	Number of times burst rate was exceeded for this realm on inbound SIP sessions.

Parameter	Description
Reg Rate Exceeded	Number of times the registration rate was exceeded for this realm on inbound SIP sessions.
Reg Burst Rate	Number of times the registration burst rate was exceeded for this realm on inbound SIP sessions.
Outbound Sessions	Total number of active outbound sessions during an Active and Lifetime period.
Rate Exceeded	Number of times session rate was exceeded for outbound SIP sessions on this realm.
Num Exceeded	Number of times time constraints were exceeded for outbound sessions.
Burst Rate	Number of times burst rate was exceeded for this realm on outbound SIP sessions.
Reg Rate Exceeded	Number of times the registration rate was exceeded for this realm on outbound SIP sessions.
Local Contacts	Number of contact entries in the registration cache.
HNT Entries	Number of hosted NAT traversal (HNT) contact entries that are behind a NAT device.
Non-HNT Entries	Number of contact entries that are not hosted NAT traversal that are behind a NAT device.
Subscriptions	Specifies the following: Active Subscriptions: The current global count of active SIP subscriptions during Survivability. Subscriptions PreMax: The maximum global count of SIP subscriptions initiated during any 100 second period since the last OCSBC re-boot, and during Survivability. Subscriptions High: The maximum global count of active SIP subscriptions since the last OCSBC re-boot, and during Survivability.
Out of Service	Number of times this realm went out of service.
Trans Timeout	Number of transactions timed out for this realm.
Requests Sent	Number of requests sent via this realm.
Requests Complete	Number of requests that have been completed for this realm.
Seizure	Number of seizures that occurred on this realm.
Answer	Number of answered SIP sessions on this session agent.
ASR Exceeded	Number of times that Access Service Requests (ASRs) were exceeded on this realm.
Requests Received	Number of requests received on this realm.
QoS Major Exceeded	Number of times the major Rfactor threshold was exceeded during the sliding window period. The peg count provides counts of calls with different service classes that occur during intervals of frequency which reliability indicate the traffic load. R-factors are metrics in VoIP that use a formula to determine a numeric expression of voice quality.
QoS Critical Exceeded	Number of times the critical Rfactor threshold was exceeded during the sliding window period. Provides counts of calls with different service classes that occur during intervals of frequency which reliability indicate the traffic load. R-factors are metrics in VoIP that use a formula to determine a numeric expression of voice quality.
Latency	
Avg	Average amount of time between the moment the realm transmits a SIP packet and the moment it reaches its destination.

Parameter	Description
Max	Maximum amount of time between the moment the realm transmits a SIP packet and the moment it reaches its destination.
QoS R-Factor	
Avg	Average Quality of Service (QoS) factor observed during the current window period. Quality of service shapes traffic to provide different priority and level of performance to different data flows. R-factors are metrics in VoIP, that use a formula to take into account both user perceptions and the cumulative effect of equipment impairments to arrive at a numeric expression of voice quality. This statistic defines the call or transmission quality expressed as an R factor.
Max	Maximum Quality of Service (QoS) factor observed during the sliding window period. Quality of service shapes traffic to provide different priority and level of performance to different data flows. R-factors are metrics in VoIP that use a formula to determine a numeric expression of voice quality. This statistic defines the call or transmission quality expressed as an R factor.
Early Sessions	Indicates the number of early sessions for each realm. Each time the OCSBC receives an INVITE on the ingress realm or the egress realm sends an INVITE request, a counter increments if the session is established with a 200 OK response. This counter also increments in sessions when there are no 18x responses (Ringing (180), Call is Being Forwarded (181), Queued (182), Session in Progress (183)), but a 200 OK is established. This counter represents the number of sessions that have reached the early dialog state or later.
Successful Sessions	Indicates the number of successful sessions for each realm. Successful sessions are when the OCSBC receives a successful 200 OK response from an initial INVITE request. Note: This counter is NOT incremented for re-INVITES.
Initial Registrations	
Total	Total number of initial registrations. This counter is incremented once for each initial REGISTER message even when the REGISTER is challenged. This counter is based on ingress (received) messages only. Note: This counter is not incremented when registrations are challenged by the following response messages: 401 (Unauthorized - user authentication required) 407 (Proxy authentication required) 423 (Interval too brief - expiration time of the resource is too short)
Successful	Number of successful initial registrations. This counter is incremented once for each successful initial registration with a 200 OK response. This counter is based on ingress (received) messages only.
Unsuccessful	Number of unsuccessful initial registrations. This counter is incremented once for each unsuccessful initial registration when the response to the initial REGISTER has a non-success status code. This counter is based on ingress (received) messages only. Note: This counter is not incremented when registrations are challenged by the following response messages: 401 (Unauthorized - user authentication required) 407 (Proxy authentication required) 423 (Interval too brief - expiration time of the resource is too short)

Parameter	Description
Refresh Registrations	
Total	Total number of registrations that were refreshed. This counter is incremented once for every refresh registration. This counter is based on ingress (received) messages only.
Successful	Total number of registrations that were successfully refreshed. This counter is incremented once for each successful refresh registration. This counter is based on ingress (received) messages only.
Unsuccessful	Total number of registrations that were unsuccessfully refreshed. This counter is incremented once for each unsuccessful refresh registration. This counter is based on ingress (received) messages only.
De-Registrations	
Total	Total number of registrations that de-registered. This counter is incremented once for every de-registration. This counter is based on ingress (received) messages only. In the event a de-registration message is received on a realm that is different than that of the initial registration message, the de-registration counter for the ingress realm of that de-registration message is incremented.
Successful	Total number of registrations that successfully de-registered. This counter is incremented once for each successful de-registration. This counter is based on ingress (received) messages only. In the event a successful de-registration message is received on a realm that is different than that of the initial registration message, the de-registration counter for the ingress realm of that successful de-registration message is incremented.
Unsuccessful	Total number of registrations that unsuccessfully de-registered. This counter is incremented once for each unsuccessful de-registration. This counter is based on ingress (received) messages only. In the event an unsuccessful de-registration message is received on a realm that is different than that of the initial registration message, the de-registration counter for the ingress realm of that unsuccessful de-registration message is incremented.

show enum

Telephone Number Mapping (ENUM) is an IETF standard (RFC 2916) for mapping the public telephone number address space into the Domain Name System (DNS). It links a phone number to an Internet address that is published in the DNS system. This allows a number to be reachable anywhere via the best and cheapest route.

The **show enum** command displays information about the ENUM Agent. These statistics provide current information only. For associated HDR Group and Group Statistics, see **enum-stats**.

```
ORACLE> show enum
09:05:20-106

      ---Queries--- --Successful-- --NotFound--- --Timed Out--
ENUM Agent  Current Total Current  Total Current Total Current Total
```

Parameter	Description
Enum Agent	Name of the ENUM Agent on the OCSBC.
Queries Total	Number of ENUM queries
Successful Total	Number of successful ENUM queries
Not Found Total	Number of ENUM queries returning a not found
Times Out Total	Number of ENUM query timeouts

show mgcp

Not Supported.

show mgcp errors

Not Supported.

show mgcp acs

Not Supported.

show h323

H.323 is a recommendation from the ITU Telecommunication Standardization Sector (ITU-T) that defines the protocols to provide audio-visual communication sessions on any packet network. H.323 addresses call signaling and control, multimedia transport and control, and bandwidth control for point-to-point and multi-point calls. The OCSBC responds to and forwards H.323 signaling messages and sets up H.323 sessions based on the system configuration.

The **show h323** command displays information about H323 operations. These statistics include H323 information over Period and Lifetime monitoring spans, as well as information on active H323 status. For associated HDR Group and Group Statistics, see **h323-stats**.



Note:

H323D Status displays recent Lifetime monitoring information ONLY.

```
ORACLE> show h323
```

```
10:36:07-94
Session Stats      -- Period --      ----- Lifetime -----
                   Active  High   Total   Total PerMax High
Incoming Calls     0      0      0       0      0      0
Outgoing calls     0      0      0       0      0      0
Connected Calls    0      0      0       0      0      0
Incoming Channels  0      0      0       0      0      0
Outgoing Channels  0      0      0       0      0      0
Contexts           0      0      0       0      0      0
```

```
H3230 status      Current  Lifetime
Queued Messages   0        0
TPKT Channels     0        0
UDP Channels      0        0
```

Load Rate = 0.2

Parameter	Description
Session Stats	
Incoming Calls	Number of incoming H.323 calls
Outgoing Calls	Number of outgoing H.323 calls
Connected Calls	Number of connected calls
Incoming Channels	Number of established incoming calls
Outgoing Channels	Number of established outgoing channels
Contexts	Number of established H.323 contexts (or call terminations)
H323D Status	
Queued Messages	Number of messages queued
TPKT Channels	Number of ThroughPacket (TPKT) channels open(ed)
UDP Channels	Number of User Datagram Protocol (UDP) channels open(ed)
Load Rate	Total H323 current load rate, in seconds, on the OCSBC

show sipd rate

The **show sipd rate** command displays request and response rates for messages (per method) on a system-wide basis. The rates are calculated based on the time in the current monitoring window (100+current period elapsed). The Message Received and the Messages sent columns are the sum of the corresponding Requests or responses. For example:

```
ORACLE# show sipd rate
17:24:28-103
Method Name  Msg Recv  Msg Sent  Req Recv  Req Sent  Resp Recv  Resp Sent
              Rate      Rate      Rate      Rate      Rate      Rate
INVITE       0.0       0.0       0.0       0.0       0.0       0.0
ACK          0.0       0.0       0.0       0.0       0.0       0.0
BYE          0.0       0.0       0.0       0.0       0.0       0.0
REGISTER     0.0       0.0       0.0       0.0       0.0       0.0
CANCEL       0.0       0.0       0.0       0.0       0.0       0.0
PRACK        0.0       0.0       0.0       0.0       0.0       0.0
OPTIONS      0.0       0.0       0.0       0.0       0.0       0.0
INFO         0.0       0.0       0.0       0.0       0.0       0.0
SUBSCRIBE    0.0       0.0       0.0       0.0       0.0       0.0
NOTIFY       0.0       0.0       0.0       0.0       0.0       0.0
REFER        0.0       0.0       0.0       0.0       0.0       0.0
UPDATE       0.0       0.0       0.0       0.0       0.0       0.0
MESSAGE      0.0       0.0       0.0       0.0       0.0       0.0
PUBLISH      0.0       0.0       0.0       0.0       0.0       0.0
OTHER        0.0       0.0       0.0       0.0       0.0       0.0
ALL          0.0       0.0       0.0       0.0       0.0       0.0
clank#
```

show sipd rate agent

The **show sipd rate agent** command displays request and response rates for messages (per method) for all session agents. By adding a session agent name in the form `show sipd rate agent <session-agent-name>`, you can view statistics for the identified agent only. The rates are calculated based on the time in the current monitoring window (30+current period elapsed). The Message Received and the Messages sent columns are the sum of the corresponding Requests or responses. For example:

```
ORACLE# show sipd rate agent 192.168.202.100
17:26:47-42
Session Agent 192.168.202.100
Method Name  Msg Recv  Msg Sent  Req Recv  Req Sent  Resp Recv  Resp Sent
              Rate      Rate      Rate      Rate      Rate      Rate      Rate
INVITE        0.0        0.0        0.0        0.0        0.0        0.0        0.0
ACK           0.0        0.0        0.0        0.0        0.0        0.0        0.0
BYE           0.0        0.0        0.0        0.0        0.0        0.0        0.0
REGISTER     0.0        0.0        0.0        0.0        0.0        0.0        0.0
CANCEL       0.0        0.0        0.0        0.0        0.0        0.0        0.0
PRACK        0.0        0.0        0.0        0.0        0.0        0.0        0.0
OPTIONS      0.0        0.0        0.0        0.0        0.0        0.0        0.0
INFO         0.0        0.0        0.0        0.0        0.0        0.0        0.0
SUBSCRIBE    0.0        0.0        0.0        0.0        0.0        0.0        0.0
NOTIFY       0.0        0.0        0.0        0.0        0.0        0.0        0.0
REFER        0.0        0.0        0.0        0.0        0.0        0.0        0.0
UPDATE       0.0        0.0        0.0        0.0        0.0        0.0        0.0
MESSAGE      0.0        0.0        0.0        0.0        0.0        0.0        0.0
PUBLISH      0.0        0.0        0.0        0.0        0.0        0.0        0.0
OTHER        0.0        0.0        0.0        0.0        0.0        0.0        0.0
```

show sipd rate interface

The **show sipd rate interface** command displays request and response rates for messages (per method) for all configured sip-interfaces. The rates are calculated based on the time in the current monitoring window (30+current period elapsed). The Message Received and the Messages sent columns are the sum of the corresponding Requests or responses. For example:

```
ORACLE# show sipd rate interface
17:24:33-58
Sip Interface core
Method Name  Msg Recv  Msg Sent  Req Recv  Req Sent  Resp Recv  Resp Sent
              Rate      Rate      Rate      Rate      Rate      Rate      Rate
INVITE        0.0        0.0        0.0        0.0        0.0        0.0        0.0
ACK           0.0        0.0        0.0        0.0        0.0        0.0        0.0
BYE           0.0        0.0        0.0        0.0        0.0        0.0        0.0
REGISTER     0.0        0.0        0.0        0.0        0.0        0.0        0.0
CANCEL       0.0        0.0        0.0        0.0        0.0        0.0        0.0
PRACK        0.0        0.0        0.0        0.0        0.0        0.0        0.0
OPTIONS      0.0        0.0        0.0        0.0        0.0        0.0        0.0
INFO         0.0        0.0        0.0        0.0        0.0        0.0        0.0
```

```

SUBSCRIBE      0.0      0.0      0.0      0.0      0.0      0.0
NOTIFY         0.0      0.0      0.0      0.0      0.0      0.0
REFER          0.0      0.0      0.0      0.0      0.0      0.0
UPDATE        0.0      0.0      0.0      0.0      0.0      0.0
MESSAGE       0.0      0.0      0.0      0.0      0.0      0.0
PUBLISH       0.0      0.0      0.0      0.0      0.0      0.0
OTHER         0.0      0.0      0.0      0.0      0.0      0.0
  
```

17:24:33-58

Sip Interface peer

Method Name	Msg Rcv	Msg Sent	Req Rcv	Req Sent	Resp Rcv	Resp Sent
	Rate	Rate	Rate	Rate	Rate	Rate
INVITE	0.0	0.0	0.0	0.0	0.0	0.0
ACK	0.0	0.0	0.0	0.0	0.0	0.0
BYE	0.0	0.0	0.0	0.0	0.0	0.0
REGISTER	0.0	0.0	0.0	0.0	0.0	0.0
CANCEL	0.0	0.0	0.0	0.0	0.0	0.0
PRACK	0.0	0.0	0.0	0.0	0.0	0.0
OPTIONS	0.0	0.0	0.0	0.0	0.0	0.0
INFO	0.0	0.0	0.0	0.0	0.0	0.0
SUBSCRIBE	0.0	0.0	0.0	0.0	0.0	0.0
NOTIFY	0.0	0.0	0.0	0.0	0.0	0.0
REFER	0.0	0.0	0.0	0.0	0.0	0.0
UPDATE	0.0	0.0	0.0	0.0	0.0	0.0
MESSAGE	0.0	0.0	0.0	0.0	0.0	0.0
PUBLISH	0.0	0.0	0.0	0.0	0.0	0.0
OTHER	0.0	0.0	0.0	0.0	0.0	0.0

By entering a configured interface, the ACLI displays aggregate statistics for that interface and then displays all Session Agents' counts configured on that SIP interface. Displays have been truncated below. For example:

```
ORACLE# show sipd rate interface peer
```

17:24:40-34

Sip Interface peer

Method Name	Msg Rcv	Msg Sent	Req Rcv	Req Sent	Resp Rcv	Resp Sent
	Rate	Rate	Rate	Rate	Rate	Rate
INVITE	0.0	0.0	0.0	0.0	0.0	0.0
[...]						
OTHER	0.0	0.0	0.0	0.0	0.0	0.0

Session Agent 172.16.202.102

Method Name	Msg Rcv	Msg Sent	Req Rcv	Req Sent	Resp Rcv	Resp Sent
	Rate	Rate	Rate	Rate	Rate	Rate
INVITE	0.0	0.0	0.0	0.0	0.0	0.0
ACK	0.0	0.0	0.0	0.0	0.0	0.0
BYE	0.0	0.0	0.0	0.0	0.0	0.0
REGISTER	0.0	0.0	0.0	0.0	0.0	0.0
CANCEL	0.0	0.0	0.0	0.0	0.0	0.0
PRACK	0.0	0.0	0.0	0.0	0.0	0.0
OPTIONS	0.0	0.0	0.0	0.0	0.0	0.0
INFO	0.0	0.0	0.0	0.0	0.0	0.0
SUBSCRIBE	0.0	0.0	0.0	0.0	0.0	0.0

```

NOTIFY          0.0      0.0      0.0      0.0      0.0      0.0
REFER          0.0      0.0      0.0      0.0      0.0      0.0
UPDATE         0.0      0.0      0.0      0.0      0.0      0.0
MESSAGE        0.0      0.0      0.0      0.0      0.0      0.0
PUBLISH        0.0      0.0      0.0      0.0      0.0      0.0
OTHER          0.0      0.0      0.0      0.0      0.0      0.0
17:26:21-46
Session Agent 192.168.202.100
Method Name    Msg Recv  Msg Sent  Req Recv  Req Sent  Resp Recv  Resp Sent
              Rate      Rate      Rate      Rate      Rate      Rate
INVITE         0.0      0.0      0.0      0.0      0.0      0.0
[...]
OTHER         0.0      0.0      0.0      0.0      0.0      0.0
ORACLE#

```

show dnsalg rate

The **show dnsalg rate** command displays request and response rates for DNS messages on a system-wide basis. The rates are calculated based on the time in the current monitoring window (100+current period elapsed). The Message Received and the Messages sent columns are the sum of the corresponding Requests or responses. For example:

```

ORACLE# show dnsalg rate
17:31:21-15
Realm-id  Msg Recv  Msg Sent  Req Recv  Req Sent  Resp Recv  Resp Sent
          Rate      Rate      Rate      Rate      Rate      Rate
ALL      0.0      0.0      0.0      0.0      0.0      0.0

```

show dnsalg rate realm-id

The **show dnsalg rate realm-id** command displays request and response rates for DNS messages on a per-realm basis. If you add a realm-name to the query, that specific realm's data will be returned. Entered without a realm name, all configured realms will be displayed. The rates are calculated based on the time in the current monitoring window (30+current period elapsed). The Message Received and the Messages sent columns are the sum of the corresponding Requests or responses. For example:

```

ORACLE# show dnsalg rate realm-id peer
17:31:31-26
Realm-id  Msg Recv  Msg Sent  Req Recv  Req Sent  Resp Recv  Resp Sent
          Rate      Rate      Rate      Rate      Rate      Rate
peer     0.0      0.0      0.0      0.0      0.0      0.0

```

show dnsalg rate server-ip-addr

The **show dnsalg rate server-ip-addr** command displays request and response rates for DNS messages on a per-DNS server basis. If you add a DNS Server IP address to the query, that specific server's data will be returned. Entered without a server IP address, all configured servers will be displayed. The rates are calculated based on the time in the current monitoring window (30+current period elapsed). The Message

Received and the Messages sent columns are the sum of the corresponding Requests or responses. For example:

```
ORACLE# show dnsalg rate server-ip-addr 172.16.10.5
17:32:19-44
DNS ALG Realm peer
Ip Address          Msg Recv  Msg Sent  Req Recv  Req Sent  Resp Recv  Resp Sent
Resp Sent
Rate               Rate
172.16.10.5        0.0      0.0      0.0      0.0
0.0                0.0
```

show enum rate

The **show enum rate** command displays request and response rates for ENUM messages on a system-wide basis. The rates are calculated based on the time in the current monitoring window (100+current period elapsed). The Message Received and the Messages sent columns are the sum of the corresponding Requests or responses. For example:

```
ORACLE# # show enum rate
17:22:28-23
Config Name  Msg Recv  Msg Sent  Req Recv  Req Sent  Resp Recv  Resp Sent
Rate        Rate      Rate      Rate      Rate      Rate      Rate
ALL          0.0      0.0      0.0      0.0      0.0      0.0
```

show enum rate config-name

The **show enum rate config-name** command displays request and response rates for ENUM messages per ENUM configuration. If you add a an enum-config-name to the query, that specific configuration's data will be returned. Entered without a name, all configured enum-configs will be displayed. The rates are calculated based on the time in the current monitoring window (30+current period elapsed). The Message Received and the Messages sent columns are the sum of the corresponding Requests or responses. For example:

```
ORACLE# show enum rate config-name test1
17:22:53-48
Config Name  Msg Recv  Msg Sent  Req Recv  Req Sent  Resp Recv  Resp Sent
Rate        Rate      Rate      Rate      Rate      Rate      Rate
test1       0.0      0.0      0.0      0.0      0.0      0.0
```

show enum rate server-ip-addr

The **enum rate server-ip-addr** command displays request and response rates for individual enum-servers. If you add an IP address to the query, that specific server's data will be returned. Entered without a server IP address, all configured servers will be displayed. If an IP address is present in more than one ENUM configuration then the message processing level is displayed separately for each configuration object. The rates are calculated based on the time in the current monitoring window

(30+current period elapsed). The Message Received and the Messages sent columns are the sum of the corresponding Requests or responses. For example:

```
ORACLE# show enum rate server-ip-addr 192.168.201.5
17:24:00-55
ENUM Config Name enum
Ip Address      Msg Recv  Msg Sent  Req Recv  Req Sent  Resp Recv  Resp
Sent
                Rate      Rate      Rate      Rate      Rate
Rate
192.168.201.5   0.0      0.0      0.0      0.0      0.0
0.0
17:24:00-55
ENUM Config Name test1
Ip Address      Msg Recv  Msg Sent  Req Recv  Req Sent  Resp Recv  Resp
Sent
                Rate      Rate      Rate      Rate      Rate
Rate
192.168.201.5   0.0      0.0      0.0      0.0      0.0
0.0
```

A

CSV File Data Formats

When enabled, the HDR collector transmits data to a Comma-Separated-Value (CSV) file. The format of the HDR data in the CSV file is dependant on the type of Group Statistics in the file and the method used to open the file. This appendix describes the data formats of the HDR data in the CSV file.

Methods for Display and Format of CSV File Contents

The HDR collector transmits data to a CSV file in standard format. Each file is formatted as <Unix timestamp>.csv (for example, 1302041977.csv). Within the file, each record also has an associated record timestamp. The **filename timestamp** is the time that the CSV file was create. The **record timestamp** is the window of time that the HDR collector used to collect the data. For more information on windows of time, see **Windows of Time**.

When the HDR collector has created a CSV file, you can open the file in any of the following ways:

- using the UNIX command **cat <timestamp>.csv** at the UNIX root prompt (displays raw data)
- using the Microsoft command **type <timestamp>.csv** at a Microsoft® Windows DOS command prompt (displays raw data)
- using a rendering agent application (such as a Microsoft® application)

The following examples show each of these methods.

Example 1 - Using the UNIX Command

The following shows the use of the **cat <timestamp>.csv** UNIX command to display the contents of a system group CSV file in raw data format.

```
[AcmePacket]$ cat 1302041977.csv
TimeStamp,CPU Utilization,Memory Utilization,Health
Score,Redundancy State,Signaling Sessions,
Signaling Rate (CPS),CAM Utilization (NAT),
CAM Utilization (ARP),I2C Bus State,License Capacity,
Current Cached SIP Local Contact Registrations,
Current MGCP Public Endpoint Gateway Registrations,
Current H323 Number of Registrations,
Application Load Rate

1302041977,39,22,50,active,0,0,0,0,online,0,0,0,0,39
1302042037,100,22,50,active,0,0,0,0,online,0,0,0,0,100
```

Example 2 - Using the DOS Command

The following shows the use of the **type <timestamp>.csv** Microsoft® Windows DOS command to display the contents of a sip-sessions group CSV file in raw data format.

```
C:\AcmePacket> type 1301702284.csv
Timestamp,Sessions,Sessions Initial,
Sessions Early,Sessions Established,Sessions
Terminated,Dialogs,Dialogs Early,
Dialogs Confirmed,Dialogs Terminated

1301702288,45,45,28,35,10,35,35,35,0
1301702456,35,35,21,35,0,0,0,0,0
```

Example 3 - Using a Rendering Agent

The following shows the use of a rendering agent (a Microsoft application) to display the contents of a sip-sessions group CSV file in table format.

Timestamp	Sessions	Sessions Initial	Sessions Early	...
130170228	45	45	28	...
1301702456	35	35	35	...

The formats in the examples above pertain to all of the HDR groups specified in **HDR Groups and Group Statistics**, except the **sip-invite** Group. For information on the sip-invite HDR data format in the CSV file, see the next section.

Sip-invite Format of HDR Data in CSV File

The HDR data for the sip-invite group displays on multiple lines in the CSV file. The first HDR record displays the list of statistics in column format. The second HDR record also displays statistics in column format, and so on. Both client and server totals are included in the data.

The following shows an example of the sip-invite group CSV file for a client and a server displayed in a Microsoft DOS window format.

```
C:\AcmePacket> type 130204198.csv
Timestamp,Message/Event,Server Totals,Client Totals
1301702288,INVITE Requests ,0,0
1301702288,Retransmission,0,0
1301702288,100 Trying,0,0
1301702288,180 Ringing,0,0
1301702288,181 Forwarded,0,0
1301702288,183 Progress,0,0
1301702288,1xx Provisional,0,0
1301702288,200 OK,0,0
1301702288,202 Accepted,0,0
1301702288,2xx Success,0,0
1301702288,30x Moved,0,0
.,.,.,.
```

```

. . . .
. . . .
1301702288,Transaction Timeouts,,0
1301702288,Locally Throttled,,0
1301702348,INVITE Requests ,0,0
1301702348,Retransmission,0,0
1301702348,100 Trying,0,0
1301702348,180 Ringing,0,0
1301702348,181 Forwarded,0,0
1301702348,183 Progress,0,0
1301702348,1xx Provisional,0,0
1301702348,200 OK,0,0
1301702348,202 Accepted,0,0
1301702348,2xx Success,0,0
1301702348,30x Moved,0,0
. . . .
. . . .
. . . .
1301702348,Response Retrans,0,0
1301702348,Transaction Timeouts,,0
1301702348,Locally Throttled,,0

```

The following shows an example of the sip-invite group CSV file for a client and a server displayed in a Microsoft rendering application format.

Timestamp	Message/Event	Server Totals	Client Totals
1301702288	INVITE Requests	0	0
1301702288	Retransmission	0	0
1301702288	100 Trying	0	0
1301702288	180 Ringing	0	0
1301702288	181 Forwarded	0	0
1301702288	183 Progress	0	0
1301702288	1xx Provisional	0	0
1301702288	200 OK	0	0
1301702288	202 Accepted	0	0
1301702288	2xx Success	0	0
1301702288	30x Moved	0	0

Data Caveats

For those who wish to extract data from HDR CSVs, please note the following:

- Although SNMP presents enumerated fields as integers, HDR translates this data presenting the applicable string in the CSV.
- In some cases, no data is available for a given record. An example of this is a record for an agent that is out of service during the collection window. For these cases, HDR presents only the timestamp and a single field indicating that no data is available, as shown below.

```

enum-stats:
TimeStamp,ENUM Agent,Queries Total,Successful Total,Not Found

```

Total,Timeout Total
1314110727,no data available