

Oracle® Communications

EAGLE Commands User's Guide



Release 47.0

F41393-04

July 2023



F41393-04

Copyright © 1993, 2023, Oracle and/or its affiliates.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software, software documentation, data (as defined in the Federal Acquisition Regulation), or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs (including any operating system, integrated software, any programs embedded, installed, or activated on delivered hardware, and modifications of such programs) and Oracle computer documentation or other Oracle data delivered to or accessed by U.S. Government end users are "commercial computer software," "commercial computer software documentation," or "limited rights data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, reproduction, duplication, release, display, disclosure, modification, preparation of derivative works, and/or adaptation of i) Oracle programs (including any operating system, integrated software, any programs embedded, installed, or activated on delivered hardware, and modifications of such programs), ii) Oracle computer documentation and/or iii) other Oracle data, is subject to the rights and limitations specified in the license contained in the applicable contract. The terms governing the U.S. Government's use of Oracle cloud services are defined by the applicable contract for such services. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle®, Java, and MySQL are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Inside are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Epyc, and the AMD logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.

Contents

1	Introduction	
1.1	Overview	1-1
1.2	Scope and Audience	1-1
1.3	References	1-1
2	Using Commands	
2.1	Maintenance and Administration Subsystem	2-1
2.2	E5-based Control Cards	2-1
2.3	Input/Output Devices	2-2
2.4	About Commands	2-8
2.4.1	Log into the System for a User Session	2-19
2.4.2	Your User ID and Password were not Accepted	2-21
2.4.3	You Must Change Your Password	2-21
2.4.4	Your Password has Expired	2-22
2.4.5	Your User ID is Already Being Used	2-23
2.4.6	Log Out Of the System	2-23
3	Alphabetical List of Commands	
3.1	Commands	3-1
3.2	Debug Commands	3-20
3.3	Pass-Through Commands	3-21
4	Commands	
5	Debug Commands	
6	Pass-Through Commands	

A Reference Information

A.1	Summary of Range Values for :link Parameter	A-1
A.2	Commands Listed by Class	A-2
A.2.1	Basic Commands	A-2
A.2.2	Database Administration Commands	A-2
A.2.3	System Maintenance Commands	A-13
A.2.4	Link Maintenance Commands	A-15
A.2.5	Program Update Commands	A-16
A.2.6	Security Administration Commands	A-16
A.2.7	Debug Commands	A-17
A.2.8	Pass-Through Commands	A-18
A.3	Possible Values for PST/SST/AST	A-18
A.3.1	PST	A-18
A.3.2	SST	A-19
A.3.3	AST	A-21
A.4	Point Code Formats and Conversion	A-22
A.4.1	ANSI Point Codes	A-22
A.4.2	ITU International Point Codes	A-24
A.4.3	ITU National Point Codes	A-24
A.4.4	Converting ITU National Point Code Formats	A-25
A.4.4.1	Converting Single Number ITU National Point Codes	A-26
A.4.4.2	Converting Multiple-Part ITU National Point Codes	A-26
A.4.4.3	24-bit ITU-National Point Codes	A-27
A.4.4.4	Spare and Private Point Code Subtype Prefixes	A-27
A.5	Valid CIC Ranges for SI and MSU Types in Routing Key Static Entries	A-30
A.6	DRANAIV/DRANAI Mapping	A-30
A.7	DRANPV/DRANP Mapping	A-30
A.8	NAIV/NAI Mapping	A-31
A.9	NPV/NP Mapping	A-31
A.10	Cards that use the ent-card Command	A-31
A.11	Summary of Loopback Testing Commands and Functions	A-33

My Oracle Support (MOS)

[My Oracle Support \(MOS\)](#) is your initial point of contact for any of the following requirements:

- **Product Support:**

The generic product related information and resolution of product related queries.

- **Critical Situations**

A critical situation is defined as a problem with the installed equipment that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical situations affect service and/or system operation resulting in one or several of these situations:

- A total system failure that results in loss of all transaction processing capability
- Significant reduction in system capacity or traffic handling capability
- Loss of the system's ability to perform automatic system reconfiguration
- Inability to restart a processor or the system
- Corruption of system databases that requires service affecting corrective actions
- Loss of access for maintenance or recovery operations
- Loss of the system ability to provide any required critical or major trouble notification

Any other problem severely affecting service, capacity/traffic, billing, and maintenance capabilities may be defined as critical by prior discussion and agreement with Oracle.

- **Training Need**

Oracle University offers training for service providers and enterprises.

My Oracle Support (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support can assist you with My Oracle Support registration.

Call the Customer Access Support main number at 1-800-223-1711 (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. When calling, make the selections in the sequence shown below on the Support telephone menu:

- For Technical issues such as creating a new Service Request (SR), select **1**.
- For Non-technical issues such as registration or assistance with My Oracle Support, select **2**.
- For Hardware, Networking and Solaris Operating System Support, select **3**.

You are connected to a live agent who can assist you with My Oracle Support registration and opening a support ticket.

My Oracle Support is available 24 hours a day, 7 days a week, 365 days a year.

Acronyms

The following table provides information about the acronyms and the terminology used in the document.

Table Acronyms

Acronym	Definition
A-Port	ANSI-41 Mobile Number Portability
AINPQ	ANSI-41 INP Query
AAL	ATM Adaptation Layer
AAL5	ATM Adaptation Layer 5
AAL5CP	ATM Adaptation Layer 5 Common Port
AATM	ATM Applique
ACG	Automatic Call Gapping
ADJ DPC	Adjacent Destination Point Code
AI	Address Indicator
AIN	Advanced Intelligent Network
AINF	Application Interface Applique
ANSI	American National Standards Institute
AP	Application Processor
APC	Adjacent Point Code
ARP	Address Resolution Protocol
AS	Application Server; a logical entity serving a specific Routing Key
ASP	Application Server Process
ATI	Any Time Interrogation
ATM	Asynchronous Transfer Mode
ATMANSI	The application software for the ATM (high-speed) SS7 signaling links
ATM HSL	Asynchronous Transfer Mode High Speed Link
ATMM	ATM Layer Management
AVL	Availability Measurements report
AVLD	Daily Availability measurements report
AVLDTH	Day-to-Hour Availability measurements report
BCSM	Basic Call State Model
BIP	Board Identification PROM
BITS	Building Integrated Timing System
BLM	Bulk Load Module
BSD	Berkeley Software Distribution
BSN	Backward Sequence Number
CAS	Channel Associated Signaling
CCM	Command Class Management
CCS	Common Channel Signaling
CCS7	Common Channel Signaling System #7

Table (Cont.) Acronyms

Acronym	Definition
CCS7ITU	The application software for the ITU SS7 signaling links
CDPA	Called Party Address
CDPN	Called Party Number
CGPA	Calling Party Address
CF	Control Frame
CIC	Circuit Identification Code
CLLI	Common Language Location Identifier
CLU	Network Cluster
CM	Cluster Management
CNCF	Calling Name Conversion Facility
CP	Communication Processor
CPU	Central Processing Unit
CRC	Cyclic Redundancy Check
CRMD	Cluster Routing and Management Diversity
CRP	Circular Route Prevention
CSL	Common Screening List
CSPC	Concerned Signaling Point Code Group
CSU	Channel Service Unit
DB	Database
DCM	Database Communications Module
DIP	Dual In-Line Package
DIX	Digital/Intel/Xerox de facto standard for Ethernet Media Access Control Type
DN	Dialed or Directory Number
DPC	Destination Point Code
DRAM	Dynamic Random Access Memory
DSM	Database Services Module
DSU	Data Service Unit
DTA	Database Transport Access
E5IS	EAGLE 5 Integrated Monitoring Support
EBDA	Enhanced Bulk Download and Audit
EDR	Efficient Data Representation
EF	Extension Frame
EGTT	Enhanced Global Title Translation
EIA	Electronic Industries Association
EIR	Equipment Identity Register
ELAP	EAGLE LNP Application Processor
EMP	EAGLE Monitoring Protocol
EMSALM	Element Management System Alarm Monitor
ENET	Ethernet
EOAM	Enhanced Operations, Administration, and Maintenance
EOAP	Enhanced OSS Application Process

Table (Cont.) Acronyms

Acronym	Definition
EPAP	EAGLE Provisioning Application Processor
EPM	Embedded Processor Module
EPROM	Erasable PROM
ESP	Extended Services Platform
FAK	Feature Access Key
FAP	Fuse and Alarm Panel
FAS	Frame Alignment Signal
FISU	Fill In Signal Unit
FPBA	Frame Power Budget Alarm
FPCR	Full Point Code Routing
FPT	Frame Power Threshold
FSN	Forward Sequence Number
FTA	File Transfer Area
FTP	File Transfer Protocol
FTRA	FTP-based Table Retrieve Application
GDB	GSM Real-Time Database
G-Flex	GSM Flexible Numbering
G-Port	GSM Mobile Number Portability
GLS	Generic Loading Service
GMSC	Gateway MSC
GPL	Generic Program Load
GPSP	General Purpose Service Module
GSL	Generic Software Load
GSM	Global System for Mobile Communications
GTA	Global Title Address
GTI	Global Title Indicator
GTT	Global Title Translation
GTWY	Gateway Administration measurements report
GWS	Gateway Screening
GWSA	Gateway Screening Application
GWSM	Gateway Screening Messages
HDB3	High Density Bipolar 3 encoding
HIPR	High Speed IMT Packet Router
HLR	Home Location Register
HOMERN	Home Network Routing Number Prefix
HMUX	High-Speed Multiplexer
HRN	Home Routing Number
HSL	High-Speed Links
IAM	Initial Address Message
IC	Integrated Circuit
ICMP	Internet Control Message Protocol
ID	Identity

Table (Cont.) Acronyms

Acronym	Definition
IDP	Initial Detection Point
IEC	International Escape Code
IETF	Internet Engineering Task Force
IGM	IS41 GSM Migration
IGTTLS	Intermediate Global Title Translation Load Sharing
IL	Incremental loading
ILA	Integrated LIM Applique
IMEI	International Mobile Equipment Identifier
IMF	Integrated Message Feeder
IMSI	International Mobile Station Identifier
IMT	Inter-processor Message Transport
IN	Intelligent Network
INAP	Intelligent Network Application Part
INET	Internet
INH	Inhibit
INP	INAP-based Number Portability
INSL	In-Network Subscriber List
IP	Internet Protocol
IPGWI	An ITU version of SS7IPGW
IPGWx	Point to multi-point IP Transport GPL, referring to SS7IPGW (ANSI) and IPGWI (ITU)
IPLIMI	The application software used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.
IPLIMx	Point to point IP Transport GPL, referring to IPLIMI (ITU)
IPMX	IMT Power and Multiplexer
IPS	Internet Protocol Services
IS-41	Interim Standard 41, same as and interchangeable with ANSI-41
IS-ANR	In Service - Abnormal
ISDN	Integrated Services Digital Network
IS-NR	In Service - Normal
ISUP	ISDN User Part
ITU	International Telecommunications Union
ITUDUPPC	ITU National Duplicate Point Code
JIP	Jurisdiction Indicator Parameter
LAN	Local Area Network
LB	Load Balancing
LBP	Loop Back Point
LC	Logical channel
LED	Light Emitting Diode
LFS	Link Fault Sectionalization
LNP	Local Number Portability
LNPMR	LNP Message Relay

Table (Cont.) Acronyms

Acronym	Definition
LNPQS	LNP Query Service
LNP SMS	LNP Short Message Service
LPE	Logical Processing Element
LPO	Link Processor Outage
LRN	Location Routing Number
LS	Link Set
LSA	Link Status Alignment
LSB	Least Significant Bit (bit 1)
LSL	Low-Speed Link
LSMS	Local Service Management System
LSN	Link Set Name
LSO	Link Status out of Service
LSPE	Link Status Proving Emergency
LSPN	Link Status Proving Normal
LSR	Link Status Ready
LSSU	Link Status Signal Unit
M2PA	SS7 MTP2-User Peer-to-Peer Adaptation Layer
M3UA	SS7 MTP3-User Adaptation Layer
MAAL	Management ATM Adaptation Layer
MAP	Mobile Application Part
MAPSCRN	GSM MAP Screening measurements report
MCAP	MAS Communication Application Processor Card
MCC	Mobile Country Code
MCM	Maintenance Communication Module
MCP	Measurement Collection Processor
MCPM	Measurement Collection and Polling Module
MDAL	Maintenance Disk and Alarm (card)
MDN	Mobile Dialed Number
MGT	Mobile Global Title
MGTT	Modified Global Title Translation
MF	Miscellaneous Frame
MFC	Message Flow Control
MIM	Multi-Channel Interface Module
MIN	Mobile Identification Number
MLPRST	MTP Low Priority Route Set
MNP	Mobile Number Portability
MNP SMS	Portability Check for Mobile Originated SMS
MNP-SRF	Signaling Relay Function for support of Mobile Number Portability
MOBR	Origin-based MTP Routing feature
MPC	Multiple Point Code feature
MPL	Multi-port LIM

Table (Cont.) Acronyms

Acronym	Definition
MPS	Multi-Purpose Server
MR	Message Relay
MRN	Mated Relay Node
MRN	Message Reference Number
MS	Mobile Station
MSB	Most Significant Bit
MSC	Mobile Switching Center
MSAR	Memory space accounting reporting
MSISDN	Mobile Station ISDN Number or Mobile Switching ISDN Number
MSRN	Mobile Station Roaming Number
MSU	Message Signal Unit
MTCD	Maintenance Daily measurements report
MTCDTH	Maintenance Day-to-Hour measurements report
MTCH	Maintenance Hourly (marginal) measurements report
MTCS	Maintenance Status (link/link set) measurements report
MTP	Message Transfer Part
MTP2	Message Transfer Part, Level 2
NAI	Nature of Address Indicator
NCAI	Nested Cluster Allowed Indicator
NCR	Nested Cluster Routing
NEC	National Escape Code
NFAS	Non-Frame Alignment Signal
NI	Network Indicator
NIC	Network Information Center
NID	Network Identification
NM	Network Management
NP	Number Plan
NPA	Numbering Plan Area
NPAC	Number Portability Administration Center
NPANXX	Numbering Plan Area and Exchange
NRT	Network Routing
NSAP	Network Service Access Point
NSE	Network Security Enhancement
NSFI	Next Screening Function Indicator
NSP	Network Services Part
NSPC	New Secondary Point Code
OAM	Operations, Administration, and Maintenance
OAP	Operation System Support Application Processor
OAMP	Operations, Administration and Maintenance Part
OBSR	Origin-based SCCP Routing feature
OCU	Office Channel Unit

Table (Cont.) Acronyms

Acronym	Definition
OOS-MA	Out of Service - Memory Administration
OOS-MT	Out of Service - Maintenance
OOS-MT-DSBLD	Out of Service - Maintenance Disabled
OPC	Origination Point Code
OPCODE	Operation Code
OPNAME	Operation Name
OSI	Open Systems Interconnection
OSS	Operations Systems Support
PC	Point Code
PCR	Preventive Cyclic Retransmission
PCS	Personal Communications Service (North American GSM)
PDBA	Provisioning Database Application
PDBI	Provisioning Database Interface
PDN	Packet Data Network
PDS	Persistent Device States
PLNP	PCS 1900 LNP
PLNPQS	LNPQS support provided for PLNP
PPSMS	Prepaid Short Message Service Intercept
PROM	Programmable Read-Only Memory
PSEL	Presentation Selector
PST	Primary State for Maintenance
PSTN	Public Switched Telephone Network
PVC	Permanent Virtual Circuit
PVN	Private Virtual Network
Q3	Q.3 Protocol
RAM	Random Access Memory
RBASE	Record Base measurements report
RC	Relative Cost
RI	Routing Indicator
RFC	Request for Comments
RMC	Remote Maintenance Center
RMTP	Reliable Multicast Transport Protocol
RN	Routing Number
RTDB	DSM Real-time database
RTT	Round Trip Time
SAAL	Signaling ATM Adaptation Layer
SAPC	Secondary Adjacent Point Code
SCCP	Signaling Connection Control Part
SCM	System Configuration Manager
SCMG	SCCP Management
SCP	Service Control Point

Table (Cont.) Acronyms

Acronym	Definition
SCRSET	Screen Set
SCSI	Small Computer System Interface
SCTP	Stream Control Transmission Protocol
SE-HSL	Synchronous E1 High Speed Link
SEAS	Signaling Engineering and Administration System
SFAPP	Stateful Applications
SIB	Status Indication "Busy"
SIE	Status Indication "Emergency" Alignment
SIN	Status Indication "Normal Alignment"
SIO	Service Information Octet
SIO	Status Indication "Out of Alignment"
SIOS	Status Indication "Out of Service"
SK	Service Key
SKTS	Service Key/TeleService List
SLIC	Service and Link Interface Card
SLK	Signaling Link
SLS	Signaling Link Selection
SLSCI	Signaling Link Conversion Indicator
SLTA	Signaling Link Test Acknowledgement
SLTM	Signaling Link Test Message
SMS	Short Message Service
SMSC	Short Message Service Center
SMSMR	Prepaid Short Message Service
SNAI	Service Nature of Address Indicator
SNM	Signaling Network Management
SNR	Subsystem Normal Routing
SOR	Support for Optimal Routing
SORP	Socket Option Registration Primitive
SPC	Secondary Point Code Signaling Point Code
SRF	Signaling Relay Function
SRI	Send Routing Information
SRVSEL	Service Selector
SS7	Signaling System #7
SS7ANSI	The application software for the ANSI SS7 signaling links
SSA	Subsystem Allowed (An SCCP management message)
SSEL	Session Selector
SSN	SS7 Subsystem Number
SSP	Service Switching Point
SSU	Status Signal Unit
ST	Stop Digit—BCD value 15 (0xF)—used to indicate the end of dialing in some applications

Table (Cont.) Acronyms

Acronym	Definition
STC	Signaling Transport Card
STP	Signal Transfer Point
STPLAN	The application software for the STPLAN feature
SUA	SS7 SCCP-User Adaptation Layer
SVC	Switched Virtual Circuit
TALI	Transport Adapter Layer Interface
TCP	Transmission Control Protocol
TCAP	Transaction Capabilities Application Part
TDM	Terminal Disk Module
TFA	Transfer Allowed
TFC	Transfer Congested (traffic)
TFP	Transfer Prohibited
TFR	Transfer Restricted
TLNP	Triggerless LNP
TOS	Type of Service
TPS	Transactions Per Second
TRA	Traffic Restarting Allowed
TRBL	Trouble
TRW	Traffic Restarting Waiting
TSC	Time Slot Counter Synchronization
TSM	Translation Services Module
TT	Translation Type
TUP	Telephone User Part
TV	Ticket Voucher
UA	IETF User Adaptation Layers
UAM	Unsolicited Alarm Message
UART	Universal Asynchronous Receiver - Transmit
UDP	User Datagram Protocol
UDTS	Unit Data Transfer Service
UI	User Interface
UID	User ID
UIM	Unsolicited Informational Message
UPD	Update
VGTT	Variable Length GTT
VLR	Visitor Location Register
VMSC	Voice Mail Service Center Visited Mobile Switching Center
VSCCP	VxWorks Signaling Connection Control Part
WNP	Wireless Number Portability
WNPQS	Wireless Number Portability Query Service
X.25 DE	X.25 Destination Entity
XGTT	Expanded GTT (GTT Table Expansion)

Table (Cont.) Acronyms

Acronym	Definition
XMAP	Expanded MAP TablePreviousNext

What's New in This Guide

This section introduces the documentation updates for Release 47.0 in Oracle Communications EAGLE Commands User's Guide.

Release 47.0 -F41393-04, July 2023

- Added a note about the list of cards supported by EAGLE release 47.0 in the [E5-based Control Cards](#) section.

1

Introduction

This chapter contains a brief description of the *Commands User's Guide*. The contents include sections about the manual scope, audience, and organization; how to find related publications; and how to contact Oracle for assistance.

1.1 Overview

The *Commands User's Guide* provides a description of all commands used in the Oracle Communications EAGLE. The use of the term "the system" indicates that the information is common to all of the functions of the EAGLE.

1.2 Scope and Audience

This manual is intended for those who maintain and perform administration on the EAGLE. It is assumed that the user is familiar with the SS7 network and its associated protocols. The manual describes commands used in the system, and it contains a special section on debug commands and their descriptions.

Debug commands are a special group of commands used in troubleshooting and debugging the system. These commands are intended for Customer Care Center personnel and authorized engineering personnel in the operating companies. The use of these commands is restricted to those personnel who have access to the "Debug" command class.

1.3 References

For more information, refer to the following documents:

- *Commands Error Recovery Reference*
- *Numbering Plan Processor (NPP) User's Guide*
- *Database Administration - SS7 User's Guide*
- *Maintenance Guide*
- *Installation Guide*
- *Database Administration - System Management User's Guide*
- *Measurements Reference*
- *G-Port User's Guide*

2

Using Commands

This chapter provides the following information:

- A description of the system's Maintenance and Administration Subsystem
- A description of the system's input and output devices
- A description of how to enter commands
- The procedures for logging into and out of the system

This chapter is intended to assist personnel responsible for the system.

2.1 Maintenance and Administration Subsystem

The Maintenance and Administration Subsystem (MAS) is the central management point for the EAGLE.

The MAS provides user interface, maintenance communication, peripheral services, alarm processing, system disk interface, and measurements.

Management and redundancy is provided by use of two separate subsystem processors.

The MAS resides on two separate sets of Maintenance and Administration Subsystem Processor (MASP) cards and a Maintenance Disk and Alarm card (collectively referred to as control cards). The control cards are located in slots 1113 through 1118 of the EAGLE Control Shelf.

2.2 E5-based Control Cards



Note:

For the complete list of cards supported by EAGLE Release 47.0, see *Hardware Reference Guide*.

The E5-based set of EAGLE control cards consists of the following cards:

- Two Maintenance and Administration Subsystem Processor cards (E5-MASP cards). Each dual-slot E5-MASP card is made up of two modules:
 - Maintenance Communication Application Processor (E5-MCAP) card
 - Terminal Disk Module (E5-TDM) card
- One Maintenance Disk and Alarm card (E5-MDAL card)

Maintenance Communication Application Processor (E5-MCAP) Card

The E5-MCAP card contains the Communications Processor and Applications Processor and provides connections to the IMT bus. The card controls the maintenance and database

administration activity and performs both application and communication processing. E5-MCAP cards are located in slots 1113 and 1115 of the control shelf.

Each E5-MCAP card contains one latched USB port for use with removable flash media (“thumb drive”), and one flush-mounted USB port for use with a plug-in flash drive. The removable media drive is used to install and back up customer data. The flush-mounted USB port is used for upgrade and could be used for disaster recovery.

Terminal Disk Module (E5-TDM) Card

The E5-TDM card provides the Terminal Processor for the 16 I/O ports, and interfaces to the Maintenance Disk and Alarm (E5-MDAL) card and fixed disk storage. The E5-TDM card also distributes Composite Clocks and High Speed Master clocks throughout the EAGLE, and distributes Shelf ID to the EAGLE. Each E5-TDM card contains one fixed SATA drive that is used to store primary and backup system databases, measurements, and Generic Program Loads (GPLs). E5-TDM cards are located in slots 1114 and 1116 of the control shelf.

Maintenance Disk and Alarm (E5-MDAL) Card

The E5-MDAL card processes alarm requests and provides fan control. There is only one E5-MDAL card in a control card set. Critical, major, and minor system alarms are provided for up to 6 individual frames. In addition to the 3 system alarms, the E5-MDAL card provides the system audible alarm. The E5-MDAL card provides control of fans on a per-frame basis, and allows for each fan relay to be set individually. The E5-MDAL card is located in slots 1117 and 1118 of the control shelf.

2.3 Input/Output Devices

There are two types of Input/Output (I/O) devices: terminals and printers. All I/O devices are connected to the system through the control shelf backplane. Each I/O device is described in terms of its function and its connection to the system. Refer to *Installation Guide* for backplane connection information.

Terminals and Printers

The EAGLE uses VT320 terminals for maintenance and database administration. The EAGLE also can be configured to communicate with the SEAS interface (OAP). The terminals enable you to enter information into or receive information from the system. The system is capable of communicating with terminals at data rates from 2400 to 19,200 baud, using the ASCII character set.

You must configure terminals to operate with the system. You also must set printers (and modems) for hardware flow control. To do this, enable Data Terminal Ready (DTR) through your terminal’s configuration menu. A modem also must have DCD set on “high.” If your terminal has the auto-wrap feature, ensure that it is disabled before using your terminal on the system.

For information on the setup values for printers and terminals on the system, see the [chg-trm](#) command.

Terminals provide the following capabilities:

- cmdname input and output
- Continuous alarm states
- Event/Error messages

You enter commands at the terminal to perform system operations such as displaying the system status, administering system security, and maintaining the database.


An example of a terminal screen is shown in [Figure 2-1](#). Note that the alarm status area is labeled either Total Alarm Status or Active Alarm Status depending on how the VT320 terminal is configured. See the [chg-stpopts](#) command description for configuration information.

Alarms are displayed in the alarm status area of the terminal screen. The alarm levels are as follows:

- Critical – Indicates a severe, service-affecting condition has occurred and that immediate corrective action is needed, regardless of the time of day or the day of the week.
- Major – Indicates a serious disruption of service or the failure of important circuits is taking place. These troubles require attention and response to restore or maintain system capability.
- Minor – Indicates a trouble, but one that does not have a serious affect on service.
- Inhibited – Indicates a device in the system with an inhibited alarm. A temporarily or permanently inhibited alarm does not generate unsolicited output or cause alarm indicators to be turned on. See the `inh-alm` command description for information on inhibited alarms.

Event/Error messages also are issued to terminals to report system conditions or events. If the condition or event affects service, an alarm is issued along with an Event/Error message. Event/Error messages are displayed in the scroll area of the terminal screen.

Figure 2-1 System Terminal User Display

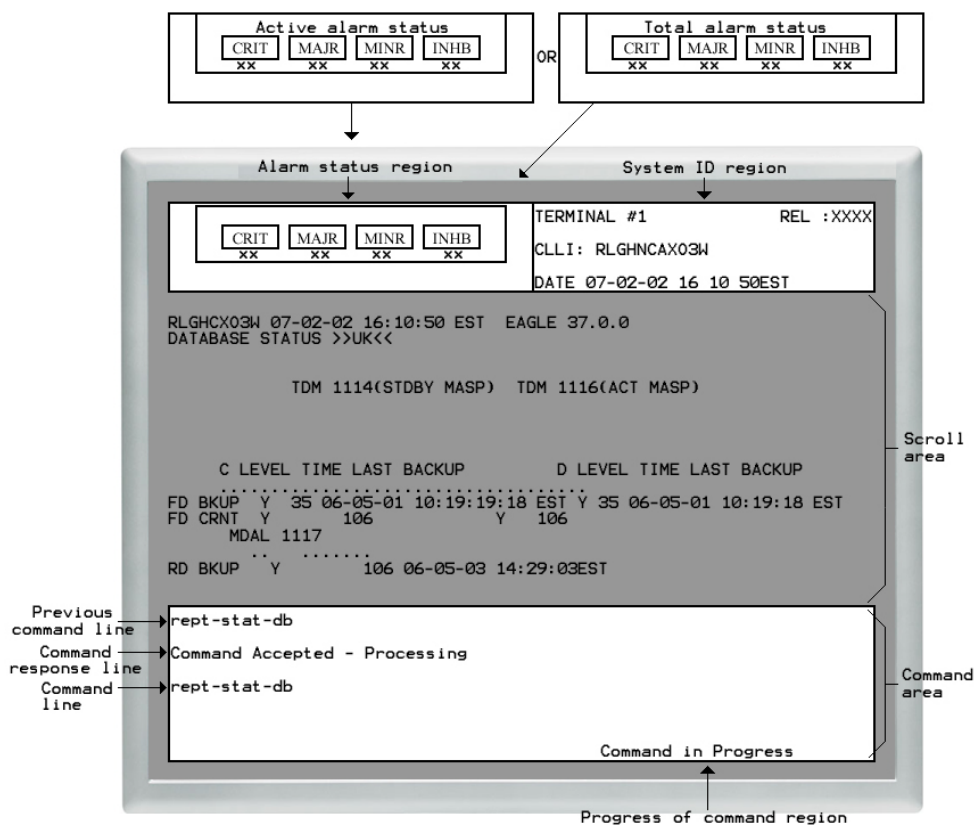

Use the command line region of the terminal display () to enter commands. The command line region consists of two lines. Each of these lines can hold up to 80 characters. If you enter a command of more than 80 characters in length, the command appears on both lines. When you press the Enter key, only the first 80 characters are displayed in the previous command line, followed by a message on the command response line showing the status of the command. The remaining characters have not been rejected; they are not displayed due to line length limitations. If you recall the command by pressing the Up arrow key or Down arrow key, all the characters in the command are displayed. For a description of the arrow key functions, see [Table 2-2](#).

Printer Connections

Terminals and printers are connected to the Terminal Disk Module (TDM), using the control shelf backplane. The TDM also provides Keyboard Send and Receive (KSR) function. A description of the TDM can be found in *Installation Guide*.

KSR Function on VT320 Terminal Devices

The terminals can use the keyboard send and receive (KSR) mode of operation. KSR refers to a device or mode of operation that prints or displays all received data. The KSR mode of operation typically supports a teletype printer, but in the system, it also supports a video display unit and keyboard.

The KSR feature enables you to attach a dumb terminal device or teletype printer to the system's I/O ports or emulate KSR mode of operation on a VT320. KSR enhances the system's dial-up administration functions by allowing faster throughput, because the screen formatting characters associated with the VT320 mode of operation need not be transmitted.

The tested and supported terminal size in KSR mode is 24 rows/80 columns.

KSR Configuration

This feature allows you to configure the operational characteristics of system's I/O serial ports to support KSR terminal devices. See [Table 2-2](#) for a list of the keyboard functions used by the KSR feature. For information on configuring a serial I/O port for KSR operation, see *Database Administration - SS7 User's Guide*.

Changing the Mode Of Operation

Before you attempt to change the mode of operation of the terminal, you *must* follow the "Changing the Terminal Characteristics" procedure found in *Database Administration - SS7 User's Guide*. You must perform this procedure from another terminal.

You can change the mode of operation of the terminal by pressing the **F11** key. The **F11** key instructs the system to mimic a KSR. cmdname line editing operates exactly like the VT320.

The KSR emulation resembles a printer when in operation. The entire screen is used for output. Before you enter a command, press <Ctrl-A>. The command prompt (>) is displayed. Enter a carriage return to signify the end of command entry.

While in the KSR mode, all output to the video display unit is buffered. When any character is entered from the terminal, a one-minute timer is started and data reception from the system is stopped. The system responds to the command with the appropriate response, then resumes sending data where it left off.

If a carriage return is not received during command entry, a time-out occurs and the system resumes sending data to the terminal.

Requirements

The KSR function operates on any combination of terminal type assignments for the 16 available terminal ports.

Telnet Terminals

Telnet is a user command using the underlying TCP/IP protocol for accessing remote computers. Telnet provides a connection from a remote (client) to a host (server) computer; the client keyboard and monitor (or window) act as if physically attached to the host computer. Remote users log on as if they were local users with whatever privileges may have been granted to the specific applications and data on the remote computer. Remote users, after they log in, can use the same services as a local user.

The IP User Interface feature permits any standard telnet client to act as an EAGLE terminal. This IP-based access provides a standard interface through which EAGLE commands are entered from a telnet session to the EAGLE. The EAGLE then provides command responses back to the remote telnet terminal.

Up to 3 E5-IPSM cards or E5-ENET-B cards running the IPS application (IPSM cards) in the EAGLE, with IP connectivity, enable telnet clients to connect from anywhere on the customer's IP LAN. The EAGLE must be on the customer's LAN or WAN. Each IPSM card provides 8 telnet terminal ports (IDs 17-24 for the first card installed, 25-32 for the second card installed, and 33-40 for the third card installed), which are automatically made available


when the card is installed and provisioned. See the `chg-trm` command description in this manual for more information about configuring telnet terminals.

From the telnet client, the remote user connect to any one of the equipped IPSM cards available by entering the command `telnet <IP address>`. For example,

```
telnet 192.168.1.100
```

The remote user then selects a terminal number from a list of available terminals. If an incorrect terminal number (one not listed in the prompt) is selected, the prompt appears again. (After three incorrect tries, the session is closed.) After the session is accepted, an EAGLE welcome message appears. At this point, broadcast messages (if provisioned) will begin to appear. See [Figure 2-2](#).

Figure 2-2 Telnet Terminal Selection and Login

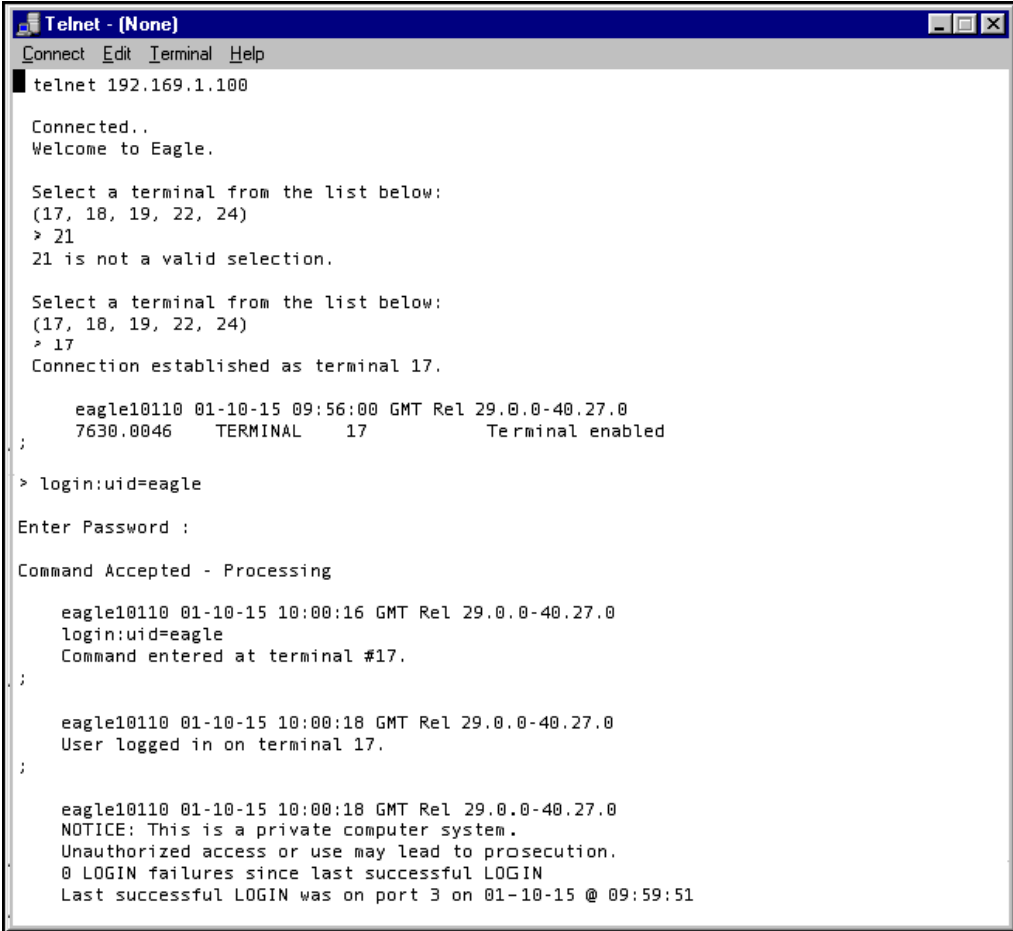

```
Telnet - (None)
Connect Edit Terminal Help
telnet 192.169.1.100

Connected..
Welcome to Eagle.

Select a terminal from the list below:
(17, 18, 19, 22, 24)
> 21
21 is not a valid selection.

Select a terminal from the list below:
(17, 18, 19, 22, 24)
> 17
Connection established as terminal 17.

      eagle10110 01-10-15 09:56:00 GMT Rel 29.0.0-40.27.0
      7630.0046   TERMINAL   17           Terminal enabled
;

> login:uid=eagle

Enter Password :

Command Accepted - Processing

      eagle10110 01-10-15 10:00:16 GMT Rel 29.0.0-40.27.0
      login:uid=eagle
      Command entered at terminal #17.
;

      eagle10110 01-10-15 10:00:18 GMT Rel 29.0.0-40.27.0
      User logged in on terminal 17.
;

      eagle10110 01-10-15 10:00:18 GMT Rel 29.0.0-40.27.0
      NOTICE: This is a private computer system.
      Unauthorized access or use may lead to prosecution.
      0 LOGIN failures since last successful LOGIN
      Last successful LOGIN was on port 3 on 01-10-15 @ 09:59:51
```

After a connection is made, the remote user can log in using a pre-provisioned user ID and password. (The user ID and password must be provisioned from an existing serial terminal.) The `login` command can be typed directly, without typing `<Ctrl-A>` first.

An EAGLE serial terminal emulating a Keyboard Send/Receive (KSR) device is normally in *display mode* (where outgoing messages are displayed). In order to enter a

command, the user must interrupt the display by holding down the Ctrl key and typing an “a” (the ATTENTION or Ctrl-A key sequence). When the terminal controller receives an ATTENTION, it enters a *command entry mode*. The output text is temporarily halted, and the prompt symbol “>” appears.

The telnet terminal enters *command entry mode* when any key is pressed; <Ctrl-A> is not needed.

After the login is accepted and the user presses a key to receive the standard EAGLE command line prompt, all EAGLE commands assigned to that user ID are now accessible.

The display of broadcast messages can be interrupted with any keystroke, and will resume after a command is entered or a set timeout expires. When in command entry mode, the telnet server holds any outgoing messages in a buffer while a command is entered. A command entry is completed by pressing the Enter key.

The telnet server waits up to 60 seconds between keystrokes for the command text to be completed, before timing out and resuming the broadcast display. If the command entry times out, and output resumes, the incomplete command text might scroll off the screen. Even though the incomplete command was not executed, it is saved as an entry in the command buffer. This incomplete command will be displayed again when any key is pressed. The command string can be finished by continuing the typing where it was interrupted. Pressing the Enter key submits this command as usual.

Broadcast messages are held in a buffer from the time a key is pressed, until the command is complete (timed out, aborted, canceled, or rejected). This is to allow command responses to be completely displayed. After the command completes, broadcast messages (if provisioned) will resume. The IPSM card buffer will hold up to 30 minutes of broadcast output before discarding the oldest messages.

When the user enters the `logout` command to end the telnet session, the user is logged off of the EAGLE, but the port remains assigned to the EAGLE telnet terminal. If the active port connection is lost for a reason such as hardware fault or system interruption, the telnet server resets affected ports, the session is closed, and the user ID is logged off.

The OA&M IP Security Enhancement feature provides secure connections to the EAGLE. Refer to Appendix B of the Database Administration Manual - System Management for information on using the PuTTY client to make a secure telnet connection.

SEAS Terminals

The SEAS Over IP feature provides a TCP/IP-based interface for SEAS. The SEAS interface constitutes the path between the EAGLE and a Common Channel Signaling Message Router (CCS MR). The EAGLE uses the IP User Interface feature and IPSM cards instead of EOAP to provide the paths for each SEAS TCP/IP link.

The IPSM card allows one of the eight IP terminals to function as a SEAS terminal and provide connectivity between the CCS MR and the EAGLE. The IPSM card also continues to provide the EAGLE with generic IP-based services, such as Telnet and FTP on the remaining seven IP terminals.

A maximum of 2 SEAS terminals can be configured in the EAGLE.

The `chg-trm:type=seas` command can be entered for terminals 17 - 40 when all conditions for a terminal to be set as a SEAS terminal are met.

The SEAS output group cannot be turned off for a SEAS terminal.

Element Management System Alarm Monitor

EMSALM terminals Element Management System Alarm Monitor (EMSALM) Element Management System Alarm Monitor (EMSALM) terminals display UAM alarm set and clear messages and the UIM 1083 "system alive" messages only. No other messages (including reports and other UIMs) are displayed. EMSALM terminals are designed to display alarm messages only. EMSALM terminals are not restricted in any other way. They can accept login, and commands; however these operations may interfere with alarm monitoring and should be performed on an alternate terminal.

Serial port terminal IDs 1-16 can be assigned as EMSALM terminals. These EMSALM terminals are a refinement of the KSR terminal, and contain all the KSR terminal communication parameters.

Telnet terminal IDs 17-40 can be assigned as EMSALM terminals when the IP User Interface feature is enabled and turned on and up to 3 IP SM cards are equipped in the system (see "Telnet Terminals" on page 4-6). These EMSALM terminals have all of the functions of a telnet type terminal.

When the `chg-trm` command is entered to change a terminal to the EMSALM type, all output group parameter values for that terminal default to YES, even if they were set to NO before the change. Even though an output group is set to YES for an EMSALM terminal, no reports or UIMS other than UIM 1083 will appear for that output group.

Individual output group values can be changed to NO by entering another `chg-trm` command for an EMSALM terminal (do this only with caution; it can cause loss of UAM alarm messages at the EMSALM terminal).

When the `chg-trm` command is entered to change a terminal from type EMSALM to another type, the output group values remain unchanged. A `chg-trm` command can be entered to change output group settings.

2.4 About Commands

Commands allow you to interact with the system to perform specific functions. Commands are available to perform the following functions:

- Obtain system status and operational status
- Modify system configuration
- Obtain measurement reports

The following sections describe how to enter commands through a system terminal. Command correction, keywords, parameters, and syntax are described.

Entering Commands

All commands are entered at the command prompt (>), located in the bottom window of the terminal display. After entering a command, you must press the **Enter** key. When the command has executed (an output message appears in the display to indicate execution), you can enter another command. The **F9** function key allows you to interrupt a running command; however, you cannot enter another command until the running command completes its operation.

Commands are not case sensitive; therefore, either uppercase or lowercase characters can be used. Intermixing (using both upper and lower case) characters does not create an error message, but you must use the correct command syntax.

Action Commands

Throughout this manual, the term “action command” is used in the description of some dependencies, as in the sentence “No other action command can be in progress when this command is entered.”

Action commands are used to effect changes to the state of entities within the system, such as cards and signaling links. For example, use the `inh-card` command to change the state of the card to Out-of Service - Maintenance Disabled (OOS-MT-DSBLD).

[Table 2-1](#) lists the action commands and shows which type of system entity they are associated with.

Table 2-1 Action Commands and Associated System Entity

Action Commands	System Entity
act-slk, alw-slk, canc-slk, dact-slk, inh-slk, unhb-slk, blk-slk, ublk-slk, tst-slk	Link Commands
act-alm-trns, canc-alm-trns, rls-alm	Alarm Commands
alw-trm, inh-trm	Terminal Commands
alw-card, inh-card, rmv-card	Card Commands

Command Keywords and Parameters

Commands consist of two parts: keywords and parameters. Keywords identify the principal action to be performed by the system, and consist of one to three words. Most commands also require parameters to further define the command operation.

Parameters are entered after the keyword. Each parameter must be separated from the keyword or the previous parameter with a colon. If a parameter has multiple values, the values entered are discrete and must be separated with a hyphen or comma. The parameters can be entered in any order.

Some command parameters have built-in default values that are used if a value is not specified. To accept a default value, press **Enter** after the desired keyword and parameters have been entered.

Use the following delimiters when entering commands:

- `:` separates parameters
- `-` or `,` — separates multiple values within a parameter block
- `=` — use as delimiter between the parameter and input value

The following is an example of a command entry:

```
> dact-slk:loc=1101:port=a
```

The keyword in the above example is `dact-slk` (Deactivate Signaling Link). The first parameter for this command is `loc=1101` (the actual card location in the system for the link being cancelled, based on equipment location). The second parameter is `port=a`. This parameter signifies which signaling link port on the card in the designated location has the link that is to be cancelled.

If an error is made while typing commands, use the **Delete** key to make corrections, one character at a time.

 **Note:**

If the same parameter is entered more than once in a command, the system accepts the last parameter value that was entered. Any values for the parameter that were entered earlier in the command are ignored.

Keyboard Functions

Some keyboard functions used with commands are described in the previous section. Keyboard functions available for use with commands are listed in [Table 2-2](#). Arrow key functions are further described following the table.

Table 2-2 Keyboard Functions







VT320 Key Sequence	KSR Key Sequence	Description
		The Up arrow key recalls the previous commands entered at the prompt, one command at a time. The Up arrow key scrolls backwards through up to 10 commands for a KSR, VT320, or SCCS terminal, and up to 20 commands for an IP UI telnet terminal. See page 4-13 for a description of the Up arrow key functions.
		The Left arrow key backspaces the underline cursor without erasing.
		The Down arrow key recalls the previous command entered at the prompt, one parameter at a time. If the Up arrow key is pressed and more than one command has been entered in the session, pressing the Down arrow key displays one previously entered command at a time. The Down arrow key scrolls forward through up to 10 commands for KSR, VT320, and SCCS terminals and up to 20 commands for IP UI telnet terminals. See page 4-14 for a description of the down arrow key functions.

Table 2-2 (Cont.) Keyboard Functions



VT320 Key Sequence	KSR Key Sequence	Description
		The Right arrow key recalls the last command entered at the prompt, one character at a time.
F6	F6	The F6 Function key refreshes the terminal screen, including any characters already input on the command line and the command response line.
F7	F7	The F7 Function key clears the scroll buffer. This enables a user to stop useless information from passing to the scroll region of the system terminal.
F8	F8	The F8 function key enables you to stop and restart the scrolling of information on the terminal screen.
F9	F9	<p>The F9 Function key allows you to interrupt a running command so that you can enter another command. Output and processing of the interrupted command continue. Pressing F9 is the same as issuing the <code>canc-cmd</code> command with no parameters.</p> <p>The commands that can be interrupted by pressing F9 are listed in the description of the <code>canc-cmd</code> command.</p> <p>If the terminal is running one of the listed commands and you press F9, output and processing are cancelled. This function works only on the same terminal that is running the command you want to cancel. To cancel a command from another terminal, use the <code>canc-cmd:trm=</code> command (see the <code>canc-cmd</code> command description).</p>
F10	F10	The F10 Function key displays help information for the last command that was entered, including parameters, parameter formats, and the command class.

Table 2-2 (Cont.) Keyboard Functions

VT320 Key Sequence	KSR Key Sequence	Description
F11	F11	The F11 Function key allows you to toggle the terminal's mode of operation from VT320 to KSR and from KSR to VT320. This function key has no effect on IP UI telnet terminals.
Not Available	Control-A	Control-A allows you to enter a command in the KSR mode.
Control-S	Control-S	Used with the <code>sw</code> or <code>both</code> flow control (see the <code>chg-trm</code> command description for more information), this key sequence sends the XOFF character to temporarily stop sending data.
Control-Q	Control-Q	Used with the <code>sw</code> or <code>both</code> flow control (see the <code>chg-trm</code> command description for more information), this key sequence sends the XON character to resume sending data.
Ins	Ins	When Insert is toggled on, typed characters are inserted into the command line, moving existing characters to the right. When toggled off, typed characters overwrite existing characters.
Del	Del	Deletes one character at a time from the right; the cursor stays in position.
Backspace	Backspace	Deletes a character and moves the cursor one space to the left.

Arrow Key Operation

The arrow keys are used to move the cursor to a different position in a command, and to display part or all of a command that was previously entered.

On KSR, VT320, and SCCS terminals, you can scroll through the last 10 commands that were entered at the terminal during the session. On IP UI telnet terminals, you can scroll through the last 20 commands that were entered at the terminal during the session. Part or all of one command at a time is displayed. When you have scrolled through the complete list of up to 10 or 20 commands, the scrolling wraps back to the beginning of the list.

The list of previously entered commands is cleared when a terminal is inhibited and allowed (`inh-trm:trm=xx` and `alw-trm:trm=xx`) and when a file transfer is initialized with the `act-file-trns` command.

There are two modes of command recall for Up and Down arrow keys:

- **Edit Mode**
Edit Mode includes any key operation that changes the command at the prompt, such as the Delete key, the Back Space key, or an alphanumeric key. Pressing one of these keys to enter or change a command puts the terminal into Edit Mode. Pressing the Enter key (or carriage return) takes the terminal out of Edit Mode.
- **Non-edit Mode**
Pressing the Enter key (or carriage return) puts the terminal into Non-edit Mode. A terminal remains in Non-edit Mode when you press an arrow key, a Function key, or the Insert key, which do not change the command at the prompt. When you press a key that changes the command, the terminal goes into Edit Mode until you press the Enter key again.

Up Arrow Key

The Up arrow key is used to recall up to the last 10 commands (KSR, VT320, and SCCS terminals) or the last 20 commands (IP UI telnet terminals) entered at the prompt during the session.

- **In Edit Mode**
 - You enter 3 characters of a command at the prompt and press the Up arrow key. If the previous command was 6 characters long, then the last 3 characters of the previous command are recalled and displayed after the 3 characters that you entered at the prompt.
 - You enter 10 characters of a command at the prompt and press the Up arrow key. If the previous command was 6 characters long, none of the previous command is displayed. The command that you entered remains as you entered it at the prompt.
 - Entering part or all of a command at the prompt puts the terminal into Edit Mode. In Edit Mode, the last (or previous) command is recalled only if the command length of the last command is greater than the command at the prompt. For example,;
- **In Non-edit Mode**
 - When you have pressed the Enter key and there is no command at the prompt, or you have pressed the Insert key or a Function key, the terminal is in Non-edit Mode.
 - When you press the Up arrow key in Non-edit Mode, and you have entered at least one previous command, the last command that you entered is displayed at the prompt. Pressing the Up arrow key again clears the command at the prompt (if any) and displays the next previous command that you entered (if any). By continuing to press the Up arrow key, you can scroll backwards through the last 10 commands (KSR, VT320, \2nd SCCCS terminals) or the last 20 commands (IP UI telnet terminals) that you entered at the terminal. The display wraps back to the most recent of the entered commands when all of the available commands have been recalled. The terminal remains in Non-edit Mode until you press a key that changes the displayed command.

Down Arrow Key

In Edit Mode, the Down arrow key recalls the last command that was entered at the terminal, one parameter at a time. The recalled parameter is displayed at the end of the entry that currently appears at the prompt.

In Non-edit Mode:

- If the Up arrow has not been pressed just before pressing the Down arrow key, the Down arrow key recalls the last command that was entered at the terminal, one parameter at a time.
- If the Up arrow key is the last key that was pressed before the Down arrow key is pressed, the Down arrow key scrolls forward through the last 10 commands (KSR, VT320, 2nd SCCS terminals) or last 20 commands (IP UI telnet terminals), displaying one complete command each time the key is pressed. The scrolling wraps to the beginning of the list when all of the available commands have been displayed.

Right Arrow Key

Each time the Right arrow key is pressed, one character of the last command is recalled and the cursor moves one position to the right. When the last command is completely displayed, pressing the Right arrow key does not cause any cursor movement or character display.

Left Arrow Key

The Left arrow key moves the underline cursor one position to the left without erasing the character. The underline cursor can be moved until it reaches the first character at the left of the command. If the Left arrow key is pressed again after the cursor reaches the first character of the command, the bell sounds.

Command Output and Messages

Reports and outputs generated through retrieve or report status commands are followed by a semi-colon (;) to signify the end of the output (this is in compliance with TL1 standards).

The following types of output messages are used on the system:

- **Command Accepted-Processing:** The command has been accepted by the application's command handler as syntactically correct. This message is displayed in the command area of the terminal display.
- **Command Completed-**The command has been entered, and the system has completed processing. This message is displayed in the scroll area of the terminal display.
- **Command Executed-**The command has been entered, and the system has completed processing. This message is displayed in the command area of the terminal display.
- **Command Failed-**The command was executed but failed due to an external reason, such as the link is not equipped or a disk drive is unable to communicate. The reason for the failure is included in this message.
- **Command Rejected-**The command syntax could be incorrect, or a parameter value is incorrect (semantic error). This message is displayed in the command area of the terminal display. The reason for rejecting the command (command syntax or incorrect parameter value) is included in this message.
- **Command Aborted-**The command syntax and the parameter values are ok, but for some reason the command was aborted (for example, a disk drive is inaccessible). This message is displayed in the scroll area of the terminal display.

- **Command Response Messages**—A command is entered at the terminal, and the response to that command is echoed on that same terminal. These messages are displayed in the scroll area of the terminal display.
- **Unsolicited Messages**—An example of unsolicited messages are the messages delivered in response to alarm conditions. These messages are displayed in the scroll area of the terminal display.

The unsolicited messages can be directed to a specific terminal or printer by using the `chg-trm` command to assign one or more of the groups of unsolicited output messages shown in [Table 2-3](#) to the specified terminal or printer.

Table 2-3 Unsolicited Output Message Groups


Application Server	Application Subsystem
Card	Clock
Debug	Global Title Translation
Gateway Screening	Measurements Maintenance
Monitor	MPS
SEAS Maintenance	Security Administration
System Maintenance	Database Administration
Traffic Measurements	Program Update
Link Maintenance	LNP Subscription
LNP Database Administration	

To configure a terminal to receive unsolicited LNP database administration and LNP subscription messages, the LNP feature must be turned on (see the `enable-ctrl-feat` command).

Command Output Banners

When a command is executed in the system, one or more banner lines appear in the output that is displayed for the command.

Figure 2-3 Output Banner Format

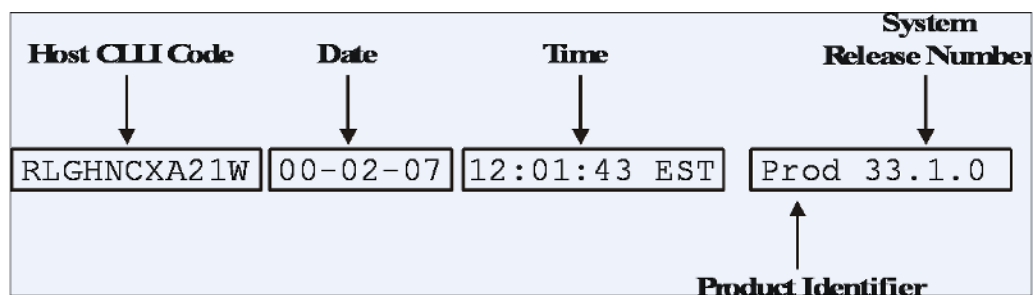

The following fields appear in each output banner:

- **Host CLI code**—a maximum of one alphabetic character and ten alphanumeric characters. The CLI code uniquely identifies the system in terms of its physical location. The CLI code must be unique among all elements in the system. The CLI code contains the following information:

- City—4 characters
- State— 2 characters
- Building— 2 characters
- Equipment type —3 characters
- Date—year-month-day
- Time—hour: minute: second time zone
- System Release Number— contains a product identifier and the version ID number.
The product identifier, which is shown as ‘Prod’ in [Figure 2-3](#) and the output examples in this manual, will appear as “EAGLE5”.

The version ID number identifies the GPL set that is specific to the software release that is expected to be installed on the system as approved loads. The format of the version ID number is *maj.min.maint.notused.rampspin*, defined as follows:
 - *maj*—the major release ID
 - *min*—the minor release ID
 - *maint*—the maintenance release ID
 - *notused*—this field is not used and is always 0
 - *rampspin*—the ramp spin release ID

System Security

User IDs and passwords protect the system from unauthorized entry into the system and enhance system security. To enter the system through a terminal, a user must enter a valid user ID and password at the system prompt, and the user ID and password must be authorized for use together. A user ID identifies a user to the system.

To maintain the security of the system, passwords should be changed periodically and user IDs should be deleted whenever there is a personnel change.

When prompted to enter a new password, a different password should be provided. This is the responsibility of the user, and is not enforced by the EAGLE.

Rules for User ID and Password Administration

The rules for administering User IDs and passwords, rules for administering passwords are:

- The maximum number of user ID-password combinations is 100.
- The maximum length of the user ID is 16 characters.
- The maximum length of the password is 12 characters; the minimum length is site provisionable using the `chg-secu-dflt` command, and it can be from 1 – 12 characters long.
- User IDs and passwords may contain any printable characters except the characters used as command delimiters: colon (:), comma (,), backslash (\), hyphen (-), or equal sign (=).
- Each user ID must begin with an alpha character.

- A password must contain:
 - At least as many characters as specified on the `minlen` parameter of the `chg-secu-dflt` command
 - At least as many alphabetic characters as specified on the `alpha` parameter of the `chg-secu-dflt` command
 - At least as many numeric characters as specified on the `num` parameter of the `chg-secu-dflt` command
 - At least as many punctuation characters as specified on the `punc` parameter of the `chg-secu-dflt` command
- A password must not contain the associated user ID.

Command Classes

Each user ID and password combination is assigned to one or more command classes to control the set of system security commands that a user may enter.

There are 8 unique non-configurable command classes: Basic, Database Administration, Debug, Link Maintenance, Program Update, Security Administration, System Maintenance, and LNP Basic. (The Basic command class is assigned to all users as a default.)

There are 32 available configurable command classes. See the `chg-cmd` command description and the `chg-cmdclass` command description for information about naming and assigning commands to configurable command classes.

See the `chg-user` command description or the `ent-user` command description for more information on configuring user IDs and passwords and assigning command classes.

Login Security Checks

loginsystem security

To aid in system security, the system maintains a record of when a password was last changed and requires a user to change the password when it is older than the site-specified maximum password age. The system also keeps track of the elapsed time between successful logins. If the time between successful logins exceeds the site-specified maximum, a user is not allowed access to the system. The site systems administrator also has the ability to revoke a user ID.

When a user first logs into the system, the default unauthorized user warning is displayed as follows

```
NOTICE: This is a private computer system.
```

```
Unauthorized access or use may lead to prosecution.
```

Additional security is available for the system in that multiple logins using the same user ID are prohibited.

Intrusion Alert

To alert the system administrator to a possible attempt by an unauthorized person trying to log into the system, the system issues a scroll area message. When 5 or more consecutive

attempts to log into the system have failed, the following scroll area message is sent to all terminal ports that can receive unsolicited Security Administration messages:

```
Info: xxxxxxxxxx successive LOGIN failures on port pp
```

Where:

- xxxxxxxxxx is the number of consecutive login failures on the port (1 – 4,294,967,295)
- pp is the terminal port (1 – 40) on which the login attempts were made

When the attempt to log into the system is successful after a series of failed consecutive login attempts, or if the active MASP reboots, the count of failed consecutive login attempts for that port is reset to 0.

Attempts to log into the system that are not completed normally, are not considered login attempts and are not included in the count of failed consecutive login attempts. For example, while prompting for a password you might use the **F9** key to abort the command, or errors might occur when the system is looking up a user ID or password.

Login Procedure

The commands described in this manual are entered at a terminal connected to the system.

Before you can enter most of the commands, you must enter the `login` command to log into the system and open a user session. You must enter the login command with a valid user ID and password combination. When the system accepts your user ID and password as valid, you can enter commands at the terminal in the user session.

The first procedure in this section explains how to log into the system using the `login` command.

The procedures that follow the login procedure explain how to handle common situations that can arise when you log into the system.

- You must change the password the first time that you log in with a new user ID and password.
- The user ID and password that you enter are not accepted as valid.
- Your password has expired and must be changed.
- Someone else has already logged on with your user ID and password; the system does not allow the same ID and password to be used on two terminals at the same time.



Note:

You can enter the `act-user` command instead of the `login` command.

[Log into the System for a User Session](#)

[Your User ID and Password were not Accepted](#)

[You Must Change Your Password](#)

Your Password has Expired

Your User ID is Already Being Used

Login Error Messages

- E2262 Cmd Rej: Password too long, 12 maximum
- E2263 Cmd Rej: Password does not contain enough characters
- E2264 Cmd Rej: Password verification failed
- E2750 Cmd Rej: UserID already logged on (or is logging on) another port
- E2751 Cmd Rej: UserID has been revoked
- E2752 Cmd Rej: UserID has become obsolete and cannot be used
- E2753 Cmd Rej: Password does not contain enough alphabetic characters
- E2754 Cmd Rej: Password does not contain enough numeric characters
- E2755 Cmd Rej: Password does not contain enough punctuation characters
- E2756 Cmd Rej: Failed reading the password table
- E2757 Cmd Rej: Invalid userID/password combination
- E2758 Cmd Rej: ALPHA+NUM+PUNC must not be greater than 12
- E2759 Cmd Rej: Revocation of security admin userID not allowed
- E2760 Cmd Rej: Failed reading the security defaults table
- E2761 Cmd Rej: Password cannot contain userID

See the `chg-secu-dflt` command description for information on different options the system administrator has for configuring the system for password requirements.

The following is an example of the information that might be displayed in the scroll area, depending on your site TM configuration:

New password must contain

- from 8 to 12 characters
- at least 1 alphabetic character(s) (a - z)
- at least 1 numeric character(s) (0 - 9)
- at least 1 punctuation character(s) (for example, \$%#@#)

Logout Procedure

When a terminal session is completed, perform the following logout procedure to log out of the system [Log Out Of the System](#). The terminal returns to an input idle state.



Note:

You can use the `dact-user` command instead of the `logout` command.

2.4.1 Log into the System for a User Session

1. At the system prompt (>), enter the **login** command with your user ID.

2. Press the **Enter** key.

The following message appears:

```
Enter Password:
```

3. At the system prompt, type your password.

For security reasons, the password is not displayed on the terminal screen.

4. Press the **Enter** key.

Follow the remaining steps to complete this procedure or to go to another procedure, depending on the system response to validation of your user ID and password.

5. If your user ID and password combination are accepted and the following messages appear in the terminal input/command response region, the terminal is available for a user session.

```
Command Accepted-Processing  
Command Executed
```

This procedure is complete.

6. If your user ID and password combination are not accepted and the following message appears, go to [Your User ID and Password were not Accepted](#).

```
E2757 Cmd Rej: Invalid UserID/Password Combination
```

7. If you entered a new user ID and password combination for the first time, the following message appears, go to [You Must Change Your Password](#).

```
Enter new password (password must be changed) :
```

8. If you entered your user ID and password combination and your password has expired, the following message appears, go to [Your Password has Expired](#).

```
Enter new password (password has expired and must be changed) :
```

9. If you entered your user ID and password combination and they are already being used at another terminal, the following message appears. Go to [Your User ID is Already Being Used](#).

```
E2750 Cmd Rej: UserID already logged on (or is logging on) another  
port
```

2.4.2 Your User ID and Password were not Accepted

1. This procedure outlines the steps to follow when you attempt to log into the system and your user ID and password combination are not accepted.

When you entered the `login` command with your user ID and entered your password at the system prompt, the following message appeared:

```
E2757 Cmd Rej: Invalid UserID/Password Combination
```

When this message is displayed, the terminal also presents a message describing the login attempt and the time and date the attempt occurred.

2. Verify that you have the correct user ID and password.

Return to the login procedure, and log in again with the correct user ID and password.

If the problem occurs again, contact your System Administrator.

2.4.3 You Must Change Your Password

1. This situation can occur when you first log in after the system administrator uses the `ent-user` command to enter a new user ID and password combination, or when you first log in after the `chg-user:pid=yes` command has been entered.

When you entered the `login` command with your user ID and entered your password at the system prompt, the following message appeared:

```
Enter new password (password must be changed) :
```

Type a new password, following your site guidelines.

For security reasons, the password is not displayed on the terminal screen.

2. Press the **Enter** key.

The system checks the password to ensure that it meets your site's password complexity requirements.

3. If your password does not meet your site's password complexity requirements, the system displays a message based on the password violation (see [Login Error Messages](#) for a list of possible messages).

```
The login process ends.
```

Decide on a new password, and start the login procedure again.

4. If your password meets the complexity requirements, the following message appears:

```
Verify Password:
```

Type the exact password again that you entered in [Step 1](#).

For security reasons, the password is not displayed on the terminal screen.

5. Press the **Enter** key.
6. If the user ID and password combination are accepted and the following messages appear in the terminal input/command response region, the terminal is available for a user session

```
Command Accepted-Processing  
Command Executed
```

7. Record your new password in a secure location.

2.4.4 Your Password has Expired

1. When you entered the `login` command with your user ID and entered your password at the system prompt, the following message appeared:

```
Enter new password (password has expired and must be changed) :
```

Type a new password, following your site guidelines.

For security reasons, the password is not displayed on the terminal screen.

2. Press the **Enter** key.
The system checks the password to ensure that it adheres to your site's password complexity requirements.
3. If your password does not meet your site's password complexity requirements, the system displays a message based on the password violation (see [Login Error Messages](#) for a list of possible messages).

The login process ends.

Decide on a new password, and start the login procedure again.

4. If your password meets the complexity requirements, the following message appears:

```
Verify Password:
```

Type the exact password again that you entered in [Step 1](#)

For security reasons, the password is not displayed on the terminal screen.

5. Press the **Enter** key.
6. If the user ID and password combination are accepted and the following messages appear in the terminal input/command response region, the terminal is available for a user session

```
Command Accepted-Processing Command Executed
```

7. Record your new password in a secure location.

2.4.5 Your User ID is Already Being Used

1. When you entered the `login` command with your user ID and entered your password at the system prompt, the following message appeared:

```
E2750 Cmd Rej: UserID already logged on (or is logging on) another port
```

The following information is displayed in the scroll area:

```
Info: UID is currently logged on (or is logging on) to port yy.
```

where `yy` is in the range of 1 - 40.

2. Find the terminal at port `yy`, and log off your user ID at that workstation.
See [Log Out Of the System](#).
3. Return to your terminal and log into the system again.

2.4.6 Log Out Of the System

1. At the system prompt (`>`), enter the `logout` command.
2. Press the **Enter** key.

The following messages appear on the terminal screen to confirm command completion:

```
Command Accepted-Processing  
Command Executed
```

3

Alphabetical List of Commands

This chapter contains an alphabetical list of the EAGLE commands.

3.1 Commands

A

[act-alm-trns](#)

[act-cdl](#)

[act-dlk](#)

[act-echo](#)

[act-file-trns](#)

[act-flash](#)

[act-ftp-trns](#)

[act-gpl](#)

[act-lbp](#)

[act-lpo](#)

[act-slk](#)

[act-user](#)

[alw-card](#)

[alw-int](#)

[alw-map-ss](#)

[alw-slk](#)

[alw-trm](#)

[aud-data](#)

B

[blk-slk](#)

C

[canc-alm-trns](#)

[canc-cmd](#)

[canc-dlk](#)

canc-echo
canc-lpo
canc-slk
canc-user
chg-acg-mic
chg-acg-noc
chg-ainpopts
chg-aiqopts
chg-appl-rtkey
chg-as
chg-assoc
chg-atinpopts
chg-atm-lps
chg-attr-seculog
chg-card
chg-clkopts
chg-cmd
chg-cmdclass
chg-csl
chg-ctrl-feat
chg-db
chg-dconn
chg-deiropts
chg-dstn
chg-e1
chg-eisopts
chg-enumopts
chg-enum-prof
chg-enum-profsel
chg-feat
chg-frm-pwr
chg-ftp-serv
chg-gen-name

chg-gpl
chg-gsmmap-scrn
chg-gsm-msg
chg-gsmopts
chg-gsmsmsopts
chg-gsms-opcode
chg-gta
chg-gtcnv
chg-gtmod
chg-gtt
chg-gttact
chg-gttapath
chg-gttaset
chg-gttset
chg-gttset
chg-gtw-stp
chg-gws-actset
chg-gws-redirect
chg-inpopts
chg-ip-card
chg-ip-conn
chg-ip-lnk
chg-is41-msg
chg-is41opts
chg-is41smsopts
chg-isup-msg
chg-j1
chg-l2t
chg-l3t
chg-lbp
chg-lnpopts
chg-lnp-serv
chg-loopset

chg-ls
chg-lsopts
chg-m2pa-tset
chg-map
chg-mate-stp
chg-meas
chg-measopts
chg-mrn
chg-mtc-measopts
chg-netopts
chg-npp-as
chg-npp-serv
chg-npp-srs
chg-pid
chg-ppsopts
chg-prefix
chg-rte
chg-rtx
chg-sccp-msg
chg-sccpopts
chg-sccp-serv
chg-scr-aftpc
chg-scr-blkdpc
chg-scr-blkopc
chg-scr-cdpa
chg-scr-cgpa
chg-scr-destfld
chg-scr-dpc
chg-scr-isup
chg-scr-opc
chg-scrset
chg-scr-sio
chg-scr-tt

chg-seas-config
chg-secu-dflt
chg-secu-trm
chg-sfappopts
chg-sg-opts
chg-shlf
chg-sid
chg-sip-npp
chg-sipopts
chg-slt
chg-snmp-host
chg-snmppopts
chg-srvsel
chg-ss7opts
chg-ss-appl
chg-stpopts
chg-t1
chg-tatr-msg
chg-tatropts
chg-th-alm
chg-tifopts
chg-trm
chg-ttmap
chg-ttr-msg
chg-ttropts
chg-uaps
chg-user
chg-vflx-cd
chg-vflx-opts
chg-vflx-rn
chg-vflx-vmsid
chg-vlr-prof
chg-vlr-roaming

chk-unref-ent
clr-imt-stats
conn-imt
copy-disk
copy-ext-stats
copy-fta
copy-gpl
copy-meas
copy-seculog

D

dact-alm-trns
dact-cdl
dact-echo
dact-lbp
dact-rstst
dact-slk
dact-user
disc-imt
disp-fta-dir
dlt-acg-mic
dlt-acg-noc
dlt-appl-rtkey
dlt-as
dlt-assoc
dlt-card
dlt-csl
dlt-cspc
dlt-dconn
dlt-dlk
dlt-dstn
dlt-e1
dlt-enum-acl
dlt-enum-prof

dlt-enum-profsel
dlt-frm-pwr
dlt-fta
dlt-ftp-serv
dlt-gen-name
dlt-gserv-data
dlt-gsmmap-scrn
dlt-gsms-opcode
dlt-gsmssn-scrn
dlt-gta
dlt-gtcnv
dlt-gtmod
dlt-gtt
dlt-gttact
dlt-gttapath
dlt-gttaset
dlt-gttset
dlt-gttset
dlt-gws-redirect
dlt-homern
dlt-home-smsc
dlt-ip-conn
dlt-ip-host
dlt-ip-node
dlt-ip-rte
dlt-j1
dlt-lbp
dlt-lnp-serv
dlt-loopset
dlt-ls
dlt-map
dlt-mate-stp
dlt-mrn

dlt-na
dlt-npp-as
dlt-npp-srs
dlt-pct
dlt-prefix
dlt-rmt-appl
dlt-rte
dlt-rtx
dlt-sccp-serv
dlt-scr-aftpc
dlt-scr-blkdpc
dlt-scr-blkopc
dlt-scr-cdpa
dlt-scr-cgpa
dlt-scr-destfld
dlt-scr-dpc
dlt-scr-isup
dlt-scr-opc
dlt-scrset
dlt-scr-sio
dlt-scr-tt
dlt-shlf
dlt-sip-npp
dlt-slk
dlt-snmp-host
dlt-spc
dlt-srvsel
dlt-ss-appl
dlt-subnetid
dlt-t1
dlt-tt
dlt-ttmap
dlt-uim-acthresh

dlt-user
dlt-vendid
dlt-vflx-cd
dlt-vflx-rn
dlt-vflx-vmsid
dlt-vlr-prof
dlt-vlr-roaming

E

enable-ctrl-feat
ent-acg-mic
ent-acg-noc
ent-appl-rtkey
ent-as
ent-assoc
ent-card
ent-csl
ent-cspc
ent-dconn
ent-dlk
ent-dstn
ent-e1
ent-enum-acl
ent-enum-prof
ent-enum-profsel
ent-frm-pwr
ent-ftp-serv
ent-gen-name
ent-gserv-data
ent-gsmmap-scrn
ent-gsms-opcode
ent-gsmssn-scrn
ent-gta
ent-gtcnv

ent-gtmod
ent-gtt
ent-gttact
ent-gttapath
ent-gttaset
ent-gttset
ent-gttset
ent-gws-redirect
ent-homern
ent-home-smisc
ent-ip-conn
ent-ip-host
ent-ip-node
ent-ip-rte
ent-j1
ent-lbp
ent-lnp-serv
ent-loopset
ent-ls
ent-map
ent-mate-stp
ent-mrn
ent-na
ent-npp-as
ent-npp-srs
ent-pct
ent-rmt-appl
ent-rte
ent-rtx
ent-scr-aftpc
ent-scr-blkdpc
ent-scr-blkopc
ent-scr-cdpa

ent-scr-cgpa
ent-scr-destfld
ent-scr-dpc
ent-scr-isup
ent-scr-opc
ent-scrset
ent-scr-sio
ent-scr-tt
ent-serial-num
ent-shlf
ent-sid
ent-sip-npp
ent-slk
ent-snmp-host
ent-spc
ent-srvsel
ent-ss-appl
ent-subnetid
ent-t1
ent-tt
ent-ttmap
ent-user
ent-vendid
ent-vflx-cd
ent-vflx-rn
ent-vflx-vmssid
ent-vlr-prof
ent-vlr-roaming

F

flash-card
format-disk

I

inh-alm

inh-card
inh-imt
inh-map-ss
inh-slk
inh-trm
init-card
init-ext-stats
init-flash
init-imt-gpl
init-mux
init-network
init-sys

L

lock
login
logout

P

pass

R

rept-ftp-meas
rept-imt-info
rept-imt-lvl1
rept-imt-lvl2
rept-meas
rept-stat-alm
rept-stat-applsock
rept-stat-as
rept-stat-assoc
rept-stat-card
rept-stat-cdl
rept-stat-cdt
rept-stat-clk
rept-stat-cluster

rept-stat-db
rept-stat-ddb
rept-stat-deir
rept-stat-dlk
rept-stat-dstn
rept-stat-e1
rept-stat-enet
rept-stat-enum
rept-stat-gpl
rept-stat-imt
rept-stat-ipconn
rept-stat-iptps
rept-stat-j1
rept-stat-lfs
rept-stat-lnp
rept-stat-ls
rept-stat-meas
rept-stat-mfc
rept-stat-mon
rept-stat-mps
rept-stat-mux
rept-stat-rtd
rept-stat-rte
rept-stat-rtkey
rept-stat-rtx
rept-stat-sccp
rept-stat-seas
rept-stat-seculog
rept-stat-sfapp
rept-stat-sflog
rept-stat-sfthrot
rept-stat-sip
#unique_441

rept-stat-slk
rept-stat-sys
rept-stat-t1
rept-stat-trbl
rept-stat-trm
rept-stat-tstslk
rept-stat-user
rept-stat-xlist
rls-alm
rmv-card
rmv-imt
rmv-trm
rst-dstn
rst-imt
rst-trm
rtrv-acg-mic
rtrv-acg-noc
rtrv-ainpopts
rtrv-aiqopts
rtrv-appl-rtkey
rtrv-as
rtrv-assoc
rtrv-atinpopts
rtrv-atm-lps
rtrv-atm-prm
rtrv-attr-seculog
rtrv-bip
rtrv-card
rtrv-cat2-gta
rtrv-cat2-imsi
rtrv-clkopts
rtrv-cmd
rtrv-cmdclass

rtrv-csl
rtrv-cspc
rtrv-ctrl-feat
rtrv-data-rtdb
rtrv-dconn
rtrv-deiropts
rtrv-dlk
rtrv-dstn
rtrv-e1
rtrv-eisopts
rtrv-enum-acl
rtrv-enumopts
rtrv-enum-prof
rtrv-enum-profsel
rtrv-feat
rtrv-frm-pwr
rtrv-ftp-serv
rtrv-gen-name
rtrv-gpl
rtrv-gserv-data
rtrv-gsmmap-scrn
rtrv-gsm-msg
rtrv-gsmopts
rtrv-gsmsmsopts
rtrv-gsms-opcode
rtrv-gsmssn-scrn
rtrv-gta
rtrv-gtcnv
rtrv-gtmod
rtrv-gtt
rtrv-gttact
rtrv-gttapath
rtrv-gttaset

rtrv-gttssel
rtrv-gttset
rtrv-gtw-stp
rtrv-gtwy-acthresh
rtrv-gtwy-prmtrs
rtrv-gws-actset
rtrv-gws-redirect
rtrv-homern
rtrv-home-smsc
rtrv-inpopts
rtrv-ip-card
rtrv-ip-conn
rtrv-ip-host
rtrv-ip-lnk
rtrv-ip-node
rtrv-ip-rte
rtrv-is41-msg
rtrv-is41opts
rtrv-is41smsopts
rtrv-isup-msg
rtrv-j1
rtrv-l2t
rtrv-l3t
rtrv-lbp
rtrv-lnpopts
rtrv-lnp-serv
rtrv-log
rtrv-loopset
rtrv-ls
rtrv-m2pa-tset
rtrv-map
rtrv-mate-stp
rtrv-measopts

rtrv-meas-sched
rtrv-mrn
rtrv-mtc-measopts
rtrv-na
rtrv-netopts
rtrv-npp-as
rtrv-npp-serv
rtrv-npp-srs
rtrv-obit
rtrv-pct
rtrv-ppsopts
rtrv-prefix
rtrv-rmt-appl
rtrv-rte
rtrv-rtx
rtrv-sccp-msg
rtrv-sccpopts
rtrv-sccp-serv
rtrv-scr-aftpc
rtrv-scr-blkdpc
rtrv-scr-blkopc
rtrv-scr-cdpa
rtrv-scr-cgpa
rtrv-scr-destfld
rtrv-scr-dpc
rtrv-scr-isup
rtrv-scr-opc
rtrv-scrset
rtrv-scr-sio
rtrv-scr-tt
rtrv-seas-config
rtrv-secu-dflt
rtrv-seculog

rtrv-secu-trm
rtrv-secu-user
rtrv-serial-num
rtrv-sfappopts
rtrv-sg-opts
rtrv-shlf
rtrv-sid
rtrv-sip-npp
rtrv-sipopts
rtrv-slk
rtrv-slt
rtrv-snmp-host
rtrv-snmppopts
rtrv-spc
rtrv-srvsel
rtrv-ss7opts
rtrv-ss-appl
rtrv-stp
rtrv-stpopts
rtrv-subnetid
rtrv-t1
rtrv-tatr-msg
rtrv-tatropts
rtrv-tbl-capacity
rtrv-th-alm
rtrv-tifopts
rtrv-tps
rtrv-trbl
rtrv-trbltx
rtrv-trm
rtrv-tt
rtrv-ttmap
rtrv-ttr-msg

rtrv-ttropts
rtrv-uaps
rtrv-uim-acthresh
rtrv-user
rtrv-vendid
rtrv-vflx-cd
rtrv-vflx-opts
rtrv-vflx-rn
rtrv-vflx-vmSid
rtrv-vlr-prof
rtrv-vlr-roaming

S

set-date
set-gtwy-acthresh
set-scrrej-prmtrs
set-time
set-uim-acthresh

T

tst-bip
tst-disk
tst-dlk
tst-e1
tst-imt
tst-j1
tst-msg
tst-npp-msg
tst-slk
tst-t1

U

ublk-slk
unhb-alm
unhb-slk
unlock

3.2 Debug Commands

A

act-gedti

act-upgrade

act-ip-lnk

C

chg-bip-fld

chg-bip-rec

chg-ee-card

chg-gedti-card

chg-tbl

chg-upgrade-config

clr-disk-stats

copy-tbl

D

dact-ee

dact-gedti

dact-ip-lnk

dbg-ddb

disp-bip

disp-bp

disp-disk-dir

disp-disk-stats

dlt-ee-flt

disp-mem

disp-trace

dlt-bp

dlt-trace

E

ent-bp

ent-ee-flt

ent-trace

R

rept-stat-ee

rept-stat-gedti

rtrv-ee-card

rtrv-ee-flt

rtrv-upgrade-config

S

send-msg

set-mem

3.3 Pass-Through Commands

A

arp

aslog

assocrtt

C

connmgr

F

ftptest

L

linkinfo

M

msucount

msuroute

msutrace

N

netstat

nslookup

P

pct

ping

S

sctp

sockrtt

soipdata

soiplog

T

traceroute

U

ualog

4

Commands

This chapter describes the command conventions for commands that are not pass-through or debug commands. The commands are listed in alphabetical order.

4.1.1 act-alm-trns

Use this command to transfer all alarm indications from the local office to the remote maintenance center.

Parameters

This command has no parameters.

Example

```
act-alm-trns
```

Dependencies

No other action command can be in progress when this command is entered.

```
2368 E2368 Cmd Rej: System busy - try again later
```

Notes

After this command is entered, use the `rept-stat-alm` command to verify the action.

New alarms cause the local maintenance center audible alarms to sound for a short period.

Output

```
act-alm-trns
```

```
rlghncxa03w 04-01-09:50:17 EST EAGLE 31.3.0  
Alarms transferred to Remote Maintenance Center  
Command Completed.
```

```
;
```

Related Topics

- [dact-alm-trns](#)
- [rept-stat-trm](#)
- [rept-stat-trbl](#)
- [rtrv-obit](#)
- [rtrv-trbl](#)

4.1.2 act-cdl

Use this command to initiate a command driven loopback for testing a signaling link.

Command Driven Loopback is the ability to locally drive a signaling link into a manual line loopback. The data received on the signaling link is echoed (transmitted) back. This is effectively the reverse of the `tst-slk:loopback=lxvr`, which loops the transmitted data back to the receiver.

Parameters

link (mandatory)

SS7 signaling links. The SS7 signaling link to be tested.

Synonym:

port

Range:

a, b, a1 - a31, b1 - b31

Not all card types support all `link` parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have assigned signaling links.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

loopback (optional)

Loopback test type.

Range:

line

payload

Default:

line

Example

```
act-cdl:loc=1205:link=b
```

Dependencies

The card location specified in the `loc` parameter must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The signaling link specified in the `link` parameter must be equipped.

2373 E2373 Cmd Rej: Link is unequipped in the database

LFS processing must be stopped or must be allowed to complete on the specified signaling link before this command can be entered.

2921 E2921 Cmd Rej: LFS must not be running on requested link

The `loopback=payload` parameter is valid only for LIM-ATM and E1-ATM cards.

2922 E2922 Cmd Rej: Link must be SAAL to execute command

Command Driven Loopback testing is not available during upgrade.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

A Command Driven Loopback test cannot be in progress on the specified link when this command is entered.

4246 E4246 Cmd Rej: Command driven loopback in progress

A `tst-slk` command cannot be in progress on the specified link when this command is entered. The `tst-slk` processing must be stopped or must be allowed to complete before this command can be entered

4241 E4241 Cmd Rej: Link test must not be running on requested link

The card location specified in the `loc` parameter must be in the In-Service-Normal (IS-NR) state.

2387 E2387 Cmd Rej: Card is not in service

The card location specified in the `loc` parameter must support Command Driven Loopback testing.

4245 E4245 Cmd Rej: Card does not support command driven loopback

The signaling link specified in the `link` parameter must not be active.

2916 E2916 Cmd Rej: Link must not be active to execute command

The card location specified in the `loc` parameter cannot be reserved by the system.

2376 E2376 Cmd Rej: Specified LOC is invalid

Notes

None

Output

```
act-cdl:loc=1205:link=b
```

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Command Accepted: Command Driven Loopback message is sent.
;

tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
```

```
Command Completed.
```

```
;
```

Related Topics

- [act-lbp](#)
- [dact-cdl](#)
- [dact-lbp](#)
- [rept-stat-cdl](#)
- [tst-slk](#)

4.1.3 act-dlk

Use this command to activate an IP data link and put the link into service. The state of the link is changed from out of service maintenance disabled (OOS-MT-DSBLD) to in service normal (IS-NR).

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
act-dlk:loc=1308
```

Dependencies

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The shelf and card must be equipped.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

2016 E2016 Cmd Rej: <parm_desc> is out of range - <parm>

A card location that is valid and defined in the database must be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

The card in the location specified by the `loc` parameter must be in service.

2387 E2387 Cmd Rej: Card is not in service

The `ipaddr` parameter must specify a valid IP address.

2704 E2704 Cmd Rej: Invalid IPADDR

Notes

None

MTT 2373 deleted per PR 204449 - MB

Output

```
act-dlk:loc=1308
```

```
rlghncxa03w 04-01-17:00:36 EST EAGLE 31.3.0
Activate Link message sent to card.
Command Completed.
```

```
;
```

Related Topics

- [canc-dlk](#)
- [dlt-dlk](#)
- [ent-dlk](#)
- [rept-stat-dlk](#)
- [rtrv-dlk](#)
- [tst-dlk](#)

4.1.4 act-echo

Use this command to force responses from the scroll area of a terminal to be printed to a specified terminal or printer. The command supports one terminal echoing to many terminals or many terminals echoing to one terminal.

Caution:

Exercise restraint in using this command, because excessive echoing can cause a loss of output at the receiving terminal.

Parameters

trm (mandatory)

Serial port number.

Range:

1 - 16

Example

```
act-echo:trm=3
```

Dependencies

Terminal output cannot be echoed to a terminal that is out of service.

2257 E2257 Cmd Rej: Terminal is currently out of service

If a terminal is already echoing to a specified terminal, this command cannot be entered to echo the terminal's output to that same terminal.

2259 E2259 Cmd Rej: Terminal already echoing to specified terminal

Echo is not allowed to the terminal from which the command is issued.

3422 E3422 Cmd Rej: Echo capability not applicable on originating terminal

Echo is not allowed to or from IP User Interface telnet ports (terminals 17-40).

2391 E2391 Cmd Rej: Echo not allowed for telnet terminals

Terminal output cannot be echoed to a terminal that is inhibited.

2256 E2256 Cmd Rej: Terminal is currently inhibited

The `trm` parameter must be specified.

2011 E2011 Cmd Rej: Missing mandatory parameter - <parm>

Notes

This command can be used to echo only command output responses to a terminal. For alarm and network messages to be sent to a terminal, the `chg-trm` command must be used.

To echo output to a destination port, a user must be logged in at the destination port. The following warning message appears in the scroll area of the issuing terminal if echo is attempted to a terminal that has no user logged in:

```
No user logged in at Terminal X. No echo will occur until a user
logs in.
```

where X is the `trm` parameter value specified in the `act-echo` command.

Output

```
act-echo:trm=2
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
act-echo:trm=2
Command entered at terminal #1.
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Scroll Area Output is echoed to terminal 2.
```

Caution: Loss of output may occur if too many terminals are echoed.

;


```
act-echo:trm=3
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
act-echo:trm=3
Command entered at terminal #1.
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Scroll Area Output is echoed to terminal 2.
Scroll Area Output is echoed to terminal 3.
```

Caution: Loss of output may occur if too many terminals are echoed.

;

Related Topics

- [chg-trm](#)
- [dact-echo](#)
- [rept-stat-trm](#)
- [rmv-trm](#)
- [rst-trm](#)
- [rtrv-trm](#)

4.1.5 act-file-trns

Use this command to start a file transfer between the system and a remote computer.

Parameters

loc (optional)

The location of the fixed disk to or from which the file is to be uploaded or downloaded.

Range:

1114, 1116

Active and standby TDM locations

Default:

The active TDM location

retries (optional)

The number of times the system retries a packet before giving up.

Range:

1 - 20

Default:

10

timeout (optional)

The number of seconds the system waits for a packet before sending a negative acknowledgment or retransmitting the previous packet. This parameter also specifies the number of seconds to wait for a transfer initiation message from the remote computer.

Range:

1 - 120

Default:

30

Example

```
act-file-trns:loc=1116
```

Dependencies

The `loc` parameter must specify a TDM card.

2237 E2237 Cmd Rej: Card location must be 1114 or 1116

Only one file transfer can be active at a time.

2221 E2221 Cmd Rej: File transfer in progress

This command cannot be entered on a telnet terminal (IDs 17-40).

4283 E4283 Cmd Rej: Command cannot be executed on a Telnet terminal

Notes

Output messages indicating transfer initiated and transfer terminated (whether successful or not) are sent to the output devices in the Security Administration output group.

When used to output seculog, the `copy-seculog` command sends data to the FTA. Extracting seculog data from the FTA requires:

- A computer with a VT320 or KSR connection to the system
- A communication program that both emulates VT terminals and supports Kermit file transfer
- A spreadsheet program that can import Comma Separated Value (CSV) text files

A PC running ProComm© for Windows and Microsoft Excel© can be used.

Extracting seculog file from the FTA

1. Display the contents of the FTA. Enter `disp-fta-dir:loc=xxxx`.
Where `xxxx` = the active TDM (1114 or 1116)
2. Delete any existing files from the FTA. Enter `dlt-fta:loc=xxxx:all=yes`.
Where `xxxx` = the active TDM (1114 or 1116)
3. Enter the command to send seculog to the FTA. For example: `copy-seculog:slog=act:dloc=stb:dfile="seculog_copy"`
4. Activate the file transfer. Enter `act-file-trns:loc=xxxx`.

Where xxxx = the active TDM (1114 or 1116)

5. Display a list of the files transferred to the FTA. Enter `disp-fta-dir:loc=xxxx`.

Where xxxx = the active TDM (1114 or 1116)

6. Use the `get` command from within the communications program configured to run Kermit in ASCII mode to transfer the desired files (with the `.csv` suffixes) to the PC.

For example:

```
> get seculog_copy.csv
> finish
```

7. After all files are successfully transferred and confirmed, remove the files from the FTA. Enter `dlt-fta:loc=xxxx:all=yes`.

Where xxxx = the active TDM (1114 or 1116)

Output

Normal session output to non-Security Administration user's terminal.

```
act-file-trns:loc=1114:timeout=20:retries=2

rlghncxa03w 04-01-05 14:37:05 EST  EAGLE 31.3.0
act-file-trns:loc=1114:timeout=20:retries=2
Command entered at terminal #1.
;
rlghncxa03w 04-01-05 14:37:05 EST  EAGLE 31.3.0
Awaiting File Transfer with remote.
Please initiate binary Kermit session on local computer
;
rlghncxa03w 04-01-05 14:38:33 EST  EAGLE 31.3.0
File Transfer : 0 file(s) DOWNLOADED from location 1114 successfully
File Transfer : 1 file(s) UPLOADED to location 1114 successfully
File Transfer : Kermit Session terminated NORMALLY
```

Normal session output to Security Administration group terminals.

```
act-file-trns:loc=1114:timeout=20:retries=2

rlghncxa03w 04-01-05 14:40:42 EST  EAGLE 31.3.0
File Transfer : INITIATED on terminal #1
;
rlghncxa03w 04-01-05 14:41:07 EST  EAGLE 31.3.0
File Transfer: 511_byte.bin UPLOADED to location 1114 successfully.
;
rlghncxa03w 04-01-05 14:41:44 EST  EAGLE 31.3.0
File Transfer : terminated NORMALLY on terminal #1
```

Normal session output to Security Administration user's terminal.

```

act-file-trns:loc=1114:timeout=20:retries=2

    rlghncxa03w 04-01-05 14:42:51 EST  EAGLE 31.3.0
act-file-trns:loc=1114:timeout=20:retries=2
Command entered at terminal #1.
;
    rlghncxa03w 04-01-05 14:43:29 EST  EAGLE 31.3.0
File Transfer : INITIATED on terminal #1
;
    rlghncxa03w 04-01-05 14:43:53 EST  EAGLE 31.3.0
Awaiting File Transfer with remote.
Please initiate binary Kermit session on local computer
rlghncxa03w 04-01-05 14:44:19 EST  EAGLE 31.3.0
File Transfer: 511_byte.bin UPLOADED to location 1114
successfully.
;
    rlghncxa03w 04-01-05 14:44:52 EST  EAGLE 31.3.0
File Transfer : 0 file(s) DOWNLOADED from location 1114
successfully
File Transfer : 1 file(s) UPLOADED to location 1114 successfully
File Transfer : Kermit Session terminated NORMALLY
;
    rlghncxa03w 04-01-05 14:45:31 EST  EAGLE 31.3.0
File Transfer : terminated NORMALLY on terminal #1
;

```

Related Topics

- [copy-fta](#)
- [disp-fta-dir](#)
- [dlt-fta](#)

4.1.6 act-flash

Use this command to activate the trial FLASH GPL that is currently running on one target card or on a range of cards.

Parameters

e1oc (optional)

End location. The location of the last card of a range of cards to be activated.

Range:

1101 - 1113, 1115, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318, 3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118

gp1 (optional)

Generic program load. The flash GPL type that is running on the cards in the specified range of cards.

**Note:**

This parameter must be specified for cards that have more than one flash image (GPL).

Range:

xyyyyyyy 1 alphabetic character followed by up to 7 alphanumeric characters.
Valid GPLs are: *blmcap*, *hipr2*, and *multiple*.

Use "gpl=multiple" to simultaneously flash multiple E5-class cards running different GPLs, such as BLMCAP, etc. The command will then flash all E5-class cards in the specified range.

loc (optional)

The location of a single target card.

Range:

1101 - 1113, 1115, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318, 3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118

sloc (optional)

Start location. The location of the first card of a range of cards to be activated.

Range:

1101 - 1113, 1115, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318, 3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118

Example

```
act-flash:loc=1105
```

```
act-flash:sloc=1101:eloc=1112:gpl=blmcap
```

Dependencies

The card, or cards, in the specified location or range of locations for this command must be actively running a flash GPL in *trial* mode.

2172 E2172 Cmd Rej: Command action is out of phase with expected procedure

The allowed cards are E5-ENET-B, E5-E1T1-B, E5-MCAP, or Service Module. Card locations *xy09* and *xy10* (*x* is the frame, *y* is the shelf) can be specified only for MUX cards.

2212 E2212 Cmd Rej: Invalid card type for this command

Each specified card does not have to be defined in the database, but it does have to be aligned on the IMT bus.

2269 E2269 Cmd Rej: Unable to communicate with card at location

If the target card is a MUX card, then both card locations specified in the *sloc* and *eloc* parameters must contain MUX cards on the same IMT bus. For these cards, the bus is implicit based on the specified location. Location *xy09* specifies a MUX A Bus, and location *xy10* specifies a MUX B Bus (*x* is the frame and *y* is the shelf). For example, *sloc=1109:eloc=6109* specifies all MUX cards on the A Bus only;

`sloc=1110:eoloc=6110` specifies all MUX cards on the B Bus only. MUX cards from both the A bus and B bus cannot be flash downloaded simultaneously.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The card must be running an inactive flash GPL when this command is executed.

2172 E2172 Cmd Rej: Command action is out of phase with expected procedure

The provisioning subsystem mode (simple, duplex) must be established prior to executing the command.

2204 E2204 Cmd Rej: Waiting for duplex mode in provisioning subsystem

The `loc` parameter cannot be specified with the `eloc` and `sloc` parameters.

2155 E2155 Cmd Rej: Invalid parameter combination specified

Either the `loc` parameter or the `eloc` and `sloc` parameters must be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `eloc` and `sloc` parameters must be specified together in the command; one parameter cannot be specified without the other parameter.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `sloc` parameter value cannot be greater than the `eloc` parameter value.

2155 E2155 Cmd Rej: Invalid parameter combination specified

MUX cards in the specified `sloc` and `eloc` card locations must be present and able to communicate over the IMT. The cards do not have to be provisioned in the database.

2269 E2269 Cmd Rej: Unable to communicate with card at location

The `gpl` parameter must be specified if the `eloc` and `sloc` parameters are specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `gpl` parameter must be specified for cards that have more than one flash image (GPL).

2155 E2155 Cmd Rej: Invalid parameter combination specified

MUX cards in the locations specified by the `sloc` and `eloc` parameters must be running the specified GPL. If the GPL specified is not multiple, then other cards in the range of locations can be running other GPLs but will not be activated, and only cards that are within the range and running the specified GPL will be activated.

2212 E2212 Cmd Rej: Invalid card type for this command

A card that is the active MASP cannot be specified for the `loc`, `sloc`, or `eloc` parameter.

3949 E3949 Cmd Rej: Specified card cannot be the Active MASP

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

A card location that is valid and defined in the database must be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

MUX cards specified in the `sloc` and `eloc` location parameters must be running the specified general program load (gpl). For other GPLs including multiple, all cards within the range running the specified GPL will be activated.

2272 E2272 Cmd Rej: Invalid GPL type for this command

This command cannot be entered during an Extended Bit Error Rate Test (BERT).

3043 E3043 Cmd Rej: IMT test in progress

The `gpl=multiple` parameter can be specified only if the `sloc` and `eloc` parameters are specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `gpl=multiple` parameter can be specified only if the cards in the locations specified in the `sloc` and `eloc` parameters are E5-class cards.

2155 E2155 Cmd Rej: Invalid parameter combination specified

Notes

None

Output

```
act-flash:loc=1105
```

```

    rlghncxa03w 04-01-04 13:05:05 EST  EAGLE 31.3.0
    FLASH Memory Activation for card 1105 Started.
;

    rlghncxa03w 04-01-04 13:05:05 EST  EAGLE 31.3.0
    FLASH Memory Activation for card 1105 Completed.
;

    rlghncxa03w 04-01-04 13:05:05 EST  EAGLE 31.3.0
    Command Completed.
;
```

```
act-flash:sloc=1101:eloc=1112:gpl=blmcap
```

```

tekelecstp 18-01-15 02:30:23 EST  EAGLE 46.6.0.0.0-71.5.0
    FLASH activation for cards 1101 - 1112 Completed.
    LOC 1101 : PASSED
    LOC 1102 : PASSED
    LOC 1112 : PASSED

    ALL CARD RESULTS PASSED
;
    Command Completed.
;
```

Related Topics

- [clr-imt-stats](#)
- [flash-card](#)
- [init-flash](#)
- [init-imt-gpl](#)
- [rept-imt-info](#)
- [rept-imt-lvl1](#)
- [rept-imt-lvl2](#)
- [tst-imt](#)

4.1.7 act-ftp-trns

Use this command to activate an FTP transfer to send database tables from the system to the customer's FTP server.

**Note:**

This command is not for customer use. It is for Tekelec use only.

Parameters**action (mandatory)**

The operation that the command is to perform.

Range:

put

filetype (mandatory)

The system table type to be transferred.

Range:

all

Transfer all types of tables

enum

Transfer all ENUM tables

exts

Transfer the Extended Statistics table

ip

Transfer all IP tables

gtt

Transfer all Global Title Translation tables

gws
Transfer all Gateway Screening tables

mtp
Transfer all Message Transfer Part tables

vflex
Transfer all V-Flex tables

Example

```
act-ftp-trns:action=put:filetype=gtt
```

Dependencies

This command cannot be entered if another file transfer is already in progress.

3468 E3468 Cmd Rej: FTP Transfer already in progress

The `action` and `filetype` parameters must be specified in the command.

2011 E2011 Cmd Rej: Missing mandatory parameter - <parm>

The FTP Server table must be accessible.

2773 E2773 Cmd Rej: FTP Server table must be accessible

The FTP Server table must contain at least one FTP server entry that specifies the *user* application

2774 E2774 Cmd Rej: FTP Server table entry not found for this APP/IPADDR

An IPSM card must be in service before this command can be entered.

2387 E2387 Cmd Rej: Card is not in service

This command cannot be entered when CAT2 IPSM to OAM syncing is in progress.

3652 E3652 Cmd Rej: IPSM to OAM SYNC in progress

Notes

This command communicates with the *user* application, defined in the FTP Server table. The IP address and server details necessary for an FTP transfer are also stored in the FTP Server table. One such *user* application is the FTP-based Table Retrieve Application (FTRA). Refer to the *FTP-Based Table Retrieve Application (FTRA) User Guide* for assistance.

Output

```
act-ftp-trns:action=put:filetype=ip
```

```
tekelecstp 09-05-06 06:41:17 EST EAGLE 41.0.0
FTP command sent to IPSM card - Processing
;

tekelecstp 09-05-06 06:41:17 EST EAGLE 41.0.0
Copy-table started - tablexxx.tbl
Copy-table COMPLETE.
;
```

```

tekelecstp 09-05-06 06:41:17 EST EAGLE 41.0.0
FTP file transfer started - tablexxx.tbl
FTP file transfer SUCCESSFUL.
;

tekelecstp 09-05-06 06:41:17 EST EAGLE 41.0.0
FTP transfer COMPLETE.
;

```

4.1.8 act-gpl

Use this command to change the status of the trial GPL from “trial” to “approved.” The status of the previously approved GPL is changed to “trial.”

Parameters

gp1 (mandatory)

Generic program load. The name of the GPL identifier to be moved from "trial" to "approved" status on the disk.

Range:

xyyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters. Valid GPLs are:

atmhc—Used by E5-ATM-B cards to allow the card to support up to 3 signaling links.

bldc32—Flash GPL containing a tar image with all code required on E5-MCAP cards to support VxWorks6.9 32-bit application, as in OAMHC69.

bldc64—Flash GPL containing a tar image with all code required on E5-SM8G-B cards for SCCP64, ENUM64, SIP64 and DEIR64 applications.

blmcap—Flash GPL containing a tar image with all code required on E5-MCAP, E5-E1T1-B, E5-MCPM-B, E5-ATM-B, E5-ENET-B, and E5-SM8G-B cards

blslc32—Flash GPL containing a tar image with all code required on SLIC cards for 32-bit application i.e. MCPHC, IPSHC etc.

blslc64—Flash GPL containing a tar image with all code required on SLIC cards for 64-bit application i.e. SCCP64, ENUM64, SIP64 and DEIR64.

blsl932—Flash GPL containing a tar image with all code required on SLIC cards for 32-bit application on VxWorks6.9, as in IPSHC69 and MCPHC69.

deirhc—Used by E5-SM8G-B cards to support the S13/S13' EIR feature.

enumhc—Used by E5-SM8G-B cards to support the ENUM Mobile Number Portability and Tier One Address Resolution application.

erthc—Used by E5-ENET-B cards for EAGLE 5 Integrated Monitoring Support functions

hipr2—Communication software used on the High Speed IMT Packet Router (HIPR2) card

ipsg—Used by E5-ENET-B cards to support the combined functionality of IPLIMx M2PA and IPGWx M3UA

ipsg32—Used by SLIC cards to support IPSTG application with 64-bit addressing either with GTT functionality or without it.

ipshc—Used by E5-ENET-B cards to support the IPS application.

ipshc69—Used by E5-ENET-B and SLIC cards to support the IPS application when running on VxWorks69.

mcphc— Used by E5-MCPM-B cards for the Measurements Platform feature.

mcphc69—Used by E5-MCPM-B and SLIC cards for the Measurements Platform feature when running on VxWorks69.

oamhc—Used by E5-MCAP cards for enhanced OAM functions.

oamhc69—Used by E5-MCAP cards for enhanced OAM functions, when running on VxWorks 69.

sccphc—Used by E5-SM8G-B cards to support EPAP-based features and the LNP ELAP Configuration feature. If no EPAP-based or LNP ELAP Configuration feature is turned on, and an E5-SM8G-B card is present, then the GPL processes normal GTT traffic.

sfapp—Used by SLIC cards to support the Stateful Firewall Application.

siphc— Used by E5-SM8G-B Cards to support the SIP application.

ss7hc—Application GPL used by E5-E1T1-B and SLIC cards to support **E1** and **T1** signaling links.

ver (mandatory)

Version. The version number of the GPL to be activated, with subfields the format of *major-minor-fix* separated by dashes.

Range:

major-minor-fix

Specify a value in the range 0–255 for each subfield of the GPL version number (*major-minor-fix*).

Example

```
act-gpl:gpl=ss7hc:ver=125-1-0
```

```
act-gpl:gpl=deirhc:ver=134-60-0
```

```
act-gpl:gpl=enumhc:ver=135-20-0
```

```
act-gpl:gpl=ipsg32:ver=140-12-0
```

Dependencies

No other activate, change, copy, or retrieve GPL commands, nor a GPL audit, can be in progress when this command is entered.

2412 E2412 Cmd Rej: Command already in progress

The value specified for the `gpl` parameter must be supported. See the `gpl` definition for a list of supported GPLs.

2238 E2238 Cmd Rej: The GPL type entered is not currently supported

Notes

Test the trial GPL by loading to a card before activating the GPL. Activating the GPL changes it from *trial* to *approved*.

The generic program load is committed on the active system and on the standby system.

Trial GPLs are downloaded to cards manually. Only approved GPLs can be downloaded to cards by the system.

Use the `rtrv-gpl` command to determine the version of the GPL.

Output

The output indicates that the specified GPL is activated on each TDM card.

```
act-gpl:gpl=ss7hc:ver=125-1-0
```

```
tekelecstp 05-01-03 16:53:23 EST EAGLE5 33.0.0
SS7HC activate to 1114 completed
SS7HC activate to 1116 completed
;
```

The output indicates that the specified GPL is activated on each TDM card.

```
act-gpl:gpl=deirhc:ver=134-60-01
```

```
tekelecstp 13-03-15 19:08:39 EST EAGLE 45.1.0
DEIRHC activate to 1114 completed
DEIRHC activate to 1116 completed
;
```

```
act-gpl:gpl=enumhc:ver=135-20-0
```

```
tekelecstp 14-05-20 14:18:32 EST EAGLE 46.1.0
ENUMHC activate to 1114 completed
ENUMHC activate to 1116 completed
;
```

```
act-gpl:gpl=ipsg32:ver=140-12-0
```

```
tekelecstp 12-08-16 09:35:00 EST EAGLE 46.5.0
IPSG32 activate to 1114 completed
IPSG32 activate to 1116 completed
;
```

The number of "cards of x complete" represents the total number of cards that can communicate on the IMT at the instant that this information is displayed.

```
act-gpl:gpl=hipr2:ver=135-041-000
```

```
act-gpl:gpl=hipr2:ver=135-041-000

tekelecstp 15-04-16 11:12:45 EST EAGLE5 46.2.0-65.42.0
5575.1104 CARD 1107,A INFO IP Connection Failed
tekelecstp 15-04-16 11:12:49 EST EAGLE5 46.2.0-65.42.0
act-gpl:gpl=hipr2:ver=135-041-000
Command entered at terminal #20.
;
```

```
Command Accepted - Processing
  tekelecstp 15-04-16 11:12:50 EST  EAGLE5 46.2.0-65.42.0
  HIPR2 activate on 1116 completed
  HIPR2 activate on 1114 completed
;
```

Related Topics

- [chg-gpl](#)
- [copy-gpl](#)
- [rept-stat-gpl](#)
- [rtrv-gpl](#)

4.1.9 act-lbp

Use this command to activate one or more loopback point tests for testing data signaling link elements in an SS7 transmission path. Use this command to:

- Activate a test for a specified loopback point that is defined in the LFS database table
- Activate a test for one loopback point that is not defined in the LFS database table
- Activate tests for all loopback points that have been defined in the LFS database table. See [Summary of Loopback Testing Commands and Functions](#) for information about loopback testing commands and functions.

The `ent-lbp` command can be used to define a maximum of 32 loopback points in the LFS database table.

Parameters

To activate a test for a single loopback point that is defined in the LFS database table, specify the loopback point number in the `lbp` parameter and do not specify the `lfst`, `rle`, `rep`, or `clli` parameter in the command. Information from the LFS database is used to activate the test for the specified loopback point.

To activate a test for a single loopback point that is not defined in the LFS database table, specify one or more of the `lfst`, `rle`, `rep`, and `clli` parameters in the command. (If the `clli` parameter is not specified, then the value is blank, a null string. If the `rep` parameter is not specified, the default value is `0`.)

To activate tests for all loopback points defined in the LFS database, do not specify the `lbp`, `lfst`, `rle`, `rep`, or `clli` parameter in the command. Information from the LFS database table is used to activate tests for all defined loopback points.

link (mandatory)

SS7 signaling link. The SS7 signaling link to be tested.

Synonym:
port

Range:

a, b, a1 - a31, b1 - b31

Not all card types support all link parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have assigned signaling link ports.

loc (mandatory)

The location of the card containing the signaling link to use for loopback point testing.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

c11i (optional)

Common language location identifier. The CLLI code or other mnemonic identifier, used to refer to the given loopback point.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 10 alphanumeric characters

Default:

If the *rle*, *lfst*, or *rep* parameter is specified—null string (blank)

If the *rle*, *lfst*, or *rep* parameter is not specified—the value in the LFS database

data (optional)

The data used with the *octet* or *alternate* patterns.

Range:

1 - 255

Default:

255

force (optional)

The *force=yes* parameter must be specified to start a test when there are 256 or more tests already running.

Range:

yes

no

Default:

no

lbp (optional)

Loopback point ID. A far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to and including the target device).

Range:

1 - 32

Default:

If the `rle`, `clli`, `rep`, or `lfst` parameter is specified, the default is 1.

If the `rle`, `clli`, `rep`, or `lfst` parameter is not specified, the default is all loopback points found in the LFS database (up to 32 loopback points), as shown in the `rtrv-lbp` command output.

lfst (optional)

Link fault sectionalization test.

**Note:**

This parameter is mandatory if the `rle`, `clli`, or `rep` parameter is specified.

Range:**llt**

latching loopback test; a software latch is set at the test point to reverse everything that is received and return it to the sender until the test is complete

mlt

manual latch loopback test; an external hardware latch is set to reverse everything that is received and return it to the sender until the test is complete (for equipment that cannot set a software latch for the test)

nlt

nonlatching loopback test; no permanent latch is set. Loopback codes are alternated with test data until the test is complete.

Default:

The value in the LFS database, as shown in the `rtrv-lbp` command output

maxerr (optional)

Bit error threshold. This parameter specifies the actual number of errors allowed for a specific time period during which loopback testing is being performed. If this threshold is exceeded, the `TEST STATUS` field in the output report indicates an error.

Range:

0 - 4838400

Default:

56

pattern (optional)

This parameter specifies the type of test pattern used to perform the LFS test.

Range:**b2047**

047-bit BERT pattern sent until it is stopped by software

b511

511-bit BERT pattern sent until it is stopped by software

octet

Data (from the `data` parameter) sent continuously until it is stopped by software

alternate

Alternately, a count of 100 octets of the specified data (from the `data` parameter) followed by 100 octets of 0, sent until it is stopped by the software

The `octet` and `alternate` values are valid only when `lfst=llt` is specified.

Default:

`b2047`

rep (optional)

Repetition count. The number of link elements of the same type (not including the target device) that lie between the STP and the link element to be tested.

Range:

`0 - 31`

Default:

If the `rle`, `clli`, `rep`, or `lfst` parameter is specified, the default is `0`.

If the `rle`, `clli`, `rep`, or `lfst` parameter is not specified, the default is the value in the LFS database, as shown in the `rtrv-lbp` command output.

rle (optional)

Remote link element. The link element to be looped back for testing.

 **Note:**

This parameter is mandatory if the `lfst`, `clli`, or `rep` parameter is specified.

Range:

`ds0`

`ocu`

`csu`

`dsu`

`nei`

Default:

The value from the LFS database, as shown in the `rtrv-lbp` command output

time (optional)

The length of time the test must be run in order to determine success or failure. If the number of errors that actually occur during this time exceeds the threshold set by the `maxerr` parameter, the loopback test is identified as a failure.

Range:

1 - 240000

hhmmss—*hh*=hours (00-24), *mm*=minutes (00-59), *ss*=seconds (00-59)

For example, *time=1* or *time=000001* is one second; *time=240000* is 24 hours; *time=200* or *time=000200* is 2 minutes

Default:

1 second

Example

Activate tests for all loopback points that are defined in the LFS database table:

```
act-lbp:loc=1205:link=b:pattern=alternate:maxerr=10:time=000200
```

Activate a test for a single loopback point that is not defined in the LFS database table:

```
act-lbp:loc=1205:link=b:lbp=1:rle=ds0:lfst=llt:clli=rlghncxa05w
```

```
act-
```

```
lbp:loc=1205:link=b:lbp=1:rle=ds0:lfst=llt:clli=rlghncxa05w:pattern=
octet:data=h'ff
```

```
act-
```

```
lbp:loc=1205:link=b:lbp=1:rle=ds0:lfst=llt:clli=rlghncxa05w:maxerr=4
0:time=12000
```

Activate a test for a single loopback point that is defined in the LFS database table:

```
act-
```

```
lbp:loc=1205:link=b:lbp=3:pattern=alternate:maxerr=10:time=000200
```

Dependencies

The Link Fault Sectionalization (LFS) feature must be on before this command can be entered.

2870 E2870 Cmd Rej: LFS feature must be ON

If the `rle=nei` parameter is specified, the `rep=0` parameter must be specified.

2895 E2895 Cmd Rej: REP must be zero if link element to be tested is NEI

The `rep` parameter can be specified only if the `lfst=llt` parameter is specified.

2897 E2897 Cmd Rej: REP is only valid if LFST is defined as LLT

The `rle=ds0` or the `rle=nei` parameter cannot be specified if the `lfst=nlt` parameter is specified. The DS0 and Network Element Interface (NEI) link elements do not support non-latching loopbacks.

2896 E2896 Cmd Rej: DS0 and NEI link elements do not support non-latching tests

If one or more of the `rle`, `rep`, `lfst`, or `clli` parameters are specified, the database is not used to look up their values; therefore, the `lfst` and `rle` parameters must be specified when the `rep` or `clli` parameter is specified.

2910 E2910 Cmd Rej: RLE and LFST must be specified when database is not used

The `data` parameter can be specified only if the `pattern=octet` parameter or `pattern=alternate` parameter is specified.

2909 E2909 Cmd Rej: LFS data is only valid for OCTET and ALTERNATE patterns

The `pattern=octet` and `pattern=alternate` parameters cannot be specified for non-latching tests (`rle=nl`).

2911 E2911 Cmd Rej: OCTET and ALTERNATE are not valid for non-latching test

The card location (`loc` parameter) must contain a provisioned and equipped E5-E1T1-B card, provisioned with the LIMT1 card type, running the SS7ANSI or CCS7ITU application.

2025 E2025 Cmd Rej: Invalid card location

The card in the `loc` parameter location must be in the In-Service-Normal state.

2387 E2387 Cmd Rej: Card is not in service

The signaling link that is used for LFS testing must be equipped, and must be deactivated before this command is entered.

2916 E2916 Cmd Rej: Link must not be active to execute command

The loopback points (LBPs) must have been previously defined in the database.

2901 E2901 Cmd Rej: LBP must have been previously defined in database

Only one LFS test can be active on a signaling link at a time.

2905 E2905 Cmd Rej: LFS command in progress

This command cannot be entered for a signaling link LFS test when the maximum number of LFS tests are active for the card. At least one LFS test must complete before this command can be entered again.

2924 E2924 Cmd Rej: LOC has maximum number of LFS Tests already in progress

Up to 8 LFS tests at a time can be active on an E5-E1T1-B card used as a T1 card.

2924 E2924 Cmd Rej: LOC has maximum number of LFS Tests already in progress

This command cannot be entered when the maximum combined total number of LFS and link tests (1024) are in progress in the system. At least one test must complete before this command can be entered again.

2905 E2905 Cmd Rej: LFS command in progress

The `force=yes` parameter must be specified to activate a test when there are 256 or more tests already running in the system.

3799 E3799 Cmd Rej: FORCE=YES must be specified

The specified signaling link must not be running a `tst-slk` test when this command is entered. The `tst-slk` test must be stopped or allowed to complete before this command can be entered for the link.

4241 E4241 Cmd Rej: Link test must not be running on requested link

The specified signaling link must not be in Command Driven Loopback (CDL) when this command is entered. The link must be removed from CDL before this command can be entered for the link.

4242 E4242 Cmd Rej: Requested link must not be in command driven loopback

This command cannot be entered for a link that is already blocked by another link diagnostic test. The test must be canceled or allowed to complete before this command can be entered for the link.

N/A N/A

LFS testing is not available during upgrade.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

The maximum number of loopback point entries allowed in the LFS table is 32.

2923 E2923 Cmd Rej: Maximum number of link tests already in progress

Notes

This command is not supported for E5-ATM-B cards.

If an LFS test is aborted by a card reset, it can leave the remote far-end loopback condition active. Use the `dact-lbp` command to cancel LFS tests.

The E5-E1T1-B cards support this command on up to 8 T1 channels at a time; the command is not supported for E1.

The test can terminate with the status "ERROR, bit error exceeded threshold" for two reasons.

- The number of cumulative bit errors exceeds the specified `maxerr` parameter value.
- The number of bit errors for one second reaches or exceeds 255, without considering the `maxerr` parameter value.

Output

The LFS report is displayed when the LFS test completes.

This example shows how the test failed because the bit error rate exceeded the threshold. The `maxerr=10` parameter is used for a test time of 2 minutes. Because more than 10 errors occurred within 2 minutes, the test is considered a failure and the TEST STATUS field displays the cause. The parameter values are applied to each loopback point. The `maxerr` value is per test, not cumulative for all tests.

```
act-lbp:loc=1205:link=b:pattern=alternate:maxerr=10:time=002000
```

```
tekelecstp 05-01-21 17:00:36 EST  EAGLE5 33.0.0
LOC = 1205  Link = B  LSN = 1s11345678  Start time = 11:10:34

PATTERN = ALTERNATE  DATA= FF  MAXERR = 10  TIME = 00:02:00

TEST STATUS = ERROR, bit error exceeded threshold.
LBP  CLLI          RLE  REP  LFST  BIT_ERROR  ERRORED_SEC  DURATION
2    rlghncxa05w  DS0  0    LLT   0          0            00:02:00
3    -----      OCU  0    NLT   8          2            00:02:00
```

```

5 ----- NEI 0 LLT 15 1 00:01:20
;

```

In this example, the test failed because the loopback could not be established.

```
act-lbp:loc=1205:link=b:pattern=alternate:maxerr=10:time=000200
```

```

tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
LOC = 1205 Link = B LSN = ----- Start time = 11:10:34

PATTERN = ALTERNATE DATA= FF MAXERR = 10 TIME = 00:02:00
TEST STATUS = ERROR, loopback was not established.

LBP CLLI          RLE REP LFST BIT_ERROR ERRORED_SEC DURATION
1   rlghncxa05w  DS0 0  LLT  0           0           00:00:00
;

```

Legend

- **LOC**—Card location that contains the signaling being tested
- **LINK**—Signaling link that is being tested on the card
- **LSN**—Name of the linkset that contains the link being tested
- **Start time**—Time that the test started
- **PATTERN**—Type of test pattern used to perform the LFS test
- **DATA**—Data used with the octet or alternate patterns
- **MAXERR**—Bit error threshold; actual number of errors allowed for the specific time period during which loopback testing is being performed. If this threshold is exceeded in the specified time period, the *TEST STATUS* field in the output report indicates an error.
- **TIME**—Specified length of time to run the test in order to determine success or failure. If the number of errors that actually occur during this time exceeds the threshold set by the `maxerr` parameter, the loopback test is identified as a failure.
- **TEST STATUS**—Any one of the following *TEST STATUS* values can appear:
 - PASS
 - ERROR, LFS HARDWARE is not available.
 - ERROR, loopback could not be established.
 - ERROR, bit error exceeded threshold.
 - ERROR, LFS test aborted.
 - ERROR, LFS hardware failed.
- **LBP**—Loopback point used to perform the LFS test
- **CLLI**—Common Language Location Identifier (CLLI) code, or other mnemonic identifier, used to refer to the given loopback point
- **RLE**—Remote link element to be looped back for testing

- **REP**—Repetition count. The number of link elements of the same type (not including the target device) that lie between the STP and the link element to be tested.
- **LFST**—Type of link fault sectionalization loopback test to be performed
- **BIT_ERROR**—The number of bit errors observed during the test
- **ERRORED_SEC**—The number of seconds that contained bit errors during the test. (Bit errors are sampled once per second; each sample that contains bit errors adds one second to this count.)
- **DURATION**—Length of time that the test actually ran for the loopback point. For successful test, the TIME and the DURATION should be the same. If a test ran for less than the specified amount of time, the DURATION will be less than the TIME.

Related Topics

- [chg-lbp](#)
- [dact-lbp](#)
- [dlt-lbp](#)
- [rept-stat-lfs](#)
- [rtrv-lbp](#)

4.1.10 act-lg-card

Use this command to activate LG event generation/reception on a given LG card

The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

dir (optional)

The direction in which the event generation or reception is to be activated.

Range:

Rx
Receive Direction

Tx
Transmit Direction

All
Both in Tx and Rx directions

Default:*All***Example**

```
act-lg-card:loc=1302
act-lg-card:loc=1302:dir=tx
act-lg-card:loc=1302:dir=rx
```

Dependencies

The card location must not be 1113-1118, xy09, or xy10 where x is the frame and y is the shelf.

2154 E2154 Cmd Rej: Card slot reserved by system

The LG Card table is corrupt or cannot be found.

5222 E5222 Cmd Rej: Unable to read LG Card table

The card location specified in the `loc` parameter must be of a provisioned LG card.

5239 E5239 Cmd Rej: LG card not defined

Loc is mandatory

2379 E2379 Cmd Rej: Missing parameter

Activating the state of an LG object that is already activated or deactivating the state of an LG object that is already deactivated has no effect.

3827 E3827 Cmd Rej: No change requested

Output

None.

Related Topics

- [chg-lg-card](#)
- [dact-lg-card](#)
- [dlt-lg-card](#)
- [ent-lg-card](#)
- [rept-stat-lg](#)
- [rtrv-lg-card](#)

4.1.11 act-lg-engine

Use this command to activate LG event generation/reception on an LG engine hosted on a LG card.

The command class is `TKLC_INTERNAL` inheriting properties of `DEBUG` class. The Load Generator is supported on `IPSG`, `IPLHC`, `IPGHC` and `SS7HC` GPLs.

Parameters

dir (optional)

Traffic Direction.

Range:

Rx

Receive Direction

Tx

Transmit Direction

All

Both in Tx and Rx directions

Default:

All

engine (optional)

Range:

ayyyyyyyyy

Up to 10 alphanumeric characters; the first character must be a letter.

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

test (optional)

Send Single MSU

Range:

yes

Example

```
act-lg-engine:loc=1301
```

```
act-lg-engine:engine=txengine1
```

```
act-lg-engine:loc=1301:dir=tx
```

```
act-lg-engine:engine=txengine1:test=yes
```

Dependencies

The engine name specified must pre-exist in the LG Engine table.

5209 E5209 Cmd Rej: LG Engine not defined

The `loc` parameter cannot be specified with the `engine` parameter.

2155 E2155 Cmd Rej: Invalid parameter combination specified

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The card location specified in the `loc` parameter must be of a provisioned LG card.

5239 E5239 Cmd Rej: LG card not defined

DIR parameter can only be specified along with LOC parameter.

2379 E2379 Cmd Rej: Missing parameter

Activating the state of an LG object that is already activated or deactivating the state of an LG object that is already deactivated has no effect.

3827 E3827 Cmd Rej: No change requested

Test parameter can only be specified with Tx engine.

5271 E5271 Cmd Rej: Test cannot be specified if Engine is RxEngine

Output

None.

Related Topics

- [chg-lg-engine](#)
- [dact-lg-engine](#)
- [dlt-lg-engine](#)
- [ent-lg-engine](#)
- [rept-stat-lg](#)
- [rtrv-lg-engine](#)

4.1.12 act-lg-grp

Use this command to activate event generation/reception for a LG group. The command class is `TKLC_INTERNAL` inheriting properties of `DEBUG` class. The Load Generator is supported on `IPSG`, `IPLHC`, `IPGHC` and `SS7HC` GPLs.

Parameters

grp (mandatory)

Range:

aaaaaaaa Up to 10 alphanumeric characters; the first character must be a letter

dir (optional)

The direction in which the event generation or reception is to be activated.

Range:

Rx
Receive Direction

Tx
Transmit Direction

All
Both in Tx and Rx directions

Default:

All

Example

```
act-lg-grp:grp=lgroup1:dir=tx
```

```
act-lg-grp:grp=lgroup1:dir=rx
```

```
act-lg-grp:grp=lgroup2
```

Dependencies

The group name specified must pre-exist in the LG Group table

5207 E5207 Cmd Rej: LG Group not defined

The LG Group table is corrupt or cannot be found.

5221 E5221 Cmd Rej: Unable to read LG Group table

The `grp` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

Activating the state of an LG object that is already activated or deactivating the state of an LG object that is already deactivated has no effect.

3827 E3827 Cmd Rej: No change requested

Output

None.

Related Topics

- [dlt-lg-grp](#)
- [ent-lg-grp](#)
- [rept-stat-lg](#)
- [rtrv-lg-grp](#)

4.1.13 act-lg-sys

Use this command to activate the LG event generation/reception on all LG cards configured in the system.

The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSP, IPLHC, IPGHC and SS7HC GPLs.

Parameters

dir (mandatory)

The direction in which the traffic is generated.

Range:

Rx

Receive Direction

Tx

Transmit Direction

All

Both in Tx and Rx Directions

Default:

all

Example

```
act-lg-sys:dir=tx
act-lg-sys:dir=rx
act-lg-sys:dir=all
```

Dependencies

The LG System table is corrupt or cannot be found.

5220 E5220 Cmd Rej: Unable to read LG System table

dir is mandatory

2379 E2379 Cmd Rej: Missing parameter

Activating the state of an LG object that is already activated or deactivating the state of an LG object that is already deactivated has no effect.

3827 E3827 Cmd Rej: No change requested

Output

None.

Related Topics

- [dact-lg-sys](#)
- [rept-stat-lg](#)
- [rtrv-lg-sys](#)

4.1.14 act-lpo

Use this command to force a processor outage on the specified link. The system begins sending link status signal units (LSSUs) with a status of SIPO to the adjacent

signaling point. Level 2 status remains in service, except when the link is an ATM high-speed signaling link.



Note:

The signaling link's blocked status is not preserved across a LIM reboot.

Parameters

link (mandatory)

The signaling link on the card specified in the `loc` parameter. The links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all link parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have assigned signaling links.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
act-lpo:loc=1101:link=a
```

```
act-lpo:loc=1102:link=a40
```

Dependencies

A card location that is valid and defined in the database must be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

This command is not valid for cards running the IPGHC GPL.

3837 E3837 Cmd Rej: Command not valid for IPGHC

The card must contain signaling links.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

The signaling link must be equipped in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

This command is not valid for links belonging to proxy linksets.

4693 E4693 Cmd Rej: Command not allowed for proxy links

The value specified for the `loc` parameter must refer to one of the following cards, and the referenced card must be equipped:

- E5-E1T1-B card running the SS7ANSI or CCS7ITU application
- E5-ATM-B card running the ATMANSI or ATMITU application
- E5-ENET-B card running the IPLHC or IPSG application

2144 E2144 Cmd Rej: Location invalid for hardware configuration

An appropriate value must be specified for the `link` parameter when an ATM card is used:

- `a-a1, b`—E5-ATM-B card running the ATMANSI or ATMITU application

2972 E2972 Cmd Rej: Specified Link is not valid for Card and Appl Type

The `act-lpo` command is not supported for ITU-N16 links.

2810 E2810 Command Rejected: Command is not valid for ITU-N16 links

This command is not valid for IPSG-M3UA signaling links.

4813 E4813 Cmd Rej: Command not valid for IPSG-M3UA.

Notes

The function of this command is the same as the `blk-slk` command.

This command generates an alarm.

If this command is followed by the `init-card` command, the local processor outage is not preserved after the `init-card` command completes.

The *Installation Guide* provides an illustration of card locations.

If the `blk-slk` or `act-lpo` command is issued for an IPSG signaling link, then an MTP3 local processor outage is initiated.

Output

```
act-lpo:loc=1101:link=a
```

```
tekelecstp 05-01-21 17:00:36 EST  EAGLE5 33.0.0
Local processor outage being set.
```

```
tekelecstp 05-01-21 17:00:36 EST  EAGLE5 33.0.0
* 0014.0208 * SLK 1101,A nc00027 slk local blocked
```

```
act-lpo:loc=1102:link=a40
```

```
tekelecstp 16-05-27 17:00:36 EST  EAGLE 69.1.0
Local processor outage being set.
```

```
tekelecstp 16-05-27 17:00:36 EST EAGLE 69.1.0
* 0014.0208 * SLK 1101,A40 lsna40 slk local blocked
```

Related Topics

- [blk-slk](#)
- [canc-lpo](#)
- [rept-stat-slk](#)
- [ublk-slk](#)

4.1.15 act-slk

Use this command to change the link from OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) to IS-NR (In-Service-Normal).



Note:

The signaling link's activated status is preserved across a card reboot.

Parameters

link (mandatory)

The signaling link on the card specified in the `loc` parameter. The links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a31, b - b31

Not all card types support all link parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have a location specified in the `loc` parameter.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
act-slk:loc=1301:link=a
```

Dependencies

The value specified for the `loc` parameter must refer to one of the following cards, and the referenced card must be equipped:

- E5-E1T1-B, card running the SS7ANSI or CCS7ITU application
- E5-ATM-B card running the ATMANSI or ATMITU application
- E5-ENET-B card running the IPGWI, IPLIMI, IPSTG, or SS7IPGW application
- E5-ENET-B or SLIC card running the IPSTG application

2144 E2144 Cmd Rej: Location invalid for hardware configuration

This command cannot be entered while the `test-slk` command is in progress.

2106 E2106 Cmd Rej: Link is in test mode

A card location that is defined in the database must be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

The card must contain signaling links.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The specified signaling link must be provisioned in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

An appropriate value must be specified for the `link` parameter when an ATM card is used:

- *a-a1, b*— E5-ATM-B card running the ATMANSI or ATMITU application

2972 E2972 Cmd Rej: Specified Link is not valid for Card and Appl Type

A link cannot be activated if the `test-j1` command is in progress on the same port on which the particular link being activated is configured.

3144 E3144 Cmd Rej: J1 Port test command in progress.

This command is not valid for IPSTG-M3UA signaling links.

4813 E4813 Cmd Rej: Command not valid for IPSTG-M3UA.

Notes

Installation Guide provides an illustration of card locations.

If Port A32-A63 and B32-B63 is configured when card is not in IS-NR state, then the card won't come up if it's NON-SLIC card.

Output

```
act-slk:loc=1301:link=a
```

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0  
Activate Link message sent to card  
;
```

Related Topics

- [blk-slk](#)
- [dact-slk](#)
- [dlt-slk](#)
- [ent-slk](#)
- [inh-slk](#)
- [rept-stat-slk](#)
- [rtrv-slk](#)
- [tst-slk](#)
- [ublk-slk](#)
- [unhb-slk](#)

4.1.16 act-upgrade

Use this command to perform a software upgrade from a source release to the target release on an in-service system.

Caution:

It is strongly recommended that this command be used only in conjunction with the system Upgrade Procedure for your target release. The Upgrade Procedure provides step-by-step information on performing an upgrade.

Parameters

action (mandatory)

The action to be performed for the upgrade process.

Caution:

The `converttoam` and `netcomplete` actions should be used only under the direction of My Oracle Support (MOS).

Range:

yyyyyyyyyy

Up to 10 alphabetic characters. Valid actions are:

- *chkrel*—Validates the stored upgrade target release on the physical disk as specified by the `src` parameter.
- *convertoam*—Converts the standby OAM database.
- *convertstp*—Performs all OAM and network conversions necessary for an upgrade. This command transitions through all of the upgrade phases to upgrade completion. If measurement collection is turned on, this command automatically inhibits measurements during the upgrade. Upon completion of the upgrade, this command returns the MASPs to full-function mode with measurement collection turned back on.
- *createsets*—Assigns network cards to upgrade-grouping sets.
- *dbstatus*—Reports the status of all database partitions on the TDM fixed disks and the removable drive(s) (similar to the `rept-stat-db:display=version` command).
- *displaysets*—Reports the upgrade-grouping sets of network cards.
- *getrel*—Retrieves the upgrade target release file from either the EAGLE software release distribution server or the plug-in flash drive. It then expands the data on the inactive partition group of the hard disks.
- *netcomplete*—Indicates upgrade completion and places the system in a fully functional mode.
- *oamcomplete*—Sets the upgrade phase number to 3, and enables the beginning of controlled card loading.
- *refreshsets*—Not yet supported.
- *verifysets*—Verifies that the card set list is consistent with the current EAGLE configuration and displays detailed information on any inconsistencies found.

force (optional)

Allows the user to override Card Set List verification and perform upgrade when only minor inconsistencies are present.

Range:

yes

Override the Card Set List verification and perform the upgrade.

release (optional)

The name of the software release file to be downloaded.

This file contains the upgrade target release on the software release distribution server or plug-in flash drive.

Range:

xxxxxxxxxxxxxxxxxxxxxxxxxxxx

1 alphabetic character followed by up to 29 alphanumeric characters. One or more periods can be used.

 **Note:**

The value must be at least 11 characters in length and must contain a hyphen (-). The format of the value must be *xx.xx.xx-yy.yy.yy*, where *xx.xx.xx* is the release number, and *yy.yy.yy* is the engineering build number.

src (optional)

The physical disk that contains the upgrade target release.

Range:***fixed***

The upgrade target release is on the fixed disk

usb

The upgrade target release is on the removable media inserted in the flush-mount USB port

server

The upgrade target release is on the remote server

thres (optional)

Network Threshold value. The percentage of signaling links that is to remain in service (IS) during the network conversion phase. This enables SCCP thresholding and flashing on non-provisioned cards during the upgrade.

Range:

50 - 90

Default:

Network cards are updated serially

Example

```
act-upgrade:action=convertstp
```

```
act-upgrade:action=dbstatus
```

```
act-upgrade:action=convertstp:thres=75
```

```
act-upgrade:action=getrel:release="46.7.0.0.0-74.2.0.tar.gz":src=usb
```

```
act-upgrade:action=chkrel:src=fixed
```

Dependencies

The value specified for the `action` parameter must correspond to a specific upgrade phase:

- `action=converttoam`—upgrade phase=0 and 1
- `action=oamcomplete`—upgrade phase=2
- `action=convertnet`—upgrade phase=3
- `action=netcomplete`—upgrade phase=3
- `action=convertstp`—upgrade phase=0-3

2172 E2172 Cmd Rej: Command action is out of phase with expected procedure

The Measurements Collection function must be turned off (`chg-meas:collect=off`) or the Measurements Platform feature must be turned on (`chg-measopts:platformenable=on`) before a value of *convertoam*, *oamcomplete*, or *netcomplete* can be specified for the `action` parameter.

2160 E2160 Cmd Rej: Measurements collect must be off

A valid upgrade release must reside on the plug-in flash drive or the inactive partition of the fixed disk.

2962 E2962 Cmd Rej: <Device> is <condition>

The standby OAM database must be the source release.

2180 E2180 Cmd Rej: Current stbby OAM db is not supported for this upgrade

The current OAM database must be the source release.

2179 E2179 Cmd Rej: Current actv OAM db is not supported for this upgrade

The database partition must be coherent.

2967 E2967 Cmd Rej: Active OAM database is incoherent

The database partition must be in the correct functional mode.

2172 E2172 Cmd Rej: Command action is out of phase with expected procedure

The `action=convertstp` and `thres` parameters must be specified together in the command.

3443 E3443 Cmd Rej: THRES parm and action=CONVERTSTP must be specified together

Upgrade conversion cannot be initiated from a telnet-type terminal (terminal IDs 17-40).

4283 E4283 Cmd Rej: Command cannot be executed on a Telnet terminal

The DCM cards are obsolete for SS7IPGW, IPGWI, IPLIM, and IPLIMI applications.

2105 E2105 Cmd Rej: Invalid card TYPE and APPL load type combination

The `action=getrel` and `release` parameters must be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

An IPSM card must be provisioned and in service before a value of *getrel* or *chkrel* can be specified for the `action` parameter.

2387 E2387 Cmd Rej: Card is not in service

The `ent-ftp-serv:app=dist` command must be entered before a value of *getrel* or *chkrel* can be specified for the `action` parameter.

2774 E2774 Cmd Rej: FTP Server table entry not found for this APP/IPADDR

The `act-upgrade:action=convertstp` cannot be issued with any removable media inserted in any of the USB ports.

4851 E4851 Cmd Rej: Removable media can not be inserted

Invalid hardware configuration alarms are set or an HMUX alarm must be addressed.

3908 E3908 Cmd Rej: Invalid OAM HW config or an HMUX card is out of service

All cards that are in the auto-inhibited state must be removed before this command can be entered.

3444 E3444 Cmd Rej: Upgrade prevented due to auto-inhibited card

Cards that prevent the IMT buses from being inhibited during the upgrade cannot exist in the system.

2738 E2738 Cmd Rej: Can not inhibit IMT bus - alternate bus is in abnormal state

The specified source drive must be at the correct database version for the upgrade to proceed.

2945 E2945 Cmd Rej: Source database version is not compatible

The plug-in flash drive cannot contain an EAGLE backup image.

3725 E3725 Cmd Rej: Removable drive database level is not compatible

If the `src=usb` parameter is selected, then the plug-in flash drive upgrade media must be inserted in the Active OAM's flush-mounted USB port.

4918 E4918 Cmd Rej: Could not access USB disk

The internal RAM disk must be available for the plug-in flash drive's upgrade image to be unpackaged.

4919 E4919 Cmd Rej: Could not access RAM disk

The disk that contains the upgrade target release must be in a known upgrade mode.

3441 E3441 Cmd Rej: Target Release source disk in unknown upgrade mode

If the `src=usb` or `src=server` parameter is specified, then the `action=getrel` parameter must be specified. If the `src=fixed` parameter is specified, then the `action=getrel` parameter cannot be specified.

2157 E2157 Cmd Rej: Source parameter invalid for upgrade action

The EAGLE PVN address in the source database cannot be identical to the EAGLE FCNA or FCNB network address in the target database.

5013 E5013 Cmd Rej: PVN, FCNA and FCNB must not be identical

The `icdpnunknx` and `icdpnunknX` and the `gcdpnunknx` and `gcdpnunknX` NPP Action Sets cannot co-exist in the source release.

5149 E5149 Cmd Rej: Invalid table entry, can not be repaired by conversion code

The value specified for the `release` parameter must be at least 11 characters in length and contain a hyphen (-). The format of the value must be `xx.xx.xx-yy.yy.yy`, where `xx.xx.xx` is the release number, and `yy.yy.yy` is the engineering build number.

2314 E2314 Cmd Rej: Invalid filename entered

The card must have sufficient DRAM memory to perform the GTMOD table Health Check.

5383 E5383 Cmd Rej: Not enough memory on card

The AMGTT data in the GTT table cannot exceed the capacity of the GTMOD table (100 K).

5283 E5283 Cmd Rej: GTMOD table is full

Unable to access GTT table from source drive.

3119 E3119 Cmd Rej: Failed Reading GTT TRANS table

The MFC feature must be ON prior to upgrading to release 46.2 or later.

3248 E3248 Cmd Rej: MFC Off, upgrade aborted

The `action=refreshsets` and `action=verifysets` parameters are not supported.

5480 E5480 Cmd Rej: This upgrade action is unavailable in this release

The `thres` parameter cannot be specified if the threshold type (`threstype`) has been changed to `set`.

5481 E5481 Cmd Rej: THRES parameter not valid when using `threstype = SET`

When issuing the `act-upgrade` command with the `threstype` assigned to card sets, the list of card sets needs to be created and valid.

3241 E3241 Cmd Rej: The Card Set List is not valid, verify or create

When issuing the `act-upgrade` command with the `threstype` assigned to Card Set, the card set list must be consistent with the current EAGLE configuration, unless **force=yes** is allowed and specified. Details of any such inconsistencies and recovery instructions will be reported in a similar manner as `act-upgrade:action=verifysets`.

3503 E3503 Cmd Rej: Card Configuration is inconsistent with Card Set List

Security log purging must be stopped (`CHG-ATTR-SECULOG: PURGEPERIOD=0`) when the `act-upgrade` command is executed.

E3667 Cmd Rej: Change `PURGEPERIOD` to 0

Notes

The `act-upgrade:action=convertstp` command executes all four upgrade phases consecutively.

If the `act-upgrade:action=convertstp` command is entered following a command abort, the upgrade processing determines the last upgrade phase that was successfully completed. The upgrade processing then attempts to restart from that point to successful completion. Re-entering the `act-upgrade:action=convertstp` command following a command abort is the recommended method for recovery.

The TDMs and plug-in flash drives have upgrade phase indicators. The upgrade command expects the disks to be in certain phases before executing a specific action. If the disks are not in the correct phases, an error is generated.

The `act-upgrade:action=dbstatus` command generates output similar to that provided by the `rept-stat-db:display=version` command.

The `thres` parameter is used to:

- Allow multiple cards to be upgraded together, as long as the specified percentage of links remains in service. The value is applied to groups of links based upon the link-supporting group or the entire system. The grouping is set by the `chg-upgrade-config:threstype=` command.
- Enable SCCP thresholding, which allows multiple Service Module cards to be upgraded together. The specified `thres` parameter value is not used to determine the number of Service Module cards to upgrade. The peak SCCP load since the last OAM boot is used to determine the number of cards that must remain in service (at least half of the cards must remain in service).
- Enable the non-provisioned flash function, which flash-downloads any boot-prom type card if the card is in the system but not provisioned.

The `act-upgrade:action=getrel` action defaults to getting the release from the provisioned IPSM card using the provisioned FTP Server. If the `src=usb` parameter is specified, then the release is obtained from the plug-in USB flash drive upgrade media.

Output



Note:

The `act-upgrade:action=convertstp` command performs the OAM conversion and the network conversion. During the conversion, this command broadcasts the current activity in the scroll area. Refer to Appendix B of the EAGLE Release Software Upgrade Procedure for a sample of message output.

The action `dbstatus` reports the current database status.

```
act-upgrade:action=dbstatus
```

```
eaglestp 15-02-13 11:45:51 MST  EAGLE5 45.0.1-64.70.35 Upg Phase 0
  DATABASE STATUS: >> OK <<
                TDM 1114 ( STDBY)                TDM 1116 ( ACTV )
                C  LEVEL      TIME LAST BACKUP    C  LEVEL      TIME LAST BACKUP
                -  - - - - - - - - - - - - - - - - - - - - - - -
-----
      FD BKUP Y      210      -      -      Y      210      -      -
      FD CRNT Y      210
      MCAP 1113                MCAP 1115
      -  - - - - - - - - - - - - - - - - - - - - - - -
      RD BKUP -      -      -      -      -      -      -      -
      USB BKP -      -      -      -      -      -      -      -

CARD/APPL  LOC  C  T  LEVEL      TIME LAST UPDATE    VERSION STATUS
-----
OAM-RMV    1113  -  -      -                -                -
TDM-CRNT   1114  Y  N  210      15-01-16 12:22:02    135-000-000  NORMAL
TDM-BKUP   1114  Y  -  210      15-01-16 12:22:02    135-000-000  NORMAL
OAM-RMV    1115  -  -      -                -                -
OAM-USB    1115  -  -      -                -                -
TDM-CRNT   1116  Y  N  210      15-01-16 12:22:02    135-000-000  NORMAL
TDM-BKUP   1116  Y  -  210      15-01-16 12:22:02    135-000-000  NORMAL
```

```

      INACTIVE PARTITION GROUP
      CARD/APPL  LOC   C   T   LEVEL          TIME LAST UPDATE  VERSION
STATUS
-----
-----
      TDM-CRNT   1114  N   -   1          00-00-00 00:00:00  136-000-000
NORMAL
      TDM-BKUP   1114  N   -   1          00-00-00 00:00:00  136-000-000
NORMAL
      TDM-CRNT   1116  Y   -   1          00-00-00 00:00:00  136-000-000
NORMAL
      TDM-BKUP   1116  Y   -   1          00-00-00 00:00:00  136-000-000
NORMAL
;

```

Related Topics

- [rept-stat-db](#)

4.1.17 act-user

Use this command to log into the system. This command is an alternate to the `login` command. After the command is entered, the system requests a password. For security reasons the password is not echoed to the terminal.

Parameters**uid (mandatory)**

User ID. The system prompts you for a valid password after this ID is entered.

Range:

azzzzzzzzzzzzzzzzz

1 alphabetic character followed by up to 15 alphanumeric characters; the first character must be a letter.

Example

```
act-user:uid=john
```

Dependencies

The first character of the user ID must be a letter.

2053 E2053 Cmd Rej: Incorrect information unit, expecting string - <parm>

Notes

▲ Caution:

If the OA&M IP Security Enhancements feature is not turned on, a serial terminal (terminals 1-16) must be used to log in with a new Userid and password for the first time or to change an expired password. The OA&M IP Security Enhancements feature must be turned on before the password can be changed at the prompt from an IP User Interface telnet terminal (IDs 17-40) when it is the first time the user is logging in with an assigned Userid and password or the password has expired.

The `login` command can be used instead of `act-user`. The command `act-user` has been provided in accordance with OTGR standards.

When a new system is shipped, the user ID and password are set to the system. Change these immediately to ensure system security.

Output

Not applicable.

Related Topics

- [chg-pid](#)
- [chg-user](#)
- [dact-user](#)
- [dlt-user](#)
- [ent-user](#)
- [login](#)
- [logout](#)
- [rept-stat-user](#)
- [rtrv-secu-user](#)
- [rtrv-user](#)

4.1.18 alw-card

Use this command to change the card from OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) to IS-NR (In-Service-Normal) if the loading is successful.

Parameters

code (optional)

The GPL type to be loaded.

 **Note:**

In case `code` is provided along with `sloc` and `eloc` parameters in the command, then `code` parameter's value is applied to all the cards within `sloc-eloc` range, including `sloc` and `eloc`.

 **Caution:**

Do not enter the `pktgen` or `inactiveprtn` values for this parameter unless instructed to do so by Oracle personnel.

Range:***appr***

Downloads the approved GPL

inactiveprtn

Downloads the MASP with associated GPL from the inactive partition of the TDM. This value should be specified only during a software upgrade.

pktgen

Downloads the PKTGEN GPL for the appropriate hardware type. This GPL is to be used only for engineering test purposes and must not be used in customer installations without engineering oversight.

 **Note:**

After the PKTGEN GPL is initially downloaded to a card by this command, the PKTGEN GPL will continue to be downloaded to the card until another `alw-card` command is issued.

trial

Downloads the trial GPL

Default:

appr

data (optional)

High memory refresh. This parameter causes data to be reloaded to the specified card.

 **Note:**

Various conditions in the system may prevent the persistence of the data on the cards. In case `data` parameter is provided along with `sloc` and `eloc` parameters in the command, then `data` parameter's value is applied to all the cards within `sloc-eloc` range, including `sloc` and `eloc`.

Range:***persist***

Indicates that the database is not to be reloaded to the card. This parameter is used to request that the EAGLE perform a warm restart of the requested cards. The EAGLE performs various checks to ensure that all conditions necessary to initiate the warm restart are in place. During the card initialization and loading sequence, a warm restart is performed if the card meets the warm restart conditions, as described in the Notes section of this command.

refresh

Causes data to be reloaded to the specified card.

Default:

refresh

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1113, 1115, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

perdata (optional)

Persist a particular DB type on all cards (irrespective of the card's type).

Range:

all

Persist all data (GTT/MPS) that can be persisted on the card

mps

Persist only MPS data on the card that supports persistence of MPS DB

gtt

Persist only GTT data on the card that supports persistence of GTT DB

Default

all

**Note:**

The `perdata` parameter can only be specified where `data=persist` is given.

Example

```
alw-card:loc=2301:code=trial
alw-card:loc=1101:data=persist
alw-card:loc=1106:data=persist:perdata=gtt
```

Dependencies

The shelf and card must be equipped.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

An EPAP-based feature or an LNP feature that is warm-restart capable must be enabled; SIP or DEIR must be enabled, or at least one ENUM or one GTT-enabled IPSP card must be present before this command can be entered with the `data=persist` parameter.

2592 E2592 Cmd Rej: Warm Restart capable Feature must be enabled

The `data` parameter is valid only for SCCP card locations or GPLs, or MPS database (VSCCP) card locations or GPLs, or GTT-enabled IPSP card locations or GPLs.

E3852 Cmd Rej: Specified APPL/LOC/TYPE not supported with DATA parameter

The card location (`loc`) must be within the allowed range.

2016 E2016 Cmd Rej: <parm_desc> is out of range - <parm>

A card that is the active MASP cannot be specified for the `loc/sloc/eloc` parameter.

3949 E3949 Cmd Rej: Specified card cannot be the Active MASP

A card location that is valid and defined in the database must be specified.

- Card location equipped with an E5-APP-B card cannot be specified.
- Card location equipped with a Telco Switch cannot be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

If an OAM card is installed in the location specified by the `loc` parameter, then only a value of `inactiveprtn` is supported for the `code` parameter.

3432 E3432 Cmd Rej: Code parameter not supported for OAM locations

The S13 EIR feature must be activated before allowing a card running the DEIRHC GPL.

2728 E2728 Cmd Rej: S13 Feature Must Be Activated

The `PERDATA` parameter is valid only with the `DATA` parameter.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The SIP NP feature must be activated before allowing a card running the SIPHC GPL.

3539 E3539 Cmd Rej: SIP NP Feature Must Be Activated

Notes

Installation Guide provides an illustration of card locations.

The system previously supported the `data` parameter for reloading GTT data. The system does not support persistent GTT data loading, and the `data` parameter is now used in support of a warm restart feature.

A number of reasons exist for not being able to warm restart. If none of these conditions exists, a warm restart is possible and will be attempted following a Service Module card reset.

- The following conditions require a full data reload:
 - **AUDIT FAILED**—Checksum comparisons of the LNP database failed during card initialization. Data on the card is determined to be corrupted after the reset (was not yet detected by normal auditing).
 - **AUDIT TIMEOUT**—LNP initialization audit timed out (software failure)
 - **DB LEVEL**—Database level is not supported, or the difference exceeds incremental loading capability. This condition is caused by the reset of OAMs or if the number of updates exceeds the incremental loading capability.
 - **DB STATUS**—Database status of the card is incoherent at the time of a reset. This condition can be caused by a failed network card update or a reset during a database update to the card.
 - **DB VERSION**—LNP Database version has changed from the previous version. An import, or bulk downloads (`chg-db`), or changes from release to release may alter the database version.
 - **HW ERROR**—Hardware error bit checks on the card failed during card initialization
 - **NO AUDIT**—Unable to perform an LNP audit. The LNP audit is not on (for example, LNP options has `audit=off`). This condition can occur if the rate of LNP updates exceeds the ability of the LNP audit to compute checksums (excessive unknown checksums). This condition is more likely on a small database where there are fewer checksums. The percentage of known checksums must be 99% or more. The percentage is based on the number of checksums in use, which is smaller for small databases (such as two million TNs or fewer).
 - **POWER ON**—A power on reset (the card is pulled and reinserted)
 - **UNKNOWN/OTHER**—Unknown or other type of software failure.
 - **USER REQUEST**—User-initiated `init-card` or `init-sys` command `reload type=cold`. The default restart type for these commands is a cold or full LNP data reload. The user must specify `data=persist` for a warm restart on command.
 - **XILINX VERSION**—The M256 Xilinx program version has changed from the previous version.
- The following conditions require a cold restart for the MCPM card:

- **DB STATUS**—Database status of the card is incoherent at the time of a reset. This condition can be caused by a failed network card update or a reset during a database update to the card.
 - **MEAS DB**—Measurements database initialization failure or corruption.
 - **POWER ON**—A power on reset (card is pulled and reinserted).
 - **UNKNOWN/OTHER**—Unknown or other type of software failure.
 - **XILINX VERSION**—D1G Xilinx program version has changed from previous version.
- The following conditions require a cold restart for the GTT-enabled IPSC card:
 - **GTT DB LEVEL**— GTT Database level is incoherent at the time of reset. This condition is caused by the reset of OAMs.
 - **GTT DB STATUS**— GTT Database status of the card is incoherent at the time of a reset. This condition can be caused by a failed network card update or a reset during a database update to the card.
 - **POWER ON**— A power on reset (the card is pulled and reinserted)
 - **UNKNOWN/OTHER**— Unknown or other type of software failure.
 - **USER REQUEST**— User-initiated init-card or init-sys command reload type=cold. The default restart type for these commands is a cold or full GTT data reload. The user must specify data=persist for a warm restart on command.
 - **XILINX VERSION**— The SLIC Xilinx program version has changed from the previous version.

 **Caution:**

This command can be used to enable Measurements Platform measurements collection after the collection function has been disabled with the `inh-card` command for ALL MCPM cards in the system. To enable collection, at least 1 MCPM card must be allowed in the system. Disabling collection by inhibiting all MCPM cards CAN RESULT IN LOSING ALL PAST MEASUREMENT DATA ON THE CARDS.

When the OA&M IP Security feature is turned on, and an IPSC card is inserted and initialized for the first time or is removed, inserted, and initialized again, the "SSH Host Keys Regenerated" UIM is displayed. The UIM shows the generated SSH Host Key fingerprint that must be provided at the secure client in order for secure information transfer to occur. The SSH Host Key fingerprint is changed whenever power is lost and restored to an IPSC card.

```
rlghncxa03 03-07-11 07:05:00 EST EAGLE 30.2.0
0021.1493 CARD 1111 INFO SSH Host Keys Regenerated

84 7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d

Report Date:03-07-11 Time:22:27:36
;
```

When the OA&M IP Security feature is turned on, and an IPSM card is restarted with this command, the "SSH Host Keys Loaded" UIM is displayed. The UIM shows the current SSH Host Key fingerprint. The SSH Host Key fingerprint is not changed if the IPSM card does not lose power.

```
rlghncxa03 03-07-11 07:05:00 EST EAGLE 30.2.0
0021.1493 CARD 1111 INFO SSH Host Keys Regenerated
```

```
DSA Server Host Key FTRA-formatted Fingerprint=
84 7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d
```

```
Report Date:03-07-11 Time:22:27:36
```

```
;
```

If a location for an E5-E1T1-B (type LIME1 or LIMT1), or E5-ATM-B (type LIMATM or LIME1ATM) card is specified, then at least one signaling link must be provisioned for the card before it can be allowed.

When SLOC and ELOC are given in the `alw-card` command, along with DATA and PERDATA parameters, instead of displaying an MTT, a list of card locations will be displayed pointing out the cards on which data was persisted and the cards on which it wasn't.

Output

```
alw-card:loc=2301:code=trial
```

```
rlghncxa03w 06-06-01 11:11:28 EST EAGLE 35.0.0
Card has been allowed.
```

```
;
```

```
alw-card:sloc=1103:eloc=1106:data=persist:perdata=all
```

```
tekelecstp 16-09-08 17:58:00 EST EAGLE 46.5.0.0.0-70.4.0
Card 1103 - 1106 have been allowed.
LOC 1103 : ALLOW OPERATION COMPLETED.
LOC 1104 : ALLOW OPERATION COMPLETED: Data not persisted.
LOC 1105 : ALLOW OPERATION COMPLETED.
LOC 1106 : ALLOW OPERATION COMPLETED.
```

Related Topics

- [dlt-card](#)
- [ent-card](#)
- [inh-card](#)
- [init-card](#)
- [rept-stat-card](#)
- [rmv-card](#)
- [rtrv-card](#)

4.1.19 alw-imt

Use this command to change the state of the specified Interprocessor Message Transport (IMT) bus from OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) to IS-NR (In-Service-Normal), if the command is successful. If the command fails, the status is IS-ANR (In-Service-Abnormal). The IMT bus is comprised of two 125 Mbps counter-rotating serial busses. If one bus fails, the other immediately assumes control of all messages.

Parameters

bus (mandatory)

The IMT bus with the status to be changed.

Range:

a

b

Example

```
alw-imt:bus=a
```

Dependencies

This command cannot be entered during an IMT Fault Isolation Test or an Extended Bit Error Rate Test (BERT).

3043 E3043 Cmd Rej: IMT test in progress

This command cannot be entered if an IMT Rate Change sequence is in progress.

5184 E5184 Cmd Rej: IMT Rate Change sequence is in progress

Valid IMT bus entries are "A" or "B".

2247 E2247 Cmd Rej: Bus parameter invalid

Notes

This command returns an inhibited IMT bus to service.

The function of this command is the same as the `rst-imt` command.

See the `tst-imt` command to determine the location of faults on a failed or abnormal IMT bus.

Output

```
alw-imt:bus=a
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0  
Allow IMT Bus A command issued.
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
```

```
0100.0097 IMT BUS A Imt allowed  
;
```

Related Topics

- [clr-imt-stats](#)
- [conn-imt](#)
- [disc-imt](#)
- [inh-imt](#)
- [rept-imt-lvl1](#)
- [rept-imt-lvl2](#)
- [rmv-imt](#)
- [rst-imt](#)
- [tst-imt](#)

4.1.20 alw-map-ss

Use this command to activate a subsystem and bring it online. The AIQ, ATINPQ, EIR, INP, INPQS, LNP, LNPQS, and V-Flex subsystems can be allowed and inhibited.

Parameters

ssn (mandatory)

Subsystem number.

Range:

2 - 255

Example

```
alw-map-ss:ssn=10
```

Dependencies

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The system must be configured with at least one Service Module card running the VSCCP application.

2374 E2374 Cmd Rej: SCCP not Configured

The EIR, INP, LNP, or V-Flex feature must be turned on, or the ANSI41 AIQ or ATINPQ feature must be enabled before this command can be entered.

3929 E3929 Cmd Rej: LNP/INP/EIR/VFLEX must be ON or ATINP/AIQ must be enabled

The value specified for the `ssn` parameter must be the AIQ, ATINPQ, EIR, INP, LNP or V-Flex subsystem number.

3581 E3581 Cmd Rej: SSN value must be LNP, INP, EIR, VFLEX, ATINPQ or AIQ SSN

The LNP subsystem must be online before the LNPQ subsystem number can be specified as a value for the `ssn` parameter.

3012 E3012 Cmd Rej: LNP Subsystem is offline in database

The V-Flex subsystem must be online before the V-Flex subsystem number can be specified as a value for the `ssn` parameter.

4721 E4721 Cmd Rej: VFLEX Subsystem is offline in database

The ATINPQ subsystem must be online before the ATINPQ subsystem number can be specified as a value for the `ssn` parameter.

4877 E4877 Cmd Rej: ATINPQ Subsystem is offline in database

The INP subsystem must be online before the INP subsystem number can be specified as a value for the `ssn` parameter.

3582 E3582 Cmd Rej: INP Subsystem is offline in database

The EIR subsystem must be online before the EIR subsystem number can be specified as a value for the `ssn` parameter.

4184 E4184 Cmd Rej: EIR Subsystem is offline in database

The AIQ subsystem must be online before the AIQ subsystem number can be specified as a value for the `ssn` parameter.

5182 E5182 Cmd Rej: AIQ Subsystem is offline in database

Notes

None

Output

```
alw-map-ss:ssn=11
```

```
integrat40 00-05-24 10:37:22 EST EAGLE5 31.0.0
Allow map subsystem command sent to all SCCP cards.
Command Completed.
```

```
;
```

Related Topics

- [inh-map-ss](#)
- [rept-stat-lnp](#)
- [rept-stat-sccp](#)

4.1.21 alw-slk

Use this command to return an inhibited signaling link to service. If the link was aligned when it was inhibited, a changeover occurred. This command causes a changeback on the specified link. MSUs are transmitted on the link after the changeback is issued.

 **Note:**

The signaling link's inhibited status is not preserved across a card reboot.

Parameters**link (mandatory)**

The signaling link defined on the card specified in the `loc` parameter. The links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all link parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have a location specified by the `loc` parameter.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
alw-slk:loc=1301:link=b
```

Dependencies

A card location that is valid and defined in the database must be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The card must contain signaling links.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

The signaling link must be equipped in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

This command is not valid for cards running the IPGHC GPL.

3754 E3754 Cmd Rej: Command is not supported for IPGW(x) links

The card that contains the specified signaling link must be equipped in the specified card location.

2101 E2101 Cmd Rej: Card location is unequipped

The card in the specified card location cannot be a MUX card or the cards running the OAM application.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

If IPSP-M3UA signaling links are used, then this command cannot be entered.

4077 E4077 Cmd Rej: Parameters incompatible with adapter type

An appropriate value must be specified for the `link` parameter when an ATM card is used:

- `a-a1`, `b`—E5-ATM-B card running the ATMANSI or ATMITU application

2972 E2972 Cmd Rej: Specified Link is not valid for Card and Appl Type

This command is not valid for IPSP-M3UA signaling links.

4813 E4813 Cmd Rej: Command not valid for IPSP-M3UA.

Notes

The function of this command is the same as the `unhb-slk` command.

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

The *Installation Guide* provides an illustration of card locations.

Output

```
alw-slk:loc=1301:link=b
```

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Allow Link message sent to card
;
```

Related Topics

- [act-slk](#)
- [blk-slk](#)
- [canc-slk](#)
- [dact-slk](#)
- [ent-slk](#)
- [inh-slk](#)
- [rept-stat-slk](#)
- [rtrv-slk](#)
- [tst-slk](#)
- [ublk-slk](#)
- [unhb-slk](#)

4.1.22 alw-trm

Use this command to return the specified serial port to the state IS-NR (in-service normal) from the state OOS-MT-DSBLD (out-of-service maintenance-disabled) if the command is successful. If the command is not successful, the terminal's state is OOS-MT (out-of-service maintenance).

Parameters

trm (mandatory)

The ID of the serial or telnet port to be put into service.

Range:

1 - 40

Example

```
alw-trm:trm=5
```

Dependencies

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The IP User Interface feature must be enabled before terminal ports 17 through 40 can be specified in the `trm` parameter.

2365 E2365 Cmd Rej: TELNET Feature must be activated first

The terminal specified by the `trm` parameter must be equipped.

2372 E2372 Cmd Rej: Allow rejected, target terminal is not equipped

If a SEAS terminal is configured, then the IP address for the associated IPSM card must be specified before this command can be entered.

4472 E4472 Cmd Rej: The IP Addr of E5-IPSM corresponding to SEAS Trm must be set

The SEAS Over IP feature must be turned on before a SEAS terminal can be specified.

4453 E4453 Cmd Rej: SOIP Feature must be ON

The specified SEAS terminal cannot be auto-inhibited.

4617 E4617 Cmd Rej: SEAS Terminal is Auto-Inhibited

If a critical thermal alarm is raised against the IPSM card hosting the terminal, then the specified Telnet terminal cannot be returned to the IS-NR state.

4094 E4094 Cmd Rej: IPSM card has Critical Thermal Alarm

The terminal specified by the `trm` parameter cannot be configured as `type=none` (see the `chg-trm` command).

2156 E2156 Cmd Rej: Cannot allow terminal configured as type=none

Notes

The function of this command is the same as the `rst-trm` command.

When you attempt to return to service a terminal that is already in service, a warning message is echoed to the scroll area but no action is taken.

If a SEAS terminal is configured, then the corresponding card must be an IPSM card, and the SEAS Over IP feature must be turned on before the SEAS terminal is allowed. The SEAS terminal is auto-inhibited if the IP Address for the corresponding card is invalid.

Output

```
alw-trm:trm=12
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0  
Allow message sent to terminal
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0  
1062.0046      TERMINAL      12      Terminal Enabled
```

```
;
```

Related Topics

- [act-echo](#)
- [canc-echo](#)
- [chg-trm](#)
- [dact-echo](#)
- [inh-card](#)
- [rept-stat-trm](#)
- [rmv-trm](#)
- [rst-trm](#)
- [rtrv-trm](#)

4.1.23 aud-data

Use this command to perform a data audit, which is used to determine the integrity of the static and dynamic databases. This command can also be used to perform a separate GPL audit.

Parameters

ddbqp (optional)

DDB quiet period. The minimum DDB idle time, in milliseconds, during which no DDB updates are applied. After the quiet period, it is assumed that all DDB updates in the system have been processed, and no outstanding in-flight multi-cast updates exist. If the idle period that is reported by the network card is less than the quiet period, then additional network responses are discarded, and the DDB audit process restarts. Up

to three retries of the DDB audit process are performed by system. If all of the retry efforts fail, then the system status of the DDB audit report is marked as ABORTED.

Range:
0 - 5000

Default:
500

display (optional)

This parameter specifies whether a brief or full display is provided for the audit. This parameter applies to static and dynamic STP databases.

Range:

all

For the static database, displays the checksum values, in hexadecimal, and details for each GPL and each subset of the current and backup database. For the dynamic database, displays the checksum values, in hexadecimal, for each dynamic database table on MTP cards.

brief

For the static database, displays the data collections for the current database, the backup database on the fixed disk, and the approved and trial GPLs. For the dynamic database, displays the system status with number of cards responded with or without checksum, the list of inconsistent cards, list of non-responding cards, number of cards not meeting quiet period requirement, number of cards responded with "DDB update in progress", and active MTP cards in system.

except

For GPLs or database subsets with problems, displays the same information as *display=all*

Default:
brief

gp1qp (optional)

GPL data audit quiet period. The number of audit cycles between audits of GPL data.



Note:

Data audits are always performed on GPLs at the first audit cycle after the EOAM or E5-OAM card recovers from a boot.

Range:
0 - 20
0—a GPL data audit is performed for every audit cycle

Default:
No change from the current value

System Default:
20

tblid (optional)

DMS Table ID. The table where the checksum is performed.

Range:

0 - 1022

type (optional)

The database to be audited.

Range:***ddb***

dynamic database

fixed

static database

Default:

fixed

Example

```
aud-data:type=ddb:display=brief
```

```
aud-data:type=ddb:ddbqp=1000
```

```
aud-data:display=except
```

```
aud-data:tblid=127
```

```
aud-data:gplqp=3
```

Dependencies

Only one `aud-data` command can be in progress at a time.

2239 E2239 Cmd Rej: Data audit already in progress

If the `type=ddb` parameter is specified, then the `except` parameter cannot be specified.

2392 E2392 Cmd Rej: Received wrong display mode

If the `ddbqp` parameter is specified, then the `type=ddb` parameter must be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `gplqp` parameter is specified, then the `tblid`, `ddbqp`, and `type=ddb` parameters cannot be specified.

The `display` and `tblid` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The DMS table specified by the `tblid` parameter must already exist.

2317 E2317 Cmd Rej: Invalid table Id

If the system is in upgrade mode, then this command cannot be entered.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

Notes

Static Audit

The standby OAM must be available when the `aud-data` command for audit begins so that the standby OAM can receive the signal to begin auditing. If the standby OAM is not available when `aud-data` is issued, then the following messages are issued:

```
Extended Processing Time Required
```

```
Standby MASP is (or was) not available at audit start.
```

The above messages may also appear if the standby OAM is not available when the hourly periodic audit, which uses the `aud-data` command, automatically starts. The standby OAM is not performing any data auditing, so no audit results for the standby OAM are displayed in the audit report. Instead, the standby's audit results are as follows:

```
No information currently available
```

If an auditing cycle completes on either the active or standby OAM and does not produce the full set of expected results (checksums), the following message appears:

```
Audit results may be incomplete
```

The audit results may be missing some of the checksums that would normally be displayed (`display=all` or `display=except`). The results may also contain summary status information (`display=brief`) that might have been calculated differently had some of the missing checksums been available. This condition can be caused if the audit results for the backup database are missing, probably because a backup database has not been created.

If the "Audit results may be incomplete" message appears in the audit report, perform the following procedure:

Audit Data

1. Ensure that the standby OAM is online and ready.
2. Ensure that a backup database has been created. Use `rept-stat-db` command to check whether a backup database has been created.
If no backup has ever been created, the output of `rept-stat-db` command shows the fixed disk backup (FD BKUP) database at level 1. There will be no information under the heading "Time Last Backup."
3. If necessary, create a backup on the fixed disk by entering the following command: `chg-db:action=backup:dest=fixed`.
4. Re-enter the `aud-data` command.

If the standby OAM does not run a audit cycle and no audit information is available, the following message appears:

```
Audit results are not available
```

This condition is probably caused by the standby OAM rebooting while a audit cycle is underway. If this message appears, ensure that the standby OAM is available and re-enter the `aud-data` command. Ensure that the standby OAM remains up (is not rebooted) for the duration of the audit cycle.

Dynamic Audit

The `aud-data` command is enhanced to allow a Dynamic data audit to be triggered manually.

If a dynamic background audit is already running, and the `aud-data` command is issued for a dynamic audit, then the following message appears.

```
Periodic dynamic database audit is running with default quiet period.
```

```
Results will be displayed on completion.
```

The Standby OAM is not required for a dynamic audit.

Output

This example shows output for a full display of a fixed database audit:

```
aud-data:display=all
```

```
rlghncxa03w 09-07-07 10:39:04 EST EAGLE 41.1.0
DATA AUDIT COMPLETE (GPL AUD Quiet Period set to 3)
CARD          LOC  DATA                      STATUS      NEW CS  OLD CS
REF CS
  TDM-ACTV     1114 CRNT MTP      SUBSET OK      H'ffaf  H'ffaf
H'ffaf
                CRNT GTT      SUBSET OK      H'5864  H'5864
H'5864
                CRNT GWS      SUBSET OK      H'd089  H'd089
H'd089
                CRNT MISC     SUBSET OK      H'2735  H'2735
H'2735
                CRNT DBMM     SUBSET OK      H'1001  H'1001
H'1001
                BKUP MTP      SUBSET OK      H'2b85  H'2b85
H'2b85
                BKUP GTT      SUBSET OK      H'5864  H'5864
H'5864
                BKUP GWS      SUBSET OK      H'd089  H'd089
H'd089
```



```

BKUP MISC      SUBSET OK          H'5af1 H'5af1 H'5af1
BKUP DBMM      SUBSET OK          H'1001 H'1001 H'1001
APPR ATMANSI   GPL      OK          H'1372 H'1372 H'1372
TRI  ATMANSI   GPL      OK          H'1372 H'1372 H'1372
APPR VSCCP     GPL      OK          H'9251 H'9251 H'9251
TRI  VSCCP     GPL      OK          H'9251 H'9251 H'9251
APPR GLS       GPL      OK          H'8887 H'8887 H'8887
TRI  GLS       GPL      OK          H'8887 H'8887 H'8887
APPR UTILITY   GPL      OK          H'18de H'18de H'18de
TRI  UTILITY   GPL      OK          H'18de H'18de H'18de
APPR                               OK          H'b6c6 H'b6c6 H'b6c6
TRI                               OK          H'b6c6 H'b6c6 H'b6c6

```

rlghncxa03w 09-07-07 10:39:04 EST EAGLE 41.1.0

DATA AUDIT COMPLETE (GPL AUD Quiet Period set to 3)

```

CARD      LOC      DATA      STATUS      NEW CS  OLD CS  REF CS
TDM-STDBY 1116 CRNT MTP      SUBSET OK      H'ffaf H'ffaf H'ffaf
          CRNT GTT      SUBSET OK      H'5864 H'5864 H'5864
          CRNT GWS      SUBSET OK      H'd089 H'd089 H'd089
          CRNT MISC     SUBSET OK      H'2735 H'2735 H'2735
          CRNT DBMM     SUBSET OK      H'1001 H'1001 H'1001
          BKUP MTP      SUBSET OK      H'2b85 H'2b85 H'2b85
          BKUP GTT      SUBSET OK      H'5864 H'5864 H'5864
          BKUP GWS      SUBSET OK      H'd089 H'd089 H'd089
          BKUP MISC     SUBSET OK      H'5af1 H'5af1 H'5af1
          BKUP DBMM     SUBSET OK      H'1001 H'1001 H'1001
          APPR ATMANSI  GPL      OK      H'1372 H'1372 H'1372
          TRI  ATMANSI  GPL      OK      H'1372 H'1372 H'1372
          APPR VSCCP    GPL      OK      H'9251 H'9251 H'9251
          TRI  VSCCP    GPL      OK      H'9251 H'9251 H'9251
          APPR GLS      GPL      OK      H'8887 H'8887 H'8887
          TRI  GLS      GPL      OK      H'8887 H'8887 H'8887
          APPR UTILITY  GPL      OK      H'18de H'18de H'18de
          TRI  UTILITY  GPL      OK      H'18de H'18de H'18de
          APPR                               OK      H'b6c6 H'b6c6 H'b6c6
          TRI                               OK      H'b6c6 H'b6c6 H'b6c6

```

;

aud-data:display=except

rlghncxa03w 09-07-07 10:39:04 EST EAGLE 41.1.0

Extended Processing Time Required

Results will be displayed on completion

rlghncxa03w 09-07-07 10:39:04 EST EAGLE 41.1.0

DATA AUDIT COMPLETE (GPL AUD Quiet Period set to 3):

```

CARD      LOC      DATA      STATUS      NEW CS  OLD CS  REF CS
TDM-ACTV 1116 CRNT MTP      SUBSET DIFFERENT H'aaaa H'aaaa H'cccc
          CRNT GTT      SUBSET CORRUPTED H'aaaa H'bbbb H'aaaa
          APPR MCM      GPL      CORRUPTED H'4321 H'3456 H'4321
          APPR GLS      GPL      CORRUPTED H'4321 H'3456 H'4321
          APPR VSCCP    GPL      CORRUPTED H'4321 H'3456 H'4321

```

```
rlghncxa03w 09-07-07 10:39:01 EST EAGLE 41.1.0
Extended Processing Time Required
Results will be displayed on completion
```

```
rlghncxa03w 09-07-07 10:39:04 EST EAGLE 41.1.0
DATA AUDIT COMPLETE (GPL AUD Quiet Period set to 3):
CARD      LOC  DATA          STATUS      NEW CS OLD CS REF
CS
  TDM-STDBY 1114 CRNT MTP      SUBSET DIFFERENT H'aaaa H'aaaa
H'cccc
                CRNT GTT      SUBSET CORRUPTED H'aaaa H'bbbb
H'aaaa
                APPR MCM      GPL      CORRUPTED H'4321 H'3456
H'4321
                APPR GLS      GPL      CORRUPTED H'4321 H'3456
H'4321
                APPR VSCCP   GPL      CORRUPTED H'4321 H'3456
H'4321
;
```

This example shows output for a brief display of a fixed database audit:

```
aud-data or aud-data:display=brief
```

```
rlghncxa03w 09-07-07 10:39:04 EST EAGLE 41.1.0
DATA AUDIT COMPLETE (GPL AUD Quiet Period set to 3):
CARD      LOC  DATA          STATUS
TDM-ACTV  1114 CRNT DB        OK
                BKUP DB        OK
                GPLS          OK
```

```
rlghncxa03w 09-07-07 10:39:04 EST EAGLE 41.1.0
DATA AUDIT COMPLETE (GPL AUD Quiet Period set to 3):
CARD      LOC  DATA          STATUS
TDM-STDBY  1116 CRNT DB        OK
                BKUP DB        OK
                GPLS          OK
;
```

This example shows output for a full dynamic database audit:

```
aud-data:type=ddb:display=all
```

```
tekelecstp 09/07/21 17:04:47 GMT EAGLE 41.1.0
DDB AUDIT REPORT
  SYSTEM STATUS          : INCONSISTENT
  ACTIVE MTP CARDS      : 21
  NON RESPONDING CARDS  : 7: 1207 1208 1211 1212 2108 2111
2112
  RESPONDING CARDS      : 14
  CARDS WITH NO DATA   : 2
  CARDS WITH DATA     : 12
```

```

CARDS FAILING QUIET PRD      : 0
CARDS WITH DDB UPD IN PRG   : 3
CARDS CONSIDERED FOR CKSM   : 9
INCONSISTENT CARDS          : 2: 1203 2103
CONSISTENT CARDS             : 7
AUDIT START TIME             : 21/07/2009 17:04:46
QUIET PERIOD                  : 600 ms

```

RTE	LINK SET	LINK	CM CARD	CM CLSTR	MATED APPL MTP
GLOBS					
LOC	STATUS	CAUSE	IDLE	DDB UPD	ADDN'L
STATUS					
H'000003e8	H'000003e8	H'000003e8	H'000003e8	H'000003e8	H'000003e8
H'000003e8					
1201	CONSISTENT		700	1000	
H'000003e8	H'000003e8	H'000003e8	H'000003e8	H'000003e8	H'000003e8
H'000003e8					
1202	CONSISTENT		700	1000	
H'000007d0	H'000007d0	H'000007d0	H'000007d0	H'000007d0	H'000007d0
H'000007d0					
1203	INCONSISTENT		700	1000	

1204	NODATA	(DDB INIT)			
H'00000bb8	H'00000bb8	H'00000bb8	H'00000bb8	H'00000bb8	H'00000bb8
H'00000bb8					
1205	IN UPDATE 1	(TSRC,DDB)	700	1000	(IGNORED)
H'000003e8	H'000003e8	H'000003e8	H'000003e8	H'000003e8	H'000003e8
H'000003e8					
1206	CONSISTENT		700	1000	

1207	NORESP				

1208	NORESP				

1211	NORESP				

1212	NORESP				
H'000003e8	H'000003e8	H'000003e8	H'000003e8	H'000003e8	H'000003e8
H'000003e8					
1213	CONSISTENT		700	1000	
H'000003e8	H'000003e8	H'000003e8	H'000003e8	H'000003e8	-----
H'000003e8					
2101	CONSISTENT		700	1000	
H'000003e8	H'000003e8	H'000003e8	H'000003e8	H'000003e8	-----
H'000003e8					
2102	CONSISTENT		700	1000	
H'000007d0	H'000007d0	H'000007d0	H'000007d0	H'000007d0	-----
H'000007d0					
2103	INCONSISTENT		700	1000	(WWA UPD=2)

```

-----
      2104  NODATA          (DDL XLOAD)          -----
      H'00000bb8 H'00000bb8 H'00000bb8 H'00000bb8 H'00000bb8 -----
H'00000bb8
      2105  IN UPDATE 2    (DDB)                700          1000
(IGNORED)
      H'00000bb8 H'00000bb8 H'00000bb8 H'00000bb8 H'00000bb8 -----
H'00000bb8
      2106  IN UPDATE 2    (TSRC,DDB)           700          1000
(IGNORED)
      H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8 -----
H'000003e8
      2107  CONSISTENT                700          1000
-----
-----
      2108  NORESP                -----
-----
-----
      2111  NORESP                -----
-----
-----
      2112  NORESP                -----
;

```

This example shows output for a brief dynamic database audit:

```
aud-data:type=ddb:display=brief
```

```

tekelecstp 09-07-15 07:34:13 GMT  EAGLE 41.1.0
DDB AUDIT REPORT
  SYSTEM STATUS           : OK
  ACTIVE MTP CARDS        : 10
  NON RESPONDING CARDS    : 0
  RESPONDING CARDS        : 10
  CARDS WITH NO DATA     : 0
  CARDS WITH DATA        : 10
  CARDS FAILING QUIET PRD : 0
  CARDS WITH DDB UPD IN PRG : 0
  CARDS CONSIDERED FOR CKSM : 10
  INCONSISTENT CARDS      : 0
  CONSISTENT CARDS        : 0
  AUDIT START TIME        : 15/07/2009 07:34:12
  QUIET PERIOD            : 20 ms

```

```
;
```

```
aud-data:tblid=127
```

```

audit 09-08-12 15:49:28 EST  EAGLE 41.1.0
Extended processing time required.
Results will be displayed on completion.

```

```
;
```

```
audit 09-08-12 15:50:08 EST EAGLE 41.1.0
```

```
CARD      LOC  TABLE ID  STATUS      NEW CS  OLD CS  REF CS
TDM-ACTV  1114  127      OK          H'cb03  H'cb03  H'cb03
```

```
;
```

```
TABLE mtt.tbl AUDIT COMPLETE:
```

```
CARD      LOC  TABLE ID  STATUS      NEW CS  OLD CS  REF CS
TDM-STDBY 1116  127      OK          H'cb03  H'cb03  H'cb03
```

This example shows output for a full DDB audit when the status is ABORTED. Cards marked ("?") reported correct replies but their status was not evaluated.

```
aud-data:type=ddb:display=all:ddbqp=600
```

```
tekelecstp 09-07-21 21:07:57 GMT EAGLE 41.1.0
```

```
DDB AUDIT REPORT
```

```
SYSTEM STATUS          : ABORTED
ACTIVE MTP CARDS       : 21
NON RESPONDING CARDS   : 18: 1207 1208 1211 1212 2108 2111 2112
```

```
2113
```

```
RESPONDING CARDS      : 3
CARDS WITH NO DATA   : 0
CARDS WITH DATA      : 3
CARDS FAILING QUIET PRD : 1
CARDS WITH DDB UPD IN PRG : 1
CARDS CONSIDERED FOR CKSM : 0
INCONSISTENT CARDS    : 0
CONSISTENT CARDS      : 0
AUDIT START TIME      : 21/07/2009 21:07:54
QUIET PERIOD          : 600 ms
```

```
RTE      LINK SET  LINK      CM CARD  CM CLSTR  MATED APPL MTP
GLOBS
LOC  STATUS      CAUSE      IDLE      DDB UPD  ADDN'L
STATUS
H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8
H'000003e8
1201  NQUIET          100      1000
H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8
H'000003e8
1202  IN UPDATE 1  (DDB)      700      1000
H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8
H'000003e8
1203  ?              700      1000
-----
1204  NORESP          -----
-----
1205  NORESP          -----
-----
1206  NORESP          -----
```

```
-----  
-----  
1207 NORESP -----  
-----  
-----  
1208 NORESP -----  
-----  
-----  
1211 NORESP -----  
-----  
-----  
1212 NORESP -----  
-----  
-----  
1213 NORESP -----  
-----  
-----  
2101 NORESP -----  
-----  
-----  
2102 NORESP -----  
-----  
-----  
2103 NORESP -----  
-----  
-----  
2104 NORESP -----  
-----  
-----  
2105 NORESP -----  
-----  
-----  
2106 NORESP -----  
-----  
-----  
2107 NORESP -----  
-----  
-----  
2108 NORESP -----  
-----  
-----  
2111 NORESP -----  
-----  
-----  
2112 NORESP -----  
-----  
;
```

```
aud-data:display=all
```

```
tekelecstp 16-08-25 10:39:04 EST EAGLE 46.5.0  
DATA AUDIT COMPLETE (GPL AUD Quiet Period set to 3)  
CARD LOC DATA STATUS NEW CS OLD CS  
REF CS  
TDM-ACTV 1114 CRNT MTP SUBSET OK H'ffaf H'ffaf
```

H'ffaf

CRNT	GTT	SUBSET	OK	H'5864	H'5864	H'5864
CRNT	GWS	SUBSET	OK	H'd089	H'd089	H'd089
CRNT	MISC	SUBSET	OK	H'2735	H'2735	H'2735
CRNT	DBMM	SUBSET	OK	H'1001	H'1001	H'1001
BKUP	MTP	SUBSET	OK	H'2b85	H'2b85	H'2b85
BKUP	GTT	SUBSET	OK	H'5864	H'5864	H'5864
BKUP	GWS	SUBSET	OK	H'd089	H'd089	H'd089
BKUP	MISC	SUBSET	OK	H'5af1	H'5af1	H'5af1
BKUP	DBMM	SUBSET	OK	H'1001	H'1001	H'1001
APPR	ATMANSI	GPL	OK	H'1372	H'1372	H'1372
TRI	ATMANSI	GPL	OK	H'1372	H'1372	H'1372
APPR	VSCCP	GPL	OK	H'9251	H'9251	H'9251
TRI	VSCCP	GPL	OK	H'9251	H'9251	H'9251
APPR	IPSG32	GPL	OK	H'4261	H'4261	H'4261
TRI	IPSG32	GPL	OK	H'4261	H'4261	H'4261
APPR	GLS	GPL	OK	H'8887	H'8887	H'8887
TRI	GLS	GPL	OK	H'8887	H'8887	H'8887
APPR	UTILITY	GPL	OK	H'18de	H'18de	H'18de
TRI	UTILITY	GPL	OK	H'18de	H'18de	H'18de
APPR			OK	H'b6c6	H'b6c6	H'b6c6
TRI			OK	H'b6c6	H'b6c6	H'b6c6

tekelecstp 16-08-25 10:39:04 EST EAGLE 46.5.0

DATA AUDIT COMPLETE (GPL AUD Quiet Period set to 3)

CARD	LOC	DATA	STATUS	NEW CS	OLD CS	REF CS
TDM-STDBY	1116	CRNT MTP	SUBSET OK	H'ffaf	H'ffaf	H'ffaf
		CRNT GTT	SUBSET OK	H'5864	H'5864	H'5864
		CRNT GWS	SUBSET OK	H'd089	H'd089	H'd089
		CRNT MISC	SUBSET OK	H'2735	H'2735	H'2735
		CRNT DBMM	SUBSET OK	H'1001	H'1001	H'1001
		BKUP MTP	SUBSET OK	H'2b85	H'2b85	H'2b85
		BKUP GTT	SUBSET OK	H'5864	H'5864	H'5864
		BKUP GWS	SUBSET OK	H'd089	H'd089	H'd089
		BKUP MISC	SUBSET OK	H'5af1	H'5af1	H'5af1
		BKUP DBMM	SUBSET OK	H'1001	H'1001	H'1001
		APPR ATMANSI	GPL OK	H'1372	H'1372	H'1372
		TRI ATMANSI	GPL OK	H'1372	H'1372	H'1372
		APPR VSCCP	GPL OK	H'9251	H'9251	H'9251
		TRI VSCCP	GPL OK	H'9251	H'9251	H'9251
		APPR IPSG32	GPL OK	H'4261	H'4261	H'4261
		TRI IPSG32	GPL OK	H'4261	H'4261	H'4261
		APPR GLS	GPL OK	H'8887	H'8887	H'8887
		TRI GLS	GPL OK	H'8887	H'8887	H'8887
		APPR UTILITY	GPL OK	H'18de	H'18de	H'18de
		TRI UTILITY	GPL OK	H'18de	H'18de	H'18de
		APPR	OK	H'b6c6	H'b6c6	H'b6c6
		TRI	OK	H'b6c6	H'b6c6	H'b6c6

;

Legend

Fixed Audit

- **CARD**—Card type

- **LOC**—Card location
- **DATA**—Type of data being audited:
 - **APPR**—Approved GPL
 - **BKUP**—Database in the backup partition
 - **CRNT**—Database in the current partition
 - **DBMM**—Database management mechanism database
 - **GLS**—GLS GPL
 - **GTT**—Global title translation database
 - **GWS**—Gateway screening database
 - **MISC**—Miscellaneous system configuration database
 - **MTP**—Message transfer part database (links, linksets, routing tables)
 - **VSCCP**—VSCCP GPL
 - **IPSG32**—IPSG32 GPL (GPL to be loaded on SLIC cards to run IPSG application with GTT functionality or without it)
 - **ATMANSI**—ATMANSI GPL
 - **SUBSET** or **GPL**—Indicates whether the data is a part of the database or a generic program load.
 - **TRI**—Trial GPL
- **STATUS**—Status of the database or GPL:
 - **CORRUPTED**—The database or GPL has been changed by some abnormal process. The GPL cannot be used.
 - **DIFFERENT**—The database or GPL contains information that is not consistent with the reference database or GPL
 - **OK**—The database or GPL is not corrupted and contains the same information as the reference database or GPL
- **NEW CS**—New checksum value calculated by this command
- **OLD CS**—Checksum value stored in the database or GPL
- **REF CS**—Reference checksum value stored on the active MASP

Dynamic DDB Audit

- **SYSTEM STATUS:**
 - **OK**—DDB is consistent on all active MTP cards or no active MTP card is present in system
 - **INCONSISTENT**—DDB is inconsistent
 - **UNKNOWN**—"All active MTP cards in the system responded without the checksum of DDB table" or "No active MTP card in the system responded to audit request"
 - **ABORTED**—"Checksums collected failed to meet the quiet period requirement" or "Number of cards responded with "DDB update in progress" greater than 25% number of cards responded with data"
- **ACTIVE MTP CARDS**—Number of active MTP cards

- **NON RESPONDING CARDS**—Number of non-responding cards
- **RESPONDING CARDS**—Number of responding cards
- **CARDS WITH NO DATA**—Cards sending replies without the checksum of dynamic tables, due to incomplete DDL crossload or DDB initialization
- **CARDS WITH DATA**—Cards sending replies with checksums
- **CARDS FAILING QUIET PRD**—Cards failing quiet time requirement
- **CARDS WITH DDB UPD IN PRG**—Cards sending replies marked as "DDB update in progress" due to DDB checksum not evaluated completely or TSRC task is incomplete
- **CARDS CONSIDERED FOR CKSM**—Cards sending correct replies. Replies are not marked with "DDB update in progress" or "Reply with no data".
- **INCONSISTENT CARDS**—Cards that are inconsistent
- **CONSISTENT CARDS**—Cards that are consistent
- **AUDIT START TIME**—Time that the audit started (*DD/MM/YYYYYY hh:ms:ss* format)
- **QUIET PERIOD**—Minimum DDB idle time, in milliseconds, during which no DDB updates are applied
- **RTE**—Checksum of RTE Table
- **LINK SET**—Checksum of Link Set Table
- **LINK**—Checksum of Link Table
- **CM CARD**—Checksum of CM Card
- **CM CLSTR**—Checksum of CM Cluster
- **MATED APPL**—Checksum of Mated Application
- **MTP GLOBS**—Checksum of MTP Globals Table
- **IDLE (PERIOD)**—Time elapsed, in milliseconds, since the last DDB update was received by this card
- **DDB UPD**—Total DDB updates received on the card
- **ADDN'L STATUS**—Display more information for the card, including WWA updates or whether card is considered for audit calculations
- **CAUSE**—Display the reason for sending replies of type "reply with no data " or "DDB update in progress". This value can be DDL (crossload not completed), DDB (dynamic database is not initialised), (TSRC, DDB) (TSRC task is not completed) or DDB (checksums still needs to apply on tables).
- **?**—Card status is not evaluated (inconsistent/consistent) if the system status is marked as "ABORTED"
- **IGNORED**—Card responded with "DDB update in progress" and is not considered for calculating system status
- **WWA UPD**—Number of entries that were updated by the WWA

Related Topics

- [chg-gpl](#)
- [rept-stat-db](#)
- [rept-stat-ddb](#)

- [rtv-gpl](#)

4.1.24 blk-slk

Use this command to force a local processor outage (LPO) on the specified link. The system begins sending link status signal units (LSSU) with status of processor outage (SIPO) to the adjacent signaling point.

Caution:

Maintenance personnel should use this command only to block MSUs from being sent to the system. Level 2 status remains in service, except when the link is an ATM high-speed signaling link.

Note:

The signaling link's blocked status is not preserved across a card reboot.

Parameters

link (mandatory)

The signaling link defined on the card specified in the `loc` parameter. The links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all link parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have a location specified by the `loc` parameter.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
blk-slk:loc=2311:link=a
```

Dependencies

A card location that is valid and defined in the database must be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The card must contain signaling links.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

The signaling link must be equipped in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

The card that contains the specified signaling link must be equipped in the specified card location.

2101 E2101 Cmd Rej: Card location is unequipped

The card in the specified card location cannot be a MUX card or the cards running the OAM application.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

This command is not valid for links belonging to proxy linksets.

4693 E4693 Cmd Rej: Command not allowed for proxy links

This command is not valid for cards running IPGHC links.

3837 E3837 Cmd Rej: Command not valid for IPGHC

An appropriate value must be specified for the `link` parameter when an ATM card is used:

- `a-a1, b`—E5-ATM-B card running the ATMANSI or ATMITU application

2972 E2972 Cmd Rej: Specified Link is not valid for Card and Appl Type

The `blk-slk` command is not supported for links associated with J7 APCs.

2810 E2810 Command Rejected: Command is not valid for ITU-N16 links.

Notes

The function of this command is the same as the `act-lpo` command.

This command generates a minor alarm. Refer to *Maintenance Guide* for information on MRNs 0201 and 0208.

If this command is followed by the `init-card` command, the signaling link blockage is not preserved after the `init-card` command completes.

Installation Guide provides an illustration of card locations.

If the `blk-slk` or `act-lpo` command is issued for an IPSG signaling link, then one of the following events occurs:

- IPSG-M2PA signaling link—MTP3 local processor outage is initiated.
- IPSG-M3UA signaling link—The link is prohibited from entering service by rejecting received AS-ACTIVE messages.

Output

```
blk-slk:loc=2311:link=a
```

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Local processor outage being set.
;
```

This example shows the output when no signaling link is defined for link A:

```
blk-slk:loc=2312:link=a
```

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Link is UNEQUIPPED in the database.
Local processor outage being set.
;
```

This example shows the output when slot 55 in the card location is not valid:

```
blk-slk:loc=2355:link=a
```

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Command Rejected: Slot ID out of range
;
```

```
blk-slk:loc=1101:port=a
```

```
tekelecstp 13-06-20 12:37:33 EST 45.0.0-64.56.0
blk-slk:loc=1101:port=a
Command entered at terminal #4.
E2810 Command Rejected: Command is not valid for ITU-N16 links.
```

Related Topics

- [canc-lpo](#)
- [rept-stat-slk](#)
- [ublk-slk](#)

4.1.25 canc-alm-trns

Use this command to return all audible alarm indications to the local office.

Parameters

This command has no parameters.

Example

```
canc-alm-trns
```

Dependencies

No other action commands can be in progress when this command is entered.

```
2368 E2368 Cmd Rej: System busy - try again later
```

Notes

The function of this command is the same as the `dact-alm-trns` command.

After this command is entered, the `rept-stat-alm` command can be entered to verify the status of the alarms.

Output

```
canc-alm-trns
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0  
Alarms returned to Local Maintenance Center  
Command Completed.
```

```
;
```

Related Topics

- [act-alm-trns](#)
- [dact-alm-trns](#)
- [rept-stat-cdt](#)
- [rept-stat-clk](#)
- [rept-stat-trbl](#)
- [rls-alm](#)
- [rtrv-obit](#)
- [rtrv-trbl](#)

4.1.26 `canc-cmd`

This command halts processing and output of the `copy-ext-stats`, `rept-imt-info`, `rept-stat-applsock`, `rept-stat-as`, `rept-stat-assoc`, `rept-stat-card`, `rept-stat-clk`, `rept-stat-dstn`, `rept-stat-ls`, `rept-stat-rte`, `rept-stat-slk`, `rept-stat-trbl`, `rtrv-appl-rtkey`, `rtrv-as`, `rtrv-assoc`, `rtrv-cmd`, `rtrv-dstn`, `rtrv-gta`, `rtrv-gtt`, `rtrv-lbp`, `rtrv-log`, `rtrv-ls`, `rtrv-map`, `rtrv-mrn`, `rtrv-obit`, `rtrv-rte`, `rtrv-scr-aftpc`, `rtrv-scr-blkdpc`, `rtrv-scr-blkopc`, `rtrv-scr-cdpa`, `rtrv-scr-cgpa`, `rtrv-scr-destfld`, `rtrv-scr-dpc`, `rtrv-scr-isup`, `rtrv-scr-opc`, `rtrv-scrset`, `rtrv-scr-sio`, `rtrv-scr-tt`, `rtrv-seculog`, `rtrv-secu-user`, `rtrv-slk`, `rtrv-tbl-capacity`, `rtrv-trbltx`, `rtrv-uaps`, `rtrv-vflx-cd`, `rtrv-vflx-rn`, `rtrv-vflx-vmsid`, [commands](#).

Entering this command without the `trm` parameter executes the command on the terminal that is running the `canc-cmd` command. Entering the command with the `trm` parameter executes the command on the terminal specified by the `trm` parameter.

Parameters

`trm` (optional)

The terminal on which the command is to be canceled.

Range:

1 - 40

Example

```
canc-cmd
```

```
canc-cmd:trm=3
```

Dependencies

The `trm` parameter cannot be specified in a `canc-cmd` command that is entered on the same terminal that is running the command that is to be cancelled. The terminal will return an error: system is busy.

2368 E2368 Cmd Rej: System busy - try again later

The `canc-cmd:trm=` command requires the Security Administration command class for the terminal and for the user.

2002 E2002 Cmd Rej: Authority Violation

The `canc-cmd:trm=` command requires a Security Administration command class for the terminal.

2003 E2003 Cmd Rej: Terminal Authority Violation

Notes

The `canc-cmd` command (without the `trm` parameter) must be entered on the same terminal that is running the command to be cancelled.

If this command is entered on a terminal that is not running a command, the command completes successfully without returning an error. Likewise, if the `canc-cmd:trm=` command is entered and there is no command running on the specified terminal, the command completes successfully without returning an error.

When `canc-cmd` with no parameter is entered, a scroll area message appears to indicate that the command has been cancelled. For example:

```
Command aborted on terminal 2.
```

Some output can still appear after the above abort message if output accumulated in the output queue before the command was entered. When a command is cancelled, the cancellation should take no longer than 25 seconds to take effect.

The **F9** function key provides the same function as this command without the `trm` parameter. On a terminal in KSR mode, pressing **<CTRL>I** also provides the same function.

This command and the **F9** function key cannot be used for pure SEAS commands.

If this command is entered to cancel a command other than ones listed, the terminal will accept another command, but output and processing of the current command continue.

When this command is entered, a command status code of *AB* (command aborted) is logged in the security log as follows:

- When `canc-cmd` (without the `trm` parameter) is entered, no entry is logged.
- When `canc-cmd:trm=` is entered, an entry is logged.
- When `canc-cmd` (without the `trm` parameter) is entered as a SEAS flow-thru command, an entry is logged. The `canc-cmd:trm=` command is not allowed as a SEAS flow-thru command because the `canc-cmd:trm=` command belongs to the Security Administration Command Class.

For examples of the security log entries, see the `rtrv-seculog` command.

Output

```
canc-cmd
```

```
rlghncxa03w 04-07-27 17:00:36 EST  EAGLE 31.6.0
canc-cmd
Command entered at terminal #2.
```

```
rlghncxa03w 04-07-27 17:00:36 EST  EAGLE 31.6.0
Command aborted on terminal 2.
```

```
;
```

Related Topics

- [copy-ext-stats](#)
- [rept-imt-info](#)
- [rept-stat-applsock](#)
- [rept-stat-as](#)
- [rept-stat-assoc](#)
- [rept-stat-card](#)
- [rept-stat-clk](#)
- [rept-stat-dstn](#)
- [rept-stat-ls](#)
- [rept-stat-rte](#)
- [rept-stat-slk](#)
- [rept-stat-trbl](#)
- [rtrv-appl-rtkey](#)
- [rtrv-as](#)

- rtrv-assoc
- rtrv-cmd
- rtrv-dstn
- rtrv-gta
- rtrv-gtt
- rtrv-lbp
- rtrv-log
- rtrv-ls
- rtrv-map
- rtrv-mrn
- rtrv-obit
- rtrv-rte
- rtrv-scr-aftpc
- rtrv-scr-blkdpc
- rtrv-scr-blkopc
- rtrv-scr-cdpa
- rtrv-scr-cgpa
- rtrv-scr-destfld
- rtrv-scr-dpc
- rtrv-scr-isup
- rtrv-scr-opc
- rtrv-scrset
- rtrv-scr-sio
- rtrv-scr-tt
- rtrv-seculog
- rtrv-secu-user
- rtrv-slk
- rtrv-tbl-capacity
- rtrv-trbltx
- rtrv-uaps
- rtrv-vflx-cd
- rtrv-vflx-rn
- rtrv-vflx-vmsid

4.1.27 canc-dlk

Use this command to remove an IP data link from service. The state of the link is changed from in service normal (IS-NR) to out of service maintenance disabled (OOS-MT-DSBLD).

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
canc-dlk:loc=1308
```

Dependencies

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The shelf and card must be equipped.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

2016 E2016 Cmd Rej: <parm_desc> is out of range - <parm>

The signaling link must be equipped in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

A card location that is valid and defined in the database must be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

Notes

None

Output

```
canc-dlk:loc=1308
```

```
rlghncxa03w 04-01-27 17:00:36 EST EAGLE 31.3.0  
Deactivate Link message sent to card.  
Command Completed.
```

```
;
```

Related Topics

- [act-dlk](#)
- [dlt-dlk](#)
- [ent-dlk](#)
- [rept-stat-dlk](#)
- [rtrv-dlk](#)
- [tst-dlk](#)

4.1.28 `canc-echo`

Use this command to halt the echoing of command responses from the user's terminal to other terminals or printers.

Parameters**trm (optional)**

The ID number of the terminal for which the echo is being canceled.

Range:

1 - 16

Default:

Cancels all active echoes

Example

```
canc-echo  
canc-echo:trm=7
```

Dependencies

The echo cannot be cancelled to the same terminal from which the `canc-echo` command is entered.

3422 E3422 Cmd Rej: Echo capability not applicable on originating terminal

An `act-echo` command must be active at the specified terminal before this command can be entered to cancel the echo.

2253 E2253 Cmd Rej: Echo is not set for this terminal

Notes

Only the echoing of command output responses can be halted by this command. To halt the printing of alarm and network messages, the `chg-trm` command must be used.

Output

```
canc-echo
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
```

```
canc-echo
Command entered at terminal #6.
Scroll Area Output echo disabled to all terminals.
;

canc-echo:trm=7

rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
canc-echo:trm=7
Command entered at terminal #6
Scroll Area Output echo disabled for terminal 7.
;
```

Related Topics

- [act-echo](#)
- [alw-trm](#)
- [chg-trm](#)
- [dact-echo](#)
- [inh-trm](#)
- [rept-stat-trm](#)
- [rmv-trm](#)
- [rst-trm](#)
- [rtrv-trm](#)

4.1.29 `canc-lpo`

Use this command to cancel a processor outage and restore the link to its previous state. LSSUs with status of processor outage are terminated, and the link begins sending MSUs.



Note:

The signaling link's blocked status is not preserved across a card reboot.

Parameters

link (mandatory)

The signaling link defined on the card specified in the *loc* parameter. The links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all link parameter values.
See [Table A-1](#) for valid link parameter range values for each type of card that can have a location specified in the `loc` parameter.

loc (mandatory)

The address of the card containing the signaling link to be unblocked.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
canc-lpo:loc=2311:link=b
```

Dependencies

A card location must be specified that is valid and defined in the database.

2376 E2376 Cmd Rej: Specified LOC is invalid

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The value specified for the `loc` parameter must refer to one of the following cards, and the referenced card must be equipped:

- E5-E1T1-B, card running the SS7ANSI or CCS7ITU application
- E5-ATM-B card running the ATMANSI or ATMITU application
- E5-ENET-B card running the IPLIMI, or IPSP application
- SLIC card running the IPSP application

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The card must contain signaling links.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

The signaling link must be equipped in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

This command is not valid for links belonging to proxy linksets.

4693 E4693 Cmd Rej: Command not allowed for proxy links

An appropriate value must be specified for the `link` parameter when an ATM card is used:

- *a-a1, b*—E5-ATM-B card running the ATMANSI or ATMITU application

2972 E2972 Cmd Rej: Specified Link is not valid for Card and Appl Type

`canc-lpo` command is not supported for links associated with J7 APCs.

2810 E2810 Command Rejected: Command is not valid for ITU-N16 links

This command is not valid for IPSP-M3UA signaling links.

4813 E4813 Cmd Rej: Command not valid for IPSP-M3UA.

Notes

The function of this command is the same as the `ublk-slk` command.

Unblocking a signaling link removes a Level 2 failure resulting from a `blk-slk` of an ATM high-speed signaling link.

Installation Guide provides an illustration of card locations.

Output

```
canc-lpo:loc=2311:link=a
```

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Local processor outage being cleared.
;
```

In the following example, card location 1113 is not valid:

```
canc-lpo:loc=1113:link=a
```

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Command Rejected : Location is not valid for command
;
```

Related Topics

- [act-lpo](#)
- [blk-slk](#)
- [ublk-slk](#)

4.1.30 canc-slk

Use this command to change the state of the specified link to OOS-MT-DSBLD (Out-Of-Service Maintenance Disabled).

Caution:

This command impacts network performance and should be used only during periods of low traffic.

Parameters

link (mandatory)

Signaling link defined on the card specified in the `loc` parameter. The links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all `link` parameter values.

See [Table A-1](#) for valid link values for each type of card that can have a location specified in the `loc` parameter.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

Example

```
canc-slk:loc=1301:link=a
```

Dependencies

A card location must be specified that is valid and defined in the database.

2376 E2376 Cmd Rej: Specified LOC is invalid

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The card must contain signaling links.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

The signaling link must be equipped in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

The card that contains the specified signaling link must be equipped in the specified card location.

2101 E2101 Cmd Rej: Card location is unequipped

The card in the specified card location cannot be a MUX card or the cards running the OAM application.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

An appropriate value must be specified for the `link` parameter when an ATM card is used:

- `a-a1, b`—E5-ATM-B card running the ATMANSI or ATMITU application

2972 E2972 Cmd Rej: Specified Link is not valid for Card and Appl Type

Notes

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

Installation Guide provides an illustration of card locations.

After this command is entered, the `rept-stat-slk` command can be entered to verify the cancellation.

Output

```
canc-slk:loc=1301:link=a
```

```
rlghncxa03w 05-02-07 11:11:28 EST EAGLE5 33.0.0
```

```
Deactivate Link message sent to card
```

```
;
```

Related Topics

- [act-slk](#)
- [alw-slk](#)
- [blk-slk](#)
- [dact-slk](#)
- [dlt-slk](#)
- [ent-slk](#)
- [inh-slk](#)
- [rept-stat-slk](#)
- [rtrv-slk](#)
- [tst-slk](#)
- [ublk-slk](#)
- [unhb-slk](#)

4.1.31 `canc-user`

Use this command to end a user session.

Parameters

This command has no parameters.

Example

```
canc-user
```

Dependencies

None

N/A N/A

Notes

The `dact-echo` or `logout` command can be used in place of this command.

Output

Not applicable.

Related Topics

- [act-user](#)
- [chg-pid](#)
- [chg-user](#)
- [dact-user](#)
- [dlt-user](#)
- [ent-user](#)
- [login](#)
- [logout](#)
- [rept-stat-user](#)
- [rtrv-secu-user](#)
- [rtrv-user](#)

4.1.32 chg-acg-mic

Use this command to change the values of ACG controls assigned to certain queries. The control can apply to all queries or to specific query services and called party digits. A particular control is selected to be changed by either specifying that it is the `type=all` control or specifying its service and digits.

Parameters**aintvl (optional)**

AIN interval index

Range:

1 - 15

Default:

No change to the current value

dgts (optional)

Digits

Range:

000 - 999, 000000 - 9999999999

Specify 3 digits or 6-10 digits.

drtn (optional)

Duration index. The amount of time that the ACG is in effect. This number is mapped to a time value at the LNP node.

Range:

1 - 13

Default:

No change to the current value

intvl (optional)

Interval index. The amount of time between ACGs. This number is mapped to a time value for the LNP node.

Range:

0 - 15

Default:

No change to the current value

nd (optional)

New number of digits

Range:

3, 6 - 10

Default:

No change to the current value

serv (optional)

Query service

Range:

ain

in

type (optional)

Type of control

Range:

all

sd

Default:

sd

Example

To change the `type=all` MIC to use 3 digits:

```
chg-acg-mic:type=all:nd=3
```

To change the MIC for AIN queries for 919-460-2132 to use an interval index of 15:

```
chg-acg-mic:serv=ain:dgts=9194602132:aintvl=15
```

To change the MIC for IN queries for 919-xxx-xxxx to use a duration index of 9 and an interval index of 5:

```
chg-acg-mic:serv=in:dgts=919:drtn=9:intvl=5
```

Dependencies

If the `type=all` parameter is specified, then the `nd`, `drtn`, `intvl`, or `aintvl` parameter must be specified.

3069 E3069 Cmd Rej: Parameter ND, DRTN, INTVL, or AINTVL is required

If the `type=all` parameter is specified, then the `serv` and `dgts` parameters cannot be specified.

3057 E3057 Cmd Rej: Parameters SERV and DGTS are not allowed for TYPE = ALL

If the `type=sd` parameter is specified, then the `serv` and `dgts` parameters must be specified.

3058 E3058 Cmd Rej: Parameters SERV and DGTS are required

If the `type=sd` parameter is specified, then the `nd` parameter cannot be specified.

3059 E3059 Cmd Rej: Parameter ND is not allowed

If the `serv=ain` parameter is specified, then the `drtn` or `aintvl` parameter must be specified.

3070 E3070 Cmd Rej: Parameter DRTN or AINTVL is required

If the `serv=ain` parameter is specified, then the `intvl` parameter cannot be specified.

3061 E3061 Cmd Rej: Parameter INTVL is not allowed

If the `serv=in` parameter is specified, then the `drtn` or `intvl` parameter must be specified.

3071 E3071 Cmd Rej: Parameter DRTN or INTVL is required

If the `serv=in` parameter is specified, then the `aintvl` parameter cannot be specified.

3063 E3063 Cmd Rej: Parameter AINTVL is not allowed

The `dgts` parameter value must be either 3 digits in the range 000-999 or 6-10 digits in the range 000000-9999999999.

3064 E3064 Cmd Rej: DGTS parameter must be 3 or 6-10 digits

The `nd` parameter value must be 3 or 6-10 to indicate the number of new digits.

3065 E3065 Cmd Rej: ND parameter must be 3 or 6-10

The LNP feature must be turned on before this command can be entered.

3009 E3009 Cmd Rej: LNP feature must be ON

If the `type=all` parameter is specified, then a MIC with `type=all` must exist.

3072 E3072 Cmd Rej: No MIC of TYPE=ALL exists

If the `type=sd` parameter is specified, then a MIC with the same service and digits must exist.

3073 E3073 Cmd Rej: No MIC with the same service and digits exists

Notes

None

Output

```
chg-acg-mic:type=all:nd=31
```

```
rlghncxa03w 04-01-28 08:50:12 EST  EAGLE 31.3.0
ACG MIC table is (11 of 256) 4% full of type SD
CHG-ACG-MIC: MASP A - COMPLTD
```

;

Related Topics

- [dlt-acg-mic](#)
- [ent-acg-mic](#)
- [rept-stat-lnp](#)
- [rtrv-acg-noc](#)

4.1.33 chg-acg-noc

Use this command to change the definition of a node overload level. The definition is comprised of the threshold LNP query rates for node overload levels and the values for the automatic call gappings (ACG) to be sent when at the specified level.

Parameters

lv1 (mandatory)

Overload level.

Range:

1 - 10

and (optional)

AIN number of digits. The number of digits in the global title address of an AIN query.

Range:

6, 10

Default:

No change to the current value

drtn (optional)

Duration index. The amount of time that the ACG is in effect. This number is mapped to a time value at the LNP node.

Range:

1 - 13

Default:

No change to the current value

ind (optional)

IN number of digits. The number of digits in the global title address of an IN query.

Range:

6, 10

Default:

No change to the current value

intvl (optional)

Interval index. The amount of time between ACGs. This number is mapped to a time value for the LNP node.

Range:

0 - 15

Default:

No change to the current value

qr (optional)

Query rate. The number of LNP queries, which define a particular overload level, in a 30-second period.

Range:

1 - 2147483647

Default:

No change to the current value

Example

To change level 10's query rate and AIN number of digits:

```
chg-acg-noc:lvl=10:qr=900000:and=6
```

To change level 3's duration and interval indexes:

```
chg-acg-noc:lvl=3:drtn=7:intvl=3
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `and` parameter value must be either 6 or 10.

3074 E3074 Cmd Rej: AND parameter must be 6 or 10

The specified overload level must be defined.

3054 E3054 Cmd Rej: The specified overload level is not defined

The ACG NOC table must be accessible.

3053 E3053 Cmd Rej: Failed reading ACG NOC table

The LNP feature must be turned on before this command can be entered.

3009 E3009 Cmd Rej: LNP feature must be ON

The `ind` parameter value must be either 6 or 10.

3075 E3075 Cmd Rej: IND parameter must be 6 or 10

Notes

None

Output

```
chg-acg-noc:lvl=10:qr=900000:and=6
```

```
rlghncxa03w 03-02-28 08:50:12 EST EAGLE 28.1.0
CHG-ACG-NOC: MASP A - COMPLTD
;
```

Related Topics

- [dlt-acg-noc](#)
- [ent-acg-noc](#)
- [rept-stat-lnp](#)
- [rtrv-acg-noc](#)

4.1.34 chg-ainpopts

Use this command to provision AINPQ-specific data. This command updates the AINPOPTS table.

Parameters

Note:

The nature of address indicator parameters (`rnaiv` or `rnai`) and numbering plan parameters (`rnp` or `rnpv`) can be specified using a mnemonic or an explicit value. The mnemonic and explicit values cannot be specified at the same time for the same parameter.

defrn (optional)

Default routing number. This parameter specifies a default routing number that is used for own-network subscribers.

Range:

1 - 15 digits, *none*

Default:

No change to the current value

System Default:

none

dialnai (optional)

Digits dialed nature of address indicator.

Range:

0

National

1

International

Default:

No change to the current value

System Default:

0

dialpfx (optional)

Dialed party number prefix.

Range:

1-15 digits

Valid digits are *0-9, A-F, a-f*

Default:

No change to the current value

System Default:

none

dlt pfx (optional)

Delete prefix. This parameter specifies whether to delete the DIALPFX.

Range:

yes

no

Default:

No change to the current value

System Default:

no

lnpntpfx (optional)

LNP entity preference is the first preference for the RTDB data / entity associated with a DN to be used as LRN.

 **Note:**

The option is applied only if SPORT is not applied and EPAP lookup results in more than one entity.

Range***rn***

Use RN as LRN as the first preference.

grn

Send GRN as LRN as the first preference.

asd

Send ASD as the first preference.

Default:

No change to the current value

System Default

rn

lnpnatldiglen (optional)

LNP national digit length.

Range

1-15

Default:

No change to the current value

System Default

10

lnpogdnnai (optional)

LNP outgoing DN nature of address indicator. This parameter overrides the outgoing Nature of Number if DN is being returned.

Range:***inc***

Use the incoming NoN

sub

Subscriber

natl

National Significant

intl

International

diglen

If the outgoing digit length is less than or equal to LNPSUBDIGLEN then set NoN = SUBSCRIBER.

If the outgoing digit length is greater than LNPSUBDIGLEN and is less than or equal to LNPATLDIGLEN then set NoN = NATIONAL Significant.

Default:

No change to the current value

System Default:

inc

lnpoglrrnai (optional)

LNP outgoing LRN nature of address indicator. This parameter overrides the outgoing Nature of Number if LRN is being returned.

Range:***inc***

Use the incoming NoN

sub

Subscriber

natl

National Significant

intl

International

diglen

If LRN digit length is less than or equal to LNPATLDIGLEN then set NoN = NATIONAL SIGNIFICANT.

If LRN digit length is greater than or equal to LNPATLDIGLEN then set NoN = INTERNATIONAL.

Default:

No change to the current value

System Default:

inc

lnpsnai (optional)

LNP service nature of address indicator. This parameter overrides the incoming Nature of Number in AIN Info_Analyzed CalledPartID.

Range:***inc***

Use the incoming NoN

sub

Subscriber

natl

National Significant

intl

International

diglen

If the incoming NoN of AIN Info_Analyzed CalledPartyID is SUBSCRIBER, then do the following, else use the incoming NoN:

If digit length of CalledPartyID = LNPSUBDIGLEN, assume the NoN is Subscriber.

If digit length of CalledPartyID = LNPATLDIGLEN, assume the NoN is NATIONAL (SIGNIFICANT).

If digit length of CalledPartyID is not equal to LNPATLDIGLEN or LNPSUBDIGLEN, raise an error.

Default:

No change to the current value

System Default:

inc

lnpsport (optional)

LNP service portability.

Range

gsm

Apply Service Portability prefix for own-network GSM subscribers.

is41

Apply Service Portability prefix for own-network IS41 subscribers.

all

Apply Service Portability prefix for all own-network (IS41 and GSM) subscribers.

none

Service Portability is not performed for the feature.

Default:

No change to the current value

System Default

None

lnpsubdiglen (optional)

LNP subscriber digit length.

Range

1-15

System Default

7

ndialpfx (optional)

New dialed party number prefix.

Range:

1-15 digits, *none*

Valid digits are 0-9, a-f, A-F

System Default:*none***nec (optional)**

National Escape Code.

Range:1-15 digits, *none*

Valid digits are 0-9, A-F, a-f

Default:

No change to the current value

System Default:*none***rfmt (optional)**

Routing address format. This parameter specifies the routing address format that is supported in the AINPQ "Return Result" response messages.

Range:***asdrn***

ASD + RN

asdrndn

ASD + RN + [DIALPFX] + DN

asdrnecdn

ASD + RN + [DIALPFX] + NEC + DN

asdrnccdn

ASD + RN + [DIALPFX] + CC + DN

ccasdrndn

[DIALPFX] + CC + ASD + RN + DN

ccgrndn

[DIALPFX] + CC + GRN + DN

ccrngrndn

[DIALPFX] + CC + RN + GRN + DN

ccgrnrndn

[DIALPFX] + CC + GRN + RN + DN

ccrndn

[DIALPFX] + CC + RN + DN

ccrnasddn

[DIALPFX] + CC + RN + ASD + DN

homerndn

Home Routing Number

grn
GRN

grndn
GRN + [DIALPFX] + DN

grnrndn
GRN + RN + [DIALPFX] + DN

grnrn
GRN + RN

grnrnccdn
GRN + RN + [DIALPFX] + CC + DN

grnrnecdn
GRN + RN + [DIALPFX] + NEC + DN

rn
Routing Number

rnasd
RN + ASD

rnasddn
RN + ASD + [DIALPFX] + DN

rnasdccdn
RN + ASD + [DIALPFX] + CC + DN

rnasdnecdn
RN + ASD + [DIALPFX] + NEC + DN

rndn
RN + [DIALPFX] + DN

rngrn
RN + GRN

rngrndn
RN + GRN + [DIALPFX] + DN

rngrnccdn
RN + GRN + [DIALPFX] + CC + DN

rngrnecdn
RN + GRN + [DIALPFX] + NEC + DN

rnecdn
RN + [DIALPFX] + NEC + DN

Default:
No change to the current value

System Default:
rndn

rnai (optional)

Routing nature of address indicator

Range:

frmsg

NAI from the incoming message

intl

International number

natl

National significant number

Default:

No change to the current value

System Default:

frmsg

rnaiv (optional)

Routing nature of address indicator value

Range:

0

National

1

International

Default:

No change to the current value

System Default:

none

rnp (optional)

Routing numbering plan

Range:

e164

IS41 Telephony Number

e212

IS41 Land Mobile Number

priv

IS41 Private Number

unknown

IS41 Numbering Plan Unknown

Default:

No change to the current value

System Default:*e164***rnpv (optional)**

Routing numbering plan value

Range:*0 - 15***Default:**

No change to the current value

System Default:*2***snai (optional)**

Service Nature of Address indicator.

Range:***sub***

Subscriber Number

intl

International Number

natl

National Significant Number

none

NAI value none

unknown

Unknown NAI value

Default:

No change to the current value

System Default:*none***sporttype (optional)**

Service Portability type. This parameter specifies whether Service Portability is performed for the associated feature.

**Note:**

If Service Portability is performed, then the Service Portability prefix (RTDB 'GRN'entity id) is applied.

The S-Port feature must be enabled before this parameter can be specified. The S-Port feature must be turned on before any change to the parameter will impact the associated feature.

Range:***all***

apply Service Portability prefix for all own-network (IS41 and GSM) subscribers

gsm

apply Service Portability prefix for own-network GSM subscribers

is41

apply Service Portability prefix for own-network IS41 subscribers

none

Service Portability is not performed for the feature.

Default:

No change to the current value

System Default:

none

sprestype (optional)

SP response type. The type of message sent by the system if an NPREQ message is received, the DN digits match, and the HLR ID is present.

Range:***rrwdgts***

The system sends a "Return Results with Digits" message.

rrwodgts

The system sends a "Return Results without Digits" message.

Default:

No change to the current value

System Default:

rrwodgts

Example

```
chg-ainpopts:rfmt=rn:rnp=e164:rnai=intl:dialpfx=fac:dltpfx=yes
```

```
chg-ainpopts:rfmt=rndn:rnp=e212:rnai=intl:dialpfx=fac:dltpfx=no :di  
alnai=1:snai=natl
```

```
chg-ainpopts:rfmt=rngrnccdn:rnp=e164:rnai=intl:dialpfx=fac:dltpfx=y  
es
```

```
chg-ainpopts:sprestype=rrwdgts:rfmt=rnecdn:nec=abcd1
```

```
chg-ainpopts:rfmt=rnecdn:nec=abcd1
```

```
chg-ainpopts:rfmt=rnecdn:nec=0
```

```
chg-  
ainpopts:rfmt=asdrnccdn:rnp=e164:rnai=intl:dialpfx=fac:dltprfx=yes
```

```
chg-  
ainpopts:rfmt=rn:rnp=e164:lnpsnai=sub:lnpnatldiglen=10:lnpentpref=rn
```

Dependencies

At least one optional parameter must be specified.

2112 E2112 Cmd Rej: At least one parameter must be changed

The `rnp` and `rnpv` parameters cannot be specified together in the command.

5097 E5097 Cmd Rej: RNP and RNPV must not be specified together

The `rnai` and `rnaiiv` parameters cannot be specified together in the command.

5098 E5098 Cmd Rej: RNAI and RNAIV must not be specified together

If the `ndialpfx` or `dltprfx` parameter is specified, then the `dialpfx` parameter must be specified.

5104 E5014 Cmd Rej: DIALPFX must be specified

The `dialpfx=none` parameter cannot be specified.

5157 E5157 Cmd Rej: DIALPFX must not be NONE

If the `ndialpfx=none` parameter is specified, then the `dltprfx` parameter cannot be specified.

5169 E5169 Cmd Rej: DLTPFX must not be specified, when NDIALPFX is NONE

If the `ndialpfx` and `dialpfx` parameters are specified, then the value specified for the `dialpfx` parameter must already exist in the AINPOPTS table.

5165 E5165 Cmd Rej: DIALPFX doesn't exist in AINPOPTS Table

The value specified for the `ndialpfx` parameter cannot already exist in the AINPOPTS table.

5164 E5164 Cmd Rej: NDIALPFX already exists in AINPOPTS Table

A maximum of 2 Dialed Party Number Nature of Address values are allowed.

5168 E5168 Cmd Rej: Maximum Number of DIALNAIs already provisioned

The `dialnai` and `snai` parameters must be specified together in the command.

5160 E5160 Cmd Rej: DIALNAI and SNAI must be specified together

If the `snai=none` parameter is specified, then the value specified for the `dialnai` parameter must already exist in the AINPOPTS table.

5167 E5167 Cmd Rej: DIALNAI doesn't exist in AINPOPTS Table

The National Escape Code (`necc` parameter) can contain between 1 and 5 digits. Otherwise the value is *none*.

2045 E2045 Cmd Rej: <parm_desc> num digits incorrect, min <min> max <max> - <parm>

A maximum of 40 Dialed Party Number Prefix values can be provisioned.

5166 E5166 Cmd Rej: Maximum number of DIALPFXs already provisioned

If the `nec=none` parameter is specified, then values of `asdrnecdn`, `masdnecdn`, `rnecdn`, `rgrnecdn`, and `grnecdn` cannot be specified for the `rfmt` parameter.

5163 E5163 Cmd Rej: RFMT with NEC and NEC=NONE combination not allowed

The S-Port feature must be enabled before the `sporttype` or `lnsport` parameter can be specified.

4926 E4926 Cmd Rej: Service Portability feature must be enabled

The AINPQ feature must be enabled before this command can be entered.

5195 E5195 Cmd Rej: AINPQ feature must be enabled

The LNPSUBDIGLEN value should be less than value of LNPATLDIGLEN.

3509 E3509 Cmd Rej: LNPSUBDIGLEN should be less than LNPATLDIGLEN

Output

```
chg-ainpopts:rfmt=rnasd:nec=0
```

```
tekelecstp 09-06-03 15:15:44 EST EAGLE 41.1.0
CHG-AINPOPTS: MASP A - COMPLTD
;
```

Related Topics

- [rtv-ainpopts](#)

4.1.35 chg-aiqopts

Use this command to provision AIQ specific data. This command updates the AIQOPTS table.

Parameters

digmaxlen (optional)

Maximum Length of Digit String. The maximum length of a digit string that is considered valid in the *Digits (Dialed)* field of an AnalyzedInformation query.

Range:

1 - 32

Default:

No change to the current value

System Default:

32

digminlen (optional)

Minimum Length of Digit String. The minimum length of a digit string that is considered valid in the *Digits (Dialed)* field of an AnalyzedInformation query.

Range:

1 - 32

Default:

No change to the current value

System Default:

1

pfx (optional)

Digit String. The digit string associated with a Trigger Type (value of `trigtype` parameter). The value specified for the `pfx` parameter is encoded in the response message.

Range:1-21 digits, *none**none* —deletes the associated Trigger Type value**Default:**

No change to the current value

System Default:*none***resfmt (optional)**

Response format. The format of outgoing routing digits in the AnalyzedInformation response message.

Range:***pfxdn***the value specified for the `pfx` parameter + the incoming dialed digits***pfx***the value specified for the `pfx` parameter**Default:**

No change to the current value

System Default:*pfxdn***respar (optional)**

Response Digits. The TCAP field used to encode the AnalyzedInformation response message.

Range:***rtdigits***

TCAPRoutingDigitsfield

digits

TCAPDigits(Dialed)field

Default:

No change to the current value

System Default:*rtdigits***tcaperr (optional)**

TCAP Error Code. The TCAP error code used in a Return Error response.

Range:*129 - 255*

- 129—UnrecognizedMIN
- 130—UnrecognizedESN
- 131—MIN/HLR Mismatch
- 132—OperationSequenceProblem
- 133—ResourceShortage
- 134—OperationNotSupported
- 135—TrunkUnavailable
- 136—ParameterError
- 137—SystemFailure
- 138—UnrecognizedParameterValue
- 139—FeatureInactive
- 140—MissingParameter
- 141-239—Reserved
- 240-255—Reserved for Protocol Extension

Default:

No change to the current value

System Default:*138***trigtype (optional)**TriggerType Value. An individual trigger used to specify an association between a trigger and a corresponding address digit string (value of *px* parameter).A maximum of 20 *trigtype - px* entries are supported. The *px* digit string corresponding to the specified Trigger Type present in the Incoming AnalyzedInfo Query is encoded in the Response message.**Range:***0 - 255*[Table 4-1](#) lists the mnemonic for each TRIGTYPE decimal value.**Example**

This example specifies the provisioning of a Trigger Type – Prefix string pair:

```
chg-aiqopts:trigtype=2:px=65432
```

This example deletes an already provisioned Trigger Type:

```
chg-aiqopts:trigtype=2:px=none
```

This example specifies the digminlen-digmaxlen range (5-7):

```
chg-aiqopts:digminlen=5:digmaxlen=7
```

This example provisions the response parameter and response format:

```
chg-aiqopts:respar=rtdigits:resfmt=pxf
```

Dependencies

The ANSI41 AIQ feature must be enabled before this command can be entered.

5158 E5158 Cmd Rej: ANSI41 AIQ feature must be enabled

The AIQOPTS table is corrupt or cannot be found.

5181 E5181 Cmd Rej: Unable to read AIQ Options Table

The `pxf` and `trigtype` parameters must be specified together in the command.

5203 E5203 Cmd Rej: PFX and TRIGTYPE must be specified together

The value specified for the `digminlen` parameter must be less than or equal to the value specified for the `digmaxlen` parameter.

5202 E5202 Cmd Rej: DIGMINLEN must be less than or equal to DIGMAXLEN

A maximum of 20 `trigtype - pfx` entries can be specified in the AIQOPTS table.

5204 E5204 Cmd Rej: Max allowed AIQ Trigger Type - Prefix entries Provisioned

A `pxf - trigtype` pair must be specified with a supported value for the `trigtype` parameter before the `pxf=none` parameter can be specified.

5205 E5205 Cmd Rej: Cannot delete an AIQ Trigger Type that is not Provisioned

Notes

If the same value is specified for the `digminlen` and `digmaxlen` parameters, then only MSUs with dialed digits of the specified length are accepted for processing.

The value of the *Digits (Dialed)* length must be between the values specified for the `digminlen` and `digmaxlen` parameters.

A maximum of 20 `pxf - trigtype` pairs can be specified.

[Table 4-1](#) lists the decimal value and mnemonic for each TRIGTYPE parameter value.

Table 4-1 TRIGTYPE Parameter Values

Decimal Value	Mnemonic	Decimal Value	Mnemonic
0	Unspecified.	24	Local_Call.
1	All_Calls.	25	Local_Toll_Call.
2	Double_Introducing_Star.	26	Non-Local_Toll_Call
3	Single_Introducing_Star.	27	World_Zone_Call.
4	Reserved [for Home_System_Feature_Code]	28	International_Call.
5	Double_Introducing_Pound.	29	Unrecognized_Number.

Table 4-1 (Cont.) TRIGTYPE Parameter Values

Decimal Value	Mnemonic	Decimal Value	Mnemonic
6	Single_Introducing_Pound.	30	Prior_Agreement.
7	Revertive_Call.	31	Specific_called_Party_Digit_String.
8	0_Digit.	32	Mobile_Termination.
9	1_Digit.	33	Advanced_Termination.
10	2_Digit.	34	Location.
11	3_Digit.	35-63	Reserved. Treat a reserved value the same as value 0, Unspecified.
12	4_Digit.	64	Terminating_Resource_Available.
13	5_Digit.	65	T_Busy.
14	6_Digit.	66	T_No_Answer.
15	7_Digit.	67	T_No_Page_Response.
16	8_Digit.	68	T_Unroutable.
17	9_Digit.	69-219	Reserved. Treat a reserved value the same as value 0, Unspecified.
18	10_Digit.	220	Reserved for TDP-R DP value.
19	11_Digit.	221	Reserved for TDP-N DP value.
20	12_Digit.	222	Reserved for EDP-R DP value.
21	13_Digit.	223	Reserved for EDP-N DP value.
22	14_Digit.	224-255	Reserved for TIA-41 protocol extension. If unknown, treat the same as value 0, Unspecified.
23	15_Digit.		

Output

```
chg-aiqopts:trigtype=2:px=65432:respar=rtdigits:tcaperr=135
```

```
tekelecstp 09-12-03 12:40:16 EST EAGLE 42.0.0
CHG-AIQOPTS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [rtrv-aiqopts](#)

4.1.36 chg-appl-rtkey

Use this command to change static entries in the Routing Key table. Only one attribute can be changed at a time.

Parameters**Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

**Note:**

See [Table A-4](#) for valid CIC values for specified SI and MSU types.

cice (optional)

The end range of circuit identification codes assigned to the routing key. The `cice` and `cics` parameters identify the routing key to be changed.

Range:

0 - 4294967295

cics (optional)

The start range of circuit identification codes assigned to the routing key. The `cics` and `cice` parameters identify the routing key to be changed.

Range:

0 - 4294967295

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

`dpca`

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

dpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-`

`stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

dpcn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number--sub number area--main number area* (*un-sna-mna*).

Range:

un--000--127

sna--000--15

mna--000--31

ncics (optional)

The new start range of circuit identification codes assigned to the routing key. Specify the `ncics` and/or `ncice` parameter to change the range of the circuit identification codes assigned to the routing key.

Range:

0 - 4294967295

ncice (optional)

The new end range of circuit identification codes assigned to the routing key. Specify the `ncice` and/or `ncics` parameter to change the range of the circuit identification codes assigned to the routing key.

Range:

0 - 4294967295

nrcontext (optional)

This parameter modifies the routing context value assigned to this routing key. Routing context is mandatory for routing keys associated with SUA Application Servers. Routing context is optional for routing keys associated with M3UA Application Servers.

An AS can be associated with only 1 routing key with routing context. An AS can be associated with multiple routing keys that do not contain routing context. An AS cannot be simultaneously assigned to a routing key with routing contexts and to routing keys without routing contexts.

Range:

0 - 4294967295

opc (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym:

opca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001-005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006-255`.

The point code `000-000-000` is not a valid point code.

opc/opca/opci/opcn/opcn24/opcn16 (optional)

Originating point code. Valid only (and required) if `si=4, 5, or 13`.

opci (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

opcn (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

opcn24 (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

opcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*un--000--127**sna--000--15**mna--000--31***rcontext (optional)**

This parameter specifies a routing key by its routing context when a routing key needs to be changed as an alternative to entering the `dpc/si/ssn/opc/cics/cice/type` parameters.

Split operations are invalid for routing keys with routing context.

Range:

0 - 4294967295

si (optional)

The service indicator.

Range:

0-15 or equivalent text values:

Number =Text—Description

0=*snm*—Signaling network management messages

1=*regtest*—Signaling network testing and maintenance regular

2=*spltest*—Signaling network testing and maintenance special

3= *sccp* —SCCP

4= *tup* —Telephone user part

5= *isup* —ISDN user part

13= *qbicc*

See [Table A-4](#) and [Table 4-2](#) for valid *si* values in combination with other parameters.

split (optional)

The CIC value where the routing key with the specified CICS and CICE range will be split. The specified routing key is split into two entries with adjacent CIC ranges. The existing routing key retains the range of CICs that is lower than the split value. The value of *split* minus 1 is used as the end range for this entry. The range of CICs assigned to the original entry is the values of *cics* to *split* minus 1.

A new routing key entry is created with the high end of the original range. The *split* value is used as the start of the CIC range for this entry. The range of CICs assigned to the new entry is the values of *split* to *cice*.

This parameter is valid only if *si*=4, 5, or 13 and is not valid with *ncics* or *ncice*. See [Table A-4](#) and [Table 4-2](#).

Range:

0 - 16363

ssn (optional)

Subsystem number.

Range:

0 - 255

type (optional)

Type of routing key.

Range:

full

default

partial

Default:
full

Example

```
chg-appl-
rtkey:dpc=123-230-245:si=5:opc=123-230-244:cics=1:cice=100:split=50

chg-appl-
rtkey:dpc=123-230-245:si=5:opc=123-230-244:cics=1:cice=50:ncice=100

chg-appl-
rtkey:dpcn24=10-100-10:si=5:opc=123-230-244:cics=1:cice=100:ncice=2
00

chg-appl-rtkey:dpc=8-8-8:si=3:ssn=5:rcontext=500

chg-appl-
rtkey:dpci=s-3-11-1:si=5:opci=s-4-11-1:cics=1:cice=1000:ncice=500

chg-appl-rtkey:rcontext=5:ncice=100

chg-appl-rtkey:rcontext=1:nrcontext=2

chg-appl-
rtkey:dpcn16=121-10-15:si=5:opc=121-10-15:cics=1:cice=50:ncice=10
0
```

Dependencies

Optional parameters that must be specified with the `chg-appl-rtkey` command depend on the type of routing key being changed. See [Table 4-2](#) for valid parameter combinations.

N/A N/A

For SS7IPGW and IPGW applications running on E5-ENET-B cards, there is a limit of 2500 routing keys in the system. The `srkq` parameter (see the `chg-sg-opts` command) limits the maximum number of static routing keys that can be provisioned with the `ent-appl-rtkey` command.

3842 E3842 Cmd Rej: Entries in static route key table cannot exceed SRKQ

The subsystem number is mandatory and valid only when the `si=3` (or `sccp`) parameter is specified; if the `si` parameter does not equal 3 (or `sccp`), the `ssn` parameter cannot be specified.

3743 E3743 Cmd Rej: SSN required if SI is 3

The value entered for the starting circuit identification code (`cics`) must be less than or equal to the value entered for the ending circuit identification code (`cice`).

3783 E3783 Cmd Rej: CICS must be less than or equal CICE

The value entered for the new starting circuit identification code (`ncics`) must be less than or equal to the value entered for the new ending circuit identification code (`ncice`).

3826 E3826 Cmd Rej: NCICS must be less than or equal to NCICE

A circuit identification code range (`cics` to `cice`) cannot be specified that overlaps an existing routing key.

3825 E3825 Cmd Rej: New CIC range overlaps an existing routing key

When `si=4, 5, or 13` (or `tup, isup, or qbicc`), the `opc`, `cics`, and `cice` parameters are required. The `opc`, `cics`, and `cice` parameters can be specified only if `si=4, 5, or 13`.

3788 E3788 Cmd Rej: OPC, CICS, CICE are required if SI is 4, 5 or 13

The value entered for the `split` parameter must be greater than the value entered for the `cics` parameter and less than or equal to the value entered for the `cice` parameter.

3832 E3832 Cmd Rej: SPLIT must be greater than CICS

The value entered for the `ncics` parameter must be less than or equal to the value entered for the `cice` parameter when the `ncice` parameter is not specified.

3834 E3834 Cmd Rej: NCICE unspecified, NCICS must be less than or equal CICE

The value entered for the `ncice` parameter must be greater than or equal to the value entered for the `cics` parameter when the `ncics` parameter is not specified.

3854 E3854 Cmd Rej: NCICS unspecified, NCICE must be greater than or equal CICS

The `si` parameter must have a value of `4, 5, or 13` (or `tup, isup, or qbicc`) before the `split`, `ncics`, and `ncice` parameters can be specified.

3838 E3838 Cmd Rej: SPLIT, NCICS, NCICE are not allowed unless SI is 4, 5 or 13

A DPC/SI routing key must be specified when the DPC is ANSI and the `si=4` parameter is specified (TUP is used only in an ITU network).

3874 E3874 Cmd Rej: TUP must use DPC/SI route key if DPC is ANSI

[Table A-4](#) shows valid CIC values for SI types 4, 5, and 13.

N/A N/A

Partial point codes are not allowed; no asterisks can be specified in the point codes in the command.

2166 E2166 Cmd Rej: Partial point codes are not allowed

Mixed point code types are not allowed; `opc` and `dpc` types must match.

2501 E2501 Cmd Rej: Mixed point code types are not allowed

If the `type=partial` or `type=default` parameter is specified, then the `split` and `resize` parameters cannot be specified.

3958 E3958 Cmd Rej: When `type=partial` or `default`, SPLIT/RESIZE are not supported

If the `type=default` parameter is specified, then the `dpc`, `si`, `ssn`, `opc`, `cics`, and `cice` parameters cannot be specified.

3959 E3959 Cmd Rej: Invalid combination of parameters for a default routing key

When the `type=full` parameter is specified, the `dpc` and `si` parameters must be specified.

3999 E3999 Cmd Rej: When `type=full`, DPC and SI must be specified

The following types of partial routing keys are supported:

- DPC-SI-OPC (ignore CIC) can be used as a partial match key for CIC- based traffic.
- DPC-SI (ignore all other fields) can be used as a partial match key for CIC- based traffic or SCCP traffic.
- DPC only (ignore all other fields) can be used as a partial match for any type of traffic.
- SI only (ignore all other fields) can be used as a partial match for any type of traffic.

3955 E3955 Cmd Rej: Invalid combination of parameters for a partial routing key

If the `rcontext` parameter is specified, then the `split`, `ncics` and `ncice` parameters cannot be specified.

4078 E4078 Cmd Rej: Conflicting parameters specified

The `rcontext` parameter must be specified for routing keys that are associated with SUA Application Servers.

4161 E4161 Cmd Rej: Routing Context is required for SUA

The specified `rcontext` parameter value must already exist in the database.

N/A N/A

If specified, the service indicator parameter must be `si=3` for routing keys that are associated with SUA Application Servers.

4262 E4262 Cmd Rej: SI value must be 3 for SUA

An AS cannot be simultaneously assigned to a routing key with routing contexts and routing keys without routing context. To assign an M3UA or SUA association to multiple routing keys with routing context, the M3UA/SUA association must be assigned to more than one AS, and each AS must be assigned to a routing key with routing context.

4300 E4300 Cmd Rej: Conns cannot exist in rkeys with and without rcontext

The AS name and parameters specified for a routing key must use an address format that is valid for the adapter type assigned to the AS.

The routing context value should be unique.

4139 E4139 Cmd Rej: Routing Context already equipped.

Table 4-2 Valid Parameter Combinations for chg-appl-rtkey Routing Key Types

Action	dpc	si	ssn	opc	cics	cice	ncics	ncice	split	type
Split CIC Range	X	X		X	X	X			X	full
Re-size CIC Range	X	X		X	X	X	X	X		full
Socket Name Override (SI=ISUP or 5)	X	X		X	X	X				full

Table 4-2 (Cont.) Valid Parameter Combinations for chg-appl-rtkey Routing Key Types

Action	dpc	si	ssn	opc	cics	cice	ncics	ncice	split	type
Socket Name Override (SI = SCCP or 3)	X	X	X							full
Socket Name Override (SI = not 3, 4, 5, or 13)	X	X								full
Socket Name Override (SI = 4, 5, or 13)	X	X		X						partial
Socket Name Override (SI = 3, 4, 5 or 13)	X	X								partial
Socket Name Override SI-only key		X								partial
Socket Name Override DPC-only key	X									partial
Socket Name Override Default key										default

3831 E3831 Cmd Rej: Invalid parameter combination for SI

The value of the `nrcontext` parameter cannot be changed for a routing key if the `rcontext` parameter has not been configured for that routing key.

4598 E4598 Cmd Rej: Routing Context not configured

The attributes that are required to change a routing key must be specified in the command.

3840 E3840 Cmd Rej: Attributes required

The maintenance data must be accessible.

2887 E2887 Cmd Rej: Failed accessing maintenance data

J7 support feature must be enabled before the dpcn16/opcn16 parameter can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The `opc`, `cics`, and `cice` parameters can be specified with the `si` parameter only if the `si` parameter has a value of 4, 5, or 13 (or `tup`, `isup`, or `qbicc`).

3789 E3789 Cmd Rej: OPC, CICS, CICE are not allowed unless SI is 4, 5 or 13

Notes

A routing key entry associates a routing key with a socket name or Application Server (AS) name.

The `dpc`, `si`, `ssn`, `opc`, `cics`, and `cice` parameters are used to identify the routing key to be changed.

The `split`, `ncics`, and `ncice` parameters are used to specify new values for the routing key.

The `opc`, `cics`, and `cice` parameters are not required for partial routing keys.

The `cics`, `cice`, `ncice`, `ncice`, and `split` parameters are required when `si=4` and ITU DPCs (`dpci`, `dpcn`) are specified. These parameters are not valid when an ANSI DPC (`dpc`, `dpca`) is specified and `si=4`.

The following changes can be made for routing keys. Only one of these changes is allowed per command.

- A routing key can be split into two entries with adjacent CIC ranges. The resulting entries retain the socket associations of the original entry.
- The range of CICs assigned to a routing key can be changed as long as it does not overlap another routing key. The new entry retains the socket associations of the original entry.

Group codes are required for ITU-N point codes (DPCN/OPCN) when the Duplicate Point Code feature is turned on.

Routing context is a routing key parameter that uniquely identifies routing keys. Routing context is mandatory for routing keys associated with SUA Application Servers and optional for routing keys associated with M3UA Application Servers.

An AS cannot be simultaneously assigned to a routing key with routing contexts and routing keys without routing contexts.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (S-).

Output

```
chg-appl-rtkey:dpc=123-230-245:si=3:ssn=250:nsname=socket5
```

```
rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
CHG-APPL-RTKEY: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-appl-rtkey](#)

- [ent-appl-rtkey](#)
- [rtrv-appl-rtkey](#)

4.1.37 chg-as

Use this command to change the characteristics of an existing Application Server (AS).

Parameters

asname (mandatory)

Application Server name.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter.

mode (optional)

Traffic mode assigned to the AS.

Range:

loadshare

override

Default:

No change to the current value

System Default:

loadshare

tr (optional)

Recovery timer value for the AS in milliseconds.

Range:

10 - 2000

Default:

No change to the current value

System Default:

200

Example

```
chg-as:asname=asx:mode=override
```

Dependencies

The value specified for the `asname` parameter must already exist in the AS table.

4079 E4079 Cmd Rej: Specified AS name not found

Association connection parameters must be unique.

N/A N/A

The connection state for all associations assigned to the AS must be `open=no` before the `mode` parameter can be changed.

4098 E4098 Cmd Rej: OPEN must be NO to change an Association or its AS/Rtkey

Notes

By default, the AS recovery timer value is set to 200 ms when an AS is entered. This value can be changed at any time using the `chg-as` command. The new timer value will be used the next time the AS enters the AS-Pending state.

Output

```
chg-as:asname=asx:mode=override
```

```
rlghncxa03w 04-01-17 15:35:05 EST EAGLE 31.3.0
CHG-AS: MASP A - COMPLTD
;
```

Related Topics

- [dlt-as](#)
- [ent-as](#)
- [rept-stat-as](#)
- [rtv-as](#)

4.1.38 chg-assoc

Use this command to configure existing SCTP associations in the IPAPSOCK table.

Parameters

aname (mandatory)

Name assigned to this association (in the IPAPSOCK table).

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter.

adapter (optional)

Adapter layer for the association.

Range:

diam

m2pa

m3ua

sua

Default:

No change to the current value

System Default:

m3ua

alhost (optional)

Alternate local host name. This parameter configures the SCTP association as a multi-homed endpoint.

Range:

////////////////////////////////////

Any string of characters beginning with a letter and comprising up to 60 characters in length

Valid characters are *a–z*, *A–Z*, *0–9*, - (dash), . (period)

none —The alhost is not configured; the SCTP association is configured as a uni-homed endpoint.

alw (optional)

The parameter specifies whether the connection manager should allow or disallow the association to carry SS7 traffic.

Range:***yes***

allow the association to carry SS7 traffic.

no

prohibit the association from carrying SS7 traffic.

Default:

No change to the current value

System Default:

no

bufsize (optional)

Association buffer size in Kilobytes.

Range:

8 - 400

cwmin (optional)

Minimum congestion window. The minimum and initial sizes, in bytes, of the association's congestion window.

Range:

1500 - 409600

Default:

No change to the current value

System Default:

3000

hbtimer (optional)

Heartbeat timer in milliseconds. The Heartbeat timer value + RTO (Retransmission Time Out) is the value of heartbeat interval at which heartbeat request should be sent.

 **Note:**

If the heartbeat timer value is not a multiple of 100, then its value will be set to the largest multiple of 100 that is less than the specified hbtimer value. For example, if the specified hbtimer value is 777, then its value would be set to 700.

Range:

500 - 10000

Default:

500

istrms (optional)

SCTP Inbound Stream Value. A 16-bit unsigned integer that defines the number of streams the sender allows the peer end to create in this association.

Range:

1 - 2

lhost (optional)

Local host name. The local host name as defined in the IP Host table.

Range:

XX

Any string of characters beginning with a letter and comprising up to 60 characters in length.

Valid characters are 0-9, a-z, A-Z, - (dash), . (period).

Default:

No change to the current value

link (optional)

Signaling link for the association.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all link parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have assigned signaling links.

Default:

No change to the current value

lport (optional)

Local port. The SCTP port number for the local host.

Range:

1024 - 65535

Default:

No change to the current value

m2patset (optional)

M2PA timer set assigned to this association.

Range:

1 - 20

Default:

1

open (optional)

Connection state (open or closed) that the connection manager is to put the association in when the socket is operational.

The `chg-assoc` command allows initiation of SCTP graceful shutdown on a per association basis for IPSPG M3UA associations or diameter connections (maintained in the DCONN table) . The `chg-assoc:open=no` command aborts the association and closes the diameter connection (if associated) unless graceful shutdown is provisioned (see the `chg-uaps` command). If provisioned, then SCTP graceful shutdown for an association occurs after execution of `chg-assoc:open=no`.

Range:**yes**

The connection manager is to open the association if the association is operational.

no

The connection manager will not open the association.

Default:

No change to the current value

System Default:

no

ostrms (optional)

SCTP Outbound Stream Value. The 16-bit unsigned integer that defines the number of streams the sender wants to create in this association.

Range:

1 - 2

rhost (optional)

Remote host. The name of the remote host as defined in the IP Host table.

Range:

XX

Any string of characters beginning with a letter and comprising up to 60 characters in length.

Valid characters are a-z, A-Z, 0-9, - (dash), . (period)

Default:

No change to the current value

rhosttype (optional)

Remote host type. This parameter specifies whether the remote host is a primary or alternate remote address.

**Note:**

The alternate remote address is used for multi-homed remote hosts.

Range:***alternate***

alternate remote address

primary

primary remote address

Default:

No change to the current value

System Default:

primary

rhostval (optional)

Remote host validation. The validation mode for the association when an SCTP INIT/INIT-ACK message is received.

Range:***match***

accept the message if the message contains the primary remote host value and the alternate remote host value (if the alternate remote host is provisioned). If the alternate remote host is not provisioned, then accept the message if the message contains the primary remote host value. Reject the message if it contains any IP address other than that of the primary or alternate remote host.

The rules determining the use of the *relaxed* and *match* modes depend on multiple conditions, including whether an alternate remote host is provisioned. See [Table 4-4](#) for validation rules that are used to establish an association for the *relaxed* and *match* modes.

relaxed

accept the message if the IP address for the primary or alternate remote host matches the IP address, source IP address, or host name in the message

Default:

No change to the current value

System Default:

relaxed

rmax (optional)

Maximum retransmission timeout. The maximum value of the calculated retransmission timeout in milliseconds.

Range:

10 - 1000

Default:

No change to the current value

System Default:

800

rmin (optional)

Minimum retransmission timeout. The minimum value of the calculated retransmission timeout in milliseconds.

Range:

10 - 1000

Default:

No change to the current value

System Default:

120

rmode (optional)

Retransmission mode. The retransmission policy used when packet loss is detected.

Range:***lin***

The Oracle Linear Retransmission Policy where each retransmission timeout value is the same as the initial transmission timeout, and only the slow start algorithm is used for congestion control.

rfc

Standard RFC 2960 algorithm in the retransmission delay doubles after each retransmission. The RFC 2960 standard for congestion control is also used.

Default:

No change to the current value

System Default:

lin

rport (optional)

Remote port. The SCTP port number for the remote host.

Range:

1024 - 65535

Default:

No change to the current value

rtimes (optional)

Maximum retransmission retries. The number of times a data retransmission will occur before closing the association.

Range:

1 - 12

Default:

No change to the current value

System Default:

10

rtxthr (optional)

Retransmission threshold. The value of the retransmission threshold to tune the IP Connection Excess Retransmits alarm.

Range:

0 - 65535

Default:

0

uaps (optional)

User adapter parameter set. The set used by the M3UA, SUA or M2PA associations for various timer and parameter values including False IP Connection Congestion Timer, UA Heartbeat Period Timer, UA Heartbeat Received Timer, ASP SNM options, ASP/AS Notifications, UA Serviceability options, and Payload Protocol Indicator byte order option.

Range:

1 - 10

ver (optional)

Version. The M2PA version supported by the association.

 **Note:**

The M2PA version is valid only for associations with the `adapter=m2pa` parameter specified.

Range:

d6

rfc

Example

```
chg-assoc:aname=a1:lhost=gw105.nc.tekelec.com:lport=1030:
rhost=gw100.nc.tekelec.com:rport=1030:open=yes:alw=yes:uaps=10
```

```
chg-assoc:aname=m3ua03:rtxthr=65535
```

```
chg-
```

```
assoc:aname=a1:lhost=tek1.com:lport=1030:rport=1030:rhost=tek2.com:
rhostval=match:rhosttype=primary
```

```
chg-  
assoc:aname=a1:rhost=tek.com:rhostval=relaxed:rhosttype=alterna  
te  
  
chg-assoc:aname=assoc1:adapter=diam  
  
chg-assoc:aname=a1:hbtimer=1000
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The value specified for the `aname` parameter must already exist in the IPAPSOCK table.

4099 E4099 Cmd Rej: Association name not found

An association's connection parameters (`lhost`, `rhost`, `lport`, `rport`) must be unique.

4091 E4091 Cmd Rej: Association connection parameters must be unique

The connection state must be `open=no` to change the `lhost`, `rhost`, `lport`, `rport`, `port`, `alhost`, `adapter`, `m2patset`, `istrms`, `ostrms`, `rmode`, `rmin`, `rmax`, `rtimes`, `cwmin`, `bufsize`, and `hbtimer` parameters.

4098 E4098 Cmd Rej: OPEN must be NO to change an Association or its AS/Rtkey

The `lhost`, `lport`, `rhost`, and `rport` parameters must be specified before the `open=yes` parameter can be specified. The `aname` parameter and at least one other optional parameter must be specified before the `open=no` parameter can be specified.

3765 E3765 Cmd Rej: Fully specified connection required to change OPEN

The value of the `uaps` parameter can be changed for an association if the `open=yes` parameter is specified.

N/A N/A

The hostnames specified in the `lhost` and `alhost` parameters must refer to different IP addresses.

3618 E3618 Cmd Rej: LHOST and ALHOST must refer to different IP addresses

The hostnames specified in the `lhost` and `alhost` parameters must refer to IP addresses on the same IP card.

3619 E3619 Cmd Rej: LHOST and ALHOST must refer to IP address on the same card

If the LHOST is defined on Port A its ALHOST must be on PORT B.

If the LHOST is defined on Port B its ALHOST must be on PORT A.

If the LHOST is defined on Port C, its ALHOST must be PORT D.

If the LHOST is defined on Port D, its ALHOST must be PORT C.

3627 E3627 Cmd Rej: Invalid combination of LHOST and ALHOST interfaces.

An association with an SUA or M3UA adapter cannot be specified as a local host on a card running the IPLIMI application.

An association with an M2PA adapter cannot be specified as a local host on a card running the SS7IPGW or IPGWI application.

An association with an SUA adapter cannot be specified as the local host on a card running the IPSPG application.

4651 E4651 Cmd Rej: Invalid adapter for specified association

The local host must have a signaling link assigned to its associated signaling link port before the `open=yes` parameter can be specified.

3446 E3446 Cmd Rej: SLK not provisioned for assigned Lhost

The adapter layer cannot be changed for an association that is already associated with an Application Server (AS).

4089 E4089 Cmd Rej: Unable to change adapter when assigned to an AS

Before the local host can be changed, the new local host must have a signaling link assigned to its associated signaling link port.

N/A N/A

Links A-A7 and B-B7 can be specified for an E5-ENET-B or SLIC card running the IPLIMI application.

3860 E3860 Cmd Rej: Link not valid for card or application type

The card location for the card associated with the `lhost` and `alhost` must exist in the IP Link table.

3095 E3095 Cmd Rej: LHOST/ALHOST location not found

The allowed maximum is 1 association per signaling link on IPLIMx cards.

4092 E4092 Cmd Rej: Too many associations per SLK

A maximum of 50 connections (association-to-AS assignments) can be specified per local host on IPGWx cards.

3747 E3747 Cmd Rej: Too many IP connections per card

A maximum of 4000 connections (association-to-AS assignments + sockets) are allowed per system.

4448 E4448 Cmd Rej: Maximum adapter states per card exceeded

[Table 4-3](#) shows the maximum number of associations and links for E5-ENET-B cards.

Table 4-3 Maximum IP Associations and Links

GPL	Max # of Associations	Max # of Links
IPLHC	16	16
IPGHC	50	1
IPSG	32	32
IPSG on SLIC	128	128

Table 4-3 (Cont.) Maximum IP Associations and Links

GPL	Max # of Associations	Max # of Links
DEIRHC	32	-

3747 E3747 Cmd Rej: Too many IP connections per card

The `rmin` parameter value must be less than or equal to the `rmax` parameter value.

3278 E3278 Cmd Rej: RMIN must be less than or equal to RMAX

The `cwmin` parameter value must be less than or equal to the `bufsize` parameter value.

3279 E3279 Cmd Rej: CWMIN must be less than or equal to assoc BUFSIZE

If the `m2patset` parameter is specified, the `adapter=m2pa` parameter must be specified.

3469 E3469 Cmd Rej: M2PATSET requires M2PA adapter type

The trade ratio states the quantity of associations to sockets that may be provisioned on a certain card, as follows:

- Trade Ratio = a:s
- Where: a=associations and s=sockets

N/A N/A

The requested buffer size increase cannot exceed available buffer space on the card. Use the `rtrv-assoc` command with the `aname`, `lhost`, or `alhost` parameter to display used and total buffer space on the card.

4602 E4602 Cmd Rej: Requested Assoc Buffer Space Exceeds Available Buffer Space.

The `ver` parameter can only be specified if the `adapter=m2pa` parameter is specified.

4555 E4555 Cmd Rej: Version parameter not supported for SUA or M3UA

If the value specified for the `lhost` parameter indicates an IPSPG card or DEIR card running the DEIRHC GPL, then the `link` parameter cannot be specified.

3860 E3860 Cmd Rej: Link not valid for card or application type

If an IPSPG card is being used, and if the association is referenced by a signaling link, then new values cannot be specified for the `lhost` or `adapter` parameters.

4801 E4801 Cmd Rej: Association is still assigned to a link

An IPSPG card running on E5--ENET-B card or DEIR card can contain a maximum of 32 associations.

An IPSPG application running on the SLIC card can contain a maximum of 128 associations.

4093 E4093 Cmd Rej: Too many associations per card

If the value specified for the `aname` parameter refers to an M3UA association on an IPSCG card, then the `alw` parameter cannot be specified.

5117 E5117 Cmd Rej: ALW option invalid for IPSCG-M3UA associations

The value specified for the `lhost` parameter cannot change the local host for the association from an IPLIMx or IPGWx card to an IPSCG card or from an IPSCG card to an IPLIMx or IPGWx card.

5133 E5133 Cmd Rej: Interchanging IPLIMx/IPGWx Assoc to IPSCG Assoc not supported

The `rhosttype=primary` parameter must be specified before the `rhosttype=alternate` parameter can be specified.

5135 E5135 Cmd Rej: Primary remote hostname required before alternate

If the `rhosttype` parameter is specified, then the `rhost` parameter must be specified.

5136 E5136 Cmd Rej: Remote hostname required with `rhosttype`.

The value specified for the alternate remote host cannot be the same as the value specified for the `lhost`, `alhost`, or `rhost` parameter in the same association.

5137 E5137 Cmd Rej: Arhost value must not match `lhost/alhost/rhost`.

The value specified for the `rhost` parameter cannot be the same as the value specified for the alternate remote host or for the `lhost` or `alhost` parameter in the same association.

5138 E5138 Cmd Rej: Rhost value must not match `lhost/alhost/arhost`

The host name specified by the `lhost` parameter must exist in the IP Host table and must be provisioned as local to this EAGLE.

A valid value must be specified for the `host` parameter. If the host name contains a hyphen, then the host name must be enclosed within quotation marks.

3731 E3731 Cmd Rej: Invalid Hostname

Realm must be associated with the RHOST specified in the IPHOST table for diameter association.

2805 E2805 Cmd Rej: Host and Realm required for diameter connection

RHOST must be present in the IPHOST table.

3739 E3739 Cmd Rej: No Entry found

Remote IP address (RHOST) must not exist in the IPLINK table.

2685 E2685 Cmd Rej: Remote IP address exists in the IPLINK table

The local host name (`lhost`) parameter must be configured before the alternate local host name (`alhost`) parameter is configured.

2745 E2745 Cmd Rej: ALHOST is invalid without LHOST

The allowed maximum is 1 connection per signaling link on IPLIMx cards.

3769 E3769 Cmd Rej: Too many sockets per SLK

No two open associations can have the same value for the LHOST/LPORT parameters.

4090 E4090 Cmd Rej: Open associations cannot have same `lhost / lport`

IP address associated with the LHOST and ALHOST should be of the same IP version.

3258 E3258 Cmd Rej: LHOST and ALHOST must be of the same IP version.

IP address associated with the LHOST and RHOST should be of the same IP version.

3264 E3264 Cmd Rej: LHOST and RHOST must be of the same IP version.

Notes

The command that is entered cannot exceed a total of 150 characters in length.

The IPASOCK table is used to associate the Local Host/Local Port to a Remote Host/Remote Port. This fully specifies the connection.

If the `open=yes` parameter is specified, the association's `lhost` and `lport` configuration must not match that of any open association.

If the card's application is IPLIMI, then the `adapter` parameter value and the `ipliml2` value for the assigned signaling link must be `m2pa`.

An association with an `adapter` value of `m2pa` cannot be assigned to an SS7IPGW or IPGWI host.

For diameter associations (`adapter=DIAM`), `realm` must be associated with `lhost` and `rhost` parameters before `open=yes` parameter can be specified.

The `link` parameter is not allowed with diameter associations (`adapter=DIAM`).

While entering `arhost` for an `alhost`, the user needs to specify `rhost` parameter with `rhosttype=alternate`.

If none is specified for either `alhost` or `rhost`, that parameter is removed from the association's entry.

To delete an `arhost`, the user needs to specify `rhost=none` with `rhosttype=alternate`.

The M2PA version is supported if the application is IPLIMx and the `adapter=m2pa` parameter is specified. When changing the association adapter type to `m2pa` and a version is not specified, the `m2pa=rfc` value is assigned by default.

Table 4-4 shows the validation rules used to establish an association.

Table 4-4 Validation Rules for Association Establishment

RHOSTVAL	RHOST Configured	ARHOST Configured	Source Parameter in IP Header	IP Address List in INIT/INIT ACK	Host Name Address Present in INIT/INIT ACK
RELAXED	Y	N	RHOST	NA (1 or more IP addresses can be present, not necessarily match RHOST.)	N

Table 4-4 (Cont.) Validation Rules for Association Establishment

RHOSTVAL	RHOST Configured	ARHOST Configured	Source Parameter in IP Header	IP Address List in INIT/INIT ACK	Host Name Address Present in INIT/INIT ACK
RELAXED	Y	N	NA	RHOST (other IP addresses can also be present)	N
RELAXED	Y	N	RHOST	NA	RHOST
MATCH	Y	N	RHOST	N	N
MATCH	Y	N	RHOST	RHOST only (no additional addresses can be present)	N
MATCH	Y	N	RHOST	NA	RHOST only
RELAXED	Y	Y	RHOST or ARHOST	NA	N
RELAXED	Y	Y	NA	RHOST or ARHOST	N
RELAXED	Y	Y	Same as Hostname	NA (Ignore any IP addresses present)	RHOST or ARHOST
MATCH	Y	Y	RHOST	ARHOST must be present. RHOST can also be present. No other additional addresses.	N
MATCH	Y	Y	ARHOST	RHOST must be present. ARHOST can also be present. No other additional addresses	N

Output

```
chg-assoc:aname=a1:lhost=gw105.nc.tekelec.com:lport=1030:rport=1030:
uaps=10:rhost=gw100.nc.tekelec.com:alw=yes:rhostval=match:rhosttype=
primary
```

```
rlghncxa03w 09-03-19 15:35:05 EST EAGLE 41.0.0
```

```
CHG-ASSOC: MASP A - COMPLTD  
;
```

Related Topics

- [dlt-assoc](#)
- [ent-assoc](#)
- [rept-stat-assoc](#)
- [rtrv-assoc](#)

4.1.39 chg-atinpqopts

Use this command to provision ATINP-specific data. This command updates the ATINPQOPTS table.

Parameters

atiackimsi (optional)

ATIACK IMSI parameter for ATI ACK response message. This parameter specifies formatting of IMSI digits in the ATI ACK response message. The result of formatting determines whether the IMSI parameter will be included in the response.

Range:

srfimsi

If an entity was found during RTDB lookup, and SRFIMSI was provisioned in the EPAP entity, then include the IMSI parameter and encode the IMSI digits as the SRFIMSI.

asd

If an entity was found during RTDB lookup and ASD (Additional Subscriber Data) was provisioned in the EPAP entity, then include the IMSI parameter and encode the IMSI digits as ASD.

grn

If an entity was found during RTDB lookup, and GRN (Generic Routing Number) was provisioned in the EPAP entity, then include the IMSI parameter and encode the IMSI digits as GRN.

none

Do not include the IMSI parameter in the response message.

Default:

none

atiackmsisdn (optional)

MSISDN parameter for ATI ACK response message. This parameter specifies the formatting of MSISDN parameter in the ATI ACK response message. The result of formatting determines whether the MSISDN parameter will be included in the response.

Range:***msisdn***

Include the MSISDN parameter in the ATI ACK response and encode MSISDN digits as the MSISDN from the incoming ATI query.

asd

If an entity was found during RTDB lookup and ASD (Additional Subscriber Data) was provisioned in the entity, then include the MSISDN parameter and encode the MSISDN digits as ASD.

asddlmsisdn

Include the MSISDN parameter in the ATI ACK response and encode MSISDN digits as ASD + delimiter (*atidlm*) + MSISDN. ASD is encoded if an entity is found and ASD is provisioned. The specified outbound message digits delimiter (*atidlm*) value is encoded if the value is not *none*. MSISDN is encoded as the MSISDN from the incoming ATI query.

grn

If an entity was found during RTDB lookup and GRN (Generic Routing Number) was provisioned in the EPAP entity, then include the IMSI parameter and encode the IMSI digits as GRN.

grndlmsisdn

Include the MSISDN parameter in the ATI ACK response and encode MSISDN digits as GRN + delimiter (*atidlm*) + MSISDN. GRN is encoded if GRN entity is found. The specified outbound message digits delimiter (*atidlm*) value is encoded if the value is not *none*. MSISDN is encoded as the MSISDN from the incoming ATI query.

none

Do not include the MSISDN parameter in the response message.

Default:

msisdn

***atiackrn* (optional)**

Routing number parameter for ATI ACK response message. This parameter specifies the formatting of the routing number parameter in the ATI ACK response message. The result of formatting determines whether the routing number parameter will be included in the response.

Range:***rn***

Routing number.

- If an entity was found in RTDB lookup and the entity type was RN, include the routing number parameter and encode routing number digits as found in the entity ID.
- If MSISDN was found in RTDB lookup, but no entity was found and the default routing number parameter value (*atidfltrn*) is not *none*, include the routing number parameter and encode routing number digits as the *atidfltrn* value.

- If MSISDN was not found in RTDB lookup and the default routing number parameter value (`atidfltrn`) is not *none*, include the routing number parameter and encode routing number digits as the `atidfltrn` value.
- If an entity was found in RTDB lookup, the entity type is SP, and the `atidfltrn` value is not *none*, include the routing number parameter and encode routing number digits as the `atidfltrn` value.

rnspl

Routing number or signaling point.

- If an entity was found in RTDB lookup and the entity type was either SP or RN, include routing number parameter and encode routing number digits as found in the entity ID.
- If MSISDN was found in RTDB lookup but no entity was found and the default routing number parameter value (`atidfltrn`) is not *none*, include the routing number parameter and encode routing number digits as the `atidfltrn` value.
- If MSISDN was not found in RTDB lookup and the default routing number parameter value (`atidfltrn`) is not *none*, include the routing number parameter and encode routing number digits as the `atidfltrn` value.
- If an entity was found in RTDB lookup and the entity type was not SP or RN and the default routing number parameter value (`atidfltrn`) is not *none*, include the routing number parameter and encode routing number digits as the `atidfltrn` Entity.

asddlmrnspl

ASD, delimiter and routing number or signaling point.

Format routing number digits as ASD (if supported and available from lookup entity) + `atidlm` (if not *none*) + entity digits (as described in the `atiackrn=rnspl` parameter).

- If this format results in 0 digits (no ASD, `atidlm=none`, and no entity digits), the routing number will not be included in the response message.
- If the formatting results only in the specified outbound message digits delimiter (`atidlm`) digits, the routing number parameter will not be encoded in the response.
- If no entity digits (`atiackrn=rnspl`) are found, the result is ASD + delimiter digits.

rnsplmasd

Routing number or signaling point, delimiter, ASD

Format routing number digits as entity digits (as described in `atiackrn=rnspl`) + delimiter (if `atidlm` is not *none*) + ASD (if supported and available from lookup entity).

- If this formatting results in 0 digits (no ASD, `atidlm=none`, and no RN digits), the routing number will not be included in the response message.

- If the formatting results only in delimiter digits, the routing number will not be encoded in the response.
- If there are outbound message delimiter digits (the `atidlm` value is not `none`) and ASD digits are available, the delimiter will be included even if entity digits are not found (resulting in delimiter + ASD).

srfimsi

Encode routing number digits as SRFIMSI configured in the entity data. If SRFIMSI was not found (MSISDN not found in RTDB lookup, or MSISDN found but no entity found, or entity found but SRFIMSI not configured) then the routing number will not be included in the response message.

srfimsidlmasd

SRFIMSI, delimiter, ASD

Encode routing number digits as SRFIMSI + delimiter (if `atidlm` is not `none`) + ASD (if supported and available from lookup entity). SRFIMSI is encoded as described in the `atiackrn=srfimsi` option.

- If this formatting results in 0 digits, the routing number parameter will not be included in the response message.
- If the formatting results only in delimiter digits, the routing number parameter will not be encoded in the response message.

asddlmsrfimsi

ASD, delimiter, SRFIMSI

Encode routing number as ASD (if supported and available from lookup entity) + delimiter (if `atidlm` is not `none`) + SRFIMSI (encoded as specified in the `atiackrn=srfimsi` parameter).

- If this format results in 0 digits, the routing number parameter will not be included in the response message.
- If the formatting results only in delimiter digits, the routing number parameter will not be encoded in the response.
- If the outbound message digits delimiter value (`atidlm`) is not `none` and ASD digits are available, the delimiter will be included even if SRFIMSI does not have any digits (resulting in ASD + delimiter).

grndlmrnsp

GRN, delimiter, Routing number or signaling point

Encode routing number as GRN (if supported and available from RTDB lookup) + delimiter (if `atidlm` is not `none`) + RNSP (encoded as specified in the `atiackrn=rnsp` parameter).

- If this format results in 0 digits, the routing number parameter will not be included in the response message.
- If the formatting results only in delimiter digits, the routing number parameter will not be encoded in the response.
- If the outbound message digits delimiter value (`atidlm`) is not `none` and GRN digits are available, the delimiter will be included even if RNSP does not have any digits (resulting in GRN + delimiter).

rnsplmgrn

Routing number or signaling point, delimiter, GRN

Encode routing number as entity digits (as described in `atiackrn=rnsp`) + delimiter (if `atidlm` is not *none*) + GRN (if supported and available from RTDB lookup).

- If this format results in 0 digits, the routing number parameter will not be included in the response message.
- If the formatting results only in delimiter digits, the routing number parameter will not be encoded in the response.
- If the outbound message digits delimiter value (**atidlm**) is not *none* and GRN digits are available, the delimiter will be included even if RNSP does not have any digits (resulting in delimiter + GRN).

sfimsidlmgrn

SRFIMSI, delimiter, GRN

Encode routing number as SRFIMSI (encoded as specified in the `atiackrn=sfimsi` parameter) + delimiter (if `atidlm` is not *none*) + GRN (if supported and available from RTDB lookup).

- If this format results in 0 digits, the routing number parameter will not be included in the response message.
- If the formatting results only in delimiter digits, the routing number parameter will not be encoded in the response.
- If the outbound message digits delimiter value (`atidlm`) is not *none* and GRN digits are available, the delimiter will be included even if SRFIMSI does not have any digits (resulting in delimiter + GRN).

grndlmsrfimsi

GRN, delimiter, SRFIMSI

Encode routing number as GRN (if supported and available from RTDB lookup) + delimiter (if `atidlm` is not *none*) + SRFIMSI (encoded as specified in the `atiackrn=srfimsi` parameter).

- If this format results in 0 digits, the routing number parameter will not be included in the response message.
- If the formatting results only in delimiter digits, the routing number parameter will not be encoded in the response.
- If the outbound message digits delimiter value (`atidlm`) is not *none* and GRN digits are available, the delimiter will be included even if SRFIMSI does not have any digits (resulting in GRN + delimiter).

none

Do not include the Routing Number field in the response message.

Default:

m

atiackvlrnum (optional)

The formatting of the VLR-number in the ATI ACK response message.

Range:***rn***

routing number

- If an RN entity was found in RTDB lookup, the VLR-number is formatted as RN.
- If RN entity was found in RTDB lookup, the portability type is zero, and the S-Port feature is enabled or the IGM feature is on, the VLR-number is formatted as GRN (if provisioned).
- If MSISDN was found in RTDB lookup, no entity was found, and the `atidfltrn` value is not *none*, the VLR-number is formatted as the `atidfltrn` value.
- If MSISDN was not found in RTDB lookup, `atinptype=always` and the `atidfltrn` value is not *none*, the VLR-number is formatted as the `atidfltrn` value.
- If an SP entity was found in RTDB lookup, and the `atidfltrn` value is not *none*, the VLR-number is formatted as the `atidfltrn` value.
- If the format results in 0 digits (no entity digits), the VLR-number is formatted as the incoming MSISDN.

rns

Routing number or signaling point.

- If an RN or SP entity was found in RTDB lookup, the VLR-number is formatted as the entity ID.
- If MSISDN was found in RTDB lookup, no entity was found, and the `atidfltrn` value is not *none*, the VLR-number is formatted as the `atidfltrn` value.
- If MSISDN was not found in RTDB lookup, `atinptype=always`, and the `atidfltrn` value is not *none*, the VLR-number is formatted as the `atidfltrn` value.
- If an entity was found in RTDB lookup, the entity type was not RN or SP, and the `atidfltrn` value is not *none*, the VLR-number is formatted as the `atidfltrn` value.
- If the format results in 0 digits (no entity digits), the VLR-number is formatted as the incoming MSISDN.

asddlmrns

ASD, delimiter and routing number or signaling point.

Format the VLR-number as ASD (if provisioned) + `atidlm` (if not *none*) + entity digits (RN or SP).

- If the formatting results in 0 digits (no ASD, `atidlm=none`, and no entity digits), the VLR-number is formatted as the incoming MSISDN.
- If the formatting results only in `atidlm` digits, the VLR-number is formatted as the incoming MSISDN.
- If no entity digits are found, the VLR-number is formatted as ASD + delimiter digits.

rnsplmasd

Routing number or signaling point, delimiter, ASD

- If the formatting results in 0 digits (no ASD, `atidlm=none`, and no RN digits), the VLR-number is formatted as the incoming MSISDN.
- If the formatting results only in delimiter digits, the VLR-number is formatted as the incoming MSISDN. If there are outbound message delimiter digits (the `atidlm` value is not *none*) and ASD digits are available, the delimiter is included even if entity digits are not found (resulting in delimiter + ASD).

srfimsi

Format the VLR-number as SRFIMSI configured in the entity data.

If SRFIMSI was not found (MSISDN not found in RTDB lookup, or MSISDN found but no entity found, or entity found but SRFIMSI not configured) then the VLR-number is formatted as the incoming MSISDN.

srfimsidlmasd

SRFIMSI, delimiter, ASD

Format the VLR-number as SRFIMSI + delimiter (if `atidlm` is not *none*) + ASD (if provisioned).

- If the formatting results in 0 digits, the VLR-number is formatted as the incoming MSISDN.
- If the formatting results only in delimiter digits, the VLR-number is formatted as the incoming MSISDN.
If `atidlm` value is not *none* and ASD digits are available, the delimiter is included even if SRFIMSI does not have any digits (resulting in delimiter + ASD).

asddlmsrfimsi

ASD, delimiter, SRFIMSI

Format the VLR-number as ASD (if provisioned) + delimiter (if `atidlm` is not *none*) + SRFIMSI.

- If the formatting results in 0 digits, the VLR-number is formatted as the incoming MSISDN.
- If the formatting results only in delimiter digits, the VLR-number is formatted as the incoming MSISDN.
If the `atidlm` value is not *none* and ASD digits are available, the delimiter is included even if SRFIMSI does not have any digits (resulting in ASD + delimiter).

grndlmrnsp

GRN, delimiter, Routing number or signaling point

Format VLR-number as GRN (if provisioned) + delimiter (if `atidlm` is not *none*) + entity digits (RN or SP).

- If the formatting results in 0 digits, the VLR-number is formatted as the incoming MSISDN.
- If the formatting results only in delimiter digits, the VLR-number is formatted as the incoming MSISDN.
If the `atidlm` value is not *none* and GRN digits are available, the delimiter is included even if RN/SP does not have any digits (resulting in GRN + delimiter).

rnsplmgn

Routing number or signaling point, delimiter, GRN

Format VLR-number as entity digits (RN or SP) + delimiter (if `atidlm` is not *none*) + GRN (if provisioned).

- If the formatting results in 0 digits, the VLR-number is formatted as the incoming MSISDN.
- If the formatting results only in delimiter digits, the VLR-number is formatted as the incoming MSISDN.
If the `atidlm` is not *none* and GRN digits are available, the delimiter is included even if RNSP does not have any digits (resulting in delimiter + GRN).

srfimsidmgn

SRFIMSI, delimiter, GRN

Format VLR-number as SRFIMSI + delimiter (if `atidlm` is not *none*) + GRN (if provisioned).

- If the formatting results in 0 digits, the VLR-number is formatted as the incoming MSISDN.
- If the formatting results only in delimiter digits, the VLR-number is formatted as the incoming MSISDN.
If the `atidlm` is not *none* and GRN digits are available, the delimiter is included even if SRFIMSI does not have any digits (resulting in delimiter + GRN).

grndlmsrfimsi

GRN, delimiter, SRFIMSI

Format VLR-number as GRN (if provisioned) + delimiter (if `atidlm` is not *none*) + SRFIMSI.

- If the formatting results in 0 digits, the VLR-number is formatted as the incoming MSISDN.
- If the formatting results only in delimiter digits, the VLR-number is formatted as the incoming MSISDN.
If the `atidlm` value is not *none* and GRN digits are available, the delimiter is included even if SRFIMSI does not have any digits (resulting in GRN + delimiter).

rnmsisdn

- If an RN entity was found in RTDB lookup, the VLR-number is formatted as RN + incoming MSISDN.
- If an SP entity was found in RTDB lookup, and the `atidfltrn` value is not *none*, the VLR-number is formatted as `atidfltrn` + incoming MSISDN
- If MSISDN was found in RTDB lookup, but no entity was found and the `atidfltrn` value is not *none*, then VLR-number is formatted as `atidfltrn` value + incoming MSISDN.
- If MSISDN was not found in RTDB lookup, `atinptype=always`, and the `atidfltrn` value is not *none*, the VLR-number is formatted as `atidfltrn` value + incoming MSISDN.

- If RN/PT=0 is found in RTDB lookup, the S-Port feature is enabled or the IGM feature is on, and the `atidfltrn` value is not *none*, the VLR-number is formatted as `atidfltrn + incoming MSISDN`. RN/PT=0 is treated as an SP entity.

rnspsmsisdn

- If an RN or SP entity was found in RTDB lookup, the VLR-number is formatted as `entity digits + incoming MSISDN`.
- If MSISDN was found in RTDB lookup, but no entity was found and the `atidfltrn` value is not *none*, the VLR-number is formatted as `atidfltrn value + incoming MSISDN`.
- If an entity was found in RTDB lookup, the entity type was not RN or SP, and the `atidfltrn` value is not *none*, then the VLR-number is formatted as the `atidfltrn value + incoming MSISDN`.
- If MSISDN was not found in RTDB lookup, `atinptype=always`, and the `atidfltrn` value is not *none*, then the VLR-number in the ATI ACK response is formatted as `atidfltrn value + incoming MSISDN`.

msisdn

Format the VLR-number as incoming MSISDN

asd

Format the VLR-number in the ATI ACK message as ASD (if provisioned). If the formatting results in 0 digits, the VLR-number is formatted as incoming MSISDN.

asdmsisdn

Format the VLR-number in the ATI ACK message as ASD (if provisioned) + incoming MSISDN.

Default:

rnspsmsisdn

***atidfltrn* (optional)**

Default Routing Number. The routing number to be used in outgoing message formats while encoding outgoing digit formats in the ATI ACK response in cases where an RN is not returned from an RTDB lookup.

Range:

1-15 digits, *none*
Valid digits are 0-9, A-F, a-f

Default:

none

***atidlm* (optional)**

Outbound message digits delimiter. This delimiter is used in outgoing message formats while encoding outbound digits in the ATI ACK response.

Range:

1-15 digits, *none*
Valid digits are 0-9, A-F, a-f

Default:*none***atinptype (optional)**

Number Portability Type. The criteria for a successful RTDB lookup.

Range:***any***

MSISDN lookup is considered successful if any match is found (RN, SP, PublicDN, PrivateDN, match with no entity, or entity type is GRN or VMS and portability type is *none* (0xff)).

always

Lookup is always considered successful whether an MSISDN was found or not found in the RTDB.

Default:*any***entitylen (optional)**

Entity Length. The maximum number of digits to be used from entity data (SRFIMSI or entity ID) in the specified encoding format.

Range:*1 - 15, none*

none -SRFIMSI or entity ID is used without modification in the specified *atiackrn* parameter format.

Default:*none***off**

Disables or turns off the specified feature options. A comma-separated list of feature options that are requested to be turned off. Up to 8 feature options can be specified in the list.

Range:*atisupplcinfo***on**

Disables or turns on the specified feature options. A comma-separated list of feature options that are requested to be turned off. Up to 8 feature options can be specified in the list.

Range:*atisupplcinfo***snai (optional)**

Service NAI. The number conditioning that is performed on the MSISDN digits in the incoming ATI query message before RTDB lookup is performed.

Range:***intl***

Number conditioning is not performed.

nat

The default country code (defined in the `chg-stpopts: defcc=` command) is pre-pended to the MSISDN before RTDB lookup.

nai

The NAI from the MSISDN in the incoming ATI query is used to perform number conditioning.. If the message NAI is International (0x1) or Network Specific Number (0x3), then no conditioning is performed. In all other cases, the default country code (defined in the `chg-stpopts: defcc=` command) is pre-pended to the MSISDN before RTDB lookup.

Default:

nai

sporttype (optional)

Service Portability type. The application of Service Portability that is applied to the associated feature.

The S-Port feature must be enabled before this parameter can be specified. The S-Port feature must be turned on before any change to the parameter will impact the associated feature.

If Service Portability is performed, then the Service Portability prefix (RTDB 'GRN' entity id) is applied.

Range:***gsm***

apply Service Portability prefix for own-network GSM subscribers

is41

apply Service Portability prefix for own-network IS41 subscribers

all

apply Service Portability prefix for all own-network (IS41 and GSM) subscribers

none

Service Portability is not performed for the feature.

Default:

No change to the current value

System Default:

none

vlrnumlen

The maximum number of digits that can be encoded as the VLR-number in ATI ACK message.

Range:

1-40

Default:

40

Example

This example specifies that the outbound message delimiter will not be used in outgoing message formats:

```
chg-atinpqopts:atidlm=none
```

This example specifies that the NAI of the incoming MSISDN digits will be considered to be National, and that the IMSI parameter will not be included in the ATI ACK response message:

```
chg-atinpqopts:snai=nai:atiackimsi=none
```

This example specifies that the lookup is always considered to be successful and that the NAI of the incoming MSISDN digits will be considered to be National:

```
chg-atinpqopts:atinptype=always:snai=nat
```

This example specifies that the Routing Number field will not be included in the response, and that the MSISDN in the ATI ACK response will be encoded as the ASD.

```
chg-atinpqopts:atiackrn=none:atiackmsisdn=asd
```

The example specifies that the Routing Number field will not be included in the response:

```
chg-atinpqopts:atiackrn=none
```

This example specifies that the IMSI and MSISDN in the ATI ACK response will be encoded as GRN:

```
chg-atinpqopts:atiackimsi=grn:atiackmsisdn=grn
```

This example specifies that the Location information request in ATI query is supported and the VLR-number in the ATI ACK response will be encoded as *rnspsmsisdn* :

```
chg-atinpqopts:atiackvlrnum=rnspsmsisdn:on=atisupplocinfo
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The ATINP feature must be enabled before this command can be entered.

4816 E4816 Cmd Rej: ATINP feature must be enabled

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

The Service Portability feature must be enabled before the *sporttype* parameter can be specified.

4926 E4926 Cmd Rej: Service Portability feature must be enabled

The same value cannot be specified for the *on* and *off* parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

Notes

To process an ATINP query with LocationInformation request:

- The ATINP feature must be turned on
- The *on=atisupplocinfo* parameter must be specified.

Output

```
chg-
atinpqopts:atiackimsi=grn:atiackmsisdn=grndlmmsisdn:atiackrn=gr
ndlmrnsp
```

```
tekelecstp 09-06-05 12:40:16 EST EAGLE 41.1.0
CHG-ATINPQOPTS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [rtv-atinpqopts](#)

4.1.40 chg-atm-lps

Use this command to configure a link parameter set with timers and other parameters used by the system to provide level 2 functions for each ATM high-speed signaling link and to copy values from `lpset 20` and `30`, as well as any `lpset` to another.

Parameters**Note:**

Unless specified, the system default values are meant for both ANSI (T1) and ITU (E1) standards.

lpset (mandatory)

Link parameter set being changed.

**Note:**

Sets 1 -19 and 21 -29 can be configured. Link parameter sets 20 and 30 are not configurable and are used to contain the recommended default values for a set.

Range:

1 - 19, 21 - 29

Default:

1 for ANSI

21 for ITU

action (optional)

This parameter copies a set of ATM signaling link parameters from one set to another.

Range:

copy

Default:
No change to the current value

maxcc (optional)
Maximum number of transmissions of BGN, END, ER, or RS PDU.

Range:
1 - 10

Default:
4

maxnrp (optional)
Maximum number of retransmitted PDUs during proving.

Range:
0 - 10

Default:
1 for ANSI
0 for ITU

maxpd (optional)
Maximum number of SD PDUs that can be sent before a POLL is sent.

Range:
5 - 2120

Default:
500

maxstat (optional)
Maximum number of list elements in a STAT PDU.

Range:
3 - 67

Default:
67

n1 (optional)
Number of PDUs sent during proving.

Range:
500 - 64552

Default:
64552 for ANSI
1000 for ITU

nb1k (optional)
Number of monitoring intervals per block.

Range:
1 - 10

Default:

3

src1pset (optional)

Source LPSET for a copy action.

Range:

1 - 30

tmrcc (optional)

Timer value, in milliseconds, used during the connection phase to guard against unacknowledged BGN, END, ER or RS PDUs.

Range:

100 - 2000

Default:

200

tmrerm (optional)

Error rate monitor interval, in milliseconds.

Range:

25 - 500

Default:

100

tmridle (optional)

Timer value, in milliseconds, used during the idle phase when no SD PDUs are being sent to limit time in the idle phase.

Range:

25 - 1000

Default:

100

tmrkalive (optional)

Timer value, in milliseconds, used during the transient phase when no SD PDUs are being sent to keep connection up.

Range:

25 - 500

Default:

100

tmrnocred (optional)

The timer, in milliseconds, used when the no credit exists and PDUs are available to be sent.

Range:

1000 - 6000

Default:

1500

tmrnorsp (optional)

Timer value, in milliseconds, used to check that STAT PDUs are arriving often enough.

Range:
500 - 2000

Default:
1500

tmrpoll (optional)

Timer value, in milliseconds, used to guarantee that POLL PDUs are sent often enough.

Range:
25 - 500

Default:
100

tmrprov (optional)

The timer, in milliseconds, used to monitor the status of a link after it is placed into service.

Range:
60000 - 1200000

Default:
60000

tmrsrc (optional)

Timer value, in milliseconds, used to prohibit closely spaced SSCOP recoveries from occurring.

Range:
60000 - 10800000

Default:
3600000

tmrt1 (optional)

Time, in milliseconds, between link release action and the next link reestablish action during alignment.

Range:
1000 - 15000

Default:
5000

tmrt2 (optional)

Total time, in milliseconds, that SSCF will attempt alignment.

Range:
15000 - 180000

Default:
120000 for ANSI
30000 for ITU (E1)

t_{mr}t₃ (optional)

Time, in microseconds, between proving PDUs.

Range:

450 - 23000

Default:

925

Example

```
chg-atm-lps:lpset=5:tmrprov=1000:tmridle=55
```

```
chg-atm-lps:lpset=3:srclpset=5:action=copy
```

Dependencies

The values in link parameter sets 20 and 30 are the system default values. They cannot be changed but can be copied to another link parameter set.

3411 E3411 Cmd Rej: Specified LPSET contains default values and not configurable

The same value cannot be specified for the `lpset` and `srclpset` parameters.

3412 E3412 Cmd Rej: SRCLPSET and LPSET cannot be equal

The `action` and `srclpset` parameters must be specified together.

3413 E3413 Cmd Rej: ACTION and SRCLPSET must be specified together

If `action=copy` parameter is specified, only the `lpset` and `srclpset` parameters can be specified.

3414 E3414 Cmd Rej: Invalid parameters for ACTION=COPY

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The Link Parameter Set table is corrupt or cannot be found.

3410 E3410 Cmd Rej: Failed reading the ATM link parameter set table

Notes

If no parameter value for the `lpset` parameter is included when the `ent-slk` command is entered, the system default value of `1` is assigned for ANSI links and the system default value of `21` is assigned for ITU links.

All timer values for link parameter sets are initialized to the system default values.

Output

```
chg-atm-lps:lpset=5:tmrprov=1000:tmridle=55
```

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
CHG-ATM-LPS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [ent-slk](#)
- [rtrv-atm-lps](#)

4.1.41 chg-attr-seculog

Use this command to modify attributes that affect the operation of the security logging feature.

Parameters**upldalm (optional)**

Enable or disable log alarms that pertain to uploading of the security log.

Range:**yes**

Enables log alarms pertaining to uploading of the log, as follows:

- Upload required
- Log overflowed
- Standby log contains greater than 0 un-uploaded entries

no

Prevents log alarms from being raised. If the alarm is already raised when *no* is specified, the alarm is lowered.

Default:

No change to the current value

upslg (optional)

Percent full threshold. The percent full threshold for the security logs. If the `upldalm=yes` parameter is specified, an alarm is raised for the security log when the `%full` field (see the `rept-stat-seculog` command) in the log, on the active OAM, reaches or exceeds the value specified for `upslg`. This alarm indicates that the administrator must upload the log.

Range:

1 - 99

Default:

No change to the current value

purgeperiod (optional)

Purge period (in Days). Number of days beyond which security logs will be deleted. If `purgeperiod` is greater than 0, then all the security logs which are older than `purgeperiod` will be deleted from OAM (see `rtrv-seculog` and `rept-stat-seculog`). Log entries will be deleted in background at the rate of one every few seconds until all stale entries have been removed.

Range:

0 – 180

Default:
0

Example

```
chg-attr-seculog:upslg=80:upldalm=yes
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The Security Log Attributes table is corrupt or cannot be found by the system.

3008 E3008 Cmd Rej: Failed reading the security log attributes table

Notes

None

Output

```
chg-attr-seculog:upslg=80:upldalm=yes
```

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
CHG-ATTR-SECULOG: MASP B - COMPLTD
;
```

```
chg-attr-seculog:purgeperiod=2
```

```
Command Accepted - Processing
```

```
stpc1081301 20-05-13 17:24:56 EST EAGLE
46.9.0.0.0-76.9.0
chg-attr-seculog:purgeperiod=2
Command entered at terminal #1.
;
stpc1081301 20-05-13 17:24:56 EST EAGLE
46.9.0.0.0-76.9.0
CHG-ATTR-SECULOG: MASP B - COMPLTD
;
```

Related Topics

- [rtv-attr-seculog](#)

4.1.42 chg-card

Use this command to:

- Change the configuration of a card in the database from an IPLIMx configuration to an IPSG configuration and from an E5-ENET-B or SLIC card.

- Configure the type of EPAP data (DN or IMSI) that is loaded to an E5-SM8G-B or SLIC card.
- If the IPSP application is running on SLIC hardware, the `chg-card` command can be optionally used to change the data type from 'gtt' to 'nosccp' and vice-versa.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

data (optional)

Type of OAM/MPS data that can be loaded on an E5-SM8G-B or SLIC card.

Range:

dn

only DN related data from EPAP is loaded on the card

epap

all RTDB data (DN+IMSI) from EPAP are loaded on the card



Note:

The `epap` value cannot be specified when the EPAP Data Split feature is ON.

elap

ELAP data are loaded on the card.

gtt

Only OAM data, including GTT data, are loaded on the card. This card will not load any ELAP or EPAP data at all.

imsi

Only IMSI related data from EPAP is loaded on the card

nosccp

Only OAM data, excluding GTT data is loaded on the card. No GTT or MPS data will be downloaded on the card. This value (=nosccp) of the `data` parameter is valid only for IPSP card(s) with the `type=slic`.

 **Note:**

The `nosccp` value signifies the absence of SCCP functionality on the IPSP card, and that it behaves as a regular IPSP card.

Default:

`nosccp`

napp1 (optional)

The new application for the card.

Range:

`xyyyyyyy`

1 alphabetic character followed by up to 6 alphanumeric characters.

ipsg

Used by E5-ENET-B and SLIC cards to support the combined functionality of IPLIMx M2PA and IPGWx M3UA

type (optional)

This parameter specifies whether an E5-ENET-B or a SLIC card is used to support the IPSP configuration.

Range:***enetb***

the IPSP configuration is supported on an E5-ENET-B or SLIC card

slic

the IPSP (with or without GTT functionality)/ VSCCP/DEIRHC/SIPHC/ ENUMHC configuration is supported on a SLIC card

Example

```
chg-card:loc=1105:napp1=ipsg
```

```
chg-card:loc=1305:type=enetb
```

```
chg-card:loc=1201:data=imsi
```

```
chg-card:loc=1101:type=slic
```

Dependencies

The card location specified by the `loc` parameter cannot be 1113-1118, xy09, or xy10 where `x` is the frame and `y` is the shelf.

2154 E2154 Cmd Rej: Card slot reserved by system

The specified shelf location must be provisioned and present in the frame.

2108 E2108 Cmd Rej: Shelf location not equipped

The Shelf table is corrupt or cannot be found.

2104 E2104 Cmd Rej: Failed reading the shelf table

The IMT (Card) table is corrupt or cannot be found.

3726 E3726 Cmd Rej: Active device state does not permit database change

Only M2PA associations can be configured for the IP link host address for the card indicated by the `loc` parameter value. M3UA IP associations are not supported.

5315 E5315 Cmd Rej: All associations must use M2PA adapter type

If the HIPR2 High Rate Mode feature is turned off, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 500,000. If the HIPR2 High Rate Mode feature is turned on, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 750,000. If the HIPR2 High Rate Mode and 1M System TPS features are turned on, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 1,000,000.

4255 E4255 Cmd Rej: Total provisioned system TPS limit exceeded

The resulting total TPS of all signaling links configured for an E5-ENET-B or SLIC card when the `type=enetb` parameter is specified cannot exceed 6500 TPS. The resulting total TPS of all signaling links configured for a SLIC card when the `type=slic` parameter is specified cannot exceed 12,000 TPS

4807 E4807 Cmd Rej: TPS exceeded for card

A SLIC card must be installed at the location indicated by the `loc` parameter.

2105 E2105 Cmd Rej: Invalid card TYPE and APPL load type combination

A value of `ipsg` must be specified for the `nappl` parameter.

3710 E3710 Cmd Rej: APPL not valid for command

The card in the location indicated by the `loc` parameter must already be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The linkset table must be accessible

2122 E2122 Cmd Rej: Failed reading linkset table

The value specified by the `loc` parameter must be within the allowed range.

2016 E2016 Cmd Rej: <parm_desc> is out of range - <parm>

The Link table is corrupt or cannot be found.

2103 E2103 Cmd Rej: Failed reading the link table

The `loc` parameter must be specified.

2011 E2011 Cmd Rej: Missing mandatory parameter - <parm>

All links on the SLIC card must have a matching association configured. For IPSG-hosted associations, a link and association are matched using the `aname` parameter for the `ent-slk` command.

5314 E5314 Cmd Rej: No association exists for a link on the card

A function returned an unknown error. An ATH is also issued.

2601 E2601 Cmd Rej: Command aborted due to system error

The `nappl` or `type` parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

If DN or IMSI is specified for the `data` parameter for VSCCP, the EPAP Data Split feature must be turned on.

5413 E5413 Cmd Rej: EPAP Data Split feature must be turned on

If the EPAP Data Split feature is ON, or Dual ExAP Config feature is enabled, and the value specified for the `loc` parameter indicates an E5-SM8G-B or SLIC card, then the `data` parameter must be specified. The `data` parameter can be specified only for an E5-SM8G-B or SLIC card running the VSCCP or SIPHC application or IPSCP card.



Note:

The DATA parm is valid only for SLIC IPSCG cards, and not ENET/ENETB IPSCG cards.

5414 E5414 Cmd Rej: DATA parm must be specified with VSCCP /SIPHC/IPSCG appl

If ELAP or EPAP is specified for the `data` parameter for VSCCP, the Dual ExAP Config feature must be enabled.

2400 E2400 Cmd Rej: Dual ExAP Config feature must be Enabled

When `data=gtt` is specified for VSCCP, either Dual ExAP Config must be enabled or EPAP Data Split feature must be turned ON.

2434 E2434 Cmd Rej: Dual ExAP Config or EPAP Data Split must be ON

The `data=gtt` parameter cannot be specified for VSCCP if an IP link has been configured for the card.

2443 E2443 Cmd Rej: IP Link must not be configured for GTT card

To provision card type=ENETB or SLIC, the shelf FAN bit must be turned ON for the card's shelf.

3866 E3866 Cmd Rej: Shelf FAN bit must be enabled

If the IPSCG32 GPL is running on the location specified by the `loc` parameter, then `data=gtt` and `data=nosccp` are the only valid values for the DATA parameter. If the GPL is anything but IPSCG32 GPL, `data=nosccp` cannot be used for the card on that location.

If card is `type=SLIC` with `data=GTT` and is changed to `type=ENET/ENETB`, then `data` must be changed to `NOSCCP` first.

E2670 Cmd Rej: Invalid value of DATA parameter for given APPL

A GTT-enabled IPSCG card can only have 32 equipped SS7 links. A SLIC IPSCG card with more than 32 equipped SS7 links cannot be a GTT-enabled IPSCG card.

3532 E3532 Cmd Rej: Exceeded max number of SS7 links for GTT-enabled IPSCG card

The `data` parameter can only be specified for IPSCG application running on SLIC card.

3540 E3540 Cmd Rej: DATA parm can be entered for IPSP appl running on SLIC card only.

Notes

If a SLIC card is plugged into a slot provisioned for E5-ENET-B, this command can be used to change the card type from `enet` to `slc` or `enetb` to `slc`. The card must be manually inhibited first in order to allow the command to be processed.

Output

```
chg-card:loc=1206:nappl=ipsg
```

```
rlghncxa03w 10-03-01 11:11:28 EST EAGLE 42.0.0
CHG-CARD: MASP A - COMPLTD
;
```

Related Topics

- [dlt-card](#)
- [ent-card](#)
- [init-card](#)
- [rept-stat-card](#)
- [rmv-card](#)
- [rtrv-card](#)

4.1.43 chg-clkopts

Use this command to perform a software update of the clock elements and settings.

Parameters

clock (mandatory)

Clock to be updated.

Range:

all
all clocks

primary
primary clock

secondary
secondary clock

E5-TDM cards must be installed before a value of *primary* or *secondary* can be specified.

force (optional)

The `force=yes` parameter is used to change the `hsclocksrc` parameter value when the TDMs are reporting that the high speed system clocks are currently valid.

Range:

yes

hsc1k11 (optional)

High speed master clock line length.

Range:***longhaul***

Gain is high for long haul

shorthaul

Gain is low for short haul

Default:

No change to the current value

System Default:

longhaul

hsc1ksrc (optional)

High speed master clock source. The `force=yes` parameter must be specified with this parameter to change the clock source when the TDMs are reporting that the high speed system clocks are currently valid.

 **Caution:**

Changing the high speed master clock source can result in clock outage and loss of traffic on all links, if the new source type does not match the provisioned source for the E1 or T1 cards (what is actually plugged into the backplane).

Range:***e1framed***

E1 Framed clock source

e1unframed

E1 Unframed clock source

rs422

RS-422 clock source

t1framed

T1 Framed clock source

t1unframed

T1 Unframed clock source

Default:

No change to the current value

System Default:

rs422

Example

```
chg-clkopts:clock=primary:hsclksrc=t1framed
chg-clkopts:clock=all:hsclksrc=rs422:force=yes
chg-clkopts:hsclkll=shorthaul:clock=secondary
```

Dependencies

The STPOPTS table is corrupt or cannot be found.

2852 E2852 Cmd Rej: Failed reading STP Options table

The parameters entered are not compatible with the card where the clock resides.

2131 E2131 Cmd Rej: Parameters not valid for card type

If the `hsclksrc` and `clock=all` parameters are specified, and the high speed clocks are reporting, then the `force=yes` parameter must be specified.

3799 E3799 Cmd Rej: FORCE=YES must be specified

Notes

None.

Output

```
chg-clkopts:clock=primary:hsclksrc=t1framed
```

```
e5oam 09-01-01 17:25:22 MST EAGLE 40.1.0
CHG-CLKOPTS: MASP B - COMPLTD
;
```

Related Topics

- [rtrv-clkopts](#)

4.1.44 chg-cmd

Use this command to change the attributes of a command.

Parameters **Note:**

All class(X) parameters consist of a configurable command class name (*ayy*), and indicator (*-yes* or *-no*) to specify whether the command class is allowed. A value of *ayy-yes* indicates that the value is allowed. A value of *ayy-no* indicates that the value is not allowed.

cmd (mandatory)

The command whose attributes are to be changed.

Range:

ZZZZZZZZZZZZZZZZZZZZZZZZZZ

One alphabetic character followed by up to 19 additional alphanumeric characters.

class1 (optional)

This parameter specifies a configurable command class name and indicator to indicate whether the command class is allowed.

Range:

ayy

1 alphabetic character followed by 2 alphanumeric characters

Specify the parameter value in the format *ayy-no* or *ayy-yes*.

ayy-yes-command class is allowed

ayy-no-command class is not allowed

Default:

No change to current value

class2 (optional)

This parameter specifies a configurable command class name and indicator to indicate whether the command class is allowed.

Range:

ayy

1 alphabetic character followed by 2 alphanumeric characters

Specify the parameter value in the format *ayy-no* or *ayy-yes*.

ayy-yes-command class is allowed

ayy-no-command class is not allowed

class3 (optional)

This parameter specifies a configurable command class name and indicator to indicate whether the command class is allowed.

Range:

ayy

1 alphabetic character followed by 2 alphanumeric characters

Specify the parameter value in the format *ayy-no* or *ayy-yes*.

ayy-yes-command class is allowed

ayy-no-command class is not allowed

class4 (optional)

This parameter specifies a configurable command class name and indicator to indicate whether the command class is allowed.

Range:

ayy

1 alphabetic character followed by 2 alphanumeric characters

Specify the parameter value in the format *ayy-no* or *ayy-yes*.

ayy-yes-command class is allowed

ayy-no-command class is not allowed

class5 (optional)

This parameter specifies a configurable command class name and indicator to indicate whether the command class is allowed.

Range:

ayy

1 alphabetic character followed by 2 alphanumeric characters

Specify the parameter value in the format *ayy-no* or *ayy-yes*.

ayy-yes-command class is allowed

ayy-no-command class is not allowed

class6 (optional)

This parameter specifies a configurable command class name and indicator to indicate whether the command class is allowed.

Range:

ayy

1 alphabetic character followed by 2 alphanumeric characters

Specify the parameter value in the format *ayy-no* or *ayy-yes*.

class7 (optional)

This parameter specifies a configurable command class name and indicator to indicate whether the command class is allowed.

Range:

ayy

1 alphabetic character followed by 2 alphanumeric characters

Specify the parameter value in the format *ayy-no* or *ayy-yes*.

ayy-yes-command class is allowed

ayy-no-command class is not allowed

class8 (optional)

This parameter specifies a configurable command class name and indicator to indicate whether the command class is allowed.

Range:

ayy

1 alphabetic character followed by 2 alphanumeric characters

Specify the parameter value in the format *ayy-no* or *ayy-yes*.

ayy-yes-command class is allowed

ayy-no-command class is not allowed

Example

```
chg-cmd:cmd=ent-rte:class1=u11-yes
```

```
chg-cmd:cmd=rept-stat-slk:class7=dab-no
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The Command Class Management feature must be enabled before this command can be entered.

2246 E2246 Cmd Rej: Command Class Management feature must be enabled

The `cmd` parameter value must be a valid system command.

2065 E2065 Cmd Rej: CMD parameter is not a valid Eagle command

The CCCNAMES table is corrupt or cannot be found.

2598 E2598 Cmd Rej: Cccnames table must be accessible

The CCCMD table is corrupt or cannot be found.

2597 E2597 Cmd Rej: Cccmmd table must be accessible

The `class1 - class8` parameter values must be valid default or provisioned configurable command class names.

2266 E2266 Cmd Rej: Class name is not an existing configurable command class

The `login` command is available to all users and therefore cannot be assigned to a configurable class. If the `login` command is used as a parameter, it will be rejected.

4368 E4368 Cmd Rej: The specified CMD cannot be assigned a configurable class

Notes

Up to 8 configurable command class names can be specified in one command. More than 8 command classes can be updated by entering additional commands. To update all 32 available configurable command classes, you could enter 4 commands with 8 command classes specified in each command.

Output

```
chg-cmd:cmd=ent-rte:class1=u11=yes
```

```
rlghncxa03w 04-01-05 16:40:40 EST  EAGLE 31.3.0
CHG-CMD:  MASP B - COMPLTD
;
```

Related Topics

- [rtrv-cmd](#)

4.1.45 chg-cmdclass

Use this command to change the name or description of a configurable command class.

Parameters

class (mandatory)

This parameter specifies the configurable command class name.

Range:

ayy

1 alphabetic character followed by 2 alphanumeric characters (*ayy*)

descr (optional)

This parameter specifies the new configurable command class description.

Range:

XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX

1 alphabetic character followed by up to 31 alphanumeric characters

Default:

No change to current value

nclass (optional)

This parameter specifies the new configurable command class name.

Range:

ayy

1 alphabetic character followed by 2 alphanumeric characters (ayy)

Default:

No change to current value

Example

```
chg-cmdclass:class=abc:descr="my command class description"
```

```
chg-cmdclass:class=u23:nclass=dab:descr="his command class
description"
```

```
chg-cmdclass:class=dab:nclass=krb
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The Command Class Management feature must be enabled and turned on before this command can be entered.

2246 E2246 Cmd Rej: Command Class Management feature must be enabled

The `class` parameter value must be a valid configurable command class name (one of the default configurable command class names or a user-defined command class name).

2266 E2266 Cmd Rej: Class name is not an existing configurable command class

The CCCNAMES table is corrupt or cannot be found.

2598 E2598 Cmd Rej: Cccnames table must be accessible

The value specified for the `nclass` parameter cannot be the same as an existing configurable or non-configurable command class name.

2319 E2319 Cmd Rej: New class name cannot be the same as an existing class name

Notes

None

Output

```
chg-cmdclass:class=abc:descr="my command class description"
```

```

    rlghncxa03w 04-01-05 16:40:40 EST  EAGLE 31.3.0
    CHG-CMDCLASS:  MASP B - COMPLTD
;

```

Related Topics

- [rtrv-cmdclass](#)

4.1.46 chg-csl

Use this command to change an existing entry in the Common Screening List (CSL). The Common Screening List commands are used to tailor certain types of general screening information to specific features.

Parameters**ds (optional)**

Digit string. A unique string of digits used by the specified screening feature

Range:

1 - 15 hexadecimal digits.

Valid digits are *0-9, a-f, A-F*

- 1-6 digits—Prepaid IDP Query Relay *ccnc* list
- 1-15 digits—Prepaid IDP Query Relay *gt* list
- 1-10 digits—Prepaid IDP Query Relay *skbcsm* list
- 4 digits—IDP Screening for Prepaid *skts* list
- 1-15 digits—IDP Screening for Prepaid *insl* list
- 1-15 digits—VFLEX *vmpfx* list
- 1-6 digits—Info Analyzed Relay Base *ccnc* list
- 1-15 digits—Info Analyzed Relay Base *gt* list
- 2 digits—Info Analyzed Relay Base *trig* list
- 1-15 digits — EIR *imsipfx* list

[Table 4-23](#) lists valid hexadecimal values for the Info Analyzed Relay Base *trig* list *ds* entries.

feature (optional)

Feature name. The name of the enabled screening feature for which the command is entered.

vmpfx
Voice Mail Prefix List

The following screening lists are valid for the indicated features:

- *ccnc, gt*— Prepaid IDP Query Relay, Info Analyzed Relay Base
- *imsipfx*— EIR

 **Note:**

If list argument is not specified in this command for EIR feature then `list = imsipfx` by default is taken.

- *npbypass*— SIP Number Portability
- *skbcm*—Prepaid IDP Query Relay and IDP Service Key Routing
- *skts, insl*—IDP Screening for Prepaid
- *trig*—Info Analyzed Relay Base
- *vmpfx*—VFLEX

The *delpfx* list is not supported at this time. This list should only be used by Oracle personnel.

p1 (optional)

Parameter Value 1. This parameter is specific to the feature and list that use the parameter.

Range:

ZZZZZZZZZZ

Valid values for the IDP Service Key Routing feature are:

- *3* or *prepaid1*—Prepaid Portability Type 3 for the SKBCSM list
- *4* or *prepaid2*—Prepaid Portability Type 4 for the SKBCSM list
- *6-35* or *prepaid3-prepaid32*—Prepaid Portability Types 6 through 35 for the SKBCSM list
- *255* or *prepaidno*—No Prepaid Portability Type for the SKBCSM list

Valid values for EIR feature are:

- *1* or *range*— Check only range IMEI table for the IMSIPFX list
- *2* or *individual* — Check only individual IMEI table for the IMSIPFX list
- *3* or *both* --- Check individual IMEI table first and then range table for the IMSIPFX list
- *4* or *none* --- No check in either Individual IMEI Table or Range IMEI Table for the IMSIPFX list.

Valid values for the Prepaid IDP Query Relay feature are:

- *0, 1*—National or International for the DELPFX list, which is for Tekelec personnel use ONLY.

 **Note:**

The p1 parameter is used by the IDP Service Key Routing feature or EIR feature.

Default:

No change to the current value

p2 (optional)

Parameter Value 2. The IDP Relay Service that is associated with an SKBCSM list DS entry. Multiple IDP Relay Services can be provisioned for use with NPP or Response Type for EIR feature that is associated with an imsipfx list DS Entry.

The parameter value can be entered as a number or as the corresponding mnemonic.

Range:

ZZZZZZZZZZ

Valid values for Prepaid IDP Query Relay features are:

- 1 or *idprcdpn*—IDPRCDPN Service for the SKBCSM list
- 2 or *idprcdpn2*—IDPRCDPN2 Service for the SKBCSM list
- 3 or *idprcdpn3*—IDPRCDPN3 Service for the SKBCSM list
- 4 or *idprcdpn4*—IDPRCDPN4 Service for the SKBCSM list

Valid values for EIR feature are:

- 1 or *whitelist* ---- Response Type as Whitelist for imsipfx list.
- 2 or *graylist* ---- Response Type as Graylist for imsipfx list.
- 3 or *blacklist* ---- Response Type as Blacklist for imsipfx list.
- 4 or *unknown* ---- Response Type as Unknown for imsipfx list.

 **Note:**

The p2 parameter is used by the Prepaid IDP Query Relay feature or EIR feature.

Default:

No change to the current value

p3 (optional)

Parameter Value 3. The IDP Relay Service that is associated with a GT list DS entry. Multiple IDP Relay Services can be provisioned for use with NPP or Response Type for the parameter value that can be entered as a number or as the corresponding mnemonic.

Range:

ZZZZZZZZZZ

Default:

Default value is *idprcdpn*.

Valid values for Prepaid IDP Query Relay features are:

- 1 or *idprcdpn*—IDPRCDPN Service for the GT list
- 2 or *idprcdpn2*—IDPRCDPN2 Service for the GT list
- 3 or *idprcdpn3*—IDPRCDPN3 Service for the GT list
- 4 or *idprcdpn4*—IDPRCDPN4 Service for the GT list

**Note:**

The P3 parameter can only be used when MERGE_IN is ON in TTROPTS Table

pc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

pc/pca/pci/pcn/pcn24 (optional)

Point code. The *ds* parameter or a point code parameter must be specified.

**Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and example.

pci (optional)

ITU international point code with subfields *zone-area-id*.

pcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

pfxstrip (optional)

This parameter in NPBYPASS list indicates whether matched prefix must be deleted or not.

Range:

yes

no

Default:

no

pn (optional)

Part Number. The 9-digit "893xxxxxx" part number of the feature for which the command is entered. The `rtrv-ctrl-feat` command description shows the part number in the command output example.

 **Note:**

The `pn` or `feature` parameter must be specified to identify the feature.

Range:

893000000 - 893999999

The first 3 digits are 893. Do not separate the digits with dashes or spaces. The following part numbers are valid for this command:

- 893012301 --- EIR
- 893015501—IDP Screening for Prepaid
- 893016001—Prepaid IDP Query Relay
- 893016701—VFLEX
- 893034201—Info Analyzed Relay Base
- 893040601— SIP Number Portability

scpgta (optional)

Signaling Control Point (SCP) Global Title Address (GTA). The value used by the SKGTARTG Service Action in IDP Relay IDPRCDPN(X) NPP Services to replace the SCCP CdPA GTA in the outgoing message.

Range:

1 - 21 hexadecimal digits, *none*

Valid digits are 0-9, a-f, A-F.

none-Removes the provisioned digit string

 **Note:**

The `scpgta` parameter is used by the Prepaid IDP Query Relay feature.

Default:

No change to the current value

Example

```
chg-csl:feature="IDP Screening for
Prepaid":list=insl:ds=123456789bcdEF
```

```
chg-csl:feature="VFLEX":list=vmpfx:ds=123456789abcdEF
```

```
chg-csl:feature="Prepaid IDP Query
Relay":list=skbcsm:ds=0000000056:p2=idprcdpn4:scpgta=abce9875
```

```
chg-csl:pn=893040601:list=npbypass:ds=0000046:pxstrip=yes
```

```

chg-csl:feature="SIP NUMBER
PORTABILITY":list=npbypass:ds=000036:pfxstrip=no

chg-
csl:feature="EIR":list=imsipfx:ds=401134134:p1=range:p2=whitelis
t

chg-csl:feature="Prepaid IDP Query
Relay":list=gt:ds=123456789bcdec:p3=idprcdpn2

```

Dependencies

An enabled feature must be specified using a valid part number (`pn`) or feature name (`feature`). The specified feature must use a Common Screening List.

4458 E4458 Cmd Rej: Common screening list feature is required

The feature that is specified by the `feature` parameter must already be enabled.

4468 E4468 Cmd Rej: Common screening list requested feature must be enabled

The `list` parameter must be specified for features that use more than one type of screening list.

4459 E4459 Cmd Rej: Common screening list type is required

The value specified for the `list` parameter must be valid for the specified screening feature.

4460 E4460 Cmd Rej: Common screening list type is invalid

The specified screening list entry must exist in the screening list that is used by the feature.

4462 E4462 Cmd Rej: Common screening list entry not present

The length of the digit string that is specified for the `ds` parameter must be valid for the screening feature and list type.

4493 E4493 Cmd Rej: Common screening list DS length invalid

A valid `ds` parameter value is required for the specified feature and list type.

4340 E4340 Cmd Rej: Common screening list key invalid

The following parameters are allowed with the indicated common screening list type:

- `list=gt—ds` parameter
- `list=ccnc—ds` parameter
- `list=skbcsm—ds` and `scpgta` parameters
- `list=skts—ds` parameter
- `list=insl—ds` parameter
- `list=vmpfx—ds` parameter
- `list=trig—ds` parameter
- `list=imsipfx--- ds` parameter

4464 E4464 Cmd Rej: Common screening list invalid parameter combination

The leading digit pattern of the value specified for the `ds` parameter must be unique in the specified screening list for the indicated feature.

4489 E4489 Cmd Rej: Common screening list key must be unique

The Common Screening List table is corrupt or cannot be found.

4467 E4467 Cmd Rej: Common screening list read fail

The `pc` or `ds` parameter must be specified. The parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The value specified for the `feature` parameter must be valid feature name for a feature that uses a Common Screening List. The feature name must be specified as it appears in the `rtrv-ctrl-feat` command output. Enough of the name must be specified to make the name unique when two features begin with the same word or acronym.

4339 E4339 Cmd Rej: Common screening list feature invalid

The `scpgta` and `pc` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `scpgta` parameter is specified, then the `ds` parameter must be specified.

4340 E4340 Cmd Rej: Common screening list key invalid

A valid `p1` and `p2` parameter value is required for the specified feature and list type.

4499 E4499 Cmd Rej: Common screening list invalid parameter value

The SIPNP feature must be enabled before changing NP prefix entries for the NPBYPASS list.

2590 E2590 Cmd Rej: SIPNP Feature must be enabled.

PFXSTRIP must be changed when the list specified is NPBYPASS with the SIPNP Feature.

3827 E3827 Cmd Rej: No change requested

The DS (Digit String) must be between 1 - 15 digits in length for SIPNP Feature

2045 E2045 Cmd Rej: <parm desc> num digits incorrect, min <min> max <max> - <parm>

The `p3` parameter can be displayed and changed only when `MERGE_IN` parameter in `TTROPTS` Table is ON.

3677 E3677 Cmd Rej: `MERGE_IN` should be ON to use P3

Notes

None

Output

```
chg-csl:pn="Prepaid IDP Query
Relay":list=skbcm:ds=0000000056:p2=idprcdpn4:scpgta=abce9875
```

```
tekelecstp 10-10-20 14:46:49 EST EAGLE 43.0.0
```

```

SK+BCSM List ( 7 of 150) 5%
CHG-CSL: MASP A - COMPLTD
;

chg-csl:feature="SIP Number
Portability":list=npbypass:ds=0000000034:pfxstrip=yes

tekelecstp 12-06-25 15:29:14 EST EAGLE 45.0.0
chg-csl:feature="SIP Number
Portability":list=npbypass:ds=0000000034:pfxstrip=yes
Command entered at terminal #4.
PFX List ( 2 of 1000) 1%
CHG-CSL: MASP A- COMPLTD
;

chg-csl:pn=893040601:list=npbypass:ds=0000000056:pfxstrip=yes

tekelecstp 12-06-025 15:29:14 EST EAGLE 45.0.0
chg-csl:pn=893040601:list=npbypass:ds=0000000056:pfxstrip=yes
Command entered at terminal #4.
PFX List (3 or 1000) 1%
CHG-CSL: MASP A-COMPLTD
;

```

Related Topics

- [dlt-csl](#)
- [ent-csl](#)
- [rtrv-csl](#)
- [rtrv-ctrl-feat](#)

4.1.47 chg-ctrl-feat

Use this command for controlled features that have been enabled with the `enable-ctrl-feat` command to turn on or turn off On/Off features and to turn on Permanently On features (cannot be turned off after they have been turned on)

Use this command when the system station shows an expired temporary key and the administrator wants to clear the CRITICAL system alarm without enabling a permanent Feature Access Key.

Parameters

partnum (mandatory)

Part number. The part number for the feature.

Range:

893000000 - 893999999

Do not include dashes in the 9-digit number.

alarm (optional)

Clears alarms when temporary feature keys have expired.

Range:

clear

status (optional)

Changes the operational status of the feature.

Range:

on

off

Default:

No change in current status

Example

```
chg-ctrl-feat:partnum=893xxxxxx:status=on
```

```
chg-ctrl-feat:partnum=893xxxxxx:alarm=clear
```

Dependencies

The controlled feature specified by the `partnum` parameter must be enabled (see the `enable-ctrl-feat` command) before this command can be entered.

3451 E3451 Cmd Rej: Controlled Feature is not enabled

One of the optional parameters, but not both, must be specified in the command.

2136 E2136 Cmd Rej: At least one optional parameter is required

To use this command to turn off a feature, the Part Number specified in the command must be for one of the following On/Off features that is currently on. (A Permanently On feature is turned on with this command; after the feature has been turned on, it cannot be turned off with this command):

- 893018001 1100 TPS/DSM for ITU NP
- 893022101 ATI Number Portability Query (ATINP)
- 893017601 Circ Route Auto-Recovery
- 893005801 Command Class Management
- 893400001 EAGLE OA&M IP Security
- 893018101 Enhanced Far-End Loopback
- 893015401 Flexible GTT Load Sharing (FGTTLS)
- 893027401 GTT Load Sharing with Alternate Routing Indicator (GTT LS ARI)
- 893020101 HIPR2 High Rate Mode
- 893025701 IDPR ASD
- 893025601 IDPR GRN
- 893035001 Info Analyzed Relay ASD
- 893035101 Info Analyzed Relay GRN

- 893026101 Info Analyzed Relay NP
- 893038901 Integrated GLS
- 893006901 Intermediate GTT Load Sharing (IGTTLS)
- 893005701 IP User Interface (Telnet)
- 893018401 Large BICC MSU Support for IP Signaling
- 893006601 LNP Short Message Service (LNP SMS)
- 893007001 MNP Circular Route Prevention
- 893026701 MO SMS ASD
- 893024601 MO SMS B-Party Routing
- 893026601 MO SMS GRN
- 893026201 MO SMS IS41-to-GSM Migration
- 893013501 MTP Map Screening
- 893009101 Network Security Enhancement
- 893039301 NPP Unlimited SDWC Characters
- 893009301 Portability Check for Mobile Originated SMS
- 893006701 Prepaid SMS Intercept Phase 1 (PPSMS)
- 893018801 SEAS over IP
- 893034301 Service Portability
- 893024501 TIF ASD
- 893025501 TIF GRN
- 893022501 TIF Number Substitution
- 893037701 TIF Range CgPN Blacklist
- 893037601 TIF Subscriber CgPN Blacklist

3593 E3593 Cmd Rej: Part Number does not belong to an On/OFF feature

Turning on a feature that is already on or turning off a feature that is already off has no effect.

3827 E3827 Cmd Rej: No change requested

The GTT feature must be turned on (see the `chg-feat` command) before the following features can be turned on:

- Intermediate Global Title Translation Load-Sharing (IGTTLS)
- LNP ELAP Configuration
- SCCP Loop Detection

2584 E2584 Cmd Rej: GTT feature must be ON

All IPSM cards in the system must be inhibited before the IP User Interface (Telnet) feature can be turned on or off.

4141 E4141 Cmd Rej: Inhibit IPSM card(s) before changing Telnet feature status.

All IPSM cards in the system must be inhibited before the EAGLE OA&M IP Security Enhancements feature can be turned on or off.

4062 E4062 Cmd Rej: Inhibit IPSM card(s) before changing feature status

Only one of the optional parameters, not both, can be specified in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

After a Permanently On feature is turned on, it cannot be turned off with this command. All controlled features with quantity feature access keys (like LNP ported TNS) and the following features are Permanently On features:

- 15 Minute Measurements
- Advanced GTT Modification (AMGTT)
- Advanced GTT Modification Called Party Only (AMGTT CdPA Only)
- Advanced GTT Modification Calling Party Upgrade (AMGTT CgPA Upgrade)
- ANSI-41 INP Query
- ANSI-41 Mobile Number Portability (A-Port)
- ANSI/ITU SCCP Conversion
- Diameter S13/S13' Interface for EIR
- E5-OAM Integrated Measurements (Integrated Measurements)
- Enhanced GSM MAP Screening (EGMS)
- Equipment Identity Register (EIR)
- Flexible Linkset Optional Based Routing (FLOBR)
- G-Flex MAP Layer Routing
- G-Port SRI Query for Prepaid
- GSM Flexible Numbering (G-Flex)
- GSM MAP Screening (GMS)
- GSM MAP SRI Redirect for Serving HLR
- GSM Mobile Number Portability (G-Port)
- GTT Action - DISCARD
- GTT Action - DUPLICATE
- GTT Action - FORWARD
- Hex Digit Support for GTT
- IDP A-Party Blacklist
- IDP A-Party Routing
- IDP Screening for Prepaid
- IDP Service Key Routing
- Info Analyzed Relay Base (IAR)
- INP
- IS41 GSM Migration (IGM)

- ISUP NP with EPAP
- ITU TCAP LRN Query (LRNQT)
- ITUN-ANSI SMS Conversion
- LNP ELAP Configuration
- LOCREQ Query Response
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- MT-Based GSM SMS NP
- MT-Based GSM MMS NP
- MT-Based IS41 SMS NP
- MTP Msgs for SCCP Apps
- Multiple Linkset to a Single Adjacent Point Code
- Origin-Based MTP Routing
- Origin-based SCCP Routing
- PC & CIC Translation (PCT)
- Prepaid IDP Query Relay
- SCCP Loop Detection
- Service Portability (S-Port) Subscriber Differentiation
- SIP Number Portability
- SLS Bit Rotation by Incoming Linkset (ISLSBR)
- Spare Point Code Support
- Support for 16 GTT Lengths in VGTT
- TCAP Opcode Based Routing (TOBR)
- TCAP Opcode Quantity
- TIF Number Portability
- TIF SCS Forwarding
- TIF Simple Number Substitution
- Transaction-based GTT Loadsharing (TBGTTLS)
- Voice Mail Router (V-Flex)
- Weighted GTT Loadsharing (WGTTLS)
- XUDT UDT Conversion

3457 E3457 Cmd Rej: Perm feature key cannot be turned off for the feature

The value specified for the `partnum` parameter must be the correct part number for the feature.

3450 E3450 Cmd Rej: Invalid Part Number

The `platformenable=on` or the `oamhcmeas=on` parameter must be specified (see the `chg-measopts` command) before the 15 Minute Measurements feature can be turned on.

3088 E3088 Cmd Rej: Platformenable or Oamhcmeas option must be on

If the Measurements Platform feature is turned on (see the `chg-feat` command) as a precursor to turning on the 15 Minute Measurements feature, then at least one MCPM card must be available in the IS-NR state before the 15 Minute Measurements feature can be turned on. The `platformenable=on` parameter must be specified (see the `chg-measopts` command) before an MCPM card can be placed in the IS-NR state.

3698 E3698 Cmd Rej: At least one MCP card must be IS-NR

The 15 Minute Measurements feature cannot be turned on when 30 minute measurements collection is in progress.

2278 E2278 Cmd Rej: 30-minute measurement collection in progress

The Global Title Translation (GTT) feature must be turned on (using the `gtt=on` parameter for the `chg-feat` command) before the Intelligent Network Application Part (INAP) Number-based Portability (INP) feature or the ANSI-41 INP Query (AINPQ) feature can be turned on.

3922 E3922 Cmd Rej: GTT must be ON before INP/AINPQ can be ON

The A-Port, G-Port, or IGM feature must be turned on before the MNP Circular Route Prevention feature can be turned on.

2085 E2085 Cmd Rej: A-Port, G-Port or IGM must be turned ON

The SEASCLLI must be provisioned (see the `chg-seas-config` command) before the SEAS Over IP feature can be turned on.

4474 E4474 Cmd Rej: SEASCLLI must be set

At least one SEAS terminal must be configured (see the `chg-trm` command) before the SEAS Over IP feature can be turned on.

4616 E4616 Cmd Rej: SEAS Terminal Not Configured

The IP address of at least one IPSM card associated with a SEAS terminal must be configured before the SEAS Over IP feature can be turned on.

4472 E4472 Cmd Rej: The IP Addr of E5-IPSM corresponding to SEAS Trm must be set

The IP User Interface feature must be turned on before the SEAS Over IP feature can be turned on.

4452 E4452 Cmd Rej: SOIP Feature cant be turned ON if IPUi feature is not ON

The `login` and `hname` parameters must be provisioned (see the `chg-seas-config` command) before the SEAS Over IP feature can be turned on.

4672 E4672 Cmd Rej: Login, Password, and Host must be set in SEASCFG

If the SEAS Over IP feature is turned on, then the IP User Interface feature cannot be turned off.

4481 E4481 Cmd Rej: SOIP Feature is on

All card locations that correspond to SEAS terminals must be provisioned with IPSM cards before the SEAS Over IP feature can be turned on.

4620 E4620 Cmd Rej: E5-IPSM or E5-ENET-B Card is not Present

The A-Port feature must be turned on before the MT-Based IS41 SMS NP feature can be turned on.

4700 E4700 Cmd Rej: APORT must be ON

The G-Port feature must be turned on before the MT-Based GSM SMS NP feature can be turned on.

3991 E3991 Cmd Rej: GPORT feature must be ON

HIPR2 cards must be installed in all MUX locations before the HIPR2 High Rate Mode feature can be turned on.

4765 E4765 Cmd Rej: Obsolete MUX cards detected in the system

The `defcc` system option (see the `chg-stpopts` command) must be provisioned before the IAR Base feature can be enabled and before the ATINP, MT-based GSM SMS NP, or MT-Based IS41 SMS NP feature can be turned on.

4618 E4618 Cmd Rej: STPOPTS DefCC must not be NONE

The `defmcc` GSM option (see the `chg-gsmopts` command) must be provisioned before the MT-Based GSM SMS NP feature can be turned on.

4662 E4662 Cmd Rej: GSMOPTS DefMCC must not be NONE

The MT-Based GSM SMS NP feature must be turned on before the MT-Based GSM MMS NP feature can be turned on.

4740 E4740 Cmd Rej: MT-Based GSM SMS NP must be ON

An IDPRCDPN(X) NPP service must be ON before the Prepaid IDP Query Relay feature can be turned on.

4861 E4861 Cmd Rej: At least 1 IDPRCDPN(X) srvc must be ON to turn ON IDPR FEAT

The `defcc` and `defndc` system options (see the `chg-stpopts` command) must be provisioned before the V-Flex feature can be turned on.

4071 E4071 Cmd Rej: VFLEX cannot be turned ON if STPOPTS DefCC/DefNDC is NONE

The Prepaid IDP Query Relay feature must be turned on before the IDPR ASD or IDPR GRN feature can be turned on.

5024 E5024 Cmd Rej: Prepaid IDP Query Relay feature must be activated

The `matchseq=dn` parameter must be specified (see the `chg-tifopts` command) before the TIF ASD feature can be turned on.

5036 E5036 Cmd Rej: TIF ASD feature cannot be turned ON unless MATCHSEQ is DN

The GTT LS ARI feature must be turned off before the IGTTLS feature can be turned off.

5082 E5082 Cmd Rej: GTT LS ARI feature must be turned OFF

The HIPR2 High Rate Mode feature cannot be turned on or off if an IMT Rate Change sequence is in progress.

5184 E5184 Cmd Rej: IMT Rate Change sequence is in progress

If the provisioned System TPS (SIGTRAN TPS + ATM TPS) is greater than 500,000, then the HIPR2 High Rate Mode feature cannot be turned off.

5151 E5151 Cmd Rej: Feat cannot be turned OFF if system IP/ATM TPS exceeds 500K

The flashing process must be complete on all MUX cards before the HIPR2 High Rate Mode feature can be turned on or off.

5288 E5288 Cmd Rej: INIT-FLASH for MUX card(s) in progress

The HIPR2 High Rate Mode feature cannot be turned on or off during an Extended Bit Error Rate Test (BERT).

3043 E3043 Cmd Rej: IMT test in progress

The `matchseq=dn` parameter must be specified (see the `chg-tifopts` command) before the TIF Subscriber CgPN Blacklist feature can be turned on.

5370 E5370 Cmd Rej: TIF Subscr CgPN Blacklist feature requires MATCHSEQ equal DN

The `crptt` parameter must have a value of *none* (see the `chg-gsmopts` command) before the MNP CRP feature can be turned off.

4776 E4776 Cmd Rej: CRP TT must be NONE

The HIPR2 High Rate Mode feature cannot be turned on or off during upgrade.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

The Default Country Code must be provisioned (see the `defcc` parameter in the `chg-stpopts` command) before the Prepaid IDP Query Relay feature can be turned on.

4507 E4507 Cmd Rej: DEFCC must be provisioned

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

The SEASCFG Table must be accessible.

4613 E4613 Cmd Rej: Failed Reading SEASCFG Table

At least one terminal without a Thermal Alarm must exist before the SEAS Over IP feature can be turned on.

4094 E4094 Cmd Rej: IPSM card has Critical Thermal Alarm

The INP and AINPQ features cannot be turned on if the LNP (an LNP ported TNs quantity), LNP 150,000 LRNs, or LNP 300,000 NPANXX feature is enabled and on.

4070 E4070 Cmd Rej: LNP is mutually exclusive with an existing feature

The LNP ELAP Configuration feature and the WNP feature must be turned on before the LNP SMS feature can be turned on.

3598 E3598 Cmd Rej: LNP ELAP Configuration and WNP features must be ON

3109 E3109 Cmd Rej: Temporary feature key is not allowed for the feature

The STP Options table is corrupt or cannot be found by the system.

2852 E2852 Cmd Rej: Failed reading STP Options table

A function returned an unknown error. An ATH is also issued.

2601 E2601 Cmd Rej: Command aborted due to system error

If a `chg-ctrl-feat` command is already in progress, then another `chg-ctrl-feat` command cannot be entered.

2412 E2412 Cmd Rej: Command already in progress

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The Link table is corrupt or cannot be found.

2103 E2103 Cmd Rej: Failed reading the link table

If a single digit wildcard (?) is specified as a value for the `fpx` parameter more than 25 times across all of the rules for an NPP service (see the `ent-npp-srs` command), then the NPP Unlimited SDWC Characters feature cannot be turned off.

4786 E4786 Cmd Rej: Max 25 FPFX single digit wildcard chars '?' per NPP service

If more than three single digit wildcard characters (?) are specified for the `fpx` parameter in an NPP Service rule (see the `ent-npp-srs` command), then the NPP Unlimited SDWC Characters feature cannot be turned on.

4856 E4856 Cmd Rej: FPFX contains more than three ?

If a single digit wildcard (?) is specified after the sixth digit of the value specified for the `fpx` parameter for an NPP Service rule (see the `ent-npp-srs` command), then the NPP Unlimited SDWC Characters feature cannot be turned on.

4958 E4958 Cmd Rej: ? must be in the first six FPFX digits

A database error occurred while trying to access the NPPFILT table.

2601 E2601 Cmd Rej: Command aborted due to system error

The E5-ENET-B IPSP High Throughput feature cannot be turned off if an E5-ENET-B card running the IPSP application in the system has a configured card capacity above 6500 TPS.

4807 E4807 TPS exceeded for card.

The HIPR2 High Rate Mode feature must be ON before the 1M System TPS feature may be turned ON. The HIPR2 High Rate Mode feature cannot be turned OFF if the 1M System TPS feature is turned ON.

2661 E2661 Cmd Rej: 1M System TPS feature requires HIPR2 high rate feature ON

If the System TPS is more than 750K then the 1M System TPS feature cannot be turned OFF.

2662 E2662 Cmd Rej: Feat cannot be turned off if system IP/ATM TPS exceeds 750K

Notes

SEAS Terminals

All terminals that are configured as SEAS are automatically allowed or inhibited when the SEAS Over IP feature is turned on or off, respectively.

Commands blocked during IMT Rate Change sequence:

If the HIPR2 High Rate Mode feature is turned on or off, then an IMT Rate Change sequence is carried out (if required). The `alw-imt`, `disc-imt`, `flash-card`, `inh-imt`, `init-flash`, `init-mux`, and `tst-imt` commands cannot be entered if an IMT Rate Change sequence is in progress.

Service Portability

If the Service Portability feature is turned on before a dependent feature is turned on, then a warning is issued:

WARNING: No Service Portability dependent feature is on.

If the Service Portability feature is turned off when more than one dependent feature is turned on, then a warning is issued:

WARNING: Service Portability is OFF.

Output

```
chg-ctrl-feat:partnum=893xxxxxx:status=on
```

```
tekelecstp 06-07-26 14:47:49 EST EAGLE 36.0.0
chg-ctrl-feat:partnum=893xxxxxx:status=on
Command entered at terminal #4.
CHG-CTRL-FEAT: MASP A - COMPLTD
```

```
;
```

```
chg-ctrl-feat:partnum=893xxxxxx:alarm=clear
```

```
tekelecstp 06-07-26 14:47:49 EST EAGLE 36.0.0
chg-ctrl-feat:partnum=893xxxxxx:alarm=clear
Command entered at terminal #4.
CHG-CTRL-FEAT: MASP A - COMPLTD
```

```
;
```

```
tekelecstp 06-07-26 14:47:49 EST EAGLE 36.0.0
0367.0181 * SYSTEM Temp Key(s) expiration alarm cleared.
```

```
;
```

This example shows the output when the 1100 TPS/DSM for ITU NP feature is on, and the `chg-ctrl-feat` command is re-entered within 30 seconds for confirmation:

```
chg-ctrl-feat:partnum=893018001:status=on
```

```
tekelecstp 06-07-26 14:47:49 EST EAGLE 36.0.0
chg-ctrl-feat:partnum=893018001:status=on
Command entered at terminal #4.
CAUTION:Rated TPS for this feature supports an engineered GTT
traffic mix of no more than 70 percent EPAP-based traffic.
Re-enter the command within 30 seconds to confirm change.
```

```
CHG-CTRL-FEAT: MASP A - Command Aborted
```

```
Command is re-entered within 30 seconds  
chg-ctrl-feat:partnum=893018001:status=on
```

```
tekelecstp 06-07-26 14:47:58 EST EAGLE 36.0.0  
chg-ctrl-feat:partnum=893018001:status=on  
Command entered at terminal #4.  
CHG-CTRL-FEAT: MASP A - COMPLTD
```

This example shows the output when the 1100 TPS/DSM for ITU NP feature is on, and the `chg-ctrl-feat` command is not re-entered within 30 seconds:

```
chg-ctrl-feat:partnum=893018001:status=on
```

```
tekelecstp 06-07-26 14:47:49 EST EAGLE 36.0.0  
chg-ctrl-feat:partnum=893018001:status=on  
Command entered at terminal #4.  
CAUTION:Rated TPS for this feature supports an engineered GTT  
traffic mix of no more than 70 percent EPAP-based traffic.  
Re-enter the command within 30 seconds to confirm change.  
CHG-CTRL-FEAT: MASP A - Command Aborted
```

```
Command is not re-entered within 30 seconds.  
CHG-CTRL-FEAT command aborted due to confirmation timeout.
```

This example shows the output when the 1100 TPS/DSM for ITU NP feature is not on, and the `chg-ctrl-feat` command is re-entered within 30 seconds for confirmation:

```
chg-ctrl-feat:partnum=893018001:status=off
```

```
tekelecstp 06-07-26 14:47:49 EST EAGLE 36.0.0  
chg-ctrl-feat:partnum=893018001:status=off  
Command entered at terminal #4.  
CAUTION: This command decreases the total TPS of the  
SCCP system from 1100 to 850 TPS for each DSM.  
Re-enter the command within 30 seconds to confirm.  
CHG-CTRL-FEAT: MASP A - Command Aborted
```

```
Command is re-entered within 30 seconds  
chg-ctrl-feat:partnum=893018001:status=off
```

```
tekelecstp 06-07-26 14:47:58 EST EAGLE 36.0.0  
chg-ctrl-feat:partnum=893018001:status=off  
Command entered at terminal #4.  
CHG-CTRL-FEAT: MASP A - COMPLTD
```

Related Topics

- [enable-ctrl-feat](#)
- [rtrv-ctrl-feat](#)

4.1.48 chg-db

Use this command to manipulate elements of the database.

▲ Caution:

When this command is entered, all other database operations are locked out while the command executes.

▲ Caution:

The cards that run both the active and standby OAM reboot whenever the restore operation completes successfully. When a database is repaired successfully, the card with the standby OAM reboots. This action purges old database data from memory and reloads the MASP's with the new data. When the card with the active OAM reboots, all terminals reinitialize, automatically logging off all users. Depending on the new database, the terminals may be initialized to a different configuration, and user IDs and passwords may change.

Parameters

action (mandatory)

The database management action.

Range:

backup

Copies the database from the current data partitions to the backup partitions on both fixed disks, the backup partition on the removable drive, or to a compressed tar file on a remote FTP server. If the destination is the server a database file with the following naming convention will be created: 'CLLI string' - 'Release number string' - 'yymmddhh'.tar.gz (tekelecstp-37.5.0-08012212.tar.gz)

repair

Copies the current and backup databases from the active to the standby fixed disk.

restore

Copies the backup partitions to the current data partitions on both fixed disks, or copies the database from the removable drive or the remote FTP server to the current data partitions on both fixed disks.

▲ Caution:

The `action=restore` parameter initiates an emergency recovery procedure and requires the `init-sys` command to download the restored database to all the cards in the system.

dest (optional)

Destination. The destination disk for the database backup.

Range:***remove***

Back up the database to a removable drive

fixed

Back up the database to a fixed disk

server

Back up the database to a remote server

usb

The flush-mounted (not-latched) USB port on the MASP card.

Default:

fixed

file (optional)

The name of the TAR file on the remote server that contains the database to be restored to the system.

The `src=server` parameter must be specified before this parameter can be specified.

Range:

YY

Up to 39 alphanumeric characters

sloc (optional)

Source location. The location of the removable drive.

This parameter can be used to specify a location in the active or standby E5-MASP.

Range:

1113, 1115

Default:

location in the active E5-MASP

src (optional)

Source. The source used to restore the database.

Range:***remove***

Restore the database from a removable drive

fixed

Restore the database from the fixed disk

server

Restore the database from a remote server

usb

The flush-mounted (not-latched) USB port on the MASP card.

Default:
fixed

Example

```
chg-db:action=backup:dest=server
chg-db:action=restore:src=remove
chg-db:action=repair
chg-db:action=restore:src=server:file="CLLI-37.5.0-08012212.tar.gz"
```

Dependencies

This command cannot be entered while the system is in upgrade mode.


3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

The removable drive must be accessible and ready and must be formatted as a system removable disk, NOT as a measurement removable disk.

2962 E2962 Cmd Rej: <Device> is <condition>

The `dest` parameter can be specified only when `action=backup`. If the `dest=fixed` parameter is specified, or the `dest` parameter is not specified, the database on the current partition of the fixed disk is copied to the backup partition of the fixed disk. This action is shown in [Figure 4-1](#).

Figure 4-1 `chg-db:action=backup:dest=fixed`

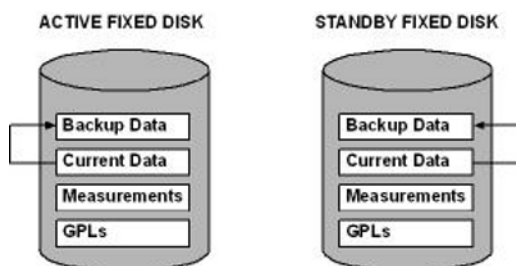


2177 E2177 Cmd Rej: Destination parameter not supported

The current database partition of both fixed disks must be free of integrity violations (for example, incoherency, inconsistency, and data corruption) when `action=backup` is specified.

2109 E2109 Cmd Rej: Database maintenance is required

The `src` parameter can be used only when `action=restore`. To restore the database, if the `src=fixed` parameter is specified or the `src` parameter is not specified, the backup partition of each fixed disk is copied to the current partition of the fixed disk. This action is shown in [Figure 4-2](#).

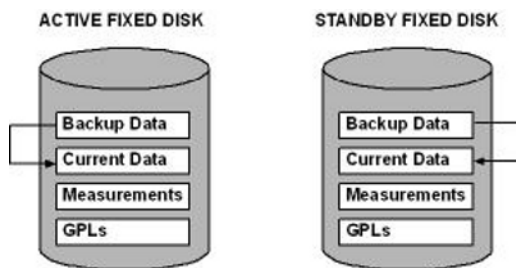Figure 4-2 `chg-db:action=restore:src=fixed`

2178 E2178 Cmd Rej: Source parameter not supported

The backup database partition of both fixed disks must be coherent when `chg-db:action=restore:src=fixed` is specified.

2109 E2109 Cmd Rej: Database maintenance is required

The database on the removable drive must be coherent when `chg-db:action=restore:src=remove` is specified.

2109 E2109 Cmd Rej: Database maintenance is required

The current and backup database partitions of the active fixed disk must be free of integrity violations (for example, incoherency and data corruption) when `action=repair` is specified.

2963 E2963 Cmd Rej: cannot read DB Stat Tab (Curr DB, Fxd Dsk, Actv MASP)

When the `action=repair/restore` parameter is specified, the database(s) serving as the source of data for the operation must be free of integrity violations (for example, incoherency and data corruption).

2963 E2963 Cmd Rej: cannot read DB Stat Tab (Curr DB, Fxd Dsk, Actv MASP)

All databases involved in the operation must contain valid database version information.

2963 E2963 Cmd Rej: cannot read DB Stat Tab (Curr DB, Fxd Dsk, Actv MASP)

The `action=restore` and `src=server` parameters must be specified before the `file` parameter can be specified. If the `src=server` parameter is specified, then the `file` parameter must be specified.

The `action=restore` and `src=remove` parameters must be specified before the `sloc` parameter can be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The DB application server must be provisioned (see the `ent-ftp-serv` command) before the `chg-db:action=backup:dest=server` or `chg-db:action=restore:src=server` command can be entered.

2774 E2774 Cmd Rej: FTP Server table entry not found for this APP/IPADDR

An IPSM card must be provisioned before the `chg-db:action=restore:src=server` or `chg-db:action=backup:dest=server` commands can be entered.

2387 E2387 Cmd Rej: Card is not in service

The standby MASP must be in the Active state before this command can be entered.

3950 E3950 Cmd Rej: Standby MASP is inhibited

If the `src=usb` or `dest=usb` parameter is specified, then a flash drive must be inserted into the Active OAM's flush-mounted USB port.

4918 E4918 Cmd Rej: Could not access USB disk

During a restore procedure, if removable drives installed in the latched USB port on active and standby E5-MASPs have different DB levels, then the `sloc` parameter must be specified in the `chg-db:action=restore:src=remove` command to specify the removable drive to be used.

2395 E2395 Cmd Rej: Removable DB levels don't match, must specify sloc parameter

The value specified for the `file` parameter must have the correct extension.

2314 E2314 Cmd Rej: Invalid filename entered

A value of 1113 or 1115 must be specified for the `sloc` parameter.

2025 E2025 Cmd Rej: Invalid card location

The `chg-db` command cannot be issued when SFAPP(P)->OAM sync is ON.

3637 E3637 Cmd Rej: Turn OFF SFAPP(P)->OAM sync before this command

This command cannot be entered when CAT2 IPSM to OAM syncing is in progress.

3652 E3652 Cmd Rej: IPSM to OAM SYNC in progress

Notes

When the `action=backup` parameter is specified, the following message appears when an audit is in progress:

```
Command In Progress: waiting for database audit to complete
```


The command executes when the audit is finished.

Performance

The performance time to execute this command varies depending on the number of records allocated for the database, system activity, and system setup. These operations should typically take no longer than 30 minutes. If one of these operations exceeds one hour, contact My Oracle Support. See the "My Oracle Support" section in Chapter 1 of this manual.


If the `dest=remove` parameter is specified, the database on the current partition of the active fixed disk is copied to the removable drive. This action is shown in [Figure 4-3](#).

Figure 4-3 `chg-db:action=backup:dest=remove`

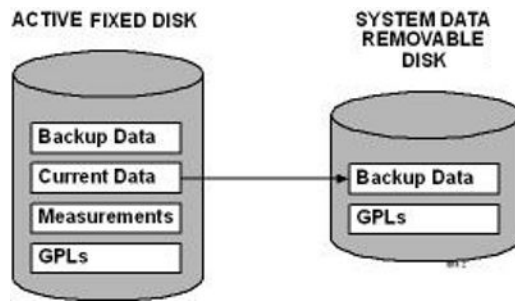


If the `chg-db:action=restore:src=server:filename=xxxxxxx.tar` or `chg-db:action=backup:dest=server` command is entered, the database partitions are copied from or to the remote server application through an IPSM card. This action is shown in Figure 4-4.

Figure 4-4 Remote Backup or Restore

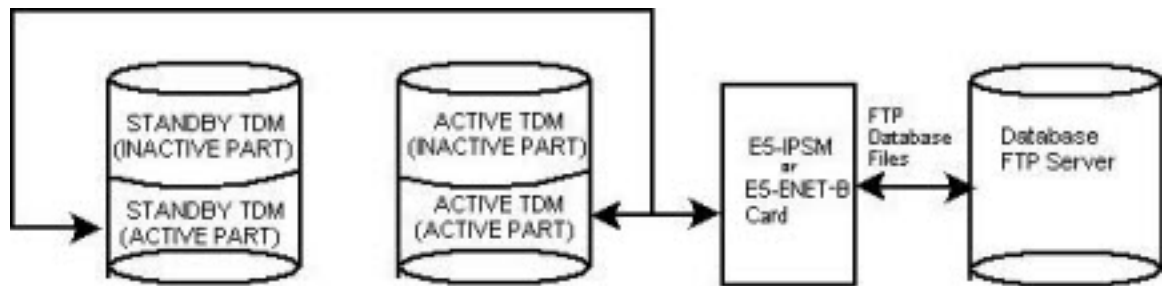


If the `action=repair` parameter is specified, the current and backup database partitions are copied from the active fixed disk to the standby fixed disk. This action is shown in Figure 4-5.

Figure 4-5 `chg-db:action=repair`

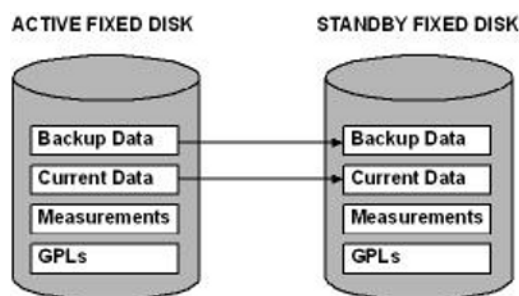

If the `src=remove` parameter is specified, the database on the removable drive is copied to the current partitions on both the active and standby fixed disks. This action is shown in Figure 4-6.

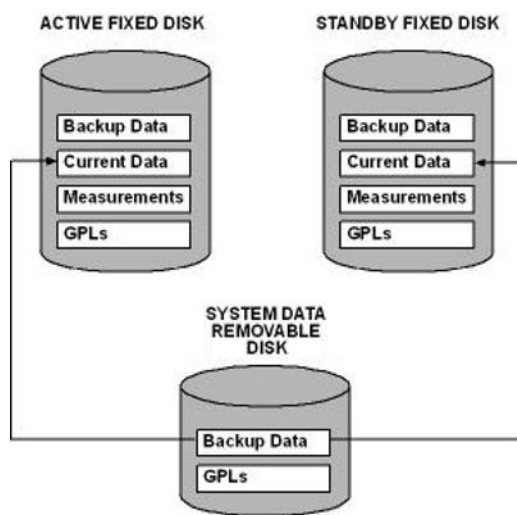Figure 4-6 chg-db:action=restore:src=remove

If the `action=restore` and `src=remove` parameters are specified on the E5-MASP hardware, the database of the removable drive (in the latched USB port) is copied to the current partition of each fixed disk. The default is to use the removable drive in the active E5-MASP. The `sloc` parameter can be used to specify the removable drive in the active or standby E5-MASP.

If the `dest=remove` parameter is specified for an E5-MCAP card, the database on the current partition of each fixed disk is copied to the removable drive in both latched USB ports. If only the active OAM has a removable drive, then only the current partition on the active OAM is copied to the removable drive in the active OAM's latched USB port.

If the `chg-db:action=restore:src=usb` or `chg-db:action=backup:dest=usb` command is entered, then the database partitions are copied from or to the flash drive (inserted in the active OAM's flush-mounted USB port). This action is shown in [Figure 4-3](#).

Output

Messages such as UIMs might appear at your terminal.

```
chg-db:action=backup
```

```
BACKUP (FIXED): MASP B - Backup starts on active MASP.
BACKUP (FIXED): MASP B - Backup on active MASP to fixed disk complete.
BACKUP (FIXED): MASP B - Backup starts on standby MASP.
BACKUP (FIXED): Backup on standby MASP to fixed disk complete.
```

```
chg-db:action=restore
```

```
RESTORE (FIXED): MASP A - Restore starts on active MASP.
RESTORE (FIXED): MASP A - Restore from fixed disk on active MASP
complete.
RESTORE (FIXED): MASP A - Restore starts on standby MASP.
RESTORE (FIXED): MASP A - Restore from fixed disk on standby MASP
```

```
complete.
  RESTORE (FIXED): MASP A - MASP(s) will reboot to load data.

chg-db:action=backup:dest=remove

  BACKUP (REMOVABLE) : MASP A - Backup starts on active MASP.
  BACKUP (REMOVABLE) : MASP A - Backup to removable media complete.

chg-db:action=backup:dest=fixed

  BACKUP (FIXED) : MASP A - Backup starts on active MASP.
  BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk
complete.
  BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
  BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk
complete.

chg-db:action=restore:src=remove

  RESTORE (REMOVABLE) : MASP A - Restore starts on active MASP.
  RESTORE (REMOVABLE) : MASP A - Restore starts on standby MASP.
  RESTORE (REMOVABLE) : MASP A - MASP(s) will reboot to load data.
  RESTORE (REMOVABLE) : MASP A - Restore from removable media
complete.

chg-db:action=restore:src=fixed

  RESTORE (FIXED) : MASP A - Restore starts on active MASP.
  RESTORE (FIXED) : MASP A - Restore from fixed disk on active MASP
complete.
  RESTORE (FIXED) : MASP A - Restore starts on standby MASP.
  RESTORE (FIXED) : MASP A - MASP(s) will reboot to load data.
  RESTORE (FIXED) : MASP A - Restore from fixed disk on stdby MASP
complete.

chg-db:action=backup:dest=usb

  BACKUP (USB): MASP A - Backup starts on active MASP.
  BACKUP (USB): MASP A - Backup to usb device complete.

chg-db:action=restore:src=usb

RESTORE (USB): MASP A - Restore starts on active MASP.
  RESTORE (USB): MASP A - Restore from usb drive complete.
  RESTORE (USB): MASP A - Restore starts on standby MASP.
  RESTORE (USB): MASP A - Restore from usb drive complete.
  RESTORE (USB): MASP A - MASP(s) will reboot to load data.
```

```
chg-db:action=repair
```

```
REPAIR: MASP A - Repair starts on standby MASP.  
REPAIR: MASP A - Standby MASP will reboot to load data.  
REPAIR: MASP A - Repair from fixed disk complete.
```

```
chg-db:action=backup:dest=server
```

```
BACKUP (SERVER): MASP A - Backup starts on active MASP.  
BACKUP (SERVER) : Copy Database to card memory for processing.  
BACKUP (SERVER) : Compress Database before archiving.  
BACKUP (SERVER) : Send database archive to server.  
BACKUP (SERVER): MASP A - Backup to remote server complete.
```

```
chg-db:action=restore:src=server:file="CLLI-37.5.0-08011112.tar.gz"
```

```
RESTORE (SERVER) : Retrieve database archive from server.  
RESTORE (SERVER) : Validate database archive.  
RESTORE (SERVER) : Restore starts on active MASP.  
RESTORE (SERVER) : Restore from server on active MASP complete.  
RESTORE (SERVER) : Restore starts on standby MASP.  
RESTORE (SERVER) : Restore from server on standby MASP complete.  
RESTORE (SERVER) : MASP(s) will reboot to load data.
```

Related Topics

- [copy-meas](#)
- [rept-stat-db](#)

4.1.49 chg-dconn

Use this parameter to change the DEIR connection information. The DCONN table supports the provisioning information related to the Diameter connections.

Parameters

dcname (mandatory)

Diameter connection name. This parameter specifies the unique logical name assigned to each diameter connection.

Range:

azzzzzzzzzzzzzzz

A string of alphanumeric characters, beginning with a letter and up to 15 characters in length. Valid values are a..z, A..Z, 0..9.

Default:

No change to the current value.

System Default:

null

maxtps (optional)

Maximum TPS. This is the maximum TPS for a diameter connection. The unused card capacity will be allocated among the connections that have exceeded their RSVDTPS up to limit of MAXTPS value provisioned for the particular connection.

Range:

100 - 8000

Default:

No change to the current value

System Default:

8000

rsvdtps (optional)

Reserved TPS. This is the guaranteed TPS (Transactions per second) for a diameter connection. Total RSVDTPS on a card cannot exceed 8000.

Range:

100 - 8000

Default:

No change to the current value

System Default:

250

td (optional)

Diameter Peer Disconnect timer. This timer is used to control how long the DEIR process will wait for a DPA response (Diameter Peer Answer) to a send DPR (Diameter Peer Request). The value given to a timer is in seconds.

Range:

1 - 10

Default:

No change to the current value

System Default:

3

tw (optional)

Diameter Watchdog timer. This timer is used to control how long the DEIR (Diameter EIR) process will wait for a DWA (Diameter Watchdog Answer) response to a send DWR (Diameter Watchdog request). The value given to a timer is in seconds.

Range:

6-30

Default:

No change to the current value.

System Default:

6

Example

```
chg-dconn:dcname=conn1:rsvdtps=1000:maxtps=5000:td=5:tw=15
```

```
chg-dconn:dcname=conn2:td=6:maxtps=6000
```

Dependencies

S13/S13' EIR feature must be enabled before changing any parameter of diameter connection.

2724 E2724 Cmd Rej: S13 Feature Must Be Enabled

DCONN table should be accessible.

2735 E2735 Cmd Rej: Failed reading DCONN table

At least one optional parameter must be specified.

2112 E2112 Cmd Rej: At least one parameter must be changed

Diameter connection name is not present in DCONN table.

2783 E2783 Cmd Rej: DCNAME not present in DCONN table

Sum of RSVDTPS of all the diameter connections on a particular card must not exceed the diameter card TPS (8000).

2808 E2808 Cmd Rej: TPS exceeded on DEIR card

RSVDTPS of a diameter connection must be less than or equal to its MAXTPS.

2732 E2732 Cmd Rej: RSVDTPS must be less than or equal to MAXTPS

Notes

None.

Output

```
chg-dconn:dcname=conn1:rsvdtps=1000:maxtps=5000:td=5:tw=15
```

```
tekelecstp 13-03-20 15:44:10 EST EAGLE 45.1.0
chg-dconn:dcname=conn1:rsvdtps=1000:maxtps=5000:td=5:tw=15
Command entered at terminal #4.
CHG-DCONN: MASP A - COMPLTD
;
```

Related Topics

- [dlt-dconn](#)
- [ent-dconn](#)
- [rtrv-dconn](#)

4.1.50 chg-deiropts

Use this command to change the S13/S13' EIR configuration. This command updates the DEIROPTS (Diameter Options) table.

Parameters

applid (optional)

Authentication Application ID. The application id configured should match with the Auth-Application-Id (AVP Code 258) value in Vendor-Specific-Application-ID AVP. This value is fixed to 16777252 and cannot be changed.

Range:

0 - 2147483647

Default:

No change to the current value

System Default:

16777252

congerr (optional)

This parameter defines the diameter response to be sent by the DEIRHC card at the time of card congestion. If the card fails in processing the incoming messages, then it shall discard the message and respond with the error code.

Range:

3004 - DIAMETER_TOO_BUSY

5006 - DIAMETER_RESOURCES_EXCEEDED

Default:

No change to the current value

System Default:

3004

deirdfltimsilkup (optional)

Diameter Equipment Identity Register (EIR) default IMSI lookup status. This parameter specifies the order of IMEI table lookup for default IMSI screening. This parameter is analogous to the P1 parameter in the IMSIPFX CSL list but is used only when there is no matching IMSI prefix in the IMSIPFX CSL.

Range:

range

Perform lookup on Range IMEI table only.

individual

Perform lookup on Individual IMEI table only.

both

Perform lookup on Individual IMEI table first & if not found then lookup Range IMEI table.

none

Don't perform any lookup. Just return the default IMEI status.

Default:

No change to the current value.

System Default:

whitelist

deirdflimsiresp (optional)

Diameter Equipment Identity Register (EIR) default IMSI response. This parameter specifies the default IMEI status for default IMSI screening. This parameter is analogous to the P2 parameter in the IMSIPFX CSL list but is used only when there is no matching IMSI prefix in the IMSIPFX CSL.

Range: (whitelist, graylist, blacklist, unknown)

whitelist

The IMEI is "valid". Registration should be allowed for the handset.

graylist

The IMEI is "questionable".

blacklist

The IMEI is "invalid". Registration should not be allowed for this handset.

unknown

The IMEI is not in the White, Gray, or Black list. Registration should not be allowed for this handset.

Default:

No change to the current value.

System Default:

whitelist

deirgrsp (optional)

Diameter Equipment Identity Register (EIR) Global Response status.

Range:

off

EIR Global Response is not used

whitelst

The IMEI is "valid". Registration should be allowed for the handset.

graylst

The IMEI is "questionable." Registration should be allowed, but the event is logged in the DEIR log and a special measurement peg is incremented.

blklst

The IMEI is "invalid". Registration should not be allowed for this handset.

unknown

The IMEI is not in the White, Gray, or Black list. Registration should not be allowed for this handset.

Default:

No change to the current value

System Default:

off

deirrsptype (optional)

Diameter Equipment Identity Register (EIR) Response Type. The Response Type is used to determine how the lists are to be searched.

Range:

type 1

type 2

type 3

EIR Response Type Values contains information to help select the value for this parameter.

Presence in List			EIR Response Type (Equipment Status)		
White	Gray	Black	Type 1	Type 2	Type 3
X			in white list	in white list	in white list
X	X		in gray list	in gray list	in gray list
X	X	X	in black list	in black list	in black list
X		X	in black list	in black list	in black list
	X		in gray list	in gray list	unknown
	X	X	in black list	in black list	unknown
		X	in black list	in black list	unknown
			in white list	Unknown*	unknown *

*Indicates no match was found for the IMEI in an incoming message within the database.

Default:

No change to the current value.

System Default:

type 1

dprcause (optional)

Disconnect Cause in DPR (Disconnect Peer Request) message.

Range:

0 - REBOOTING

1 - BUSY

2 - DO_NOT_WANT_TO_TALK

Default:

No change to the current value

System Default:

Do not want to talk (2)

off (optional)

This parameter turns off the specified options. Up to 8 comma-separated unique options can be specified.

Range:

deirimsiscrn

deirlogwl

deirdfltimsiscrn

deirimsichk

on (optional)

This parameter turns on the specified options. Up to 8 comma-separated unique options can be specified.

Range:

deirimsiscrn

deirlogwl

deirdfltimsiscrn

deirimsichk

product (optional)

This parameter is the vendor assigned name for the product.

Range:

aaaaaaaaaaaaaaaa

An alphanumeric string of 1 to 15 characters with the first character being alphabetic.

Default:

No change to the current value

System Default:

None

vendid (optional)

This parameter indicates the S13/S13' local Vendor ID.

Range:

0 - 2147483647

Default:

No change to the current value.

System Default:

0

Example

```
chg-deiropts:on=deirimsichk:deirrsptype=type2:product=abc123
```

```
chg-deiropts:deirgrsp=off:off=deirimsichk:dprcause=1
```

```
chg-deiropts:dprcause=0
```

```
chg-  
deiropts:on=deirimsiscrn,deirlogwl,deirdfltimsiscrn,deirimsichk
```

```
chg-  
deiropts:off=deirimsiscrn,deirlogwl,deirdfltimsiscrn,deirimsich  
k
```

```
chg-deiropts:deirdfltimsilkup=range
```

```
chg-deiropts:deirdfltimsiresp=whitelist
```

Dependencies

The S13 feature must be enabled before changing any DEIR configuration.

2724 E2724 Cmd Rej: S13 Feature Must Be Enabled

The DEIROPTS table should be accessible.

4820 E4820 Cmd Rej: Failure accessing EGLEOPTS table

At least one optional parameter must be specified.

2112 E2112 Cmd Rej: At least one parameter must be changed

The product name must be alphanumeric.

2192 E2192 Cmd Rej: Pattern contains invalid characters

The S13 Application ID cannot be changed.

2985 E2985 Cmd Rej: Application ID not supported

The same value cannot be specified for the on and off parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

on/off options

- *deirimsiscrn* --- Specifies whether the IMSI Screening for Diameter Equipment Identity Register (EIR) shall be done before the IMEI check. This option has a default of OFF.

- *deirlogwl* --- Specifies whether the white list logging for Diameter Equipment Identity Register (EIR) shall be on. This option has a default of OFF.
- *deirdfltimsiscrn* --- Specifies whether the default IMSI Screening for Diameter Equipment Identity Register (EIR) shall be on. This option has a default of OFF.
- *deirimsichk* --- Specifies the use of Diameter Equipment Identity Register (EIR) IMSI Check status. It specifies whether IMSI lookup shall be performed along with IMEI for blklst numbers. This option has a default of OFF.

Output

```
chg-deiropts:on=deirimsichk:deirrsptype=type2
```

```
tekelecstp 13-04-13 17:25:00 EST EAGLE 45.1
  chg-deiropts:on=deirimsichk:deirrsptype=type2
  Command entered at terminal #4.
  CHG-DEIROPTS: MASP A - COMPLTD
;
```

Related Topics

- [rtv-deiropts](#)

4.1.51 chg-dstn

Use this command to change the characteristics of the point codes that are considered destinations from this signal transfer point (STP). A destination does not have to be an adjacent signaling point, but the system must be able to route traffic to this destination.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (mandatory)

Destination point code.

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

*p-, 000-255, **

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number*, *sub number area*, *main number area* (*un-sna-mna*). The *prefix* indicates a private point code (*prefix-un-sna-mna*).

Range:

p-, 000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

aliasa/aliasi/aliasn/aliasn24/aliasn16 (optional)

Alias point code.

aliasa (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Range:

000-255, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

Enter *none* to delete the point code.

The point code *000-000-000* is not a valid point code.

aliasi (optional)

ITU international alias point code list with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

If an ITU international destination (*dpci*) point code is entered, the *dpci* and *aliasi prefix* subfields cannot be the same, (both spare or both non-spare). Up to 2 comma-delimited entries can be entered in the point code list.

Range:

s-, 0-255, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

Enter *none* to delete the point code.

The point code *0-000-0* is not a valid point code.

aliasn (optional)

ITU national alias point code list in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

If an ITU national destination (*dpcn*) point code is entered, then the *dpcn* and *aliasn prefix* subfields cannot be the same (both spare or both non-spare). Up to 2 comma-delimited entries can be entered in the point code list.

Range:

s-, 0-16383, *aa-zz*, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Enter *none* to delete the point code.

aliasn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Enter *none* to delete the point code.

aliasn16 (optional)

16-bit ITU national destination point code with subfields *unit number, sub number area, main number area* (*un-sna-mna*).

Range:

000---127, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

Enter *none* to delete the point code.

bei (optional)

Broadcast exception indicator. This parameter specifies whether the STP broadcasts network management messages to adjacent signaling points. The network management messages contain information about the indicated cluster and any of

that cluster's member signaling points that are on its exception list. The messages whose broadcast is determined by this parameter are:

- TFP—Transfer Prohibited
- TCP—Transfer Cluster Prohibited
- TFA—Transfer Allowed
- TCA—Transfer Cluster Allowed

Range:

yes

Network management messages are not broadcast

no

Network management messages are broadcast

Default:

No change to the current value

c11i (optional)

Common Language Location Identifier assigned to the destination.

Range:

ayyyyyyyyyy 1 alphabetic character followed by 10 alphanumeric characters

Default:

No change to the current value

e1ei (optional)

Exception-list exclusion indicator, for cluster destinations only. This parameter specifies whether the system *excludes* or *includes (maintains)* a dynamic status exception list (x-list) for each cluster route used to reach the member signaling points that make up the cluster.

Range:

yes

Do not maintain a dynamic status x-list

no

Maintain a dynamic status x-list

Default:

No change to current value.

homescp (optional)

This parameter specifies whether the destination point code is considered a Home SCP when performing SCCP processing for messages with no Global Title Address Digits (Global Title Indicator (GTI) is set to zero).

This parameter can only be set to "yes" for full DPCs.

Range:

yes

the DPC is considered a Home SCP

no

the DPC is not considered a Home SCP

Default:

No change to the current value

homesmsc (optional)

This parameter specifies whether the DPC is considered a Home SMSC when performing SCCP processing for messages with no Global Title Address Digits (GTI is set to zero).

This parameter can only be set to "yes" for full DPCs.

Range:

yes

the DPC is considered a Home SMSC

no

the DPC is not considered a Home SMSC

Default:

No change to the current value

ncai (optional)

Nested cluster allowed indicator. Specifies whether the route to the cluster point code can be different for provisioned members of the cluster. A point code is a member of a cluster point code if it has the same network identifier (NI) and network cluster (NC) values as the cluster point code. This parameter can only be specified for cluster point codes. Nested cluster routing is allowed if this parameter is set to *yes* and the CRMD and NCR features are turned on.

Range:

yes

The cluster point code is a nested cluster point code. Point codes that are members of this cluster point code can be assigned to route sets that are different from the route set assigned to the cluster point code.

no

The cluster point code is not a nested cluster point code. Point codes that are members of this cluster point code must be assigned to the same route set assigned to the cluster point code.

Default:

Current value.

nprst (optional)

NM bits reset. This parameter specifies whether the NM bits should be set to **00**.

This parameter applies only to ITU IAM messages. The `nptype=nm` parameter must be specified (see the `chg-tifopts` command) before this parameter can be specified.

Range:**off**

Do not set NM Bits to 00 in ITU IAM message if the TIFOPTS *nptype* option value is *nm*

on

Set NM Bits to 00 in ITU IAM message if the TIFOPTS *nptype* option value is *nm*

Default:

No change to the current value

prx (optional)

Proxy point code indicator. This parameter specifies whether a destination point code is used as a proxy point code.

Range:**yes**

The destination point code is used as a proxy point code.

no

The destination point code is not used as a proxy point code.

Default:

No change in current value.

rcause (optional)

Release cause. The value to be used as the release cause on REL messages.

If the TIFOPTS *rlcopc* parameter is specified (see the *chg-tifopts* command), and a value of 0 - 127 is specified for the *rcause* parameter, then the *rcause* parameter value overrides the values specified for the TIFOPTS *rcausenp* and *rcausepfx* parameters.

Range:

0 - 127, *none*

none -use the values specified for the TIFOPTS *rcausenp* and *rcausepfx* parameters

Default:

No change to the current value

sccpmsgcnv (optional)

SCCP UDT(S)/XUDT(S) Message Conversion Indicator. The type of conversion performed on messages for the specified destination.

Range:**none**

conversion is not required on messages for the destination

udt2xudt

convert all UDT(S) messages for the destination to XUDT(S) messages

xudt2udt

convert all non-segmented XUDT(S) messages for the destination to UDT(S) messages

sxudt2udt

convert all segmented and non-segmented XUDT(S) messages for the destination to UDT(S) messages

Default:

No change to the current value

spc/spca/spci/spcn/spcn24/spcn16 (optional)

Secondary point code.

spc (optional)

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

spca

Range:

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

p-, *000-255*, *none*

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid for *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

Enter *none* to delete the point code.

The point code *000-000-000* is not a valid point code.

Default:

No change to current value

spci (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, *0-255*, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

Enter *none* to delete the point code.

Default:

No change to current value

spcn (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the

`chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, *0-16383*, *aa-zz*, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*, *p-*, *ps*

nnnnn—*0-16383*

gc—*aa-zz*

m1-m2-m3-m4—*0-14* for each member; values must sum to 14

Enter *none* to delete the point code.

Default:

No change to current value

spcn24 (optional)

24-bit ITU national secondary point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, *000-255*, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—*000-255*

ssa—*000-255*

sp—*000-255*

Enter *none* to delete the point code.

Default:

No change to current value

spcn16 (optional)

16-bit ITU national secondary point code with subfields *unit number*, *sub number area*, *main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p-, *000-127*, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

un—*000-127*

sna—*000-15*

mna—*000-31*

Enter *none* to delete the point code.

Default:

No change to the current value.

splitiam (optional)

This parameter specifies when and how to split an ITU IAM message into 1 IAM message + 1 SAM message.

 **Note:**

This parameter applies only to ITU IAM messages.

Range:

15-31, none

15 - 31 -Maximum number of CdPN digits allowed in the IAM message before splitting occurs. The remaining digits, up to a total of 32, are encoded in the SAM message.

none -use the value specified for the TIFOPTS splitiam parameter to determine when to split the IAM message

Default:

No change to the current value

Example

To change the CLLI of destination 111-222-111 to RLGHNCA01A:

```
chg-dstn:dpc=111-222-111:clli=rlghncxa01a
```

To change the exception-list exclusion indicator for cluster 20-2-* to yes:

```
chg-dstn:dpc=20-2-*:elei=yes
```

To change an existing destination to contain an SPC:

```
chg-dstn:dpc=20-2-2:spc=5-5-5
```

To change Nested Cluster Allowed Indicator for cluster 20-2-* to yes:

```
chg-dstn:dpc=20-2-*:ncai=yes
```

To change a network destination:

```
chg-dstn:dpc=25-*-*:clli=tklc
```

To change the BEI parameter value of ITU national destination 8111-aa to yes:

```
chg-dstn:dpcn=8111-aa:bei=yes
```

To change the BEI parameter value of 24-bit ITU-N destination 15-100-10 to yes:

```
chg-dstn:dpcn24=15-100-10:bei=yes
```

To change an existing 24-bit ITU-N destination to contain a 24-bit ITU-N SPC:

```
chg-dstn:dpcn24=12-12-12:spcn24=25-25-25
```

To change ITU-I spare destination point code s-2-100-1 to contain an ITU-I spare secondary point code, ANSI alias, and ITU-N spare alias:

```
chg-
```

```
dstn:dpci=s-2-100-1:spci=s-2-129-9:aliasa=121-120-120:aliasn=s-129
```

To prevent a destination point code from being used as a proxy point code:

```
chg-dstn:dpc=11-11-11:prx=no
```

To change ITU-N destination point code 10805-nz to delete its ANSI alias and add both ITU-I spare and non-spare aliases:

```
chg-dstn:dpcn=10805-nz:aliasa=none:aliasi=s-5-80-0,5-80-1
```

To change ITU-I spare destination point code s-5-60-3 to add ITU-N non-spare and spare aliases:

```
chg-dstn:dpci=s-5-60-3:aliasn=10723-gr,s-10723-gr
```

To change ITU-I spare destination point code s-5-60-5 to add ITU-N spare and ITU-I non-spare aliases:

```
chg-dstn:dpci=s-5-60-5:aliasn=s-10725-gr:aliasi=5-60-5
```

To change sccpmsgcnv type to udt2xudt for destination 11:

```
chg-dstn:dpc=11-11-11:sccpmsgcnv=udt2xudt
```

Dependencies



Note:

A full point code contains numerical values for all three segments of the point code.

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The specified destination point code value must already be defined in the Destination point code table.

2657 E2657 Cmd Rej: Point code not defined

The destination address must be a full point code, a network destination, or a cluster point code.

2886 E2886 Cmd Rej: DSTN address must be a full, network or cluster PC

The ANSI self-ID destination point code for the STP must be defined before ANSI destinations can be changed.

2725 E2725 Cmd Rej: ANSI site id not defined

The ITU-I self-ID destination point code for the STP must be defined before ITU-I destinations can be changed.

2727 E2727 Cmd Rej: ITU-NATL site id not defined

The ITU-N self-ID destination point code for the STP must be defined before ITU-N destinations can be changed.

2726 E2726 Cmd Rej: ITU-INTL site id not defined

The Spare Point Code Support feature must be enabled before the spare point code prefix s- can be specified for an ITU-I or ITU-N destination, secondary, or alias point code.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

If the dpcn or aliasn parameter is specified, the format must match the format that was assigned with the chg-stpopts:npcfmti parameter.

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

If the 7000 Routesets or 8000 Routesets feature is enabled, then the total number of provisioned aliases in the system cannot exceed 8000. If the 10,000 Routesets feature is enabled, then the total number of provisioned aliases in the system cannot exceed 10000.

4298 E4298 Cmd Rej: Alias PC table is full

Alias point codes are allowed only for full point code destinations.

2863 E2863 Cmd Rej: Destination's alias PCs must be full PCs

Alias point codes for destinations must be full point codes.

2854 E2854 Cmd Rej: Alias PCs are not valid for cluster destinations

A specified alias type cannot already be defined as a destination address.

The `aliasa` and `dpca` parameters cannot be specified together in the command. The `aliasi` and `dpci` parameters and the `aliasn` and `dpcn` parameters cannot be specified together in the command if the `prefix` subfields are the same (both are spare or both are non-spare).

2325 E2325 Cmd Rej: Alias type matches DPC type

Alias ANSI point codes cannot be members of a cluster or network destination.

2876 E2876 Cmd Rej: Alias DPCs cannot be a member of a Network or Cluster

The specified alias network type must be different from the destination point code network type.

2325 E2325 Cmd Rej: Alias type matches DPC type

A 24-bit ITU-N point code cannot have a 14-bit ITU-N alias point code or an ANSI alias point code.

2839 E2839 Cmd Rej: Invalid parameter for ITU-N 24bit point code

A 24-bit ITU-National point code can have an ITU-I point code alias. This allows conversion of 14-bit ITU-I routing label to 24-bit routing label and vice versa.

2839 E2839 Cmd Rej: Invalid parameter for ITU-N 24bit point code

A 14-bit ITU-N point code cannot have a 24-bit ITU-N alias point code.

2839 E2839 Cmd Rej: Invalid parameter for ITU-N 24bit point code

If an ITU-I point code is specified, either the `aliasn` or the `aliasn24` parameter can be specified, but not both.

3497 E3497 Cmd Rej: Either ALIASN or ALIASN24, not both, for destination

Cluster destinations are allowed only if the CRMD feature is turned on.

2855 E2855 Cmd Rej: Cluster DPCs are only valid if the CRMD feature is ON

The `ncai` parameter can be specified only for cluster destinations.

2868 E2868 Cmd Rej: Invalid NCAI parameter has been entered

The `elei` parameter can be specified only for cluster destinations (for example, `dpc=ni-nc-*`).

2853 E2853 Cmd Rej: ELEI is only valid for cluster destinations

The NCR (Nested Cluster Routing) feature must be turned on before the `ncai` parameter can be specified.

2837 E2837 Cmd Rej: NCR must be enabled to enter NCAI param

Network routing is valid only if the Network Routing (NRT) feature is turned on.

2955 E2955 Cmd Rej: Network Routing is only valid if the NRT feature is ON

When using network routing, if the destination point code has a value of * in the `nc` subfield, the `ncm` subfield must also be * (for example, `dpc=21-*-*`).

2956 E2956 Cmd Rej: NCM must be * when using Network Routing

If a provisioned nested cluster point code is being changed to a non-nested cluster point code (`ncai=no`), previously provisioned members of the cluster must have the same route set.

2838 E2838 Cmd Rej: Unable to change Network/Cluster dstn NCAI param

If a provisioned non-nested cluster point code is being changed to a nested cluster point code (`ncai=yes`), the maximum number of provisioned nested clusters must be no greater than 500.

2836 E2836 Cmd Rej: Too many nested cluster dstn entered

If specified, the `spc` parameter value must be already be configured as a secondary point code in the Secondary Point Code table.

3814 E3814 Cmd Rej: SPC does not exist

The value specified for the `spc` parameter must be a full point code.

3822 E3822 Cmd Rej: SPC must be a full point code

If the `spc` parameter is specified, the `domain=ss7` parameter must be specified.

3823 E3823 Cmd Rej: Domain must be SS7 if SPC is specified

If the `spc` parameter is specified, then the value specified for the `dpc` parameter must be a full point code.

2859 E2859 Cmd Rej: Destination address must be a full point code

The network type of the value specified for the `spc` parameter must match the network type of the value specified for the `dpc` parameter.

3821 E3821 Cmd Rej: SPC & DPC must be the same network type

If a new `CLLI` for the destination point code is specified, it cannot match the `CLLI` of the system.

2163 E2163 Cmd Rej: CLLI used by STP

If the corresponding destination for the specified destination point code is an adjacent signaling point (matched a Far End point code in its linkset entity set), the `CLLI` of the specified destination point code cannot be assigned to any other destination address.

2184 E2184 Cmd Rej: CLLI is already being used by a route

A reserved word cannot be specified for the destination identifier (`CLLI`).

N/A N/A

If the destination does *not* use an SPC, the group code of the destination must be the same as the group code of the ITU national true point code. If the destination uses an SPC, then the group code of the destination must match the group code of the SPC.

3880 E3880 Cmd Rej: Grp Code of dstn & True PC must match if no Secondary PC

If an ITU national destination is being changed and the ITUDUPPC feature is turned on, this applies depending on whether the destination uses an SPC (secondary point code). For example, if the ITU national true point code has a group code of `ee`, then destinations with group codes of `ee` can be added without using an SPC. Destinations with a group code of `ff` must use an SPC with a group code of `ff`.

3881 E3881 Cmd Rej: Group Code and/or Spare Point Code of DPC and SPC must match

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The STP Self-identity table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The ICNP feature must be enabled and turned on in order to specify the `icnpxlat`, `cgpafmt`, and `cdpafmt` parameters.

4497 E4497 Cmd Rej: ICNP feature must be activated

Alias point codes cannot already be defined as another destination.

2459 E2459 Cmd Rej: Alias already in use

The value specified for the `spc` parameter cannot already be specified as a secondary point code for the destination point code.

4638 E4638 Cmd Rej: SPC may not exist as an SPC in the linkset table for the DPC

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The Proxy Point Code feature must be enabled before the `prx` parameter can be specified.

4677 E4677 Cmd Rej: PRX allowed only if PPC feature is enabled

If the `prx=yes` parameter is specified, then the value of the `dpc` parameter must be a full point code.

2859 E2859 Cmd Rej: Destination address must be a full point code

If the value of the `dpc` parameter is used as a proxy point code, then the `prx=no` parameter cannot be specified.

4685 E4685 Cmd Rej: PPC referred by other entities

The number of proxy destinations cannot exceed the value allowed by the enabled Proxy Point Code quantity feature.

4684 E4684 Cmd Rej: Allowed Proxy PC capacity exceeded

If the `prx=yes` parameter is specified, then the `spc/spca/spci/spcn/spcn24` parameter cannot be specified.

4727 E4727 Cmd Rej: SPC cannot be assigned to entry that uses PPC

The `prx` parameter must have a value of `yes` or `no`.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

If the value specified for the `dpc` parameter is a private point code, then the `prx=yes` parameter cannot be specified.

4723 E4723 Cmd Rej: PRX=YES not supported for Private PC

The total number of proxy destinations cannot exceed the total capacity (100) of the Proxy Point Code feature.

4730 E4730 Cmd Rej: Maximum Proxy PC capacity exceeded

If an IPGW linkset is used, then the `prx=yes` parameter cannot be specified.

4563 E4563 Cmd Rej: IPGW linksets not supported for proxy destinations

The network type of the routeset must be the same as the network type of the destination point code. For example, a destination point code with an ANSI network type cannot use a routeset with an ITU network type.

3877 E3877 Cmd Rej: ANSI/ITU point code type mismatch

If the specified destination point code is assigned a proxy point code (PPC) in the DSTN table, then the specified routeset must contain a linkset for the destination point code, and the PPC of the linkset must be equal to the PPC of the destination point code.

4708 E4708 Cmd Rej: One route must use PPC assigned in route(dstn) table

The value specified for the `spc` parameter must differ from the secondary point code of the destination/route entry specified by the `dpc` parameter.

4635 E4635 Cmd Rej: No change in SPC actually requested

The value specified for the `ncai` parameter cannot be same as the NCAI that is already assigned to the destination point code.

4774 E4774 Cmd Rej: No change in NCAI value requested

If the specified destination point code is a cluster or network destination point code, then the specified routeset cannot contain a route over proxy linksets.

4726 E4726 Cmd Rej: Linkset Type for Network/Cluster Route can't be PRX

If the destination point code and adjacent point code of the routes in the specified routeset are ITU point codes, then the following conditions must apply.

- If one point code is an ITUI point code, and the other is an ITUN or ITUN24 point code, then the network type of the secondary adjacent point code must match the network type of the destination point code.
- If both point codes have the same network type, then either both must be spare point codes or both must not be spare point codes.
- If the destination point code is an ITUN point code, and the ITUDUPC feature is turned on, then the group code of the destination point code must match the adjacent or the secondary adjacent point code.

3616 E3616 Cmd Rej: APC/SAPC type and group code must match DPC

A maximum of two aliases can be specified per destination.

5001 E5001 Cmd Rej: Up to two alias PCs are supported per DPC

If the `dpci` parameter is specified, then a combination of ITUI and ANSI aliases cannot be specified. If the `dpcn` parameter is specified, then a combination of ITUN and ANSI aliases cannot be specified.

5074 E5074 Cmd Rej: ITU destination does not support ANSI/ITU alias combination

Two ITUI or two ITUN aliases can be specified for the same destination point code only if the aliases have different prefixes. One alias must be spare and one non-spare.

4985 E4985 Cmd Rej: Destination does not support same ITU ntwk alias combination

The TIF Number Portability feature must be enabled before the `rcause` or `nprst` parameter can be specified.

3357 E3357 Cmd Rej: TIF feature must be enabled

A TIF feature must be enabled before the `splitiam` parameter can be specified.

4982 E4982 Cmd Rej: At least one TIF feature must be enabled

The XUDT UDT Conversion feature must be turned on before the `sccpmsgcnv` parameter can be specified.

5384 E5384 Cmd Rej: XUDT UDT Conversion feature must be activated

The J7 Support feature must be enabled before the `aliasn16` parameter can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

If the J7 Support feature is enabled then `aliasa` and `aliasn24` cannot be specified.

2801 E2801 Cmd Rej: J7 Support feature must not be Enabled.

Spare point codes for `aliasn 1` and `aliasn 2` must be different, and spare point codes for `aliasi 1` and `aliasi 2` must be different.

4992 E4992 Cmd Rej: ITU aliases with matching Spares are not allowed.

Notes

One of `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` is mandatory and they are mutually exclusive.

Only one of `aliasa/aliasi/aliasn/aliasn24/aliasn16` can be specified as they are mutually exclusive.

Only one of `spc/spca/spci/spcn/spcn24/spcn16` can be specified as they are mutually exclusive.

The `domain` parameter of a destination cannot be changed with this command. To change the `domain` parameter, the destination must be removed with the `dlt-dstn` command and re-entered with the `ent-dstn` command.

In this command, only ITU-international and ITU national point codes and aliases support the spare point code subtype prefix (s-). Only ITU-international and ITU

national point codes support the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-). Aliases do not support the private (internal) point code prefix.

The value specified for the DPC parameter must be a full point code in order to be used as a proxy point code. Cluster point codes and private point codes cannot be used as proxy point codes.

Invalid usage of **none** with **aliasi** and **aliasn**:

- *alias=none,none*: parser code expects *none* to be the last argument
- *alias=none,pointcode*: parser code expects *none* to be the last argument
- *alias=,pointcode*: invalid usage of comma separator

Alias Combination Matrix

Table 4-5 Alias Combination Matrix

Destination	specified			result	
	aliasN/aliasN24	alias1	aliasA/ aliasN16	alias1	alias2
ANSI		none		0	
		pci		pci	
		none			0
		pcn			pcn
		pcn24			pcn24
		none	none	0	0
		none	pci	pci	0
		pcn	none	0	pcn
		pcn24	none	0	pcn24
		pcn	pci	pci	pcn
ITUI		pci		pci	pcn24
			none	0a	
			pca	pca	
		none		0i	
		pci		pci	
		none	none	0a, i	
		none	pca	pca	
		pci	none	pci	
		pci	pca	E5074	
		none		0n	0
		pcn		0n	pcn
		pcn, none		0n	pcn
		pcn1, pcn2		pcn2	pcn1
		pcn24			pcn24
		none	none	0a, n	0
		none	pca	pca	0
		pcn	none	0a, n	pcn
		pcn	pca	pca	pcn
	pcn, none	none	0a, n	0	

Table 4-5 (Cont.) Alias Combination Matrix

specified			result	
pcn, none		pca	0a, n	pcn
pc1, pcn2		none	pcn1	pcn2
pcn1, pcn2		pca	E5001	
pcn24		none	0a	pcn24
pcn24		pca	pca	pcn24
none	none		0i, n	0
none	pci		pci	0
pcn	none		0i, n	pcn
pcn	pci		pci	pcn
pcn1, none	none		0i, n	pcn
pcn1, none	pci		pci	pcn
pcn1, pcn2	none		pcn2	pcn1
pcn1, pcn2	pci		E5001	
pcn24	none		0i	pcn24
pcn24	pci		pci	pcn24
none	none	none	0a, i, n	0
none	none	pca	pca	0
none	pci	none	pci	0
none	pci	pca	E5074	
pcn	none	none	0a,i,n	pcn
pcn	none	pca	pca	pcn
pcn	pci	none	pci	pcn
pcn	pci	pca	E5001	
pcn, none	none	none	0a,i,n	pcn
pcn, none	none	pca	pca	pcn
pcn, none	pci	none	pci	pcn
pcn, none	pci	pca	E5001	
pcn2, pcn1	none	none	pcn2	pcn1
pcn2, pcn1	none	pca	E5001	
pcn2, pcn1	pci	none	E5001	
pcn2, pcn1	pci	pca	E5001	
pcn24	none	none	0a,i	pcn24
pcn24	none	pca	pca	pcn
pcn24	pci	none	pca	pcn
pcn24	pci	pca	E5001	
		pcn16	pcn16	
	none	pcn16	pcn16	
	pci	pcn16	E2325	
none	pci	pcn16	E2325	
none		pcn16	pcn16	
pcn		pcn16	pnc16	pcn
pcn	none	pcn16	pcn16	pcn
pcn, none		pcn16	pcn16	pcn

Table 4-5 (Cont.) Alias Combination Matrix

		specified		result		
ITUN		pcn1,pcn2		pcn16	E5001	
		none	none	pcn16	E5074	
		pcn, none	none	pcn16	pcn16	pcn
		pcn2,pcn1	none	pcn16	E5001	
				none	0a	
				pca	pca	
			none			0
			pci			pci
			pci, none		0	pci
			pci1, pci2		pci2	pci1
			none	none	0a,i	0
			none	pca	pca	0
			pci	none	0,a	pci
			pci	pca	pca	pci
			pci, none	none	0,a,i	pci
			pci, none	pca	pca	pci
			pci1, pci2	none	pci2	pci1
			pci1, pci2	pca	E5001	
			none		0,n	
			pcn		pcn	
			pcn24		pcn24	
			none	none	0,a,n	
			none	pca	pca	
			pcn	none	pcn	
			pcn	pca	E5074	
			pcn24	none	pcn24	
			pcn24	pca	E5074	
			none	none	0,i,n	0
			none	pci	0,i,n	pci
			none	pci, none	0,i,n	pci
			none	pci1, pci2	pci2	pci1
			pcn	none	pcn	0
			pcn	pci	pcn	pci
			pcn	pci, none	pcn	pci
		pcn	pci1, pci2	E5001		
		pcn24	none	pcn24	0	
		pcn24	pci	pcn24	pci	
		pcn24	pci	pcn24	pci	
		pcn24	pci1, pci2	E5001		
		none	none	0a,i,n	0	
		none	none	pca	0	
		none	pci	0a,i,n	pci	
		none	pci	pca	pci	

Table 4-5 (Cont.) Alias Combination Matrix

		specified		result		
		none	pci, none	none	0a,i,n	0
		none	pci, none	pca	pca	pci
		none	pci1, pci2	none	pci2	pci1
		none	pci1, pci2	pca	E5001	
		pcn	none	none	pcn	0
		pcn	none	pca	E5074	
		pcn	pci	none	pcn	pci
		pcn	pci	pca	E5001	
		pcn	pci, none	none	pcn	pci
		pcn	pci, none	pca	E5001	
		pcn	pci1, pci2	none	E5001	
		pcn	pci1, pci2	pca	E5001	
		pcn24	none	none	pcn24	0
		pcn24	none	pca	E5074	
		pcn24	pci	none	pcn24	pci
		pcn24	pci	pca	E5001	
		pcn24	pci, none	none	pcn24	pci
		pcn24	pci, none	pca	E5001	
		pcn24	pci1, pci2	none	E5001	
		pcn24	pci1, pci2	pca	E5001	
				pcn16	pcn16	
			none	pcn16	pcn16	
			pci, none	pcn16	pcn16	
			pci	pcn16	pcn16	pci
			pci1,pci2	pcn16	E5001	
		none	none	pcn16	pcn16	0
		none	pci	pcn16	pcn16	pci
		none	pci, none	pcn16	pcn16	pci
		none	pci1,pci2	pcn16	E5001	
		pcn	pci	pcn16	E2325	
		pcn	none	pcn16	E5074	
		pcn	pci, none	pcn16	E5001	
	ITUN24		none	0		
			pca	pca		
		none			none	
		pci			pci	
		none	none	0	0	
		none	pca	pca	0	
		pci	none	0	pci	
		pci	pca	pca	pci	
	ITUN16	-	none	-	0	-
		-	pci	-	pci	-
		none		-		0

Table 4-5 (Cont.) Alias Combination Matrix

specified			result		
pcn		-	-		pcn
none	pci	-	pci		0
none	none	-	pci		0
pcn	none	-	0		pcn
pcn	pci	-	pci		pcn

Legend

0—clear alias if provisioned regardless of its point code type

0A—clear alias if provisioned and point code is ANSI

0I—clear alias if provisioned and point code is ITUI

0N—clear alias if provisioned and point code is ITUN

0A,I—clear alias if provisioned and point code is ANSI or ITUI

0A,N—clear alias if provisioned and point code is ANSI or ITUN

0I,N—clear alias if provisioned and point code is ITUI or ITUN

0A,I,N—clear alias if provisioned and point code is ANSI or ITUI or ITUN

Output

This example shows the output when the NCR, NRT, and CRMD features are off and all Routes and Routesets features are off:

```
chg-dstn:dpca=111-222-111:aliasn=321
```

```
rlghncxa03w 04-08-17 15:35:05 EST EAGLE 31.8.0
Destination table is (10 of 2000) 1% full
Destination table is (10 of 2000) 1% full
Alias table is (8 of 12000) 1% full
CHG-DSTN: MASP A - COMPLTD
```

```
;
```

This example shows the output when the NCR, NRT, and CRMD features are off and the 5000 Routes feature is on:

```
chg-dstn:dpca=111-222-111:aliasn=321
```

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (10 of 5000) 1% full
Alias table is (8 of 12000) 1% full
CHG-DSTN: MASP A - COMPLTD
```

```
;
```

This example shows the output when one or more of the NCR, NRT, or CRMD features and the DSTN5000 (5000 Routes) feature is on:

```
chg-dstn:dpca=111-222-111:aliasn=321

rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 5000
  FULL DPC(s): 9
  NETWORK DPC(s): 0
  CLUSTER DPC(s): 1
  TOTAL DPC(s): 10
  CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 12000
  ALIASES USED: 8
  CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
CHG-DSTN: MASP A - COMPLTD
;
```

This example shows the output when the NCR, NRT, and CRMD features are off and the 6000 Routesets feature is on:

```
chg-dstn:dpca=111-222-111:aliasn=321

rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 6000) 1% full
Alias table is (8 of 12000) 1% full
CHG-DSTN: MASP A - COMPLTD
;
```

This example shows the output when one or more of the NCR, NRT, or CRMD features and the 6000 Routesets feature is on:

```
chg-dstn:dpca=111-222-111:aliasn=321

rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 6000
  FULL DPC(s): 46
  NETWORK DPC(s): 1
  CLUSTER DPC(s): 1
  TOTAL DPC(s): 12
  CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 12000
  ALIASES USED: 8
  CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
CHG-DSTN: MASP A - COMPLTD
;
```

This example shows the output when the NCR, NRT, and CRMD features are off. When the 7000 Routesets quantity feature is on, the Destination table line shows "...of

7000". When the 8000 Routesets quantity feature is on, the Destination table line shows "...of 8000."

```
chg-dstn:dpca=111-222-111:aliasn=321
```

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 7000) 1% full
Alias table is (8 of 8000) 1% full
CHG-DSTN: MASP A - COMPLTD
```

```
;
```

This example shows the output when one or more of the NCR, NRT, or CRMD features is on. When the 7000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "8000". When the 7000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "7000."

```
chg-dstn:dpca=111-222-111:aliasn=321
```

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 8000
  FULL DPC(s): 9
  NETWORK DPC(s): 0
  CLUSTER DPC(s): 1
  TOTAL DPC(s): 10
  CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 8000
  ALIASES USED: 8
  CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
CHG-DSTN: MASP A - COMPLTD
```

```
;
```

This example shows the output when one or more of the NCR, NRT, or CRMD features is on. In this example, a destination is defined as a proxy point code:

```
chg-dstn:dpc=1-1-1:prx=yes
```

```
tekelecstp 07-03-05 17:34:18 EST EAGLE 37.5.0
DESTINATION ENTRIES ALLOCATED: 2000
  FULL DPC(s): 27
  EXCEPTION DPC(s): 0
  NETWORK DPC(s): 1
  CLUSTER DPC(s): 1
  PROXY DPC(s): 1
  TOTAL DPC(s): 30
  CAPACITY (% FULL): 2%
ALIASES ALLOCATED: 12000
  ALIASES USED: 0
  CAPACITY (% FULL): 0%
X-LIST ENTRIES ALLOCATED: 500
```

```

CHG-DSTN: MASP A - COMPLTD
;

```

This example shows the output when the secondary point code is changed:

```
chg-dstn:dpc=1-1-1:spc-144-23-48
```

```

tekelecstp 07-03-05 17:34:18 EST EAGLE 37.5.0
CAUTION: Dstn's SPC has changed - verify remote node's route.
DESTINATION ENTRIES ALLOCATED: 2000
  FULL DPC(s): 27
  EXCEPTION DPC(s): 0
  NETWORK DPC(s): 1
  CLUSTER DPC(s): 1
  PROXY DPC(s): 1
  TOTAL DPC(s): 30
  CAPACITY (% FULL): 2%
ALIASES ALLOCATED: 12000
  ALIASES USED: 0
  CAPACITY (% FULL): 0%
X-LIST ENTRIES ALLOCATED: 500
CHG-DSTN: MASP A - COMPLTD
;

```

This example shows the output when the NCR, NRT, and CRMD features are off and the 10,000 Routesets feature is on:

```
chg-dstn:dpca=11-22-11:aliasn=321
```

```

rlghncxa03w 10-08-17 08:29:15 EST EAGLE 43.0.0
Destination table is (10 of 10000) 1% full
Alias table is (8 of 10000) 1% full
CHG-DSTN: MASP A - COMPLTD
;

```

This example shows the output when one or more of the NCR, NRT, or CRMD features and the 10,000 Routesets feature is on:

```
chg-dstn:dpca=11-22-11:aliasn=321
```

```

rlghncxa03w 10-08-17 08:29:15 EST EAGLE 43.0.0
DESTINATION ENTRIES ALLOCATED: 10000
  FULL DPC(s): 9
  NETWORK DPC(s): 0
  CLUSTER DPC(s): 1
  TOTAL DPC(s): 10
  CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 10000
  ALIASES USED: 8
  CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500

```

```
CHG-DSTN: MASP A - COMPLTD  
;
```

This command shows the output when J7 Support feature is enabled.

```
chg-dstn:dpcn16=1-1-1:aliasi=2-2-4
```

```
tekelecstp 13-02-27 14:39:25 EST 45.0.0-64.56.0  
chg-dstn:dpcn16=1-1-1:aliasi=2-2-4  
Command entered at terminal #4.  
Destination table is (2 of 2000) 1% full  
Alias table is (1 of 12000) 1% full  
  
CHG-DSTN: MASP A - COMPLTD  
;
```

Related Topics

- [chg-rte](#)
- [dlt-dstn](#)
- [dlt-rte](#)
- [ent-dstn](#)
- [ent-rte](#)
- [rept-stat-dstn](#)
- [rept-stat-rte](#)
- [rtrv-dstn](#)
- [rtrv-rte](#)

4.1.52 chg-e1

Use this command to change an interface for an E1 card in the system. An E1 card can consist of an E5-E1T1-B card used as an E1 or SE-HSL card.

Parameters

e1port (mandatory)

E1 port number. The value must be an E1 port that has already been configured with an E1 interface on the specified E1 card.

Range:

1 - 8

Any 2 of the 8 ports on an E5-E1T1-B card can be specified when the card is used as an SE-HSL card.

Any 1 of the 8 ports on card can be specified when the card is used as an SE-HSL card.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

crc4 (optional)

CRC4 enable or disable indicator.

Range:

on

off

Default:

No change in current value

encode (optional)

Indicator for use of HDB3 or AMI encoding/decoding.

Range:

hdb3

ami

AMI encoding is supported for cards used as E1 cards (not as SE-HSL cards).

Default:

No change to the current value

minsurate (optional)

Minimum signal unit rate. The minimum number of SUs present on a link that are uniformly distributed.

Range:

500 - 2000

Default:

No change to the current value

si (optional)

Value of two Spare International bits of NFAS data.

Range:

0 - 3

Default:

No change in current value

sn (optional)

Value of five Spare International bits of NFAS data.

Range:

0 - 31

Default:

No change in current value

e1tsel (optional)

Timing source.

Range:*line - slave timing source**external - master timing source***Default:**

No change to the current value

Example

```
chg-e1:loc=1205:elport=1:crc4=off:cas=on:encode=hdb3:si=2:sn=12
```

```
chg-e1:loc=1205:elport=2:encode=ami
```

```
chg-e1:loc=1205:elport=1:minsrate=1000
```

```
chg-e1:loc=1201:elport=2:eltsel=external
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The specified card location (`loc` parameter) must be equipped.

4076 E4076 Cmd Rej: E1 card location is unequipped

The card specified by the `loc` parameter must be a LIME1 card type.

2212 E2212 Cmd Rej: Invalid card type for this command

The port specified by the `elport` parameter must already be equipped with an E1 interface.

4055 E4055 Cmd Rej: The E1PORT at the specified location is not equipped

If the value specified for the `loc` parameter indicates an E1 card, then all signaling links that are serviced by the card must be deactivated (see the `dlt-slk` command) before the values for the `crc4`, `cas`, `encode`, and `eltsel` parameters can be changed.

4048 E4048 Cmd Rej: All signaling links serviced by the E1 must be deactivated

The `encode=ami` parameter is supported only for cards used as E1 cards (not as SE-HSL cards).

4121 E4121 Cmd Rej: ENCODE = AMI not currently supported

The `linkclass=unchan` parameter must be specified before the `minsrate` parameter can be specified.

3047 E3047 Cmd Rej: Parameter combination invalid

The E1/T1 table must be accessible.

4059 E4059 Cmd Rej: Failed reading the E1/T1 table

The Card table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

HIPR2 cards must be equipped in card locations *xy09* and *xy10* (*x* is the frame, *y* is the shelf) on each EAGLE shelf that contains one or more E5-E1T1-B cards.

3490 E3490 Cmd Rej: HIPR/HIPR2 must be equipped on the shelf for this card

The Shelf FAN bit must be turned ON for the shelf on which an E5-E1T1-B card is being used as an E1 or SE-HSL card.

3866 E3866 Cmd Rej: Shelf FAN bit must be enabled

Card locations 1113 - 1118 (E5-MASP and E5-MDAL cards) cannot be specified as values for the `loc` parameter.

2154 E2154 Cmd Rej: Card slot reserved by system

Locations *xy09* and *xy10*, where *x* is the frame and *y* is the shelf, cannot be specified as values for the `loc` parameter.

2016 E2016 Cmd Rej: `<parm_desc>` is out of range - `<parm>`

Notes

External timing is derived from the EAGLE High-Speed Master Clock (1.544 MHz for T1 or 2.048 MHz for E1); therefore, the Master Timing feature is required. Line timing is derived from its received data stream, if present.

Output

```
chg-e1:loc=1205:e1port=2:encode=ami
```

```
rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
CHG-E1: MASP A - COMPLTD
;
```

Related Topics

- [dlt-e1](#)
- [ent-e1](#)
- [rtrv-e1](#)
- [tst-e1](#)

4.1.53 chg-eisopts

Use this command to enable and disable the copy functions that are associated with the EAGLE 5 Integrated Monitoring Support (E5IS) feature.

Parameters

eiscopy (optional)

System-wide control for MSU, alarm, and event copy to the ESP.

Range:

on

off

Default:

No change to the current value

System Default:

off

fcgp1 (optional)

This parameter applies the functionality specified by the `fcmode` parameter to cards running the specified Fast Copy GPL.

Range:

all

apply functionality to cards running the IPSG GPL

ipsg

apply functionality to cards running the IPSG GPL

Default:

No change to the current value

System Default:

all

fcmode (optional)

This parameter specifies a system-wide control to enable or disable monitoring on FC-capable cards.

Range:

fcopy

FC monitoring is performed on FC-capable cards

off

Monitoring is not performed on FC-capable cards

stc

STC monitoring is performed on FC-capable cards

Default:

No change to the current value

System Default:

stc

If Integrated Monitoring is turned on for the first time, and the `eiscopy=on` parameter has been specified, then the system default for the `fcmode` parameter is `stc`. If the `eiscopy=off` parameter has been specified, then the system default value is `off`.

Example

```
chg-eisopts:eiscopy=on
chg-eisopts:fcmode=fcopy:fcgpl=all
```

Dependencies

At least one parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The E5IS feature must be turned on before this command can be entered

3967 E3967 Cmd Rej: E5IS must be ON

The NETOPTS table must be accessible.

3979 E3979 Cmd Rej: Read NETOPTS table failed

Before the E5IS copy function can be enabled, at least 2 STC cards must be installed and in the IS-NR state in the system.

3968 E3968 Cmd Rej: Invalid hardware for EISCOPY to be ON

The `eiscopy=on` parameter must be specified before a value of `stc` or `fcopy` can be specified for the `fcmode` parameter.

4800 E4800 Cmd Rej: EISCOPY must be ON

The `fcmode=off` parameter must be specified before the `eiscopy=off` parameter can be specified and before the value of the `fcmode` parameter can be changed between `stc` and `fcopy`.

5015 E5015 Cmd Rej: FCMODE must be turned OFF

At least one card must be running the IPSP GPL and must be in the IS-NR state before a value of `ipsg` or `all` can be specified for the `fcgpl` parameter.

5045 E5045 Cmd Rej: At least one card with IPSP GPL must be IS-NR

If the `fcgpl` parameter is specified, then the `fcmode` parameter must be specified.

5316 E5316 Cmd Rej: FCMODE parameter is mandatory with FCGPL parameter

The host portion of the PVN network address must be 0 based on the PVN subnet mask (see the `chg-netopts` command) before the `eiscopy=on` parameter can be specified.

3965 E3965 Cmd Rej: Invalid PVN

The destination of a static IP route (see the `ent-ip-rte` command) and the local interface network address of an IP card (see the `ent-ip-host` command) must be different from the PVN, FCNA, and FCNB network addresses (see the `chg-ip-lnk` command) before the `eiscopy=on` parameter can be specified.

2964 E2964 Cmd Rej: PVN/FCNA/FCNB conflicts with IPRTE or IPLNK network

The FCMODE cannot be changed to FCOPY due to Signaling Link(s) provisioned on Port C or Port D.

3626 E3626 Cmd Rej: Can't change IPSPG FCMODE to FCOPY due to ports C/D config

If the same value is specified for the PVN, FCNA, or FCNB network addresses (see the `chg-netopts` command), then the `eiscopy=on` parameter cannot be specified.

5013 E5013 Cmd Rej: PVN, FCNA and FCNB must not be identical

Notes

Fast Copy Cards

E5-ENET-B cards running the IPSPG GPL are considered to be *FC-capable*. An *FC-capable* card is considered *FC-enabled* when Fast Copy monitoring is enabled for the respective GPL.

Output

```
chg-eisopts:fcmode=fcopy:fcgpl=all
```

```
rlghncxa03w 10-02-02 09:08:58 EST EAGLE 42.0.0  
CHG-EISOPTS: MASP A - COMPLTD
```

Related Topics

- [rtrv-eisopts](#)

4.1.54 chg-enumopts

Use this command to provision ENUM-specific data. This command updates the ENUMOPTS table.

Parameters

cngntfy (optional)

Congestion Notification Flag

Range:

Yes

Notify congestion to the sender

No

Silently discard the message

System Default:

no

cngrcode (optional)

RCODE values in ENUM error response message to be sent due to congestion on ENUM card.

Range:

6

ENUM_TOO_BUSY

7

ENUM_RESOURCES_EXCEEDED

System Default:

6

ENUM_TOO_BUSY

cong1v11 (optional)

ENUM application card congestion threshold level 1.

Range:

0-100

System Default:

40

cong1v12 (optional)

ENUM application card congestion threshold level 2.

Range:

0-100

System Default:

80

excludesp (optional)

SP Entity Id validity flag.

Range:

Yes

SP Entity Id is invalid as key for lookup in ENUM profile selection Table.

No

SP Entity Id is valid as key for lookup in ENUM profile selection Table.

System Default:

no

maxdndigs (optional)

Max number of DN digits from an incoming ENUM query.

Range:

5-15

System Default:

15

rncontext (optional)

Flag for RNCONTEXT Parameter in ENUM TEL URI.

Range:

Yes

Include the RNCONTEXT parameter in ENUM TEL URI.

No

Do not include the RNCONTEXT parameter in ENUM TEL URI.

System Default:

no

Incprefix (optional)

Flag to determine if PREFIX Parameter in ENUM PROFILE entries is to be used as RN in regex response for NAPTR queries for service type PSTN-SIP.

Range:

Yes

Include the PREFIX parameter as RN in NAPTR regex response.

No

Do not include the PREFIX parameter as RN in NAPTR regex response.

System Default:

No

Example

```
chg-enumopts:maxdndigs=10
chg-enumopts:conglvl1=50
chg-enumopts:conglvl2=10
chg-enumopts:cngntfy=yes
chg-enumopts:cngrcode=6
chg-enumopts:excludesp=yes
chg-enumopts:rncontext=yes
chg-enumopts:incprefix=yes
```

Dependencies

The ENUMOPTS table should be accessible.

4820 E4820 Cmd Rej: Failure accessing EGLEOPTS table

Congestion level 1 must be less than congestion level 2.

3214 E3214 Cmd Rej: conglvl1 must be less than conglvl2

Output

This example displays output when `maxdndigs` is specified:

```
>chg-enumopts:maxdndigs=10

tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
  chg-enumopts:maxdndigs=10
  Command entered at terminal #4.
  CHG-ENUMOPTS: MASP A - COMPLTD
;
```

This example displays output when `conglvl1` is specified:

```
>chg-enumopts:conglvl1=50

tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
  chg-enumopts:conglvl1=50
  Command entered at terminal #4.
  CHG-ENUMOPTS: MASP A - COMPLTD
;
```

This example displays output when `conglvl2` is specified:

```
>chg-enumopts:conglvl2=90

tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
  chg-enumopts:conglvl2=90
  Command entered at terminal #4.
  CHG-ENUMOPTS: MASP A - COMPLTD
;
```

This example displays output when `cnngntfy` is specified:

```
>chg-enumopts:cnngntfy=yes

tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
  chg-enumopts:cnngntfy=yes
  Command entered at terminal #4.
  CHG-ENUMOPTS: MASP A - COMPLTD
;
```

This example displays output when `cngrcode` is specified:

```
>chg-enumopts:cngrcode=6
```

```
tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
  chg-enumopts:cngrcode=6
  Command entered at terminal #4.
  CHG-ENUMOPTS: MASP A - COMPLTD
;
```

This example displays output when `excludesp` is specified:

```
>chg-enumopts:excludesp=yes

tekelecstp 14-05-28 15:04:28 EST EAGLE 46.5.0
  chg-enumopts:excludesp=yes
  Command entered at terminal #4.
  CHG-ENUMOPTS: MASP A - COMPLTD
;
```

This example displays output when `rncontext` is specified:

```
>chg-enumopts:rncontext=yes

tekelecstp 14-05-28 15:04:28 EST EAGLE 46.5.0
  chg-enumopts:rncontext=yes
  Command entered at terminal #4.
  CHG-ENUMOPTS: MASP A - COMPLTD
;
```

This example displays output when `incprefix` is specified:

```
> chg-enumopts:incprefix=yes
Command Accepted - Processing
  tekelecstp 19-05-03 16:53:17 MST  EAGLE 46.8.0.0.0-75.18.14
  chg-enumopts:incprefix=yes
  Command entered at terminal #4.
  tekelecstp 19-05-03 16:53:17 MST  EAGLE 46.8.0.0.0-75.18.14
  CHG-ENUMOPTS: MASP A - COMPLTD
;
```

Related Topics

- [rtrv-enumopts](#)

4.1.55 chg-enum-prof

Use this command to change the existing profile entry which has data to generate the ENUM response for three supported resource record formats such as NAPTR, NS and CNAME. The ENUMPROF table stores the profile entry.

Range:*cname**naptr**ns***Default:**

No change to the current value

System Default:*naptr***sparm (optional)**

Service parameter. This parameter specifies the supported ENUM services. ENUM application shall only support three ENUM Services.

Range:*pstntel**pstnsip**sip***Default:**

No change to the current value

System Default:*pstntel***prefix (optional)**

This parameter specifies the prefix digits to be appended as routed number (RN) in NAPTR regex response. This parameter is only valid for NAPTR response type.

Range:*0 - ffff*

Upto 5 hexa-decimal digits allowed.

Default:

No change to the current value

System Default:

None

Example

```
chg-enum-prof:prn=pr1:rrdomain=abc.oracle.com
```

```
chg-enum-prof:prn=pr2:rrdomain=abc1.oracle.com:pref=yes
```

```
chg-enum-prof:prn=pr3:rpdomain=def.oracle.com
```

```
chg-enum-prof:prn=pr4:rpdomain=cname.123
```

```
chg-enum-prof:prn=pr5:prefix=007
```

Dependencies

The ENUM Profile Table should be accessible.

3184 E3184 Cmd Rej: Failure accessing ENUMPROF table

The SPARM, PREF and RRDOMAIN parameters cannot be specified with a profile name having a response type of NAPTR.

The RRDOMAIN parameter is valid for the SPARM=SIP or SPARM=PSTNSIP value.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The profile name must be present in the ENUM Profile Table.

3739 E3739 Cmd Rej: No Entry found

RRDOMAIN must be specified for the NAPTR response type.

3190 E3190 Cmd Rej: RRDOMAIN must be specified

For the RTYPE=NS or RTYPE=CNAME parameter, the replacement domain name (RPDOMAIN) must be specified.

3191 E3191 Cmd Rej: RPDOMAIN must be specified

RTYPE can only be changed for the default profile.

3235 E3235 Cmd Rej: Response type can only be changed for the default profile

SPARM=SIP or SPARM=PSTNSIP is not supported for the default profile.

3227 E3227 Cmd Rej: SPARM=SIP/PSTNSIP is not supported for default profile

Notes

The requirement of using PREFIX in the regular expression is only for PSTN-SIP (NAPTR query). As such, PREFIX will not be applied for PSTN-TEL and SIP (NAPTR queries).

PREFIX can be configured for PSTN-TEL and SIP profiles, but it will not be used.

Output

```
> chg-enum-prof:prn=pr1:rrdomain=abc.oracle.com
tekelecstp 18-05-29 03:35:20 MST EST EAGLE 46.1.0
chg-enum-prof:prn=pr1:rrdomain=abc.oracle.com
Command entered at terminal #19.
;

Command Accepted - Processing
tekelecstp 18-05-29 03:35:20 MST EST EAGLE 46.1.0
CHG-ENUM-PROF: MASP B - COMPLTD
;
> chg-enum-prof:prn=pr2:rrdomain=abc.oracle.com:pref=yes
tekelecstp 18-05-29 03:38:20 MST EST EAGLE 46.1.0
chg-enum-prof:prn=pr2:rrdomain=abc.oracle.com:pref=yes
Command entered at terminal #19.
;
```

```
Command Accepted - Processing
  tekelecstp 18-05-29 03:38:20 MST  EST EAGLE 46.1.0
  CHG-ENUM-PROF: MASP B - COMPLTD
;
> chg-enum-prof:prn=pr3:rpdomain=def.oracle.com
  tekelecstp 18-05-29 03:40:20 MST  EST EAGLE 46.1.0
  chg-enum-prof:prn=pr3:rpdomain=def.oracle.com
  Command entered at terminal #19.
;
```

```
Command Accepted - Processing
  tekelecstp 18-05-29 03:40:20 MST  EST EAGLE 46.1.0
  CHG-ENUM-PROF: MASP B - COMPLTD
;
```

```
> chg-enum-prof:prn=default:rtype=naptr:prefix=1159
```

```
Command Accepted - Processing

  tekelecstp 19-02-01 12:39:44 EST  EAGLE 46.8.0.0.0-75.18.11
  chg-enum-prof:prn=default:rtype=naptr:prefix=1159
  Command entered at terminal #2.
;
```

```
tekelecstp 19-02-01 12:39:45 EST  EAGLE 46.8.0.0.0-75.18.11
CHG-ENUM-PROF: MASP B - COMPLTD
```

Related Topics

- [dlt-enum-prof](#)
- [ent-enum-prof](#)
- [rtrv-enum-prof](#)

4.1.56 chg-enum-profsel

Use this command to change an entry in the ENUM Profile Selection Table or the ENUM DN Block Table. The ENUM Profile Selection Table supports the provisioning information related to mapping of Entity Id to Profile Id. The ENUM DN Block Table supports the provisioning information related to mapping of DN Block to Profile Id.

Parameters

edn (optional)

End Dialed Number

Range:

5-15 digits

entityid (optional)

Network Entity

Range:
1-15 hex-digits (0-9, a-f)

prn1 (optional)
Profile Name

Range:
ZZZZZZZZZZ

A string of alphanumeric characters, beginning with a letter and up to 10 characters in length. Valid values are a..z, A..Z, 0..9.

none--- deletes the current value of the parameter



Note:

Response type of specified profile must be NS

prn2 (optional)
Profile Name

Range:
ZZZZZZZZZZ

A string of alphanumeric characters, beginning with a letter and up to 10 characters in length. Valid values are a..z, A..Z, 0..9.

none--- deletes the current value of the parameter



Note:

Response type of specified profile must be CNAME

prn3 (optional)
Profile Name

Range:
ZZZZZZZZZZ

A string of alphanumeric characters, beginning with a letter and up to 10 characters in length. Valid values are a..z, A..Z, 0..9.

none--- deletes the current value of the parameter



Note:

Response type of specified profile must be NAPTR

prn4 (optional)

Profile Name

Range:*ZZZZZZZZZZ*

A string of alphanumeric characters, beginning with a letter and up to 10 characters in length. Valid values are a..z, A..Z, 0..9.

none--- deletes the current value of the parameter

**Note:**

Response type of specified profile must be NAPTR

sdn (optional)

Start Dialed Number

Range:

5-15 digits

Example

```
chg-enum-profsel:entityid=12345:prn1=ns2:prn2=cname1
```

```
chg-enum-profsel:sdn=12345:edn=12400:prn3=naptr1:prn4=none
```

Dependencies

The ENUM Profile Selection Table should be accessible.

3183 E3183 Cmd Rej: Failure accessing ENUMPRID table

The ENUM DN Block Table should be accessible.

3185 E3185 Cmd Rej: Failure accessing ENUM DNBLK table

The ENUM Profile Table should be accessible.

3184 E3184 Cmd Rej: Failure accessing ENUMPROF table

ENTITY ID or SDN or EDN must be specified.

3197 E3197 Cmd Rej: ENTITY ID or SDN or EDN must be specified

At least one profile must be specified.

3189 E3189 Cmd Rej: At least one profile name must be specified

The profile name specified by the prnX (x=1, 2, 3, 4) parameter must be provisioned in the ENUM Profile Table.

3192 E3192 Cmd Rej: Profile Name not present in ENUM PROF table

The response type specified by profile name prn1, prn2, prn3 and prn4 should be NS, CNAME, NAPTR and NAPTR respectively.

3208 E3208 Cmd Rej: Order of the profile is incorrect

The last profile name for a particular entry cannot be none.

3211 E3211 Cmd Rej: At least one profile name should have valid value

NAPTR profile names must be unique.

3219 E3219 Cmd Rej: NAPTR profiles must be unique

The default profile cannot be associated with any profile selection entry.

3234 E3234 Cmd Rej: Default Profile cannot be associated with any `profsel` entry

Entity Id cannot be specified with SDN or EDN.

2155 E2155 Cmd Rej: Invalid parameter combination specified

Notes

Response type specified by profile name `prn1`, `prn2`, `prn3` and `prn4` should be NS, CNAME, NAPTR and NAPTR respectively.

Output

This example displays output when ENTITYID is specified:

```
chg-enum-
profsel:entityid=1234:prn1=ns1:prn2=cname1:prn3=naptr1:prn4=naptr2

tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
  chg-enum-
profsel:entityid=1234:prn1=ns1:prn2=cname1:prn3=naptr1:prn4=naptr2
  Command entered at terminal #4.
  CHG-ENUM-PROFSEL: MASP A - COMPLTD
;
```

This example displays output when SDN is specified:

```
chg-enum-profsel:sdn=1234:prn1=ns1:prn2=cname1:prn3=naptr1:prn4=naptr2

tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
  chg-enum-
profsel:sdn=1234:prn1=ns1:prn2=cname1:prn3=naptr1:prn4=naptr2
  Command entered at terminal #4.
  CHG-ENUM-PROFSEL: MASP A - COMPLTD
;
```

This example displays output when EDN is specified:

```
chg-enum-prosel:edn=2345:prn1=ns1:prn2=cname1:prn3=naptr1:prn4=naptr2

tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
  chg-enum-
profsel:edn=1234:prn1=ns1:prn2=cname1:prn3=naptr1:prn4=naptr2
```

```
Command entered at terminal #4.  
CHG-ENUM-PROFSEL: MASP A - COMPLTD  
;
```

Related Topics

- [dlt-enum-profsel](#)
- [ent-enum-profsel](#)
- [rtrv-enum-profsel](#)

4.1.57 chg-feat

Use this command to activate the optional features available on the system.

Some optional features must be purchased before you turn the feature on. If you are not sure whether you are entitled to turn a feature on, contact your Oracle Sales Representative or Account Representative.

Caution:

The features are off when the system is installed. A feature that is turned on with this command cannot be turned off.

Parameters

cncf (optional)

This parameter turns on the Calling Name Conversion Facility (CNCF) feature.

Range:

on

System Default:

off

crmd (optional)

This parameter turns on the Cluster Routing and Management Diversity (CRMD) feature.

Range:

on

System Default:

off

dstn5000 (optional)

This parameter turns on the 5000 Routes feature.

Range:

on

System Default:*off***e5is (optional)**

This parameter turns on the EAGLE 5 Integrated Monitoring Support (E5IS) feature.

Range:*on***System Default:***off***egtt (optional)**

This parameter turns on the Enhanced Global Title Translation (EGTT) feature.

Range:*on***System Default:***off***fan (optional)**

This parameter turns on the cooling fan feature.

Range:*on***System Default:***off***gtt (optional)**

This parameter turns on the Global Title Translation (GTT) feature.

Range:*on***System Default:***off***gws (optional)**

This parameter turns on the Gateway Screening (GWS) feature.

Range:*on***System Default:***off***ipisup (optional)**

This parameter turns on the ISUP Routing Over IP (IPISUP) feature.

Range:

on

System Default:

off

ituduppc (optional)

This parameter turns on the ITU National Duplicate Point Code (ITUDUPPC) feature.

Range:

on

System Default:

off

itumtprs (optional)

This parameter turns on the ITU MTP Restart feature.

Range:

on

System Default:

off

lan (optional)

This parameter turns on the STP LAN feature.

Range:

on

System Default:

off

lfs (optional)

This parameter turns on the Link Fault Sectionalization (LFS) feature.

Range:

on

System Default:

off

measp1at (optional)

This parameter turns on the Measurements Platform feature. The `chg-measopts:platformenable=on` command must be entered to enable the Measurement Platform collection function (which cannot be disabled after it is enabled in the system).

Range:

on

System Default:

off

mpc (optional)

This parameter turns on the Multiple Point Code (MPC) feature.

Range:

on

System Default:

off

mtprs (optional)

This parameter turns on the ANSI MTP Restart feature.

Range:

on

System Default:

off

ncr (optional)

This parameter turns on the Nested Cluster Routing (NCR) feature.

Range:

on

System Default:

off

nrt (optional)

This parameter turns on the Network Routing feature.

 **Caution:**

When using this feature, limited network management is provided for point codes not covered by full point code routing, Cluster Routing, or Nested Cluster Routing.

Range:

on

System Default:

off

p1np (optional)

This parameter turns on the PCS (Personal Communication Service) 1900 Number Portability feature.

Range:

on

System Default:*off***sccpcnv (optional)**

This parameter turns on the SCCP Conversion feature.

Range:*on***System Default:***off***s1sob (optional)**

This parameter turns on the Other CIC (Circuit Identification Code) Bit Used feature.

Range:*on***System Default:***off***tcapcnv (optional)**

This parameter turns on the TCAP Conversion feature.

Range:*on***System Default:***off***tlnp (optional)**

This parameter turns on the Triggerless Local Number Portability (TLNP) feature.

Range:*on***System Default:***off***tscsync (optional)**

This parameter turns on the Time Slot Counter Synchronization (TSC) feature that is used with GSPM-II cards. This feature is required, along with use of STC cards, for the EAGLE 5 Integrated Monitoring Support feature (*e5is=on*).

Range:*on***System Default:***off***vgtt (optional)**

This parameter turns on the Variable Length GTT (VGTT) feature.

Range:*on***System Default:***off***wnp (optional)**

This parameter turns on the Wireless Number Portability (WNP) feature.

Range:*on***System Default:***off***Example**

```
chg-feat:gtt=on
chg-feat:gws=on:cncf=on
chg-feat:sccpcnv=on:tcapcnv=on
chg-feat:tscsync=on:e5is=on
```

Dependencies**Note:**

The "LNP feature" is turned on when the LNP ported TNs quantity appears in the `rtrv-ctrl-feat` command output. An LNP quantity feature access key has been enabled and turned on. See the `enable-ctrl-feat` and `chg-ctrl-feat` commands for more information about turning on the LNP feature.

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The Gateway Screening feature must be turned on before the STP LAN or CNCF feature can be turned on.

2579 E2579 Cmd Rej: GWS must be ON if LAN is ON

The SCCP Conversion feature must be turned on before the TCAP Conversion feature can be turned on.

3431 E3431 Cmd Rej: SCCPCNV must be ON before TCAPCNV can be ON

The LNP feature must be turned on before the Wireless Number Portability or PCS 1900 LNP features can be turned on.

3009 E3009 Cmd Rej: LNP feature must be ON

The LNP and Gateway Screening features must be turned on before the Triggerless LNP feature can be turned on.

3682 E3682 Cmd Rej: GWS and LNP must be ON before TLNP can be ON

The Cluster Routing and Management Diversity feature must be turned on before the Nested Cluster Routing feature can be turned on.

2581 E2581 Cmd Rej: CRMD feature must be ON

The Global Title Translation feature must be turned on before the Enhanced Global Title Translation feature can be turned on.

3550 E3550 Cmd Rej: GTT must be ON before EGTT can be ON

The Multiple Point Code feature must be turned on before the ITU National Duplicate Point Code feature can be turned on.

3879 E3879 Cmd Rej: The MPC feature must be ON before ITUDUPPC can be ON

The Global Title Translation feature must be turned on before the Variable Length GTT feature can be turned on.

3870 E3870 Cmd Rej: GTT must be ON before VGTT can be ON

The Time Slot Counter Synchronization feature must be turned on before the EAGLE 5 Integrated Monitoring Support feature can be turned on. These parameters can be specified together in the command to turn them both on at the same time.

3964 E3964 Cmd Rej: TSCSYNC must be ON before E5IS can be ON

If the ANSI/ITU SCCP Conversion feature is enabled, then the SCCP and TCAP conversion features cannot be turned on.

4173 E4173 Cmd Rej: Not compatible with SCCP Conversion feature

The Gateway Screening feature must be turned on before the Calling Number Conversion Facility feature can be turned on.

3646 E3646 Cmd Rej: GWS must be ON before CNCF can be ON

The Global Title Translation feature must be turned on before the Padded Variable Length Global Title Translation feature can be turned on.

3870 E3870 Cmd Rej: GTT must be ON before VGTT can be ON

The Global Title Translation feature must be turned on before the Prefix Deletion of GT feature can be turned on.

3869 E3869 Cmd Rej: Feature GTT must be ON before PRFXDLGT can be ON

The Global Title Translation feature must be turned on before Global System for Mobile Screening feature can be enabled.

3899 E3899 Cmd Rej: EGMS feature requires DSM card with VSCCP APPL or better

The current hardware configuration cannot be determined.

3243 E3243 Cmd Rej: Unknown hardware configuration

The MAS configuration table must be accessible.

2145 E2145 Cmd Rej: Failed reading MAS configuration table

A null pointer was sent into the command handler.

2601 E2601 Cmd Rej: Command aborted due to system error

The IMT table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

Notes

This command is not allowed in upgrade mode.

After a feature bit is turned on, it cannot be turned off. Take care in turning on features that are not used in the network configuration.

The Calling Name Conversion Facility (CNCF) feature provides a conversion of ISUP IAM messages. The facility uses the following two versions of calling name identification presentation (CNIP) for calling name information delivery:

- The nonstandard, proprietary ISUP party information (PIP) parameter.
- The ANSI standard ISUP generic name (GN) parameter.

The conversion either replaces the PIP parameter with the GN parameter or the GN parameter with the PIP parameter in the ISUP IAM message. The user can set up GWS screens to apply the CNCF feature on a per-point-code or range-of-point-code basis.

The CRMD feature allows the system to configure one route set to an entire cluster of destinations, thus enabling the system to manage and switch traffic to more end nodes.

The GTT feature allows the system to provide translation of the global title digits located in the called party address of an SCCP message. The translation consists of a point code and subsystem number. This feature requires Service Module cards loaded with the VSCCP application.

The EGTT feature provides enhancements to the way the system performs GTT for both ITU and ANSI messages. The feature allows the combination of domain (ANSI or ITU), global title indicator (GTI), translation type (TT), numbering plan (NP), and nature of address indicator (NAI) selectors to be used to select a translation table when the system receives a message requiring EGTT. The feature also allows inclusion of the translated subsystem number (SSN) in the called party address (CDPA) and inclusion of the originating point code (OPC) in the calling party address (CGPA). The feature also provides deletion capability of the GT (global title) in the CDPA.

The GWS feature allows the system to screen specific message types with selected parameters from entering the network through this STP. This feature requires E5-OAM cards.

The TLNP feature gives service providers a method to route calls to ported numbers without having to upgrade their signaling switch (end office or mobile switching center) software. This feature uses the gateway screening stop action TLNP to intercept through-switched ISUP messages on the LIM.

The LFS feature allows the system to perform a series of far end loopback tests that identify faulty segments of an SS7 transmission path up to and including the remote network element.

The MTPRS feature provides an orderly process for bringing signaling links back into service after the system has been isolated and restarted. A greater preference is given to restoring the STP to network service in an orderly fashion than to the speed of recovery. The time required is system dependent as shown:

- Up to 64 LIMs—62 seconds (Link Alignment Delay)
- 64 - 127 LIMs—97 seconds
- 128-191 LIMs—132 seconds
- More than 191 LIMs—167 seconds

The ITUMTPRS feature provides MTP restart support for ITU networks and extends the system's ANSI MTP restart support to mixed ITU and ANSI networks. The performance of ITU MTP Restart is comparable to the performance of ANSI MTP Restart.

The SCCPCNV and TCAPCNV features allow the system to convert MTP-routed SCCP and TCAP messages from ANSI to ITU format and to convert ITU formatted messages to ANSI.

The PLNP feature provides for LNP query/response in a PCS wireless environment using the LRN method to support Service Provider Number Portability.

The NCR feature allows the system to support full point code entries on different routes within a cluster.

The Other CIC Bit Used feature is one of two methods provided as ITU SLS enhancements for distributing the load across links in a combined and single linkset. The Other CIC Bit Used feature lets the system derive the LSB (Least Significant Bit) from bits 2 through 4 of the CIC to serve as the three lower bits of the SLS (Signaling Link Selection) and one other bit of the CIC to serve as the MSB (Most Significant Bit) of the SLS. The SLSOCB feature applies only to ITU-ISUP messages. The other method of distributing the load is rotation of the four bits of the SLS to change the LSB of the SLS. For additional information on bit rotation, see the `ent-ls` command.

The NR feature allows provisioning of a single routeset to be used for all MSUs destined to members of that network.

The DSTN5000 feature provides the ability to administer up to 5000 routes on the system. If `dstn5000=on`, the values of the `mtpdpcq` (destination point code) and `mtpxlq` (exception list entries) parameters of the `chg-stpopts` command can total 5500. Otherwise, the sum total for `mtpdpcq` and `mtpxlq` cannot exceed 2500. The Cluster Routing and Management Diversity (CRMD) feature must be turned on before the `mtpxlq` parameter can be specified.

The MPC feature enables the user to use SPCs (secondary point codes) in addition to the true point codes that the EAGLE uses. The SPCs are used for provisioning and routing as if they were the true point code of the EAGLE. SPCs can be provisioned in any of the three domains (ANSI, ITU-N, and ITU-I). SPCs are supported for any type of link.

The ITUDUPPC feature allows an EAGLE mated pair to route traffic for two or more countries that may have overlapping point code values.

The VGTT feature provides the ability to provision global title entries of varying lengths to a single translation type or GTT set. Users are able to assign global title entries of up to 10 different lengths to a single translation type or GTT set.

The TSCSYNC feature allows the system's A (Active) and B (Standby) internal clocks to be synchronized by the GPSM-II card that is running the standby OAM .

The E5IS feature provides an Ethernet interface between the EAGLE and the Integrated Message Feeder (IMF), to eliminate the need for cabling between each SS7 link and IMF to monitor SS7 traffic.

The Measurements Platform feature provides a dedicated processor for collecting and reporting STP, LNP, INP, G-Flex, and G-Port Measurements data, with support for EAGLE growth to more than 700 links.

Output

```
chg-feat:gtt=on
```

```
rlghncxa03w 04-01-11 11:34:04 EST EAGLE 31.3.0
CHG-FEAT: MASP A - COMPLD
;
```

Related Topics

- [rtrv-feat](#)

4.1.58 chg-frm-pwr

Use this command to change the power threshold value in the Frame Power Threshold table for a specified frame.

The entries in the Frame Power Threshold table contain a Frame ID and the corresponding power threshold value.

Use the following commands to display the threshold and calculated maximum power consumption for the frames in the system.

- The `rtrv-frm-pwr` command displays the current provisioned frame power threshold for each provisioned frame.
- The `rtrv-stp:display=power` command displays the provisioned frame power threshold for each provisioned frame, and displays the maximum calculated power consumption for each frame, based on card population.
- The `rtrv-stp:display=power:frm=xxxx` command displays the provisioned frame power threshold for the specified frame, the maximum calculated power consumption for the frame based on card population, and the maximum power consumption for each card in the frame and for a fan assembly for each shelf.

Note:

The frame-level power threshold value needs to be determined from the capacity in Amps of the fuse alarm panel (FAP) for the frame. Contact your site engineer to determine the FAP capacity.

Parameters

frm (mandatory)

Frame ID

Range:

cf00
Control frame

ef00
First extension frame

ef01
Second extension frame

ef02
Third extension frame

ef03
Fourth extension frame

ef04
Fifth extension frame

thrshld (mandatory)

Threshold. This parameter specifies the frame-level power threshold, in Amps. This value is compared with the current calculated maximum power consumption for the frame (use the `rtrv-stp:display=power:frm=` command to obtain the maximum power consumption value), and the appropriate alarms are raised if that power consumption exceeds the threshold limit.

The value of the *thrshld* parameter needs to be determined from the capacity of the fuse alarm panel (FAP) for the frame. Contact your site engineer to determine the frame FAP capacity.

Range:
30 - 65

Default:
30

Example

Change the frame power threshold value for the first extension frame.

```
chg-frm-pwr:frm=ef00:thrshld=58
```

Dependencies

The following values are valid for the `frm` parameter: *cf00*, *ef00*, *ef01*, *ef02*, *ef03*, *ef04*.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

The valid range of values for the `thrshld` parameter is 30-65 Amps.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

A power threshold value must already be provisioned for the specified frame.

4538 E4538 Cmd Rej: Power Threshold entry does not exist in FPT table

The Frame Power Threshold table must be accessible.

4539 E4539 Cmd Rej: Failed reading FPT table

Notes

The maximum calculated power for a frame is based on the cards that are populated in the system, and includes a fan tray assembly for every shelf (the system cannot detect the presence or absence of a fan tray, and assumes presence for the calculation). These values

are typically much higher than the actual power being drawn; the values cannot be used as a gauge of the actual power consumption of the EAGLE.

Output

```
chg-frm-pwr:frm=ef00:thrshld=58
```

```
tekelecstp 06-06-01 15:18:41 EST EAGLE 35.0.0
FRAME POWER THRESHOLD table is (4 of 10) 40% full
CHG-FRM-PWR: MASP A - COMPLTD
;
```

Related Topics

- [dlt-frm-pwr](#)
- [ent-frm-pwr](#)
- [rtrv-frm-pwr](#)
- [rtrv-stp](#)

4.1.59 chg-ftp-serv

Use this command to change an entry for an FTP server in the FTP Server table.

▲ Caution:

Contact the Customer Care Center before specifying the user parameter value. The FTP-based Table Retrieve Application (FTRA) sends the necessary FTP Server information to the system, and the system overwrites any entry that is already in the FTP Server table for that server.

Parameters

app (mandatory)

Application. This parameter specifies the FTP Client application that interfaces with the FTP server.

Range:

db

Database Backup\Restore application

dist

EAGLE Software Release Distribution application

meas

Measurements Platform application

sflog

SS7 Firewall Logging application


```
chg-ftp-  
serv:app=sflog:ipaddr=1.255.0.102:login=tekperson1:path="~/data  
":prio=2
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `app` parameter must specify an application that uses the FTP Support feature.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

The `ipaddr` parameter must specify a valid IP address for the FTP server.

2704 E2704 Cmd Rej: Invalid IPADDR

The `path` parameter value must be in a valid FTP path format.

N/A N/A

The `prio` parameter specifies a priority for use of an FTP server by an application when the application has more than one FTP server defined in the table. Each FTP server defined for use by the application must have a priority from 1 to 10 assigned. The available FTP server with the highest priority (smallest number) will be used first by the application.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

If the `login` parameter is specified, a separate prompt appears for entry of the FTP server password. You must enter a password that is at least 1 and not more than 15 characters long. If an invalid password is entered or the Return key is pressed without entering a password, the entire command must be entered again to cause the password prompt to appear again. The password is not displayed as it is entered.

3089 E3089 Cmd Rej: FTP Server password must be 1 - 15 characters in length

An entry for the specified application ID at the specified priority cannot already exist.

2772 E2772 Cmd Rej: Entry already exists for this application at this priority

The FTP server entry to be changed with this command must already exist in the FTP Server table for the specified IP address and application.

2774 E2774 Cmd Rej: FTP Server table entry not found for this APP/IPADDR

The `security` parameter cannot be set to OFF with application (app = sflog).

3499 E3499 Cmd Rej: Security parameter must be ON

Notes

The same FTP server can be defined more than once, but the specified application must be different for each entry.

The FTP connection will be secure when the `security` parameter is ON. The secure FTP connection (SFTP) uses port 22, which must be opened in the customer's network.

Output

```
chg-ftp-serv:app=meas:ipaddr=1.255.0.102:path="-ftpmeas1"
```

```
rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
```

```
CHG-FTP-SERV: MASP A - COMPLTD
```

```
;
```

```
chg-ftp-serv:app=meas:ipaddr=1.255.0.102:login=ftpmeas1
```

```
rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
```

```
Enter Password:*****
```

```
CHG-FTP-SERV: MASP A - COMPLTD
```

```
;
```

```
chg-ftp-serv:app=user:ipaddr=1.22.10.2:prio=3
```

```
rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
```

```
CHG-FTP-SERV: MASP A - COMPLTD
```

```
;
```

```
chg-ftp-serv:ipaddr=10.248.13.9:app=meas:security=on
```

```
tekelecstp 12-09-19 15:12:54 EST 45.0.0-64.42.0
```

```
chg-ftp-serv:ipaddr=10.248.13.9:app=meas:security=on
```

```
Command entered at terminal #4.
```

```
CHG-FTP-SERV: MASP A-COMPLTD.
```

```
;
```

```
chg-ftp-serv:app=sflog:ipaddr=10.248.13.9:prio=2
```

```
tekelecstp 15-05-27 15:43:58 EST Eagle 46.3.0
```

```
chg-ftp-serv:app=sflog:ipaddr=10.248.13.9:prio=2
```

```
Command entered at terminal #4.
```

```
CHG-FTP-SERV: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-ftp-serv](#)
- [ent-ftp-serv](#)
- [rtrv-ftp-serv](#)

4.1.60 chg-gen-name

Use this command to change a generic name, which is already provisioned into the database.

Parameters

gname (mandatory)

Generic name. Each Generic name must be unique in the system. Maximum 15 characters can be provisioned. Valid values are (0-9, A-Z), *, SPACE, all special characters.

Range:

ZZZZZZZZZZZZZZZZ

ZZZZZZ

ZZZ*

****ZZZ***

ZZ*ZZ

****ZZ****

settype (mandatory)

Set to which a Generic name belongs.

Range:

SetA

SetB

Both

None

Example

Change generic name POLICE with settype BOTH:

```
chg-gen-name:gname="POLICE":settype=BOTH
```

Change generic name HOSP* with settype SETB:

```
chg-gen-name:gname="HOSP*":settype=SETB
```

Change generic name *ICE with settype SETA:

```
chg-gen-name:gname="*ICE":settype=SETA
```

Change generic name EOC CANADA with settype NONE:

```
chg-gen-name:gname="EOC CANADA":settype=NONE
```

Dependencies

Missing mandatory parameter

2011 E2011 Cmd Rej:Missing mandatory parameter-gname

2011 E2011 Cmd Rej:Missing mandatory parameter-settype

Generic name entered is invalid i.e. Generic name in following format is restricted:

- Name with more than two ASTERIK(*) i.e. zz*zz*zz*zz
- Two consecutive ASTERIK(*) i.e. zzz**zz
- Two ASTERICK(*) if they are not at extermes i.e. zz*zz*

3642 E3642 Cmd Rej: Invalid Generic Name

Unable to read generic name table

3645 E3645 Cmd Rej: Unable to read Generic name table

The generic name entered does not exist in the database

3649 E3649 Cmd Rej: Generic name doesnot exist

Notes

The generic name supports wildcarding using ASTERIK (*)

If gname="*" is provisioned as first entry than no more generic name can be configured. Also gname="*" cannot be configured, if atleast one entry is already provisioned.

Output

```
chg-gen-name:gname="hosp*":settype=both
```

```
tekelecstp 19-10-04 02:44:06 EST EAGLE 46.9.0.0.0-76.4.0
chg-gen-name:gname="hosp*":settype=both
Command entered at terminal #4.
CHG-GEN-NAME: MASP A - COMPLTD
;
```

```
chg-gen-name:gname="eos canada":settype=none
```

```
tekelecstp 21-11-24 22:06:36 MST EAGLE 47.0
  chg-gen-name:gname="eos canada":settype=none
  Command entered at terminal #1.
  CHG-GEN-NAME: MASP B - COMPLTD
;
```

Related Topics

- [ent-gen-name](#)
- [dlt-gen-name](#)
- [rtv-gen-name](#)

4.1.61 chg-gpl

Use this command to copy a generic program load from the system removable drive to the destination active and standby system disks as a "trial" version. The system release identification file is uploaded from the system removable drive to the active and standby fixed

drives along with each GPL. This command also provides a parameter to turn GPL auditing “on” and “off”.

Parameters

audit (optional)

This parameter specifies whether the active MASP system release running version is to be audited every 90 seconds. The audit state is preserved through a system restart or power up.

Note:

When audit is turned off, the system release audit process is stopped. The detection, marking, and reporting of corrupt GPLs is continuous and not affected by turning audit off.

Range:

on

off

Default:

on

gp1 (optional)

Generic program load. The name of the GPL identifier to be copied from the system removable drive to the active and standby system disks.

Range:

xyyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters. Valid GPLs are:

atmhc—Used by E5-ATM-B cards to allow the card to support up to 3 signaling links

bldc32—Flash GPL containing a tar image with all code required on E5-MCAP cards to support VxWorks6.9 32-bit application, as in OAMHC69.

bldc64—Flash GPL containing a tar image with all code required on E5-SM8G-B cards for SCCP64, ENUM64, SIP64 and DEIR64 applications.

blmcap—Flash GPL containing a tar image with all code required on E5-MCAP, E5-E1T1-B, E5-MCPM-B, E5-ATM-B, E5-ENET-B, and E5-SM8G-B cards

blslc32—Flash GPL containing a tar image with all code required on SLIC cards for 32-bit application i.e. MCPHC, IPSHC etc.

blslc64—Flash GPL containing a tar image with all code required on SLIC cards for 64-bit application i.e. SCCP64, ENUM64, SIP64 and DEIR64.

blsl932—Flash GPL containing a tar image with all code required on SLIC cards for 32-bit application on VxWorks6.9, as in IPSHC69 and MCPHC69.

deirhc—Used by E5-SM8G-B cards to support the S13/S13' EIR feature

enumhc—Used by E5-SM8G-B cards to support the ENUM Mobile Number Portability and Tier One Address Resolution application

erthc—Used by E5-ENET-B cards for EAGLE 5 Integrated Monitoring Support functions

hipr2—Communication software used on the High Speed IMT Packet Router (HIPR2) card

ipsg—Used by E5-ENET-B cards to support the combined functionality of IPLIMx M2PA and IPGWx M3UA

ipsg32—Used by SLIC cards to support IPSEG application with 64-bit addressing either with GTT functionality or without it.

ipshc—Used by E5-ENET-B and SLIC cards to support the IPS application

ipshc69—Used by E5-ENET-B and SLIC cards to support the IPS application when running on VxWorks69.

mcphc—Used by E5-MCPM-B cards for the Measurements Platform feature

mcphc69—Used by E5-MCPM-B and SLIC cards for the Measurements Platform feature when running on VxWorks69.

oamhc—Used by E5-MCAP cards for enhanced OAM functions

oamhc69—Used by E5-MCAP cards for enhanced OAM functions, when running on VxWorks 69.

sccphc—Used by E5-SM8G-B cards to support EPAP-based features and the LNP ELAP Configuration feature. If no EPAP-based or LNP ELAP Configuration feature is turned on, and an E5-SM8G-B card is present, then the GPL processes normal GTT traffic.

sfapp—Used by SLIC cards to support the Stateful Firewall Application.

siphc—Used by E5-SM8G-B Cards to support the SIP application.

ss7hc—Application GPL used by E5-E1T1-B and SLIC cards to support **E1** and **T1** signaling links.

src (optional)

Source drive. The identification of the disk containing the GPL to be copied

Range:***remove***

Removable drive

usb

The flush-mounted (not-latched) USB port on the MASP card.

ver (optional)

Version number of the GPL, in the form of *major-minor-fix*.

Range:

major-minor-fix—Specify a valid value for each component of the version number, in the range 0-255

Example

```
chg-gpl:audit=on
chg-gpl:gpl=atmhc:ver=138-19-0
chg-gpl:gpl=siphc:ver=134-35-0
chg-gpl:gpl=enumhc:ver=135-20-0
chg-gpl:gpl=ipsg32:ver=140-20-0
chg-gpl:gpl=sfapp:ver=141-012-1
```

Dependencies

No other activate, change, copy, or retrieve GPL command can be in progress when this command is entered.

2412 E2412 Cmd Rej: Command already in progress

If the `ver` or `gpl` parameter is specified, then both parameters must be specified.

2236 E2236 Cmd Rej: Must specify GPL name and version

The `audit` parameter, the `ver` and `gpl` parameters, or the `audit` and `ver` and `gpl` parameters must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

A system removable drive must be inserted in the Active OAM.

4918 E4918 Cmd Rej: Could not access USB disk

A valid value must be specified for the `gpl` parameter.

2238 E2238 Cmd Rej: The GPL type entered is not currently supported

Notes

If there is a failure changing the active system, the operation is stopped. If there is a failure changing the standby system, the active system is still updated.

A system removable drive must be inserted into the latched USB port, initialized, and formatted as a system disk.

Use the `rtrv-gpl` command to determine the version number and audit state of a GPL.

The `ver` and `gpl` parameters are mandatory if a generic program load is being uploaded from a system removable drive.

The `audit` parameter is required only when turning GPL auditing on or off and the `ver` and `gpl` parameters are optional.

When the `audit=off` parameter is specified, the system release audit process is stopped. The detection, marking, and reporting of corrupt GPLs is continuous and not affected by turning audit off.

Output

This example shows the output for a successful command execution:

```
chg-gpl:gpl=ss7hc:ver=125-1-0
```

```
rlghncxa03w 09-03-01 11:43:04 EST  EAGLE 40.1.0
SS7HC upload to 1114 completed
SS7HC upload to 1116 completed
System Release ID table upload to 1116 completed
System Release ID table upload to 1114 completed
;
```

```
chg-gpl:gpl=siphc:ver=134-35-0
```

```
tekelecstp 12-07-09 19:08:39 EST EAGLE 45.0.0
SIPHC upload to 1114 completed
SIPHC upload to 1116 completed
System Release ID table upload to 1116 completed
System Release ID table upload to 1114 completed
;
```

```
chg-gpl:gpl=enumhc:ver=135-20-0
```

```
tekelecstp 14-05-20 15:19:30 EST EAGLE 46.1.0
ENUMHC upload to 1114 completed
ENUMHC upload to 1116 completed
System Release ID table upload to 1116 completed
System Release ID table upload to 1114 completed
;
```

```
chg-gpl:gpl=ipsg32:ver=140-20-0
```

```
tekelecstp 14-05-20 15:19:30 EST EAGLE 46.1.0
IPSG32 upload to 1114 completed
IPSG32 upload to 1116 completed
System Release ID table upload to 1116 completed
System Release ID table upload to 1114 completed
;
```

```
chg-gpl:gpl=sfapp:ver= 141-012-1
```

```
tekelecstp 17-11-29 16:18:04 MST EAGLE 46.5.1.5.0-73.2.0
  SFAPP activate to 1114 completed
  SFAPP activate to 1116 completed
;
```

Related Topics

- [act-gpl](#)
- [alw-card](#)
- [copy-gpl](#)
- [init-card](#)
- [init-sys](#)
- [rept-stat-gpl](#)
- [rtrv-gpl](#)

4.1.62 chg-gsm-msg

Use this command to provision GSM test messages. These messages are used by the MO SMS NPP Test Tool to test MO-based GSM SMS message processing by the NPP.

Parameters

msgn (mandatory)

Message number. The GSM message number to be changed.

Range:

1 - 10

active (optional)

This parameter specifies whether the GSM test message is sent to the network card for processing.

Range:

yes

The message is sent to the network card.

no

The message is not sent to the network card.

Default:

No change to the current value

System Default:

no

cdpadgts (optional)

Called party address digits. The SCCP CdPA digits for the GSM test message.

Range:

1-15 digits

1 - 15 hexadecimal digits. Valid digits are *0-9, a-f, A-F*.

Default:

No change to the current value

System Default:

0123456789abcde

cdpagti (optional)

Called party address global title indicator. The SCCP CdPA GT for the GSM test message.

Range:

0 - 15

Default:

No change to the current value

System Default:

4

cdpagtnai (optional)

Called party address global title nature of address indicator. The SCCP CdPA GT NAI for the GSM test message.

Range:

0 - 127

Default:

No change to the current value

System Default:

4

cdpndgts (optional)

Called party number digits. The TCAP CdPN (*SM-RP-UI TP-DA*) digits for the GSM test message.

Range:

1 - 20 digits

Default:

No change to the current value

System Default:

01234567890abcde

cdpnnai (optional)

Called party number nature of address indicator. The TCAP CdPN (*SM-RP-UI TP-DA*) NAI for the GSM test message.

Range:

0 - 7

Default:

No change to the current value

System Default:

1

cdpnp (optional)

Called party numbering plan. The TCAP CdPN (*SM-RP-UI TP-DA*) NP for the GSM test message.

Range:

0 - 15

Default:

No change to the current value

System Default:

1

cgpadgts (optional)

Calling party address digits. The SCCP CgPA digits for the GSM test message.

Range:

1 -15 digits

1 - 15 hexadecimal digits. Valid digits are 0-9, a-f, A-F.

Default:

No change to the current value

System Default:

0123456789abcde

cgpagti (optional)

Calling party address global title indicator. The SCCP CgPA GT for the GSM test message.

Range:

0 - 15

Default:

No change to the current value.

System Default:

4

cgpagnai (optional)

Calling party address global title nature of address indicator. The SCCP CgPA GT NAI for the GSM test message.

Range:

0 - 127

Default:

No change to the current value

System Default:

4

cgpndgts (optional)

Calling party number digits. The TCAP CgPN (SM-RP-OA MSISDN) for the GSM test message.

Range:

1 - 21 digits, none

none -deletes the current digits

Default:

No change to the current value

System Default:

01234567890abcde

cgpnnai (optional)

Calling party number nature of address indicator. The TCAP CgPN (SM-RP-OA MSISDN) NAI for the GSM test message.

Range:

0 - 7

Default:
No change to the current value

System Default:
1

cgpnnp (optional)

Calling party numbering plan. The TCAP CgPN (*SM-RP-OA MSISDN*) NP for the GSM test message.

Range:
0 - 15

Default:
No change to the current value

System Default:
1

reset (optional)

This parameter resets all of the parameters to their system default values.

Range:
yes
Message parameters are reset to their default values

Example

```
chg-gsm-  
msg:msgn=1:cdpnnai=4:cdpadgts=12457896abcd:cgpnnai=2:cgpndgts=919818  
541560  
  
chg-gsm-msg:msgn=1:reset=yes
```

Dependencies

The TSTMSG table is corrupt or cannot be found.

4819 E4819 Cmd Rej: Failure reading TSTMSG Table

If the `reset` parameter is specified, then no other parameter can be specified.

4953 E4953 Cmd Rej: RESET is mutually exclusive with any other parameter

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

Output

```
chg-gsm-msg:msgn=1:cdpnnai=4:cdpndgts=987654321:cgpnnai=4
```

```
tekelecstp 09-03-02 10:46:51 EST EAGLE 40.1.0  
CHG-GSM-MSG: MASP A - COMPLTD  
;
```

Related Topics

- [rtrv-gsm-msg](#)
- [tst-msg](#)

4.1.63 chg-gsmmap-scrn

Use this command to change the attributes of GSM Map Screening CgPA and CdPA entries that are used to filter out or allow SCCP messages containing Map Op-Codes, CgPA GTA+NPV+NAIV, CdPA GTA+NPV+NAIV, and forbidden parameters.

Parameters**Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

cgsr (mandatory)

CgPA Screening Reference.

Range:

ayyy

1 alphabetic character followed by up to 3 optional alphanumeric characters

opname (mandatory)

The user-defined name for the operation code. The `opname` value references the operation code (`opcode`) defined with the `ent-gsms-opcode` command. GSM MAP Screening is performed on the specified address or addresses for the referenced operation code.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

cdsr (optional)

CdPA Screening Reference.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

force (optional)

Check Mated Application Override. This parameter must be used to complete command execution if the `npc/npcn/npci/npcn` and `nssn` parameter combination specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).

Range:

yes

no

Default:

no

naction (optional)

The new screening action to take if a message is forbidden as defined by the *forbid* parameter.

Range:

atierr

Do not route the MSU. An ATI (Any Time Interrogation) reject message is generated to the originator. This value is valid only for ATI MAP operation codes.

discard

Do not route the MSU. The MSU is discarded (thrown away) and an appropriate UIM is issued.

dupdisc

Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is discarded.

duplicate

Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

forward

Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

pass

Route the message as normal to the destination; a UIM will be issued. This is intended to be a test mode and is recommended when setting up GSM Map Screening during the initial phase to assure that no MSUs will be inadvertently thrown away.

route

Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

Default:

No change to current value

ncdsr (optional)

The new CDPA Screening Reference.

Range:

ayyy

1 alphabetic character followed by up to 3 optional alphanumeric characters

ncgsr (optional)

The new CGPA Screening Reference.

Range:

ayyy

1 alphabetic character followed by up to 3 optional alphanumeric characters

nforbid (optional)

The new forbidden parameter value. Indicates a forbidden parameter for the specified entry. If a forbidden parameter is detected, the message is handled with the action defined by the `action/naction` parameter.

Range:***all***

All parameters are forbidden. Take the specified screening action defined by the `naction` parameter for messages arriving at the system.

none

None of the parameters are forbidden. Route the message to its destination.

state

Take the specified screening action defined by the `naction` parameter for messages arriving at the system that contain `state` as the forbidden parameter for the entered address/operation code combination.

**Note:**

The `state` parameter is valid only for GSM ATI messages.

location

Take the specified screening action defined by the `naction` parameter for messages arriving at the system that contain `location` as the forbidden parameter for the entered address/operation code combination.

**Note:**

This value is valid only for GSM ATI messages.

Default:

No change to current value

nmapset (optional)

The new MAP set ID.

Range:

1 - 36000, dflt

dflt—Default MAP set

Default:

No change to the MAP set value.

npc (optional)

New ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

npca

Range:**npc/npca/npci/npcn/npcn24 (optional)**

New point code. The *npc/npca/ npci/npcn /npcn24* and *nssn* parameters are used when the new screening action (*naction*) is *forward*, *duplicate*, or *dupdisc* (duplicate and discard). These parameters allow the user to change the defined node to which the input message will be routed.

npci (optional)

New ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

npcn (optional)

New ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcofmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

npcn24 (optional)

New 24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:*000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*msa—000—255**ssa—000—255**sp—000—255***nri (optional)**

New routing indicator. This parameter specifies whether a subsequent global title translation is required.

Range:*gt**ssn***nssn (optional)**

New Subsystem Number.

Range:*002 - 255, none***Default:**

No change to the existing value

ntt (optional)

New translation type. The value the CdPA TT is set to as the result of Enhanced GSM Map Screening.

Range:*0 - 255***Default:**

No change to the existing value

Example

```
chg-gsmmap-scrn:opname=xyz:cgsr=fela:naction=pass
```

```
chg-gsmmap-scrn:opname=xyz:cgsr=fela:cdsr=fall:naction=discard
```

```
chg-gsmmap-scrn:opname=test2:cgsr=pcn1:npcn=s-333:nssn=254
```

```
chg-gsmmap-  
scrn:opname=test1:naction=forward:npc=2-2-2:nssn=20:nmapset=12
```

```
chg-gsmmap-  
scrn:opname=test2:naction=duplicate:npc=1-1-2:nssn=20:cgsr=cg1:  
nmapset=df1t
```

```
chg-gsmmap-scrn:opname=test3:cgsr=ad:nri=ssn
```

```
chg-gsmmap-scrn:opname=test4:cgsr=ksl:ntt=12
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

If the `cdsr` parameter is specified, at least one additional optional parameter must be specified.

4239 E4239 Cmd Rej: At least one other optional parameter is required

If the `ncdsr` parameter is specified, then the `cdsr` parameter must be specified.

4290 E4290 Cmd Rej: CDSR must be specified when NCDSR is specified

If the `cdsr` parameter is specified, then the `ncgsr` parameter cannot be specified.

4288 E4288 Cmd Rej: NCGSR shouldn't be specified when CDSR is specified

The `ncgsr` parameter and the `ncdsr` parameter cannot be specified together in the same command.

4288 E4288 Cmd Rej: NCGSR shouldn't be specified when CDSR is specified

The specified `cgscr` parameter value must exist in the database.

3905 E3905 Cmd Rej: CGSR doesn't exist for specified OPNAME

The specified `cdsr` parameter value must exist in the database.

4287 E4287 Cmd Rej: CDSR doesn't exist for specified OPNAME and CGSR

The specified `ncgsr` parameter value cannot already exist in the database.

4289 E4289 Cmd Rej: (N)CGSR already exists for specified OPNAME

The specified `ncdsr` parameter value cannot already exist in the database.

4293 E4293 Cmd Rej: (N)CDSR already exists for specified CGSR

The GSM Map Screening feature must be turned on before this command can be entered.

3883 E3883 Cmd Rej: GSM Map Screening feature must be ON

The Enhanced GSM Map Screening (EGMS) feature must be turned on before the `cdsr`, `ncdsr`, `pc`, and `pca` parameters can be specified.

4285 E4285 Cmd Rej: Enhanced GSM Map Screening feature must be ON

The specified `opname` parameter value must exist in the GSM Map Op-Code table.

3892 E3892 Cmd Rej: OPNAME does not exist in the database

A value of *state* or *location* cannot be specified for the `nforbid` parameter unless the operation code (`opcode`) referenced by the `opname` parameter is 71. The `opcode=71` parameter signifies an ATI MAP operation code.

3902 E3902 Cmd Rej: FORBID can not be STATE or LOCATION for the given OPNAME

A value of *atierr* cannot be specified for the `naction` parameter unless the operation code (OPCODE) referenced by `opname` is 71.

3903 E3903 Cmd Rej: Screening action can not be ATIERR for the given OPNAME

If specified, the `npc/npca/npci/ npcn/npcn24` parameter must be a full point code.

3090 E3090 Cmd Rej: Full Point Code must be specified

If the `naction` parameter is specified, and its value is `forward`, `duplicate`, or `dupdisc`, then the `npc/npca/npci/npcn/npcn24` parameter and the `nssn` parameter must be specified.

3091 E3091 Cmd Rej: PC/SSN must be given with Action FORWARD, DUPLICATE, DUPDISC

The `npc/npca/npci/npcn/npcn24` and `nssn` parameters must be specified before the `force` parameter can be specified.

3092 E3092 Cmd Rej: PC/SSN must be specified if FORCE is specified

If the `npc/npca/npci/npcn/npcn24` parameter and the `nssn` parameter are specified, and the `force` parameter is not specified as `yes`, the PC-SSN must be populated in the SCCP Application entity set (Remote Point Code / Mated Application Table).

2450 E2450 Cmd Rej: PC/SSN does not exist as a mated application

The GSM Map screening table must be accessible.

3890 E3890 Cmd Rej: Failure reading the GSM MAP SCRN Table

The GSM Map Op-Code table must be accessible.

3889 E3889 Cmd Rej: Failure reading the GSM OPCODE Table

The Route table must be accessible.

2648 E2648 Cmd Rej: Failed reading the route table

If specified, the `npc/npca/npci/npcn/npcn24` parameter value must exist as a destination in the Ordered Route entity set (ANSI only), or must reside in a cluster that exists as a destination in the Ordered Route entity set (for global title routing).

2417 E2417 Cmd Rej: Point code does not exist in the routing table

The `npc/npca/npci/npcn/npcn24` and `nssn` parameters can be specified only if the `naction` parameter is specified and its value is `forward`, `duplicate`, or `dupdisc`.

3083 E3083 Cmd Rej: NACTION must be specified (FORWARD, DUPLICATE, or DUPDISC)

The `opname` parameter must be entered.

2011 E2011 Cmd Rej: Missing mandatory parameter - <parm>

The `cgsr` parameter must be entered.

2011 E2011 Cmd Rej: Missing mandatory parameter - <parm>

The `opname` parameter must be alphanumeric.

2040 E2040 Cmd Rej: String pattern nonconformance, alphanumeric - <parm>

The `(n)cgsr` and `(n)cdsr` parameters must begin with an alphabetic character.

2041 E2041 Cmd Rej: String pattern nonconformance, alphabetic - <parm>

The `(n)cgsr` and `(n)cdsr` parameters must have 1-4 alphanumeric characters each.

2039 E2039 Cmd Rej: <parm_desc> too long, min <min>, max <max> - <parm>

If the value of the `naction` parameter is *forward*, *duplicate*, or *dupdisc*, then the `nmapset` parameter must be specified.

4530 E4530 Cmd Rej: MAPSET must be specified if action is FORWARD/DUP/DUPDISC

The `naction` parameter must have a value of *forward*, *duplicate*, or *dupdisc* before the `npc/npca/npci/npcn/npcn24`, `nssn`, `nri`, `ntt`, or `naction` parameters can be specified.

If the `naction` parameter has a value of *forward*, *duplicate*, or *dupdisc*, then the `npc/npca/npci/npcn/npcn24` parameter and the `nssn` parameter must be specified.

3081 E3081 Cmd Rej: NACTION parameter must be FORWARD, DUPLICATE, or DUPDISC

The Flexible GTT Load Sharing feature must be enabled before the `nmapset` parameter can be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The specified new MAP set must exist in the MAP table.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

If the value of the `nmapset` parameter is not *dflt*, or if the `nmapset=dflt` parameter is specified, but the value of the `force` parameter is not *yes*, then the values for the `npc` and `nssn` parameters must exist in the new MAP set.

4528 E4528 Cmd Rej: PC/SSN doesn't exist in MAPSET

If the `nmapset`, `nri`, or `ntt` parameter is specified, and the `naction` parameter is not specified, then the `action` parameter (see the `ent-gsmmap-scrn` command) must have a value of *forward*, *duplicate*, or *dupdisc*.

3083 E3083 Cmd Rej: NACTION must be specified (FORWARD, DUPLICATE, or DUPDISC)

The MAP table must be accessible.

4524 E4524 Cmd Rej: Failed Reading MAP table

The `force` parameter can be specified only if the `nmapset` parameter is specified.

4531 E4531 Cmd Rej: NMAPSET must be specified if FORCE is specified

If the value of the `naction` parameter is *forward*, *duplicate*, or *dupdisc*, then the value specified for the `npc/npca/npci/npcn/npcn24` parameter cannot be associated with a proxy point code.

4713 E4713 Cmd Rej: PRX using DPC not allowed in GSM tables

If the `nri=ssn` parameter is specified, then the `nssn=none` parameter cannot be specified.

4880 E4880 Cmd Rej: SSN must not be NONE if RI is SSN

If the `nforbid=none` parameter is specified, then the `naction` parameter must have a value of *pass*.

4993 E4993 Cmd Rej: If specified, (n)action must be PASS when (n)forbid=NONE

If the Flexible GTT Load Sharing feature is enabled, and the new or previously provisioned subsystem number has a value of *none*, then MAP set and point code combination must already exist in the MAP table.

4543 E4543 Cmd Rej: PC/MAPSET does not exist in MAP table

If the Flexible GTT Load Sharing feature is not enabled, and the new or previously provisioned subsystem number has a value of *none*, then the point code must already exist in the MAP table.

2419 E2419 Cmd Rej: Point code does not exist in the remote point code table

Notes

Unlike GTT (Global Title Translation) entries, the GSM MAP Screening commands do not support splits of ranges during deletion or changes of entries.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
chg-gsmmap-scrn:opname=test4:cgsr=ks1:ntt=12
```

```
tekelecstp 08-08-20 19:13:01 EST EAGLE 39.2.0
GSM MAP Screening Table (1 of 4000) is 1% full
CHG-GSM MAP-SCRN: MASP A - COMPLTD
;
```

Related Topics

- [dlt-gsmmap-scrn](#)
- [ent-gsmmap-scrn](#)
- [rtrv-gsmmap-scrn](#)

4.1.64 chg-gsmopts

Use this command to enter GSM (Global System for Mobile Telecommunications) system options in the database. This command updates the GSMOPTS Table.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.



Note:

The options for the `on`, `off`, `maplyrrtgon`, and `maplyrrtgoff` parameters are described in the Notes section.

ccnc (optional)

E214 country code and network code.

Range:

2-8 digits

Default:

No change to the current value

crptt (optional)

Circular Route Prevention Translation Type.

Range:

0 - 255, none

System Default:

none

defmapvr (optional)

Default MAP version.

Range:

1 - 3

Default:

No change to the current value

System Default:

1

defmcc (optional)

E212 default mobile country code.

Range:

3 digits, none

Valid digits are 0-9, a-f, A-F

none —Deletes the current value for the defmcc parameter

Default:

No change to the current value

System Default:

none

defmnc (optional)

E212 default mobile network code.

Range:

1-4 digits, none

Valid digits are 0-9, a-f, A-F.

none —Deletes the current value for the defmnc parameter

Default:

No change to the current value

System Default:*none***df1trn (optional)**

Default routing number. The digits to use as the routing number portion of the `msrndig` parameter when an SRI is processed by the SRI Query for Prepaid feature, an RTDB match is found for an own-network subscriber, and Service Portability is not applied.

Range:1-15 digits, *none***Default:**

No change to the current value

System Default:*none***eirdfltimsilkup (optional)**

Equipment Identity Register (EIR) default IMSI lookup status. This parameter specifies the order of the IMEI table lookup for default IMSI screening. This parameter is analogous to the P1 parameter in the IMSIPFX CSL list but is used only when there is no matching IMSI prefix in the IMSIPFX CSL.

Range:*both*

Perform lookup on Individual IMEI table first & if not found then lookup Range IMEI table

individual

Perform lookup on Individual IMEI table only

none

Don't perform any lookup. Just return the default IMEI status.

range

Perform lookup on Range IMEI table only

Default:

No change to the current value.

System Default:*range***eirdfltimsiresp (optional)**

Equipment Identity Register (EIR) default IMSI response. This parameter specifies the default IMEI status for default IMSI screening. This parameter is analogous to the P2 parameter in the IMSIPFX CSL list but is used only when there is no matching IMSI prefix in the IMSIPFX CSL.

Range:

blacklist

The IMEI is "invalid". Registration should not be allowed for this handset

graylist

The IMEI is "questionable."

unknown

The IMEI is not in the White, Gray, or Black list. Registration should not be allowed for this handset.+

whitelist

The IMEI is "valid". Registration should be allowed for the handset.

Default:

No change to the current value.

System Default:

whitelist

eirgrsp (optional)

Equipment Identity Register (EIR) Global Response status.

Range:

off

EIR Global Response is not used

whitelst

The IMEI is "valid". Registration should be allowed for the handset.

graylst

The IMEI is "questionable." Registration should be allowed, but the event is logged in the EIR log and a special measurement peg is incremented.

blklst

The IMEI is "invalid". Registration should not be allowed for this handset.

unknown

The IMEI is not in the White, Gray, or Black list. Registration should not be allowed for this handset.

Default:

No change to the current value

System Default:

off

eirimsichk (optional)

Equipment Identity Register (EIR) IMSI Check status. This parameter is not valid for IMEI ranges.

Range:*on**off***Default:**

No change to the current value

System Default:*off***eirrsptype (optional)**

Equipment Identity Register (EIR) Response Type.

Range:*type1**type2**type3*[Table 4-6](#) contains information to help select the value for this parameter.

Presence in List			EIR Response Type		
White	Gray	Black	Type 1	Type 2	Type 3
X			white list	white list	white list
X	X		gray list	gray list	gray list
X	X	X	black list	black list	black list
X		X	black list	black list	black list
	X		gray list	gray list	unknown
	X	X	black list	black list	unknown
		X	black list	black list	unknown
			white list*	unknown*	unknown*

*Indicates no match was found for the IMEI in an incoming message within the database.

Default:

No change to the current value

System Default:*type1***gflexmaplayerrtg (optional)**

G-Flex MAP layer routing. The message parameter used in the database lookup performed during G-Flex MAP layer routing.

The `gflexmaplayerrtg` parameter applies G-Flex MLR to the following MAP operations:

- `updateLocation`
- `sendParameters`

- sendAuthenticationInfo
- updateGPRSLocation
- AnyTimeInterrogation

Use the `maplyrrtgon` and `maplyrrtgoff` parameters to apply G-Flex MLR to additional MAP operations.

Range:***imsi***

use the IMSI parameter for database lookup

none

MLR is not performed

msisdn

use the MSISDN parameter for database lookup

all

use the IMSI or MSISDN parameter for database lookup based on the operation code of the message

Default:

No change to the current value

System Default:

none

gsm2is41 (optional)

GSM to IS41 migration prefix.

Range:

1-15 digits, *none*

Valid digits are 0-9, a-f, A-F

none —Deletes the current value of the `gsm2is41` parameter.

Default:

No change to the current value

System Default:

none

is412gsm (optional)

IS41 to GSM migration prefix.

Range:

1-15 digits, *none*

Valid digits are 0-9, a-f, A-F

none —Deletes the current value of the `is412gsm` parameter.

Default:

No change to the current value

System Default:

none

maplyrrtgoff (optional)

MAP Layer Routing Off. This parameter turns off G-Flex MLR for a comma-separated list of MAP operations. Up to 10 operations can be specified in the list.

Range:

regss, actss, dactss, intss, authfailrpt, rstdata, procunstrqt, rdyform, purgmobss, sriloc, all

all —Turns off G-Flex MLR for all MAP operations supported by the `maplyrrtgoff` parameter.

**Note:**

If the *all* MAP operation is specified, then no other MAP operations can be specified in the same command.

Default:

No change to the current value

maplyrrtgon (optional)

MAP Layer Routing On. This parameter turns on G-Flex MLR for a comma-separated list of MAP operations. Up to 10 operations can be specified in the list.

Range:

regss, actss, dactss, intss, authfailrpt, rstdata, procunstrqt, rdyform, purgmobss, sriloc, all

all —Turns on G-Flex MLR for all MAP operations supported by the `maplyrrtgon` parameter.

**Note:**

If the *all* MAP operation is specified, then no other MAP operations can be specified in the same command.

Default:

No change to the current value

mccmnc (optional)

E212 mobile country code and mobile network code.

Range:

4-7 digits, *none*

Valid digits are 0-9, a-f, A-F.

none —Deletes the current `mccmnc` and `ccnc` parameter combination entry.

Default:

No change to current value

migrpfx (optional)

Migration prefix. This parameter specifies whether the database routing number (RN) or the GSM to IS-41 Migration prefix is used as the source for the prefix in the SRI Ack response message for a migrated subscriber.

Range:***single***

The RN from the RTDB lookup is not used as the prefix in the SRI Ack. If the `gsm2is41` parameter has a value other than *none*, then that value is used as the prefix in the SRI Ack Response.

multiple

The RN from the database lookup is used as the prefix in the SRI Ack response.

Default:

No change to the current value

System Default:

single

A value of *single* is the system default value for a new system, or for a system that upgraded to 36.0 without the IGM feature being turned on. If the IGM feature was turned on before upgrade to 36.0, then a value of *multiple* is hardcoded as the system default value.

`msisdntrunc` (optional)

MS ISDN truncation digits. The number of digits to delete from the beginning of the National MSISDN (MSISDN without Country Code) before formulating the MSRN parameter of the SRI Ack response.

Range:

0 - 5

Default:

No change to current value

System Default:

0

`msrndig` (optional)

The routing number to be used as is or concatenated with the MSISDN.

Range:***rn***

Routing number

rndn

Routing number prefix and the international DN (dialed/directory number)

ccrndn

Country code, routing number, and national directory number

rnccd

Routing number, country code and directory number

rnasd

Routing number and additional subscriber data

asdrn

Additional subscriber data and routing number

rnasddn

Routing number, additional subscriber data, and directory number

asdrndn

Additional subscriber data, routing number, and directory number

ccrnasddn

Country code, routing number, additional subscriber data, and directory number

ccasdrndn

Country code, additional subscriber data, routing number and directory number

rnasdccdn

Routing number, additional subscriber data, country code, and directory number

asdrnccdn

Additional subscriber data, routing number, country code, and directory number

rngrn

Routing number and generic routing number

grnrn

Generic routing number and routing number

rngrndn

Routing number, generic routing number, and directory number

grnrndn

Generic routing number, routing number, and directory number

ccrngrndn

Country code, routing number, generic routing number, and directory number

ccgrnrndn

Country code, generic routing number, routing number, and directory number

rngrnccdn

Routing number, generic routing number, country code, and directory number

grnrnccdn

Generic routing number, routing number, country code, and directory number

Default:

No change to the current value

System Default:

m

msrnlen (optional)

The number of digits in the MAP Routing Info portion of the returned SRI_ACK message.

Range:

1 - 30

Default:

No change to the current value

System Default:

30

msrnnai (optional)

The nature of address indicator value for the MSRN.

Range:

0 - 7

0

Unknown Nature of Address

1

International Number

2

National Significant Number

3

Network Specific Number

4

Subscriber Number

5

Reserved for national use

6

Abbreviated Number

7

Reserved for extension

Default:

No change to current value

msrnp (optional)

The numbering plan value for the MSRN.

**Note:**

This parameter is mandatory if the `msrnnai` parameter is specified.

Range:

0 - 15

Default:
No change to current value

multcc (optional)
Multiple country code.

Range:
1-3 digits
Valid digits are 0-9, a-f, A-F

Default:
No change to current value

nmultcc (optional)
New multiple country code.

Range:
1-3 digits, *none*
Valid digits are 0-9, a-f, A-F.
none —Deletes the specified `multcc` value from the multiple country code list.

Default:
No change to current value

off (optional)
This parameter turns off the specified options. Up to 8 comma-separated unique options can be specified.

Range:

- eirdftimsiscrn*
- eirimsichk*
- eirimsiscrn*
- eirlogwl*
- encdnpsdnnofound*
- encdnpsptnone*
- encodecug*
- encodenps*
- srismgttrtg*

on (optional)
This parameter turns on the specified options. Up to 8 comma-separated unique options can be specified.

Range:

- eirdftimsiscrn*
- eirimsichk*

eirimsiscrn

eirlogwl

encdnpsdnnofound

encdnpsptnone

encodecug

encodenps

srismgttrtg

serverpfx (optional)

Server SRI prefix.

Range:

1-4 digits, *none*

Valid digits are *0-9, a-f, A-F*

none —No Server SRI prefix is provisioned

Default:

No change to current value

System Default:

none

sporttype (optional)

Service Portability type. This parameter specifies whether Service Portability applies to SRI Query for Prepaid messages for own-network subscribers.



Note:

If Service Portability is performed, then the Service Portability prefix (RTDB 'GRN'entity id) is applied.



Note:

The S-Port feature must be turned on before any change to the parameter will impact the G-Port SRI Query for Prepaid feature.

Range:

gsm

Apply Service Portability prefix for own-network GSM subscribers

is41

Apply Service Portability prefix for own-network IS41 subscribers

all

Apply Service Portability prefix for all own-network (IS41 and GSM) subscribers

none

Service Portability is not performed for this feature

Default:

No change to the current value

System Default:

none

srfaddr (optional)

Entity address of the MNP_SRF node.

Range:

1-15 digits, *none*

Valid digits are 0-9, a-f, A-F

none —Deletes the current value for the *srfaddr* parameter.

Default:

No change to current value

System Default:

none

srfnai (optional)

The nature of address indicator value of the MNP_SRF.

Range:

0 - 127

Default:

No change to current value

srfnp (optional)

The numbering plan value of the MNP_SRF.

Range:

0 - 15

Default:

No change to current value

sridn (optional)

The Send Routing Information Dialed Number location.

Range:

tcap

sccp

Default:

No change to current value

System Default:

tcap

sriddnotfound (optional)

The processing used when G-Port encounters an RTDB query result that indicates that the specified directory number is not known.

Range:***gtt***

GTT is performed on the message for routing to an HLR

srinack

an SRI negative acknowledgement is generated and returned to the calling party

Default:

No change to the current value

System Default:

gtt

srirdtent (optional)

This indicates whether existing SRI REDIRECT feature (SP) or Intra Network Number Portability feature (GRN) is to be used.

Range:***grn***

Vendor type of GRN should be considered to be matched against Vendor type of CGPA GTA.

sp

Vendor type of SP should be considered to be matched against Vendor type of CGPA GTA.

Default:

No change to the current value

System Default:

sp

ownnetworksetname (optional)

This indicates the GTTSet (of Set Type CDGTA) to be used to screen and determine if the GT belongs to own network or not.

Range:***ayyyyyyyy, none***

Valid characters are 1 alphabetic character followed by up to 8 alphanumeric characters.

Default:

No change to the current value

System Default:

none

Example

```
chg-gsmopts:msisdntrunc=1:srfaddr=123456789abcdef:srfnai=0:srfnp=0
```

```
chg-gsmopts:msrnnai=1:msrnp=1:msrndig=ccrndn:defmapvr=2
chg-gsmopts:sridn=sccp
chg-gsmopts:is412gsm=1234:gsm2is41=1234
chg-gsmopts:serverpfx=1000
chg-gsmopts:multcc=011
chg-gsmopts:multcc=011:nmultcc=11
chg-gsmopts:ccnc=33322123:mccmnc=21434
chg-gsmopts:eirimsichk=on:eirrsptype=type2:eirgrsp=blk1st
chg-gsmopts:migrpfx=multiple
chg-gsmopts:sridnnotfound=srinack
chg-gsmopts:defmcc=214:defmnc=34
chg-gsmopts:msrndig=rnsd
chg-
gsmopts:on=eirimsichk,eirimsiscrn,eirlogwl,eirdfltimsiscrn:eirr
sptype=type2:
eirgrsp=blk1st
chg-
gsmopts:on=encodecug,encodenps,srismgrnrtg:off=eirimsichk,eirim
siscrn,eirlogwl,
eirdfltimsiscrn:crptt=50
chg-gsmopts:on=encdnpsptnone,encdnpsdnotfound
chg-
gsmopts:maplyrtrgon=regss,actss,sriloc:maplyrtrgoff=dactss,rstd
ata
chg-gsmopts:eirdfltimsilkup=range
chg-gsmopts:eirdfltimsiresp=whitelist
chg-gsmopts:srirdctent=grn
chg-gsmopts:ownnetworksetname=cdgtal
```

Dependencies

At least one parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The G-Flex feature must be turned on before the `defmnc`, `ccnc`, or `mccmnc` parameter can be specified.

3500 E3500 Cmd Rej: GFLEX feature must be ON

The G-Port or IGM feature must be enabled before the `srfaddr`, `msrndig`, `msrnnai`, `sridn`, `msisdntrunc`, `migrpfx`, `gsm2is41`, or `serverpfx`

parameter can be specified and before a value of *encodecug*, *encodenps*, *srismgttrtg*, *encdnpsptnone*, or *encdnpsdnotfound* can be specified for the *on* or *off* parameter.

4769 E4769 Cmd Rej: GPORT or IGM must be enabled

An *is412gsm* parameter value must exist in the database before the *serverpfx* parameter can be specified.

4328 E4328 Cmd Rej: IS412GSM must be provisioned before SERVERPFX

The *serverpfx=none* parameter must be specified before the *is412gsm=none* parameter can be specified.

4329 E4329 Cmd Rej: Set SERVERPFX to NONE before disabling IS412GSM

The EIR feature must be turned on before the *eirgrsp*, *eirstype*, *eirimsichk*, *eirdftimsilkup*, or *eirdftimsiresp* parameters can be specified and before the *eirimsichk*, *eirimsiscrn*, *eirlogwl* or *eirdftimsiscrn* options can be specified for the *on* or *off* parameter.

3699 E3699 Cmd Rej: EIR feature must be ON

The *ccnc* and *mccmnc* parameter values must be specified together in the command.

3511 E3511 Cmd Rej: CCNC and MCCMNC parameters must be entered together

A maximum of 10 *ccnc* records can exist in the database.

3514 E3514 Cmd Rej: Maximum of 10 unique CCNCs allowed

The value specified for the *ccnc* parameter cannot already exist in the database unless the *mccmnc=none* parameter is specified.

3515 E3515 Cmd Rej: CCNC already exists

The *srfaddr*, *srfnai*, and *srfnp* parameters must be specified together in the command.

3992 E3992 Cmd Rej: SRFADDR, SRFNAI & SRFNP parameters must be entered together

The *msrnnai* and *msrnnp* parameters must be specified together in the command.

3995 E3995 Cmd Rej: MSRNNAI and MSRNNP parameters must be entered together

The value specified for the *ccnc* parameter must already exist in the database if the *mccmnc=none* parameter is specified.

3501 E3501 Cmd Rej: CCNC does not exist

A maximum of 10 entries can be defined in the multiple country code list (in addition to the STP options *defcc* value).

3632 E3632 Cmd Rej: MULTCC list is full

A multiple country code cannot be entered when the STP options *defcc* value is none. A *defcc* value must first be defined before the first multiple country code can be entered. See the *chg-stpopts* command.

3687 E3687 Cmd Rej: Cannot enter MULTCC if STP Options DefCC is NONE

The value specified for the *nmultcc* parameter cannot already exist in the multiple country code list.

3527 E3527 Cmd Rej: NMULTCC entry already exists in the GSM Options MULTCC list

If the `multcc` and `nmultcc` parameters are specified to change the `multcc` value to the `nmultcc` value, then the `multcc` value must already exist in the multiple country code list.

3633 E3633 Cmd Rej: MULTCC entry does not exist

The specified `multcc` and `nmultcc` values cannot already be defined as the STP options `defcc` parameter value.

3630 E3630 Cmd Rej: Entry is already defined as the STP Options DefCC

The STP Options table is corrupt or cannot be found.

2852 E2852 Cmd Rej: Failed reading STP Options table

The IGM feature must be enabled before the `is412gsm`, `gsm2is41`, or `migrpfx` parameter can be specified.

3336 E3336 Cmd Rej: IGM must be enabled

The G-Port, IGM, MO SMS ASD, MO SMS B-Party Routing, MO SMS GRN, MO SMS IS41-to-GSM Migration, MO-based GSM SMS NP, or Prepaid SMS Intercept Ph1 feature must be enabled, or the G-Flex, EIR, or V-Flex feature must be turned on before this command can be entered.

4191 E4191 Cmd Rej: GFLEX/EIR/VFLEX must be ON or GPORT/IGM/MO SMS feat enabled

The G-Port or IGM feature must be enabled or the V-Flex feature must be turned on before the `multcc` and `nmultcc` parameters can be specified.

4143 E4143 Cmd Rej: GPORT/IGM must be enabled or VFLEX must be ON

The G-Flex MAP Layer Routing feature must be enabled and turned on before the `gflexmaplayerrrtg`, `maplyrrtg`, or `maplyrrtgoff` parameter can be specified.

4164 E4164 Cmd Rej: G-Flex MAP Layer Routing feature must be ON

The G-Flex or G-Port feature must be turned on or the MT-Based GSM SMS NP or IGM feature must be enabled before the `defm` or `cc` parameter can be specified.

4771 E4771 Cmd Rej: GFLEX/GPORT must be ON or IGM/MT-Based GSM SMS NP enabled

If the MT-Based GSM SMS NP feature is turned on, then the `defmcc=none` parameter cannot be specified.

4718 E4718 Cmd Rej: DefMCC can't be NONE if MT-Based GSM SMS NP feature is ON

The `nmultcc` and `multcc` parameters must be specified together in the command.

2258 E2258 Cmd Rej: NMULTCC and MULTCC parameters must be entered together

If the `multcc` parameter is specified to enter a new value in the multiple country list, then the specified value cannot already exist in the list.

3493 E3493 Cmd Rej: MULTCC entry already exists in the GSM Options MULTCC list

The IGM or MO SMS IS41-to-GSM Migration feature must be enabled before the `is412gsm` parameter can be specified.

4845 E4845 Cmd Rej: IGM or MO SMS IS41-to-GSM Migr must be enabled

The G-Port feature must be enabled before the `sridnotfound` parameter can be specified.

4371 E4371 Cmd Rej: GPORT must be enabled

The G-Port feature must be turned on before the `migrpfx=multiple` parameter can be specified.

3991 E3991 Cmd Rej: GPORT feature must be ON

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

The G-Port, IGM, MO SMS ASD, MO SMS B-Party Routing, MO SMS GRN, MO-based GSM SMS NP, or Prepaid SMS Intercept Ph1 feature must be enabled before the `defmapvr` parameter can be specified.

4756 E4756 Cmd Rej: GPORT/IGM/MO SMS feature must be enabled

The G-Port SRI Query for Prepaid feature must be enabled before the `dfltrn` parameter can be specified.

3216 E3216 Cmd Rej: G-Port SRI Query for Prepaid feature is not enabled

The S-Port and G-Port SRI Query for Prepaid features must be enabled before the `sporttype` parameter can be specified.

4928 E4928 Cmd Rej: S-Port and SRI Query for Prepaid features must be enabled.

The G-Flex feature must be turned on or the G-Port or IGM feature must be enabled before the `ccnc` and `mccmnc` parameters can be specified.

3631 E3631 Cmd Rej: Incompatible Feature/Option status

The G-Flex feature must be turned on or the G-Port or IGM feature must be enabled before the `ccnc` and `mccmnc` parameters can be specified.

3631 E3631 Cmd Rej: Incompatible Feature/Option status

The MNP Circular Route Prevention feature must be turned on before the `crptt` parameter can be specified.

4775 E4775 Cmd Rej: MNP CRP Feature must be ON

The `eirimsichk` parameter and the `on` or `off` parameter cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The same value cannot be specified for the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

The same MAP operation cannot be specified by the `maplyrrtgon` and `maplyrrtgoft` parameters in the same command.

5429 E5429 Cmd Rej: Same option can't be spec in MAPLYRRTGON and MAPLYRRTGOFF

If the `all` MAP operation is specified for the `maplyrrtgon` or `maplyrrtgoft` parameter, then no other operation can be specified for these parameters in the same command.

5430 E5430 Cmd Rej: If MAPLYRRTGON/MAPLYRRTGOFF is ALL no option can be spec

If the `maplyrrtgon=all` parameter is specified, then the `maplyrrtgoff` parameter cannot be specified in the same command.

5431 E5431 Cmd Rej: If MAPLYRRTGON is ALL, MAPLYRRTGOFF cannot be specified

If the `maplyrrtgoff=all` parameter is specified, then the `maplyrrtgon` parameter cannot be specified in the same command.

5432 E5432 Cmd Rej: If MAPLYRRTGOFF is ALL, MAPLYRRTGON cannot be specified

The GSM MAP SRI Redirect feature must be enabled before the `srirdctent` parameter can be set to *grn* or *sp*.

4320 E4320 Cmd Rej: SRI Redirect Feature must be enabled

Notes

The `sriddn` parameter can be used with the G-Port feature only or with the G-Port feature and the MNP Circular Route Prevention feature. Refer to *G-Port User's Guide* for more information.

If the IGM feature was turned on prior to upgrade to Release 36.0, then the migration prefix is hard-coded to a value of *multiple*. After upgrade, if the `chg-gsmopts:migrpfx=single` command is used to change the migration prefix to *single*, then the G-Port feature must be turned on before the migration prefix can be changed back to *multiple* (`chg-gsmopts:migrpfx=multiple`).

In 39.2.4, the `gflexmaplayerrrtg` values changed from *off/on* to *none/imsi/msisdn/all*. The value *off* was changed to *none*. The value *on* was changed to *imsi*. The message processing did not change, just the text description that is displayed to the user. The numeric values did not change, so no upgrade is necessary.

SRIRDCTENT is a system-wide option that can be set to use either the Intra Network Number Portability feature or the GSM MAP SRI Redirect feature.

on/off options

- *eirimsichk* —Specifies the use of the Equipment Identity Register (EIR) IMSI Check status. This option is not valid for IMEI ranges. This option has a default of OFF.
- *encodecug* —Specifies whether the Closed User Group (CUG) Checkinfo from the SRI message is included in the SRI Ack message. This option has a default of OFF.
- *enodenps* — Specifies whether the Number Portability Status Indicator (NPSI) is included in SRI Ack messages when the portability type (PT) has a value of 0, 1, 2 or 36. This option has a default of ON.
- *srismgtrtg* —Specifies whether the SRI_SM routing feature is on. This option has a default of OFF.
- *encdnpsptnone* —Specifies whether the NPSI is included in SRI Ack messages when the PT has a value of *none* (255). This option has a default of OFF.

- *encdnpsdnotfound* —Specifies whether the NPSI is included in SRI Ack messages when the DN is not found. This option has a default of OFF.
- *eirimsiscrn* ---- Specifies the use of Equipment Identity Register (EIR) IMSI screening status. This option specifies whether the IMSI Screening shall be done before the IMEI check. This option has a default of OFF.
- *eirlogwl* ---- Specifies the use of Equipment Identity Register (EIR) white list logging status. This option specifies whether the white list logging for EIR shall be on. This option has a default of OFF.
- *eirdfltimsiscrn* ---- Specifies the use of Equipment Identity Register (EIR) default IMSI screening status. This option specifies whether the default IMSI screening shall be on. This option has a default of OFF.

MAP Operations Supported by the *maplyrrtgon* and *maplyrrtgo* Parameters

The *maplyrrtgon* and *maplyrrtgo* parameters are used to turn G-Flex MLR on and off, respectively, for the following MAP operations:

- *regss* : *registerSS* —Register Supplementary Service
- *actss* : *activateSS* —Activate Supplementary Service
- *dactss* : *deactivateSS* —Deactivate Supplementary Service
- *intss* : *interrogateSS* —Interrogate Supplementary Service
- *authfailrpt* : *authenticationFailureReport* —Authentication Failure Report
- *rstdata* : *restoreData* —Restore Data
- *procunstrqt* : *processUnstructuredSS-Request* —Process Unstructured SS Request
- *rdyform* : *readyForSM* —Ready For Short Message
- *purgmobss* : *purgeMS* —Purge Mobile Subscriber
- *sriloc* : *sendRoutingInfoForLCS* —Send Routing Information for Location Service

Output

```
chg-gsmopts:msrnnai=1:msrnp=1:msrndig=ccrngrndn:defmapvr=2
```

```
tekelecstp 09-05-05 12:28:07 EST EAGLE 41.1.0
CHG-GSMOPTS: MASP A - COMPLTD
;
```

```
chg-gsmopts:srirdctent=grn
```

```
tekelecstp 14-05-30 16:39:41 EST EAGLE 46.1.0
CHG-GSMOPTS: MASP A - COMPLTD
;
```

Related Topics

- [chg-gsmsmsopts](#)
- [rtv-gsmopts](#)
- [rtv-gsmsmsopts](#)

4.1.65 chg-gsms-opcode

Use this command to change the attributes of the GSM (Global System for Mobile Telecommunication) MAP (mobile application part) screening operation codes. The command allows you to change the default screening action and the operation-code name for a specific operation code.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

opname (mandatory)

Operation code name. The user-defined name for the operation code.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

force (optional)

Check Mated Application Override. This parameter is used to complete command execution if the *npc/npca/npci/npcn/npcn24* and *nssn* parameter combination specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).

Range:

yes

no

Default:

no

ndf1tact (optional)

New default screening action.

Range:

pass

Route the message as normal to the destination; a UIM will be issued. This is intended to be a test mode and is recommended when setting up GSM Map Screening during the initial phase to assure that no MSUs will be inadvertently thrown away.

discard

Do not route the MSU. The MSU is discarded (thrown away) and an appropriate UIM is issued.

atierr

Do not route the MSU. An ATI (Any Time Interrogation) reject message is generated to the originator. This value is valid only for ATI MAP operation codes.

route

Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

forward

Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

duplicate

Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

dupdisc

Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is discarded.

Default:

No change to the current value

nmapset (optional)

New MAP set ID.

Range:

1 - 36000, *dflt*
dflt —Default MAP set

nopname (optional)

New operation code name.

Range:

ayyyyyyy
1 alphabetic character followed by up to 7 alphanumeric characters

Default:

No change to current value

npc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

npca

Range:

000-255
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001–005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.

The point code `000-000-000` is not a valid point code.

npc/npca/npci/npcn/npcn24 (optional)

New point code. The `npc/npca/npci /npcn/npcn24` and `nssn` parameters are used when the default screening action (`df1tact`) is *forward*, *duplicate*, or *dupdisc* (duplicate and discard). These parameters allow the user to change the defined node to which the input message will be routed.

npci (optional)

New ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*

zone—0-7

area—000-255

id—0-7

The point code `0-000-0` is not a valid point code.

npcn (optional)

New ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

npcn24 (optional)

New 24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

nri (optional)

New routing indicator. This parameter specifies whether a subsequent global title translation is required.

Range:

gt

ssn

nssn (optional)

New Subsystem Number.

Range:

2 - 255

Default:

No change to the existing value

ntt (optional)

New translation type. This parameter specifies the value that the CdPA TT is set to as the result of Enhanced GSM Map Screening.

Range:

0 - 255

Default:

No change to the existing value

Example

```
chg-gsms-opcode:opname=ati:ndfltact=atierr
chg-gsms-
opcode:opname=ati:ndfltact=forward:npci=1-1-1:nssn=5:force=yes
chg-gsms-opcode:opname=xyz:npc=9-9-9:nssn=3
chg-gsms-opcode:opname=test2:npci=s-1-1-1
chg-gsms-
opcode:opname=test2:ndfltact=dupdisc:npci=1-1-1:nssn=5:nmapset=8
chg-gsms-
opcode:opname=ts4:ndfltact=forward:npc=1-1-2:nssn=5:nmapset=dflt
chg-gsms-opcode:opname=test:nri=ssn
chg-gsms-opcode:opname=test4:ntt=12
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

If the `ndfltact` parameter is specified, one of the following values must be specified: *pass*, *discard*, *atierr*, *route*, *forward*, *duplicate*, or *dupdisc*.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

If the `ndfltact` parameter is specified and its value is *forward*, *duplicate*, or *dupdisc*, the `npc/npca/npci /npcn/npcn24` and `nssn` parameters must be specified.

3091 E3091 Cmd Rej: PC/SSN must be given with Action FORWARD, DUPLICATE, DUPDISC

The word *none* cannot be specified as a value for the `opname` or `nopname` parameter.

3040 E3040 Cmd Rej: <string> cannot be used in this command

If the `npc/npca/npcinpcn/npcn24` and `nssn` parameters are specified with the `ndfltact` parameter, the `ndflact` parameter must have a value of *forward*, *duplicate*, or *dupdisc*.

2781 E2781 Cmd Rej: NDFLTACT parameter must be FORWARD, DUPLICATE, or DUPDISC

The `npc/npca/npci/npcn/npcn24` and `nssn` parameters must be specified before the `force` parameter can be specified.

3092 E3092 Cmd Rej: PC/SSN must be specified if FORCE is specified

The value specified for the `opname` parameter must already exist in the GSM Map Op-Code table.

3892 E3892 Cmd Rej: OPNAME does not exist in the database

The GSM Map Screening feature must be turned on before this command can be entered.

3883 E3883 Cmd Rej: GSM Map Screening feature must be ON

The EGMS feature must be enabled and turned on before the `npc` or `npca` parameters can be specified.

4285 E4285 Cmd Rej: Enhanced GSM Map Screening feature must be ON

The `ndfltact=atierr` parameter cannot be specified unless the value of the operation code referenced by the `opcode` parameter is 71 . The *atierr* option is valid only for ATI MAP operation codes, and the `opcode=71` parameter signifies an ATI MAP operation code.

3904 E3904 Cmd Rej: DFLTACT can not be ATIERR unless OPCODE=71

The value specified for the `npc/npca/npci/npcn /npcn24` parameter must be a full point code.

3090 E3090 Cmd Rej: Full Point Code must be specified

The GSM Map Op-Code table must be accessible.

3889 E3889 Cmd Rej: Failure reading the GSM OPCODE Table

The Route table must be accessible.

2648 E2648 Cmd Rej: Failed reading the route table

If the `npc/npca/npci/npcn/npcn24` parameter and the `nssn` parameter are specified, and the `force` parameter is not specified as *yes*, the PC-SSN must be populated in the SCCP Application entity set (Remote Point Code / Mated Application Table).

2450 E2450 Cmd Rej: PC/SSN does not exist as a mated application

If specified, the `npc/npca/npci/npcn/npcn24` parameter value must exist as a destination in the Ordered Route entity set or reside in a cluster (ANSI only) that exists as a destination in the Ordered Route entity set (for global title routing).

2417 E2417 Cmd Rej: Point code does not exist in the routing table

If the `opname` parameter is specified, the value must be alphanumeric.

2040 E2040 Cmd Rej: String pattern nonconformance, alphanumeric - <parm>

The `opname` parameter value and the `nopname` parameter value must be no more than 8 characters long.

2039 E2039 Cmd Rej: <parm_desc> too long, min <min>, max <max> - <parm>

The `nmapset` parameter must be specified if the value of the `ndfltact` parameter is *forward*, *duplicate*, or *dupdisc*.

4530 E4530 Cmd Rej: MAPSET must be specified if action is FORWARD/DUP/DUPDISC

If the `ndfltact` parameter is specified with the `nmapset`, `nri`, `ntt`, `pc`, or `ssn` parameter, then the `ndfltact` parameter must have a value of *forward*, *duplicate*, or *dupdisc*.

2781 E2781 Cmd Rej: NDFLTACT parameter must be FORWARD, DUPLICATE, or DUPDISC

The `nmapset` parameter must be specified before the `force` parameter can be specified.

4531 E4531 Cmd Rej: NMAPSET must be specified if FORCE is specified

The Flexible GTT Load Sharing feature must be enabled before the `nmapset` parameter can be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The specified new MAP set must exist.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

If the `nmapset=dflt` parameter is not specified, or the `nmapset=dflt` parameter is specified, but the `force=yes` parameter is not specified, then the new PC and new SSN must exist in the new MAP set.

4528 E4528 Cmd Rej: PC/SSN doesn't exist in MAPSET

If the `nmapset`, `nri`, or `ntt` parameter is specified, and the `ndfltact` parameter is not specified, then the `dfltact` parameter must have a previously provisioned value of *forward*, *duplicate*, or *dupdisc*.

3082 E3082 Cmd Rej: NDFLTACT must be specified (FORWARD, DUPLICATE, or DUPDISC)

The MAP table must be accessible.

4524 E4524 Cmd Rej: Failed Reading MAP table

If the value of the `ndfltact` parameter is *forward*, *duplicate*, or *dupdisc*, then the value specified for the `npc/npca/npci/npcn/npcn24` parameter cannot be associated with a proxy point code.

4713 E4713 Cmd Rej: PRX using DPC not allowed in GSM tables

If the `nri=ssn` parameter is specified, then the `ssn=none` parameter cannot be specified.

4880 E4880 Cmd Rej: SSN must not be NONE if RI is SSN

If the Flexible GTT Load Sharing feature is enabled, and the new or previously provisioned subsystem number has a value of *none*, then the new or previously provisioned MAP set and point code combination must already exist in the MAP table.

4543 E4543 Cmd Rej: PC/MAPSET does not exist in MAP table

If the Flexible GTT Load Sharing feature is not enabled, and the new or previously provisioned subsystem number has a value of *none* (the `nssn=none` parameter is specified in this command, or the `ssn=none` parameter was specified in the `ent-gsms-opcode` command), then the point code must already exist in the MAP table.

2419 E2419 Cmd Rej: Point code does not exist in the remote point code table

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
chg-gsms-opcode:opname=test4:ntt=12
```

```
tekelecstp 08-08-20 19:13:01 EST EAGLE 39.2.0
CHG-GSM-OPCODE: MASP A - COMPLTD
;
```

Related Topics

- [dlt-gsms-opcode](#)
- [ent-gsms-opcode](#)
- [rtrv-gsms-opcode](#)

4.1.66 chg-gsmsmsopts

Use this command to enter GSM SMS system options in the database. This command updates the GSMSMSOPTS table.

Parameters

bpartygttsn (optional)

MO SMS B-Party Routing GTT Set name. The GTT set where Global Title Translation lookup on B-Party digits is performed.

Range:

ayyyyyyy

1 alphabetic character followed by up to 8 alphanumeric characters.

Default:
No change to the current value

System Default:
none

defis41smsc (optional)

Default IS41 short message service center. The default SMSC where an SRI_SM message received for an own network IS41 subscriber is relayed.

Range:
1-15 digits, *none*

Default:
No change to the current value

System Default:
none

defrn (optional)

Default routing number. A default routing number used for own-network subscribers.

Range:
1-15 digits, *none*
Valid digits are 0-9, a-f, A-F

Default:
No change to the current value

System Default:
none

igmsmsrelay (optional)

IGM - based SMS relay. This parameter specifies whether IGM relays an SRI_SM message that is received for an own network IS41 subscriber to a default SMSC or sends an SRI_SM-NACK error message.

Range:

- yes**
IGM relays the message to the default SMSC
- no**
IGM sends an SRI_SM-NACK

Default:
No change to the current value

System Default:
no

is41smscgtsn (optional)

IS41 SMSC GTT Set name. The GTT set where Global Title Translation lookup on default IS41 SMSC digits is performed.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

Default:

No change to the current value

mosmsaclen (optional)

The number of the digits that are taken from the MO SMS CgPA and used as the Area Code in the MO SMS CdPA.

Range:

0 - 8

Default:

No change to the current value

System Default:

0

mosmsdigmat (optional)

MO-based SMS Home SMSC match. The method used by the Portability Check for MO SMS or the MO-based GSM SMS NP feature to find a Home SMSC match.

Range:

exact

The system searches for an exact match of digits in the HomeSMSC Table.

bestfit

The system searches for a match on the leading digits of an incoming message with any provisioned entry in HomeSMSC table if an exact match is not found.

Default:

No change to the current value

System Default:

exact

mosmsfwd (optional)

MO-based SMS forward. This parameter specifies whether the value of the SCCP CDPA in the MO-based SMS message is modified to the GTA value that is specified by the `mosmsgta` parameter.

Range:

yes

The SCCP CDPA value is modified.

no

The SCCP CDPA value is not modified.

This parameter must be specified before the `mosmsfwd=yes` parameter can be specified.

Default:

No change to the current value

System Default:*no***mosmsgta (optional)**

MO-based SMS GTA. The GTA value that is used to replace the SCCP CDPA value in the MO-based SMS message.

Range:5-21 digits, *none***Default:**

No change to the current value

System Default:*none***mosmsgttdig (optional)**

MO SMS B-Party Routing GTT digits. The digits used for Global Title Translation.

Range:***sccpcdpa***

The SCCP CdPA is used for GTT

mapbparty

The MAP B-Party number is used for GTT

Default:

No change to the current value

System Default:*sccpcdpa***mosmsnai (optional)**

MO-based SMS NAI. The number conditioning performed on the SMS message destination address before lookup in the number portability database is performed.

Range:***intl***

Number is treated as INTL (1) for number conditioning

nai

The NAI from the SMS message is used to perform number conditioning

nat

Number is treated as NATL (2) for number conditioning

unknown

Number is treated as UNKNOWN (0) for number conditioning

A value of *nai* must be specified before the *intl*, *nat1*, *nai1*, *nai2*, *nai3*, and *unkn* parameters in the *chg-npp-serv* command can be changed to non-default values for the MOSMSGCDPN service.

Default:

No change to the current value

System Default:

intl

mosmssa (optional)

MO-based SMS sub-address. This parameter specifies whether the sub-address is searched in the SMS called party (destination address).

Range:

yes

Sub-address is searched in the SMS called party.

no

Sub-address is not searched in the SMS called party.

Default:

No change to the current value

System Default:

no

mosmstcapseg (optional)

MO-based SMS TCAP Segmentation for GSM. This parameter specifies whether Mobile-Originated segmented TCAP messages are supported.

Range:

on

Segmented messages are supported.

off

Segmented messages are not supported.

Default:

No change to the current value

System Default:

off

mosmstype (optional)

MO-based SMS type. The value of the entity type that indicates that a successful lookup occurred in the number portability database.

Range:

sp

signaling point

rn

routing number

sprn

Lookup is successful if the value of the entity type is *sp* or *rn*.

all

Lookup is successful if the value of the entity type is *sp* or *rn*, or if no entity type is found.

Default:

No change to the current value

System Default:

sprn

mtmmsackn (optional)

MT-Based MMS acknowledgement. The message that is generated in response to a successful number portability database lookup for an SRI_SM message from a Home MMSC.

Range:***ack***

SRI_SM_ACK message

nack

SRI_SM_NACK (Return Error) message

Default:

No change to the current value

System Default:

ack

mtmmsentylen (optional)

MT-Based MMS Entity length. The maximum number of digits used from the entity value of a returned RN, SP, or SRFIMSI entity for Multimedia Service (MMS) processing.

Range:

1 - 15, none

none —all digits from the entity value are used

Default:

No change to the current value

System Default:

none

mtmmsgta (optional)

MT-Based MMS GTA. The GTA that is compared with the SCCP CgPA GTA of an SRI_SM message to determine whether the originator of the message is a Home MMSC.

Range:

5-21 digits, *none*

Valid digits are *0-9, a-f, A-F*

none —Deletes the current value of the `mtmmsgta` parameter.

Default:

No change to the current value

System Default:

none

mtmmslen (optional)

MT-Based MMS Length. The maximum number of digits used in the returned IMSI and/or NNI fields for MMS processing.

Range:

1 - 24, none

none —all digits from the fields are used

Default:

No change to the current value

System Default:

none

mtmms type (optional)

MT-Based MMS type. The value of the entity type that indicates that a successful lookup occurred in the number portability database.

Range:

sp

signaling point

rn

routing number

sprn

sporn

all

sp, rn, or DN with no entity

nonsp

rn or DN with no entity

Default:

No change to the current value

System Default:

rn

mtsmsackn (optional)

MT-Based SMS acknowledgement. The message generated in response to a successful number portability database lookup for an SRI_SM message from a Home SMSC.

Range:

ack

SRI_SM_ACK message

nack

SRI_SM_NACK (Return Error) message

Default:

No change to the current value

System Default:*ack***mtsmschksrc (optional)**

MT-Based SMS check source. This parameter specifies whether the SCCP CgPA GTA of a SRI_SM message is validated to determine if the source of the message is a Home SMSC.

Range:**yes**

The SCCP CgPA GTA of an SRI_SM message is validated

no

The SCCP CgPA GTA of an SRI_SM message is not validated

If the `mtsmschksrc=yes` parameter is specified, and if the incoming SRI_SM message has SCCP CgPA GTA, then the SCCP CgPA GTA must be found in the Home SMSC list for the source of the message to be considered a Home SMSC. If the message is not found in the Home SMSC list, then the MT-Based GSM SMS NP feature does not process the message.

If the `mtsmschksrc=no` parameter is specified, or if SCCP CgPA GTA does not exist in the incoming message, then the source of the message is considered to be a Home SMSC, and the MT-Based GSM SMS NP feature considers the message for processing.

Default:

No change to the current value

System Default:*no***mtsmsdltr (optional)**

MT-Based SMS delimiter. This parameter specifies whether to insert a delimiter digit string before or after the routing number (RN) if the RN is used in the outbound digit format.

 **Note:**

The delimiter string that is inserted is determined by the `mtsmsdltrv` parameter.

Range:**no**

A delimiter digit string is not inserted

prern

A delimiter digit string is inserted before the RN

postrn

A delimiter digit string is inserted after the RN

Default:

No change to the current value

System Default:*no*

mtsmsdltrv (optional)

MT-Based SMS delimiter value. The delimiter digit string that is inserted before or after the RN when the RN is used in the outbound digit format.

Range:

1-5 digits, *none*
Valid digits are 0-9, a-f, A-F

Default:

No change to the current value

System Default:

none

mtsmsimsi (optional)

MT-Based SMS IMSI. The required format of digits that are encoded in the "IMSI" parameter of the SRI_SM response message.

Range:***rn***

routing number

rndn

routing number and the international dialed or directory number

ccrndn

country code, routing number, and national directory or dialed number

dn

directory or dialed number

srfimsi

IMSI is encoded as the "SRFIMSI" parameter from the number portability database

mccrndn

mobile country code, routing number, and directory or dialed number

Default:

No change to the current value

System Default:

mccrndn

mtsmsnakerr (optional)

MT-Based SMS negative acknowledgement error. The TCAP error choice code used in the NACK response message generated for SRI_SM messages.

Range:

0 - 255

Default:

No change to the current value

System Default:

1

mtsmsnni (optional)

MT-Based SMS network node indicator. The required format of digits that are encoded in the "Network Node Number" parameter of the SRI_SM response message.

Range:***rn***

routing number

rndn

routing number and the international dialed or directory number

ccrndn

country code, routing number, and national directory or dialed number

dn

Directory or Dialed Number

sfimsi

IMSI is encoded as the "SRFIMSI" parameter from the number portability database

mccrndn

mobile country code, routing number, and directory or dialed number

none

The Network Node Number parameter is not encoded in the response message

Default:

No change to the current value

System Default:

rn

mtsmstype (optional)

MT-Based SMS type. The value of the entity type that indicates that a successful lookup occurred in the number portability database for messages that are modified by the MT-Based GSM SMS NP feature.

Range:***sp***

signaling point

rn

routing number

sprn

sporn

all

sp,rn, or DN with no entity

nonsp

rn or DN with no entity

Default:

No change to the current value

System Default:*rn***spfill (optional)**

This parameter specifies whether the Numbering Plan Processor (NPP) can populate SP and RN entities for own network subscribers at the same time.

Range:***off***

Do not populate the RN and SP entities at the same time

on

Allow population of the RN and SP entities at the same time

Default:

No change to the current value

System Default:*off***sporttype (optional)**

Service Portability type. This parameter specifies whether Service Portability is performed for the associated feature.

The S-Port feature must be enabled before this parameter can be specified. The S-Port feature must be turned on before any change to the parameter will impact the associated feature.

If Service Portability is performed, then the Service Portability prefix (RTDB 'GRN'entity id) is applied.

Range:***gsm***

apply Service Portability prefix for own-network GSM subscribers

is41

apply Service Portability prefix for own-network IS41 subscribers

all

apply Service Portability prefix for all own-network (IS41 and GSM) subscribers

none

Service Portability is not performed

Default:

No change to the current value

System Default:*none***srismdn (optional)**

SRI_SM DN location. This parameter specifies whether the MT-Based GSM SMS NP feature selects the MSISDN from the TCAP or SCCP CdPA section of the SRI_SM message.

Range:**sccp**

select the MSISDN from the SCCP CDPA section

tcap

select the MSISDN from the TCAP section

Default:

sccp

Example

```
chg-gsmsmsopts:mosmsnai=intl:mosmstype=sp:mosmssa=no
chg-gsmsmsopts:mosmsfwd=no:mosmsgta=987654321
chg-gsmsmsopts:srismdn=tcap
chg-
gsmsmsopts:mtsmsackn=nack:mtsmsdltr=no:mtsmsdltrv=125:mtsmschksrc=no
chg-
gsmsmsopts:mtmsgta=51111:mtmstype=sp:mtmsackn=nack:mtmsentyn=7
:mtmslen=10
chg-gsmsmsopts:mosmsdigmat=bestfit
chg-gsmsmsopts:bpartygttsn=setint001:mosmsgttdig=mapbparty
chg-gsmsmsopts:mosmsaclen=4
chg-gsmsmsopts:mosmstcapseg=on
```

Dependencies

At least one parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The Hex Digit Support for GTT feature must be enabled before a hexadecimal value for the mosmsgta parameter can be specified.

3006 E3006 Cmd Rej: Hex Digit Support for GTT feature must be ON

The mosmsgta parameter must be specified before the mosmsfwd=yes parameter can be specified.

4761 E4761 Cmd Rej: MOSMSGTA must be set

The mtsmsdltrv parameter must be provisioned before a value of prern or postrn can be specified for the mtsmsdltr parameter.

4720 E4720 Cmd Rej: MTSMSDLTRV must not be NONE in database

The value specified for the bpartygttsn or is41smscgtsn parameter must match the name of an existing GTT Set.

3561 E3561 Cmd Rej: GTT Set specified by GTT Set Name/index does not exist

The mosmsgttdig=sccpcdpa parameter must be specified before the bpartygttsn=none parameter can be specified.

4562 E4562 Cmd Rej: MOSMSGTTDIG option must be SCCPCdPA

The GTT set specified for the `bpartygttsn` or `is41smcgttsn` parameter must have `settype=cdgta` (see the `ent-gttset` command).

4997 E4997 Cmd Rej: SETTYPE of specified GTTSET must be CdGTA

If the `bpartygttsn=none` parameter is specified, then the `mosmsgttldig=mapbparty` parameter cannot be specified.

4998 E4998 Cmd Rej: BPARTYGTTSN must not be NONE

The GTT Set table is corrupt or cannot be found.

3544 E3544 Cmd Rej: Failed reading GTT Set Table

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

The MO-based GSM SMS NP, MO SMS ASD, or MO SMS GRN feature must be enabled before the `mosmsfwd` or `mosmsgta` parameter can be specified.

4446 E4446 Cmd Rej: MO-based GSM SMS NP or MO SMS ASD/GRN must be enabled

The Portability Check for MO SMS feature or the MO-based GSM SMS NP feature must be turned on before the `mosmsdigmat` or `mosmstcapseg` parameter can be specified.

3631 E3631 Cmd Rej: Incompatible Feature/Option status

The MT-Based GSM SMS NP feature must be enabled before the `mtsmsimsi`, `mtsmsnni`, `mtsmstype`, `mtsmsackn`, `mtsmsdltr`, `mtsmsdltrv`, `mtsmsnakerr`, `mtsmschksrc`, or `srismdn` parameter can be specified.

4701 E4701 Cmd Rej: MT-Based GSM SMS NP must be enabled

The MT-Based GSM MMS NP feature must be enabled before the `mtmmsgta`, `mtmmsackn`, `mtmmsentlen`, or `mtmmslen` parameter can be specified.

4655 E4655 Cmd Rej: MT-Based GSM MMS NP must be enabled

The MO SMS B-Party Routing feature must be enabled before the `bpartygttsn` or `mosmsgttldig` parameter can be specified.

4996 E4996 Cmd Rej: MO SMS B-Party Routing feature must be Enabled

The MO-based GSM SMS NP feature must be enabled before the `mosmstype`, `defrn`, or `spfill` parameter can be specified.

5116 E5116 Cmd Rej: MO-based GSM SMS NP must be enabled

The MO SMS ASD, MO SMS GRN, MO-based GSM SMS NP, or Prepaid SMS Intercept Phase 1 feature must be enabled before the `mosmsaclen`, `mosmsnai`, or `mosmssa` parameter can be specified.

5118 E5118 Cmd Rej: MO SMS GSM NP, PPSMS or MO SMS ASD/GRN must be enabled

If a digit string value has already been specified for the `mosmsgta` or `mtsmsdltrv` parameter, then a value of *none* cannot be specified subsequently for that parameter.

4793 E4793 Cmd Rej: The parameter value can't be changed back to NONE

The IS41 GSM Migration feature must be turned on before the `igmsmsrelay`, `is41smscgttsn`, or `defis41smc` parameter can be specified.

4929 E4929 Cmd Rej: IS41 GSM Migration feature must be turned ON.

If the `defis41smc=none` parameter is specified, then the `igmsmsrelay=yes` parameter cannot be specified.

4930 E4930 Cmd Rej: IGMSMSRELAY cannot be yes, if DEFIS41SMSC is none

If the `defis41smc` parameter has a value other than *none*, then the `is41smscgttsn=none` parameter cannot be specified.

5081 E5081 Cmd Rej: IS41SMSCGTTSN can not be none, if DEFIS41SMSC is not none.

The S-Port feature must be enabled before the `sporttype` parameter can be specified.

4926 E4926 Cmd Rej: Service Portability feature must be enabled

The EGTT feature must be turned on before the `is41smscgttsn` parameter can be specified.

3557 E3557 Cmd Rej: EGTT must be ON

Notes

The `mosmstcapseg` parameter is turned off automatically if the Portability Check for MO SMS feature is turned off or the temporary FAK for the feature expires, and the MO-based GSM SMS NP feature is not enabled.

Output

```
chg-gsmmsmsopts:is41smscgttsn=set1:defis41smc=1234:igmsmsrelay=yes
```

```
tekelecstp 09-06-08 18:52:54 EST EAGLE 41.1.0
CHG-GSMMSMLOPTS: MASP A - COMPLTD
;
```

Related Topics

- [chg-gsmopts](#)
- [rtrv-gsmopts](#)
- [rtrv-gsmmsmsopts](#)

4.1.67 chg-gta

Use this command to change the global title address information (GTA) for applicable global title selectors required to specify a global title entry.

This command changes the routing objects for messages requiring global title translations. The specified point code, subsystem number, MRN set ID, and routing indicator overwrite the existing data values.

When the Intermediate GTT Load Sharing feature and the Flexible GTT Load Sharing feature are both on, multiple relationships can be defined among a set of destination point codes in the existing MRN table. The relationship used in a particular translation is based on the GTA digits used for translation. The MRN Set ID and the post-translation PC create a key that is used to perform a lookup in the MRN table. This lookup results in a set of alternate PCs from which a PC is selected, based on relative cost, to route the MSU in most cost-effective way.

 **Note:**

If the EGTT feature is turned on, then the GTT Selector (`ent/chg/dlt/rtrvgtttsel`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrvgta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. It is not recommended to run `ent/dlt/rtrv-tt & ent/chg/dlt/rtrv-gtt` commands as it may cause the advance GTA fields of GTT entry to be reset to the default values.

Parameters

 **Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

gttsn (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 following alphanumeric characters

acn (optional)

Application context name. The ITU TCAP ACN field in the incoming MSU.

Range:

*0 - 255, *, none*

The ACN supports up to 7 subfields separated by a dash (e.g., *1-202-33-104-54-26-007*).

* —any valid value in the ITU TCAP ACN field in the incoming MSU

none —there is no ITU TCAP ACN field in the incoming MSU

Default:

No change to the current value

actsn (optional)

GTT Action Set Name.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

none -Action set name does not point to any action set

ccgt (optional)

Cancel called global title indicator.

Range:

yes

no

Default:

No change to the current value

cdselid (optional)

CdPA selector ID.

Range:

0 - 65534, none

none —deletes the current value of the *CDSELID* field

Default:

No change to the current value

cdssn (optional)

Starting CdPA subsystem number.

Range:

0 - 255

cgcnvsn (optional)

Calling party conversion set name.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters.

none —deletes the current value of the parameter

cggtmod (optional)

Calling party GT modification indicator. This parameter specifies whether calling party global title modification is required.

Range:

yes

no

Default:

no

cgpc (optional)

ANSI CgPA point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:*cgpca***Range:***0-255, **

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni=001–005*.

When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006–255*.

When *chg-sid:pctype=ansi* is specified, *ni-*-** is valid if *ni =006–255*.

The point code *000-000-000* is not a valid point code.

cgpcaction (optional)

This parameter is used to provide the required abilities, indicating what any particular translation needs to do with CgPA PC.

Range:*dflt*

protocol will be allowed to perform all the required processing/conversion with CGPC.

ignore

CGPC will be left as it was in incoming MSU.

remove

CGPC will be removed from outgoing MSU.

Default:*dflt***cgpci (optional)**

ITU international CgPA point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:*s-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

cgpcn (optional)

ITU national CgPA point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield

indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

cgpcn16 (optional)

16-bit ITU national CgPA point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna--000---15

mna---000---31

cgpcn24 (optional)

24-bit ITU national CgPA point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

cgselid (optional)

Calling party selector ID.

Range:

0 - 65534, *none*

none —deletes the current value of the CGSELID field

Default:

No change to the current value

cgssn (optional)

The subsystem number of the starting CgPA.

Range:

0 - 255

defmapvr (optional)

Default MAP version for a MAP message. This parameter is used to provide the default MAP version for a MAP message if ACN (Application Context Name) is not present in an incoming MAP message.

Range:

v1

v2

v3

Default

No change to the current value

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

dpca

Range:

0--255, *

Specify a valid value for each subfield of the point code, and separate the subfields with dash (-).

The asterisk (*) value is not valid for the *n* subfield.

When `chg-sid:pctype=ansi` is specified, `ni=000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc=000` is not valid if `ni=001--005`.

When `chg-sid:pctype=ansi` is specified, `nc=000` is valid if `ni=006--255`.

When `chg-sid:pctype=ansi` is specified, `ni--*--` is valid if `ni=006--225`.

The point code `000---000---000` is not a valid point code.

dpca/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Point Code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code `0-000-0` is not a valid point code.

dpcn (optional)

ITU destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn16 (optional)

16-bit ITU national destination point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

dpcn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000—255

ssa—000—255

sp—000—255

eaddr (optional)

End Address (Similar to EGTA). This parameter specifies the end of a range of MAP digits (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA).

Range:

1--21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

Default

Same as the specified SADDR value

ecdssn (optional)

Subsystem number of the ending called party.

Range:

0 - 255

ecgssn (optional)

Subsystem number of the ending CgPA.

Range:

0 - 255

egta (optional)

End global title address. The end of a range of global title digits.

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1-21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

Default:

Same as the specified *gta* value

fallback (optional)

Fallback option. The action that is taken if the last translation doesn't match when performing GTT using a FLOBR-specific GTT mode.

Range:**yes**

GTT is performed based on the last matched entry

no

GTT fails and the MSU is discarded

sysdfit

The system-wide default fallback option in the SCCPOPTS table is used.

Default:

No change to the current value

family (optional)

The ANSI TCAP *FAMILY* field in the incoming MSU.

Range:

0 - 255, *, none

* —any valid value in the ANSI TCAP *FAMILY* field in the incoming MSU

none —there is no value in the ANSI TCAP *FAMILY* field in the incoming MSU

System Default:

none

force (optional)

Check mated application override.

Range:

yes

no

Default:

no

gta (optional)

Global title address. The beginning of a range of global title digits.

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1-21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

gtmodid (optional)

Global title modification identifier.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

none —removes the association between the translation and the GTMODID

Default:

No change to the current value

loopset (optional)

SCCP loopset name. This parameter associates a translation set with a loopset.

Range:

ayyyyyyy

One leading alphabetic character and up to 7 following alphanumeric characters.

none —Disassociates the translation set from all loopsets.

mapset (optional)

MAP set ID. The Mated Application set ID.

Range:

1 - 36000, *dflt*

dflt —Default MAP set

mrnset (optional)

MRN set ID. The Mated Relay Node set ID.

Range:

1 - 3000, *dflt*, *none*

dflt —Default MRN set

none —The GTA translation does not participate in any load sharing.

opc (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

opca

Range:

0-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni=001-005*.

When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006-255*.

When *chg-sid:pctype=ansi* is specified, *ni-*-** is valid if *ni =006-255*.

The point code *000-000-000* is not a valid point code.

opci (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

opcN (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

opcN16 (optional)

16-bit ITU national originating point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

opc_n24 (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

opcode (optional)

The TCAP *opcode* field in the incoming MSU.

Range: 0 - 255, *, none

* —any valid value in the TCAP *OPCODE* field in the incoming MSU.

none —there is no value in the TCAP *OPCODE* field in the incoming MSU.

opcodetag (optional)

The ITU TCAP *opcodetag* field in the incoming MSU.

Range: none, local, global, any

none —there is no value in the ITU TCAP *opcodetag* field in the incoming MSU

local —The *opcodetag* is local in the ITU TCAP *opcodetag* field in the incoming MSU

global—The *opcodetag* is global in the ITU TCAP *opcodetag* field in the incoming MSU

any—any valid value in the ITU TCAP *opcodetag* field in the incoming MSU

Default:

any

opcsn (optional)

The new OPC GTT set name.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters.

optsn (optional)

Optional GTT set name.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters.
none —deletes the current value of the parameter

pc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

pca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p-, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000—255

ssa—000—255

sp—000—255

pkgtype (optional)

The ANSI and ITU TCAP package type.

Range:

ansiuni

ANSI unidirectional

ansiabort

ANSI abort

any

Wildcard value

bgn

Begin

cnt

Continue

cwp

Conversation with Permission

cwop
Conversation without Permission

end
End

ituabort
ITU abort

ituuni
ITU unidirectional

resp
Response

qwp
Query with Permission

qwop
Query without Permission

ANSI TCAP Package Types
ansiuni, qwp, qwop, resp, cwp, cwop, ansiabort, any

ITU TCAP Package Types
bgn, ituabort, ituuni, any, end, cnt

ppmeasreqd (optional)

Per Path Measurement required. This parameter specifies whether to perform per path measurements.

Range:

yes
perform Per Path Measurements

no
do not perform Per Path Measurements

Default:

No change to the current value

prio (optional)

This parameter assigns priority to an OPCODE GTTSET based translation.

Range:

1 - 1024
1 is the highest priority and 1024 the lowest

Default:

1024

ri (optional)

Routing indicator.

Range:

gt

ssn

Default:

No change to current value.

saddr (optional)

Start Address (Similar to GTA). The beginning of a range of MAP digits (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA).

Range:

1--21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

Default

Same as the specified SADDR value

split (optional)

Split or change an existing GTA range.

Range:

yes

Splits the existing GTA range.

no

Changes the existing GTA range.

Default:

yes

ssn (optional)

Subsystem number.

Range:

002 - 255

Default:

If the `xlat` parameter is not changed to `dpcngt` —No change to current value

If the `xlat` parameter is changed to `dpcngt` —The `ssn` parameter value is removed.

testmode (optional)

This parameter invokes a Test Tool that is used to debug the FLOBR/TOBR rules.

▲ Caution:

If the `testmode=on` parameter is specified, then the rule is used only by test messages and is ignored by live traffic. If the `testmode=off` parameter is specified, then both test and live messages use the rule. Changing from `testmode=off` to `testmode=on` is equivalent to deleting the rule for live traffic.

Range:**on**

process the translation rules defined in the test message

off

perform standard GTT behavior

Default:*off***transmeasrqd (optional)**

Per GTT Translation Measurement required. This parameter specifies whether to perform per GTT Translation measurements.

Range:**yes**

perform per GTT Translation Measurements

no

do not perform per GTT Translation Measurements

Default:*no***xlat (optional)**

Translate indicator. This parameter is used to specify translation actions and routing actions.

Range:**dpc****dpcngt****dpcssn****none****Default:**

No change to the current value

Example

```
chg-  
gta:gttsn=lidb:gta=9195554321:xlat=dpcssn:ri:ssn:pc=001-255-252  
:ssn=254
```

```
chg-
gta:gttsn=test:gta=100000:egta=199999:pca=1-1-1:xlat=dpcngt:ri=gt:gt
modid=set1
```

```
chg-gta:gttsn=setnat003:gta=987658321198765432102:pcn=s-129
```

```
chg-gta:gttsn=itui1:gta=987658321198765432112:pci=s-1-210-1
```

```
chg-gta:gttsn=setnat003:gta=987658321198765432122:pcn=s-128-aa
```

```
chg-
gta:gttsn=setmap:gta=2345678911:egta=3456789022:ri=ssn:pc=2-2-2:ssn=
221:mapset=df1t
```

```
chg-
gta:gttsn=setopcode:pci=3-3-2:opcode=*:pkgtype=bgn:acn=*:prio=1024
```

In this example, the database contains a GTA range [5556000-5558000], but no part of the GTA range [5558001-5559000] exists. The command deletes the GTA range [5556000-5558000] from the database and adds two new GTA ranges [5556000-5556799] and [5556800-5559000].

```
chg-gta:gttsn=tst1:gta=5556800:egta=5559000:split=yes
```

This example deletes the GTA range [5556000-5556799] from the database and adds a new GTA range [5556200-5556500] to the database. All the parameters for the GTA range [5556200-5556500] have the same values as that of the deleted [5556000-5556799] GTA range, except the `pc` parameter that is has a value of `1`.

```
chg-gta:gttsn=tst1:gta=5556200:egta=5556500:pc=1-1-2:split=no
```

This example deletes the GTA range [5556200-5556500] from the database and adds two new GTA ranges [5556200-5556400] and [5556401-5556500] to the database.

```
chg-gta:gttsn=tst1:gta=5556401:egta=5556500
```

This example specifies the default MRN set.

```
chg-gta:gttsn=setmrn:gta=1234567880:pc=1-1-2:mrnset=df1t
```

This example removes the MRN set ID.

```
chg-
gta:gttsn=setmrn:gta=1234567890:egta=2234567890:pc=1-1-2:mrnset=none
```

```
chg-
gta:gttsn=setcdgta:gta=123456789012345678901:egta=223456789012345678
901:optsn=cggtal:opcsn=opc1
```

```
chg-
gta:gttsn=setcdgta:gta=123456789012345678901:egta=223456789012345678
901:cgselid=1024:opcsn=opc1
```

```
chg-
gta:gttsn=setcdgta:gta=123456789012345678901:egta=223456789012345678
901:optsn=none
```

```
chg-gta:gttsn=setopc:opca=002-001-001:xlat=dpcssn:ri=ssn:
pca=001-001-001:ssn=20:optsn=setcgssn
```

```
chg-gta:gttsn=setcgpc:cgpca=001-001-001:xlat=dpcssn:ri=ssn:
pca=001-001-001:ssn=20:optsn=setcgssn
```

```
chg-gta:gttsn=setcgssn:cgssn=100:ecgssn=200:xlat=dpcssn:ri=ssn:
pca=001-001-001:ssn=20
```

```
chg-
gta:gttsn=set1:gta=2543:egta=2943:actsn=actdisc1:ppmeasreqd=yes
```

```
chg-gta:gttsn=set2:cgpc=1-2-*:actsn=actudts1
```

```
chg-gta:gttsn=set3:opcn=2543:actsn=actudts1
```

```
chg-
gta:gttsn=set4:cgssn=25:ecgssn=29:actsn=actdup1:xlat=dpc:ri=gt:
pc=1-1-1
```

This example specifies hexadecimal digits for the gta and egta parameters.

```
chg-gta:gttsn=set1:gta=abcd:egta=abce
```

```
chg-
gta:gttsn=setmap:gta=2345678901:egta=3456789012:ri=ssn:pc=1-1-3
:ssn=225:mapset=2:loopset=raleigh1
```

This example specifies that calling party GT modification is required.

```
chg-gta:gttsn=setans004:cggmod=yes:gta=981234
```

This example changes the GTA translations when the FLOBR feature is turned on.

```
chg-gta:gttsn=setcdgta:gta=1234567890:egta=2234567890:
xlat=dpcssn:ri=ssn:pca=001-001-001:ssn=100:fallback=no:testmode
=on
```

This example changes the GTA translations when the OBSR feature is enabled and the FLOBR feature is turned on.

```
chg-gta:gttsn=setcdgta:gta=1234567890:egta=2234567890:
xlat=dpcssn:ri=ssn:pc=2-2-2:ssn=100:fallback=yes:optsn=setcggta
:testmode=on
```

This example changes the GTA translations when the FLOBR feature is turned on.

```
chg-
gta:gttsn=setcdssn:cdssn=15:ecdssn=29:xlat=dpc:pc=1-1-1:ri=gt
```

This example changes the GTA translations when the TOBR and OBSR features are turned on.

```
chg-
gta:gttsn=setopcode:pkgtype=qwop:opcode=none:family=*:xlat=dpc:
ri=gt: pc=2-2-2:opcsn=setopc:optsn=setcdgta
```

```
chg-
gta:gttsn=setopcode:pkgtype=bgn:opcode=none:acn=1-22-123-43-54-
65-76:opcodetag=global:
xlat=dpc:ri=gt:pc=2-2-2:opcsn=setopc:optsn=setcdgta
```

```
chg-
gta:gttsn=setopcode:pkgtype=bgn:opcode=none:family=*:xlat=dpc:r
i=gt: pc=2-2-2:optsn=imsi1:defmapvr=v3
```

```
chg-gta:saddr=1234567890:eaddr=2234567890:gttsn=setmsisdn
```

This example changes the GTA translation for a DPC GTT set when the FLOBR feature is turned on.

```
chg-gta:gttsn=setdpc:dpc=1-1-1:optsn=setc1
```



```
chg-gta:gttsn=setcdgta:gta=78901234:xlat=dpc:gtmodid=none
chg-
gta:gttsn=setcdgta:gta=123456789012345678901:xlat=none:gtmodid=gttsn
1
chg-
gta:gttsn=setopcode:pkgtype=bgn:opcode=none:acn=1-2-3-4-5-6-7:xlat=n
one:mapset=1
chg-gta:gttsn=setcdgta:gta=123456:xlat=none:mapset=1:mrnset=2
```

Example for 16 bit PC and CGPCACTION param.

```
chg-
gta:gttsn=gtt1:xlat=dpc:ri=ssn:pcn16=1-14-0:cgpcn16=45-1-0:mapset=df
lt:
cgpcaction=remove
chg-
gta:gttsn=imeil:saddr=98765432112:xlat=dpc:ri=gt:pci=1-210-1:transme
asrqd=yes
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

The ANSI/ITU SCCP Conversion feature must be enabled before a translated point code that is of a different domain than the GTT set specified by the `gttsn` parameter can be specified.

3570 E3570 Cmd Rej: Point Code type does not match GTT Set network domain

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `gttsn=none` parameter cannot be specified.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

The point code specified for the `pc` parameter must be a full point code.

2859 E2859 Cmd Rej: Destination address must be a full point code

The values of the `gta/saddr` and `egta/eaddr` parameters must be the same length.

2403 E2403 Cmd Rej: Length of EGTA/EADDR must be equal to length of GTA/SADDR

If the specified or previously provisioned translated point code is of type ANSI, then the `ngti` value of the referred GT Modification Identifier (see the `ent-gtmod` command) must be 2.

4903 E4903 Cmd Rej: If NGTI of referred GTMOD is 4, PC cannot be ANSI

The length of the specified `gta/saddr` parameter must match the number of digits provisioned for the specified GTT set when the VGTT feature is turned off. If the VGTT feature is turned on, then up to 10 GTA/SADDR lengths can exist per GTT set. If the Support for 16 GTT Lengths in VGTT feature is turned on, then up to 16 GTA/SADDR lengths can exist per GTT set.

3571 E3571 Cmd Rej: GTA/SADDR Length does not match GTT Set number of digits

The specified `gta/egta` or `saddr/eaddr` range must exist for the specified GTT set in the STP active database. While an exact match is not required, an overlap with another range cannot be specified. If the range overlaps, an error is generated that displays a list of overlapped global title addresses. An example follows that shows what happens when the user attempts to enter a range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, error message E2401 is generated displaying the list of overlapped global title addresses:

```
The following GTA ranges overlap the input GTA range
START GTA END GTA
8005550000 8005551999 8005552000 8005553999 8005554000 8005555999 CHG-
GTA: MASP A - Command Aborted
```

2401 E2401 Cmd Rej: GTA/SADDR range overlaps a current range

If a new or existing `xlat=dpcngt` parameter is specified, a new or existing `ri=gt` parameter must be specified.

2437 E2437 Cmd Rej: New/existing RI must be GT for new/existing XLAT=DPCNGT

If the `ssn` parameter is specified, a new or existing `xlat=dpcssn` parameter must be specified.

2457 E2457 Cmd Rej: SSN can only be specified when XLAT=DPCSSN

If the `xlat=dpcssn` parameter is specified, the `ssn` parameter must be specified.

2457 E2457 Cmd Rej: SSN can only be specified when XLAT=DPCSSN

If the `pc/pca/pci /pcn/pcn24/pcn16` parameter is specified, and the point code is the STP true point code, then the value of the new or existing `xlat` parameter must be `dpcssn`, and the new or existing value of the `ri` parameter must be `ssn`.

3648 E3648 Cmd Rej: XLAT must be DPCSSN and RI must be SSN if PC is the True PC

If the `pc/pca/pci/pcn/pcn24/pcn16` parameter, `ssn` parameter, or both, are specified, and the point code is the STP true point code, the `ssn` value must exist in the SS-APPL table.

3612 E3612 Cmd Rej: SSN must be in SS-APPL table when PC is true point code

If the `pc/pca/pci/pcn/pcn24/pcn16` parameter is specified, then it must exist as a destination in the Route table or reside in a cluster that exists as a destination in the Route table (for global routing) unless the point code is the STP's true point code.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

If new or existing `ri=ssn` and `xlat=dpc` parameters are specified, and the `pc/pca/pci/pcn/pcn24/pcn16` parameter is not specified, then the existing PC must exist in the Remote Point Code/MAP table, unless the `force=yes` parameter is specified.

4543 E4543 Cmd Rej: PC/MAPSET does not exist in MAP table

If new or existing `ri=ssn`, `xlat=dpc`, and `pc/pca/pci/pcn/pcn24/pcn16` parameters are specified, the new point code must exist in the Remote Point Code/MAP table, unless the `force=yes` parameter is specified.

2419 E2419 Cmd Rej: Point code does not exist in the remote point code table

If a new or existing `ccgt=yes` parameter is specified, a new or existing `ri=ssn` parameter must be specified.

3572 E3572 Cmd Rej: RI must be SSN when CCGT is YES

If the new or existing `pc/pca/pci/pcn/pcn24/pcn16` parameter is an the STP point code or capability point code, then the `ccgt=no` parameter must be specified.

3573 E3573 Cmd Rej: CCGT must be NO when PC is the STP's PC or CPC

If new or existing `ri=ssn` and `xlat=dpcssn` parameters are specified, a new or existing `xlat=dpcssn` parameter must exist in the Remote Point Code/MAP table, unless the `force=yes` parameter is specified.

4543 E4543 Cmd Rej: PC/MAPSET does not exist in MAP table

The GTT table cannot be full.

2462 E2462 Cmd Rej: GTT table is full

If the `ri=gt` parameter is specified, the `mrnset` parameter must be specified. If the `ri=gt` parameter is not specified, the `mrnset` parameter cannot be specified

4475 E4475 Cmd Rej: MRNSET must be specified (only) if RI parameter is GT

If the Flexible GTT Load Sharing feature is enabled, the specified PC must already exist in the specified MRN set.

4483 E4483 Cmd Rej: PC does not exist in specified MRNSET

The specified MRN set must already exist in the MRN table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

If the Flexible GTT Load Sharing feature is enabled, the specified PC must exist in the MRN set.

4476 E4476 Cmd Rej: Specified PC must exist in MRNSET

The Flexible GTT Load Sharing feature must be enabled before the `mrnset` parameter can be specified.

4479 E4479 Cmd Rej: MRNSET must be specified (only) if FGTTLS feature is enabled

If the `ri=gt` parameter is specified, the `mrnset` parameter must be specified. If the `ri=ssn` parameter is specified, the `mrnset` parameter cannot be specified.

4475 E4475 Cmd Rej: MRNSET must be specified (only) if RI parameter is GT

The SEAS command can operate only on the default MRN set or the default MAP set.

4508 E4508 Cmd Rej: SEAS can only update translations with Default MRNSET/MAPSET

The MRN table is corrupt or cannot be found.

2999 E2999 Cmd Rej: Failed reading the MRN table

If the `ri=ssn` parameter is specified, the `mapset` parameter must be specified. If the `ri=gt` parameter is specified, the `mapset` parameter cannot be specified.

Note: The `mapset` parameter can only be specified if the Flexible GTT Load Sharing feature is enabled.

4532 E4532 Cmd Rej: MAPSET must be specified (only) if RI parameter is SSN

The Flexible GTT Load Sharing feature must be enabled before the `mapset` parameter can be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The specified MAP set must exist in the database.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

The specified or previously provisioned PC/SSN must exist in the specified or previously provisioned MAP set.

4528 E4528 Cmd Rej: PC/SSN doesn't exist in MAPSET

The SEAS command cannot operate on any MAP set other than the default MAP set.

4508 E4508 Cmd Rej: SEAS can only update translations with Default MRNSET/
MAPSET

If the `xlat=dpc` parameter is specified, and the value of the `force` parameter is not yes, then the point code and MAP set must exist in the MAP table.

4543 E4543 Cmd Rej: PC/MAPSET does not exist in MAP table

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

The specified GTA/SADDR must occur within an existing GTA range in the specified GTT Set.

2402 E2402 Cmd Rej: GTA/SADDR range does not exist

The `gta`, `cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16`, `opc/opca/opci/opcn/opcn24/opcn16`, `cgssn/cdssn`, `opcode/acn/pkgtype`, `opcode/family/pkgtype`, `dpc/dpca/dpci/dpcn/dpcn24/dpcn16`, or `saddr` parameter must be specified.

4400 E4400 Cmd Rej: GTA/CGPC/OPC/CGSSN/CDSSN/OPCODE/DPC/SADDR must be specified

The FLOBR feature must be turned on before the `cgssn`, `opcsn`, `optsn`, and `cgselid` parameters can be specified in the same command.

4403 E4403 Cmd Rej: CGSSN cannot be specified with OPTSN/OPCSN/CGSELID

The `pc/pca/pci/pcn/pcn24/pcn16`, `cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16`, `opc/opca/opci/opcn/opcn24/opcn16`, and `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameters must have values within the valid range for each subfield.

2169 E2169 Cmd Rej: Point code out of range

The value specified for the `ecgssn/ecdssn` parameter must be greater than the value specified for the `cgssn/cdssn` parameter.

4404 E4404 Cmd Rej: End value must be greater than or equal to a starting value

The specified GTT set must have a set type of `opcode` (see the `ent-gttset` command) before the `opcode/acn/pkgtype` or `opcode/family/pkgtype`

parameters can be specified. The specified GTT set must have a set type of `cdssn`, `cgssn`, `cdgta/cgta`, `opc`, or `cgpc` before the `cdssn`, `cgssn`, `gta`, `opc`, or `cgpc` parameter, respectively, can be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The OBSR feature must be enabled before the `opcsn`, `cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16`, `opc/opca/opci/opcn/opcn24/opcn16`, or (e) `cgssn` parameters can be specified.

4393 E4393 Cmd Rej: Origin Based SCCP Routing feature must be enabled

If the GTT set specified by the `gttsn` parameter (GTTSN set) has a set type of `cdgta` (see the `ent-gttset` command), then the `optsn` parameter cannot specify a GTT set (OPTSN set) with a set type of `cgssn`. The OPTSN set must have a set type of `cggta` or `cgpc`.

The FLOBR feature must be turned on before a GTTSN set with a set type of `cgpc`, `cggta`, or `opc` can be specified with an OPTSN with a set type other than `cgssn`.

If the FLOBR feature is turned on, and the GTTSN set has a set type of `cdgta` or `cdssn`, then the OPTSN set cannot have a set type of `opc`.

If the TOBR feature is turned on, and the GTTSN set has a set type of `opcode`, then the OPTSN set cannot have a set type of `opc`.

If the GTTSN set has a set type of MBR (`imei/imsi/vlrnb/msisdn/smrpda/smrpoa`), then the OPTSN set type cannot have the same set type as GTTSN.

If the OPTSN set has a set type of MBR (`imei/imsi/vlrnb/msisdn/smrpda/smrpoa`), then the GTTSET must have a set type of MBR (`imei/imsi/vlrnb/msisdn/smrpda/smrpoa`) or `opcode`.

4405 E4405 Cmd Rej: OPTSN GTT set type is not compatible with GTTSN set type

The `cdselid`, `cgselid`, and `optsn` parameters cannot be specified together in the command. If the GTTSN has a set type of `cdgta`, `cdssn`, or `opcode` (see the `ent-gttset` command) then the `opcsn` parameter can be specified if one of the other exclusive parameters is specified.

4398 E4398 Cmd Rej: OPTSN and CGSELID/CDSELID are mutually exclusive

The `gta` parameter must be specified if the GTTSN set type has a value of `cdgta` or `cggta`. The `gta` parameter cannot be specified for other set types.

4406 E4406 Cmd Rej: GTA parm must be specified if GTTSN is type of CDGTA/CGGTA

The `cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16` parameter must be specified if the GTTSN set type has a value of `cgpc`. The `cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16` parameter cannot be specified for other set types.

4407 E4407 Cmd Rej: CGPCx parm must be specified if GTTSN is type of CGPC

The `opc/opca/opci/opcn/opcn24/opcn16` parameter must be specified if the GTTSN set type has a value of `opc`. The `opc/opca/opci/opcn/opcn24/opcn16` cannot be specified for other set types.

4408 E4408 Cmd Rej: OPCx parm must be specified if GTTSN is type of OPC

The `cgssn` parameter must be specified if the GTTSN set type is `cgssn`. The `cgssn` parameter cannot be specified for other set types.

4409 E4409 Cmd Rej: CGSSN parm must be specified if GTTSN is type of CGSSN

The range specified by the `cgssn/ecgssn` and `cdssn/ecdssn` parameters cannot overlap a currently existing range for the specified GTT set.

4412 E4412 Cmd Rej: CGSSN/CDSSN range cannot overlap an existing range

The GTT set specified by the `opcsn` parameter must have a set type of `opc` (see the `ent-gttset` command).

4399 E4399 Cmd Rej: Set type of GTT Set Name doesn't match

If the specified GTT set is an ANSI set, the `cgpc/cgpca`, `opc/opca`, and `dpc/dpca` parameters must be valid ANSI point codes. If the specified GTT set is an ITU set, the `cgpci/cgpcn/cgpcn24/cgpcn16`, `opci/opcn/opcn24/opcn16`, and `dpci/dpcn/dpcn24/dpcn16` parameters must be valid ITU point codes.

3570 E3570 Cmd Rej: Point Code type does not match GTT Set network domain

The set domain of the `opcsn` parameter must be the same as the set domain of the `gttsn` parameter. For example, if the set domain of the `gttsn` parameter is ANSI, then the set domain of the `opcsn` parameter must be ANSI. If the set domain of the `gttsn` parameter is ITU, then the set domain of the `opcsn` parameter must be ITU.

4522 E4522 Cmd Rej: OPCS set domain must be the same as GTTSN set domain

The range specified by the `cgssn/ecgssn` and `cdssn/ecdssn` parameters must exist for the specified GTT set in the STP active data base. An exact match is not required.

4415 E4415 Cmd Rej: CGSSN/CDSSN range does not exist

The translation entry associated with the specified point code (`dpc/dpca/dpci/dpcn/dpcn24/dpcn16`, `pc/pca/pci/pcn/pcn24/pcn16`, or `opc/opca/opci/opcn/opcn24/opcn16`) or `opcode` must already exist.

4510 E4510 Cmd Rej: Translation entry does not exist

The `cgpc`, `cgssn`, `gta`, `opc`, `cdssn`, `opcode` and `saddr` parameters cannot be specified in the same command.

If the `cgssn` and `cdssn` parameters are both specified in the same command (in any order), then only the value for the last of the two parameters specified is used during processing.

3332 E3332 Cmd Rej: GTA/CGPC/OPC/CG-CDSSN/OPCODE/DPC/ADDR are mutually exclusive

The Hex Digit Support for GTT feature must be turned on before hexadecimal digits can be specified for the `gta/saddr` or `egta/eaddr` parameters.

3006 E3006 Cmd Rej: Hex Digit Support for GTT feature must be ON

The SCCP Loop Detection feature must be enabled before the `loopset` parameter can be specified.

4565 E4565 Cmd Rej: SCCP Loop Detection Feature is not enabled

The value of the `loopset` parameter must already exist in the database.

4568 E4568 Cmd Rej: Loop Set entry does not exist

The Loopset table is corrupt or cannot be found.

4567 E4567 Cmd Rej: Cannot access LoopSet table

The value specified for the `egta/eaddr` parameter must be greater than value specified for the `gta/saddr` parameter.

2420 E2420 Cmd Rej: EGTA/EADDR must be greater than or equal to GTA/SADDR

The value specified for the `pc` parameter cannot be associated with a proxy point code.

4707 E4707 Cmd Rej: PRX using DPC not allowed in GTT, MAP, MRN tables

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the `cggmod` parameter can be specified.

4789 E4789 Cmd Rej: Either AMGTT or AMGTT CgPA Upgrade feature must be ON

The FLOBR feature must be turned on before the `fallback`, `cdselid`, `(e)cdssn`, or `dpc` parameter can be specified.

5060 E5060 Cmd Rej: Flexible Linkset Optional Based Routing must be ON

The FLOBR feature must be turned on before the `gttsn` parameter can specify a GTT set with a set type other than `cdgta` (see the `ent-gttset` command) in the same command with the `cgselid` parameter.

4457 E4457 Cmd Rej: CGSELID is valid only if specified GTTSN set type is CDGTA

The OBSR feature must be enabled or the FLOBR feature must be turned on before the `cgselid` parameter can be specified.

5063 E5063 Cmd Rej: OBSR must be enabled or FLOBR must be ON

The same value cannot be specified for the `gttsn` and `optsn` parameters.

5111 E5111 Cmd Rej: The GTTSN set name must not be same as OPTSN set name

The ANSI/ITU SCCP Conversion feature must be enabled before the GTT set specified by the `optsn` parameter can have a different domain than the GTT set specified by the `gttsn` parameter.

5103 E5103 Cmd Rej: OPTSN set domain must be the same as GTTSN set domain

A TOBR quantity feature must be turned on before the `opcode`, `pkgtype`, `acn`, `family`, `saddr`, `eaddr` or `defmapvr` parameter can be specified.

5105 E5105 Cmd Rej: One of the TOBR quantity feature must be ON

The `opcode`, `pkgtype`, and `family` parameters must be specified together for ANSI TCAP translations. The `opcode`, `pkgtype`, and `acn` parameters must be specified together for ITU TCAP translations.

5106 E5106 Cmd Rej: OP CODE, PKGTYPE, ACN/FAMILY must be specified together

If the `opcode` is specified by `opcodetag` parameter, then the `pkgtype`, `opcode` and `acn` must be specified.

E3701 Cmd Rej: PkgType, Opcode and ACN must be specified

If the GTT set specified by the `gttsn` parameter has a set type of `opcode` (see the `ent-gttset` command), then the `opcode/acn/pkgtype` or `opcode/family/pkgtype`

parameters must be specified. These parameters cannot be specified if the GTT set has of any other set type.

5107 E5107 Cmd Rej: OPCODE param must be specified if GTTSN settype is OPCODE

If the GTT set specified by the `gttsn` parameter has a set type of `cdssn` (see the `ent-gttset` command), then the `cdssn` parameter must be specified. This parameter cannot be specified if the GTT set has any other set type.

5108 E5108 Cmd Rej: CDSSN param must be specified if GTTSN settype is CDSSN

The `opcsn` parameter can be specified only if the GTT set specified by the `gttsn` parameter has a set type of `cdgta`, `opcode`, or `cdssn` (see the `ent-gttset` command).

5110 E5110 Cmd Rej: OPCSN is valid with cdgta/cdssn/opcode GTTSN type

The value specified for the `gttsn` parameter must match the name of an existing GTT Set.

3561 E3561 Cmd Rej: GTT Set specified by GTT Set Name/index does not exist

A value of *none* must be specified for the `optsn`, `cgselid`, or `cdselid` parameter before the parameter can be changed to another value.

5080 E5080 Cmd Rej: OPTSN or CGSELID/CDSELID is not valid

The ANSI/ITU SCCP Conversion feature must be enabled and the FLOBR feature must be turned on before the `cgcnvsn` parameter can be specified.

5124 E5124 Cmd Rej: SCCP Conversion and FLOBR features must be ON

The GTT set specified by the `gttsn` parameter must have a set type of `cdgta` or `cggta` (see the `ent-gttset` command), before the `cgcnvsn` parameter can be specified.

5127 E5127 Cmd Rej: CGCNVSN is invalid when GTTSET type is not cggta/cdgta

The value specified for the `gttsn` parameter cannot be the same as the value specified for the `cgcnvsn` parameter.

5139 E5139 Cmd Rej: CGCNVSN Gttset name cannot be same as GTTSN Gttset name

If the `family` parameter is specified, then the `pkgtype` parameter must have a value of *ansiuni*, *qwop*, *qwop*, *resp*, *cwp*, *cwop*, *ansiabort*, or *any*.

5140 E5140 Cmd Rej: FAMILY parameter is allowed with ANSI TCAP PKGTYPE

If the `acn` parameter is specified, then the `pkgtype` parameter must have a value of *bgn*, *ituabort*, *ituuni*, *any*, *end*, or *cnt*.

5141 E5141 Cmd Rej: ACN parameter is allowed with ITU TCAP PKGTYPE

The `gttsn` parameter must be specified and must match an existing GTT set.

3561 E3561 Cmd Rej: GTT Set specified by GTT Set Name/index does not exist

The GTT set name specified in the `optsn`, `opcsn`, or `cgcnvsn` parameters must match an existing GTT set name.

5143 E5143 Cmd Rej: GTT Set specified by OPTSN/OPCSN/CGCNVSN does not exist

If the `pkgtype=ituabort` parameter is specified, then a value of `none` must be specified for the `acn,opcode` and `opcodetag` parameters.

If the `pkgtype=ansiabort` parameter is specified then a value of `none` must be specified for the `family` and `opcode` parameters.

E5144 Cmd Rej: PKGTYPE abort requires ACN/FAMILY/OPCODE/OPTAG value none

The OBSR feature must be enabled or the FLOBR feature must be turned on before the `optsn` parameter can be specified.

5063 E5063 Cmd Rej: OBSR must be enabled or FLOBR must be ON

The GTT Action Set specified by the `actsn` parameter must already exist in the database.

5196 E5196 Cmd Rej: GTT Action Set does not exist

Failure while reading the GTT Action Set table.

5197 E5197 Cmd Rej: Unable to access GTT Action Set table

If the GTT set specified by the `gttsn` parameter has a set type of `dpc` (see the `ent-gttset` command), then the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter must be specified. If the GTT set has a set type other than `dpc`, then the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter cannot be specified.

5267 E5267 Cmd Rej: DPCx parameter must be specified if GTTSN set type is DPC

The value specified for the `gtmodid` parameter must already exist in the GTMOD table (see the `ent-gtmod` command).

5285 E5285 Cmd Rej: GTMODID does not exist

The GTMOD table is corrupt or cannot be found.

5284 E5284 Cmd Rej: Failed reading GTMOD table

The values specified for the `gta` and `egta` parameters must be an exact match to the GTA values referred in GTT Action Path table (see the `ent-gttapath` command).

5318 E5318 Cmd Rej: GTT Actions Path(s) associated with Translation entry

If the FGTTLS feature is enabled, and the `xlat=none` parameter is specified, then the `mrnset` or `mapset` parameter must be specified.

5381 E5381 Cmd Rej: If FGTTLS feat enabled, specify MAPSET and/or MRNSET

If the `xlat=none` parameter is specified, then the `ri`, `pc/pca/pci/pcn/pcn24/pcn16`, `force`, `ssn`, and `ccgt` parameters cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `acn` and `family` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `cgssn` parameter is specified, then the `(e)cdssn` parameter cannot be specified. If the `cdssn` parameter is specified, then the `(e)cgssn` parameter cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `opc` or `dpc` parameter is specified, then the `(e)gta`, `(e)cgssn`, `(e)cdssn`, and `opcode` parameters cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The J7 Support feature must be enabled before the `cgpcn16/opcn16/dpcn16` parameters can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 Support feature must not be enabled before the `cgpcn24/opcn24/dpcn24/cgpcn24/opcn24/dpcn24` parameters can be specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The `SADDR` parameter must be specified if the GTT set specified by the `gttsn` parameter is of MBR type (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA).

3449 E3449 Cmd Rej: SADDR must be specified for MBR GTT settypes

If the GTT set specified by the `optsn` parameter is of MBR type (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA) in the GTA command for an ITU opcode entry, then the package type specified via the `pkgtype` parameter must be ITU BGN/CNT/END.

3459 E3459 Cmd Rej: GTTSET MBR Settypes Support ITU BGN/CNT/END Pkgtype

The `defmapvr` parameter can be specified in the GTA command for an ITU opcode entry if the GTT set specified by the `optsn` parameter is of MBR type (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA).

3460 E3460 Cmd Rej: DEFMAPVR is supported by MBR GTT settypes

`PRIO` parameter can be specified with `OPCODE` GTT set types only.

3552 E3522 Cmd Rej: CHECKMULCOMP/PRIO can be specified with `OPCODE` SETTYPES only

`PRIO` value should lie between 1-1024 (both inclusive)

E2017 Cmd Rej: Priority is out of range, 1..1024 - `prio`

If the `saddr` parameter is specified, then the `ecgssn/ecdssn` parameters cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

Notes

The maximum length of the resulting GTA string must not exceed 21 digits when translation is complete.

If a GTT is being deleted or changed and the point code (DPC or RTE) is not found in the route table (unless the point code is the STP's true point code), then the following message is displayed in the terminal scroll area:

NOTICE: No DPC and/or RTE found for GTT being deleted or changed.

The above situation may occur if the reference count rules were not enforced and a DPC and/or RTE were deleted while being referenced by a GTT entry. This indicates a software error; contact My Oracle Support (MOS).

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

When the Flexible GTT Load Sharing feature and the Intermediate GTT Load Sharing feature are on, multiple relationships can be defined among a set of destination point codes in the existing MRN table. The relationship used in a particular translation is based on the GTA digits used for translation. The `mrnset` parameter and the post-translation PC create a key that is used to perform a lookup in the MRN table. This lookup results in a set of alternate PCs, from which a PC is selected, based on relative cost, to route the MSU in most cost-effective way.

When the Flexible GTT Load Sharing feature is turned on, multiple relationships can be defined among a set of PC/SSN pairs in the existing MAP table. The relationship used in a particular translation is based on the GTA digits used for translation.

When the Origin-based SCCP Routing feature is enabled, the CdPA GTA entry can be provisioned in addition to the CgPA GTA, CgPA PC, CgPA SSN, and OPC entries. When provisioning, the Advanced CdPA GTA entry can associate with the CgPA GTA set or the CgPA PC set, the SELID and/or OPC set; the CgPA GTA, CgPA PC, or OPC can associate with the CgPA SSN set; the CgPA SSN cannot associate with any other GTT set. The Advanced CdPA GTA entry may contain the selector ID along with CgPA information present in the MSU to search the Selector table again for the CgPA GTA or CgPA PC Set.

A loopset consists of a set of point codes that form a routing loop in the network. If the SCCP Loop Detection feature is enabled, then the loopset can be associated with or disassociated from specified translation entries. Loopsets that are associated with translation entries are checked during intermediate and final GTT traffic routing. If a loop exists, then the system can be notified with or without discarding the associated traffic.

If the range specified by the `gta` and `egta` parameters does not exactly match the existing range, then the existing range is split. All addresses in the existing range that are outside the range specified by the `gta/egta` parameters retain the original `xlat`, `ri`, `pc` and `ssn` parameters. A new range is created that is bounded by the `gta/egta` parameters. The new range contains new values for the `xlat`, `ri`, `pc` and `ssn` parameters that are present in the command, while retaining parameter values from the previous range that do not have corresponding new values in the command.

If the FLOBR GTT hierarchy is provisioned on a linkset, then translations do not have to be searched in a predetermined manner. If a translation points to another GTTSET/SELID, then database searches continue. The number of searches is limited by the following conditions:

- The same GTT set name cannot be referred more than once.
- Up to 7 database searches can be performed.
- For MBR, the same GTT settype (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA) cannot be referred more than once.

If the FLOBR feature is turned on, then any translation can point to any GTTSETs other than that specified by the GTTSN. The CdPA GTA and CdPA SSN translations can also point to an OPCS. For CdPA GTA and CdPA SSN translations, if an OPTSN GTTSET/SELID is provisioned apart from an OPCS, then the OPTSN GTTSET/SELID takes precedence over the OPCS.

The MBR GTT set types translation entries (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA) can be configured only when the TOBR feature is turned ON. The GTTsets of the types mentioned above are allowed to be provisioned ONLY in GTA entries from a GTTSet of the type OPCODE or one of the other GTT Set types supported by this feature (SS7 Firewall).

Translations associated with the TOBR feature:

- ANSI Opcode—ANSI opcode specifier, ANSI TCAP Package type, and Family
- ITU Opcode—ITU opcode, ITU TCAP Package Type, opcodetag and ACN

Translations associated with the FLOBR feature:

- CdPA SSN Translations—Can be configured with routing and flexible routing data. The provisioning rules for CdPA SSN translations are the same as CgPA SSN translations in OBSR.
- DPC Translations—The provisioning rules for DPC translations are the same as OPC translations except that OPCS parameter cannot be configured for DPC translations.

Output

```
chg-gta:gttsn=set2:xlat=dpcssn:ri=ssn:pc=3-3-3:ssn=10:cgpc=1-2-
*:actsn=actudts1:ppmeasreqd=yes
```

```
tekelecstp 10-02-15 17:29:06 EST EAGLE 42.0.0
CHG-GTA: MASP A - COMPLTD
```

```
;
```

```
chg-
gta:gttsn=imsi1:xlat=dpc:ri=gt:pc=1-1-1:saddr=1234567890:eaddr=
2234567890
```

```
tekelecstp 15-05-24 12:09:18 EST EAGLE 46.3.0
ENT-GTA: MASP A - COMPLTD
```

```
;
```

```
chg-gta:gttsn=setopcode:pci=3-3-2:opcode=*:pkgtype=bgn:acn=*:
prio=1024
```

```
tekelecstp 16-11-07 14:13:13 MST EAGLE 46.5.0.0.0-70.5.0
CHG-GTA: MASP A - COMPLTD
```

```
;
```

```
chg-
gta:gttsn=imei1:saddr=98765432112:xlat=dpc:ri=gt:pci=1-210-1:tr
ansmeasrqd=yes
```

```
tekelecstp 17-05-11 15:20:06 EST EAGLE 46.6.0
CHG-GTA: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-gta](#)
- [ent-gta](#)
- [rtrv-gta](#)

4.1.68 chg-gtcnv

Use this command to change entries in the Default Global Title Conversion table. A table entry is identified by the direction and the `tta` or `tti` parameter, or the `tti/np/nai` parameter combination. The Notes section for this command describes rules for changing entry information.

Parameters**dir (mandatory)**

Direction of conversion.

Range:***atoi***

ANSI to ITU conversion

itoa

ITU to ANSI conversion

both

Conversion in both directions

nai (optional)

Nature of address indicator. This parameter is mandatory when `gtixlat=24` is specified, and cannot be specified when `gtixlat=22` is specified.

Range:

0 - 63, *

Default:

No change to current value

np (optional)

Numbering plan. This parameter is mandatory when `gtixlat=24` is specified, and cannot be specified when `gtixlat=22` is specified.

Range:

0 - 15, *

Default:

No change to current value

npdd (optional)

New prefix digits to be deleted. The number of new prefix digits to be deleted. These digits will be replaced with the new prefix digits string (`npds`).

Range:*0 - 21***Default:**

No change to current value

npds (optional)

New prefix digits string. The new prefix digits string that will replace the received prefix digits.

Range:*1 - 21 digits*

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are *0-9*.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are *0-9, a-f, A-F*.

Default:

No change to current value

nsdd (optional)

New suffix digits to be deleted. The number of new suffix digits to be deleted. These digits will be replaced with the new suffix digits string (*nsds*).

Range:*0 - 21***Default:**

No change to current value

nsds (optional)

New suffix digits string. The new suffix digits string that will replace the received suffix digits.

Range:*1 - 21 digits*

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are *0-9*.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are *0-9, a-f, A-F*.

Default:

No change to current value

rdmod (optional)

Reset digit modifiers (*npdd/npds* or *nsdd/nsds*) values to "no digit modification."

Range:**yes**

Reset the *npdd/npds* or *nsdd/nsds* parameter values

no

Do not reset the *npdd/npds* or *nsdd/nsds* parameter values.

Default:
No change to current value

tta (optional)

ANSI translation type. This parameter is mandatory when `dir=atoi` or `dir=both` is specified.

Range:
0 - 255, *

Default:
No change to current value

tti (optional)

ITU translation type. This parameter is mandatory when `dir=atoi` is specified.

Range:
0 - 255, *

Default:
No change to current value

Example

This example changes a `dir=atoi` entry's current `tti` value to 5:

```
chg-gtcnv:dir=atoi:tta=10:tti=5
```

This example changes a `dir=atoi` entry's current `tti`, `nai`, and `np` values to 7, 8, and 6 respectively, and changes or adds NSDD and NSDS values:

```
chg-gtcnv:dir=atoi:tta=11:tti=7:nai=8:np=6:nsdd=3:nsds=123
```

This example changes a `dir=ittoa` entry's current TTA value to 11, and changes or adds NPDD and NPDS values:

```
chg-gtcnv:dir=ittoa:tta=11:tti=7:npdd=3:npds=123
```

This example changes a `dir=ittoa` entry's TTA value to 12, and changes or adds NSDD and NSDS values:

```
chg-gtcnv:dir=ittoa:tta=12:tti=7:nai=8:np=6:nsdd=5:nsds=45667
```

This example adds or changes a `dir=both` entry's NSDD and NSDS values:

```
chg-gtcnv:dir=both:tta=12:tti=33:nsdd=3:nsds=456
```

This example changes a default `dir=atoi` entry's current TTI value to 9, and changes or adds NSDD and NSDS values:

```
chg-gtcnv:dir=atoi:tta=*:tti=9:nsdd=1:nsds=9
```

This example changes a default `dir=atoi` entry's current TTI, NAI, and NP value to 4, 6, and 5 respectively:

```
chg-gtcnv:dir=atoi:tta=*:tti=4:nai=6:np=5
```

This example changes a default `dir=ittoa` entry's current TTI value to 17, and changes or adds NPDD and NPDS values:

```
chg-gtcnv:dir=ittoa:tta=17:tti=*:nai=*:np=*:npdd=3:npds=123
```

This example resets existing NPDD/NPDS or NSDD/NSDS values to "no digit modification":

```
chg-gtcnv:dir=both:tta=12:tti=11:rdmod=yes
```

This example specifies hexadecimal digits for NSDS:

```
chg-gtcnv:dir=atoi:tta=*:tti=4:npdd=3:npds=abc1234fed
```

Dependencies

The ANSI/ITU SCCP Conversion feature must be enabled before this command can be entered.

4171 E4171 Cmd Rej: SCCP Conversion feature must be enabled

If the `dir=atoi` parameter is specified, then the `tta` parameter must be specified.

4035 E4035 Cmd Rej: TTA must be specified for a direction of ATOI

If the `dir=both` parameter is specified, then the `tta` and `tti` parameters must be specified.

4036 E4036 Cmd Rej: At least TTA, TTI must be specified for a direction of BOTH

If the `dir=both` parameter is specified, then a wildcard value (*) cannot be specified for any of the other parameters.

4116 E4116 Cmd Rej: Wildcard/Asterisk invalid for direction of BOTH

If the `dir=atoi` parameter is specified, then a value of * can be specified only for the `tta` parameter.

4117 E4117 Cmd Rej: Wildcard/Asterisk combination invalid for direction

If the `dir=ittoa` parameter is specified, then a value of * must be specified for the `tti`, `np`, and `nai` parameters.

4118 E4118 Cmd Rej: Wildcard/Asterisk required for TTI, NP, NAI if DIR is ITOA

If the `dir=ittoa` and `gtixlat=22` parameters are specified, then a value of * cannot be specified.

4299 E4299 Cmd Rej: Cannot enter a wildcard with XLAT=2, Use XLAT=4 for wildcard

The specified `dir`, `tta`, `tti`, `np`, and `nai` parameter combination cannot already exist in the database.

4120 E4120 Cmd Rej: Key values: DIR, TTA, TTI, NP, NAI does not exist

The `nsdd/nsds` and the `npdd/npds` parameters cannot be specified together in the command.

4170 E4170 Cmd Rej: Prefix & Suffix digit modification parameters can't be mixed

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the `npds` and `nsds` parameters.

3006 E3006 Cmd Rej: Hex Digit Support for GTT feature must be ON

Notes

The use of asterisks (wildcards) is allowed only once for each direction of ANSI to ITU and ITU to ANSI. This provides a configurable default.

In the conversion direction of ANSI to ITU, an asterisk can be specified only for the ANSI `tta` parameter.

In the conversion direction of ITU to ANSI, the asterisk value must be specified for the `itu`, `tti`, `np`, and `nai` parameters.

Asterisks are not allowed when conversion is in both directions (`dir=both`).

The suffix digit manipulation parameters `nsdd` and `nsds` cannot be specified in the same command with the prefix digit manipulation parameters (`npdd` and `npds`). The `npdd` and `nsdd` parameters specify how many digits to delete, if any, from the beginning or end respectively of the Global Title address digits. The `npds` and `nsds` parameters specify what digits, if any, to append to the beginning or end respectively of the Global Title address digits.

The `gtixlat` parameter is expressed in the form of the ANSI GTI and the ITU GTI. The `gtixlat` parameter is used to indicate the conversion of the Global Title Indicator between the ANSI and ITU standards. For example: A `gtixlat` value of 24 converts an incoming ANSI GTI2 to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI2.

Output

```
chg-gtcnv:dir=atoi:gtixlat=22:tta=10:tti=5

      rlgncxa03w 03-11-07 11:43:07 EST  EAGLE 31.3.0
      CHG-GTCNV:  MASP A - COMPLTD
;
```

Related Topics

- [dlt-gtcnv](#)
- [ent-gtcnv](#)
- [rtrv-gtcnv](#)

4.1.69 chg-gtmod

Use this command to change GT Modification (GTMOD) entry data. The GTMOD entry consists of a GTMOD ID and GTMOD specific data.

Parameters



Note:

Definitions for the feature options specified by the `on` and `off` parameters are located in the Notes section.

gtmodid (mandatory)

GT Modification Identifier.

Range:

ayyyyyyy

1 alphabetic character followed by up to 8 alphanumeric characters

cgpasnn (optional)

Calling party subsystem number. This parameter specifies the calling party subsystem address that receives the message.

Range:

2 - 255, none

Default:

No change to the current value

ngti (optional)

New Global Title Indicator. This parameter specifies whether a new GTI translation format is type 2 or type 4.

Range:

2

4

none

Default:

No change to the current value

ngtmodid (optional)

New GT Modification Identifier.

Range:

ayyyyyyy

1 alphabetic character followed by up to 8 alphanumeric characters

nnai (optional)

New nature of address indicator. This parameter specifies the value that is used to replace the received NNAI.

Range:

0 - 127, none

Default:

none-if the `ngti=2` parameter is specified. Otherwise, no change to the current value.

nnp (optional)

New numbering plan. The value used to replace the received numbering plan.

Range:

0 - 15, none

Default:

none-if the `ngti=2` parameter is specified. Otherwise, no change to the current value.

npdd (optional)

Number of prefix digits to be deleted. The number of digits to be deleted from the prefix of the received GT address.

Range:

1 - 21, none

Default:

No change to the current value

n_pd_s (optional)

New prefix digits string. The digits to be prefixed to the received GT address.

Range:

1-21 digits, none

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

Default:

No change to the current value

n_sd_d (optional)

Number of suffix digits to be deleted. The number of digits to be deleted from the suffix of the received GT address.

Range:

1 - 21, none

Default:

No change to the current value

n_sd_s (optional)

New suffix digits string. The digits to be suffixed to the received GT address.

Range:

1-21 digits, none

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

Default:

No change to the current value

n_tt (optional)

New Translation Type. The value that replaces the received Translation Type.

Range:

0 - 255, none

Default:

No change to the current value

o_ff (optional)

Turns off the specified feature options. A comma-separated list of feature options that are requested to be turned off. Up to 8 feature options can be specified in the list.

Range:
gt0fill

on (optional)

Turns on the specified feature options. A comma-separated list of feature options that are requested to be turned on. Up to 8 feature options can be specified in the list.

Range:
gt0fill

precd (optional)

Precedence. This parameter specifies whether the prefix or suffix takes precedence during modification of the received GT address.

Range:

px

sfx

Default:

px-if the *npdd* and *npds* parameters are specified

sfx-if the *nsdd* and *nsds* parameters are specified

Example

```
chg-
gtmod:gtmodid=set2:ngti=4:nnp=4:nnai=2:off=gt0fill:npds=2:precd
=sfx:nsds=1
```

```
chg-
gtmod:gtmodid=set3:on=gt0fill:nnp=7:nnai=100:nsdd=2:ntt=none
```

Dependencies

If the *ngti=4* parameter is specified, then the *nnp* and *nnai* parameters must be specified.

4175 E4175 Cmd Rej: If NGTI is 4, NNP and NNAI must be specified

If the *ngti=2* parameter is specified, then the *nnp* and *nnai* parameters cannot be specified.

4176 E4176 Cmd Rej: If NGTI is 2, NNP and NNAI cannot be specified

The ANSI/ITU SCCP Conversion feature must be enabled before the *ngti* parameter can be specified.

4171 E4171 Cmd Rej: SCCP Conversion feature must be enabled

The Hex Digit Support for GTT feature must be turned on before hexadecimal digits can be specified for the *npds* or *nsds* parameter.

3006 E3006 Cmd Rej: Hex Digit Support for GTT feature must be ON

The GTMOD table is corrupt or cannot be found.

5284 E5284 Cmd Rej: Failed reading GTMOD table

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The AMGTT, AMGTT CdPA Only, or AMGTT CgPA Upgrade feature must be turned on before any parameter except the `ntt` parameter can be specified.

2789 E2789 Cmd Rej: AMGTT/AMGTT CdPA Only/AMGTT CgPA Upgrade must be ON

The value specified for the `gtmodid` parameter must already exist in the GTMOD table.

5285 E5285 Cmd Rej: GTMODID does not exist

If the `npdd/npds` and `nsdd/nsds` parameters are specified or were previously provisioned, then the `precd` parameter must be specified.

5289 E5289 Cmd Rej: PRECD must be specified when NPD(x) and NSD(x) are specified

The combined digit length of the values for the specified or previously provisioned `npds` and `nsds` parameters cannot be greater than 21.

5290 E5290 Cmd Rej: Combined digit length of NPDS & NSDS must not exceed 21

The `(n)gtmodid=none` parameter cannot be specified.

5292 E5292 Cmd Rej: GTMODID must not be specified as NONE

If the `ngti=4` parameter is specified, then the referred translated point code cannot be ANSI. For ANSI point codes, the `ngti` value must be 2.

5293 E5293 Cmd Rej: If NGTI is 4, referred GTT Translation PC cannot be ANSI

If the `ngti=4` parameter is specified or was previously provisioned, then a value of *none* cannot be specified for the `nnp` and `nnai` parameters.

5294 E5294 Cmd Rej: NNP and NNAI can not be NONE if NGTI is 4

If the `ngti=none` parameter is specified, then the `on=gt0fill` parameter cannot be specified.

5295 E5295 Cmd Rej: GT0FILL can't be ON if NGTI is NONE

If the `on=gt0fill` parameter is specified, then the `ngti` parameter must be specified.

4174 E4174 Cmd Rej: GT0FILL can be specified as ON only if NGTI is specified

The value specified for the `ngtmodid` parameter cannot already exist in the database.

5286 E5286 Cmd Rej: GTMODID already exist

The same value cannot be specified for the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

Notes

on/off options

- *gt0fill* —GT zero fill. Specifies whether the last 0 of the GTA is treated as a valid digit (OFF) or as filler (ON) during GT Modification for the `gti(x)=2` to `gti(x)=4` scenario.

Output

```
chg-gtmod:gtmodid=gtmodid2:ngti=4:nnp=4:nnai=2:off=gt0fill
```

```
tekelecstp 10-03-18 14:43:31 EST EAGLE 42.0.0
```

```
Command entered at terminal #4
```

```
GTMOD table is (2 of 50000) 1% full
```

```
CHG-GTMOD: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-gtmod](#)
- [ent-gtmod](#)
- [rtrv-gtmod](#)

4.1.70 chg-gtt

Use this command to change the routing objects for messages requiring global title translation. The global title addresses remain unchanged.

Note:

If the EGTT feature is turned on, then the GTT Selector (`ent/chg/dlt/rtrvgtttsel`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrvgta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. It is not recommended to run `ent/dlt/rtrv-tt & ent/chg/dlt/rtrv-gtt` commands as it may cause the advance GTA fields of GTT entry to be reset to the default values.

Parameters

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

gta (mandatory)

Global title address. The beginning of a range of global title digits.

Range:

1-21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

cggtmod (optional)

Calling party GT modification indicator. This parameter specifies whether calling party global title modification is required.

Range:

yes

no

Default:

no

egta (optional)

End global title address. The end of a range of global title digits.

Range:

1-21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

Default:

egta same as *gta*

gtmodid (optional)

Global title modification identifier.

Range:

aaaaaaaa

1 alphabetic followed by up to 8 alphanumeric characters

Default:

No change to the current value

loopset (optional)

SCCP loopset name. This parameter associates a translation set with a loopset.

Range:

aaaaaaaa

1 alphabetic character followed by up to 7 alphanumeric characters.

none —Disassociates the translation set from all loopsets.

mapset (optional)

MAP set ID. The Mated Application set ID.

Range:

1 - 36000, dflt

dflt —Default MAP set

mrnset (optional)

MRN set ID. The Mated Relay Node set ID.

Range:

1 - 3000, dflt, none

dflt -Default MRN set

none -The GTT translation does not participate in any load sharing

pc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

pca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24 (optional)

Point code.

pci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps*

nnnnn—*0-16383*

gc—*aa-zz*

m1-m2-m3-m4—*0-14* for each member; values must sum to *14*

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, *000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—*000-255*

ssa—*000-255*

sp—*000-255*

ri (optional)

Routing Indicator. This parameter provides routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range:

gt

Allow a called party address with a routing indicator value of *global title*.

ssn

Allow a called party address with a routing indicator value of *dpc/ssn*.

Default:

No change in current value.

split (optional)

Split or change an existing GTA range.

Range:

yes

Split the existing GTA range.

no

Change the existing GTA range.

Default:

yes

ssn (optional)

Subsystem number.

Range:

002 - 255

Default:

If the `xlat=dpcngt` parameter is specified, there is no change to the current value.

If the `xlat=dpcngt` parameter is not specified, the `ssn` parameter is removed.

ttn (optional)

Translation type name.

Range:

ayyyyyyy

1 alphabetic character followed by up to 8 alphanumeric characters

Default:

No translation name is given

type/typea/typei/typen/typen24/typeis/typens (optional)

Translation type. The translation type and network type. This parameter is the decimal representation of the 1-byte field used in SS7.

The `type` and `typea` parameters specify an ANSI network.

The `typei` parameter specifies an ITU-international network.

The `typen` parameter specifies an ITU-national network.

The `typen24` parameter specifies a 24-bit ITU-national network.

The `typeis` parameter specifies an ITU-international spare network.

The `typens` parameter specifies an ITU-national spare network.

A translation type numeric value may be entered as an ANSI type (`type` or `typea`) and as an ITU type (`typei/typen/typen24/typeis/typens`). However, they are separate entities.

The point code domain translation types for GTT are handled by the EAGLE protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I spare, ITU-N, ITU-N spare, and ITU-N24.

Range:

0 - 255

Default:

No translation type is specified

xlat (optional)

Translate indicator. Translation actions and routing actions.

Range:

dpc

dpcssn

dpcngt

Default:

No change in current value.

Example

```
chg-
gtt:type=5:gta=9195551212:egta=9195551999:xlat=dpcssn:ri=ssn:
pc=255-002-001 :ssn=255
```

```
chg-gtt:ttn=lidb2:gta=9197771212:egta=9197771999:xlat=dpcngt:ri=gt:
pc=255-002-001
```

```
chg-gtt:ttn=lidb6:gta=910777:pc=255-002-002
```

```
chg-gtt: type=10:gta=8005553232:egta=8005554000:gtmodid=sn1
```

```
chg-gtt:type=11:gta=8005553232:egta=8005554000:gtmodid=none
```

```
chg-gtt:gta=123456:pci=s-1-129-7:typei=41
```

```
chg-gtt:gta=223456:pcn=s-128-aa:typen=3
```

```
chg-
```

```
gtt:ttn=setmrn:gta=1234567890:egta=2234567890:pc=1-1-2:mrnset=none
```

```
chg-
```

```
gtt:ttn=setmrn:gta=2234567891:egta=2234567892:pc=1-1-2:mrnset=df1t
```

```
chg-gtt:ttn=setmrn:gta=2345678901:egta=3456789012:pc=1-1-3:mrnset=2
```

```
chg-
```

```
gtt:ttn=setmap:gta=2345678911:egta=3456789022:ri=ssn:pc=2-2-2:ssn=6:
mapset=df1t
```

The database contains a GTA range [5556000-5558000], but no part of the GTA range [5558001-5559000] exists. This example deletes the GTA range [5556000-5558000] from the database and adds a new GTA range [5556800-5559000] to the database.

```
chg-gtt:ttn=tst1:gta=5556800:egta=5559000:split=no
```

This example deletes the GTA range [5556800-5559000] from the database and adds three new GTA ranges [5556800-5556899], [5556900-5557000] and [5557001-5559000] to the database.

```
chg-gtt:ttn=tst1:gta=5556900:egta=5557000
```

This example specifies hexadecimal digits for the `gta`, `egta`, and `nsds` parameters.

```
chg-
```

```
gtt:type=1:xlat=dpcssn:ri=ssn:ssn=10:pc=1-1-1:gta=df3456789012345678
906: egta=df345678901234567890a
```

```
chg-
```

```
gtt:ttn=setmap:gta=2345678901:egta=3456789012:ri=ssn:pc=1-1-3:ssn=10
:mapset=2: loopset=none:gtmodid=set6
```

This example specifies that calling party GT modification is required.

```
chg-gtt:gta=981234:type=4:cggmod=yes
```

```
chg-gtt:typeis=5:gta=123456:egta=129999:xlat=dpc:ri=gt:pci=s-1-1-4
```

```
chg-gtt:typens=5:gta=123456:egta=129999:xlat=dpc:ri=gt:pcn=s-111
```

Dependencies

If the `pcn` parameter is specified, its format must match the format that was assigned with `chg-stpopts:npcfmti`.

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

The value specified for the `tt` parameter must correspond to the value specified for the `type/typeea/typei/typen/typen24/typeis/typens` parameter.

2473 E2473 Cmd Rej: TTN and TYPE do not correspond to each other

The value of the `tt` parameter must exist in the Translation Type table.

2466 E2466 Cmd Rej: Translation Type specified does not exist

The ANSI/ITU SCCP Conversion feature must be enabled before a translated point code and a translation type in different network types can be specified.

2470 E2470 Cmd Rej: Point Code network type does not match TT network type

If the `xlat=dpc`, `ri=ssn`, and `pc/pca/pci/pcn` parameters are specified, then the point code must exist in the MAP table.

2419 E2419 Cmd Rej: Point code does not exist in the remote point code table

If the new or existing `xlat` parameter value is `dpc`, the new or existing `ri` parameter value is `ssn`, and the `pc/pca/pci/pcn` parameter is not specified, a point code must exist in the Remote Point Code/MAP table.

2435 E2435 Cmd Rej: New/existing PC does not exist in the remote PC table

If the `xlat` parameter value is changed from `dpcssn` to `dpc` or `dpcngt`, a new `ssn` parameter value cannot be specified, and the current `ssn` parameter value must be removed.

2457 E2457 Cmd Rej: SSN can only be specified when XLAT=DPCSSN

If the new `xlat` parameter value is `dpcssn`, and the current `ssn` parameter value has been removed, a new `ssn` parameter value must be specified.

2442 E2442 Cmd Rej: SSN must be specified for new values of XLAT/RI

The start GTA length must equal the number of digits specified by the translation type. If the VGTT (variable length GTT) feature is turned on, then up to 10 GTA lengths per translation type are allowed. When the `ent-gtt` command is entered to create entries, the software keeps track of the lengths and allows only ten different lengths. The global title address specified for the translation type must then have the same number of digits as an existing GTA.

2404 E2404 Cmd Rej: GTA does not match translation type's number of digits

If the specified or previously provisioned translated point code is of type ANSI, then the `ngti` value of the referred GT Modification Identifier (see the `ent-gtmod` command) must be 2.

4903 E4903 Cmd Rej: If NGTI of referred GTMOD is 4, PC cannot be ANSI

If the `egta` parameter is specified, the length must equal the length of the start GTA.

2403 E2403 Cmd Rej: Length of EGTA must be equal to length of GTA

If the `egta` parameter is specified, the value must be greater than the value specified for the `gta` parameter.

2420 E2420 Cmd Rej: EGTA must be greater than or equal to GTA

The range of global title addresses to be changed, as specified by the start and end global title addresses, must match exactly or be contained within an existing range in the global title translation data for the specified translation type.

2401 E2401 Cmd Rej: GTA range overlaps a current range

The new `gta - egta` range cannot include the GTA or EGTA of an existing range. However, the new GTA range can completely fall within an existing GTA range. If the range overlaps, an error is generated that displays a list of overlapped GTAs. An example follows that shows what happens when the user attempts to enter a global title address range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, the error message displays the list of overlapped global title addresses:

```
The following GTA ranges overlap the input GTA range
START GTA END GTA 8005550000 8005551999 8005552000 8005553999 8005554000
8005555999
CHG-GTT: MASP A - Command Aborted
```

2401 E2401 Cmd Rej: GTA range overlaps a current range

The `tt` parameter cannot be specified with a value that has been defined as an alias for another translation type.

2465 E2465 Cmd Rej: Translation TYPE defined as an alias

Either the `type` or the `ttn` parameter must be specified.

2475 E2475 Cmd Rej: Either TYPE or TTN must be specified

Point code entries must be full point codes. Partial point codes are not allowed.

2859 E2859 Cmd Rej: Destination address must be a full point code

[Table 4-7](#) shows the valid combinations for the `xlat`, `ri`, and `ssn` parameters. All other combinations are rejected.

Table 4-7 Valid Parameter Combinations for chg-gtt Routing Parameters

New or Existing XLAT Value	New or Existing RI Value	Routing Action	SSN Value
DPC	GT	Translate DPC only and route on GT	Cannot be specified. The current database entry is removed.
DPC	SSN	Translate DPC only and route on SSN	Cannot be specified. The current database entry is removed.
DPCSSN	GT	Translate DPC and SSN and route on GT	Must be specified
DPCSSN	SSN	Translate DPC and SSN and route on SSN	Must be specified
DPCNGT	GT	Translate DPC only and route on GT	Cannot be specified. The current database entry is removed.

N/A N/A

To enter this command, the Remote Point Code table cannot be full.

2454 E2454 Cmd Rej: Remote point code table is full

To enter this command, the subsystem table for primary remote point codes cannot be full.

2453 E2453 Cmd Rej: Subsystem table for primary remote point code is full

If the `ri=ssn` parameter is specified, the `mrnset` parameter cannot be specified.

4475 E4475 Cmd Rej: MRNSET must be specified (only) if RI parameter is GT

If the Flexible GTT Load Sharing feature is enabled, the point code must already exist in the specified MRN set.

4483 E4483 Cmd Rej: PC does not exist in specified MRNSET

The specified MRN set must already exist in the MRN table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

The Flexible GTT Load-Sharing feature must be enabled before the `mrnset` parameter can be specified.

4479 E4479 Cmd Rej: MRNSET must be specified (only) if FGTTLS feature is enabled

The SEAS command is not allowed to operate on any other MRN set except the default MRN set.

4508 E4508 Cmd Rej: SEAS can only update translations with Default MRNSET/
MAPSET

The MRN table is corrupt or cannot be found.

2999 E2999 Cmd Rej: Failed reading the MRN table

The `mapset` parameter can only be specified if the Flexible GTT Load Sharing feature is enabled, and the `ri=ssn` parameter is specified. If the `ri=ssn` parameter is specified, the `mapset` parameter must be specified. If the `ri=gt` parameter is specified, the `mapset` parameter cannot be specified.

4532 E4532 Cmd Rej: MAPSET must be specified (only) if RI parameter is SSN

If the Flexible GTT Load Sharing feature is not enabled, the `mapset` parameter cannot be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

At least one entry must be provisioned in the specified MAP set in the MAP table.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

The specified or previously provisioned point code and subsystem number must exist in the specified or previously provisioned MAP set.

4528 E4528 Cmd Rej: PC/SSN doesn't exist in MAPSET

The SEAS command cannot operate on any MAP set other than the default MAP set.

4508 E4508 Cmd Rej: SEAS can only update translations with Default MRNSET/MAPSET

The specified GTA must lie within an existing GTA range in the specified GTT Set.

2402 E2402 Cmd Rej: GTA/SADDR range does not exist

The specified GTA range must not overlap with any other existing GTA range in the specified GTT Set.

2401 E2401 Cmd Rej: GTA range overlaps a current range

If the Flexible GTT Load Sharing feature is enabled, then the specified PC must exist in the MRN set.

4476 E4476 Cmd Rej: Specified PC must exist in MRNSET

If the `ri=gt` parameter is specified, the `mapset` parameter cannot be specified.

4532 E4532 Cmd Rej: MAPSET must be specified (only) if RI parameter is SSN

The Hex Digit Support for GTT feature must be turned on before hexadecimal digits can be specified for the `gta` or `egta` parameter.

3006 E3006 Cmd Rej: Hex Digit Support for GTT feature must be ON

The Loopset table is corrupt or cannot be found.

4567 E4567 Cmd Rej: Cannot access LoopSet table

The SCCP Loop Detection feature must be enabled before the `loopset` parameter can be specified.

4565 E4565 Cmd Rej: SCCP Loop Detection Feature is not enabled

The value of the `loopset` parameter must exist in the Loopset table.

4568 E4568 Cmd Rej: Loop Set entry does not exist

The site identification table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The database is corrupt or cannot be found. Severe database failure.

2416 E2416 Cmd Rej: Unable to access database. Severe database failure

The Loopset table is corrupt or cannot be found.

4567 E4567 Cmd Rej: Cannot access LoopSet table

If the `ri=gt` parameter is specified, the `mrnset` parameter must be specified.

4475 E4475 Cmd Rej: MRNSET must be specified (only) if RI parameter is GT

The GTT table cannot be full.

2462 E2462 Cmd Rej: GTT table is full

If the value of the `pc/pca/pci/pcn/pcn24` parameter is the True Point Code, then the `xlat=dpcssn` parameter and the `ri=ssn` parameter must be specified.

3648 E3648 Cmd Rej: XLAT must be DPCSSN and RI must be SSN if PC is the True PC

If the `ssn` parameter is specified, and if the value of the `pc/pca/pci/pcn/pcn24` parameter is the True Point Code, then the value of the `ssn` parameter must exist in the SS-APPL table.

3612 E3612 Cmd Rej: SSN must be in SS-APPL table when PC is true point code

The value of the `pc/pca/pci/pcn/pcn24` parameter must exist as a destination in the ordered route entity set or must reside in a cluster (ANSI only) that exists as a destination in the ordered route entity set.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

If the `xlat=dpcssn` and `ri=gt` parameters are specified, then the `ssn` parameter must be specified.

2442 E2442 Cmd Rej: SSN must be specified for new values of XLAT/RI

The `xlat=dpcssn` parameter must be specified before the `ssn` parameter can be specified.

2457 E2457 Cmd Rej: SSN can only be specified when XLAT=DPCSSN

If the `xlat=dpcngt` parameter is specified, then the `ri=gt` parameter must be specified.

2437 E2437 Cmd Rej: New/existing RI must be GT for new/existing XLAT=DPCNGT

The `gta` length is not defined for the specified translation type entity.

4009 E4009 Cmd Rej: GTA Length is not defined for TT

If the `tt` parameter is not specified, then the value of the `ttn` parameter must match the value of a `tt` parameter in the STP database.

2468 E2468 Cmd Rej: TTN specified does not exist

The value of the `pc/pca/pci/pcn/pcn24` parameter cannot be out of range.

2169 E2169 Cmd Rej: Point code out of range

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The value specified for the `pc` parameter cannot be associated with a proxy point code.

4707 E4707 Cmd Rej: PRX using DPC not allowed in GTT, MAP, MRN tables

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the `cggmod` parameter can be specified.

4789 E4789 Cmd Rej: Either AMGTT or AMGTT CgPA Upgrade feature must be ON

The GTT set associated with the translation type specified by the `ttn` parameter must have a set type of `cdgta` (see the `ent-gttset` command).

4997 E4997 Cmd Rej: SETTYPE of specified GTTSET must be CdGTA

The value specified by the `gtmodid` parameter must already exist in the GTMOD table (see the `ent-gtmod` command).

5285 E5285 Cmd Rej: GTMODID does not exist

The GTMOD table is corrupt or cannot be found.

5284 E5284 Cmd Rej: Failed reading GTMOD table

The `ttn=none` parameter cannot be specified.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

The network domain of the translation type specified by the `ttn` parameter cannot be CROSS (see the `ent-gttset` command).

5371 E5371 Cmd Rej: Network domain of corresponding `ttn` must not be CROSS

The `xlat=none` parameter cannot be specified.

5268 E5268 Cmd Rej: XLAT=NONE entry not supported for GTT commands

The values specified for the `gta` and `egta` parameters must match the GTA values referred in the GTT Action Path table (see the `ent-gttapath` command).

5318 E5318 Cmd Rej: GTT Actions Path(s) associated with Translation entry

Notes

The specified DPC, SSN, relative cost, and routing indicator will overwrite the existing data values in the table.

When the Intermediate GTT Load Sharing feature and the Flexible GTT Load Sharing feature are on, multiple relationships can be defined among a set of destination point codes in the existing MRN table. The relationship used in a particular translation is based on the GTA digits used for translation. The MRN Set and the post-translation PC formulate a key used as a lookup in the MRN table. The MRN table lookup results in a set of alternate PCs, one of which is selected (based on relative cost) to route the MSU in the most cost effective way.

When the Flexible GTT Load Sharing feature is turned on, multiple relationships among a set of PCs and SSNs in the existing MAP table are supported. The relationship used in a particular translation is based on the GTA digits used for translation. The MAP set ID and PC/SSN formulate a key that is used to perform lookup tasks in the MAP table. The lookup results in a set of mate PC/SSNs, one of which is selected to route the MSU in the most cost effective way.

If the AMGTT feature is turned off, then the Default GT Conversion table is used for conversion.

AMGTT feature: The digit manipulation parameters NSDD, NSDS are enabled with the AMGTT feature. NSDD and NSDS (suffix digit manipulation parameters) are mutually exclusive of the NPDD and NPDS (prefix digit manipulations parameters).

Spare Point Code feature (53120): The point code parameters PCI and PCN supports the Spare Point Code subtype prefix (s-). The Point Code domain translation types for GTT are handled by the system protocol processing as ANSI or ITU. ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Flexible GTT Load Sharing feature (74382): The Flexible GTT Load Sharing feature allows a PC or PC/SSN combination to be provisioned in multiple load-sharing relationships for post-GTT load sharing of intermediate and final GTT traffic.

Load sharing for intermediate GTT traffic requires the Intermediate GTT Load Sharing feature, which can be run in conjunction with the Flexible GTT Load Sharing feature. Intermediate GTT load sharing is performed through the MRN table, and the GTT destination is a PC. If both the Intermediate and Flexible GTT Load Sharing features are on, different load-sharing relationships can be defined between the same set of PCs, and different sets of destinations can contain the same PCs.

Load sharing for final GTT traffic is performed through the MAP table, and the GTT destination is a PC/SSN combination. If the Flexible GTT Load Sharing feature is on, different load-sharing relationships can be defined between the same set of PC/SSNs, and different sets of destinations can contain the same PC/SSN combinations.

A loopset consists of a set of point codes that form a routing loop in the network. If the SCCP Loop Detection feature is enabled, then the loopset can be associated with or disassociated from specified translation entries. Loopsets that are associated with translation entries are checked during intermediate and final GTT traffic routing. If a loop exists, then the system can be notified with or without discarding the associated traffic.

The maximum length of the resulting GTA string must not exceed 21 digits when translation is complete.

If the range specified by the `gta` and `egta` parameters does not exactly match the existing range, then the existing range is split. All addresses in the existing range that are outside the range specified by the `gta` and `egta` parameters retain the original `xlat`, `ri`, `pc`, and `ssn` parameters.

A new range is created that is bounded by the `gta` and `egta` parameters. The new range contains new values for the `xlat`, `ri`, `pc`, and `ssn` parameters that are present in the command, while retaining parameter values from the previous range that do not have corresponding new values in the command.

If the EGTT feature is turned on, then the following occurs for the `chg-gtt` command:

- For ANSI, if a GTT selector is deleted using the `dlt-gttset` command, then the corresponding GTT entry cannot be updated.
- For ITU, if a true GTT selector entry (GTI=2 or GTI=4) is deleted using the `dlt-gttset` command, or if the GTT set name of an entry is changed using the `chg-gttset` command, then the corresponding GTT entry cannot be updated.

Output

```
chg-gtt:gta=981234:type=4:cggtmod=yes:gtmodid=set3
```

```
tekelecstp 10-03-09 17:29:06 EST EAGLE 42.0.0
CHG-GTT: MASP A - COMPLTD
;
```

Related Topics

- [dlt-gtt](#)
- [ent-gtt](#)
- [rtrv-gtt](#)

4.1.71 chg-gttact

Use this command to change a Global Title Translation (GTT) Action entry. A GTT Action entry consists of an Action ID, an action, and action specific data. The action specified in the entry determines the process that is performed on the MSU during translation.

Parameters



Note:

Definitions for the feature options specified by the `on` and `off` parameters are located in the Notes section.

actid (mandatory)

GTT Action ID. The Action ID associated with the GTT Action entry.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

act (optional)

Action. The GTT Action that is applied to the message.

Range:

disc

discard message with no return error

dup

route a copy of the message to a specified duplicate node

fwd

route the original message to a specified forward node instead of the destination indicated by the GTT/ DB data

scpval

perform the SCCP MAP validation on MO/MT-FSM messages

sflog

send a copy of original message to SFLOG card

sfthrot

discard message if threshold is exceeded

srvc

apply service (GPORT/GFLEX/SMSMR) on the message

tcaperr

discard message that has a specified TCAP error

udts

discard message and send UDTS/XUDTS

atcaperr (optional)

ANSI TCAP error cause. The reason for discarding a message that contains the ANSI TCAP portion associated with the *tcaperr* GTT Action.

Range:

0 - 255

Default:

No change to the current value

atirescgmodid (optional)

Calling party global title modification identifier for ATI. The GTMOD ID to be associated with the calling party of a SFAPP GTT Action entry.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

Default:

None

bursts (optional)

The number of previous 30 second windows from where the unused capacity can be carried over to the current window.

Range:

0 - 2

Default:

0

cdgtmodid (optional)

Called party global title modification identifier.

Range:

ayyyyyyy

1 alphabetic followed by up to 8 alphanumeric characters

none —removes the association between the GTT Action entry and the CdPGT modification identifier

Default:

No change to the current value

cggtmodid (optional)

Calling party global title modification identifier.

Range:

ayyyyyyy

1 alphabetic character followed by up to 8 alphanumeric characters

none —removes the association between the GTT Action entry and the CgPGT modification identifier

Default:

No change to the current value

cgpc (optional)

ANSI CgPA point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

cgpca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

cgpci (optional)

ITU international CgPA point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

cgpcn (optional)

ITU national CgPA point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

cgpcn16 (optional)

16-bit ITU national CgPA point code with subfields *unit number-sub number area-main number area (un-sna-mna)*. The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:*p--*, 000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix--p**un---000---127**sna ---000---15**mna---000---31***cgpcn24 (optional)**

24-bit ITU national CgPA point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:*p-*, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000—255**ssa—000—255**sp—000—255***cgpcogmsg (optional)**

The data used as the Calling Party Point Code in the outgoing message.

Range:***dflt***

Default. The standard Global Title Translation process supplies the CgPA PC.

cgpcicmsg

CgPA PC data from the incoming MSU

opcicmsg

OPC data from the incoming MSU

provcgpc

provisioned CGPC/CGPCA/CGPCI/CGPCN/CGPCN24/CGPCN16 data in the GTT Action

remove

CGPC will be removed from outgoing MSU

Default:

No change to the current value

defactid (optional)

Default Action ID. The default action that is performed when the *fwd* GTT Action fails to route the MSU or when *sftrot* or *scpval* GTT Action fails.

Range:

ayyyyyyy

1 leading alphabetic character followed by 8 alphanumeric characters

The `defactid` parameter can take one of the following values:

- GTT Action ID with a GTT Action of *disc*, *udts*, or *tcaperr* (see the `act` parameter). This value must already be defined in the GTT Action table.
- *fallback* —The MSU is routed using routing data in the translated MSU when action is *fwd*. When action is set to *scpval/sfthrot*, the MSU is discarded.

itcaperr (optional)ITU TCAP error cause. The reason for discarding the message that contains the ITU TCAP portion associated with the *tcaperr* GTT Action.**Range:**

0 - 255

Default:

No change to the current value

loopset (optional)

SCCP loopset name. This parameter associates a GTT Action with a loopset.

Range:

ayyyyyyy

One leading alphabetic character and up to 7 following alphanumeric characters.

none —disassociates the GTT Action from all loopsets**Default:**

No change to the current value

mapset (optional)

MAP Set ID. The Mated Application Set ID.

Range:1 - 36000, *dflt**dflt* —Default MAP set**Default:**

No change to the current value

mrnset (optional)

MRN Set ID. The Mated Relay Node Set ID.

Range:1 - 3000, *dflt*, *none**dflt* —Default MRN Set ID*none* —The GTT Action does not participate in any loadsharing.**Default:**

No change to the current value

nactid (optional)

New GTT Action ID.

Range:*ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters

ndgt (optional)

Number of digits to be matched. This parameter is used to specify the number of digits that needs to be matched between the SCCP and MAP parameters.

Range:*1-21, all**all* - All the digits present in the SCCP and MAP parameters are matched.**Default:***all***off (optional)**

Disables or turns off the specified feature options. A comma-separated list of feature options that are requested to be turned off. Up to 8 feature options can be specified in the list.

Range:*uimreqd**useicmsg**handlresp***on (optional)**

Enables or turns on the specified feature options. A comma-separated list of feature options that are requested to be turned on. Up to 8 feature options can be specified in the list.

Range:*uimreqd**useicmsg**handlresp***pc (optional)**ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).**Synonym:***pca***Range:***p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p-*When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001-005`.
 When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006-255`.
 The point code `000-000-000` is not a valid point code.

pci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, *0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*, *p-*, *ps*

zone—*0-7*

area—*000-255*

id—*0-7*

The point code `0-000-0` is not a valid point code.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*, *p-*, *ps*

nnnnn—*0-16383*

gc—*aa-zz*

m1-m2-m3-m4—*0-14* for each member; values must sum to 14

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, *000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—*000-255*

ssa—*000-255*

sp—*000-255*

pcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix--p

un---000---127

sna ---000---15

mna---000---31

psirescgmodid (optional)

Calling party global title modification identifier for PSI. The GTMOD ID to be associated with the calling party of a SFAPP GTT Action entry.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

Default:

None

ri (optional)

Routing indicator. The routing indicator in the SCCP called party address of the MSU being processed.

Range:

gt

route by the global title digits

ssn

route by the subsystem number

snai (optional)

The service nature of address indicator.

Range:

Sub -- Subscriber number

Natl -- National significant number

intl -- International number

rnidn -- Routing number prefix and international dialed/directory number

rnndn -- Routing number prefix and national dialed/directory number

rnsdn -- Routing number prefix and subscriber dialed/directory number

ccrndn -- Country code, routing number, and national directory number

snp (optional)

The service numbering plan.

Range:

e164 ---- E.164 numbering plan

e212 ---- E.212 numbering plan

e214 ---- E.214 numbering plan

sprm (optional)

SCCP Parameter. This parameter is used to decide whether the SCCP GTA, NP and NAI (if GTI=4 and NP/NAI is present) will be picked up from CDPA or CGPA and used for comparison.

Range:

CDPA --- SCCP CDPA GTA, NP and NAI (if GTI=4 and NP/NAI is present) is used for comparison.

CGPA --- SCCP CGPA GTA, NP and NAI (if GTI=4 and NP/NAI is present) is used for comparison.

Default:

CDPA

svccerr (optional)

The action to be performed when the Service triggered by GTT Action Services fails. The MSU can be processed by either applying the results of the pre-Service GTT, or continue with the specific Service error.

Range:

SRVC --- Continue with specific service error

GTT --- Apply the result of pre-GTT service

Default:

SRVC

svcname (optional)

Service to be applied on the MSU when *act* is set to *svrc*.

Range:

GFLEX, *GPORT*, *SMSMR*

ssn (optional)

Subsystem number. The value used for the SSN in the SCCP called party address of the MSU.

Range:

2 - 255, *none*

none —an SSN is not used

threshold (optional)

Throttling threshold. The MSU is discarded if the number of MSUs serviced by the SFTHROT action exceeds this value in a 30 second period.

Range:
1-42949676295

Default:
1

tpm (optional)

TCAP Parameter. This parameter is used to decide whether the MAP digits, NP and NON (if NP and NON are present) will be picked up from SMRPDA or SMRPOA and used for comparison.

Range:
SMRPDA --- MAP digits, NP and NON (if NP and NON are present) from SMRPDA are used for comparison

SMRPOA --- MAP digits, NP and NON (if NP and NON are present) from SMRPOA are used for comparison

Default:
SMRPDA

udtserr (optional)

UDTS error cause. The reason associated with the UDTS GTT Action for discarding the message.

Range:
0 - 255

Default:
No change to the current value

Example

```
chg-gttact:actid=dup1:act=dup:ssn=40
```

Changing the Action Id of the already provisioned GTT Action entry:

```
chg-gttact:actid=dup1:act=dup:nactid=dup2
```

```
chg-gttact:actid=disc1:act=tcaperr:atcaperr=10
```

```
chg-gttact:actid=actfwd1:act=fwd:pc=2-2-2:ri=gt:defactid=none
```

```
chg-gttact:act=dup:actid=dup2:cdgtmodid=set1:cggtmodid=none
```

```
chg-gttact:act=dup:actid=dup5:cggtmodid=set4
```

```
chg-
```

```
gttact:actid=actfwd2:act=fwd:pc=2-2-2:ri=gt:defactid=fallback:onn=useicmsg
```

```
chg-
```

```
gttact:actid=actfwd3:act=fwd:pc=2-2-2:ri=gt:cgpcogmsg=opcicmsg
```

```
chg-
```

```
gttact:actid=actdup3:act=dup:pc=2-2-2:ri=gt:cgpc=1-1-1:cgpcogmsg=provcgpc
```

```
chg-  
gttact:act=fwd:actid=actfwd5:pcn16=1-14-0:ri=gt:mrnset=dflt:cgpcogmsg  
g=remove  
  
chg-gttact:actid=gflex1:act=GPORT  
  
chg-gttact:actid=actsrvcl:snp=e164:snai=rnndn:svccerr=gtt  
  
chg-gttact:actid=actsfthrot:threshold=2000:bursts=1  
  
chg-gttact:actid=sflog1:nactid=sflogid1  
  
chg-gttact:actid=scpval1:act=scpval:sprm=cgpa:ndgt=20  
  
chg-gttact:actid=sfapp8:failactid=fallback  
  
chg-gttact:actid=sfapp8:hlraddr=tcapparm:tt=26  
  
chg-gttact:actid=sfapp9:hlraddr=usecdpa  
  
chg-gttact:actid=sfapp10:act=sfapp:atirescgmodid=set1  
  
chg-gttact:actid=sfapp10:psirescgmodid=set5  
  
chg-gttact:actid=sfapp10:on=handlresp
```

Dependencies

A value of *dup* or *fwd* must be specified for the *act* parameter before the *pc/pca/pci/pcn/pcn24/pcn16*, *cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16*, *cgpcogmsg*, *cdgtmodid*, *cggmodid*, *ssn*, *ri*, *mrnset*, *mapset*, or *loopset* parameter can be specified and before a value of *useicmsg* can be specified for the *on* or *off* parameter.

The *act=tcaperr* parameter must be specified before the *atcaperr* and *itcaperr* parameters can be specified.

The *act=udts* parameter must be specified before the *udtserr* parameter can be specified.

The *act=fwd/sfthrot/scpval* parameter must be specified before the *defactid* parameter can be specified.

The Service Numbering Plan (*snp*), Service Nature of Address Indicator (*snai*), Service Name (*svcname*) and Service Error Cause (*svccerr*) parameters can only be specified when *act* is set to *SRVC*.

The *svc/sflog/sfthrot/scpval* GTT Action cannot be changed to any other GTT Action (Duplicate/forward/TCAP Error/Discard/UDTS Error) and vice versa.

The parameters *threshold* and *bursts* can only be specified when action is set to *sfthrot*.

The *sfthrot* GTT Action cannot be changed to any other GTT Action (Duplicate/Forward/TCAP Error/Discard/UDTS Error/SRV/SCPVAL) and vice versa.

The *scpval* GTT Action cannot be changed to any other GTT Action (Duplicate/Forward/TCAP Error/Discard/UDTS Error/SRV/SFTHROT) and vice versa.

The *sflog* GTT Action cannot be changed to any other GTT Action (Duplicate/Forward/TCAP Error/Discard/UDTS Error/SRV/SFTHROT/SCPVAL) and vice versa.

The SCCP Parameter (*sprm*), TCAP Parameter (*tprm*) can only be specified when *act* is set to *scpval* and *valtype* is set to *scptotcap*.

The Number of digits to match (*ndgt*) parameters can only be specified when *act* is set to *scpval*.

2155 E2155 Cmd Rej: Invalid parameter combination specified

A value of *disc*, *udts*, *tcaperr* or *scpval* must be specified for the *act* parameter before a value of *uimreqd* can be specified for the *on* or *off* parameter.

5068 E5068 Cmd Rej: Uimreqd only valid for DISC/UDTS/TCAPERR/SCPVAL

The GTT Action table is corrupt or cannot be found.

5067 E5067 Cmd Rej: Unable to access GTT Action table

The GTT Action entry specified by the *actid* parameter must already exist in the database.

5071 E5071 Cmd Rej: GTT Action Id does not exist

The value specified for the *nactid* parameter cannot already exist in the database.

5199 E5199 Cmd Rej: (New) GTT Action Id already exist

A value of *none* or *fallback* cannot be specified for the *actid* or *nactid* parameter.

5069 E5069 Cmd Rej: (New) GTT Action Id must not be NONE/FALLBACK

If a value of *dup* or *fwd* is specified for the *act* parameter then the *pc/pca/pci/pcn/pcn24/pcn16* parameter must be specified.

If the *cgpcogmsg=provcgpc* parameter is specified, then the *cgpc/cgpca/cgpci/cgpcn/cgpcn24/pcn16* parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

The GTT Action - DISCARD feature must be enabled before a value of *disc*, *udts*, or *tcaperr* can be specified for the *act* parameter.

5119 E5119 Cmd Rej: GTT Action- DISCARD Feature must be enabled

The GTT Action - DUPLICATE feature must be enabled before the *act=dup* parameter can be specified.

5120 E5120 Cmd Rej: GTT Action- DUPLICATE Feature must be enabled

The specified PC/SSN must already exist in the specified MAP set.

4528 E4528 Cmd Rej: PC/SSN doesn't exist in MAPSET

If the *ri=ssn* parameter is specified, then the *mrnset* parameter cannot be specified.

4475 E4475 Cmd Rej: MRNSET must be specified (only) if RI parameter is GT.

The Flexible GTT Load Sharing feature must be enabled before the *mrnset* parameter can be specified.

4479 E4479 Cmd Rej: MRNSET must be specified (only) if FGTTLS feature is enabled

If the *ri=gt* parameter is specified, then the *mapset* parameter cannot be specified.

4532 E4532 Cmd Rej: MAPSET must be specified (only) if RI parameter is SSN.

The Flexible GTT Load Sharing feature must be enabled before the `mapset` parameter can be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled.

The specified MAP set must already exist in the database.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

The specified MRN set must already exist in the MRN table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

If the Flexible GTT Load Sharing feature is enabled, then the specified PC must already exist in the specified MRN set.

4483 E4483 Cmd Rej: PC does not exist in specified MRNSET.

The point code specified for the `pc/pca/pci/pcn/pcn24/pcn16` parameter must be a full point code.

3090 E3090 Cmd Rej: Full Point Code must be specified.

The value specified for the `pc/pca/pci/pcn/pcn24/pcn16` parameter must already exist as a destination in the Route table.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

If the value specified for the `pc/pca/pci/pcn/pcn24/pcn16` parameter is the STP true point code, then the value specified for the `ssn` parameter must already exist in the SS-APPL table.

3612 E3612 Cmd Rej: SSN must be in SS-APPL table when PC is true point code

The value specified for the `pc` parameter cannot be associated with a proxy point code.

4707 E4707 Cmd Rej: PRX using DPC not allowed in GTT, MAP, MRN tables

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

If the `pc/pca/pci/pcn/pcn24/pcn16`, `ri=ssn` and `ssn` parameters are specified, then the PC/SSN must be populated in the Remote Point Code and MAP tables.

2450 E2450 Cmd Rej: PC/SSN does not exist as a mated application

The point code specified for the `pc/pca/pci/pcn/pcn24/pcn16` and `cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16` parameters must be within the range specified by the parameter definition.

2169 E2169 Cmd Rej: Point code out of range

A value of `disc`, `utds`, or `tcaperr` must be specified for the `defactid` parameter.

5172 E5172 Cmd Rej: Invalid action type

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The STP Self-identity table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The SS-APPL table is corrupt or cannot be found.

3638 E3638 Cmd Rej: Failed Reading SS Appl table

The MRN table is corrupt or cannot be found.

2999 E2999 Cmd Rej: Failed reading the MRN table

The `ri=ssn` and the `ssn=none` parameters cannot be specified together in the command.

4880 E4880 Cmd Rej: SSN must not be NONE if RI is SSN.

The SCCP Loop Detection feature must be enabled before the `loopset` parameter can be specified.

4565 E4565 Cmd Rej: SCCP Loop Detection Feature is not enabled.

The value specified for the `loopset` parameter must already exist in the database.

4568 E4568 Cmd Rej: Loop Set entry does not exist.

The Loopset table is corrupt or cannot be found.

4567 E4567 Cmd Rej: Cannot access LoopSet table

Failure while reading the GTT Action Set Table.

5197 E5197 Cmd Rej: Unable to access GTT Action Set table.

The GTT Action - FORWARD feature must be enabled before the `act=fwd` parameter can be specified.

5201 E5201 Cmd Rej: GTT Action- FORWARD Feature must be enabled

The GTMOD table is corrupt or cannot be found.

5284 E5284 Cmd Rej: Failed reading GTMOD table.

The point code specified by the `pc/pca/pci/pcn/pcn24/pcn16` parameter must be associated with a valid route.

5072 E5072 Cmd Rej: PC has no allowed route

If the value specified for the `pc/pca/pci/pcn/pcn24/pcn16` parameter is the STP true point code, then the `ri=ssn` parameter must be specified.

5245 E5245 Cmd Rej: RI must be SSN if PC is the True PC

The values specified for the `cdgtmodid` and `cggtmodid` parameters must already exist in the GTMOD table.

5291 E5291 Cmd Rej: CGGTMODID/CDGTMODID does not exist

The AMGTT or AMGTT CgPA Upgrade feature must be turned on before the `cggtmodid` parameter can be specified.

4789 E4789 Cmd Rej: Either AMGTT or AMGTT CgPA Upgrade feature must be ON

The GTT Action ID specified by the `defactid` parameter must already exist.

5071 E5071 Cmd Rej: GTT Action Id does not exist

The `pc/pca/pci/pcn/pcn24/pcn16` and `cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16` parameters must have the same domain.

5299 E5299 Cmd Rej: PC and CGPC must be of same domain

One of the optional parameters must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The value specified by the `act` parameter cannot be changed until the associated Action ID is referenced by an Action Set or by any forward/scpval/sfthrot/sflog action. The value can only be changed from `disc/udts/tcaperr` to `disc/udts/tcaperr`.

5198 E5198 Cmd Rej: GTT Action entry is referenced

The `defactid=none` parameter cannot be specified.

5298 E5298 Cmd Rej: Default ACTID must not be specified as NONE

The same value(s) cannot be specified for the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

The GFLEX feature must be activated if the GFLEX service is entered with the `SRVCNAME` parameter.

3500 E3500 Cmd Rej: GFLEX feature must be ON

The GPORT feature must be activated if the GPORT service is entered with the `SRVCNAME` parameter.

3991 E3991 Cmd Rej: GPORT feature must be ON

The Portability Check for Mobile Originated SMS feature/PPSMS feature must be turned ON, or the MO SMS ASD/MO SMS B-Party Routing/MO SMS GRN/MO SMS IS41-to-GSM Migration/MO-based GSM SMS NP/MO-based IS41 SMS NP feature must be ENABLED before the SMSMR Service is entered with `SRVCNAME` parameter.

3107 E3107 Cmd Rej: At least one of SMSMR services must be configured

If the value specified for the `SRVCNAME` parameter is GFLEX, then the `snai=sub`, `natl` or `intl` parameter must be specified.

If the value specified for the `SRVCNAME` parameter is GPORT/SMSMR, then the `snai=rnidn`, `rnndn`, `rnsdn` or `ccrndn` parameter must be specified.

3114 E3114 Cmd Rej: For GFLEX, the SNAI must be SUB, NATL OR INTL

If the value specified for the `SRVCNAME` parameter is GPORT/SMSMR, then the `snp=e164` parameter must be specified.

If the value specified for the `SRVCNAME` parameter is GFLEX, then the `snp=e164`, `e212` or `e214` parameter must be specified.

3990 E3990 Cmd Rej: (N)SNP must be E164 when (N)SERV=GPORT/SMSMR

The GTT destination must exist in the DSTN table.

4753 E4753 Cmd Rej: DSTN table entry was not found

A value of *fwd*, *dup* or *scpval* must be specified for the `act` parameter before a value of *useicmsg* can be specified for the `on` or `off` parameter.

3465 E3465 Cmd Rej: USEICMSG only valid for FWD/DUP/SCPVAL

The value specified for the `atirescgmodid` and `psirescgmodid` parameters must already exist in the GTMOD table.

5285 E5285 CmdRej: GTMODID does not exist.

AMGTT feature must be enabled, if `atirescgmodid` or `psirescgmodid` is specified.

2789 E2789 Cmd Rej: AMGTT/AMGTT CdPA Only/AMGTT CgPA Upgrade must be ON

Notes

on/off options

- *uimreqd* —UIM required. Specifies whether a UIM should be generated.
- *useicmsg* —Use Incoming Message. Specifies whether to apply GTT Action data to the message as the message was received (OFF) or after any EPAP or GTT translation/modification data has been applied (ON).
- *handlresp* — Handle response message. Specifies whether to apply GTT Action data to the message as the message is a response message to an Eagle-generated ATI or PSI.

GTT Actions *svrc*, *scpval*, *sflog* and *sftthrot* cannot be changed to any other GTT Action (Duplicate/Forward/TCAP Error/Discard/UDTS Error/*svrc*/*scpval*/*sflog*/*sftthrot*) and vice versa. A *svrc* GTT Action representing one service can be changed to another service.

GTI, TT and NPDS must be provisioned in GTMOD table to associate `gtmodid` with `ATIRESCGMODID` or `PSIRESCGMODID`.

Output

```
chg-gttact:actid=dup1:ssn=40
```

```
tekelecstp 10-02-04 18:29:41 EST  EAGLE 42.0.0
chg-gttact:actid=dup1:ssn=40
Command entered at terminal #4
```

```
GTT Action table is (2 of 2000) 1% full
```

```
CHG-GTTACT: MASP A - COMPLTD
```

```
;
```

```
chg-gttact:actid=gflex1:act=GPORT
```

```
tekelecstp 13-12-07 13:41:11 EST  EAGLE 46.0.0
chg-gttact:actid=gflex1:act=GPORT
Command entered at terminal #1
GTT Action table is (5 of 2000) 1% full
```

```

CHG-GTTACT: MASP A - COMPLTD
;

chg-gttact:actid=sfthrot1:threshold=2000:bursts=1

tekelecstp 15-05-27 15:43:59 EST Eagle 46.3.0
  chg-gttact:actid=sfthrot1:threshold=2000:bursts=1
  Command entered at terminal #1
  GTT Action table is (5 of 2000) 1% full
  CHG-GTTACT: MASP A - COMPLTD
;

chg-gttact:actid=scpval1:act=scpval:sprm=cgpa:ndgt=20

tekelecstp 15-05-28 10:27:42 EST EAGLE 46.3.0
  chg-gttact:actid=scpval1:act=scpval:sprm=cgpa:ndgt=20
  Command entered at terminal #1
  GTT Action table is (20 of 2000) 1% full
  CHG-GTTACT: MASP A - COMPLTD
;

chg-gttact:actid=sfapp3:act=sfapp:atirescgmodid=set5

tekelecstp 18-05-07 10:13:26 EST EAGLE 46.7.0.0-74.5.0
  chg-gttact:actid=sfapp3:act=sfapp:atirescgmodid=set5
  Command entered at terminal #4.
  GTT-ACT table is (3 of 2000) 1% full.
  CHG-GTTACT: MASP A - COMPLTD
;

```

Related Topics

- [dlt-gttact](#)
- [ent-gttact](#)
- [rtrv-gttact](#)

4.1.72 chg-gttapath

Use this command to change a GTT Action path entry. A GTT Action path consists of pairs of "setname + value" for Opcode/CgGTA/CdGTA. Each "setname + value" pair must already be defined in the GTT translation table.

Parameters**gttpn (mandatory)**

GTT Path name.

Range:

ayyyy

1 leading alphabetic character and up to 4 following alphanumeric characters.

acn (optional)

Application context name. The ITU TCAP ACN field in the incoming MSU.

Range:

0 - 255, * none

none—there is no ITU TCAP ACN field in the incoming MSU

cdgta (optional)

Called Party Global Title Address.

Range:

1-21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

cdgttsn (optional)

GTT set name (CDPA type).

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

cggta (optional)

Calling Party Global Title Address.

Range:

1-21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

cggtsn (optional)

GTT set name (CGPA type).

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

family (optional)

The ANSI TCAPFAMILY field in the incoming MSU.

Range:

0 - 255, *, none

none —there is no value in the ANSI TCAP FAMILY field in the incoming MSU

ngttpn (optional)

GTT Path name. The new GTT path name.

Range:

ayyyy

1 leading alphabetic character and up to 4 following alphanumeric characters.

opcode (optional)

The TCAP *OPCODE* field in the incoming MSU.

Range:

0 - 255, *, *none*

none —there is no value in the TCAP *OPCODE* field in the incoming MSU

opgttsn (optional)

GTT set name (Opcode type).

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

pkgtype (optional)

The ANSI and ITU TCAP package type.

Range:

ituuni

ITU unidirectional

qwp

Query with Permission

qwop

Query without Permission

resp

Response

cwp

Conversation with Permission

cwop

Conversation without Permission

any

Wildcard value

bgn

Begin

end

End

cnt

Continue

ituabort

ITU abort

ansiabort

ANSI abort

ansiuni

ANSI unidirectional

ANSI TCAP Package Types:*ansiuni, qwop, qwop, resp, cwp, cwop, ansiabort, any***ITU TCAP Package Types:***bgn, ituabort, ituuni, any, end, cnt***Example**

```
chg-
gttapath:gttpn=path1:opgttsn=opsn2:acn=1-1-1-1-1-1-1:opcode=123
:pkgtype=ituuni
```

```
chg-gttapath:gttpn=path1:cggtsn=cgsn2:cggta=45673
```

```
chg-gttapath:gttpn=path1:ngttn=path2
```

Dependencies

If the `family` parameter is specified, then a value of *ansiuni*, *qwop*, *qwop*, *resp*, *cwp*, *cwop*, *ansiabort*, or *any* must be specified for the `pkgtype` parameter.

5140 E5140 Cmd Rej: FAMILY parameter is allowed with ANSI TCAP PKGTYPE

If the `acn` parameter is specified, then a value of *bgn*, *ituabort*, *ituuni*, *any*, *end*, or *cnt* must be specified for the `pkgtype` parameter.

5141 E5141 Cmd Rej: ACN parameter is allowed with ITU TCAP PKGTYPE

If the `pkgtype=ituabort` parameter is specified, then a value of *none* must be specified for the `acn` and `opcode` parameters.

If the `pkgtype=ansiabort` parameter is specified then a value of *none* must be specified for the `family` and `opcode` parameters.

5144 E5144 Cmd Rej: PKGTYPE abort requires ACN/FAMILY/OPCODE value none

The `opcode`, `pkgtype`, and `family` parameters must be specified together for ANSI TCAP translations. The `opcode`, `pkgtype`, and `acn` parameters must be specified together for ITU TCAP translations.

5106 E5106 Cmd Rej: OPCODE,PKGTYPE,ACN/FAMILY must be specified together

If the `family` and `opcode` parameters are specified, then either both parameters must have a value of *none* or neither parameter can have a value of *none*.

5148 E5148 Cmd Rej: Both FAMILY and OPCODE must be NONE if either is NONE

The GTA table is corrupt or cannot be found.

3119 E3119 Cmd Rej: Failed Reading GTT TRANS table

The GTT DBMM table is corrupt or cannot be found.

3120 E3120 Cmd Rej: Failed Reading GTT DBMM table

A value of *none* cannot be specified for the `opgttsn`, `cggtsn`, and `cdgttsn` parameter(s).

3565 E3565 Cmd Rej: Set name must not be specified as NONE

The GTT Action Path table is corrupt or cannot be found.

5186 E5186 Cmd Rej: Unable to access GTT Action Path table

The specified path cannot already exist in the GTT Action Path table.

5187 E5187 Cmd Rej: Specified Path entry already exists

The `acn` and `family` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The GTT Action - DISCARD, GTT Action - FORWARD, or GTT Action - DUPLICATE feature must be enabled before this command can be entered.

3451 E3451 Cmd Rej: Controlled Feature is not enabled

A translation entry corresponding to the specified (`opgttsn + opcode + pkgtype + acn/family`)/(`cggttsn + cggta`)/(`cdgttsn + cdgta`) parameters must exist.

4510 E4510 Cmd Rej: Translation entry does not exist

At least one GTT set-value combination must be specified.

5319 E5319 Cmd Rej: At least one set-value combination must be specified

The GTT set name specified by the `opgttsn`, `cggttsn`, or `cdgttsn` parameter must match an existing GTT set name.

3561 E3561 Cmd Rej: GTT Set specified by GTT Set Name/index does not exist

The GTT set name specified by the `opgttsn`, `cggttsn`, and `cdgttsn` parameters must have set types of `opcode`, `cggta`, and `cdgta`, respectively.

4399 E4399 Cmd Rej: Set type of GTT Set Name doesn't match

The GTT Set table must be accessible.

3544 E3544 Cmd Rej: Failed reading GTT Set Table

The GTA value specified by the `cggta` or `cdgta` parameter must be the start GTA in the translation entry.

5375 E5375 Cmd Rej: Specified CgGTA/CdGTA not a start GTA in a Translation entry

The GTT path name specified by the `gttpn` parameter must already exist in the database.

5378 E5378 Cmd Rej: Specified path name doesn't exist

A GTT set-value combination(s) cannot be associated with a GTT path that is already associated to another combination. The value specified for the path name must be different from the existing path name.

3827 E3827 Cmd Rej: No change requested

The GTT path name specified by the `ngttpn` parameter cannot already exist in the database.

5376 E5376 Cmd Rej: Specified path name already exists

The value specified for the `gttpn` and `ngttpn` parameters cannot be a reserved word.

3040 E3040 Cmd Rej: <string> cannot be used in this command

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

Output

```
chg-gttapath:gttpn=path2:cggtsn=cgsn2:cggta=45673
```

```
tekelecstp 10-02-04 18:29:41 EST EAGLE 42.0.0
chg-gttapath:gttpn=path2:cggtsn=cgsn2:cggta=45673
Command entered at terminal #4.
```

```
GTT Action Path table is (1 of 10000) 1% full
```

```
CHG-GTTAPATH: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-gttapath](#)
- [ent-gttapath](#)
- [rtrv-gttapath](#)

4.1.73 chg-gttaset

Use this command to change Global Title Translation (GTT) Action Set data. A GTT Action Set consists of an Action Set name and a set of Action IDs. The specified Action IDs determine the actions that are applied to the MSU during translation. Action IDs are configured using the `ent/chg/dlt-gttact` commands.

Parameters



Note:

Definitions for the feature options specified by the `on` and `off` parameters are located in the Notes section.

actsn (mandatory)

GTT Action Set Name.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

actid1 (optional)

GTT Action ID 1. The first Action ID associated with the GTT Action Set.

Range:*aaaaaaaa*

1 leading alphabetic character and up to 8 following alphanumeric characters

none—removes the Action ID from the GTT Action Set**actid2 (optional)**

GTT Action ID 2. The second Action ID associated with the GTT Action Set.

Range:*aaaaaaaa*

1 leading alphabetic character and up to 8 following alphanumeric characters

none—removes the Action ID from the GTT Action Set**actid3 (optional)**

GTT Action ID 3. The third Action ID associated with the GTT Action Set.

Range:*aaaaaaaa*

1 leading alphabetic character and up to 8 following alphanumeric characters

none—removes the Action ID from the GTT Action Set**actid4 (optional)**

GTT Action ID 4. The fourth Action ID associated with the GTT Action set.

Range:*aaaaaaaa*

1 leading alphabetic character and up to 8 following alphanumeric characters

none—removes the Action ID from the GTT Action Set**actid5 (optional)**

GTT Action ID 5. The fifth action ID associated with the GTT Action set.

Range:*aaaaaaaa*

1 leading alphabetic character and up to 8 following alphanumeric characters

none—removes the Action ID from the GTT Action Set**actid6 (optional)**

GTT Action ID 6. The sixth Action ID associated with the GTT Action Set.

Range:*aaaaaaaa*

1 leading alphabetic character and up to 8 following alphanumeric characters

none—removes the Action ID from the GTT Action Set**nactsn (optional)**

New GTT Action Set Name.

Range:*aaaaaaaa*

1 leading alphabetic character and up to 8 following alphanumeric characters

off (optional)

Disables or turns off the specified feature options. A comma-separated list of feature options that are requested to be turned off. Up to 8 feature options can be specified in the list.

Range:
testmode

on (optional)

Enables or turns on the specified feature options. A comma-separated list of feature options that are requested to be turned on. Up to 8 feature options can be specified in the list.

Range:
testmode

Example

Changing the GTT Action Set name:

```
chg-gttaset:actsn=asetdisc1:nactsn=asetdisc2
```

Removing Action ID1 and ID3 from an Action Set and changing ID2 to another ID in the GTT Action Set table:

```
chg-
gttaset:actsn=asetdup1:actid1=none:actid2=disc1:actid3=none:off
=testmode
```

```
chg-
gttaset:actsn=asetfwd1:actid1=actfwd1:actid2=actdup1:on=testmod
e
```

```
chg-gttaset:actsn=asetsrvcl:actid1=actdup2:actid2=actsrvcl
```

Dependencies

The GTT Action table is corrupt or cannot be found.

5067 E5067 Cmd Rej: Unable to access GTT Action table

The GTT Action Set table is corrupt or cannot be found.

5197 E5197 Cmd Rej: Unable to access GTT Action Set table

The Action ID specified by the `actid(X)` parameter(s) must already exist in the GTT Action table.

5071 E5071 Cmd Rej: GTT Action Id does not exist

The value specified for the `nactsn` parameter cannot already exist in the database.

5235 E5235 Cmd Rej: (New) GTT Action Set name already exist

The GTT Action Set name specified by the `actsn` parameter must already exist in the GTT Action Set table.

5196 E5196 Cmd Rej: GTT Action Set does not exist

A value of *none* cannot be specified for the `(n)actsn` parameter.

5113 E5113 Cmd Rej: (New) GTT Action Set name must not be none.

At least one Action ID in the Action Set must be associated with an action other than *none* or *fallback*.

5069 E5069 Cmd Rej: (New) GTT Action Id must not be NONE/FALLBACK

Only one Action ID in an Action Set can be associated with an action of type *disc*, *udts*, *tcaperr* or *svrc*.

If an Action ID with an action of *fwd* is specified, then no other Action ID in the Action Set can be associated with an act of *disc*, *udts*, *tcaperr*, *svrc*, or *fwd*.

If an Action ID with an action of *svrc* is specified, then no other Action ID in the same Action Set can be associated with an act of *fwd*, *disc*, *udts*, *tcaperr*, or *svrc*.

If the Action Set contains five Action IDs with an action of *dup* then the remaining Action ID cannot have an action of *dup*.

Action IDs associated with an action of *disc*, *udts*, *tcaperr*, *svrc*, or *fwd* must be the last actions in an Action Set.

Action IDs associated with an action of *sftthrot* must be the first action in an Action Set.

If the Action Set contains two Action IDs associated with an action of *scpval*, then the remaining action ID cannot be associated with an action of *scpval*.

5172 E5172 Cmd Rej: Invalid action type

One of the optional parameters must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The *actid1/actid2/actid3/actid4/actid5/actid6* parameters must each specify a unique Action ID in the command.

5236 E5236 Cmd Rej: GTT Action Ids should be unique in a GTT Action Set

The EGTT feature must be turned on before this command can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

The same option(s) cannot be specified for the *on* and *off* parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF parameters cannot be specified

A maximum of two SCPVAL GTT actions are allowed in an action set. Both action sets should have a different combination of SPRM and TPRM.

3498 E3498 Cmd Rej: SPRM & TPRM combination must be unique in a GTTAct Set

Notes

on/off options

- *testmode*—invokes a field-safe Test Tool used to debug the GTT Action Set rules

Output

```
chg-gttaset:actsn=asetdup1:actid1=dup2:on=testmode
```

```
tekelecstp 10-02-04 18:29:41 EST EAGLE 42.0.0
chg-gttaset:actsn=asetdup1:actid1=dup2:on=testmode
Command entered at terminal #4.
```

```
GTT Action Set table is (2 of 20000) 1% full
```

```
CHG-GTTASET: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-gttset](#)
- [ent-gttset](#)
- [rtrv-gttset](#)

4.1.74 chg-gttset

Use this command to change the global title translation (GTT) set linked with an existing `gti(x)`, `tt`, `np/npv`, `nai/naiv`, `lsn`, `selid`, `eaglegen`, and `cgssn` combination.

Note:

If the EGTT feature is turned on, then the GTT Selector (`ent/chg/dlt/rtrvgttset`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrvgta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. It is not recommended to run `ent/dlt/rtrv-tt & ent/chg/dlt/rtrv-gtt` commands as it may cause the advance GTA fields of GTT entry to be reset to the default values.

Parameters

Note:

The nature of address indicator parameters (`naiv` or `nai`) and the numbering plan parameters (`npv` or `np`) can be specified using either a mnemonic or an explicit value. Both values cannot be specified at the same time for the same parameter. [NAIV/NAI Mapping](#) shows the mapping between the `naiv` and `nai` values. [NPV/NP Mapping](#) shows the mapping between the `npv` and `np` values.

gti/gtia/gtii/gtin/gtin24/gtiis/gtins /gtin16 (mandatory)

Global title indicator.

For all EGTT selector commands, the domain is defined as GTI and GTIA (ANSI), GTII (ITU international), GTIN (ITU national), GTIN24 (24-bit ITU national), GTIIS (ITU international spare), GTINS (ITU national spare) and GTIN16 (16-bit ITU National). For the selector commands, GTI and GTIA are equivalent. GTT selectors can be provisioned for the same translation type (TT) with different ITU domains. GTT selectors are provisioned independently for each domain.

Range:

0, 2, 4

Supported value for ANSI: *gti=0, 2* and *gtia=0, 2*
Supported values for ITU: *gtii/gtin/gtin24/gtiis/gtins/gtin16=0, 2, 4*

cdgtasn (optional)

CdPA GTA GTT set name.

Range:

aaaaaaaa

1 leading alphabetic character and up to 8 following alphanumeric characters.

none —Set names do not point to the CdGTA set.

none —Set names do not point to the CdGTA set.

cdgttsn (optional)

CdPA GTT set name.

Range:

aaaaaaaa

1 leading alphabetic and up to 8 following alphanumeric characters.

none —Set names do not point to the CdPA GTT set.

cggtasn (optional)

CgPA GTA GTT set name.

Range:

aaaaaaaa

1 leading alphabetic character and up to 8 following alphanumeric characters.

none —Set names do not point to the CgGTA set.

cggttsn (optional)

CgPA GTT set name.

Range:

aaaaaaaa

1 leading alphabetic and up to 8 following alphanumeric characters.

none —Set names do not point to the CgPA GTT set.

cgpcs (optional)

CgPA PC GTT set name.

Range:

aaaaaaaa

1 leading alphabetic character and up to 8 following alphanumeric characters.

none —Set names do not point to the CgPC set.

cgssn (optional)

CgPA subsystem number.

Range:

0 - 255

eag1egen (optional)

This parameter specifies whether the selector is used by system-generated messages.

Range:

yes
used by a system MSU

gttsn (optional)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range:

ayyyyyyy
1 leading alphabetic character and up to 8 following alphanumeric characters.

lsn (optional)

Linkset name. The linkset used in GTT routing.

Range:

ayyyyyyyy
1 leading alphabetic character followed by up to 9 alphanumeric characters

msgtype (optional)

SCCP message type.

Allow one or more SCCP message types (UDT/UDTS/XUDT/XUDTS) for every GTT Selector entry. This will help in screening different message types differently.

Range:

sub

u

us

x

xs

all

Default

all

nai (optional)

Nature of Address indicator.

Range:

sub

rsvd

natl

intl

dflt

naiv (optional)

Nature of Address indicator value.

Range:*0 - 127***np (optional)**

Numbering Plan.

Range:*e164**generic**x121**f69**e210**e212**e214**private**dflt***npv (optional)**

Numbering Plan value.

Range:*0 - 15***selid (optional)**

Selector ID.

Range:*0 - 65534***tt (optional)**

Translation type.

Range:*0 - 255***Example**

```
chg-  
gttset:gtii=2:tt=40:cdgtasn=setcggta:cgpcsn=none:cgssn=10:selid=12  
chg-gttset:gtia=2:tt=253:gttset=newansi  
chg-gttset:gtin=4:tt=0:np=dflt:nai=dflt:gttset=setint000
```

This example changes the selectors linked with GTTSN ANSI1 so that the selectors are linked with ANSI2 (if ANSI2 is an existing GTT set in the database):

```

chg-gttset:gtii=4:tt=5:npv=1:naiv=2:gttsn=ansi2
chg-
gttset:gtin=4:tt=60:npv=5:naiv=5:cgpcsn=setcgpc:selid=100:cgssn=10
chg-
gttset:gtia=2:tt=21:cdgttsn=setcgpc:cdgttsn=setcdgta:cgssn=20:selid=1:lsn=ls10
chg-gttset:gtia=2:tt=2:cdgttsn=setcdgta:lsn=ls1010
chg-gttset:gtia=2:tt=2:cdgttsn=setcdgta:eaglegen=yes
chg-gttset:gtins=4:cdgttsn=setitu004:tt=4:np=e164:nai=intl
chg-gttset:gti=0:cdgttsn=setansi0
chg-gttset:gtin16=2:tt=10:cgpcsn=abc
chg-gttset:gtii=2:tt=17:msgtype=u:cdgttsn=cdset1
chg-gttset:gtii=2:tt=17:msgtype=x,xs:cdgttsn=cdset3

```

Dependencies

The EGTT feature must be turned on before this command can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

The `np` and `npv` parameters cannot be specified together in the same command.

3551 E3551 Cmd Rej: NP and NPV must not be specified together

The `nai` and `naiv` parameters cannot be specified together in the same command.

3552 E3552 Cmd Rej: NAI and NAIV must not be specified together

The `gti/gtia=4`, `gti(x)=`, and `gti(x)=3` parameters cannot be specified.

3553 E3553 Cmd Rej: GTI(A)=4, and GTI(x)=1 and 3 are not supported

If the `gti/gtia/gtii/gtin/gtin24/gtiis/gtins/gtin16=2` parameter is specified, then the `np/npv` and `nai/naiv` parameter combinations cannot be specified.

3554 E3554 Cmd Rej: NP(V) and NAI(V) must not be specified for given GTI value

If the `gtii/gtin/gtin24/gtiis/gtins/gtin16=4` parameter is specified, an `np(v)/nai(v)` parameter combination must be specified. These parameters can be specified in any combination.

3555 E3555 Cmd Rej: NP(V) and NAI(V) must be specified for given GTI value

The network domain (ANSI or ITU) must match that of the GTT Set entry specified by the `cdgttsn`, `cdgtasn`, or `gttsn` parameter.

3562 E3562 Cmd Rej: Network domains of GTI and CdPA GTT Set must match

The GTT set specified by the `cdgtasn`, `cdgttsn`, or `gttsn` parameter must already exist in the GTT Set table.

4511 E4511 Cmd Rej: CdPA GTT Set does not exist

A value of *none* cannot be specified for the `gttsn`, `cdgtasn`, `cdgttsn`, `cggttsn`, `cggtasn`, or `cgpcsn` parameter.

4514 E4514 Cmd Rej: CdPA and/or CgPA GTT Set can't be specified as NONE

The OBSR feature must be enabled before the `cdgtasn`, `cggtasn`, `cgpcsn`, or `cgssn` parameter can be specified.

4393 E4393 Cmd Rej: Origin Based SCCP Routing feature must be enabled

The GTT set specified by the `cggttsn`, `cggtasn`, or `cgpcsn` parameter must already exist in the GTT Set table.

4486 E4486 Cmd Rej: CgPA GTT Set does not exist

The network domain of the CgPA GTT Set specified by the `cggttsn`, `cggtasn`, or `cgpcsn` parameter must match the domain indicated by the `gti(x)` parameter.

4487 E4487 Cmd Rej: Network domains of GTI and CgPA GTT Set must match

The set type specified by the `cggtasn` or `cgpcsn` parameter must match the set type of the corresponding entry in the GTT set table. For example, the `cggtasn` parameter should have a set type of *cggt*, and the `cgpcsn` parameter should have a set type of *cgpc*.

4488 E4488 Cmd Rej: CGGTASN/CGPCSN set type doesn't match

The SSNSELID table must be accessible.

4469 E4469 Cmd Rej: Failed reading SSNSELID table

A value of *none* cannot be specified for the `cdgtasn` parameter if the `gttsn` parameter specifies the only GTTSET associated with that selector.

4513 E4513 Cmd Rej: CDGTASN/GTTSN can not be specified as NONE

If the FLOBR feature is turned on, then the `cdgtasn`, `cggtasn`, and `cgpcsn` parameters cannot be specified.

5064 E5064 Cmd Rej: CDGTASN/CGGTASN/CGPCSN are not valid when FLOBR ON

An entry must already exist that matches the `msgtype`, `gti(x)`, `tt`, and `np(v)/nai(v)` combination of parameters.

5122 E5122 Cmd Rej: CdPA/CgPA GTT Selector does not exist

If the OBSR feature is enabled or the FLOBR feature is turned on, then the `gttsn` parameter cannot be specified.

2083 E2083 Cmd Rej: GTTSN parameter mustn't be specified

The `np` and `nai` parameters must both have a value of *dfit* or neither can have a value of *dfit*.

3578 E3578 Cmd Rej: NP and NAI must be specified as DFLT together

The FLOBR feature must be turned on before the `l sn`, `eaglegen`, `cdgttsn`, and `cggttsn` parameters can be specified.

5060 E5060 Cmd Rej: Flexible Linkset Optional Based Routing must be ON

At least one GTT set name parameter must be specified. These parameters include:

- `cdgtasn`, `cggtasn`, or `cgpcsn` if the OBSR feature is enabled

- `cdgttsn` or `cggtsn` if the FLOBR feature is turned on
- `gttsn` if the OBSR feature is not enabled and the FLOBR feature is not turned on

4397 E4397 Cmd Rej: At least one GTT Set Name must be specified

The GTT Set specified by the `cdgtasn` or `gttsn` parameter must have a set type of `cdgta` (see the `ent-gttset` command).

4519 E4519 Cmd Rej: CdPA GTT Set type must be `cdgta`

The GTT Set table is corrupt or cannot be found.

3544 E3544 Cmd Rej: Failed reading GTT Set Table

The GTT Selector table is corrupt or cannot be found.

3543 E3543 Cmd Rej: Failed reading GTT Selector Table

The GTTDBMM table is corrupt or cannot be found.

3120 E3120 Cmd Rej: Failed Reading GTT DBMM table

The linkset specified by the `lsn` parameter must already exist in the Linkset table.

2346 E2346 Cmd Rej: Linkset not defined

A database error occurred while trying to access the SSNSELID table.

2601 E2601 Cmd Rej: Command aborted due to system error

The SSNSELID Table cannot contain more than 100,000 entries.

4414 E4414 Cmd Rej: SSNSELID Table is full

The GTTDBMM Table cannot contain more than 42,502 entries.

3686 E3686 Cmd Rej: GTT DBMM table is full

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

If the `lsn` parameter is specified, then the `cdgttsn` or `cggtsn` parameter must be specified.

5062 E5062 Cmd Rej: CDGTTSN and/or CGGTTSN must be specified with LSN

The `cggtasn`, `cgpcsn`, and `cggtsn` parameters cannot be specified together in the command.

5128 E5128 Cmd Rej: CGGTASN, CGPCSN and CGGTTSN are mutually exclusive

The `gttsn`, `cdgtasn`, and `cdgttsn` parameters cannot be specified together in the command.

5129 E5129 Cmd Rej: GTTSN, CDGTASN and CDGTTSN are mutually exclusive

If the `gttsn`, `cdgttsn`, or `cdgtasn` parameter is specified, then the `cgssn` parameter cannot be specified. If the `cggtasn`, `cgpcsn`, or `cggtsn` parameter is specified, then the `cgssn` parameter must be specified.

5130 E5130 Cmd Rej: CGSSN must not be specified with GTTSN, CDGTTSN or CDGTASN

If the `eaglegen=yes` parameter is specified, then the `msgtype`, `lsn`, `selid`, `gttsn`, `cdgtasn`, `cgssn`, `cggttsn`, `cggtasn`, and `cgpcsn` parameters cannot be specified.

5061 E5061 Cmd Rej: Cannot use `msgtype/lsn`, `selid`, `gttsn/cg*` fields if `eaglegen=yes`

If the `np=dflt` or `nai=dflt` parameter is specified, then the `cggtasn`, `cggttsn`, `cgpcsn`, `cgssn`, `eaglegen`, `lsn`, and `selid` parameters cannot be specified.

5132 E5132 Cmd Rej: Invalid parameter(s) specified with `NP=DFLT` and `NAI=DFLT`

If the `gti(x)=0` parameter is specified, then the `eaglegen`, `tt`, `np/npv`, and `nai/naiv` parameters cannot be specified.

3507 E3507 Cmd Rej: `EAGLEGEN,TT,NP(V),NAI(V)` parameters mustn't be specified

If a value of 2 or 4 is specified for the `gti(x)` parameter, then the `tt` parameter must be specified.

4367 E4367 Cmd Rej: `TT` parameter must be specified

The MBR - supported GTT set types (`IMEI/IMSI/MSISDN/VLRNB/SMRPDA/SMRPOA`) cannot be referenced by GTT selectors.

3508 E3508 Cmd Rej: MBR settypes cannot be referenced by GTT selectors

Notes

The entry that matches the specified parameter combination is assigned to the specified `gttsn`.

When the Origin-based SCCP Routing feature is enabled, two GTT sets, either the `cdgtasn/cggtasn` or the `cdgtasn/cgpcsn`, can be assigned to a GTT selector. The `cggtasn` and `cgpcsn` GTT sets are mutually exclusive and cannot be assigned to the same GTT selector.

When the value of the `cggtasn/cgpcsn` GTT set is specified as none, that combination (`domain`, `tt`, `gti`, `np/npi`, `na/nai`, `cgssn`, and `selid`) are deleted from the database. At any point of time, each provisioned selector must have at least one GTT set.

There is no J7 FAK dependency on the `GTIA/GTIN16/GTIN24` parameters. The command can be entered successfully whether the J7 FAK is enabled or not enabled.

GTT Selector entries configured using `GTIN24/GTIN16` parameters shall be treated as ITU-N24 entries if the J7 FAK is disabled and shall be treated as ITU-N16 entries if the J7 FAK is enabled.

The command will change `CgPA/CdPA` GTTSet for the EXACT match of the GTTSet parameters. For example, a given selector is provisioned with `msgtype=u,us`. To change the `CdPA` GTTSet associated with that selector, only the below command can be used:

- `chg-gttset:gtii=2:tt=17:msgtype=u,us:cdgttsn=cdset1`

Similarly, to change associated GTTSet of a given selector provisioned with `msgtype=all`, only the below command can be used:

- `chg-gttset:gtii=2:tt=32:msgtype=all:cdgttsn=cdset1`

Output

```
chg-gttset:gti=0:cdgttsn=setansi0

tekelecstp 10-04-28 13:02:49 EST Eagle 42.0.0
chg-gttset:gti=0:cdgttsn=setansi0
Command entered at terminal #4.
CHG-GTTSEL: MASP A - COMPLTD
;

chg-gttset:gttsn=cd1:msgtype=u:gtii=0

tekelecstp 17-07-14 15:22:49 EST Eagle 46.6
chg-gttset:gttsn=cd1:msgtype=u:gtii=0
Command entered at terminal #4.
CHG-GTTSEL: MASP A - COMPLTD
;

chg-gttset:gttsn=u,us,xs:msgtype=u:gtii=0

tekelecstp 17-07-14 15:22:49 EST Eagle 46.6
chg-gttset:gttsn=cd1:msgtype= u,us,xs:gtii=0
Command entered at terminal #4.
CHG-GTTSEL: MASP A - COMPLTD
;
```

Related Topics

- [dlt-gttset](#)
- [ent-gttset](#)
- [rtrv-gttset](#)

4.1.75 chg-gttset

Use this command to specify the attributes to change for an existing set of global title translations.

Parameters

gttsn (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range:

ayyyyyyy

1 alphabetic character followed by up to 8 alphanumeric characters.

checkmulcomp (optional)

This option indicates whether or not to find translation for multiple components (up to 3 components, if present) of a TCAP message.

Range:***on***

Perform lookup for translation for multiple components.

off

Perform lookup for translation for first component only.

Default:

No change to the current value

gttsetmeasrqd (optional)

GTTSET Measurement required. This parameter specifies whether to perform per GTTSET measurements.

Range:***yes***

perform per GTTSET Measurements

no

do not perform per GTTSET Measurements

pertrans

perform per GTT Translation Measurements

Default:

No change to the current value

ndgt (optional)

Number of digits. The number of digits required for GTAs associated with this GTT set.

Range:*1 - 21***netdom (optional)**

Network domain. This command does not distinguish between ITU national or ITU international because the Enhanced Global Title Translation (EGTT) feature does not discriminate between the ITU-I and ITU-N translations.

**Note:**The `netdom` parameter refers to the incoming message network domain.**Range:*****cross******ansi******itu*****ngttsn (optional)**

New GTT set name. The GTT set name that will replace the existing GTT set name.

Range:*ayyyyyyy*

1 alphabetic character followed by up to 8 alphanumeric characters.

npsn (optional)

GTT set name (Not present Set Name). This Parameter can have IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA GTT set types.

Range:*Ayyyyyyy, none*

1 leading alphabetic character and up to 8 following alphanumeric characters

sxudt (optional)

Segmented XUDT. This parameter specifies whether TOBR will support the processing of segmented XUDT message.

Range:**yes**

perform decoding of segmented XUDT message

no

do not perform decoding of segmented XUDT message

Default:*no***Example**

```
chg-gttset:gttsn=lidb:netdom=cross
chg-gttset:gttsn=setxyz:netdom=cross:ndgt=10
chg-gttset:gttsn=acdgt:ngttsn=acdgt1
chg-gttset:gttsn=imsi1:npsn=imsi
chg-gttset:gttsn=setopcode:checkmulcomp=on
chg-gttset:gttsn=setabc:gttsetmeasrqd=pertrans
chg-gttset:gttsn=opcode1:sxudt=no
```

DependenciesThe (n) `gttsn=none` parameter cannot be specified.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

The specified `netdom` parameter value must be *cross*. This command cannot be used to change the `netdom` setting from *cross* to *ansi* or *itu*.

4367 E4367 Cmd Rej: TT parameter must be specified

If the `settype` parameter has a value of *cdssn*, *cgpc*, *cgssn*, *opc*, *opcode*, or *dpc*, then the `ndgt` parameter cannot be specified.

4535 E4535 Cmd Rej: NDGT parameter mustn't be specified

The EGTT feature must be turned on prior to using this command.

3557 E3557 Cmd Rej: EGTT must be ON

The value specified for the `gttsn` parameter must match the name of an existing GTT Set.

3561 E3561 Cmd Rej: GTT Set specified by GTT Set Name/index does not exist

If the VGTT feature is turned on, the `ndgt` parameter cannot be specified.

4011 E4011 Cmd Rej: NDGT Parameter is invalid for VGTT

The ANSI/ITU SCCP Conversion feature must be enabled before the `netdom` parameter can be specified.

4171 E4171 Cmd Rej: SCCP Conversion feature must be enabled

If GTAs are assigned to the GTT set, the `ndgt` parameter cannot be specified.

3567 E3567 Cmd Rej: GTT Set must not be used by or assigned to any Translation

The `netdom=cross` parameter can be specified if the `settype=cdgta/imei/imsi/msisdn/vlrnb/smrpoa/smrpda` parameter is specified.

4402 E4402 Cmd Rej: SETTYPE must be CDGTA/MBR Type when NETDOM=CROSS

The GTTSET table must be accessible.

3544 E3544 Cmd Rej: Failed reading GTT Set Table

The GTT DBMM table must be accessible.

3120 E3120 Cmd Rej: Failed Reading GTT DBMM table

The NPSN parameter will be specified with IMEI/MSI/MSISDN/VLRNB/SMRPOA/SMRPDA GTT set types.

The NPSN parameter can be of MBR set type only.

3284 E3284 Cmd Rej: NPSN Param only supports MBR SETTYPES

The value specified for the `npsn` parameter must match the name of an existing GTT Set of IMEI/MSI/MSISDN/VLRNB/SMRPOA/SMRPDA types.

3400 E3400 Cmd Rej: NPSN not configured under GTTSET

The GTT set type of GTT set entry referred by the NPSN parameter should be different from the GTT set type referred by the GTTSN parameter.

3401 E3401 Cmd Rej: NPSN SETTYPE should be different from GTT SETTYPE.

The GTT set specified by the `gttsn` parameter must not be associated with the GTT set referred by the NPSN parameter.

3402 E3402 Cmd Rej: GTTSN and NPSN must not form Circular Entries

The GTTSET domain and the associated NPSN set domain must match, when the SCCP conversion feature is not ON.

3274 E3274 Cmd Rej: GTTSET and NPSN set domain mismatch

CHECKMULCOMP parameter can be specified with OPCODE GTT set types only.

E3522 Cmd Rej: CHECKMULCOMP/PRIO can be specified with OPCODE SETTYPES only

The SXUDT parameter must be specified with the OPCODE GTT set type only.

3458 E3458 Cmd Rej: DEFMAPVR/SXUDT can be specified with OPCODE SETTYPES only.

Output

```
chg-gttset:gttsn=acdgta:ngttsn=acdgtal
```

```
tekelecstp 10-04-28 17:58:38 EST Eagle 42.0.0  
GTT-SET table is (1 of 2000) 1% full.
```

```
CHG-GTTSET: MASP A - COMPLTD
```

```
;
```

```
chg-gttset:gttsn=msisdn:npsn=smrpoal
```

```
tekelecstp 15-05-28 17:58:38 EST Eagle 46.3.0  
GTT-SET table is (1 of 2000) 1% full.
```

```
CHG-GTTSET: MASP A - COMPLTD
```

```
;
```

```
chg-gttset:gttsn=setopcode:checkmulcomp=on
```

```
tekelecstp 16-10-10 13:54:11 MST EAGLE 46.5.0.0.0-70.5.0  
CHG-GTTSET: MASP A - COMPLTD
```

```
;
```

```
chg-gttset:gttsn=imeil2:gttsetmeasrqd=yes
```

```
tekelecstp 17-05-11 15:30:38 EST Eagle 46.6.0  
GTT-SET table is (1 of 10000) 1% full.
```

```
CHG-GTTSET: MASP A - COMPLTD
```

```
;
```

```
chg-gttset:gttsn=opcode1:sxudt=yes
```

```
tekelecstp 17-07-15 14:28:38 EST Eagle 46.6.0  
GTT-SET table is (3 of 10000) 1% full.
```

```
CHG-GTTSET: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-gttset](#)
- [ent-gttset](#)
- [rtrv-gttset](#)

4.1.76 chg-gtw-stp

Use this command to modify the level 3 ANSI transfer control status (TFCSTAT) when converted from ITU to ANSI.

Parameters

tfcstat (mandatory)

The desired level 3 control status on a TFC message received from an ITU node destined for an ANSI node.

Range:

1 - 3

Example

```
chg-gtw-stp:tfcstat=1
```

Dependencies

None

N/A N/A

Notes

None

Output

```
chg-gtw-stp:tfcstat=1
```

```
rlghncxa03w 04-01-11 11:34:04 EST EAGLE 31.3.0  
CHG-GTW-STP: MASP A - COMPLTD  
;
```

Related Topics

- [rtv-gtw-stp](#)

4.1.77 chg-gws-actset

Use this command to configure the gateway screening (GWS) stop action sets in the system database. Stop action sets are used to define the actions performed on the Message Sending Units (MSUs) that pass the gateway screening process. The GWS Stop Action table contains a maximum of 16 stop action sets, with each stop action set containing a maximum of 10 stop actions. The first three GWS stop action sets (`actid=1`, `actid=2`, and `actid=3`) are already defined with the existing GWS stop actions shown in [Gateway Screening Stop Action Definitions](#).

Table 4-8 Gateway Screening Stop Action Definitions

Gateway Screening Stop Action ID	Gateway Screening Stop Action Set Name	Stop Action 1	Stop Action 2	Action Performed by the system
1	copy	copy	—	Copy the MSU for the STP LAN feature.
2	rdct	rdct	—	Redirect the MSU for the DTA feature.
3	cr	copy	rdct	Copy the MSU for the STP LAN feature and redirect the MSU for the DTA feature.

 **Caution:**

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gws=on` parameters in the `chg-ls` command, the GWS action in the stop action set will be performed at the end of the screening process.

Parameters

 **Note:**

The TIF, TIF2, and TIF3 stop actions each represent a specific TIF service. The services are provisioned using the `chg-npp-serv` command.

 **Note:**

Definitions of the values for the `act1` - `act10` parameters are located in the *Notes* section.

 **Note:**

GWS Stop Actions DUP and STRIP can be provisioned only in the GWS Action Set.

actid (mandatory)

The identification number of the GWS stop action set.

Range:
4 - 16

act1 (optional)
Stop action 1.

Range:

cncf

copy

dup

none

rdct

sccp

strip

tif

tif2

tif3

tinp

tlnp

Default:
No change to the current value

act2 (optional)
Stop action 2.

Range:

cncf

copy

dup

none

rdct

sccp

strip

tif

tif2

tif3

tinp

tlnp

Default:

No change to the current value

act3 (optional)

Stop action 3.

Range:

cncf

copy

dup

none

rdct

sccp

strip

tif

tif2

tif3

tinp

tlnp

Default:

No change to the current value

act4 (optional)

Stop action 4.

Range:

cncf

copy

dup

none

rdct

sccp

strip

tif

tif2

tif3

tinp

tlnp

Default:

No change to the current value

act5 (optional)

Stop action 5.

Range:

cncf

copy

dup

none

rdct

sccp

strip

tif

tif2

tif3

tinp

tlnp

Default:

No change to the current value

act6 (optional)

Stop action 6.

Range:

cncf

copy

dup

none

rdct

sccp

strip

tif

tif2

tif3

tinp

tlnp

Default:

No change to the current value

act7 (optional)

Stop action 7.

Range:

cncf

copy

dup

none

rdct

sccp

strip

tif

tif2

tif3

tinp

tlnp

Default:

No change to the current value

act8 (optional)

Stop action 8.

Range:

cncf

copy

dup

none

rdct

sccp

strip

tif

tif2

tif3

tinp

tlnp

Default:

No change to the current value

act9 (optional)

Stop action 9.

Range:

cncf

copy

dup

none

rdct

sccp

strip

tif

tif2

tif3

tinp

tlnp

Default:
No change to the current value

act10 (optional)
Stop action 10.

Range:

cncf

copy

dup

none

rdct

sccp

strip

tif

tif2

tif3

tinp

tlnp

Default:
No change to the current value

actname (optional)
The name of the GWS stop action set.

Range:
ayyyy
One alphabetic character followed by up to five alphanumeric characters.

Default:
No change to the current value

a11 (optional)
Clears all of the actions in the specified stop action set and deletes the stop action set.

Range:
none

Default:
Undefined

force (optional)
Use this parameter when erasing the action set or changing the action name.

Range:

yes

Example

```
chg-gws-actset:actid=4:actname=cncf:act1=cncf
```

```
chg-gws-actset:actid=5:actname=dup:act1=dup
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

If the `all=none` parameter is specified, then no other optional parameters can be specified.

3668 E3668 Cmd Rej: No other optional parameters may be specified with ALL

The `actname=none` parameter cannot be specified.

3040 E3040 Cmd Rej: <string> cannot be used in this command

The `force=yes` parameter must be specified to change an existing stop action.

3679 E3679 Cmd Rej: FORCE=YES must be specified to change existing stop action

The Calling Name Conversion Feature must be turned on before the CNCF stop action can be specified.

3669 E3669 Cmd Rej: The CNCF feature must be ON if CNCF is specified

The TLNP feature must be turned on or the ISUP NP with EPAP feature must be enabled before the TLNP stop action can be specified.

4365 E4365 Cmd Rej: Either TLNP or ISUP NP with EPAP must be enabled

The TLNP feature must be turned on before the TLNP stop action can be specified.

3683 E3683 Cmd Rej: TLNP feature must be ON

A specific stop action can be specified for one and only one stop action parameter for each stop action set.

3671 E3671 Cmd Rej: Duplicate ACTs in different slots are not allowed

The value specified for the `actname` parameter cannot already exist in the database.

3672 E3672 Cmd Rej: ACTNAME already exists in GWS Action Set Table

A value of `copy` can be specified for only the `act1` parameter.

3673 E3673 Cmd Rej: COPY must be in ACT1

If the RDCT stop action is specified with other stop actions, then it must be specified with the last stop action parameter specified for the command.

3674 E3674 Cmd Rej: RDCT must be in lowest priority action slot

The TLNP stop action cannot be specified in the same action set with the CNCF stop action.

3685 E3685 Cmd Rej: TLNP and CNCF cannot be in the same action set

The TINP gateway screening stop action cannot be specified in the same action set with the CNCF gateway screening stop action.

4336 E4336 Cmd Rej: TINP and CNCF cannot be in the same GWS action set

The TINP feature must have been enabled before upgrading to Release 39.2 or later before the TINP stop action can be specified.

4981 E4981 Cmd Rej: TINP feature must be enabled before upgrade to 39.2 or later

At least one TIF feature must be enabled before the TIF, TIF2, or TIF3 stop action can be specified.

4982 E4982 Cmd Rej: At least one TIF feature must be enabled

Only one of the TIF, TIF2, TIF3, TLNP, TINP, RDCT, and SCCP stop actions can be specified in the command.

4983 E4983 Cmd Rej: TIF,TIF2,TIF3,TLNP,TINP,RDCT and SCCP are mutually exclusive

If specified, the TIF, TIF2, TIF3, TLNP, TINP, RDCT, or SCCP stop action must be the last stop action in the command.

4984 E4984 Cmd Rej: TIF/TIF2/TIF3/TLNP/TINP/RDCT/SCCP must be last stop action

The SCCP stop action cannot be specified in the same Action Set with the CNCF stop action.

5095 E5095 Cmd Rej: SCCP and CNCF cannot be in the same action set.

The MTP Routed GWS Stop Action feature must be enabled before the SCCP stop action can be specified.

5174 E5174 Cmd Rej: MTP routed GWS Stop Action feature must be enabled.

The GWS STRIP stop action cannot be specified with other stop actions in the same Action Set.

3013 E3013 Cmd Rej: No other GWS stop actions can be specified with STRIP

The GWS DUP point code (GDPC) must be configured in the STPOPTS table before the GWS DUP stop action can be specified.

3017 E3017 Cmd Rej: GWS DUP Point Code is required for GWS DUP stop action

Notes

The GWS stop action 1 (*act1*) is the first stop action to be performed, and GWS stop action 10 (*act10*) is the last stop action to be performed on the MSU. These parameters can have the following values:

- *cnf*—Convert the PIP parameter with the GN parameter or the GN parameter with the PIP parameter in the ISUP IAM message for the Calling Name Conversion Facility feature
- *copy*—Copy the MSU for the STP LAN feature
- *dup*—MSUs that pass gateway screening are duplicated towards a point code configured in STPOPTS:GDPC.
- *none*—No action is performed on the MSU

- *rdct*—Redirect the MSU for the DTA feature
- *sccp*—SCCP messages that pass gateway screening are forwarded to the SCCP card for service processing. This GWS stop action applies only to MTP routed UDT/UDTS and XUDT/XUDTS messages.
- *strip*--- De-encapsulate the MSUs encapsulated by GWS REDIRECT stop action and then send to MTP3 layer for further processing.
- *tif*—Apply TIF processing to MSU
- *tif2*—Apply TIF processing to MSU
- *tif3*—Apply TIF processing to MSU
- *tinp*—ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP NP equipped EAGLE and converted to include the RN if the call is to a ported number. This GWS stop action applies only to the Triggerless ISUP NP feature.
- *tlnp*—ISUP IAMs that pass gateway screening are intercepted by the Triggerless LNP equipped EAGLE and converted to include the LRN if the call is to a ported number. This GWS stop action applies only to the Triggerless LNP feature.

Output

```
chg-gws-actset:actid=4:actname=cncf:act1=cncf
```

```
rlghncxa03w 04-01-10 11:43:04 EST EAGLE 31.3.0
CAUTION: GWS action set may be referenced by one or more GWS rules
CHG-GWS-ACTSET: MASP A - COMPLTD
```

```
;
```

```
chg-gws-actset:actid=5:actname=dup:act1=dup
```

```
tklcstp 13-10-10 11:43:04 EST EAGLE 46.0
CAUTION: GWS action set may be referenced by one or more GWS rules
CHG-GWS-ACTSET: MASP A - COMPLTD
```

```
;
```

Related Topics

- [rtrv-gws-actset](#)

4.1.78 chg-gws-redirect

Use this command to change the provisioning data for the redirect function. The values that are specified for this command are stored in the Redirect table, and they are used to set the variable fields of the MSUs being redirected. For example, if the *ri=gt* parameter is specified, the value *gt* is set for the routing indicator in the called party address (CDPA) of the MSU being redirected.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

dpc (optional)

Specifies the value used to set the ANSI destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

dpca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

Default:

Current value.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code.

dpci (optional)

Specifies the value used to set the ITU international destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *zone-area-id*.

Range:

0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

Default:

Current value.

dpcn (optional)

Specifies the value used to set the ITU national destination point code field in the routing label of the MSU that is being redirected. The point code is in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) when the `chg-stpopts:npcfmt1` flexible point code option is on. A

group code (*gc*) must be specified when the ITUDUPPC feature is on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range:

0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Default:

Current value.

dpcn24 (optional)

Specifies the value used to set the 24-bit ITU national destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

Default:

Current value.

dpcn16 (optional)

Specifies the value used to set the 16-bit ITU national destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

Default:

Current value.

enabled (optional)

This parameter specifies whether MSUs that have passed gateway screening are redirected or routed as normal.

Range:

on
redirect the MSU

off
route the MSU as normal

Default:

No change to the current value

gta (optional)

The value used to set the global title address (dialed digits) in the SCCP called party address of the MSU being redirected.

Range:

1-21 digits

ri (optional)

The value used to set the routing indicator in the SCCP called party address of the MSU being redirected.

Range:

gt
route by global title digits

ssn
route by subsystem number

Default:

No change to the current value

ssn (optional)

The value used to set the subsystem number (SSN) in the SCCP called party address of the MSU being redirected. This number is the SSN of the SCP to which all MSUs meeting the redirect criteria are to be redirected.

Range:

0 - 255

Default:

No change to the current value

tt (optional)

The type of the global title translation (GTT). It is the decimal representation of the 1-byte field used in SS7. This value is used to set the type of the GTT in the SCCP called party address of the MSU being redirected.

Range:

0 - 255

Default:

No change to the current value

Example

```
chg-gws-  
redirect:dpc=111-222-111:ri=gt:ssn=10:tt=1:gta=180833:enabled=on  
  
chg-gws-redirect:enabled=off  
  
chg-gws-redirect:dpcn16=1-14-0:ri=gt:ssn=10:tt=10:gta=1:enabled=off
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter must be defined in the Destination table or defined as the STP site point code.

N/A N/A

If the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter is defined as a destination, at least one route must be defined.

2645 E2645 Cmd Rej: Cannot delete last route to DPC ref. by redirect func

The redirect function data must exist in the database before it can be changed with this command.

2657 E2657 Cmd Rej: Point code not defined

Notes

None

Output

```
chg-gws-  
redirect:dpc=111-222-111:ri=gt:ssn=10:tt=1:gta=180833:enabled=on
```

```
rlghncxa03w 04-07-10 11:43:04 EST EAGLE 31.6.0  
CHG-GWS-REDIRECT: MASP A - COMPLTD  
;
```

Related Topics

- [dlt-gws-redirect](#)
- [ent-gws-redirect](#)
- [rtrv-gws-redirect](#)

4.1.79 chg-inpopts

Use this command to provision INP-specific data. This command updates the INPOPTS table.

Parameters



Note:

The options in the on and off parameters are described in the Notes section.

cdpnnai (optional)

Called Party Number Nature of Address indicator.

Range:

0 - 127

The following parameter values are valid: 1 (Subscriber), 2 (Unknown), 3 (National), and 4 (International)

Default:

No change to the current value

cdpnpfx (optional)

Called Party Number Prefix.

Range:

1-15 digits

Valid digits are 0-9, A-F, a-f

Default:

No change to the current value

defrn (optional)

Default routing number. A default routing number that is used for own-network subscribers.

Range:

1-15 digits, *none*

Valid digits are 0-9, a-f, A-F

Default:

No change to the current value

System Default:

none

d1tpfx (optional)

Delete prefix.

Range:

yes

no

Default:

no

dra (optional)

Destination routing address. This parameter specifies the routing address format supported in INP "Connect" response messages.

Range:***rndn***

RN + [CDPNPFX] + DN

rn

Routing Number

ccrndn

[CDPNPFX] + CC + RN + DN

rnecdn

RN+ [CDPNPFX]+ NEC+ DN

homerndn

Home Routing Number

rnasd

RN + ASD

asdrn

ASD + RN

rnasddn

Supports RN +ASD+ [CDPNPFX] + DN in the INP "CONNECT" response messages.

asdrndn

Supports ASD+ RN + [CDPNPFX] + DN in the INP "CONNECT" response messages.

ccrnasddn

Supports [CDPNPFX] +CC + RN + ASD+DN in the INP "CONNECT" response messages.

asdrnccdn

Supports ASD+ RN+ [CDPNPFX]+ CC+ DN in the INP "CONNECT" response messages.

ccasdrndn

Supports [CDPNPFX] +CC + ASD + RN+DN in the INP "CONNECT" response messages.

rnasdccdn

Supports RN + ASD + [CDPNPFX] +CC + DN in the INP "CONNECT" response messages.

rnasdnecdn

RN + ASD + [CDPNPFX] + NEC + DN

asdrnecdn

ASD + RN+ [CDPNPFX]+ NEC+ DN

rngrn
RN + GRN

grnrn
GRN + RN

rngrndn
RN + GRN + [CDPNPFX] + DN

grnrndn
GRN + RN + [CDPNPFX] + DN

ccrngrndn
[CDPNPFX] + CC + RN + GRN + DN

ccgrnrndn
[CDPNPFX] + CC + GRN + RN + DN

grnrnccdn
GRN + RN + [CDPNPFX] + CC + DN

rngrnccdn
RN + GRN + [CDPNPFX] + CC + DN

rngrnnecdn
RN + GRN + [CDPNPFX] + NEC + DN

grnrnnecdn
GRN + RN + [CDPNPFX] + NEC + DN

grn
GRN

grndn
GRN + [CDPNPFX] + DN

ccgrndn
[CDPNPFX] + CC + GRN + DN

Default:
No change to the current value

System Default:
rndn

dranai (optional)
Nature of Address indicator.

Range:

sub

unknown

natl

intl

ntwk

Default:

No change to the current value

***dranaiiv* (optional)**

Nature of Address indicator value.

Range:

0 - 127

***dranp* (optional)**

Numbering plan.

Range:

e164

x121

f69

Default:

Current value

***dranpv* (optional)**

Numbering plan value.

Range:

0 - 7

Default:

No change to the current value

***ncdnpfx* (optional)**

New Called Party Number Prefix.

Range:

1-15 digits, *none*

Valid digits are *0-9, a-f, A-F*

***nec* (optional)**

National Escape Code.

Range:

1-5 digits, *none*

Valid digits are *0-9, a-f, A-F*

Default:

none

***off* (optional)**

This parameter turns off the specified options. Up to 8 comma-separated unique options can be specified.

Range:

cutnpaste

on (optional)

This parameter turns on the specified options. Up to 8 comma-separated unique options can be specified.

Range:

cutnpaste

relcause (optional)

Release cause. The reason for releasing the call when an INP Circular Route is detected.

Range:

1 - 127

Default:

31 -normal, unspecified

snai (optional)

Service Nature of Address indicator.

Range:

sub

natl

intl

none

unknown

Default:

No change to the current value

sporttype (optional)

Service Portability type. This parameter specifies whether Service Portability is performed for the associated feature.

**Note:**

The S-Port feature must be turned on before any change to the parameter will impact the associated feature.

**Note:**

If Service Portability is performed, then the Service Portability prefix (RTDB 'GRN'entity id) is applied.

Range:***gsm***

Apply Service Portability prefix for own-network GSM subscribers

is41

Apply Service Portability prefix for own-network IS41 subscribers

all

Apply Service Portability prefix for all own-network (IS41 and GSM) subscribers

none

Service Portability is not performed for the feature.

Default:

No change to the current value

System Default:*none***sprestype (optional)**

INP option that indicates the type of message the EAGLE is to send when an IDP message is received for INP service, the DN digits match, and the HLR ID is present.

Range:***connect***

send a CONNECT message

continue

send a CONTINUE message

Default:*continue***Example**

```
chg-inopts:dra=rn:dranp=e164:dranai=intl
```

```
chg-inopts:dranp=f69:dranai=sub:dra=rndn
```

```
chg-inopts:dra=rn:dranp=e164:dranai=intl:cdpnpx=fac:dltprfx=yes
```

```
chg-inopts:dranp=f69:dranai=sub:dra=rndn:cdpnpx=200
```

```
chg-
```

```
inopts:dranp=f69:dranai=sub:dra=rndn:cdpnpx=200:ncdpnpx=3abcdef:d  
ltpfx=yes
```

```
chg-
```

```
inopts:dranp=f69:dranai=sub:dra=rndn:cdpnpx=3abcdef:ncdpnpx=none
```

```
chg-inopts:dranp=f69:dranai=sub:dra=rndn:cdpnpx=fed123:dltprfx=no
```

```
chg-
```

```
inopts:dra=rn:dranp=e164:dranai=intl:cdpnpx=fac:dltprfx=no:cdpnai=  
1 :snai=none
```

```
chg-inopts:sprestype=connect
```

```
chg-inopts:dra=rnnecdn:nec=abcd1
chg-
inopts:dra=asdrnccdn:dranp=e164:dranai=intl:cdpnpx=fac:dltpfx
=yes
chg-inopts:relcause=30
chg-inopts:dra=grnrndn:dranp=e164:dranai=intl
chg-inopts:dranp=e164:dranaiv=10:dra=rn
chg-inopts:dranai=sub:dranpv=3
chg-inopts:dranpv=4:dranaiv=20
chg-inopts:cdpnpx=2a3b4c5d6e7f
chg-inopts:cdpnai=1:snai=sub
chg-inopts:on=cutnpaste
chg-inopts:dra=ccgrndn:dranp=e164:dranai=intl
```

Dependencies

At least one optional parameter must be specified.

2112 E2112 Cmd Rej: At least one parameter must be changed

The `dranp` and `dranpv` parameters cannot be specified together in the command.

3935 E3935 Cmd Rej: DRANP and DRANPV must not be specified together

The `dranai` and `dranaiv` parameters cannot be specified together in the command.

3936 E3936 Cmd Rej: DRANAI and DRANAIV must not be specified together

If the `ncdpnpx` or `dltpfx` parameter is specified, the `cdpnpx` parameter must be specified.

2129 E2129 Cmd Rej: CDPNPFIX must be specified

A value of *none* cannot be specified for the `cdpnpx` parameter.

2216 E2216 Cmd Rej: CDPNPFIX must not be NONE

If the `ncdpnpx=none` parameter is specified, then the `dltpfx` parameter cannot be specified.

2220 E2220 Cmd Rej: DLTPFIX must not be specified, when NCDPNPFIX is NONE

The value specified for the `cdpnpx` parameter must already exist in the INPOPTS table.

2222 E2222 Cmd Rej: CDPNPFIX doesn't exist in INPOPTS Table

The value specified for the `ncdpnpx` parameter cannot already exist in the INPOPTS table.

2195 E2195 Cmd Rej: NCDPNPFIX already exists in INPOPTS Table

A maximum of 5 Called Party Number Nature of Address values is allowed.

2227 E2227 Cmd Rej: Maximum Number of CDPNNAs already provisioned

The `cdpnnai` and `sna` parameters must be specified together in the command.

2245 E2245 Cmd Rej: CDPNNAI and SNAI must be specified together

If this command is entered to delete a CdPN Nature of Address value from the INPOPTS table, then the value specified for the `cdpnnai` parameter must already exist in the INPOPTS table.

2226 E2226 Cmd Rej: CDPNNAI doesn't exist in INPOPTS Table

A valid value must be specified for the `nec` parameter.

2045 E2045 Cmd Rej: <parm_desc> num digits incorrect, min <min> max <max> - <parm>

A maximum of 40 Called Party Number Prefix values can be provisioned.

2211 E2211 Cmd Rej: Maximum number of CDPNPFxs already provisioned

If the `nec=none` parameter is specified, then values of `asdrnecdn`, `rnsdrnecdn`, `rnecdn`, `rngrnecdn`, and `grnrnecdn` cannot be specified for the `dra` parameter.

3367 E3367 Cmd Rej: DRA with NEC and NEC=NONE combination not allowed

The INP CRP feature must be enabled before the `relcause` parameter can be specified.

5032 E5032 Cmd Rej: INP CRP feature must be enabled

The S-Port feature must be enabled before the `sporttype` parameter can be specified.

4926 E4926 Cmd Rej: Service Portability feature must be enabled

The INP feature must be enabled before this command can be entered.

5194 E5194 Cmd Rej: INP feature must be enabled

The same option cannot be specified for the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

Notes

on/off options

- `cutnpaste` —Specifies whether the CutAndPaste parameter is included in an INP CONNECT response message. The value for the CutAndPaste parameter is the length of the incoming DN in the IDP query. If the `cutnpaste` option is provisioned, then this value is cut from the CdPN. The remaining digits are pasted to the end of the DRA digits sent by the STP in the CONNECT response to form the new routing digits. This option has a default of OFF.

Output

```
chg-inopts:dra=rngrn:nec=0
```

```
tekelecstp 09-05-05 12:20:32 EST EAGLE 41.1.0
CHG-INPOPTS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [rtrv-inpopts](#)

4.1.80 chg-ip-card

Use this command to provision IP networking parameters for a given card.

Parameters**loc (mandatory)**

Card location. The unique identifier of a specific application subsystem located in the STP.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118, 1113, 1115

bpipaddr (optional)

Bonded Port IPv4 address. This parameter specifies an IPv4 address for the card in the specified location.

Range:

4 numbers separated by dots, with each number in the range of 0-255. A value of 0.0.0.0 removes the IP address from the parameter.

Default:

No change to the current value

bpsubmask (optional)

Bonded Port IPv4 submask.

Range:

The value must be valid for the class of the entered IP address.

Valid for Class A Networks

- 255.0.0
- 255.192.0
- 255.224.0
- 255.240.0
- 255.248.0
- 255.252.0
- 255.254.0
- 255.255.128.0

Valid for Class A or B Networks

- 255.255.0.0
- 255.255.192.0
- 255.255.224.0
- 255.255.240.0
- 255.255.248.0
- 255.255.252.0
- 255.255.254.0
- 255.255.255.128

Valid for Class A, B, or C Networks

- 255.255.255.0
- 255.255.255.192
- 255.255.255.224
- 255.255.255.240
- 255.255.255.248
- 255.255.255.252

defrouter (optional)

Default router IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number.

Range:

4 numbers separated by dots, with each number in the range of 0-255.
A value of 0.0.0.0 removes the IP address from the parameter.

Default:

No change to the current value

System Default:

0.0.0.0

dnnsa (optional)

IP address for Domain Name Server A. TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number.

Range:

4 numbers separated by dots, with each number in the range of 0-255.
A value of 0.0.0.0 removes the IP address from the parameter.

Default:

No change to the current value

System Default:

0.0.0.0

dn_sa6 (optional)

The IPv6 address for Domain Name Server A.
dn_sa6 address should be enclosed in double quotes (" ").

Range:

x: x: x: x: x: x: x: x, where the 'x's are one to four hexadecimal digits of the eight 16-bit pieces of the address.

Default:

No change to the current value

System Default:

0:0:0:0:0:0:0:0

dn_sb (optional)

IP address for Domain Name Server B. TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number.

Range:

4 numbers separated by dots, with each number in the range of 0-255.
A value of 0.0.0.0 removes the IP address from the parameter.

Default:

No change to the current value

System Default:

0.0.0.0

domain (optional)

Domain name of the Domain server.

Range:

Any string of characters beginning with a letter and comprising up to 120 characters in length.
Valid characters are 0-9, a-z, A-Z, - (dash), . (period).

Default:

No change to the current value

System Default:

Null

ds_cp (optional)

This parameter specifies the ds_cp value that shall be set for outbound messages for SIGTRAN cards.

Range:

0-63

Default:

No change to the current value

System Default:

0

rstdomain (optional)

Reset Domain Name. This parameter is used to reset the Domain Name to a NULL value.

Range:**yes**

reset Domain Name to a NULL value

no

Domain Name does not change

Default:

no

sctpchecksum (optional)

SCTP checksum algorithm. This parameter specifies the configured SCTP checksum algorithm for a specific card.

The system-wide setting for the SCTP checksum algorithm type (see the `chg-sg-opts` command) takes precedence over the setting for an individual card. The `chg-sg-opts:sctpchecksum=percard` command must be entered before the `chg-ip-card:sctpchecksum=` command can be entered.

Range:

adler32

crc32c

System Default:

crc32c

srchordr (optional)

Host table search order

Range:**local**

Local host table is searched first

svr

Domain Server is searched first

svronly

Only the Domain Server is searched

Default:

No change to the current value

System Default:

No search

Example

```
chg-ip-card:loc=1211:dnsa=150.1.1.1:domain=nc.tekelec.com:defrouter=150.1.1.105
```

```
chg-ip-card:loc=1107:sctpchecksum=adler32
```

```
chg-ip-card:dscp=4
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The value specified for the `loc` parameter must correspond to the location of a card that can run an IP application (other than the `eroute` application, which is not supported by this command). For a list of the cards and their associated applications, see [Valid Card Applications and Types](#).

2212 E2212 Cmd Rej: Invalid card type for this command

The card in the location specified by the `loc` parameter must be inhibited before this command can be entered.

2603 E2603 Cmd Rej: Card must be inhibited before executing this command

If the `domain` parameter is specified, the `rstdomain` parameter cannot be specified.

3758 E3758 Cmd Rej: If Domain name is specified RSTDMAIN is not valid

The default router IP address cannot be an existing IP link address.

3594 E3594 Cmd Rej: Def Router IP Addr cannot be an existing IP Link Address

The default router IP address must be local to one of the card's Ethernet network(s).

3595 E3595 Cmd Rej: Def Router IP Addr must be local to this card's network

If the card in the location specified by the `loc` parameter is not an E5-SM4G or E5-SM8G-B card then the `bpipaddr` and `bpsubmask` parameters cannot be specified.

4978 E4978 Cmd Rej: BPIPADDR only valid for E5-SMxG being equipped but inhibited

The IP address specified by the `bpipaddr` and `bpsubmask` parameters must be unique.

3760 E3760 Cmd Rej: IP Address must be unique

The `bpipaddr` parameter must be specified before the `bpsubmask` parameter can be specified.

4824 E4824 Cmd Rej: No BPIPADDR is provisioned for this card

A valid value must be specified for the `bpsubmask` parameter.

3732 E3732 Cmd Rej: Invalid Subnet Mask

If the `bpipaddr` parameter is specified, then the `bpsubmask` parameter must be specified.

4825 E4825 Cmd Rej: If BPIPADDR is specified BPSUBMASK is required

The `chg-sg-opts:sctpsum=percard` command must be entered before the `sctpsum` parameter can be specified in the `chg-ip-card` command.

4784 E4784 Cmd Rej: System wide SCTP checksum algorithm already configured.

A valid value must be specified for the `domain` parameter. If the value contains a hyphen, then the host name must be enclosed within quotation marks.

3745 E3745 Cmd Rej: Invalid Domain name

Notes

The Domain Name has a 120 character limitation.

Table 4-9 Standard DSCP Values

DSCP Class	DSCP (bin)	DSCP (hex)	DSCP (dec)
NONE	000000	0x00	0
CS1	001000	0x08	8
AF11	001010	0x0A	10
AF12	001100	0x0C	12
AF13	001110	0x0E	14
CS2	010000	0x10	16
AF21	010010	0x12	18
AF22	010100	0x14	20
AF23	010110	0x16	22
CS3	011000	0x18	24
AF31	011010	0x1A	26
AF32	011100	0x1C	28
AF33	011110	0x1E	30
CS4	100000	0x20	32
AF41	100010	0x22	34
AF42	100100	0x34	36
AF43	100110	0x26	38
CS5	101000	0x28	40
EF	101110	0x2E	46
CS6	110000	0x30	48
CS7	111000	0x38	56

Output

```
chg-ip-
card:loc=1211:dnsa=150.1.1.1:domain=nc.tekelec.com:defrouter=150.1.1
.105: sctpcsum=adler32
```

```
rlghncxa03w 08-02-22 15:35:05 EST EAGLE 38.0.0
CHG-IP-CARD: MASP A - COMPLTD
```

```
;
```

```
chg-ip-card:dscp=10
```

```
rlghncxa03w 13-09-24 16:56:31 EST EAGLE 46.0.0
CHG-IP-CARD: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-sg-opts](#)
- [rtrv-ip-card](#)

4.1.81 chg-ip-conn

Use this command to enable or disable a particular SIP/ENUM/SCCP/SFAPP/IPS with SFLOG connection to receive SIP/ENUM/SCCP/SFAPP/IPS with SFLOG traffic respectively. The IPCONN table supports the provisioning information related to the SIP/ENUM/SCCP/SFAPP/IPS with SFLOG connections.

Parameters**cname (mandatory)**

Connection name. This parameter specifies the unique logical name assigned to each SIP/ENUM/SCCP/SFAPP/IPS with SFLOG connection.

Range:

ZZZZZZZZZZZZZZZZ

A string of alphanumeric characters, beginning with a letter and up to 15 characters in length. Valid values are a..z, A..Z, 0..9.

open (mandatory)

The parameter specifies whether the connection manager should allow or disallow the SIP/ENUM/SCCP/SFAPP/IPS with SFLOG connection to receive SIP/ENUM/SCCP/SFAPP/IPS with SFLOG traffic.

Range:

yes

allow the SIP/ENUM/SCCP/SFAPP/IPS with SFLOG connection to receive SIP/ENUM/SCCP/SFAPP/IPS with SFLOG traffic respectively.

no

prohibit the SIP/ENUM/SCCP/SFAPP/IPS with SFLOG connection to receive SIP/ENUM/SCCP/SFAPP/IPS with SFLOG traffic respectively.

Default:

No change to the current value

System Default:

no

Example

```
chg-ip-conn:cname=conn1101a:open=yes
```

```
chg-ip-conn:cname=conn1101a:open=no
```

Dependencies

SIPNP Feature must be enabled before enabling or disabling any SIP connection.

At least one ENUM card must be provisioned before entering any ENUM connection information.

At least one IPS card with SFLOG=yes must be provisioned before entering any TCP connection information on IPS

At least one SCCP/SFAPP card must be provisioned before entering any Visualization connection information

3179 E3179 Cmd Rej: SIPNP Feat not enabled or required card not provisioned

IPCONN table should be accessible.

2668 E2668 Cmd Rej: Failure accessing IPCONN table

The value specified for the CNAME parameter must already exist in the IPCONN table.

3739 E3739 Cmd Rej: No Entry found

Notes

None

Output

```
chg-ip-conn:cname=conn1101a:open=yes
```

```
tekelecstp 12-06-25 15:44:10 EST EAGLE 45.0.0
  chg-ip-conn:cname=conn1101a:open=yes
  Command entered at terminal #4.
  CHG-IP-CONN: MASP A - COMPLTD
;
```

Related Topics

- [dlt-ip-conn](#)
- [rtrv-ip-conn](#)
- [ent-ip-conn](#)

4.1.82 chg-ip-lnk

Use this command to provision the IP link table.

Parameters

loc (mandatory)

Card location. The unique identifier of a specific application subsystem located in the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118, 1113, 1115

port (mandatory)

Ethernet interface Port ID.

Range:

a, b, c, d

Port *b* is not valid for the OAMHC application.

Ports *c* and *d* are valid with DEIR/SIP/ENUM/IPSG on SLIC card.

auto (optional)

Tells hardware whether to automatically determine duplex and speed.

 **Note:**

Always specify "auto=yes" for ports that connected to an ELAP. The corresponding ports on ExAP LAN switches should be configured accordingly to achieve the operational speed and duplex of 1Gbps and Full Duplex.

Range:**yes**

Automatically determine duplex and speed

no

Do not automatically determine duplex and speed

Default:

No change to the current value

System Default:

no

duplex (optional)

This is the mode of operation of the interface.

Range:**half**

Half duplex

full

Full duplex

Default:

No change to the parameter value

System Default:

full

ipaddr (optional)

The IP address for the specified port. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number.

Range:

4 numbers separated by dots, with each number in the range of 0-255.
A value of 0.0.0.0 removes the IP address from the parameter.

Default:

No change to the parameter value.

System Default:

0.0.0.0

mactype (optional)

The Media Access Control Type of the interface.

Range:

802.3

The IEEE standard number 802.3 for Ethernet 1

dix

The Digital/Inter/Xerox *de facto* standard for Ethernet 2

Default:

No change to the parameter value

System Default:

dix

mcast (optional)

Multicast Control. This parameter enables or disables multicast support for the interface. This parameter is necessary for INP, G-Port, and G-Flex to establish the connection from the Service Module card to the MPS system.

Range:

yes

Multicasting is enabled on the interface and the sending and receiving of multicast frames is allowed.

no

All multicast frames are silently dropped.

System Default:

no

speed (optional)

The bandwidth for the interface in megabits per second

Range:

10

100

1000

Default:

No change to the parameter value

System Default:

100

submask (optional)

The subnet mask of the IP interface in the form of an IP address with a restricted range of values.

This parameter is mandatory when the *ipaddr* parameter is specified.

Range:

The value must be valid for the class of the entered IP address.

Valid for Class A Networks

- 255.0.0
- 255.192.0
- 255.224.0
- 255.240.0
- 255.248.0
- 255.252.0
- 255.254.0
- 255.255.128.0

Valid for Class A or B Networks

- 255.255.0.0
- 255.255.192.0
- 255.255.224.0
- 255.255.240.0
- 255.255.248.0
- 255.255.252.0
- 255.255.254.0
- 255.255.255.128

Valid for Class A, B, or C Networks

- 255.255.255.0
- 255.255.255.192
- 255.255.255.224
- 255.255.255.240
- 255.255.255.248
- 255.255.255.252

Default:

If the *ipaddr* parameter is not specified, there is no change to the parameter value. If a host's IP address is known, the default subnet mask should be chosen according to [Default Subnet Mask Values](#).

Network Class	IP Network Address Range	Default Subnet Mask
A	1.0.0.0 to 127.0.0.0	255.0.0.0
B	128.0.0.0 to 191.255.0.0	255.255.0.0
C	192.0.0.0 to 223.255.255.0	255.255.255.0

System Default:
0.0.0.0

Example

```
chg-ip-lnk:loc=1102:port=a:auto=yes
```

Dependencies

The value specified for the `ipaddr` parameter must already exist in the Host table.

3762 E3762 Cmd Rej: Host table must contain IP Link addresses

The IP addresses for interface A, B, C, and D must be unique (a card cannot have two interfaces on the same network).

For IPSPG on SLIC, card can have IP interface of same subnet for Port A and C, and for Port B and D.

3537 E3537 Cmd Rej: Card's A/B and C/D interfaces must be unique

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

If `auto=yes` is specified, then the `duplex` and `speed` parameters cannot be specified.

3740 E3740 Cmd Rej: If `AUTO=yes`, Then `Duplex` and `SPEED` are not allowed

The value specified for the `loc` parameter must correspond to the location of a card that can run an IP application (other than the `EROUTE` application, which is not supported by this command). For a list of the cards and their associated applications, see [Table A-9](#).

2212 E2212 Cmd Rej: Invalid card type for this command

The card in the location (other than OAM locations) specified by the `loc` parameter must be inhibited before this command can be entered.

If the location specified by the `loc` parameter is an OAM card location, then the command can be entered while the card is in IN-SR status (as DB modifications are not allowed while the OAM is inhibited). However, the card needs to be re-initialized after the command in order for the changes to take effect.

2603 E2603 Cmd Rej: Card must be inhibited before executing this command

Sockets cannot be assigned to the B interface for all cards except for those configured as IPSPG.

4065 E4065 Cmd Rej: Application Sockets on Port B Not Allowed

The local `ipaddr` and `submask` values of either the A or B or C or D network cannot be changed to an address that represents a different network if a default router and/or other

gateway routers are is assigned to the current local network (display with `rtrv-ip-card` and `rtrv-ip-rte`).

3596 E3596 Cmd Rej: IP Address still referenced by the Def Router

The local IP address cannot be changed if the current or new local host has open sockets or associations (the `open` parameter set to `yes` with the `ent/chg-assoc` command).

3448 E3448 Cmd Rej: LHOST has open socket or association

The IP address of an existing IP link entry in the IP Link table cannot be changed if it exists in the IP Host table.

4386 E4386 Cmd Rej: IP Address referenced in IPHOST table

An IP link entry must be provisioned in the IP Link table before an IP host entry can be provisioned with a corresponding IP address in the IP Host table.

N/A N/A

The IP host entry must be deleted from the IP Host table before an IP link entry can be deleted from the IP Link table.

N/A N/A

An existing IP link entry in the IP Link table cannot be deleted (`ipaddr=0.0.0.0`) if it exists in the IP Host table.

N/A N/A

The IP network address specified by the `ipaddr` and `submask` parameters must be different from the PVN and fast copy network addresses specified by the `pvn/pvnmask`, `fcna/fcnamask`, and `fcnb/fcnbmask` parameters (see the `chg-netopts` command).

4332 E4332 Cmd Rej: The specified network address is assigned to PVN/FCNA/FCNB

The card in the location specified by the `loc` parameter must support the port specified by the `port` parameter.

2975 E2975 Cmd Rej: Specified Port is not supported

The `ipaddr` and `submask` parameters must be specified together in the command.

3749 E3749 Cmd Rej: If IPADDR is specified SUBMASK is required

The local IP address cannot be changed if the local host associated with a diameter connection has open connections (the `open` parameter set to `yes` with the `chg-assoc` command and that association is associated with a diameter connection in the DCONN table).

2683 E2683 Cmd Rej: LHOST has open connection

An IP address cannot be configured for the card if the card is provisioned as a GTT card.

2443 E2443 Cmd Rej: IP Link must not be configured for GTT card

Each IP address in the IP link table must be unique.

4867 E4867 Cmd Rej: IP address has been assigned to BPIPADDR

Speed = 1000 (1 Gbps link) can be specified for ExAP port and slic IPSPG card. Also visualization port on SCCP and SFAPP card.

2075 E2075 Cmd Rej: Speed=1000 cannot be specified with this port.

Each IP address entered into the IP Link table must be unique.

3760 E3760 Cmd Rej: IP Address must be unique

If the `submask` parameter is specified, the value given must be a valid subnet mask.

3732 E3732 Cmd Rej: Invalid Subnet Mask

Notes

Interface A/D is used for ExAP connectivity and interface B/C is used for the signaling network on the SLIC card running the DEIR/EIR/SIP application.

When the `chg-ip-lnk` command is executed for an OAM card location, the following message is displayed:

CAUTION: MCAP IP INFO HAS BEEN CHANGED, MANUAL RE-INITIALIZATION IS NEEDED

Output

```
chg-ip-lnk:loc=1102:port=a:auto=yes
```

```
    chg-ip-lnk:loc=1102:port=a:auto=yes  
    Command entered at terminal #3.
```

```
;
```

```
tekelecstp 14-06-05 11:17:48 MST  EAGLE5 46.0.0-65.20.0  
CHG-IP-LINK: MASP B - COMPLTD
```

```
;
```

```
chg-ip-  
lnk:loc=1103:port=c:ipaddr=10.248.13.59:submask=255.255.255.0:auto=y  
es
```

```
chg-ip-lnk:loc=1103:port=c:ipaddr=10.248.13.59:submask=255.255.255.0:auto=yes  
    Command entered at terminal #18.
```

```
;
```

```
tekelecstp 16-05-25 11:51:03 MST  EAGLE 46.4.0.0-69.1.0  
CHG-IP-LINK: MASP B - COMPLTD
```

```
;
```

Related Topics

- [rtrv-ip-lnk](#)

4.1.83 chg-is41-msg

Use this command to provision IS41 test messages. These messages are used by the MO SMS NPP Test Tool to test MO-based IS41 SMS message processing by the NPP.

Parameters**msgn (mandatory)**

Message number. The test message number that will be changed.

Range:

1 - 10

active (optional)

This parameter specifies whether the IS41 MOSMS message can be sent to the network card for processing.

Range:**yes**

The message is sent to the network card.

no

The message is not sent to the network card.

Default:

No change to the current value

System Default:

no

cdpadgts (optional)

Called party address digits. The SCCP CdPA digits for the IS41 test message.

Range:

1-15 digits

1 - 15 hexadecimal digits. Valid digits are *0-9, a-f, A-F* .

Default:

No change to the current value

System Default:

0123456789abcde

cdpagti (optional)

Called party address global title indicator. The SCCP CdPA GT for the IS41 test message.

Range:

0 - 15

Default:
No change to the current value

System Default:
4

cdpagtnai (optional)

Called party address global title nature of address indicator. The SCCP CdPA GT NAI for the IS41 test message.

Range:
0 - 127

Default:
No change to the current value

System Default:
4

cdpndgts (optional)

Called party number digits. The TCAP CdPN (*SMS_DA* / *SMS_ODA*) digits for the IS41 test message.

Range:
1-21 digits

Default:
No change to the current value

System Default:
01234567890abcde

cdpnes (optional)

Called party number encoding scheme. The TCAP CdPN (*SMS_DA* / *SMS_ODA*) encoding scheme for the IS41 test message

Range:
0 - 15

Default:
No change to the current value

System Default:
1

cdpnnai (optional)

Called party number nature of address indicator. The TCAP CdPN (*SMS_DA* / *SMS_ODA*) NAI for the IS41 test message.

Range:
0 - 1

Default:
No change to the current value

System Default:
1

cdpnp (optional)

Called party numbering plan. The TCAP CdPN (*SMS_DA / SMS_ODA*) NP for the IS41 test message.

Range:

0 - 15

Default:

No change to the current value

System Default:

2

cgpadtgs (optional)

Calling party address digits. The SCCP CgPA digits for the IS41 MOSMS message.

Range:

1-15 digits

1 - 15 hexadecimal digits. Valid digits are *0-9, a-f, A-F* .

Default:

No change to the current value

System Default:

0123456789abcde

cgpagti (optional)

Calling party address global title indicator. The SCCP CgPA GT for the IS41 test message.

Range:

0 - 15

Default:

No change to the current value

System Default:

4

cgpagtnai (optional)

Calling party address global title nature of address indicator. The SCCP CgPA GT NAI for the IS41 test message.

Range:

0 - 127

Default:

No change to the current value

System Default:

4

cgpndgts (optional)

Calling party number digits. The TCAP CgPN (*SMS_OOA*) digits for the IS41 test message.

Range:

1-21 digits, *none*
none -deletes the current digits

Default:

No change to the current value

System Default:

01234567890abcde

cgpnes (optional)

Calling party number encoding scheme. The TCAP CgPN (*SMS_OOA*) encoding scheme for the IS41 test message

Range:

0 - 15

Default:

No change to the current value

System Default:

1

cgpnnai (optional)

Calling party number nature of address indicator. The TCAP CgPN (*SMS_OOA*) NAI for the IS41 test message.

Range:

0 - 1

Default:

No change to the current value

System Default:

1

cgpnp (optional)

Calling party numbering plan. The TCAP CgPN (*SMS_OOA*) NP for the IS41 test message.

Range:

0 - 15

Default:

No change in the current value

System Default:

2

reset (optional)

This parameter resets all of the parameters to their default values.

Range:

yes

All of the message parameters are reset to their default values.

no

None of the message parameters are reset.

Default:

No change to the current value

Example

```
chg-is41-msg:msgn=1:cdpnnai=1:cdpadgts=12457896abcd:cgpnnai=1
chg-is41-msg:msgn=1:cdpnnai=1:cdpndgts=981123456
```

Dependencies

The TSTMSG table is corrupt or cannot be found.

4819 E4819 Cmd Rej: Failure reading TSTMSG Table

If the `reset` parameter is specified, then no other parameters can be specified.

4953 E4953 Cmd Rej: RESET is mutually exclusive with any other parameter

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

Output

```
chg-is41-msg:msgn=1:cdpnnai=1:cdpndgts=987654321:cgpnnai=1
```

```
tekelecstp 09-03-02 10:46:51 EST EAGLE 40.1.0
CHG-IS41-MSG: MASP A - COMPLTD
;
```

Related Topics

- [rtrv-is41-msg](#)
- [tst-msg](#)

4.1.84 chg-is41opts

Use this command to change the values of one or more of the IS41 option indicators maintained in the IS41 Options (IS41OPTS) table.

Parameters**Note:**

The options for the `on` and `off` parameters are described in the Notes section.

df1trn (optional)

Default routing number. The routing digits if Service Portability is not applicable.

Range:

1-15 digits

1 - 15 hexadecimal digits. Valid digits are 0-9, a-f, A-F.

esnmfg (optional)

ESN manufacturer code. The value that will be encoded in the manufacturer code section of the `esn` parameter for a LOCREQ response message.

Range:

0 - 255

Default:

0

esnsn (optional)

ESN serial number. The value that will be encoded in the serial number section of the `esn` parameter for a LOCREQ response message.

Range:

0 - 16777215

Default:

0

iec (optional)

International escape code. The international escape code that a received LOCREQ message can contain and have lookup performed.

Range:1-5 digits, *none**none* —Removes the IEC from a received LOCREQ message before lookup.**Default:***none***locreqdn (optional)**

This parameter specifies whether to obtain the Called Party, used for database lookup, from the SCCP or TCAP layer of a received LOCREQ message.

Range:***tcap***

Obtains the Called Party from the TCAP layer.

sccp

Obtains the Called Party from the SCCP layer.

Default:*sccp***locreqrmhrn (optional)**

LOCREQ remove HomeRN. This parameter specifies whether to remove the HomeRN from the TCAP Outgoing Called Party for a relayed LOCREQ message.

Range:**yes**

Remove HomeRN.

no

Do not remove HomeRN.

Default:*no***mscmktid (optional)**

MSCID market ID. The value that will be encoded in the Market ID section of the `mscid` parameter for a response LOCREQ message.

Range: 0 - 65535**Default:***0***mscswitch (optional)**

MSCID market ID switch. The value that will be encoded in the Market ID Switch section of the `mscid` parameter for a response LOCREQ message.

Range:*0 - 255***Default:***0***mtplocreqlen (optional)**

The number of terminating called party digits to extract from the LOCREQ message.

Range:*5 - 15***Default:***15***System Default:***0***mtplocreqnai (optional)**

MTP-routed LOCREQ nature of address indicator. This parameter specifies how the Called Party from the TCAP layer of a received MTP-routed LOCREQ message will be interpreted.

Range:***ccrndn***

Country code, routing number, and national directory number

frmsg

Incoming message value.

intl
International number

natl
National number

rnidn
Routing number prefix and international dialed/directory number

rnndn
Routing number prefix and national dialed/directory number

rnsdn
Routing number prefix and subscriber dialed/directory number

sub
Subscriber number

locreqlen
Number of terminating called party digits specified by the `locreqlen` parameter

Default:
frmsg

***nec* (optional)**
National escape code. The national escape code that a received LOCREQ message can contain and have lookup performed.

Range:
1-5 digits, *none*
none —Removes the NEC from the received LOCREQ message before database lookup.

Default:
none

***off* (optional)**
This parameter turns off the specified options. Up to 8 comma-separated options can be specified.

Range:
smsreqbypass
locreqrmhrn
locreqrspnd

***on* (optional)**
This parameter turns on the specified options. Up to 8 comma-separated options can be specified.

Range:
smsreqbypass

locreqmhrn**locreqrspnd****rspcdpapcp (optional)**

Response called party point code present. The point code present bit that will encode the SCCP CdPA GTA of a LOCREQ response message.

Range:**off**

The response will not contain a point code present bit.

on

The point code in the SCCP CgPA of the received LOCREQ message will be used. If no point code is present, the originating point code in the MTP Routing Label will be used.

frmsg

The point code present bit from the received message will be used. Override does not occur.

Default:

off

rspcdpari (optional)

Response called party routing indicator. The value of the routing indicator bit that will encode the SCCP CdPA GTA of a LOCREQ response message.

Range:**frmsg**

The received message routing indicator bit will be used. Override does not occur.

gt

The GTA digits in the SCCP CgPA GTA of the received message will be used. If no GTA digits are present in the SCCP CgPA GTA, override will occur according to the `cdpari=ssn` parameter.

ssn

The SCCP CgPA of the received message will be used.

Default:

frmsg

rspcgpanai (optional)

Response calling party nature of address indicator. The nature of address (NAI) that will encode the SCCP CgPA GTA of a LOCREQ response message.

Range:

0 - 127, none

none —The NAI value in the SCCP CdPA of the received message will be used. Override does not occur.

Default:

none

rspcgpanp (optional)

Response calling party numbering plan. The numbering plan (NP) that will encode the SCCP CgPA GTA of a LOCREQ response message.

Range:

0 - 15, none

none —The NP in SCCP CdPA of the received message will be used. Override does not occur.

Default:

none

rspcgpapcp (optional)

Response calling party point code present. This parameter specifies the point code present bit that will encode the SCCP CgPA GTA of a LOCREQ response message.

Range:***frmsg***

The point code present bit from the received message will be used.

on

The point code in the SCCP CdPA of the incoming LOCREQ message will be used. If no point code is present, the destination point code in the MTP Routing Label will be used.

off

The response message will not contain a point code present bit.

Default:

frmsg

rspcgpari (optional)

Response calling party routing indicator. The routing indicator bit that will encode the SCCP CgPA GTA of a LOCREQ response message.

Range:***frmsg***

The value from the received message will be used. Override does not occur.

gt

The GTA digits in the SCCP CdPA GTA of the received message will be used. If no GTA digits are present, override occurs according to the *cgpari=ssn* parameter.

ssn

The SCCP CdPA of the received message will be used.

Default:

frmsg

rspcgpatt (optional)

Response calling party translation type. The translation type (TT) that will encode the SCCP CgPA GTA of a LOCREQ response message.

Range: 0 - 255, none

none —The TT in the SCCP CdPA of the received message will be used. Override does not occur.

Default:

none

rspdig (optional)

Routing number. The digit encoding format of the TCAP Outgoing Called Party parameter for a LOCREQ response message.

The routing number will be used as is or concatenated with the Called Party Number.

The routing number format will be used on a per EAGLE node basis.

Range:***ccrndn***

Country Code + RN + DN

hrrndn

HomeRN + RN + DN

rn***rndn***

RN + DN

Default:

rn

rspdigtype (optional)

Response digit type. The value that will encode the Digit Type field in the TCAP Outgoing Called Party parameter of a LOCREQ response message.

Range:

0 - 255

Default:

6

rspmin (optional)

Response LOCREQ MIN parameter encoding. This parameter specifies how the `min` parameter of a LOCREQ response message will be encoded.

Range:***homern***

The exact number of digits, with home RN prefix, as encoded in the Called Party of the received LOCREQ message.

nothomern

The exact number of digits, without home RN prefix, as encoded in the Called Party of the received LOCREQ message.

tendelhomern

The leading 10 digits of the Called Party of the received LOCREQ message after deleting the home RN prefix, if it exists.

tenhomern

The leading 10 digits the Called Party of the received LOCREQ message without deletion of the home RN prefix.

tenzero

10 digits filled with 0.

Default:

homern

rspnon (optional)

MSRN nature of number. The nature of number value that will encode the TCAP Outgoing Called Party parameter of a LOCREQ response message.

Range:

0 - 255, *none*

none —The NAI value in the Digits[Dialed] parameter of a received LOCREQ message is used.

Default:

none

rspnp (optional)

MSRN numbering plan. This parameter specifies the numbering plan that will encode the TCAP Outgoing Called Party parameter of the LOCREQ response message.

Range:

0 - 15, *none*

2 —Telephony Numbering

Default:

2

rspparm (optional)

Response parameter. The TCAP parameter that will encode the RN and/or DN information for a LOCREQ response message.

This value encodes the DigitType field of the TerminationList, RoutingDigits, or Digits[Destination] on a per EAGLE node basis.

Range:***ddigit***

Digits[Destination].

rtdigit

Routingdigits

tlist

Termination list (Default)

Default:

tlist

smsreqbypass (optional)

This parameter specifies whether a received SMSREQ message that passes the MNP Service Selector (*serv=mnps* parameter in the *chg-sccp-serv* command) will undergo A-Port message processing.

Range:**yes**

Bypass A-Port.

no

Do not bypass A-Port.

Default:*no***sporttype (optional)**

Service Portability Type. The application of Service Portability that is applied to the associated feature.

The S-Port feature must be enabled before this parameter can be specified. The S-Port feature must be turned on before any change to the parameter will impact the associated feature.

**Note:**

If Service Portability is performed, then the Service Portability prefix (RTDB 'GRN'entity id) is applied.

Range:**none**

Service Portability is not performed for the feature.

gsm

apply Service Portability prefix for own-network GSM subscribers

is41

apply Service Portability prefix for own-network IS41 subscribers

all

apply Service Portability prefix for all own-network (IS41 and GSM) subscribers

Default:

No change to the current value

System Default:*none***tcapsnai (optional)**

This parameter specifies how the Called Party from the TCAP layer of a received LOCREQ message will be interpreted.

Range:***ccrndn***

Country code, routing number, and national directory number

frmsg

Incoming message value

intl

International number

natl

National number

rnidn

Routing number prefix and international dialed/directory number

rnndn

Routing number prefix and national dialed/directory number

rnsdn

Routing number prefix and subscriber dialed/directory number

sub

Subscriber number

Default:*frmsg***Example**

chg-is41opts:iec=12345:nec=12345:rspcgpari=gt:rspcdpari=gt

chg-is41opts:rspnon=1:tcapsnai=sub:mscmktid=78

chg-

is41opts:locreqdn=tcap:rspcgpapcp=frmsg:rspnp=14:rspmin=tendelhomern

chg-is41opts:smsreqbypass=yes:rspcdpapcp=off

chg-is41opts:rspcgpanai=120:rspcgpanp=5:rspcgpatt=25

chg-is41opts:mtplocreqnai=intl:rspparm=tlist:rspdig=rn

chg-is41opts:rspnon=25:mscmktid=535:msscswitch=55

chg-is41opts:esnmfg=159:esnsn=7215:rspdigtype=67:locreqrmhrn=yes

chg-is41opts:sporttype=gsm:dfltrn=48607:on=smsreqbypass,locreqrspnd

Dependencies

The A-Port or IS41 GSM Migration (IGM) feature must be enabled before this command can be entered.

3330 3330 E3330 Cmd Rej: APORT or IGM must be enabled

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

The Service Portability and LOCREQ Query Response features must be enabled before the `sporttype` parameter can be specified.

5265 E5265 Cmd Rej: Service Portability and LOCREQ response feat must be enabled.

The `smsreqbypass` and `locreqrmhrn` parameters and the `on` or `off` parameter cannot be specified in the same command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The LOCREQ Query Response feature must be enabled before the `dfltrn` parameter can be specified.

5266 E5266 Cmd Rej: LOCREQ response feature must be enabled.

The LOCREQ Query Response feature must be turned on before the `locreqrspnd` option can be specified for the `on` or `off` parameter.

5373 E5373 Cmd Rej: LOCREQ response feature must be activated.

The same option cannot be specified for the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

Notes

on/off options

- `smsreqbypass` —Specifies whether a received SMSREQ message that passes the MNP Service Selector (see the `chg-sccp-serv` command) undergoes A-Port message processing. This option has a default of OFF.
- `locreqrmhrn` —LOCREQ remove HomeRN. Specifies whether to remove the HomeRN from the TCAP Outgoing Called Party for a relayed LOCREQ message. This option has a default of OFF.
- `locreqrspnd` —Specifies whether the system should always respond to a LOCREQ query. This option has a default of OFF.

Output

```
chg-is41opts:smsreqbypass=yes
```

```
tekelecstp 06-09-11 15:13:20 EST EAGLE 36.0.0
Command entered at terminal #4.
CHG-IS41OPTS: MASP A - COMPLTD
;
```

Related Topics

- [chg-is41smsopts](#)
- [rtrv-is41opts](#)
- [rtrv-is41smsopts](#)

4.1.85 chg-is41smsopts

Use this command to enter IS41 SMS system options in the database. This command updates the IS41SMSOPTS table.

Parameters

bpartygttsn (optional)

MO SMS B-Party Routing GTT Set name. The GTT set where Global Title Translation lookup on B-Party digits is performed.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters

Default:

No change to the current value

System Default:

none

defrn (optional)

Default routing number. A default routing number that is used for own-network subscribers.

Range:

1-15 digits, *none*

Valid digits are 0-9, a-f, A-F.

Default:

No change to the current value

System Default:

none

modaparam (optional)

This parameter specifies whether the SMS_DestinationAddress or SMS_OriginalDestinationAddress parameter from the IS41 SMDPP message is used for conditioning, lookup, and modification for the MO-based IS41 SMS NP and MO SMS IS41-to-GSM Migration features.

Range:

da

Destination Address

oda

Original Destination Address

Default:

No change to the current value

System Default:

da

moigmpfx (optional)

MO SMS IS41-to-GSM migration prefix. This parameter specifies whether the MO SMS IS41-to-GSM Migration feature uses digits from the RTDB network entity (NE) associated with the B number or the `is412gsm` parameter (see the `chg-gsmopts` command) as a prefix to modify the destination address in the outgoing SMDPP.

Range:***ne***

The RTDB NE data associated with the B number is used for prefixing.

is412gsm

The provisioned IS412GSM migration prefix is used for prefixing.

Default:

No change to the current value

System Default:

ne

mosmsaclen (optional)

The number of the digits that are taken from the MO SMS CgPA and used as the Area Code in the MO SMS CdPA.

Range:

0 - 8

Default:

No change to the current value

System Default:

0

mosmsdigmat (optional)

This parameter specifies that the “HomeSMSC Match with Digits” search option can be used with the MO-based IS41 SMS NP and MO SMS IS41-to-GSM Migration features.

Range:***exact***

The system searches for an exact match of digits in the HomeSMSC Table.

bestfit

The system searches for a match on the leading digits of an incoming message with any provisioned entry in HomeSMSC table if an exact match is not found.

bypass

The HomeSMSC search is not performed.

Default:

No change to the current value

System Default:

exact

mosmsgttdig (optional)

MO SMS B-Party Routing GTT digit. The digits that are used for Global Title Translation.

Range:***sccpcdpa***

The SCCP CdPA is used for GTT.

mapbparty

The MAP B-Party number is used for GTT.

Default:

No change to the current value

System Default:

sccpcdpa

mosmsnai (optional)

MO-based SMS Nature Address Indicator. The number conditioning that is performed on the SMS_DestinationAddress digits in the SMDPP message before lookup in the number portability database is performed.

Range:***intl***

Number is treated as INTL (1) for number conditioning.

nai

The NAI from the SMS_DestinationAddress parameter in the SMDPP message is used to perform number conditioning

nat

Number is treated as NATL (0) for number conditioning.

unknown

Number is treated as UNKNOWN (2) for number conditioning.

A value of *nai* must be specified before the *intl*, *natl*, *nai1*, *nai2*, *nai3*, and *unkn* parameters in the `chg-npp-serv` command can be changed to non-default values for the MOSMSICDPN service.

Default:

No change to the current value

System Default:

intl

mosmstype (optional)

MO-based SMS type. The value of the entity type that indicates that a successful lookup occurred in the number portability database.

Range:***sp***

signaling point

rn
routing number

sprn
Lookup is successful if the value of the entity type is *sp* or *rn*.

all
Lookup is successful if the value of the entity type is *sp* or *rn*, or if no entity type is found.

Default:
No change to the current value

System Default:
sprn

mtsmsackn (optional)

MT-Based SMS acknowledgement. The message generated in response to a successful number portability database lookup for an SMSREQ message from a Home SMSC.

Range:

ack
SMSREQ_ACK message

nack
SMSREQ_NACK (Return Error) message

Default:
No change to current value.

System Default:
ack

mtsmschksrc (optional)

MT-Based SMS check source. This parameter specifies whether the SCCP CgPA GTA of a SMSREQ message is validated to determine whether the source of the message is a Home SMSC.

Range:

yes
The SCCP CgPA GTA of an SMSREQ message is validated.

no
The SCCP CgPA GTA of an SMSREQ message is not validated.

If the `mtsmschksrc=yes` parameter is specified, and if the incoming SMSREQ message has SCCP CgPA GTA, then the SCCP CgPA GTA must be found in the Home SMSC list for the source of the message to be considered a Home SMSC. If the message is not found in the Home SMSC list, then the MT-Based IS41 SMS NP feature does not process the message.

If the `mtsmschksrc=no` parameter is specified, or if SCCP CgPA GTA does not exist in the incoming message, then the source of the message is considered to

be a Home SMSC, and the MT-Based IS41 SMS NP feature considers the message for processing.

Default:

No change to current value

System Default:

no

mtsmsdigtype (optional)

MT-Based SMS digit type. The value that is used to encode the "Type of digits" field in the SMS_Address parameter of an SMSREQ ACK message.

Range:

0 - 255

Default:

No change to the current value

System Default:

6

mtsmsdltr (optional)

MT-Based SMS delimiter. This parameter specifies whether to insert a delimiter string before or after the routing number (RN) when the RN is used in the `mtsmsdnfmt` digits.

**Note:**

The delimiter string that is inserted is determined by the `mtsmsdltrv` parameter.

Range:***no***

A delimiter string is not inserted.

prern

A delimiter digit string is inserted before the RN.

postrn

A delimiter digit string is inserted after the RN.

Default:

No change to the current value

System Default:

no

mtsmsdltrv (optional)

MT-Based SMS delimiter value. The delimiter digit string inserted before or after the RN when the RN is used in the `mtsmsdnfmt` digits.

Range:

1-5 digits, *none*

Valid digit *none*s are 0-9, a-f, A-F.

Default:

No change to the current value

System Default:

none

mtsmsdnfmt (optional)

MT-Based SMS DN format. The required format of digits to be encoded in the “SMS_Address” parameter of the SMSREQ response.

Range:

rn

routing number

rndn

routing number and the international dialed/directory number

ccrndn

country code, routing number, and national directory/dialed number

dn

directory or dialed number

srfimsi

IMSI is encoded as the “SRFIMSI” parameter from the number portability database.

Default:

No change to the current value

System Default:

rndn

mtsmsesn (optional)

MT-Based SMS electronic serial number. This parameter specifies whether to encode the ESN parameter while generating the SMSREQ response message.

Range:

no

The ESN parameter is not encoded.

yes

The ESN parameter is encoded.

Default:

No change to the current value

System Default:

no

mtsmsnakerr (optional)

MT-Based SMS negative acknowledgement error. The TCAP access denied reason to be included in the NACK response message that is generated for SMSREQ messages.

Range:

0 - 255

Default:

No change to the current value.

System Default:

5

mtsmsparm (optional)

MT-Based SMS parameter. The format used to encode the "SMS_Address" parameter of an SMSREQ response message.

Range:***digit***

DIGIT format

pcssn

PCSSN format

Default:

No change to the current value

System Default:*digit***mtsmsssn (optional)**

MT-Based SMS subsystem number. The SSN that is encoded in "SMS_Address" field, if the `mtsmsparm=pcssn` parameter is specified, and the SSN entry is not found in the entity.

Range:

2 - 255

Default:

No change to the current value

System Default:

6

mtsmstype (optional)

MT-Based SMS type. The entity type that indicates a successful lookup occurred in the number portability database.

Range:***sp***

signaling point

rn

routing number

sprn

sporn

all
sp,rn, or DN with no entity

nonsp
rn or DN with no entity

Default:
No change to the current value

System Default:
rn

spfill (optional)

This parameter specifies whether the Numbering Plan Processor (NPP) can populate SP and RN entities for own network subscribers at the same time.

Range:

off
Do not populate both RN and SP entities at the same time

on
Allow population of the RN and SP entities at the same time

Default:
No change to the current value

System Default:
off

sporttype (optional)

Service Portability type. This parameter specifies whether Service Portability is performed for the associated feature.



Note:

If Service Portability is performed, then the Service Portability prefix (RTDB GRN entity id) is applied.

Range:

gsm
Apply Service Portability prefix for own-network GSM subscribers

is41
Apply Service Portability prefix for own-network IS41 subscribers

all
Apply Service Portability prefix for all own-network (IS41 and GSM) subscribers

none
Service Portability is not performed for the feature.

Default:

No change to the current value

System Default:*none***Example**

This example sets the IS41 SMS options when MO SMS ASD or MO SMS GRN feature is enabled:

```
chg-is41smsopts:modaparam=da:mosmsnai=intl:mosmsaclen=3
```

This example sets the IS41 SMS options when the MT-based IS41 SMS NP feature is enabled:

```
chg-is41smsopts:mtsmsdltr=no:mtsmsparm=digit
```

```
chg-is41smsopts:mtsmsdltrv=9854:mtsmsackn=nack:mtsmsesn=no
```

```
chg-is41smsopts:mtsmsssn=2:mtsmsnakerr=55:mtsmsdigtype=25
```

```
chg-is41smsopts:mtsmschksrc=no
```

This example sets the IS41 SMS options when the MO SMS B-Party Routing feature is enabled:

```
chg-is41smsopts:bpartygttsn=setint001:mosmsgttdig=mapbparty
```

```
chg-is41smsopts:mtsmsdnfmt=dn:mtsmsstype=sp
```

This example sets the IS41 SMS options when the MO-based IS41 SMS NP feature is enabled:

```
chg-is41smsopts:mosmsstype=sp:mosmsnai=intl:mosmsdigmat=exact:
modaparam=da:mosmsaclen=3
```

This example sets the IS41 SMS options when the MO SMS IS41-to-GSM Migration feature is enabled.

```
chg-is41smsopts:mosmsdigmat=exact:moigmpfx=is412gsm:modaparam=da:
mosmsnai=intl:mosmsaclen=3
```

This example sets the Area Code Length, when MO-based IS41 SMS NP, MO SMS IS41-to-GSM Migr, MO SMS ASD or MO SMS GRN feature is enabled:

```
chg-is41smsopts:mosmsaclen=5
```

Dependencies

At least one parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `mtsmsdltrv` parameter must be specified before a value of `prern` or `postrn` can be specified for the `mtsmsdltr` parameter.

4720 E4720 Cmd Rej: MTSMSDLTRV must not be NONE in database

The value specified for the `bpartygttsn` parameter must match the name of an existing GTT Set.

3561 E3561 Cmd Rej: GTT Set specified by GTT Set Name/index does not exist

The `mosmsgttdig=sccpcdpa` parameter must be specified before the `bpartygttsn=none` parameter can be specified.

4562 E4562 Cmd Rej: MOSMSGTTDIG option must be SCCPCdPA

The GTT set specified for the `bpartygttsn` parameter must have `settype=cdgta` (see the `ent-gttset` command).

4997 E4997 Cmd Rej: SETTYPE of specified GTTSET must be CdGTA

If the `bpartygttsn=none` parameter is specified, then the `mosmsgttdig=mapbparty` parameter cannot be specified.

4998 E4998 Cmd Rej: BPARTYGTTSN must not be NONE

The GTT Set table is corrupt or cannot be found.

3544 E3544 Cmd Rej: Failed reading GTT Set Table

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

The MT-Based IS41 SMS NP feature must be enabled before the `mtsmsdnfmt`, `mtsmstype`, `mtsmsparm`, `mtsmsdltr`, `mtsmsdltrv`, `mtsmsackn`, `mtsmsesn`, `mtsmsssn`, `mtsmsnakerr`, `mtsmsdigtype`, or `mtsmschksrc` parameters can be specified.

4650 E4650 Cmd Rej: MT-Based IS41 SMS NP must be enabled

The MO SMS IS41-to-GSM Migration feature must be enabled before the `moigmpfx` parameter can be specified.

4957 E4957 Cmd Rej: MO SMS IS41-to-GSM Migration feature must be enabled

The MO SMS B-Party Routing feature must be enabled before the `bpartygttsn` or `mosmsgttdig` parameter can be specified.

4996 E4996 Cmd Rej: MO SMS B-Party Routing feature must be Enabled

The MO-based IS41 SMS NP or MO SMS IS41-to-GSM Migration feature must be enabled before the `mosmsdigmat` parameter can be specified.

4855 E4855 Cmd Rej: MO SMS IS41 NP or MO SMS IS41-to-GSM Migr must be enabled

The MO-based IS41 SMS NP feature must be enabled before the `mosmstype`, `defrn`, and `spfill` parameters can be specified.

5115 E5115 Cmd Rej: MO-based IS41 SMS NP must be enabled

The MO-based IS41 SMS NP, MO SMS IS41-to-GSM Migration, MO SMS ASD, or MO SMS GRN feature must be enabled before the `modaparam`, `mosmsnai`, or `mosmsaclen` parameter can be specified. The `modaparam` parameter can also be specified if the MO SMS B-Party Routing feature is enabled.

5002 E5002 Cmd Rej: MOSMS IS41 features must be enabled

The S-Port feature must be enabled before the `sporttype` parameter can be specified.

4926 E4926 Cmd Rej: Service Portability feature must be enabled

Output

```
chg-is41smsopts:mtsmsackn=ack
```

```
tekelecstp 08-05-11 13:11:27 EST EAGLE 39.0.0  
CHG-IS41SMSOPTS: MASP A - COMPLTD  
;
```

Related Topics

- [chg-is41opts](#)
- [rtrv-is41opts](#)
- [rtrv-is41smsopts](#)

4.1.86 chg-isup-msg

Use this command to enter or change specific parameters of an ISUP test message in the TESTMSG table. The TIF Test Tool processes ISUP test messages to verify the TIF and NPP provisioned configuration in the system.

Parameters

msgn (mandatory)

Test message number. The ISUP test message number for which parameters are being changed in the TESTMSG table.

Range:

1 - 10

active (optional)

Active. This parameter sets the *Active* field of the specified ISUP test message.

Range:

no

Do not send the message to the network card for processing.

yes

Send the message to the network card for processing.

Default:

no

cdpndgts (optional)

Called Party Number digits. The value for the CdPN digits in the specified ISUP test message.

Range:

1-32 digits

1 - 32 hexadecimal digits. Valid digits are 0-9, a-f, A-F .

System Default:
1234567890abcdef

Default:
No change to the current value

cdpnnai (optional)

Called Party Number Nature of Address Indicator. The value for the CdPN NAI in the specified ISUP test message.

Range:
0 - 127

Default:
No change to the current value

System Default:
4

cgpnblset (optional)

Calling Party blacklist set in the incoming linkset.

Range:
1-255, none

Default:
No change to the current value

System Default:
none

cgpnecat (optional)

Calling Party Number Category. The value of the CgPN Category in the specified ISUP test message.

Range:
0 - 255

Default:
0

cgpndgts (optional)

Calling Party Number digits. The value for the CgPN digits in the specified ISUP test message.

Range:
1-32 digits, none
1 - 32 hexadecimal digits. Valid digits are 0-9, a-f, A-F .

Default:
No change to the current value

System Default:
1234567890abcdef

cgpnnai (optional)

Calling Party Number Nature of Address Indicator. The value of the CgPN NAI in the specified ISUP test message.

Range:

0 - 127

Default:

No change to the current value

gname (optional)

Generic name in the specified ISUP test message.

Range:

ZZZZZZZZZZZZZZZZ

Default:

N/A

nmbits (optional)

NM Bits. The value of the NM bits in the specified ISUP test message. NM bits are used to determine whether a number portability lookup has already been performed in the network.

Range:

0 - 3

0-1

Portability has not been performed.

2

The number is not ported.

3

The number is ported.

Default:

0

rdrn (optional)

Redirecting Number digits. The value for the RDN digits in the specified ISUP test message.

Range:

1-32 digits, none

1 - 32 hexadecimal digits. Valid digits are 0-9, a-f, A-F .

Default:

No change to the current value

System Default:

01234567890abcdef

settype (optional)

Set Type. Set to which generic name belongs in the incoming linkset.

Range:*SetA**SetB**Both**None***Default:***None*

Note: After the upgrade, the default value of settype will be set to BOTH as previous releases have BOTH as default value.

Example

```
chg-isup-
msg:msgn=1:active=yes:nmbits=1:cgpndgts=987654321:cdpndgts=9234
87:cdpnnai=125

chg-isup-msg:msgn=6:cgpncat=200:cdpnnai=23

chg-isup-msg:msgn=1:cgpnbset=20:gname=anomaly
```

Dependencies

At least one of the optional parameters must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

At least one TIF feature must be enabled before this command can be entered.

4982 E4982 Cmd Rej: At least one TIF feature must be enabled

The TSTMSG table is corrupt or cannot be found.

4819 E4819 Cmd Rej: Failure reading TSTMSG Table

Output

```
chg-isup-msg:msgn=10:active=yes:nmbits=1

      tekelecstp 08-07-24 10:37:20 EST  EAGLE 39.2.0
      CHG-ISUP-MSG: MASP A - COMPLTD
;
chg-isup-msg:msgn=1:rdn=11223344
      tekelecstp 20-09-21 13:19:59 EST  EAGLE 46.9.1.0.0
      CHG-ISUP-MSG: MASP A - COMPLTD
;
chg-isup-msg:msgn=2:settype=none
      tekelecstp 21-11-25 01:33:05 MST  EAGLE 47.0
      CHG-ISUP-MSG: MASP B - COMPLTD
;
```

Related Topics

- [rtrv-isup-msg](#)
- [tst-msg](#)

4.1.87 chg-j1

Use this command to change an interface for a J1 card in the system. J1 interface can be provisioned on E5-E1T1-B.

Parameters**loc (mandatory)**

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

j1port (mandatory)

J1 port number

The value must be a J1 port that has already been configured with a J1 interface on the specified T1 card with application as CCS7ITU.

Range:

1-8

encode (optional)

Indicator for use of B8ZS or AMI encoding/decoding.

Range:

b8zs

ami

Default:

No change to the current value.

l1 (optional)

T1 cable length in feet between the EAGLE and the connecting node.

Range:

0-655

Default:

No change to the current value.

j1tsel (optional)

Timing source for a J1 card.

Range:*line*

slave timing source

external

master timing source

Default:

No change to the current value.

Example

```
chg-j1:loc=1101:j1port=1:encode=ami:j1tsel=external
```

```
chg-j1:loc=1102:j1port=2:encode=b8zs:l1=250
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The card location specified by the loc parameter must be equipped.

3136 E3136 Cmd Rej: J1 card location is unequipped

The J1 table must be accessible.

3164 E3164 Cmd Rej: Failed reading the J1 table

The Card (IMT) table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

The card specified by the loc parameter must be a LIMT1 card type and application must be CCS7ITU.

2212 E2212 Cmd Rej: Invalid card type for this command

The port specified by the j1port parameter must have already been configured with a J1 interface on the specified J1 card with application as CCS7ITU.

3128 E3128 Cmd Rej: The J1PORT at the specified location is not equipped

All signaling links that are serviced by the specified J1 card with application as CCS7ITU must be deactivated before the values for the encode, j1tsel, and ll parameters can be changed.

3151 E3151 Cmd Rej: All signaling links serviced by the J1 must be deactivated

Card locations 1113 - 1118 (OAM, TDM, MDAL cards) cannot be specified as values for the loc parameter.

2154 E2154 Cmd Rej: Card slot reserved by system

j1port must be in range from 1 to 8.

2017 E2017 Cmd Rej: Integer is out of range, 1..8 - j1port

Notes

External timing is derived from the EAGLE High-Speed Master Clock (1.544 MHz for T1 or 2.048 MHz for E1): therefore, the Master Timing feature is required. Line timing is derived from its received data stream, if present.

Output

```
chg-j1:loc=1101:j1port=1:encode=ami
```

```
tekelecstp 13-12-20 12:33:39 EST 46.0.0-65.3.0
chg-j1:loc=1101:j1port=1:encode=ami
Command entered at terminal #4.
CHG-J1: MASP A - COMPLTD
;
```

Related Topics

- [dlt-j1](#)
- [ent-j1](#)
- [rtrv-j1](#)
- [tst-j1](#)

4.1.88 chg-l2t

Use this command to change the values of the SS7 MTP level 2 timers. The timers are organized in 40 timer sets of which sets 1-35 have 9 timer values and sets 36-40 have 10 timer values. The timer sets are grouped and system default values are initialized by specification (ANSI, ITU, High Speed for China, High Speed for Q.703 Annex A, JT Q703, and High Speed for Unchannelized T1). Each timer set is administered individually by this command. The `ent-slk` command is used to assign an SS7 signaling link to any of the timer sets. Each assigned link is associated with a timer set.

Parameters

12tset (mandatory)

Level 2 timer set. This parameter specifies the Level 2 timer set identifier or timer set number. Up to 40 different timer sets can be defined. A signaling link can be assigned to any of the timer sets.

Range:

1 - 40

1-10

ANSI links

11-20

low-speed ITU links

21-25
China high speed links

26-30
Q.703 Annex A high speed links

31-35
Unchannelized T1 high speed links

36-40
Japan ITU low speed links

nodata (optional)

This parameter specifies a value for the NODATA timer.

 **Note:**

The NODATA timer measures the amount of time, in milliseconds, that must pass with no transmissions on a link before the EAGLE interprets the condition as a link failure or terminal equipment failure and initiates changeover procedures.

The NODATA timer is not applicable for HSLs. It is valid for low speed links only. The NODATA timer is configurable only for low speed SS7 links running BASIC Error Correction Method (ECM).

The NODATA timer is not configurable for low speed SS7 links running PCR ECM. The NODATA timer value is calculated as T2 (L2 timer 2 value)/3 for low speed SS7 links running PCR ECM.

Range:
100 - 500

Default:
No change to the current value

System Default:
100

t1 (optional)

Timer 1—Aligned/ready

Range:
5000 - 350000 (milliseconds)
ANSI timer sets *1-10-5000-20000*
ITU timer sets *11-20-40000-50000*
China timer sets *21-25-25000-350000*
Q.703 Annex A timer sets *26-30-25000-350000*
Unchannelized T1 timer sets *31-35-16000-151000*
Japan timer sets *36-40-15000*

Default:
No change to the current value

System Default:

ANSI timer sets 1–10—13000
ITU timer sets 11–20—40000
China timer sets 21–25—150000
Q.703 Annex A timer sets 26–30—300000
Unchannelized T1 timer sets 31–35—151000
Japan timer sets 36--40--- 15000

t2 (optional)

Timer 2—Not aligned

Range:

5000 - 480000 (milliseconds)
ANSI timer sets 1–10—5000–30000
ITU timer sets 11–20—5000–150000
China timer sets 21–25—5000–150000
Q.703 Annex A timer sets 26–30—5000–150000
Unchannelized T1 timer sets 31–35—5000–14000
Japan timer sets 36--40----5000--480000

Default:

No change to the current value

System Default:

ANSI timer sets 1–10—11500
ITU timer sets 11–20—30000
China timer sets 21–25—130000
Q.703 Annex A timer sets 26–30—130000
Unchannelized T1 timer sets 31–35—14000
Japan timer sets 36--40--5000

t3 (optional)

Timer 3—Aligned

Range:

1000 - 20000 (milliseconds)
ANSI timer sets 1–10—5000–20000
ITU timer sets 11–20—1000–2000
Q.703 Annex A timer sets 26–30—1000–2000
China timer sets 21–25—1000–2000
Unchannelized T1 timer sets 31–35—5000–14000
Japan timer sets 36--40---3000

Default:

No change to the current value

System Default:

ANSI timer sets 1–10—11500
ITU timer sets 11–20—2000
China timer sets 21–25—1000
Q.703 Annex A timer sets 26–30—1000
Unchannelized T1 timer sets 31–35—14000
Japan ITU low speed links 36--40---3000

t4epp (optional)

Timer 4—Proving period Emergency

Range:

200 - 10000 (milliseconds)

ANSI timer sets 1–10—200–1000

ITU timer sets 11–20—400–600

China timer sets 21–25—400–600

Q.703 Annex A timer sets 26–30—400–600

Unchannelized T1 timer sets 31–35—3000–10000

Japan timer sets 36--40--3000

Default:

No change to the current value

System Default:

ANSI timer sets 1–10—600

ITU timer sets 11–20—500

China timer sets 21–25—500

Q.703 Annex A timer sets 26–30—500

Unchannelized T1 timer sets 31–35—3000

Japan timer sets 36--40--3000

t4npp (optional)

Timer 4— Proving period normal

Range:

500 - 70000 (milliseconds)

ANSI timer sets 1–10—500–5000

ITU timer sets 11–20—7500–9500

China timer sets 21–25—3000–70000

Q.703 Annex A timer sets 26–30—3000–70000

Unchannelized T1 timer sets 31–35—3000–30000

Japan timer sets 36--40-- Not applicable

Default:

No change to the current value

System Default:

ANSI timer sets 1–10—2300

ITU timer sets 11–20—8200

China timer sets 21–25—30000

Q.703 Annex A timer sets 26–30—30000

Unchannelized T1 timer sets 31–35—30000

t5 (optional)

Timer 5—Sending SIB

Range:

40 - 500 (milliseconds)

ANSI timer sets 1–10—40–500

ITU timer sets 11–20—80–120

China timer sets 21–25—80–120

Q.703 Annex A timer sets 26–30—80–120

Unchannelized T1 timer sets 31–35—80–120
Japan timer sets 36--40--200

Default:

No change to the current value

System Default:

ANSI timer sets 1–10—100
ITU timer sets 11–20—100
China timer sets 21–25—100
Q.703 Annex A timer sets 26–30—100
Unchannelized T1 timer sets 31–35—80
Japan timer sets 36--40--200

t6 (optional)

Timer 6—Remote congestion

Range:

1000 - 10000 (milliseconds)
ANSI timer sets 1–10—1000 - 10000
ITU timer sets 11–20—3000 - 6000
China timer sets 21–24—3000 - 6000
Q.703 timer sets 26–30—3000 - 6000
Unchannelized T1 sets 31–35—3000 - 6000
Japan timer sets 36--40--5000

Default:

No change to the current value

System Default:

ANSI timer sets 1–10—4000
ITU timer sets 11–20—4000
China timer sets 21–25—5000
Q.703 Annex A timer sets 26–30—5000
Unchannelized T1 timer sets 31–35—5000
Japan timer sets 36--40--5000

t7 (optional)

Timer 7—Excessive delay of acknowledgment

Range:

200 - 3000 (milliseconds)
For ANSI timer sets 1–10—200–3000
ITU timer sets 11–20—500–2000
China timer sets 21–25—500–2000
Q.703 Annex A timer sets 26–30—500–2000
Unchannelized T1 timer sets 31–35—500–2000
Japan ITU low speed links 36--40---2000--3000

Default:

No change to the current value

System Default:

ANSI timer sets 1–10—1500
For ITU timer sets 11–20—1500

For China timer sets 21–25—800
 For Q.703 Annex A timer sets 26–30—800
 For Unchannelized T1 timer sets 31–35—500
 Japan ITU low speed links 36--40--2000

Example

```
chg-l2t:l2tset=1:t1=5400
chg-l2t:l2tset=21:t4epp=600:t5=90:t6=3500:t7=1900
chg-l2t:l2tset=1:nodata=200
chg-l2t:l2tset=36:t2=6000
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

Failed reading level 2 timer set table.

2171 E2171 Cmd Rej: Failed reading level 2 timer set table

The value specified for the timer must be within the range for that domain.

2961 E2961 Cmd Rej: T <#> (<domain>) must be between <min> and <max>

The value specified for the timer must be in the allowed range.

2017 E2017 Cmd Rej: Number is out of range, 5000..350000 - <timer i.e t1>

For l2tset greater than 35, timers t1, t3, t4epp, t5, and t6 are not allowed to change.

3169 E3169 Cmd Rej: No change required for this timer and L2tset

Notes

ANSI timer defaults are within the Telcordia recommended ranges.

ITU timer defaults are within ITU Q.703 white book recommended ranges.

J1 timer defaults are within JT Q.703 white book recommended ranges.

If the value specified for the `nodata` parameter is greater than 200 milliseconds, then the following message appears:

Caution:

WARNING: If NODATA timer value is greater than 200ms, links could go into congestion before link failure is declared

Output

```
chg-l2t:l2tset=21:t4epp=600:t5=90:t6=3500:t7=1900
```

```
rlghncxa03w 05-02-07 11:11:28 EST EAGLE5 34.0.0
```

```
CHG-L2T: MASP A - COMPLTD
;

chg-l2t:l2tset=1:nodata=200

tekelecstp 08-05-02 16:36:09 EST EAGLE 39.0.0
CHG-L2T: MASP A - COMPLTD
```

Related Topics

- [ent-slk](#)
- [rtrv-l2t](#)
- [rtrv-slk](#)

4.1.89 chg-l3t

Use this command to change the SS7 MTP level 3 timers. The SS7 MTP level 3 timers are organized in a timer set of 21 values each. Only one timer set is administered by this command. Each linkset is associated with the SS7 MTP level 3 Timer set. The linkset and timer set association is assigned with the link administration commands.

Parameters



Note:

All timer values are entered in milliseconds. The `rtrv-l3t` command displays output in seconds.



Note:

All `it(x)` parameters can be specified for ITU networks only. All `t(x)` parameters can be specified for ANSI or ITU networks. `Tc` parameter can be specified for J7 (Japan ITU-N) networks only.

l3tset (mandatory)

Timer set table. Only one timer set table exists. All SS7 signaling links use the SS7 MTP level 3 timer set table.

Range:

1

it18 (optional)

Timer 18—Timer within a signaling point whose MTP restarts to supervise the receipt of routing information and the activation of the link and link set.

Range:

19000 - 50000

Default:
No change to the current value.

System Default:
50000

it19 (optional)

Timer 19—Supervision timer during MTP restart to avoid ping-pong of TFP, TFR1, and TRA messages.

Range:
67000 - 69000

Default:
No change to the current value

System Default:
67000

it20 (optional)

Timer 20—Overall MTP restart timer at the signaling point whose MTP restarts.

Range:
59000 - 61000

Default:
No change to the current value.

System Default:
59000

it21 (optional)

Timer 21—Overall MTP restart timer at a signaling point adjacent to one whose MTP restarts.

Range:
63000 - 65000

Default:
No change to the current value.

System Default:
63000

it22 (optional)

Timer 22—Waiting to repeat local inhibit test.

Range:
180000 - 360000

Default:
No change to the current value

System Default:
90000

it23 (optional)

Timer 23—Waiting to repeat remote inhibit test.

Range:

180000 - 360000

Default:

No change to the current value

System Default:

90000

t1 (optional)

Timer 1—Changeover delay. Also used as isolation timer for ITU MTP Restart.

Range:

100 - 2000

Default:

No change to the current value

System Default:

800

t10 (optional)

Timer 10—Wait to repeat signaling route set test (SRST) message.

Range:

20000 - 90000

Default:

No change to the current value

System Default:

30000

t11 (optional)

Timer 11—Transfer restricted; in milliseconds.

Range:

1000 - 90000

Default:

No change to the current value System

System Default:

30000

t12 (optional)

Timer 12—Wait for uninhibit acknowledgment.

Range:

100 - 2000

Default:

No change to the current value

System Default:
800

τ13 (optional)

Timer 13—Wait for force uninhibit.

Range:
100 - 2000

Default:
No change to the current value.

System Default:
800

τ14 (optional)

Timer 14—Wait for inhibit acknowledgment.

Range:
200 - 4000

Default:
No change to the current value

System Default:
2000

τ15 (optional)

Timer 15—Wait for repeat route set congestion test (RSCT).

Range:
200 - 4000

Default:
No change to the current value

System Default:
3000

τ16 (optional)

Timer 16—Wait for route set congestion test (RSCT) updates.

Range:
200 - 3000

Default:
No change to the current value

System Default:
1400

τ17 (optional)

Timer 17—Delay to avoid oscillation of initial alignment failure; in milliseconds.

Range:
500 - 2000

Default:
No change to the current value

System Default:
800

τ18 (optional)

Timer 18—Repeat transfer restricted (TFR) once by response method.

Range:
2000 - 20000

Default:
No change to the current value

System Default:
10000

τ19 (optional)

Timer 19—Failed link craft referral timer.

Range:
30000 - 600000

Default:
No change to the current value.

System Default:
480000

τ2 (optional)

Timer 2—Wait for changeover acknowledge (COA).

Range:
100 - 3000

Default:
No change to the current value

System Default:
1400

τ20 (optional)

Timer 20—Repeat local inhibit test; in milliseconds.

Range:
90000 - 120000

Default:
No change to the current value

System Default:
90000

τ21 (optional)

Timer 21—Repeat remote inhibit test; in milliseconds.

Range:
90000 - 120000

Default:
No change to the current value

System Default:
90000

t22 (optional)

Timer 22—Timer at restarting STP, waiting for signaling links to become available; in milliseconds.

Range:
10000 - 60000

Default:
No change to the current value.

System Default:
10000

t23 (optional)

Timer 23—Timer at restarting STP, started after T22, waiting to receive all TRA messages; in milliseconds.

Range:
9000 - 100000

Default:
No change to the current value.

System Default:
10000

t24 (optional)

Timer 24—Timer at restarting STP with transfer function, started after T23, waiting to broadcast all TRA messages.

Range:
9000 - 60000

Default:
No change to the current value.

System Default:
10000

t25 (optional)

Timer 25—Timer at adjacent STP and restarting STP, waiting for TRA message; may be started at level 2.

Range:
30000 - 35000

Default:
No change to the current value

System Default:

30000

τ26 (optional)

Timer 26—Timer at restarting STP, waiting to repeat TRW message.

Range:

12000 - 15000

Default:

No change to the current value.

System Default:

12000

τ28 (optional)

Timer 28—Timer at STP adjacent to restarting STP, waiting for TRW message.

Range:

3000 - 35000

Default:

No change to the current value

System Default:

3000

τ29 (optional)

Timer 29—Timer started when a TRA is sent in response to an unexpected TRA or TRW; also, started when traffic resumed without receipt of TRA.

Range:

60000 - 65000

Default:

No change to the current value

System Default:

60000

τ3 (optional)

Timer 3—Time controlled diversion on changeback.

Range:

100 - 2000

Default:

No change to the current value

System Default:

800

τ30 (optional)

Timer 30—Timer to limit sending of TFPs/TFRs in response to an unexpected TRA or TRW.

Range:

30000 - 35000

Default:
No change to the current value

System Default:
30000

τ31 (optional)
Timer 31—False link congestion detection.

Range:
10000 - 120000

Default:
No change to the current value.

System Default:
60000

τ32 (optional)
Timer 32—Link oscillation timer – Procedure A.

Range:
1000 - 120000

Default:
No change to the current value.

System Default:
60000

τ4 (optional)
Timer 4—Wait for changeback acknowledge (CBA) #1.

Range:
100 - 2000

Default:
No change to the current value

System Default:
800

τ5 (optional)
Timer 5—Wait for changeback acknowledge (CBA) #2.

Range:
100 - 2000

Default:
No change to the current value

System Default:
800

τ6 (optional)
Timer 6—Controlled reroute.

Range:*100 - 2000***Default:**

No change to the current value

System Default:*800***t7 (optional)**

Timer 7—Signaling data link connection (SDLC) acknowledge.

Range:*100 - 3000***Default:**

No change to the current value.

System Default:*1000***t8 (optional)**

Timer 8—Transfer prohibited (TFP) inhibit.

Range:*500 - 2000***Default:**

No change to the current value.

System Default:*800***tC (optional)**

Timer C- Release transfer congestion status timer in J7 network.

Range:*3000 - 60000***Default:**

No change to the current value.

System Default:*3000***Example**

```
chg-l3t:l3tset=1:t1=800
```

```
chg-l3t:l3tset=1:t5=800:t6=800:t32=70000
```

Dependencies

The minimum parameter requirement is the table number and at least one timer specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

Do not specify T20 and IT22 pairs of timers together because one value overrides the other.

2174 E2174 Cmd Rej: May not modify both T20 and IT22 timers

Do not specify T21 and IT23 pairs of timers together because one value overrides the other.

2175 E2175 Cmd Rej: May not modify both T21 and IT23 timers

The Level 3 timer table must be accessible.

2173 E2173 Cmd Rej: Failed reading level 3 timer set table

The STP options table must be accessible.

2852 E2852 Cmd Rej: Failed reading STP Options table

Notes

The command line allows 157 characters. Some SS7 MTP level 3 timer changes may exceed this limit. Multiple entries of this command may be required in such cases.

Timer 9 is not currently supported in the SS7 protocol, and has been omitted from this manual. The command will support this timer when it has been defined in the protocol.

The default values are within the Telcordia recommended ranges.

tc timer is only supported in J7 network.

Output

```
chg-l3t:l3tset=1:t1=800
```

```

rlghncxa03w 04-01-07 08:40:50 EST  EAGLE 31.3.0
CHG-L3T: MASP A - COMPLTD
;

```

Related Topics

- [chg-l2t](#)
- [rtrv-l2t](#)
- [rtrv-l3t](#)

4.1.90 chg-lbp

Use this command to change a far-end loopback point's attribute values maintained in the link fault sectionalization table.

Parameters

lbp (mandatory)

Loopback point ID. This parameter identifies a far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to *and including* the target device).

Range:

1 - 32

link (mandatory)

SS7 signaling links. The SS7 signaling link to be tested.

Synonym:

port

Range:

a, b, a1 - a31, b1 - b31

Not all card types support all `link` parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have assigned signaling links.

loc (mandatory)

Card location. The unique identifier of a specific application subsystem located in the STP.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

clli (optional)

Common Language Location Identifier (CLLI) code. This parameter specifies the CLLI or other mnemonic identifier used to refer to the given loopback point.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 23 alphanumeric characters

Default:

No change to the current value

lfst (optional)

Link fault sectionalization test. The type of link fault sectionalization loopback test to be performed.

Range:

lft

latching loopback test

nft

nonlatching loopback test

rep (optional)

Repetition count. The number of link elements of the same type (not including the target device) that lie between the STP and the link element to be tested.

Range:

0 - 31

Default:

No change unless:

0—The link element to be looped back for testing is NEI (`rle=nei` is specified)

- 0—The type of link fault sectionalization test is NLT (*lfst=nlt* is specified)
- 0—The new remote link element is the first loopback point of the link to be tested
- 1–30—Next sequential number for subsequent loopback points of the link to be tested

rle (optional)

Remote link element. The link element to be looped back for testing.

Range:*ds0**ocu**csu**dsu**nei***Default:**

No change to the rle value

Example

```
chg-lbp:loc=1101:link=a:lbp=1:rle=ds0:lfst=1lt
```

Dependencies

The Link Fault Sectionalization (LFS) feature must be on before using this command.

2870 E2870 Cmd Rej: LFS feature must be ON

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The card location specified in the *loc* parameter cannot be reserved by the system.

2376 E2376 Cmd Rej: Specified LOC is invalid

The card location (*loc* parameter) must identify a provisioned E5-E1T1-B card, provisioned with the LIMT1 card type, configured with either the SS7ANSI or CCS7ITU application.

2892 E2892 Cmd Rej: LOC is not LFS capable

The CLLI cannot be a reserved word.

3040 E3040 Cmd Rej: <string> cannot be used in this command

The *rep* parameter value that is specified for this loopback point (LBP) must be greater than the *rep* parameter value of any previously defined LBP and less than the *rep* parameter value of any subsequently defined LBP.

2893 E2893 Cmd Rej: REP must be greater than prev. and less than subsequent REP

The *rep* parameter must be specified if the default value is a duplicate of the *rep* parameter value of any previously defined loopback point.

2914 E2914 Cmd Rej: REP parameter must be specified

The LBP must have been previously defined.

2901 E2901 Cmd Rej: LBP must have been previously defined in database

The `rep` parameter can be specified only if the `lfst=llt` parameter is specified.

2897 E2897 Cmd Rej: REP is only valid if LFST is defined as LLT

If the `rle=nei` parameter is specified, the `rep=0` parameter must be specified.

2895 E2895 Cmd Rej: REP must be zero if link element to be tested is NEI

The `rle=ds0` or the `rle=nei` parameter cannot be specified if the `lfst=nlst` parameter is specified. The DS0 and Network Element Interface (NEI) link elements do not support non-latching loopbacks.

2896 E2896 Cmd Rej: DS0 and NEI link elements do not support non-latching tests

For each SS7 signaling link, you can define only one loopback point with `rle=nei` specified; and that loopback point must be the terminating SS7 signaling link component.

2899 E2899 Cmd Rej: NEI LBP has already been defined for the CCS7 link

For each SS7 signaling link, the loopback point with `rle=nei` specified must be the terminating SS7 signaling link component.

2900 E2900 Cmd Rej: NEI LBP must be defined as the last link element

The card location specified in the `loc` parameter must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The Link Fault Sectionalization database Loopback Point (LBP) table is not accessible.

2891 E2891 Cmd Rej: Failed reading Link Fault Sectionalization table

Notes

None

Output

```
chg-lbp:loc=1101:port=a:lbp=1:rle=ds0:lfst=llt
```

```
rlghncxa03w 05-01-17 15:35:05 EST EAGLE5 33.0.0  
CHG-LBP: MASP A - COMPLTD
```

```
;
```

Related Topics

- [act-lbp](#)
- [dact-lbp](#)
- [dlt-lbp](#)
- [ent-lbp](#)
- [rtrv-lbp](#)

4.1.91 chg-lg-card

Use this command to change the group of an LG card.

The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

grp (mandatory)

Range:

ayyyyyyyyy

Up to 10 alphanumeric characters; the first character must be a letter.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

Example

```
chg-lg-card:loc=1304:grp=lgroup1
```

Dependencies

The specified `grp` parameter value must exist in the database.

5207 E5207 Cmd Rej: LG Group not defined

The card location must not be 1113-1118, or xy09 and xy10 where x is the frame and y is the shelf.

2154 E2154 Cmd Rej: Card slot reserved by system

The LG Card table is corrupt or cannot be found.

5222 E5222 Cmd Rej: Unable to read LG Card table

The card location specified in the `loc` parameter must be of a provisioned LG card.

5239 E5239 Cmd Rej: LG card not defined

The LG Group table is corrupt or cannot be found.

5221 E5221 Cmd Rej: Unable to read LG Group table

The `loc` and `grp` parameters are mandatory

2379 E2379 Cmd Rej: Missing parameter

Changing the group of an LG card to which it is already a part of has no effect.

3827 E3827 Cmd Rej: No change requested

Output

Related Topics

- [act-lg-card](#)
- [dact-lg-card](#)
- [dlt-lg-card](#)
- [ent-lg-card](#)
- [rept-stat-lg](#)
- [rtrv-lg-card](#)

4.1.92 chg-lg-engine

Use this command to modify an LG engine. The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

engine (mandatory)

Range:

aaaaaaaaaa

Up to 10 alphanumeric characters; the first character must be a letter.

action (optional)

This parameter specifies the transmitting and receiving actions of a LG Engine.

Range:

snk

Rx Action: Sink Mode

ret

Rx Action: Return Mode

cap

Rx Action: Capture Mode

pbk

Tx Action: Playback mode

retl2

Rx Action: Return by L2

cong

Rx Action: Congestion.

event (optional)**Range:***aaaaaaaa*

Up to 10 alphanumeric characters; the first character must be a letter

port (optional)The signaling link on the card specified in the `loc` parameter.**Synonym:***link***Range:***a, b, a1 - a31, b1 - b31*Not all card types support all `link` parameter values.See [Table A-1](#) for valid `link` parameter range values for each type of card that can have a location specified in the `loc` parameter.**rxengine (optional)**

Receiving LG Engine.

Range:*aaaaaaaa*

Up to 10 alphanumeric characters; the first character must be a letter.

txrate (optional)

Transmission rate of a LG Engine.

Range:*0 - 10000***Example**

```
chg-lg-engine:engine=txengine1:txrate=100
```

```
chg-lg-engine:engine=txengine1:port=b
```

Dependencies

The engine name specified must pre-exist in the LG Engine table.

5209 E5209 Cmd Rej: LG Engine not defined

The LG Engine table is corrupt or cannot be found.

5212 E5212 Cmd Rej: Unable to read LG Engine table

The number of events associated with a engine should not exceed the max limit.

5217 E5217 Cmd Rej: LG Event associated with too many LG Engines

The `txrate` parameter cannot be specified with the `event` parameter of Rx type.

5218 E5218 Cmd Rej: TxRate cannot be assigned to Rx Event direction

The `action=pbk` parameter can only be assigned to Tx event direction.

5219 E5219 Cmd Rej: Action can not be assigned to Tx Event direction

The `action` parameter of type `snk`, `ret`, `retl2`, `cong`, or `cap` can only be assigned to RX event direction.

5229 E5229 Cmd Rej: Action can not be assigned to Rx Event Direction

The port specified in the command must be provisioned.

2373 E2373 Cmd Rej: Link is unequipped in the database

The `rxengine` parameter can only be specified with the `action=pbk` parameter.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The LG Card and Event specified in the command must belong to same network

5259 E5259 Cmd Rej: LG Card and event network variant does not match

SIF Size > 272 not supported on ss7hc

4763 E4763 Cmd Rej: Invalid SIF size of event specified for SS7HC card

The Rx Event can not be associated to more than one Engine on the same LG card

5280 E5280 Cmd Rej: Duplicate DPC cannot be assigned to same LG card

Event dir and Action cannot be changed if engine is of Rx type and associated with the Tx engine.

5276 E5276 Cmd Rej: RxEngine is associated with TxEngine

The LG Event name specified in the command must exist in the table

5227 E5227 Cmd Rej: LG Event not defined

The specified `Rx engine` parameter value must be associated with the card.

5210 E5210 Cmd Rej: RxEngine not defined on this card

The `port` parameter cannot be specified with the `event` parameter of Rx type.

5230 E5230 Cmd Rej: Port can not be assigned to Rx Event Direction

Engine specified in RxEngine parameter must of Rx Type.

5241 E5241 Cmd Rej: Invalid RxEngine defined

The Rxengine specified must pre-exist in the LG Engine table.

5249 E5249 Cmd Rej: LG RxEngine not defined

Output

Related Topics

- [act-lg-engine](#)
- [dact-lg-engine](#)
- [dlt-lg-engine](#)
- [rept-stat-lg](#)
- [rtrv-lg-engine](#)

4.1.93 chg-lg-event

Use this command to change an LG event's characteristics. The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSTG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

event (mandatory)

Range:

ayyyyyyyyy

Up to 10 alphanumeric characters; the first character must be a letter

cause (optional)

Cause Code for UPUs

Range:

0 - 15

cnglvl (optional)

Congestion Level for TFCs

Range:

0 - 3

cpc (optional)

ANSI capability point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

cpcn

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

cpc/cpcn/cpci/cpcn/cpcn24 (optional)

Capability point code. The code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network to which the STP belongs.

cpci (optional)

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7
area—000-255
id—0-7

The point code 0-000-0 is not a valid point code.

cpcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-
nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Default:

No change to existing point code value.

cpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

Default:

No change to existing point code value.

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

p-, 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001–005`.
 When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.
 The point code `000-000-000` is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24 (optional)

Destination point code

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code `0-000-0` is not a valid point code.

dpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range:

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000–255

ssa—000–255

sp—000–255

egta (optional)

End global title address. The end of a range of global title digits.

Range:

1 - 21

h0h1 (optional)

SNM Type

Range:

tfa

tfp

tfc

tfr

rct

upu

maxcic (optional)

Maximum CIC Selector

Range:

0 - 4294967295

maxsize (optional)

Maximum Service Message SIF Size

Range:

0 - 4095

maxs1s (optional)

Maximum SLS selector

Range:

0-255 -ANSI

0-15 -ITU

mincic (optional)

Minimum CIC Selector

Range:

0 - 4294967295

minsize (optional)

Minimum Service Message SIF Size

Range:

0 - 4095

Default:

60 -SCCP MSUs

40 -other MSUs

mins1s (optional)

Minimum SLS Selector

Range:

0-255 -ANSI

0-15 -ITU

opc (optional)ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.**Range:***p*-, 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*-The asterisk value (*) is not valid for the *ni* subfield.When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.The point code *000-000-000* is not a valid point code.**opc/opca/opci/opcn/opcn24 (optional)**

Originating Point Code

opci (optional)ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).**Range:***s*-, *p*-, *ps*-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps**zone*—0-7*area*—000-255*id*—0-7The point code *0-000-0* is not a valid point code.**opcn (optional)**ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfnti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s*-, *p*-, *ps*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps**nnnnn*—0-16383*gc*—*aa-zz**m1-m2-m3-m4*—0-14 for each member; values must sum to 14

opc24 (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000—255

ssa—000—255

sp—000—255

priority (optional)

Service Message Priority

Range:

0 - 3

ri (optional)

GTT or SSN

Range:

gtt

ssn

sc1ass (optional)

Class of service

Range:

0 - 1

sgta (optional)

Start of global title address. This parameter specifies the beginning of a range of global title digits.

Range:

1 - 21

ssn (optional)

Subsystem number. The application's subsystem number. This attribute is composed of the decimal representation of the 1-byte field used in the SS7 protocol.

Range:

2 - 255

Default:

5

System Default:

0

tt (optional)

Translation type.

Range:

0 - 255

usrid (optional)

User ID for UPUs

Range:

0 - 15

Default:

5

System Default:

0

Example

```
chg-lg-event:event=txisup1:dpc=3-3-3
```

```
chg-lg-event:event=txisup1:dpc=2-2-2:opc=1-1-1
```

```
chg-lg-event:event=rxisup1:dpc=4-4-4
```

Dependencies

If the `h0h1/cnglv1/cause/usrid/cpc` parameter is specified, then the `si` parameter must have a value of 0 (snm).

If the `mincic/maxcic` parameter is specified, then the `si` must have a value of 4 (tup), 5 (isup), or 13 (bicc)

If the `tt/ssn/sgta/egta` parameter is specified, the `si` must be 3 (sccp)

5251 E5251 Cmd Rej: Invalid parameter for SI type

Failed to read LG Event table.

5223 E5223 Cmd Rej: Unable to read LG Event table

The LG Event name specified in the command must exist in the table

5227 E5227 Cmd Rej: LG Event not defined

The `event` parameter is mandatory

2379 E2379 Cmd Rej: Missing parameter

The value specified for the `mincic` parameter must be less than the value specified for the `maxcic` parameter.

5242 E5242 Cmd Rej: MINCIC cannot be greater than MAXCIC

The `minsize` specified must be less than `maxsize`.

5243 E5243 Cmd Rej: MINSIZE cannot be greater than MAXSIZE

The value specified for the `minsls` parameter must be less than the value specified for the `maxsls` parameter.

5244 E5244 Cmd Rej: MINSLS cannot be greater than MAXSLS

ITU SLS must be less than 15

5250 E5250 Cmd Rej: ITU SLS cannot be greater than 15

The OPC/DPC network type must match the provisioned OPC/DPC network type.

2787 E2787 Cmd Rej: PC network type does not match existing PC network type

The value specified for the SIF size must be valid for the SI type.

5233 E5233 Cmd Rej: Invalid SIF size for SI Type

The same DPC cannot be assigned to more than one Event of Rx type.

5258 E5258 Cmd Rej: Duplicate DPC cannot be assigned to RX event

The value specified for the event name cannot be an EAGLE reserved name.

3040 E3040 Cmd Rej: <string> cannot be used in this command

At least one optional parameter must be specified

2136 E2136 Cmd Rej: At least one optional parameter is required

SI-specific parameters cannot be specified together in the command.

Optional parameters except **dpc** cannot be specified with Rx event

2155 E2155 Cmd Rej: Invalid parameter combination specified

The lengths of the values specified for the `sgta` and `egta` parameters must match

2403 E2403 Cmd Rej: Length of EGTA must be equal to length of GTA

The `sgta` and `egta` parameters must be specified together in the command.

2409 E2409 Cmd Rej: EGTA cannot be specified without GTA

The value specified for the `egta` parameter must be greater than or equal to the value specified for the `sgta` parameter.

2420 E2420 Cmd Rej: EGTA must be greater than or equal to GTA

If the `ri=gt` parameter is specified, then the `sgta/egta` parameters must be specified.

5225 E5225 Cmd Rej: SGTA/EGTA must be specified with RI=GT

If the lengths of the values specified for the `sgta/egta` parameters do not match the provisioned length of the `sgta` parameter, then the `minsize` parameter must be specified.

5297 E5297 Cmd Rej: MINSIZE is required when SGTA/EGTA length is changed

Output

Related Topics

- [dlt-lg-event](#)
- [ent-lg-event](#)
- [rept-stat-lg](#)
- [rtrv-lg-event](#)

4.1.94 chg-lnp-serv

Use this command to change an existing LNP service.

Parameters

Note:

All alias translation types must be removed before the service can be moved to another translation type.

ndfltact (optional)

New default action associated with an LNP TT Service entry.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

The `ndfltact` parameter must have one of the following values:

- a GTT Action ID that already exists in the GTT Action table with an associated action of *disc/udts/tcaperr*
- *fallback* —Fallback to the relay data for MSUs relayed by LNP using relay data from the LNP database provided by the LNP Message Relay service. For an LNP Query message, the MSU is sent to the LNP local subsystem.
- *falltogtt* —Fallback to GTT. The GTT selector search is performed again, using `gttselid=none`.

Default:

No change to the current value

ndv (optional)

New digits valid.

Range:

sccp

tcap

Default:

No change to the current value

ngttselid (optional)

New GTT Selector ID.

Range:

0 - 65534, *none*

none —deletes the current value of the GTTSELID field

Default:

No change to the current value

nrqdtb1nop (optional)

The action performed with a message that arrives at an SCCP card that does not have the necessary LNP table, and the current message routing is subsystem.

Range:

udts

generate UDTs for the processed MSU

disc

discard the processed MSU

Default:

No change to the current value

nserv (optional)

New reserved service type name.

Range:

ain

in

pcs

wnp

class

lidb

cnam

isvm

lnpqs

wsmc

udf1

udf2

udf3

udf4

lnqt

Default:

No change to the current value

ntt (optional)

New translation type.

Range:

0 - 255

Default:

No change to the current value

nttn (optional)

New User defined LNP Translation type name.

Range:

ayyyyyyy, none

1 alphabetic character followed by up to 7 alphanumeric characters

none —defaults the name to the reserved service type name

Default:

If *none* is specified, the default value is the reserved service type name (*serv* parameter).

If *none* is not specified, no change to current value.

off (optional)

Disables or turns off the specified feature options. This parameter specifies a comma-separated list of feature options that are requested to be turned off. Up to 10 feature options can be specified in the list.

Range:

gttrqd

on (optional)

Enables or turns on the specified feature options. This parameter specifies a comma-separated list of feature options that are requested to be turned on. Up to 10 feature options can be specified in the list.

Range:

gttrqd

serv (optional)

Reserved service type name.

Range:

ain

in

pcs

wnp

class

lidb

cnam***isvm******lnpqs******wsmisc******udf1******udf2******udf3******udf4******lrnqt*****Default:**

No change to the current value

tt (optional)

Translation type.

Range:

0 - 255

Default:

No change to the current value

Example

```
chg-lnp-serv:tt=10:ndfltact=fallback:on=gttrqd:ngttselid=none
```

```
chg-lnp-serv:serv=lidb:ntt=22:ndv=tcap:nttn=mrlidb
```

```
chg-lnp-serv:tt=239:nserve=lrnqt
```

DependenciesThe same value cannot be specified for the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

The `ndfltact=none` parameter cannot be specified.

5298 E5298 Cmd Rej: Default ACTID must not be specified as NONE

The EGTT feature must be turned on before the `ngttselid`, `ndfltact`, or `on/off=gttrqd` parameter can be specified.

3557 E3557 Cmd Rej: EGTT must be ON

If a GTT Action ID is specified as the value for the `ndfltact` parameter, then the Action ID must already exist in the GTT Action table.

5071 E5071 Cmd Rej: GTT Action Id does not exist

If a GTT Action ID is specified as a value for the `ndfltact` parameter, then the GTT Action ID must have an associated action of `disc`, `udts`, or `tcaperr`.

5172 E5172 Cmd Rej: Invalid action type

The LNP feature must be turned on before this command can be entered.

3009 E3009 Cmd Rej: LNP feature must be ON

The LNP SMS feature must be turned on before the `n_serv=wsmc` parameter can be specified.

3599 E3599 Cmd Rej: WSMSC feature must be Activated

The PCS 1900 LNP (PLNP) feature must be turned on before the `n_serv=pcs` parameter can be specified.

3245 E3245 Cmd Rej: PLNP feature must be ON

The WNP feature must be turned on before the `n_serv=wnp` parameter can be specified.

3647 E3647 Cmd Rej: WNP feature must be ON

The value of the `ntt` parameter cannot already exist in the LNP database.

3143 E3143 Cmd Rej: New Translation Type already in LNP database

The value of the `nttn` parameter cannot already exist in the LNP database.

3145 E3145 Cmd Rej: New Translation Type Name already in LNP database

The value of the `serv` parameter must already exist in the LNP database.

3146 E3146 Cmd Rej: Service type is not in LNP database

The `serv` or `tt` parameter and one other optional parameter must be specified.

2400 E2400 Cmd Rej: Dual ExAP Config feature must be Enabled

The same value cannot be specified for the `ndv` and `dv` parameters.

3226 E3226 Cmd Rej: New DV indication must not match old DV indication

An LNP alias cannot be specified as the value for the `ntt` parameter.

2465 E2465 Cmd Rej: Translation TYPE defined as an alias

All LNP aliases for the existing service must be removed from the LNP database before the `n_serv` or `ntt` parameter can be specified.

3199 E3199 Cmd Rej: To change or delete SERV, it must have no LNP aliases

A reserved service type name can be specified as a value for the `nttn` parameter only if the name matches the existing service (the value specified for the `serv` parameter).

3252 E3252 Cmd Rej: A TTN-reserved service type name only if it matches SERV

The LNP TT SERV table is corrupt or cannot be found.

3123 E3123 Cmd Rej: Failed Reading LNP TT SERV table

If a value of `wsmc`, `udf1`, `udf2`, `udf3`, or `udf4` is specified for the `serv` parameter, then the `ndv=sccp` parameter must be specified.

3250 E3250 Cmd Rej: DV must be SCCP when SERV is a user defined type or WSMSC

If a value of *lnpqs*, *ain*, *in*, *pcs*, *wnp*, or *lrnqt* is specified for the `serv` parameter, then the `ndv=tcap` parameter must be specified.

3251 E3251 Cmd Rej: If specified, (N)DV must be TCAP for specified service

The LRNQT feature must be turned on before the `(n)serv=lrnqt` parameter can be specified.

4817 E4817 Cmd Rej: ITU TCAP LRN Query (LRNQT) feature must be ON

The GTT Action table is corrupt or cannot be found.

5067 E5067 Cmd Rej: Unable to access GTT Action table

The value specified for the `nserv` parameter cannot already exist in the LNP database.

3140 E3140 Cmd Rej: Service Type is already in LNP database

If the value specified for the `tt` parameter is an alias, then the `ntt`, `nserv`, `nttn`, and `ndv` parameters cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the value specified for the `(n)serv` parameter is already associated with the *class*, *lidx*, *cnam*, *isvm*, *wsmc*, *udf1*, *udf2*, *udf3*, or *udf4* service, then a value of *lnpqs*, *lrnqt*, *ain*, *in*, *wnp*, or *pcs* cannot be specified for the `(n)serv` parameter.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `ndfltact`, `ngttselid`, and `on/off=gtrqd` parameters cannot be specified with the *udf1*, *udf2*, *udf3*, and *udf4* LNP Services.

The `nrqdtblnop` parameter requires that the Dual ExAP Config feature be enabled.

2400 E2400 Cmd Rej: Dual ExAP Config feature must be Enabled

Notes

on/off options

gtrqd—GTT required. Specifies whether GTT is performed after the successful completion of an LNP Message Relay service and before initiation of an LNP Query service. This option has a default of OFF.

Output

```
chg-lnp-serv:tt=3:on=gtrqd:ngttselid=10:ndfltact=falltogtt
```

```
rlghncxa03w 10-11-08 08:50:12 EST EAGLE 43.0.0
CHG-LNP-SERV: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-lnp-serv](#)
- [ent-lnp-serv](#)

- [rtrv-lnp-serv](#)

4.1.95 chg-lnpopts

Use this command to enter LNP-specific system options in the database. This command updates the LNPOPTS table.

Parameters



Note:

As of Release 43.0, the `dra`, `lrndgts`, `naiv`, and `tndgts` parameters are obsolete for this command.

admhipri (optional)

Give LNP database administration the highest administrative priority in the system.

Range:

yes

no

Default:

No change to the current value

amactype (optional)

AMA call type.

Range:

3 digits

Default:

No change to the current value

amafeatid (optional)

AMA feature ID.

Range:

3 digits

Default:

No change to the current value

amaslpid (optional)

AMA slip ID.

Range:

9 digits

Default:

No change to the current value

System Default:

none

ccp (optional)

Copy charge parameters. When this parameter has a value of yes, the system copies the Charge Number and Charge Party Station type from an LNP AIN query (if present) to the LNP AIN Response message.

Range:

yes

no

Default:

No change to the current value

cic (optional)

Carrier identification code.

Range:

3-4 digits

Default:

No change to the current value

gtwystp (optional)

Indicates that the LNP system is also configured as a Gateway STP.

Range:

yes

no

Default:

No change to the current value

incslp (optional)

Include AMA slip ID in the response.

Range:

yes

no

Default:

No change to the current value

jipdigits (optional)

Jurisdictional Information Parameter value.

Range:

6 digits

Default:

No change to the current value

jipprv (optional)

Determines whether a Jurisdictional Information Parameter value is to be added to the IAM.

Range:

yes

no

Default:

No change to the current value

servport (optional)

Service portability.

Range:

yes

allows splitting services between TN and LRN override records. This setting allows the LNP user to update LRN overrides for message relay services that are to be supported in the network. The TN gateway point code (NPAC subscription data) is used for message relay services the CLEC wants to provide.

no

If no LRN override services are provisioned, then the TN's gateway point codes (NPAC subscription data) are used to route queries out of the network. If one or more LRN override services are provisioned, the TN is considered to be ported into the network. In this case, if an LRN override service is requested and the LRN has other services administered, but the requested service is not provisioned, then a UDTs response for the service is provided.

Default:

No change to the current value

sp (optional)

Service provider ID.

Range:

xyyy

4 alphanumeric characters

Default:

No change to the current value

wqredrct (optional)

Wireless queries directed to default GTT.

Range:

on

allows GTT functionality to treat any wireless LNP (WNP and PCS) queries that require GT as a normal GTT

off

routes all wireless LNP queries (WNP and PCS) that require GT directly to the local subsystem

Default:

No change to the current value

tndgts (optional)

SCCP GTA digit length indicator for 10 or 11 digits.

Range:**yes**

The system verifies that either 10 or 11 digits are present in the CDPA GTA. If 11 digits are present, the first digit is stripped to derive 10 digits for LNP SMS translation. If 10 digits are present, all 10 digits are used for LNP SMS translation.

no

The system verifies that 11 digits (plus a padded 0 digit) are present in the CDPA GTA. If 11 digits are present, the system strips the first digit and considers only 10 digits for LNP SMS translation.

Default:

No change to the current value

Example

```
chg-lnpopts:amaslpid=123456789
chg-lnpopts:amactype=003
chg-lnpopts:amafeatid=010
chg-lnpopts:incslp=yes
chg-lnpopts:cic=1369
chg-lnpopts:sp=1234
chg-lnpopts:jipdigits=919460
chg-lnpopts:jipprv=yes
chg-lnpopts:frcsmplx=yes
chg-lnpopts:admhipri=yes
chg-lnpopts:gtwystp=yes
chg-lnpopts:ccp=yes
chg-lnpopts:servport=yes
chg-lnpopts:wqredrct=off
chg-lnpopts:wsmc10dig=yes
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The LNP and Triggerless LNP (TLNP) features must be turned on before this command can be entered.

N/A N/A

The LNP database must be accessible.

2416 E2416 Cmd Rej: Unable to access database. Severe database failure

The Triggerless LNP feature must be turned on before the `jipprv` and `jipdigits` parameters can be specified.

3683 E3683 Cmd Rej: TLNP feature must be ON

The LNP SMS feature must be turned on before the `wsmc10dig` parameter can be specified.

3599 E3599 Cmd Rej: WSMSC feature must be Activated

The LNP options table must be accessible.

3198 E3198 Cmd Rej: Failed reading LNP Options table

The LNP feature or AINPQ feature must be turned on before this command can be entered.

2986 E2986 Cmd Rej: LNP or AINPQ feature must be ON

The WNP or PCS feature must be turned on before the `wqredrct` parameter can be specified.

3911 E3911 Cmd Rej: Either PLNP or WNP Features must be ON

Notes

If the `admhipri=yes` parameter is specified, LNP database administration can starve out normal STP updates during LNP administration of 2 TNs per second. If the parameter is set to *no*, then STP and LNP updates receive the same priority. Depending on the system activity level, the performance of LNP updates may be reduced.

If the `gtwystp=yes` parameter is specified, the LNP system is also configured as a gateway STP. The NPAC sends down capability point codes without routes. In this configuration, the system does not output a warning (UIM 1176) about capability point codes or true point codes without routes.

MTT rule E3524 has been deleted in Release 43.0 under PR 168138.

AINPQ feature dependency is required to get AIN queries processed by INPQ subsystem.

Output

```
chg-lnpopts:amaslpid=123456789
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0  
CHG-LNPOPTS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [rtrv-lnpopts](#)

4.1.96 chg-loopset

Use this command to change the loopset data in the database. This command updates the Loopset Table. A single instance of this command can be used to append up to 6 point codes to the loopset (a loopset can contain a total of 12 point codes), replace all data in the loopset, or change one or two point codes in the loopset.

Parameters**name (mandatory)**

Loopset name. Sn entry in the Loopset table.
The `name=none` parameter cannot be specified.

Range:

`ayyyyyyy`

1 alphabetic and up to 7 alphanumeric characters.

apc1 (optional)

ANSI appending point code list with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*). This parameter allows up to 6 comma-delimited entries in the point code list.

Synonym:

`apcla`

Range:

`p-, 000-255`

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

`prefix—p-`

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001-005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006-255`.

The point code `000-000-000` is not a valid point code.

apc1i (optional)

ITU international appending point code list with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*). This parameter allows up to 6 comma delimited entries in the point code list.

Range:

`s-, p-, ps-, 0-255`

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

`prefix—s-, p-, ps`

`zone—0-7`

`area—000-255`

`id—0-7`

The point code `0-000-0` is not a valid point code.

apc1n (optional)

ITU national appending point code list in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range:

s-, *p-*, *ps-*, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*, *p-*, *ps*

nnnnn—*0-16383*

gc—*aa-zz*

m1-m2-m3-m4—*0-14* for each member; values must sum to 14

apc1n24 (optional)

24-bit ITU national appending point code list with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range:

p-, *000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—*000-255*

ssa—*000-255*

sp—*000-255*

apc1n16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range:

p--, *000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix--p

un--000--127

sna--000--15

mna---000--31

force (optional)

This parameter must be specified to modify a loopset that is being used by GTT.

Range:

yes

mode (optional)

Mode of operation. This parameter specifies whether the message is discarded when an SCCP loop is detected.

Range:***notify***

Generates a UIM without discarding the message.

discard

Generates a UIM and discards the message.

npc1 (optional)

ANSI new point code 1 with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:*npc1a***Range:***p-*, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

npc1i (optional)

ITU international new point code 1 with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:*s-*, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

npc1n (optional)

ITU national new point code 1 in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s-, p-, ps-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**npc1n24 (optional)**24-bit ITU national new point code 1 with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.**Range:***p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000–255**ssa—000–255**sp—000–255***npc1n16 (optional)**16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*. This parameter allows up to 6 comma-delimited entries in the point code list.**Range:***p--, 000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix--p**un--000--127**sna--000--15**mna--000--31***npc2 (optional)**ANSI new point code 2 with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).**Synonym:***npc2a***Range:***p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001-005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006-255`.

The point code `000-000-000` is not a valid point code.

npc2i (optional)

ITU international new point code 2 with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code `0-000-0` is not a valid point code.

npc2n (optional)

ITU national new point code 2 in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

npc2n24 (optional)

24-bit ITU national new point code 2 with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000-255

ssa—000-255

sp—000-255

npc2n16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range:*p--*, *000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix--p**un--000--127**sna--000--15**mna--000--31***pc1 (optional)**

ANSI point code 1 with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:*pc1a***Range:***p-*, *000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc1i (optional)

ITU international point code 1 with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:*s-*, *p-*, *ps-*, *0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

pc1n (optional)

ITU national point code 1 in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s-, p-, ps-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**pc1n24 (optional)**24-bit ITU national point code 1 with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.**Range:***p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000–255**ssa—000–255**sp—000–255***pc1n16 (optional)**16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*. This parameter allows up to 6 comma-delimited entries in the point code list.**Range:***p--, 000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix--p**un--000--127**sna--000--15**mna--000--31***pc2 (optional)**ANSI point code 2 with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).**Synonym:***pc2a***Range:***p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p-*When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001-005`.
 When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006-255`.
 The point code `000-000-000` is not a valid point code.

pc2i (optional)

ITU international point code 2 with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, *0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*, *p-*, *ps*

zone—*0-7*

area—*000-255*

id—*0-7*

The point code `0-000-0` is not a valid point code.

pc2n (optional)

ITU national point code 2 in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*, *p-*, *ps*

nnnnn—*0-16383*

gc—*aa-zz*

m1-m2-m3-m4—*0-14* for each member; values must sum to 14

pc2n24 (optional)

24-bit ITU national point code 2 with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

p-, *000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—*000-255*

ssa—*000-255*

sp—*000-255*

pc2n16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range:*p--*, *000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix--p**un--000--127**sna--000--15**mna--000--31***rpc1 (optional)**

ANSI replacing point code list with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The prefix subfield indicates a private point code (*prefix-ni-nc-ncm*). This parameter allows up to 6 comma-delimited entries in the point code list.

Synonym:*rpcla***Range:***p-*, *000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

rpc1i (optional)

ITU international replacing point code list with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range:*s-*, *p-*, *ps-*, *0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

rpc1n (optional)

ITU national replacing point code list in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range:*s-, p-, ps-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**rpc1n24 (optional)**24-bit ITU national replacing point code list with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. This parameter allows up to 6 comma-delimited entries in the point code list.**Range:***p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000–255**ssa—000–255**sp—000–255***rpc1n16 (optional)**16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*. This parameter allows up to 6 comma-delimited entries in the point code list.**Range:***p--, 000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix--p**un--000--127**sna--000--15**mna--000--31***Example**

This example sets the mode to discard and appends the listed point codes to the loopset RTP1 if the set is not being used by GTT.

```
chg-loopset:name=rtp1:mode=discard:apcl=3-7-3,5-7-5,7-4-7,5-4-5
```

This example replaces the point codes in the set with the listed point codes for the loopset RTP1 if the set is not being used by GTT.

```
chg-loopset:name=rtp2:rpc1=3-2-3,5-7-8,7-8-7,3-5-3
```

This example sets the mode to DISCARD in the loopset RTP2 if the set is not being used by GTT.

```
chg-loopset:name=rtp2:mode=discard
```


This example replaces PC1 with NPC1 in the loopset RTP1 if the set is not being used by GTT.

```
chg-loopset:name=rtp1:pc1=3-3-3:npc1=3-3-9
```

This example replaces PC1 and PC2 with NPC1 and NPC2 in the loopset RTP2 if the set is not being used by GTT.

```
chg-loopset:name=rtp2:pc1=3-2-3:npc1=3-3-9:pc2=7-8-7:npc2=7-7-9
```

This example sets the mode to NOTIFY in the loopset RTP2 even if the set is being used by GTT.

```
chg-loopset:name=rtp2:mode=notify:force=yes
```

```
chg-
```

```
loopset:name=rtpn16:pc1n16=3-2-3:npc1n16=3-3-9:pc2n16=7-8-7:npc2n16=7-7-9
```

Dependencies

If the loopset is being used by GTT, and the `rpc1`, `pc1/pc2/npc1/npc2`, or `mode` parameter is specified, then the `force=yes` parameter must be specified.

4572 E4572 Cmd Rej: Requires force since Loopset is in use by GTT

If the `pc2` parameter is specified, then the `pc1` parameter must be specified.

4573 E4573 Cmd Rej: PC2 parameter requires PC1 parameter

If the `npc1` or `npc2` parameter is specified, then the corresponding `pc1` or `pc2` parameter must be specified.

4574 E4574 Cmd Rej: NPC1/NPC2 requires use of PC1/PC2

The command requires at least one optional parameter.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `rpc1` and `apc1` parameters cannot be specified together in the command.

4575 E4575 Cmd Rej: Replace and Append Point Code lists are mutually exclusive

If the `pc1` or `pc2` parameter is specified, then the `apc1` and `rpc1` parameters cannot be specified.

4576 E4576 Cmd Rej: PC1/PC2 cannot be used with either Point Code list

The value of the `name` parameter must already exist in the database.

4568 E4568 Cmd Rej: Loop Set entry does not exist

The SCCP Loop Detection feature must be enabled before this command can be entered.

4565 E4565 Cmd Rej: SCCP Loop Detection Feature is not enabled

The GTT feature must be turned on before this command can be entered.

2584 E2584 Cmd Rej: GTT feature must be ON

A maximum of 6 point codes can be added using this command with the `apc1` parameter. The Loopset entry can contain a maximum of 12 point codes.

4571 E4571 Cmd Rej: Addition of these pointcodes will exceed the pc limit

The Loopset table can hold a maximum of 1,000 loopset entries, with each entry containing up to 12 point codes. Additional loopset entries and point codes cannot be added when the table is full.

4566 E4566 Cmd Rej: LoopSet Table is full

The Loopset table must be accessible.

4567 E4567 Cmd Rej: Cannot access LoopSet table

The values for the `apcl` and `rpcl` parameters cannot consist of any invalid point codes. The valid point codes must be consecutively specified and separated by commas.

4627 E4627 Cmd Rej: Valid point codes must be continuous in point code list

The `name=none` parameter cannot be specified.

4628 E4628 Cmd Rej: NONE is an invalid name for a loopset entry

At least one valid point code must be specified as a value for the `apcl` and `rpcl` parameters.

4626 E4626 Cmd Rej: Must have at least 1 valid PC in a point code list

The values specified for the `apcl` and `rpcl` parameters must be unique.

4624 E4624 Cmd Rej: PCs in point code list must be unique

If the `npc1/pc1` or `npc2/pc2` parameters are specified together, then the value of the `npc` parameter cannot equal the value of the `pc` parameter.

4621 E4621 Cmd Rej: PCX and NPCX must be unique

A valid point code must be specified for the `pc1`, `pc2`, `npc1` or `npc2` parameter.

2169 E2169 Cmd Rej: Point code out of range

Equal values cannot be specified for the `pc1` and `pc2` parameters.

4622 E4622 Cmd Rej: PC1 and PC2 must be unique

Equal values cannot be specified for the `npc1` and `npc2` parameters.

4623 E4623 Cmd Rej: NPC1 and NPC2 must be unique

The GTT table must be accessible.

3118 E3118 Cmd Rej: Failed Reading GTT TT table

When adding point codes using the `apcl` parameter, or changing point codes using the `pc1/npc1` or `pc2/npc2` parameters, the new point code type must match the point code type of the loopset where the point codes are being added or changed.

4606 E4606 Cmd Rej: Point code type mismatch

The value of the `apcl` parameter cannot already exist in the loopset.

4625 E4625 Cmd Rej: PC already exists in the loopset entry

The value of the `pc1` or `pc2` parameter must already exist in the loopset.

4596 E4596 Cmd Rej: Point Code does not exist in the Loopset Table entry

Notes

There is no J7 FAK dependency on the `apcln16/rpcln16/pc1n16/npc1n16/pc2n16/npc2n16` parameters. The command can be entered successfully when the J7 FAK is not enabled.

There is no J7 FAK dependency on the `apcln24/rpcln24/pc1n24/npc1n24/pc2n24/npc2n24` parameters. The command can be entered successfully when the J7 FAK is enabled.

There is no J7 FAK dependency on the `apcl/apcla/rpcl/pc1a/npc1a/pc2a/npc2a` parameters. The command can be entered successfully when the J7 FAK is enabled.

Output

This example replaces the existing point codes with new point codes in loopset RTP2 when that set is not being used by GTT:

```
chg-loopset:name=rtp2:pc1=3-2-3:npc1=3-3-9:pc2=7-8-7:npc2=7-7-9
```

```
rlghncxa03w 07-02-10 08:41:17 EST EAGLE Rel 35.6.0
LOOPSET table is (12 of 1000) 1% full
CHG-LOOPSET: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-loopset](#)
- [ent-loopset](#)
- [rtv-loopset](#)

4.1.97 chg-ls

Use this command to change the attributes for a specified linkset in the system database. The new values overwrite the existing values. All parameters required for MTP distribution will be used whether they are explicitly specified or obtain from existing provisioning.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

lsn (mandatory)

Linkset name. Each linkset name must be unique in the system.

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

action (optional)

This parameter adds or deletes the SAPC, mate IPGWx linkset name, or the value specified for the `rcontext` parameter.

Range:

add

delete

Default:

No change to the current value

System Default:

add

adapter (optional)

Adapter layer for links provisioned in an IPSP linkset.

Range:

m3ua

m2pa

Default:

No change to the current value

System Default:

m2pa

apc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

apca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

apc/apca/apci/apcn/apcn24 /apcn16 (optional)

Adjacent point code.

apci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:*s-, p-, ps-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**zone—0-7**area—000-255**id—0-7*The point code *0-000-0* is not a valid point code.**apcn (optional)**

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:*s-, p-, ps-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**apcn24 (optional)**

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range:*p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000-255**ssa—000-255**sp—000-255***apcn16 (optional)**

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). The *prefix* indicates a private point code (*prefix-un-sna-mna*).

Range:*p--, 000-127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-)

*prefix---p**un---000---127*

sna--000--15

mna--000--31

apcntype (optional)

ITU-N Adjacent Point Code Type. The format used for changeover and changeover acknowledgement messages.

Range:

itun

ITU National Adjacent Point Code type

itunchina

ITU National China Adjacent Point Code type

Default:

itun

as18 (optional)

Adjacent SLS 8-bit indicator. This parameter specifies whether the adjacent node is sending MSUs with 8-bit SLSs.

Range:

yes

no

Default:

No change to the current value

asnotif (optional)

AS notification. This parameter specifies whether AS notifications are sent for an IPSG linkset.

Range:

yes

no

Default:

yes

If the `adapter=m2pa` parameter is specified, the default value is *no*.

If the `adapter=m3ua` parameter is specified, the default value is *yes*.

bei (optional)

Broadcast exception indicator. This parameter specifies whether TFP (transfer prohibited) messages are allowed to be broadcast on the linkset.

Range:

yes

TFPs are not broadcast

no
TFPs are broadcast

Default:
No change to the current value

cggtmod (optional)

Calling party GT modification indicator. This parameter specifies whether calling party global title modification is required for the specified linkset.

Range:

yes

no

Default:
No change to the current value

cgpnblset (optional)

Calling party blacklist set.

Range:

1-255, none

System Default:
none

chgntp3opc (optional)

Change MTP3 OPC. This parameter specifies whether to change MTP3 OPC with SPC or not.

Range

on

off

Default
No change to the current value

c11i (optional)

Far-end Common Language Location Identifier (CLLI). The CLLI assigned to the linkset.

Range:

aaaaaaaaaa

1 alphabetic character followed by up to 10 alphanumeric characters

Default:
No change to the current value

gnameset (optional)

Generic Name Set type. The new settype for an IPSP-M3UA linkset.

Range:***seta******setb******both******none*****System Default:***none*

Note: After the upgrade, the default value of gnameset will be set to BOTH as previous releases have BOTH as default value.

gsmscrn (optional)

GSM MAP screening. This parameter specifies whether GSM MAP screening is allowed.

Range:***on***

GSM map screening is allowed

off

GSM map screening is not allowed

Default:

No change to the current value

gttmode (optional)

Global Title Translation Mode. This parameter specifies a GTT Mode hierarchy for each link set.

Range:***cd***

CdPA GTT only

cg

CgPA GTT only

acdcd

Advanced CdPA GTT, CdPA GTT

acdcgcd

Advanced CdPA GTT, CgPA GTT, CdPA GTT

acdcdcg

Advanced CdPA GTT, CdPA GTT, CgPA GTT

cgacdcd

CgPA GTT, Advanced CdPA GTT, CdPA GTT

cgcd

CgPA GTT, CdPA GTT

cdcg
CdPA GTT, CgPA GTT

fcd
FLOBR CdPA only

fcg
FLOBR CgPA only

fcgfc
FLOBR CgPA, FLOBR CdPA

fcdfcg
FLOBR CdPA, FLOBR CgPA

sysdfit
System wide default value

Default:
No change to current value.

***gwsa* (optional)**
Gateway screening action. This parameter specifies whether gateway screening (GWS) is on or off for the specified linkset.

Range:

on

off

Default:
No change to the current value

***gwsd* (optional)**
Gateway screening MSU discard. This parameter specifies whether the discarding of MSUs that bypass the gateway screening function due to load-shedding is on or off. This parameter is also used with the redirect function; MSUs that cannot be screened are discarded if *gwsd=on* is specified.

Range:

on

off

Default:
off

***gws*m (optional)**
Gateway screening messaging. This parameter specifies whether messages are generated for each message screened by gateway screening.

Range:

on

off

Default:

No change to the current value

ipsg (optional)

IP signaling gateway adjacent point code. This parameter specifies whether a linkset is entered for an IPSG card. The specified adjacent point code is an IP gateway adjacent point code.

Range:

yes

no

Default:

no

islsrsb (optional)

Incoming rotated signaling link selection (SLS) bit. The bit (1-4) for ITU and (1-8) for ANSI link sets to rotate as the new SLS LSB (Least Significant Bit) of the incoming linkset. The SLS is not modified in the outgoing message.

[Table 4-32](#) shows how the rotation affects the four bits of the ITU SLS during linkset selection.

[Table 4-33](#) shows how the rotation affects the four bits of the ANSI SLS during linkset selection.

This parameter is used for ITU or ANSI messages on a per-linkset basis.

Range:

1 - 8

ITU linkset— *1 - 4*

ANSI linkset— *1 - 8*

The `rsls8=yes` parameter must be specified (see the `chg-lsopts` command) before a value greater than 5 can be specified.

Default:

No change to the current value

System Default:

1

itutfr (optional)

ITU TFR (Transfer Restricted) procedure indicator. This parameter specifies whether the TFR procedure is on or off on a per-linkset basis. This parameter is valid for ITU national linksets only.

Range:

on

off

Default:

No change to the current value

l3tset (optional)

Link timer set. This parameter is defined with the `chg-l3t` command.

Range:

1

Default:

No change to the current value

l1st (optional)

Linkset type of the specified linkset. This parameter specifies whether the specified link is an access link, bridge link, cross link, diagonal link, or extended link, as defined in Telcordia GR-246-CORE, T1.111.5.

Range:

a

Access links

b

Bridge links

c

Cross links

d

Diagonal links

e

Extended links

Default:

No change to the current value

lsusealm (optional)

IPTPS linkset alarm threshold percent. The percent of the linkset TPS (`iptps`) at which an alarm is generated to indicate that the actual linkset TPS is approaching the configured `iptps` value for the linkset.

Range:

10 - 100

Default:

No change to the current value

System Default:

100

mate1sn (optional)

Mate linkset name.

Range:

ayyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Default:

No change to the current value

maxslktps (optional)

Maximum per signaling link TPS. The maximum capacity a link is permitted when sufficient unused capacity is present on the host card.

 **Note:**

This parameter cannot be specified for links in non-IPSG linksets. If the HIPR2 High Rate Mode feature is turned off, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 500,000. If the HIPR2 High Rate Mode feature is turned on, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 750,000. If the HIPR2 High Rate Mode and 1M System TPS features are turned on, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 1,000,000.

Range:

25 - 12,000

 **Note:**

The maximum value that can be specified for this parameter depends on the type of IPSG card that is used:

- E5-ENET-B card when the E5-ENET-B IPSG High Throughput feature is turned off-6500 TPS
- E5-ENET-B card when the E5-ENET-B IPSG High Throughput feature is turned on-9500 TPS
- SLIC card - 12,000 TPS

Default:

No change to the current value

System Default:

6500

mtprse (optional)

ANSI or ITU MTP Restart equipped. This parameter specifies whether the node adjacent to the linkset is equipped with MTP Restart.

Range:

yes
equipped

no
not equipped

Default:

No change to the current value

multgc (optional)

Multiple group codes. The parameter specifies whether multiple group codes can be specified.

Range:

yes

no

nis (optional)

Network Indicator Spare. This parameter specifies whether the Network Indicator Spare option is on or off for the specified linkset. When this option is enabled, the Network Spare value for network indicator for both ANSI and ITU-National (ITU-N) links is supported by the system.

Range:

on

off

Default:

off

nlsn (optional)

New linkset name.

Range:

aaaaaaaaaa

Up to 10 alphanumeric characters; the first character must be a letter

Default:

No change to the current value

randsls (optional)

Random SLS (signaling link selection). This parameter is used to apply random SLS generation on a per linkset basis.

Specifying this parameter enables random SLS generation on a per linkset basis only if the `randsls=perls` parameter has been specified in the `chg-stpopts` command. For more details, refer to *Database Administration - SS7 User's Guide, Per-Linkset Random SLS*.

Range:

off

disables random SLS generation on a specified linkset

class0

enables random SLS generation for Class0 SCCP traffic on a specified linkset

all

enables random SLS generation for Class0 and Class1 SCCP traffic on a specified ITU linkset and for Class0 and ISUP traffic on a specified ANSI linkset

Default:

No change to the current value

rcontext (optional)

Routing Context. The new routing context for an IPSG-M3UA linkset.

Range:

0 - 4294967295

Default:

No change to the current value

sapci (optional)

ITU international secondary adjacent point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p*-, *ps*-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

sapci/sapcn/sapcn24/spcn16 (optional)

Secondary adjacent point code.

sapcn (optional)

ITU national secondary adjacent point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p*-, *ps*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps*

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

sapcn24 (optional)

24-bit ITU national secondary adjacent point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p
msa—000–255
ssa—000–255
sp—000–255

scrn (optional)

Gateway screening screen set. The gateway screening screen set assigned to this linkset. When using this parameter to change Gateway Screening from an old screenset name with Gateway Screening Allowed Mode *gwsa=off* to a new screenset name with *gwsa=on*, the command must first be entered to assign the screenset name to NONE (*scrn=none*). This assignment prevents any rules from the old screenset from being applied during the interim period that it takes for the new screenset to load.

Range:

ayyy
 1 alphabetic character followed by up to 3 alphanumeric characters
none -deletes the screen set association

Default:

No change to the current value

s1ktps (optional)

Reserved per signaling link TPS for IPSP Linkset. The capacity guaranteed for each link in the linkset.

 **Note:**

This parameter is required for each link in an IPSP linkset and cannot be specified for links in non-IPSP linksets.

 **Note:**

The sum of guaranteed capacities for the links hosted by an IPSP card cannot exceed the IPSP card capacity.

 **Note:**

If the HIPR2 High Rate Mode feature is turned off, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 500,000. If the HIPR2 High Rate Mode feature is turned on, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 750,000. If the HIPR2 High Rate Mode and 1M System TPS features are turned on, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 1,000,000.

Synonym:

rsvdsktps

Range:
0 - 12,000

 **Note:**

The maximum value that can be specified for this parameter depends on the type of IPSPG card that is used:

- E5-ENET-B card when the E5-ENET-B IPSPG High Throughput feature is turned off-6500 TPS
- E5-ENET-B card when the E5-ENET-B IPSPG High Throughput feature is turned on-9500 TPS
- SLIC card - 12,000 TPS

Default:
No change to the current value

s1kusealm (optional)

IPTPS signaling link alarm threshold percent. The percent of the link TPS at which an alarm is generated to indicate that the actual link TPS is approaching the alarmed IPTPS (*s1ktps/rsvds1ktps* or *maxs1ktps*) configured for the link.

Range:
10 - 100

Default:
No change to the current value

System Default:
80

s1sci (optional)

5-bit to 8-bit SLS conversion indicator. This parameter specifies whether the 5-bit to 8-bit SLS conversion feature is used to select links for outgoing messages direct to the given linkset. When enabled, the system replaces any 5-bit SLS values contained in received messages, with a random 8-bit value before the 5-bit SLS values are used by the STP to select the outgoing link in that linkset.

Range:

yes
enabled

no
disabled

Default:
No change to the current value

s1socbit (optional)

Other CIC (Circuit Identification Code) Bit. If the SLSOCB feature is turned on, this parameter specifies whether the Other CIC Bit option is to be used during link selection. If the option is to be used, specify which bit (5– 16) of the CIC is to be used

as the other CIC bit. During link selection, the specified bit acts as the most significant bit of the new SLS and bits 2 through 4 of the received CIC become the least significant bits of the new SLS. This parameter is used for ITU-ISUP messages. The SLS is not modified in the outgoing message. [Table 4-11](#) shows a received CIC where bit 9 is the other CIC bit (`s1socbit=9`). The new SLS is 0100:

	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
	0	0	0	0	1	0	0	0	1	0	0	1	1	0	0	1
New SLS								0					1	0	0	

Range:

5 - 16

Default:

No change to the current value

s1srsb (optional)

Rotated SLS (Signaling Link Selection) Bit. The bit (1–4) to rotate as the new SLS LSB (Least Significant Bit). The SLS is not modified in the outgoing message.

[Table 4-35](#) shows how the rotation affects the SLS during linkset selection.

This parameter is used for ITU messages on a per-linkset basis.

Range:

1 - 4

Default:

No change to the current value

s1tset (optional)

SLTM record. The SLTM record to be associated with the linkset.

Range:

1 - 20

0 –sets the linkset to SLT reflect mode

Default:

No change to the current value

spc (optional)

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:*spca***Range:**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*p-, 000-255, none**prefix—p-*

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid for *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

Enter *none* to delete the point code.

The point code *000-000-000* is not a valid point code.

spc/spca/spci/spcn/spcn24/spcn16 (optional)

Secondary point code.

spci (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*

zone—0-7

area—000-255

id—0-7

Enter *none* to delete the point code.

The point code 0-000-0 is not a valid point code.

spcn (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Enter *none* to delete the point code.

spcn24 (optional)

24-bit ITU national secondary point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Enter *none* to delete the point code.

spcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:

000--127, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-)

un---000--127

sna--000--15

mna--000--31

Enter *none* to delete the point code.

tfatcabmlq (optional)

TFA/TCA broadcast minimum link quantity. The minimum number of links in the given linkset, or in the combined linkset in which the linkset resides, that must be available to user-part messages traffic. This parameter value is used by the STP to consider the first-choice ordered routes using that linkset as Allowed rather than Restricted.

If this parameter's provisioned or default value is 0, then the TFA/TCA broadcast minimum link quantity is calculated by the system to be either 1 for linksets containing 2 or fewer links, or half (rounded-up) of the number of links configured in the linkset for linksets containing more than 2 links.

If this parameter value is set to a specific value greater than 0, then the system does not calculate a TFA/TCA broadcast minimum link quantity. The specified value is used.

Range:

0, 1 - 16

Default:

No change to current value.

System Default:

0

tpsalmtype (optional)

IPSG IPTPS threshold alarm type. The IPTPS threshold that can be alarmed.

Range:***rsvdslktps***

the SLKTPS/RSVDSLKTPS threshold is alarmed

maxslktps

the MAXSLKTPS threshold is alarmed

Default:

No change to the current value

System Default:

rsvdslktps

visualizedata (optional)

Linkset based Visualization option.

Range:***off***

Visualization is off on this linkset

risky

Only risky opcodes (based on FS11) will be visualize on this linkset

all

All opcodes will be visualize on this linkset

System Default:

off

Example

Changes linkset WY644368 to use APC 144-202-5:

```
chg-ls:lsn=wy644368:apc=144-202-005
```

Changes link set WY644368 to Link Set Type A:

```
chg-ls:lsn=wy644368:lst=a
```

Adds an SAPC to a linkset:

```
chg-ls:lsn=linkset:sapcn=1234-fr:action=add
```

```
chg-ls:lsn=c002:gwsm=on:nis=on
```

```
chg-ls:lsn=nc003:sltm=reg:lst=b
```

Adds a 24-bit ITU-N SAPC to a linkset:

```
chg-ls:lsn=ls1:sapcn24=5-5-5
```

Deletes a 24-bit ITU-N SAPC from a linkset:

```
chg-ls:lsn=ls1:sapcn24=5-5-5:action=delete
```

Assigns a mate linkset to a linkset:

```
chg-ls:lsn=linkset:matelsn=matelinkset
```

Changes an ITUN24 linkset to an APCNTYPE for China:

```
chg-ls:lsn=ls2:apcntype=itunchina
```

```
chg-ls:lsn=nc003:slsci=yes:tfatcabmlq=2
```

```
chg-ls:lsn=lsitu1:gmscrn=off
```

```
chg-ls:apca=p-011-2-3:lsn=lsa1:lst=a
```

```
chg-ls:lsn=ls1:randsls=all
```

Indicates that calling party GT modification is required:

```
chg-ls:lsn=ls1:apc=1-1-1:cggmod=yes
```

Changes the linkset's SPC value:

```
chg-ls:lsn=ls1:spc=100-23-48
```

Changes the adapter of a specified IPSPG linkset:

```
chg-ls:lsn=ls2:adapter=m2pa
```

Changes the AS notification status and routing context value for an IPSPG-M3UA linkset:

```
chg-ls:lsn=m3ua33:rcontext=9999:action=add
```

Converts the linkset to IPSPG:

```
chg-ls:lsn=m2pa33:ipsg=yes
```

This command changes the Incoming SLS Bit Rotation value to 6 for ANSI link sets:

```
chg-ls:lsn=ls1:islsrsb=6
```

Changes the GTTMODE value to FLOBR CdPA when the FLOBR feature is turned on:

```
chg-ls:lsn=ls3:gttmode=fcd
```

Converts the linkset to SLT reflect mode:

```
chg-ls:lsn=ls1:sltset=0
```

Change adapter type of a 16-bit ITU national linkset type:

```
chg-ls:lsn=ls1:apcn16=121-5-15:adapter=m3ua
```

Change linkset chgmtp3opc parameter:

```
chg-ls:lsn=ls112:chgmtp3opc=off
```

Change linkset gnameset parameter:

```
chg-ls:lsn=ls112:gnameset=setb
```

Change linkset cgpnblset parameter:

```
chg-ls:lsn=ls112:cgpnblset=3
```

Change gnameset parameter to NONE:

```
chg-ls:lsn=ls112:gnameset=none
```

Dependencies

A valid screenset name must be associated with the linkset, or the `scrn` parameter must be specified with a valid screenset name before the `gwsa`, `gwsn`, and `gwsd` parameters can be specified.

2336 E2336 Cmd Rej: GWSA, GWSM, GWSD are invalid without SCRSET specified

The `gwsa=on` parameter must be specified before the `gwsd=on` parameter can be specified.

2337 E2337 Cmd Rej: If GWSA=OFF then GWSD must also be OFF

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

If the `lsrestrict=off` parameter is specified (see the `chg-ss7opts` command), the `tfatcabmlq` database value for C linksets cannot be changed from the system default of 0. If the `lsrestrict=on` parameter is specified, the `tfatcabmlq` value for C linksets (`lst=c`) can be set to 1 - 16. If the `tfatcabmlq` value for one or more C linksets in the system is changed, the `lsrestrict` parameter cannot be changed from *on* to *off* until all of the changed C linkset `tfatcabmlq` values are set back to 0. C linksets are never the primary route (except to reach the STP's mate).

2866 E2866 Cmd Rej: TFATCABMLQ is invalid for C-link sets

The `tfatcabmlq` parameter value cannot exceed the total number of assigned links in the linkset.

2860 E2860 Cmd Rej: TFATCABMLQ value exceeds number of links in link set

The linkset name must be in the database.

2346 E2346 Cmd Rej: Linkset not defined

The screen set name specified by the `scrn` parameter must be valid and must be in the database.

2361 E2361 Cmd Rej: Screen set name not defined

Adjacent point codes must be full point codes.

2332 E2332 Cmd Rej: Point code defined as an alias

The adjacent point code must be defined as a destination point code.

2859 E2859 Cmd Rej: Destination address must be a full point code

The adjacent point code cannot match the site point code.

2168 E2168 Cmd Rej: Point code matches a STP point code

The domain of the new adjacent point code must be the same as the previous adjacent point code unless there are no links in the linkset.

2593 E2593 Cmd Rej: APC cannot be of a different domain than previous

Only one linkset can be defined for an adjacent point code.

4128 E4128 Cmd Rej: SAPC entry present for the linkset

An SAPC cannot be deleted when routes exist for its SS7 domain.

2600 E2600 Cmd Rej: Linkset SAPC referenced by route

If the `gwsa=off` and `gwsn=off` parameters are specified, all MSUs are passed. If the `gwsa=off` and `gwsn=off` parameters are specified for all linksets, gateway screening and the GWS redirect function for the DTA feature are disabled.

2337 E2337 Cmd Rej: If GWSA=OFF then GWSD must also be OFF

If the `gwsa=on` and `gwsn=off` parameters are specified, MSUs are screened but messages are not generated.

 **Caution:**

Even though gateway screening is in the screen test mode, as defined by the parameters `gwsa=off` and `gwsn=on`, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set is performed at the end of the screening process.

N/A N/A

The `mtprse` parameter can be specified only if the MTP restart feature, MTPRS (for ANSI), or ITUMTPRS (for ITU), is turned on. The `rtrv-feat` command can be used

to verify whether the feature is turned on (MTPRS=YES or ITUMTPRS=YES in the output).

2834 E2834 Cmd Rej: MTPRSE parameter is only valid if MTPRS feature is ON

If the `ipgwapc=yes` or `ipsg=yes` parameter is specified, then the `mtpmse=yes` parameter cannot be specified.

3781 E3781 Cmd Rej: MTP restart option invalid for IPGWx and IPSG-M3UA linksets

The `clli` and `apc/apca/apci/apcn/apcn24/apcn16` parameters must be specified together in the command.

2113 E2113 Cmd Rej: CLLI cannot be specified without Point Code

The value of the `clli` parameter must match the `clli` of the current site.

2335 E2335 Cmd Rej: CLLI is not identical to that of matching Destination

The `asl8=yes` parameter can be assigned only to an SS7 linkset (a linkset containing an adjacent point code in the SS7 domain).

2848 E2848 Cmd Rej: ASL8 is only valid for ANSI link sets

The `apcn` parameter format must match the format assigned with the `chg-stpopts:npcfmti` parameter.

2997 E2997 Cmd Rej: PC must match NPCFMTI set in CHG-STPOPTS

An SAPC parameter can be specified only for ITU-N and ITU-N24 linksets.

4129 E4129 Cmd Rej: SAPC allowed for ITU-I or ITU-N linkset only

The `slocbit` parameter is valid only for ITU linksets.

3862 E3862 Cmd Rej: SLSOCBIT parameter is only valid for ITU Link Sets

The `srsrb` parameter is valid only for ITU linksets.

3864 E3864 Cmd Rej: SLSRSB parameter is only valid for ITU Link Sets

The GSM Map Screening feature must be turned on before the `gmscrn` parameter can be specified.

3883 E3883 Cmd Rej: GSM Map Screening feature must be ON

The Enhanced GSM Map Screening feature must be turned on before the `gmscrn=on` parameter can be specified for an ANSI linkset.

4285 E4285 Cmd Rej: Enhanced GSM Map Screening feature must be ON

The `itutfr` parameter is valid only for ITU national linksets.

3871 E3871 Cmd Rej: ITUTFR parameter is only valid for ITU link sets

The group code of DPC(s) must match the group code of the APC/SAPC when the `multgc=no` parameter is specified.

If the adjacent point code's group code is changed, the `multgc=yes` parameter must be specified, or there must be no routes using the linkset.

The `multgc` parameter value can be changed to `no` only if there are no routes with group codes different from the adjacent point code's group code.

4061 E4061 Cmd Rej: Group Code of DPC(s) and APC/SAPC must match when MULTGC=NO

Only one ITU-N APC/SAPC is allowed with the `multgc=no` parameter.

4126 E4126 Cmd Rej: Only one ITU-N APC/SAPC allowed with MULTGC=NO

Only one ITU-I or 24-bit ITU-N APC/SAPC is allowed per linkset.

4127 E4127 Cmd Rej: Only one ITU-I or 24-bit ITU-N APC/SAPC allowed per linkset

The `apcntype` parameter can be specified only for ITU-N and ITU-N24 linksets.

4278 E4278 Cmd Rej: APCNTYPE parameter is only valid for ITUN/ITUN24 link sets

A linkset cannot have both a 14-bit ITU-N and a 24-bit ITU-N APC/SAPC unless it contains only IPGWI links. These links support 14-bit ITU-N and 24-bit ITU-N traffic simultaneously.

A linkset with the `ipgwapc=no` parameter cannot have both a 14-bit ITU-N and a 24-bit ITU-N APC/SAPC if no links are provisioned.

The SAPC cannot be a 24-bit ITU-N point code if the linkset contains E1 ATM links, which do not support 24-bit ITU-N traffic.

3538 E3538 Cmd Rej: Linkset SLK requires ITUN APC/SAPC to be 14bit or 24bit only

The `ipgwapc=yes` or `ipsg=yes` parameter must be specified before the `lsusealm` parameter can be specified.

4253 E4253 Cmd Rej: LSUSEALM allowed only for IPGWx and IPSG linksets

The `ipgwapc=yes` or `ipsg=yes` parameter must be specified before the `slkusealm` parameter can be specified.

4254 E4254 Cmd Rej: SLKUSEALM allowed only for IPGWx and IPSG linksets

The same value cannot be specified for the `lsn` and `mate1sn` parameters.

4217 E4217 Cmd Rej: Linkset cannot reference self as mate

If the `action=add` parameter is specified, the specified mate linkset cannot already be assigned as the mate of the specified linkset.

4216 E4216 Cmd Rej: Linkset cannot be the mate of another linkset

When the `action=add` parameter is specified, the specified mate linkset cannot already be the mate of another linkset.

4225 E4225 Cmd Rej: Mate already exists for linkset

The specified mate linkset must be an existing linkset in the database.

4294 E4294 Cmd Rej: Meas for Enh GSM MAP Screening not supported on EOAM

A mated linkset can have only one assigned link.

4218 E4218 Cmd Rej: A mated linkset cannot have more than one link assigned

Mated linksets can contain only SS7IPGW or IPGWI links.

4219 E4219 Cmd Rej: Mated linksets must contain only SS7IPGW or IPGWI links

Mated linksets must have APCs of the same network type.

4220 E4220 Cmd Rej: Mated linksets must have APCs of same network type

The card that has the link assigned to the specified linkset must be inhibited before the `action=add` parameter can be specified to assign the specified mate linkset to the specified linkset.

4221 E4221 Cmd Rej: Card having link in linkset must first be inhibited

The card that has a link in the mate linkset must be inhibited before the `action=delete` parameter can be specified to delete the mate linkset assignment.

4222 E4222 Cmd Rej: Card having link in mate linkset must first be inhibited

If the `action=delete` parameter is specified to delete a mate linkset assignment, the specified mate linkset must be the mate of the specified linkset in the database.

4250 E4250 Cmd Rej: Linkset does not reference MATELSN

If the `action=delete` parameter is specified, then the `sapc`, `matelsn`, or `rconext` parameter must be specified. The parameters cannot be specified together in the command.

4223 E4223 Cmd Rej: Action requires SAPC or MATELSN or RCONTEXT but not together

The `mtprse` parameter can be specified only if the MTP restart feature ITUMTPRS (for ITU) is turned on. The `rtvr-feat` command can be used to verify whether the feature is turned on (ITUMTPRS=YES in the output).

3851 E3851 Cmd Rej: MTPRSE parameter is only valid if ITUMTPRS feature is ON

The `slocbit` parameter is valid only if the SLSOCB feature is turned on.

3863 E3863 Cmd Rej: SLSOCBIT parameter not permitted if SLSOCB Feature is OFF

The adjacent point code cannot match the capability point code.

2167 E2167 Cmd Rej: Point code matches a STP capability point code

The STP Site ID table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

An APC cannot be changed to a point code that has exception routes provisioned.

4369 E4369 Cmd Rej: Cannot assign APC with exception routes to linkset

The Route Exception table is corrupt or cannot be found.

4379 E4379 Cmd Rej: Failed to access Route Exception Table

The Origin-based SCCP Routing feature must be turned on before the `gttmode` parameter can have a value of `acdcd`, `cgacdcd`, `acdcgcd`, `acdcdcg`, `cgcd`, `cdcg`, or `cg`.

5096 E5096 Cmd Rej: Origin Based SCCP Routing feature must be ON.

All links assigned to the linkset must be removed before changing the `apcntype` parameter value from `apcn` to `apcn24` or from `apcn24` to `apcn`.

4392 E4392 Cmd Rej: Assigned SLKs must be deleted before `apcntype` can be changed

If one or more of the links in the specified linkset are in service, then the `apc/apca/apci/apcn/apcn24/apcn16` parameter cannot be specified.

2125 E2125 Cmd Rej: Links on specified linkset are in-service

If `apcn` is specified for the Adjacent Point Code then the format of `apcn` must match the format dictated by the `npcfmti` parameter via the `chg-stpopts` command.

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

Gateway linksets must be configured from a SEAS terminal.

2931 E2931 Cmd Rej: SEAS Gateway Screen Set names can not be changed locally

If the system is configured for ANSI formatted point code, the network indicator value of the foreign point code parameter must be 6 or greater when the cluster value is 0.

2169 E2169 Cmd Rej: Point code out of range

The value of the `apc/apca/apci/apcn/apcn24/apcn16` or `sapc/sapca/sapci/sapcn/sapcn24` parameter cannot be assigned to more than one linkset.

2343 E2343 Cmd Rej: Linkset APC/SAPC is already being used

The new `apc/apca/apci/apcn/apcn24/apcn16` parameter must have the same point code type as the `apc/apca/apci/apcn/apcn24/apcn16` parameter currently specified for the linkset.

2341 E2341 Cmd Rej: May not change adjacent point code type

The value of the `apc/apca/apci/apcn/apcn24/apcn16` parameter must exist in the Point Code table.

2657 E2657 Cmd Rej: Point code not defined

The `1st` parameter must have a value of `b`, `c`, or `d` if a network or cluster route is configured through the linkset.

2349 E2349 Cmd Rej: Linkset Type used for network/cluster route can't be A or E

If the `multgc=yes` parameter is specified, then an IPGWI or IPLIMI link must be specified.

4003 E4003 Cmd Rej: MULTGC=YES requires IPGWI, IPGWI, or IPLIMI links

If the ITUDUPPC feature is off, then the `multgc=yes` parameter cannot be specified.

4039 E4039 Cmd Rej: MULTGC=YES not allowed if ITUDUPPC feature is OFF

If the `multgc=yes` parameter is specified, then the `apci`, `apcn`, `apcn16`, or `apcn24` parameter must be specified.

4060 E4060 Cmd Rej: MULTGC=YES requires ITU-N or ITU-I point code

The value of the `sapc/sapca/sapci/sapcn/sapcn24` parameter must exist in the Destination Point Code table.

4123 E4123 Cmd Rej: SAPC entry not found for the linkset

The `apc/apca/apci/apcn/apcn24` or `sapc/sapca/sapci/sapcn/sapcn24` parameter can be defined only once per linkset.

4124 E4124 Cmd Rej: APC/SAPC in specified group code already exists for linkset

The maximum number of `sapc/sapca/sapci/sapcn/sapcn24` entries is 1000.

4125 E4125 Cmd Rej: Maximum SAPC entries exceeded

The value of the specified `lsn` parameter cannot already exist in the database.

2345 E2345 Cmd Rej: Linkset already defined

The specified `matelsn` parameter must already be equipped in the linkset database.

4249 E4249 Cmd Rej: Mate linkset not defined

If the linkset is not mated to the linkset specified by the `matelsn` parameter, then the `action=delete` parameter cannot be specified.

4250 E4250 Cmd Rej: Linkset does not reference MATELSN

The value specified for the `spc` parameter must be a valid full point code.

3822 E3822 Cmd Rej: SPC must be a full point code

The values specified for the `spc` and `apc` parameters must have the same network type.

3821 E3821 Cmd Rej: SPC & DPC must be the same network type

If the `sapc`, `matelsn`, `rcontext`, or `action` parameter is specified, then those four parameters are the only optional parameters that can be specified. If the `action` parameter is specified, then the `sapc` or `rcontext` or `matelsn` parameter must be specified. If the `ipsg` parameter is specified, then no other optional parameters can be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The Multiple Linksets to Single Adjacent PC (MLS) feature must be turned on before the `spc` parameter can be specified.

4631 E4631 Cmd Rej: Multiple Linksets to Single Adjacent PC feature must be ON

The value specified for the `spc` parameter must already exist in the SPC table.

3814 E3814 Cmd Rej: SPC does not exist

The SPC table must be accessible.

3807 E3807 Cmd Rej: Failed reading Secondary Point Code (SPC) table

The point code type of the value specified for the `spc` parameter must be the same as the point code type of the value of the existing `spc` parameter.

2341 E2341 Cmd Rej: May not change adjacent point code type

The value specified for the `spc` parameter cannot already be specified as a secondary point code for an adjacent destination point code.

4636 E4636 Cmd Rej: SPC may not exist as an SPC in the route table for the APC

The value specified for the `apc` parameter must differ from the adjacent point code of the linkset specified by the `lsn` parameter.

4634 E4634 Cmd Rej: No change in APC actually requested

The value specified for the `spc` parameter must differ from the secondary point code of the linkset specified by the `lsn` parameter.

4635 E4635 Cmd Rej: No change in SPC actually requested

If a proxy linkset is used, then the `apc`, `sapc`, `action`, and `lst` parameters cannot be specified.

4699 E4699 Cmd Rej: Parameter cannot be specified for proxy linksets

The specified combination of the `apc` and `spc` parameters must be unique for each linkset.

4760 E4760 Cmd Rej: Linkset APC/SPC pair is already being used

The specified combination of the `apc` and `sapc` parameters must be unique for each linkset.

2343 E2343 Cmd Rej: Linkset APC/SAPC is already being used

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the `cggtmod` parameter can be specified.

4789 E4789 Cmd Rej: Either AMGTT or AMGTT CgPA Upgrade feature must be ON

The `ipsg=yes` parameter must be specified before the `adapter` parameter can be specified.

4658 E4658 Cmd Rej: ADAPTER can only be specified when IPSP=YES

The `ipsg=yes` and `adapter=m3ua` parameters must be specified before the `asnotif` parameter can be specified.

4666 E4666 Cmd Rej: ASNOTIF prohibited unless IPSP=YES and ADAPTER=M3UA

The `ipsg=yes` and `adapter=m3ua` parameters must be specified before the `rcontext` parameter can be specified.

4659 E4659 Cmd Rej: RCONTEXT prohibited unless IPSP=YES and ADAPTER=M3UA

If the IPSP linkset contains links, then the `adapter` parameter cannot be specified.

2342 E2342 Cmd Rej: Links assigned to linkset

The `ipsg=yes` parameter must be specified before the `slktps/rsvdslktps` or `maxslktps` parameter can be specified.

4811 E4811 Cmd Rej: SLKTPS is prohibited for non-IPSP linksets

If the `ipsg=yes` and `adapter=m3ua` parameters are specified, then the `lst=a` parameter must be specified.

4667 E4667 Cmd Rej: IPSP=YES and ADAPTER=M3UA requires LST=A

A maximum of 1 IPGW linkset or a maximum of 6 of any other linksets are allowed between any APC and the EAGLE.

4632 E4632 Cmd Rej: Max linksets to same APC exceeded

If the HIPR2 High Rate Mode feature is turned off, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 500,000. If the HIPR2 High Rate Mode feature is turned on, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 750,000. If the HIPR2 High Rate Mode and 1M System TPS features are turned on, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 1,000,000.

4255 E4255 Cmd Rej: Total provisioned system TPS limit exceeded

The value specified for the `slktps/rsvdslktps` parameter cannot cause the card to exceed the total maximum capacity of the card.

4807 E4807 Cmd Rej: TPS exceeded for card

If the `ipsg=yes` and `adapter=m3ua` parameters are specified, then the `multgc=yes` parameter cannot be specified.

4826 E4826 Cmd Rej: MULTGC is prohibited on IPSP-M3UA linksets

If the `ipsg=yes` and `adapter=m3ua` parameters are specified, then the `tfatcabmlq` parameter cannot be specified.

4875 E4875 Cmd Rej: TFATCABMLQ not allowed for IPSP M3UA linksets

If the `action=delete` parameter is specified to delete the routing context, then the value specified for the `rcontext` parameter must be the value used by the specified linkset in the database.

4827 E4827 Cmd Rej: Correct RCONTEXT value is required to delete

The link must be equipped.

2373 E2373 Cmd Rej: Link is unequipped in the database

The Link table is corrupt or cannot be found.

2103 E2103 Cmd Rej: Failed reading the link table

If the linkset already contains IPSP links, then the `ipsg=no` parameter cannot be specified.

4849 E4849 Cmd Rej: Linkset must not contain any IPSP type links

A function returned an unknown error. An ATH is also issued.

2601 E2601 Cmd Rej: Command aborted due to system error

If the `ipsg=yes` and `adapter=m3ua` parameters are specified, then a secondary adjacent point code cannot be specified for the linkset.

4847 E4847 Cmd Rej: SAPC is prohibited on IPSP-M3UA linksets

If one or more links in a specified linkset are in service, then the `rcontext` parameter cannot be specified.

2125 E2125 Cmd Rej: Links on specified linkset are in-service

Multiple signaling links in a single linkset cannot share the same association.

4829 E4829 Cmd Rej: Multiple links w/in same linkset cannot share an association

If multiple linksets share an association, then the `rcontext` parameter cannot be specified for only one linkset.

4828 E4828 Cmd Rej: Unique RCONTEXT required if associations in multiple lsets

The value specified for the `rcontext` parameter must already exist in the database.

4827 E4827 Cmd Rej: Correct RCONTEXT value is required to delete

If a linkset shares an association with another linkset, then a unique value for the `rcontext` parameter must be specified for each linkset.

4828 E4828 Cmd Rej: Unique RCONTEXT required if associations in multiple lsets

If the `ipsg=yes` parameter is specified, then the `slktps/rsvdslktps` parameter must be specified.

4812 E4812 Cmd Rej: SLKTPS is required for IP SG linksets

If the `multgc=yes` parameter is specified, then all links assigned to the linkset must be of the same type.

4003 E4003 Cmd Rej: MULTGC=YES requires IP SG-M2PA, IPGWI, or IPLIMI links

If any of the links are not in the OOS state, then the `rcontext` parameter cannot be specified.

4810 E4810 Cmd Rej: All links must be OOS-MT-DISABLED to modify RCONTEXT

The ISLSBR feature must be enabled before the `islsrsb` parameter can be specified.

5025 E5025 Cmd Rej: islsrsb is valid only if ISLSBR Feature is enabled

The FLOBR feature must be turned on before the `gttmode` parameter can have a value of `fcd`, `fcg`, `fcgfc`, or `fcdfcg`.

5060 E5060 Cmd Rej: Flexible Linkset Optional Based Routing must be ON

The SAPC table is corrupt or cannot be found.

3282 E3282 Cmd Rej: Failed reading the SAPC table

The `rsls8=yes` parameter (see the `chg-lsopts` command) must be specified for an ANSI linkset before a value greater than 5 can be specified for the `islsrsb` parameter.

5089 E5089 Cmd Rej: ISLSRSB value must be < 6 when RLS8 is no

If an ITU linkset is used, then a value of 1 – 4 must be specified for the `islsrsb` parameter.

5044 E5044 Cmd Rej: For ITU link sets, ISLSRSB must be in the range (1-4)

The value specified for the `slktps/rsvdslktps` parameter must be less than or equal to the value specified for the `maxslktps` parameter.

5075 E5075 Cmd Rej: SLKTPS/RSVDSLKTPS must be less than or equal to MAXSLKTPS

The `sltset=0` parameter can be specified only for a type A linkset (`lst=a`).

5412 E5412 Cmd Rej: Linkset type must be A for SLTSET=0

The value specified for the `slktps/rsvdslktps` and `maxslktps` parameters must be within the allowed range.

4806 E4806 Cmd Rej: TPS exceeded allowed range.

The ITUTFR (command `ent/chg-ls`) cannot be specified for a linkset to be configured for APCN16.

3047 E3047 Cmd Rej: Parameter combination invalid.

The NIS (command `ent/chg-ls`) cannot be specified for a linkset to be configured for APCN16.

3047 E3047 Cmd Rej: Parameter combination invalid.

The PPC specified must not be a private point code.

4722 E4722 Cmd Rej: PPC not supported for Private PC

The MTP Restart Equipped (MTPRSE) parameter is only valid for adjacent ANSI nodes in the SS7 domain.

2835 E2835 Cmd Rej: MTPRSE is only valid in the SS7 domain

The adapter type specified must be either `m3ua` or `m2pa`.

4074 E4074 Cmd Rej: Could not locate adapter type

The GTT destination must exist in the DSTN table.

4753 E4753 Cmd Rej: DSTN table entry was not found

Notes

Any optional parameter that is not specified is not changed.

The links that directly connect the system with a distant node are grouped into one or more linksets. A linkset can contain up to 8 (international standards) or 16 (national standard) signaling links, depending on how the system attributes were defined when the network was created.

Signaling link test acknowledgments (SLTA) are the same type of maintenance message as the SLTMs received on the link.

MTP restart provides an orderly process for bringing signaling links back into service after the system has been isolated and restarted. A greater preference is given to restoring the STP to network service in an orderly fashion than to the speed of recovery. The time required is system dependent as shown:

- up to 64 LIMs—62 seconds (Link Alignment Delay)
- 64 - 127 LIMs—97 seconds
- 128 - 191 LIMs—132 seconds
- more than 191 LIMs—167 seconds

When two linksets are used as a combined linkset, each linkset should have the same `slsci` and `asl8` values and the same `slsobit` and `islsrsb/slsrsb` values.

 **Caution:**

This is not enforced in the system and there is no warning mechanism if the values of these parameters are not the same for each linkset.

The `slsrbs` parameter alone does not provide an even distribution of ITU-ISUP messages across all links within a linkset. The system uses all four bits of the SLS to determine the actual link to route messages. Because the static bit is simply rotated within the SLS, all possible values of the SLS field will still not be realized. The `slsobit` parameter must also be used to provide an even distribution across all links within the linkset. If both parameters are used for a given linkset, the SLS field is processed in the following order:

- The SLS is modified using the Other CIC Bit option.
- The modified SLS is modified again using the Rotated SLS Bit option.
- The modified SLS is used by the existing linkset and link selection algorithms to select a link.
- The ISUP message is sent out of the link containing the original, unmodified SLS field.

To modify a secondary adjacent point code, `sapc` has to be first deleted, then added again.

A 24-bit ITU-N point code can be provisioned as an SAPC only if the APC is not already a 24-bit ITU-N point code.

Only one 24-bit ITU-N point code is allowed to be provisioned as an SAPC.

For a linkset containing either low speed CCS7ITU links if the APC is a 14-bit ITU-N point code, then a 24-bit ITU-N point code cannot be provisioned as an SAPC.

For a linkset containing either low speed CCS7ITU links, if the APC is a 24-bit ITU-N point code, then a 14-bit ITU-N point code cannot be provisioned as a SAPC.

For a linkset containing either low speed CCS7ITU links, if the APC is an ITU-I point code, then either a 24-bit ITU-N point code or a 14-bit ITU-N point code can be provisioned as an SAPC, but not both.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (`s-`) and the private and spare point code subtype prefix (`ps-`). All of the point code types support the private (internal) point code subtype prefix (`p-`).

The ITU National and ITU National China Adjacent Point Code types indicate the format that is used for changeover and changeover acknowledgement messages. China specifies a 16-bit field for data in changeover messages. The FSN occupies the first 12 bits. The trailing 4 bits are spare and are coded as 0. ITU uses a 24-bit field for data in the extended changeover/changeover acknowledgement messages. The FSN is encoded in the first 12 bits. The last 12 bits of the field are spare and are coded as zero.

The `randsls` parameter value applies to SCCP ITU-T messages and Class0 and ISUP ANSI messages when random SLS generation is set to occur on a per linkset basis (the `randsls=perls` parameter is specified in the `chg-stpopts` command).

If the `randsls=perls` parameter is specified, it is recommended that the linksets in a combined linkset be provisioned with the same `randsls` value to avoid undesired SLS distribution.

The `tfatcabmlq=0` parameter specifies that the system broadcasts TFAs or TCAs only when half the links in the given linkset, or in the combined linkset in which it resides, become available.

A gateway linkset can be configured only from a SEAS terminal and not from a system terminal.

If the `gwsa=off` and `gwsn=on` parameters are specified, then all MSUs pass. Error messages are generated if an MSU matches a screening condition.

If the `gwsa=on` and `gwsn=off` parameters are specified, then MSUs are screened but messages are not generated.

If the `gwsa=off` and `gwsn=on` parameters are specified, then gateway screening is defined to be in the screen test mode. The gateway screening action in the stop action set specified by the `actname` parameter of the screen set is performed at the end of the screening process.

If the `asl8=yes` and the `lst=a` (a linkset containing access signaling links) parameters are specified, then the originator of the MSUs is generating 8-bit SLSs. For other linkset types, the `asl8=yes` parameter indicates that the adjacent STP is converting 5-bit SLSs to 8-bit SLSs. The SLS in MSUs received by the system on a linkset that has the `asl8=yes` parameter assigned is not converted. These MSUs are assumed to contain 8-bit SLSs.

If the `gwsa=on`, `gwsn=on`, and `gwsd=off` parameters are specified, then MSUs are screened, and error messages are generated if an MSU is passed when it should have been screened.

The `chgntp3opc` parameter is applied on the outgoing linkset.

The `chgntp3opc` parameter will be nullified if the `scoppts:mtprgnt` option is set to `fullgnt`.

Incoming SLS Bit Rotation

If the ISLSBR feature is turned on, and Incoming SLS Bit Rotation is applied to an MSU, then the outgoing SLS bit rotation is not applied for that MSU. If the ISLSBR feature is turned off, or Incoming SLS Bit Rotation is not applied to an MSU, then the outgoing SLS bit rotation is applied for that MSU.

The valid ISLSRSB values are 1 – 4 for ITU linksets and 1 – 8 for ANSI linksets.

The `randsls` parameter is applied on incoming linksets for ANSI messages and on outgoing linksets for ITU messages.

Output

This example shows the output when the secondary point code is changed:

```
chg-ls:lsn=ls1:spc=100-23-48
```

```
rlghncxa03w 07-07-18 08:16:14 EST EAGLE 37.5.0
CAUTION: Linkset SPC has changed - verify remote node's route.
Link set table is (114 of 1024) 1% full
```

```
CHG-LS: MASP A - COMPLTD
```

This example shows the output when GTT mode is changed to FLOBR CdPA:

```
chg-ls:lsn=ls3:gttmode=fcd
```

```
tekelecstp 09-04-12 13:34:33 EST EAGLE 41.0.0  
Link set table is (5 of 1024) 1% full.
```

```
CHG-LS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-lsopts](#)
- [chg-slt](#)
- [chg-ss7opts](#)
- [dlt-ls](#)
- [ent-ls](#)
- [rtrv-ls](#)

4.1.98 chg-lsopts

Use this command to administer the thresholds for IPSP-M3UA linksets and to set SLS bit rotation for ANSI linksets.

Parameters

lsn (mandatory)

Linkset name. The name of the linkset. Each linkset name must be unique in the system.

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

icnimap (optional)

Incoming NI Map. The NI mapping for incoming MSUs on a linkset. The NI value in the incoming MSU is changed to the value specified by this parameter before processing the message.

Range:

itui2ituis

Map ITU International to ITU International Spare

ituis2itui

Map ITU International Spare to ITU International

itun2ituns

Map ITU National to ITU National Spare

ituns2itun

Map ITU National Spare to ITU National

none

NI mapping is not performed on the specified linkset.

Default:

No change to the current value

System Default:

none

numslkalw (optional)

Number of signaling links allowed. The IS-NR link count threshold required for an IPSPG-M3UA linkset to transition from the Restricted or Prohibited state to the Allowed state.

 **Note:**

When the number of IS-NR links in an IPSPG-M3UA linkset transitions from a value less than `numslkalw` to a value equal to or greater than `numslkalw`, the linkset transitions to the allowed state.

Range:

0 - 16

0—The IS-NR link count threshold value for an IPSPG-M3UA linkset is considered to be half of the number of links configured in the linkset.

Default:

No change to the current value

System Default:

1

numslkproh (optional)

Number of signaling links required to prohibit a linkset. The IS-NR link count threshold required for an IPSPG-M3UA linkset to transition from the Restricted or Allowed state to the Prohibited state.

 **Note:**

When the number of IS-NR links in an IPSPG-M3UA linkset transitions from a value equal to or greater than `numslkproh` to a value less than `numslkproh`, the linkset transitions to the Prohibited state.

Range:

0 - 16

 **Note:**

0 —The IS-NR link count threshold value for an IPSPG-M3UA linkset is considered to be half of the number of links configured in the linkset.

Default:

No change to current value

System Default:

1

numslkrstr (optional)

Number of signaling links required to restrict a linkset. The IS-NR link count threshold required for an IPSPG-M3UA linkset to transition from the Allowed state to the Restricted state.

When the number of IS-NR links in an IPSPG-M3UA linkset transitions from a value equal to or greater than `numslkrstr` to a value less than `numslkrstr` and greater than `numslkproh`, the linkset transitions from the Allowed state to the Restricted state. Transition from the Prohibited state to the Restricted state is not supported.

Range:

0 - 16

0 —The IS-NR link count threshold value for an IPSPG-M3UA linkset is considered to be half of the number of links configured in the linkset.

Default:

No change to current value

System Default:

1

ognimap (optional)

Outgoing NI Map. The NI mapping for outgoing MSUs on a linkset. The NI value in the processed MSU is changed to the value specified by the `ognimap` parameter for that linkset before routing the message to the intended destination.

Range:***itui2ituis***

Map ITU International to ITU International Spare

ituis2itui

Map ITU International Spare to ITU International

itun2ituns

Map ITU National to ITU National Spare

ituns2itun

Map ITU National Spare to ITU National.

none

NI mapping is not performed on the specified linkset.

Default:
No change to the current value

System Default:
none

pct (optional)

Point Code and CIC Translation. This option specifies whether to apply PCT to the specified linkset.

Range:

off
do not apply PCT to the linkset

on
apply PCT to the linkset

Default:
off

rsls8 (optional)

Rotate SLS by 5 or 8 bits. This parameter specifies whether the signaling link selector (SLS) of the incoming ANSI linkset is rotated by 5 or 8 bits.

Range:

yes
8 bit SLS of the incoming linkset is considered for bit rotation

no
5 bit SLS of the incoming linkset is considered for bit rotation

Default:
No change to the current value

System Default:
no

Example

The following example changes the threshold value of the `numslkproh` parameter to 3 for an IPSPG-M3UA linkset.

```
chg-lsopts:lsn=lsm3ual:numslkproh=3
```

The following example sets the incoming and outgoing NI Mapping for a linkset.

```
chg-lsopts:lsn=lsnimap1:icnimap=itun2ituns:ognimap=ituns2itun
```

The following example sets 8 bit incoming bit rotation for an ANSI link set

```
chg-lsopts:lsn=ls1:rsls8=yes
```

```
chg-lsopts:lsn=ls111:pct=on
```

Dependencies

The value specified for the `numslkproh` parameter cannot be greater than the value specified for the `numslkrstr` parameter.

4870 E4870 Cmd Rej: NUMSLKPROH must be less than or equal to NUMSLKRSTR

The value specified for the `numslkrstr` parameter cannot be greater than the value specified for the `numslkalw` parameter.

4871 E4871 Cmd Rej: NUMSLKRSTR must be less than or equal to NUMSLKALW

The value specified for the `lsn` parameter must indicate an IPSPG-M3UA linkset before the `numslkalw`, `numslkproh`, and `numslkrstr` parameters can be specified.

4873 E4873 Cmd Rej: NUMSLK thresholds allowed only for IPSPG M3UA linksets

The value specified for the `numslkalw`, `numslkproh`, or `numslkrstr` parameter cannot be greater than the number of links configured in the IPSPG-M3UA linkset.

4874 E4874 Cmd Rej: NUMSLK value exceeds number of links in the linkset

The ITU National and International Spare Point Code Support feature must be enabled before the `icnimap` and `ognimap` parameters can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The `icnimap` and `ognimap` parameters must be specified together in the command.

4961 E4961 Cmd Rej: ICNIMAP and OGNIMAP parameters must be specified together

The NI mapping for incoming messages in a linkset must be compatible with the NI mapping for the outgoing messages.

4962 E4962 Cmd Rej: ICNIMAP and OGNIMAP values are not compatible

Values for the `icnimap` and `ognimap` parameters other than `none` can be specified only for ITU-I and ITU-N APCs of the linkset.

4948 E4948 Cmd Rej: Adjacent PC of the Linkset must be ITUN or ITUI

An ANSI linkset must be specified by the `lsn` parameter before the `rsls8=yes` parameter can be specified.

5053 E5053 Cmd Rej: RSL8 is only valid for ANSI link sets

The ISLSBR feature must be enabled before the `rsls8` parameter can be specified.

5090 E5090 Cmd Rej: RSL8 is valid only if ISLSBR Feature is enabled

A PCT quantity feature must be enabled before the `pct` parameter can be specified.

5391 E5391 Cmd Rej: PCT feature must be enabled

Notes

NI Mapping Parameter Compliance Rules

The values specified for the `icnimap` and `ognimap` parameters for a linkset must be compatible. [Table 4-12](#) shows the relationship between the parameters for a linkset.

Table 4-12 NI Mapping Rules

ICNIMAP	OGNIMAP
ITUI2ITUIS	ITUIS2ITUI
ITUIS2ITUI	ITUI2ITUIS

Table 4-12 (Cont.) NI Mapping Rules

ICNIMAP	OGNIMAP
ITUN2ITUNS	ITUNS2ITUN
ITUNS2ITUN	ITUN2ITUNS
NONE	NONE

If the `rsls8=yes` parameter is specified, then 8 bits of the Incoming ANSI SLS are used for the ISLSBR feature. If the `rsls8=no` parameter is specified, then 5 bits are used.

[Table 4-13](#) summarizes the cases in which rotation is done on the Incoming ANSI SLS bits:

Table 4-13 Incoming SLS Bit Rotation for ANSI Linksets

Number of Incoming SLS Bits	RSLs8	Valid range of values of ISLSRSB	SLSCNV/SLSCI	If Incoming SLS bits are rotated or not
5	No	1-5	No	Yes
5	No	1-5	Yes	Yes (Lower 5 bits)
5	Yes	1-8	No	No
5	Yes	1-8	Yes	Yes
8	No	1-5	Yes/No	Yes (Lower 5 bits)
8	Yes	1-8	Yes/No	Yes

Output

```
chg-lsopts:lsn=ls1:rsls8=yes
```

```
tekelecstp 09-03-03 10:52:55 EST EAGLE 41.0.0
Command entered at terminal #4.
Link set table is (7 of 1024) 1% full.
CHG-LSOPTS: MASP A - COMPLTD
```

Related Topics

- [chg-ls](#)
- [rtrv-ls](#)

4.1.99 chg-m2pa-tset

Use this command to change M2PA timers in an M2PA timer set. The `srcset` and `tset` parameters can be used to copy from one timer set to another.

 **Note:**

The M2PA RFC feature introduces 20 new timer sets. M2PA timer sets created prior to this feature become M2PA Draft 6 timer sets, which are used by the M2PA Draft 6 associations. M2PA RFC associations use the RFC timer sets.

Parameters **Note:**

All values specified for the timer parameters ($t(x)$) are in milliseconds.

tset (mandatory)

Timer set. The name of the M2PA timer set.

Range:

1 - 20

srctset (optional)

The timer set to be copied into the timer set specified by the `tset` parameter. If this parameter is specified, no other timer values can be specified.

Range:

1 - 20

t1 (optional)

T1 timer. Alignment timer. The amount of time M2PA waits to receive a Link Status Alignment message from the peer.

Range:

1000 - 350000

Default:

D6- 10000

RFC- 35000

t2 (optional)

T2 timer. M2PA RFC timer.

 **Note:**

This timer is not used in M2PA Draft 6 timer sets.

Range:

5000 - 150000

Default:

20000

t3 (optional)

T3 timer. Ready timer. The amount of time after proving that M2PA waits to receive a Link Status Ready message from the peer.

Range:

1000 - 60000

Default:

10000 D6

2000 RFC

t4e (optional)

T4E timer. Emergency proving timer. The amount of time M2PA generates Link Status Proving messages during emergency proving.

Range:

400 - 5000

Default:

500

t4n (optional)

T4N timer. Normal proving timer. The amount of time M2PA generates Link Status Proving messages during normal proving.

Range:

1000 - 70000

Default:

D6- 10000

RFC- 30000

t5 (optional)

T5 timer. Busy rate timer. The amount of time between sending Link Status Busy messages while the link is in service.

Range:

80 - 10000

Default:

1000 D6

100 RFC

t6 (optional)

T6 timer. Remote congestion timer. The amount of time that a congested link will remain in service.

Range:

1000 - 6000

Default:

3000

t7 (optional)

T7 timer. Excessive acknowledgement delay timer. The maximum amount of time that can pass between transmission of a user data message and receipt of an acknowledgement for that message from the peer. If this timer expires, the link is taken out of service.

Range:

200 - 2000

Default:

1200

t16 (optional)

T16 timer. Proving rate timer. The amount of time between sending Link Status Proving messages while T2N or T2E is running.

**Note:**

The T16 value is given in microseconds.

Range:

100 - 500000

Default:

200000

t17 (optional)

T17 timer. Ready rate timer. The amount of time between sending Link Status Ready messages while T3 is running.

Range:

100 - 500

Default:

250

t18 (optional)

T18 timer. Processor outage rate timer. The amount of time between sending Link Status Processor Outage messages while the link is in service.

Range:

100 - 10000

Default:

1000

ver (optional)

Version. The M2PA version used by the association.

Range:

d6

rfc**Example**

```
chg-m2pa-tset:tset=1:t1=20000
chg-m2pa-tset:tset=1:t1=20000:ver=d6
chg-m2pa-tset:srctset=1:tset=2:ver=rfc
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `srctset` parameter and the `tset` parameter cannot specify the same timer set name.

3470 E3470 Cmd Rej: SRCTSET and TSET cannot be equal

The specified timer must be supported for the Draft 6 version of M2PA.

4556 E4556 Cmd Rej: Timer not supported for M2PA Draft 6

Either a timer value or the `srctset` parameter must be specified.

4557 E4557 Cmd Rej: Timer value or SRCTSET required

Timer value parameters and the SRCTSET parameter cannot be specified together.

3472 E3472 Cmd Rej: Timer value and SRCTSET cannot be specified together

Notes

None

Output

```
chg-m2pa-tset:tset=1:t1=20000:ver=d6
```

```
rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
CHG-M2PA-TSET: MASP A - COMPLTD
;
```

Related Topics

- [rtrv-m2pa-tset](#)

4.1.100 chg-map

Use this command to add or modify an entry in the Mated Application Part (MAP) table. A MAP table entry consists of a mate PC/SSN, its attributes, and an Alternate Routing Indicator Mate MRN Set and MRN point code.

 **Note:**

A mate point code defines an adjacent signaling point, which is considered the mated signal transfer point (STP) to the system. See the *Notes* section for additional information on multiplicity modes.

 **Note:**

The GTT Load Sharing with Alternate Routing Indicator (GTT LS ARI) feature must be enabled before an Alternate RI Mate for a MAP Set can be provisioned.

Parameters **Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

 **Note:**

The `mrnset` and `mrnpc` parameters indicate whether an Alternate RI Mate search is performed in the MRN table if all of the point code/subsystem number combinations provisioned in a given MAP Set are unavailable or congested.

pc (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001–005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24 /pcn16 (mandatory)

Primary remote point code.

pci (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

pcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

pcn16 (mandatory)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

ssn (mandatory)

Subsystem number.

Range:

2 - 255

eswt (optional)

Entity set weight. The weight assigned to each PC/SSN in a weighted entity set.

**Note:**

This parameter cannot be specified when adding PC/SSNs to a weighted entity set or when modifying RC or weight values for an individual PC/SSN.

Range:

1 - 99, none

none —Changes a weighted entity set to a non-weighted entity set.

force (optional)

This parameter must be specified to modify the *rc* parameter and the *srn*, *mrc*, or *wt* parameter in the same command.

Modification of the *srn*, *mrc*, or *wt* parameter depends on the parameter's current multiplicity state, which depends on the RC value. Changing the *rc* parameter value can change the multiplicity state, which can cause the *srn*, *mrc*, or *wt* parameter value to become invalid.

Range:

yes

grp (optional)

The concerned point code broadcast list (CSPC) group name. The CSPC is a group of point codes that should be notified of the subsystem status. A different CSPC group can be assigned to each mated PC/SSN. For ANSI, the EAGLE broadcasts SSP or SSA to the mate subsystem only if the mate's point code is provisioned as part of the CSPC group to receive an SSP or SSA.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

none —Disassociates a concerned point code broadcast list group from the given mate application

Default:

Current value.

grpwt (optional)

Group weight. The weight assigned to each PC/SSN in a weighted RC group.

 **Note:**

This parameter cannot be specified when adding PC/SSNs to a weighted entity set or when modifying RC or weight values for an individual PC/SSN.

Range:
1 - 99

mapset (optional)

MAP set ID.

Range:
1 - 36000, *dflt*
dflt —Default MAP set

Default:
dflt -if the Flexible GTT Load Sharing feature is not enabled
No change to current value—if the Flexible GTT Load Sharing feature is enabled

materc (optional)

Mate relative cost. The RC assigned to the mate PC/SSN that is being added to the entity set. The system determines the multiplicity mode based on the RC values (*rc* and *materc* parameters) of the subsystem.

Range:
0 - 99

Default:
Current value.

mpc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:
mpca

Range:
000-255
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.
When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.
When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.
The point code *000-000-000* is not a valid point code.

Default:
000

mpc/mpca/mpci/mpcn/mpcn24/mpcn16 (optional)

Mate remote point code.

mpci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

Default:

000

mpcn (optional)

ITU national point code in the format of a 5-digit ITU number (*nnnnn*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Default:

00000

mpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Default:

000

mpcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

Default:

000

mrnc (optional)

Message routing under congestion. This parameter specifies whether Class 0 messages to the specified PC/SSN are routed to the next preferred mode/subsystem when that PC/SSN is congested.

Range:

yes

no

Default:

No change to the current value

mrnpc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

mrnpca

Default:

000

mrnpc/mrnpca/mrnpai/mrnpai/mrnpai/mrnpai24/mrnpai16 (optional)

Alternate RI Mate point code.

mrnpai (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Default:

0-000-0

mrnpai (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Default:

00000

mrnpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Default:

000

mrnpcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un--000--127

sna--000--15

mna--000--31

Default:

000

mrnset (optional)

Alternate RI Mate MRN Set ID. The MRN Set where the Alternate RI Mate search is performed.

Range:

1 - 3000, *dflt*

dflt —default MRN Set

 **Note:**

If the `mrnpc` parameter is specified, and the `mrnset` parameter is not specified, then the value for the `mrnset` parameter is automatically set to *dflt*.

Default:

No change to the current value

mssn (optional)

Mated subsystem number. The SSN that acts as a backup if the SSN fails.

Range:

2 - 255

Default:

Current value.

mwt (optional)

Mate point code weight. The weight assigned to the PC/SSN that is being added to a weighted entity set.

Range:

1 - 99

rc (optional)

Relative cost. The RC assigned to a specified PC/SSN. The EAGLE determines the multiplicity mode based on the relative costs (the `rc` and `materc` parameters) of the subsystem.

Range:

0 - 99

Default:

Current value.

srm (optional)

Subsystem routing messages. This parameter specifies whether subsystem routing messages (SBR, SNR) are transmitted between the mated applications.

This value can be provisioned in any of the multiplicity modes, but its value only affects traffic if the multiplicity mode is *DOM* or *COM*. See the *Notes* section for more information on multiplicity modes.

Range:

yes

no

Default:

Current value.

sso (optional)

Subsystem status option. This parameter specifies whether the PC/SSN initiates a subsystem test when a RESUME is received for the PC.

Range:

on

prohibited

off

allowed

Default:

Primary—no change

Mate, if entered— *off*

thr (optional)

Threshold. The in-service threshold assigned to each PC/SSN in a weighted entity set or RC group.

This parameter cannot be specified when adding PC/SSNs to a weighted entity set or RC group or when modifying RC or weight values for an individual PC/SSN.

If this parameter is not specified, a value of 1% is assigned to each weighted PC/SSN.

Range:

1 - 100

wt (optional)

Weight. The new weight assigned to the primary PC/SSN.

Range:

1 - 99

Example

This example enters 1 into the MAP table and adds it to the same group as 1. Because 1 already exists in the MAP table, the `rc` parameter is not used.

```
chg-map:pc=1-1-0:ssn=10:mpc=1-1-3:mssn=10:materc=40
```

This example enters 1 into the MAP table, and adds it to the same group as 1. Because 1 has a lower relative cost than 1, it is placed into the group in relative cost order.

```
chg-map:pc=1-1-0:ssn=10:mpc=1-1-2:mssn=10:materc=30
```

This example changes the relative cost for the specified PC/SSN pair:

```
chg-map:pc=1-1-0:ssn=10:rc=20
```

This example changes the concerned PC broadcast list group name for the specified PC/SSN pair:

```
chg-map:pc=1-1-0:ssn=10:grp=abc
```

This example changes the ITU-I spare point code entry s-1-12-2 and adds the spare mate point code entry s-2-23-3 in the map table:

```
chg-  
map:pci=s-1-12-2:ssn=10:rc=10:mpci=s-2-23-3:mssn=20:materc=10
```

This example turns ON the SSO option for PC 1-1-0 and SSN 10.

```
chg-map:pc=1-1-0:ssn=10:sso=on
```

This example turns OFF the SSO option for PC 1-1-0 and SSN 10.

```
chg-map:pc=1-1-0:ssn=10:sso=off
```

This example does not change the current value of the SSO option for the primary or the mate.

```
chg-map:pc=1-1-0:ssn=10:rc=10
```

This example turns ON the SSO option for primary and mate.

```
chg-map:pc=1-1-0:ssn=10:mpc=3-3-3:mssn=2:sso=on
```

This example turns OFF the `SSO` option for primary and mate.

```
chg-map:pc=1-1-0:ssn=10:mpc=4-4-4:mssn=2:sso=off
```

This example does not change the current value for the SSO option for the primary. The SSO option is turned OFF for the mate, because the mate is specified but the `SSO` parameter is not specified (the default is OFF for the mate when the mate is specified).

```
chg-map:pc=1-1-0:ssn=10:mpc=5-5-5:mssn=2
```

This example changes the ITU-I spare s-1-12-2 entry and adds the spare mate point code s-2-23-3 entry in the map table.

```
chg-map:pci=s-1-12-2:ssn=10:rc=10:mpci=s-2-23-3:mssn=20:materc=10
```

This example adds a new PC/SSN 1 in the existing MAP set 362.

```
chg-map:pc=1-1-1:ssn=10:mpc=1-1-3:mssn=10:materc=40:mapset=362
```

This example adds a new PC/SSN 1-1-3/15 to the same load-sharing group in the default MAP set to which 1-1-1/15 belongs.

```
chg-map:pc=1-1-1:ssn=15:mpc=1-1-3:mssn=15:materc=40:mapset=dlft
```

This example changes the RC of 1-1-1/10 in existing MAP set 362 to 20.

```
chg-map:pc=1-1-1:ssn=10:rc=20:mapset=362
```

This example changes a non-weighted shared or non-weighted combined entity set to a weighted shared or weighted combined entity set.

```
chg-map:pc=1-1-1:ssn=10:eswt=30
```

This example changes a non-weighted shared or non-weighted combined entity set to a weighted shared or weighted combined entity set. The example also sets a threshold value and changes the weights of all of the PC/SSNs in the entity set.

```
chg-map:pc=1-1-1:ssn=10:eswt=30:thr=50
```

This example changes a weighted shared or weighted combined entity set to a non-weighted shared or non-weighted combined entity set.

```
chg-map:pc=1-1-1:ssn=10:eswt=none
```

This example assigns a weight value to each PC/SSN in an RC group within a weighted entity set.

```
chg-map:pc=1-1-1:ssn=10:grpwt=20
```

This example assigns a threshold value to each PC/SSN in an RC group within a weighted entity set.

```
chg-map:pc=1-1-1:ssn=10:thr=70
```

This example assigns weight and threshold values to each PC/SSN in an RC group within a weighted entity set.

```
chg-map:pc=1-1-1:ssn=10:grpwt=20:thr=70
```

This example changes the weight of an existing PC/SSN in a weighted entity set.

```
chg-map:pc=1-1-1:ssn=10:wt=20
```

This example changes the weight of PC/SSN 1 and adds PC/SSN 1-2-1/10 to an existing weighted entity set.

```
chg-map:pc=1-1-1:ssn=10:wt=50:mpc=1-2-1:mssn=10:materc=20:mwt=30
```

This example adds PC/SSN 1-3-2/10 to an existing non-weighted entity set.

```
chg-map:pc=1-1-1:ssn=10:mpc=1-3-2:mssn=10:materc=20:mwt=10
```

This example changes the RC value and turns on MRC of an existing PC/SSN in a weighted entity set.

```
chg-map:pc=1-1-1:ssn=10:rc=30:mrc=yes:force=yes
```

This example changes the RC value and turns on SRM of an existing PC/SSN in a weighted entity set.

```
chg-map:pc=1-1-1:ssn=10:rc=30:srm=yes:force=yes
```

This example changes the RC value and the weight of an existing PC/SSN in a weighted entity set.

```
chg-map:pc=1-1-1:ssn=10:rc=30:wt=20:force=yes
```

This example changes the Alternate RI Mate (MRNSET and MRNPC) in an existing MAP set.

```
chg-map:mapset=362:pc=1-1-1:ssn=10:mrnset=1:mrnpc=1-1-2
```

Example for 16 bit PC:

```
chg-
map:pcn16=1-1-1:ssn=10:rc=20:wt=30:mpcn16=1-2-3:mssn=10:materc=
20:mwt=20:thr=40
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The specified remote PC must exist in the MAP table.

2452 E2452 Cmd Rej: Remote point code does not exist in MAP table

The Spare Point Code Support feature must be enabled before an ITU-I or ITU-N spare point code can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The specified SSN must exist for the specified remote PC.

2456 E2456 Cmd Rej: SSN does not exist for given remote point code

If a subsystem is configured for a subsystem number (SSN) value in the SS-APPL table, then the specified MAP table entry for that subsystem must be a valid point code type for that subsystem. The following point code types are not valid for the indicated subsystems:

- For the INP subsystem, the True Point code cannot be an ITU-I point code.
- For the AIQ, ATINPQ, VFLEX, and EIR subsystems, the True Point code cannot be an ITU-N24 point code.

4189 E4189 Cmd Rej: Invalid PC type for the subsystem associated with SSN value.

The mate PC/SSN cannot be the same as the primary PC/SSN.

2425 E2425 Cmd Rej: Mate PC/SSN cannot be same as PC/SSN

If the PC value is an ITU type (*pci/pcn/pcn24/pcn16*), the *srn=yes* parameter cannot be specified.

2424 E2424 Cmd Rej: SRM=YES cannot be entered with ITU point code types

The *apca* and *pcn24/pcn16* parameters cannot be specified for the same MAP set. The *pci* and *pcn* parameters cannot be specified for the same MAP set if the MAP set contains a true point code.

2429 E2429 Cmd Rej: MPC network type does not match PC network type

The ANSI/ITU SCCP Conversion feature must be enabled before the network type of the CPC broadcast group can be different from the network type of the point code.

2449 E2449 Cmd Rej: CSPC group network type does not match PC network type

The mated PC/SSN must not already exist in the MAP table.

2431 E2431 Cmd Rej: MPC/MSSN pair already exists

The DPCs of the primary subsystem and the mate subsystem must be full PCs.

2864 E2864 Cmd Rej: Address (PCx) of primary subsystem must be a full PC

The Route table must be accessible.

2648 E2648 Cmd Rej: Failed reading the route table

The format of the `pcn` or `mpcn` parameter must match the format assigned with the `npcfmti` parameter of the `chg-stpopts` command.

2997 E2997 Cmd Rej: PC must match NPCFMTI set in CHG-STPOPTS

If the `mpc` parameter is specified, the `mssn` and `materc` parameters must be specified.

2992 E2992 Cmd Rej: MSSN and MaterRC must be specified since MPC is specified

A maximum of 128 mated applications is allowed per MAP set.

2988 E2988 Cmd Rej: Maximum number of Mated Applications (MAP) exceeded

The `ssn` parameter cannot be specified with a PC that is the system true PC.

3466 E3466 Cmd Rej: SSO parameter is not compatible with True PC

A true PC can have only one mate.

2995 E2995 Cmd Rej: True Point Code can only have one mate

A true PC cannot be routed to itself.

2994 E2994 Cmd Rej: True Point Code may not be routed to self

The RPC3 table must be accessible.

4525 E4525 Cmd Rej: Failed Reading RPC3 table

The Site Identification table must be accessible.

2874 E2874 Cmd Rej: Failed reading site identification table

If the `mssn` or `materc` parameter is specified, the `mpc` parameter must be specified.

2432 E2432 Cmd Rej: MSSN or MATERC entered, MPC must also be given

The PC must already exist in the CPC group.

2414 E2414 Cmd Rej: PC does not exist in CSPC group

The specified CSPC broadcast list group name must already exist.

2411 E2411 Cmd Rej: CSPC group does not exist

If the `mpc` parameter is specified, then the `mssn` parameter must be specified.

2428 E2428 Cmd Rej: MPC entered, MSSN must also be given

The number of MPC Subsystem entries must not exceed the table capacity.

2430 E2430 Cmd Rej: Subsystem table for MPC is full

A maximum of 1024 unique remote point codes are allowed.

2454 E2454 Cmd Rej: Remote point code table is full

If a remote MPC is specified, then the remote MPC must exist in the Routing table.

2427 E2427 Cmd Rej: MPC does not exist in routing Table

If the Flexible GTT Load Sharing feature is not enabled, then the `mapset` parameter must not be specified. If the Flexible GTT Load Sharing feature is enabled, then the `mapset` parameter must be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The specified MAP set must exist in the database.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

The specified PC/SSN/MAP set must already be provisioned in the MAP table.

4528 E4528 Cmd Rej: PC/SSN doesn't exist in MAPSET

The EAGLE true PC can be provisioned only in the default MAP set.

4608 E4608 Cmd Rej: True Point Code can exist only in Default MAPSET

The MAP table must be accessible.

4524 E4524 Cmd Rej: Failed Reading MAP table

The Weighted GTT Loadsharing feature must be turned on before the `wt`, `mwt`, `eswt`, `grpwt`, or `thr` parameters can be specified.

3370 E3370 Cmd Rej: Weighted GTT Load-Sharing feature must be ON.

If the `eswt`, `grpwt`, or `thr` parameter is specified, the `mpc` parameter cannot be specified.

3388 E3388 Cmd Rej: ESWT, GRPWT and THR can not be specified with MPC

If the `eswt`, `grpwt`, and `thr` parameters are specified, the `rc`, `wt`, `mrc`, `srn`, `sso`, and `grp` parameters cannot be specified.

3389 E3389 Cmd Rej: Only PC/SSN can be specified with ESWT, GRPWT and THR params

The `eswt` and `grpwt` parameters cannot be specified together in the command.

3375 E3375 Cmd Rej: ESWT and GRPWT can't be specified together.

If the `eswt=none` parameter is specified, the `thr` parameter cannot be specified.

3376 E3376 Cmd Rej: THR can't be specified with ESWT=none

If the `mwt` parameter is specified, the `mpc` parameter must be specified.

3393 E3393 Cmd Rej: MPC must be specified since MWT is specified

The `mpc` parameter value must be a full point code.

2865 E2865 Cmd Rej: Address (MPCx) of mate subsystem must be a full PC

If the `mpc` parameter is specified for a weighted entity set, the `mwt` parameter must be specified.

3381 E3381 Cmd Rej: Must specify wight for new point codes for weighted groups

If the `mpc` parameter is specified for a non-weighted entity set, the `mwt` parameter cannot be specified.

3382 E3382 Cmd Rej: Can't specify weight for non-weighted groups.

The `eswt=none` parameter cannot be specified for a non-weighted entity set.

3383 E3383 Cmd Rej: Can't specify ESWT=none for non-weighted groups.

The `grpwt` and `thr` parameters cannot be specified for a non-weighted entity set.

3384 E3384 Cmd Rej: GRPWT/THR mustn't be specified for non-weighted groups.

If the `chg-sid:pctype=ansi` command is entered, a value of `ni=000` cannot be specified.

If the `chg-sid:pctype=ansi` command is entered, and a value of `ni=001 – 005` is specified, a value of `nc=000` cannot be specified.

2169 E2169 Cmd Rej: Point code out of range

The mate point code in the command cannot exceed the maximum number of entries in the MAP table.

4526 E4526 Cmd Rej: MAP table is full

The MAP table contains the maximum number of possible entries for the specified True Point Code. Maximum entries for the ANSI, ITU-I, and ITU-N point codes are:

- ANSI—2 (ANS41 AIQ and LNP), 4 (ANSI41 AIQ, ATINPQ, INP, and V-FLEX)
- ITU-I—4 (ANSI41 AIQ, ATINPQ, EIR, and V-FLEX)
- ITU-N—5 (ANSI41 AIQ, ATINPQ, EIR, INP, and V-FLEX)



Note:

LNP is mutually exclusive with ATINPQ and V-FLEX, unless the Dual ExAP Config feature is enabled.

3290 E3290 Cmd Rej: True PC already exists in MAP table

The true point code in the entity set must be the primary PC/SSN for that entity set. The `rc` parameter value for the specified point code cannot be changed, and a new point code cannot be added that causes the true point code to no longer be the primary PC/SSN.

2993 E2993 Cmd Rej: True Point Code must remain primary entity

If the `pc` parameter value is a true point code, the subsystem must have a lower RC than all other mated subsystems in the RC group.

2990 E2990 Cmd Rej: Relative Cost (RC) of true PC must be less than RC of mate

If the `mpc` parameter value is a true point code, the subsystem must have a lower RC than all other mated subsystems in the RC group.

2991 E2991 Cmd Rej: Relative Cost (RC) of true MPC must be less than RC of mate

The `eswt`, `grpwt`, and `thr` parameters cannot be specified for solitary or dominant entity sets.

3392 E3392 Cmd Rej: ESWT, GRPWT and THR can't be specified for SOL or DOM groups

The AINPQ, EIR, INP, or V-Flex feature must be turned on or the ANSI41 AIQ or ATINP feature must be enabled before the value specified for the `mpcn` parameter can be a true point code.

4183 E4183 Cmd Rej: INP/AINPQ/EIR/VFLEX must be ON or ATINP/AIQ must be enabled

The `force=yes` parameter must be specified before the `rc` parameter can be specified in the same command with the `srn`, `mrc`, or `wt` parameter.

3345 E3345 Cmd Rej: SRM, MRC or WT specified with RC (use FORCE=YES)

The `force` parameter can be used only to specify the `rc` parameter and the `srn`, `mrc`, or `wt` parameter in the same command.

3347 E3347 Cmd Rej: FORCE only with RC and SRM, MRC or WT specified

If the `pcn` or `mpcn` parameter is specified, then the format of the parameter must match the format dictated by the `chg-stpopts:npcfmti` command.

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

3124 E3124 Cmd Rej: Failed Reading LNP SS Appl table

The values specified for the `pc` and `mpc` parameters cannot be associated with proxy point codes.

4707 E4707 Cmd Rej: PRX using DPC not allowed in GTT, MAP, MRN tables

The EIR or V-Flex feature must be turned on or the ANSI41 AIQ or ATINP feature must be enabled before the value specified for the `mpci` parameter can be a true point code.

4717 E4717 Cmd Rej: EIR/VFLEX must be ON or ATINP/AIQ must be enabled

The LNP, V-Flex, EIR, or INP feature must be turned on or the ANSI41 AIQ or ATINP feature must be enabled before the value specified for the `mpca` parameter can be a true point code.

4716 E4716 Cmd Rej: LNP/VFLEX/EIR/INP must be ON or ATINP/AIQ must be enabled.

The GTT LS ARI feature must be enabled before the `mrnset` and `mrnpc` parameters can be specified.

5041 E5041 Cmd Rej: GTT LS ARI Feature must be enabled

The value specified for the `mrnpc` parameter must be a full point code.

5040 E5040 Cmd Rej: Alternate RI Mate PC must be a full PC

The value specified for the `mrnset` parameter must already exist in the MRN table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

The MRN table is corrupt or cannot be found.

2999 E2999 Cmd Rej: Failed reading the MRN table

The point codes and alternate RI Mate point codes must have compatible network types as shown:

- ITUI, ITU-N, ITU-I spare, ITU-N-spare—ITUI, ITU-N, ITU-I spare, ITU-N-spare
- ANSI—ANSI
- ITUN-24—ITUN-24
- ITUN-16---ITUN-16

5042 E5042 Cmd Rej: PC and Alternate RI Mate PC network types don't match

The value specified for the `mrnpc` parameter must already exist in the specified MRN Set.

4483 E4483 Cmd Rej: PC does not exist in specified MRNSET

If the `mrnset` parameter is specified, then the `mrnpc/mrnpca/mrnpai/mrnpai/mrnpai/mrnpai/mrnpai/mrnpai` parameter must be specified.

5084 E5084 Cmd Rej: To provision Alternate RI Mate, specify MRNPC

If the `eswt`, `grpwt`, or `thr` parameter is specified, then the `mrnpc` parameter cannot be specified.

5087 E5087 Cmd Rej: ESWT, GRPWT and THR can not be specified with ARI Mate PC

The `mrnset` parameter cannot be specified if the MAP Set specified by the `mapset` parameter contains a True Point Code.

5088 E5088 Cmd Rej: ARI Mate can't be provisioned for a MAPSET having TPC

The `chg-map` command will reject provisioning of local subsystem for ITUN16 SID, so that ITUN16 MSUs will not be forwarded to Local Subsystems.

2809 E2809 Cmd Rej: ITUN16 SID is not allowed for MAP commands in J7 Support.

Notes

When the ANSI/ITU SCCP Conversion feature is enabled, the Concerned Point Code (CSPC) Group's network type can be of a different network than the mated application's network type. For example, the mated application's network type could be ANSI and the CSPC Group could be ITU or mixed with ANSI, ITU, and ITUN concerned point codes.

Multiplicity Modes

For the `-map` commands, an entity set consists of a group of PC/SSNs that are used for traffic distribution, and an RC group consists of PC/SSNs within an entity set that have the same RC. In *loadsharing* mode, an entity set contains 1 RC group. In *combined loadsharing/dominant* mode, an entity set can contain multiple loadsharing groups.

Note:

For *dominant* and *combined loadsharing/dominant* modes, the PC/SSN in the MAP table where traffic distribution initializes is determined by the result of GTT translation and is referred to as the preferred PC/SSN. The preferred PC/SSN may not be the lowest cost entry.

The EAGLE supports the following multiplicity modes for nodes/subsystems:

- When a PC/SSN pair is not replicated, the pair is in *solitary* (SOL) mode. The subsystem acts as the only application, with no backup. If this subsystem fails, messages routed to it are discarded and SCCP management returns “Subsystem Unavailable” messages to the originator.
- A group of replicated PC/SSN pairs are in *dominant* (DOM) mode if each PC/SSN pair in the group has a unique RC. The preferred PC/SSN acts as the primary subsystem while the higher cost systems act as backups.
- A group of replicated PC/SSN pairs are in *load sharing* (SHR) mode if each PC/SSN pair in the group has the same RC. All messages are evenly distributed at the SCCP level to all nodes/subsystems in the group. If failure occurs, the non-affected subsystem assumes the load of its failed mate.
- The *combined load sharing/dominant* (COM) mode supports a combination of load sharing and dominant mode. A group of PC/SSN pairs are in COM mode when at least two of the PC/SSN pairs have the same RC and another node subsystem in the group has a different RC.

The `SSO` parameter changes the initialization of the subsystem status (“prohibited” or “allowed”) for PC/SSN MAP entries. The system previously marked the subsystem status “allowed” (OFF) for each PC/SSN entry. The `SSO` option marks the subsystem status “prohibited” for each entry that has `SSO=on`. This causes the EAGLE to generate an SST to the remote PC when an MTP-RESUME is received. Upon reception of an SSA, the subsystem status is marked “allowed”.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

When the Flexible GTT Load Sharing feature is turned on, MAP Load-Sharing Sets are supported. Each MAP set is identified by a new `mapset` parameter.

When the Weighted GTT Loadsharing feature is turned on, weighted entity sets and RC groups are supported, and threshold values can be assigned to each PC/SSN in a weighted entity set.

Output

```
chg-map:pc=1-1-0:ssn=10:mpc=1-1-3:mssn=10:materc=40:mapset=362
```

```
tekelecstp 11-03-22 12:29:22 EST EAGLE 44.0.0
chg-map:pc=1-1-0:ssn=10:mpc=1-1-3:mssn=10:materc=40:mapset=362
Command entered at terminal #4.
CHG-MAP: MASP A - MESSAGE: EXTENDED PROCESSING REQUIRED
CHG-MAP: MASP A - COMPLTD
;
```

```
chg-map:pc=1-1-1:ssn=100:mrc=no:srm=no
```

```
tekelecstp 11-03-22 12:29:22 EST EAGLE 44.0.0
chg-map:pc=1-1-1:ssn=100:mrc=no:srm=no
Command entered at terminal #4.
CHG-MAP: MASP A - MESSAGE: EXTENDED PROCESSING REQUIRED
CAUTION: THE VALUE OF SRM IS EFFECTIVE WHEN MULT IS COM OR DOM AND
```

```

THE VALUE OF MRC IS EFFECTIVE WHEN MULT IS DOM.
CHG-MAP: MASP A - COMPLTD
;

```

Related Topics

- [dlt-map](#)
- [ent-map](#)
- [rtrv-map](#)

4.1.101 chg-mate-stp

Use this command to enter mate or self PC (point code) into the database.

Note:

This command is used to populate the mate STP table, and is used to route responses to queries generated by the EAGLE for SFAPP UC #3/4 back to the originating EAGLE if a member of a set of EAGLES is forming a gateway. For messages to be routed properly, the table in each of the members of the set must have the same entries.

Parameters

pc (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255 The point code 000-000-000 is not a valid point code.

pc/pca/pci/pcn/pcn24/pcn16 (mandatory)

Point code.

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

pci (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-s

zone-0-7

area-000-255

id-0-7

The point code *000-000-000* is not a valid point code.

pcn (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-s

nnnnn-0-16383

gc-aa-zz

m1-m2-m3-m4-0-14 for each member; values must sum to 14

pcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa-000-255

ssa-000-255

sp-000-255

pcn16 (mandatory)

16-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

```
sna---000---15
```

```
mna---000---31
```

Example

This example adds a point code:

```
chg-mate-stp:pc=10-20-30
```

This example adds a 24-bit ITU-N secondary point code:

```
chg-mate-stp:pcn24=99-99-99
```

This example adds a spare ITU-N secondary point code:

```
chg-mate-stp:pcn=s-12345
```

This example adds a 16-bit ITU-N secondary point code:

```
chg-mate-stp:pcn16=121-5-10
```

Dependencies

Mate STP point code must be present in either destination table or SID table.

3613 E3613 Cmd Rej: DPC must exist for the STP entry

Point code already exist in mate STP table.

3614 E3614 Cmd Rej: STP point code already in use

Point code entered must be in same network as other existing point codes.

2787 E2787 Cmd Rej: PC network type does not match existing PC network type

Mate stp table is full.

Notes

- The command is rejected when the point code is in invalid format.
- The command is rejected when point code is of a different network than the existing point codes/code's network.
- The command is rejected when the stp_table is full, as in, there are 16 point codes in the table already.
- The command is rejected when the point code specified already exists in the table.
- The command is rejected when no DPC (destination point code) exists for the specified point code. To add a new point code in the STP table, either it should be in the SID table or it should exist in the destination point code table.

Output

```
chg-mate-stp:pci=3-3-1
```

```
Searching destination table on disk - please wait...
```

```
Searching route table on disk - please wait...
```

```
Command Accepted - Processing
```

```
tekelecstp 18-05-28 17:24:37 MST EAGLE 46.6.2.0.0-73.19.0
```

```
chg-mate-stp:pci=3-3-1
```

```
Command entered at terminal #2.  
;  
tekelecstp 18-05-28 17:24:38 MST EAGLE 46.6.2.0.0-73.19.0  
CHG-MATE-STP: MASP B - COMPLTD
```

4.1.102 chg-meas

Use this command to change both the report and collecting status of the OAM based measurement subsystem.

Note:

After the Measurements Platform collection function has been enabled, the `collect=on/off` parameter controls only the output of reports to the UI. The parameter has no effect on enabling and disabling collection and report generation for the Measurements Platform. Report generation for the Measurements Platform is controlled by the `rept-ftp-meas` and `chg-measopts` commands.

Parameters

collect (optional)

Activates or deactivates the reporting of scheduled measurements to the UI when the E5-OAM Integrated Measurements feature is on. This parameter does not affect measurements collection and generation for the Measurements Platform. It only activates or deactivates the reporting of scheduled measurements to the UI for the Measurements Platform.

Range:

on

off

Default:

No change to value

System Default:

off

complink (optional)

Activates or deactivates scheduled measurement report for links.

Range:

on

off

Default:

Current value

comp1nkset (optional)

Activates or deactivates scheduled measurement report for linksets.

Range:

on

off

Default:

Current value

gtwy1nkset (optional)

Activates or deactivates the scheduled GTWY measurement report for the linkset.

Range:

on

off

Default:

Current value

gtwy1sfltr (optional)

Filters the linksets included in the GTWY report.

Range:

both

Only gateway linksets are included in the report to the terminal and SEAS.

stp

Only gateway linksets are included in the report to the terminal. All defined linksets are included in the report to SEAS.

seas

All defined linksets are included in the report to the terminal. Only gateway linksets are included in the report to SEAS.

none

All defined linksets are included in the report to the terminal and SEAS

gtwystp (optional)

Activates or deactivates the scheduled GTWY measurement report for the STP.

Range:

on

off

Default:

Current value

systotstp (optional)

Activates or deactivates scheduled measurement report for STP system totals.

Range:*on**off***Default:**

Current value

systottt (optional)

Activates or deactivates scheduled measurement report for translation type system totals.

Range:*on**off***Default:**

Current value

Example

```
chg-meas:collect=on
```

```
chg-  
meas:complink=on:complnkset=on:systottt=off:systotstp=off:colle  
ct=on
```

```
chg-meas:gtwylsfltr=both
```

Dependencies

At least one optional parameter must be specified.

2112 E2112 Cmd Rej: At least one parameter must be changed

If the 15 Minute Measurements and Measurements Platform collection functions are provisioned (see the `chg-measopts` command), then the `collect=on` parameter cannot be specified.

3693 E3693 Cmd Rej: COLLECT can't be ON if COLLECT15MIN & PLATFORMENABLE are ON

At least one SLK or SIP/DEIR connection must be configured before the `collect=on` parameter is specified.

4447 E4447 Cmd Rej: At least one entity is required to turn on measurements.

If the Integrated Measurements feature is turned on and the link count exceeds 700 links, then the `systotstp=on`, `systottt=on`, `complnkset=on`, `complink=on`, `gtwystp=on`, or `gtwylnkset=on` parameter cannot be specified.

5274 E5274 Cmd Rej: Link count exceeds max allowed for scheduled UI reports

Beginning with Release 46.3, basic OAM measurements are not supported. To turn `collect=on`, either MCPM or integrated measurements should be enabled.

3265 E3265 Cmd Rej: Either MCPM or integrated meas is required to turn on COLLECT

Notes

Activated scheduled reports print at serial ports configured for traffic-related unsolicited messages (the `traf=yes` parameter of the `chg-trm` command).

When the Measurements Platform is not enabled, the daily maintenance scheduled reports are always allowed and cannot be inhibited.

Maintenance Guide provides detailed information on measurements and measurement reports.

Output

```
chg-  
meas:complink=on:complnkset=on:systottt=off:systotstp=off:collect=on
```

```
rlghncxa03w 04-01-18 17:02:57 EST EAGLE 31.3.0  
CHG-MEAS: MASP A - COMPLTD  
;
```

Related Topics

- [copy-meas](#)
- [rept-ftp-meas](#)
- [rept-meas](#)
- [rtrv-meas-sched](#)

4.1.103 chg-measopts

Use this command to:

- turn on the collection function for Integrated Measurements and Measurements Platform,
- turn the collection function for 15 Minute Measurements on or off
- turn on and off the unchannelized link label for high-speed MTP2 links
- turn the CLLI-based file name option for measurements reports files on or off
- activate or de-activate automatic generation and FTP transfer of scheduled measurements reports to the FTP server

Note:

After the Measurements Platform or Integrated Measurements collection function has been enabled, it cannot be disabled with this command.

 **Caution:**

Do not execute the `chg-measopts:platformenable=on` or `chg-measopts:oamhcmeas=on` command near a collection starting boundary. The best times for executing these commands are `xx07`, `xx17`, `xx37` and `xx47`, where `xx` is any hour, from 00-23.

Parameters **Note:**

As of Release 45.0, the `all`, `avldlink`, `avllink`, `cllibasedname`, `collect15min`, `complink`, `complnkset`, `compsctpascoc`, `compsctpcard`, `compua`, `gtwylnkset`, `gtwylsdestni`, `gtwylsonismt`, `gtwylsorigni`, `gtwyorigni`, `gtwyorigninc`, `gtwystp`, `nmlink`, `nmlnkset`, `nmstp`, `systotstp`, `systotstt`, `systotsip` and `systotsfthrot` parameters can be set using the individual parameters or as options for the on and off parameters.

 **Note:**

The options for the on and off parameters are described in the Notes section.

all (optional)

Activates or deactivates the automatic generation and FTP transfer of all scheduled measurements reports.

 **Note:**

The `all` parameter does not change the setting of the `platformenable`, `cllibasedname`, `collect15min`, `unchlinklabel`, and `oamhcmeas` parameters.

Range:

on

off

Default:

No change to the current value

avldlink (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily availability measurement report for links.

Range:

on

off

Default:

No change to the current value

System Default:

off

av1link (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly availability measurement report for links.

Range:

on

off

Default:

No change to the current value

System Default:

off

c1libasedname (optional)

Enable or disable CLLI-based measurements report file name option.

Range:

on

off

Default:

No change to the current value

System Default:

off

collect15min (optional)

Turns on or off the 15 Minute Measurements collection function.

Range:

on

off

Default:

No change to the current value

System Default:

off

complink (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled component measurement report for links.

Range:

on

off

Default:

No change to the current value

System Default:

off

complnkset (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled component measurement report for linksets.

Range:

on

off

Default:

No change to the current value

System Default:

off

compsectpasoc (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled component measurement report for per association SCTP data.

Range:

on

off

Default:

No change to the current value

compsectpcard (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled component measurement report for per card SCTP data.

Range:

on

off

Default:

No change to the current value

compua (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled component measurement report for M3UA and SUA application server/association pairs.

Range:

on

off

Default:

No change to the current value

gtwylnkset (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY measurement report for linksets.

Range:

on

off

Default:

No change to the current value

System Default:

off

gtwylsdestni (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY link set measurement report for destination NI

Range:

on

off

Default:

No change to the current value

System Default:

off

gtwylsonismt (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY linkset measurement report for ISUP message type per linkset per originating NI

Range:

on

off

Default:

No change to the current value

System Default:

off

gtwylsorigni (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY link set measurement report for originating NI

Range:

on

off

Default:

No change to the current value

System Default:

off

gtwyorigni (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY link measurement report for originating NI.

Range:

on

off

Default:

No change to the current value

System Default:

off

gtwyorigninc (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY link measurement report for originating NI and NC.

Range:

on

off

Default:

No change to the current value

System Default:

off

gtwystp (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY measurement report for STP.

Range:

on

off

Default:

No change to the current value

System Default:

off

nmLink (optional)

Activates or deactivates automatic generation and FTP transfer of the scheduled network management measurement report for links.

Range:

on

off

Default:

No change to the current value

System Default:

off

nmLinkset (optional)

Activates or deactivates automatic generation and FTP transfer of the scheduled network management measurement report for link sets.

Range:

on

off

Default:

No change to the current value

System Default:

off

nmstp (optional)

Activates or deactivates automatic generation and FTP transfer of scheduled network management measurement report for STP.

Range:

on

off

Default:

No change to the current value

System Default:*off***oamhcmeas (optional)**

Turns on the Integrated Measurements collection function on the E5-OAM card. This function cannot be turned off after it has been turned on.

Range:*on***Default:**

No change to the current value.

System Default:*off***off (optional)**

This parameter turns off the specified options. Up to 8 comma-separated unique options can be specified.

Range:*all**avldlink**avllink**cllibasedname**collect15min**complink**complnkset**compsctpasoc**compsctpcard**compua**gtwylnkset**gtwylsdestni**gtwylsonismt**gtwylsorigni**gtwyorigni**gtwyorigninc**gtwystp*

nmlink
nmlnkset
nmstp
systotidpr
systotsfthrot
systotsip
systotstp
systottt
unclinklabel

on (optional)

This parameter turns on the specified options. Up to 8 comma-separated unique options can be specified.

Range:

all
avldlink
avllink
cllibasedname
collect15min
complink
complnkset
compsctpasoc
compsctpcard
compua
gtwylnkset
gtwylsdestni
gtwylsonismt
gtwylsorigni
gtwyorigni
gtwyorigninc
gtwystp

nmlink

nmlinkset

nmstp

oamhcmeas

platformenable

systotidpr

systotsfthrot

systotsip

systotstp

systottt

unclinklabel

platformenable (optional)

Turns on the Measurements Platform collection function.
This parameter cannot be turned off after it has been turned on.

Range:

on

Default:

No change to the current value

System Default:

off

systotsfthrot (optional)

Activates or deactivates automatic generation and FTP transfer of scheduled measurement report for GTT SFTHROT Action.

Range:

on

off

Default:

No change to the current value

System Default:

off

systotsip (optional)

Activates or deactivates automatic generation and FTP transfer of scheduled measurement report for SIP system totals.

Range:

on

off

Default:

No change to the current value

System Default:

off

systotstp (optional)

Activates or deactivates automatic generation and FTP transfer of scheduled measurement report for STP system totals.

Range:

on

off

Default:

No change to the current value

System Default:

off

systottt (optional)

Activates or deactivates automatic generation and FTP transfer of scheduled measurement report for translation type system totals.

Range:

on

off

Default:

No change to the current value

System Default:

off

unchlinklabel

Turns on a link label that identifies unchannelized (high speed) MTP2 links.

Range:

on

off

Example

```
chg-measopts:platformenable=on
```

```
chg-measopts:platformenable=on:complink=on:  
complnkset=on:systottt=off:systotstp=off
```

```
chg-measopts:on=complink,complnkset,systottt,systotidpr:  
off=gtwylsonismt,compua,nmlink,nmstp
```

```
chg-measopts:systotsip=on  
chg-measopts:systotsfthrot=on
```

Dependencies

The Measurements Platform feature must be turned on before the `platformenable=on` parameter can be specified.

2701 E2701 Cmd Rej: Meas Platform feature must be ON

An MCPM card must be in the IS-ANR Restrict state before the Measurements Platform collection option can be enabled.

2383 E2383 Cmd Rej: MCP card must be IS-ANR Restrict to enable Meas Platform

The 15 Minute Measurements feature must be enabled and turned on before the 15 Minute Measurements collection option can be turned on.

3697 E3697 Cmd Rej: 15-minute measurement feature must be ON

The `platformenable=on` or `oamhcmeas=on` parameter must be specified before the `cllibasedname=on` parameter can be specified.

3088 E3088 Cmd Rej: Platformenable or Oamhcmeas option must be on

This command is not allowed while in upgrade mode.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

Half-hour collection and report processing cannot be in progress when `collect15min=on` is specified.

2278 E2278 Cmd Rej: 30-minute measurement collection in progress

Quarter-hour collection and report processing cannot be in progress when `collect15min=off` is specified.

3688 E3688 Cmd Rej: 15-minute measurement collection in progress

At least one SLK or SIP/DEIR connection must be configured, before the `platformenable=on` or `oamhcmeas=on` parameter is specified.

4447 E4447 Cmd Rej: At least one entity is required to turn on measurements.

The `oamhcmeas` or `platformenable` parameter cannot be specified if an OAM/OAMHC to MCP or MCP to OAMHC transition is in progress.

5277 E5277 Cmd Rej: Transition in progress, Retry later

The Integrated Measurements feature must be turned on before the `oamhcmeas=on` parameter can be specified.

5278 E5278 Cmd Rej: Integrated Measurements feature must be ON

The Integrated Measurements or Measurements Platform feature must be turned on before this command can be entered.

5279 E5279 Cmd Rej: MEASPLAT or Integrated Measurements feature must be ON

The `platformenable` and `oamhcmeas` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The same option cannot be specified for the `on` and `off` parameters in the same command.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

Parameters cannot be specified individually and as options for the `on` or `off` parameter in the same command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

At least one GTT Action - SFTHROT must be provisioned before the `systotsfthrot=on` parameter is specified.

3430 E3430 Cmd Rej: At least one SFTHROT GTT action must be configured

Notes

Activated scheduled reports are generated and transferred to the customer's FTP server.

The `rept-ftp-meas` command can be used to manually generate and transfer one report at a time as needed.

The primary application of the `set-time` command is for Daylight Savings Time changes, setting the time forward or backward 1 hour. To reduce effects of `set-time` changes on measurements, the time change should be done within the first 15 minutes of any hour.

The *Maintenance Guide* provides detailed information on measurements and measurement reports.

CLLI-Based Measurements Report File Name

When the CLLI-based file name option (`cllibasedname`) is turned on, the CLLI is added to the measurements report file name, and the year is removed from the file name to ensure that the file name is equal to or fewer than 39 characters.

15 Minute Measurements

When the SEAS feature is turned on and 15 Minute Measurements collection is turned from off to on with the `collect15min=on` parameter, the message "Disabling SEAS Measurements..." is displayed at the UI.

When the SEAS feature is turned on and 15 Minute Measurements collection is running (`collect15min=on`), EAGLE measurements output to the SEAS interface is disabled.

When the SEAS feature is turned on and 15 Minute Measurements collection is turned from on to off with the `collect15min=off` parameter, EAGLE measurements output to the SEAS interface is enabled again.

Note:

If SEAS reporting is turned on, for the 24 hours after the 15 Minute Measurements option is turned from on to off, 30-minute demand SEAS reports for time periods prior to the option status change will contain only 15 minutes of data, and SEAS will not support reporting at the `xx15` and `xx45` times.

Some quarter-hour measurements data might not be available for 24 hours after turning 15 Minute Measurements collection on. This condition exists for quarter-hour intervals for which

15 Minute Measurements collection has not yet occurred. Data that was collected on a 30-minute basis is available for reporting for up to 24 hours after it is collected. After the 15 Minute Measurements collection option is turned on, this data remains available on a half-hour basis (xx00 and xx30) but is not available on a quarter-hour basis (xx15 and xx45) because no data was collected on the quarter hours. After the 15 Minute Measurements collection option has been turned on for 24 hours, all 15-minute measurements data is available on a quarter-hour basis (xx00, xx15, xx30, and xx45).

In addition, full 30-minute data coverage will not be available until 24 hours after turning off the 15 Minute Measurements collection option. Reports for specific periods will always contain the amount of data collected for that period.

The action of turning 15-minute measurements feature control status on using the `chg-ctrl-feat` command also has an impact on the generation of measurements reports for `period=active`. Specifically, if the feature control status of 15-minute measurements is turned on and a report is requested for the active interval prior to the next scheduled measurements collection (based on the current 15-minute measurements status), the starting time for the period shown in the report will be incorrect. As soon as the next scheduled collection occurs, active reports will show the correct starting time. For example, if 15-minute feature control status is turned on with the `chg-ctrl-feat` command at 13:03, and the 15-minute measurements collection option is turned on using the `chg-measopts` command at 13:05, and a `comp-link` report for `period=active` is requested at 13:10, that report will contain an incorrect interval start time. If the same report is requested at 13:20, the start time shown in the report will be correct, because a collection occurred at 13:15.

A similar limitation exists for `period=last`. If the feature control status of 15-minute measurements is turned on and a report is requested for the last interval prior to the next scheduled measurements collection (based on the current 15-minute measurements status), the start and end times for the period shown in the report will be incorrect. The data presented in the report will correspond to the start and end times. As soon as the next scheduled collection occurs, then `period=last` reports will show the correct start and end times and the corresponding data for that interval. To generate measurements from the last collected interval before the first collection with feature control status on, a `period=specific` report will need to be entered. In the example given in the previous paragraph, the first report requested at 13:10 would not give the last interval, but the data given would correspond to the interval shown in the report. The second report requested at 13:20 would show correct start and end times and the data would correspond to the interval.

If the 15 Minute Measurements collection option is turned from on to off in the first 15 minutes of a half-hour (xx00-xx15 or xx30-xx45) and a demand report is requested in the second 15 minutes of a half-hour (xx15-xx30 or xx45-xx60) for `period=last` or `period` not specified, the report that is displayed will be the last 15-minute interval (xx00-xx15 or xx30-xx45), not the last collected 15-minute interval (xx45-xx00 or xx15-xx30). Collection did not occur during this 15-minute period, and the message "Measurements data not current" will be displayed. To report the last collected 15-minute interval, `period=specific` must be specified in the command with the correct `qh/hh` value.

The time interval in each measurements report shows which collection option was on when the measurements were collected. (This might not be the option that is currently on if the option was changed in the last 24 hours).

- xx00-xx15—None. 15 minutes of data will be collected for the quarter-hour xx15.

- `xx15-xx30`—The `xx15` interval will contain no data. The `xx30` interval will contain 30 minutes of data.
- `xx30-xx45`—None. 15 minutes of data will be collected for the quarter-hour `xx15`.
- `xx45-xx00`—The `xx45` interval will contain no data. The `xx00` interval will contain 30 minutes of data.

on/off options

- *all* —Allows automatic generation and FTP transfer of all scheduled measurements reports. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This parameter does not change the setting of the `platformenable`, `cllibasedname`, `collect15min`, `unchlinklabel`, and `oamhcmeas` parameters. This option has a default of OFF
- *avldlink* —Allows automatic generation and FTP transfer of the scheduled daily availability measurement report for links. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *avllink* —Allows automatic generation and FTP transfer of the scheduled hourly availability measurement report for links. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *cllibasedname* —CLLI-based measurements report file name option. This option has a default of OFF.
- *collect15min* —15 Minute Measurements collection function. This option has a default of OFF.
- *complink* —Allows automatic generation and FTP transfer of the scheduled component measurement report for links. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *complinkset* —Allows automatic generation and FTP transfer of the scheduled component measurement report for linksets. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *compsctpasoc* —Allows automatic generation and FTP transfer of the scheduled component measurement report for per association SCTP data. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *compsctpcard* —Allows automatic generation and FTP transfer of the scheduled component measurement report for per card SCTP data. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *compua* —Allows automatic generation and FTP transfer of the scheduled component measurement report for M3UA and SUA application server/association pairs. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.

- *gtwylnkset* —Allows automatic generation and FTP transfer of scheduled GTWY measurement report for linksets. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *gtwylsdestni* —Allows automatic generation and FTP transfer of scheduled GTWY link set measurement report for destination NI. If the 15 Minute Measurements feature is turned on and the, `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *gtwylsonismt* —Allows automatic generation and FTP transfer of scheduled GTWY linkset measurement report for ISUP message type per linkset per originating NI. If the 15 Minute Measurements feature is turned on and the, `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *gtwylsorigni* —Allows automatic generation and FTP transfer of scheduled GTWY link set measurement report for originating NI. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *gtwyorigni* —Allows automatic generation and FTP transfer of scheduled GTWY link measurement report for originating NI. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *gtwyorigninc* —Allows automatic generation and FTP transfer of scheduled GTWY link measurement report for originating NI and NC. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *gtwystp* —Allows automatic generation and FTP transfer of scheduled GTWY measurement report for STP. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *nmlink* —Allows automatic generation and FTP transfer of the scheduled network management measurement report for links. This option has a default of OFF.
- *nmlnkset* —Allows automatic generation and FTP transfer of the scheduled network management measurement report for link sets. This option has a default of OFF.
- *nmstp* —Allows automatic generation and FTP transfer of scheduled network management measurement report for STP. This option has a default of OFF.
- *oamhcmeas* —Turns ON the Integrated Measurements collection function on the E5-OAM card. This option cannot be turned OFF.
- *platformenable* —Turns ON the Measurements Platform collection function. This option cannot be turned OFF.
- *systotidpr* —Allows scheduled reports for IDPR Measurement Pegs on FTP to be generated every 30 minutes. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.

- *systotsfthrot* — Allows automatic generation and FTP transfer of scheduled measurement report for GTT SFTHROT actions system totals. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *systotsip* — Allows automatic generation and FTP transfer of scheduled measurement report for SIP system totals. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *systotstp* —Allows automatic generation and FTP transfer of scheduled measurement report for STP system totals. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *systottt* —Allows automatic generation and FTP transfer of scheduled measurement report for translation type system totals. If the 15 Minute Measurements feature is turned on and the `collect15min` parameter is specified, then scheduled reports on FTP can be generated every 15 minutes. This option has a default of OFF.
- *unchnklabel* —Turns ON/OFF a link label that identifies unchannelized (high-speed) MTP2 links. This option has a default of OFF.

Output

```
chg-
measopts:platformenable=on:complink=on:complnkset=on:systottt=off:sy
stotstp=off
```

```
tekelecstp 08-06-01 14:31:25 EST EAGLE 44.0.0
CHG-MEASOPTS: MASP A - COMPLTD
```

```
;
```

```
chg-
measopts:on=systotidpr,systottt,complnkset,complink:off=avldlink,avl
link
```

```
tekelecstp 10-12-01 12:15:25 EST EAGLE 44.0.0
CHG-MEASOPTS: MASP A - COMPLTD
```

```
;
```

```
chg-measopts:systotsip=on
```

```
tekelecstp 12-07-26 14:41:09 EST EAGLE 45.0.0
chg-measopts:systotsip=on
Command entered at terminal #4.
CHG-MEASOPTS: MASP A - COMPLTD
```

```
;
```

```
chg-measopts:systotsfthrot=on

tekelecstp 15-08-26 14:41:09 EST EAGLE 46.3.0
chg-measopts:systotsfthrot=on
Command entered at terminal #4.
CHG-MEASOPTS: MASP A - COMPLTD
;
```

Related Topics

- [chg-ftp-serv](#)
- [chg-meas](#)
- [chg-mtc-measopts](#)
- [chg-netopts](#)
- [dlt-ftp-serv](#)
- [ent-ftp-serv](#)
- [rept-ftp-meas](#)
- [rept-meas](#)
- [rept-stat-meas](#)
- [rtrv-ftp-serv](#)
- [rtrv-measopts](#)
- [rtrv-mtc-measopts](#)
- [rtrv-netopts](#)

4.1.104 chg-mrn

Use this command to add new point codes, modify existing point codes and relative costs, and add or modify Alternate RI Mate data in the Mated Relay Node (MRN) table. The Intermediate GTT Load-Sharing (IGTTLS) feature must be on to enter this command. The GTT Load Sharing with Alternate Routing Indicator Feature (GTT LS ARI) must be enabled to provision an Alternate RI Mate.

If the IGTTLS feature is on, and the Flexible GTT Load Sharing feature (FGTTLS) is enabled, then entries are added to or changed in existing MRN sets in the MRN table.

If the IGTTLS feature is on, and the FGTTLS feature is not enabled, then the MRN table can contain a maximum of 3000 entries. If both the IGTTLS and FGTTLS features are on, then the MRN table can contain a maximum of 6000 entries.

Caution:

If any entries are provisioned in the SCCP-SERV table, the maximum number of entries that the MRN table can contain is reduced by that amount. Enter the `rtrv-sccp-serv` command to see if entries exist in the SCCP-SERV table. See the Notes section for additional information on multiplicity modes.

Parameters

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

Note:

The `mapset`, `mappc`, and `mapssn` parameters indicate whether an Alternate RI Mate search is performed in the MAP table if all PCs provisioned in a given MRN Set are unavailable or congested.

pc (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24/pcn16 (mandatory)

Post-GTT-translated point code.

pci (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the

ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn16 (mandatory)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un--000--127

sna--000--15

mna--000--31

eswt (optional)

Entity set weight. The weight assigned to each PC in a weighted entity set.

 **Note:**

This parameter cannot be specified when adding PCs to a weighted entity set or when modifying RC or weight values for an individual PC.

Range:

1 - 99, *none*

none —Changes a weighted entity set to a non-weighted entity set.

force (optional)

This parameter must be specified to modify the *rc*, *rc1*, *rc2*, *rc3*, or *rc4* parameter and the *wt*, *wt1*, *wt2*, *wt3*, or *wt4* parameter in the same command. Modification of the *wt*, *wt1*, *wt2*, *wt3*, or *wt4* parameters depends on the parameter's current multiplicity state, which depends on the RC value. Changing the *rc* parameter value can change the multiplicity state, which can then cause any of the weight parameter values to become invalid.

Range:

yes

grpwt (optional)

Group weight. The weight assigned to each PC in a weighted RC group.

 **Note:**

This parameter cannot be specified when adding PCs to a weighted entity set or when modifying RC or weight values for an individual PC.

Range:

1 - 99

mappc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

mappca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

Default:

000

mappc/mappca/mappci/mappcn/mappcn24/mappcn16 (optional)

Alternate RI Mate point code.

mappci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*
zone—*0-7*
area—*000-255*
id—*0-7*

The point code *0-000-0* is not a valid point code.

Default:

0-000-0

mappcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-
nnnnn—*0-16383*
gc—*aa-zz*
m1-m2-m3-m4—*0-14* for each member; values must sum to 14

Default:

00000

mappcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—*000-255*
ssa—*000-255*
sp—*000-255*

Default:

000

mappcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

Default:

000

mapset (optional)

Alternate RI Mate MAP Set ID. The MAP set where Alternate Routing Indicator searches are performed.

Range:

1 - 36000, dflt

dflt—Default MAP Set

If the `mappc` and `mapssn` parameters are specified, and the `mapset` parameter is not specified, then the `mapset` parameter is automatically set to a value of *dflt*.

Default:

No change to the current value

mapssn (optional)

Alternate RI Mate Subsystem Number. The subsystem number used for the Alternate Routing Indicator search.

Range:

*2 - 255, *, none*

If the `mapssn=*` parameter is specified, then the values specified for the `mapset` and `mappc` parameters must already exist in the MAP table.

Default:

No change to the current value

mrnset (optional)

MRN set ID.

Range:

1 - 3000, dflt

dflt -default MRN set

pc1 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca1

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.
When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001–005`.
When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.
The point code `000-000-000` is not a valid point code.

pc1/pca1/pci1/pcn1/pcn241/pcn161 (optional)

Alternate post-GTT-translated point code.

pc2 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca2

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001–005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.

The point code `000-000-000` is not a valid point code.

pc2/pca2/pci2/pcn2/pcn242/pcn162 (optional)

Alternate post-GTT-translated point code.

pc3 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca3

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001–005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.

The point code `000-000-000` is not a valid point code.

pc3/pca3/pci3/pcn3/pcn243/pcn163 (optional)

Alternate post-GTT-translated point code.

pc4 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca4

Range:*000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc4/pca4/pci4/pcn4/pcn244/pcn164 (optional)

Alternate post-GTT-translated point code.

pci1 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:*s-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

pci2 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:*s-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

pci3 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:*s-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

pci4 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

pcn161 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

pcn162 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

pcn163 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

pcn164 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

pcn1 (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn2 (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn241 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn242 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn243 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn244 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn3 (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn4 (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-`

`stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

rc (optional)

Relative cost. The relative cost of the route for the primary PC.

Range:

0 - 99

rc1 (optional)

Relative cost 1. The relative cost of the route for mate PC 1.

Range:

0 - 99

rc2 (optional)

Relative cost 2. The relative cost of the route for mate PC 2.

Range:

0 - 99

rc3 (optional)

Relative cost 3. The relative cost of the route for mate PC 3.

Range:

0 - 99

rc4 (optional)

Relative cost 4. The relative cost of the route for mate PC 4.

Range:

0 - 99

thr (optional)

Threshold. The in-service threshold of all PCs in a weighted entity set or RC group. This parameter cannot be specified when adding PCs to a weighted entity set or RC group or when modifying RC or weight values for an individual PC. If this parameter is not specified, a value of 1% is assigned to each weighted PC.

Range:

1 - 100

wt (optional)

Weight. The new weight assigned to the primary PC.

**Note:**

This parameter cannot be specified when adding PCs to a weighted entity set.

Range:

1 - 99

wt1 (optional)

Weight 1. The weight assigned to the mate PC 1 that is being added to the weighted entity set.

Range:

1 - 99

wt2 (optional)

Weight 2. The weight assigned to the mate PC 2 that is being added to the weighted entity set.

Range:

1 - 99

wt3 (optional)

Weight 3. The weight assigned to the mate PC 3 that is being added to the weighted entity set.

Range:

1 - 99

wt4 (optional)

Weight 4. The weight assigned to the mate PC 4 that is being added to the weighted entity set.

Range:

1 - 99

Example

In this example, the system searches the MRN table for a point code of 1-1-0. If the point code is found, its relative cost is set to 40.

```
chg-mrn:pc=1-1-0:rc=40
```


In this example, the system searches the MRN table for point code 1-1-0. Having found it, the system searches the entity set for 1-1-10. If 1-1-10 is not in the entity set, the command adds point code 1-1-10 to the entity set and assigned a relative cost of 30.

```
chg-mrn:pc=1-1-0:pc1=1-1-10:rc1=30
```

In this example, the system searches the MRN table for a point code of 1-1-0. Having found it, the system searches for each of the specified associated point codes in the entity set. If neither associated point code is found, the specified point codes and their relative costs are inserted into the entity set in the MRN table.

```
chg-mrn:pc=1-1-0:pc1=1-1-1:rc1=10:pc2=1-1-10:rc2=20
```

These examples include spare point codes.

```
chg-mrn:pcn=s-1-1-1-123-aa:rc=1:pcn1=s-1-1-1-235-aa:rc1=2:pcn2=s-1-1-1-235-aa:rc2=3
```

```
chg-mrn:pci=s-2-2-1:rc=20:pci1=s-2-2-2:rc1=21:pci2=s-2-100-1:rc2=22
```

```
chg-mrn:pc=1-1-1:rc=30:mrnset=df1t
```

```
chg-mrn:pc=1-1-1:rc=20:pc1=2-2-2:rc1=20:mrnset=111
```

```
chg-mrn:pc=1-1-1:pc1=3-3-3:rc1=30:mrnset=111
```

This example changes a non-weighted entity set to a weighted entity set.

```
chg-mrn:pc=1-1-1:eswt=30
```

```
chg-mrn:pc=1-1-1:eswt=30:thr=50
```

This example changes a weighted entity set to a non-weighted entity set.

```
chg-mrn:pc=1-1-1:eswt=none
```

This example assigns a weight value to each PC in a weighted RC group within a weighted entity set.

```
chg-mrn:pc=1-1-1:grpwt=20
```

This example assigns a threshold value to each PC in the RC group within a weighted entity set.

```
chg-mrn:pc=1-1-1:thr=70
```

This example assigns a weight and threshold to each PC in an RC group within a weighted entity set.

```
chg-mrn:pc=1-1-1:grpwt=20:thr=70
```

This example assigns PC 1 a weight of 30.

```
chg-mrn:pc=1-1-1:wt=30
```

This example adds PC 1 to the weighted entity set containing PC 1 and assigns PC 1 an RC of 30 and a weight of 20.

```
chg-mrn:pc=1-1-0:pc1=1-1-10:rc1=30:wt1=20
```

This example assigns specified PCs and their associated RCs and weights to the weighted entity set that contains the point code 1.

```
chg-mrn:pc=1-1-0:pc1=1-1-1:rc1=10:wt1=35:pc2=1-1-10:rc2=20:wt2=20
```

This example modifies both RC values and weights for PCs in an existing weighted entity set.

```
chg-mrn:pc=1-1-0:rc=30:wt=10:pc1=1-1-10:rc1=20:pc2=1-1-2:wt2=5:force=yes
```

This example modifies only weights for PCs in an existing weighted entity set.

```
chg-mrn:pc=1-1-0:wt=10:pc1=1-1-10:wt1=20:pc2=1-1-2:wt2=5
chg-mrn:pc=1-1-1:mrnset=111:mapset=df1t:mappc=2-1-1:mapssn=10

chg-mrn:pc=1-1-1:mrnset=111:mapssn=*

chg-mrn:pc=1-1-1:mrnset=111:mapset=1:mappc=2-1-2:mapssn=12

chg-mrn:pci=1-002-1:mrnset=10:mapset=2:mappcn=00126:mapssn=12
```

Example for 16 bit PC entry:

```
chg-
mrn:pcn16=1-14-0:rc=10:wt=30:pcn161=45-1-0:rc1=10:wt1=10:mrnset
=df1t
```

Dependencies

The Intermediate Global Title Translation Load Sharing feature must be turned on before this command can be entered.

2996 E2996 Cmd Rej: Intermed GTT Load Sharing feature must be ON

The `apca` and `pcn24/pcn16` parameters cannot be specified for the same MRN set.

2787 E2787 Cmd Rej: PC network type does not match existing PC network type

When a new point code is specified, its relative cost (`rc`) must be specified; a new point code and its relative cost must be entered together in the command.

2815 E2815 Cmd Rej: PC and RC must be entered as a pair

A new point code that is specified in the command must not already exist in the MRN table.

2816 E2816 Cmd Rej: PC already exists in the MRN entity set

The point codes cannot have the same value as the EAGLE SID.

2998 E2998 Cmd Rej: PC cannot match the SID

The same point code value cannot be entered more than once in the MRN table.

2979 E2979 Cmd Rej: Cannot enter the same PC more than once

Each point code group can contain a maximum of 128 point codes.

2818 E2818 Cmd Rej: A maximum of 128 PCs are allowed in a group

ITU-N point codes must be in the format set by the `npcfmti` parameter of the `chg-stpopts` command. (Use the `rtrv-stpopts` command to display the STP option settings).

2997 E2997 Cmd Rej: PC must match NPCFMTI set in CHG-STPOPTS

Mate remote point codes must already exist as destinations in the Ordered Route entity set or reside in a cluster destination for which ordered routes are specified.

2427 E2427 Cmd Rej: MPC does not exist in routing Table

To change the relative cost for a point code, the point code must already exist in the MRN table.

2849 E2849 Cmd Rej: PC must already exist in the MRN table

The Flexible GTT Loadsharing feature must be enabled before the `mrnset` parameter can be specified.

4479 E4479 Cmd Rej: MRNSET must be specified (only) if FGTTLS feature is enabled

If the Flexible GTT Loadsharing feature is enabled, the specified PC must already exist in the specified MRN set.

4483 E4483 Cmd Rej: PC does not exist in specified MRNSET

The specified MRN set must already exist in the MRN table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

If the IGTTLS feature is on, and the FGTTLS feature is not enabled, then the MRN table can contain a maximum of 3000 entries. If both the IGTTLS and FGTTLS features are on, then the MRN table can contain a maximum of 6000 entries.

2817 E2817 Cmd Rej: MRN table is full

The Weighted GTT Loadsharing feature must be turned on before the `wt/wt1/wt2/wt3/wt4`, `eswt`, `grpwt`, or `thr` parameter can be specified.

3370 E3370 Cmd Rej: Weighted GTT Load-Sharing feature must be ON.

If the `rc` parameter is not specified, the `wt` parameter cannot be specified.

3374 E3374 Cmd Rej: WT parameter can't be specified

The `eswt` and `grpwt` parameters cannot be specified together in the command.

3375 E3375 Cmd Rej: ESWT and GRPWT can't be specified together.

If the `eswt=none` parameter is specified, the `thr` parameter cannot be specified.

3376 E3376 Cmd Rej: THR can't be specified with ESWT=none

If the `eswt`, `grpwt`, or `thr` parameters are specified, the `rc/rc1/rc2/rc3/rc4` and `wt/wt1/wt2/wt3/wt4` parameters cannot be specified.

3377 E3377 Cmd Rej: WT_x and RC_x can't be specified with ESWT, GRPWT and THR.

If the Weighted GTT Loadsharing feature is enabled, and individual PCs are being modified, the `wt` or `rc` parameter must be specified for each PC.

3378 E3378 Cmd Rej: RC_x or WT_x must be specified.

Alternate point codes cannot be specified when modifying an entity set or RC group.

3379 E3379 Cmd Rej: Only PC must be specified.

If the `pc1/pc2/pc3/pc4` parameter is specified for a weighted entity set, a corresponding `wt1/wt2/wt3/wt4` parameter must be specified.

3381 E3381 Cmd Rej: Must specify weight for new point codes for weighted groups

If the `pc1/pc2/pc3/pc4` parameter is specified for a non-weighted entity set, the `wt1/wt2/wt3/wt4` parameter cannot be specified.

3382 E3382 Cmd Rej: Can't specify weight for non-weighted groups.

The `eswt=none` parameter cannot be specified for non-weighted entity sets.

3383 E3383 Cmd Rej: Can't specify ESWT=none for non-weighted groups.

The `grpwt` and `thr` parameters cannot be specified for non-weighted entity sets.

3384 E3384 Cmd Rej: GRPWT/THR mustn't be specified for non-weighted groups.

At least one additional point code must be specified.

3087 E3087 Cmd Rej: Must enter at least one PC/RC pair

If the `wt/wt1/wt2/wt3/wt4` parameter is specified, the corresponding `pc/pc1/pc2/pc3/pc4` parameter must be specified.

3371 E3371 Cmd Rej: WTx must have a matching PCx specified.

The `pc/pc1/pc2/pc3/pc4` parameter values must be full point codes.

2865 E2865 Cmd Rej: Address (MPCx) of mate subsystem must be a full PC

The SID table is corrupt or cannot be found by the system.

2874 E2874 Cmd Rej: Failed reading site identification table

The Route table is corrupt or cannot be found by the system.

2648 E2648 Cmd Rej: Failed reading the route table

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

If the Weighted GTT Loadsharing feature is not enabled, and individual PCs are being modified, the `rc` parameter must be specified for each PC.

3390 E3390 Cmd Rej: RCx must be specified

The `eswt`, `grpwt`, and `thr` parameters cannot be specified for solitary or dominant entity sets.

3392 E3392 Cmd Rej: ESWT, GRPWT and THR can't be specified for SOL or DOM groups

If the `chg-sid:pctype=ansi` command is entered, a value of `ni=000` cannot be specified.

If the `chg-sid:pctype=ansi` command is entered, and a value of `ni=001 – 005` is specified, a value of `nc=000` cannot be specified.

2169 E2169 Cmd Rej: Point code out of range

The `force=yes` parameter must be specified before the `rc`, `rc1`, `rc2`, `rc3`, or `rc4` parameter can be specified in the same command with the `wt`, `wt1`, `wt2`, `wt3`, or `wt4` parameter.

3346 E3346 Cmd Rej: WTx specified while modifying RCx (use FORCE=YES)

The `force` parameter can be used only to specify the `rc`, `rc1`, `rc2`, `rc3`, or `rc4` parameter and the `wt`, `wt1`, `wt2`, `wt3`, or `wt4` parameter in the same command.

3348 E3348 Cmd Rej: FORCE only with RCx and WTx specified

The value specified for the `pc/pc1/pc2/pc3/pc4` parameter cannot be associated with a proxy point code.

4707 E4707 Cmd Rej: PRX using DPC not allowed in GTT, MAP, MRN tables

The GTT LS ARI feature must be enabled before the `mapset`, `mappc`, or `mapssn` parameter can be specified.

5041 E5041 Cmd Rej: GTT LS ARI Feature must be enabled

The value specified for the `mappc` parameter must be a full point code.

5040 E5040 Cmd Rej: Alternate RI Mate PC must be a full PC

The point codes and alternate RI Mate point codes must have compatible network types as shown:

- ITUI, ITU-N, ITU-I spare, ITU-N-spare—ITUI, ITU-N, ITU-I spare, ITU-N-spare
- ANSI—ANSI
- ITUN-24—ITUN-24
- ITUN-16---ITUN-16

5042 E5042 Cmd Rej: PC and Alternate RI Mate PC network types don't match

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

The value specified for the `mapset` parameter must already exist in the MAP table.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

The values specified for the `mappc` and `mapssn` parameters must already exist in the specified MAP Set.

5051 E5051 Cmd Rej: MAPPC/MAPSSN does not exist in MAPSET

The values specified for the `mapset` and `mappc` parameters must already exist in the MAP table.

5052 E5052 Cmd Rej: MAPPC/MAPSET does not exist in MAP table

The value specified for the `mappc` parameter cannot match an existing STP point code.

5083 E5083 Cmd Rej: MAPPC can't be TPC or Mate of TPC

The `mappc` and `mapssn` parameters must be specified together in the command.

5085 E5085 Cmd Rej: To provision Alternate RI Mate, specify MAPPC/MAPSSN

Notes

For MRN commands, an entity set consists of a group of PCs that are used for traffic distribution, and an RC group consists of PCs within an entity set that have the same RC. In loadsharing mode, an entity set contains 1 RC group. In combined/dominant loadsharing mode, an entity set can contain multiple loadsharing groups.

All of the point codes that are specified in one command must exist in the same point code group in the MRN table.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

The EAGLE supports the following multiplicity modes for nodes/subsystems.

- A group of replicated PCs are in *dominant* mode if each PC in the group has a unique RC. The specified subsystem with the lowest RC acts as the primary subsystem, while the mate subsystem acts as a backup. In the event of congestion, messages route to the mate subsystem. When the congestion subsides, messages are again routed to the primary (dominant) subsystem.
- A group of replicated PCs are in *load sharing* mode if each PC in the group has the same RC. All messages are evenly distributed at the SCCP level to all nodes/subsystems in the group. In the event of congestion or failure, the non-affected subsystem assumes the load of its failed or congested mate.
- The *combined load sharing/dominant* mode supports a combination of load sharing and dominant mode. A group of PCs are in combined load sharing/dominant mode when at least two of the PCs have the same RC and another node subsystem in the group has a different RC. A combination of node accessibility and RC determines the preferred PC.

When the Weighted GTT Loadsharing feature is turned on, weighted entity sets and RC groups are supported, and threshold values can be assigned to each PC.

When the GTT LS ARI feature is enabled, the Alternate RI Mate for an MRN Set can be provisioned.

Output

```
chg-mrn:pci=1-1-2:mrnset=111:mapset=10:mappc=1-1-1:mapssn=*
```

```
tekelecstp 11-03-22 15:43:00 EST EAGLE 44.0.0
chg-mrn:pci=1-1-2:mrnset=111:mapset=10:mappc=1-1-1:mapssn=*
Command entered at terminal #4.
CHG-MRN: MASP A - MESSAGE: EXTENDED PROCESSING REQUIRED
CHG-MRN: MASP A - COMPLTD
;
```

Related Topics

- [dlt-mrn](#)
- [ent-mrn](#)
- [rtrv-mrn](#)

4.1.105 chg-mtc-measopts

Use this command to enable or disable the automatic generation and FTP transfer of scheduled maintenance measurements reports to the FTP server.

Parameters

 **Note:**

As of Release 46.6, the `mtcdaiq`, `mtcdatinpq`, `mtcdeir`, `mtcdgttpath`, `mtcdgttset`, `mtcdlink`, `mtcdlnkset`, `mtcdlnp`, `mtcdmap`, `mtcdnp`, `mtcdsctpasoc`, `mtcdsctpcard`, `mtcdsip`, `mtcdstp`, `mtcdua`, `mtcdvflex`, `mtchaiq`, `mtchatinpq`, `mtcheir`, `mtchgttpath`, `mtchgttset`, `mtchlnp`, `mtchmap`, `mtchnp`, `mtchvflex`, `mtcddeir`, `mtchdeir` and `mtcdsfthrot` parameters can be specified individually or as options for the `on` and `off` parameters.

 **Note:**

The options for the `on` and `off` parameters are specified in the Notes section.

mtcdaiq (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for ANSI41 AnalyzedInformation Query (ANSI41 AIQ).

Range:

on

off

Default:

No change to the current value.

System Default:

off

mtcdatinpq (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for ATI Number Portability Query (ATINP).

Range:

on

off

Default:

No change to the current value

System Default:

off

mtcdeir (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement reports for Equipment Identity Register (EIR).

Range:

on

off

Default:

No change to the current value

System Default:

off

mtcdenum (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily ENUM NP maintenance measurement reports.

Range:

on

off

Default:

No change to the current value

System Default:

off

mtcdgttpath (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for GTT Action per path measurements.

Range:

on

off

Default:

No change to the current value

System Default:

off

mtcdgttset (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily per GTTSET maintenance measurement report.

Range:

on

off

Default:

No change to the current value

System Default:

off

mtcdlink (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for links.

Range:

on

off

Default:

No change to the current value

System Default:

off

mtcdlinkset (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for link sets.

Range:

on

off

Default:

No change to the current value

System Default:

off

mtcdlnp (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for LNP.

Range:

on

off

Default:

No change to the current value

System Default:

off

mtcdmap (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report per GSM MAP Screening server entry.

Range:

on

off

Default:
No change to the current value

System Default:
off

mtcdnp (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for INP.

Range:

on

off

Default:
No change to the current value

System Default:
off

mtcdsctpasoc (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for per association SCTP data.

Range:

on

off

Default:
No change to the current value

mtcdsctpcard (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for per card SCTP data.

Range:

on

off

Default:
No change to the current value

mtcdsfthrot (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for GTT SFTHROT Action measurements.

Range:

on

off

Default:
No change to the current value

System Default:
off

mtcdsip (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for SIP.

Range:
on

off

Default:
No change to the current value

System Default:
off

mtcdstp (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for STP.

Range:

on

off

Default:
No change to the current value

System Default:
off

mtcdua (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for M3UA and SUA application server/association pairs.

Range:

on

off

Default:
No change to the current value

System Default:
off

mtcdvflex (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for V-Flex (Voice Mail Router).

Range:

on

off

Default:

No change to the current value

System Default:

off

mtchaiq (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report of ANSI41 AnalyzedInformation Query (ANSI41 AIQ).

Range:

on

off

Default:

No change to the current value.

System Default:

off

mtchatinpq (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report of Any Time Interrogation (ATI) Number Portability (NP) Queries.

Range:

on

off

Default:

No change to the current value

System Default:

off

mtchdeir (optional)

Activates or deactivates the automatic generation and FTP transfer of the hourly S13 EIR maintenance measurement reports.

Range:

on

off

Default:

No change to the current value

System Default:

off

mtcheir (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for Equipment Identity Register (EIR).

Range:

on

off

Default:

No change to the current value

System Default:

off

mtchenum (optional)

Activates or deactivates the automatic generation and FTP transfer of the hourly ENUM NP maintenance measurement reports.

Range:

on

off

Default:

No change to the current value

System Default:

off

mtchgttpath (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for GTT Action per path measurements.

Range:

on

off

Default:

No change to the current value

System Default:

off

mtchgttset (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly per GTTSET maintenance measurement report.

Range:

on

off

Default:

No change to the current value

System Default:

off

mtchlmp (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for LNP.

Range:

on

off

Default:

No change to the current value

System Default:

off

mtchmap (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled hourly maintenance measurement report per GSM MAP Screening server entry.

Range:

on

off

Default:

No change to the current value

System Default:

off

mtchnp (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for INP.

Range:

on

off

Default:

No change to the current value

System Default:*off***mtchvflex (optional)**

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for V-Flex (Voice Mail Router).

Range:*on**off***Default:**

No change to the current value

System Default:*off***off (optional)**

This parameter turns off the specified options. Up to 8 comma-separated unique options can be specified.

Range:*mtcdaiq**mtcdatinpq**mtcddeir**mtcdeir**mtcdenum**mtcdgttpath**mtcdgttset**mtcdlink**mtcdlnkset**mtcdlnp**mtcdmap**mtcdnp**mtcdsctpasoc**mtcdsctpcard**mtcdsfthrot**mtcdsip*

mtcdstp

mtcdua

mtcdvflex

mtchaiq

mtchatinpq

mtchdeir

mtcheir

mtchenum

mtchgttpath

mtchgttpset

mtchlnp

mtchmap

mtchnp

mtchvflex

on (optional)

This parameter turns on the specified options. Up to 8 comma-separated unique options can be specified.

Range:

mtcdaiq

mtcdatinpq

mtcddeir

mtcdeir

mtcdenum

mtcdgttpath

mtcdgttpset

mtcdlink

mtcdlnkset

mtcdlnp

mtcdmap

mtcdnp

mtcdsctpasoc

mtcdsctpcard

mtcdsfthrot

mtcdsip

mtcdstp

mtcdua

mtcdvflex

mtchaiq

mtchatinpq

mtchdeir

mtcheir

mtchenum

mtchgttpath

mtchgttpset

mtchlnp

mtchmap

mtchnp

mtchvflex

Example

```
chg-mtc-measopts:mtcdeir=off:mtcheir=on
chg-mtc-measopts:mtchvflex=on:mtcdvflex=on
chg-mtc-measopts:mtchaiq=on:mtcdaiq=on
chg-mtc-measopts:on=mtcdaiq,mtcdatinpq,mtcdeir,
mtcdgttpath,mtcdlink,mtcdlnkset,mtcdlnp,mtcdmap
chg-mtc-measopts:off=mtcdsctpcard,mtcdstp
mtcdua,mtcdvflex,mtchaiq:on=mtchlnp,mtchmap
chg-mtc-measopts:mtcdsip=on
chg-mtc-measopts:on=mtchdeir,mtcddeir
chg-mtc-measopts:mtchdeir=on:mtcddeir=on
chg-mtc-measopts:on=mtcdenum,mtchenum
chg-mtc-measopts:mtchenum=on:mtcdenum=off
```

```
chg-mtc-measopts:mtcdsfthrot=on
```

```
chg-mtc-measopts:mtchgttset=on:mtcdgttset=on
```

Dependencies

The LNP feature must be turned on before the `mtchlnp=on` or `mtcdlnp=on` parameter can be specified.

3009 E3009 Cmd Rej: LNP feature must be ON

The GSM Map Screening (GSMSCR) feature must be turned on before the `mtcdmap=on` parameter or the `mtchmap=on` parameter can be specified.

3883 E3883 Cmd Rej: GSM Map Screening feature must be ON

The Equipment Identity Register (EIR) feature must be turned on before the `mtcheir=on` parameter or the `mtcdeir=on` parameter can be specified.

3699 E3699 Cmd Rej: EIR feature must be ON

This command is not allowed while in upgrade mode.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

The V-Flex feature must be turned on before the `mtchvflex=on` parameter or the `mtcdvflex=on` parameter can be specified.

4142 E4142 Cmd Rej: VFLEX feature must be ON

The ATINP feature must be enabled before the `mtchatinpq=on` parameter or the `mtcdatinpq=on` parameter can be specified.

4816 E4816 Cmd Rej: ATINP feature must be enabled

The A-Port, G-Port, IS41 GSM Migration, MO SMS IS41-to-GSM Migration, MO-based GSM SMS NP, MO-based IS41 SMS NP, Prepaid SMS Intercept Ph1, TIF ASD, TIF GRN, TIF Number Portability, or TIF Simple Number Substitution feature must be enabled, or the INP feature must be turned on before the `mtchnp=on` parameter or the `mtcdnp=on` parameter can be specified.

3631 E3631 Cmd Rej: Incompatible Feature/Option status

The ANSI41 AIQ feature must be enabled before the `mtchaiq=on` or `mtcdaiq=on` parameter can be specified.

5158 E5158 Cmd Rej: ANSI41 AIQ feature must be enabled

The Integrated Measurements or Measurements Platform feature must be turned on before this command can be entered.

5279 E5279 Cmd Rej: MEASPLAT or Integrated Measurements feature must be ON

The GTT Action - DISCARD, GTT Action - FORWARD, or GTT Action - DUPLICATE feature must be enabled before the `mtchgttapath=on` or `mtcdgttapath=on` parameter can be specified.

3451 E3451 Cmd Rej: Controlled Feature is not enabled

At least one GTT Action - SFTHROT must be provisioned before the `mtcdsfthrot=on` parameter is specified.

3430 E3430 Cmd Rej: At least one SFTHROT GTT action must be configured

The same option cannot be specified for the `on` and `off` parameters in the same command.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

Parameters cannot be specified individually and as options for the `on` or `off` parameter in the same command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The Diameter S13/S13' Interface for EIR feature (DEIR) must be turned on before the `mtchdeir=on` parameter or the `mtcddeir=on` parameter can be specified.

2728 E2728 Cmd Rej: S13 Feature Must Be Activated

At least one ENUM card must be provisioned before the `mtchenum=on` or `mtcdenum=on` parameter can be specified.

3195 E3195 Cmd Rej: At least one ENUM card must be provisioned

The EGTT feature must be turned ON before `mtchggttset=on` or `mtcdggttset=on` parameter can be specified.

3557 E3557 Cmd Rej: EGTT must be ON

Notes

Activated scheduled reports are generated and transferred to the customer's FTP server

The `rept-ftp-meas` command can be used to manually generate and transfer one report at a time as needed.

Maintenance Guide provides detailed information on measurements and measurement reports.

on/off options

mtcdaiq

Allows automatic generation and FTP transfer of the scheduled daily maintenance measurement report for ANSI41 Analyzed Information Query (ANSI41 AIQ). The option has a default of OFF.

mtcdatinpq

Allows automatic generation and FTP transfer of the scheduled daily maintenance measurement report for ATI Number Portability Query (ATINP). The option has a default of OFF.

mtcddeir

Allows automatic generation and FTP transfer of the scheduled daily maintenance measurement report for S13 EIR. The option has a default of OFF.

mtcdeir

Allows automatic generation and FTP transfer of the daily maintenance measurement report for Equipment Identity Register (EIR). The option has a default of OFF.

mtcdenum

Allows automatic generation and FTP transfer of the scheduled daily maintenance measurement report for ENUM NP. The option has a default of OFF.

mtcdgttpath

Allows automatic generation and FTP transfer of the scheduled daily maintenance measurement report for GTT Action per path measurements. The option has a default of OFF.

mtcdgttset

Allows automatic generation and FTP transfer of the scheduled daily maintenance measurement report per GTTSET. The option has a default of OFF.

mtcdlink

Allows automatic generation and FTP transfer of the daily maintenance measurement report for links. The option has a default of OFF.

mtcdlnkset

Allows automatic generation and FTP transfer of the daily maintenance measurement report for link sets. The option has a default of OFF.

mtcdlnp

Allows automatic generation and FTP transfer of the scheduled daily maintenance measurement report for LNP. The option has a default of OFF.

mtcdmap

Allows automatic generation and FTP transfer of the scheduled daily maintenance measurement report per GSM MAP Screening server entry. The option has a default of OFF.

mtcdnp

Allows automatic generation and FTP transfer of the scheduled daily maintenance measurement report for INP. The option has a default of OFF.

mtcdsctpasoc

Allows automatic generation and FTP transfer of the scheduled daily maintenance measurement report for per association SCTP data. The option has a default of OFF.

mtcdsctpcard

Allows automatic generation and FTP transfer of the scheduled daily maintenance measurement report for per card SCTP data. The option has a default of OFF.

mtcdsfthrot

Allows automatic generation and FTP transfer of the scheduled daily maintenance measurement report for GTT SFTHROT Action measurements. The option has a default of OFF.

mtcdsip

Allows automatic generation and FTP transfer of the daily maintenance measurement report for SIP. The option has a default of OFF.

mtcdstp

Allows automatic generation and FTP transfer of the daily maintenance measurement report for STP. The option has a default of OFF.

mtcdua

Allows automatic generation and FTP transfer of the scheduled daily maintenance measurement report for M3UA and SUA application server/association pairs. The option has a default of OFF.

mtcdvflex

Allows automatic generation and FTP transfer of the daily maintenance measurement report for V-Flex (Voice Mail Router). The option has a default of OFF.

mtchaiq

Allows automatic generation and FTP transfer of the scheduled hourly maintenance measurement report of ANSI41 Analyzed Information Query (ANSI41 AIQ). The option has a default of OFF.

mtchatinpq

Allows automatic generation and FTP transfer of the scheduled hourly maintenance measurement report of Any Time Interrogation (ATI) Number Portability (NP) Queries. The option has a default of OFF.

mtchdeir

Allows automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for S13 EIR. The option has a default of OFF.

mtcheir

Allows automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for Equipment Identity Register (EIR). The option has a default of OFF.

mtchenum

Allows automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for ENUM NP. The option has a default of OFF.

mtchgttpath

Allows automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for GTT Action per path measurements. The option has a default of OFF.

mtchgttset

Allows automatic generation and FTP transfer of the scheduled hourly maintenance measurement report per GTTSET. The option has a default of OFF.

mtchlmp

Allows automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for LNP. The option has a default of OFF.

mtchmap

Allows automatic generation and FTP transfer of scheduled hourly maintenance measurement report per GSM MAP Screening server entry. The option has a default of OFF.

mtchnp

Allows automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for INP. The option has a default of OFF.

mtchvflex

Allows automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for V-Flex (Voice Mail Router). The option has a default of OFF.

Output

```
chg-mtc-measopts:mtchgttpath=on:mtcdgttpath=on
```

```
tekelecstp 10-02-11 14:31:25 EST EAGLE 44.0.0
```

```
CHG-MTC-MEASOPTS: MASP A - COMPLTD
;

chg-mtc-measopts:on=mtcdaiq,mtcdatinpq,mtcdeir,
mtcdgttpath,mtcdlink:off=mtcheir,mtchgttpath,mtchlnp

tekelecstp 10-02-11 14:31:25 EST EAGLE 44.0.0
CHG-MTC-MEASOPTS: MASP A - COMPLTD
;

chg-mtc-measopts:mtcdsip=on

tekelecstp 12-07-26 14:55:58 EST EAGLE 45.0.0
chg-mtc-measopts:mtcdsip=on
Command entered at terminal #4.
CHG-MTC-MEASOPTS: MASP A - COMPLTD.
;

chg-mtc-measopts:mtchdeir=on:mtcddeir=on

tekelecstp 13-03-15 14:55:58 EST EAGLE 45.1.0
chg-mtc-measopts:mtchdeir=on:mtcddeir=on
Command entered at terminal #4.
CHG-MTC-MEASOPTS: MASP A - COMPLTD
;

chg-mtc-measopts:mtchenum=on:mtcdenum=off

tekelecstp 14-05-18 14:55:58 EST EAGLE 46.1.0
chg-mtc-measopts:mtchenum=on:mtcdenum=off
Command entered at terminal #4.
CHG-MTC-MEASOPTS: MASP A - COMPLTD
;

chg-mtc-measopts:mtcdsfthrot=on

tekelecstp 15-03-15 14:55:58 EST EAGLE 46.3.0
chg-mtc-measopts:mtcdsfthrot=on
Command entered at terminal #4.
CHG-MTC-MEASOPTS: MASP A - COMPLTD
;

chg-mtc-measopts:mtchgttset=on:mtcdgttset=on

tekelecstp 17-05-11 15:55:48 EST EAGLE 46.6.0
chg-mtc-measopts:mtchgttset=on:mtcdgttset=on
Command entered at terminal #4.
```

```
CHG-MTC-MEASOPTS: MASP A - COMPLTD  
;
```

Related Topics

- [chg-ftp-serv](#)
- [chg-meas](#)
- [chg-measopts](#)
- [chg-netopts](#)
- [dlt-ftp-serv](#)
- [ent-ftp-serv](#)
- [rept-ftp-meas](#)
- [rept-meas](#)
- [rept-stat-meas](#)
- [rtrv-ftp-serv](#)
- [rtrv-measopts](#)
- [rtrv-mtc-measopts](#)
- [rtrv-netopts](#)

4.1.106 chg-netopts

Use this command to change the Private Virtual Network (PVN) address and PVN subnet mask values for the IP networks and the network address and subnet mask values for the Fast Copy networks used by the system.

Caution:

Ensure that the configured addresses do not conflict with the DHCP IP addresses leased to STC cards (see the `mode=full` report generated by the `rept-stat-card` command). Conflicting IP addresses can adversely affect the EAGLE 5 Integrated Monitoring Support feature.

Parameters

fcna (optional)

Fast Copy Network A. The network address for the Fast Copy A network.

Note:

This parameter consists of a classless Inter Domain Routing (Supernet) address with a network prefix of up to 23 bits.

Range:

0.0.2.0-255.255.253.0

The last 9 bits are zero (0) and are reserved for the Host ID.

Default:

No change to the current value

System Default:

172.21.48.00

fcnb (optional)

Fast Copy Network B. The network address for the Fast Copy B network.

**Note:**

This parameter consists of a classless Inter Domain Routing (Supernet) address with a network prefix of up to 23 bits.

Range:

0.0.2.0-255.255.253.0

The last 9 bits are zero (0) and are reserved for the Host ID.

Default:

No change to the current value

System Default:

172.22.48.00

pvn (optional)

Private Virtual Network address for the EAGLE. The value must be valid for a Class B network IP address. The host portion of the PVN address must be 0 based on the PVNMASK.

Range:

128.0.0.0-191.255.255.0

4 numbers separated by dots in the range 128.0.0.0 - 191.255.255.0

Default:

No change to the current value

System Default:

172.20.48.00

pvnmask (optional)

A subnet mask for the EAGLE PVN.

Range:

The value must be valid for a Class B network IP address

- 255.255.0.0
- 255.255.128.0

- 255.255.192.0
- 255.255.224.0
- 255.255.240.0
- 255.255.248.0
- 255.255.252.0
- 255.255.254.0
- 255.255.255.0

Default:

No change to the current value

System Default:

255.255.252.00

Example

```
chg-netopts:pvn=170.120.50.1:pvnmask=255.255.252.0
```

```
chg-netopts:fcna=170.120.50.0
```

```
chg-netopts:fcnb=172.121.50.0
```

Dependencies

At least one pair of optional parameters must be specified in the command (i.e. `pvn` and `pvnmask` or `fcna` and `fcnb`).

2136 E2136 Cmd Rej: At least one optional parameter is required

The `pvn` and `pvnmask` IP addresses cannot have the same value.

3962 E3962 Cmd Rej: PVN and PVNMASK must not be the same

The NETOPTS table is corrupt or cannot be found.

3979 E3979 Cmd Rej: Read NETOPTS table failed

The `pvn` and `pvnmask` parameters must be specified together in the command.

3961 E3961 Cmd Rej: PVN and PVNMASK must be specified together

The IP network address specified by the `pvn/pvnmask` or `fcna/fcnb` parameters cannot be the same as, overlap, or include any IP network or host addresses assigned to any Ethernet interface for any IP card.

4331 E4331 Cmd Rej: Specified network addr assigned to a IP card Ethernet Port

The IP Network address specified by the `pvn` and `pvnmask` parameters or the `fcna` and `fcnb` parameters cannot have an existing route in the IP Route table.

4330 E4330 Cmd Rej: Network Address conflicts with IP Route Table

The E5IS feature must be turned on before this command can be specified.

3967 E3967 Cmd Rej: E5IS must be ON

The value specified for the `fcna` parameter must be a classless Inter Domain Routing (Supernet) address with a 23-bit network prefix.

4878 E4878 Cmd Rej: Invalid FCNA

The value specified for the `fcnb` parameter must be a classless Inter Domain Routing (Supernet) address with a 23-bit network prefix.

4946 E4946 Cmd Rej: Invalid FCNB

If the `fcmode=fcopy` parameter is specified (see the `chg-eisopts` command) for an IPSG or IPGHC GPL, then the `fcna` and `fcnb` parameters cannot be specified.

4766 E4766 Cmd Rej: FCMODE must not be FCOPY

The `eiscopy=off` parameter must be specified (see the `chg-eisopts` command) before the `pvn` or `pvnmask` parameter can be specified.

3629 E3629 Cmd Rej: Turn off EISCOPY before changing PVN and PVNMask

The same value cannot be specified for the `pvn`, `fcna`, and `fcnb` parameters.

5013 E5013 Cmd Rej: PVN, FCNA and FCNB must not be identical

The same value cannot be specified for the `fcna` and `fcnamask` parameters.

4974 E4974 Cmd Rej: FCNA and FCNAMASK must not be identical

The same value cannot be specified for the `fcnb` and `fcnbmask` parameters.

5012 E5012 Cmd Rej: FCNB and FCNBMASK must not be identical

The value specified for the `pvn` parameter must be a valid Class B network IP address.

The host portion of the value specified for the `pvn` parameter must be 0.0.0.0 based on the value specified for the `pvnmask` parameter.

3965 E3965 Cmd Rej: Invalid PVN

The value specified for the `pvnmask` parameter must be a valid subnet IP address.

4012 E4012 Cmd Rej: Invalid PVNMASK**Notes****Fast Copy Cards**

E5-ENET-B cards running the IPSG or IPGHC GPL are considered to be *FC-capable*. A card running the IPGHC GPL must be in the IS-NR State before the card can be considered *FC-capable*. This restriction does not apply to cards running the IPSG GPL. An *FC-capable* card is considered *FC-enabled* when Fast Copy monitoring is enabled for the respective GPL.

Output

```
chg-netopts:fcna=170.120.50.0
```

```
tekelecstp 10-12-09 16:00:29 EST EAGLE 43.0.0
chg-netopts:fcna=170.120.50.0
Command entered at terminal #4.
CAUTION: Ensure that configured PVN/FCNA/FCNB addresses do not
conflict
```

with the DHCP IP addresses leased to STC cards.

```
CHG-NETOPTS: MASP A - COMPLTD  
;
```

Related Topics

- [rtv-netopts](#)

4.1.107 chg-npp-as

Use this command to change a Numbering Plan Processor (NPP) Action Set (AS). An AS is used by the NPP to assist with digit string filtering, conditioning, and encoding for selected EAGLE applications. An AS is a collection of NPP Conditioning Actions (CAs), Service Actions (SAs), and Formatting Actions (FAs).

Parameters

 **Note:**

CAs and FAs are processed in the order that they are specified in the comma-separated list.

 **Note:**

SAs are processed in order of high-to-low precedence and must be specified in high-to-low precedence order in the comma-separated list. The SAs cannot be duplicated in the list. If multiple SAs have the same precedence, then the SAs are processed in the order in which they appear in the list.

 **Note:**

CAs and FAs are processed in consecutive order. The CAs and FAs are processed in the order that they are specified in the comma separated list.

 **Note:**

SAs are processed in order of high-to-low precedence. The SAs must be specified in high-to-low precedence order in the list, and cannot be duplicated in the comma separated list. If multiple SAs have the same precedence, then the SAs are processed in the order in which they appear in the list.

 **Note:**

The `ac*`, `dn*`, `sn*`, and `cc*` values refer to all CAs that begin with `ac`, `dn`, `sn`, or `cc`, respectively.

 **Note:**

To change the value of a single CA, FA, or SA within an AS, all of the associated parameters that were specified for that CA, FA, or SA for the AS must be entered.

 **Note:**

Refer to *Numbering Plan Processor (NPP) User's Guide* and to the Feature Manual for the feature of interest for more information on provisioning Action Sets and for definitions for the CA, FA, and SA values.

 **Note:**

The `sa(X)dgts` parameters are currently not supported by any feature.

 **Note:**

The `sa(X)val` parameters are used by the TIF Range CgPN Blacklist, TIF Subscriber CgPN Blacklist, and TIF Selective Screening features. Up to 2 numerical values can be specified in each list.

 **Note:**

If an `sa(X)` value is changed or removed, then any associated `sa(X)val` and `sa(X)dgts` parameters are set to *none* unless a new value is specified in the command.

 **Note:**

Support of a numerical values list (`sa(X)val` parameter) is specific to the Service and Service Action.

asn (mandatory)

Action set name. This parameter specifies the name of the AS.

Range:*ayyyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters

ca (optional)

Conditioning Action list. A comma-separated CA list that can be applied to an incoming digit string. Up to 12 CAs can be specified in the list. The CAs are processed in the order they are specified in the list.

Range:

ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, accgpn, accgpn1, accgpn2, accgpn3, accgpn4, accgpn5, accgpn6, accgpn7, accgpn8, acdef, aclac, cc1, cc2, cc3, ccdef, cccgpn, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn11, dn12, dn13, dn14, dn15, dnx, fpx, ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfb1, pfb2, pfb3, pfb4, pfb5, pfb6, pfb7, pfb8, pfc1, pfc2, pfc3, pfc4, pfc5, pfc6, pfc7, pfc8, pfd1, pfd2, pfd3, pfd4, pfd5, pfd6, pfd7, pfd8, pfe1, pfe2, pfe3, pfe4, pfe5, pfe6, pfe7, pfe8, pxf1, pxf2, pxf3, pxf4, pxf5, pxf6, pxf7, pxf8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, znx

fa (optional)

Formatting Action list. A comma-separated FA list that can be applied to the outgoing digit string. Up to 12 FAs can be specified in the list. The FAs are processed in the order they are specified in the list and cannot be duplicated.

Range:

ac, asd, asdothor, cc, dlma, dlmb, dlmc, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, dn, fpx, grn, grnothor, orig, pfxa, pfb, pfc, pfd, pfe, pxf, rn, rnospodn, rnosposn, rnospozn, sn, sp, sfrimsi, vmid, zn, none
none-deletes all FAs from the specified FA list

fatype (optional)

Formatting Action List Type. The Formatting Action list used to format digits in response messages on a per message basis. The lists are updated by values specified for the *fa* parameter.

Range:***dflt***

digits are formatted using the TTROPTS:CDDRA and TTROPTS:CGDRA parameters

fane

Formatting Action list to format digits when neither the SP nor the RN network entity is associated with the DN in the RTDB

fanf

Formatting Action list to format digits when the DN is not present in the RTDB

farn

Formatting Action list to format digits when the RN network entity is associated with the DN in the RTDB

fasp

Formatting Action list to format digits when the SP network entity is associated with the DN in the RTDB

fascrcd

Formatting Action list to format ISUP CdPN digits when CdPN is Screened by SELSCR SA and SA(X)VAL is none.

fascrcg

Formatting Action list to format ISUP CgPN digits when CdPN is Screened by SELSCR SA and SA(X)VAL is none.

ofnai (optional)

Outgoing filter nature of address indicator. The filter nature of address indicator (FNAI) class of the outgoing digit string.

Range:***intl***

intl value provisioned in the `chg-npp-serv` command

natl

natl value provisioned in the `chg-npp-serv` command

nai1

nai1 value provisioned in the `chg-npp-serv` command

nai2

nai2 value provisioned in the `chg-npp-serv` command

nai3

nai3 value provisioned in the `chg-npp-serv` command

unkn

unkn value provisioned in the `chg-npp-serv` command

inc

NAI of the incoming digit string

sa (optional)

Service Action list. A comma-separated SA list that can be applied to an incoming digit string. Up to 8 SAs can be specified in the list. The SAs must be specified in high-to-low precedence order in the list, and cannot be duplicated in the list.

Range:

asdlkup, blk1stqry, blk1strly, blnfndrls, blrls, cdial, ccncchk, cdpnnp, cgpnasdrqd, cgpngrnrqd, cgpnpnp, cgpnrng, cgpnsvcrqd, crp, fpxrls, fraudchk, fwdscs, grnlkup, inprtq, lacck, migrate, nocgpnrls, nprnrls, nprelay, nprls, nscgpn, nscdpn, pprelay, rtdbtrn, rtdbtsp, rtdbtrnsp, skgstartg, snsccgpn, tifgnbl, tiflsbl, tifrdnbl
none— Deletes ALL SAs from the Action Set.

sa1dgts (optional)

Service Action 1 digit string. A digit string that can be used with the first SA.

Range:

1-8 hexadecimal digits. Valid digits are *0-9, a-f, A-F*.
none—Deletes digit string for this SA

sa1va1 (optional)

Service Action 1 numerical values list. A comma-separated numerical values list that can be used with the first SA.

Range:

0 - 65534, none
none—Deletes all numerical values for this SA from list

sa2dgt5 (optional)

Service Action 2 digit string. A digit string that can be used with the second SA.

Range:

1-8 hexadecimal digits. Valid digits are *0-9, a-f, A-F*
none—Deletes digit string for this SA

sa2va1 (optional)

Service action 2 numerical values list. A comma-separated numerical values list that can be used with the second SA.

Range:

0 - 65534, none
none—Deletes all numerical values for this SA from list

sa3dgt5 (optional)

Service Action 3 digit string. A digit string that can be used with the third SA.

Range:

1-8 hexadecimal digits. Valid digits are *0-9, a-f, A-F*
none—Deletes digit string for this SA

sa3va1 (optional)

Service Action 3 numerical values list. A comma-separated numerical values list that can be used with the third SA.

Range:

0 - 65534, none
none—Deletes all numerical values for this SA from list

sa4dgt5 (optional)

Service Action 4 digit string. A digit string that can be used with the fourth SA.

Range:

1-8 hexadecimal digits, *none*
Valid digits are *0-9, a-f, A-F*
none—Deletes digit string for this SA

sa4va1 (optional)

Service Action 4 numerical values list. A comma-separated numerical values list that can be used with the fourth SA.

Range:

0 - 65534, *none*

none—Deletes all numerical values for this SA from list

sa5dgt5 (optional)

Service Action 5 digit string. A digit string that can be used with the fifth SA.

Range:

1-8 hexadecimal digits, *none*

Valid digits are 0-9, a-f, A-F

none—Deletes digit string for this SA

sa5va1 (optional)

Service Action 5 numerical values list. A comma-separated numerical values list that can be used with the fifth SA.

Range:

0 - 65534, *none*

none —Deletes all numerical values for this SA from list

sa6dgt5 (optional)

Service Action 6 digit string. A digit string that can be used with the sixth SA.

Range:

1-8 hexadecimal digits, *none*

Valid digits are 0-9, a-f, A-F

none—Deletes digit string for this SA

sa6va1 (optional)

Service Action 6 numerical values list. A comma-separated numerical values list that can be used with the sixth SA.

Range:

0 - 65534, *none*

none—Deletes all numerical values for this SA from list

sa7dgt5 (optional)

Service Action 7 digit string. A digit string that can be used with the seventh SA.

Range:

1-8 hexadecimal digits, *none*.

Valid digits are 0-9, a-f, A-F

none—Deletes digit string for this SA

sa7va1 (optional)

Service Action 7 numerical values list. A comma-separated numerical values list that can be used with the seventh SA.

Range:

0 - 65534, *none*

none—Deletes all numerical values for this SA from list

sa8dgt5 (optional)

Service Action 8 digit string. A digit string that can be used with the eighth SA.

Range:

1-8 hexadecimal digits, *none*.
Valid digits are 0-9, a-f, A-F
none—Deletes digit string for this SA

sa8val (optional)

Service Action 8 numerical values list. A comma-separated numerical values list that can be used with the eighth SA.

Range:

0 - 65534, *none*
none—Deletes all numerical values for this SA from list

Example

```
chg-npp-as:asn=asn7:ca=ign1,ac1,cc3,sn2:fa=cc,sn,ac
chg-npp-as:asn=asn7:ca=cc1,dn1:fa=cc,dn
chg-npp-as:asn=asn1:ca=znx:fa=asd:sa=cgpnasdrqd
chg-npp-as:asn=asn8:ca=cc2,dnx:fa=cc,rnospodn
chg-npp-as:asn=asn9:sa=migrate,asdlkup
chg-npp-as:asn=asn6:ca=znx:fa=zn:sa=nscdpn,nscgpn
chg-npp-
as:asn=set10:sa=blrls,blnfndrls,nscgpn:sa1val=101,102:sa2val=77,88
chg-npp-as:asn=asn9:ca=znx:sa=inprtgskgstartg
chg-npp-as:asn=set32:ca=ccdef,accgpn2,snx
chg-npp-as:asn=asn1:fa=cc,ac,grn,sn:fatype=fane
chg-npp-as:asn=asn1:fa=none:fatype=fasp
chg-npp-as:asn=tif5557:fa=dlma,zn:fatype=fascrd
chg-npp-
as:asn=tif1:fa=dlma,zn:sa1val=10,none:sa1dgt=ff:fatype=fascrd
chg-npp-as:asn=set1:ca=znx:sa=tifgnbl
```

Dependencies

One of the following combinations of Conditioning Actions must be specified:

- znx
- cc*, dn*
- cc*, ac*, sn*

The existing or new Formatting Actions specified for the AS must contain the corresponding Formatting Action that a Conditioning Action will populate or load.

4898 E4898 Cmd Rej: Minimum Number Conditioning Not Met

The AS must contain a CA that can load or populate all the Formatting Action lists configured in the AS.

4934 E4934 Cmd Rej: Formatting Action Not Loaded

The CAs within an AS cannot condition more than 32 digits.

4960 E4960 Cmd Rej: Conditioning Actions condition too many digits

The AS cannot contain CAs that load or populate the same FA.

4964 E4964 Cmd Rej: Duplicate CAs loading same FA invalid

Conditioning Actions must be specified for inclusion in an individual Action Set using valid number conditioning rules:

- If the ZNX Conditioning Action is specified, then the CC*, AC*, SN*, DN*, and DNX Conditioning Actions cannot be specified.
- If the CC* AND DN* or DNX Conditioning Actions are specified, then the AC*, SN*, SNX, and ZNX Conditioning Actions cannot be specified.
- If the CC*, AC*, AND SN* or SNX Conditioning Actions are specified, then the DN*, DNX, and ZNX Conditioning Actions cannot be specified.

4965 E4965 Cmd Rej: CAs violate number conditioning

The AS cannot contain the following combinations of FAs:

- If the DN Formatting Action is specified, then the AC, SN, and ZN Formatting Actions cannot be specified.
- If the ZN Formatting Action is specified, then the AC, CC, SN, and DN Formatting Actions cannot be specified.
- If the SN Formatting Action is specified, then the ZN and DN Formatting Actions cannot be specified.
- If the RNOSPODN, RNOSPOSN, or RNOSPOZN Formatting Action is specified, then the RN, SP, SN, DN, and ZN Formatting Actions cannot be specified.
- The RNOSPODN, RNOSPOSN, and RNOSPOZN Formatting Actions cannot be specified together.

 **Note:**

This rule is applicable for FA lists FANE, FANF, FARN, and FASP as well.

4968 E4968 Cmd Rej: FAs violate number formatting

If specified, the FPFX CA must be the first value (*fpx*) in the *ca* value list.

4970 E4970 Cmd Rej: FPFX must be first in CA set

If specified, the ZNX, SNX, or DNX CA must be the final value (*znx*, *snx*, or *dnx*) in the *ca* value list.

4971 E4971 Cmd Rej: ZNX/DNX/SNX must be last in CA set

If rules that reference an AS exist, then the AS cannot be changed.

4893 E4893 Cmd Rej: Action Set referenced

The `ca` and `caX`, `fa` and `faX`, and `sa` and `saX` parameters cannot be specified together in the command.

The `fa` parameter must be specified before the `fatype` parameter can be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The AS specified by the `asn` parameter must already exist.

4881 E4881 Cmd Rej: Action Set does not exist

If no Service Actions are provisioned, then only a value of *none* can be specified for the `sa1val` parameter.

5353 E5353 Cmd Rej: SA1VAL requires SA1 to be provisioned

If less than 2 Service Actions are provisioned, then only a value of *none* can be specified for the `sa2val` parameter.

5354 E5354 Cmd Rej: SA2VAL requires SA2 to be provisioned

If less than 3 Service Actions are provisioned, then only a value of *none* can be specified for the `sa3val` parameter.

5355 E5355 Cmd Rej: SA3VAL requires SA3 to be provisioned

If less than 4 Service Actions are provisioned, then only a value of *none* can be specified for the `sa4val` parameter.

5356 E5356 Cmd Rej: SA4VAL requires SA4 to be provisioned

If less than 5 Service Actions are provisioned, then only a value of *none* can be specified for the `sa5val` parameter.

5357 E5357 Cmd Rej: SA5VAL requires SA5 to be provisioned

If less than 6 Service Actions are provisioned, then only a value of *none* can be specified for the `sa6val` parameter.

5358 E5358 Cmd Rej: SA6VAL requires SA6 to be provisioned

If less than 7 Service Actions are provisioned, then only a value of *none* can be specified for the `sa7val` parameter.

5359 E5359 Cmd Rej: SA7VAL requires SA7 to be provisioned

If less than 8 Service Actions are provisioned, then only a value of *none* can be specified for the `sa8val` parameter.

5360 E5360 Cmd Rej: SA8VAL requires SA8 to be provisioned

If no Service Actions are provisioned, then only a value of *none* can be specified for the `sa1dgts` parameter.

5361 E5361 Cmd Rej: SA1DGTS requires SA1 to be provisioned

If less than 2 Service Actions are provisioned, then only a value of *none* can be specified for the `sa2dgts` parameter.

5362 E5362 Cmd Rej: SA2DGTS requires SA2 to be provisioned

If less than 3 Service Actions are provisioned, then only a value of *none* can be specified for the `sa3dgt`s parameter.

5363 E5363 Cmd Rej: SA3DGTS requires SA3 to be provisioned

If less than 4 Service Actions are provisioned, then only a value of *none* can be specified for the `sa4dgt`s parameter.

5364 E5364 Cmd Rej: SA4DGTS requires SA4 to be provisioned

If less than 5 Service Actions are provisioned, then only a value of *none* can be specified for the `sa5dgt`s parameter.

5365 E5365 Cmd Rej: SA5DGTS requires SA5 to be provisioned

If less than 6 Service Actions are provisioned, then only a value of *none* can be specified for the `sa6dgt`s parameter.

5366 E5366 Cmd Rej: SA6DGTS requires SA6 to be provisioned

If less than 7 Service Actions are provisioned, then only a value of *none* can be specified for the `sa7dgt`s parameter.

5367 E5367 Cmd Rej: SA7DGTS requires SA7 to be provisioned

If less than 8 Service Actions are provisioned, then only a value of *none* can be specified for the `sa8dgt`s parameter.

5368 E5368 Cmd Rej: SA8DGTS requires SA8 to be provisioned

Notes

None.

Output

```
chg-npp-as:asn=asn7:ca=ccl,dn1:fa=cc,dn
```

```
tekelecstp 09-08-18 13:57:06 EST EAGLE 41.1.0  
NPP-AS table is (5 of 1024) 1% full.
```

```
CHG-NPP-AS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [ent-npp-as](#)
- [dlt-npp-as](#)
- [rtrv-npp-as](#)

4.1.108 chg-npp-serv

Use this command to change a Numbering Plan Processor (NPP) service entry. An NPP service is any EAGLE feature that uses the NPP to assist with the processing of digit strings.

 **Note:**

This command can be used to enter values for the `dlma - dlmc` parameters. However, if these parameters have a value other than *none* in the `tifopts:dlma - dlmc` or `ttropts:dlma - dlmc` commands, then those values will overwrite the values that were entered for the parameters using the `chg-npp-serv` command for the TIF and IDPR services, respectively.

 **Note:**

- The `intl`, `nat1`, `nai1`, `nai2`, `nai3`, and `unkn` parameters are used to change the FNAI class to NAI mappings for a service.
- A value of *incoming* must be specified for the `ttropts:snai` parameter before the `intl`, `nat1`, `nai1`, `nai2`, `nai3`, and `unkn` parameters can be changed to non-default values for the IDPRCDPN(X) service.
- A value of *incoming* must be specified for the `ttropts:cgsnai` parameter before the `intl`, `nat1`, `nai1`, `nai2`, `nai3`, and `unkn` parameters can be changed to non-default values for the IDPRCGPN service.
- A value of *nai* must be specified for the `is41smsopts:mosmsnai` parameter before the `intl`, `nat1`, `nai1`, `nai2`, `nai3`, and `unkn` parameters can be changed to non-default values for the MOSMSICDPN service.
- A value of *nai* must be specified for the `gsmmsopts:mosmsnai` parameter before the `intl`, `nat1`, `nai1`, `nai2`, `nai3`, and `unkn` parameters can be changed to non-default values for the MOSMSGCDPN service.

Parameters

srvn (mandatory)

Service name. The name of the NPP Service.

Range:

nppt

NPP Test Service

idprcdpn

IDPRCDPN Service

idprcgpn

IDPRCGPN Service

tif

TIF Service

tif2

TIF2 Service

tif3

TIF3 Service

mosmsicgpn

MOSMSICGPN Service

mosmsicdpn

MOSMSICDPN Service

mosmsgcgpn

MOSMSGCGPN Service

mosmsgcdpn

MOSMSGCDPN Service

iarcdpn

IARCDPN Service

iarcgpn

IARCGPN Service

idprcdpn2

IDPRCDPN2 Service

idprcdpn3

IDPRCDPN3 Service

idprcdpn4

IDPRCDPN4 Service

tifcgpn

TIFCGPN Service

tifcgpn2

TIFCGPN2 Service

tifcgpn3

TIFCGPN3 Service

d1ma (optional)

A delimiter that is used to format the outgoing dialed number.

Range:

1-16 digits, *none*

1-16 hexadecimal digits. Valid digits are *0-9, a-f, A-F*

none—deletes the current value of the delimiter

Default:

none

d1mb (optional)

A delimiter that is used to format the outgoing dialed number.

Range:

1-16 digits, *none*

1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none—deletes the current value of the delimiter

Default:

none

d1mc (optional)

A delimiter that is used to format the outgoing dialed number.

Range:

1-16 digits, *none*

1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none—deletes the current value of the delimiter

Default:

none

d1md (optional)

A delimiter that is used to format the outgoing dialed number.

Range:

1-16 digits, *none*

1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none—deletes the current value of the delimiter

Default:

none

d1me (optional)

This parameter specifies a delimiter that is used to format the outgoing dialed number.

Range:

1-16 digits, *none*

1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none—deletes the current value of the delimiter

Default:

none

d1mf (optional)

A delimiter used to format the outgoing dialed number.

Range:

1-16 digits, *none*

1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none—deletes the current value of the delimiter

Default:

none

d1mg (optional)

A delimiter used to format the outgoing dialed number.

Range:

1-16 digits, *none*

1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none—deletes the current value of the delimiter

Default:
none

d1mh (optional)

A delimiter used to format the outgoing dialed number.

Range:
1-16 digits, *none*
1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none—deletes the current value of the delimiter

Default:
none

d1mi (optional)

A delimiter used to format the outgoing dialed number.

Range:
1-16 digits, *none*
1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none—deletes the current value of the delimiter

Default:
none

d1mj (optional)

A delimiter used to format the outgoing dialed number.

Range:
1-16 digits, *none*
1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none —deletes the current value of the delimiter

Default:
none

d1mk (optional)

A delimiter used to format the outgoing dialed number.

Range:
1 - 16, none
1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none —deletes the current value of the delimiter

Default:
none

d1ml (optional)

A delimiter used to format the outgoing dialed number.

Range:
1-16 digits, *none*

1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none —deletes the current value of the delimiter

Default:

none

d1mm (optional)

A delimiter used to format the outgoing dialed number.

Range:

1-16 digits, *none*

1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none —deletes the current value of the delimiter

Default:

none

d1mn (optional)

A delimiter used to format the outgoing dialed number.

Range:

1-16 digits, *none*

1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none—deletes the current value of the delimiter

Default:

none

d1mo (optional)

A delimiter used to format the outgoing dialed number.

Range:

1-16 digits, *none*

1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none—deletes the current value of the delimiter

Default:

none

d1mp (optional)

A delimiter used to format the outgoing dialed number.

Range:

1-16 digits, *none*

1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F
none —deletes the current value of the delimiter

Default:

none

intl (optional)

International. This parameter maps an International FNAI class to the NAI of the incoming digit string.

Range:

0 - 255, none

none—A rule with an FNAI or OFNAI of *intl* cannot be provisioned

Default:

No change to the current value

System Default:

1 —IARCDPN, IARCGPN services and all MOSMS services

4 —NPPT, TIF, TIF2, TIF3, IDPRCDPN, IDPRCDPN2, IDPRCDPN3, IDPRCDPN4 and IDPRCGPN services

nai1 (optional)

This parameter maps an NAI-1 FNAI class to the NAI of the incoming digit string.

Range:

0 - 255, none

none—A rule with an FNAI or OFNAI of *nai1* cannot be provisioned

Default:

No change to the current value

System Default:

none

nai2 (optional)

This parameter maps an NAI-2 FNAI class to the NAI of the incoming digit string.

Range:

0 - 255, none

none—A rule with an FNAI or OFNAI of *nai2* cannot be provisioned

Default:

No change to the current value

System Default:

none

nai3 (optional)

This parameter maps an NAI-3 FNAI class to the NAI of the incoming digit string.

Range:

0 - 255, none

none—A rule with an FNAI or OFNAI of *nai3* cannot be provisioned

Default:

No change to the current value

System Default:

none

nat1 (optional)

This parameter maps a National FNAI class to the NAI of the incoming digit string.

Range:

0 - 255, none

none—A rule with an FNAI or OFNAI of *natl* cannot be provisioned

Default:

No change to the current value

System Default:

0

IARCDPN, IARCGPN, MOSMSICDPN and MOSMSICGPN services

System Default:

2—MOSMSGCDPN and MOSMSGCGPN services

3—NPPT, TIF, TIF2, TIF3, IDPRCDPN, IDPRCDPN2, IDPRCDPN3, IDPRCDPN4, and IDPRCGPN services

status (optional)

This parameter specifies whether the service can be processed by the NPP.

Range:***off***

The service cannot be processed by the NPP.

on

The service can be processed by the NPP.

The `status=on` parameter must be specified before a service can be processed by the NPP.

Default:

off

unkn (optional)

This parameter maps an Unknown FNAI class to the NAI of the incoming digit string.

Range:

0 - 255

Default:

No change to the current value

System Default:

0—NPPT, TIF, TIF2, TIF3, IDPRCDPN, IDPRCDPN2, IDPRCDPN3, IDPRCDPN4, IDPRCGPN, MOSMSGCDPN and MOSMSGCGPN services

2—IARCDPN, IARCGPN, MOSMSICDPN and MOSMSICGPN services

Example

```
chg-npp-serv:svn=nppt:status=on
```

```
chg-npp-serv:svn=nppt:status=on:nai3=6:intl=15:natl=50
```

```
chg-npp-serv:svn=nppt:status=on:nai3=6:intl=15
```

```
chg-npp-serv:svn=tif:dlma=1234567890abcdef:
```

```
dlmb=aaaaabbbbcccccd:dlmc=102030405
```

Dependencies

The service specified by the `srvn` parameter must have associated rules before the `status=on` parameter can be specified.

4935 E4935 Cmd Rej: Service Must Have Rules to Turn On

If the service specified by the `srvn` parameter references any NPP rules, then the `intl`, `nat1`, `nai1`, `nai2`, and `nai3` parameters cannot have a value of `none`.

4936 E4936 Cmd Rej: Cannot Modify Service with Rules Provisioned

Output

```
chg-npp-serv:srvn=nppt:status=on:nai3=6:intl=15:nat1=50
```

```
tekelecstp 08-05-17 15:55:35 EAGLE 39.0.0
chg-npp-serv:srvn=nppt:status=on:nai3=6:intl=15:nat1=50
CHG-NPP-SERV: MASP A - COMPLTD
;
```

Related Topics

- [chg-npp-srs](#)
- [dlt-npp-srs](#)
- [ent-npp-srs](#)
- [rtv-npp-serv](#)
- [rtv-npp-srs](#)

4.1.109 chg-npp-srs

Use this command to change the Action Set (AS) that is associated with a Numbering Plan Processor (NPP) Rule. An NPP Rule is an association between a single NPP filter and an AS.



Note:

The contents of the AS are configured using the `ent/chg-npp-as` commands.

Parameters

fd1 (mandatory)

Filter digit length. The number of digits on the incoming digit string that is filtered by the NPP.

Range:

1 - 32, *

*—multiple lengths of digit strings can be filtered

fnai (mandatory)

Filter nature of address indicator. The filter Nature of Address Indicator (NAI) class.

Range:***intl***

filter messages with NAI=INTL

natl

filter messages with NAI=NATL

nai1

filter messages with NAI=NAI1

nai2

filter messages with NAI=NAI2

nai3

filter messages with NAI=NAI3

unkn

filter messages with NAI=UNKN

**Note:**

The `chg-npp-serv` command is used to assign values to the various FNAI classes.

fpfx (mandatory)

Filter prefix. The prefix used to filter incoming digit strings.

Range:

1 - 16, *, ?

1 - 16 hexadecimal digits inclusive of single digit wildcard (?); or wildcard (*) matching the entire digit string; valid digits are ?, *, 0-9, a-f, A-F.

srvn (mandatory)

The name of the NPP Service.

Range:***nppt***

NPP Test Service

idprcdpn

IDPRCDPN Service

idprcgpn

IDPRCGPN Service

tif

TIF Service

tif2

TIF2 Service

tif3

TIF3 Service

mosmsicgpn

MOSMSICGPN Service

mosmsicdpn

MOSMSICDPN Service

mosmsgcgpn

MOSMSGCGPN Service

mosmsgcdpn

MOSMSGCDPN Service

iarcdpn

IARCDPN Service

iarcgpn

IARCGPN Service

idprcdpn2

IDPRCDPN2 Service

idprcdpn3

IDPRCDPN3 Service

idprcdpn4

IDPRCDPN4 Service

tifcgpn

TIFCGPN Service

tifcgpn2

TIFCGPN2 Service

tifcgpn3

TIFCGPN3 Service

asn (optional)

Action set name.

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Default:

No change to the current value

invkserv (optional)

Invoke service name. The name of the NPP service to be invoked.

 **Note:**

As of Release 44.0, only the *tifcgpn*, *tifcgpn2*, *tifcgpn3*, and *none* values are supported.

Range:

nppt

NPP Test Service

idprcdpn

IDPRCDPN Service

idprcgpn

IDPRCGPN Service

tif

TIF Service

tif2

TIF2 Service

tif3

TIF3 Service

mosmsicgpn

MOSMSICGPN Service

mosmsicdpn

MOSMSICDPN Service

mosmsgcgpn

MOSMSGCGPN Service

mosmsgcdpn

MOSMSGCDPN Service

iarcdpn

IARCDPN Service

iarcgpn

IARCGPN Service

idprcdpn2

IDPRCDPN2 Service

idprcdpn3

IDPRCDPN3 Service

idprcdpn4

IDPRCDPN4

tifcgpn

TIFCGPN

tifcgp2
TIFCGPN2

tifcgp3
TIFCGPN3

none
no additional NPP services are invoked

Default:
No change to the current value

System Default:
none

Example

```
chg-npp-srs:svn=nppt:fpfx=a:fdl=16:fnai=intl:asn=asn3
```

```
chg-npp-  
srs:svn=tif:fnai=intl:fpfx=9090:fdl=*:asn=set1:invkserv=tifcgp  
n
```

```
chg-npp-srs:svn=idprcdpn4:fpfx=91:fnai=intl:asn=asn9:fdl=12
```

Dependencies

The AS specified by the `asn` parameter must already exist in the NPP AS table.

4881 E4881 Cmd Rej: Action Set does not exist

The AS specified by the `asn` parameter cannot contain Conditioning Actions that are not supported by the service specified by the `svn` parameter.

4882 E4882 Cmd Rej: Rule contains unsupported Conditioning Actions

The AS specified by the `asn` parameter cannot contain Service Actions that are not supported by the service specified by the `svn` parameter.

4883 E4883 Cmd Rej: Rule contains unsupported Service Actions

The AS specified by the `asn` parameter cannot contain Formatting Actions that are not supported by the service specified by the `svn` parameter.

4884 E4884 Cmd Rej: Rule contains unsupported Formatting Actions

The AS specified by the `asn` parameter cannot contain Service Actions that do not conform to the precedence order that is supported by the service specified by the `svn` parameter.

4885 E4885 Cmd Rej: Rule violates Service Action precedence

The Conditioning Actions in the AS specified by the `asn` parameter cannot condition more digits than allowed by the `fdl` parameter.

4886 E4886 Cmd Rej: Rule conditions too many digits

If the `fdl=*` parameter is specified, then the AS specified by the `asn` parameter must contain Conditioning Actions that support variable digit string conditioning.

4887 E4887 Cmd Rej: Rule does not condition a variable length digit string

The NPP Rule that is specified by the `fdl`, `fnai`, `fpfx`, and `srvn` parameters must already exist in the NPP Rule table.

4891 E4891 Cmd Rej: Rule does not exist

All of the features associated with the Service Actions in the AS specified by the `asn` parameter must be turned on before the AS can be used.

4808 E4808 Cmd Rej: Service Action(s) require an MPS dependent feature to be ON

The Service Actions in the AS specified by the `asn` parameter cannot violate mutual exclusivity rules defined by the service specified by the `srvn` parameter. Refer to the Feature Manual for the feature of interest for additional information.

4823 E4823 SAs specified are mutually exclusive

The AS specified by the `asn` parameter cannot contain an OFNAI class with a value of *none*.

4868 E4868 Cmd Rej: action set contains OFNAI value not defined by service

At least one TIF feature must be turned on before an AS containing the CDIAL Service Action can be specified as a value for the `asn` parameter.

4977 E4977 Cmd Rej: At least one TIF feature must be ON

The TIF SCS Forwarding feature must be turned on before an AS containing the FWDSCS Service Action can be specified as a value for the `asn` parameter.

4988 E4988 Cmd Rej: TIF SCS Forwarding feature must be ON

The TIF Simple Number Substitution feature must be turned on before an AS containing the SNSCGPN Service Action can be specified as a value for the `asn` parameter.

4989 E4989 Cmd Rej: TIF Simple Number Substitution feature must be ON

The TIF Number Portability feature must be turned on before an AS containing the CRP, NPNRLS, CGPNNPRQD, NPRELAY, or NPRLS Service Action can be specified as a value for the `asn` parameter.

4994 E4994 Cmd Rej: TIF Number Portability feature must be ON

The IDPR ASD feature must be enabled before an AS containing the ASDLKUP or CGPNASDRQD Service Action can be specified as a value for the `asn` parameter with the IDPRCDPN(X) or IDPRCGPN service.

5022 E5022 Cmd Rej: IDPR ASD feature must be enabled

The IDPR GRN feature must be enabled before an AS containing the GRNLKUP or CGPNGRNRQD Service Action can be specified as a value for the `asn` parameter with the IDPRCDPN(X) or IDPRCGPN service.

5023 E5023 Cmd Rej: IDPR GRN feature must be enabled

An AS containing the ASDLKUP and CGPNASDRQD Service Actions cannot be specified as a value for the `asn` parameter.

5026 E5026 Cmd Rej: ASDLKUP and CGPNASDRQD SAs are mutually exclusive

An AS containing the GRNLKUP and CGPNGRNRQD Service Actions cannot be specified as a value for the `asn` parameter.

5027 E5027 Cmd Rej: GRNLKUP and CGPNGRNRQD SAs are mutually exclusive

If a value of *tif*, *tif2*, or *tif3* is specified for the `servn` parameter, then the TIF ASD feature must be enabled before an AS containing the ASDLKUP or CGPNASDRQD Service Action can be specified as value for the `asn` parameter.

5020 E5020 Cmd Rej: TIF ASD feature must be enabled

The TIF GRN feature must be enabled before an AS containing the GRNLKUP or CGPNGRNRQD Service Actions can be specified as a value for the `asn` parameter with the TIF services.

5021 E5021 Cmd Rej: TIF GRN feature must be enabled

If a value of *mosmsgcdpn*, *mosmsgcgpn*, *mosmsicdpn*, or *mosmsicgpn* is specified for the `servn` parameter, then the MO SMS ASD feature must be enabled before an AS containing the ASDLKUP or CGPNASDRQD Service Action can be specified as a value for the `asn` parameter.

5030 E5030 Cmd Rej: MO SMS ASD Feature must be enabled

If a value of *mosmsgcdpn*, *mosmsgcgpn*, *mosmsicdpn*, or *mosmsicgpn* is specified for the `servn` parameter, then the MO SMS GRN feature must be enabled before an AS containing the CGPNGRNRQD or GRNLKUP Service Action can be specified as a value for the `asn` parameter.

5031 E5031 Cmd Rej: MO SMS GRN Feature must be enabled

If a rule contains an FPFX with a wildcard value, then the rule cannot also contain an AS where the FPFX Conditioning Action is specified.

4941 E4941 Cmd Rej: Rule with FPFX=* value cannot have AS with CA(x)=FPFX

The TIF Number Substitution feature must be enabled before an AS containing the NSCGPN or NSCDPN Service Action can be specified as a value for the `asn` parameter.

5091 E5091 Cmd Rej: TIF Number Substitution feature must be Enabled

The AS specified by the `asn` parameter cannot contain both the NSCGPN and SNSCGPN Service Actions.

5092 E5092 Cmd Rej: NSCgPN and SNSCgPN SAs are mutually exclusive

If a value of *mosmsgcdpn* or *mosmsgcgpn* is specified for the `servn` parameter, then the Prepaid SMS Intercept Ph1 feature must be enabled before an AS containing the PPRELAY Service Action can be specified as a value for the `asn` parameter.

3474 E3474 Cmd Rej: Prepaid SMS Intercept Ph1 feature must be enabled

If the `servn=mosmsgcgpn` parameter is specified, then the Portability Check for MO SMS feature must be enabled before an AS containing the FRAUDCHK Service Action can be specified as a value for the `asn` parameter.

3479 E3479 Cmd Rej: Port Check for MO SMS feature must be enabled

If the `servn=mosmsicdpn` parameter is specified, then the MO SMS IS41-to-GSM Migration feature must be enabled before an AS containing the MIGRATE Service Action can be specified as a value for the `asn` parameter.

4957 E4957 Cmd Rej: MO SMS IS41-to-GSM Migration feature must be enabled

If the `servn=mosmsicdpn` parameter is specified, then the MO-based IS41 SMS NP feature must be enabled before an AS containing the CDPNNP Service Action can be specified as a value for the `asn` parameter.

5115 E5115 Cmd Rej: MO-based IS41 SMS NP must be enabled

If the `servn=mosmsgcdpn` parameter is specified, then the MO-based GSM SMS NP feature must be enabled before an AS containing the CDPNNP Service Action can be specified as a value for the `asn` parameter.

5116 E5116 Cmd Rej: MO-based GSM SMS NP must be enabled

The IDP A-Party Routing feature must be enabled before the AS specified by the `asn` parameter can contain the CGPNRTG Service Action.

4734 E4734 Cmd Rej: IDP A-Party Routing feature must be enabled

The IDP A-Party Blacklist feature must be enabled before the AS specified by the `asn` parameter can contain the BLKLSTQRY or BLKLSTRLY Service Action.

4737 E4737 Cmd Rej: IDP A-Party Blacklist feature must be enabled

If the AS specified by the `asn` parameter contains the BLKLSTQRY Service Action, then the AS cannot contain any other Service Actions.

4738 E4738 Cmd Rej: BLKLSTQRY and BLKLSTRLY SAs are mutually exclusive

If the `srvn=idprcdpn(X)` parameter is specified, then the Action Set specified by the `asn` parameter cannot contain both the ACCGPN* and CCCGPN Conditioning Actions.

4736 E4736 Cmd Rej: ACCgPN(X) and CCCgPN CAs are mutually exclusive

If a value of `iarcdpn` or `iarcgpn` is specified for the `servn` parameter, then the IAR Base feature must be enabled before an AS containing the CCNCCHK, CDIAL, or CPGNSRVRQQD Service Action can be specified as a value for the `asn` parameter.

5150 E5150 Cmd Rej: Info Analyzed Relay Base feature must be enabled

If a value of `iarcdpn` or `iarcgpn` is specified for the `servn` parameter, then the IAR NP feature must be enabled before an AS containing the CDPNNP or CGPNNP Service Action can be specified as a value for the `asn` parameter.

5152 E5152 Cmd Rej: Info Analyzed Relay NP feature must be enabled

If a value of `iarcdpn` or `iarcgpn` is specified for the `servn` parameter, then the IAR ASD feature must be enabled before an AS containing the ASDLKUP or CGPNASDRQD Service Action can be specified as a value for the `asn` parameter.

5153 E5153 Cmd Rej: Info Analyzed Relay ASD feature must be enabled

If a value of `iarcdpn` or `iarcgpn` is specified for the `servn` parameter, then the IAR GRN feature must be enabled before an AS containing the GRNLKUP or CGPNGRNRQD Service Action can be specified as a value for the `asn` parameter.

5154 E5154 Cmd Rej: Info Analyzed Relay GRN feature must be enabled

If the NPP Service specified by the `srvn` parameter does not support invoking another NPP Service, then only a value of `none` can be specified for the `invkserv` parameter.

5320 E5320 Cmd Rej: INVKSERV value must be NONE for specified SRVN value

If the NPP Service specified by the `srvn` parameter can invoke the TIFCGPN NPP Service, then only a value of `tifcgn` or `none` can be specified for the `invkserv` parameter.

5321 E5321 Cmd Rej: INVKSERV value must be NONE or TIFCGPN

If the NPP Service specified by the `srvn` parameter can invoke the TIFCGPN3 NPP Service, then only a value of `tifcgn3` or `none` can be specified for the `invkserv` parameter.

5323 E5323 Cmd Rej: INVKSERV value must be NONE or TIFCGPN3

If the AS specified by the `asn` parameter contains the ASDOTHER or GRNOTHER Formatting Action, then the `invkserv=none` parameter cannot be specified.

5324 E5324 Cmd Rej: FAs ASDOTHER and GRNOTHER require INVKSERV not equal to NONE

If the AS specified by the `asn` parameter contains the CGPNASDRQD, CGPNGRNQD, CGPNSVCRQD, NSCGPN, or SNSCGPN Service Action, then only a value of `none` can be specified for the `invkserv` parameter.

5325 E5325 Cmd Rej: Action Set with CgPN SAs require Rule INVKSERV equal to NONE

The TIF Range CgPN Blacklist feature must be enabled before:

- an AS containing the NOCGPNRLS Service Action can be specified as a value for the `asn` parameter and a value of `tif`, `tif2`, or `tif3` can be specified for the `srvn` parameter
- an AS containing the FPFXRLS Service Action can be specified as a value for the `asn` parameter and a value of `tifcgn`, `tifcgn2`, or `tifcgn3` can be specified for the `srvn` parameter

5326 E5326 Cmd Rej: TIF Range CgPN Blacklist feature must be enabled

If the AS specified by the `asn` parameter contains the FPFXRLS Service Action, then no other Service Action can be specified in the AS.

5327 E5327 Cmd Rej: SA FPFXRLS is mutually exclusive with all other SAs

If the AS specified by the `asn` parameter contains the FPFXRLS Service Action, then the AS must also contain a numerical values list with 2 numerical values.

5328 E5328 Cmd Rej: SA FPFXRLS requires 2 SA(X)VAL values

If the AS specified by the `asn` parameter contains the TIFLSBL Service Action, then the AS must also contain a numerical values list with 2 numerical values.

3684 E3684 Cmd Rej: SA TIFLSBL requires 2 SA(X)VAL values

If the AS specified by the `asn` parameter contains the TIFGNBL Service Action, then the AS must also contain a numerical values list with 2 numerical values.

3692 E3692 Cmd Rej: SA TIFGNBL requires 2 SA(X)VAL values

If the AS specified by the `asn` parameter contains the FPFXRLS Service Action, then the 2 numerical values specified by the numerical values list must each be between 0-127.

5329 E5329 Cmd Rej: SA FPFXRLS SA(X)VAL values must be between 0-127

If the AS specified by the `asn` parameter contains the TIFLSBL Service Action, then the 2 numerical values specified by the numerical values list must each be between 0-127.

3696 E3696 Cmd Rej: SA TIFLSBL SA(X)VAL values must be between 0-127

If the AS specified by the `asn` parameter contains the TIFGNBL Service Action, then the 2 numerical values specified by the numerical values list must each be between 0-127.

3700 E3700 Cmd Rej: SA TIFGNBL SA(X)VAL values must be between 0-127

If the AS specified by the `asn` parameter contains the NOCGPNRLS Service Action, then the AS must also contain a numerical values list with 2 numerical values.

5330 E5330 Cmd Rej: SA NOCGPNRLS requires 2 SA(X)VAL values

If the AS specified by the `asn` parameter contains the NOCGPNRLS Service Action, then the 2 numerical values specified by the numerical values list must each be between 0-127.

5331 E5331 Cmd Rej: SA NOCGPNRLS SA(X)VAL values must be between 0-127

The TIF Subscr CgPN Blacklist feature must be enabled before an AS containing the BLRLS or BLNFNDRLS Service Action can be specified as a value for the `asn` parameter, and a value of `tifcgn`, `tifcgn2`, or `tifcgn3` can be specified as a value for the `srvn` parameter.

5332 E5332 Cmd Rej: TIF Subscr CgPN Blacklist feature must be enabled

If the AS specified by the `asn` parameter contains the BLRLS Service Action, then the AS must also contain a numerical values list with 2 numerical values.

5333 E5333 Cmd Rej: SA BLRLS requires 2 SA(X)VAL values

If the AS specified by the `asn` parameter contains the BLRLS Service Action, then the 2 numerical values specified by the numerical values list must each be between 0-127.

5334 E5334 Cmd Rej: SA BLRLS SA(X)VAL values must be between 0-127

If the AS specified by the `asn` parameter contains the BLNFNDRLS Service Action, then the AS must also contain a numerical values list with 2 numerical values.

5335 E5335 Cmd Rej: SA BLNFNDRLS requires 2 SA(X)VAL values

If the AS specified by the `asn` parameter contains the BLNFNDRLS Service Action, then the 2 numerical values specified by the numerical values list must each be between 0-127.

5336 E5336 Cmd Rej: SA BLNFNDRLS SA(X)VAL values must be between 0-127

If the Service specified by the `srvn` parameter does not support a numerical value list for the first Service Action in the AS specified by the `asn` parameter, then the `sa1val` parameter in the AS can only have a value of *none*.

5337 E5337 Cmd Rej: SA1 does not support SA1VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a numerical value list for the second Service Action in the AS specified by the `asn` parameter, then the `sa2val` parameter in the AS can only have a value of *none*.

5338 E5338 Cmd Rej: SA2 does not support SA2VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a numerical value list for the third Service Action in the AS specified by the `asn` parameter, then the `sa3val` parameter in the AS can only have a value of *none*.

5339 E5339 Cmd Rej: SA3 does not support SA3VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a numerical value list for the fourth Service Action in the AS specified by the `asn` parameter, then the `sa4val` parameter in the AS can only have a value of *none*.

5340 E5340 Cmd Rej: SA4 does not support SA4VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a numerical value list for the fifth Service Action in the AS specified by the `asn` parameter, then the `sa5val` parameter in the AS can only have a value of *none*.

5341 E5341 Cmd Rej: SA5 does not support SA5VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a numerical value list for the sixth Service Action in the AS specified by the `asn` parameter, then the `sa6val` parameter in the AS can only have a value of *none*.

5342 E5342 Cmd Rej: SA6 does not support SA6VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a numerical value list for the seventh Service Action in the AS specified by the `asn` parameter, then the `sa7val` parameter in the AS can only have a value of *none*.

5343 E5343 Cmd Rej: SA7 does not support SA7VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a numerical value list for the eighth Service Action in the AS specified by the `asn` parameter, then the `sa8val` parameter in the AS can only have a value of *none*.

5344 E5344 Cmd Rej: SA8 does not support SA8VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the first Service Action in the AS specified by the `asn` parameter, then the `sa1dgts` parameter in the AS can only have a value of *none*.

5345 E5345 Cmd Rej: SA1 does not support SA1DGTS for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the second Service Action in the AS specified by the `asn` parameter, then the `sa2dgts` parameter in the AS can only have a value of *none*.

5346 E5346 Cmd Rej: SA2 does not support SA2DGTS for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the third Service Action in the AS specified by the `asn` parameter, then the `sa3dgts` parameter in the AS can only have a value of *none*.

5347 E5347 Cmd Rej: SA3 does not support SA3DGTS for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the fourth Service Action in the AS specified by the `asn` parameter, then the `sa4dgts` parameter in the AS can only have a value of *none*.

5348 E5348 Cmd Rej: SA4 does not support SA4DGTS for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the fifth Service Action in the AS specified by the `asn` parameter, then the `sa5dgts` parameter in the AS can only have a value of *none*.

5349 E5349 Cmd Rej: SA5 does not support SA5DGTS for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the sixth Service Action in the AS specified by the `asn` parameter, then the `sa6dgts` parameter in the AS can only have a value of *none*.

5350 E5350 Cmd Rej: SA6 does not support SA6DGTS for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the seventh Service Action in the AS specified by the `asn` parameter, then the `sa7dgts` parameter in the AS can only have a value of *none*.

5351 E5351 Cmd Rej: SA7 does not support SA7DGTS for specified SRVN value

If the NPP Service specified by the `srvn` parameter can invoke the TIFCGPN2 NPP Service, then only a value of *tifcgpn2* or *none* can be specified for the `invkserv` parameter.

5322 E5322 Cmd Rej: INVKSERV value must be NONE or TIFCGPN2

If the Service specified by the `srvn` parameter does not support a digit string for the eighth Service Action in the AS specified by the `asn` parameter, then the `sa8dgts` parameter in the AS can only have a value of *none*.

5352 E5352 Cmd Rej: SA8 does not support SA8DGTS for specified SRVN value

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

A new value must be specified for the `asn` or `invkserv` parameter.

3523 E3523 Cmd Rej: At least one parameter must be changed

The TIF Selective Screening feature must be enabled before an AS containing the SELSCR, FPFXRLS, BLRLS, or BLNFNDRLS Service Action can be specified as a value for the `asn` parameter, and a value of *tif*, *tif2*, or *tif3* can be specified as a value for the `srvn` parameter.

2330 E2330 Cmd Rej: TIF Selective Screening feature must be enabled

If the AS specified by the `asn` parameter contains the SELSCR Service Action, then no TIF Number Substitution (NSCGPN or NSCDPN) Service Action can be specified in the AS.

2352 E2352 Cmd Rej: SA SELSCR is mutually exclusive with TIF NS SAs

If the AS specified by the `asn` parameter contains the SELSCR Service Action, then the 2 numerical values specified by the numerical values list must each be between 0-127 or *none*.

2363 E2363 Cmd Rej: SA SELSCR SA(X)VAL values must be *none* or between 0-127.

Only one call type can be specified for the SELSCR Service Action in the TIF NPP service rule. If the AS specified by the `asn` parameter contains the SELSCR Service Action, the corresponding SA Digit String specified must be between *none* or 1-FF.

2591 E2591 Cmd Rej: SA SELSCR SA(X)DGTS value must be *none* or between 1-FF.

The CGPNSVCRQD and NPNRLS Service Actions cannot exist within the same Action Set.

4987 E4987 Cmd Rej: Service actions CgpnSvcRqd and NPRLS are mutually exclusive

SUBCDPN must be configured in TIFOPTS in order to apply TIFRDNBL SA.

3639 E3639 Cmd Rej: SUBCDPN should be configured in TIFOPTS for TIFRDNBL SA.

ASD related SAs cannot be configured in same srs.

E5026 Cmd Rej: ASDLKUP,CGPNASDRQD and TIFRDNBL are mutually exclusive.

Notes

None.

Output

```
chg-npp-srs:svrn=tif:fnai=intl:fpfx=9090:fdl=*:asn=set1
```

```
tekelecstp 09-04-05 15:45:28 EST EAGLE 41.0.0
NPP-SRS table is (1 of 8192) 1% full.
CHG-NPP-SRS: MASP A - COMPLTD
;
```

Related Topics

- [chg-npp-as](#)
- [dlt-npp-srs](#)
- [ent-npp-as](#)
- [ent-npp-srs](#)
- [rtrv-npp-as](#)
- [rtrv-npp-srs](#)

4.1.110 chg-pid

Use this command to change your password.

When this command is executed, you are prompted to enter your current password. This prevents anyone but you from changing your password.

Parameters

This command has no parameters.

Example

```
chg-pid
```

Dependencies

This command cannot be entered from a terminal that is configured as an OAP terminal.

2723 E2723 Cmd Rej: Password operations not allowed on a non-secure terminal

The password can contain up to 20 characters.

2262 E2262 Cmd Rej: Password too long, 20 maximum

The password must contain at least the number of characters specified by the `minlen` parameter in the `chg-secu-dflt` command.

2263 E2263 Cmd Rej: Password does not contain enough characters

The password must contain at least the number of alphabetic characters specified by the `alpha` parameter in the `chg-secu-dflt` command.

2753 E2753 Cmd Rej: Password does not contain enough alphabetic characters

The password must contain at least the number of numeric characters specified by the `num` parameter in the `chg-secu-dflt` command.

2754 E2754 Cmd Rej: Password does not contain enough numeric characters

The password must contain at least the number of punctuation characters specified by the `punc` parameter in the `chg-secu-dflt` command.

2755 E2755 Cmd Rej: Password does not contain enough punctuation characters

The password cannot contain the associated User ID.

2761 E2761 Cmd Rej: Password cannot contain userID

The number of days specified by the `minintrvl` parameter in the `chg-secu-dflt` command must pass between password changes.

5190 E5190 Cmd Rej: Password change denied, too soon since last change

The password must contain fewer duplicate characters from the existing password than the number specified by the `pchreuse` parameter in the `chg-secu-dflt` command.

5191 E5191 Cmd Rej: Password has too many character matches with old password

The password cannot be the same as a previous password if the limit in the password history, specified by the `preuse` parameter of the `chg-secu-dflt` command, has been reached.

5192 E5192 Cmd Rej: Password matches a previous password

The current password cannot be entered as the new password.

5246 E5246 Cmd Rej: New password matches old password

The OA&M IP Security Enhancements feature must be turned on before passwords can be created or modified from a telnet terminal (terminal IDs 17-40).

2723 E2723 Cmd Rej: Password operations not allowed on a non-secure terminal

The value entered for password verification must match the value entered for the password.

2264 E2264 Cmd Rej: Password verification failed

Notes

When a new system is shipped, both the user ID and password are set to the system. Change these immediately to ensure system security.

MTT 2889 was deleted for 42.0, PR 158511.

Output

chg-pid

```
rlghncxa03w 10-03-07 09:10:41 EST EAGLE 42.0.0
```

```
CHG-PID: MASP A - COMPLTD
```

;

```
Enter Old Password : <old password> Enter New Password : <new
password>
```

If secu-dflt parameter preuse is non zero and pchreuse is non zero:

New password must contain:

- between 8 and 12 characters
- at least 1 alphabetic character(s) ('a'-'z')
- at least 1 numeric character(s) ('0'-'9')
- at least 1 punctuation character(s) (e.g. \$%0#)

New password must:

- be unique from the old password
- be unique from the last 2 historical password(s)
- not reuse more than 4 character(s) from the old password

If secu-dflt parameter preuse is non zero and pchreuse is zero:

New password must contain:

- between 8 and 12 characters
- at least 1 alphabetic character(s) ('a'-'z')
- at least 1 numeric character(s) ('0'-'9')
- at least 1 punctuation character(s) (e.g. \$%0#)

New password must:

- be unique from the old password
- be unique from the last 2 historical password(s)

If secu-dflt parameter preuse is zero and pchreuse is non zero:

New password must contain:

- between 8 and 12 characters
- at least 1 alphabetic character(s) ('a'-'z')
- at least 1 numeric character(s) ('0'-'9')
- at least 1 punctuation character(s) (e.g. \$%0#)

New password must:

- be unique from the old password
- not reuse more than 4 character(s) from the old password

If secu-dflt parameter preuse is zero and pchreuse is zero:

New password must contain:

- between 8 and 12 characters
- at least 1 alphabetic character(s) ('a'-'z')
- at least 1 numeric character(s) ('0'-'9')
- at least 1 punctuation character(s) (e.g. \$%0#)

New password must:

- be unique from the old password

```
chg-pid

tklc1121003 21-06-24 15:09:48 EST EAGLE 47.0.0.0
  New password must contain:
    - between 8 and 20 characters
    - at least 8 alphabetic character(s) ('a'-'z')
    - at least 1 numeric character(s) ('0'-'9')
    - at least 1 punctuation character(s) (e.g. $%#@)
  New password must:
    - be unique from the old password
    - be unique from the last 8 historical password(s)
    - not reuse more than 4 character(s) from the old password
;
tklc1121003 21-06-24 15:10:00 EST EAGLE 47.0.0.0
CHG-PID: MASP A - COMPLTD
;
```

Related Topics

- [act-user](#)
- [chg-secu-dflt](#)
- [chg-user](#)
- [dact-user](#)
- [dlt-user](#)
- [ent-user](#)
- [login](#)
- [logout](#)
- [rept-stat-user](#)
- [rtrv-secu-dflt](#)
- [rtrv-secu-user](#)
- [rtrv-user](#)

4.1.111 chg-ppsopts

Use this command to enter Prepaid Short Message Service options (PPSOPTS) in the database. This command updates the PPSOPTS Table with entries that correspond to Intelligent Network (IN) platforms.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

 **Note:**

If the CgPA GTA matches the value of the `gta`, `gta1`, `gta2`, or `gta3` parameter during message screening, then the message falls through to GTT instead of receiving PPSMS screening.

bpartychk (optional)

MO SMS B-Party PPSMS Check. This parameter specifies whether a prepaid check on the B-Party is performed on an incoming MO SMS message.

Range:***off***

Prepaid Check on B-Party is not performed

on

Prepaid Check on B-Party is performed

Default:

No change to current value

System Default:

off

gta (optional)

Global title address. The entity address for an IN platform. Determines whether an incoming message receives PPSMS screening.

Range:

1-15 digits

Valid digits are *0-9, A-F, a-f*.

Default:

No change to current value

gta1 (optional)

Global title address. The entity address for an IN platform. Determines whether an incoming message receives PPSMS screening.

Range:

1-15 digits

Valid digits are *0-9, A-F, a-f*

Default:

No change to current value.

gta2 (optional)

Global title address. The entity address for an IN platform. Determines whether an incoming message receives PPSMS screening.

Range:

1-15 digits

Valid digits are *0-9, A-F, a-f*

Default:
No change to current value.

gta3 (optional)

Global title address. This parameter specifies the entity address for an IN platform. Determines whether an incoming message receives PPSMS screening.

Range:
1-15 digits
Valid digits are *0-9, A-F, a-f*

Default:
No change to current value.

ngta (optional)

New global title address. An entity address that replaces an existing entity address for an IN platform.

Range:1-15 digits, *none*
Valid digits are *0-9, A-F, a-f*
none —Deletes the current value

Default:
No change to current value.

pc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:
pca

Range:
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
p-, *000-255*, *none*
prefix—p-
When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.
When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid for *ni = 001-005*.
When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.
Enter *none* to delete the point code.
The point code *000-000-000* is not a valid point code.

Default:
No change to current value.

pci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:
s-, *0-255*, *none*
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—s

zone—0-7
area—000-255
id—0-7

Enter *none* to delete the point code.

The point code 0-000-0 is not a valid point code.

Default:

No change to current value.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Enter *none* to delete the point code.

Default:

No change to current value.

ppt (optional)

Prepaid portability type. The IN platform where the incoming message is sent.

Range:

1 - 32

ri (optional)

Routing indicator. The IN platform routing indicator.

Range:

gt

Routes on the GT value.

ssn

Routes on the SSN value.

Default:

No change to current value.

setid (optional)

Set ID. The MAP set ID (if the `ri=ssn` parameter is specified) or the MRN set ID (if the `ri=gt` parameter is specified) that is used by a loadsharing IN platform.

 **Note:**

If the FGTTLS feature is not enabled, lookup is performed in the default set of the MAP table or MRN table.

Range:

1 - 36000, none, dflt

1 - 36000, none, dflt —MAP table

1 - 3000 —MRN table

none —Lookup is not performed. This value applies only to the MRN table.

dflt —Lookup is performed in the default MAP set or MRN set.

Default:

No change to current value.

ssn (optional)

Subsystem number

Range:

2 - 255

Default:

none

Example

This command provisions a single GTA in the PPSOPTS table.

```
chg-ppsopts:gta=1234
```

This command provisions four GTAs in the PPSOPTS table.

```
chg-ppsopts:gta=1101:gta1=1102:gta2=1103:gta3=1104
```

This command replaces an existing GTA with a new GTA.

```
chg-ppsopts:gta=1101:ngta=4567
```

This command deletes a specified GTA from the PPSOPTS table.

```
chg-ppsopts:gta=1102:ngta=none
```

This command deletes the *pc*, *ri*, and *setid* values for a specified IN platform.

```
chg-ppsopts:ppt=1:pci=none
```

This example provisions a loadsharing set for a specified IN platform.

```
chg-ppsopts:ppt=2:setid=2
```

This example provisions point code, routing indicator, and set ID values for a specified IN platform and loadsharing set.

```
chg-ppsopts:ppt=1:pci=1-1-1:ri=gt:setid=1
```

This example provisions the prepaid check on B-Party.

```
chg-ppsopts:bpartychk=on
```

This example provisions ANSI point code, routing indicator, and set ID values for a specified IN platform and loadsharing set.

```
chg-ppsopts:ppt=2:pca=2-2-1:ri=ssn:setid=4
```

Dependencies

At least one parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The PPSMS, IDP A-Party Routing, or IDP Service Key Routing feature must be enabled and turned on before this command can be entered.

3505 E3505 Cmd Rej: Prepaid SMS, A-Party RTG or SK RTG feature must be ON

If the `ngta` parameter is specified, then the `gta` parameter must be specified.

3099 E3099 Cmd Rej: GTA must be specified when NGTA is specified

The `gta`, `gta1`, `gta2`, and `gta3` parameters cannot have a value of *none*.

3098 E3098 Cmd Rej: GTA must not be NONE

If the `ngta` parameter is specified, the `gta` parameter value must already exist in the database.

3100 E3100 Cmd Rej: GTA doesn't exist in PPSOPTS Table

The `ngta` parameter value cannot already exist in the database.

3102 E3102 Cmd Rej: NGTA already exists in PPSOPTS Table

The value specified for the `pc/pca/pci/pcn` parameter cannot be the same as the STP True Point Code.

2168 E2168 Cmd Rej: Point code matches a STP point code

The value specified for the `pc/pca/pci/pcn` parameter cannot be the same as the STP Capability Point Code.

2167 E2167 Cmd Rej: Point code matches a STP capability point code

If the `pc`, `ri`, `ssn`, or `setid` parameter is specified, then the `ppt` parameter must be specified.

3480 E3480 Cmd Rej: PPT must be specified with PC/PCA/PCI/PCN/RI/SETID/SSN

If the `gta1`, `gta2`, or `gta3` parameter is specified, then the `ngta` parameter cannot be specified.

2965 E2965 Cmd Rej: Too many parameters entered

The Flexible GTT Load Sharing (FGTTLS) feature must be enabled before the `setid` parameter can be specified.

3359 E3359 Cmd Rej: SETID should be specified only if FGTTLS feature is enabled

If the `ri=gt` parameter is specified, then the value of the `setid` parameter cannot exceed the value of the maximum MRN set ID.

3350 E3350 Cmd Rej: Value of SETID must not exceed 3000 if RI = GT

The Site Identification table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The value specified for the `pc/pca/pci/pcn` parameter must already exist in the Routing Indicator table.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

The Prepaid SMS options (PPSOPTS) table is corrupt or cannot be found.

3351 E3351 Cmd Rej: Failed reading Prepaid SMS Options Table

The value of the `gta`, `gta1`, `gta2`, or `gta3` parameter cannot already exist in the database unless the `ngta` parameter is specified.

3360 E3360 Cmd Rej: GTA already exists in PPSOPTS Table

The `pc/pca/pci/pcn` parameter and the `ri` parameter must be specified together in the command, or a value of `none` must be specified for the `pc/pca/pci/pcn` parameter.

3362 E3362 Cmd Rej: PC (not equal to none) and RI must be entered as a pair

The `gta`, `gta1`, `gta2`, and `gta3` parameters cannot have the same value.

3361 E3361 Cmd Rej: Multiple GTA parameters cannot have the same GTA value

A maximum of 32 GTA values (for 32 IN platforms) can be defined in the database.

3101 E3101 Cmd Rej: Maximum number of GTAs already provisioned

If the Flexible GTT Load Sharing (FGTTLS) feature is enabled, and if the `ri=ssn` parameter is specified, then the values specified for the `pc/pca/pci/pcn` and `ssn` parameters must exist in the MAP table in the MAP set specified by the `setid` parameter, or in the default MAP set if the `setid` parameter is not specified.

3338 E3338 Cmd Rej: PC/SETID/SSN does not exist in MAP table

If the `ri=gt` parameter is specified, then the value specified for the `pc/pca/pci/pcn` parameter must exist in the MRN table.

3339 E3339 Cmd Rej: PC/SETID does not exist in MRN table

If the `ri=ssn` parameter is specified, then the `setid=none` parameter cannot be specified.

3365 E3365 Cmd Rej: SETID must not be NONE if RI=SSN

The `pc/pca/pci/pcn`, `ri`, `setid`, and `ssn` parameters must be specified before the `ppt` parameter can be specified.

3368 E3368 Cmd Rej: PPT can be specified only with PC/PCA/PCI/PCN/RI/SETID/SSN

The `pc/pca/pci/pcn` parameter must be provisioned for the prepaid type specified by the `ppt` parameter before the `setid` parameter can be specified.

4261 E4261 Cmd Rej: Point code is not configured for the specified Prepaid type

If a value of `none` is specified for the `pc/pca/pci/pcn` parameter, then the `ri` or `setid` parameter cannot be specified.

4629 E4629 Cmd Rej: RI/SETID must not be specified when PC/PCA/PCI/PCN=none

If the Flexible GTT Load Sharing (FGTTLS) feature is not enabled, and if the `ri=ssn` parameter is specified, then the value specified for the `pc/pca/pci/pcn` parameter must exist in the default MAP set of the MAP table.

2452 E2452 Cmd Rej: Remote point code does not exist in MAP table

The value specified for the `pc/pca/pci/pcn` parameter cannot be associated with a proxy point code.

4707 E4707 Cmd Rej: PRX using DPC not allowed in GTT, MAP, MRN tables

If the `ssn` parameter is specified, then the `pc/pca/pci/pcn` parameter must be specified.

5102 E5102 Cmd Rej: PC/PCA/PCI/PCN must be specified if SSN is specified

The MRN table is corrupt or cannot be found.

2999 E2999 Cmd Rej: Failed reading the MRN table

Notes

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes.

The GTA digits are used during message screening to determine whether an incoming message should receive PPSMS screening. If the CgPA GTA matches the value of any of the GTA parameters, then the message falls through to GTT instead of receiving PPSMS screening.

The point code and routing indicator values (`pc/pca/pci/pcn` and `ri` parameters) are used to route messages from prepaid subscribers to the correct IN for credit checking.

Output

```
chg-ppsopts:ppt=1:pci=1-1-1:ri=gt:setid=1
```

```
tekelecstp 06-06-25 09:04:14 EST EAGLE 37.0.0
CHG-PPSOPTS: MASP A - COMPLTD
;
```

Related Topics

- [rtrv-ppsopts](#)

4.1.112 chg-prefix

Use this command to enter the name of a feature, the value of a prefix used by the feature, and a prefix number that is used to refer to the prefix from another table.

Parameters

feature (mandatory)

Feature Name. The name of an enabled controlled feature supported by this command. The parameter value must match the feature name as it is displayed in the `rtrv-ctrl-feat` command output.

Range:

azzzzzzzzzzzzzzzzzzzzzzzzzzz

1 alphabetic character and up to 24 optional alphanumeric characters and spaces, enclosed in double quotation marks

The parameter value is not case-sensitive; upper case or lower case or both can be entered. Part or all of the feature name can be entered. If part of the feature name is specified, the entry must start with the first letter of the name, and must contain enough of the name to uniquely identify the feature. For example, there are two feature names that begin with "GSM MAP:" Enough additional characters to identify which GSM MAP feature is being entered (at least "GSM MAP SR" to identify the "GSM MAP SRI Redirect" feature). This command supports the following controlled features:

- GSM MAP SRI Redirect
- ISUP NP for EPAP

prefix (mandatory)

Prefix Value. Prefix table entries for the GSM MAP SRI Redirect and ISUP NP with EPAP features.

Range:

1-15 hexadecimal digits. Valid digits are *0-9, a-f, A-F*

Default:

Current value

prefixnum (mandatory)

Prefix Number. The prefix value to use for the specified feature name.

Range:

1 - 7

1 - 128 for GSM MAP SRI Redirect feature prefix values

1-5 for ISUP NP with EPAP feature prefix values

6 for the ISUP NP with EPAP feature Insertion Country Code

7 for the ISUP NP with EPAP feature Deletion Condition value

Default:

No change to the current value

Example

Define a prefix with prefix number *1* for the ISUP NP with EPAP feature.

```
chg-prefix:feature="isup np with epap":prefix=1004:prefixnum=1
```

Define a prefix with prefix number *2* and specify part of the GSM MAP SRI Redirect feature name.

```
chg-prefix:feature="GSM MAP SRI":prefix=104:prefixnum=2
```

Define a prefix with prefix number *6* and specify part of the GSM MAP SRI Redirect feature name.

```
chg-prefix:feature="GSM MAP SRI Redirect":prefix=1006:prefixnum=6
```

Dependencies

The specified feature name value (`feature` parameter) must be enclosed in double quotation marks

(" ").

2048 E2048 Cmd Rej: Unneeded information found

The GSM MAP SRI Redirect feature must be enabled before a GSM MAP SRI Redirect prefix can be defined.

4320 E4320 Cmd Rej: SRI Redirect Feature must be enabled

The ISUP NP with EPAP feature must be enabled before an ISUP NP with EPAP prefix can be defined.

4356 E4356 Cmd Rej: ISUP NP with EPAP feature must be enabled

The specified prefix value must contain a number of digits that is equal to or less than the maximum number of digits required by the specified feature.

4343 E4343 Cmd Rej: Feature Prefix too long

The specified prefix number (`prefixnum`) must be valid for the specified feature.

4348 E4348 Cmd Rej: Feature Prefix Number invalid

The specified feature name must be the name of an enabled controlled feature as it is displayed in the `rtrv-ctrl-feat` command output. The specified feature must be the GSM MAP SRI Redirect or ISUP NP for EPAP feature.

4347 E4347 Cmd Rej: Feature Name is not valid

The FEATPFX table is corrupt or cannot be found by the system.

4364 E4364 Cmd Rej: Failed reading FEATPFX table


The FEATPFX table cannot be full when a new entry is added.

4346 E4346 Cmd Rej: FEATPFX table full

Notes

The Prefix table contains different groups of entries based on the features that are turned on. For the GSM MAP SRI Redirect for Serving HLR feature, the entries are referenced by the VendID table, based on a Vendor Number matching a Prefix Number. For the ISUP NP with EPAP feature, the entries are referenced by the SubnetID table, based on a Subnet Number matching a Prefix Number. The Prefix table for the ISUP NP with EPAP feature also reserves Prefix Number 6 for the Insertion Country Code value, and reserves Prefix Number 7 for the Deletion Condition value. [Figure 4-7](#) illustrates the references to the Prefix table.

Figure 4-7 Prefix Table References

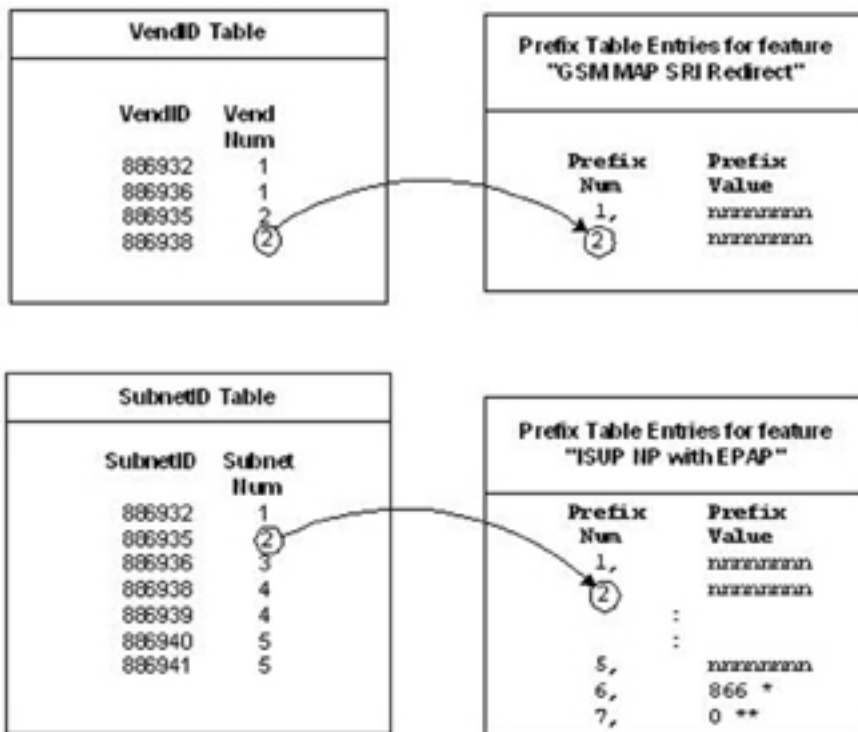

* Reserved for the ISUP NP with EPAP feature Insertion Country Code value

** Reserved for the ISUP NP with EPAP feature Deletion Condition value

For the ISUP NP with EPAP feature:

- When the Insertion Country Code (prefix number 6) is defined, the following information message appears:
ISUP NP with EPAP, Insertion Country Code value is now defined
- When the Deletion Condition (prefix number 7) is defined, the following information message appears:
ISUP NP with EPAP, Deletion Condition value is now defined

The maximum number of prefixes that can be defined is:

- 128 for the GSM MAP SRI Redirect feature
- 5 values, 1 Insertion Country Code, and 1 Deletion Condition for the ISUP NP with EPAP feature

Output

```
chg-prefix:feature="isup np with epap":prefix=1004:prefixnum=1
```

```
rlghncxa03w 04-09-20 09:04:14 EST EAGLE 31.11.0
CHG-PREFIX: MASP A - COMPLTD
```

;

```
chg-prefix:feature="gsm map sri
redirect":prefix=1205:prefixnum=18
```

```
tekelecstp 14-05-30 16:44:50 EST EAGLE 46.1.0
CHG-PREFIX: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-prefix](#)
- [rtrv-ctrl-feat](#)
- [rtrv-prefix](#)

4.1.113 chg-rte

Use this command to change the “cost,” or priority of a route. The cost is based on whether this route is first choice, second choice, and so on. Prioritize routes in such a way that the most direct route (fewest intermediate signaling points) is highest priority.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

lsn (mandatory)

Linkset name. The name of the linkset associated with the route.



Note:

The linkset name must be unique.

Range:

ayyyyyyyy

1 alphabetic character followed by 9 alphanumeric characters

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

*p-, 000-255, **

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code.

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000–255

ssa—000–255
sp—000–255

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area (un-sna-mna)*. The *prefix* subfield indicates a private point code.

Range:

p-, 000-127

Specify a valid value for each subfields of the point code, and separate the subfields with a dash (-).

prefix--p

un--000--127

sna--000--15

mna--000--31

force (optional)

This parameter allows the NLSN to be same as the ILSN in the exception routes of the destination or allows APC to be same as OPC in the exception routes of the destination.

Range:

yes

n1sn (optional)

New linkset name. The new linkset name associated with the route.

Range:

ayyyyyyyy

1 alphabetic character followed by 9 alphanumeric characters

Default:

The current value

rc (optional)

Relative cost (priority) for the route. Zero (0) is the highest priority, 99 the lowest.

Range:

0 - 99

Default:

The current value

Example

```
chg-rte:lsn=rlgh03:rc=0:dpc=244-003-001
```

```
chg-rte:dpc=25--*-*:lsn=myls:rc=10
```

This example changes route for DPCN 4084-aa using linkset E1M2ITUN to relative cost of 30:


```
chg-rte:dpcn=4085-aa:lsn=elm2itun:rc=30
```

This example changes route for DPCN24, 10-100-14 using linkset WE123624 to a relative cost of 2:

```
chg-rte:dpcn24=10-100-14:lsn=we123624:rc=25
```

This example changes route for private point code DPC p-1-1-1 using linkset WE123642 to relative cost of 50:

```
chg-rte:dpc=p-1-1-1:lsn=we123642:rc=50
```

This example changes route for spare point code DPCN s-4085-aa using linkset E1M2ITUN to relative cost of 30:

```
chg-rte:dpc=s-4085-aa:lsn=elm2itun:rc=30
```

This example changes route for private point code DPCN24 p-1-100-1 using linkset WE123624 to relative cost of 25:

```
chg-rte:dpcn24=p-1-100-1:lsn=we123624:rc=25
```

This example changes route for private and spare point code DPCI ps-1-104-1 using linkset E1M2ITUI to relative cost of 30:

```
chg-rte:dpci=ps-1-104-1:lsn=elm2itui:rc=30
```

This example changes route for DPCN16, 121-10-15 using linkset WE123624 to a relative cost of 10:

```
chg-rte:dpcn16=10-100-14:lsn=we123624:rc=10
```

Dependencies

The 6-Way Loadsharing on Routesets feature must be turned on before more than 2 routes can be provisioned with the same relative cost.

2350 E2350 Cmd Rej: At most two linksets can be assigned same cost

If the `ipgwapc=yes` parameter is specified, then the associated `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter cannot have a cluster route assigned.

3830 E3830 Cmd Rej: DPC can't specify cluster rte for IPGWx or IPSEG-M3UA linkset

If the identity of a route is being changed because of a change in the linkset name, the database must not already contain the new linkset name and destination address.

2355 E2355 Cmd Rej: Linkset already assigned to route

If the `nlsn` parameter is specified, the link set must already exist in the database and at least one link must be assigned to the link set.

2128 E2128 Cmd Rej: Linkset assigned to route must have at least one link

If a new linkset name (`nlsn` parameter) is specified for an existing destination network address (`ni-*-*`), or destination network cluster address (`ni-nc-*`), the linkset type used in the route (see the `chg-ls` command) must be *b*, *c*, or *d*.

2349 E2349 Cmd Rej: Linkset Type used for network/cluster route can't be A or E

If the specified destination address is a full point code address (`ni-nc-ncm`) and is a member of a provisioned cluster (`ni-nc-*`), whether the attributes of the ordered routes assigned to the

cluster can be changed is determined by the destination address's NCAI (Nested Cluster Allowed Indicator). The NCAI is set with the `ncai` parameter of the `ent/chg-dstn` commands.

- If the `ncai=no` parameter is specified, the cluster point code is not a nested cluster point code and the attributes of the ordered routes assigned to the cluster cannot be changed.
- If the `ncai=yes` parameter is specified, the specified destination address is a member of a provisioned nested cluster where the attributes of the ordered routes assigned to the cluster can be changed.

If the specified destination address is a network cluster address (*ni-nc-**), how the attributes of the specified ordered route are changed is determined by the setting of the destination address's NCAI.

- If the `ncai=no` parameter is specified, the attributes of the specified ordered route are changed for each signaling point code having the same network identifier (*ni*) and network cluster (*nc*) codes.
- If the `ncai=yes` parameter is specified, the specified destination address is a nested cluster where changing the attributes of the ordered routes for the cluster does not affect the attributes of the ordered routes of the provisioned members.

2885 E2885 Cmd Rej: Ordered routes cannot be changed for cluster members

The route destination's type must match the route's linkset adjacent point code or the route's linkset secondary adjacent point code type.

3616 E3616 Cmd Rej: APC/SAPC type and group code must match DPC

Only IPGW routes are allowed for private point codes.

4279 E4279 Cmd Rej: Only IPGWx routes are allowed for private PCs

If the `dpcn` parameter is specified, its format must match the format that was assigned with the `chg-stpopts:npcfmti` parameter.

2997 E2997 Cmd Rej: PC must match NPCFMTI set in CHG-STPOPTS

Network routing is valid only if the NRT feature is on.

2955 E2955 Cmd Rej: Network Routing is only valid if the NRT feature is ON

When using network routing, if the destination point code has a value of * in the *nc* field, the *ncm* field must also be * (for example, `dpc=21-*-*`).

2956 E2956 Cmd Rej: NCM must be * when using Network Routing

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The `nda`, `nz`, `nlsn`, or `nrc` parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The current destination address must be a full or a cluster point code.

2886 E2886 Cmd Rej: DSTN address must be a full, network or cluster PC

All linksets that are currently assigned to a route set must still be equipped.

2357 E2357 Cmd Rej: Linkset is unequipped

The linkset specified by the `lsn` parameter must exist in the routeset of the destination table entry.

2351 E2351 Cmd Rej: Linkset not assigned in route table

If a new link set (`nlsn` parameter) is specified in the command, that link set name must exist in the active LINK SET entity.

2346 E2346 Cmd Rej: Linkset not defined

The specified DPC must be in the database.

2657 E2657 Cmd Rej: Point code not defined

Only a single route is allowed for an APC or SAPC for an IPGWx linkset. The changed route must include the APC or SAPC's IPGWx linkset with the destination equal to the APC or SAPC.

4582 E4582 Cmd Rej: Single rte to APC or SAPC for IPGW LS allowed

If a proxy linkset is used, then the `nlsn` parameter cannot be specified.

4708 E4708 Cmd Rej: One route must use PPC assigned in route(dstn) table

If a proxy linkset is used, then the value specified for the `dpc` parameter cannot be a network cluster address (*ni-nc-**) or network address (*ni-*-**).

4726 E4726 Cmd Rej: Linkset Type for Network/Cluster Route can't be PRX

The network type of the routeset must be same as the network type of the destination point code.

3877 E3877 Cmd Rej: ANSI/ITU point code type mismatch

The value specified for the `rc` parameter must differ from the original routing cost of the associated linkset.

4660 E4660 Cmd Rej: No change in RC actually requested

If the value specified for the `dpc` parameter refers to a Proxy Point Code in the Destination table, then the `nlsn` parameter cannot be specified.

4725 E4725 Cmd Rej: LSN for proxy route cannot be changed

The SAPC table is corrupt or cannot be found.

3282 E3282 Cmd Rej: Failed reading the SAPC table

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

Output

```
chg-rtx:lsn=rlgh03:rc=0:dpc=244-003-001
```

```

rlghncxa03w 04-01-07 11:43:04 EST  EAGLE 31.3.0
CHG-RTE: MASP A - COMPLTD
;

```

Related Topics

- [chg-dstn](#)
- [dlt-dstn](#)
- [dlt-rte](#)
- [ent-dstn](#)
- [ent-rte](#)
- [rept-stat-dstn](#)
- [rept-stat-rte](#)
- [rtv-dstn](#)
- [rtv-rte](#)

4.1.114 chg-rtx

Use this command to change an exception route entry in the Routing table.

Parameters

At least one of the following optional parameters must be specified: *opc*, *ilsn*, *si*, or *cic*.

dpc (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (mandatory)

Destination point code.

dpci (mandatory)

Destination Point Code. ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

dpcn (mandatory)

Destination Point Code. ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmt1` flexible point code option. A group code must be specified when the ITUPUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (mandatory)

Destination Point Code. 24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000-255

ssa—000-255

sp—000-255

dpcn16 (mandatory)

Destination Point Code. 16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*. The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix--p

un---000---127

sna---000---15

mna---000---31

l_{sn} (mandatory)

The name of the linkset associated with the specified exception route.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters.

cic (optional)

Starting Circuit Identification Code. This parameter is used alone or with the `ecic` parameter as exception routing criteria for the specified exception route.

Range:

1 - 16383

ecic (optional)

Ending Circuit Identification Code. This parameter and the `cic` parameter define the CIC range that is used as exception routing criteria for the specified exception route.

Range:

0 - 16383

force (optional)

This parameter must be specified when the `ilsn` parameter value is the same as the `nlsn` parameter value.

Range:

yes

il_{sn} (optional)

The name of the incoming/originating linkset. This parameter is used as part of the exception routing criteria for the specified exception route.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

n_{l_{sn}} (optional)

The new linkset name that replaces the linkset name associated with the specified exception route.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

opc (optional)ANSI origination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).**Range:**

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p-*When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.The point code *000-000-000* is not a valid point code.**opc/opca/opci/opcn/opcn24/opcn16 (optional)**

Originating Point Code

opci (optional)ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).**Range:**

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**zone—0-7**area—000-255**id—0-7*The point code *0-000-0* is not a valid point code.**opcn (optional)**ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUPUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:**

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**opcn24 (optional)**24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:*p-*, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000—255**ssa—000—255**sp—000—255***opc16 (optional)**16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*. The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).**Range:***p--*, 000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix--p**un---000---127**sna---000---15**mna---000---31***rc (optional)**

The relative cost associated with the specified exception route.

Range:

0 - 99

si (optional)

Service indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range:

3 - 15

Example

This example changes the relative cost of an existing exception route.

```
chg-rtx:dPCA=1-1-1:opca=2-3-3:lsn=1set1:rc=30
```

This example changes the linkset associated with the exception route.

```
chg-rtx:dPCA=1-2-1:si=3:lsn=1set2:nlsn=1set3
```

This example changes the linkset and relative cost of the exception route.

```
chg-rtx:dPCA=1-3-1:ilsn=1set2:lsn=1set3:nlsn=1set4:rc=20
```

```
chg-rtx:dpci=2-100-1:ilsn=1set2:lsn=1set4:rc=10
```

```
chg-rtx:dpci=2-100-1:si=5:lsn=1set5:rc=50
```

```
chg-rtx:dpcn16=121-10-15:si=5:lsn=1set5:rc=50
```


Dependencies

Only one of the `opc`, `ilsn`, `cic`, or `si` parameters can be specified for an exception route entry.

4435 E4435 Cmd Rej: OPC/ILSN/CIC/SI is mandatory and mutually exclusive

If the `ecic` parameter is specified, the `cic` parameter must be specified.

4580 E4580 Cmd Rej: CIC must be specified if ECIC is specified

The `ecic` parameter value cannot be less than the `cic` parameter value.

4404 E4404 Cmd Rej: End value must be greater than or equal to a starting value

The `opc/opca/opci/opcn/opcn24/opcn16` parameter value cannot be the same as the `dpc` parameter value.

4387 E4387 Cmd Rej: OPC must not be identical to DPC

The Origin-Based MTP Routing feature must be turned on before this command can be entered.

4584 E4584 Cmd Rej: MTP Origin Based Routing Feature must be ON

The specified combination of exception route parameter conditions must already exist.

4380 E4380 Cmd Rej: Route Exception does not exist

The linkset name, as defined by the `ilsn`, `lsn`, or `nlsn` parameter, must exist.

2346 E2346 Cmd Rej: Linkset not defined

The 6-Way Loadsharing on Routesets feature must be turned on before more than 2 routes can be provisioned with the same relative cost for a given exception route criteria.

4376 E4376 Cmd Rej: Maximum matching Route Exceptions already exist for DPC

The network domain of the adjacent point code in the linkset or in the routes in the specified routeset must be the same as the network domain of the specified destination point code or its alias.

3877 E3877 Cmd Rej: ANSI/ITU point code type mismatch

The APC/SAPC type and group code in the linkset specified by the `lsn` parameter must match the value specified by the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter.

3616 E3616 Cmd Rej: APC/SAPC type and group code must match DPC

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The Route Exception table is corrupt or cannot be found.

4379 E4379 Cmd Rej: Failed to access Route Exception Table

The `nlsn` parameter value cannot be the same as the `lsn` parameter value.

4382 E4382 Cmd Rej: LSN and NLSN cannot be identical

Either the `nlsn` parameter, the `rc` parameter, or both parameters must be specified.

4383 E4383 Cmd Rej: Either NLSN or RC must be specified

The value specified for the destination point code must be a full point code and not a cluster or network point code.

2859 E2859 Cmd Rej: Destination address must be a full point code

The point code specified by the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter must exist in the destination table.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

If the `ilsn` and `lsn` parameter have the same value, or if the value specified for the `opc/opca/opci/opcn/opcn24/opcn16` parameter is the same as the APC of the linkset specified by the `lsn` parameter, then the `force=yes` parameter must be specified.

3799 E3799 Cmd Rej: FORCE=YES must be specified

The route cost specified by the `rc` parameter must differ from the existing route cost for the linkset specified by the `lsn` parameter.

4660 E4660 Cmd Rej: No change in RC actually requested

The route associated with the linkset specified by the `lsn` parameter must already exist in the specified exception route.

4777 E4777 Cmd Rej: Specified route does not exist in the RTX entry

The route associated with the linkset specified by the `nlsn` parameter cannot already exist in the specified exception route.

4375 E4375 Cmd Rej: Route Exception already exists for input parameters

The value specified for the `opc/opca/opci/opcn/opcn24/opcn16` parameters cannot be the same as the adjacent point code of the linkset specified by the `lsn` parameter.

4925 E4925 Cmd Rej: OPC must not be identical to APC of linkset.

The J7 Support feature must be enabled before the `dpcn16/opcn16` parameter can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

Output

```
chg-rtx:dpca=1-1-1:opc=2-3-3:lsn=1set1:rc=30
```

```
stdcfg2b 06-05-19 18:20:11 EST EAGLE 35.0.0  
CHG-RTX: MASP A - COMPLTD
```

Related Topics

- [dlt-rtx](#)

- [ent-rtx](#)
- [rept-stat-rtx](#)
- [rtrv-rtx](#)

4.1.115 chg-sccp-msg

Use this command to revise an SCCP message.

Parameters



Note:

The nature of address indicator, numbering plan, and TCAP package indicator can be specified by mnemonic or numeric values (*cdnai/cdnaiv*, *cdnp/cdnpv*, and *tcappkg/tcappkgv* respectively).

msgn (mandatory)

Message number. The number of the SCCP message.

Range:

1 - 10

active (optional)

This parameter specifies whether the SCCP message should be sent to the network card for processing.

Range:

yes

The message is sent to the network card.

no

The message is not sent to the network card.

Default:

yes

cdgta (optional)

CdPA GTA. The Called Party Address for the SCCP message.

Range:

1 - 15 hexadecimal digits. Valid digits are 0-9, a-f, A-F

Default:

1234567890

cdgti (optional)

CdPA GTI. The Called Party Global Title Indicator for the SCCP message.

Range:

0 - 4

cdnai (optional)

CdPA NAI. The Called Party Nature of Address Indicator for the SCCP message.

Range:

sub

rsvd

natl

intl

Default:

sub

cdnaiv (optional)

CdPA NAIV. The Called Party Nature of Address Indicator Value for the SCCP message.

Range:

0 - 127

Default:

1

cdnp (optional)

CdPA NP. The Called Party Numbering Plan for the SCCP message.

Range:

e164

generic

x121

f69

e210

e212

e214

private

Default:

e164

cdnpv (optional)

CdPA NPV. The Called Party Numbering Plan Value for the SCCP message.

Range:

0 - 15

Default:

1

cdpc (optional)

ANSI Called Party point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

Default:

10

ANSI 10-10-10

cdpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

cdpcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

cdpcn24 (optional)

24-bit ITU national CdPA point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-*p*

msa-000-255

ssa-000-255

sp-000-255

cdpcn16 (optional)

16-bit ITU national CdPA point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

p-, 000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-*p*

un -000-127

sna -000-15

mna -000-31

cdssn (optional)

CdPA SSN. The Called Party Subsystem Number for the SCCP message.

Range:

0 - 255

Default:

6

cdtt (optional)

CdPA TT. The Called Party Translation Type for the SCCP message.

Range:

0 - 255

Default:

0

cggtta (optional)

CgPA GTA. The Calling Party Address for the SCCP message.

Range:

1 - 15 hexadecimal digits. Valid digits are 0-9, a-f, A-F

Default:

1234567890

cggti (optional)

CgPA GTI. The Calling Party Global Title Indicator for the SCCP message.

Range:

0 - 4

cgnai (optional)

CgPA NAI. The Calling Party Nature of Address Indicator for the SCCP message.

Range:

sub

rsvd

natl

intl

cgnaiv (optional)

CgPA NAIV. The Calling Party Nature of Address Indicator Value for the SCCP message.

Range:

0 - 127

Default:

1

cgnp (optional)

CgPA NP. The Calling Party Numbering Plan for the SCCP message.

Range:

e164

generic

x121

f69

e210

e212

e214

private

cgnpv (optional)

CgPA NPV. The Calling Party Numbering Plan Value for the SCCP message.

Range:

0 - 15

Default:

1

cgpc (optional)

ANSI CGPA point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Range:*p*-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*-When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.The point code *000-000-000* is not a valid point code.**Default:**

20

ANSI 20-20-20

cgpci (optional)ITU international CgPA point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).**Range:***s*-, *p*-, *ps*-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps**zone*—0-7*area*—000-255*id*—0-7The point code *0-000-0* is not a valid point code.**cgpcn (optional)**ITU national CgPA point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s*-, *p*-, *ps*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps**nnnnn*—0-16383*gc*—*aa-zz**m1-m2-m3-m4*—0-14 for each member; values must sum to 14**cgpcn24 (optional)**24-bit ITU national CgPA point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).**Range:***p*-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p
msa—000–255
ssa—000–255
sp—000–255

cgpcn16 (optional)

16-bit ITU national CgPA point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:

p-, 000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p
un -000-127
sna -000-15
mna -000-31

cgssn (optional)

CgPA SSN. The Calling Party Subsystem Number for the SCCP message.

Range:

0 - 255

Default:

8

cgtt (optional)

CgPA TT. The Calling Party Translation Type for the SCCP message.

Range:

0 - 255

Default:

0

dpcc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

dpca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

Default:

20

ANSI 20-20-20

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Point Code.

dpci (optional)ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).**Range:***s-, p-, ps-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**zone—0-7**area—000-255**id—0-7*The point code *0-000-0* is not a valid point code.**dpcn (optional)**ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).**Range:***s-, p-, ps-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**dpcn24 (optional)**24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.**Range:***p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000-255**ssa—000-255**sp—000-255***dpcn16 (optional)**16-bit ITU national destination point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:

p--, *000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-p

un -000-127

sna -000-15

mna -000-31

eaglegen (optional)

This parameter specifies whether the message is an EAGLE-generated message.

Range:

no

the message is not an EAGLE-generated message

yes

the message is an EAGLE-generated message

imeidgts (optional)

IMEI Digits. This specifies the IMEI digits present in the TCAP portion of the incoming MSU.

Range:

1 - 15 hexadecimal digits

Valid digits are *0-9, a-f, A-F*

Default:

1234567890

imsidgts (optional)

IMSI Digits. This specifies the IMSI digits present in the TCAP portion of the incoming MSU.

Range:

1 - 15 hexadecimal digits

Valid digits are *0-9, a-f, A-F*

Default:

1234567890

lsn (optional)

Linkset name. The incoming linkset name for the SCCP message.

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

mapparam (optional)

MAP Parameters. The parameter defines the MAP parameters (IMEI/IMSI/MSISDN/VLR/SMRPOA/SMRPDA) present in the incoming MSU.

Range:

none

imei

imsi

msisdn

vlr

smrpoa

smrpda

imsimsisdn

imsivlr

msisdnvlr

smrpoada

smrpoadaimsi

imeiimsi

imeiimsidn

imeivlr

smrpoaimsi

smrpdaimsi

Default:

none- None of the above specified parameters is present in the incoming MSU.

msisdndgts (optional)

MSISDN Digits. This specifies the MSISDN digits present in the TCAP portion of the incoming MSU.

Range:

1 - 15 hexadecimal digits

Valid digits are *0-9, a-f, A-F*

Default:

1234567890

msisdnp (optional)

MSISDN NP. The Numbering Plan of the MSISDN digits.

Range:

e164

x121

f69

e212

e129

private

reserved

none

Default:

none- NP is missing for the MSISDN in the incoming MSU

opc (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Range:

p-, *000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

Default:

10

ANSI 10-10-10

opci (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, *0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

opcni (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s-, p-, ps-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**opc24 (optional)**24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.**Range:**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*p-, 000-255, none**prefix—p-*When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid for *ni = 001-005*.When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.Enter *none* to delete the point code.The point code *000-000-000* is not a valid point code.**opc16 (optional)**16-bit ITU national originating point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.**Range:***000-127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*un -000-127**sna -000-15**mna -000-31*Enter *none* to delete the point code.The point code *000-000-000* is not a valid point code.**selid (optional)**

Selector ID. The Selector ID used in the first GTT selector search.

Range:*0 - 65534***smrpdadgts (optional)**

SMRPDA Digits. The digits present in the SMRPDA parameter of the incoming MSU.

Range:*1 - 15 hexadecimal digits*Valid digits are *0-9, a-f, A-F***Default:***1234567890*

smrpdanp (optional)

SMRPDA NP. The Numbering Plan of the SMRPDA digits.

Range:

e164

x121

f69

e212

e129

private

reserved

none

Default:

none- NP is missing for the SMRPDA in the incoming MSU

smrpoadgts (optional)

SMRPOA Digits. The digits present in the SMRPOA parameter of the incoming MSU.

Range:

1 - 15 hexadecimal digits

Valid digits are 0-9, a-f, A-F

Default:

1234567890

smrpoanp (optional)

SMRPOA NP. The Numbering Plan of the SMRPOA digits.

Range:

e164

x121

f69

e212

e129

private

reserved

none

Default:

none- NP is missing for the SMRPOA in the incoming MSU

tcapacn (optional)

TCAP application context name. The ITU TCAP *acn* field in the incoming MSU.

Range:

0 - 255, *none*

The *acn* field supports up to 7 subfields separated by a dash (e.g., 1-202-33-104-54-26-007).

none —there is no ITU TCAP *acn* field in the incoming MSU

tcapfamily (optional)

The ANSI TCAP *family* field in the incoming MSU.

Range:

0 - 255, *none*

none —there is no ANSI TCAP *family* field in the incoming MSU

tcapfamily2 (optional)

The ANSI TCAP *family2* field in the incoming MSU.

Range:

0 - 255, *none*

none —there is no ANSI TCAP *family2* field in the incoming MSU

tcapfamily3 (optional)

The ANSI TCAP *family3* field in the incoming MSU.

Range:

0 - 255, *none*

none —there is no ANSI TCAP *family3* field in the incoming MSU

tcapopcode (optional)

The first TCAP *opcode* field in the incoming MSU.

Range:

0 - 255, *none*, *notpresent*

none —the first component is present but there is no *opcode* in it

notpresent—the first component is not present

Default:

notpresent

tcapopcode2 (optional)

The second TCAP *opcode* field in the incoming MSU.

Range:

0 - 255, *none*, *notpresent*

none —the second component is present but there is no *opcode* in it

notpresent—the second component is not present

Default:

notpresent

tcapopcode3 (optional)

The third TCAP *opcode* field in the incoming MSU.

Range:

0 - 255, none, notpresent

none —the third component is present but there is no *opcode* in it
notpresent—the third component is not present

Default:

notpresent

tcapopcodetag (optional)

The first ITU TCAP opcode field in the incoming MSU. .

Range:

local, global, none, notpresent

local —The opcodetag is local(opcodetag=2) in the ITU TCAP opcodetag field in the incoming MSU.

global —The opcodetag is global(opcodetag=6) in the ITU TCAP opcodetag field in the incoming MSU.

none—the first component is present but there is no opcode in it

notpresent—the first component is not present

Default:

notpresent

tcapopcode3 (optional)

The third TCAP opcode field in the incoming MSU.

Range:

local, global, none, notpresent

local — The opcodetag is local(opcodetag=2) in the ITU TCAP opcodetag field in the incoming MSU.

global — The opcodetag is global(opcodetag=6) in the ITU TCAP opcodetag field in the incoming MSU.

none—the third component is present but there is no opcode in it

notpresent—the third component is not present

Default:

notpresent

tcappkg (optional)

TCAP package. The ANSI TCAP and ITU TCAP package type.

Range:

ituuni

ITU unidirectional

qwp

Query with Permission

qwop

Query without Permission

resp

Response

cwp
Conversation with Permission

cwop
Conversation without Permission

bgn
Begin

end
End

cnt
Continue

ituabort
ITU abort

ansiabort
ANSI abort

ansiuni
ANSI unidirectional

ANSI TCAP Package Types—
ansiuni, qwp, qwop, resp, cwp, cwop, ansiabort

ITU TCAP Package Types—
bgn, ituabort, ituuni, end, cnt

tcappkgv (optional)
TCAP package value. The TCAP package type value.

Range: 0 - 255

v1rdgts (optional)
VLR Digits. This specifies the VLR digits present in the TCAP portion of the incoming MSU.

Range:
1 - 15 hexadecimal digits
Valid digits are *0-9, a-f, A-F*

Default:
1234567890

Example

```
chg-sccp-msg:msgn=1:cgtt=4:cdnp=generic:eaglegen=yes:cdpc=2-2-2
chg-sccp-msg:msgn=3:cdgta=324ab12:cddt=6:cdnaiv=3:cgnai=rsvd
chg-sccp-msg:msgn=5:cddt=10:opc=4-5-6:cgpcn=1234
chg-sccp-msg:msgn=1:tcappkg=bgn:tcapopcode=34
chg-sccp-msg:msgn=1:cddt=12:dpci=1-101-1:cgpci=1-101-2
chg-sccp-msg:msgn=5:cddt=10:opc16=2-14-0:cgpcn16=2-14-1
```

```
chg-sccp-msg:msgn=1:smrpoadgts=654789:smrpdanp=e164:smrpoanp=x121:
imsidgts=123456

chg-sccp-msg:msgn=1:tcapopcode=34:tcapopcode2=35:tcapopcode3=100

chg-sccp-
msg:msgn=1:tcapopcode=local:tcapopcodetag2=local:tcapopcodetag3=none
```

Dependencies

The TSTMSG table is corrupt or cannot be found.

4819 E4819 Cmd Rej: Failure reading TSTMSG Table

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `cdnp` and `cdnpv` parameters and the `cgnp` and `cgnpv` parameters cannot be specified together in the command.

3551 E3551 Cmd Rej: NP and NPV must not be specified together

The `cdnai` and `cdnaiv` parameters and the `cgnai` and `cgnaiv` parameters cannot be specified together in the command.

3552 E3552 Cmd Rej: NAI and NAIV must not be specified together

A TOBR quantity feature must be turned on before the `tcapacn`, `tcappkg`, `tcappkgv`, `tcapopcode`, `tcapopcode2`, `tcapopcode3`, `tcapopcodetag`, `tcapopcodetag2`, `tcapopcodetag3`, `tcapfamily`, `tcapfamily2`, `tcapfamily3`, `mapparam`, `imsidgts`, `imeidgts`, `msisdndgts`, `vldgts`, `smrpoadgts`, `smrpdadgts`, `msisdnp`, `smrpoanp` or `smrpdanp` parameter can be specified.

5099 E5099 Cmd Rej: TCAP Opcode Based Routing feature must be turned ON

The `tcappkg` and `tcappkgv` parameters cannot be specified together in the command.

5054 E5054 Cmd Rej: PKG and PKGV must not be specified together

The values 1 and 3 cannot be specified for the `cdgti` and `cggti` parameters.

3553 E3553 Cmd Rej: GTI(A)=4, and GTI(x)=1 and 3 are not supported

The GTT feature must be turned on before this command can be entered.

2584 E2584 Cmd Rej: GTT feature must be ON

The J7 Support feature must be enabled before the `cgpcn16/cdpcn16/opcn16/dpcn16` parameters can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

`Tcapopcode2` cannot be 0-255 or none if `tcapopcode` = notpresent, and `tcapopcode3` cannot be 0-255 or none if `tcapopcode2` = notpresent.

2155 E2155 Cmd Rej: Invalid parameter combination specified

`tcapopcodetag2` cannot be local, global or none if `tcapopcodetag` = notpresent, and `tcapopcodetag3` cannot be local, global or none if `tcapopcodetag2` = notpresent.

2155 E2155 Cmd Rej: Invalid parameter combination specified

tcapopcodetag cannot be local, global or none if tcapopcodetag = notpresent, and tcapopcodetag2 cannot be local, global or none if tcapopcodetag2 = notpresent, and tcapopcodetag3 cannot be local, global or none if tcapopcodetag3 = notpresent.

2155 E2155 Cmd Rej: Invalid parameter combination specified

Notes

There is no J7 FAK dependency on ANSI/N24 point code parameters, i.e., cgpcn24/cdpcn24/opcn24/dpcn24/cgpcn24/cdpcn24/opcn24/dpcn24. The command can be entered successfully whether or not the J7 Support feature is enabled.

Output

```
chg-sccp-msg:msgn=1:tcapacn=7-8-9-0
```

```
tekelecstp 09-03-02 16:07:33 EST EAGLE 41.0.0
Command entered at terminal #4.
CHG-SCCP-MSG: MASP A - COMPLTD
```

```
;
```

```
chg-sccp-
msg:msgn=1:smrpoadgts=654789:smrpdanp=e164:smrpoanp=x121:imsidg
ts=123456
```

```
tekelecstp 15-06-01 16:07:33 EST EAGLE 46.3.0
Command entered at terminal #4.
CHG-SCCP-MSG: MASP A - COMPLTD
```

```
;
```

```
chg-sccp-
msg:msgn=1:tcapopcode=34:tcapopcode2=35:tcapopcode3=100
```

```
tekelecstp 16-10-03 14:18:10 MST EAGLE 46.5.0.0.0
Command entered at terminal #17.
CHG-SCCP-MSG: MASP A - COMPLTD
```

```
;
```

```
chg-sccp-msg:msgn=1:imeidgts=98715123450
```

```
tekelecstp 17-05-11 15:09:18 EST EAGLE 46.6.0
Command entered at terminal #4.
CHG-SCCP-MSG: MASP A - COMPLTD
```

```
;
```

Related Topics

- [rtrv-sccp-msg](#)
- [tst-msg](#)

4.1.116 chg-sccp-serv

Use this command to:

- Change the state of G-Flex and G-Port services to online or offline. Taking a service offline shifts the processing load to designated nodes.
- Add PCs to an existing service group for service re-route assignment, or change the relative cost (RC) of existing point codes in a group.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

serv (mandatory)

Service. The name of the service.

Range:

gflex

G-Flex (GSM Flexible Numbering)

gport

G-Port (GSM Mobile Number Portability)

mnp

Mobile Number Portability

gtt (optional)

GTT option indicator. This parameter specifies whether to use GTT as part of the re-routing procedure when the service is offline, and alternate PCs are not defined or not available.

Range:

no

Do not use GTT as part of the re-routing procedure.

yes

Use GTT as part of the re-routing procedure.

Default:

yes

pc1 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca1

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001–005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.

The point code `000-000-000` is not a valid point code.

pc1/pca1/pci1/pcn1/pcn241 (optional)

Alternate post-GTT-translated point code.

pc2 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca2

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001–005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.

The point code `000-000-000` is not a valid point code.

pc2/pca2/pci2/pcn2/pcn242 (optional)

Alternate post-GTT-translated point code.

pc3 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca3

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001–005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.

The point code `000-000-000` is not a valid point code.

pc3/pca3/pci3/pcn3/pcn243 (optional)

Alternate post-GTT-translated point code.

pc4 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca4

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001–005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

pci4/pca4/pci4/pcn4/pcn244 (optional)

Alternate post-GTT-translated point code.

pci1 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pci2 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pci3 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

*id—0-7*The point code *0-000-0* is not a valid point code.**pci4 (optional)**ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).**Range:***s-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*The point code *0-000-0* is not a valid point code.**pcn1 (optional)**ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**pcn2 (optional)**ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**pcn241 (optional)**24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn242 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn243 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn244 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn3 (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn4 (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfnti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

rc1 (optional)

Relative cost 1. The relative cost of the route for alternate post-GTT-translated point code 1.

Range:

0 - 99

rc2 (optional)

Relative cost 2. The relative cost of the route for alternate post-GTT-translated point code 2.

Range:

0 - 99

rc3 (optional)

Relative cost 3. The relative cost of the route for alternate post-GTT-translated point code 3.

Range:

0 - 99

rc4 (optional)

Relative cost 4. The relative cost of the route for alternate post-GTT-translated point code 4.

Range:

0 - 99

state (optional)

The state of the service.

**Note:**

Re-routing is performed when the service state is *offline*.

Range:

offline

online

Default:

offline

Example

```
chg-sccp-serv:serv=gport:state=online
chg-sccp-serv:serv=gport:pca1=1-1-1:rc1=10:
pca2=2-2-2:rc2=20:pca3=3-3-3:rc3=30:pca4=4-4-4:rc4=40
chg-sccp-serv:serv=gport:pci1=2-2-2:rc1=10:pci2=3-3-3:rc2=10
chg-sccp-serv:serv=gport:state=online:gtt=yes
```

Dependencies

The specified point code network type must match an existing point code network type.

2787 E2787 Cmd Rej: PC network type does not match existing PC network type

The point code and relative cost parameter values must be specified together as a pair in the command.

2815 E2815 Cmd Rej: PC and RC must be entered as a pair

The point code cannot match the existing site identification true point code.

2998 E2998 Cmd Rej: PC cannot match the SID

The mate remote point code must already exist as destination in the Ordered Route entity set or reside in a cluster destination for which ordered routes are specified.

2427 E2427 Cmd Rej: MPC does not exist in routing Table

The SCCP Service table cannot be full when the command is entered. For each supported service (G-Port and G-Flex), up to 7 point codes can be specified for each network type (ANSI, ITU-I, S-ITU-I, ITU-N, S-ITU-N, and ITU-N24).

4589 E4589 Cmd Rej: SCCP-SERV allocation within MRN table is full

A maximum of 7 point codes can be allocated to a group or SCCP Service set.

4590 E4590 Cmd Rej: Maximum point codes have been allocated to SCCP-SERV set

The Route table is corrupt or cannot be found by the system.

2648 E2648 Cmd Rej: Failed reading the route table

The Site Identification table is corrupt or cannot be found by the system.

2874 E2874 Cmd Rej: Failed reading site identification table

The MRN table is corrupt or cannot be found by the system.

2999 E2999 Cmd Rej: Failed reading the MRN table

The SCCP Service table is corrupt or cannot be found by the system.

4585 E4585 Cmd Rej: Failed reading SCCP service table

The A-Port or IGM feature, G-Flex feature, and G-Port feature must be enabled before the `serv=mnf`, `serv=gflex`, and `serv=gport` parameter can be specified, respectively.

4594 E4594 Cmd Rej: Feature associated with SERV must be ON or enabled

If the A-Port or IS41 GSM Migration (IGM) feature is enabled, the `serv=gport` parameter cannot be specified.

2814 E2814 Cmd Rej: GPORT invalid if APORT or IGM is enabled

The A-Port or IGM feature must be enabled before the `serv=mnf` parameter can be specified.

3330 3330 E3330 Cmd Rej: APORT or IGM must be enabled

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

At least one PC/RC pair (for example, the `pc1` and `rc1` parameters) must be specified.

3087 E3087 Cmd Rej: Must enter at least one PC/RC pair

The mated point code must be a full point code.

2865 E2865 Cmd Rej: Address (MPCx) of mate subsystem must be a full PC

Each new point code (specified by the `pc1`, `pc2`, `pc3`, or `pc4` parameter) must already exist in the destination table. See the `ent-dstn` command.

2169 E2169 Cmd Rej: Point code out of range

The same point code value cannot be entered more than once in the SCCP-SERV table.

2979 E2979 Cmd Rej: Cannot enter the same PC more than once

New and existing point codes cannot be entered together in the same command.

4586 E4586 Cmd Rej: Invalid Combination of New and Existing Point Codes

The specified MRN set must already exist in the MRN table for the SCCP-SERV table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

If the Flexible GTT Loadsharing feature is enabled, the specified point code must already exist in the specified SCCP-SERV set in the MRN table.

4483 E4483 Cmd Rej: PC does not exist in specified MRNSET

Notes

The SCCP Service table is part of the MRN table.

When using this command to modify relative cost values, all of the point codes that are specified in one command must exist in the same group in the SCCP-SERV table.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

This command supports the assignment of point codes to SCCP Service point code groups used for service re-route assignment. It is used to add point codes to a service group or to change the relative cost (RC) of existing point codes in a service group.

SCCP Service groups are organized by service (G-Flex or G-Port) and PC network type (ANSI, ITU-I, Spare ITU-I, ITU-N, Spare ITU-N, or ITUN-24). Up to 7 point codes can be in a network type grouping for service re-route load sharing. Up to 4 point codes can be added or modified in one command.

The `-sccp-serv` commands differ from the `-mrn` commands in that the service name (`serv` parameter) is required instead of an existing PC in the set serving as the key.

When using this command to add new point codes, none of the point codes that are specified in one command can exist in the group in the SCCP-SERV table and must all be added to the same SCCP-SERV group.

Output

The following example changes the SCCP service for G-Port to provision the point code and relative cost values: `chg-sccp-`

```
serv:serv=gport:pcal=1-1-1:rc1=10:pc2=1-1-2:rc2=20
```

```
tekelecstp 05-12-20 08:35:15 EST 35.0.0
CHG-SCCP-SRV : MASP A - COMPLTD
;
```

Related Topics

- [dlt-sccp-serv](#)
- [rtrv-sccp-serv](#)

4.1.117 chg-sccpopts

Use this command to change the values of one or more of the SCCP option indicators maintained in the STP options table.

Parameters

ac1en (optional)

Area code length. The length of the area code.



Note:

This parameter is used with the CgPN.

Range:

0 - 8

Default:

No change to the current value

System Default:

0 - If the `aclen` parameter was provisioned in the `chg-tifopts` command, then the value from the `chg-tifopts` command is used as the initial value for the `aclen` parameter in the `chg-sccpopts` command.

cc1en (optional)

Country code length. The length of the country code.

 **Note:**

This parameter is used with the CgPN.

Range:

0 - 3

Default:

No change to the current value

System Default:

0

class1seq (optional)

This parameter enables or disables Class 1 message sequencing.

Range:**on**

Enabled; Class 1 messages are guaranteed to be sequenced, but the messages are not load shared.

off

Disabled; Class 1 message sequencing is not guaranteed, but the messages might be load shared (if appropriate configuration exists).

Default:

Current value

System Default:

off

cnvainat (optional)

The value of the called party/calling party address Reserved for National Use bit when the message is routed to the ITU national network.

When SCCP Conversion is performed on a LIM card, this option is applied only in cases of domain crossing.

When message processing is done on an SCCP card, this option is applied always, regardless of whether there was domain crossing or not.

Range:**0**

The Reserved for National Use bit is not reserved for national use.

1

The Reserved for National Use bit is reserved for national use.

Default:

No change to the current value

System Default:**1****cnvclgitu (optional)**

This parameter enables or disables the CgPA conversion for ITU-I/ITU-I Spare/ITU-N/ITU-N Spare domain crossing during SCCP conversion.

Range:**on**

convert CgPA

off

do not convert CgPA

Default:*on**No change to the current value***System Default:***off***delccprefix (optional)**

This parameter specifies how to apply the DELCCPREFIX digit action to a Called Party Global Title Address (CdPA GTA).

Default:*on**No change to the current value***Range:*****pxwcc***

Apply the DELCCPREFIX digit action to the CdPA GTA only when the address has a International format. If this option is selected, then the Country Code is deleted and the GTA is prefixed with the Entity Id.

px4all

Apply the DELCCPREFIX digit action to the CdPA GTA in all cases. If this option is selected, then for an International format, the Country Code is deleted and the GTA is prefixed with the Entity Id. For a National format, the GTA is prefixed with the Entity ID.

df1tfallback (optional)

Default fallback option. This parameter specifies the action that is taken if the last translation doesn't match when performing GTT using a FLOBR-specific GTT mode.

Range:***no***

GTT fails and the MSU is discarded

yes

GTT is performed based on the last matched entry

Default:

No change to the current value

System Default:

no

df1tgttmode (optional)

Default GTT mode. The system default value of the GTT mode hierarchy used by the EAGLE when performing GTT.

Range:***acdcd***

Advanced CdPA GTT, CdPA GTT

acdcdcg

Advanced CdPA GTT, CgPA GTT, CdPA GTT

acdcdcg

Advanced CdPA GTT, CdPA GTT, CgPA GTT

cd

CdPA GTT only

cdcg

CdPA GTT, CgPA GTT

cg

CgPA GTT only

cgcd

CgPA GTT, CdPA GTT

cgacdcd

CgPA GTT, Advanced CdPA GTT, CdPA GTT

fcd

FLOBR CdPA only

fcg

FLOBR CgPA only

fcgacd

FLOBR CgPA, FLOBR CdPA

fcdfcg

FLOBR CdPA, FLOBR CgPA

gmstcapce (optional)

This parameter enables and disables the processing of GSM Map Screening for TCAP_Continue and TCAP_End messages.

Range:*on*

Enables GSM Map Screening for TCAP_Continue and TCAP_End messages

off

Disables GSM Map Screening for TCAP_Continue and TCAP_End messages

gttdist (optional)

This parameter specifies the type of card on which the GTT traffic will be distributed.

Range:*all*

Distribute GTT traffic among SCCP cards irrespective of their data types

gtt

Distribute GTT traffic among SCCP cards of data type GTT

dn

Distribute GTT traffic among SCCP cards of data type DN

imsi

Distribute GTT traffic among SCCP cards of data type IMSI

epap

Distribute GTT traffic among SCCP cards of data type DN, IMSI or EPAP

elap

Distribute GTT traffic among SCCP cards of data type ELAP

System Default Value:*all***intlunknai (optional)**

This parameter specifies whether International NAIs (*nai=intl*) are included in Unknown NAIs (*nai=unkn*) and should be considered for country code CgPN (*cccgpn*) conditioning.

Range:*no**yes*

Default:
No change to the current value

System Default:
no

itun16scmg (optional)

This parameter specifies whether sccp scmg meassages will be processed or not.

Range:
on

sccp scmg messages will be processed.

off

sccp scmg messages will not be processed.

Default:
No change to the current value

System Default:
off

mobrscpopc (optional)

The OPC that is derived from the SCCP message that is used as an exception class.

Range:

sccp

The OPC exception class uses the point code within the CGPA, if the CGPA portion of the message is "route-on-dpcssn". If the option is "route-on-gt", the *sccp* option is not used and defaults to the *mtp* option.

mtp

The OPC exception class uses the original MTP OPC value as its criteria.

tpc

The OPC exception class uses the EAGLE true point code for the criteria.

mtprgtt (optional)

This parameter specifies whether GTT is performed on an MTP-routed MSU and the routing that is performed on the MSU after GTT.

Range:

off

GTT is not performed

usemtpc

GTT is performed and the MSU is then routed to the original DPC

fullgtt

GTT is performed and the MSU is then routed to a translated DPC

Default:
No change to the current value

System Default:

off

mtprgttfallbk (optional)

This parameter specifies whether an MTP-routed MSU is MTP-routed after GTT failure.

Range:

mtproute

perform MTP routing on the MSU if a failure occurs during GTT

gttfail

discard the MSU if a failure occurs during GTT. Send UDTS if required.”

Default:

No change to the current value

System Default:

mtproute

subdfn (optional)

This parameter specifies whether S-Port Subscriber Differentiation is performed.

Range:

on

perform S-Port Subscriber Differentiation

off

do not perform S-Port Subscriber Differentiation

Default:

No change to the current value

System Default:

off

tgtt0 (optional)

This parameter enables or disables transaction-based GTT loadsharing for SCCP Class0 UDT, Class0 XUDT, UDTS, and XUDTS messages.

Range:

udt

Enables transaction-based GTT loadsharing for UDTS and Class0 UDT messages.

xudt

Enables transaction-based GTT loadsharing for XUDTS and Class0 XUDT messages.

both

Enables transaction-based GTT loadsharing for UDTS, XUDTS, Class0 UDT, and Class0 XUDT messages.

none

—Disables transaction-based GTT loadsharing for UDTS, XUDTS, Class0 UDT, and Class0 XUDT messages.

Default:

No change to current value

System Default:

none

tgtt1 (optional)

This parameter enables or disables transaction-based GTT loadsharing for SCCP Class1 UDT, Class1 XUDT, UDTS, and XUDTS messages.

Range:***udt***

Enables transaction-based GTT loadsharing for UDTS and Class1 UDT messages.

xudt

Enables transaction-based GTT loadsharing for XUDTS and Class1 XUDT messages.

both

Enables transaction-based GTT loadsharing for UDTS, XUDTS, Class1 UDT, and Class1 XUDT messages.

none

Disables transaction-based GTT loadsharing for UDTS, XUDTS, Class1 UDT, and Class1 XUDT messages.

Default:

No change to current value

System Default:

none

tgttudtkey (optional)

The transaction parameter for incoming UDT(S) messages. Messages with this parameter are routed to the same load-shared PC within a MAPGROUP or MRNGROUP.

Range:***mtp***

Transaction-based GTT loadsharing is performed using the mtp algorithm

tcap

Transaction-based GTT loadsharing is performed using the tcap algorithm

sccp

Transaction-based GTT loadsharing is performed using the sccp algorithm

enhmtp

Transaction-based GTT loadsharing is performed using the enhanced mtp algorithm

Default:

No change to current value

System Default:

mtp

tgttxudtkey (optional)

The transaction parameter for incoming XUDT(S) messages. Messages with this parameter are routed to the same load-shared PC within a MAPGROUP or MRNGROUP.

Range:***mtp***

Transaction-based GTT loadsharing is performed using the mtp algorithm

sccp

Transaction-based GTT loadsharing is performed using the sccp algorithm

enhmtp

Transaction-based GTT loadsharing is performed using the enhanced mtp algorithm

Default:

No change to current value

System Default:

mtp

unqgttse1 (optional)

This parameter specifies whether a GTT Selector search is performed on overlapped selectors.

Range:***bestmatch***

search overlapped GTT selectors if non-overlapped GTT selectors are not found

exactmatch

search only non-overlapped GTT selectors

Example

```
chg-sccpopts:class1seq=on
chg-sccpopts:mobrscpopc=sccp
chg-sccpopts:tgtt0=udt
chg-sccpopts:tgtt1=xudt
chg-sccpopts:tgttudtkey=mtp
chg-sccpopts:tgttxudtkey=sccp
chg-sccpopts:cclen=1:aclen=3
chg-sccpopts:dfltfallback=yes
```

```
chg-sccpopts:dfltgttmode=fcd
chg-sccpopts:mtprgttfallback=gttfail
chg-sccpopts:unqgttsel=exactmatch
chg-sccpopts:gttdist=dn
chg-sccpopts:gttdist=epap
chg-sccpopts:itun16scmg=on
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The STP Options table must be accessible.

2852 E2852 Cmd Rej: Failed reading STP Options table

The Origin-based MTP Routing feature must be turned on before the `mobrscpopc` parameter can be specified.

4584 E4584 Cmd Rej: MTP Origin Based Routing Feature must be ON

The Origin-based SCCP Routing feature must be turned on before the `dfltgttmode` parameter can have a value of `acdc`, `cgacdc`, `acdcgc`, `acdcgcg`, `cgcd`, `cdcg`, or `cg`.

5096 E5096 Cmd Rej: Origin Based SCCP Routing feature must be ON.

The GTTSET table must be accessible.

3544 E3544 Cmd Rej: Failed reading GTT Set Table

The Transaction-based GTT Loadsharing feature must be enabled before the `tgtt0`, `tgtt1`, `tgttudtkey`, or `tgttxudkey` parameters can be specified.

3364 E3364 Cmd Rej: Transaction Based GTT Load Sharing Feature must be Enabled.

The GSM Map Screening feature must be turned on before the `gmstcapce` parameter can be specified.

3883 E3883 Cmd Rej: GSM Map Screening feature must be ON

The ANSI/ITU SCCP Conversion feature must be enabled before the `cnvainat` or `cnvclgitu` parameter can be specified.

4171 E4171 Cmd Rej: SCCP Conversion feature must be enabled

The FLOBR feature must be turned on before the `dfltgttmode` parameter can have a value of `fcd`, `fcg`, `fcgfc`, or `fcdfcg` and before the `dfltfallback` parameter can be specified.

5060 E5060 Cmd Rej: Flexible Linkset Optional Based Routing must be ON

The MTP routed messages for SCCP Applications feature or the GWS Stop Action SCCP feature must be enabled before the `mtprgtt` or `mtprgttfallback` parameter can be specified.

4762 E4762 Cmd Rej: MTP routed SCCP or GWS Stop Action feature must be enabled

The S-Port Subscriber Differentiation feature must be enabled and turned on before the `subdfn` parameter can be specified.

4754 E4754 Cmd Rej: S-Port Subscriber Differentiation feature must be ON.

The ANSI/ITU SCCP Conversion feature must be ON before the `cnvclgitu` parameter can be specified.

9998 E9998 Cmd Rej: SCCP Conversion feature must be ON

The EPAP Data Split feature must be enabled before `GTTDIST=DN/IMSI` parameter can be specified.

5478 E5478 Cmd Rej: EPAP Data Split feature must be Enabled

The Dual ExAP Config feature or EPAP Data Split feature must be enabled before `GTTDIST = EPAP` parameter can be specified.

2434 E2434 Cmd Rej: Dual ExAP Config or EPAP Data Split must be ON

The Dual ExAP Config feature must be enabled before `GTTDIST=EPAP/ELAP` parameter can be specified.

2400 E2400 Cmd Rej: Dual ExAP Config feature must be Enabled

Either Dual ExAP Config or EPAP Data Split feature should be enabled before `GTTDIST=GTT` parameter can be specified.

3451 E3451 Cmd Rej: Controlled Feature is not enabled

The J7 Support feature must be enabled before the `ITUN16SCMG` parameter can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

Notes

None.

Output

```
chg-sccpopts:mtprggt=usemtppc
```

```
tekelecstp 10-02-10 20:09:11 EST EAGLE 42.0.0
chg-sccpopts:mtprggt=usemtppc
Command entered at terminal #4.
CHG-SCCPOPTS: MASP A - COMPLTD
;
```

```
chg-sccpopts:gttddist=elap
```

```
tekelecstp 12-07-11 14:47:02 EST EAGLE 45.0.0
chg-sccpopts:gttddist=elap
Command entered at terminal #4.
CHG-SCCPOPTS: MASP A - COMPLTD
;
```

Related Topics

- [rtrv-sccpopts](#)

4.1.118 chg-scr-aftpc

Use this command to change the attributes of a specific screening reference in the allowed affected point code category. Attributes that can be changed are the point code and the subsystem number.

Parameters **Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

ssn (mandatory)

Subsystem number.

Range:

*0 - 255, **

* —the full range of values from 0–255

actname (optional)

Action name. The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see the `chg-gws-actset` and `rtrv-gws-actset` commands).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —Remove an existing gateway screening stop action set from a gateway screening rule.

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range: 0 - 255, *

* —the full range of values from 0–255

force (optional)

When there are more than 200 affected screensets, this parameter will decide whether to execute the command successfully or not.

Range:

yes

no

Default:

no

id (optional)ITU international ID. The *ID* in the point code represented by *zone-area-id*.**Range: 0 - 7, ***

*—the full range of values from 0–7

mna (optional)16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.**Range:**

0--31,*

*—the full range of values from 0--31

msa (optional)24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.**Range: 0 - 255, ***

*—the full range of values from 000–255

narea (optional)

New ITU-international area value.

Range: 0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nc (optional)Network cluster value. Specifies one or more *nc* values for the network indicator and network cluster member values specified by the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.**Range:**

0 - 255, *

*—the full range of values from 0–255

ncm (optional)Network cluster member value. Specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.**Range:**

0 - 255, *

*—the full range of values from 0–255

ni (optional)

Network indicator value. Specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* —the full range of values from 0–255

nid (optional)

New ITU-international ID value

Range:

0 - 7, *

* —the full range of values from 0–7

Default:

No change to the current value

nmna (optional)

New 16-bit ITU national main number area. The new *mna* in the point code represented by *un-sna-mna*.

Range:

0--31, *

*—the full range of values from 0--31

nmsa (optional)

New 24-bit ITU-national main signaling area value. The new *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

* —the full range of values from 0–255

nnc (optional)

New network cluster. Specifies one or more *nnc* values for the screening reference specified in the *sr* parameter. It specifies the new *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* —the full range of values from 0–255

Default:

No change to the current value

nncm (optional)

New network cluster member. Specifies one or more *ncm* values for the screening reference specified in the *sr* parameter. It specifies the new *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* —the full range of values from 0–255

Default:

No change to the current value

nni (optional)

New network identifier. Specifies one or more *nni* values for the screening reference specified in the *sr* parameter. It specifies the new *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* —the full range of values from 0–255

Default:

No change to the current value

npc (optional)

New ITU-national point code.

**Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A for information on converting the point code format.

Range:

0 - 16383, *

* —the full range of values from 0–16383

Default:

No change to the current value

npc (optional)

ITU national point code.

Range:

0 - 16383, *

* —the full range of values from 0–16383

npcst (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

nsfi (optional)

The next screening category used in the gateway screening process. This parameter halts the gateway screening process, and the message then proceeds through normal routing.

Range:

stop

Default:

No change to the current value

nsna (optional)

New 16-bit ITU national sub number area. The new *sna* in the point code represented by *un-sna-mna*.

Range:

*0--15,**

*—the full range of values from 0--15

nsp (optional)

New 24-bit ITU national signaling point. The new *sp* of the point code represented by *msa-ssa-sp*.

Range:

*0 - 255, **

* —the full range of values from 0–255

nsr (optional)

Next screening reference. This parameter specifies which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No change to the current value

nssa (optional)

New 24-bit ITU national sub signaling area. The new *ssa* of the point code represented by *msa-ssa-sp*.

Range:

*0 - 255, **

* —the full range of values from 0–255

nssn (optional)

New subsystem number.

Range:

*0 - 255, **

* —the full range of values from 0–255

Default:

No change to the current value

nun (optional)

New 16-bit ITU national unit number. The new *un* in the point code represented by *un-sna-mna*.

Range:

0--127,*

*—the full range of values from 0--127

nzone (optional)

New ITU-international zone. The new *zone* for the point code represented by *zone-area-id*.

Range:

0 - 7, *

* —the full range of values from 0–7

Default:

No change to the current value

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

sna (optional)

16-bit ITU-national sub number area. The *sna* of the point code represented by *un-sna-mna*.

Range:

0--15,*

*—the full range of values from 0-15

sp (optional)

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

* —the full range of values from 0–255

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by the format *msa-ssa-sp*.

Range:

0 - 255, *

* —the full range of values from 0–255

un (optional)

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:

0--127,*

*—the full range of values from 0-127

zone (optional)ITU international zone. The *zone* in the point code represented by *zone-area-id*.**Range:**

0 - 7, *

* —the full range of values from 0–255

Example

```
chg-scr-
aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=254:nni=240:nnc=003:nncm
=030 :nssn=253
```

```
chg-scr-
aftpc:sr=iec:ni=240:nc=008:ncm=203:nssn=253:nsfi=stop:actname=c
opy
```

```
chg-scr-
aftpc:sr=aft1:zone=1:area=2:id=3:nsfi=stop:ssn=1:pcst=s:npcst=n
one
```

```
chg-scr-
aftpc:sr=aft2:un=1:sna=2:mna=1:nsfi=stop:ssn=1:nun=2:nsna=3:nm
na=2
```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the parameters `gwsa=off` and `gwsn=on`, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

N/A N/A

A complete point code must be specified, and must be one and only one, of the five point code parameter combinations: *ni-nc-ncm*, *zone-area-id*, *msa-ssa-sp*, *un-sna-mna*, or *npc*.

2556 E2556 Cmd Rej: A complete point code must be entered

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The new affected point code and subsystem number to be changed cannot already exist in the affected point code entity set.

2561 E2561 Cmd Rej: PC/SSN already exists in given SR

The `actname` parameter value must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command. These values are shown in the `ACTNAME` field of the `rtrv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `zone=*` parameter is specified, the `area=*` and `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `area=*` parameter is specified, the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, the `ssa=*` and `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations.

If the `ssa=*` parameter is specified, the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej; Point codes contain invalid wild card combinations.

If the `un=*` parameter is specified, the `sna=*` and `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range 0–255.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc=*` parameter is specified, the `ncm` parameter must be specified as an asterisk or as the full range 0–255.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk (`ni=*`) or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range 0–255.

2511 E2511 Cmd Rej: NC is invalid

If the `nsfi` parameter is specified, the parameter value must be `stop`.

3271 E3271 Cmd Rej: NSFI is invalid

If the `nsfi=stop` parameter is specified, the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

The character cannot be specified for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `msa`, `ssa`, `sp`, `un`, `sna`, `mna`, and `npc` parameters.

2527 E2527 Cmd Rej: C value not allowed

The Gateway Screening Rules table can contain a maximum of 372,600 rules.

N/A N/A

The specified screening reference (`sr`) must already exist in the database.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` and `npcst` parameters cannot be specified for ANSI, ITU-N24 or ITU-N16 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The affected point code and subsystem number to be changed must already exist in the affected point code entity set.

2559 E2559 Cmd Rej: PC/SSN does not exist in given SR

The J7 support feature must be enabled before the `un`, `sna`, `mna`, `nun`, `nsna`, or `nmna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 support feature must not be enabled before the `msa`, `ssa`, `sp`, `nmsa`, `nssa`, or `nsp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown/Invalid GWSOA parameter combination.

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

An asterisk cannot be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original `ent-scr-aftpc` command.

If the screen set reaches 100% capacity (indicated by the "100% full" message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

A screening reference is assigned to screen sets using the `ent-scrset` command. A screening reference can belong to multiple screen sets.

The spare point code subtype prefix `s-` is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters i.e., `ni`, `nc`, `ncm`, `nni`, `nnc` or `nncm`. The command can be entered successfully whether the J7 feature is enabled or not enabled.

If there are more than 200 affected screensets and the force parameter is set to **yes**, then the following warning message is displayed: "WARNING: Command may take up to 30 minutes" and the command proceeds successfully.

If there are more than 200 affected screensets and the force parameter is set to **no**, then the following notice is displayed: "Notice: Force parameter is required for affected screensets greater than 200" and the command is aborted.

Output

```
chg-scr-
aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=254:nni=240:nnc=003:nncm=030
:nssn=253
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
CHG-SCR-AFTPC: SCREEN SET AFFECTED - IEC 25% FULL
CHG-SCR-AFTPC: MASP A - COMPLTD
```

```
;
```

When there are more than 200 affected screensets and the force parameter is **no**:

```
chg-scr-
aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=254:nni=240:nnc=003:nncm=030
:nssn=253:force=no
```

Command entered at terminal #17.

```
;
```

```
tekelecstp 15-07-15 12:19:42 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-AFTPC: MASP A - Cannot access standby fixed disk.
CHG-SCR-AFTPC: MASP A - Simplex database update.
Notice: Force parameter is required for affected screensets greater than
200
CHG-SCR-AFTPC: MASP A - Command Aborted
```

When there are more than 200 affected screensets and the force parameter is **yes**:

```
chg-scr-
aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=254:nni=240:nnc=003:nncm
=030 :nssn=253:force=yes
```

Command entered at terminal #17.

```
;

tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-AFTPC: MASP A - Cannot access standby fixed disk.
CHG-SCR-AFTPC: MASP A - Simplex database update.
```

```
WARNING: Command may take upto 30 minutes.
-----
```

```
;
Command Accepted - Processing
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
Notice: The number of screensets affected is 201.
CHG-SCR-AFTPC: SCREEN SET AFFECTED - s1      1% FULL
CHG-SCR-AFTPC: SCREEN SET AFFECTED - s10     1% FULL
CHG-SCR-AFTPC: SCREEN SET AFFECTED - s100    1% FULL
CHG-SCR-AFTPC: SCREEN SET AFFECTED - s101    1% FULL
CHG-SCR-AFTPC: SCREEN SET AFFECTED - s102    1% FULL
-----
```

```
(List of affected screensets)
```

Related Topics

- [dlt-scr-aftpc](#)
- [ent-scr-aftpc](#)
- [rtrv-scr-aftpc](#)

4.1.119 chg-scr-blkdpc

Use this command to change the attributes of a specific screening reference in the blocked DPC category. Attributes that can be changed are the blocked destination point code, next screening function identifier, and the next screening reference.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

actname (optional)

Action name. The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —Remove an existing gateway screening stop action set from a gateway screening rule.

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

0 - 255, *, C

* —the full range of values from 0–255

C —continue

force (optional)

When there are more than 200 affected screensets, this parameter will decide whether to execute the command successfully or not.

Range:

yes

*no***Default:***no***id (optional)**

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

0 - 7, *, C

* —the full range of values from 0–7

C —continue

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

0 - 31, *, C

*--- the full range of values from 0--31

C--continue

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

* —the full range of values from 0–255

C —continue

narea (optional)

New ITU-international area value.

Range:

0 - 255, *, C

* —the full range of values from 0–255

C —continue

Default:

No change to the current value

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

* —the full range of values from 0–255

C —continue

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

* —the full range of values from 0–255

C —continue

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

* —the full range of values from 0–255

C —continue

nid (optional)

New ITU-international ID value.

Range:

0 - 7, *, C

* —the full range of values from 0–7

C —continue

Default:

No change to the current value

nmna (optional)

New 16-bit ITU national main number area. The new *mna* in the point code represented by *un-sna-mna*.

Range:

0 - 31, *, C

*--- the full range of values from 0--31

C--continue

nmsa (optional)

New 24-bit ITU-national main signaling area value. The new *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

nnc (optional)

New network cluster. This parameter specifies one or more *nnc* values for the screening reference specified in the *sr* parameter. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

Default:

No change to the current value

nncm (optional)

New network cluster member. This parameter specifies one or more *ncm* values for the screening reference specified in the *sr* parameter. It specifies the new *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

Default:

No change to the current value

nni (optional)

New network identifier. This parameter specifies one or more *nni* values for the screening reference specified in the *sr* parameter. It specifies the new *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

Default:

No change to the current value

nnpc (optional)

New ITU-national point code.

**Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A for information on converting the point code format.

Range:

0 - 16383, *, C

*—the full range of values from 0–16383

C—continue

Default:

No change to the current value

npc (optional)

ITU national point code.

Range:

0 - 16383, *, C

*—the full range of values from 0–16383

C—continue

npcst (optional)

New point code subtype. Indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

cgpa

Allowed CGPA is the next screening category

fail

Discard the received message

destfld

Allowed destination field (DESTFLD) is the next screening category

isup

ISUP message type (ISUP) is the next screening category

stop

The gateway screening process ends and the message proceeds through normal routing

Default:

No change to the current value

nsna (optional)

New 16-bit ITU national sub number area. The new *sna* in the point code represented by *un-sna-mna*.

Range:

0 - 15, *, C

*--- the full range of values from 0--15

C--continue

nsp (optional)

New 24-bit ITU national signaling point. The new *sp* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–16383

C—continue

nsr (optional)

Next screening reference. Indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No change to the current value

nssa (optional)

New 24-bit ITU national sub signaling area. The new *ssa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

nun (optional)

New 16-bit ITU national unit number. The new *un* in the point code represented by *un-sna-mna*.

Range:

0 - 127, *, C

*--- the full range of values from 0--127

C--continue

nzone (optional)

New ITU-international zone. The new *zone* for the point code represented by *zone-area-id*.

Range:

0 - 7, *, C

*—the full range of values from 0–7

C—continue

Default:

No change to the current value

pcst (optional)

Point code subtype. *z* indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

sna (optional)

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

0 - 15, *, C

*--- the full range of values from 0--15

C--continue

sp (optional)

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by the format *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

un (optional)

16-bit ITU-national unit number. The *un* in the point code represented by *un-sna-mna*.

Range:

0 - 127, *, C

*--- the full range of values from 0--127

C--continue

zone (optional)ITU international zone. The *zone* in the point code represented by *zone-area-id*.**Range:**

0 - 7, *, C

*—the full range of values from 0–255

C—continue

Example

```
chg-scr-blkdpc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=003:nncm=030
```

```
chg-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=wr2
```

```
chg-scr-blkdpc:sr=iec:ni=240:nc=010:ncm=010:nsfi=stop:actname=cr
```

```
chg-scr-blkdpc:sr=bdp1:npc=128:nsfi=fail:pcst=s:npcst=none
```

```
chg-scr-blkdpc:sr=iec:un=121:sna=10:mna=15:nun=50:nsna=5:nmna=10
```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the parameters `gwsa=off` and `gws=on`, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

N/A N/A

The Gateway Screening Rules table can contain a maximum of 360,600 rules.

2565 E2565 Cmd Rej: Gateway screening rules table is full

A complete point code must be specified, using the `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or `npc` combination unless a value of `c` is specified.

2556 E2556 Cmd Rej: A complete point code must be entered

A new point code entry must be specified by one and only one, of the five point code parameter combinations: `nni-nnc-nncm`, `nzone-narea-nid`, `nun-nsna-nmna`, `nmsa-nssa-nsp`, or `nnpc`. If the new point code entry is a different point code type than the existing point code entry, all subfields of the new point code type must be specified.

2501 E2501 Cmd Rej: Mixed point code types are not allowed

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The blocked DPC specified by `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna` or `npc` must already exist in the screening reference or within an existing range of DPCs.

3272 E3272 Cmd Rej: PC does not match existing entry in given SR

The new blocked DPC or DPC range defined by `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna` or `npc` cannot already exist in the screening reference or within an existing range of DPCs.

2558 E2558 Cmd Rej: Point code already exists in given SR

If an asterisk (*) is specified for the new blocked DPC, nothing that matches the specified range of DPCs can already exist in the DPC screening table for the screening reference.

2558 E2558 Cmd Rej: Point code already exists in given SR

If the `actname` parameter is specified, the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the `actname` parameter is specified, the `nsr` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `area=*` parameter is specified, then the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, then the `ssa=*` and `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=c` parameter is specified, then the `ssa` and `sp` parameters must have a value of `c` or must not be specified. If the `msa=c` parameter is specified, and the `ssa` and `sp` parameters are not specified, then the `ssa` and `sp` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `un=c` parameter is specified, then the `sna` and `mna` parameters must have a value of `c` or must not be specified. If the `un=c` parameter is specified, and the `sna` and `mna` parameters are not specified, then the `sna` and `mna` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range (0–255)

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range (0–255).

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk (`ni=*`) or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range (0–255).

2511 E2511 Cmd Rej: NC is invalid

If the `ni=c` parameter is specified, then the `nc` and `ncm` parameters must have a value of `c` or must not be specified. If the `ni=c` parameter is specified, and the `nc` and `ncm` parameters are not specified, then the `nc` and `ncm` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the specified `ni-nc-ncm`, `zone-area-id`, `un-sna-mna`, or `msa-ssa-sp` is not equal to `c-c-c`, or if the `npc=c` parameter is not specified, then the `nsfi=fail` parameter must be specified, and the `nsr` parameter cannot be specified.

2549 E2549 Cmd Rej: NSFI must be FAIL

If the `nnc` parameter is specified as a range, the `nncm` parameter must be specified as an asterisk or as the full range (0–255).

2511 E2511 Cmd Rej: NC is invalid

If the `nnc` parameter is specified as a single value or a range, a single value must be specified for the `nni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nnc` parameter is specified as an asterisk, the `nnm` parameter must be specified as an asterisk or as the full range (0–255).

2512 E2512 Cmd Rej: NCM is invalid

If the `nncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `nni` and `nnc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `nni` parameter is specified as an asterisk or as a range, the `nnc` and `nncm` parameters must be specified as an asterisk or as the full range (0–255).

2511 E2511 Cmd Rej: NC is invalid

If the value of the `nsfi` parameter is not *stop* or *fail*, then the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

If the `nsfi=fail` parameter is specified, then the `nni`, `nc`, `nncm`, `narea`, `nzone`, `nid`, `nmsa`, `nssa`, `nsp`, `npc`, `nun`, `nsna`, and `nmna` parameters cannot have a value of `c`.

2527 E2527 Cmd Rej: C value not allowed

The specified screening reference (`sr`) must already exist in the database.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The `pcst` and `npcst` parameters cannot be specified with `c` for a blocked screen reference (`sr`).

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `nncm`) for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU National point codes (parameters `un`, `sna`, `mna`). The `pcst` and `npcst` parameters cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `ssa=*` parameter is specified, then the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations.

If the `zone=*` parameter is specified, then the `area=*` and `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `zone=c` parameter is specified, then the `area` and `id` parameters must have a value of `c` or must not be specified. If the `zone=c` parameter is specified, and the `area` and `id` parameters are not specified, then the `area` and `id` parameters default to a value of `c` .

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

The `nsfi=fail` parameter cannot be specified when changing a continue entry.

2547 E2547 Cmd Rej: NSFI must not be FAIL

The `nsfi` and `nsr` parameters cannot be specified when changing a screening entry that is other than the continue entry (`c-c-c`).

2550 E2550 Cmd Rej: NSFI / NSR cannot be specified

The value of the `nsfi` parameter must be valid for the BLKDPC entity type.

3271 E3271 Cmd Rej: NSFI is invalid

The Gateway Screening Stop Action table is corrupt or cannot be found.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

If the specified `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, or `un-sna-mna` is equal to `c-c-c` or if the `npc=c` parameter is specified, the `nsfi=fail` parameter cannot be specified, and the `nni`, `nnc`, `nncm`, `nzone`, `narea`, `nid`, `nmsa`, `nssa`, `nsp`, `nun`, `nsna`, `nmna`, and `nnpc` parameters cannot be specified. Point code `c-c-c` and `npc=c` cannot be changed to a numbered point code.

2526 E2526 Cmd Rej: All new PC parms must be null if NI,ZONE,MSA,UN or NPC = C

The `nsfi` and `nsr` parameters must point to an existing screen, or the `nsfi=stop` parameter must be specified, and the `nsr` parameter cannot be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

The J7 support feature must be enabled before the `un/sna/mna/nun/nsna/nmna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 support feature must not be enabled before the `msa`, `ssa`, `sp`, `nmsa`, `nssa`, or `nsp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown/Invalid GWSOA parameter combination

Notes

When a blocked DPC screening reference is created, the first entry for a point code must be `c-c-c` or `npc=c` parameter. Subsequent entries must be specific point codes.

The character `c` is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the blocked DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, `nsfi`, and `nsr`. The point code is `npc=c` or subfields equal to `c-c-c`. When the character `c` is specified, the `nsfi` and `nsr` parameters must be specified.

If the character `c` is specified for the parameters `ni-nc-ncm`, `zone-area-id`, `un-sna-mna`, or `msa-ssa-sp`, the character `c` is the only value that can be specified for all three parameters. No other values can be used. For example, a point code `c-c-255` is not allowed. The point code must be `c-c-c`. The asterisk (*) value cannot be used with the character `c` (for example, a point code `c-c-*` is not allowed).

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code `c-c-c` or `npc=c`. The `nsfi` and `nsr` in this entry are examined to determine the next step in the screening process.

If the current `ni-nc-ncm`, `zone-area-id`, `un-sna-mna`, or `msa-ssa-sp` is equal to `c-c-c` or `npc=c`, only the `nsfi` and `nsr` can be changed. Otherwise, only the blocked DPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

An asterisk cannot be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the `ent-scr-blkdpc` command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` and `npcst` parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters i.e., `ni`, `nc`, `ncm`, `nnc`, or `nncm`. The command can be entered successfully whether the J7 feature is enabled or not enabled.

If there are more than 200 affected screensets and the force parameter is set to **yes**, then the following warning message is displayed: "WARNING: Command may take up to 30 minutes" and the command proceeds successfully.

If there are more than 200 affected screensets and the force parameter is set to **no**, then the following notice is displayed: "Notice: Force parameter is required for affected screensets greater than 200" and the command is aborted.

Output

```
chg-scr-
blkdpc:sr=ss01:ni=240:nc=010:ncm=010:nnc=003:nncm=030
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
CHG-SCR-BLKDPC: SCREEN SET AFFECTED - SS01 25% FULL
CHG-SCR-BLKDPC: MASP A - COMPLTD
```

```
;
```

When there are more than 200 affected screensets and the force parameter is **no**:

```
chg-scr-
blkdpc:sr=ss01:ni=240:nc=010:ncm=010:nnc=003:nncm=030:force=no
```

Command entered at terminal #17.

```
;
```

```
tekelecstp 15-07-15 12:19:42 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-BLKDPC: MASP A - Cannot access standby fixed disk.
CHG-SCR-BLKDPC: MASP A - Simplex database update.
Notice: Force parameter is required for affected screensets
greater than 200
```

```
CHG-SCR-BLKDPC: MASP A - Command Aborted
```

When there are more than 200 affected screensets and the force parameter is **yes**:

```
chg-scr-
blkdpc:sr=ss01:ni=240:nc=010:ncm=010:nni=240:nnc=003:nncm=030:force=
yes
```

```
Command entered at terminal #17.
```

```
;
```

```
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-BLKDPC: MASP A - Cannot access standby fixed disk.
CHG-SCR-BLKDPC: MASP A - Simplex database update.
WARNING: Command may take upto 30 minutes.
-----
```

```
;
```

```
Command Accepted - Processing
```

```
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
Notice: The number of screensets affected is 201.
CHG-SCR-BLKDPC: SCREEN SET AFFECTED - s1      1% FULL
CHG-SCR-BLKDPC: SCREEN SET AFFECTED - s10     1% FULL
CHG-SCR-BLKDPC: SCREEN SET AFFECTED - s100    1% FULL
CHG-SCR-BLKDPC: SCREEN SET AFFECTED - s101    1% FULL
CHG-SCR-BLKDPC: SCREEN SET AFFECTED - s102    1% FULL
-----
-----
```

```
(List of affected screensets)
```

Related Topics

- [dlt-scr-blkdpc](#)
- [ent-scr-blkdpc](#)
- [rtrv-scr-blkdpc](#)

4.1.120 chg-scr-blkopc

Use this command to change the attributes associated with a screening reference in the blocked OPC category. Attributes that can be changed are the point code, next screening function identifier, and next screening reference.

Parameters

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

actname (optional)

Name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —Remove an existing gateway screening stop action set from a gateway screening rule

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, *, C*

*** —the full range of values from 0–255

C —continue

force (optional)

When there are more than 200 affected screensets, this parameter will decide whether to execute the command successfully or not.

Range:

yes

no

Default:

no

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

*0 - 255, *, C*

*** —the full range of values from 0–7

C —continue

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

*0 - 31, *, C*

**--* the full range of values from 0--31

*C--*continue

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

*0 - 255, *, C*

*** —the full range of values from 0–7

C —continue

narea (optional)

New ITU-international area value.

Range:

0 - 255, *, C

* —the full range of values from 0–255

C —continue

Default:

No change to the current value

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

* —the full range of values from 0–255

C —continue

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

* —the full range of values from 0–255

C —continue

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

* —the full range of values from 0–255

C —continue

nid (optional)

New ITU-international ID value.

Range:

0 - 7, *, C

* —the full range of values from 0–7

C —continue

Default:

No change to the current value

nmna (optional)

New 16-bit ITU national main number area. The new *mna* in the point code represented by *un-sna-mna*.

Range:

0 - 31, *, C

*--- the full range of values from 0--31

C--continue

nmsa (optional)

New 24-bit ITU-national main signaling area value. The new *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

nnc (optional)

New network cluster. This parameter specifies one or more *nnc* values for the screening reference specified in the *sr* parameter. It specifies the new *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

Default:

No change to the current value

nncm (optional)

New network cluster member. This parameter specifies one or more *ncm* values for the screening reference specified in the *sr* parameter. It specifies the new *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

Default:

No change to the current value

nni (optional)

New network identifier. This parameter specifies one or more *nni* values for the screening reference specified in the *sr* parameter. It specifies the new *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

Default:

No change to the current value

nnpc (optional)

New ITU-national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A for information on converting the point code format.

Range:

0 - 16383, *, C

*—the full range of values from 0–16383

C—continue

Default:

No change to the current value

npc (optional)

ITU national point code.

Range:

0 - 16383, *, C

*—the full range of values from 0–16383

C—continue

npcst (optional)

New point code subtype. Indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

cgpa

Allowed CGPA

fail

Discard the received message.

stop

The gateway screening process ends and the message proceeds through normal routing.

sio

Allowed SIO

dpc
Allowed DPC

blkdpc
Blocked DPC

Default:
No change to the current value

nsna (optional)
New 16-bit ITU national sub number area. The new *sna* in the point code represented by *un-sna-mna*.

Range:
0 - 15, *, C
*--- the full range of values from 0--15
C--continue

nsp (optional)
New 24-bit ITU national signaling point. This parameter specifies the new *sp* of the point code represented by *msa-ssa-sp*.

Range:
0 - 255, *, C
* —the full range of values from 0–255
C —continue

nsr (optional)
Next screening reference. The parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:
ayyy
1 alphabetic character followed by up to 3 alphanumeric characters

Default:
No change to the current value

nssa (optional)
New 24-bit ITU national sub signaling area. The new *ssa* of the point code represented by *msa-ssa-sp*.

Range:
0 - 255, *, C
* —the full range of values from 0–255
C —continue

nun (optional)
New 16-bit ITU national unit number. The new *un* in the point code represented by *un-sna-mna*.

Range:
0 - 127, *, C
*--- the full range of values from 0--127
C--continue

nzone (optional)

New ITU-international zone. The new zone for the point code represented by *zone-area-id*.

Range:

0 - 7, *, C

*—the full range of values from 0–7

C—continue

Default:

No change to the current value

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

sna (optional)

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

0 - 15, *, C

*--- the full range of values from 0--15

C--continue

sp (optional)

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

un (optional)

16-bit ITU-national unit number. The *un* in the point code represented by *un-sna-mna*.

Range:

0 - 127, *, C

*--- the full range of values from 0--127

C--continue

zone (optional)

ITU international zone. The *zone* in the point code represented by *zone-area-id*.

Range:

0 - 7, *, C

* —the full range of values from 0–7

C —continue

Example

```
chg-scr-
blkopc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=010:nncm=020

chg-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=dpc:nsr=wrld1

chg-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=stop:actname=none

chg-scr-blkopc:sr=bop1:npc=128:nsfi=fail:pcst=s:npcst=none

chg-scr-
blkopc:sr=iec:un=121:sna=10:mna=15:nun=50:nsna=5:nmna=10
```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the parameters `gwsa=off` and `gws=on`, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

N/A N/A

A complete point code must be specified, using the `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or `npc` combination unless a value of `c` is specified.

2556 E2556 Cmd Rej: A complete point code must be entered

A new point code entry must be specified by one, and only one of the five point code parameter combinations: `nni-nnc-nncm`, `nzone-narea-nid`, `nmsa-nssa-nsp`, `nun-nsna-nmna` or `nnpc`. If the new point code entry is a different point code type than the existing point code entry, all subfields of the new point code type must be specified.

2501 E2501 Cmd Rej: Mixed point code types are not allowed

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The blocked OPC specified by the `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or `npc` parameter must already exist in the screening reference or within an existing range of OPCs.

3272 E3272 Cmd Rej: PC does not match existing entry in given SR

The new blocked OPC or OPC range defined by the `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or `npc` parameter must not already exist in the screening reference or within an existing range of OPCs.

2558 E2558 Cmd Rej: Point code already exists in given SR

If the `actname` parameter is specified, the `nsr` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

The `actname` parameter value must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `area=*` parameter is specified, then the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, then the `ssa=*` and `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=c` parameter is specified, then the `ssa` and `sp` parameters must have a value of `c` or must not be specified. If the `msa=c` parameter is specified, and the `ssa` and `sp` parameters are not specified, then the `ssa` and `sp` parameters default to a value of `c` .

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `un=c` parameter is specified, then the `sna` and `mna` parameters must have a value of `cor` must not be specified. If the `un=c` parameter is specified, and the `sna` and `sp` parameters are not specified, then the `sna` and `mna` parameters default to a value of `c` .

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

The `nsfi` and `nsr` parameters must point to an existing screen, or the `nsfi=stop` parameter must be specified, and the `nsr` parameter cannot be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc=*` parameter is specified, the `ncm` parameter must be specified as an asterisk or as the full range 0–255.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `ni=c` parameter is specified, then the `nc` and the `ncm` parameters must have a value of `c` or must not be specified. If the `ni=c` parameter is specified, and the `nc` and the `ncm` parameters are not specified, then the `nc` and `ncm` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `nnc` parameter is specified as a range, the `nncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nnc` parameter is specified as a single value or a range, a single value must be specified for the `nni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nnc=*` parameter is specified, the `nnm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `nni` and `nnc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `nni` parameter is specified as an asterisk or as a range, the `nnc` and `nncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nsfi=fail` parameter is specified, then the `nni`, `nc`, `nncm`, `narea`, `nzone`, `nid`, `nmsa`, `nssa`, `nsp`, `nun`, `nsna`, `nmna`, and `npc` parameters cannot have a value of `c`.

2527 E2527 Cmd Rej: C value not allowed

When changing a screening entry, and the `nsfi=fail` parameter is specified, the `nni`, `nnc`, `nncm`, `narea`, `nzone`, `nid`, `nmsa`, `nssa`, `nsp`, `nun`, `nsna`, `nmna`, and `npc` parameters cannot have a value of `c`.

N/A N/A

If the specified `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, or `un-sna-mna` is equal `toc-c-cor` if the `npc=c` parameter is specified, the `nsfi=fail` parameter cannot be

specified, and the `nni`, `nnc`, `nncm`, `nzone`, `narea`, `nid`, `nmsa`, `nssa`, `nsp`, `nun`, `nsna`, `nmna`, and `npc` parameters cannot be specified. Point code `c-c-c` and `npc=c` cannot be changed to a numbered point code.

2526 E2526 Cmd Rej: All new PC parms must be null if NI,ZONE,MSA,UN or NPC = C

If the specified `ni-nc-ncm`, `zone-area-id`, `un-sna-mna`, or `msa-ssa-sp` is not equal to `c-c-c`, or the `npc=c` parameter is not specified, the `nsfi=fail` parameter must be specified, and the `nsr` parameter cannot be specified.

2549 E2549 Cmd Rej: NSFI must be FAIL

If the `ssa=*` parameter is specified, then the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

The specified screening reference must already exist in the database.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Spare Point Code Support feature must be enabled before the `pcst` and `npcst` parameters can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The `pcst` and `npcst` parameters cannot be specified if the `sr=c` parameter is specified.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` and `npcst` parameters cannot be specified for ANSI, ITU-N24 or ITU-N16 point codes.

4265 E4265 Cmd Rej: Network Appearance table full

If the `zone=*` parameter is specified, then the `area=*` and `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `zone=c` parameter is specified, then the `area` and `id` parameters must have a value of `c` or must not be specified. If the `zone=c` parameter is specified, and the `area` and the `id` parameters are not specified, then the `area` and `id` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `actname` parameter is specified, then the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

The value of the `nsfi` parameter must be valid for the BLKOPC entity type.

3271 E3271 Cmd Rej: NSFI is invalid

The `nsr` parameter cannot be specified if a stop action is specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

If the specified `ni-nc-ncm`, `zone-area-id`, `un-sna-mna`, or `msa-ssa-sp` equals `c-c-c`, then the `nsfi=fail` parameter cannot be specified.

2547 E2547 Cmd Rej: NSFI must not be FAIL

If the specified `ni-nc-ncm`, `zone-area-id`, `un-sna-mna` or `msa-ssa-sp` is not equal to `c-c-c`, or if the `npc=c` parameter is not specified, then the `nsfi=fail` parameter must be specified, and the `nsr` parameter cannot be specified.

2549 E2549 Cmd Rej: NSFI must be FAIL

The `nsfi` and `nsr` parameters cannot be specified when changing a screening entry that is other than `c-c-c`.

2550 E2550 Cmd Rej: NSFI / NSR cannot be specified

The `nsr` parameter must be specified when the next screening function identifier (`nsfi`) is not equal to `stop` or `fail`.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

The Gateway Screening Stop Action table is corrupt or cannot be found.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The J7 Support feature must be enabled before the `un/sna/mna/nun/nsna/nmna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 support feature must not be enabled before the `msa`, `ssa`, `sp`, `nmsa`, `nssa`, or `nsp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown/Invalid GWSOA parameter combination

Notes

When a blocked OPC screening reference is created, the first entry for a point code must be `c-c-c` or `c` for the `npc` parameter. Subsequent entries must be specific point codes.

The character `c` is used in the blocked OPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked OPC screens. When screening for a blocked OPC and the point code being screened does not match any of the point codes in the blocked OPC screens, the message is not rejected and the screening process continues. There must be an entry in the blocked OPC screens to allow the screening process to continue.

This entry consists of a screening reference, point code, `nsfi`, and `nsr`. The point code is `npc=c` or subfields equal to `c`. When the character `c` is specified, the `nsfi` and `nsr` parameters must be specified.

If the character `c` is specified for the parameters `ni-nc-ncm`, `zone-area-id`, `un-sna-mna` or `msa-ssa-sp`, the character `c` is the only value that can be specified for all three parameters. No other values can be used. For example, a point code `c-c-255`

is not allowed. The point code must be *c-c-c*. The asterisk (*) value cannot be used with the character *c* (for example, a point code *c-c-** is not allowed).

When the point code does not match any entries in the blocked OPC screens, the screening process is directed to the screening reference with the point code *c-c-c* or *npc=c*. The *nsfi* and *nsr* in this entry are examined to determine the next step in the screening process.

If the current *ni-nc-ncm*, *zone-area-id*, *un-sna-mna* or *msa-ssa-sp* is equal to *c-c-c* or *npc=c*, only the *nsfi* and *nsr* can be changed. Otherwise, only the blocked OPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, *ni=025&&100* specifies all network indicators for ANSI point codes from 25 - 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original *ent-scr-blkopc* command.

If the screen set reaches 100% capacity (indicated by the "100% full" message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The *pcst* and *npcst* parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters i.e., *ni*, *nc*, *ncm*, *nni*, *nnc*, or *nncm*. The command can be entered successfully whether the J7 Support feature is enabled or not enabled.

If there are more than 200 affected screensets and the force parameter is set to **yes**, then the following warning message is displayed: "WARNING: Command may take up to 30 minutes" and the command proceeds successfully.

If there are more than 200 affected screensets and the force parameter is set to **no**, then the following notice is displayed: "Notice: Force parameter is required for affected screensets greater than 200" and the command is aborted.

Output

```
chg-scr-blkopc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=010:nncm=020
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
CHG-SCR-BLKOPC: SCREEN SET AFFECTED - IEC 25% FULL
CHG-SCR-BLKOPC: MASP A - COMPLTD
;
```

When there are more than 200 affected screensets and the force parameter is **no**:

```
chg-scr-blkopc:sr=bo1:nsfi=sio:nsr=sr2:nc=c:ncm=c:ni=c:force=no
```

```
Command entered at terminal #17.
;
```

```
tekelecstp 15-07-15 12:19:42 MST EAGLE5 46.3.0.0.0-66.10.0
```

```

CHG-SCR-BLKOPC: MASP A - Cannot access standby fixed disk.
CHG-SCR-BLKOPC: MASP A - Simplex database update.
Notice: Force parameter is required for affected screensets
greater than 200
CHG-SCR-BLKOPC: MASP A - Command Aborted

```

When there are more than 200 affected screensets and the force parameter is **yes**:

```

chg-scr-
blkopc:sr=bol:nsfi=sio:nsr=sr2:nc=c:ncm=c:ni=c:force=yes

```

Command entered at terminal #17.

```

;

tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-BLKOPC: MASP A - Cannot access standby fixed disk.
CHG-SCR-BLKOPC: MASP A - Simplex database update.

WARNING: Command may take upto 30 minutes.
-----
;
Command Accepted - Processing
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
Notice: The number of screensets affected is 201.
CHG-SCR-BLKOPC: SCREEN SET AFFECTED - s1      1% FULL
CHG-SCR-BLKOPC: SCREEN SET AFFECTED - s10     1% FULL
CHG-SCR-BLKOPC: SCREEN SET AFFECTED - s100    1% FULL
CHG-SCR-BLKOPC: SCREEN SET AFFECTED - s101    1% FULL
CHG-SCR-BLKOPC: SCREEN SET AFFECTED - s102    1% FULL
-----
-----
(List of affected screensets)

```

Related Topics

- [dlt-scr-blkopc](#)
- [ent-scr-blkopc](#)
- [rtrv-scr-blkopc](#)

4.1.121 chg-scr-cdpa

Use this command to change the attributes associated with a specific screening reference in the allowed called party address category. Attributes that can be changed are the point code, subsystem number, next screening function identifier, and next screening reference.

Parameters

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

ssn (mandatory)

Subsystem number.

Range:

0 - 255, *

* —the full range of values from 0–255

actname (optional)Action name. The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).**Range:**

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —Remove an existing gateway screening stop action set from a gateway screening rule.**area (optional)**ITU international area. The *area* in the point code represented by *zone-area-id*.**Range:**

0 - 255, *

* —the full range of values from 0–255

force (optional)

When there are more than 200 affected screensets, this parameter will decide whether to execute the command successfully or not.

Range:

yes

*no***Default:***no***id (optional)**ITU international ID. The *ID* in the point code represented by *zone-area-id*.**Range:**

0 - 7, *

* —the full range of values from 0–7

mna (optional)16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.**Range:**

0 - 31, *

*--- the full range of values from 0--31, *

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

* —the full range of values from 0–255

narea (optional)

New ITU-international area value. A

Range:

0 - 255, *

* —the full range of values from 0–255

Default:

No change to the current value

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* —the full range of values from 0–255

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* —the full range of values from 0–255

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* —the full range of values from 0–255

nid (optional)

New ITU-international ID value.

Range:

0 - 7, *

* —the full range of values from 0–7

Default:

No change to the current value

nmna (optional)

New 16-bit ITU national main number area. The new *mna* in the point code represented by *un-sna-mna*.

Range:

0 - 31, *

*--- the full range of values from 0--31, *

nmsa (optional)

New 24-bit ITU-national main signaling area value. The new *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

nnc (optional)

New network cluster. This parameter specifies one or more *nnc* values for the screening reference specified in the *sr* parameter. It specifies the new *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nncm (optional)

New network cluster member. This parameter specifies one or more *ncm* values for the screening reference specified in the *sr* parameter. It specifies the new *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nni (optional)

New network identifier. This parameter specifies one or mor *nni* values for the screening reference specified in the *sr* parameter. It specifies the new *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nnpc (optional)

New ITU-national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A for information on converting the point code format.

Range:

0 - 16383, *

* —the full range of values from 0–16383

Default:

No change to the current value

npc (optional)

ITU national point code.

Range:

0 - 16383, *

* —the full range of values from 0–16383

npcst (optional)

New point code subtype. Indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

nscmgfid (optional)

New SCMG format ID

Range:

1 - 255, *

* —the full range of values from 0–255

Default:

No change to the current value

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

aftpc

Allowed affected point code is the next screening category

stop

The gateway screening process ends and the message proceeds through normal routing.

Default:

No change to the current value

nsna (optional)

New 16-bit ITU national sub number area. The new *sna* in the point code represented by *un-sna-mna*.

Range:

0 - 15, *

*--- the full range of values from 0--15, *

nsp (optional)

New 24-bit ITU national signaling point. The new *sp* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

nsr (optional)

Next screening reference. This parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No change to the current value

nssa (optional)

New 24-bit ITU national sub signaling area. The new *ssa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

nssn (optional)

New subsystem number

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nun (optional)

New 16-bit ITU national unit number. The new *un* in the point code represented by *un-sna-mna*.

Range:

0 - 127, *

*--- the full range of values from 0--127, *

nzone (optional)

New ITU-international zone. The new *zone* for the point code represented by *zone-area-id*.

Range:

0 - 7, *

*—the full range of values from 0–255

Default:

No change to the current value

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:*none**s***Default:***none***scmgfid (optional)**

SCCP management format ID. This parameter consists of a one-octet field and uniquely defines the function and format of each SCMG message. The following SCCP message types are screened against the Allowed CDPA table and all others are passed: UDT, UDTS, XUDT, XUDTS.

Range:

1 - 255, *

*—the full range of values from 1–255

sna (optional)

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

0 - 15, *

*--- the full range of values from 0--15, *

sp (optional)

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255

*—the full range of values from 0–255

un (optional)

16-bit ITU-national unit number. The *un* in the point code represented by *un-sna-mna*.

Range:

0 - 127, *

*--- the full range of values from 0--127, *

zone (optional)

ITU international zone. The *zone* in the point code represented by *zone-area-id*.

Range:

0 - 7

*—the full range of values from 0–255

Example

```
chg-scr-
cdpa:sr=cdp1:ni=5:nc=5:ncm=5:ssn=1:scmgfid=4:nsfi=stop:nni=6:nncm=3
:nssn=*
```

```
chg-scr-
cdpa:sr=cdp1:ni=c:nc=c:ncm=c:ssn=1:scmgfid=3:nsfi=stop:actname=copy
```

```
chg-scr-
cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:nsfi=stop:pcst=s
:npcst=none
```

```
chg-scr-
cdpa:sr=cdp1:un=1:sna=2:mna=1:ssn=1:nun=2:nsna=3:nmna=2:nsfi=stop
```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the parameters `gwsa=off` and `gwsn=on`, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

N/A N/A

A complete point code must be specified, and must be one and only one of the five point code parameter combinations: `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna` or `npc`, except in the special case of entering `c` for "continue."

2556 E2556 Cmd Rej: A complete point code must be entered

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The CDPA point code, `scmgfid`, and `ssn` to be changed must already exist in the CDPA entity set.

2517 E2517 Cmd Rej: PC/SSN/SCMGFID does not exist in given SR

The new CDPA point code, `scmgfid`, and `ssn` cannot already exist in the CDPA entity set.

2516 E2516 Cmd Rej: PC/SSN/SCMGFID already exists in given SR

If the `actname` parameter is specified, the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the `actname` parameter is specified, the `nsr` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

The `actname` parameter value must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc=*` parameter is specified, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nnc` parameter is specified as a range, the `nncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nnC` parameter is specified as a single value or a range, a single value must be specified for the `nni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nnC=*` parameter is specified, the `nnm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `nni` and the `nnC` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `nni` parameter is specified as an asterisk or as a range, the `nnC` and `nncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nsfi=aftpc` parameter is specified, the `ssn=1` parameter must be specified.

2484 E2484 Cmd Rej: SSN must be 1 if NSFI=AFTPC

If the `nsfi=stop` parameter is specified, the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

If the `nsfi` parameter is specified with a value other than `stop`, the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

The next screening function identifier (`nsfi`) and the next screening reference (`nsr`) must point to an existing screen, or the `nsfi` must be equal to `stop` and the `nsr` must not be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

The specified screening reference must already exist in the database.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` and `npcst` parameters cannot be specified for ANSI, ITU-N24, or ITU-N16 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `ssn` parameter is specified with a value other than 1, the `scmgfid` parameter cannot be specified.

2508 E2508 Cmd Rej: SCMGFID is invalid

If the `ssn=1` parameter is specified, the `scmgfid` parameter must be specified.

2508 E2508 Cmd Rej: SCMGFID is invalid

The specified value for the `nsfi` parameter is not valid for `cdpa` screen.

3271 E3271 Cmd Rej: NSFI is invalid

The Gateway Screening Stop Action table is corrupt or cannot be found.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The J7 Support feature must be enabled before the `un`, `sna`, `mna`, `nun`, `nsna`, or `nmna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 Support feature must not be enabled before the `msa`, `ssa`, `sp`, `nmsa`, `nssa`, or `nsp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown/Invalid GWSOA parameter combination

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk can be specified for a parameter value in the `chg/dlt-scr-cdpa` commands only if that parameter value was specified as an asterisk in the `ent-scr-cdpa` command to define the parameter value.

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters i.e., `ni`, `nc`, `ncm`, `nni`, `nnc`, or `nncm`. The command can be entered successfully whether the J7 Support feature is enabled or not enabled.

If there are more than 200 affected screensets and the `force` parameter is set to **yes**, then the following warning message is displayed: "WARNING: Command may take up to 30 minutes" and the command proceeds successfully.

If there are more than 200 affected screensets and the `force` parameter is set to **no**, then the following notice is displayed: "Notice: Force parameter is required for affected screensets greater than 200" and the command is aborted.

Output

```
chg-scr-
cdpa:sr=cdp1:ni=5:nc=5:ncm=5:ssn=1:scmgfid=4:nsfi=stop:nni=6:nncm=3
:nssn=*
```

```
rlghncxa03w 04-01-14 15:35:30 EST EAGLE 31.3.0
CHG-SCR-CDPA: MASP A - COMPLTD
```

```
;
```

When there are more than 200 affected screensets and the `force` parameter is **no**:

```
chg-scr-
cdpa:sr=cd1:nsfi=aftpc:nsr=af2:ni=4:nc=1:ncm=1:ssn=1:scmgfid=1:force
=no
```

Command entered at terminal #17.

```
;
```

```
tekelecstp 15-07-15 12:19:42 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-CDPA: MASP A - Cannot access standby fixed disk.
CHG-SCR-CDPA: MASP A - Simplex database update.
Notice: Force parameter is required for affected screensets greater than
200
CHG-SCR-CDPA: MASP A - Command Aborted
```

When there are more than 200 affected screensets and the `force` parameter is **yes**:

```
chg-scr-
cdpa:sr=cd1:nsfi=aftpc:nsr=af2:ni=4:nc=1:ncm=1:ssn=1:scmgfid=1:force
=yes
```

Command entered at terminal #17.

```
;
```

```
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-CDPA: MASP A - Cannot access standby fixed disk.
CHG-SCR-CDPA: MASP A - Simplex database update.
```

```
WARNING: Command may take upto 30 minutes.
-----
```

```
;
```

Command Accepted - Processing

```
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
Notice: The number of screensets affected is 201.
CHG-SCR-CDPA: SCREEN SET AFFECTED - s1      1% FULL
CHG-SCR-CDPA: SCREEN SET AFFECTED - s10     1% FULL
CHG-SCR-CDPA: SCREEN SET AFFECTED - s100    1% FULL
CHG-SCR-CDPA: SCREEN SET AFFECTED - s101    1% FULL
CHG-SCR-CDPA: SCREEN SET AFFECTED - s102    1% FULL
-----
```

(List of affected screensets)

Related Topics

- [dlt-scr-cdpa](#)
- [ent-scr-cdpa](#)
- [rtrv-scr-cdpa](#)

4.1.122 chg-scr-cgpa

Use this command to change the attributes associated with a specific screening reference in the allowed calling party address category. Attributes that can be changed are the point code, subsystem number, routing indicator, next screening function identifier, and next screening reference.

Parameters

ri (mandatory)

Routing indicator. This parameter specifies routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range:

dpc

Allow a called party address with a routing indicator value of "DPC/SSN."

gt

Screening stops and gateway screening is bypassed as a forced pass.

*

Allow both routing indicator values.

sccpmt (mandatory)

SCCP message type.

Range:

9

UDT

10

UDTS

17

XUDT

18

XUDTS

*

full range of values

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

ssn (mandatory)

Subsystem number

Range:

*1 - 255, **

* —the full range of values from 1–255

actname (optional)

Action name. The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —remove an existing gateway screening stop action set from a gateway screening rule

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, **

* —the full range of values from 0–255

force (optional)

When there are more than 200 affected screensets, this parameter will decide whether to execute the command successfully or not.

Range:

yes

no

Default:

no

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

*0 - 7, **

* —the full range of values from 0–7

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

0 - 31, *

*--- the full range of values from 0--31, *

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

* —the full range of values from 0–255

narea (optional)

New ITU-international area value

Range:

0 - 255, *

* —the full range of values from 0–255

Default:

No change to the current value

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* —the full range of values from 0–255

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* —the full range of values from 0–255

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* —the full range of values from 0–255

nid (optional)

New ITU-international ID value.

Range:

0 - 7, *

* —the full range of values from 0–7

Default:

No change to the current value

nmna (optional)

New 16-bit ITU national main number area. The new *mna* in the point code represented by *un-sna-mna*.

Range:

0 - 31, *

*--- the full range of values from 0--31, *

nmsa (optional)

New 24-bit ITU-national main signaling area value. The new *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

nnc (optional)

New network cluster. This parameter specifies one or more *nnc* values for the screening reference specified in the *sr* parameter. It specifies the new *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nncm (optional)

New network cluster member. This parameter specifies one or more *ncm* values for the screening reference specified in the *sr* parameter. It specifies the new *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nni (optional)

New network identifier. This parameter specifies one or more *nni* values for the screening reference specified in the *sr* parameter. It specifies the new *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nnpc (optional)

New ITU-national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) for information on converting the point code format.

Range:

0 - 16383, *

* —the full range of values from 0–16383

Default:

No change to the current value

npc (optional)

ITU national point code.

Range:

0 - 16383, *

* —the full range of values from 0–16383

npcst (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

nri (optional)

New routing indicator that provides routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range:

dpc

Allow a called party address with a routing indicator value of "DPC/SSN."

gt

Screening stops and gateway screening is bypassed as a forced pass.

*

both the *gt* and *dpc* values are accepted in the gateway screening process

Default:
No change to the current value

nsccpmt (optional)
New SCCP message type.

Range:

- 9**
- 10**
- 17**
- 18**
- ***
full range of values

Default:
No change to the current value

nsfi (optional)
This parameter specifies the next screening category used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

- cdpa**
Allowed called party address is the next screening category
- stop**
The gateway screening process ends and the message proceeds through normal routing
- tt**
Allowed translation type is the next screening category

Default:
No change to the current value

nsna (optional)
New 16-bit ITU national sub number area. The new *sna* in the point code represented by *un-sna-mna*.

Range:
*0 - 15, **
**--- the full range of values from 0--15, **

nsp (optional)
New 24-bit ITU national signaling point. The new *sp* of the point code represented by *msa-ssa-sp*.

Range:
*0 - 255, **
** —the full range of values from 0–255*

nsr (optional)

Next screening reference. This parameter specifies which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No change to the current value

nssa (optional)

New 24-bit ITU national sub signaling area. The new ssa of the point code represented by *msa-ssa-sp*.

Range:

*0 - 255, **

* —the full range of values from 0–255

nssn (optional)

New subsystem number

Range:

*0 - 255, **

* —the full range of values from 0–255

Default:

No change to the current value

nun (optional)

New 16-bit ITU national unit number. The new *un* in the point code represented by *un-sna-mna*.

Range:

*0 - 127, **

*--- the full range of values from 0--127, *

nzone (optional)

New ITU-international zone. The new *zone* for the point code represented by *zone-area-id*.

Range:

*0 - 7, **

* —the full range of values from 0–7

Default:

No change to the current value

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (S-).

Range:*none**s***Default:***none***sna (optional)**16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.**Range:***0 - 15, ****--* the full range of values from 0--15, ***sp (optional)**24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.**Range:***0 - 255, ****—*the full range of values from 0–255**ssa (optional)**24-bit ITU national sub signaling area. The *ssa* in the point code represented by the format *msa-ssa-sp*.**Range:***0 - 255, ****—*the full range of values from 0–255**un (optional)**16-bit ITU-national unit number. The *un* in the point code represented by *un-sna-mna*.**Range:***0 - 127, ****--* the full range of values from 0--127, ***zone (optional)**ITU international zone. The *zone* in the point code represented by *zone-area-id*.**Range:***0 - 7, ****—*the full range of values from 0–7**Example**

chg-scr-cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=3:ri=dpc

chg-scr-
cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=3:ri=dpc:nsfi=stop:actname=cop
ychg-scr-
cgpa:sr=cdp1:ni=5:nc=5:ncm=5:ssn=1:ri=dpc:sccpmt=009:nsfi=sdpa:nsr=c
dp1

```
chg-scr-
cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:nsfi=stop:p
cst=s :npcst=none
```

```
chg-scr-
cgpa:sr=cgpl:un=1:sna=2:mna=1:ssn=1:sccpmt=9:nun=2:nsna=3:nmna=
2:nsfi=stop:ri=*
```

Dependencies

▲ Caution:

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gwsn=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

N/A N/A

A complete point code must be specified, and must be one, and only one of the five point code parameter combinations: `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or `npc`.

2556 E2556 Cmd Rej: A complete point code must be entered

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The CGPA point code or range of point codes, `ri`, `sccpmt`, and subsystem number or numbers to be changed must exist in the CGPA entity set.

2559 E2559 Cmd Rej: PC/SSN does not exist in given SR

The new CGPA point code and subsystem number cannot already exist in the CGPA entity set.

2561 E2561 Cmd Rej: PC/SSN already exists in given SR

If the `actname` parameter is specified, the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the `actname` parameter is specified, the `nsr` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

The next screening function identifier (*nsfi*) and the next screening reference (*nsr*) must point to an existing screen, or the *nsfi* must be equal to *stop* and the *nsr* must not be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

If the *nc* parameter is specified as a range, the *ncm* parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the *nc* parameter is specified as a single value or a range, a single value must be specified for the *ni* parameter.

2511 E2511 Cmd Rej: NC is invalid

If the *nc* parameter is specified as an asterisk, the *ncm* parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the *ncm* parameter is specified as a single value, or a range other than the full range of 0–255, the *ni* and *nc* parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the *ni* parameter is specified as an asterisk or as a range, the *nc* and *ncm* parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the *nnc* parameter is specified as a range, the *nncm* parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the *nnc* parameter is specified as a single value or a range, a single value must be specified for the *nni* parameter.

2511 E2511 Cmd Rej: NC is invalid

If the *nnc* parameter is specified as an asterisk, the *nncm* parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the *nncm* parameter is specified as a single value, or a range other than the full range of 0–255, the *nni* and *nnc* parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the *nni* parameter is specified as an asterisk or as a range, the *nnc* and *nncm* parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

The *nsfi=cdpa* parameter can be specified only when the *ri=** or the *ri=dpc* parameter is specified.

2492 E2492 Cmd Rej: The NSFI / RI combination is invalid

The `nsfi=tt` parameter can be specified only when the `ri=*` or the `ri=gt` parameter is specified.

2492 E2492 Cmd Rej: The NSFI / RI combination is invalid

If the `nsfi=stop` parameter is specified, the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

If the `nsfi` parameter has a value other than `stop`, the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

The specified screening reference (`sr`) must already exist in the database.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` and `npcst` parameters cannot be specified for ANSI, ITU-N24 or ITU-N16 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

Valid values must be specified for the `nsccpmt` and `sccpmt` parameters.

2446 E2446 Cmd Rej: SCCPMT must be specified as 9, 10, 17, 18, or *

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The specified value for the `nsfi` parameter is not valid for `cgpa` screen.

3271 E3271 Cmd Rej: NSFI is invalid

The new CGPA point code, `ri`, `sccpmt`, and `ssn` to be added can not already exist in the CGPA entity set.

2514 E2514 Cmd Rej: PC/SSN/RI/SCCPMT already exists in given SR

The J7 Support feature must be enabled before the `un`, `sna`, `mna`, `nun`, `nsna`, or `nmna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 Support feature must not be enabled before the `msa`, `ssa`, `sp`, `nmsa`, `nssa`, or `nsp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown/Invalid GWSOA parameter combination

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk can be specified for a parameter value in the `chg/dlt-scr-cgpa` commands only if that parameter value was specified as an asterisk in the `ent-scr-cgpa` command to define the parameter value.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters i.e., `ni`, `nc`, `ncm`, `nni`, `nnc`, or `nncm`. The command can be entered successfully whether the J7 Support feature is enabled or not enabled.

If there are more than 200 affected screensets and the force parameter is set to **yes**, then the following warning message is displayed: "WARNING: Command may take up to 30 minutes" and the command proceeds successfully.

If there are more than 200 affected screensets and the force parameter is set to **no**, then the following notice is displayed: "Notice: Force parameter is required for affected screensets greater than 200" and the command is aborted.

Output

```
chg-scr-cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=3:ri=dpc
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
CHG-SCR-CGPA: SCREEN SET AFFECTED - IEC 25% FULL
CHG-SCR-CGPA: MASP A - COMPLTD
```

```
;
```

When there are more than 200 affected screensets and the `force` parameter is **no**:

```
chg-scr-cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=3:ri=dpc:force=no
```

```
Command entered at terminal #17.
```

```
;
```

```
tekelecstp 15-07-15 12:19:42 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-CGPA: MASP A - Cannot access standby fixed disk.
CHG-SCR-CGPA: MASP A - Simplex database update.
Notice: Force parameter is required for affected screensets greater than
200
CHG-SCR-CGPA: MASP A - Command Aborted
```

When there are more than 200 affected screensets and the `force` parameter is **yes**:

```
chg-scr-
cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=3:ri=dpc:force=yes

Command entered at terminal #17.
;

tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-CGPA: MASP A - Cannot access standby fixed disk.
CHG-SCR-CGPA: MASP A - Simplex database update.
WARNING: Command may take upto 30 minutes.
-----
;
Command Accepted - Processing
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
Notice: The number of screensets affected is 201.
CHG-SCR-CGPA: SCREEN SET AFFECTED - s1      1% FULL
CHG-SCR-CGPA: SCREEN SET AFFECTED - s10     1% FULL
CHG-SCR-CGPA: SCREEN SET AFFECTED - s100    1% FULL
CHG-SCR-CGPA: SCREEN SET AFFECTED - s101    1% FULL
CHG-SCR-CGPA: SCREEN SET AFFECTED - s102    1% FULL
-----
-----
(List of affected screensets)
```

Related Topics

- [dlt-scr-cgpa](#)
- [ent-scr-cgpa](#)
- [rtrv-scr-cgpa](#)

4.1.123 chg-scr-destfld

Use this command to change the attributes of a specific screening reference in the allowed affected destination field (DESTFLD) category. Attributes that can be changed are the allowed affected destination point codes.

Parameters

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

actname (optional)

Action name. The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —remove an existing gateway screening stop action set from a gateway screening rule.

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, **

*—the full range of values from 0–255

force (optional)

When there are more than 200 affected screensets, this parameter will decide whether to execute the command successfully or not.

Range:

yes

no

Default:

no

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

*0 - 7, **

*—the full range of values from 0–7

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

*0 - 31, **

*--- the full range of values from 0--31

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

*0 - 255, **

*—the full range of values from 0–255

narea (optional)

New ITU-international area value

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

nid (optional)

New ITU-international ID value.

Range:

0 - 7, *

*—the full range of values from 0–7

Default:

No change to the current value

nmna (optional)

New 16-bit ITU national main number area. The new *mna* in the point code represented by *un-sna-mna*.

Range:

0 - 31, *

*--- the full range of values from 0--31

nmsa (optional)

New 24-bit ITU-national main signaling area value. The new *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

nnc (optional)

New network cluster. This parameter specifies one or more *nnc* values for the screening reference specified in the *sr* parameter. It specifies the new *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nncm (optional)

New network cluster member. This parameter specifies one or more *ncm* values for the screening reference specified in the *sr* parameter. It specifies the new *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nni (optional)

New network identifier. This parameter specifies one or more *nni* values for the screening reference specified in the *sr* parameter. It specifies the new *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nnpc (optional)

New ITU-national point code

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A for information on converting the point code format.

Range:

0 - 16383, *

*—the full range of values from 0–16383

Default:
No change to the current value

npc (optional)
ITU national point code.

Range:
0 - 16383
*—the full range of values from 0–16383

npcst (optional)
New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:
none

nsfi (optional)
This parameter specifies the next screening category that is used in the gateway screening process.

Range: stop ,
stop —The gateway screening process ends and the message proceeds through normal routing.

Default:
No change to the current value

nsna (optional)
New 16-bit ITU national sub number area. The new *sna* in the point code represented by *un-sna-mna*.

Range:
0 - 15, *
*--- the full range of values from 0--15

nsp (optional)
New 24-bit ITU national signaling point. The new *sp* of the point code represented by *msa-ssa-sp*. A

Range:
0 - 255, *
*—the full range of values from 0–255

nsr (optional)
Next screening reference. This parameter specifies the point code's unique screening reference name.

Range:*ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

nssa (optional)New 24-bit ITU national sub signaling area. The new *ssa* of the point code represented by *msa-ssa-sp*.**Range:**

0 - 255, *

*—the full range of values from 0–255

nun (optional)New 16-bit ITU national unit number. The new *un* in the point code represented by *un-sna-mna*.**Range:**

0 - 127, *

*--- the full range of values from 0--127

nzone (optional)New ITU-international zone. The new *zone* for the point code represented by *zone-area-id*.**Range:**

0 - 7, *

*—the full range of values from 0–255

Default:

No change to the current value

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:*none**s***Default:***none***sna (optional)**16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.**Range:**

0 - 15, *

*--- the full range of values from 0--15

sp (optional)24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.**Range:**

0 - 255, *

*—the full range of values from 0–255

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

un (optional)

16-bit ITU-national unit number. The *un* in the point code represented by *un-sna-mna*.

Range:

0 - 127, *

*--- the full range of values from 0--127

zone (optional)

ITU international zone. The *zone* in the point code represented by *zone-area-id*.

Range:

0 - 7, *

*—the full range of values from 0–7

Example

```
chg-scr-destfld:sr=iec:ni=240:nc=010:ncm=019&&020:nncm=021
```

```
chg-scr-destfld:sr=iec:ni=240:nc=010:ncm=019&&020:nsfi=stop:actname=none
```

```
chg-scr-destfld:sr=dst1:zone=1:area=2:id=3:nsfi=stop:pcst=s:npcst=none
```

```
chg-scr-destfld:sr=ds01:un=1:sna=2:mna=3:nun=4:nsna=5:nmna=6
```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gwsn=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

N/A N/A

A complete point code must be specified, using the `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna` or `npc` combination unless a value of `c` is specified.

2556 E2556 Cmd Rej: A complete point code must be entered

A new point code entry must be specified by one, and only one of the five point code parameter combinations: `nni-nnc-nncm`, `nzone-narea-nid`, `nmsa-nssa-nsp`, `nun-nsna-nmna` or `nnpc`. If the new point code entry is a different point code type

than the existing point code entry, all subfields of the new point code type must be specified.

2501 E2501 Cmd Rej: Mixed point code types are not allowed

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The new DESTFLD defined by `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or the `npc` parameter must not already exist in the screening reference.

2558 E2558 Cmd Rej: Point code already exists in given SR

If the `actname` parameter is specified, the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the `actname` parameter is specified, the `nsr` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `zone=*` parameter is specified, then the `area=*` and the `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `area=*` parameter is specified, then the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, then the `ssa=*` and the `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and the `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `ssa=*` parameter is specified, then the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `nsfi=stop` parameter is specified, then the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range 000–255 .

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc=*` parameter is specified, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nnc` parameter is specified as a range, the `nncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nnc` parameter is specified as a single value or a range, a single value must be specified for the `nni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nnc` parameter is specified as an asterisk, the `nnm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `nni` and `nnc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `nni` parameter is specified as an asterisk or as a range, the `nnc` and `nncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

The `nsfi=stop` parameter must be specified in the command

3271 E3271 Cmd Rej: NSFI is invalid

The entry specified by `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or the `npc` parameter must already exist in the screening reference.

3272 E3272 Cmd Rej: PC does not match existing entry in given SR

The specified screening reference must already exist in the database.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` and `npcst` parameters cannot be specified for ANSI, ITU-N24 or ITU-N16 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `nsfi=fail` parameter is specified, then the `nni`, `nc`, `nncm`, `narea`, `nzone`, `nid`, `nmsa`, `nssa`, `nsp`, `nun`, `nsna`, `nmna`, and `npc` parameters cannot have a value of `c`.

2527 E2527 Cmd Rej: C value not allowed

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The J7 support feature must be enabled before the `un`, `sna`, `mna`, `nun`, `nsna`, or `nmna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 support feature must not be enabled before the `msa`, `ssa`, `sp`, `nmsa`, `nssa`, or `nsp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

An asterisk can be specified for a parameter value in the `chg/dlt-scr-destfld` commands only if that parameter value was specified as an asterisk in the `ent-scr-destfld` command to define the parameter value.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` and `npcst` parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters i.e., `ni`, `nc`, `ncm`, `nni`, `nnc` or `nncm`. The command can be entered successfully whether the J7 feature is enabled or not enabled.

If there are more than 200 affected screensets and the force parameter is set to **yes**, then the following warning message is displayed: "WARNING: Command may take up to 30 minutes" and the command proceeds successfully.

If there are more than 200 affected screensets and the force parameter is set to **no**, then the following notice is displayed: "Notice: Force parameter is required for affected screensets greater than 200" and the command is aborted.

Output

```
chg-scr-destfld:sr=iec:ni=240:nc=010:ncm=019&&020:nncm=021
```

```
rlghncxa03w 04-01-13 11:49:47 EST EAGLE 31.3.0
CHG-SCR-DESTFLD: SCREEN SET AFFECTED - SS01 25% FULL
CHG-SCR-DESTFLD: MASP A - COMPLTD
```

```
;
```

When there are more than 200 affected screensets and the force parameter is **no**:

```
chg-scr-
destfld:sr=iec:ni=240:nc=010:ncm=019&&020:nncm=021:force=no
```

```
Command entered at terminal #17.
```

```
;
```

```
tekelecstp 15-07-15 12:19:42 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-DESTFLD: MASP A - Cannot access standby fixed disk.
CHG-SCR-DESTFLD: MASP A - Simplex database update.
Notice: Force parameter is required for affected screensets
greater than 200
CHG-SCR-DESTFLD: MASP A - Command Aborted
```

When there are more than 200 affected screensets and the force parameter is **yes**:

```
chg-scr-
destfld:sr=iec:ni=240:nc=010:ncm=019&&020:nncm=021:force=yes
```

```
Command entered at terminal #17.
```

```
;
```

```
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-DESTFLD: MASP A - Cannot access standby fixed disk.
CHG-SCR-DESTFLD: MASP A - Simplex database update.
WARNING: Command may take upto 30 minutes.
-----
```

```
;
```

```
Command Accepted - Processing
```

```
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
Notice: The number of screensets affected is 201.
CHG-SCR-DESTFLD: SCREEN SET AFFECTED - s1 1% FULL
CHG-SCR-DESTFLD: SCREEN SET AFFECTED - s10 1% FULL
CHG-SCR-DESTFLD: SCREEN SET AFFECTED - s100 1% FULL
CHG-SCR-DESTFLD: SCREEN SET AFFECTED - s101 1% FULL
CHG-SCR-DESTFLD: SCREEN SET AFFECTED - s102 1% FULL
-----
-----
```

(List of affected screensets)

Related Topics

- [dlt-scr-destfld](#)
- [ent-scr-destfld](#)
- [rtrv-scr-destfld](#)

4.1.124 chg-scr-dpc

Use this command to change the attributes of a specific screening reference in the allowed DPC category. Attributes that may be changed are the point code, next screening function identifier, and the next screening reference.

Parameters

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

actname (optional)

Action name. The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —remove an existing gateway screening stop action set from a gateway screening rule.

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, **

***—the full range of values from 0–255

force (optional)

When there are more than 200 affected screensets, this parameter will decide whether to execute the command successfully or not.

Range:

yes

no

Default:

no

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

0 - 7, *

*—the full range of values from 0–7

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

0 - 31, *

*--- the full range of values from 0--31

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

narea (optional)

New ITU-international area value.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

nid (optional)

New ITU-international ID value.

Range:

0 - 7, *

*—the full range of values from 0–7

Default:

No change to the current value

nmna (optional)New 16-bit ITU national main number area. The new *mna* in the point code represented by *un-sna-mna*.**Range:**

0 - 31, *

*--- the full range of values from 0--31

nmsa (optional)New 24-bit ITU-national main signaling area value. The new *msa* of the point code represented by *msa-ssa-sp*.**Range:**

0 - 255, *

*—the full range of values from 0–255

nnc (optional)New network cluster. This parameter specifies one or more *nnc* values for the screening reference specified in the *sr* parameter. It specifies the new *nc* of the point code represented by *ni-nc-ncm*.**Range:**

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nncm (optional)New network cluster member. This parameter specifies one or more *ncm* values for the screening reference specified in the *sr* parameter. It specifies the new *ncm* of the point code represented by *ni-nc-ncm*.**Range:**

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nni (optional)

New network identifier. This parameter specifies one or more *nni* values for the screening reference specified in the *sr* parameter. It specifies the new *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nnpc (optional)

New ITU-national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A for information on converting the point code format.

Range:

0 - 16383, *

*—the full range of values from 0–16383

Default:

No change to the current value

npc (optional)

ITU national point code.

Range:

0 - 16383

*—the full range of values from 0–16383

npcst (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:***blkdpc***

Blocked DPC is the next screening category.

cgpa

Allowed CGPA is the next screening category.

cgpa

Allowed CGPA is the next screening category.

cgpa

Allowed CGPA is the next screening category.

isup

ISUP message type (ISUP) is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

Default:

No change to the current value

***nsna* (optional)**

New 16-bit ITU national sub number area. The new *sna* in the point code represented by *un-sna-mna*.

Range:

0 - 15, *

*--- the full range of values from 0--15

***nsp* (optional)**

New 24-bit ITU national signaling point. The new *sp* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

***nsr* (optional)**

Next screening reference. This parameter specifies which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No change to the current value

***nssa* (optional)**

New 24-bit ITU national sub signaling area. The new *ssa* of the point code represented by *msa-ssa-sp*.

Range:*0 - 255, **

*—the full range of values from 0–255

nun (optional)

New 16-bit ITU national unit number. The new *un* in the point code represented by *un-sna-mna*.

Range:*0 - 127, **

*--- the full range of values from 0--127

nzone (optional)

New ITU-international zone. The new *zone* for the point code represented by *zone-area-id*.

Range:*0 - 7, **

*—the full range of values from 0–7

Default:

No change to the current value

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (S-).

Range:*none**s***Default:***none***sna (optional)**

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:*0 - 15, **

*--- the full range of values from 0--15

sp (optional)

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:*0 - 255, **

*—the full range of values from 0–255

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

un (optional)16-bit ITU-national unit number. The *un* in the point code represented by *un-sna-mna*.**Range:**

0 - 127, *

*--- the full range of values from 0--127

zone (optional)ITU international zone. The *zone* in the point code represented by *zone-area-id*. A**Range:**

0 - 7, *

*—the full range of values from 0–7

Example

```
chg-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=003:nncm=030
```

```
chg-scr-
```

```
dpc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=003:nncm=030:nsfi=stop  
:actname=none
```

```
chg-scr-dpc:sr=dpc1:npc=128:nsfi=fail:pcst=s:npcst=none
```

```
chg-scr-dpc:sr=dpc2:un=1:sna=2:mna=1:nun=2:nsna=3:nmna=2:nsfi=stop
```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gwsn=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

N/A N/A

A complete point code must be specified, using the `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna` or `npc` combination unless a value of `c` is specified.

2556 E2556 Cmd Rej: A complete point code must be entered

A new point code entry must be specified by one, and only one of the four point code parameter combinations: `nni-nnc-nncm`, `nzone-narea-nid`, `nmsa-nssa-nsp`, `nun-nsna-nmna` or `nnpc` . If the new point code entry is a different point code type than the existing point code entry, all subfields of the new point code type must be specified.

2501 E2501 Cmd Rej: Mixed point code types are not allowed

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The DPC specified by `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or the `npc` parameter must already exist in the screening reference or within an existing range of DPCs.

3272 E3272 Cmd Rej: PC does not match existing entry in given SR

The new DPC or DPC range defined by `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or the `npc` parameter must not already exist in the screening reference or within an existing range of DPCs.

2558 E2558 Cmd Rej: Point code already exists in given SR

If the `actname` parameter is specified, then the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the `actname` parameter is specified, the `nsr` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

The `actname` parameter value must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command. These values are shown in the `ACT NAME` field of the `rtrv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `zone=*` parameter is specified, then the `area=*` and `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `area=*` parameter is specified, then the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, then the `ssa=*` and `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `ssa=*` parameter is specified, then the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

The `nsfi` and `nsr` parameters must point to an existing screen, or the `nsfi=stop` parameter must be specified, and the `nsr` parameter cannot be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc=*` parameter is specified, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nnc` parameter is specified as a range, the `nncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nnc` parameter is specified as a single value or a range, a single value must be specified for the `nni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nnc=*` parameter is specified, the `nncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `nni` and `nnc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `nni` parameter is specified as an asterisk or as a range, the `nnc` and `nncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nsfi=stop` parameter is not specified, then the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

The value of the `sr` parameter must already exist in the BLKDPC entity set.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` and `npcst` parameters cannot be specified for ANSI, ITU-N24, or ITU-N16 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `nsfi=fail` parameter is specified, then the `nni`, `nc`, `nncm`, `narea`, `nzone`, `nid`, `nmsa`, `nssa`, `nsp`, `nun`, `nsna`, `nmna`, and `npc` parameters cannot have a value of `c`.

2527 E2527 Cmd Rej: C value not allowed

The Gateway Screening Stop Action table is corrupt or cannot be found.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The J7 support feature must be enabled before the `un`, `sna`, `mna`, `nun`, `nsna` or `nmna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 support feature must not be enabled before the `msa`, `ssa`, `sp`, `nmsa`, `nssa` or `nsp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown/Invalid GWSOA parameter combination

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original `ent-scr-dpc` command.

If the screen set reaches 100% capacity (indicated by the "100% full" message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` and `npcst` parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters i.e., `ni`, `nc`, `ncm`, `nni`, `nnc` or `nncm`. The command can be entered successfully whether the J7 feature is enabled or not enabled.

If there are more than 200 affected screensets and the force parameter is set to **yes**, then the following warning message is displayed: "WARNING: Command may take up to 30 minutes" and the command proceeds successfully.

If there are more than 200 affected screensets and the force parameter is set to **no**, then the following notice is displayed: "Notice: Force parameter is required for affected screensets greater than 200" and the command is aborted.

Output

```
chg-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=003:nncm=030
```

```

rlghncxa03w 04-01-07 11:43:04 EST  EAGLE 31.3.0
CHG-SCR-DPC:  SCREEN SET AFFECTED - IEC  25% FULL
CHG-SCR-DPC:  MASP A - COMPLTD
;

```

When there are more than 200 affected screensets and the force parameter is **no**:

```
chg-scr-dpc:sr=dp1:nsfi=cgpa:nsr=cg1:ni=2:nc=1:ncm=1:force=no
```

Command entered at terminal #17.

```

;

tekelecstp 15-07-15 12:19:42 MST  EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-DPC:  MASP A - Cannot access standby fixed disk.
CHG-SCR-DPC:  MASP A - Simplex database update.
Notice: Force parameter is required for affected screensets greater than
200
CHG-SCR-DPC:  MASP A - Command Aborted

```

When there are more than 200 affected screensets and the force parameter is **yes**:

```
chg-scr-dpc:sr=dp1:nsfi=cgpa:nsr=cg1:ni=2:nc=1:ncm=1:force=yes
```

Command entered at terminal #17.

```

;

tekelecstp 15-07-15 14:10:31 MST  EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-DPC:  MASP A - Cannot access standby fixed disk.
CHG-SCR-DPC:  MASP A - Simplex database update.

WARNING: Command may take upto 30 minutes.
-----
;
Command Accepted - Processing
tekelecstp 15-07-15 14:10:31 MST  EAGLE5 46.3.0.0.0-66.10.0
Notice: The number of screensets affected is 201.
CHG-SCR-DPC:  SCREEN SET AFFECTED - s1      1% FULL
CHG-SCR-DPC:  SCREEN SET AFFECTED - s10     1% FULL
CHG-SCR-DPC:  SCREEN SET AFFECTED - s100    1% FULL
CHG-SCR-DPC:  SCREEN SET AFFECTED - s101    1% FULL
CHG-SCR-DPC:  SCREEN SET AFFECTED - s102    1% FULL
-----
-----

```

(List of affected screensets)

Related Topics

- [dlt-scr-dpc](#)
- [ent-scr-dpc](#)
- [rtrv-scr-dpc](#)

4.1.125 chg-scr-isup

Use this command to change the attributes associated with a specific allowed ISUP screening reference in the Allowed ISUP entity set.

Parameters

isupmt/tupmt (mandatory)

ISUP or TUP message type.

Range:

0 - 255, *

*—the full range of values from 0–255

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

actname (optional)

Action name. The stop action set name.

Range:

ayyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

Default:

No change to the current value

force (optional)

When there are more than 200 affected screensets, this parameter will decide whether to execute the command successfully or not.

Range:

yes

no

Default:

no

nisupmt/ntupmt (optional)

New ISUP or new TUP message type.

Range:

0 - 255, *

*—the full range of values from 0–255

nsfi (optional)

The next screening category that is used in the gateway screening process.

Range:*stop* —The gateway screening process ends and the message proceeds through normal routing.**Default:**

No change to the current value

nsr (optional)Next screening reference. The parameter specifies which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.**Range:***ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No change to the current value

Example

```
chg-scr-isup:sr=iec:isupmt=1:nisupmt=1&&2
```

```
chg-scr-isup:tupmt=20:ntupmt=1:sr=tu01
```

Dependencies

At least one optional parameter must be specified.

N/A N/A

If the *actname* parameter is specified, the *nsfi=stop* parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

The value of the *actname* parameter must already be defined in the Gateway Screening Stop Action table with the *chg-gws-actset* command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

The value specified for the *isupmt* or *tupmt* parameter must already exist in the screening reference specified by the *sr* parameter.

2520 E2520 Cmd Rej: ISUPMT/TUPMT does not exist in given SR

The specified *nisupmt* or *ntupmt* parameter value cannot already exist in the specified *sr*.

2519 E2519 Cmd Rej: ISUPMT/TUPMT already exists in given SR

If the *nsfi* parameter is specified, the parameter value must be *stop*.

2548 E2548 Cmd Rej: NSFI must be STOP

If the *nsfi=stop* parameter is specified, the *nsr* parameter cannot be specified.

2550 E2550 Cmd Rej: NSFI / NSR cannot be specified

For SEAS commands with the `nisupmt` parameter specified, the `nsfi` parameter must be specified.

2396 E2396 Cmd Rej: NSFI must be specified if NISUPMT is specified

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown/Invalid GWSOA parameter combination

The ISUPMT (ISUP Message Type) parameter must be specified for a SEAS command.

3506 E3506 Cmd Rej: ISUP Message Type must be valid

Notes

An asterisk can be specified for a parameter value in the `chg/dlt-scr-isup` and commands only if that parameter value was specified as an asterisk in the `ent-scr-isup` command to define the parameter value.

A range of values can be specified for the `isupmt` or `tupmt` parameter, by separating the values that define the range by two ampersands (`&&`); for example, `isupmt=025&&100` specifies all ISUP message types from 25 - 100. The value to the left of the `&&` must be less than the value to the right of the `&&` in the range.

TUP does not apply to SEAS. ISUP Message Type is the default.

To use TUP message type screening, an SIO screening reference with `si=04` (TUP) must exist in the SIO table. The TUP screening reference specifies the SIO screening reference as the next screening reference parameter (`nsr`) value.

To use ISUP message type screening, an SIO screening reference with `si=05` (ISUP) must exist in the SIO table. The ISUP screening reference specifies the ISUP SIO screening reference as the `nsr` value.

To screen for TUP and ISUP message types using a combined ISUP/TUP screen set, the SIO screening reference with `si=4` and the SIO screening reference with `si=5` must be two different screening references. The TUP screening reference specifies the SIO screening reference as the `nsr` value, and the ISUP screening reference specifies the SIO ISUP screening reference as the `nsr` value.

If there are more than 200 affected screensets and the force parameter is set to **yes**, then the following warning message is displayed: "WARNING: Command may take up to 30 minutes" and the command proceeds successfully.

If there are more than 200 affected screensets and the force parameter is set to **no**, then the following notice is displayed: "Notice: Force parameter is required for affected screensets greater than 200" and the command is aborted.

Output

When a screening reference is specified that is not yet associated with a screen set, the following output appears:

```
chg-scr-isup:sr=is01:isupmt=2:nsfi=stop:nisupmt=4
```

```
rlghncxa03w 04-01-14 16:45:50 EST EAGLE 31.3.0
CHG-SCR-ISUP: MASP A - COMPLTD
```

```
;
```

When there are more than 200 affected screensets and the force parameter is **no**:

```
chg-scr-isup:sr=is02:isupmt=9:nsfi=stop:nisupmt=8:force=no
```

Command entered at terminal #17.

```
;
```

```
tekelecstp 15-07-15 12:19:42 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-ISUP: MASP A - Cannot access standby fixed disk.
CHG-SCR-ISUP: MASP A - Simplex database update.
Notice: Force parameter is required for affected screensets greater than
200
CHG-SCR-ISUP: MASP A - Command Aborted
```

When there are more than 200 affected screensets and the force parameter is **yes**:

```
chg-scr-isup:sr=is02:isupmt=9:nsfi=stop:nisupmt=8:force=yes
```

Command entered at terminal #17.

```
;
```

```
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-ISUP: MASP A - Cannot access standby fixed disk.
CHG-SCR-ISUP: MASP A - Simplex database update.
WARNING: Command may take upto 30 minutes.
-----
```

```
;
```

Command Accepted - Processing

```
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
Notice: The number of screensets affected is 201.
CHG-SCR-ISUP: SCREEN SET AFFECTED - s1      1% FULL
CHG-SCR-ISUP: SCREEN SET AFFECTED - s10     1% FULL
CHG-SCR-ISUP: SCREEN SET AFFECTED - s100    1% FULL
CHG-SCR-ISUP: SCREEN SET AFFECTED - s101    1% FULL
CHG-SCR-ISUP: SCREEN SET AFFECTED - s102    1% FULL
-----
```

```
(List of affected screensets)
```

Related Topics

- [dlt-scr-isup](#)
- [ent-scr-isup](#)
- [rtrv-scr-isup](#)

4.1.126 chg-scr-opc

Use this command to change the attributes associated with a specific screening reference in the allowed OPC category. Attributes that can be changed are the point code, next screening function identifier and, next screening reference.

Parameters

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

actname (optional)

Action name. The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —Remove an existing gateway screening stop action set from a gateway screening rule.

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, **

*—the full range of values from 0–255

force (optional)

When there are more than 200 affected screensets, this parameter will decide whether to execute the command successfully or not.

Range:

yes

no

Default:

no

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

*0 - 7, **

*—the full range of values from 0–7

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

0 - 31, *

*--- the full range of values from 0--31

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

narea (optional)

New ITU-international area value

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

nid (optional)

New ITU-international ID value.

Range:

0 - 7, *

*—the full range of values from 0–7

Default:

No change to the current value

nmna (optional)

New 16-bit ITU national main number area. The new *mna* in the point code represented by *un-sna-mna*.

Range:

0 - 31, *

*--- the full range of values from 0--31

nmsa (optional)

New 24-bit ITU-national main signaling area value. The new *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

nnc (optional)

New network cluster. This parameter specifies one or more *nnc* values for the screening reference specified in the *sr* parameter. It specifies the new *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nncm (optional)

New network cluster member. This parameter specifies one or more *ncm* values for the screening reference specified in the *sr* parameter. It specifies the new *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nni (optional)

New network identifier. This parameter specifies one or more *nni* values for the screening reference specified in the *sr* parameter. It specifies the new *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

nnpc (optional)

New ITU-national point code.

**Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A for information on converting the point code format.

Range:

0 - 16383, *

*—the full range of values from 0–16383

Default:

No change to the current value

npc (optional)

ITU national point code

Range:

0 - 16383, *

*—the full range of values from 0–16383

npcst (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

blkdpc

Blocked DPC is the next screening category.

blkopc

Blocked OPC is the next screening category.

cgpa

Allowed CGPA is the next screening category.

dpc

Allowed DPC is the next screening category.

sio

Allowed SIO is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

Default:

No change to the current value

nsna (optional)

New 16-bit ITU national sub number area. The new *sna* in the point code represented by *un-sna-mna*.

Range:

0 - 15, *

*--- the full range of values from 0--15

nsp (optional)

New 24-bit ITU national signaling point. The new *sp* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

nsr (optional)

Next screening reference. This parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No change to the current value

nssa (optional)

New 24-bit ITU national sub signaling area. The new *ssa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

nun (optional)

New 16-bit ITU national unit number. The new *un* in the point code represented by *un-sna-mna*.

Range:

0 - 127, *

*--- the full range of values from 0--127

nzone (optional)New ITU-international zone. The new *zone* for the point code represented by *zone-area-id*.**Range:**

0 - 7, *

*—the full range of values from 0–7

Default:

No change to the current value

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:*none**s***Default:***none***sna (optional)**16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.**Range:**

0 - 15, *

*--- the full range of values from 0--15

sp (optional)24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.**Range:**

0 - 255, *

*—the full range of values from 0–255

ssa (optional)24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.**Range:**

0 - 255, *

*—the full range of values from 0–255

un (optional)16-bit ITU-national unit number. The *un* in the point code represented by *un-sna-mna*.**Range:**

0 - 127, *

*--- the full range of values from 0--127

zone (optional)ITU international zone. The *zone* in the point code represented by *zone-area-id*.

Range:

0 - 7, *

*—the full range of values from 0–7

Example

```

chg-scr-
opc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=010:nncm=020

chg-scr-
opc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=010:nncm=020:nsfi=
stop :actname=cncf

chg-scr-opc:sr=iec:nsfi=dpc:nsr=wrld2

chg-scr-opc:sr=opc1:npc=128:nsfi=fail:pcst=s:npcst=none

chg-scr-
opc:sr=opc2:un=1:sna=2:mna=1:nun=2:nsna=3:nmna=2:nsfi=stop

```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gwsn=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

N/A N/A

A complete point code must be specified, using the `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna` or `npc` combination unless a value of `c` for “continue” is specified.

2556 E2556 Cmd Rej: A complete point code must be entered

A new point code entry must be specified by one, and only one of the four point code parameter combinations: `nni-nnc-nncm`, `nzone-narea-nid`, `nmsa-nssa-nsp`, `nun-nsna-nmna` or `npc`. If the new point code entry is a different point code type than the existing point code entry, all subfields of the new point code type must be specified.

2501 E2501 Cmd Rej: Mixed point code types are not allowed

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The current OPC specified by `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna` or the `npc` parameter must already exist in the screening reference or within an existing range of OPCs.

3272 E3272 Cmd Rej: PC does not match existing entry in given SR

The new OPC or OPC range defined by `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna` or the `npc` parameter must not already exist in the screening reference or within an existing range of OPCs.

2558 E2558 Cmd Rej: Point code already exists in given SR

If the `actname` parameter is specified, then the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the `nsr` parameter is specified, then the `actname` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

The `actname` parameter value must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If `zone=*` is specified, `area=*` and `id=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `area=*` parameter is specified, the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, the `ssa=*` and `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `ssa=*` parameter is specified, the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

The `nsfi` and `nsr` parameters must point to an existing screen, or the `nsfi=stop` parameter must be specified, and the `nsr` parameter cannot be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc=*` parameter is specified, the `ncm` parameter must be specified as an asterisk or as the full range .

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and the `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nnc` parameter is specified as a range, the `nncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nnc` parameter is specified as a single value or a range, a single value must be specified for the `nni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc=*` parameter is specified, the `nnm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `nni` and the `nnc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `nni` parameter is specified as an asterisk or as a range, the `nnc` and `nncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nsfi=stop` parameter is not specified, then the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

The value of the `sr` parameter must already exist in the BLKOPC entity set.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N24 or ITU-N16 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

The Gateway Screening Stop Action table is corrupt or cannot be found.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The J7 support feature must be enabled before the `un`, `sna`, `mna`, `nun`, `nsna`, or `nmna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 support feature must not be enabled before the `msa`, `ssa`, `sp`, `nmsa`, `nssa`, or `nsp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled.

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown/Invalid GWSOA parameter combination

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original `ent-scr-opc` command.

If the screen set reaches 100% capacity (indicated by the "100% full" message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` and `npcst` parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters i.e., `ni`, `nc`, `ncm`, `nni`, `nnc`, or `nncm`. The command can be entered successfully whether the J7 feature is enabled or not enabled.

If there are more than 200 affected screensets and the force parameter is set to **yes**, then the following warning message is displayed: "WARNING: Command may take up to 30 minutes" and the command proceeds successfully.

If there are more than 200 affected screensets and the force parameter is set to **no**, then the following notice is displayed: "Notice: Force parameter is required for affected screensets greater than 200" and the command is aborted.

Output

```
chg-scr-opc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=010:nncm=020
```

```
rlghncxa03w 04-01-07 12:05:33 EST EAGLE 31.3.0
CHG-SCR-OPC: SCREEN SET AFFECTED - IEC 25% FULL
CHG-SCR-OPC: MASP A - COMPLTD
;
```

When there are more than 200 affected screensets and the force parameter is **no**:

```
chg-scr-opc:sr=op1:nsfi=blkopc:nsr=bo1:ni=1:nc=1:ncm=1:force=no
```

```
Command entered at terminal #17.
```

```
;
```

```
tekelecstp 15-07-15 12:19:42 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-OPC: MASP A - Cannot access standby fixed disk.
CHG-SCR-OPC: MASP A - Simplex database update.
Notice: Force parameter is required for affected screensets
greater than 200
CHG-SCR-OPC: MASP A - Command Aborted
```

When there are more than 200 affected screensets and the force parameter is **yes**:

```
chg-scr-
```

```
opc:sr=op1:nsfi=blkopc:nsr=bo1:ni=1:nc=1:ncm=1:force=yes
```

```
Command entered at terminal #17.
```

```
;
```

```
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-OPC: MASP A - Cannot access standby fixed disk.
CHG-SCR-OPC: MASP A - Simplex database update.
WARNING: Command may take upto 30 minutes.
```

```
;
```

```
Command Accepted - Processing
```

```
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
Notice: The number of screensets affected is 201.
CHG-SCR-OPC: SCREEN SET AFFECTED - s1      1% FULL
CHG-SCR-OPC: SCREEN SET AFFECTED - s10     1% FULL
CHG-SCR-OPC: SCREEN SET AFFECTED - s100    1% FULL
CHG-SCR-OPC: SCREEN SET AFFECTED - s101    1% FULL
CHG-SCR-OPC: SCREEN SET AFFECTED - s102    1% FULL
```

```
-----
(List of affected screensets)
```

Related Topics

- [dlt-scr-opc](#)
- [ent-scr-opc](#)
- [rtrv-scr-opc](#)

4.1.127 chg-scr-sio

Use this command to change a specific screening reference in the allowed service indicator octet category. Attributes that may be changed are the network indicator, service indicator, message priority, heading codes, next screening function identifier, and next screening reference.

 **Note:**

To use TUP message type screening, an SIO screening reference with `si=04` (TUP) must be defined in the SIO table. This SIO screening reference is specified as the next screening reference (`nsr`) value in an ISUP screening reference for screening TUP message types.

Parameters**nic (mandatory)**

Network indicator code. This parameter specifies whether the message originated from an international (0) or national (2) network.

Range:

0 - 3, *

*—the full range of values from 0–3

pri (mandatory)

Message priority. The new message priority in the SIO.

Range:

0 - 3, *

*—the full range of values from 0–3

Default:

No change to the current value

si (mandatory)

Service indicator. The type of message. The values are defined in Telcordia TR-NWT-000246.

Range:

00 - 15

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

actname (optional)

Action name. The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —remove an existing gateway screening stop action set from a gateway screening rule.

force (optional)

When there are more than 200 affected screensets, this parameter will decide whether to execute the command successfully or not.

Range:

yes

no

Default:

no

h0 (optional)

This parameter is mandatory if the *si* value is 00, 01, 02, or 03. Otherwise, the *h0* parameter is undefined.

Range:

*0 - 15, **

*—the full range of values from 0–15

Default:

Current value or undefined

h1 (optional)

This parameter is mandatory if the *si* value is 00, 01, 02, or 03. Otherwise, the *h1* parameter is undefined.

Range:

*0 - 15, **

*—the full range of values from 0–15

Default:

Current value or undefined

nh0 (optional)

New H0 heading code. The new H0 heading code for the screening reference specified in the *sr* parameter.

Range:

*0 - 15, **

*—the full range of values from 0–15

Default:

No change to the current value

nh1 (optional)

New H1 heading code. The new H1 heading code for the screening reference specified in the *sr* parameter.

Range:

*0 - 15, **

*—the full range of values from 0–15

Default:

No change to the current value

nnic (optional)

New network indicator code. The new *nic* for the screening reference specified.

Range:

0 - 3

*—the full range of values from 0–3

Default:

No change to the current value

npri (optional)

New message priority. The new message priority in the SIO.

Range:

0 - 3, *

*—the full range of values from 0–3

Default:

No change to the current value

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

blkdpc

Blocked DPC

cdpa

Allowed CDPA

cgpa

Allowed CGPA

destfld

Allowed destination field (DESTFLD)

isup

ISUP message type (ISUP)

stop

The gateway screening process ends and the message proceeds through normal routing.

dpc

Allowed DPC

Default:

No change to the current value

nsi (optional)

New service indicator. The type of message for the specified screening reference. The values are defined in Telcordia TR-NWT-000246.

Range:

0 - 15

Default:

No change to the current value

nsr (optional)

Next screening reference. This parameter specifies which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:*ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No change to the current value

Example

```
chg-scr-sio:sr=iec:nic=1:si=1:h0=02:h1=03:pri=*:nh0=03&&04
```

```
chg-scr-sio:sr=iec:nic=1:si=3:pri=2:npri=1
```

```
chg-scr-
sio:sr=iec:nic=1:si=3:pri=3:nnic=2:nsfi=stop:actname=copy
```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the *gwsa=off* and *gwsn=on* parameters, the gateway screening action in the stop action set specified by the *actname* parameter of the screen set will be performed at the end of the screening process.

N/A N/A

At least one attribute must be changed.

2136 E2136 Cmd Rej: At least one optional parameter is required

If asterisk values or ranges are specified for the new heading codes, nothing that matches the entire combination of *nic/nnic*, *si/nsi*, and the specified new heading codes and priorities can already exist in the allowed SIO category for the screening reference.

N/A N/A

An asterisk cannot be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original *ent-scr-sio* command.

N/A N/A

If the *actname* parameter is specified, then the *nsfi=stop* parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the `actname` parameter is specified, the `nsr` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

The `actname` parameter value must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command. These values are shown in the `ACTNAME` field of the `rtrv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

The `nsfi` and `nsr` parameters must point to an existing screen, or the `nsfi=stop` parameter must be specified, and the `nsr` parameter cannot be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

The values specified for the `nsfi` and `si` parameters must meet the mapping requirements as shown:

- `nsfi=destfld — si=00`
- `nsfi=cdpa — si=03`
- `nsfi=cgpa — si=03`
- `nsfi=isup — si=05`

3271 E3271 Cmd Rej: NSFI is invalid

If the `si` parameter value is greater than 2, and the `nsi` parameter value is greater than 3, the `nh0` and `nh1` parameters are used to enter the required `h0` and `h1` parameter values.

N/A N/A

Valid combinations for the `h0/h1` and `nh0/nh1` parameters are:

- `h0 (nh0)` is a single value—`h1 (nh1)` can be a single value, range, or asterisk
- `h0 (nh0)` is a range— `h1 (nh1)` can be an asterisk
- `h0 (nh0)` is an asterisk— `h1 (nh1)` can be an asterisk

3269 E3269 Cmd Rej: Invalid H0/H1 or NH0/NH1 specified

If the value specified for the `nsi` parameter is greater than 2, then the `nh0` and `nh1` parameters cannot be specified.

2491 E2491 Cmd Rej: NH0 and NH1 cannot be specified for NSI greater than 2

Use [Table 4-14](#) to determine additional acceptable combinations of specified parameter values

Table 4-14 Supported chg-scr-sio Parameter Combinations

si value:	nic value	pri value	h0 value:	h1 value:
0	s, *	s, *, r	s	s, *, r
0	s, *	s, *, r	*, r	*
1, 2	s, *	s, *, r	s	s, *, r
1, 2	s, *	s, *, r	*, r	*
3-15	s, *	s, *, r	u	u

Table 4-14 (Cont.) Supported chg-scr-sio Parameter Combinations

si value:	nic value	pri value	h0 value:	h1 value:
Legend				
• s = single value				
• r = range				
• * = asterisk				
• u = unspecified				

N/A N/A

If the `nh0` or `nh1` parameters are specified, the parameter values must be valid with the `h0` or `h1` values currently in the database.

N/A N/A

The `h0`, `h1`, `nh0`, and `nh1` parameters cannot be specified if the `si` parameter is not equal to 00, 01, or 02, and the `nsi` parameter is not specified.

2490 E2490 Cmd Rej: H0 and H1 cannot be specified for SI greater than 2

The `nnic`, `nsi`, `pri`, and `nh0/nh1` parameters must not already exist in the allowed SIO category.

2518 E2518 Cmd Rej: NNIC, NSI, and NH0/NH1 entry already exists in given SR

The `sr`, `nic`, `si`, `pri`, and `h0/h1` parameters for which attributes are to be changed must be in the allowed SIO category.

2569 E2569 Cmd Rej: SIO does not exist in given SR

If the `nsfi=stop` parameter is specified, the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

If the `nsfi=stop` parameter is not specified, then the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

If the `si` parameter is equal to 00, 01, or 02, the `h0` and `h1` parameters must be specified. Otherwise, the `h0` parameter cannot be specified.

2488 E2488 Cmd Rej: H0 and H1 must be specified for given SI

The specified screening reference must already exist in the database.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown/Invalid GWSOA parameter combination

For SEAS command commands, the `pri` parameter specified must be in the range 0-3, *."

2562 E2562 Cmd Rej: A specific PRI must be specified in the range (0-3, *)

For SEAS command commands, the h0 parameter specified must be in the range 0-15, *."

2563 E2563 Cmd Rej: A specific H0 must be specified in the range (0-15, *)

For SEAS command commands, the h1 parameter specified must be in the range 0-15, *."

2566 E2566 Cmd Rej: A specific H1 must be specified in the range (0-15, *)

Notes

If the screen set reaches 100% capacity (indicated by the "100% full" message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to the card. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

To use TUP message type screening, an SIO screening reference with si=04 (TUP) must be defined in the SIO table. To use ISUP message type screening, a rule with si=05 (ISUP) must be defined in the SIO table. To use a combined ISUP/TUP screen set for TUP and ISUP message screening, the SIO screening reference with si=4 and the SIO screening reference with si=5 must be two different screening references.

A network indicator value of 1 or 3 can be used in private networks.

A network indicator value of 3 can be used in some national networks to broaden the identity of a national network, but is usually spare.

If there are more than 200 affected screensets and the force parameter is set to **yes**, then the following warning message is displayed: "WARNING: Command may take up to 30 minutes" and the command proceeds successfully.

If there are more than 200 affected screensets and the force parameter is set to **no**, then the following notice is displayed: "Notice: Force parameter is required for affected screensets greater than 200" and the command is aborted.

Output

```
chg-scr-sio:sr=iec:nic=1:si=3:pri=2:npri=1
```

```
rlghncxa03w 04-01-14 16:45:50 EST EAGLE 31.3.0
CHG-SCR-SIO: SCREEN SET AFFECTED - SS01 25% FULL
CHG-SCR-SIO: SCREEN SET AFFECTED - SS04 35% FULL
CHG-SCR-SIO: MASP A - COMPLTD
```

```
;
```

When there are more than 200 affected screensets and the force parameter is **no**:

```
chg-scr-sio:sr=iec:nic=1:si=3:pri=2:npri=1:force=no
```

Command entered at terminal #17.

```
;
```

```
tekelecstp 15-07-15 12:19:42 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-SIO: MASP A - Cannot access standby fixed disk.
CHG-SCR-SIO: MASP A - Simplex database update.
Notice: Force parameter is required for affected screensets greater than
```

```
200
  CHG-SCR-SIO: MASP A - Command Aborted
```

When there are more than 200 affected screensets and the force parameter is **yes**:

```
chg-scr-sio:sr=iec:nic=1:si=3:pri=2:npri=1:force=yes
```

```
Command entered at terminal #17.
```

```
;
```

```
tekelecstp 15-07-15 14:10:31 MST  EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-SIO: MASP A - Cannot access standby fixed disk.
CHG-SCR-SIO: MASP A - Simplex database update.
WARNING: Command may take upto 30 minutes.
-----
```

```
;
```

```
Command Accepted - Processing
```

```
tekelecstp 15-07-15 14:10:31 MST  EAGLE5 46.3.0.0.0-66.10.0
Notice: The number of screensets affected is 201.
CHG-SCR-SIO: SCREEN SET AFFECTED - s1      1% FULL
CHG-SCR-SIO: SCREEN SET AFFECTED - s10     1% FULL
CHG-SCR-SIO: SCREEN SET AFFECTED - s100    1% FULL
CHG-SCR-SIO: SCREEN SET AFFECTED - s101    1% FULL
CHG-SCR-SIO: SCREEN SET AFFECTED - s102    1% FULL
-----
-----
```

```
(List of affected screensets)
```

Related Topics

- [dlt-scr-sio](#)
- [ent-scr-sio](#)
- [rtrv-scr-sio](#)

4.1.128 chg-scr-tt

Use this command to change the attributes of a specific screening reference in the allowed translation type category. Attributes that can be changed are the translation type, next screening function identifier and next screening reference.

Parameters

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

type (mandatory)

Translation type. The GTT type value in the CdPA.

Range:

0 - 255, *

*—the full range of values from 0–255

actname (optional)

Action name. The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —remove an existing gateway screening stop action set from a gateway screening rule.

force (optional)

When there are more than 200 affected screensets, this parameter will decide whether to execute the command successfully or not.

Range:

yes

no

Default:

no

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: *cdpa, stop****cdpa***

Allowed called party address is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

Default:

No change to the current value

nsr (optional)

Next screening reference. This parameter specifies which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No change to the current value

n_{type} (optional)

New translation type. The GTT type value in the CdPA. A single value or a range of values can be specified.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

No change to the current value

Example

```
chg-scr-tt:sr=iec:type=012:ntype=014
```

```
chg-scr-tt:sr=iec:type=012:ntype=014:nsfi=stop:actname=none
```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gws=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

At least one attribute must be changed.

2136 E2136 Cmd Rej: At least one optional parameter is required

The new translation type cannot already exist.

2575 E2575 Cmd Rej: TYPE matches existing TYPE in given SR

If an asterisk is specified for the new allowed `type`, no other translation types can exist in the screening table.

N/A N/A

If the `actname` parameter is specified, the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the `actname` parameter is specified, the `nsr` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

The `actname` parameter value must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command. These values are shown in the `ACT NAME` field of the `rtrv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

The next screening function identifier and the next screening to be added must point to one or more existing screening references.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

If the `nsfi=stop` parameter is specified, the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

If the `nsfi` parameter has a value other than `stop`, the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

If the screening reference exists, the single value or range specified for the allowed `type` to be added to the TT screen for the allowed TT screening reference must not already exist in that TT screen.

N/A N/A

The screening reference and translation type for which the attributes are to be changed must exist.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The current translation type must already exist.

2574 E2574 Cmd Rej: TYPE does not exist in given SR

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The value specified for the `type` parameter must be within the allowed range.

2524 E2524 Cmd Rej: A specific TT must be specified in the range (1-255,*)

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown/Invalid GWSOA parameter combination

Notes

If the screen set reaches 100% capacity (indicated by the "100% full" message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to the card. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk can be specified for a parameter value in the `chg/dlt-scr-tt` commands only if that parameter value was specified as an asterisk in the `ent-scr-tt` command to define the parameter value.

If there are more than 200 affected screensets and the `force` parameter is set to **yes**, then the following warning message is displayed: "WARNING: Command may take up to 30 minutes" and the command proceeds successfully.

If there are more than 200 affected screensets and the `force` parameter is set to **no**, then the following notice is displayed: "Notice: Force parameter is required for affected screensets greater than 200" and the command is aborted.

Output

```
chg-scr-tt:sr=iec:type=012:ntype=014
```

```
rlghncxa03w 04-01-07 12:05:33 EST EAGLE 31.3.0  
CHG-SCR-TT: SCREEN SET AFFECTED - IEC 25% FULL
```

```
CHG-SCR-TT: MASP A - COMPLTD
;
```

When there are more than 200 affected screensets and the force parameter is **no**:

```
chg-scr-tt:sr=ttl:nsfi=cdpa:nsr=cd1:type=0:force=no
```

Command entered at terminal #17.

```
;
tekelecstp 15-07-15 12:19:42 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-TT: MASP A - Cannot access standby fixed disk.
CHG-SCR-TT: MASP A - Simplex database update.
Notice: Force parameter is required for affected screensets
greater than 200
CHG-SCR-TT: MASP A - Command Aborted
```

When there are more than 200 affected screensets and the force parameter is **yes**:

```
chg-scr-tt:sr=ttl:nsfi=cdpa:nsr=cd1:type=0:force=yes
```

Command entered at terminal #17.

```
;
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
CHG-SCR-TT: MASP A - Cannot access standby fixed disk.
CHG-SCR-TT: MASP A - Simplex database update.

WARNING: Command may take upto 30 minutes.
-----
;
Command Accepted - Processing
tekelecstp 15-07-15 14:10:31 MST EAGLE5 46.3.0.0.0-66.10.0
Notice: The number of screensets affected is 201.
CHG-SCR-TT: SCREEN SET AFFECTED - s1      1% FULL
CHG-SCR-TT: SCREEN SET AFFECTED - s10     1% FULL
CHG-SCR-TT: SCREEN SET AFFECTED - s100    1% FULL
CHG-SCR-TT: SCREEN SET AFFECTED - s101    1% FULL
CHG-SCR-TT: SCREEN SET AFFECTED - s102    1% FULL
-----
(List of affected screensets)
```

Related Topics

- [dlt-scr-tt](#)
- [ent-scr-tt](#)
- [rtrv-scr-tt](#)

4.1.129 chg-scrset

Use this command to change the attributes of a screen set. A screen set is a group of screening references that can be assigned to a linkset. It is defined by a name and a pointer to the first screening reference of a screen set.

Parameters

The `nscrn`, `nsfi`, or `nsr` parameter must be specified.

scrn (mandatory)

Screen set name. Each screening reference must have a unique name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

actname (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none—remove an existing gateway screening stop action set from a gateway screening rule.

destfld (optional)

This parameter turns on and off the automatic allowed affected destination screening for network management messages against the routing table, self point codes, and capability point codes. When this parameter is on, the automatic screening is applied at the end of the provisioned screen set.

Range:

yes

no

Default:

Current value

nscrn (optional)

New screen set name.

Range:

ayyy 1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Current value

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:***blkdpc***

Blocked DPC is the next screening category.

blkopc

Blocked OPC is the next screening category.

dpc

Allowed DPC is the next screening category.

opc

Allowed OPC is the next screening category.

sio

Allowed SIO is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

Default:

Current value

nsr (optional)

Next screening reference. The parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process. If *nsfi=stop*, the *nsr* parameter cannot be specified.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Current value

Example

```
chg-scrset:scrn=ss01:nsfi=opc:nsr=iec
```

```
chg-scrset:scrn=ss02:nsfi=stop:nscrn=ss03
```

```
chg-scrset:scrn=ss02:nscrn=ss03:nsfi=stop:actname=copy
```

```
chg-scrset:scrn=ss02:nsfi=stop:nscrn=ss03:destfld=no
```

Dependencies

The value of the *nscrn* parameter cannot be assigned to another screen set.

2567 E2567 Cmd Rej: Screen set name already exists

If the *actname* parameter is specified, the *nsfi=stop* parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the *actname* parameter is specified, the *nsr* parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

The `actname` parameter value must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command. These values are shown in the `ACT NAME` field of the `rtrv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

The `nsfi` and `nsr` parameters must point to one or more existing entities in another entity set, or the `nsfi=stop` parameter must be specified, and the `nsr` parameter cannot be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

If the `nsfi=stop` parameter is not specified, then the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

An existing screen set must be removed from all linksets before it can be changed.

2568 E2568 Cmd Rej: Screen set name is referenced by a link set

If the `nscrn` parameter is specified, the `scrn` parameter value cannot be referenced by a linkset.

2001 E2001 Cmd Rej: Undefined msg#

The Gateway Screening (GSW) Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

If the next screening function identifier (`nsfi`) and the next screening reference (`nsr`) does not point to an existing screen, the `nsfi` must be equal to `stop` and the `nsr` parameter must not be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

The `nsfi` parameter must be valid for the SCRSET entity.

3271 E3271 Cmd Rej: NSFI is invalid

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown/Invalid GWSOA parameter combination

The value for the `scrn` and `nscrn` parameters must be different.

2567 E2567 Cmd Rej: Screen set name already exists

When the screen sets are provisioned at maximum capacity (1023 screen sets), no screen sets can be changed.

3237 E3237 Cmd Rej: Cannot change the screenset

Notes

If the screen set reaches 100% capacity (indicated by the "100% full" message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The system validates the command to verify that the specified screen set name is in use.

Output

```
chg-scrset:scrn=ss01:nsfi=opc:nsr=iec

rlghncxa03w 04-01-07 09:35:10 EST EAGLE 31.3.0
CHG-SCRSET:  SCREEN SET AFFECTED - SS01  25% FULL
CHG-SCRSET:  MASP A - COMPLTD
;
```

Related Topics

- [dlt-scrset](#)
- [ent-scrset](#)
- [rtrv-scrset](#)

4.1.130 chg-seas-config

Use this command to configure information for the CCS Message Router (CCS MR) in the EAGLE database. The CCS MR is a stand-alone, self-contained system that provides a centralized mechanism for routing CCS network operations traffic between STPs/SCPs and existing and new OSS.

Parameters

authmode (optional)

Authentication mode. The authentication mode for the EAGLE.

 **Note:**

Password-based authentication is the only authentication mode that is supported currently.

Range:

password

conn (optional)

Connection. The CCS MR where the SEAS terminal is connected.

Range:

ipmr1

ipmr2

hname (optional)

Host name. This parameter specifies the name of the remote host machine.

Range:

ZZZZZZZZZZZZZZZZ

1-15 alphanumeric characters. Quotation marks (") can be entered as part of the value. If quotation marks are used, then a hyphen () can also be used.

ipaddr (optional)

IP address. The IP address of the CCS MR.

Range:

4 numbers separated by dots, with each number in the range of 0-255.

login (optional)

The login name used to create an SSH connection between the CCS MR and the EAGLE.

Range:

ZZZZZZZZZZZZZZZZ

1-15 alphanumeric characters.

port (optional)

The port number of the CCS MR.

Range:

1024 - 5000

seascli (optional)

The SEASCLI portion of the EAGLE node name that is sent in SR-5129 messages.

**Note:**

This value is different from the EAGLE CLI value that is configured with the `chg-sid` command.

The corresponding SEASCLI name must be configured on the CCS MR. Refer to Telecordia Configuration Specification "Telecordia Technologies System Documentation", *BD-SNAM-ADMIN-4 Issue 14, November 2006*.

Range:

axxxxxxxxxx

1 alphabetic character followed by up to 10 alphanumeric characters

Example

```
chg-seas-config:seascli=eaglestp001:conn=ipmr1:  
ipaddr=198.168.25.10:port=1500
```

```
chg-seas-config:conn=ipmr2:port=3000
```

```
chg-seas-config:conn=ipmr2:ipaddr=10.203.63.23
```

Dependencies

The SEAS Over IP feature must be enabled before this command can be entered.

4614 E4614 Cmd Rej: SOIP Feature must be Enabled

The SEAS terminal must be inhibited before the `seasccli`, `ipaddr`, `port`, `login`, `hname`, or `authmode` parameters can be specified.

4615 E4615 Cmd Rej: SEAS Terminal Not Inhibited

The `conn` parameter must be specified before the `port`, `ipaddr`, `login`, or `hname` parameters can be specified.

4473 E4473 Cmd Rej: CONN parameter required with IPADDR, PORT, LOGIN and HNAME

The SEASCFG Table must be accessible.

4613 E4613 Cmd Rej: Failed Reading SEASCFG Table

The value of the password requested by the `login` parameter must be from 1 - 15 alphanumeric characters in length.

4673 E4673 Cmd Rej: CCSMR Server password must be 1 - 15 characters in length

The values of the `login` and `hname` parameters must be between 1-15 characters in length.

2039 E2039 Cmd Rej: <parm_desc> too long, min <min>, max <max> - <parm>

The `port` and `ipaddr` parameters must have unique values for each CCS MR.

4772 E4772 Cmd Rej: IPADDR and PORT combination cant be same for both the CCSMRs

Output

```
chg-seas-
config:seasccli=eaglestp001:conn=ipmr1:ipaddr=198.168.25.10:port=1500
```

```
tekelecstp 07-06-16 22:34:11 IST EAGLE 37.5.0
CHG-SEAS-CONFIG: MASP A - COMPLTD
```

```
;
```

Related Topics

- [rtrv-seas-config](#)

4.1.131 chg-secu-dflt

Use this command to change various system-wide, security-related defaults, such as:

- The default password aging interval
- The default user ID aging interval
- Whether to allow or prohibit multiple simultaneous logins with the same user ID
- Control of the password security algorithm
- Login warning message text
- Clear the warning message text displayed during login to the EAGLE

- Password expiring notification interval
- Password expired grace period
- Control of the Telnet terminal security

Parameters

alpha (optional)

Minimum number of alphabetic characters (a–z) required in a new password.

Range:

0 - 20

Default:

Current value

System Default:

1

clrrwrntx (optional)

Clear warning text. This parameter deletes warning message text.

Range:

no

Does not delete any warning message text.

yes

Deletes warning message text for the line specified by the *wrnln* parameter.

all

Deletes warning message text for all lines.

Default:

No change to current value.

minintrvl (optional)

Minimum number of days before a password can be changed again.

Range:

0 - 30

Default:

No change to the current value

System Default:

1

minlen (optional)

Minimum number of characters that must be in a user password.

Range:

1 - 20

Default:

Current value

System Default:

8

multilog (optional)

This parameter specifies whether multiple simultaneous logins can be performed with a user ID.

Range:

yes

A user ID can be logged in to more than one terminal at the same time.

no

A user ID can be logged in to only one terminal at a time.

Default:

Current value

System Default:

no

num (optional)

Minimum number of numeric characters required in a new password.

Range:

0 - 20

Default:

Current value

System Default:

1

page (optional)

Default password aging interval for newly created user IDs. If the `page` parameter is specified in the `ent-user` command, the system uses that value; otherwise, the system uses the value specified here.

Range:

0 - 999

Default:

Current value

System Default:

90

pchreuse (optional)

Number of characters that cannot be reused from the existing password when setting a new password.

Range:

0 - 10

Default:

No change to the current value

System Default:

4

pgrace (optional)

Number of days after password expiration during which the user can login without changing their password.

Range:

0 - 7

Default:

No change to the current value

System Default:

3

pnotify (optional)

Number of days before password expiration that the user is notified about the expiration.

Range:

0 - 30

Default:

No change to the current value

System Default:

7

preuse (optional)

Number of passwords in the password history that must be unique.

Range:

0 - 9

Default:

No change to the current value

punc (optional)

Minimum number of punctuation characters required in a new password. A punctuation character is any character that is not an alphabetic or numeric character, including spaces.

Range:

0 - 20

Default:

Current value

System Default:

1

ssh (optional)

This parameter specifies whether the telnet connections are secure or not.

Range:

on


```
chg-secu-dflt:wrnln=3:wrntx="" unauthorized access or use may lead
to*"
chg-secu-dflt:wrnln=4:wrntx="" prosecution.*"
chg-secu-dflt:wrnln=5:wrntx="" 05-07-01 notice!!! eagle will be
upgraded between`*"
chg-secu-dflt:wrnln=6:wrntx="" the hours of 2am-3am on 05-07-01.*"
chg-secu-dflt:wrnln=7:wrntx="" *"
chg-secu-dflt:wrnln=8:wrntx="" today's happy message: go with
oracle!!*"
chg-secu-
dflt:wrnln=9:wrntx="*****"
*****"
chg-secu-dflt:wrnln=10:wrntx=" " (set to 1 space to insert a blank
line)
chg-secu-dflt:wrnln=10:clrwrntx=yes
chg-secu-dflt:clrwrntx=all
chg-secu-dflt:clrwrntx=no:multilog=yes
chg-secu-dflt:ssh=on
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The sum of the values specified for the `alpha`, `num`, and `punc` parameters must not be greater than 20.

2758 E2758 Cmd Rej: ALPHA+NUM+PUNC must not be greater than 20

The `wrnln` and `wrntx` parameters must be specified together in this command.

2771 E2771 Cmd Rej: Both WRNLN and WRNTX must be specified

If the `clrwrntx=yes` parameter is specified, then the `wrnln` parameter must be specified.

4832 E4832 Cmd Rej: CLRWRNTX=YES only valid with WRNLN parameter

If the `clrwrntx=all` parameter is specified, then the `wrnln` and `wrntx` parameters cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `wrnln` parameter is specified, then the `wrntx` parameter or the `clrwrntx=yes` parameter must be specified.

4857 E4857 Cmd Rej: WRNLN must be specified with WRNTX or CLRWRNTX=yes

Inhibit the IPISM cards before changing the value of parameter SSH.

2687 E2687 Cmd Rej: Inhibit IPISM card(s) before changing the value of parameter SSH.

Notes

The warning message lines are displayed in the scroll area in order after a successful login; that is, line 1, line 2, and so on.

Any warning message line deleted with `clrrwntx=yes` parameter is not displayed in the scroll area during login.

The following message is the default message delivered with every system:

```
NOTICE: This is a private computer system.
```

```
Unauthorized access or use may lead to prosecution.
```

Even though the minimum number of characters allowed in a password is specified using the `minlen` parameter, the password also must satisfy the minimum value requirements specified on the `alpha`, `num`, and `punc` parameters. The actual minimum password length is the greater of either the value specified on the `minlen` parameter or the total number of characters specified on the `alpha`, `num`, and `punc` parameters.

For example, if `chg-secu-dflt:minlen=5:alpha=2:num=2:punc=2` is entered, the minimum number of password characters specified on the `minlen` parameter is 5. But the total number of characters specified in the `alpha`, `num`, and `punc` parameters is 6 (`alpha+num+punc`). The effective minimum number of characters is actually 6 rather than the 5 specified on the `minlen` parameter.

If the `clrrwntx=yes` parameter is specified, then at least one line number must be specified.

The Telnet connections will be secure when the value of the `ssh` parameter is ON. If the `ssh` parameter is OFF, the Telnet connections will not be secure.

Output

The following commands create the warning message that is shown in the output after the commands. The notes that are not bold in parentheses after some commands explain the displayed output. The warning message is displayed after the user enters the `login` command and a password. The output example shows the command output, a `login` command and password prompt, and the warning message that was created with these commands. See the Notes section for this command for additional information about entering this command.

```
chg-secu-
dflt:wrnln=1:wrntx="*****
*****"
```

```
chg-secu-dflt:wrnln=2:wrntx="* NOTICE: This is a private
computer system. *"
```

```
chg-secu-dflt:wrnln=3:wrntx="* Unauthorized Access or use may
lead to *"
```



```
chg-secu-dflt:wrnln=4:wrntx="* prosecution. *"
chg-secu-dflt:wrnln=5:wrntx="* 08/03/01 Notice!!! Eagle will be
upgraded between `*"
chg-secu-dflt:wrnln=6:wrntx="*                               the hours of 2am-3am on
08/03/15. *"
chg-secu-dflt:wrnln=7:wrntx="* *"
chg-secu-dflt:wrnln=8:wrntx="* Today's happy message: Go with
Oracle!!          *"
chg-secu-
dflt:wrnln=9:wrntx="*****
*****"
chg-secu-dflt:wrnln=10:wrntx=" " (set to 1 space to cause blank line before login
history is displayed)
chg-secu-dflt:wrnln=11:clrwrntx=yes
chg-secu-dflt:wrnln=12:clrwrntx=yes
chg-secu-dflt:wrnln=13:clrwrntx=yes
chg-secu-dflt:wrnln=14:clrwrntx=yes (remaining lines are provisioned to cause
chg-secu-dflt:wrnln=15:clrwrntx=yes them not to display as part of the message
chg-secu-dflt:wrnln=16:clrwrntx=yes after successful login)
chg-secu-dflt:wrnln=17:clrwrntx=yes
chg-secu-dflt:wrnln=18:clrwrntx=yes
chg-secu-dflt:wrnln=19:clrwrntx=yes
chg-secu-dflt:wrnln=20:clrwrntx=yes

rlghncxa03w 08-03-10 11:43:04 EST  EAGLE 38.0.0
CHG-SECU-DFLT: MASP A - COMPLTD
;
LOGIN:UID=eagle
PASSWORD:<password is not displayed>

*****
* NOTICE: This is a private computer system.      *
* Unauthorized Access or use may lead to          *
* prosecution.                                     *
* 08/03/01 Notice!!! Eagle will be upgraded between *
*                               the hours of 2am-3am on 08/03/15. *
*                                                                 *
* Today's happy message: Go with Oracle!!         *
*****

0 LOGIN failures since last successful LOGIN
```

```

Last successful LOGIN was on port 3 on 08-03-09 @ 12:12:35
;

```

The following command clears all of the warning messages.

```
chg-secu-dflt:clrwrntx=all
```

```

tekelecstp 08-03-02 17:53:13 EST EAGLE 38.0.0
CHG-SECU-DFLT: MASP A - COMPLTD
;

LOGIN:UID=eagle
PASSWORD:<password is not displayed>

0 LOGIN failures since last successful LOGIN
Last successful LOGIN was on port 3 on 08-02-26 @ 12:12:35
;

```

The following commands set the warning message text that is shown in the output. The parameter `clrwrntx=no` has no impact on the command output.

```
chg-secu-
dflt:wrnln=1:wrntx="*****":clrwrntx=no
```

```
chg-secu-dflt:wrnln=2:wrntx="* NOTICE: This is a private computer system.
*":clrwrntx=no
```

```
chg-secu-
dflt:wrnln=3:wrntx="*****
*****":clrwrntx=no
```

```

tekelecstp 08-03-02 17:53:31 EST EAGLE 38.0.0
CHG-SECU-DFLT: MASP A - COMPLTD
;

LOGIN:UID=eagle
PASSWORD:<password is not displayed>

*****
* NOTICE: This is a private computer system. *
*****

0 LOGIN failures since last successful LOGIN
Last successful LOGIN was on port 3 on 08-02-26 @ 17:12:35
;

```

The following command sets the `ssh` parameter to allow secure terminals.

```
chg-secu-dflt:ssh=on
```

```
tekelecstp 12-09-18 10:11:43 EST 45.0.0-64.42.0
chg-secu-dflt:ssh=on
```

```
Command entered at terminal #4.  
CHG-SECU-DFLT: MASP A - COMPLTD  
;
```

Related Topics

- [ent-user](#)
- [login](#)
- [rtrv-secu-dflt](#)

4.1.132 chg-secu-trm

Use this command to configure the access rights for a terminal. Only a user with system security administration authority can change a terminal's access rights. Access rights determine whether a terminal or port has command access to the system for the different command classes.

Parameters

trm (mandatory)

Terminal ID. The port to be configured.

Range:

1 - 16

a11 (optional)

All non-configurable command classes. This parameter specifies whether to configure all of the command classes.

Range:

yes

no

Default:

No change to the current value

System Default:

no

cc1 (optional)

Configurable command class name specifying whether the command class is allowed for the specified terminal.

Range:

ayy-yes, ayy-no

1 alphabetic character followed by 2 alphanumeric characters, a dash, and the indicator value

-no —The command is not allowed for the specified terminal.

-yes —The command is allowed for the specified terminal.

cc2 (optional)

Configurable command class name specifying whether the command class is allowed for the specified terminal.

Range:

ayy-yes, ayy-no

1 alphabetic character followed by 2 alphanumeric characters, a dash, and the indicator value

-no —The command is not allowed for the specified terminal.

-yes —The command is allowed for the specified terminal.

cc3 (optional)

Configurable command class name specifying whether the command class is allowed for the specified terminal.

Range:

ayy-yes, ayy-no

1 alphabetic character followed by 2 alphanumeric characters, a dash, and the indicator value

-no —The command is not allowed for the specified terminal.

-yes —The command is allowed for the specified terminal.

cc4 (optional)

Configurable command class name specifying whether the command class is allowed for the specified terminal.

Range:

ayy-yes, ayy-no

1 alphabetic character followed by 2 alphanumeric characters, a dash and the indicator value

-no —The command is not allowed for the specified terminal.

-yes —The command is allowed for the specified terminal.

cc5 (optional)

Configurable command class name, specifying whether the command class is allowed for the specified terminal.

Range:

ayy-yes, ayy-no

1 alphabetic character followed by 2 alphanumeric characters, a dash, and the indicator value

-no —The command is not allowed for the specified terminal.

-yes —The command is allowed for the specified terminal.

cc6 (optional)

Configurable command class name specifying whether the command class is allowed for the specified terminal.

Range:

ayy-yes, ayy-no

1 alphabetic character followed by 2 alphanumeric characters, a dash, and the indicator value.

-no —The command is not allowed for the specified terminal.

-yes —The command is allowed for the specified terminal.

cc7 (optional)

Configurable command class name specifying whether the command class is allowed for the specified terminal.

Range:

ayy-yes, *ayy-no*

1 alphabetic character followed by 2 alphanumeric characters, a dash and the indicator value

-no —The command is not allowed for the specified terminal.

-yes —The command is allowed for the specified terminal.

cc8 (optional)

Configurable command class name specifying whether the command class is allowed for the specified terminal.

Range:

ayy-yes, *ayy-no*

1 alphabetic character followed by 2 alphanumeric characters, a dash and the indicator value

-no —The command is not allowed for the specified terminal.

-yes —The command is allowed for the specified terminal.

db (optional)

Database Administration class. This parameter specifies whether the Database Administration class of commands is allowed.

Range:

yes

no

Default:

No change to the current value

System Default:

no

dbg (optional)

Debug class. This parameter specifies whether the Debug class of commands is allowed.

Range:

yes

no

Default:

No change to the current value

System Default:

no

link (optional)

Link Maintenance class. This parameter specifies whether the Link Maintenance class of commands is allowed.

Range:

yes

no

Default:

No change to the current value

System Default:

no

pu (optional)

Program Update class. This parameter specifies whether the Program Update class of commands is allowed.

Range:

yes

no

Default:

No change to the current value

System Default:

no

sa (optional)

Security Administration class. This parameter specifies whether the Security Administration class of commands is allowed.

Range:

yes

no

Default:

No change to the current value

System Default:

no

sys (optional)

System Maintenance class. This parameter specifies whether the System Maintenance class of commands is allowed.

Range:

yes

no

Default:

No change to the current value

System Default:*no***Example**

```
chg-secu-trm:trm=3:all=yes
```

```
chg-secu-trm:trm=3:sys=yes:cc1=u04-no:cc3=u11=yes
```

Dependencies

This command is not supported on telnet terminals (terminal IDs 17-40).

4283 E4283 Cmd Rej: Command cannot be executed on a Telnet terminal

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

Access rights for a terminal cannot be changed while a user is logged on to that terminal.

2775 E2775 Cmd Rej: Cannot change terminal authority while user is logged on

At least two terminal ports must be configured to have security administration authority.

2776 E2776 Cmd Rej: At least two ports must have security admin authority

The Command Class Management feature must be enabled before any of the configurable command class name parameters (*cc(X)*) can be specified.

2246 E2246 Cmd Rej: Command Class Management feature must be enabled

The value specified for a configurable command class name must be a default or provisioned command class name in the CCNAMES table.

2266 E2266 Cmd Rej: Class name is not an existing configurable command class

The CCCNAMES table is corrupt or cannot be found.

2598 E2598 Cmd Rej: Cccnames table must be accessible

The Terminal table is corrupt or cannot be found.

2138 E2138 Cmd Rej: Failed reading terminal table

If the *all* parameter is specified and any of the individual command classes are also specified, the individual command classes take precedence.

N/A N/A

Notes

Up to 8 configurable command class name parameters can be entered in one command. Additional commands can be entered to change access rights for more than 8 names. To change access rights for all 32 available configurable command class names, four commands could be entered with 8 names specified in each command.

Security Administration ports whose terminal port type has been configured with a value of *none* or *printer* do not allow commands to be entered. Because commands cannot be entered from terminals attached to these ports, they are not considered as ports configured for security administration authority.

Output

```
chg-secu-trm:trm=3:all=yes
```

```
rlghncxa03w 04-01-15 12:30:04 EST EAGLE 31.3.0  
Command entered at terminal #13.
```

```
rlghncxa03w 04-01-15 12:30:07 EST EAGLE 31.3.0  
CHG-SECU-TRM: MASP A - COMPLTD
```

```
;
```

Related Topics

- [rtrv-secu-trm](#)

4.1.133 chg-sfappopts

Use this command to change SFAPP configuration. This command updates the SFAPPOPTS table.

Parameters

agetime (optional)

This parameter defines value for ageing.

Range:

1-65535

Default:

No change to the current value

System Default:

None - Indicates '0' value.

failth (optional)

This parameter defines the failed validation threshold. The difference between failure and success counts of a dynamically learned VLR must cross this threshold in order for the VLR to become Blacklisted.

Range:

1-65535

Default:

No change to the current value

System Default:

None - Indicates '0' value.

mode (optional)

Provides the option to turn off dynamic learning, test the learning algorithm, and move the system in operation using various modes

Range:*off*

Provides option to turn off dynamic whitelist learning.

learn

New learning possible in this mode. No validation performed.

test

New learning possible in this mode. Challenges can also be performed. However, learned VLRs remain Greylisted

active

No new learning in this mode are performed. Status of dynamically learned VLRs are changed to Whitelisted or Blacklisted if they meet criteria.

Default:

No change to the current value

System Default:*off***succth (optional)**

This parameter defines the successful validation threshold. The difference between success and failure counts of a dynamically learned VLR must cross this threshold in order for the VLR to become Whitelisted.

Range:*1-65535***Default:**

No change to the current value

System Default:*None - Indicates '0' value.***velth (optional)**

This parameter defines the number of velocity check attempts needed for a dynamic roaming entry to be marked as Learning Complete.

Range:*1-65535***Default:**

No change to the current value

System Default:*None - Indicates '0' value.***vlrimeichallenge (optional)**

This parameter enables the VLR IMEI challenge to be performed by SFAPP Card by sending a PSI to query IMEI from the visited-VLR.

Range:*yes*

Enabled

no
Disabled

Default:
No change to the current value

System Default:
no

Example

```
chg-sfappopts:vlrimeichallenge=yes
chg-sfappopts:mode=off
chg-sfappopts:mode=learn
chg-sfappopts:mode=test
chg-sfappopts:mode=active
chg-sfappopts:succth=3
chg-sfappopts:failth=5
chg-sfappopts:succth=5:failth=3:velth=8:mode=learn
```

Dependencies

When SFAPP(P) to OAM sync (copy-table) is in progress do not switch the mode to OFF or LEARN as these mode performs copy table from SFAPP(P) to OAM.

Multiple copy table at same time may cause table corruption

3628 E3628 Cmd Rej: SFAPP(P) to OAM SYNC in progress

The SFAPP table should be accessible.

4820 E4820 Cmd Rej: Failure accessing EGLEOPTS table

When there is NO Active SFAPP cards on EAGLE, User will not be able to switch the mode

3636 E3636 Cmd Rej: No ACTIVE SFAPP card available

Output

```
chg-sfappopts:mode=learn

tekelecstp 18-09-13 11:04:35 EST  EAGLE 46.7.0.0.0-75.10.0
  chg-sfappopts:mode=learn
  Command entered at terminal #17.
;

tekelecstp 18-09-13 11:04:35 EST  EAGLE 46.7.0.0.0-75.10.0

WARNING: Re-Switch the mode after TWO Minute as this mode needs
time to sync with OAM
;
Command Accepted - Processing
tekelecstp 18-09-13 11:04:35 EST  EAGLE 46.7.0.0.0-75.10.0
```

```
CHG-SFAPPOPTS: MASP A - COMPLTD
;
Command Executed
```

Legend

- **VLTIMEICHALLENGE** - Enables/Disables the VLR IMEI challenge for CAT3.2 messages
- **MODE**- Provides option to turn off dynamic learning, test the learning algorithm, and move the system in operation using various modes
 - *OFF*- Turn off the dynamic whitelist learning. Delete all the dynamic VLR profile and dynamic VLR roaming entries.
 - *LEARN* - Only learn about new VLRs, no challenges are performed (newly learned VLRs are considered as Whitelisted). Delete dynamic entries without parent in static when switch from ACTIVE or TEST mode
 - *ACTIVE* - Challenges are performed. Status of dynamically learned VLRs are changed to Whitelisted or Blacklisted if they meet criteria
 - *TEST* - Challenges are performed. However, learned VLRs remain Grey listed
- **SUCCTH** If system-wide success threshold is 0 i.e., None, then do not transition any VLR to whitelist
- **VELTH** - In case VELTH is set to None, all dynamic VLR roaming entries will always be in LEARNING phase and will never be used for VLR validation
- **AGETIME** - In case agetime is set to None, ageing will not perform

Related Topics

- [rtrv-sfappopts](#)

4.1.134 chg-sg-opts

Use this command to change the IP7 Secure Gateway protocol options.

Parameters

dscp (optional)

This parameter specifies the `dscp` value that shall be set for outbound messages for SIGTRAN cards.

Range:

0-63

None

The system-wide SCTP value is turned off, and the SCTP value can be configured on a per-card basis.

Default:

No change to the current value

System Default:

0

The number of static entries in the Routing Key table cannot exceed the value specified for the `srkq` parameter.

3842 E3842 Cmd Rej: Entries in static route key table cannot exceed SRKQ

The `srkq` parameter value must be greater than or equal to the current number of static routing key entries. Attempts to decrease the value below the actual current number of static routing key entries are not allowed.

3842 E3842 Cmd Rej: Entries in static route key table cannot exceed SRKQ

The total number of the `srkq` value cannot exceed 2500 for E5-ENET-B cards running the SS7IPGW or IPGWI application.

3841 E3841 Cmd Rej: SRKQ exceed max allowed rtkey limit

The total number of actual routing keys cannot not exceed 2500 per system.

3841 E3841 Cmd Rej: SRKQ exceed max allowed rtkey limit

This command generated an unexpected response message.

3857 E3857 Cmd Rej: Unexpected response message error

There was a processor timeout error during the period when this command was entered.

3856 E3856 Cmd Rej: Processor timeout error

Notes

SCTP Checksum Algorithm

The SCTP checksum algorithm affects the IPLIMx, IPGWx, and IPSG cards under the following conditions:

- All associations on the card are in the **open=no** state.
- No associations are provisioned on the card

If neither condition is true, the card raises minor alarm (UAM 298) under the following scenarios:

- The system-wide SCTP checksum algorithm is configured to a different value than the active SCTP checksum algorithm on the card.
- The system-wide SCTP checksum algorithm is set to *percard*, and the per-card setting is different than the active SCTP checksum algorithm on the card.

The alarm is cleared (UAM 299), and the SCTP checksum algorithm takes effect when all associations on the card are set to `open=no` or when the card is reset.

Table 4-15 Standard DSCP Values

DSCP Class	DSCP (bin)	DSCP (hex)	DSCP (dec)
NONE	000000	0x00	0
CS1	001000	0x08	8
AF11	001010	0x0A	10
AF12	001100	0x0C	12
AF13	001110	0x0E	14
CS2	010000	0x10	16

Table 4-15 (Cont.) Standard DSCP Values

DSCP Class	DSCP (bin)	DSCP (hex)	DSCP (dec)
AF21	010010	0x12	18
AF22	010100	0x14	20
AF23	010110	0x16	22
CS3	011000	0x18	24
AF31	011010	0x1A	26
AF32	011100	0x1C	28
AF33	011110	0x1E	30
CS4	100000	0x20	32
AF41	100010	0x22	34
AF42	100100	0x34	36
AF43	100110	0x26	38
CS5	101000	0x28	40
EF	101110	0x2E	46
CS6	110000	0x30	48
CS7	111000	0x38	56

Output

```
chg-sg-opts:sctpcsum=percard
```

```
tekelecstp 08-02-22 17:56:31 EST EAGLE 38.0.0
CHG-SG-OPTS: MASP A - COMPLTD
```

```
;
```

```
chg-sg-opts:dscp=8
```

```
tekelecstp 13-09-24 16:56:31 EST EAGLE 46.0.0
CHG-SG-OPTS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [rtrv-sg-opts](#)

4.1.135 chg-shlf

Use this command to change the Shelf FAN bit for an equipment shelf in the database, based on whether the shelf is equipped with a FAN unit or not.

Parameters**loc (mandatory)**

The location of the shelf.

Range:

1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300,
6100, 6200, 6300

fan (optional)

This parameter turns ON/OFF the FAN bit. If it is turned ON, the FAN power for this shelf will be added to the Frame Power Budget.

Range:

off - Shelf is not equipped with a FAN unit

on - Shelf is currently equipped with a FAN unit

Example

```
chg-shlf:loc=1200:fan=on
```

```
chg-shlf:loc=1200:fan=off
```

Dependencies

The frame and shelf values of the shelf location parameter (loc) must be within the valid range (xyzz, where x=frame and y=shelf; zz is always 00 for this command).

2017 E2017 Cmd Rej: Shelf location is out of range, 1100..6300

The specified shelf location must have been configured previously.

2108 E2108 Cmd Rej: Shelf location not equipped

The Shelf table is corrupt or cannot be found by the system.

2104 E2104 Cmd Rej: Failed reading the shelf table

A shelf cannot be provisioned at location 1100. This location is reserved for the control shelf.

2201 E2201 Cmd Rej: Shelf location 1100 is reserved for the control shelf

The Shelf FAN bit cannot be turned OFF if EPMB, SLIC or E5-APP-B card(s) are provisioned in the shelf.

2689 E2689 Cmd Rej: Card(s) provisioned in shelf require FAN

Notes

None

Output

```
chg-shlf:loc=1200:fan=on
```

```
tekelecstp 03-09-12 11:11:28 EST EAGLE 45.0.0  
ENT-SHLF: MASP A - COMPLTD
```

```
;
```

```
chg-shlf:loc=1200:fan=off
```

```
tekelecstp 03-09-12 11:11:28 EST EAGLE 45.0.0
```

```
ENT-SHLF: MASP A - COMPLTD  
;
```

Related Topics

- [dlt-shlf](#)
- [rtrv-shlf](#)

4.1.136 chg-sid

Use this command to change the self-identification of the system. The self-identification identifies the system to the other signaling points in the network.

▲ Caution:

Use this command only during periods of low traffic. If you use the `chg-sid` command to change the point code, then the change does not become enabled until you initialize (`init-sys`) the system.

✎ Note:

If you use the `chg-sid` command to change the capability point code, then you do not need to initialize the system for the change to become enabled.

▲ Caution:

Changing a SID impacts all adjacent nodes that reference the SID. Both sides must be changed at the same time, or the signaling link test messaging will fail, and the links will go down.

Parameters

✎ Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

▲ Caution:

If there are STC cards in the system for the EAGLE 5 Integrated Monitoring Support (E5IS) feature, you must turn off the EIS copy function (see the `chg-eisopts` command) before you change the system CLLI. When the CLLI change is complete, use the `chg-eisopts` command to turn on the EIS copy function again.

c11i (optional)

Common language location identifier. This parameter, which must be unique, identifies the system in terms of its physical location:

- The first four characters identify the city, town, or locality.
- The fifth and sixth characters identify state or province.
- The seventh and eighth characters identify the building.
- The last three characters identify the traffic unit.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 10 alphanumeric characters

The value *none* is invalid for the CLLI.

Default:

No change to the current value

cpc (optional)

ANSI capability point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

cpc

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

cpc/cpc/cpci/cpcn/cpcn24/cpcn16 (optional)

Capability point code. The code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network to which the STP belongs.

cpci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

cpcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-`

`stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

cpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

cpcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

cpctype (optional)

Capability point code type. This parameter specifies whether the capability point code is for the STP or for a particular service.

This parameter cannot be changed after it is assigned.

Range:

lnp

Local Number Portability

stp

EAGLE

inp
INAP-based Number Portability

eir
Equipment Identity Register

gport
G-Port (GSM Mobile Number Portability)

gflex
G-Flex (GSM Flexible Numbering)

mnp
Mobile Number Portability

atinpq
ATI Number Portability Query

vflex
Voice Mail Router

aiq
ANSI41 Analyzed Information Query

Default:
stp

ncpc (optional)

New ANSI capability point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:
ncpca

Range:
000-255, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

Enter *none* to delete the point code.

The point code *000-000-000* is not a valid point code.

ncpc/ncpca/ncpci/ncpcn/ncpcn24/ncpcn16 (optional)

New capability point code. Use new CPCs to replace or delete existing CPCs.

ncpci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:
s-, 0-255, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s
zone—0-7
area—000-255
id—0-7

Enter *none* to delete the point code.

The point code 0-000-0 is not a valid point code.

ncpcn (optional)

New ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Enter *none* to delete the point code.

Default:

No change to existing point code value.

ncpcn24 (optional)

New 24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Enter *none* to delete the point code.

ncpcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:

000--127, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna--000---31

Enter *none* to delete the point code.

npc (optional)

New ANSI STP point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

npca

Range:

000-255, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

Enter *none* to delete the point code.

The point code *000-000-000* is not a valid point code.

npci (optional)

New STP ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

Enter *none* to delete the point code.

The point code *0-000-0* is not a valid point code.

npci/npcn (optional)

New STP ITU national or international point code.

npcn (optional)

New STP ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, aa-zz, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14
Enter *none* to delete the point code.

pc (optional)

ANSI STP point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24/pcn16 (optional)

STP point code.

pci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area (un-sna-mna)*.

Range:

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

pctype (optional)

Point code type. This parameter does not affect ITU destinations.

Range: ansi, other

ansi —Supports point codes that meet the ANSI standard

other —Supports point codes that do not meet the ANSI standard.

Default:

The point code type is not changed.

Example

To change the site identification PCTYPE to ANSI:

```
chg-sid:pctype=ANSI
```

To change the site identification CLLI to *rlghncxa03w* :

```
chg-sid:clli=rlghncxa03w
```

To add a new ANSI capability point code:

```
chg-sid:cpc=002-002-002
```

To delete an ITU-I capability point code:

```
chg-sid:cpci=2-003-4:ncpci=none
```

To change an existing ITU-N capability point code, *01234*, to *02092* : (The existing CPC is replaced with the new CPC)

```
chg-sid:cpcn=01234:ncpcn=02092
```

To add a new ANSI LNP CPC:

```
chg-sid:cpc=002-002-002:cpctype=lnp
```

To change an existing ITU-N capability point code with a group code of *01234-aa* to *02092-si* : (The existing CPC is replaced with the new CPC)

```
chg-sid:cpcn=01234-aa:ncpcn=02092-si:cpctype=stp
```

To change the ITU-N 24-bit site identification STP Point Code when no previous ITU-N site identification STP point code exists:

```
chg-sid:pcn24=1-101-1
```

To change the ITU-N site identification STP Point Code when a previous ITU-N site identification STP point code exists:

```
chg-sid:pcn=11111:npcn=none
```

To add a new ITU-N 24-bit Capability Point Code:

```
chg-sid:cpcn24=22-22-22
```

To change an existing 24-bit ITN-N Capability Point Code 22 to 33:

```
chg-sid:cpcn24=22-22-22:ncpcn24=33-33-33
```

To add a new EIR-type Capability Point Code:

```
chg-sid:cpctype=eir:cpci=2-30-1
```

To delete an existing ITUI Capability Spare Point Code:

```
chg-sid:cpci=s-2-003-4:ncpci=none
```

To change an existing node ITU-I spare true point code from an assigned point code value to *none*:

```
chg-sid:pci=s-1-234-5:npci=none
```

To change an existing ITU-N spare capability point code from *s-01234* to *s-02092*. The existing CPC is replaced with the new CPC:

```
chg-sid:cpcn=s-01234:ncpcn=s-02092:cpctype=stp
```

To change or add new node true point codes simultaneously, for ITU-I spare and ITU-N spare point code types:

```
chg-sid:pci=s-1-234-5:pcn=s-12345
```

To change an existing node ITU-N spare true point code from an assigned point code value to *none*:

```
chg-sid:pcn=s-12345:npcn=none
```

To change the CPC list to include an ANSI CPC for the G-Port service:

```
chg-sid:cpcn=1-2-3:cpctype=gport
```

To change the CPC list to include an ITU-I CPC for the G-Flex service:

```
chg-sid:cpci=2-3-4:cpctype=gflex
```

To change the ITU-N site identification STP Point Code when a previous ITU-N site identification STP point code does not exist:

```
chg-sid:pcn=11112
```

To change the CPC list to include an ANSI CPC for the ATINPQ service:

```
chg-sid:cpc=3-4-6:cpctype=atinpq
```

To change the CPC list to include an ANSI CPC for the AIQ service:

```
chg-sid:cpc=2-3-5:cpctype=aiq
```

To change the CPC list to include an ANSI CPC for the INP service:

```
chg-sid:cpc=1-1-1:cpctype=inp
```

To add a new ITU-N 16-bit Capability Point Code:

```
chg-sid:cpcn16=125-10-25
```

To change an existing 16-bit ITU-N Capability Point Code from 10 to 15:

```
chg-sid:cpcn16=125-10-25:ncpcn16=125-15-25
```

To change the ITU-N16 site identification STP Point Code:

```
chg-sid:pcn16=123-10-25
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The Spare Point Code Support feature must be enabled before a spare point code (s-) can be specified in the command.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The value specified for the `pcn`, `cpcn`, or `npcn` parameter must be a full point code.

3921 E3921 Cmd Rej: ITU National Point Code must be full point code

The STP destination and capability point codes can be specified only as full point codes or *none*.

2861 E2861 Cmd Rej: Site PC, CPCs and NCPCs must be full point codes

If the `ncpc/ncpca/ncpci/ncpcn/ncpcn24/ncpcn16` parameter is specified, a corresponding existing `cpc/cpca/cpci/cpcn/cpcn24/cpcn16` parameter must be specified.

2873 E2873 Cmd Rej: NCPCx cannot be specified without CPCx

If the `npci` or `npcn` parameter is specified, a corresponding existing `pci` parameter or `pcn` parameter must be specified.

4302 E4302 Cmd Rej: NPCx cannot be specified without PCx

If the `cpctype` parameter is specified, the `cpc/cpca/cpci/cpcn/cpcn24/cpcn16` parameter must be specified.

3209 E3209 Cmd Rej: CPCTYPE can not be specified without CPC

If the `cpctype` parameter is specified, an `ncpc/ncpca/ncpci/ncpcn/ncpcn24/ncpcn16` parameter cannot be specified in the command.

3210 E3210 Cmd Rej: CPCTYPE can not be specified with NCPC

The values of the `pc/pca/pci/pcn/pcn24/pcn16`, `cpc/cpca/cpci/cpcn/cpcn24/cpcn16`, and `npc/ncpca/ncpci/ncpcn/ncpcn24/ncpcn16` parameters cannot be equal.

2884 E2884 Cmd Rej: PCx, NPCx, CPCx or NCPCx must not be equal

The STP capability point code type (domain) must match the new STP capability point code type (domain).

2871 E2871 Cmd Rej: NCPCx and CPCx type must match

If the `cpctype=lnp` parameter is specified, then the `cpc/cpca` parameter must be specified with an ANSI point code value.

3220 E3220 Cmd Rej: CPCx must be ANSI if CPCTYPE equals LNP

If the `cpctype=inp` parameter is specified, the `cpc` parameter and the `cpca` parameter cannot be specified for the point code. An ANSI point code cannot be specified.

3934 E3934 Cmd Rej: CPCx must not be ANSI if CPCTYPE is INP

The LNP feature must be turned on before the `cpctype=lnp` parameter can be specified.

3009 E3009 Cmd Rej: LNP feature must be ON

The INP feature must be on before the `cpctype=inp` parameter can be specified.

3524 E3524 Cmd Rej: INP/AINPQ feature must be ON

The EIR feature must be on before the `cpctype=eir` parameter can be specified.

3699 E3699 Cmd Rej: EIR feature must be ON

Only the `pcn` parameter or the `pcn24` parameter can be specified; however, both parameters cannot be specified in the same command.

2647 E2647 Cmd Rej: Only one of PCN or PCN24 may be specified

If a 14-bit ITU-N site ID exists, then a 24-bit ITU-N site ID cannot be assigned. If a 24-bit ITU-N site ID exists, then a 14-bit ITU-N site ID cannot be assigned.

2784 E2784 Cmd Rej: Cannot switch between ITU-N and ITU-N24 site id assignments

Only one of the `npc/ncpca/ncpci/ncpcn/ncpcn24/ncpcn16` parameters can be specified.

2182 E2182 Cmd Rej: Only one of NCPC/A, NCPCI, or NCPCN/N24 may be specified

If the `pcn`, `npcn`, `cpcn`, or `ncpcn` parameter is specified, the format must match the format that was assigned with the `chg-stpopts:npcfmti` parameter.

2997 E2997 Cmd Rej: PC must match NPCFMTI set in CHG-STPOPTS

The site CLLI code that is specified in the command cannot be the same as an existing route destination CLLI code.

2184 E2184 Cmd Rej: CLLI is already being used by a route

The STP capability point code that is specified in the command cannot be the same as an existing STP capability point code.

2183 E2183 Cmd Rej: Capability point code is already being used

The new STP capability point code that is specified in the command cannot be the same as an existing STP capability point code.

2183 E2183 Cmd Rej: Capability point code is already being used

If the system is configured for ANSI format point codes, the specified network indicator value (*ni*) of the `pc`, `cpc`, or `ncpc` parameter must be 6 or greater when the specified cluster value (*nc*) is 0 .

2169 E2169 Cmd Rej: Point code out of range

The true point code and capability point codes cannot be the same as existing secondary point codes.

3810 E3810 Cmd Rej: SPC may not exist as a TPC or CPC in the SID table

The existing true point code cannot be changed if it is in the MAP table.

3285 E3285 Cmd Rej: Cannot change existing STP True PC if in MAP table

The maximum number of capability point codes that can be provisioned is 96.

2883 E2883 Cmd Rej: Maximum number of CPCs defined (96)

If the existing spare ITU-I or spare ITU-N point code is an STP destination point code, then the `npci=none` or `npcn=none` parameter (respectively) cannot be specified.

2190 E2190 Cmd Rej: Cannot delete STP self ID if a DPC of same type is defined

A value of none cannot be specified for the `cpc/cpca/cpci/cpcn/cpcn24/cpcn16` parameters.

2340 E2340 Cmd Rej: Invalid point code

The STP destination point code that is specified in the command cannot be the same as an existing route `dpc` or `cpc`.

2189 E2189 Cmd Rej: Site point code is already being used

The new STP capability point code that is specified in the command cannot be the same as the STP destination point code.

2185 E2185 Cmd Rej: Capability point code matches STP's own point code

The specified `pci` or `pcn` parameter value must already exist as an STP destination point code.

4301 E4301 Cmd Rej: PCx specified does not exist as a True Point Code

The STP Site ID Table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The MAS Configuration Table is corrupt or cannot be found.

2145 E2145 Cmd Rej: Failed reading MAS configuration table

The Route Table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The Redirect Table is corrupt or cannot be found.

2639 E2639 Cmd Rej: Failed reading redirect table

The SPC Table is corrupt or cannot be found.

3807 E3807 Cmd Rej: Failed reading Secondary Point Code (SPC) table

The G-Flex feature must be turned on to change the capability point code if the `cpctype=gflex` parameter is specified.

3500 E3500 Cmd Rej: GFLEX feature must be ON

The G-Port feature must be enabled before the `cpctype=gport` parameter can be specified.

4371 E4371 Cmd Rej: GPORT must be enabled

If the A-Port or the IS41 GSM Migration (IGM) feature is not enabled, the `cpctype=mnq` parameter cannot be specified.

3330 E3330 Cmd Rej: APORT or IGM must be enabled

If the A-Port or IGM feature is enabled, the `cpctype=gport` parameter cannot be specified.

2814 E2814 Cmd Rej: GPORT invalid if APORT or IGM is enabled

Could not add or change the (new) capability point code to the list due to software error.

2362 E2362 Cmd Rej: RESERVED in mtt.h as MTT_UNKNOWN_ERROR_CODE

The ATINP feature must be enabled before the `cpctype=atinpq` parameter can be specified.

4816 E4816 Cmd Rej: ATINP feature must be enabled

If a value of `aiq`, `atinpq`, or `eir` is specified for the `cpctype` parameter, then the `cpcn24` parameter cannot be specified.

4895 E4895 Cmd Rej: CPCx must not be ITUN24 if CPCTYPE is ATINPQ/AIQ/EIR

The V-Flex feature must be turned on before the `cpctype=vflex` parameter can be specified.

4142 E4142 Cmd Rej: VFLEX feature must be ON

The ANSI41 AIQ feature must be enabled before the `cpctype=aiq` parameter can be specified.

5158 E5158 Cmd Rej: ANSI41 AIQ feature must be enabled

The values specified for the `cpc/cpca/cpci/cpcn`, `npc/ncpca/ncpci/npcn`, `npc/npca/npci/npcn`, and `pc/pca/pci/pcn` parameters cannot be the same as any Emulated Point Code value in the PCT table.

5466 E5466 Cmd Rej: Point Code matches an Emulated Point Code in PCT table

ANSI or ITUN-24 SID cannot be provisioned if the J7 feature is enabled.

2801 E2801 Cmd Rej: J7 Support feature must not be Enabled

3238 E3238 Cmd Rej: ANSI or ITUN-24 SID cannot be provisioned

Notes

If one of the `pc/pca/pci/pcn/pcn24/pcn16` parameters is specified to change the point code, the following message is displayed:

```
CAUTION: SYSTEM SITE ID HAS BEEN CHANGED, MANUAL RE-INITIALIZATION IS NEEDED
```

If the `redirect` function refers to any of the `pc/pca` or `cpc/cpca` parameters, the following message is displayed:

```
CAUTION: SYSTEM SITE ID WAS REFERENCED BY THE REDIRECT FUNCTION'S DPC
```

In order for the change to be fully implemented, you must enter the `init-sys` command. This initializes the entire system, and reloads all LIMs with the new self ID.

Only one ITU-N Site ID point code can be defined at one time (PCN or PCN24). To change from one to the other, the current Site ID must be disabled before the new one can be defined.

When the `cpctype=lnp` parameter is specified, it associates a specific service or capability (for example, local number portability query response and message relay service) with one or more of the capability point codes.

After the CPCTYPE is defined, it cannot be changed.

For initial installation of a system, the self point code must be entered before any destination is entered.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

When the Site ID is changed, manual initialization is required because an MSU can be in transition between a link card and an SCCP card at the time the SID table is changed. In that case, it is possible for the Destination True Point Code to no longer appear to belong to the STP node, and SCCP would not know what to do with it. The following message is displayed:

```
CAUTION: SYSTEM SITE ID HAS BEEN CHANGED, MANUAL RE-INITIALIZATION IS NEEDED
```

Introduced for Feature 90773 GFlex Reroute

Parameter CPCType has new values added for the services GPORT and GFLEX. The CPC parameter is used to support incoming messages (DPC = CPC) which are routed via Final GTT (rt-ssn) to the Eagles internal LNP, EIR, and/or INP Subsystems.

The CPC parameter is also used to support incoming messages which are routed via Intermediate GTT (rt-gt) to the Eagle (with DPC = CPC) for G-FLEX and/or G-PORT Services and Subsystems on HLR's and/or Nodes which are external to the Eagle.

Spare Point Code support is introduced for Feature 53120.

EAGLE documentation uses the terminology “STP Point Code (PC)” in place of the Bellcore terminology “Destination Point Code (DPC)”.

The `chg-sid` command is used to identify the STP in the signaling network. STP identity is determined by the Common Language (CLLI) code and the SS7 Destination/True Point Code (DPC). For MTP message discrimination, the STP can also be identified by one or more optional capability codes representing service-related SCCP capabilities resident at the STP.

The CLLI and DPC are used as paired key fields in SEAS to uniquely identify the STP and all SEAS interactions with that STP. This command is viewed as the first command to be used in provisioning a newly commissioned STP or an STP that is being reactivated in a new location or at a new network address.

The `chg-sid` command can also be used to add capability codes to the existing set for that STP after the CLLI and DPC have been initialized. Alternatively, the STP CLLI and DPC can be provisioned locally during installation, and the command used only to add new capability codes. The STP's own CLLI must be provisioned before SEAS-STP communication, in order to support UAL-level interactions.

If the `chg-sid` command is used to change only the capability point code, then the system does not need to be initialized to enable the change.

The `cpctype=vflex` parameter is used to support incoming messages (DPC = CPC) that are routed through Final GTT to the EAGLE V-Flex subsystem.

If the CLLI of the system is entered or changed with the `chg-sid` command, and the SEAS Over IP feature is turned on, then the CCS MR configuration must be changed to include the new EAGLE CLLI value. The following warning message appears:

```
CAUTION: System CLLI has changed, CCSMR re-configuration required
```

The `cpctype=aiq` parameter is used to support incoming messages (DPC = CPC) that are routed through Final GTT to the EAGLE AIQ subsystem.

If the CLLI is changed and if platformenable is on (see the [chg-measopts](#) command), the MCPM cards should be booted.

If the CLLI is changed and if oamhcmear is on (see the [chg-measopts](#) command), the E5-OAM cards should be booted.

Output

```
chg-sid:pc=10-20-30
```

```
rlghncxa03w 04-01-07 09:17:40 EST EAGLE 31.3.0  
CHG-SID: MASP A - COMPLTD
```

```
;
```

```
chg-sid:pcn16=125-2-6
```

```
tekelecstp 13-02-27 12:34:45 EST 45.0.0-64.56.0  
chg-sid:pcn24=125-2-6
```



```
Command entered at terminal #4.  
CAUTION: SYSTEM SITE ID HAS BEEN CHANGED, MANUAL RE-INITIALIZATION IS  
NEEDED  
CHG-SID: MASP A - COMPLTD  
;
```

Related Topics

- [ent-sid](#)
- [rtrv-sid](#)

4.1.137 chg-sip-npp

Use this command to change existing number normalization rules (SIPPHCXT and SIPNPFIX). SIPPHCXT table will be used to provision the phone-context. SIPNPFIX table will be used to configure the prefixes against each phone context and it will also contain number of digits to be deleted (NPDD) and new prefix to be added (NPDS).

Parameters

phctxt (mandatory)

Phone Context

Range:

XX

A string of 1 to 64 characters. Valid values are (0-9, A-Z), +, *, #, ,(period), @ or DFLT (default).

pfxx (mandatory)

Prefix

Range:

XXXXXXXXXXXXXXXX

A string of 1 to 15 characters. Valid values are hex digits (0-9, A-F), +, *, -, #.

npds (optional)

New prefix digits to be substituted to digit string after deleting the NPDD.

Range:

XXXXXXXXXXXXXXXX

A string of 1 to 15 characters. Valid values are hex digits (0-9, A-F), and NONE.

Default:

No change to the current value

System Default:

none

npdd (optional)

Number of prefix digits to be deleted from the incoming digit string.

Range:*ZZZZZZZZZZZZZZZZ*

An integer in the range of 0 to 15.

Default:

No change to the current value.

System Default:*0***Example**

```
chg-sip-npp:phctxt=abc.com:px=131:npdd=2
```

```
chg-sip-npp:phctxt=xyz.com:px=131:npds=3a
```

```
chg-sip-npp:phctxt=abc.com:px=1:npdd=1:npds=af91
```

```
chg-sip-npp:phctxt=user@xyz.com:px=91*:npdd=1:npds=af91
```

Dependencies

SIPNP Feature must be enabled before changing any number normalization rules.

2590 E2590 Cmd Rej: SIPNP Feature must be enabled.

SIP Phone Context table (SIPPHCXT) should be accessible.

2594 E2594 Cmd Rej: Failed reading SIP Phone Context table

SIP Prefix table (SIPNNPFX) should be accessible.

2637 E2637 Cmd Rej: Failed reading SIP Prefix table

SIP DBMM 2 table should be accessible.

2649 E2649 Cmd Rej: Failed reading DBMM 2 table

At least one optional parameter must be specified.

2112 E2112 Cmd Rej: At least one parameter must be changed

The SIP Prefix entry must already exist in the SIPNNPFX table.

2655 E2655 Cmd Rej: SIP Prefix entry does not exist

The SIP Phone Context entry must already exist in the SIPPHCXT table.

2656 E2656 Cmd Rej: SIP Phone Context entry does not exist

At least one NPDD or NPDS must be specified with non-default (other than 0, NONE) value.

2686 E2686 Cmd Rej: Both NPDS and NPDD cannot be set to default values

Notes

None

Output

This example displays the output when all the parameters are specified:

```
chg-sip-npp:phctxt=abc.com:pfx=1:npdd=1:npds=af91
```

```
tekelecstp 12-07-09 19:12:14 EST EAGLE 45.0.0  
chg-sip-npp:phctxt=abc.com:pfx=1:npdd=1:npds=af91  
Command entered at terminal #4.
```

```
PHCTXTID table is (2 of 101) 2% full.
```

```
CHG-SIP-NPP: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-sip-npp](#)
- [rtrv-sip-npp](#)
- [ent-sip-npp](#)

4.1.138 chg-sipopts

Use this command to change SIP configuration. This command updates the SIPOPTS table.

Parameters

np1kupfail (optional)

This parameter indicates whether 302 or 404 response is sent, when DN is not found in RTDB lookup.

Range:

302

Redirection response.

404

This parameter indicates that RTDB lookup was unsuccessful and DN was not found.

Default:

No change to the current value

System Default:

404

nprspfnt (optional)

This parameter defines format of URI in Contact header, when INCLUDERN is OFF.

Range:

m

Routing Number

rndn

RN+DN

ccrndn

CC+RN+DN

masddn

RN+ASD+DN

rmasd

RN+ASD

grnasd

GRN+ASD

rngrndn

RN+GRN+DN

Default:

No change to the current value.

System Default:

rndn

off (optional)

This parameter turns off the specified options.

Range:

includenpdi

This option indicates to exclude "npdi" parameter in the response in cases where the RTDB dip is successfully performed.

includern

This option indicates to exclude "rn" parameter in the response in cases where the RTDB dip is successfully performed.

on (optional)

This parameter turns on the specified options.

Range:

includenpdi

This option indicates to include "npdi" parameter in the response in cases where the RTDB dip is successfully performed.

includern

This option indicates to include "rn" parameter in the response in cases where the RTDB dip is successfully performed.

At least one optional parameter must be specified.

2112 E2112 Cmd Rej: At least one parameter must be changed

The same option cannot be specified for the on and off parameters in the same command.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

Only the defined values must be given for the parameters nplkupfail, rnfmt, on, off and nprspfnt.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

Output

```
chg-sipopts:on=includenpdi
```

```
tekelecstp 12-06-22 17:25:00 EST EAGLE 45.0.0
chg-sipopts:on=includenpdi
Command entered at terminal #4.
CHG-SIPOPTS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [rtrv-sipopts](#)

4.1.139 chg-slt

Use this command to change the fields of a signaling link test message (SLTM) record in the SLTM table.

Parameters

sltset (mandatory)

Signaling link test message record number in the SLTM table.

Range:

1 - 20

enabled (optional)

Enables the signaling link test message.

Range:

on

off

Default:

No change to the current value

mode (optional)

SLTM mode to be used when sending test messages.

Range:***special***

All SLTMs generated by the links in the linkset associated with this SLTM record are designated “special” maintenance messages.

regular

All SLTMs generated by the links in the linkset associated with this SLTM record are designated “regular” maintenance messages.

Default:

No change to the current value

pattern (optional)

Test pattern to be sent with a signaling link test message.

Range:

aaayyyyyyyyyyyyyyyyyyyyyyyyyyy

2 to 30 alphanumeric characters; valid characters are 0-9, a-f, A-F

An even number of characters must be used in the pattern. The first two characters of the pattern must be letters.

Default:

No change to the current value

t1 (optional)

Timer 1. The amount of time, in milliseconds, to wait after an SLTM test fails before running the SLTM test again.

Range:

4000 - 12000

Default:

No change to the current value

t2 (optional)

Timer 2. The amount of time, in milliseconds, that should pass between running SLTM tests for a normally functioning signaling link.

Range:

30000 - 90000

Default:

No change to the current value

Example

```
chg-slt:sltset=1:t1=4000:t2=39000:enabled=off:pattern=aabbccdd
```

Dependencies

The value of t1 should be greater than the level 3 timer t6 . The level 3 timer t6 can be 100 - 2000 milliseconds. Enter the `rtrv-l3t` command to verify the value of the level 3 timer t6.

Dependencies

The specified HOST or IPADDR must exist in the SNMP Host table.

2170 E2170 Cmd Rej: SNMP host table entry not found for specified HOST/IPADDR

The specified heartbeat value must be within the range for the HB parameter.

2176 E2176 Cmd Rej: Invalid value for heartbeat interval

The SNMP feature must be enabled before an SNMP Host can be configured.

2268 E2268 Cmd Rej: SNMP feature must be enabled

To locate a table entry, either the HOST or IPADDR parameters must be specified, but both cannot be used in the same command.

2315 E2315 Cmd Rej: Either HOST or IPADDR must be specified, but not both.

The specified CMDPORT and TRAPPORT values must be within the allowed range.

2327 E2327 Cmd Rej: Invalid value for PORT parameter

Notes

None.

Output

```
chg-snmpt-host:ipaddr=10.25.55.25:cmdport=2015:hb=60
```

```
tekelecstp 12-06-13 10:58:26 EST 45.0.0-64.66.0
chg-snmpt-host:ipaddr=10.25.55.25:cmdport=2015:hb=60
Command entered at terminal #4.
CHG-SNMP-HOST: MASP A-COMPLTD
;
```

Related Topics

- [ent-snmpt-host](#)
- [dlt-snmpt-host](#)
- [rtrv-snmpt-host](#)

4.1.141 chg-snmptpts

Use this command to change the system-wide SNMP Options.

Parameters

on (optional)

This parameter turns on the specified options. Up to 8 comma-separated unique options can be specified.

Range:
snmpuim

Output

```
chg-snmppopts:on=snmpuim:getcomm=my.getcomm.str

tekelecstp 12-06-13 15:27:34 EST 45.0.0-64.66.0
chg-snmppopts:on=snmpuim:getcomm=my.getcomm.str
Command entered at terminal #4.
CHG-SNMPOPTS: MASP A - COMPLTD
;
```

Related Topics

- [rtrv-snmppopts](#)

4.1.142 chg-srvsel

Use this command to assign the applicable service selectors required to change a service entry for DSM services.

Parameters



Note:

Definitions for the feature options specified by the `on` and `off` parameters are located in the Notes section.



Note:

The nature of address indicator parameters (`naiv` or `nai`) and the numbering plan parameters (`npv` or `np`) can be specified using a mnemonic or an explicit value. The mnemonic or the explicit value can be specified; however, both values cannot be specified at the same time for the same parameter. [NAIV/NAI Mapping](#) shows the mapping between the `naiv` and `nai` values. [Table A-8](#) shows the mapping between the `npv` and `np` values.

gti/gtia/gtii/gtin/gtin24 (mandatory)

Global title indicator. For all service selector commands, the domain is defined as GTI and GTIA (ANSI), GTII (ITU international), GTIN (ITU national) and GTIN24 (24-bit ITU national). For the service selector commands, GTI and GTIA are equivalent.

Range:

Supported value for ANSI: `gti/gtia=2`

Supported values for ITU: `gtii/gtin/gtin24=2, 4`

ssn (mandatory)

Subsystem number.

Range:
0 - 255, *

tt (mandatory)
Translation type.

Range:
0 - 255

nai (optional)
Nature of address indicator.

Range:

sub

rsvd

natl

intl

Default:
No change to the current value

naiv (optional)
Nature of address indicator value.

Range:
0 - 127

Default:
No change to the current value

ndfl tact (optional)
New default action ID associated with the service selector entry.

Range:
ayyyyyyy
1 leading alphabetic character followed by up to 8 alphanumeric characters
This parameter must have one of the following values:

- a valid GTT Action ID that exists in the GTT Action table and has a GTT Action of *disc/udts/tcaperr*
- *fallback* — Fallback to the relay data. The relayed MSU is routed using routing data provided by the service.
- *falltogtt* — Fallback to GTT. If the *gttselid* parameter has a value other than *none*, and the GTT selector search fails, then the GTT selector search is performed again using *gttselid=none*.

Default:
No change to the current value

ngttselid (optional)
New GTT Selector ID. The new ID used to perform GTT on the message relayed by the service.

Range:

0 - 65534, none

none —deletes the current value of the GTTSELID field

Default:

No change to the current value

np (optional)

Numbering plan.

Range:

e164

generic

x121

f69

e210

e212

e214

private

Default:

No change to the current value

npv (optional)

Numbering plan value.

Range:

0 - 15

Default:

No change to the current value

nrqdtblnop

The action performed if a message arrives at an SCCP card that does not have the necessary RTDB table, and the current message routing is GT.

Range:

udts

generate UDTS for the processed MSU

gtt

fall through to GTT for the processed MSU

disc

discard the processed MSU

nserv (optional)

New DSM service.

 **Note:**

The GPORT service cannot be used for the Prepaid SMS Intercept Phase 1 (PPSMS) or the Portability Check for Mobile Originated SMS feature; use the SMSMR service. The MNP service includes the G-Port, A-Port, and IS41-to-GSM Migration services.

Range:***eir***

Equipment Identity Register

gflex

GSM flexible numbering

gport

GSM number portability

inpq

INP query

inpmr

INP message relay

smsmr

Prepaid SMS Intercept Phase 1, Portability Check for Mobile Originated SMS, MO-based GSM SMS NP, MO-based IS41 SMS NP, MO SMS IS41-to-GSM Migration, MO SMS ASD, MO SMS GRN, MO SMS B-Party Routing.

idpr

Prepaid IDP Query Relay

idps

IDP Screening for Prepaid

mnp

Mobile Number Portability

vflex

V-Flex

atinp

ATI Number Portability Query (ATINP)

ttr

Triggerless TCAP Relay

aiq

ANSI41 Analyzed Information Query

Default:

No change to the current value

nsnai (optional)

New service nature of address indicator.

Range:

sub

Subscriber number

natl

National significant number

intl

International number

rnidn

Routing number prefix and international dialed/directory number

rnndn

Routing number prefix and national dialed/directory number

rnsdn

Routing number prefix and subscriber dialed/directory number

none

The *nsnai* is not associated with the new DSM service.

ccrndn

Country code, routing number, and national directory number

Default:

No change to the current value

nsnp (optional)

New service numbering plan.

Range:

e164

E.164 numbering plan

e212

E.212 numbering plan

e214

E.214 numbering plan

none

The NSNP value is not associated with the new DSM service.

Default:

No change to the current value

off (optional)

Disables or turns off the specified feature options. A comma-separated list of feature options that are requested to be turned off. Up to 10 feature options can be specified in the list.

Range:*gttrqd***on (optional)**

Enables or turns on the specified feature options. A comma separated list of feature options that are requested to be turned on. Up to 10 feature options can be specified in the list.

Range:*gttrqd***Example**

```
chg-srvsel:gti=2:tt=10:ssn=250:nserv=gflex
```

```
chg-
```

```
srvsel:gtin=4:tt=0:ssn=100:np=e164:nai=intl:nsnp=e164:nsnai=rnidn
```

```
chg-srvsel:gtin24=4:tt=4:np=e164:ssn=50:nai=intl:nsnai=rnidn
```

```
chg-srvsel:gtii=4:tt=4:np=e164:nai=intl:ssn=10:nserv=eir
```

```
chg-
```

```
srvsel:gtii=4:tt=4:np=e164:nai=intl:ssn=12:nserv=gport:on=gttrqd:ngt  
tselid=4:ndfltact=act1
```

```
chg-srvsel:gti=2:tt=10:ssn=250:nserv=gflex:nrqdtblnop=gtt
```

Dependencies

The G-Flex feature must be turned on before the `nserv=gflex` parameter can be specified.

3500 E3500 Cmd Rej: GFLEX feature must be ON

The INP feature must be turned on before the `nserv=inpnr` or `nserv=inpq` parameter can be specified.

3524 E3524 Cmd Rej: INP/AINPQ feature must be ON

The G-Port feature must be turned on before the `nserv=gport` parameter can be specified.

3989 E3989 Cmd Rej: GPORT feature must be ON when (N)SERV=GPORT

The Equipment Identity Register (EIR) feature must be turned on before the `nserv=eir` parameter can be specified.

3699 E3699 Cmd Rej: EIR feature must be ON

The `nsnp`, `nsnai`, `nserv`, `ndfltact`, `ngttselid`, `on`, or `off` parameter must be specified.

3523 E3523 Cmd Rej: At least one parameter must be changed

Values 1 and 3 are not valid for the `gti/gtia/gtii/gtin/gtin24` parameters.

3553 E3553 Cmd Rej: GTI(A)=4, and GTI(x)=1 and 3 are not supported

Value 4 is not valid for the `gtia` parameter.

3553 E3553 Cmd Rej: GTI(A)=4, and GTI(x)=1 and 3 are not supported

If the `gti/gtia/gtii/gtin/gtin24=2` parameter is specified, then the `np(v)` and `nai(v)` parameter combinations cannot be specified.

3554 E3554 Cmd Rej: NP(V) and NAI(V) must not be specified for given GTI value

If the `gtii/gtin/gtin24=4` parameter is specified, then an `np(v)` and `nai(v)` parameter combination must be specified. The parameters can be specified in these combinations: `np/naiv`, `npv/nai`, `np/nai`, or `npv/naiv`.

3555 E3555 Cmd Rej: NP(V) and NAI(V) must be specified for given GTI value

The `np` and `npv` parameters cannot be specified together in the command.

3551 E3551 Cmd Rej: NP and NPV must not be specified together

The `nai` and `naiv` parameters cannot be specified together in the command.

3552 E3552 Cmd Rej: NAI and NAIV must not be specified together

If the `nserv` parameter has a value of `inpmr`, `gport`, or `eir` then the `gtia` and `gti` parameters cannot be specified.

3942 E3942 Cmd Rej: GTI/GTIA is invalid for specified (N)SERV

If the `nserv=inpmr` parameter is specified, then the `nsnp=e164` parameter must be specified.

3939 E3939 Cmd Rej: (N)SNP must be E164 when (N)SERV=INPMR

If the value specified for the `nsnai` parameter is `rnidn`, `rnndn`, or `rnsdn`, then the value specified for the `nserv` parameter must be `inpmr`, `gport`, or `smsmr`.

3940 E3940 Cmd Rej: (N)SERV value is invalid for the specified (N)SNAI

If the `nserv=inpq` parameter is specified, then the `gtii` parameter cannot be specified.

3939 E3939 Cmd Rej: (N)SNP must be E164 when (N)SERV=INPMR

If a value of `aiq`, `atinp`, `eir`, `idpr`, `idps`, `inpq`, `tr`, or `vflex` is specified for the `nserv` parameter, then only a value of `none` can be specified for the `nsnai` or `nsnp` parameter.

4972 E4972 Cmd Rej: If specified, NSNP/NSNAI must be none for requested service

If the `nserv=gflex` parameter is specified, then the `nsnai=none` and `nsnp=none` parameters cannot be specified.

3953 E3953 Cmd Rej: NSNAI and NSNP must be specified when NSERV = GFLEX

If the `nserv=inpmr` parameter is specified, then the `nsnai` parameter must be specified.

3954 E3954 Cmd Rej: NSNAI must be specified when NSERV = INPMR

An entry must already exist that exactly matches the `gti/gtii/gtin/gtin24`, `tt`, `ssn`, `np(v)`, and `nai(v)` combination of parameters.

3938 E3938 Cmd Rej: Entry does not exist with specified GTI-TT-NP(V)-NAI(V)-SSN

If the `nsnai=ccrndn` parameter is specified, then the value specified for the `nserv` parameter must be `gport` or `smsmr`.

3994 E3994 Cmd Rej: (N)SERV must be GPORT/SMSMR when (N)SNAI=CCRNDN

If the value specified for the `nserv` parameter is `inpmr`, `smsmr`, or `gport`, then the `nsnp=e164` parameter must be specified.

3939 E3939 Cmd Rej: (N)SNP must be E164 when (N)SERV=INPMR

If the value specified for the `nserv` parameter is `gflex`, `gport`, `inpmr` or `smsmr`, then the `nsnai` and `nsnp` parameters must be specified.

3944 E3944 Cmd Rej: SNAI and SNP must be specified for requested service

The `nsnai=none` parameter can be specified only if the value specified for the `nserv` parameter is `atinp`, `eir`, `idps`, `inpq`, `idpr`, `ttr`, or `vflex`.

3998 E3998 Cmd Rej: NSNAI must not be NONE for requested service

If the `ansigflex` STP option is enabled (see the `chg-stpotps` command), then an ITU Service Selector cannot be entered.

4297 E4297 Cmd Rej: ITU entries not allowed when ANSIGFLEX is on

The Prepaid IDP Query Relay feature must be turned on or the IAR Base feature must be enabled before the `nserv=ttr` parameter can be specified.

4500 E4500 Cmd Rej: IDPR must be ON or IAR Base must be enabled when SERV=TTR

If a value of `idpr` or `ttr` is specified for the `nserv` parameter, then the only valid mandatory service parameters are `gtii`, `gtin`, `ssn`, and `tt`, and the only valid optional parameters are `np` and `nai`.

4505 E4505 Cmd Rej: Service parameters not supported when SERV=IDPR or TTR

The IDP Screening for Prepaid feature must be turned on before the `nserv=idps` parameter can be specified.

4545 E4545 Cmd Rej: IDP Screening for Prepaid feature must be ON when SERV=IDPS

When the `nserv=idps` parameter is specified, the only valid optional service parameters are `np` and `nai`.

4548 E4548 Cmd Rej: Requested service parameters not supported when SERV=IDPS

If the `nserv=idps` parameter is specified, then the only valid mandatory service parameters are `tt`, `serv`, `ssn`, `gtin`, and `gtii`.

4548 E4548 Cmd Rej: Requested service parameters not supported when SERV=IDPS

The V-Flex feature must be turned on before the `nserv=vflex` parameter can be specified.

4142 E4142 Cmd Rej: VFLEX feature must be ON

The PPSMS or Portability Check for MO SMS feature must be turned on, or the MO SMS ASD, MO SMS GRN, MO SMS IS41-to-GSM Migration, MO SMS B-party Routing, MO-based GSM SMS NP, or MO-based IS41 SMS NP feature must be enabled before the `nserv=smsmr` parameter can be specified.

3631 E3631 Cmd Rej: Incompatible Feature/Option status

The ATINP feature must be enabled before the `nserv=atinp` parameter can be specified.

4816 E4816 Cmd Rej: ATINP feature must be enabled

If a value of *aiq*, *atinp*, or *eir* is specified for the `nserve` parameter, then the `gtin24` parameter cannot be specified.

4838 E4838 Cmd Rej: GTIN24 must not be specified when (N)SERV = ATINP/AIQ/EIR

If the A-Port or IGM feature is enabled, then the `nserve=gport` parameter cannot be specified.

2814 E2814 Cmd Rej: GPORT invalid if APORT or IGM is enabled

The Prepaid IDP Query Relay feature must be turned on before the `nserve=idpr` parameter can be specified.

5024 E5024 Cmd Rej: Prepaid IDP Query Relay feature must be activated

The ANSI41 AIQ feature must be enabled before the `nserve=aiq` parameter can be specified.

5158 E5158 Cmd Rej: ANSI41 AIQ feature must be enabled

The A-Port or IGM feature must be turned on, or the A-Port or IGM feature must be enabled and the G-Port feature must be turned on before the `nserve=mnpr` parameter can be specified.

2085 E2085 Cmd Rej: A-Port, G-Port or IGM must be turned ON

If a DSM4G card is active in the system, then the `on=gttrqd` parameter cannot be specified.

5059 E5059 Cmd Rej: Configuration requires E5-SM4G card or better

The `ndfltact`, `ngttselid`, `on=gttrqd`, and `off=gttrqd` parameters are supported for the IDPR, TTR, MNP, GPORT, SMSMR, GFLEX, and INPMR services.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The GTT Action table is corrupt or cannot be found.

5067 E5067 Cmd Rej: Unable to access GTT Action table

If a GTT Action ID is specified as the value for the `ndfltact` parameter, then the Action ID must already exist in the GTT Action table.

5071 E5071 Cmd Rej: GTT Action Id does not exist

The value specified for the `ndfltact` parameter must be *fallback*, *falltogtt*, or a valid GTT Action ID with an associated GTT Action of *disc/udts/tcaperr*.

5172 E5172 Cmd Rej: Invalid action type

The EGTT feature must be turned on before the `ngttselid` or `ndfltact` parameter can be specified.

3557 E3557 Cmd Rej: EGTT must be ON

The same values cannot be specified for the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

The `ndfltact=none` parameter cannot be specified.

5298 E5298 Cmd Rej: Default ACTID must not be specified as NONE

The EPAP Data Split feature or the Dual ExAP Config feature must be ON before the `nrqdtblnop` parameter can be specified.

2434 E2434 Dual ExAP Config or EPAP Data Split must be ON

The `nrqdtblnop=gtt` parameter cannot be specified if:

- an existing service record for the INPQ, VFLEX, ATI NP, or EIR service is being changed
- a value of `inpq`, `vflex`, `atinp`, or `eir` is specified for the `nserv` parameter

5476 E5476 Cmd Rej: Invalid RQDTBLNOP value for service

The `nrqdtblnop` parameter cannot be specified if:

- an existing AIQ or IDPS service record is being changed
- a value of `aiq` or `idps` is specified for the `nserv` parameter

5477 E5477 Cmd Rej: RQDTBLNOP must NOT be specified

If the `serv=inpq` parameter is specified, then the `gtii` parameter cannot be specified.

3941 E3941 Cmd Rej: GTII must not be specified when N(SERV) = INPQ

If the value specified for the `serv` parameter is `gport` or `smsmr`, then the `snp=e164` parameter must be specified.

3990 E3990 Cmd Rej: (N)SNP must be E164 when (N)SERV=GPORT/SMSMR

The requested service selector entry must exist in the database.

3504 E3504 Cmd Rej: GSM Selector does not exist

The GSM DBMM table must be accessible.

3546 E3546 Cmd Rej: Failed reading GSM DBMM Table

Notes

on/off options

- `gttrqd` —GTT required. Specifies whether GTT is required after service execution is complete and the message is relayed by the service. This option is supported for the IDPR, MNP, TTR, GPORT, SMSMR, GFLEX, and INPMR services.

Output

```
chg-srvsel:gti=2:tt=10:ssn=25:nserv=aiq

tekelecstp 09-12-03 16:40:40 EST EAGLE 42.0.0
Service Selector table is (115 of 1024) 11% full
CHG-SRVSEL: MASP A - COMPLTD
;
```

Related Topics

- [dlt-srvsel](#)
- [ent-srvsel](#)
- [rtrv-srvsel](#)

4.1.143 chg-ss-appl

Use this command to change the application status in the database.

Parameters

appl (mandatory)

Application type.

Range:

lnp

inp

eir

vflex

atinpq

aiq

nstat (mandatory)

Status.

Range:

offline

online

nrqdtblnop

The action performed with a message that arrives at an SCCP card that does not have the necessary RTDB table, and the current message routing is subsystem.

Range:

udts

generate UDTS for the processed MSU

disc

discard the processed MSU

Example

```
chg-ss-appl:appl=lnp:nstat=offline
```

```
chg-ss-appl:appl=atinpq:nstat=online
```

```
chg-ss-appl:appl=inp:nstat=offline:nrqdtblnop=disc
```

Dependencies

The LNP feature must be turned on before the `appl=lnp` parameter can be specified.

3009 E3009 Cmd Rej: LNP feature must be ON

The INP feature must be turned on before the `chg-ss-appl:appl=inp` command can be entered.

3524 E3524 Cmd Rej: INP/AINPQ feature must be ON

The Equipment Identity Register (EIR) feature must be turned on before the `chg-ss-appl:appl=eir` command can be entered.

3699 E3699 Cmd Rej: EIR feature must be ON

The application type (`appl` parameter) must already exist in the SS-APPL table.

3637 E3637 Cmd Rej: Application type not defined in database

The LNP database is corrupt or cannot be found.

2601 E2601 Cmd Rej: Command aborted due to system error

The subsystem must be in the opposite state of the requested change.

3154 E3154 Cmd Rej: Subsystem must be in opposite state of change

The subsystem must be inhibited before `status=offline` can be specified.

3153 E3153 Cmd Rej: Subsystem must be inhibited before it can be OFFLINE

Application type must exist in the LNP database

3152 E3152 Cmd Rej: Application type not in LNP database

Application type not in SS-APPL table

3529 E3529 Cmd Rej: Application type not in SS-APPL table

The SSAPPL table must be accessible (non-DBS 1.0 systems only).

3124 E3124 Cmd Rej: Failed Reading LNP SS Appl table

The SSAPPL table must be accessible (DBS 1.0 systems only)

3120 E3120 Cmd Rej: Failed Reading GTT DBMM table

The V-Flex feature must be turned on before the `appl=vflex` parameter can be specified.

4142 E4142 Cmd Rej: VFLEX feature must be ON

The ATINP feature must be enabled before the `appl=atinpq` parameter can be specified.

4816 E4816 Cmd Rej: ATINP feature must be enabled

The ANSI41 AIQ feature must be enabled before the `appl=aiq` parameter can be specified.

5158 E5158 Cmd Rej: ANSI41 AIQ feature must be enabled

The EPAP Data Split feature OR Dual ExAP Config feature must be turned on before the `nrqdtblnop` parameter can be specified.

2434 E2434 Dual ExAP Config or EPAP Data Split must be ON

If the `appl=aiq` parameter is specified, then the `nrqdtblnop` parameter cannot be specified.

5477 E5477 RQDTBLNOP must NOT be specified

Notes

After the LNP subsystem is inhibited before performing an LNP ELAP bulk download, `chg-ss-appl:appl=lnp:nstat=offline` must be entered to ensure that the subsystem remains down through Service Module card replacements and reloads.

Output

```
chg-ss-appl:appl=aiq:nstat=offline
```

```
tekelecstp 09-12-03 13:35:40 EST EAGLE 42.0.0
CHG-SS-APPL: MASP A - COMPLTD
;
```

Related Topics

- [dlt-ss-appl](#)
- [ent-ss-appl](#)
- [rtrv-ss-appl](#)

4.1.144 chg-ss7opts

Use this command to update (change by simple replacement) the values of one or more of the SS7 option indicators maintained in the STP Options table. SS7 options can modify normal handling of SS7 traffic.

Parameters

ddbaudtimer (optional)

Dynamic database audit timer. The amount of time, in minutes, between the end of an automatic dynamic database audit and the beginning of the next automatic dynamic database audit.

Range:

5 - 1440, none

none —disables the automatic dynamic database audit

Default:

No change to the current value

System Default:

10

discardtfc (optional)

This parameter enables and disables the handling of TFC traffic from ITU-I networks. If enabled, TFC traffic from ITU-I networks will be discarded.

Range:

on

Discard TFC ITU-I traffic

off

Do not discard TFC ITU-I traffic

System Default:

off

discardtfcn (optional)

This parameter enables and disables the handling of TFC traffic from ITU-N networks. If enabled, TFC traffic from ITU-N networks will be discarded.

Range:**on**

Discard TFC ITU-N traffic

off

Do not discard TFC ITU-N traffic

System Default:

off

lsrestrict (optional)

Use the restricted linkset routing determination algorithm. This parameter enables and disables the restricted linkset routing determination algorithm on a system-wide basis.

Range:**on**

Restrictive linkset routing enabled; route traffic on the least restrictive available route with the lowest cost.

off

Restrictive linkset routing disabled; route traffic on the lowest cost route.

Default:

No change to the current value

System Default:

off

msgpri2itui (optional)

Message Priority to ITUI. The priority for messages that cross to an ITUI network.

Range:

0 - 3, dflt

0-3 —The priority for any MSU crossing to an ITUI network is set to the provisioned value. MSUs crossing to ANSI networks are not affected.

dflt —Messages retain their original functionality

Default:

No change to the current value

System Default:

dflt

msgpri2itun (optional)

Message Priority to ITUN. The priority for messages that cross to an ITUN or ITUN-24 network.

Range:

0 - 3, *dfit*

0- 3 —The priority for any MSU crossing to an ITUN or ITUN-24 network is set to the provisioned value. MSUs crossing to ANSI networks are not affected.

dfit —Messages retain their original functionality

Default:

No change to the current value

System Default:

dfit

slsreplace (optional)

Signaling link selector replace. This parameter enables the EAGLE to replace the SLS for an ANSI message with a random generated SLS value by Random SLS feature .

 **Note:**

The `randsls=perls` parameter must be specified in the `chg-stpopts` command and a `randsls` parameter value other than `off` must be specified on the individual ANSI incoming linkset before the SLS can be replaced.

The size of the SLS in the outgoing message is based on the `STPOPTS:SLSREPLACE` parameter, ingress linkset ASL8 parameter and 5->8 bit conversion option. Please refer to *Database Administration - SS7 User's Guide, Per-Linkset Random SLS* for more details.

Range:

no

Do not replace the SLS in an outgoing message with a randomly generated SLS.

yes

Replace the SLS in an outgoing message with a randomly generated SLS.

Default:

No change to the current value.

System Default:

no

Example

```
chg-ss7opts:lsrestrict=on
chg-ss7opts:slsreplace=yes
chg-ss7opts:ddbbaudtimer=5
chg-ss7opts:ddbbaudtimer=none
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

When the `lsrestrict=on` parameter is specified, the `tfatcabmlq` parameter value for C linksets can be changed to a non-zero value (see the `chg-ls` command). If the `tfatcabmlq` parameter in any C linkset has been changed to a non-zero value, the `tfatcabmlq` value must be set back to 0 for all C linksets before the `lsrestrict` parameter can be turned off.

4334 E4334 Cmd Rej: Requires C-linksets parameter `tfatcabmlq` to be set to 0

The STP Options Table is corrupt or cannot be found by the system.

2583 E2583 Cmd Rej: LAN feature must be ON

Notes

None

Output

Related Topics

- [rtrv-ss7opts](#)

4.1.145 chg-stpopts

Use this command to change the values of one or more of the STP node level processing option indicators maintained in the STP's options table. All values are assigned initially to system defaults at STP installation time, and they may be updated subsequently using this command.

Note:

For those STP option attributes supporting STP event message throttling, the values for the indicated parameters shall become effective in the next event-message output interval following their activation. All other updates shall be effective immediately, as of the time of activation.

Parameters

Note:

If the `cnvcgda`, `cnvcgdi`, `cnvcgdn`, or `cnvcgdn24` parameter has a value of *no* (or a value of `cnvcgda`, `cnvcgdi`, `cnvcgdn`, or `cnvcgdn24` is specified for the `off` parameter), and the CGPA cannot be converted during processing, then the MSU is discarded.

ansigflex (optional)

This parameter enables ANSI G-Flex to execute at 1700 TPS per DSM card.

Range:

yes
Enabled

no
Disabled

Default:

No change to the current value

System Default:

no

archbldid (optional)

Archive build ID. This parameter specifies whether the database archive file name contains the EAGLE build number instead of the release number.

Range:

on
The file name contains the build number.

off
The file name contains the release number.

Default:

No change to the current value

System Default:

off

cnvcgda (optional)

This parameter enables discarding of the CGPA point code in SCCP messages if the destination network type is ANSI, and the point code or alias point code of the destination network type is not defined.

Range:

yes
Enabled

no
Disabled

Default:

No change to the current value

System Default:

no

cnvcgdi (optional)

This parameter enables discarding of the CGPA point code in SCCP messages if the destination network type is ITU-I, and the point code or alias point code of the destination network type is not defined.

Range:

yes
Enabled

no
Disabled

Default:

No change to the current value

System Default:

no

cnvcgdn (optional)

This parameter enables discarding of the CGPA point code in SCCP messages if the destination network type is ITU-N, and the point code or alias point code of the destination network type is not defined.

Range:

yes
Enabled

no
Disabled

Default:

No change to the current value

System Default:

no

cnvcgdn24 (optional)

This parameter enables discarding of the CGPA point code in SCCP messages if the destination network type is ITU-N24, and the point code or alias point code of the destination network type is not defined.

Range:

yes
Enabled

no
Disabled

Default:

No change to the current value

System Default:

no

cnvcgdn16 (optional)

This parameter enables discarding of the CGPA point code in SCCP messages if the destination network type is ITU-N16, and the point code or alias point code of the destination network type is not defined.

Range:

yes
Enabled

no
Disabled

Default:

No change to the current value

System Default:

no

criticalinh (optional)

Critical alarm inhibit. This parameter enables inhibiting of critical alarms.

Range:

yes
Enabled

no
Disabled

Default:

No change to the current value

System Default:

no

defcc (optional)

Default country code.

Range:

1-3 digits, *none*.
Valid digits are 0-9, A-F, a-f
none —Deletes the current value.

Default:

No change to the current value

defndc (optional)

Default network destination code.

Range:

1-5 digits, *none*
Valid digits are 0-9, a-f, A-F
none —Deletes the current value.

Default:

No change to the current value

dispactalms (optional)

Display active alarms. This parameter displays active or total alarms in the alarm status area of the VT320 screen (see [Figure 2-1](#)). The alarm status area comprises four boxes to show counts for critical, major, minor, and inhibited alarms. When total alarms are displayed (`dispactalms=no`), the counts for critical, major, and minor alarms include any temporarily or permanently inhibited alarms. The alarm status area is labeled *Total Alarm Status*. When active alarms are displayed (`dispactalms=yes`), the counts for critical, major, and minor alarms do not include any temporarily or permanently inhibited alarms. The alarm status area is labeled *Active Alarm Status*. This parameter does not affect the count displayed in the inhibited box; the number of inhibited alarms is always displayed.

Range:**yes**

Enabled; active alarm status is displayed

no

Disabled; total alarm status is displayed

Default:

No change to the current value

System Default:

no

dsmaud (optional)

Service Module card audit running state.

Range:**on**

Running

off

Not running

ccc

Running with Corruption Cross Correction enabled. EAGLE LNP, G-Flex, G-Port, INP, or V-Flex systems contain $n+1$ Service Module cards (maximum 32) running the VSCCP application. Each Service Module card contains a full image of the RTDB database. If a record within the RTDB database on any card should become corrupted, a mate Service Module card can supply the corrected data. The `dsmaud=ccc` parameter enables the Corruption Cross Correction function used by the system to obtain the correct data from a mate Service Module card.

Default:

No change to the current value

System Default:

off

gdpc (optional)

Specifies the value used to set the ANSI destination point code field in the routing label of the MSU that is being duplicated. The point code has subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym:

gdPCA

Range:

000---255, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001-005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006-255`.

Enter *none* to delete the point code.

The point code `000-000-000` is not a valid point code.

Default:

Current value

gdpc/gdPCA/gdpci/gdpcn24/gdpcn16 (optional)

Destination point code.

gdpci (optional)

Specifies the value used to set the ITU international destination point code field in the routing label of the MSU that is being duplicated. The point code has subfields *zone-area-id*.

Range:

0---255, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code `0---000---0` is not a valid point code.

zone---0---7

area---000---255

id---0---7

Enter *none* to delete the point code.

Default:

Current value.

gdpcn (optional)

Specifies the value used to set the ITU national destination point code field in the routing label of the MSU that is being duplicated. The point code is in the format of a 5-digit number (nnnnn); or 2, 3, or 4 numbers (members) separated by dashes (m1-m2-m3-m4) when the `chg-stpopts:npcfmt1` flexible point code option is on. A

group code (gc) must be specified when the ITUDUPPC feature is on (nnnnn-gc, m1-m2-m3-m4-gc).

Range:

0---16383, aa---zz, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn---0---16383

gc---aa---zz

m1--m2--m3--m4---0--14 for each member; values must sum to 14.

Enter *none* to delete the point code.

Default:

Current value.

gdpcn24 (optional)

Specifies the value used to set the 24-bit ITU national destination point code field in the routing label of the MSU that is being duplicated. The point code has subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000--255, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa---000---255

ssa---000---255

sp---000---255

Enter *none* to delete the point code.

Default:

Current value.

gdpcn16 (optional)

Specifies the value used to set the 16-bit ITU national destination point code with subfields *unit number, sub number area, main number area (un-sna-mna)*.

Range:

000--127, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna--000---31

Enter *none* to delete the point code.

Default:

Current value.

gsmdecerr (optional)

GSM MAP screening decode error action.

Range:

pass

discard

Default:

No change to the current value

System Default:

pass

gsmdf1t (optional)

GSM MAP screening default action.

Range:

pass

discard

Default:

No change to the current value

System Default:

pass

gtcnvdf1t (optional)

This parameter enables routing of SCCP messages using system defaults when an appropriate entry is not found in the Default GT Conversion Table.

Range:

yes

Enabled

no

Disabled

Default:

Current value

System Default:

no

mtpdpcq (optional)

MTP destination point code quantity. The maximum number of DPCs that can be provisioned from the STP. The value of this parameter depends on the number of x-list entries that can be provisioned using the `mtpxlc` parameter. If the number of destinations that can be provisioned is increased, the number of x-list entries that can be maintained is decreased.

Range:

500 - 10000

500-2000 —if the DSTN5000 feature is not turned on

500-5000 —if the DSTN5000 feature is turned on

500-6000 —if the 6000 Routesets feature is enabled

500-7000 —if the 7000 Routesets feature is enabled

500-8000 —if the 8000 Routesets feature is enabled

500-10000 —if the 10,000 Routesets feature is enabled

Default:

No change to the current value

System Default:

2000

mtplprst (optional)

MTP low priority route set test. This parameter specifies whether low priority route set polling is enabled or disabled at the STP.

Range:

yes

Enabled

no

Disabled

Default:

Current value

System Default:

yes

mtp1tctdpcq (optional)

MTP loop test congestion trigger DPC quantity. The number of most frequently occurring DPCs to which the MTP loop test messages are to be sent when the MTP loop test is triggered by congestion.

Range:

3 - 10

Default:

No change to the current value

System Default:

3

mtp1ti (optional)

MTP loop test indicator. This parameter specifies whether the MTP loop detection procedures are enabled or disabled at the STP.

Range:

yes
Enabled

no
Disabled

Default:

Current value

System Default:

yes

mtp1tst (optional)

MTP loop test supervision timer. The amount of time, in milliseconds, that the MTP loop test detection procedures run when started.

Range:

10000 - 20000

Default:

Current value

System Default:

10000

mtparsi (optional)

MTP Restart indicator. This parameter specifies whether ANSI and ITU MTP Restart procedures are enabled at the STP.

Range:

yes
enable restart procedures

no
do not enable restart procedures

Default:

Current value

System Default:

no

mtprsit (optional)

ANSI MTP Restart isolation timer. The minimum duration of node isolation, in milliseconds, before the ANSI MTP Restart procedure is deemed necessary.

Range:

2000 - 900000

Default:

No change to the current value

System Default:

5000

mtpt10alt (optional)

MTP T10 alternate timer, in milliseconds. The interval at which the STP performs a route set test on low priority routes. The value of this parameter must be equal to or greater than the value of the level 3 T10 timer.

Range:

20000 - 10000000

Default:

No change to the current value

System Default:

30000

mtpt31ctl (optional)

MTP T31 congestion trigger level. The signaling link congestion level at which the system starts the level 3 t31 timer. When the level 3 t31 timer expires, the associated signaling link is removed from service for realignment.

Range:

1 - 2

Default:

No change to the current value

System Default:

1

mtpxlet (optional)

MTP x-list expiration time. The maximum amount of time the system maintains an unreferenced dynamic status exception list (x-list) entry. This parameter must be specified in one of the following formats: *mm*, *hmm*, or *hhmm*, where *m* is minutes and *h* is hours. For example, 43 is 43 minutes, 138 is 1 hour 38 minutes, and 2400 is 24 hours.

Range:

0020 - 2400

Default:

No change to the current value

System Default:

0100

mtpxlot (optional)

MTP x-list occupancy threshold. The dynamic status exception list (x-list) occupancy threshold at which the system raises a minor alarm. The threshold is expressed as a percentage of space available.

Range:

0 - 100

Default:

No change to the current value

System Default:

90

mtpx1q (optional)

MTP x-list quantity. The number of dynamic status exception list (x-list) entries the system maintains. The value of this parameter is dependent directly on the number of destinations that are provisioned using the `mtpdpcq` parameter.

Range:

500 - 10000

500-2000 —if the DSTN5000 feature bit is not turned on

500-5000 —if the DSTN5000 feature bit is turned on

500-6000 —if the 6000, 7000, or 8000 Routesets feature is enabled

500-10000 —if the 10,000 Routesets feature is enabled

Default:

Current value

System Default:

500

npcfmti (optional)

ITU National Point Code Format Identifier. This parameter specifies how the ITU national point code is entered into the database and how it is displayed in any outputs from the system. The ITU national point code is a 14-bit integer. The point codes can be a single number up to five digits, or two, three, or four numbers separated by dashes. This parameter specifies the number of bits to allow in each position of the four members.

Range:

m1-m2-m3-m4: Four members where each member represents the number of bits allowed in the corresponding position for a flexible ITU national point code. The range of each member (*m1-m4*) is from 0 - 14.

Each member must be specified no matter how many numbers the point code format contains, and the sum of *m1+m2+m3+m4* must equal 14 (for example, *npcfmti=7-7-0-0* or *npcfmti=0-6-8-0*).

Table 4-16 defines the values of the parts of the ITU national point code.

Number of Bits in Point Code Section								
Bit	0	1	2	3	4	5	6	7
Range of Values	Not used	0-1	0-3	0-7	0-15	0-31	0-63	0-127
Bit	8	9	10	11	12	13	14	
Range of Values	0-255	0-511	0-1023	0-2047	0-4095	0-8191	0-16383	
NPCFMTI Value				Range of Point Code Values				
7-7-0-0				0-0 to 127-127				
0-6-8-0				0-0 to 63-255				
0-0-4-10				0-0 to 15-1023				

3-8-3-0	0-0-0 to 7-255-7
2-9-2-1	0-0-0-0 to 3-511-3-1
4-4-4-2	0-0-0-0 to 15-15-15-3
14-0-0-0	00000 to 16385

Default:

No change to the current value

System Default:

14-0-0-0

off (optional)

Disables or turns off the specified feature options. A comma-separated list of feature options that are requested to be turned off. Up to 8 feature options can be specified in the list.

Range:

ansigflex

archblidid

cnvcgda

cnvcgdi

cnvcgdn

cnvcgdn24

critalminh

dispactalms

gbsusnminm

gtcnvdfit

mtplprst

mtplti

mtprsi

rptlnpmrсс

rstrdev

uimrd

on (optional)

Enables or turns on the specified feature options. A comma-separated list of feature options that are requested to be turned on. Up to 8 feature options can be specified in the list.

Range:

ansigflex
archblidid
cnvcgda
cnvcgdi
cnvcgdn
cnvcgdn24
critalminh
dispactalms
epap240m
epapx
gbsusnminm
gtcnvdfit
mtplprst
mtplti
mtprsi
rptlnpmrss
rstrdev
uimrd
lnptn756m

pcn16fmt (optional)

PCN16 point code can be provisioned in two formats: first format is 745 (un-sna-mna) and second format is 547 (mna-sna-un).

Range:

745
un-sna-mna
547
mna-sna-un

Default:

No changes to the current value

System Default:

745

pct (optional)

The method used to apply PCT to MSUs.

Range:**off**

do not apply PCT to any MSU

on

apply PCT to all MSUs

lset

apply PCT to MSUs that are coming in or going out on a link that belongs to a linkset where PCT is provisioned (see the `chg-lsopts` command)

Default:

off

randsls (optional)

Random SLS (signaling link selection) option. This parameter enables the system to ignore the incoming SLS value and randomly generate a new SLS value to select an outgoing linkset and a link. This parameter is implemented independently of the SLS Enhancement feature settings for individual linksets, which are defined by the `slsocbit` and `slsrsb` parameters of the `ent/chg-ls` commands. For ITU the value specified for the `randsls` parameter in the `chg-stpopts` command will override the value specified for the `randsls` parameter for each individual linkset. To use the `randsls` with ANSI, the value for `randsls` must be specified as `perls`.

To enable random SLS generation per linkset, the `randsls=perls` parameter must be specified. When this parameter is specified, the SLS Bit Rotation capability (set with the `slsrsb` parameter of the `ent/chg-ls` command) is overridden, and cannot be used on individual linksets. The `ent/chg-ls` commands do not prevent the user from provisioning with the parameter and also enables the user to restrict Random SLS generation to Class 0 messages only.

This parameter is implemented independently of the SLS Enhancement feature settings for individual linksets. These settings are specified by the `slsocbit` (Use of the Other CIC BIT capability) and `slsrsb` (SLS Bit Rotation capability) parameters of the `ent/chg-ls` commands. When the SLS Enhancement is turned on with the `randsls=all` or `randsls=class0` parameters, the SLS Bit Rotation capability (set with the `slsrsb` parameter of the `ent/chg-ls` command) is overridden, and cannot be used on individual linksets. The `ent/chg-ls` commands do not prevent the user from provisioning with the `slsrsb` parameter.

When `randsls=perls` is specified, the `randsls` parameter needs to be individually enabled on outgoing linksets for ITU traffic and on incoming linksets for ANSI traffic, to get the feature working for the particular traffic.

Range:**class0**

Enables random SLS generation for ITU Class0 SCCP traffic. (Not compatible with ANSI)

all

Enables random SLS generation for both ITU Class0 & Class1 SCCP traffic. (Not compatible with ANSI)

off

Disables random SLS generation for both ITU and ANSI traffic

perls

Enables random SLS generation on a per-linkset basis for ITU Traffic (SCCP Class0 or both SCCP Class0 & Class1 instead of a system-wide basis) and for ANSI traffic (SCCP Class0 or both SCCP Class0 & ISUP).

Default:

No change to the current value

System Default:

off

rptlnpmr_{ss} (optional)

Report LNP MR SS unequipped. This parameter specifies whether to generate UIM 1049 for LNP message relay (MR) messages with missing subsystems. If no MAP entry is found from a GTT done on an LNP MR message, the UIM is either displayed (*rptlnpmr_{ss}=yes*) or suppressed (*rptlnpmr_{ss}=no*). This setting applies only to LNP MR messages. All other messages display UIM 1049 when no MAP entry is found, regardless of this setting.

Range:**yes**

Display UIM 1049 for all messages.

no

Do not display UIM 1049 for LNP MR with missing subsystems.

Default:

No change to the current value

System Default:

yes

rstrdev (optional)

Restore device state. This parameter enables restoration of device states when the `init-sys` command is executed and when an OAM role change occurs and maintains the inhibited state of terminals, links, and cards.

 **Caution:**

An `init-sys` command causes the system to go down.

Range:**on****off****Default:**

No change to the current value

System Default:*off***secmtpmate (optional)**

This parameter enables security screening for MTP messages received by an STP on a non-C-Link, with an OPC equal to the SID (True, Adjacent, or Capability) point code of its mate.

Range:***off***

Screening is disabled; message is processed normally

notify

Screening is enabled; UIM is generated and message is discarded

silent

Screening is enabled; message is discarded. No UIM is generated

test

Screening is enabled; UIM is generated and message is processed normally

Default:

No change to the current value

System Default:*off***secmtpsid (optional)**

This parameter enables security screening for MTP messages received at MTP3 containing an OPC equal to its own SID (OPC that is the True, Secondary, or Capability point code entered in the `chg-sid` command) that is not a route-set-congestion-message. The system should not receive a message with its own OPC unless the message is a result of a circular route test or is an SLTM when the far end is in loopback. (SLTM messages are not checked.)

Range:***off***

Screening is disabled; message is processed normally.

notify

Screening is enabled; UIM is generated and message is discarded.

silent

Screening is enabled; message is discarded. No UIM is generated.

test

Screening is enabled; UIM is generated and message is processed normally.

Default:

Current value

System Default:*off***secmtpsnm (optional)**

This parameter enables security screening for MTP SNM messages. The system should not receive an MTP network management message unless:

- The OPC is an adjacent point code. (For all link types, this rule does not apply to UPU, TFC, and RCT messages.)
- The system has a route to the OPC of the MTP network management message on the linkset which the message was received.
- The system has a route to the destination field in the message (if applicable to the concerned message) on the linkset which the message was received. (For all link types, this rule does not apply to RST messages.)

Range:***off***

Screening is disabled; message is processed normally

notify

Screening is enabled; UIM is generated and message is discarded

silent

Screening is enabled; message is discarded. No UIM is generated

test

Screening is enabled; UIM is generated and message is processed normally

Default:

No change to the current value

System Default:

off

secsccpscmsg (optional)

This parameter enables security screening for SCCP SCMG messages. The system should not receive an SCCP network management message unless:

- The system has a route to the OPC of the SCMG message on the linkset on which the message was received.
- The system has a route to the Affected Point Code (Concerned Point Code) in the message on the linkset on which the message was received.

This parameter applies only to SSP and SOR messages. SSA, SST, SOG, SBR, SNR and SRT messages are not affected.

Range:***off***

Screening is disabled; message is processed normally.

notify

Screening is enabled; UIM is generated and message is discarded.

silent

Screening is enabled; message is discarded. No UIM is generated.

test

Screening is enabled; UIM is generated and message is processed normally.

Default:

No change to the current value

System Default:*off***s1scnv (optional)**

Per node SLS conversion indicator.

Range:***on***

SLS conversion is enabled on all linksets

off

SLS conversion is disabled on all linksets

perls

SLS conversion is enabled on a per linkset basis

Default:

No change to the current value

System Default:*off***tfatfrpr (optional)**

TFA/TFR pacing rate. The amount of time, in milliseconds, between partial broadcasts of up to 20 percent increments of the number of TFAs/TCAs or TFRs/TCRs to be broadcast by the STP when an affected destination becomes accessible using its primary route rather than an alternate route. The STP uses this pacing to prevent congestion on the newly recovered linksets.

Range:*0 - 1000*

Set in increments of 100

Default:

No change to the current value

System Default:*1000***uimrd (optional)**

Unsolicited Information Message (UIM) redirect indicator. This parameter specifies whether the UIMs are to be routed to the specified output group.

Range:***yes***

Enabled

no

Disabled

Default:

No change to the current value

System Default:*no*

uithrottle (optional)

UI pacing rate. This parameter specifies the speed at which UI output is sent to the terminals. Zero represents the most throttling, or the slowest output. Nine represents the least throttling, or the fastest output.

▲ Caution:

Before changing the `uithrottle` value from the default, the terminals must be set to the 115200 baud rate. If the `uithrottle` value is changed without updating the terminals, output could be lost.

Range:

0--9

Default:

No change to the current value

System Default:

0

visualization (optional)

System wide visualization option. This parameter specify whether the visualization is disable or specific visualization is enable as per below options.

Range:

off : Visualization feature is disable

uim : Only UIM visualization is enable

msg : Only message visualization is enable

All: Both UIM and MSG visualization is enable.

Default:

No change to the current value

System Default:

off

Example

```
chg-stpopts:mtpt31ctl=2:uimrd=yes
chg-stpopts:mtpxlq=1000:mtpxlet=0200:mtpxlot=75
chg-stpopts:npcfmti=4-4-4-2
chg-stpopts:rptlnpmrсс=no
chg-stpopts:rstrdev=on
chg-stpopts:hsclksrc=t1framed
chg-stpopts:hsclksrc=e1unframed:force=yes
chg-stpopts:hsclkll=shorthaul
```

```
chg-stpopts:cnvcgda=yes
chg-stpopts:randsls=perls
chg-stpopts:pct=on
chg-stpopts:mtpdpcq=10000
chg-stpopts:cnvcgdn16=on
chg-stpopts:pcn16fmt=547
chg-stpopts:gdpca=2-2-2
chg-stpopts:epapx=on
chg-stpopts:on=lnptn756m
```

Dependencies

The values of the `mtpdpcq` and `mtpx1q` parameters are interdependent; that is, to increase the number of DPCs that can be provisioned, the number of x-list entries that the STP is to maintain must be decreased. Conversely, to increase the number of x-list entries that the STP maintains, the number of DPCs that can be provisioned must be decreased.

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The ANSI/ITU SCCP Conversion feature must be enabled before the `cnvcgda`, `cnvcgdi`, `cnvcgdn`, `cnvcgdn24`, or `gtenvdf1t` parameters can be specified.

4171 E4171 Cmd Rej: SCCP Conversion feature must be enabled

To allow ANSI GFLEX and other EPAP-based features to co-exist, the E5-SM4G Throughput Cap quantity key for 6800 must be enabled.

2690 E2690 Cmd Rej: E5-SM4G Throughput Cap qty 6800 or above must be enabled

The `ansigflex` option cannot be enabled if a DSM is equipped in the system AND one or more of the following features are Enabled:

- 1100 TPS/DSM for ITU NP
- A-Port
- AINPQ
- ATINP
- EIR
- G-Flex MAP Layer Routing
- G-Port
- Info Analyzed Relay Base
- INP
- IS41 GSM Migration
- Prepaid Short Message Intercept Phase 1 (PPSMS)
- MO SMS ASD

- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- Portability Check for MO SMS
- TIF Number Portability
- TIF Number Substitution
- TIF Selective Screening
- TIF Subscr CgPN Blacklist
- V-Flex

5415 E5415 Cmd Rej: Feature can not be enabled with non-SMXG VSCCP in system
The G-Flex feature must be on before the `ansigflex` option can be enabled.

3500 E3500 Cmd Rej: GFLEX feature must be ON

The `ansigflex` option cannot be enabled when Service Selector table contains an ITU entry. (See the `chg-srvsel` command.)

4296 E4296 Cmd Rej: SRVSEL of ITU found, but not allowed with ANSIGFLEX

When the `mtpxlet` parameter is specified, the value for minutes (*mm*) must be in the range 00-59.

2254 E2254 Cmd Rej: Minutes out of range

The DSTN5000 (5000 Routes) feature must be turned on before the `mtpdpcq` parameter value can be increased to more than 2000.

3421 E3421 Cmd Rej: DSTN5000 feature must be ON

When the number of x-list entries (`mtpxlq` parameter) is specified, the total number of DPCs (`mtpdpcq` parameter) and x-list entries provisioned cannot exceed the space available in the Route table.

2851 E2851 Cmd Rej: MTPXLQ cannot exceed available space in the dstn table

When the number of DPCs (`mtpdpcq` parameter) is specified, the total number of DPCs and x-list entries (`mtpxlq` parameter) provisioned cannot exceed the space available in the Route table.

2880 E2880 Cmd Rej: MTPDPCQ cannot exceed available space in the dstn table

The number of DPCs provisioned (`mtpdpcq` parameter) cannot be increased if space allocated for maintaining x-list entries becomes full.

2881 E2881 Cmd Rej: MTPDPCQ cannot be increased while x-list storage is full

The value for the `mtpdpcq` parameter cannot be less than the number of DPCs provisioned.

2888 E2888 Cmd Rej: MTPDPCQ cannot be less than no. of destinations provisioned

The Cluster Routing and Management Diversity (CRMD) feature must be turned on before the `mtpxlq`, `mtpxlet`, and `mtpxlot` parameters can be specified.

2850 E2850 Cmd Rej: MTPXLxx parameters are only valid if crmd feature is ON

The ANSI MTP restart (MTPRS) feature must be turned on before the `mtprsit` parameter can be specified.

2833 E2833 Cmd Rej: MTPRSIT parameter is only valid if MTPRS feature is ON

The ANSI MTP restart (MTPRS) or ITU MTP restart (ITUMTPRS) feature must be turned on before the `mtparsi` parameter can be specified.

2832 E2832 Cmd Rej: MTPRSI is only valid if MTPRS or ITUMTPRS feature is ON

The value for the `tfatfrpr` parameter must be specified in increments of 100 milliseconds (0.1 seconds).

2904 E2904 Cmd Rej: TFATFRPR must be in increments of 100 msec

The System Options table is corrupt or cannot be found.

2852 E2852 Cmd Rej: Failed reading STP Options table

Cluster x-list maintenance data must be accessible.

2887 E2887 Cmd Rej: Failed accessing maintenance data

The level 3 Timer table is corrupt or cannot be found.

2173 E2173 Cmd Rej: Failed reading level 3 timer set table

If critical alarms are inhibited in the system, then the `critalminh=no` parameter cannot be specified.

3435 E3435 Cmd Rej: To disable CRITALMINH, critical alarms can not be inhibited

If the `npcfmti` parameter is specified, the sum of the values specified for $m1 + m2 + m3 + m4$ must be equal to 14.

3575 E3575 Cmd Rej: The sum of the values for NPCFMTI must be equal to 14

The `defcc` parameter value cannot already exist as an entry in the GSM Options Multiple Country Code (the `multcc` parameter) list.

3493 E3493 Cmd Rej: MULTCC entry already exists in the GSM Options MULTCC list

If a GSM Options Multiple Country Code (`multcc` parameter) has been defined, the `defcc=none` parameter cannot be specified.

3634 E3634 Cmd Rej: Cannot set DefCC to none if a GSM Options MULTCC is defined

The GSM Map Screening feature must be turned on before the `gsmdflt` or `gsmsdecerr` parameter can be specified.

3883 E3883 Cmd Rej: GSM Map Screening feature must be ON

The Network Security Enhancements feature must be turned on before the `secmtpmate`, `secmtpsid`, `secmtpsnm`, and `secscpcscmg` parameters can be specified.

3299 E3299 Cmd Rej: Network Security Enhancements feature must be ON

The MAS Configuration table is corrupt or cannot be found.

2145 E2145 Cmd Rej: Failed reading MAS configuration table

If the Origin-based MTP Routing feature is enabled, then the `mtplprst=no` parameter cannot be specified.

4579 E4579 Cmd Rej: MTPLPRST option must be on

The AINPQ, EIR, G-Flex, G-PORT, INP, LNP ELAP Configuration, Prepaid SMS Intercept Ph1, SIP NP or V-Flex feature must be turned on before the `dsmaud` parameter can be specified.

4102 E4102 Cmd Rej: At least one EPAP DB feature/LNP ELAP CFGMPS based feature must be enabled/ON

The value specified for `mtpt10alt` parameter cannot be less than the Level3-T10 timer value.

2915 E2915 Cmd Rej: MTPT10ALT cannot be less than level-3 timer T10

The GSM Options table is corrupt or cannot be found.

3541 E3541 Cmd Rej: Failed reading GSM Options Table

If the MT-Based GSM SMS NP feature is turned on, then the `defcc=none` parameter cannot be specified.

4709 E4709 Cmd Rej: Cannot set DefCC to NONE if MT-Based GSM SMS NP is ON

If the MT-Based IS41 SMS NP feature is turned on, then the `defcc=none` parameter cannot be specified.

4831 E4831 Cmd Rej: Cannot set DefCC to NONE if MT-Based IS41 SMS NP is ON

If the ATINP feature is turned on, then the `defcc=none` parameter cannot be specified.

4979 E4979 Cmd Rej: Cannot set DefCC to NONE, if ATINP feature is ON

If the TN quantity key is above 228M, or if ELAP version 8.0 or above is provisioned, then the `dsmaud=ccc` parameter cannot be specified.

3631 E3631 Cmd Rej: Incompatible Feature/Option status

If the Prepaid IDP Relay feature is turned on or the IAR Base feature is enabled, then the `defcc=none` parameter cannot be specified.

4842 E4842 Cmd Rej: Cannot set DefCC to NONE, if IDPR ON or IAR Base ENABLED

If the `on` or `off` parameter is specified, then the `ansigflex`, `archblidid`, `cnvcgda`, `cnvcgdi`, `cnvcgdn`, `cnvcgdn24`, `gtcnvdfilt`, `critalminh`, `dispactalms`, `mtplprst`, `mtplti`, `mtprsi`, `rptlnpmrssi`, `rstrdev`, and `uimrd` parameters cannot be specified.

Contact My Oracle Support (MOS) for assistance in turning off the GBSUSNMINM parameter.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The same option cannot be specified by both the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

A PCT quantity feature must be enabled before the `pct` parameter can be specified.

5391 E5391 Cmd Rej: PCT feature must be enabled

Contact My Oracle Support (MOS) for assistance in turning off the PCT Feature.

5467 E5467 Cmd Rej: Invalid value specified for the parameter

If the SIPNP feature is turned on, then the defcc=none parameter cannot be specified.

2669 E2669 Cmd Rej: Cannot set DefCC to NONE if SIPNP is ON

EPAP240M or EPAPX can only be turned on if at least one EPAP-related feature is ON.

4815 E4815 Cmd Rej: At least one EPAP-related feature must be ON

EPAP240M can not be turned on if an EPAP-based E5-SM4G card is present in the system.

3242 E3242 Cmd Rej: EPAP based SM4G card present in system

GBSUSNMNIM cannot be turned on if an A-class card is present in the system.

3510 E3510 Cmd Rej: EPMA/SM4G card not supported for the feature

EPAPX cannot be turned on if 32-bit SM8G/SLIC EPAP based SCCP cards is present in the system.

3536 E3536 Cmd Rej: EPAPX allowed only with 64-bit SLIC for SM

If EPAPX is turned ON then EPAP240M cannot be turned ON.

3617 E3617 Cmd Rej: EPAP240M feature can't be turned ON

This command cannot be entered when CAT2 syncing is in progress.

3652 E3652 Cmd Rej: IPSM to OAM SYNC in progress

LNPTN756M cannot be turned on if SM8G ELAP based SCCP cards is present in the system.

3670 E3670 Cmd Rej: LNPTN756M allowed only with ELAP SLIC for SM

Notes

If the database contains ITU national point codes of a particular format, and the format is changed with the `npcfmti` parameter, the format of the ITU national point codes in the database will be changed to the new format.

The format defined by the `npcfmti` parameter applies to all database entities that use ITU national point codes except gateway screening. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If the system is using a format for the ITU national point code other than a single number, the point code will have to be converted from its current format to a single number in order to be used by gateway screening. The conversion is explained in "Converting ITU National Point Code Formats".

For the STP option attributes supporting STP event message throttling, the values for the indicated parameters become effective in the next event-message output interval following their activation. All other updates become effective at the time of activation (immediately).

When the `slscnv=on` parameter is specified, the node acts as if the 5-bit to 8-bit SLS conversion is being performed on every linkset in the database, including linksets where the `slsci=no` parameter has been specified.

When the `slscnv=off` parameter is specified, the node acts as if the 5-bit to 8-bit SLS conversion has been turned off for every linkset in the database, including linksets where the `slsci=yes` parameter has been specified.

When the `slscnv=perls` parameter is specified, the 5-bit to 8-bit SLS conversion is performed only on the linksets where the `slsci=yes` parameter has been specified.

When the value of the `dispactalms` parameter is changed, there could be a delay of up to five seconds as the VT320 screen refreshes to the selected display.

The maximum allowed number of destination point codes can be changed by the `mtpdpcq` parameter.

If the Cluster Routing and Management Diversity feature is turned on, the maximum number of destination point codes contained in the exception list can be changed by the `mtpxlq` parameter.

The sum of the values of the `mtpdpcq` and `mtpxlq` parameters can be increased beyond 2500 only if one or more of the following features are turned on:

- If the DSTN5000 feature is turned on, the parameters cannot exceed 5500.
- If the 6000 Routesets feature is enabled, the parameters cannot exceed 6500.
- If the 7000 Routesets feature is enabled, the parameters cannot exceed 7500.
- If the 8000 Routesets feature is enabled, the parameters cannot exceed 8500.
- If the 10,000 Routesets feature is enabled, the parameters cannot exceed 10500.

To enter seconds (instead of milliseconds) for the timer values, the timer value must contain at least one decimal place, and can contain up to three decimal places. If no decimal places are entered, the system accepts the value as milliseconds. The `rtrv-stpopts` command always displays the output in milliseconds, not seconds.

There will be only one Network Point Code in the STPOPTS table for GWS DUP action- either "a" (ANSI), "I" (ITU-I), "n" (ITU-N), "n24" (ITU-N24) or "n16" (ITU-N16).

on/off options

- *ansigflex* —Enables/Disables ANSI G-Flex to execute at 1700 TPS per DSM card
- *archbldid* —Archive build ID Enables/Disables specifying that the database archive file name contains the EAGLE build number/release number, respectively.
- *cnvcgda* —Enables/Disables discarding of the CGPA point code in SCCP messages if the destination network type is ANSI, and the point code or alias point code of the destination network type is not defined
- *cnvcgdi* —Enables/Disables discarding of the CGPA point code in SCCP messages if the destination network type is ITU-I, and the point code or alias point code of the destination network type is not defined
- *cnvcgdn* —Enables/Disables discarding of the CGPA point code in SCCP messages if the destination network type is ITU-N, and the point code or alias point code of the destination network type is not defined
- *cnvcgdn24* —Enables/Disables discarding of the CGPA point code in SCCP messages if the destination network type is ITU-N24, and the point code or alias point code of the destination network type is not defined
- *criticalminh* —Critical alarm inhibit. This enables/disables inhibiting of critical alarms.

- *dispactalms* —Enables/Disables the display of active alarms in the alarm status area of the VT320 screen (see [Figure 2-1](#)). The alarm status area comprises four boxes to show counts for critical, major, minor, and inhibited alarms. The counts for critical, major, and minor alarms do not include any temporarily or permanently inhibited alarms. The alarm status area is labeled *Active Alarm Status*. This parameter does not affect the count displayed in the inhibited box; the number of inhibited alarms is always displayed.
- *epap240m* - Enables the option to download the 240M DN/IMSI RTDB data on EPAP-based E5-SM8G-B card. It cannot be turned ON once *epapx* is turned ON.

 **Note:**

This feature has a dependency on 64-bit GPLs. The SM cards must be running 64-bit GPLs in order to support the larger RTDB data from the EPAP. If the SM cards are not already running 64-bit GPLs, then the flash GPLs on the SM cards need to be manually converted to 64-bit. See the `init-flash` command for more information.

- *epapx* - Enables the option to download the 480M DN & 600M IMSI/600M IMEI RTDB data on EPAP-based SLIC SCCP cards. Enabling *epapx* will automatically turn OFF *epap240m*.

 **Note:**

- This feature has a dependency on 64-bit GPLs. The SLIC cards must be running 64-bit GPLs in order to support the larger RTDB data from the EPAP. If the SLIC cards are not already running 64-bit GPLs, then the flash GPLs on the SLIC cards need to be manually converted to 64-bit. See the `init-flash` command for more information.
- The *epapx* parameter should only be turned ON after connecting to EPAP 16.3.

- *gbsusnminm*- Enable/Disable applications to send SNM/INM Group Broadcast message. The default value is off.

 **Note:**

- The *gbsusnminm* parameter cannot be turned on if an A-class card is present in the system.
- Customers cannot disable (off) this option once enabled. Debug method is required for turning off *gbsusnminm*. Customers need to contact MOS if it is required to turn off the *gbsusnminm*.

- *gdpc* --- MSU duplicated by GWS DUP Stop Action will be routed to the point code configured in GDPC..
- *gtcnvdfllt* —Enables/Disables routing of SCCP messages using system defaults when an appropriate entry is not found in the Default GT Conversion Table.

- *mtplprst* —Enables/Disables MTP low priority route set testing via polling the STP.
- *mtplti* —Enables/Disables MTP loop detection procedures on the STP .
- *mtprsi* —Enables/Disables the MTP Restart procedures (both ANSI and ITU) on the STP .
- *rptlnpmrss* —Enables/Disables the generation of UIM 1049 for LNP message relay (MR) messages with missing subsystems if no MAP entry is found from a GTT done on an LNP MR message.
- *rstrdev* —Enables/Disables restoration of device states when the `init-sys` command is executed and when an OAM role change occurs and maintains the inhibited state of terminals, links, and cards through an `init-sys` execution, OAM role change, and card reload. An `init-sys` command causes the system to go down.
- *uimrd* —Enables/Disables UIMs (Unsolicited Information Messages) to be routed to the specified output group.
- *lnptn756m* - Enables the option to download 756M LNP TN data on ELAP-based SLIC SCCP cards.

 **Note:**

- This feature has a dependency on SLIC cards. All ELAP based SM cards should be running on SLIC cards. If SMxG ELAP cards are running in the system, then inhibit all SMxG ELAP cards to turn on this feature. See the `inh-card` command for more information.
- The `lnptn756m` parameter should only be turned ON after connecting to ELAP 10.2.

EPM-B based cards refer to E5-ENET-B, E5-E1T1-B, E5-ATM-B, and E5-MCPM-B cards.

Output

```
chg-stpopts:randsls=all
```

```
tekelecstp 06-07-26 12:03:28 EST EAGLE 36.0.0
CHG-STPOPTS: MASP A - COMPLTD
;
```

Related Topics

- [rtv-stpopts](#)

4.1.146 chg-t1

Use this command to change an interface for a T1 card in the system. T1 cards consist of /E5-E1T1-B cards used as T1 or ST-HSL-A cards.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

t1port (mandatory)

T1 port number

The value must be a T1 port that has already been configured with a T1 interface on the specified T1 card.

Range:

1 - 8

Any 2 of the 8 ports on an E5-E1T1-B card can be specified when the card is used as an ST-HSL-A card.

Any 1 of the 8 ports on a card can be specified when the card is used as an ST-HSL-A card.

encode (optional)

Indicator for use of B8ZS or AMI encoding/decoding.

Range:

b8zs

ami

Default:

No change to the current value

framing (optional)

Indicator for framing format. *esfperf* is the framing format with performance monitoring.

Range:

sf, esf, esfperf

Default:

No change to the current value

l1 (optional)

T1 cable length in feet between the EAGLE and the connecting node.

Range:

0 - 655

Default:

No change to the current value

minsurate (optional)

Minimum signal unit rate. The minimum number of SUs present on a link that are uniformly distributed.

Range:

400 - 1600

Default:

No change to the current value

t1tsel (optional)

This parameter specifies the timing source for a T1 card.

Range:

line - slave timing source

external - master timing source

Default:

No change to the current value

Example

```
chg-t1:loc=1205:t1port=1:encode=ami
chg-t1:loc=1205:t1port=2:encode=b8z:ll=250s
chg-t1:loc=1205:t1port=1:minsurate=1000
chg-t1:loc=1205:t1port=1:encode=ami:t1tsel=external
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The card location specified by the `loc` parameter must be equipped.

2739 E2739 Cmd Rej: T1 card location is unequipped

The E1/T1 table must be accessible.

4059 E4059 Cmd Rej: Failed reading the E1/T1 table

The Card (IMT) table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

The card specified by the `loc` parameter must be a LIMT1 card type.

2212 E2212 Cmd Rej: Invalid card type for this command

The port specified by the `t1port` parameter must have already been configured with a T1 interface on the specified T1 card.

2737 E2737 Cmd Rej: The T1PORT at the specified location is not equipped

All signaling links that are serviced by the specified T1 card must be deactivated before the values for the `encode`, `t1tsel`, `ll`, and `framing` parameters can be changed.

2736 E2736 Cmd Rej: All signaling links serviced by the T1 must be deactivated

The shelf FAN bit must be turned ON for the shelf on which an E5-E1T1-B card is provisioned and present. The system checks the shelf FAN bit when an E5-E1T1-B card is present in the specified odd card location (`loc` parameter) and the `chanbrdg=on` parameter is specified.

3866 E3866 Cmd Rej: Fan feature must be enabled

HIPR2 cards must be equipped in card locations `xy09` and `xy10` (`x` is the frame, `y` is the shelf) on each EAGLE shelf that contains one or more /E5-E1T1-B cards. The system checks for HIPR2 cards when the `chanbrdg=on` parameter is specified for /E5-E1T1-B cards.

3490 E3490 Cmd Rej: HIPR/HIPR2 must be equipped on the shelf for this card

The following card locations cannot be specified in the `loc` parameter: 1113 - 1118 (E5-MASP and E5-MDAL cards), or `xy09` and `xy10` where `x` is the frame and `y` is the shelf (MUX cards).

2154 E2154 Cmd Rej: Card slot reserved by system

The `linkclass=unchan` parameter must be specified (see the `ent-t1` command) before the `minsurate` parameter can be specified.

3047 E3047 Cmd Rej: Parameter combination invalid

The ST-HSL-A feature must be turned on before the `framing=esfperf` parameter can be specified.

3872 E3872 Cmd Rej: FRAMING=ESFPERF not supported

Notes

External timing is derived from the EAGLE High-Speed Master Clock (1.544 MHz for T1 or 2.048 MHz for E1): therefore, the Master Timing feature is required. Line timing is derived from its received data stream, if present.

Output

```
chg-t1:loc=1205:t1port=1:encode=ami
```

```
rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
CHG-T1: MASP A - COMPLTD
;
```

Related Topics

- [dlt-t1](#)
- [ent-t1](#)
- [rtrv-t1](#)
- [tst-t1](#)

4.1.147 chg-tatr-msg

Use this command to revise a Triggerless ANSI TCAP Relay message.

Parameters

msgn (mandatory)

Message number. The number of the TATR message.

Range:

1 - 10

active (optional)

This parameter specifies whether the TATR message is sent to the network card for processing.

Range:

yes

The message is sent to the network card.

no

The message is not sent to the network card.

Default:

No change to the current value

System Default:

no

cdpadgts (optional)

Called party address digits. This parameter specifies the SCCP CdPA digits for the IAR message.

Range:

1 - 15 hexadecimal digits. Valid digits are *0-9, a-f, A-F*

Default:

No change to the current value

cdpagt (optional)

Called party address global title. The SCCP CdPA GT for the IAR message.

Range:

0 - 15

Default:

No change to the current value

cdpagtnai (optional)

Called party address global title nature of address indicator. The SCCP CdPA GT NAI for the IAR message.

Range:

0 - 127

Default:

No change to the current value

cdpndgts (optional)

Called party number digits. The TCAP CdPN digits for the IAR message.

Range:

1 - 32 hexadecimal digits. Valid digits are 0-9, a-f, A-F

Default:

No change to the current value

cdpnnai (optional)

Called party number Nature of Address Indicator. The value for TCAP CdPN NAI value for the IAR message.

Range:

0 - 255

Default:

No change to the current value

cgpndgts (optional)

Calling party address digits. The SCCP CgPA digits for the IAR message.

Range:

1 - 15 hexadecimal digits. Valid digits are 0-9, a-f, A-F

Default:

No change to the current value

cgpagt (optional)

Calling party address global title. The SCCP CgPA GT for the IAR message.

Range:

0 - 15

Default:

No change to the current value

cgpagtnai (optional)

Calling party address global title nature of address indicator. The SCCP CgPA GT NAI for the IAR message.

Range:

0 - 127

Default:

No change to the current value

cgpndgts (optional)

Calling party number digits. The TCAP CgPN digits in the IAR message.

Range:

1- 32 hexadecimal digits. Valid digits are 0-9, a-f, A-F

Default:

No change to the current value

cgpnnai (optional)

Calling party number nature of address indicator. The TCAP CgPN NAI in the IAR message.

Range:

0 - 255

Default:

No change to the current value

reset (optional)

This parameter resets all of the parameters to their default values.

Range:

yes

Resets all message parameters to their default values

Default:

No change to the current value

trigtype (optional)

Trigger Type. The value for the *TrigType* field of the IAR message.

Range:

0 - 255

The value for this parameter can be entered as a decimal value (0-255) or as 2 hexadecimal digits. Valid digits are 0-9, a-f, A-F.

If hexadecimal digits are used, then the digits must be preceded by *h'*. [Table 4-23](#) lists valid hexadecimal values.

Default:

No change to the current value

Example

```
chg-tatr-
msg:msgn=1:trigtype=h'26:cdpnnai=4:cdpadgts=12457896abcd:cgpnnai=4
```

```
chg-tatr-
msg:msgn=1:trigtype=12:cdpnnai=2:cdpndgts=981123456:active=yes
```

Dependencies

The IAR Base feature must be enabled before this command can be entered.

5150 E5150 Cmd Rej: Info Analyzed Relay Base feature must be enabled

The TSTMSG table is corrupt or cannot be found.

4819 E4819 Cmd Rej: Failure reading TSTMSG Table

If the `reset` parameter is specified, then no other parameters can be specified.

4953 E4953 Cmd Rej: RESET is mutually exclusive with any other parameter

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

Output

```
chg-tatr-  
msg:msgn=1:trigtype=37:cdpnnai=4:cdpndgts=987654321:cgpnnai=4
```

```
tekelecstp 09-07-07 15:58:08 EST EAGLE 41.1.0  
CHG-TATR-MSG: MASP A - COMPLTD  
;
```

Related Topics

- [rtrv-tatr-msg](#)
- [tst-msg](#)

4.1.148 chg-tatropts

Use this command to enter Triggerless ANSI TCAP Relay (TATR)-specific options in the database. This command updates the TATROPTS table.

Parameters

cdnptype (optional)

Entity type for CdPN RTDB lookup. The entity type that is considered a success when used for RTDB lookup.

Range:

sp
Service provider

rn
Routing number

msp
rn or *sp*

anymatch
rn, *sp*, or no match with any entity

always
Lookup is always considered successful

rnspdn
rn, *sp*, or *dn*

If the `cdnptype=anymatch` parameter is specified, then the value is also used as the RN for the outgoing CdPN.

Default:
No change to the current value

System Default:
msp

cgnptype (optional)

CgPN database lookup type. The entity type that is considered a success when used for RTDB lookup.

Range:

sp
Service Provider

rn
Routing Number

rns
rn or *sp*

anymatch
rn, *sp*, or no match with any entity

always
Lookup is always considered successful

rnsdn
rn, *sp*, or *dn*

If the `cgnptype=anymatch` parameter is specified, then the value is also used as the RN for the outgoing CgPN.

Default:

No change to the current value

System Default:

rns

cgpaccck (optional)

CgPA country code check. This parameter specifies whether a DEFCC check is performed on the incoming CgPA.

Range:

always
The DEFCC check is always performed.

nonintl
The DEFCC check is performed if the CdPN NAI is not 'International'.

off
The DEFCC check is not performed.

Default:

No change to the current value

System Default:

nonintl

df1trn (optional)

Default routing number. The default RN used when a value of *sp* or *rnsp* is specified for the *cdnptype* or *cgnptype* parameter, and the CdPN or CgPN RTDB lookup returns entity type SP.

Range:

1 - 15 digits, *none*

1-15 hexadecimal digits. Valid digits are 0-9, a-f, A-F.

none —a default RN is not used

Default:

No change to the current value

System Default:

none

sporttype (optional)

Service Portability type. This parameter specifies whether Service Portability is performed for the Info Analyzed Relay (IAR) NP feature.

 **Note:**

The S-Port feature must be turned on before any change to the parameter will impact the associated feature.

 **Note:**

If Service Portability is performed, then the Service Portability prefix (RTDB 'GRN'entity id) is applied.

Range:***gsm***

Apply Service Portability prefix for own-network GSM subscribers

is41

Apply Service Portability prefix for own-network IS41 subscribers

all

Apply Service Portability prefix for all own-network (IS41 and GSM) subscribers

none

Service Portability is not performed for the feature.

Default:

No change to the current value

System Default:

none

Example

```
chg-tatropts:cdnptype=always:sporttype=is41
```

```
chg-tatropts:cgntype=sp
chg-tatropts:cgpacck=always
chg-tatropts:dfltrn=123456789012345
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The IAR Base feature must be enabled before this command can be entered.

5150 E5150 Cmd Rej: Info Analyzed Relay Base feature must be enabled

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

The IAR Number Portability and the Service Portability features must be enabled before the `sporttype` parameter can be specified.

5156 E5156 Cmd Rej: IAR NP and Service Portability features must be enabled

Output

```
chg-tatropts:cdnptype=sp

      tekelecstp 09-07-05 13:34:22 EST  EAGLE 41.1.0
      CHG-TATROPTS: MASP A - COMPLTD
;
```

Related Topics

- [rtrv-tatropts](#)

4.1.149 chg-th-alm

Use this command to change the alarm thresholds and associated values.

Parameters

deirconglv11 (optional)

The percentage of S13 card level 1 alarm threshold settings.

Range:

1 - 100

Default:

40

deirconglv12 (optional)

The percentage of S13 card level 2 alarm threshold settings.

Range:
1 - 100



Note:

This value must be greater than the value specified for the `deirconglv11` parameter

Default:
80

gttservlv1 (optional)

The percentage for the SCCP GTT Service error ratio level 1 (lower) Threshold Alarm.

Range:
1 - 100

Default:
10

gttservlv2 (optional)

The percentage for the SCCP GTT Service error ratio level 2 (upper) Threshold Alarm.

Range:
1 - 100

Default:
20

imtbusutl1v11 (optional)

The percentage for the IMT Bus Combined utilization level 1 Threshold Alarm (reported on IMT System).

Range:
35 - 70

Default:
70

imtbusutl1v12 (optional)

The percentage for the IMT Bus Combined utilization level 2 Threshold Alarm (reported on IMT System).

Range:
40 - 80

Default:
80

imtcongestlv11 (optional)

The percentage for the IMT Bus Congestion level 1 Threshold Alarm (reported on HIPR2 card).

Range:
35 - 70

Default:
70

imtcongestlv12 (optional)

The percentage for the IMT Bus Congestion level 2 Threshold Alarm (reported on HIPR2 card).

Range:
40 - 80



Note:

This value must be greater than the value specified for the imtcongestlv11 parameter.

Default:
80

lnptndblv1 (optional)

The percentage for the TN Database provisioned level 1 (lower) Capacity Threshold Alarm.

Range:
1 - 100

Default:
80

lnptndblv2 (optional)

The percentage for the LNP TN Database provisioned level 2 (upper) Capacity Threshold Alarm.

Range:
1 - 100



Note:

This value must be greater than the lnptndblv1 parameter value.

Default:
95

nongttservlv1 (optional)

The percentage for the SCCP Non-GTT Service (AIQ, ATINPQ, GPORT, GFLEX, EIR, INPMR, INPQS, LNPMR, LNPQS, LRNQT, PLNPQS, TLNP, V-Flex, WNPQS) error ratio level 1 (lower) Threshold Alarm.

Range:
1 - 100

Default:
10

nongttservlv2 (optional)

The percentage for the SCCP Non-GTT Service (AIQ, ATINPQ, GPORT, GFLEX, EIR, INPMR, INPQS, LNPMR, LNPQS, LRNQT, PLNPQS, TLNP, V-Flex, WNPQS) error ratio level 2 (upper) Threshold Alarm.

Range:
1 - 100

Default:
20

sccpcalcmtld (optional)

Calculation method used to determine whether the TPS Threshold Alarm levels have been exceeded.

Range:

n
use all In Service Normal cards in the calculation

nplus1
use all In Service Normal cards minus 1 card in TPS calculation

Default:
n

sccpthlv1intvl (optional)

Number of minutes during which the SCCP threshold level 1 alarm cannot be raised more than once.

Range:
0 - 1440

Default:
0

sccpthlv2intvl (optional)

Number of minutes during which the SCCP threshold level 2 alarm cannot be raised more than once.

Range:
0 - 1440

Default:
0

sccptpscap (optional)

The percentage for the SCCP Load Capacity Threshold Alarm.

Range:
0 - 100

Default:
80

sfappcalcmthd (optional)

SFAPP Calculation Method.

Range:

{n, nplus1}

Default:

n

sfappconglv11 (optional)

SFAPP Congestion Alarm Level 1

Range:

1 - 100

Default:

40

sfappconglv12 (optional)

SFAPP Congestion Alarm Level 2

Range:

1 - 100

Default:

80

sfappservlv1 (optional)

The percentage for the SFAPP Service error ratio level 1 (lower)

Range:

1 - 100

Default:

10

sfappservlv2 (optional)

The percentage for the SFAPP Service error ratio level 2 (upper)

Range:

1 - 100

Default:

20

sfappthlv11intv1 (optional)

Interval in minutes during which SFAPP Service Alarm Level 1 cannot be raised more.

Range:

0-1440

Default:

0

sfappthlv12intv1 (optional)

Interval in minutes during which SFAPP Service Alarm Level 2 cannot be raised more.

Range:
0-1440

Default:
0

sfapptpscap (optional)

The percentage for the SFAPP Load Capacity Threshold Alarm.

Range:
0 - 100

Default:
80

sfthrotthresh (optional)

The percentage for the Throttling Action Threshold Alarm.

Range:
1 - 100

Default:
80

sipconglv1 (optional)

The percentage of SIP card level 1 alarm threshold settings.

Range:
1 - 100

Default:
40

sipconglv2 (optional)

The percentage of SIP card level 2 alarm threshold settings.

Range:
1 - 100

 **Note:**

This value must be greater than the value specified for the `sipconglv1` parameter.

Default:
80

therma1lv1 (optional)

Thermal Alarm Level 1 as a percentage of a card's thermal limit.

Range:
73 - 92

thermalv2 (optional)

Thermal Alarm Level 2 as a percentage of a card's thermal limit.

Range:

74 - 100

Example

```
chg-th-alm:lnptndblvl=85
chg-th-alm:sccptpscap=85
chg-th-alm:sccpcalcmtld=nplus1
chg-th-alm:gttserlvl1=25:gttserlvl2=28
chg-th-alm:sccpthlv1intvl=20:sccpthlv2intvl=50
chg-th-alm:nongttserlvl1=30:nongttserlvl2=60
chg-th-alm:deirconglvl1=50:deirconglvl2=80
chg-th-alm:sipconglvl1=50:sipconglvl2=80
chg-th-alm:sfthrotthresh=70
chg-th-alm:sfappcalcmtld=nplus1
chg-th-alm:sfapptpscap=85
chg-th-alm:sfappthlv1intvl=20:sfappthlv2intvl=50
chg-th-alm:sfappserlvl1=30:sfappserlvl2=60
chg-th-alm:sfappconglvl1=50:sfappconglvl2=80
```

Dependencies

Each Level 1 parameter value must be less than its corresponding Level 2 parameter value.

4370 E4370 Cmd Rej: Level 1 Alarm Threshold level must be less than Level 2

Notes

To display the currently configured values for the Thermal Alarm Levels, use the `rtrv-th-alm` command.

EPM based E5-ENET, E5-IPSM, and E5-TSM cards have a thermal operating limit of 95 degrees Celsius. E5-SM4G and EPM-B based cards have a thermal operating limit of 90 degrees Celsius. `thermalv1` and `thermalv2` are applicable to both EPM and EPM-B based cards.

The thermal threshold values represent a percentage of the thermal operating limit of a card.

EPM-B based cards refer to E5-ATM-B, E5-ENET-B, E5-E1T1-B, and E5-MCPM-B cards.

Output

```
chg-th-alm:thermallv1=85
```

```
    rlghncxa03w 06-05-07 11:43:04 EST  EAGLE 35.0.0  
    CHG-TH-ALM: MASP A - COMPLTD
```

```
;
```

```
chg-th-alm:deirconglv1=50:deirconglv2=80
```

```
    tekelecstp 13-03-19 11:43:04 EST  EAGLE 45.1.0  
    CHG-TH-ALM: MASP A - COMPLTD
```

```
;
```

```
chg-th-alm:sipconglv1=50:sipconglv2=80
```

```
    tekelecstp 15-04-22 13:06:06 MST  EAGLE5 46.3.0  
    CHG-TH-ALM: MASP A - COMPLTD
```

```
;
```

```
chg-th-alm:sfthrotthresh=70
```

```
tekelecstp 15-03-19 11:43:04 EST  EAGLE 46.3.0  
    CHG-TH-ALM: MASP A - COMPLTD
```

```
;
```

```
chg-th-alm:sfappconglv1=50:sfappconglv2=80
```

```
    tekelecstp 13-03-19 11:43:04 EST  EAGLE 46.5.1.5  
    CHG-TH-ALM: MASP A - COMPLTD
```

```
;
```

```
chg-th-alm:sfappcalcmthd=nplus1
```

```
    tekelecstp 15-04-22 13:06:06 MST  EAGLE5 46.5.1.5  
    CHG-TH-ALM: MASP A - COMPLTD
```

```
;
```

```
chg-th-alm:sfappservlv1=30:sfappservlv2=60
```

```
tekelecstp 15-03-19 11:43:04 EST  EAGLE 46.5.1.5  
    CHG-TH-ALM: MASP A - COMPLTD
```

```
;
```

Related Topics

- [rept-stat-sccp](#)

- [rtrv-th-alm](#)

4.1.150 chg-tifopts

Use this command to update the TIF Options table.

Note:

Values other than *none* that are entered for the `dlma`, `dlmb`, or `dlmc` parameters for the TIF services (TIF, TIF2, TIF3) using this command will overwrite values entered for those parameters using the `chg-npp-serv` command.

Parameters

condcgn (optional)

The preconditioning required when a CgPN lookup is needed.

Range:

addcc

add the country code

none

Default:

none

crpre1 (optional)

The ISUP Release cause for a message that is determined to be circular routed.

Range:

0 - 255

Default:

31 -normal, unspecified

df1trn (optional)

Default routing number. This parameter provides a set of digits to substitute for a signaling point.

This parameter is used with both calling party and called party numbers.

Range:

1-15 hexadecimal digits, *none*

Valid digits are 0-9, a-f, A-F

Default:

none

dlma (optional)

Delimiter A. The digits used for Delimiter A in an NPP Formatting Action.

Range:

1-16 hexadecimal digits, *none*
Valid digits are *0-9, a-f, A-F*

Default:

none

d1mb (optional)

Delimiter B. The digits used for Delimiter B in an NPP Formatting Action.

Range:

1-16 hexadecimal digits, *none*
Valid digits are *0-9, a-f, A-F*

Default:

none

d1mc (optional)

Delimiter C. The digits used for Delimiter C in an NPP Formatting Action.

Range:

1-16 hexadecimal digits, *none*
Valid digits are *0-9, a-f, A-F*

Default:

none

iamcgpn (optional)

The format of the outgoing CgPN digits.

Range:***rn***

Replaces the CgPN with the RN.

rndn

Adds the RN as a prefix to the CgPN.

dn

Replaces the CgPN with the DN.

Default:

dn

matchseq (optional)

The DN lookup mechanism.

Range:***dn***

search the range database if the DN is not found during subscriber lookup

nptype

search the range database if the DN is not found during subscriber lookup or if the located DN does not match the value specified for the *nptype* or *nptypecgpn* parameter

Default:*dn***npflag (optional)**

This parameter specifies whether the *nm* parameter is modified in the IAM message to show that NP lookup has been performed.

The *nm* parameter exists only in incoming and outgoing IAM messages.

Range:***nm***

modifies the *nm* parameter

none

does not modify the *nm* parameter

Default:*none***nptypecgn (optional)**

NP entity type for the CgPN. The entity type of the DN that is used to indicate that a successful NP lookup occurred.

Range:***sp***

signaling point

rn

routing number

sprn

Lookup is successful if the value of the entity type is *sp* or *rn*

all

Lookup is always considered successful.

rnspsdn

Lookup is successful if the value of the entity type is *rn*, *sp*, or *dn*

any

Lookup is successful if the value of the entity type is *rn*, *sp*, or no match with any entity.

Default:*sprn***np typerls (optional)**

The entity type of the DN that is used to indicate that a successful NP lookup occurred for the NPRLS and NPNRLS Service Actions.

Range:***sp***

signaling point

rn
routing number

sprn
Lookup is successful if the value of the entity type is *sp* or *rn*.

all
Lookup is always considered successful.

rnspsdn
Lookup is successful if the value of the entity type is *rn*, *sp*, or *dn*.

any
Lookup is successful if the value of the entity type is *rn*, *sp*, or no match with any entity.

Default:
No change to the current value

System Default:
sprn

nptyperly (optional)

The entity type of the DN that is used to indicate that a successful NP lookup occurred for the NPRELAY Service Action.

Range:

sp
signaling point

rn
routing number

sprn
Lookup is successful if the value of the entity type is *sp* or *rn*.

all
Lookup is always considered successful.

rnspsdn
Lookup is successful if the value of the entity type is *rn*, *sp*, or *dn*.

any
Lookup is successful if the value of the entity type is *rn*, *sp*, or no match with any entity.

Default:
No change to the current value

System Default:
sprn

nsaddldata (optional)

This parameter specifies whether the incoming IAM Calling Party Category should be compared with the value for the `nspublic` parameter before performing Calling Party number substitution.

Range:**yes**

Compare the Calling Party Category in the message with the `nspublic` parameter value.

no

Do not compare the Calling Party Category in the message with the `nspublic` parameter value.

Default:

no

nspublic (optional)

The value of the Calling Party Category that indicates that the Calling Party number is public.

Range:

0 - 255

Default:

0

rcausenp (optional)

The value used for the release cause in an REL message when number portability occurs.

Range:

0 - 127

Default:

0

rcausepfx (optional)

The value used for the release cause in an REL message when number portability does not occur.

Range:

0 - 127

Default:

0

r1copc (optional)

This parameter specifies whether the value specified for the `rcause` parameter (see the `ent/chg-dstn` commands) overrides the values specified for the `rcausenp` and `rcausepfx` parameters.

Range:**off**

Use the values specified for the TIFOPTS `rcausenp` and `rcausepfx` parameters as the release cause in REL messages.

on

Use the value specified for the `rcause` parameter as the release cause in REL messages.

Default:

off

rnrqd (optional)

This parameter specifies whether the redirection number is included in the release message when release handling is indicated.

Range:

yes

no

Default:

yes

snsccgpndflt (optional)

The digits to be used in calling number simple number substitution.

Range:

1-32 hexadecimal digits, *none*

Valid digits are *0-9, a-f, A-F*

Default:

none

spfill (optional)

This parameter specifies whether the *sp* entity type is populated if the value specified for the `defltrn` or `grn` parameter is used for NPP processing.

Range:

off

do not populate the *sp* entity type

on

populate the *sp* entity type

Default:

No change to the current value

System Default:

off

splitiam (optional)

This parameter specifies when to split the IAM into IAM + 1 SAM.

Range:

15 - 31, none

Default:

none

spportrelay (optional)

The Service Portability configuration option for the NPRELAY Service Action.

Range:

none

Service Portability is not performed for this Service Action

gsm

Apply Service Portability prefix (RTDB 'GRN' entity id) for own-network GSM subscribers

is41

Apply Service Portability prefix (RTDB 'GRN' entity id) for own-network IS41 subscribers

all

Apply Service Portability prefix ('GRN' from RTDB entity) for all own-network (IS41 and GSM) subscribers

Default:

No change to the current value

System Default:

none

spportrls (optional)

The Service Portability configuration option for the NPRLS Service Action.

Range:

none

Service Portability is not performed for this Service Action

gsm

Apply Service Portability prefix (RTDB 'GRN'entity id) for own-network GSM subscribers

is41

Apply Service Portability prefix (RTDB 'GRN' entity id) for own-network IS41 subscribers

all

Apply Service Portability prefix ('GRN' from RTDB entity) for all own-network (IS41 and GSM) subscribers

Default:

No change to the current value

System Default:

none

subcdpn (optional)

Configuration option for the combination of TIFRDNBL Service Action (SA) and Formatting Action (FA) ASD.

Range:***none***

TIFRDNBL SA cannot be configured. 1-10 hexadecimal digits, none. Valid digits are 0-9, a-f, A-F.

Default:

No change to the current value

System Default:

none

Example

```
chg-tifopts:dlma=1234567890
chg-tifopts:dfltrn=123456789012345
chg-tifopts:nptype=all
chg-tifopts:nsaddldata=yes:nspublic=5
chg-tifopts:subcdpn=1234567890
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

At least one of the following features must be enabled before this command can be entered.

- TIF Additional Subscriber Data
- TIF Generic Routing Number
- TIF Number Portability
- TIF Number Substitution
- TIF Range CgPN Blacklist
- TIF SCS Forwarding
- TIF Simple Number Substitution
- TIF Subscriber CgPN Blacklist
- TIF Selective Screening

4982 E4982 Cmd Rej: At least one TIF feature must be enabled

The Eagle Options table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

If the TIF ASD feature is turned on, then the `matchseq=nptype` parameter cannot be specified.

5037 E5037 Cmd Rej: MATCHSEQ cannot be set to NPTYPE, if TIF ASD Feature is ON

If the TIF GRN feature is turned on, then the `matchseq=nptype` parameter cannot be specified.

5038 E5038 Cmd Rej: MATCHSEQ cannot be set to NPTYPE, if TIF GRN Feature is ON

The TIF Number Portability feature must be enabled before the `matchseq=nptype` parameter can be specified.

5039 E5039 Cmd Rej: MATCHSEQ cannot be NPTYPE unless TIF NP Feature is Enabled

If the TIF Number Substitution feature is enabled, then the `matchseq=nptype` parameter cannot be specified.

5094 E5094 Cmd Rej: MATCHSEQ cannot be NPTYPE, if TIF NS Feature is Enabled

The TIF Number Substitution feature must be enabled before the `nsaddldata` parameter or the `nspublic` parameter can be specified.

5091 E5091 Cmd Rej: TIF Number Substitution feature must be Enabled

If the `matchseq=nptype` parameter is specified, then the only value that can be specified for the `sportrelay` or `sportrls` parameter is *none*. If the `sportrelay` or `sportrls` parameter has a value other than *none*, then the `matchseq=nptype` parameter cannot be specified.

5171 E5171 Cmd Rej: NONE in SPORTRELAY/RLS is compatible w/ NPTYPE in MATCHSEQ

The S-Port feature must be enabled before the `sportrelay` or `sportrls` parameter can be specified.

4926 E4926 Cmd Rej: Service Portability feature must be enabled

When `npp-srs` table has TIFRDNBL configured as an SA corresponding to the ASN in `npp-as` table SUBCDPN cannot be set to none.

3651 E3651 Cmd Rej: SUBCDPN referenced in NPP-SRS cannot be removed.

Notes

None

Output

```
chg-tifopts:nsaddldata=yes:nspublic=5
```

```
tekelecstp 09-03-05 09:36:03 EST EAGLE 41.0.0
CHG-TIFOPTS: MASP A - COMPLTD
;
```

Related Topics

- [rtrv-tifopts](#)

4.1.151 chg-trm

Use the change terminal command to configure the operational characteristics of each of the 40 terminal ports used to connect modems, printers, and terminals to the system.

Parameters

trm (mandatory)

Terminal. The ID number of the terminal whose characteristics are to be changed.

Range:

1 - 40

all (optional)

This parameter specifies whether to display unsolicited messages of all types (TRAF, LINK, SA, DB, SYS, PU, UIMRD, APPSERV, APPSS, CARD, CLK, DBG, GTT, GWS, MEAS, MON, MPS, SEAS) in the scroll area.

Range:

yes

receive all

no

receive none

Default:

yes—If `type=emsalm` is specified

Current value—if `type` parameter value is not *emsalm*

appserv (optional)

Application server. This parameter specifies whether to display UAMs and UIMs assigned to the Application Server output group in the scroll area.

Range:

yes

receive all

no

receive none

Default:

If `all` is specified—current `all` value

If `all` is not specified—current `appserv` value.

If `type=emsalm` is specified—yes

System Default:

no

appss (optional)

Application subsystem. This parameter specifies whether to display UAMs and UIMs assigned to the Application Subsystem output group in the scroll area

Range:

yes

receive all

no
receive none

Default:

If `all` is specified—current `all` value
If `all` is not specified—current `appss` value.
If `type=emsalm` is specified—`yes`

System Default:

`no`

baud (optional)

The line speed (baud rate) for this terminal's serial port connection.

Range:

`2400, 4800, 9600, 19200, 38400, 57600, 115200`



Note:

Values 38400, 57600, and 115200 are only valid when the OAMHC is used.

Default:

No change to the current value

System Default:

`9600`

card (optional)

This parameter specifies whether to display UAMs and UIMs assigned to the Card output group in the scroll area.

Range:

yes
receive all

no
receive none

Default:

If `all` is specified—current `all` value
If `all` is not specified—current `card` value.
If `type=emsalm` is specified—`yes`

System Default:

`no`

c1k (optional)

Clock. This parameter specifies whether to display UAMs and UIMs assigned to the Clock output group in the scroll area.

Range:

yes
receive all

no
receive none

Default:

If `all` is specified—current `all` value
If `all` is not specified—current `clk` value.
If `type=emsalm` is specified—yes

db (optional)

Database. This parameter specifies whether to display database-related unsolicited messages in the scroll area.

Range:

yes
receive all

no
receive none

Default:

If `all` is specified—current `all` value
If `all` is not specified—current `db` value.
If `type=emsalm` is specified—yes

System Default:

no

dbg (optional)

Debug. This parameter specifies whether to display UAMs and UIMs assigned to the Debug output group in the scroll area.

Range:

yes
receive all

no
receive none

Default:

If `all` is specified—current `all` value
If `all` is not specified—current `dbg` value.
If `type=emsalm` is specified—yes

System Default:

no

dura1 (optional)

Terminal lockout time. The length of time the terminal is disabled after each failed login/unlock attempt in excess of the threshold configured on the `mxinv` parameter. The value can

be specified as seconds (*ss*); minutes and seconds (*mmss*); or hours, minutes, and seconds (*hhmmss*).

Range:

0 - 999999

0–59 (*ss*)

0–5959 (*mmss*)

0–995959 (*hhmmss*)

999999

Default:

No change to the current value

System Default:

100

1 minute, 0 seconds

fc (optional)

Flow control. The type of flow control used to regulate the flow of data between the system and an RS-232 connected device, so that no characters are lost (especially at high baud rates). The control setting of the system and the connected device must match.

Range:

sw

software flow control

none

neither hardware nor software flow control

Default:

No change to the current value

System Default:

sw

gtt (optional)

This parameter specifies whether to display UAMs and UIMs assigned to the GTT output group in the scroll area.

Range:

yes

receive all

no

receive none

Default:

If *all* is specified—current *all* value

If *all* is not specified—current *gtt* value.

If *type=emsalm* is specified—yes

gws (optional)

This parameter specifies whether to display UAMs and UIMs assigned to the GWS output group in the scroll area.

Range:**yes**

receive all

no

receive none

Default:

If `all` is specified—current `all` value

If `all` is not specified—current `gws` value.

If `type=emsalm` is specified—yes

System Default:

`no`

link (optional)

This parameter specifies whether to display link maintenance-related unsolicited messages in the scroll area.

Range:**yes**

receive all

no

receive none

Default:

If `all` is specified—current `all` value

If `all` is not specified—current `link` value.

If `type=emsalm` is specified—yes

logintmr (optional)

Login timer. The amount of time, in seconds, allowed for a user to log into a Telnet terminal after selecting the terminal.

**Note:**

This parameter applies to Telnet terminals.

Range:

3 - 600, none

none—Login can occur at any time after selecting the terminal.

Default:

No change to the current value

System Default:

`none`

logouttmr (optional)

Logout timer. The amount of time, in seconds, before the Telnet session closes after the user manually or automatically logs out.

 **Note:**

This parameter applies to Telnet terminals.

Range:

0 - 1200, none

none—The Telnet session does not close after logout.

Default:

No change to the current value

System Default:

none

meas (optional)

Measurement. This parameter specifies whether to display UAMs and UIMs assigned to the Measurements Maintenance output group in the scroll area.

Range:

yes

receive all

no

receive none

Default:

If `all` is specified—current `all` value

If `all` is not specified—current `meas` value.

If `type=emsalm` is specified—`yes`

System Default:

no

mon (optional)

Monitor. This parameter specifies whether to display UAMs and UIMs assigned to the Monitor output group in the scroll area.

Range:

yes

receive all

no

receive none

Default:

If `all` is specified—current `all` value

If `all` is not specified—current `mon` value.

If `type=emsalm` is specified—`yes`

mps (optional)

This parameter specifies whether to display UAMs and UIMs assigned to the MPS output group in the scroll area.

Range:**yes**

receive all

no

receive none

Default:

If `all` is specified—current `all` value

If `all` is not specified—current `mps` value.

If `type=emsalm` is specified—yes

mxinv (optional)

Login/unlock failure threshold. When a login or unlock failure occurs on a terminal, a counter of successive login failures is incremented by one. After the increment, if the counter is greater than or equal to the `mxinv` parameter value, the system sends an information message to all system administrator ports and locks out the port temporarily. The port is locked out for an interval that is specified in the `dural` parameter.

To disable the info message and temporary lockout function for the terminal, specify `mxinv=0`.

Range:

0 - 9

Default:

No change to the current value

System Default:

5

successive failed login/unlock attempts

pngfailcnt (optional)

Ping fail count. The number of consecutive ping fails that must occur before the Telnet connection is dropped.

**Note:**

This parameter applies to Telnet terminals or to EMSALM terminals that have Telnet connections.

Range:

1 - 10

Default:

No change to the current value

System Default:

1

pngtimeint (optional)

Ping time out. The amount of time, in milliseconds, that must pass before the IPSM card initiates a new ping cycle.

 **Note:**

This parameter applies to Telnet terminals or to EMSALM terminals that have Telnet connections.

Range:

100 - 1200000, none
none—Pinging does not occur.

Default:

No change to the current value

System Default:

none

prty (optional)

Parity. The parity for this terminal's serial port connection.

Range:

none

even

odd

Default:

No change to the current value

System Default:

even

pu (optional)

Program update. This parameter specifies whether to display program update-related unsolicited messages in the scroll area.

Range:

yes

receive all

no

receive none

Default:

If *all* is specified—current *all* value

If *all* is not specified—current *pu* value.

If *type=emsalm* is specified—*yes*

sa (optional)

Security administration. This parameter specifies whether to display security administration-related unsolicited messages in the scroll area.

Range:**yes**

receive all

no

receive none

yes—Receive all.

no—Receive none.

Default:

If *all* is specified—current *all* value

If *all* is not specified—current *sa* value.

If *type=emsalm* is specified—*yes*

sb (optional)

Stop bit. The number of stop bits used in communications with the terminal.

Range:

1 - 2

Default:

No change to the current value

System Default:

1

seas (optional)

This parameter specifies whether to display UAMs and UIMs assigned to the SEAS Maintenance output group in the scroll area.

Range:**yes**

receive all

no

receive none

Default:

If *all* is specified—current *all* value

If *all* is not specified—current *seas* value.

If *type=emsalm* is specified—*yes*

sys (optional)

System. This parameter specifies whether to display system maintenance-related unsolicited messages in the scroll area.

Range:

yes
receive all

no
receive none

Default:

If `all` is specified—current `all` value
If `all` is not specified—current `sys` value.
If `type=emsa1m` is specified—`yes`

tmout (optional)

Maximum channel idle time. The maximum amount of time in minutes that a login session can remain idle (no user input) on a terminal before being automatically logged off. To disable idle time monitoring for a terminal, specify `tmout=0`.

Range:

0 - 99

Default:

No change to the current value

System Default:

30

minutes

traf (optional)

Traffic. This parameter specifies whether to display traffic-related unsolicited messages displayed in the scroll area.

Range:

yes
receive all

no
receive none

Default:

If `all` is specified—current `all` value
If `all` is not specified—current `traf` value
If `type=emsa1m` is specified—`yes`

System Default:

`no`

type (optional)

The type of device being connected to this terminal.

Range:

`vt320`, `ksr`, `printer`, `sccs`, `mgmt`, `telnet`, `emsa1m`, `none`, `seas`

The `emsa1m` value is valid for terminals 1-40.

The `telnet`, `emsa1m`, `seas`, and `none` are valid values for terminals 17 - 40.

Default:
Current value.

System Default:
vt320 -terminals 1-16
telnet-terminals 17-40

uimrd (optional)

Unsolicited messages. This parameter specifies whether to display the unsolicited messages assigned to this group.

Range:

yes
receive all

no
receive none

Default:
If *all* is specified—current *all* value
If *all* is not specified—current *uimrd* value.
If *type=emsa1m* is specified—*yes*

System Default:
no

Example

```
chg-trm:trm=13:type=ksr:baud=9600:uimrd=yes
chg-trm:trm=1:link=yes:sys=yes:db=yes
chg-trm:trm=17:all=yes
chg-trm:trm=22:type=none
chg-trm:trm=10:link=yes:card=yes:clk=yes
chg-trm:trm=1:type=ksr:gtt=yes
chg-trm:trm=17:logintmr=50
chg-trm:trm=17:pngtimeint=1000
chg-trm:trm=17:pngfailcnt=5
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The system requires that at least two terminals be configured as security administration terminals. If only two security administration terminals are configured, the value of the *type* parameter cannot be changed to a value that would make the terminal unusable (*printer* or *none*) because only one security administration terminal would remain.

2777 E2777 Cmd Rej: Cannot change TYPE as system requires 2 SA enabled terminals

The combined total line speed (baud rate) for all active terminal ports cannot exceed 168,000. This value allows for 16 terminal to be configured at 9600 bps each.

2381 E2381 Cmd Rej: Combined total baud rate for all ports cannot exceed 168K

If the `prty=none` parameter is specified, then the `type=vt320` parameter cannot be specified. A VT320 terminal does not support 7-bit data bytes and no parity. The number of data bits cannot be changed.

2142 E2142 Cmd Rej: TYPE = VT320 and PRTY=NONE combination not allowed

If the `prty=none` parameter is specified, then the `type=sccs` parameter cannot be specified.

2149 E2149 Cmd Rej: TYPE = SCCS and PRTY=NONE combination not allowed

For terminals 1 – 16, the `type=telnet` parameter cannot be specified.

2323 E2323 Cmd Rej: Terminals 1-16 cannot be set to TYPE=TELNET

For terminals 17 - 40, the value of the `type` parameter must be *telnet*, *seas*, *emsalm*, or *none*.

2320 E2320 Cmd Rej: TYPE can only be set to TELNET, SEAS, EMSALM or NONE

If the `type=telnet` parameter is specified, then the `baud`, `prty`, `sb`, and `fc` parameters cannot be specified.

2321 E2321 Cmd Rej: Communication Settings are not allowed on TELNET terminals

If the value of the `type` parameter is *telnet*, *seas*, or *emsalm*, and if the value of the `trm` parameter is 17-40, then an IPSM card must be equipped in the system. Parameters for these terminals cannot be changed unless an IPSM card has been added for the target terminal.

2329 E2329 Cmd Rej: IPSM card not equipped

 **Note:**

For one IPSM card, telnet terminals 17-24 are available. For two IPSM cards, telnet terminal IDs 17-32 are available. For three IPSM cards, telnet terminal IDs 17-40 are available. If an installed IPSM card is removed, the eight terminal IDs that were assigned to that card are no longer available. For example, if three IPSM cards are installed, and the second card that was installed is then removed, telnet terminal IDs 17-24 and 33-40 are available. To make the IDs consecutive again, the third card that was previously installed must be removed and re-installed. Then, its available terminal IDs change from 33-40 to 25-32. Use the `rtrv-trm` command to display the available telnet terminal IDs.

The terminal port must be inhibited (see the `inh-trm` command) before the `type`, `baud`, `prty`, `sb`, and `fc` parameters can be changed.

The `all`, `traf`, `link`, `sa`, `db`, `sys`, `uimrd`, and `pu` parameters can be changed on any terminal, including the one in use, regardless of the port status (inhibited or allowed).

2137 E2137 Cmd Rej: Port must be inhibited to change comm. attributes

The port cannot be removed from service (`rmv-trm`) when the `type`, `baud`, `prty`, `sb`, and `fc` parameters are being changed.

2352 E2352 Cmd Rej: Cannot perform change while telnet port in use

The `dural` parameter must be specified in the range of 0–995959 or with a value of 999999.

The hours portion of the `dural` parameter must be in the range 0–99.

2768 E2768 Cmd Rej: DURAL must be specified within 0..995959 or 999999

The seconds portion of the `dural` parameter must be in the range 0–59.

2273 E2273 Cmd Rej: Seconds out of range

The Terminal table is corrupt or cannot be found.

2138 E2138 Cmd Rej: Failed reading terminal table

The IP User Interface (Telnet) feature must be enabled and turned on before the `type=telnet` parameter (IDs 17-40) or the `type=emsalm` parameter (IDs 1-40) can be specified.

3451 E3451 Cmd Rej: Controlled Feature is not enabled

The minutes portion of the `dural` parameter must be in the range 0–59.

2254 E2254 Cmd Rej: Minutes out of range

A valid value must be specified or the `baud` parameter. Baud rates 38400, 57600, and 115200 are only valid when the OAMHC is used.

2139 E2139 Cmd Rej: Invalid BAUD value specified

The terminal state requested must be answered.

2143 E2143 Cmd Rej: The terminal state request was unanswered

The parity (`prty`) parameter must have a valid value assigned.

2140 E2140 Cmd Rej: Invalid PRTY value specified

The flow control (`fc`) parameter if specified must have a valid value assigned.

2141 E2141 Cmd Rej: Invalid FC value specified

The specified terminal must be inhibited before the `type=seas` parameter can be specified.

4615 E4615 Cmd Rej: SEAS Terminal Not Inhibited

If the specified terminal is a SEAS Terminal, then the SEAS output group cannot be turned off.

4518 E4518 Cmd Rej: SEAS output group cannot be turned OFF for SEAS terminal

If the SEAS Over IP feature is turned on, then an IPSM card must be provisioned at the location corresponding to the specified SEAS terminal.

4620 E4620 Cmd Rej: E5-IPSM or E5-ENET-B Card is not Present

The SEAS Over IP feature must be enabled before the `type=seas` parameter can be specified.

4614 E4614 Cmd Rej: SOIP Feature must be Enabled

The `type=seas` parameter cannot be specified if:

- The value of the `trm` parameter is 1 - 16.
- Specifying the parameter results in more than one SEAS terminal on an IPSM card.
- Specifying the parameter results in more than two SEAS terminals in the EAGLE.
- An IPSM card is not physically present in the corresponding location.
- An available (unconfigured) SEAS terminal does not exist in the SEASCFG table.

4477 E4477 Cmd Rej: Terminal cannot be changed to type SEAS

The IP User Interface feature must be turned on before the value of the `type` parameter can be `telnet`, `seas`, `emsalm`, or `none`.

2365 E2365 Cmd Rej: TELNET Feature must be activated first

The IPTERM table is corrupt or could not be found.

4619 E4619 Cmd Rej: Failed Reading IPTERM Table

The `type=telnet` parameter must be specified before the `logintmr` and `logouttmr` parameters can be specified.

4966 E4966 Cmd Rej: Parameter only valid for TELNET terminals

If the value specified for the `type` parameter is `seas` or `none`, then the `pngtimeint` and `pngfailcnt` parameters cannot be specified.

4973 E4973 Cmd Rej: Parameter only valid for TELNET and EMSALM terminals

The terminal must be in the Inhibited state before the `logintmr`, `logouttmr`, `pngtimeint`, and `pngfailcnt` parameters can be specified.

4976 E4976 Cmd Rej: Terminal must be inhibited before changing the parameter

Notes

Refer to *Maintenance Guide* for a list of unsolicited output messages that you might see for each output group.

This command cannot be entered when an upgrade is in progress.

If your terminal has the auto-wrap feature, you must disable the feature to use the terminal on the system.

To disable the informational message and temporary port lockout feature for a terminal, specify the `mxinv=0` parameter.

To prevent a terminal from being disabled, specify the `dural=0` parameter.

To make the lockout period for a terminal indefinite, specify the `dural=999999` parameter. When disabled, a terminal remains disabled until the port is inhibited (`inh-trm` command) and then allowed (`alw-trm` command).

Terminal idle time monitoring and auto-logout applies only if the terminal type is `vt320`, `ksr`, or `sccs`. The `chg-trm` command can be entered with a `tmout` parameter value for other terminal types, but it has no effect.

Using the terminal type of *none* conveys to the terminal processor that a particular port is not connected or is no longer in use. The terminal processor does not service output queues for a terminal port that is configured as `type=none`.

When the terminal type for a terminal is changed to `type=emsalm`, the value for all output group parameters is set to `yes`.

When the terminal type for a terminal is changed from `type=emsalm` to another type, the current value for all output groups is not changed. A command must be entered to change one or more output group values to another value.



Note:

Though the output groups are set to `yes`, terminals of type `emsalm` do not display any reports or any UIMs except "UIM 1083 system alive".

The number of data bits cannot be changed; it is set to 7.

Software flow control (XON and XOFF pacing), involves sending control codes between the system and the connected device.

Software flow control is recommended if the connected device is a printer. Software flow control is highly recommended if the connected device is a modem.

To connect a modem, specify the `type=vt320` parameter.

The `all` parameter cannot be specified in the command with the other message status parameters (`traf`, `link`, `sa`, `db`, `sys`, or `pu`). If the `all` parameter and other message status parameters are specified together in the command, the terminal is assigned the other specified message status parameters and the `all` parameter is ignored.

If a SEAS terminal is being removed, then a warning that states "Invalidating the Terminal data in SEASCFG table" appears.

If the SEAS output group is turned off for a SEAS terminal, then a message "SEAS Output Group is SET for SEAS Terminal *trm number*" appears.

Output

```
chg-trm:trm=2:all=yes
```

```
rlghncxa03w 04-05-07 11:11:28 EST EAGLE 31.5.0
CHG-TRM: MASP A - COMPLTD
```

```
;
```

Related Topics

- [act-echo](#)
- [canc-echo](#)
- [chg-trm](#)
- [dact-echo](#)
- [inh-trm](#)

- [rept-stat-trm](#)
- [rmv-trm](#)
- [rst-trm](#)
- [rtrv-trm](#)

4.1.152 chg-ttmap

Use this command to change a mapped SS7 message translation type (TT) for a given gateway linkset name. With this command you can change the identification of the type of allowed global title translation in the SS7 message before and after translation type mapping. For example, suppose you are mapping the translation type 001 (before TT mapping) to 238 (after TT mapping). You can use this command to change that mapping to 001 (before) to 254 (after).

Parameters

ett (mandatory)

Translation type before mapping. The identification of the type of global title translation in the SS7 message before translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range:

0 - 255

io (mandatory)

Incoming or outgoing. This parameter indicates whether the translation type mapping data provisioned for the gateway linkset is for SS7 messages received or sent on the linkset.

Range:

i
incoming

o
outgoing

lsn (mandatory)

Linkset name. The unique network identifier for the gateway linkset.

Range:

ayyyyyyyyy

1 alphabetic character followed by 9 alphanumeric characters

mtt (mandatory)

Mapped translation type. The identification of the type of global title translation in the SS7 message after translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range:

0 - 255

Example

```
chg-ttmap:lsn=nc001:io=o:ett=128:mtt=55
```

Dependencies

The Translation Type mapping table must be accessible.

2840 E2840 Cmd Rej: Failed reading tt map table

The linkset table must be accessible.

2122 E2122 Cmd Rej: Failed reading linkset table

The linkset must be defined.

2843 E2843 Cmd Rej: TT Mapping is not provisioned for this link set

Notes

None

Output

```
chg-ttmap:lsn=nc001:io=o:ett=128:mtt=55
```

```
rlghncxa03w 04-01-22 10:37:07 EST EAGLE 31.3.0  
CHG-TTMAP: MASP A - COMPLTD
```

```
TTMAP table for nc001 is (2 of 64) 3% full
```

```
;
```

Related Topics

- [dlt-ttmap](#)
- [ent-ttmap](#)
- [rtrv-ttmap](#)

4.1.153 chg-ttr-msg

Use this command to revise a Triggerless TCAP Relay message.

Parameters**msgn (mandatory)**

Message number. The number of the TTR message.

Range:

1 - 10

active (optional)

This parameter specifies whether the TTR message is sent to the network card for processing.

Range:

yes

The message is sent to the network card.

no

The message is not sent to the network card.

Default:

no

bcsm (optional)

Basic call state model. The value for the *EventTypeBCSM* field of the TTR message.

Range:

2 hexadecimal digits. Valid digits are *0-9, a-f, A-F*

Default:

No change to the current value

cdpadgts (optional)

Called party address digits. The SCCP CdPA digits for the IDP message.

Range:

1 - 15 hexadecimal digits. Valid digits are *0-9, a-f, A-F*

Default:

No change to the current value

cdpagt (optional)

Called party address global title. The SCCP CdPA GT for the IDP message.

Range:

0 - 15

Default:

No change to the current value

cdpagtnai (optional)

Called party address global title nature of address indicator. The SCCP CdPA GT NAI for the IDP message.

Range:

0 - 127

Default:

No change to the current value

cdpndgts (optional)

Called party number digits. The TCAP CdPN digits for the IDP message.

Range:

1 - 32 hexadecimal digits. Valid digits are *0-9, a-f, A-F*

Default:

No change to the current value

cdpnnai (optional)

Called Party Number Nature of Address Indicator. The value for TCAP CdPN NAI value for the IDP message.

Range:

0 - 127

Default:

No change to the current value

cgpndgts (optional)

Calling party address digits. The SCCP CgPA digits for the IDP message.

Range:

1 - 15 hexadecimal digits. Valid digits are 0-9, a-f, A-F

Default:

No change to the current value

cgpagt (optional)

Calling party address global title. The SCCP CgPA GT for the IDP message.

Range:

0 - 15

Default:

No change to the current value

cgpagnai (optional)

Calling party address global title nature of address indicator. The SCCP CgPA GT NAI for the IDP message.

Range:

0 - 127

Default:

No change to the current value

cgpndgts (optional)

Calling party number digits. The TCAP CgPN digits in the IDP message.

Range:

1- 32 hexadecimal digits, *none* .
Valid digits are 0-9, a-f, A-F
none -deletes the current digits

Default:

No change to the current value

cgpnnai (optional)

Calling party number nature of address indicator. The TCAP CgPN NAI in the IDP message.

Range:

0 - 127

Default:

No change to the current value

lacdgts (optional)

Location area code digits. The area code if the value is not provided in the CdPN.

Range:

1 - 6 hexadecimal digits. Valid digits are 0-9, a-f, A-F

Default:

No change to the current value

reset (optional)

This parameter resets all of the parameters to their default values.

Range:**yes**

Resets all message parameters to their default values

Default:

No change to the current value

sk (optional)

Service key. The service key for the IDP message.

Range:

8 hexadecimal digits. Valid digits are 0-9, a-f, A-F

Default:

No change to the current value

tcaptype (optional)

This parameter specifies whether the IDP message is Intelligent Network Application Protocol-based (INAP) or Camel Application Protocol-based (CAP).

Range:**inap**

INAP-based

cap

CAP-based

Default:

No change to the current value

Example

```
chg-ttr-  
msg:msgn=1:tcaptype=INAP:cdpnnai=4:cdpadgts=12457896abcd:cgpnnai=4
```

```
chg-ttr-  
msg:msgn=1:cdpnnai=2:cdpndgts=981123456:sk=00006b00:bcsm=02
```

Dependencies

The Prepaid IDP Query Relay feature must be enabled before this command can be entered.

4498 E4498 Cmd Rej: The Prepaid IDP Query Relay feature must be enabled

If the `tcaptype` parameter is specified, then the `cdpnnai` and the `cgpnnai` parameters must be specified.

4821 E4821 Cmd Rej: CDPNNAI and CGPNNAI must be specified with TCAPTYPE

The TSTMSG table is corrupt or cannot be found.

4819 E4819 Cmd Rej: Failure reading TSTMSG Table

If the `reset` parameter is specified, then no other parameters can be specified.

4953 E4953 Cmd Rej: RESET is mutually exclusive with any other parameter

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

Notes

None.

Output

```
chg-ttr-
msg:msgn=1:tcaptype=CAP:cdpnnai=4:cdpndgts=987654321:cgpnnai=4
```

```
tekelecstp 08-05-05 15:58:08 EST EAGLE 39.0.0
CHG-TTR-MSG: MASP A - COMPLTD
```

```
;
```

Related Topics

- [rtrv-ttr-msg](#)
- [tst-msg](#)

4.1.154 chg-ttropts

Use this command to enter Triggerless TCAP Relay (TTR)-specific options in the database. This command updates the TTROPTS table.



Note:

Values other than *none* that are entered for the `dlma`, `dlmb`, or `dlmc` parameters for the IDP Relay services (IDPRCDPN(X), IDPRCGPN) using this command will overwrite values entered for those parameters using the `chg-npp-serv` command.

Parameters



Note:

The options for the `on` and `off` parameters are described in the Notes section.

cddnotfndrsp (optional)

The system response for an IDP message processed by the IDPR/TTR service when the Called Party Number (CdPN) is not found in the RTDB.

Range:

relay

relay the message

connect

send a CONNECT message

continue

send a CONTINUE message

release

send a RELEASECALL message

Default:

release

cddra (optional)

The destination routing address (DRA) used in the CONNECT message generated by the INPRTG Service Action based on the CdPN RTDB lookup.

Range:

rdn

RN + DN

rn

RN

grn

GRN

rnasd

RN + ASD

asdrn

ASD + RN

rngrn

RN + GRN

grnrn
GRN + RN

ccrndn
CC + RN + DN

rnsaddn
RN + ASD + DN

asdrndn
ASD + RN + DN

ccrnasddn
CC + RN + ASD + DN

ccasdrndn
CC + ASD + RN + DN

asdrnccdn
ASD + RN + CC + DN

rnsdccdn
RN + ASD + CC + DN

rngrndn
RN + GRN + DN

grnrndn
GRN + RN + DN

ccrngrndn
CC + RN + GRN + DN

ccgrnrndn
CC + GRN + RN + DN

grnrnccdn
GRN + RN + CC + DN

rngrnccdn
RN + GRN + CC + DN

grndn
GRN + DN

ccgrndn
CC + GRN + DN

Default:
rndn

cddranai (optional)

The DRA nature of address indicator used in the CONNECT response generated by the INPRTG Service Action based on the CdPN RTDB lookup.

Range:*sub**unknown**natl**intl**ntwk***Default:***natl***cddranp (optional)**

The DRA numbering plan used in the CONNECT response generated by the INPRTG Service Action based on the CdPN RTDB lookup.

Range:*e164**x121**f69***Default:***e164***cdnoentityrsp (optional)**

The system response for an IDP message processed by the IDPR/TTR service when neither the RN nor SP entity is found in the CdPN RTDB.

Range:*relay*

relay the message

connect

send a CONNECT message

continue

send a CONTINUE message

release

send a RELEASECALL message

Default:*continue***cdrelcause (optional)**

The *cause* parameter value for the RELEASECALL message generated by the INPRTG Service Action based on the CdPN RTDB lookup.

Range:*1 - 127*

Default:

31

(not defined)

cdnrnrsp (optional)

The system response for an IDP message processed by the IDPR/TTR service when the CdPN is associated with an RN entity.

Range:

relay

relay the message

connect

send a CONNECT message

continue

send a CONTINUE message

release

send a RELEASECALL message

Default:

connect

cdsprrsp (optional)

The system response for an IDP message processed by the IDPR/TTR service when the CdPN is associated with an SP entity.

Range:

relay

relay the message

connect

send a CONNECT message

continue

send a CONTINUE message

release

send a RELEASECALL message

Default:

relay

cgdnotfndrsp (optional)

The system response for an IDP message processed by the IDPR/TTR service when the Calling Party Number (CgPN) is not found in the RTDB.

Range:

relay

relay the message

connect
send a CONNECT message

continue
send a CONTINUE message

release
send a RELEASECALL message

Default:
release

cgdra (optional)

The DRA used in the CONNECT response generated by the INPRTG Service Action based on the CGPN RTDB lookup.

Range:

rndn
RN + DN

rn
RN

grn
GRN

rnasd
RN + ASD

asdrn
ASD + RN

rngrn
RN + GRN

grnrn
GRN + RN

ccrndn
CC + RN + DN

rnasddn
RN + ASD + DN

asdrndn
ASD + RN + DN

ccrnasddn
CC + RN + ASD + DN

ccasdrndn
CC + ASD + RN + DN

asdrnccdn
ASD + RN + CC + DN

rnasdccd
RN + ASD + CC + DN

rngrnd
RN + GRN + DN

grnrnd
GRN + RN + DN

ccrngrnd
CC + RN + GRN + DN

ccgrnrnd
CC + GRN + RN + DN

grnrccd
GRN + RN + CC + DN

rngnrccd
RN + GRN + CC + DN

grnd
GRN + DN

ccgrnrnd
CC + GRN + DN

Default:
rnd

cgdranai (optional)

The NAI option used in the CONNECT response generated by the INPRTG Service Action based on the CgPN lookup.

Range:

sub

unknown

natl

intl

ntwk

Default:
natl

cgdranp (optional)

The DRA NP used in the CONNECT response generated by the INPRTG Service Action based on the CgPN lookup.

Range:

e164

x121

f69

Default:

e164

cgnoentityrsp (optional)

The system response for an IDP message processed by the IDPR/TTR service when neither the RN nor SP entity is found in the CgPN RTDB.

Range:

relay

relay the message

connect

send a CONNECT message

continue

send a CONTINUE message

release

send a RELEASECALL message

Default:

continue

cgnpdtype (optional)

CgPN database lookup type. The entity type that is considered a success when used for RTDB lookup.

Range:

sp

Service Provider

rn

Routing Number

rns

rn or *sp*

anymatch

rn, *sp*, or no match with any entity

always

Lookup is always considered successful

rnsdn

rn, *sp*, or *dn*

If the `cgnpdtype=anymatch` parameter is specified, then the value is also used as the RN for the outgoing CgPN.

Default:

rns

cgpaccck (optional)

CgPA country code check. This parameter specifies whether a DEFCC check is performed on the incoming CgPA.

Range:***always***

The DEFCC check is always performed.

nonintl

The DEFCC check is performed if the CdPN NAI is not 'International'.

off

The DEFCC check is not performed.

Default:

nonintl

cgpnskrtrg (optional)

This parameter specifies whether SK routing occurs if IDP A-Party routing fails.

Range:***no***

SK routing does not execute if IDP A-Party Routing fails.

yes

SK routing executes if IDP A-Party Routing fails.

Default:

No change to the current value

System Default:

no

cgre1cause (optional)

The *cause* parameter value in the RELEASECALL message generated by an INPRTG Service Action based on the CgPN RTDB lookup.

Range:

1 - 127

Default:

31 (not defined)

cgrnrsp (optional)

The system response for an IDP message processed by the IDPR/TTR service when the CgPN is associated with an RN entity.

Range:***relay***

relay the message

connect

send a CONNECT message

continue

send a CONTINUE message

release

send a RELEASECALL message

Default:

connect

cgsnai (optional)

Calling party number nature of address indicator. The CgPN NAI that is used during number conditioning.

Range:***incoming***

The incoming CgPN NAI is used.

intl

The CgPN NAI is set to 'International' (4).

natl

The CgPN NAI is set to 'National' (3).

unkn

The CgPN NAI is set to 'Unknown' (0).

A value of *incoming* must be specified before the *intl*, *natl*, *na1*, *na2*, *na3*, and *unkn* parameters in the *chg-npp-serv* command can be changed to non-default values for the IDPRCGPN service.

Default:

incoming

cgsprsp (optional)

The system response sent for an IDP message processed by the IDPR/TTR service when the CgPN is associated with an SP entity.

Range:***relay***

relay the message

connect

send a CONNECT message

continue

send a CONTINUE message

release

send a RELEASECALL message

Default:

relay

dfltrn (optional)

Default routing number. The default RN used when a value of *sp* or *rnsp* is specified for the *nptype* parameter, and the CdPN RTDB lookup returns entity type SP.

Range:

1-15 hexadecimal digits, *none*.
Valid digits are 0-9, a-f, A-F.
none —a default RN is not used

Default:

none

d1ma (optional)

Delimiter A. The first delimiter used to format the outgoing TCAP dialed number.

Range:

1-16 hexadecimal digits, *none*.
Valid digits are 0-9, a-f, A-F.

Default:

none

d1mb (optional)

Delimiter B. The second delimiter used to format the outgoing TCAP dialed number.

Range:

1-16 hexadecimal digits, *none*.
Valid digits are 0-9, a-f, A-F.

d1mc (optional)

Delimiter C. The third delimiter used to format the outgoing TCAP DN.

Range:

1-16 hexadecimal digits, *none*.
Valid digits are 0-9, a-f, A-F.

drafmt (optional)

DRA digit format. The format of the DRA digits.

Range:***grn***

The format is GRN.

grndn

The format is GRN+DN.

dngn

The format is DN+GRN.

ccgrndn

The format is CC+GRN+DN.

grnccdn

The format is GRN+CC+DN.

Default:
No change to the current value

System Default:
gn

dranai (optional)

DRA nature of address indicator. The DRA NAI that is used during number conditioning.

Range:
1 - 127

Default:
No change to the current value

System Default:
3 - NATL

map (optional)

Mapping direction. The mapping direction between the Type of Number (TON) and the Nature Of Address Indicator (NAI).

Range:

nai2ton
NAI mapping to TON

ton2nai
TON mapping to NAI

Default:
See the *Notes* section.

nai (optional)

Nature of Address Indicator. The NAI used in mapping.

Range:
0 - 127

Default:
See the *Notes* section.

nptype (optional)

Entity type for CdPN RTDB lookup. The entity type that is considered a success when used for RTDB lookup.

Range:

sp
Service provider

rn
Routing number

rns
rn or *sp*

anymatch
rn, *sp*, or no match with any entity

always
Lookup is always considered successful

rns
rn, *sp*, or *dn*

If the `nptype=anymatch` parameter is specified, then the value is also used as the RN for the outgoing CdPN.

Default:
rns

Use RN or SP as entity type for RTDB lookup

off (optional)

This parameter turns off the specified options. Up to 8 comma-separated unique options can be specified.

Range:

cdcnp

cgcn

mergein

on (optional)

This parameter turns on the specified options. Up to 8 comma-separated unique options can be specified.

Range:

cdcnp

cgcn

mergein

rnsfill (optional)

This parameter specifies whether the RN and SP entities are set to the value of the RN or SP digits from the RTDB when certain conditions are met.

Range:

off

If the `nptype` parameter has a value of *rns*, *anymatch*, or *always*, and the `dfiltrn=none` parameter is specified, then the RN entity is NOT set to the value of the SP digits from the RTDB. If the `nptype` parameter has a value of *rns*, *anymatch*, or *always*, then the SP entity is NOT set to the value of the RN digits from the RTDB.

on

If the `nptype` parameter has a value of *nosp*, *any*, or *all*, and the `dfltrn` parameter has a value of *none*, then the RN entity is set to the value of the SP digits from the RTDB. If the `nptype` parameter has a value of *nosp*, *anymatch*, or *always*, and the `spfill=on` parameter is specified, then the SP entity is set to the value of the RN digits from the RTDB.

Default:

No change to the current value

System Default:

off

snai (optional)

CdPN nature of address indicator. The CdPN NAI used during number conditioning.

Range:***incoming***

The incoming CdPN NAI is used.

intl

A CdPN NAI of 'International' (4) is used.

natl

A CdPN NAI of 'National' (3) is used.

unkn

A CdPN NAI of 'Unknown' (0) is used.

A value of *incoming* must be specified before the *intl*, *natl*, *nai1*, *nai2*, *nai3*, and *unkn* parameters in the `chg-npp-serv` command can be changed to non-default values for the IDPRCDPN(X) service.

Default:

incoming

spfill (optional)

This parameter specifies whether the SP entity type is populated if the value specified for the `dfltrn` or `grn` parameter is used for NPP processing.

Range:***off***

do not populate the SP entity type

on

populate the SP entity type

Default:

No change to the current value

System Default:

off

sporttype (optional)

Service Portability type. This parameter specifies whether Service Portability is performed for the associated feature.

The S-Port feature must be turned on before any change to the parameter will impact the associated feature. If Service Portability is performed, then the Service Portability prefix (RTDB 'GRN'entity id) is applied.

Range:***gsm***

apply Service Portability prefix for own-network GSM subscribers

is41

apply Service Portability prefix for own-network IS41 subscribers

all

apply Service Portability prefix for all own-network (IS41 and GSM) subscribers

none

Service Portability is not performed for the feature.

Default:

No change to the current value

System Default:

none

ton (optional)

Type of Number. The Type of Number used in mapping.

Range:

0 - 7

Default:

See the *Notes* section.

Example

```
chg-ttropts:nptype=always
chg-ttropts:snai=intl
chg-ttropts:cgnptype=sp
chg-ttropts:cgsnai=natl
chg-ttropts:dlma=1234567890
chg-ttropts:dlmb=1234567890123456
chg-ttropts:dlmc=1234567890abcdef
chg-ttropts:cgpaccck=always
chg-ttropts:dfltrn=123456789012345
chg-ttropts:cddra=rn:cdrelcause=10:cgdranp=e164:cdrnrsp=continue
chg-ttropts:cddra=grndn:on=cdcnp:off=cgcnp
chg-ttropts:nai=12:ton=7:map=nai2ton
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The Prepaid IDP Query Relay feature must be enabled before this command can be entered.

4498 E4498 Cmd Rej: The Prepaid IDP Query Relay feature must be enabled

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

The IDP A-Party Routing feature and the IDP SK Routing feature must be enabled before the `cgpnskrtg` parameter can be specified.

4735 E4735 Cmd Rej: Both IDP A-Party & SK Routing features must be enabled

If the new or existing value specified for the `drafrmt` parameter contains a country code (e.g., `ccgrndn`), then only a value of 4 can be specified for the `dranai` parameter. If the `dranai` parameter has a new or existing value that is not equal to 4, then the value that is specified for the `drafrmt` parameter cannot contain a country code.

4739 E4739 Cmd Rej: DRAFRMT contains CC so DRANAI must be 4 (INTL)

The S-Port feature must be enabled before the `sporttype` parameter can be specified.

4926 E4926 Cmd Rej: Service Portability feature must be enabled

The same option cannot be specified for the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

The `nai`, `ton`, and `map` parameters must be specified together in the command.

5428 E5428 Cmd Rej: NAI, TON, and MAP must be specified together

Notes

Definitions for the on/off options

- *cdcnp* —Specifies whether the *CutAndPaste* parameter is included in the CONNECT message generated by the INPRTG Service Action based on the CdPN RTDB lookup. The value for the *CutAndPaste* parameter is the length of the incoming DN in the IDP query if the DRA formatting option has a DN. If the option does not have a DN, the value is 0. The option has a default of OFF.
- *cgcnp* —Specifies whether the *CutAndPaste* parameter is included in the CONNECT message generated by the INPRTG Service Action based on the CgPN RTDB lookup. The value for the *CutAndPaste* parameter is the length of the incoming DN in the IDP query if the DRA formatting option has a DN. If the option does not have a DN, the value is 0. The option has a default of OFF.
- *Mergein* —When the mergein is ON, the selection of IDPRCDPN(X) NPP services is done from GT list of CSL table for all GTI values. If TTROPTS:MERGE_IN = OFF, IDPRCDPN(X) NPP services is fetched for NPP invocation from SKBCSM

list of CSL table. mergein in chg-ttropts represents MERGE_IN in rtrv-ttropts. MERGE_IN by default is OFF.

IDPR TON Mapping Default Values

If the `map`, `nai`, and `ton` parameters are not specified, then the TON and NAI values are associated as follows:

Table 4-18 TON2NAI Mapping Default Values

TON	NAI	
1	4	INTL
2	3	NATL
0	2	UNKN
All other values	2	-

Table 4-19 NAI2TON Mapping Default Values

NAI	TON	
4	1	INTL
3	2	NATL
2	0	UNKN
All other values	0	-

Output

```
chg-ttropts:nptype=sp
```

```
tekelecstp 08-05-05 13:34:22 EST EAGLE 39.0.0
CHG-TTROPTS: MASP A - COMPLTD
```

```
;
```

```
chg-ttropts:cgdra=rn:cdrelcause=10:cgdranp=e164:cdrnrsp=continue
```

```
tekelecstp 10-10-20 16:01:35 EST EAGLE 43.0.0
Command entered at terminal #4.
CHG-TTROPTS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [rtrv-ttropts](#)

4.1.155 chg-uaps

Use this command to change the UA parameter set.

Parameters**set (mandatory)**

UA parameter set to be changed.

Range:

1 - 9

Default:

No change to the current value

parm (optional)

Parameter number.

Range:

1 - 10

1—ASP SNM Options

2—ASP/AS Notification Options

3—UA Serviceability Options

4-10—Unused

Default:

No change to the current value

pvalue (optional)

If the `parm` parameter is specified, then this parameter specifies the numerical value that the `parm` parameter will be set to. Each parameter value is 32 bits (decimal 4294967295); not all 32 bits are used for each parameter. Only the values of the used bits are evaluated to determine the parameter value.

If the default setting for one bit is ON and you want to turn ON another bit in addition, specify the value that turns both bits ON. To turn OFF a bit that is ON and leave other bits ON, specify the value that turns ON just the bits that you want to be on. See the Notes section for this command for an explanation of the meanings of the bit settings.

Range:

0 - 4294967295

Enter a valid decimal or hexadecimal value shown in [Table 4-20](#) for the `pvalue` parameter to be used for the specified `parm` parameter.

Parameter (parm)	To Turn On Only Bit(s)	Decimal pvalue	Hexadecimal pvalue	System Default
1. ASP SNM Options	0	1	h'1	
Bit 0= Broadcast	6	64	h'40	Off
Bit 1= Response	0, 1	3	h'3	On
Bit 6 = Broadcast	0, 6	65	h'41	
	1, 6	66	h'42	

Parameter (parm)	To Turn On Only Bit(s)	Decimal pvalue	Hexadecima l pvalue	System Default
Congestion Status Change	0, 1, 6	67	h'43	
Bits 2-5 and 7-31= Unused				
2. ASP/AS Notification Options	1	h'1		
Bit 0= ASP ACTIVE	1	2	h'2	
Notifications	2	4	h'4	
Bit 1= ASP INACTIVE	0, 1	3	h'3	
Notifications	0, 2	5	h'5	
Bit 2 = ASP AS State Query	1, 2	6	h'6	
Bits 3-31 = Unused	0, 1, 2	7	h'7	Off
3. UA Serviceability Options	0	1	h'1	Off
Bit 0 = UA Heartbeats	1	2	h'2	Off
Bit 1 = UA Graceful Shutdown	0,1	3	h'3	Off
Bits 2-31 = Unused				
4. SCTP Payload Protocol Indicator Option	0	1	h'1	Off
Bit 0 = Payload Protocol Indicator				
Bits 1-31 = Unused				

Default:
No change to the current value

srcset (optional)
When specified, this source UAPS will be copied into the specified UAPS (set).

Range:
1 - 10

Default:

Empty

timer (optional)

Timer number within the UA parameter set.

Range:*1 - 10**1*—Unused*2*—False IP Connection Congestion Timer*3*—UA Heartbeat Period Timer*4*—UA Heartbeat Received Timer*5-10*—Unused**Default:**

No change to the current value

tvalue (optional)

The value given to a timer in milliseconds. Each timer value is 32 bits (decimal 4294967295).

Range:*0 - 60000*Timer 2—*0-30000*Timer 3—*100-60000*Timer 4—*100-10000*

If the value specified is greater than the maximum range of the timer, then the maximum value of the timer is used.

Default:

No change to the current value

System Default:Timer 2 -*3000*Timer 3 -*10000*Timer 4 -*5000***Example**

The following example copies UA parameter set 1 into UA parameter set 2.

```
chg-uaps:set=2:srcset=1
```

The following example sets the Timer 2 value to 30 milliseconds.

```
chg-uaps:set=1:timer=2:tvalue=30
```

The following example sets the UA parameter set 2 value to hexadecimal 7, which turns on bits 0, 1, and 2.

```
chg-uaps:set=1:parm=2:pvalue=h'7
```

The following example sets the Timer 2 value to 30 milliseconds, and sets the value for UA parameter set 1 to decimal 64, which turns OFF bits 0 and 1 and turns ON only bit 6.


```
chg-uaps:set=2:timer=2:tvalue=30:parm=1:pvalue=64
```

Dependencies

The `srcset` and `set` parameter values cannot be the same.

4024 E4024 Cmd Rej: SRCSET and SET cannot be equal

At least one of the `timer`, `parm`, and `srcset` optional parameters must be entered.

3761 E3761 Cmd Rej: At least one of TIMER, PARM, SRCSET must be entered

If the `srcset` parameter is specified, no other optional parameters can be entered in the command.

3746 E3746 Cmd Rej: No other optional parms can be entered with SRCSET

If the `parm` parameter is specified, the `pvalue` parameter must be specified.

3742 E3742 Cmd Rej: If PARM is specified, PVALUE must be specified

If the `timer` parameter is specified, the `tvalue` parameter must be specified.

3741 E3741 Cmd Rej: If TIMER is specified, TVALUE must be specified

Notes

There are 10 UA parameter sets. Each UA parameter set has 10 timers and 10 optional bit-mapped parameters. The bit-mapped parameter values control SNM and extended UA notification message behavior.

Timer 2 is the False IP Connection Congestion Timer, which controls the maximum amount of time (in milliseconds) that an association is allowed to remain congested before failing due to false connection congestion. This timer value is limited to 0-30,000 milliseconds by the IPGWx application. The default value is 3000 milliseconds. This timer is not supported on the IPSP application.

Timer 3 is the UA Heartbeat Period Timer, which controls the time (in milliseconds) between sending of BEAT messages by the NE. This timer value is limited to 100-60,000 milliseconds by the IPSP and IPGWx applications. The default value is 10,000 milliseconds.

Timer 4 is the UA Heartbeat Received Timer, which controls the timeout period for response BEAT ACK messages by the NE. This timer value is limited to 100-10,000 milliseconds by the IPSP and IPGWx applications. The default value is 5000 milliseconds.

The bit-mapped parameters contain the following flags, which are set by using the `pvalue` parameter to turn the bits on or off in each bit map:

- *Broadcast* —Controls broadcast phase SNM TFPs, TFRs and TFAs sent when a destination's status changes. If this flag is on (set to 1), SNM TFPs, TFRs, and TFAs will be broadcast to all associations and sockets assigned to routing keys associated with the destination's network and group code. The default is to enable all broadcast phase messages.
- *Response Method* —Sending a SNM TFC/UPU as a reply to a message received on an association or a socket for an unavailable destination. If this bit is on (set to 1), the SNM response message is sent. The default is to allow the response to be sent.
- *Broadcast Congestion Status Change* —Controls sending unsolicited congestion status changes. If this flag is on (set to 1) for an ASP, unsolicited congestion status messages are sent by the ASP when a destination's congestion status changes. This flag is

applicable only if, *ipgwabate* has been turned on with the `chg-sg-opts` command. The default is do not generate unsolicited congestion status changes.

- *ASP ACTIVE Notifications*—Controls sending ASP-Active notifications. If this flag is on (set to 1), the Secure Gateway will, when an ASP transitions to Active, send a Notify message to all inactive and active ASPs in the AS of status type "Other" and a newly defined status ID of "ASP Activation". The ASP Activation notification message will include the ASP ID of the ASP that activated, and is transmitted only if the ASP ID is present. This notification is an extension to RFC3332 and not implemented for M3UA Version 8 adapters. The default is do not send ASP Active Notifications.
- *ASP INACTIVE Notifications*—Controls sending ASP-Inactive notifications. If this flag is on (set to 1), the Secure Gateway will, when an ASP transitions to Inactive, send a Notify message to all inactive and active ASPs in the AS of status type "Other" and a newly defined status ID of "ASP Inactivation". The ASP Inactivation notification message will include the ASP ID of the ASP that inactivated and is transmitted only if the ASP ID is present. This notification is an extension to RFC3332 and not implemented for M3UA Version 8 adapters. The default is do not send ASP Inactive Notifications.
- *ASP AS State Query*—Controls sending ASP/AS State Notifications on request by ASP. If this flag is on (set to 1), the Secure Gateway will respond with ASP and AS state notifications if 1) the remote ASP sends ASP-UP or ASP-INACTIVE while the local ASP is in the ASP-INACTIVE state, or 2) the remote ASP sends ASP-ACTIVE while the local ASP is in the ASP-ACTIVE state. The default is do not send state notifications.
- *UA Heartbeats*—Controls sending UA Heartbeats on request by a connection. If this flag is on (set to 1), Heartbeat messages are transmitted in the ASP-DOWN, ASP-ACTIVE and ASP-INACTIVE States on connections from the Secure Gateway to the far end.
- *UA Graceful Shutdown*—Controls whether an association should be shutdown gracefully or not. If this flag is on (set to 1), then a graceful shutdown will occur when OPEN=NO is executed on the server side. Otherwise, the association will abort when OPEN=NO is executed.
- *SCTP Payload Protocol Indicator byte order option*—Indicates whether the SCTP Payload Protocol Indicator (PPI) in received/transmitted messages is in big endian or little endian byte format. If this flag is on (set to 1), then the PPI in received/transmitted messages is little endian. Otherwise, the PPI is in big endian byte format. This flag is implemented only on IPSP M2PA associations; all other association types ignore the flag.

Output

```
chg-uaps:set=2:srcset=1
```

```
rlghncxa03w 02-03-07 11:11:28 EST EAGLE 30.0.0
CHG-UAPS: MASP A - COMPLTD
;
```

Related Topics

- [rtrv-uaps](#)

4.1.156 chg-upgrade-config

Use this command to configure data used by the upgrade software during an upgrade of an in-service EAGLE from a source release to the target release.

Note:

This command stores data that will be used during the software upgrade. The command does not start the software upgrade.

Parameters

addtblcnv (optional)

This parameter sets the flag of the corresponding entry in the Table Conversion Definition table that forces the table to be converted during a software upgrade.

Caution:

The `addtblcnv` parameter should be used only under the direction of My Oracle Support (MOS).

Range:
0 - 1023

assignset (optional)

Assigned Set. The card specified by the `loc` parameter is assigned to the upgrade-grouping set specified by this parameter.

Range:
0
removes the card from the set list

2 - 10
assigns the card to that particular set list for the group corresponding to the card type

delttblcnv (optional)

This parameter clears the flag of the corresponding entry in the Table Conversion Definition table that forces the table to be converted during a software upgrade.

Caution:

The `delttblcnv` parameter should be used only under the direction of My Oracle Support (MOS).

Range:
0 - 1023

limsets (optional)

LIM Sets. This parameter sets the number of sets for link cards.

Range:

2 - 10

loc (optional)

Location. The location of a network card to be assigned to a set specified by the `assignset` parameter.

Range:

1101 - 1113, 1115, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318, 3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118

src (optional)

Source. The disk that physically contains the upgrade target release.

Range:***fixed***

The upgrade target release is on the fixed disk

remove

The upgrade target release is on the removable drive

srvsets (optional)

Service Sets. This parameter sets the number of sets for service cards.

Range:

2 - 10

threstype (optional)

Threshold type. The type of thresholding to be used during the upgrade.

Range:***set***

Network conversion is based on the defined sets of cards

Example

```
chg-upgrade-config:addtblcnv=327
```

```
chg-upgrade-config:deltblcnv=327
```

```
chg-upgrade-config:sak=vbjyapdpbtejb:src=fixed
```

```
chg-upgrade-config:threstype=set:srvsets=2:limsets=4
```

Dependencies

The `addtblcnv` and `deltblcnv` parameters cannot be specified together in the command.

4904 E4904 Cmd Rej: ADDTBLCNV and DELTBLCNV cannot be specified together.

One of the optional parameters must be specified in the command.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `srvsets` and `limsets` parameters cannot be specified unless the `threstype` is being changed to or has been changed to `set`.

5482 E5482 Cmd Rej: SRVSETS or LIMSETS not valid unless threstype = SET

The `loc` parameter is required when the `assignset` parameter is specified.

5483 E5483 Cmd Rej: LOC must be specified with ASSIGNSET

The value specified for the `assignset` parameter cannot be greater than the current value of `srvsets` or `limsets` for the specified card.

5484 E5484 Cmd Rej: ASSIGNSET value out of range for card group

The `chg-upgrade-config` command cannot be issued when SFAPP(P)->OAM sync is ON.

3637 E3637 Cmd Rej: Turn OFF SFAPP(P)->OAM sync before this command

This command cannot be entered when CAT2 IPSM to OAM syncing is in progress.

3652 E3652 Cmd Rej: IPSM to OAM SYNC in progress

Output

```
chg-upgrade-config:adtblcnv=327
```

```
rlghncxa03w 07-03-13 08:15:45 EST EAGLE 37.5.0
Command Completed.
```

```
;
```

Related Topics

- [act-upgrade](#)
- [rtrv-upgrade-config](#)

4.1.157 chg-user

Use this command to change user access to commands, change user ID's, and change passwords.

Parameters



Note:

All `loc (X)` parameters consist of a configurable command class name (`ayy`), and indicator (`-yes` or `-no`) to specify whether the command class is allowed. A value of `ofayy=yes` indicates that the value is allowed. A value of `ofayy=no` indicates that the value is not allowed.

uid (mandatory)

User ID

Range:*azzzzzzzzzzzzzzz*

1 alphabetic character followed by up to 15 alphanumeric characters

a11 (optional)

Specifies whether or not the user ID is assigned all non-configurable command classes (LINK, SA, SYS, PU, DB, DBG, LNP).

Range:*yes**no***Default:**

No change to the current value

cc1 (optional)

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:*ayy*Specify the parameter value in the format *ayy-no* or *ayy-yes* .**cc2 (optional)**

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:*ayy*Specify the parameter value in the format *ayy-no* or *ayy-yes* .**cc3 (optional)**

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:*ayy*Specify the parameter value in the format *ayy-no* or *ayy-yes* .**cc4 (optional)**

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:*ayy*Specify the parameter value in the format *ayy-no* or *ayy-yes* .**cc5 (optional)**

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:*ayy*Specify the parameter value in the format *ayy-no* or *ayy-yes* .

cc6 (optional)

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:

ayy

Specify the parameter value in the format *ayy-no* or *ayy-yes* .

cc7 (optional)

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:

ayy

Specify the parameter value in the format *ayy-no* or *ayy-yes* .

cc8 (optional)

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:

ayy

Specify the parameter value in the format *ayy-no* or *ayy-yes* .

db (optional)

Access to all commands in command class Database Administration.

Range:

yes

no

Default:

No change to the current value

dbg (optional)

Access to all commands in command class Debug.

Range:

yes

no

Default:

No change to the current value

link (optional)

Access to all commands in command class Link Maintenance.

Range:

yes

no

Default:
No change to the current value

nuid (optional)
New user ID

Range:
azzzzzzzzzzzzzzz 1 alphabetic character followed by up to 15 alphanumeric characters

Default:
No change to the current value

page (optional)
The maximum age of the password, in days. The STP automatically prompts the user for a new password at login if the user's password is older than the value specified for the `page` parameter.

Range:
0 - 999

Default:
No change to the current value

pid (optional)
Password ID. Required only if changing the password of a user.

Range:

yes

no

Default:
No change to the current value

pu (optional)
Access to all commands in command class Program Update.

Range:

yes

no

Default:
No change to the current value

revoke (optional)
Revoke the user ID. The system rejects login attempts for a revoked user ID.

Range:

yes

no

Default:

No change to the current value

rstls1 (optional)

Reset the user ID. Use this command to reset the last successful login date, for this user ID, to the current date. If the user ID has been prevented login for non-use, use the `rstls1=yes` parameter to allow the user ID access again.

Range:

yes

no

Default:

No change to the current value

sa (optional)

Access to all commands in command class Security Administration.

Range:

yes

no

Default:

No change to the current value

sys (optional)

Access to all commands in command class System Maintenance.

Range:

yes

no

Default:

No change to the current value

uout (optional)

User ID aging interval. The number of successive days a user ID can go unused (that is, no successful login) before the system denies login of that user ID.

Range:

0 - 999

Default:

The value specified for the `uout` parameter on the `chg-secu-dflt` command

Example

```
chg-user:uid=john:nuid=johnmayer
```

```
chg-user:uid=john:nuid=john*mayer
```

```
chg-user:uid=john:db=yes
```

```
chg-user:uid=user123:cc1=dab-no:cc2=krb=yes
```

Dependencies

Passwords cannot be created or modified from a telnet terminal (terminal IDs 17-40) unless the OA&M IP Security Enhancements feature is turned on.

2723 E2723 Cmd Rej: Password operations not allowed on a non-secure terminal

Changes to a user ID cannot be made while that user is logged on the system.

2265 E2265 Cmd Rej: User currently logged on

The `revoke=yes` parameter cannot be specified for a user ID with system administration authorization.

2759 E2759 Cmd Rej: Revocation of security admin userID not allowed

The Command Class Management feature must be enabled before a configurable command class name can be specified in the `cc1 - cc8` parameters.

2246 E2246 Cmd Rej: Command Class Management feature must be enabled

The UserID table must be accessible.

2196 E2196 Cmd Rej: Failed reading the user identification table

The Password table must be accessible.

2756 E2756 Cmd Rej: Failed reading the password table

The CCCNAMES table must be accessible.

2598 E2598 Cmd Rej: Cccnames table must be accessible

The values specified in the `cc1 - cc8` parameters must be valid default (`u01 - u32`) or provisioned configurable command class names.

2266 E2266 Cmd Rej: Class name is not an existing configurable command class

Notes

When the `pid=yes` parameter is specified, the system issues a separate prompt for this password and disables character echo at the terminal so that the entered password is not displayed on the screen. After the password has been entered, the system issues a second prompt, and the password must be entered again. This feature ensures that no typing mistakes were made on the first entry. The password must adhere to all password provisioning rules as established by the `chg-secu-dflt` command. These rules are displayed on the screen when the password prompt is presented.

The current password is not required when assigning a new password.

Use the following rules for changing passwords:

- A new password cannot contain more than 20 characters.
- A new password must contain at least the number of characters that is specified in the `minlen` parameter of the `chg-secu-dflt` command.
- A new password must contain at least the number of alphabetic, numeric, and punctuation characters specified in the `chg-secu-dflt` command.

A new password cannot contain the associated user ID.

As a default, the command class Basic is assigned to all users. If no other command class is assigned, the user still has access to commands in the Basic class.

Up to 8 configurable command class name parameters can be specified in one command. Additional commands can be entered to assign user access for more than 8 names. To assign user access for all 32 available configurable command class names, you could enter four commands with 8 names specified in each command.

Output

```
chg-user:uid=john:nuid=johnmayer

      rlgncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
      CHG-USER: MASP A - COMPLTD
;

chg-user:uid=test:pid=yes

tklc1121003 21-06-24 15:16:24 EST  EAGLE 47.0.0.0.0
      New password must contain:
      - between 8 and 20 characters
      - at least 8 alphabetic character(s) ('a'-'z')
      - at least 1 numeric character(s) ('0'-'9')
      - at least 1 punctuation character(s) (e.g. $%#@)
      New password must:
      - be unique from the old password
      - be unique from the last 8 historical password(s)
      - not reuse more than 4 character(s) from the old password
;

tklc1121003 21-06-24 15:16:34 EST  EAGLE 47.0.0.0.0
      CHG-USER: MASP A - COMPLTD
;
```

Related Topics

- [act-user](#)
- [chg-pid](#)
- [dact-user](#)
- [dlt-user](#)
- [ent-user](#)
- [login](#)
- [logout](#)
- [rept-stat-user](#)
- [rtrv-secu-user](#)
- [rtrv-user](#)

4.1.158 chg-vflx-cd

Use this command to revise the call decision criteria. This command updates the Call Decision table. The V-Flex feature must be enabled before this command can be entered.

Parameters

cdn (mandatory)

Call decision name. The name of an entry in the Call Decision table.

Range:

ayyy

1 alphabetic character followed by 3 alphanumeric characters

ncdn (optional)

New call decision name. A new name for an entry in the Call Decision table.

Range:

ayyy

1 alphabetic character followed by 3 alphanumeric characters

Default:

No change to the current value

nrndx (optional)

New routing number index. A new routing number index associated with a call decision entry.

Range:

0 - 9

Default:

No change to the current value

nvmdig (optional)

New voice mail number or voice mail prefix digits. A new voice mail number or voice mail digits associated with a call decision entry.

Range:

1 - 15 hexadecimal digits. Valid digits are *0-9, A-F, a-f*

Default:

No change to the current value

Example

The following command specifies a new routing number index.

```
chg-vflx-cd:cdn=cdn1:nrndx=7
```

The following command specifies a new call decision entry name and new routing number index.

```
chg-vflx-cd:cdn=cdn1:ncdn=cdn3:nrndx=3
```

The following command specifies a new call decision entry name.

```
chg-vflx-cd:cdn=cdn3:ncdn=cdn5
```

The following command specifies a new voice mail number or voice mail prefix digits.
chg-vflx-cd:cdn=cdn1:nvmdig=123456

Dependencies

The value specified for the `cdn` parameter cannot be a reserved word, such as `none`.

3040 E3040 Cmd Rej: <string> cannot be used in this command

At least one parameter value must be different from the values provisioned for the table entry.

3827 E3827 Cmd Rej: No change requested

The Call Decision table is corrupt or cannot be found.

4095 E4095 Cmd Rej: Failed reading Call Decision table

The value specified for the `cdn` parameter must already exist in the Call Decision table.

4338 E4338 Cmd Rej: CDN does not exist in the database

The `ncdn`, `nrnid`, or `nvmdig` parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The V-Flex feature must be enabled before this command can be entered.

4641 E4641 Cmd Rej: VFLEX feature must be enabled

The value specified for the `ncdn` parameter cannot already exist in the Call Decision table.

4341 E4341 Cmd Rej: (N)CDN already exists in the database

The value specified for the `nvmdig` parameter cannot already exist in the Call Decision table with the same `dnstat`, `rdi`, and `bcap` values.

4649 E4649 Cmd Rej: Entry with RDI, DNSTAT, BCAP, (N)VMDIG already exists

The value specified for the `nvmdig` parameter cannot differ from a value that already exists in the Call Decision table by only the value of the `dnstat` parameter. The values specified for the `rdi` and `bcap` parameters must also differ.

4656 E4656 Cmd Rej: Similar entry exists with different DNSTAT value

Output

```
chg-vflx-cd:cdn=cdn1:ncdn=cdn3:nrnid=3
```

```
rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0  
CHG-VFLX-CD: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-vflx-cd](#)
- [ent-vflx-cd](#)
- [rtrv-vflx-cd](#)

4.1.159 chg-vflx-opts

Use this command to provision the data that is used to condition the DN in an incoming MSU. This command updates the VFLXOPTS table. The V-Flex feature must be enabled before this command can be entered.

Parameters

 **Note:**

The nature of address indicator parameters (`dranaiv` or `drnai`) can be specified using a mnemonic or an explicit value. Either the mnemonic or the explicit value can be specified; however, both values cannot be specified at the same time for the same parameter. [Table A-5](#) shows the mapping between the `dranaiv` and `drnai` parameter values.

 **Note:**

The numbering plan parameters (`dranpv` or `dranp`) can be specified using a mnemonic or an explicit value. Either the mnemonic or the explicit value can be specified; however, both values cannot be specified at the same time for the same parameter. [Table A-6](#) shows the mapping between the `dranaiv` and the `drnai` parameter values.

dra (optional)

Destination routing address. This parameter specifies the destination routing address in the "CONNECT" response.

Range:

rn
Routing number

rndn
RN + DN

ccrndn
CC + RN + DN

Default:

No change to current value.

System Default:

rn

dranai (optional)

Nature of address indicator. The nature of address indicator for the destination routing address.

Range:*sub**unknown**natl**intl**ntwk***Default:**

Current value

dranaiv (optional)

The nature of address indicator value for the destination routing address.

Range:

0 - 127

dranp (optional)

The numbering plan for the destination routing address.

Range:*e164**x121**f69***Default:**

No change to the current value

dranpv (optional)

This parameter specifies the numbering plan value for the destination routing address.

Range:

0 - 7

Default:

No change to the current value

nequeryonly (optional)

This parameter specifies whether the Call Decision table is searched after RTDB lookup.

Range:*off*

The table is not searched.

on

The table is searched.

Default:

No change to the current value.

netype (optional)

This parameter specifies the network entity type that is used for RTDB lookup.

Range:

vmsid
voice mail server ID

sprn
signaling point routing number

grn
generic routing number

Default:

No change to the current value.

System Default:

vmsid

Example

This example specifies a new numbering plan and nature of address indicator:

```
chg-vflx-opts:dranai=sub:dranp=e164
```

This example searches the Call Decision and VMSID tables and uses the *vmsid* network entity before RTDB lookup:

```
chg-vflx-opts:nequeryonly=on:netype=vmsid
```

This example specifies a new destination routing address:

```
chg-vflx-opts:dra=rn
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `dranp` and `dranpv` parameters cannot be specified together in the command.

3935 E3935 Cmd Rej: DRANP and DRANPV must not be specified together

The `dranai` and `dranaiv` parameters cannot be specified together in the command.

3936 E3936 Cmd Rej: DRANAI and DRANAIV must not be specified together

The V-Flex Options table is corrupt or cannot be found by the system.

4710 E4710 Cmd Rej: Unable to read VFLEX Options Table

The V-Flex feature must be enabled before this command can be entered.

4641 E4641 Cmd Rej: VFLEX feature must be enabled

The `nequeryonly=on` parameter must be specified before the `netype` parameter can be specified.

4711 E4711 Cmd Rej: NEQUERYONLY option must be ON

Output

```
chg-vflx-opts:dra=rn:dranp=e164:dranai=intl
```

```
tekelecstp 08-05-11 11:34:04 EST EAGLE 39.0.0
CHG-VFLX-OPTS: MASP A - COMPLTD
;
```

Related Topics

- [rtrv-vflx-opts](#)

4.1.160 chg-vflx-rn

Use this command to revise the voice mail routing numbers. This command updates the Routing Number table. The V-Flex feature must be enabled before this command can be entered.

Parameters

rnname (mandatory)

Routing number name. The name associated with a voice mail routing number.

Range:

ayyyyyyy

1 alphabetic character followed by 7 alphanumeric characters

nrn (optional)

New routing number. A new voice mail routing number.

Range:

1-15 digits. Valid digits are 0-9, A-F, a-f

Default:

No change to the current value

nrnname (optional)

New routing number name. The new name associated with a voice mail routing number.

Range:

ayyyyyyy

1 alphabetic character followed by 7 alphanumeric characters.

Default:

No change to the current value

Example

This example changes the name of the routing number.

```
chg-vflx-rn:rnname=rn01:nrnname=rn04
```

This example changes the routing number digits for a specified routing number name.

```
chg-vflx-rn:rnname=rn01:nrn=122345BC8
```

This example changes the routing number digits and the routing number name.

```
chg-vflx-rn:rnname=rn01:nrn=1223EAB68:nrnname=rn03
```

Dependencies

The Routing Number table is corrupt or cannot be found by the system.

4642 E4642 Cmd Rej: Unable to read Routing Number table

The value specified for the `rnname` parameter must already exist in the Routing Number table.

4646 E4646 Cmd Rej: RNNAME doesn't exist in the database

The value specified for the `nrn` parameter cannot already exist in the Routing Number table.

4645 E4645 Cmd Rej: (N)RN already exists in the database

The V-Flex feature must be enabled before this command can be entered.

4641 E4641 Cmd Rej: VFLEX feature must be enabled

The value specified for the `nrnname` parameter cannot already exist in the Routing Number table.

4644 E4644 Cmd Rej: (N)RNNAME already exists in the database

The `nrn` or `nrnname` parameter must be specified in the command.

2136 E2136 Cmd Rej: At least one optional parameter is required

The value specified for the `nrnname` parameter cannot be a reserved word, such as `none`.

3040 E3040 Cmd Rej: <string> cannot be used in this command

At least one parameter value must be different from the values provisioned for the table entry.

3827 E3827 Cmd Rej: No change requested

Output

```
chg-vflx-rn:rnname=rn01:nrn=122345CE8:nrnname=rn02
```

```
rlghncxa03w 08-05-07 11:43:04 EST EAGLE 39.0.0
CHG-VFLX-RN: MASP A - COMPLTD
;
```

Related Topics

- [dlt-vflx-rn](#)
- [ent-vflx-rn](#)
- [rtrv-vflx-rn](#)

4.1.161 chg-vflx-vmsid

Use this command to revise the routing numbers that are associated with a VMS ID. This command updates the VMSID table. The V-Flex feature must be enabled before this command can be entered.

Parameters

id (mandatory)

The identification of the voice mail server.

Range:

1 - 15 digits, *dflt*

Valid digits are 0-9, A-F, a-f.

dflt—default set of routing numbers that is used when a query is received with an invalid MSISDN or an MSISDN that is not found in the RTDB.

nidx0 (optional)

A new routing number name for VMRN index 0.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

none—deletes the routing number name associated with an index

Default:

No change to the current value

nidx1 (optional)

A new routing number name for VMRN index 1.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

none—deletes the routing number name associated with an index

Default:

No change to the current value

nidx2 (optional)

A new routing number name for VMRN index 2.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

none—deletes the routing number name associated with an index

Default:

No change to the current value

nidx3 (optional)

A new routing number name for VMRN index 3.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters
none—deletes the routing number name associated with the index

Default:

No change to the current value

nidx4 (optional)

A new routing number name for VMRN index 4.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters
none—deletes the routing number name associated with the index

Default:

No change to the current value

nidx5 (optional)

A new routing number name for VMRN index 5.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters
none—deletes the routing number name associated with the index

Default:

No change to the current value

nidx6 (optional)

A new routing number name for VMRN index 6.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters
none—deletes the routing number name associated with the index

Default:

No change to the current value

nidx7 (optional)

A new routing number name for VMRN index 7.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters
none—deletes the routing number name associated with an index

Default:

No change to the current value

nidx8 (optional)

A new routing number name for VMRN index 8.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

none—deletes the routing number name associated with an index**Default:**

No change to the current value

nidx9 (optional)

A new routing number name for VMRN index 9.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

none—deletes the routing number name associated with an index**Default:**

No change to the current value

Example

The following example updates the specified VMS ID with a new routing number name for index 5. It also removes the routing number name associated with index 1.

```
chg-vflx-vmsid:id=1234ae5:nidx1=none:nidx5=rname1
```

Dependencies

The V-Flex feature must be enabled before this command can be entered.

4641 E4641 Cmd Rej: VFLEX feature must be enabled

The value specified for the `id` parameter must already exist in the VMSID table.

4661 E4661 Cmd Rej: VMS ID does not exist in the database

The routing number name of the entry specified by the `id` parameter must already exist in the Routing Number table.

4665 E4665 Cmd Rej: <Specified RN Name> does not exist in the Routing Number table

At least one of the optional parameters must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The VMSID table is corrupt or cannot be found by the system.

4663 E4663 Cmd Rej: Failed reading VMSID table

The Routing Number table is corrupt or cannot be found by the system.

4642 E4642 Cmd Rej: Unable to read Routing Number table

The GTT DBMM table is corrupt or cannot be found by the system.

3120 E3120 Cmd Rej: Failed Reading GTT DBMM table

At least one parameter value must be different from the values provisioned for the table entry.

3827 E3827 Cmd Rej: No change requested

The value specified for the `rname` parameter must already exist in the Routing Number table.

4646 E4646 Cmd Rej: RNNAME doesn't exist in the database

Output

```
chg-vflx-vmsid:id=1234ae5:nidx1=none:nidx5=rname1
```

```
rlghncxa03w 08-05-07 11:43:04 EST EAGLE 39.0.0  
CHG-VFLX-VMSID: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-vflx-vmsid](#)
- [ent-vflx-vmsid](#)
- [rtrv-vflx-vmsid](#)

4.1.162 chg-vlr-prof

Use this command to change a Visitor Location Register (VLR) Profile for a mobile subscriber. A VLR-Profile entry helps in getting information required to locate the user while roaming and is subsequently used in VLR-ROAM table.

Parameters

vlr (mandatory)

VLR Number: Hexadecimal digit GT Number with variable length (1 to 16).

Range:

Hexadecimal digit string 1 to 16 digits

filter (optional)

Determines the category in which the number falls into.

Range:

whitelist

blacklist

graylist

Default:

graylist

ageofloc (optional)

Determines whether the duration at which the location was last updated must be taken into consideration.

Range:

yes

no

Default:

no

lastact (optional)

Determines whether last user activity must be taken into consideration.

Range:

yes

no

Default:

no

imeirtrv (optional)

Determines whether the VLR challenge by the IMEI is enabled for the given profile entry's last user activity has to be taken into consideration.

Range:

yes

no

Default:

no

Example

```
chg-vlr-prof:vlr=4234:filter=blacklist
chg-vlr-prof:vlr=4234:ageofloc=no:lastact=yes
chg-vlr-prof:vlr=4234:imeirtrv=yes
```

Dependencies

VLR_PROF table must be accessible.

3604 E3604 Failure reading VLR Profile Table

VLR_DBMM table must be accessible.

3610 E3610 Failure reading VLR_DBMM Table

OLDVLR and NEWVLR parameter length must be in the range 1 to 5 digits as per current restriction.

3603 E3603 VLR length is out of range. Range: 1...5

OLDVLR or NEWVLR parameter must be existing in VLR-PROF table

3607 E3607 No entry found for entered VLR in VLR profile tbl

At least one of the optional parameter is mandatory to be specified.

2136 E2136 At least one optional parameter is required

If an entry is referenced in VLR-ROAMING table, then it cannot be updated.

E3609 Cmd Rej: A reference of this entry exists in VLR roaming tbl.

Output

```
chg-vlr-prof:vlr=9234:ageofloc=no:lastact=yes

tekelecstp 17-11-23 14:08:49 MST EAGLE 46.5.1.5.0-73.2.0
  chg-vlr-prof:vlr=9234:ageofloc=no:lastact=yes
  Command entered at terminal #17.
;

tekelecstp 17-11-23 14:08:49 MST EAGLE 46.5.1.5.0-73.2.0
CHG-VLR-PROF: MASP A - Cannot access standby fixed disk.
CHG-VLR-PROF: MASP A - Simplex database update.
Command Accepted - Processing

VLR-PROF table is (4 of 500) 1% full.

;
tekelecstp 17-11-23 14:08:49 MST EAGLE 46.5.1.5.0-73.2.0
CHG-VLR-PROF: MASP A - COMPLTD
;
Command Executed
```

The following example explains E3609:

```
chg-vlr-prof:vlr=124:filter=blacklist
```

E3609 Cmd Rej: A reference of this entry exists in VLR roaming tbl

```
tekelecstp 17-11-27 13:36:07 MST EAGLE 46.5.1.5.0-73.2.0
  chg-vlr-prof:vlr=124:filter=blacklist
  Command entered at terminal #2.
;

tekelecstp 17-11-27 13:36:07 MST EAGLE 46.5.1.5.0-73.2.0
CHG-VLR-PROF: MASP A - Cannot access standby fixed disk.
CHG-VLR-PROF: MASP A - Simplex database update.
CHG-VLR-PROF: MASP A - Command Aborted
;
```

Related Topics

- [dlt-vlr-prof](#)
- [ent-vlr-prof](#)
- [rtrv-vlr-prof](#)

4.1.163 chg-vlr-roaming

Use this command to change a Visitor Location Register (VLR) roaming entry for a mobile subscriber. A VLR-Roaming entry uses existing entries for both new as well as old entries from vlr-prof table.

Parameters

oldv1r (mandatory)

VLR Number from which mobile subscriber has moved, hexadecimal digit GT number with variable length (1 to 16).

Range:

Hexadecimal digit string 1 to 16 digits

newv1r (mandatory)

VLR Number to which mobile subscriber has moved, hexadecimal digit GT number with variable length (1 to 16).

Range:

Hexadecimal digit string 1 to 16 digits

time (mandatory)

Duration for which the roaming must occur. Time is in minutes.

Range:

1-1440

Example

```
chg-vlr-roaming:oldv1r=1234:newv1r=56545:time=20
```

Dependencies

VLR_PROF table must be accessible.

3604 E3604 Failure reading VLR Profile Table

VLR_DBMM table must be accessible.

3610 E3610 Failure reading VLR DBMM Table

VLR_ROAM table must be accessible.

3602 E3602 Failure reading VLR Roaming Table

OLDVLR and NEWVLR parameter length must be in the range 1 to 5 digits as per current restriction.

3603 E3603 VLR length is out of range. Range: 1...5

OLDVLR or NEWVLR parameter must be existing in VLR-PROF table

3607 E3607 No entry found for entered VLR in VLR profile tbl

The entry should be existing in VLR_ROAM table

3601 E3601 OLD and NEW VLR combination does not exist.

Output

```
chg-vlr-roaming:oldv1r=1234:newv1r=56545:time=20
```

```
tekelecstp 17-11-23 16:23:44 MST EAGLE 46.5.1.5.0-73.2.0
  chg-vlr-roaming:oldv1r=1234:newv1r=56545:time=20
```

```
Command entered at terminal #17.  
;  
  
tekelecstp 17-11-23 16:23:44 MST EAGLE 46.5.1.5.0-73.2.0  
CHG-VLR-ROAMING: MASP A - Cannot access standby fixed disk.  
CHG-VLR-ROAMING: MASP A - Simplex database update.  
Command Accepted - Processing  
  
VLR-ROAMING table is (1 of 1000) 1% full.  
  
;  
  
tekelecstp 17-11-23 16:23:44 MST EAGLE 46.5.1.5.0-73.2.0  
CHG-VLR-ROAMING: MASP A - COMPLTD  
  
;
```

Related Topics

- [dlt-vlr-roaming](#)
- [ent-vlr-roaming](#)
- [rtrv-vlr-roaming](#)

4.1.164 chk-unref-ent

Use this command to check for unreferenced entities in the STP gateway screening entity sets. Unreferenced entities are those entities not referenced by another entity using the next screening function identifier and next screening reference combination, or using the linkset screening reference.

Parameters

aftpc (optional)

This parameter specifies whether to audit the affected PC/SSN entity set.

Range:

yes

no

Default:

no

a11 (optional)

This parameter specifies whether to audit all of the entity sets.

Range:

yes

no

Default:

no

blkdpc (optional)

This parameter specifies whether to audit the blocked DPC entity set.

Range:

yes

no

Default:

no

blkopc (optional)

This parameter specifies whether to audit the blocked OPC entity set.

Range:

yes

no

Default:

no

cdpa (optional)

This parameter specifies whether to audit the allowed CDPA entity set.

Range:

yes

no

Default:

no

cgpa (optional)

This parameter specifies whether to audit the allowed CGPA entity set.

Range:

yes

no

Default:

no

destfld (optional)

This parameter specifies whether to audit the affected DESTFLD entity set.

Range:

yes

no

Default:

no

dpc (optional)

This parameter specifies whether to audit the allowed DPC entity set.

Range:

yes

no

Default:

no

isup (optional)

This parameter specifies whether to audit the ISUP message type entity set.

Range:

yes

no

Default:

no

opc (optional)

This parameter specifies whether to audit the allowed OPC entity set.

Range:

yes

no

Default:

no

sio (optional)

This parameter specifies whether to audit the allowed SIO entity set.

Range:

yes

no

Default:

no

tt (optional)

This parameter specifies whether to audit the allowed TT entity set.

Range:

yes

no**Default:***no***Example**

chk-unref-ent:opc=yes:dpc=yes:sio=yes

chk-unref-ent:all=yes

chk-unref-ent:all=yes:blkopc=no:blkdpc=no

Dependencies

At least one entity set name must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The Gateway Screening (GWS) database must be accessible.

2926 E2926 Cmd Rej: A problem occurred while trying to access the GWS database

Notes

None

Output

chk-unref-ent:opc=yes:dpc=yes:sio=yes

```

rlghncxa03w 04-01-18 08:29:15 EST  EAGLE 31.3.0
ENTITY          UNREFERENCED
TYPE            ENTITIES
-----
OPC             <NONE>
DPC             DPC1
DPC             DPC2
SIO             <NONE>
;

```

chk-unref-ent:all=yes

```

rlghncxa03w 04-01-18 08:29:15 EST  EAGLE 31.3.0
ENTITY          UNREFERENCED
TYPE            ENTITIES
-----
OPC             <NONE>
DPC             dpc1
                dpc2
BLKOPC          <NONE>
BLKDPC          <NONE>
SIO             <NONE>
CGPA            <NONE>
CDPA            <NONE>

```

```

TT          tt0-1
            tt-05
DESTFLD    <NONE>
AFTPC      <NONE>
ISUP       <NONE>
;

chk-unref-ent:all=yes:blkopc=no:blkdpc=no

```

```

rlghncxa03w 04-01-18 08:29:15 EST  EAGLE 31.3.0
ENTITY      UNREFERENCED
TYPE       ENTITIES
-----
OPC        <NONE>
DPC        dpc1
           dpc2
SIO        <NONE>
CGPA       <NONE>
CDPA       <NONE>
TT         tt01
           tt05
AFTPC      <NONE>
;

```

Legend

- **ENTITY TYPE**—This field displays which entity type is being checked.
- **UNREFERENCED ENTITIES**—This field displays whether the entity type listed is referenced by another entity.

Related Topics

- [aud-data](#)
- [chg-scr-aftpc](#)
- [chg-scr-blkdpc](#)
- [chg-scr-blkopc](#)
- [chg-scr-cdpa](#)
- [chg-scr-cgpa](#)
- [chg-scr-destfld](#)
- [chg-scr-dpc](#)
- [chg-scr-opc](#)
- [chg-scr-sio](#)
- [chg-scr-tt](#)
- [chg-scrset](#)
- [dlt-scr-aftpc](#)
- [dlt-scr-blkdpc](#)
- [dlt-scr-blkopc](#)

- dlt-scr-cdpa
- dlt-scr-cgpa
- dlt-scr-destfld
- dlt-scr-dpc
- dlt-scr-opc
- dlt-scr-sio
- dlt-scr-tt
- dlt-scrset
- ent-scr-aftpc
- ent-scr-blkdpc
- ent-scr-blkopc
- ent-scr-cdpa
- ent-scr-cgpa
- ent-scr-destfld
- ent-scr-dpc
- ent-scr-opc
- ent-scr-sio
- ent-scr-tt
- ent-scrset

4.1.165 clr-imt-stats

Every card in the system has a card location identifier (stenciled on the shelf and provided in all output) and an IMT address. Use this command to clear the following statistics:

- IMT level 1 and level 2 statistics for specified IMT addresses and hourly time period statistics for IMT errors
- Card error and hourly time period statistics for the MUX cards
- All IMT and MUX error and hourly time period statistics. When hourly time period statistics for the errors are cleared, the current hourly time period number is reset to 0 (zero) on all cards.

Parameters

a11 (optional)

Clear all IMT and MUX statistics.

Range:

yes

no

Default:

no

e (optional)

End address. The IMT address of the last card in the range.

Range:

0 - 251

(See the *Installation Guide* for an illustration with IMT addresses).

e1oc (optional)

End location. The card location of the last card in the range.

Range:

1101 - 1113, 1115, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318, 3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118

Default:

If `sloc` is specified—current `sloc` value

If `sloc` is not specified—1115 which corresponds to IMT address 251 (`e=251`)

eshelf (optional)

End shelf location for MUX statistics. The shelf location of the last shelf in the range. (MUX statistics will be cleared if they exist in the range between and including the `sshelf` and `eshelf` locations).

Range:

1100, 1200 - 6100

Default:

If `sshelf` is specified—current `sshelf` value

If `sshelf` is not specified— 6100

s (optional)

Start address. The IMT address of the first (or only) card in the range.

Range:

0 - 251

See the *Installation Guide* of your current documentation set for an illustration with IMT addresses.

sloc (optional)

Start location. Specifies the card location of the first card in the range.

Range:

1101 - 1113, 1115, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318, 3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118

Default:

If `e1oc` is specified—current `e1oc` value

If `e1oc` is not specified— 1201 which corresponds to IMT address 0 (`s=0`).

sshelf (optional)

Start shelf location for MUX statistics. This parameter specifies the shelf location of the first shelf in the range. (MUX statistics will be cleared if they exist in the range between and including the `sshelf` and `eshelf` locations).

Range:

1100, 1200 - 6100

Default:

If `eshelf` is specified—current `eshelf` value

If `eshelf` is not specified— 1100

Example

```
clr-imt-stats:s=00
```

Dependencies

The command cannot be entered if the `rept-imt-info`, `rept-imt-lvl1`, `rept-imt-lvl2`, or `tst-imt` command is running.

2368 E2368 Cmd Rej: System busy - try again later

The `s` and `e` parameters and the `sloc` and `eloc` parameters cannot be specified in the same command.

3047 E3047 Cmd Rej: Parameter combination invalid

This command cannot be entered during IMT statistics collection following an hourly boundary.

N/A N/A

The `s`, `sloc`, or `shelf` parameter must be specified.

3048 E3048 Cmd Rej: Starting address/location/shelf must be specified

This command cannot be entered during an Extended Bit Error Rate Test (BERT).

3043 E3043 Cmd Rej: IMT test in progress

Notes

The `sloc` and `eloc` parameters allow individual MUX cards to be cleared.

The `s` and `e` parameters will not clear MUX cards.

The `sshelf` and `eshelf` parameters clear MUX cards on bus A and bus B.

Output

```
clr-imt-stats:all=yes
```

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 35.0.0  
Clear IMT Statistics command(s) issued...  
Command Completed.
```

```
;
```

Related Topics

- [conn-imt](#)
- [disc-imt](#)
- [rept-imt-info](#)

- [rept-imt-lvl1](#)
- [rept-imt-lvl2](#)
- [rmv-imt](#)
- [rst-imt](#)
- [tst-imt](#)

4.1.166 conn-imt

Use this command to connect a manually disconnected card to the specified IMT bus. The card must have been manually disconnected from the bus previously by the `disc-imt` command. If the card was disconnected from the bus for other reasons, this command has no effect.

Parameters

bus (mandatory)

IMT bus to which the specified card is to be connected.

Range:

a

b

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
conn-imt:loc=1201:bus=a
```

Dependencies

The card being reconnected must first be disconnected manually from the bus by using the `disc-imt` command.

N/A N/A

This command cannot be entered during an IMT Fault Isolation Test or an Extended Bit Error Rate Test (BERT).

3043 E3043 Cmd Rej: IMT test in progress

The card location, frame, shelf, or slot must be within the allowed range.

2016 E2016 Cmd Rej: <parm_desc> is out of range - <parm>

Valid IMT bus entries are "A" or "B".

2247 E2247 Cmd Rej: Bus parameter invalid

Notes

This command has no effect if the card was disconnected from the IMT bus in any way other than manually using the `disc-imt` command.

Output

```
conn-imt:loc=1201:bus=a
```

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0  
Connect IMT Bus A command issued to card 1201
```

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0  
0100.0006 IMT Bus A Card connected to IMT
```

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0  
3112.0006 CARD 1201 CCS7ITU Card connected to IMT
```

```
;
```

Related Topics

- [clr-imt-stats](#)
- [disc-imt](#)
- [rept-imt-lvl1](#)
- [rept-imt-lvl2](#)
- [rept-stat-imt](#)
- [rmv-imt](#)
- [rst-imt](#)

4.1.167 copy-disk

Use this command to copy a mirror image of the active fixed disk to the standby fixed disk. When the fixed disk requires replacement, or needs to be repaired or updated, this command formats the standby fixed disk and copies the contents of the active fixed disk to the standby fixed disk.

Caution:

Before entering this command, contact the Customer Care Center.

▲ Caution:

If this command fails and the standby E5-TDM boots continuously, insert a removable disk with the same release as the fixed disks in the latched USB port of the standby E5-MCAP. The standby E5-MASP should successfully boot off the removable disk. After the E5-MASP has booted completely, re-enter the command.

Parameters**dloc (mandatory)**

The location of the standby fixed disk. This is the destination drive for this function.

Range:

1114, 1116
(TDM)

force (optional)

This parameter provides some protection against data loss from copying over a fixed disk. If the target medium is recognized as a valid system medium, the `force=yes` parameter must be specified.

Range:

yes

no

Default:

no

format (optional)

This parameter specifies whether to format the standby fixed disk before executing the copy. If a format is not necessary, specifying *no* can save a significant amount of time.

Range:

yes

no

Default:

yes

sloc (optional)

The location of the active fixed disk. This will be the source drive for this function.

Range:

1114, 1116
(TDM)

Default:

The location of the active fixed disk

Example

```
copy-disk:sloc=1114:dloc=1116:force=yes
```

Dependencies

▲ Caution:

Do not turn off measurements at midnight because doing so can cause the loss of an entire day of measurements. Do not turn off measurements during the 30 minute measurements processing period, because this can result in the loss of the measurements for the 30 minute period being processed.

N/A N/A

Measurements collection must be turned off before this command can be executed. Do not issue the `chg-meas` command while the `copy-disk` command is in progress. This results in read and write errors, because the standby fixed disk is not accessible and the active fixed disk only allows read-only access.

4113 E4113 Cmd Rej: Measurement collection in progress, Retry later

OAM Measurements collection cannot be in progress when this command is entered. Retry the command after a period of waiting for the measurements collection to complete.

2160 E2160 Cmd Rej: Measurements collect must be off

The `copy-disk` command reserves both the active and standby disks, preventing database updates for the duration of the command. Access is allowed for read-only; writing to the disk is prohibited.

N/A N/A

All commands that affect the database are not allowed for the duration of the command. Attempts to use such commands are rejected, and an error message is displayed indicating that the command has been rejected because the `copy-disk` command is in use.

N/A N/A

The OAMHC GPL version that is running in the active OAM card location must be the same GPL version that is running in the standby OAM card location.

3778 E3778 Cmd Rej: Active/Stby GPL versions are not compatible

The `sloc` and `dloc` fixed disks must be available and compatible.

2828 E2828 Cmd Rej: Source and destination disks not compatible

The `sloc` fixed disk must be coherent.

2831 E2831 Cmd Rej: Current database not coherent

The `dloc` parameter must specify the standby fixed disk.

2822 E2822 Cmd Rej: Destination location must specify the standby fixed disk

The `sloc` parameter must specify the active fixed disk.

2820 E2820 Cmd Rej: Source location must specify the active fixed disk

The standby fixed disk cannot be initialized while un-uploaded security log entries exist.

3004 E3004 Cmd Rej: Un-uploaded security log entries exist on standby fixed disk

The `force=yes` parameter is required if the destination medium is recognized as a system medium. This parameter is optional if the destination medium is not a system medium. Only media that contain the **dms.cfg** file are recognized as system media.

2164 E2164 Cmd Rej: Fixed disk contains Eagle data (use FORCE=YES)

If the `force=yes` parameter is specified, the disk should not require low-level formatting, and the `format=no` parameter should also be specified.

N/A N/A

Security log purging must be stopped (`CHG-ATTR-SECULOG: PURGEPERIOD=0`) when the `copy-disk` command is executed.

E3667 Cmd Rej: Change PURGEPERIOD to 0

Notes

If this command is initiated and the standby OAM initialization is not complete, command processing will be delayed. If standby initialization fails, the command proceeds to allow the standby TDM to recover from a previous `format-disk` or `copy-disk` failure. In such cases, the following messages appear:

```
Standby MASP has not finished initializing - please wait...
```

```
Standby MASP initialization timed out - continuing...
```

Specify the `format=no` parameter when upgrading a spare TDM. Specify the `format=yes` parameter when there is a suspected hardware problem.

When the active command is processing, the system cannot log other commands to the security log because the active fixed disk is set to read-only. During this time, commands that would alter the database fail when entered.

The performance time required to copy a fixed disk to another fixed disk varies depending on database size and system activity. This operation should typically take no longer than 2.5 hours. (If the low-level format (`format=no`) is not being performed, the operation should take no longer than an hour.) If the `copy-disk` operation exceeds three hours, or if the operation without the low-level format exceeds 1.5 hours, contact My Oracle Support. See the "My Oracle Support" section in Chapter 1 of this manual.

Output

```
copy-disk:sloc=1114:dloc=1116:force=yes
```

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0
```

```
copy-disk:sloc=1114:dloc=1116:force=yes
Command entered at terminal #3.
Copy-disk (fixed): from active (1114) to standby (1116) started.
Extended processing required, please wait.
Copy-disk (fixed): from active (1114) to standby (1116) completed.
Measurements collection may be turned on now if desired.
```

Related Topics

- [chg-db](#)
- [copy-gpl](#)
- [copy-meas](#)
- [disp-disk-dir](#)
- [format-disk](#)
- [rept-stat-db](#)

4.1.168 copy-ext-stats

Use this command to copy the HIPR2 Extended Statistics information from the HIPR2 cards to the EXTSTATS.SYS file.

Parameters

bus (optional)

The IMT bus containing the HIPR2 cards with the extended statistics to be copied.

Range:

a
HIPR2 cards on the A bus

b
HIPR2 cards on the B bus

both
HIPR2 cards on both buses

Default:

both

e1oc (optional)

The ending card location for a range of HIPR2 cards that contain extended statistics to be copied.



Note:

Statistics are copied from only valid In-Service Normal HIPR2 cards within the range.

Range:

1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110

Default:

6110

loc (optional)

The location of a single HIPR2 card that contains extended statistics to be copied.

Range:

1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110

Default:

all HIPR2 cards within the range specified by the `sloc` and `eloc` parameters

mode (optional)

A bitmask where the numeric value entered is converted to its binary value. Each bit represents a unique set of data to retrieve.

 **Note:**

This parameter is currently unused.

Range: 0 - 65535**Default:**

0

sloc (optional)

The starting card location of a range of HIPR2 cards that contain extended statistics to be copied.

 **Note:**

Statistics are copied from only valid In-Service Normal HIPR2 cards within the range.

Range:

1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110

Default:

1109

Example

```
copy-ext-stats
```



```
copy-ext-stats:loc=1110
copy-ext-stats:mode=1:loc=1109
copy-ext-stats:sloc=1101:eloc=6118:b=a
copy-ext-stats:sloc=1209:eloc=1210
```

Dependencies

Numeric values must be specified for the `loc`, `sloc`, and `eloc` parameters. These values must indicate valid card locations. See the associated parameter definitions for lists of valid values.

2051 E2051 Cmd Rej: Incorrect information unit, expecting number - <parm>

The value specified for the `mode` parameter must be from 0 - 65535.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

A value of *a*, *b*, or *both* must be specified for the `bus` parameter.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

No other `init/copy-ext-stats` command can be in progress when this command is entered.

2412 E2412 Cmd Rej: Command already in progress

The `loc` parameter cannot be specified in the same command with the `sloc` and `eloc` or `bus` parameters.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The value specified for the `loc` parameter must be a valid MUX card location.

2212 E2212 Cmd Rej: Invalid card type for this command

The range specified by the `sloc` and `eloc` parameters must include an MUX card location.

2212 E2212 Cmd Rej: Invalid card type for this command

Output

```
copy-exts-stats
```

```
e5oam 10-02-10 23:07:15 EST EAGLE 42.0.0
copy-ext-stats
Command entered at terminal #6.
```

```
;
```

```
e5oam 10-02-10 23:07:15 EST EAGLE 42.0.0
COPY-EXT-STATS: Data retrieval starting for MUX card 1209
```

```
;
```

```
e5oam 10-02-10 23:07:15 EST EAGLE 42.0.0
COPY-EXT-STATS: Data retrieval completed for MUX card 1209
```

```
;
e5oam 10-02-10 23:07:15 EST EAGLE 42.0.0
COPY-EXT-STATS: Data retrieval starting for MUX card 1210
;
e5oam 10-02-10 23:07:35 EST EAGLE 42.0.0
COPY-EXT-STATS: Data retrieval completed for MUX card 1210
;
e5oam 10-02-10 23:07:35 EST EAGLE 42.0.0
COPY-EXT-STATS: Data retrieval starting for MUX card 1109
;
e5oam 10-02-10 23:07:36 EST EAGLE 42.0.0
COPY-EXT-STATS: Data retrieval completed for MUX card 1109
;
e5oam 10-02-10 23:07:36 EST EAGLE 42.0.0
COPY-EXT-STATS: Data retrieval starting for MUX card 1110
;
e5oam 10-02-10 23:07:36 EST EAGLE 42.0.0
COPY-EXT-STATS: Data retrieval completed for MUX card 1110
;
e5oam 10-02-10 23:07:36 EST EAGLE 42.0.0
COPY-EXT-STATS: Data retrieved from the following MUX cards:
    CARD Location: 1209 : PASSED
    CARD Location: 1210 : PASSED
    CARD Location: 1109 : PASSED
    CARD Location: 1110 : PASSED
;
e5oam 10-02-10 23:07:36 EST EAGLE 42.0.0
Command Completed.
;
```

Related Topics

- [init-ext-stats](#)

4.1.169 copy-fts

Use this command to copy tables into or from the file transfer area (FTA).

Parameters

dloc (mandatory)

The card location of the destination or table.

Example

```
copy-fta:sloc=1114:dloc=1114:stbl=2:dfile="F1_name.OUT"  
copy-fta:sfile=dms.cfg:dtbl=0:sloc=1114:dloc=1116
```

Dependencies

A destination table must be specified when a source file is specified.

2230 E2230 Cmd Rej: Use DTBL when specifying SFILE

A destination file must be specified when a source table is specified.

2229 E2229 Cmd Rej: Use DFILE when specifying STBL

A source and a destination must be specified.

2225 E2225 Cmd Rej: STBL/DFILE or SFILE/DTBL must be specified

Only one source parameter and one destination parameter can be specified.

2224 E2224 Cmd Rej: Only one Source and Destination may be specified

This command cannot be entered to modify the security log.

3003 E3003 Cmd Rej: Modification of security log not allowed

File name formats are limited to 8 + 3 DOS-compatible characters.

2314 E2314 Cmd Rej: Invalid filename entered

When using DOS file names, if the file name contains a special character such as an underscore (`_`) or begins with a numeric, the file name must be in quotes (" "), for example, "92_name.ext".

2063 E2063 Cmd Rej: Try Double Quoting Parameter with ' _ '

Only one file transfer can be active at a time.

2221 E2221 Cmd Rej: File transfer in progress

The 1113 and 1115 locations are used by E5-MCAP cards. The 1114 and 1116 locations are used by E5-TDM cards.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

Legacy TDM, GPSM-II, and MDAL cards cannot be installed in the same system as E5-TDM, E5-MCAP, and E5-MDAL cards.

3084 E3084 Cmd Rej: Both OAM cards must be of the same type

The source file and destination file combination is not allowed.

The source table and destination table combination is not allowed.

2228 E2228 Cmd Rej: Unknown copy direction

The removable drive must have a File Transfer Area to be used as the source or destination.

2241 E2241 Cmd Rej: No File Transfer Area on removable drive

Notes

This command is used to copy into the file transfer area or out of the file transfer area. The `stbl`, `dfile`, `sfile`, and `dtbl` parameters are used to describe the nature of the copy. A copy from a DMS table into the file transfer area would use the `stbl` (source table) and `dfile` (destination file) parameters. Thus, data would move from a table into a transfer area file. To copy from the file transfer area to a DMS table, use the `sfile` (source file) and `dtbl` (destination table) parameters. Any other combination of these 4 parameters is invalid.

Output

```
copy-fts:stbl=1:dfile="2F1.OUT":sloc=1114:dloc=1114
```

```

rlghncxa03w 15-01-05 14:59:10 EST  EAGLE 46.2.0
copy-fts:stbl=1:dfile="2F1.OUT":sloc=1114:dloc=1114
Command entered at terminal #1.
;
rlghncxa03w 15-01-05 14:59:26 EST  EAGLE 46.2.0
Copied Table 1 successfully from FIXED to 2F1.OUT in FTA.
;
rlghncxa03w 15-01-05 15:00:49 EST  EAGLE 46.2.0
copy-fts:sfile=dms.cfg:dtbl=0:sloc=1114:dloc=1113
Command entered at terminal #1.
;
rlghncxa03w 15-01-05 15:01:12 EST  EAGLE 46.2.0
Copied DMS.CFG successfully from FTA to Table 0 on REMOVABLE.
;

```

Related Topics

- [act-file-trns](#)
- [disp-fts-dir](#)
- [dlt-fts](#)

4.1.170 copy-gpl

Use this command to copy all approved GPLs from one drive to another. The GPLs can be copied only from the fixed disk on the active TDM to the removable drive, or from the removable drive to the fixed disk on the standby TDM.

Parameters

ddrv (optional)

Destination drive. The identification of the disk to which the GPL is copied.

Range:

fixed

The fixed disk

remove

The removable drive

usb

The flush-mounted (not-latched) USB port on the MASP card.

dloc (optional)

The destination location of the GPLs to be copied.

Range:

1114

The TDM

1116

The TDM

1113

The latched USB port

1115

The latched USB port

Default:

none

sdrv (optional)

Source drive. The identification of the disk from which the GPL is copied.

Range:

fixed

The fixed disk

remove

The removable media drive

usb

The flush-mounted (not-latched) USB port on the MASP card.

sloc (optional)

The source location of the GPLs to be copied.

Range:

1114

The TDM

1116

The TDM

1113

The latched USB port

1115

The latched USB port

Default:

The location of the active TDM

Example

```
copy-gpl
copy-gpl:sloc=1115:dloc=1116
copy-gpl:sloc=1116
```

Dependencies

While this command is executing, the `act/chg-gpl` commands cannot be entered.

2412 E2412 Cmd Rej: Command already in progress

The standby fixed disk could not be accessed. There could be a hardware problem.

2824 E2824 Cmd Rej: Could not access standby fixed disk

The active fixed disk could not be accessed. There could be a hardware problem.

2826 E2826 Cmd Rej: Could not access active fixed disk

The source and destination disks are not compatible. There could be a hardware problem

2828 E2828 Cmd Rej: Source and destination disks not compatible

The system cannot determine the capacity of the disk that is being formatted.

2829 E2829 Cmd Rej: Destination disk capacity equals 0

The destination disk needs to be formatted.

2819 E2819 Cmd Rej: Destination disk is unformatted

The removable disk must be accessible.

2825 E2825 Cmd Rej: Could not access removable disk

The GPLs can be copied only from the fixed disk on the active TDM (`sloc=1114` or `sloc=1116`) to the removable drive (`dloc=1113` or `dloc=1115`), or from the removable drive (`sloc=1113` or `sloc=1115`) to the fixed disk on the standby TDM (`dloc=1114` or `dloc=1116`).

3681 E3681 Cmd Rej: Source and destination combination is not allowed

The source drive must be coherent when the command is executed.

2830 E2830 Cmd Rej: Source drive not coherent

The 1113 and 1115 locations are used by E5-MCAP cards. The 1114 and 1116 locations are used by E5-TDM cards.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The plug-in flash drive must be accessible in the Active OAM's flush-mounted USB port.

4918 E4918 Cmd Rej: Could not access USB disk

The specified disk type must match the specified location.

4912 E4912 Cmd Rej: Disk invalid for specified Location

This command cannot be entered when CAT2 IPSM to OAM syncing is in progress.

3652 E3652 Cmd Rej: IPSM to OAM SYNC in progress

Notes

This command has no effect on the GPLs stored on other cards (for example, SCCP).

Output

Copying the GPLs from the fixed disk on the active TDM (card location 1114) to the removable drive (card location 1113).

```
copy-gpl:sloc=1114:dloc=1113
```

```
rlghncxa03w 09-01-07 00:57:31 EST EAGLE 40.1.0
COPY GPL: MASP A - COPY STARTS ON ACTIVE MASP
COPY GPL: MASP A - COPY TO REMOVABLE MEDIA COMPLETE
```

;

Copying the GPLs from the removable drive (card location 1115) to the fixed disk on the standby TDM (card location 1116).

```
copy-gpl:sloc=1115:dloc=1116
```

```
rlghncxa03w 09-01-07 00:57:31 EST EAGLE 40.1.0
COPY GPL: MASP B - COPY STARTS ON REMOVABLE DRIVE
```

;

```
rlghncxa03w 09-01-07 01:01:27 EST EAGLE 40.1.0
COPY GPL: MASP B - COPY TO STANDBY MASP COMPLETE
```

;

Copying the GPLs from the fixed disk on the active USB drive.

```
copy-gpl:sloc=1114:ddrv=usb
```

```
e5oam 09-01-09 05:14:23 MST EAGLE 40.1.0
COPY GPL: MASP A - COPY STARTS ON ACTIVE MASP
```

;

```
e5oam 09-01-09 05:22:30 MST EAGLE 40.1.0
COPY GPL: MASP A - COPY TO USB DRIVE COMPLETE
```

Related Topics

- [act-gpl](#)
- [alw-card](#)
- [chg-gpl](#)
- [init-card](#)
- [init-sys](#)

- [rept-stat-gpl](#)
- [rtrv-gpl](#)

4.1.171 copy-meas

Use this command to copy all measurements tables on the active fixed disk to a measurements removable drive. Do this when you need to perform off-line analysis of the raw measurements data.



Note:

This command is not supported on the Measurements Platform feature.

Parameters

None

Example

```
copy-meas
```

Dependencies

The removable drive:

- must be inserted
- must be initialized
- must be a MEAS disk
- cannot be a SYSTEM disk

```
2962 E2962 Cmd Rej: <Device> is <condition>
```

This command cannot be entered when CAT2 IPSM to OAM syncing is in progress.

```
3652 E3652 Cmd Rej: IPSM to OAM SYNC in progress
```

Notes

To execute this command, measurement collection must be turned off. If measurement collection is on, enter the `chg-meas:collect=off` command to turn off measurement collection.

The *Maintenance Guide* provides a description of all measurement report parameters.

To copy the raw measurements data from the active fixed disk to the measurements removable drive requires approximately 2 minutes. This period is the minimum time and is dependent on system activity.

The removable drive must be accessible.

Output

copy-meas

```

COPY MEASUREMENTS: MASP A - COPY STARTS ON ACTIVE MASP
COPY MEASUREMENTS: MASP A - COPY TO REMOVABLE MEDIA COMPLETE
;

```

Related Topics

- [chg-meas](#)
- [rept-meas](#)
- [rtrv-meas-sched](#)

4.1.172 copy-seculog

Use this command to copy the contents of a security log to the file transfer area (FTA). If no parameters are specified, a file called *yymmdda.log* (see the description of the `dfile` parameter) is created in the FTA on the active fixed disk. The contents of the security log on the active fixed disk are copied into this file.

Parameters

dfile (optional)

Target file name. The name of the file that is to be created in the FTA and initialized with the security log contents.

Range:

```

XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX

```

1–32 characters

Default:

the file is named *yymmddx.log*, where *yymmdd* is the current year, month, and day, and *x* is *a* or *s*, depending on whether the log on the active or standby fixed disk was copied

dloc (optional)

Destination FTA. The FTA that will receive the copy of the log.

Range:

act

Copies the log to the active fixed disk's FTA

stb

Copies the log to the standby fixed disk's FTA

Default:

act

slog (optional)

Source log indicator. The log that is to be copied to the FTA.

Range:**act**

Copies the log on the active fixed disk

stb

Copies the log on the standby fixed disk

Default:

act

Example

```
copy-seculog
copy-seculog:dfile="somename.log"
copy-seculog:slog=stb
copy-seculog:slog=act
copy-seculog:slog=act:dloc=stb
```

Dependencies

No other security log command can be in progress when this command is entered.

3005 E3005 Cmd Rej: Security log command already in progress

No `copy-fta` command can be in progress when this command is entered.

2221 E2221 Cmd Rej: File transfer in progress

GPSSM-II and E5-MCAP cards cannot be provisioned in the system at the same time.

3084 E3084 Cmd Rej: Both OAM cards must be of the same type

The source log and destination file combination is not allowed.

2228 E2228 Cmd Rej: Unknown copy direction

The removable drive must have a File Transfer Area to be used as the destination.

2241 E2241 Cmd Rej: No File Transfer Area on removable drive

Notes

For the `dfile` parameter, if the file name is not accepted by the system because it contains special characters such as blanks, colons, dashes, ampersands, or others; or because it does not start with an alphabetic character, enclose the file name in double quotes as in this example: "seculog-1.ext".

Any scroll area failure message that can be produced by the `copy-fta` command can be produced also by the `copy-seculog` command.

Output

This example shows that the log on the active fixed disk is copied to the FTA on the active fixed disk and given the default name (note the `a` in the log name).

```
copy-seculog
```

```
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Security log on TDM 1114 copied to file 040104a.log on TDM 1114
```

This example shows that the log on the active fixed disk is copied to the FTA on the active fixed disk and given a user-specified name.

```
copy-seculog:dfile="somename.log"
```

```
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Security log on TDM 1116 copied to file somename.log on TDM 1116
```

This example shows that the log on the standby fixed disk is copied to the FTA on the active fixed disk and given the default name (note the s in the log name).

```
copy-seculog:slog=stb
```

```
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Security log on TDM 1114 copied to file 040104s.log on TDM 1116
```

This example shows that the copy of the log fails because a file already exists in the FTA with the same name.

```
copy-seculog:slog=act
```

```
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Command Failed - Destination File already exists in the File
Transfer Area
```

This example shows that the copy fails because there is not enough room in the FTA to contain the copy.

```
copy-seculog:slog=act:dloc=stb
```

```
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Command Failed - Not enough room exists in the File Transfer Area
```

Related Topics

- [act-file-trns](#)
- [copy-tbl](#)
- [disp-fta-dir](#)
- [dlt-fta](#)

4.1.173 copy-tbl

Use this command to copy a single table from one source to another. A table can be copied to any verifiable location in the system; however, the source and destination tables must have identical configurations (same number of entries, same entry size, both 1- dimensional and 2- dimensional).

 **Note:**

A table cannot be copied onto itself.

Parameters

dloc (mandatory)

Destination location. The location of the destination table.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

1114

TDM

1116

TDM

1113

Latched USB port

1115

Latched USB port

sloc (mandatory)

Source location. The location of the source table.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

1114

TDM

1116

TDM

1113

Latched USB port

1115

Latched USB port

stb1 (mandatory)

Source table. The identifying number of the source table.

Range:

0 - 1023

ddrv (optional)

Destination drive. The identification of the disk to which the table is copied.

Range:

fixed

The fixed disk

remove

The removable drive

usb

The flush-mounted (not-latched) USB port on the MASP card.

Default:

fixed

dprtnggrp (optional)

Disk partition group. The disk partition group of the destination table.

Range:

active

inactive

Default:

active

dtb1 (optional)

Destination table. The identifying number of the destination table.

Range:

0 - 1023

Default:

The `stb1` parameter value

sdrv (optional)

Source drive. The identification of the disk from which the table is copied.

Range:***fixed***

The fixed disk

remove

The removable drive

usb

The flush-mounted (not-latched) USB port on the MASP card.

Default:*fixed***sprtnggrp (optional)**

Source partition group. The disk partition group of the source table.

Range:***active******inactive*****Default:***active***Example**

```
copy-tbl:stbl=25:dtbl=24:sloc=1114:dloc=1116:sdrv=fixed
```

Dependencies

Only one table copy command can be executed at a time.

2368 E2368 Cmd Rej: System busy - try again later

The source and destination tables must exist and be compatible.

N/A N/A

This command cannot be used to modify the security log.

3003 E3003 Cmd Rej: Modification of security log not allowed

The same value cannot be specified for the `sloc` and `dloc` or the `stbl` and `dtbl` parameters.

4920 E4920 Cmd Rej: Cannot copy table onto itself

If a value of *fixed* is specified for the `sdrv` or `ddrv` parameter, then a value of 1114 or 1116 must be specified for the `sloc` or `dloc` parameter.

4912 E4912 Cmd Rej: Disk invalid for specified Location

This command cannot be entered when CAT2 IPSM to OAM syncing is in progress.

3652 E3652 Cmd Rej: IPSM to OAM SYNC in progress

Notes

None

Output

```
copy-tbl:stbl=25:dtbl=24:sloc=1114:dloc=1116:sdrv=fixed
```

```
rlghncxa03w 01-03-04 16:11:53 EST Rel 28.1.0  
Table copy command complete.
```

```
;
```

4.1.174 dact-alm-trns

Use this command to return all audible alarm indications to the local office.

Parameters

This command has no parameters.

Example

```
dact-alm-trns
```

Dependencies

None

N/A N/A

Notes

After you enter `dact-alm-trns`, enter `rept-stat-alm` to verify the status of the alarms.

Output

```
dact-alm-trns
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0  
Alarms returned to Local Maintenance Center
```

```
;
```

Related Topics

- [act-alm-trns](#)
- [rept-stat-clk](#)
- [rept-stat-trbl](#)
- [rls-alm](#)
- [rtrv-obit](#)
- [rtrv-trbl](#)

4.1.175 dact-cdl

Use this command to deactivate a previously initiated command driven loopback for testing a signaling link, if the test is active. If it is not active, the command will attempt to clear both near-end and far-end latched loopback points

Parameters

link (mandatory)

SS7 signaling ports. The signaling port to which the SS7 signaling link being tested is assigned.

Synonym:

port

Range:

a, b, a1 - a31, b1 - b31

Not all card types support all link parameter values.

See [Table A-1](#) for valid `link` parameter range values for each type of card that can have assigned signaling links.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
dact-cdl:loc=1205:link=b
```

Dependencies

The card location specified in the `loc` parameter must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The signaling link specified in the `link` parameter must be equipped.

2373 E2373 Cmd Rej: Link is unequipped in the database

Link Fault Sectionalization (LFS) must not be running on the specified signaling link when this command is entered.

2921 E2921 Cmd Rej: LFS must not be running on requested link

Command Driven Loopback testing is not available during upgrade.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

A link diagnostic test is in progress on the signaling link specified in the `link` parameter, but it is not a Command Driven Loopback.

4247 E4247 Cmd Rej: Command driven loopback not in progress

The card location specified in the `loc` parameter must be in service.

2387 E2387 Cmd Rej: Card is not in service

The signaling link specified in the `link` parameter must not be active.

2916 E2916 Cmd Rej: Link must not be active to execute command

The card location specified in the `loc` parameter cannot be reserved by the system.

2376 E2376 Cmd Rej: Specified LOC is invalid

Notes

None

Output

```
dact-cdl:loc=1205:link=b
```

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0  
Command Accepted: Stop Command Driven Loopback message is sent.
```

```
;
```

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0  
Command Completed.
```

```
;
```

Related Topics

- [act-cdl](#)
- [act-lbp](#)
- [dact-lbp](#)
- [rept-stat-cdl](#)
- [tst-slk](#)

4.1.176 dact-echo

Use this command to halt the echoing of command responses from the user's terminal to other terminals or printers.

Parameters

term (optional)

The ID number of the terminal for which the echo is being canceled.

Range:

1 - 16

Default:

Cancels all active echoes

Example

```
dact-echo
```

Dependencies

The echo to the same terminal from which the `dact-echo` command is issued cannot be cancelled.

```
3422 E3422 Cmd Rej: Echo capability not applicable on originating terminal
```

There must be an active echo (`act-echo`) to the terminal specified.

```
2253 E2253 Cmd Rej: Echo is not set for this terminal
```

Notes

Only the echoing of command output responses can be halted by this command. To halt the printing of alarm and network messages, use the `chg-trm` command.

Output

```
dact-echo
```

```
rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0  
Command entered at terminal #6.  
Scroll Area Output echo disabled to all terminals.
```

```
;
```

```
dact-echo:trm=7
```

```
rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0  
Command entered at terminal #1.  
Scroll Area Output echo disabled for terminal 7.
```

```
;
```

Related Topics

- [act-echo](#)
- [alw-trm](#)
- [canc-echo](#)
- [chg-trm](#)
- [inh-trm](#)
- [rept-stat-trm](#)
- [rmv-trm](#)
- [rst-trm](#)
- [rtrv-trm](#)

4.1.177 dact-lbp

Use this command to deactivate a previously activated loopback point test, if a test is active. If no test is active, the command attempts to clear both near-end and far-end latched loopback points.

Parameters

link (mandatory)

SS7 signaling link. The signaling link for which the loopback point test is being deactivated.

Synonym:

port

Range:

a, b, a1 - a31, b1 - b31

Not all card types support all `link` parameter values.

See [Table A-1](#) for valid `link` parameter range values for each type of card that can have a location specified in the `loc` parameter.

loc (mandatory)

Card location. The unique identifier of the card containing the signaling link on which loopback point testing is to be deactivated.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

Example

```
dact-lbp:loc=1205:link=b
```

Dependencies

The specified signaling link must be equipped.

2373 E2373 Cmd Rej: Link is unequipped in the database

For clearing a remotely initiated loopback or LFS test stop, the card location (`loc` parameter) must be an or E5-E1T1-B card, provisioned with the LIMT1 card type, configured with either the SS7ANSI or CCS7ITU application.

2892 E2892 Cmd Rej: LOC is not LFS capable

This command cannot be entered until any previously issued `act-lbp` or `dact-lbp` command is accepted.

2905 E2905 Cmd Rej: LFS command in progress

If an LFS test is about to complete, a new `dact-lbp` command cannot be entered until the test completes.

2906 E2906 Cmd Rej: LFS test is completing, can not be canceled

This command cannot be entered to cancel a signaling link test (a `tst-slk` test).

4241 E4241 Cmd Rej: Link test must not be running on requested link

This command cannot be entered to cancel a Command Driven Loopback test.

4242 E4242 Cmd Rej: Requested link must not be in command driven loopback

The specified link must exist, and the maximum number of allowed LFS or signaling link tests must not already be in progress. At least one active LFS or signaling link test must be completed before this command can be entered again.

2923 E2923 Cmd Rej: Maximum number of link tests already in progress

This command cannot be entered during upgrade.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

The specified signaling link must not be active.

2916 E2916 Cmd Rej: Link must not be active to execute command

For clearing a remotely initiated loopback, the card location specified in the `loc` parameter must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

For clearing a remotely initiated loopback, the card location specified in the `loc` parameter must be in service (**IS-NR**).

2387 E2387 Cmd Rej: Card is not in service

For clearing a remotely initiated loopback, the card location specified in the `loc` parameter cannot be reserved by the system.

2376 E2376 Cmd Rej: Specified LOC is invalid

Notes

After the deactivation of loopback point testing has started, you cannot cancel the process.

If an LFS test is aborted by a card reset, it could leave the remote far-end loop-back condition active. Use the `dact-lbp` command to cancel LFS tests.

Output

The following example output is generated only when a latched loopback is cleared and when there were no active loopback tests in progress.



Note:

This situation could occur even if there were no latched loopbacks to be cleared.

```
dact-lbp:loc=1205:link=b
```

```
rlghncxa03w 04-02-17 16:02:05 EST EAGLE5 33.0.0
```

```

LOC = 1205 LINK = B
CLEAR STATUS = PASS, loopback was cleared.
;

```

The following example output is generated only when a latched loopback could not be cleared when there were no active loopback tests in progress.

```
dact-lbp:loc=1205:link=b
```

```

rlghncxa03w 04-02-17 16:02:05 EST EAGLE5 33.0.0
LOC = 1205 LINK = B
CLEAR STATUS = ERROR, loopback could not be cleared.
;

```

Related Topics

- [act-lbp](#)
- [chg-lbp](#)
- [dlt-lbp](#)
- [ent-lbp](#)
- [rept-stat-lfs](#)
- [rtrv-lbp](#)

4.1.178 dact-lg-card

Use this command to deactivate all LG event generation/reception for a given LG card. The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSP, IPLHC, IPGHC and SS7HC GPLs.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

dir (optional)

The direction in which the event generation or reception is to be deactivated.

Range:

Tx
Transmit Event

Rx
Receive Event

all
Both in Tx and Rx directions

Default:
all

Example

```
dact-lg-card:loc=1302  
dact-lg-card:loc=1302:dir=tx
```

Dependencies

The card location must not be 1113-1118, or xy09 and xy10 where x is the frame and y is the shelf.

2154 E2154 Cmd Rej: Card slot reserved by system

The LG Card table is corrupt or cannot be found.

5222 E5222 Cmd Rej: Unable to read LG Card table

The card location specified in the `loc` parameter must be of a provisioned LG card.

5239 E5239 Cmd Rej: LG card not defined

Loc is mandatory

2379 E2379 Cmd Rej: Missing parameter

Activating the state of an LG object that is already activated or deactivating the state of an LG object that is already deactivated has no effect.

3827 E3827 Cmd Rej: No change requested

Output

Related Topics

- [act-lg-card](#)
- [chg-lg-card](#)
- [dlt-lg-card](#)
- [ent-lg-card](#)
- [rept-stat-lg](#)
- [rtv-lg-card](#)

4.1.179 dact-lg-engine

Use this command to deactivate LG event generation/reception for a given engine on a LG engine. The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSPG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

dir (optional)

Traffic Direction.

Range:

Rx

Receive Direction

Tx

Transmit Direction

All

Both in Tx and Rx directions

Default:

All

engine (optional)

Range: ayyyyyyyyy

Up to 10 alphanumeric characters; the first character must be a letter.

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

Example

```
dact-lg-engine:loc=1301
dact-lg-engine:loc=1301:dir=tx
dact-lg-engine:engine=txengine1
```

Dependencies

The engine name specified must pre-exist in the LG Engine table.

5209 E5209 Cmd Rej: LG Engine not defined

The `loc` and `engine` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The card location specified in the `loc` parameter must be of a provisioned LG card.

5239 E5239 Cmd Rej: LG card not defined

The `loc` parameter must be specified before the `dir` parameter can be specified.

2379 E2379 Cmd Rej: Missing parameter

Activating the state of an LG object that is already activated or deactivating the state of an LG object that is already deactivated has no effect.

3827 E3827 Cmd Rej: No change requested

Output

Related Topics

- [act-lg-engine](#)
- [chg-lg-engine](#)
- [dlt-lg-engine](#)
- [ent-lg-engine](#)
- [rept-stat-lg](#)
- [rtrv-lg-engine](#)

4.1.180 dact-lg-grp

Use this command to deactivate event generation/reception for a LG group. The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

grp (mandatory)

Range:

aaaaaaaa

Up to 10 alphanumeric characters; the first character must be a letter

dir (optional)

The direction in which the event generation or reception is to be deactivated

Range:

Rx

Receive Direction

Tx

Transmit Direction

All

Both in Tx and Rx directions

Default:

All

Example

```
dact-lg-grp:grp=lgroup1:dir=tx
```

```
dact-lg-grp:grp=lgroup2
```

Dependencies

The value specified for the `grp` parameter must already exist in the LG Group table.

5207 E5207 Cmd Rej: LG Group not defined

The LG Group table is corrupt or cannot be found.

5221 E5221 Cmd Rej: Unable to read LG Group table

The `grp` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

Activating the state of an LG object that is already activated or deactivating the state of an LG object that is already deactivated has no effect.

3827 E3827 Cmd Rej: No change requested

Output

Related Topics

- [act-lg-grp](#)
- [dlt-lg-grp](#)
- [ent-lg-grp](#)
- [rept-stat-lg](#)
- [rtrv-lg-grp](#)

4.1.181 dact-lg-sys

Use this command to deactivate the LG event generation/reception on all LG cards configured in the system.

The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSTG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

dir (mandatory)

The direction in which the event generation or reception is to be deactivated

Range:

Rx

Receive Direction

Tx

Transmit Direction

All

Both in Tx and Rx Directions

Default:

all

Example

```
dact-lg-sys:dir=tx
dact-lg-sys:dir=rx
dact-lg-sys:dir=all
```

Dependencies

The LG System table is corrupt or cannot be found.

5220 E5220 Cmd Rej: Unable to read LG System table

The `dir` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

Activating the state of an LG object that is already activated or deactivating the state of an LG object that is already deactivated has no effect.

3827 E3827 Cmd Rej: No change requested

Output**Related Topics**

- [act-lg-sys](#)
- [rept-stat-lg](#)
- [rtrv-lg-sys](#)

4.1.182 dact-rstst

Use this command to request deactivation of the routeset test being performed by the LIMs running the *ss7ansi* application. The system verifies that the point code and the linkset exist, and that the specified linkset is in the routeset of the specified point code. If it is, then a request to stop routeset testing procedures for the specified destination-linkset combination is sent to the LIM.

Parameters**dpcc (mandatory)**

The ANSI destination point code of the destination, x-list entry, or cluster whose routeset testing is to be stopped, with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

dpca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001–005*.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.
The point code `000-000-000` is not a valid point code.

lsn (mandatory)

The name of the linkset associated with the destination point code that is to have routeset testing stopped.

Range:

`ayyyyyyyy`

1 alphabetic character followed by 9 alphanumeric characters

Example

```
dact-rstst:dpc=1-2-*:lsn=lsn1a
```

```
dact-rstst:dpc=1-2-33:lsn=lsn1b
```

Dependencies

The specified DPC must be either provisioned or an x-list entry.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

The specified linkset must be in the DPC's routeset.

2351 E2351 Cmd Rej: Linkset not assigned in route table

The destination address must be a full point code or a cluster point code specified as `ni-nc-*`. A DPC cannot be specified as `ni-nc-**` or `ni-nc-***` for the this command.

2886 E2886 Cmd Rej: DSTN address must be a full, network or cluster PC

The specified linkset must exist in the linkset table.

2384 E2384 Cmd Rej: Link set is not equipped

Notes

None

Output

```
dact-rstst:dpc=1-2-*:lsn=lsn1a
```

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
Stop routeset testing request sent to SNM (scroll area)
```

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
Command Completed.
```

```
;
```

4.1.183 dact-slk

Use this command to change the state of the specified link to OOS-MT-DSBLD (out-of-service maintenance-disabled).

▲ Caution:

This command impacts network performance, and should be used only during periods of low traffic.

Parameters**link (mandatory)**

Signaling link on the card specified in the `loc` parameter. The signaling links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all `link` parameter values.

See [Table A-1](#) for valid `link` parameter range values for each type of card that can have a location specified in the `loc` parameter.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
dact-slk:loc=1301:link=a
```

Dependencies

Valid IMT bus entries are "A" or "B".

2247 E2247 Cmd Rej: Bus parameter invalid

A card location must be specified that is valid and defined in the database.

2376 E2376 Cmd Rej: Specified LOC is invalid

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The value specified for the `loc` parameter must refer to one of the following cards, and the referenced card must be equipped:

- E5-E1T1-B, or HC MIM card running the SS7ANSI or CCS7ITU application
- E5-ATM-B card running the ATMANSI or ATMITU application
- E5-ENET-B card running the IPGWI, IPLIMI, IPSG, or SS7IPGW application
- SLIC card running the IPSG application

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The card must contain signaling links.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

The signaling link must be equipped in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

The card must be equipped in the specified card location.

2101 E2101 Cmd Rej: Card location is unequipped

An appropriate value must be specified for the `link` parameter when an ATM card is used:

- `a-a1, b`—E5-ATM-B card running the ATMANSI or ATMITU application

2972 E2972 Cmd Rej: Specified Link is not valid for Card and Appl Type

This command is not valid for IPSPG-M3UA signaling links.

4813 E4813 Cmd Rej: Command not valid for IPSPG-M3UA

Notes

Installation Guide provides an illustration of card locations.

After the `dact-slk` command is entered, verify the cancellation by issuing the `rept-stat-slk` command.

Output

```
dact-slk:loc=1301:link=a
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE5 33.0.0
Deactivate Link message sent to card
;
```

Related Topics

- [act-slk](#)
- [blk-slk](#)
- [dlt-slk](#)
- [ent-slk](#)
- [inh-slk](#)
- [rept-stat-slk](#)
- [rtrv-slk](#)
- [tst-slk](#)
- [ublk-slk](#)
- [unhb-slk](#)

4.1.184 dact-user

Use this command to end a user session. The `logout` command has the same affect as the `dact-user` command.

Parameters

This command has no parameters.

Example

```
dact-user
```

Dependencies

None

N/A N/A

Notes

The `logout` or `canc-user` commands can be used in place of `dact-user`.

Output

Not applicable.

Related Topics

- [act-user](#)
- [chg-pid](#)
- [chg-user](#)
- [dlt-user](#)
- [ent-user](#)
- [login](#)
- [logout](#)
- [rept-stat-user](#)
- [rtrv-secu-user](#)
- [rtrv-user](#)

4.1.185 disc-imt

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to disconnect a card from the specified IMT bus.

 **Note:**

When a card is disconnected from the IMT Bus, it may take several seconds for the card IMT Status to be updated. If an `init-mux` or `disc-imt` command is entered for the alternate IMT Bus before the card IMT Status is updated, then the card may reboot. After disconnecting the card from the IMT bus, use the `rept-stat-imt` or `rept-stat-card` command to determine whether the card IMT status is updated. Do not issue the `disc-imt` or `init-mux` command for the alternate IMT bus until the card status is updated.

Parameters**bus (mandatory)**

IMT bus to be disconnected from.

Range:

a, b

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

Example

```
disc-imt:loc=1213:bus=b
```

Dependencies

Valid IMT bus entries are "A" or "B".

2247 E2247 Cmd Rej: Bus parameter invalid

This command cannot be entered during an IMT Fault Isolation Test. The card cannot be isolated from both IMT busses.

2968 E2968 Cmd Rej: Card disconnect from both IMT busses not allowed

When disconnecting a card from one IMT bus, the other (alternate) IMT bus must be in a known, good (IS-NR) state.

2969 E2969 Cmd Rej: Unable to determine current connect status of card

The card location, frame, shelf, or slot must be within the allowed range.

2016 E2016 Cmd Rej: <parm_desc> is out of range - <parm>

This command cannot be entered if an IMT Rate Change sequence is in progress.

5184 E5184 Cmd Rej: IMT Rate Change sequence is in progress

This command cannot be entered during an IMT Fault Isolation Test or an Extended Bit Error Rate Test (BERT).

3043 E3043 Cmd Rej: IMT test in progress

Notes

The card can be reconnected by issuing the `conn-imt` command, or by re-inserting the card. A software reset does not affect connect status. (The `init-card` command performs a software reset.)

Output

```
disc-imt:loc=1213:bus=b
```

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0
Disconnect IMT Bus B command issued to card 1213
;
```

Related Topics

- [clr-imt-stats](#)
- [conn-imt](#)
- [rept-imt-lvl1](#)
- [rept-imt-lvl2](#)
- [rept-stat-imt](#)
- [rmv-imt](#)
- [rst-imt](#)

4.1.186 disp-fta-dir

Use this command to display the files that are in the file transfer area (FTA) the layout of FTA, and the amount of free space in the FTA.

Parameters

loc (optional)

The location of the fixed disk whose FTA is to be displayed.

Range:

1114, 1116
(TDMs)

Default:

The active TDM location

Example

```
disp-fta-dir:loc=1114
```

Dependencies

This command must display the files (along with deleted files and free slots) in the order in which they appear in the file transfer area.

N/A N/A

The `loc` parameter must specify a TDM card.

2237 E2237 Cmd Rej: Card location must be 1114 or 1116

Only one file transfer can be active at a time.

2221 E2221 Cmd Rej: File transfer in progress

TDM and E5-TDM cards cannot co-exist in the system.

3084 E3084 Cmd Rej: Both OAM cards must be of the same type

Notes

None

Output

```
disp-fta-dir:loc=1114
```

```

rlghncxa03w 05-07-01 16:21:12 EST  EAGLE 31.3.0
File Transfer Area Directory of fixed disk 1114:

FILENAME                LENGTH  LAST MODIFIED  LBA
oam.elf                  1048576 05-07-01 16:51 40960
<deleted>                65536  -----  ----- 43008
sccp.elf                 1048576 05-07-01 18:30 43136
<deleted>                1048576  -----  ----- 46704
tbl213.out               640000 05-07-01 06:39 48752
  5 File(s) 21584896 bytes free

```

;

Related Topics

- [act-file-trns](#)
- [copy-fta](#)
- [dlt-fta](#)

4.1.187 dlt-acg-mic

Use this command to delete ACG controls that apply to certain queries. The control can apply to all queries or to specific query services and called party digits. A particular control is selected to be deleted by either specifying that it is the `type=all` control or specifying its service and digits.

Parameters

dgts (optional)

Digits

Range:

000 - 999, 000000 - 9999999999

Specify 3 digits or 6-10 digits.

serv (optional)

Query service

Range:

ain

in

type (optional)

Type of control

Range:

all

sd

Default:

sd

Example

```
dlt-acg-mic:type=all
```

```
dlt-acg-mic:serv=ain:dgts=9194602132
```

Dependencies

If the `type=all` parameter is specified, then the `serv` and `dgts` parameters cannot be specified.

3057 E3057 Cmd Rej: Parameters SERV and DGTS are not allowed for TYPE = ALL

If the `type=sd` parameter is specified, then the `serv` and `dgts` parameters must be specified.

3058 E3058 Cmd Rej: Parameters SERV and DGTS are required

If the `type=all` parameter is specified, a MIC with `type=all` must exist.

3072 E3072 Cmd Rej: No MIC of TYPE=ALL exists

If the `type=sd` parameter is specified, a MIC with the same service and digits must exist.

3073 E3073 Cmd Rej: No MIC with the same service and digits exists

The LNP feature must be turned on before this command can be entered.

3009 E3009 Cmd Rej: LNP feature must be ON

The `dgts` parameter value must be 3 digits or 6-10 digits in length.

3064 E3064 Cmd Rej: DGTS parameter must be 3 or 6-10 digits

Notes

None

Output

```
dlt-acg-mic:type=all
```

```
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0  
ACG MIC table is (10 of 256) 4% full of type SD  
DLT-ACG-MIC: MASP A - COMPLTD
```

;

Related Topics

- [chg-acg-mic](#)
- [ent-acg-mic](#)
- [rept-stat-lnp](#)
- [rtrv-acg-mic](#)

4.1.188 dlt-acg-noc

Use this command to delete the definition of a node overload level. The definition is comprised of the threshold LNP query rates for node overload levels and the values for the Automatic Call Gappings (ACG) to be sent when at the level. If a level is not defined, it is not used. Level 10 cannot be deleted.

Parameters

lvl (mandatory)

Overload level.

Range:

1 - 9

Example

```
dlt-acg-noc:lvl=3
```

Dependencies

The specified overload level must be defined.

3054 E3054 Cmd Rej: The specified overload level is not defined

The ACG NOC table must be accessible.

3053 E3053 Cmd Rej: Failed reading ACG NOC table

The LNP feature must be turned on before this command can be entered.

3009 E3009 Cmd Rej: LNP feature must be ON

Notes

None

Output

```
dlt-acg-noc:lvl=3
```

```
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
DLT-ACG-NOC: MASP A - COMPLTD
;
```

Related Topics

- [chg-acg-noc](#)
- [ent-acg-noc](#)
- [rept-stat-lnp](#)
- [rtv-acg-noc](#)

4.1.189 dlt-appl-rtkey

Use this command to delete static entries from the Routing Key table. These entries are used to associate a routing key with a socket name. A static entry is created using the `ent-appl-rtkey` command.

There are three types of routing keys, as follows:

- DPC, SI, SSN routing keys, which are used to route SCCP messages
- DPC, SI routing keys, which are used to route non-SCCP and non-ISUP messages
- DPC, SI, CIC routing keys, which are used to route ISUP messages

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

asname (optional)

Application Server (AS) name; AS assigned to this routing key.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

cice (optional)

The end range of circuit identification codes assigned to the routing key. The `cice` and `cics` parameters identify the routing key to be changed. Valid only and required if a value of 4, 5, or 13 is specified for the `si` parameter.

Range:

0 - 4294967295

See [Table A-4](#) for valid CIC values for specified SI and MSU types.

cics (optional)

The end range of circuit identification codes assigned to the routing key. The `cice` and `cics` parameters identify the routing key to be changed. Valid only and required if a value of 4, 5, or 13 is specified for the `si` parameter.

Range:

0 - 4294967295

See [Table A-4](#) for valid CIC values for specified SI and MSU types.

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

dpca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified

when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un-000-127

sna-000-15

mna-000-31

opc (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym:

opca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni* = 000 is not valid.

When `chg-sid:pctype=ansi` is specified, *nc* = 000 is not valid if *ni* = 001–005.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.
The point code `000-000-000` is not a valid point code.

opc/opca/opci/opcn/opcn24/opcn16 (optional)

Originating point code. Valid only and required if the `si` parameter has a value of 4, 5, or 13.

opci (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code `0-000-0` is not a valid point code.

opcn (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

opcn24 (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

opcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:*000---127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*un-000-127**sna-000-15**mna-000-31***rcontext (optional)**

Identify a routing key by its routing context when a routing key needs to be deleted as an optional alternative to entering the *dpc/si/ssn/opc/cics/cice/type* key parameters.

Range:*0 - 4294967295***si (optional)**

Service indicator.

Range:*0 - 15**0-15* or equivalent text values**Number = Text—Description***0=snm*—Signaling network management messages*1=regtest*—Signaling network testing and maintenance regular*2=spltest*—Signaling network testing and maintenance special*3=sccp*—SCCP*4=tup*—Telephone user part*5=isup*—ISDN user part*13=qbicc***ssn (optional)**

Subsystem number.

Range:*0 - 255***type (optional)**

Type of routing key that is being changed.

Range:*full**partial**default***Default:***full***Example**

```
dlt-appl-rtkey:dpc=1-1-1:si=3:aname=as1:ssn=255
```

```
dlt-appl-rtkey:dpci=s-3-11-1:si=5:opci=s-4-11-2:
cics=1:cice=1000:asname=asitu
dlt-appl-rtkey:rcontext=100
dlt-appl-
rtkey:dpcn16=121-10-5:si=5:opcn16=121-10-6:cics=1:cice=1000:
asname=asitu
```

Dependencies

The SSN is valid and must be specified only when the `si=3` (or `sccp`) parameter is specified. When the `si=3` (or `sccp`) parameter is not specified, the `ssn` parameter must not be specified.

3757 E3757 Cmd Rej: SSN is not allowed unless SI is 3

The value entered for the `cics` parameter must be less than or equal to the value entered for the ending circuit identification code `cice` parameter.

3783 E3783 Cmd Rej: CICS must be less than or equal CICE

A circuit identification code range (`cics` to `cice`) that overlaps an existing routing key cannot be specified.

3786 E3786 Cmd Rej: CIC Range overlaps an existing routing key

When the DPC is ANSI and the `si=4` parameter is specified, a DPC/SI routing key must be specified (TUP is used only in an ITU network).

3874 E3874 Cmd Rej: TUP must use DPC/SI route key if DPC is ANSI

The `opc`, `cics`, and `cice` parameters are required and can be entered only if the `si` parameter value is 4, 5, or 13.

3788 E3788 Cmd Rej: OPC, CICS, CICE are required if SI is 4, 5 or 13

If the `si` parameter has a value of 4, 5, or 13 (*tup, isup*), or the `qbicc` parameter is specified, the `opc`, `cics`, and `cice` parameters used to route ISUP messages must be specified. The `opc`, `cics`, and `cice` parameters can be specified only if the `si` parameter has a value of 4, 5, or 13 (*tup, isup*), or if the `qbicc` parameter is specified.

3788 E3788 Cmd Rej: OPC, CICS, CICE are required if SI is 4, 5 or 13

[Table A-4](#) shows valid CIC values for SI types 4, 5, and 13.

The routing key must be in the Routing Key table.

3764 E3764 Cmd Rej: Routing Key not found

If the `asname` parameter is specified, the AS name must already be defined in the AS table. The AS name and parameters specified for a routing key must use an address format that is valid for the adapter type used by the ASP associations assigned to the AS.

4079 E4079 Cmd Rej: Specified AS name not found

When the `type=full` parameter is specified, the `dpc` and `si` parameters must be specified.

3999 E3999 Cmd Rej: When type=full, DPC and SI must be specified

The following types of partial routing keys are supported:

- DPC-SI-OPC (ignore CIC) can be used as a partial match key for CIC- based traffic.
- DPC-SI (ignore all other fields) can be used as a partial match key for CIC- based traffic or SCCP traffic.
- DPC only (ignore all other fields) can be used as a partial match for any type of traffic.
- SI only (ignore all other fields) can be used as a partial match for any type of traffic.

3955 E3955 Cmd Rej: Invalid combination of parameters for a partial routing key

The following card locations are not valid for this command: 1113, 1115, 1117, 1118, and all xy09 and xy10 locations (where x is the frame and y is the shelf). The card must be equipped and in service.

2025 E2025 Cmd Rej: Invalid card location

If the `type=default` parameter is specified, then the `dpc`, `si`, `ssn`, `opc`, `cice`, and `cics` parameters cannot be specified.

3959 E3959 Cmd Rej: Invalid combination of parameters for a default routing key

The `asname` or the `rcontext` parameter must be specified in the command.

4600 E4600 Cmd Rej: Must specify ASNAME or RC

The `opc`, `cics`, and `cice` parameters can be specified with the `si` parameter only if the `si` parameter has a value of 4, 5, or 13 (or `tup`, `isup`, or `qbicc`).

3789 E3789 Cmd Rej: OPC, CICS, CICE are not allowed unless SI is 4, 5 or 13

Notes

A specific routing key/socket name association can be deleted by specifying a fully qualified routing key (`dpc/dpca`, `si`, `ssn`, and `asname`). By default, socket associations in the static key entries are deleted using the `dlt-appl-rtkey` command.

The OPC and DPC cannot specify a cluster route.

Group codes are required for ITU-N point codes (DPCN/OPCN) when the Duplicate Point Code feature is turned on.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
dlt-appl-rtkey:asname=tekelec:si=3:ssn=255:type=full:dpc=2-2-2
```

```
rlghncxa03w 08-03-17 15:35:05 EST EAGLE 38.0.0
DLT-APPL-RTKEY: MASP A - COMPLTD
;
```

Related Topics

- [ent-appl-rtkey](#)

- [rtrv-appl-rtkey](#)

4.1.190 dlt-as

Use this command to delete an AS.

Parameters

aname (mandatory)

Name of the M3UA/SUA SCTP association to be deleted.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter.

asname (mandatory)

Application Server assigned to the routing key.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

Example

```
dlt-as:as=asx:aname=asxp1
```

Dependencies

An AS that is still assigned to a routing key cannot be deleted.

N/A N/A

The connection state for the associations assigned to the AS must be `open=no` before the AS can be deleted.

4098 E4098 Cmd Rej: OPEN must be NO to change an Association or its AS/Rtkey

The AS must be defined in the AS table.

4079 E4079 Cmd Rej: Specified AS name not found

The specified associaton name (`aname`) parameter must be defined in the AS.

N/A N/A

Notes

None

Output

```
dlt-as:as=asx:as=asxp1
```

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0  
DLT-AS: MASP A - COMPLTD
```

;

Related Topics

- [chg-as](#)
- [ent-as](#)
- [rept-stat-as](#)
- [rtrv-as](#)

4.1.191 dlt-assoc

Use this command to delete the SCTP associations from the IPAPSOCK table.

Parameters**aname (mandatory)**

Name assigned to the association to be deleted.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

Example

```
dlt-assoc:aname=tekelec
```

Dependencies

The value specified for the `aname` parameter must already exist in the IP Socket/Association (IPAPSOCK) table.

N/A N/A

An association that exists on any AS cannot be deleted from the IPAPSOCK table.

4109 E4109 Cmd Rej: Association is still assigned to AS

An AS assigned to a routing key cannot be deleted from the IPAPSOCK table.

4073 E4073 Cmd Rej: AS/socket cannot be deleted while assigned to a routing key

The connection state must be `open=no` to delete the association from the IPAPSOCK table.

4098 E4098 Cmd Rej: OPEN must be NO to change an Association or its AS/Rtkey

If the association on an IPSPG card is referenced by a signaling link, then the association cannot be deleted.

4801 E4801 Cmd Rej: Association is still assigned to a link

An association that is already assigned to a diameter connection in the DCONN table cannot be deleted from the IPAPSOCK table.

2792 E2792 Cmd Rej: Association already assigned to Connection

Notes

None.

Output

```
dlt-assoc:aname=tekelec
```

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
DLT-ASSOC: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-assoc](#)
- [ent-assoc](#)
- [rtrv-assoc](#)

4.1.192 dlt-card

Use this command to remove a card entry from the system database.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118, 6201 - 6208, 6211 - 6218, 6301 - 6308, 6311 - 6318*

Example

```
dlt-card:loc=1201
```

```
dlt-card:loc=6201
```

Dependencies

The card location slot must be between 1 - 18, but not 9 or 10.

2016 E2016 Cmd Rej: Card Location is out of range - loc

The card location cannot be 1113–1118.

2154 E2154 Cmd Rej: Card slot reserved by system

The shelf location must be 11xx, 12xx, 13xx, 21xx, 22xx, 23xx, 31xx, 32xx, 33xx, 41xx, 42xx, 43xx, 51xx, 52xx, 53xx, 61xx, 62xx, or 63xx.

2152 E2152 Cmd Rej: Shelf ID out of range

The shelf and card must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

Before this command can be entered, all TCP/IP data links assigned to the card must be deleted.

2629 E2629 Cmd Rej: Card has IP LNK with IP address assigned

Before an E1 card can be deleted, any E1 interfaces assigned to the card must be deleted.

4046 E4046 Cmd Rej: E1 is assigned to card

Before a T1 card can be deleted, any T1 interfaces assigned to the card must be deleted.

2742 E2742 Cmd Rej: T1 is assigned to card

After the links are deleted, the card must be inhibited before it can be deleted. Use the `inh-card` command to set the card to the OOS-MT-DSBLD state.

3726 E3726 Cmd Rej: Active device state does not permit database change

Before this command can be entered, SS7 signaling links assigned to the card must be deleted. E5-APP-B cards do not need to be inhibited first before they can be deleted.

2107 E2107 Cmd Rej: Link assigned to card

Only one database change, action, backup, or restore can be in progress at a time.

2200 E2200 Cmd Rej: Database maint. in progress - retry later

The E1/T1 table must be accessible.

4059 E4059 Cmd Rej: Failed reading the E1/T1 table

The Shelf table must be accessible.

2104 E2104 Cmd Rej: Failed reading the shelf table

The Card (IMT) table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

The Link table must be accessible.

2103 E2103 Cmd Rej: Failed reading the link table

All the LG Card related configuration must be deleted before allowing the deletion of card from database.

5237 E5237 Cmd Rej: Card is configured as LG card

Before a J1 card can be deleted, any J1 interfaces assigned to the card must be deleted.

3157 E3157 Cmd Rej: J1 is assigned to card

Before deleting the SFLOG card, the SFLOG action must be deleted from the GTT Action table.

3275 E3275 Cmd Rej: SFLOG action is being referred by GTTACT Table

Notes

If a SEAS terminal is configured for a location, then entering the `dlt-card` command causes the warning "Invalidating the Terminal data in SEASCFG table" to appear.

Output

```
dlt-card:loc=1201
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0  
DLT-CARD: MASP A - COMPLTD
```

```
;
```

```
dlt-card:loc=6201
```

```
tekelecstp 13-02-28 12:40:29 EST 45.0.0  
DLT-CARD: MASP A - COMPLTD
```

```
;
```

Related Topics

- [init-card](#)
- [rept-stat-card](#)
- [rmv-card](#)
- [rtrv-card](#)

4.1.193 dlt-csl

Use this command to delete an existing entry from the Common Screening List (CSL). The Common Screening List commands are used to tailor certain types of general screening information to specific features.

Parameters

Note:

Either the `ds` parameter or the `pc` parameter must be specified in the command. Both parameters cannot be specified in the same command.

ds (optional)

Digit string. A unique string of digits that is used by the specified screening feature.

Range:

1 - 15 hexadecimal digits. Valid digits are 0-9, a-f, A-F

- 1-6 digits—Prepaid IDP Query Relay CCNC list
- 1-15 digits—Prepaid IDP Query Relay GT list
- 1-10 digits—Prepaid IDP Query Relay SKBCSM list
- 4 digits—IDP Screening for Prepaid SKTS list

npbypass
SIP NPBYPASS List

skbcm
SK+BCSM List

skts
Service Key + Teleservice List

trig
Trigger List

vmplx
Voice Mail Prefix List

opcdpc
OPC + DPC List

The following screening lists are valid for the indicated features:

- *ccnc*, *gt*—Prepaid IDP Query Relay and Info Analyzed Relay Base
- *imsipfx* --- EIR

 **Note:**

If list argument is not specified in this command for EIR feature then list = *imsipfx* by default is taken

- *inrl*, *skts*—IDP Screening for Prepaid
- *npbypass* — SIP Number Portability
- *skbcm*—Prepaid IDP Query Relay and IDP Service Key Routing
- *trig*—Info Analyzed Relay Base
- *vmplx*—VFLEX
- *opcdpc*—Prepaid IDP Query Related

The *delpfx* list is not supported at this time. This list should only be used by Oracle personnel.

pc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:
pca

Range:
000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.
The point code `000-000-000` is not a valid point code.

**Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

pc/pca/pci/pcn/pcn24 (optional)

Point code. The `ds` parameter or a point code parameter must be specified.

pci (optional)

ITU international point code with subfields *zone-area-id*.

Range:

0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0–7

area—000–255

id—0-7

The point code *0-000-0* is not a valid point code.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

dpc(optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:*dPCA***Range:***000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code *000-000-000* is not a valid point code.

dpc/dPCA/dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:*s-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix-s**zone-0-7**area-000-255**id-0-7*

The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfnti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix-s-**nnnnn-0-16383**gc-aa-zz*

m1-m2-m3-m4-0-14 for each member; values must sum to 14

dpcn24 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:
000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa-000-255

ssa-000-255

sp-000-255

dpcn16 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:
000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

opc (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:
opca

Range:
000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code *000-000-000* is not a valid point code.

opc/opca/opci/opcn/opcn24/opcn16 (optional)

Originating point code.

opci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:
s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-s

zone-0-7

area-000-255

id-0-7

The point code *0-000-0* is not a valid point code.

opc_n (optional)

New ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-s-

nnnnn-0-16383

gc-aa-zz

m1-m2-m3-m4-0-14 for each member; values must sum to 14

opc_{n24} (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa-000-255

ssa-000-255

sp-000-255

opc_{n16} (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:

000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

pn (optional)

Part Number. The 9-digit "893xxxxx" part number of the feature for which the command is entered. The `rtrv-ctrl-feat` command description shows the part number in the command output example.

Range:

893000000 - 893999999

The first 3 digits are 893. Do not separate the digits with dashes or spaces. The following part numbers are valid for this command:

- 893012301—EIR
- 893015501—IDP Screening for Prepaid
- 893016001—Prepaid IDP Query Relay
- 893034201—Info Analyzed Relay Base
- 893016701—VFLEX

Example

```
dlt-csl:feature="IDP Screening for Prepaid":list=insl:ds=246810
dlt-csl:pn=893015501:list=skts:ds=36ab
dlt-csl:feature="VFLEX":list=vmpfx:ds=123456789abcDEF
dlt-csl:pn=893040601:list=npbypass:ds=0000000056
dlt-csl:feature="EIR":list=imsipfx:ds=4012312312
dlt-csl:pn=893016001:list=opcdpc:dpci=4-5-6
dlt-csl:pn=893016001:list=opcdpc:dpci=4-5-6:opci=2-1-2
```

Dependencies

An enabled feature must be specified using a valid part number (`pn` parameter) or feature name (`feature` parameter). The specified feature must use a Common Screening List.

4458 E4458 Cmd Rej: Common screening list feature is required

The value specified for the `feature` parameter must be a valid feature name for a feature that uses a Common Screening List. The feature name must be specified as it appears in the `rtrv-ctrl-feat` command output. Enough of the name must be specified to make the name unique when two features begin with the same word or acronym.

4339 E4339 Cmd Rej: Common screening list feature invalid

The feature that is specified in the `feature` parameter must be enabled.

4468 E4468 Cmd Rej: Common screening list requested feature must be enabled

The `list` parameter must be specified for features that use more than one type of screening list.

4459 E4459 Cmd Rej: Common screening list type is required

The value specified for the `list` parameter must be valid for the specified screening feature.

4460 E4460 Cmd Rej: Common screening list type is invalid

The specified screening list entry must exist in the screening list that is used by the feature.

4462 E4462 Cmd Rej: Common screening list entry not present

The following parameters are allowed with the indicated common screening list type:

- list=gt— ds parameter
- list=ccnc—ds parameter
- list=imsipfx--- ds parameters
- list=skbcm—ds parameter
- list=skts—ds parameter
- list=insl—ds parameter
- list=vmpfx—ds parameter
- list=trig—ds parameter

4464 E4464 Cmd Rej: Common screening list invalid parameter combination

The Common Screening List table is corrupt or cannot be found.

4467 E4467 Cmd Rej: Common screening list read fail

The *opc/dpc*, *pc* and *ds* parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The parameter *p1* or *p2* cannot be specified in the command.

2014 E2014 Cmd Rej: Unrecognized parameter identifier.

For IDPR service, if list type *opcdpc* given, then *opc/dpc* parameter must be specified.

Notes

None

Output

```
dlt-csl:pn=893015501:list=insl:ds=123456789abcdEF
```

```
tekelecstp 05-08-21 15:18:41 EST EAGLE 34.3.0
INSL List table is (5 of 50) 10% full
DLT-CSL: MASP A - COMPLTD
```

```
;
```

```
dlt-csl:pn=893040601:list=npbypass:ds=0000000012
```

```
tekelecstp 12-06-25 15:29:14 EST EAGLE 45.0.0
dlt-csl:pn=893040601:list=npbypass:ds=0000000012
Command entered at terminal #4.
PFX List (2 of 1000) 1%
```



```
DLT-CSL: MASP A-COMPLTD  
;
```

Related Topics

- [chg-csl](#)
- [ent-csl](#)
- [rtrv-csl](#)
- [rtrv-ctrl-feat](#)

4.1.194 dlt-cspc

Use this command to remove a CSPC or an entire CSPC group.

Parameters

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

One, but not both, of these optional parameters must be specified: all, pc/pca/pci/pcn/pcn24.

grp (mandatory)

Group name

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

a11 (optional)

Use this parameter to confirm that all entries for this concerned signaling point code group are to be removed.

Range:

yes

no

Default:

no

pc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:*000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24/pcn16 (optional)

Concerned signaling point code.

pci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:*s-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**pcn24 (optional)**

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:*p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000-255**ssa—000-255**sp—000-255*

pcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code.

Range:

p--, 000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix---**p*

*un---*000---127

*sna---*000---15

*mna---*000---31

Example

```
dlt-cspc:grp=grp01:pc=144-201-001
```

```
dlt-cspc:grp=grp01:pci=s-144-201-001
```

```
dlt-cspc:grp=grp01:all=yes
```

```
dlt-cspc:grp=grp01:pcn16=123-7-20
```

Dependencies

A CPC group name must be specified. The specified group name must exist in the database.

2411 E2411 Cmd Rej: CSPC group does not exist

The `grp` parameter and the `all=yes` parameter must be entered with no point code parameter, to remove a group and all of its point codes.

2421 E2421 Cmd Rej: ALL=YES must be specified to delete the entire group

If a PC is specified, then the PC network type must match the group network type, and the PC must exist in the specified CPC group. The specified PC is removed from the CPC group.

2414 E2414 Cmd Rej: PC does not exist in CSPACE group

Either a PC parameter or the `all=yes` parameter must be specified.

2448 E2448 Cmd Rej: ALL=YES cannot be specified with a point code

The Spare Point Code Support feature must be enabled before the spare PC prefix `s-` can be specified for an ITU-I or ITU-N point code.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The `pc/pca/pci/pcn/pcn24` parameter and the `all` parameter cannot be specified in the same command.

2448 E2448 Cmd Rej: ALL=YES cannot be specified with a point code

The specified CSPACE group must not be referred to by any Mate Application entity.

4534 E4534 Cmd Rej: CSPACE entry is being referred by other entities

If the Flexible GTT Load Sharing feature is not enabled, a CAUTION is displayed. When the feature is enabled, the command is rejected with message E4534.

Notes

The system issues a warning if a mate application entity could potentially use a group name that is being deleted.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
dlt-cspc:grp=grp01:pci=2-2-2

      tekelecstp 04-04-08 12:42:47 EST  EAGLE 31.3.0
      DLT-CSPC: MASP A - COMPLTD
;
```

Related Topics

- [ent-cspc](#)
- [rtrv-cspc](#)

4.1.195 dlt-dconn

Use this command to delete existing Diameter connection information. The DCONN table supports the provisioning information related to the Diameter connections.

Parameters

dcname (mandatory)

Diameter connection name. This parameter specifies the unique logical name assigned to each diameter connection.

Range:

aaaaaaaaaaaaaaaa

A string of alphanumeric characters, beginning with a letter and up to 15 characters in length. Valid values are a..z, A..Z, 0..9.

Default:

No change to the current value

System Default:

null

Example

```
dlt-dconn:dcname=conn1
```

Dependencies

S13 feature must be enabled before deleting any existing diameter connection.

2724 E2724 Cmd Rej: S13 Feature Must Be Enabled

DCONN table should be accessible.

2735 E2735 Cmd Rej: Failed reading DCONN table

The value specified for the **DCNAME** parameter must already exist in the DCONN table.

2783 E2783 Cmd Rej: DCNAME not present in DCONN table

Any Diameter Connection that is still OPEN to receive traffic cannot be deleted (the open parameter set to yes with the chg-assoc command).

2682 E2682 Cmd Rej: Cannot delete an open Connection

Notes

None

Output

```
dlt-dconn:dcname=conn1
```

```
tekelecstp 13-03-19 15:29:14 EST EAGLE 45.1.0
dlt-dconn:dcname=conn1
Command entered at terminal #4.
DLT-DCONN: MASP A - COMPLTD
;
```

Related Topics

- [chg-dconn](#)
- [ent-dconn](#)
- [rtv-dconn](#)

4.1.196 dlt-dlk

Use this command to remove a TCP/IP data link from the database. The TCP/IP data link is used for the STP LAN feature, connecting the system to a remote host for message processing.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
dlt-dlk:loc=1201
```

Dependencies

N/A N/A

The shelf and card must be equipped.

N/A N/A

The location specified by the `loc` parameter must already have a TCP/IP data link assigned to it.

2604 E2604 Cmd Rej: Card location not assigned a TCP/IP link

The specified card and data link must be out-of-service maintenance-disabled (OOS-MT-DSBLD).

2631 E2631 Cmd Rej: Link must be cancelled before executing this command

Notes

None

Output

```
dlt-dlk:loc=1201
```

```
rlghncxa03w 04-02-10 11:43:02 EST EAGLE 31.3.0  
DLT-DLK: MASP A - COMPLTD
```

```
;
```

Related Topics

- [act-dlk](#)
- [canc-dlk](#)
- [ent-dlk](#)
- [rept-stat-dlk](#)
- [rtrv-dlk](#)
- [tst-dlk](#)

4.1.197 dlt-dstn

Use this command to delete destinations from the Destination entity set after the STP no longer routes to those destinations.

Parameters

 **Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (mandatory)

Destination point code.

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

p-, 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*-

The asterisk value (*) is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p*-, *ps*-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps*

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code (*gc*) must be specified when the ITUDUPPC feature is turned on. The *prefix* indicates a spare point code, private point code, or private and spare point code.

Range:

s-, *p*-, *ps*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps*

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code.

Range:*p-*, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000—255**ssa—000—255**sp—000—255***dpcn16 (optional)**16-bit ITU national point code with subfields *unit number sub number area main number area* (un-sna-mna). The *prefix* indicates a private point code (*prefix-un-sna-mna*).**Range:***p--*, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix---p**un---000---127**sna---000---15**mna---000---31***Example**

To delete destination 11-222-111:

`dlt-dstn:dpc=111-222-111`

To delete a network destination:

`dlt-dstn:dpc=21-**-*`

To delete destination 8112-ge:

`dlt-dstn:dpcn=8112-ge`

To delete ITU-N 24-bit destination 13-100-10:

`dlt-dstn:dpcn24=13-100-10`

To delete destination spare point code s-8112:

`dlt-dstn:dpcn=s-8112`**Dependencies**

The destination address must be either a full point code, a cluster point code, or a network destination point code.

2886 E2886 Cmd Rej: DSTN address must be a full, network or cluster PC

The format of the specified `dpcn` parameter must match the format for ITU national point codes that was assigned with the `chg-stpopts:npcfmti` parameter.

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

The specified destination point code must already exist in the Destination entity set.

2657 E2657 Cmd Rej: Point code not defined

The destination cannot have routes assigned to it.

2354 E2354 Cmd Rej: Routeset must be empty

The specified destination point code cannot already be defined as a remote application internal point code (IPC).

3078 E3078 Cmd Rej: DPC cannot be defined as a remote application IPC

The `dpc` parameter must be defined as a destination point code.

2340 E2340 Cmd Rej: Invalid point code

The specified destination point code cannot already be defined as an adjacent point code or a secondary adjacent point code.

2334 E2334 Cmd Rej: DPC defined as linkset APC or SAPC

The specified destination cannot be referenced by SCCP as a destination point codes in the Mate Application table.

2857 E2857 Cmd Rej: DPC is referenced by SCCP's MAP table

The specified destination cannot be referenced by SCCP as a destination point code in the Mated Relay Node (MRN) table.

3000 E3000 Cmd Rej: DPC is referenced by SCCP in the MRN table

Network routing is valid only if the Network Routing (NRT) feature is turned on.

2955 E2955 Cmd Rej: Network Routing is only valid if the NRT feature is ON

When using network routing, if the destination point code has a value of * in the `nc` subfield, the `ncm` subfield must also be * (for example, `dpc=21-*-*`).

2956 E2956 Cmd Rej: NCM must be * when using Network Routing

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The MAS Configuration table is corrupt or cannot be found.

2145 E2145 Cmd Rej: Failed reading MAS configuration table

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

A destination point code that is used as a proxy point code cannot be deleted.

4685 E4685 Cmd Rej: PPC referred by other entities

The SAPC table is corrupt or cannot be found.

3282 E3282 Cmd Rej: Failed reading the SAPC table

If an exception route is associated with a cluster member, then the cluster member cannot be deleted.

5434 E5434 Cmd Rej: Can't delete DSTN that has exception route

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

One of dpc/dpca/dpci/dpcn/dpcn24/dpcn16 is mandatory and they are mutually exclusive.

Output

This example shows the output with the NCR, NRT, and CRMD features off (disabled) and all Routes and Route sets features off:

```
dlt-dstn:dpc=111-222-111
```

```
rlghncxa03w 04-08-17 15:35:05 EST EAGLE 31.8.0
Destination table is (10 of 2000) 1% full
Alias table is (8 of 12000) 1% full
DLT-DSTN: MASP A - COMPLTD
;
```

This example shows the output with the NCR, NRT, and CRMD features off and the DSTN5000 (5000 Routes) feature on:

```
dlt-dstn:dpc=111-222-111
```

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (10 of 5000) 1% full
Alias table is (8 of 12000) 1% full
DLT-DSTN: MASP A - COMPLTD
;
```

This example shows the output with one or more of the NCR, NRT, or CRMD features on and the DSTN5000 (5000 Routes) feature on:

```
dlt-dstn:dpc=111-222-111
```

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 5000
  FULL DPC(s): 9
  NETWORK DPC(s): 0
  CLUSTER DPC(s): 1
  TOTAL DPC(s): 10
  CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 12000
  ALIASES USED: 8
  CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
```

```
DLT-DSTN: MASP A - COMPLTD
;
```

This example shows the output with the NCR, NRT, and CRMD features off and the 6000 Routesets feature on:

```
dlt-dstn:dpc=111-222-111
```

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 6000) 1% full
Alias table is (8 of 12000) 1% full
DLT-DSTN: MASP A - COMPLTD
;
```

This example shows the output with one or more of the NCR, NRT, or CRMD features on and the 6000 Routesets feature on:

```
dlt-dstn:dpc=111-222-111
```

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 6000
  FULL DPC(s): 46
  NETWORK DPC(s): 1
  CLUSTER DPC(s): 1
  TOTAL DPC(s): 12
  CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 12000
  ALIASES USED: 8
  CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
DLT-DSTN: MASP A - COMPLTD
;
```

This example shows the output with the NCR, NRT, and CRMD features off. When the 7000 Routesets quantity feature is on, the Destination table line shows "...of 7000". When the 8000 Routesets quantity feature is on, the Destination table line shows "...of 8000."

```
dlt-dstn:dpc=111-222-111
```

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (10 of 7000) 1% full
Alias table is (8 of 8000) 1% full
DLT-DSTN: MASP A - COMPLTD
;
```

This example shows the output with one or more of the NCR, NRT, or CRMD features on. When the 8000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "8000". When the 7000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "7000."

```
dlt-dstn:dpc=111-222-111
```

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 8000
  FULL DPC(s): 46
  NETWORK DPC(s): 1
  CLUSTER DPC(s): 1
  TOTAL DPC(s): 12
  CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 8000
  ALIASES USED: 8
  CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
DLT-DSTN: MASP A - COMPLTD
```

```
;
```

This example shows the output with none of the NCR, NRT, or CRMD features on. A proxy destination is being deleted.

```
dlt-dstn:dpc=11-11-11
```

```
tekelecstp 07-03-07 16:34:32 EST EAGLE 37.5.0
Destination table is (11 of 2000) 1% full
Alias table is (0 of 12000) 0% full
PPC table is (1 of 10) 10% full
DLT-DSTN: MASP A - COMPLTD
```

```
;
```

This example shows the output when the NCR, NRT, and CRMD features are off and the 10,000 Routesets feature is on:

```
dlt-dstn:dpc=11-222-11
```

```
rlghncxa03w 10-08-17 08:29:15 EST EAGLE 43.0.0
Destination table is (10 of 10000) 1% full
Alias table is (8 of 10000) 1% full
DLT-DSTN: MASP A - COMPLTD
```

```
;
```

This example shows the output with one or more of the NCR, NRT, or CRMD features and the 10,000 Routesets feature on:

```
dlt-dstn:dpc=11-222-11
```

```
rlghncxa03w 10-08-17 08:29:15 EST EAGLE 43.0.0
DESTINATION ENTRIES ALLOCATED: 10000
  FULL DPC(s): 9
  NETWORK DPC(s): 0
  CLUSTER DPC(s): 1
  TOTAL DPC(s): 10
```

```

CAPACITY (% FULL):          1%
ALIASES ALLOCATED:         10000
ALIASES USED:              8
CAPACITY (% FULL):          1%
X-LIST ENTRIES ALLOCATED:   500
DLT-DSTN: MASP A - COMPLTD
;

```

Related Topics

- [chg-dstn](#)
- [chg-rte](#)
- [dlt-rte](#)
- [ent-dstn](#)
- [ent-rte](#)
- [rept-stat-dstn](#)
- [rept-stat-rte](#)
- [rtrv-dstn](#)
- [rtrv-rte](#)

4.1.198 dlt-e1

Use this command to delete an interface for E5-E1T1-B cards used as E1 or SE-HSL cards.

Parameters

e1port (mandatory)

E1 port number.

Range:

1 - 8

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
dlt-e1:loc=1205:e1port=1
```

Dependencies

The card in the location specified by the `loc` parameter must be equipped.

4076 E4076 Cmd Rej: E1 card location is unequipped

The card in the location specified by the `loc` parameter must be a LIME1 card type.

2212 E2212 Cmd Rej: Invalid card type for this command

The port specified by the `e1port` parameter must be already equipped with an E1 interface.

4055 E4055 Cmd Rej: The E1PORT at the specified location is not equipped

The E1/T1 table must be accessible.

4059 E4059 Cmd Rej: Failed reading the E1/T1 table

The Card (IMT) table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

All signaling links providing timeslots serviced by the specified E1 interface must be deleted before the E1 interface can be deleted. See the `dlt-slk` command to delete the signaling links providing the timeslots.

4057 E4057 Cmd Rej: All signaling links serviced by this E1/T1 must be deleted

Card locations 1113 - 1118 (control cards) cannot be specified as values for the `loc` parameter.

2154 E2154 Cmd Rej: Card slot reserved by system

Notes

None.

Output

```
dlt-e1:loc=1205:e1port=1
```

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
dlt-E1: MASP A - COMPLTD
;
```

Related Topics

- [chg-e1](#)
- [ent-e1](#)
- [rtrv-e1](#)
- [tst-e1](#)

4.1.199 dlt-enum-acl

Use this command to delete an entry in the ENUM Access Control List (ACL) Table. The ENUM ACL Table supports the provisioning information related to the allowed IP Addresses for the ENUM application.

Parameters

ipaddr (mandatory)

This is a TCP/IP address expressed in standard dot notation. It specifies allowed IP addresses for the ENUM application.

Range:

Four numbers separated by dots, with each number in the range of 0-255, *.

Note:

It also supports wildcard characters as follows:

```
xxx.xxx.xxx.*
```

```
xxx.xxx.*.*
```

```
xxx.*.*.*
```

where xxx can be any number in range of 0-255.

System Default:

0.0.0.0

Example

```
dlt-enum-acl:ipaddr=10.248.13.9
```

```
dlt-enum-acl:ipaddr=10.248.13.*
```

```
dlt-enum-acl:ipaddr=10.248.*.*
```

```
dlt-enum-acl:ipaddr=10.*.*.*
```

Dependencies

The ENUM ACL Table should be accessible.

3182 E3182 Cmd Rej: Failure accessing ENUMACL table

The IP Address specified by the IPADDR parameter should be provisioned in the ENUM ACL Table.

3739 E3739 Cmd Rej: No Entry found

The IP Address specified by the IPADDR parameter must be a valid IP address.

2704 E2704 Cmd Rej: Invalid IPADDR

Notes

Wildcard IP addresses are allowed to support the ranges of IP addresses.

Output

```
dlt-enum-acl:ipaddr=10.248.13.*
```

```
tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
```

```
dlt-enum-acl:ipaddr=10.248.13.*  
Command entered at terminal #4.  
DLT-ENUM-ACL: MASP A - COMPLTD  
;
```

Related Topics

- [ent-enum-acl](#)
- [rtrv-enum-acl](#)

4.1.200 dlt-enum-prof

Use this command to delete the existing profile entry which has data used to generate the ENUM response for three supported resource record formats such as NAPTR, NS and CNAME. The ENUM Profile Table is used to configure the profile entry.

Parameters

prn (mandatory)

Profile name. This parameter specifies the unique logical name assigned to the profile entry used to generate the ENUM response.

Range:

ZZZZZZZZZZ

A string of alphanumeric characters, beginning with a letter and up to 10 characters in length. Valid values are a..z, A..Z, 0..9.

Example

```
dlt-enum-prof:prn=pr1
```

Dependencies

The ENUM Profile Table should be accessible.

3184 E3184 Cmd Rej: Failure accessing ENUMPROF table

The profile name must be present in the ENUM Profile Table.

3739 E3739 Cmd Rej: No Entry found

The profile name cannot be referenced in either the ENUM Profile Selection Table or the ENUM DN Block Table.

3217 E3217 Cmd Rej: Profile name is referenced by PRID or DNBLK table

The default profile cannot be deleted.

3231 E3231 Cmd Rej: Default profile cannot be deleted

Notes

None.

Output

```
> dlt-enum-prof:prn=pr1
  tekelecstp 18-05-29 04:35:20 MST EST EAGLE 46.1.0
  dlt-enum-prof:prn=pr1
  Command entered at terminal #19.
;

Command Accepted - Processing
  tekelecstp 18-05-29 04:35:20 MST EST EAGLE 46.1.0
  DLT-ENUM-PROF: MASP B - COMPLTD
;
```

Related Topics

- [chg-enum-prof](#)
- [ent-enum-prof](#)
- [rtrv-enum-prof](#)

4.1.201 dlt-enum-profsel

Use this command to delete an entry from the ENUM Profile Selection Table or the ENUM DN Block Table. The ENUM Profile Selection Table supports the provisioning information related to the mapping of Entity Id to Profile Id. The ENUM DN Block Table supports the provisioning information related to the mapping of DN Block to Profile Id.

Parameters

edn (optional)

End Dialed Number

Range:

5-15 digits

entityid (optional)

Network Entity

Range:

1-15 hex-digits (0-9, a-f)

sdn (optional)

Start Dialed Number

Range:

5-15 digits

Example

```
dlt-enum-profsel:entityid=12345
```

```
dlt-enum-profsel:sdn=11223344
```

```
dlt-enum-profsel:edn=1324566
```

Dependencies

The ENUM Profile Selection Table should be accessible.

3183 E3183 Cmd Rej: Failure accessing ENUMPRID table

The ENUM DN Block Table should be accessible.

3185 E3185 Cmd Rej: Failure accessing ENUM DNBLK table

The ENUM Profile Table should be accessible.

3184 E3184 Cmd Rej: Failure accessing ENUMPROF table

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The Entity Id, SDN or EDN must already exist in the ENUM Profile Selection Table and the ENUM DN Block Table respectively.

3739 E3739 Cmd Rej: No Entry found

ENTITYID cannot be specified with SDN or EDN.

2155 E2155 Cmd Rej: Invalid parameter combination specified

Output

This example displays output when ENTITYID is specified:

```
dlt-enum-profsel:entityid=1234

tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
  dlt-enum-profsel:entityid=1234
  Command entered at terminal #4.
  DLT-ENUM-PROSEL: MASP A - COMPLTD
;
```

This example displays output when SDN is specified:

```
dlt-enum-profsel:sdn=1234567

tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
  dlt-enum-profsel:sdn=1234567
  Command entered at terminal #4.
  DLT-ENUM-PROFSEL: MASP A - COMPLTD
;
```

This example displays output when EDN is specified:

```
dlt-enum-profsel:edn=11223344

tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
```

```
dlt-enum-profsel:edn=11223344
Command entered at terminal #4.
DLT-ENUM-PROFSEL: MASP A - COMPLTD
;
```

Related Topics

- [chg-enum-profsel](#)
- [ent-enum-profsel](#)
- [rtrv-enum-profsel](#)

4.1.202 dlt-frm-pwr

Use this command to delete the existing power threshold entry from the Frame Power Threshold table for the specified frame. After the power threshold value is deleted, the default power threshold value of 30 Amps is assumed for the specified frame.

Parameters

frm (mandatory)

Frame ID

Range:

cf00

Control frame

ef00

First extension frame

ef01

Second extension frame

ef02

Third extension frame

ef03

Fourth extension frame

ef04

Fifth extension frame

Example

Delete the frame power threshold value for the third extension frame.

```
dlt-frm-pwr:frm=ef02
```

<Table> = FRAME POWER THRESHOLD

<Cmd Keyword> = DLT-FRM-PWR

Dependencies

The following values are valid for the `frm` parameter: `cf00`, `ef00`, `ef01`, `ef02`, `ef03`, `ef04`.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

A power threshold value must already be provisioned for the specified frame.
4538 E4538 Cmd Rej: Power Threshold entry does not exist in FPT table
The Frame Power Threshold table must be accessible.
4539 E4539 Cmd Rej: Failed reading FPT table

Output

```
dlt-frm-pwr:frm=ef02

tekelecstp 06-04-11 16:07:11 EST EAGLE 35.0.0

FRAME POWER THRESHOLD table is (3 of 10) 30% full
DLT-FRM-PWR: MASP A - COMPLTD
;
```

Related Topics

- [chg-frm-pwr](#)
- [ent-frm-pwr](#)
- [rtv-frm-pwr](#)
- [rtv-stp](#)

4.1.203 dlt-fta

This command removes a file from the file transfer area (FTA).

Parameters



Note:

At least one of these parameters but not both, must be specified:*all,file*.

all (optional)

This parameter allows all files to be removed from the FTA.

Range:

yes

no

Default:

no

file (optional)

Name of the file to be removed.

2221 E2221 Cmd Rej: File transfer in progress

A specific filename and `all=yes` cannot be specified at the same time.

2233 E2233 Cmd Rej: May not specify Filename when ALL=YES

Only one file transfer can be active at a time.

2221 E2221 Cmd Rej: File transfer in progress

TDM and E5-TDM cards cannot be installed in the same system.

3084 E3084 Cmd Rej: Both OAM cards must be of the same type

Notes

None

Output

```
dlt-fta:file=oam.elf:loc=1114
```

```
rlghncxa03w 04-02-05 15:31:59 EST EAGLE 31.3.0
File OAM.ELF deleted from File Transfer Area on fixed disk 1114.
;
```

```
dlt-fta:all=yes:loc=116
```

```
rlghncxa03w 04-02-05 15:33:32 EST EAGLE 31.3.0
All files deleted from File Transfer Area on fixed disk 1116.
;
```

Related Topics

- [act-file-trns](#)
- [copy-fta](#)
- [disp-disk-dir](#)

4.1.204 dlt-ftp-serv

Use this command to delete an entry for an FTP server from the FTP Server table.

Parameters

app (mandatory)

Application. The FTP Client application at the EAGLE STP that interfaces with the FTP Server.

Range:***meas***

Measurements Platform application

user

FTP-based Table Retrieve Application (FTRA)

db

Database Backup\Restore application

dist

EAGLE Software Release distribution application

sflog

SS7 Firewall Logging application

ipaddr (mandatory)

IP Address of the FTP Server.

Range:

4 numbers separated by dots, with each number in the range of 0-255.

Example

```
dlt-ftp-serv:app=meas:ipaddr=1.255.0.102
```

```
dlt-ftp-serv:app=sflog:ipaddr=10.248.13.9
```

Dependencies

Both the `app` and `ipaddr` parameters must be entered in the command to delete an FTP server.

N/A N/A

An entry must already exist in the FTP Server table for this application at the specified IP address.

```
2774 E2774 Cmd Rej: FTP Server table entry not found for this APP/IPADDR
```

The `app` parameter must specify an application that uses the FTP Support feature.

N/A N/A

The `ipaddr` parameter must specify a valid IP address for the FTP server.

N/A N/A

Notes

None

Output

```
dlt-ftp-serv:app=meas:ipaddr=1.255.0.102
```

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
FTP SERV table is (1 of 10) 10% full
```

```

DLT-FTP-SERV: MASP A - COMPLTD
;

dlt-ftp-serv:app=user:ipaddr=1.255.0.102

rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
FTP SERV table is (0 of 10) 0% full
DLT-FTP-SERV: MASP A - COMPLTD
;

dlt-ftp-serv:app=sflog:ipaddr=10.248.13.9

tekelecstp 15-05-27 15:50:06 EST Eagle 46.3.0
dlt-ftp-serv:app=sflog:ipaddr=10.248.13.9
Command entered at terminal #4.
FTP SERV table is (0 of 10) 0% full
DLT-FTP-SERV: MASP A - COMPLTD
;

```

Related Topics

- [chg-ftp-serv](#)
- [ent-ftp-serv](#)
- [rtrv-ftp-serv](#)

4.1.205 dlt-gen-name

Use this command to delete the generic name, which is already provisioned into the database.

Parameters**gname (mandatory)**

Generic name. Each Generic name must be unique in the system. Maximum 15 characters can be provisioned. Valid values are (0-9, A-Z), *, SPACE, all special characters.

Range:**ZZZZZZZZZZZZZZZZ****ZZZZZZ****ZZZ******ZZZ****ZZ*ZZ*****ZZ***

Example

Delete generic name POLICE:

```
dlt-gen-name:gname="POLICE"
```

Dependencies

Missing mandatory parameter

2011 E2011 Cmd Rej:Missing mandatory parameter-gname

Generic name entered is invalid i.e. Generic name in following format is restricted:

- Name with more than two ASTERIK(*) i.e. zz*zz*zz*zz
- Two consecutive ASTERIK(*) i.e. zzz**zz
- Two ASTERICK(*) if they are not at extermes i.e. zz*zz*

3642 E3642 Cmd Rej: Invalid Generic Name

Unable to read generic name table

3645 E3645 Cmd Rej: Unable to read Generic name table

The generic name entered does not exist in the database

3649 E3649 Cmd Rej: Generic name doesnot exist

The generic name table is empty

3650 E3650 Cmd Rej: Generic name table empty

Notes

The generic name supports wildcarding using ASTERIK (*)

If gname="*" is provisioned as first entry than no more generic name can be configured. Also gname="*" cannot be configured, if atleast one entry is already provisioned.

Output

```
dlt-gen-name:gname="hosp*"
```

```
tekelecstp 19-10-04 03:25:39 EST EAGLE 46.9.0.0.0-76.4.0
dlt-gen-name:gname="hosp*"
Command entered at terminal#4.
DLT-GEN-NAME: MASP A - COMPLTD
;
```

Related Topics

- [ent-gen-name](#)
- [chg-gen-name](#)
- [rtrv-gen-name](#)

4.1.206 dlt-gserv-data

Use this command to delete translation type, originating point code, or global title address data from the GSERV table. These values are used to determine whether a Send Routing Information (SRI) request should receive G-Port SRI Query for Prepaid Service or normal G-Port SRI service.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

gta (optional)

Global title address. This parameter specifies a CgPA global title address.

Range:

1 - 21

opc (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

opca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

opc/opca/opci/opcn/opcn24 (optional)

Originating point code. Use these parameters to specify message transfer part (MTP) originating point codes.

opci (optional)

ITU international originating point code with subfields *zone-area-id*.

Range:

s-, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

opcn (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

opcn24 (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

p-, *000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000-255

ssa—000-255

sp—000-255

tt (optional)

Translation type. This parameter specifies a called party (CdPA) translation type.

Range: 0 - 255

Example

```
dlt-gserv-data:tt=26
```

```
dlt-gserv-data:opc=1-1-1
```

```
dlt-gserv-data:gta=9194605500
```

Dependencies

The `tt`, `opc/opca/opci/opcn/opcn24`, or `gta` parameter must exist in the GSERV table before this command can be entered.

3328 E3328 Cmd Rej: GSERV entry does not exist

The system is busy, or the GSERV table is corrupted.

3215 E3215 Cmd Rej: Cannot access GSERV table

The G-Port SRI Query for Prepaid feature must be enabled before this command can be entered.

3216 E3216 Cmd Rej: G-Port SRI Query for Prepaid feature is not enabled

Only one of the `tt`, `opc`, and `gta` parameters can be specified in the command.

2609 E2609 Cmd Rej: Only one optional parameter may be specified

The G-Port feature must be enabled before this command can be entered.

4371 E4371 Cmd Rej: GPORT must be enabled

Output

```
dlt-gserv-data:tt=26
```

```
mystp 06-07-20 09:04:21 EST EAGLE 35.2.0
DLT-GSERV-DATA: MASP A - CMLTD
;
```

Related Topics

- [ent-gserv-data](#)
- [rtrv-gserv-data](#)

4.1.207 dlt-gsmmap-scrn

Use this command to delete the GSM Map Screening CgPA and CdPA entries that are used to filter out or allow SCCP messages containing Map Op-Codes, CGPA GTA+NPV+NAIV, CDPA GTA+NPV+NAIV, and forbidden parameters.

Parameters

cgsr (mandatory)

CgPA Screening Reference.

Range:

ayyy

1 alphabetic character followed by up to 3 optional alphanumeric characters

opname (mandatory)

Operation code name. This value references the operation code OPCODE defined with the `ent-gsms-opcode` command.

Range:

ayyyyyyy

Up to 8 alphanumeric characters

cdsr (optional)

CdPA Screening Reference.

Range:

ayyy

1 alphabetic character followed by up to 3 optional alphanumeric characters

Example

```
dlt-gsmmap-scrn:opname=xyz:cgsr=fela:cdsr=fall
```

```
dlt-gsmmap-scrn:opname=xyz:cgsr=fela
```

Dependencies

The GSM Map Screening feature must be enabled before this command can be entered.

3900 E3900 Cmd Rej: GSM Map Screening feature must be enabled

The Enhanced GSM Map Screening (EGMS) feature must be enabled before the `cdsr` parameter can be specified.

4291 E4291 Cmd Rej: Enhanced GSM Map Screening feature must be enabled

The specified `cgsr` parameter value must exist in the database.

3905 E3905 Cmd Rej: CGSR doesn't exist for specified OPNAME

The specified `cdsr` parameter value must exist in the database.

4287 E4287 Cmd Rej: CDSR doesn't exist for specified OPNAME and CGSR

A `cgpa` entry cannot be deleted if it is referred to by `cdpa` entries.

3901 E3901 Cmd Rej: CGPA entry is referred by CDPA entries

The GSM MAP Op-Code table is corrupt or cannot be found.

3889 E3889 Cmd Rej: Failure reading the GSM OPCODE Table

The GSM MAP screening table is corrupt or cannot be found.

3890 E3890 Cmd Rej: Failure reading the GSM MAP SCRN Table

The specified `opname` parameter value must exist in the GSM Map Op-Code table.

3892 E3892 Cmd Rej: OPNAME does not exist in the database

The `opname` parameter must be an alphanumeric character.

2040 E2040 Cmd Rej: String pattern nonconformance, alphanumeric - <parm>

The `cgsr` and `cdsr` parameters must begin with an alphabetic character.

2041 E2041 Cmd Rej: String pattern nonconformance, alphabetic - <parm>

The `cgsr` and `cdsr` parameters must each have 1-4 alphanumeric characters.

2039 E2039 Cmd Rej: <parm_desc> too long, min <min>, max <max> - <parm>

The `opname` and `cgsr` parameters must be entered.

2011 E2011 Cmd Rej: Missing mandatory parameter - <parm>

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

Notes

Unlike GTT (Global Title Translation) entries, the GSM MAP screening commands do not support splits of ranges during deletion or changes of entries.

Output

```
dlt-gsmmap-scrn:opname=xyz:cgsr=fela:cdsr=fall
```

```
rlghncxa03w 04-02-29 08:51:12 EST EAGLE 31.4.0
GSM Map Screening table is (1 of 4000) 1% full
DLT-GSM MAP-SCRN: MASP A - COMPLTD
;
```

Related Topics

- [chg-gsmmap-scrn](#)
- [ent-gsmmap-scrn](#)
- [rtrv-gsmmap-scrn](#)

4.1.208 dlt-gsms-opcode

Use this command to delete GSM (Global System for Mobile Telecommunication) MAP (Mobile Application Part) screening operation codes and the default screening action for that operation code.

Parameters

opname (mandatory)

Operation code name.

Range:

ayyyyyyy

Up to 8 alphanumeric characters

Example

```
dlt-gsms-opcode:opname=ati
```

Dependencies

The reserved word *none* cannot be specified as a value for the `opname` parameter.

2001 E2001 Cmd Rej: Undefined msg#

The value specified for the `opname` parameter must exist in the GSM MAP Op-Code table.

3892 E3892 Cmd Rej: OPNAME does not exist in the database

The GSM MAP Op-Code table must be accessible.

3889 E3889 Cmd Rej: Failure reading the GSM OPCODE Table

The `opname` value being deleted cannot be referenced in the GSM MAP Screening table.

3893 E3893 Cmd Rej: Entry being deleted is referenced by a GSM Map Screen entry

The GSM Map Screening feature must be enabled before this command can be entered.

3900 E3900 Cmd Rej: GSM Map Screening feature must be enabled

The `opname` parameter must consist of alphanumeric characters.

2040 E2040 Cmd Rej: String pattern nonconformance, alphanumeric - <parm>

The `opname` parameter must be no more than 8 characters long.

2039 E2039 Cmd Rej: <parm_desc> too long, min <min>, max <max> - <parm>

The MAP table must be accessible.

4524 E4524 Cmd Rej: Failed Reading MAP table

Notes

None

Output

```
dlt-gsms-opcode:opname=ati
```

```
rlghncxa03w 06-02-29 08:50:12 EST EAGLE 35.0.0  
DLT-GSMS-OPCODE: MASP A - COMPLTD
```

;

Related Topics

- [chg-gsms-opcode](#)
- [ent-gsms-opcode](#)
- [rtrv-gsms-opcode](#)

4.1.209 dlt-gsmssn-scrn

Use this command to delete an SSN (subsystem number) from the GSM (Global System for Mobile Telecommunication) SSN screening table.

Parameters

ssn (mandatory)

Subsystem number.

Range: 000 - 255

type (mandatory)

Subsystem type.

Range:***orig***

The origination SSN

dest

The destination SSN

Example

This example deletes a destination subsystem of 255 from the GSM SSN screening table:

```
dlt-gsmssn-scrn:ssn=255:type=dest
```

Dependencies

The GSM Map Screening feature must be enabled before this command can be entered.

3900 E3900 Cmd Rej: GSM Map Screening feature must be enabled

The GSM SSN screening table is corrupt or cannot be found.

3885 E3885 Cmd Rej: Failure reading the GSM SSN Screening Table

A value for the `ssn/type` parameter combination must be specified that exists in the GSM SSN screening table.

3886 E3886 Cmd Rej: SSN/TYPE combination does not exist

A valid value must be specified for the `ssn` parameter.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

A valid value must be specified for the `type` parameter.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

Notes

None

Output

```
dlt-gsmssn-scrn:ssn=255:type=dest
```

```
rlghncxa03w 04-02-20 09:04:21 EST EAGLE 31.3.0  
DLT-GSMSSN-SCRN: MASP A - COMPLTD
```

```
;
```

Related Topics

- [ent-gsmssn-scrn](#)
- [rtrv-gsmssn-scrn](#)

4.1.210 dlt-gta

Use this command to delete the GTA (global title address) information applicable to a global title selector combination.

This command deletes the routing of SCCP messages for specified global title addresses from designated destinations and their subsystem numbers.

Note:

If the EGTT feature is turned on, then the GTT Selector (`ent/chg/dlt/rtrvgttssel`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrvgta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. It is not recommended to run `ent/dlt/rtrv-tt & ent/chg/dlt/rtrv-gtt` commands as it may cause the advance GTA fields of GTT entry to be reset to the default values.

Parameters

gttsn (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

acn (optional)

Application context name. The ITU TCAP ACN field in the incoming MSU.

Range:

0 - 255, *, none

This parameter supports up to 7 subfields separated by a dash (e.g., `1-202-33-104-54-26-007`).

* —any valid value in the ITU TCAP ACN field in the incoming MSU

none —there is no value in the ITU TCAP ACN field in the incoming MSU

cdssn (optional)

Starting CdPA subsystem number.

Range:

0 - 255

cgpc (optional)

ANSI CgPA point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

cgpa

Range:

0-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When `chg-sid:pctype=ansi` is specified, *ni=000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni=001–005*.

When `chg-sid:pctype=ansi` is specified, *nc=000* is valid if *ni=006–255*.

When `chg-sid:pctype=ansi` is specified, *ni-*.** is valid if *ni =006–255*.

The point code *000-000-000* is not a valid point code.

cgpci (optional)

ITU international CgPA point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

cgpcn (optional)

ITU national CgPA point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**cgpcn24 (optional)**

24-bit ITU national CgPA point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*msa—000–255**ssa—000–255**sp—000–255*

cgpcn16 (optional)

16-bit ITU national CgPA point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:

000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

cgssn (optional)

Starting CgPA subsystem number.

Range:

0 - 255

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

dpca

Range:

0-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni=001-005*.

When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006-255*.

When *chg-sid:pctype=ansi* is specified, *ni-*.** is valid if *ni =006-255*.

The point code *000-000-000* is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Point Code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

dpcn16 (optional)

16-bit ITU national destination point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

eaddr (optional)

End Address (Similar to EGTA). This parameter specifies the end of a range of MAP digits (IMEI/MSI/MSISDN/VLRNB/SMRPOA/SMRPDA).

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F

Default:

Same as the specified SADDR value.

ecdssn (optional)

Ending CdPA subsystem number.

Range:

0 - 255

ecgssn (optional)

Ending CgPA subsystem number.

Range:

0 - 255

egta (optional)

End global title address. This parameter specifies the end of a range of global title digits.

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are 0-9

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F

Default:

Same as the specified gta value

family (optional)

This parameter specifies the ANSI TCAP *family* field in the incoming MSU.

Range:

0 - 255, *, none

* —any valid value in the ANSI TCAP *family* field in the incoming MSU

none —there is no value in the ANSI TCAP *family* field in the incoming MSU

gta (optional)

Global title address. The beginning of a range of global title digits.

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are 0-9 .

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

opc (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:*opca***Range:***0-255, **

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni=001-005*.

When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006-255*.

When *chg-sid:pctype=ansi* is specified, *ni-*-** is valid if *ni =006-255*.

The point code *000-000-000* is not a valid point code.

opci (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:*s-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

opcni (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**opcni24 (optional)**

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:*000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000—255
sp—000—255

opc16 (optional)

16-bit ITU national originating point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:
000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

opcodetag (optional)

The ITU TCAP opcodetag field in the incoming MSU.

Range:
none, local, global, any
none—there is no value in the ITU TCAP opcodetag field in the incoming MSU
local—The opcodetag is local in the ITU TCAP opcodetag field in the incoming MSU
global—The opcodetag is global in the ITU TCAP opcodetag field in the incoming MSU
any— any valid value in the ITU TCAP opcodetag field in the incoming MSU

Default:
any

pkgtype (optional)

Package type. The ANSI TCAP and ITU TCAP package type.

Range:

ansiuni
ANSI unidirectional

qwp
Query with Permission

qwop
Query without Permission

cwp
Conversation with Permission

cwop
Conversation without Permission

any
Wildcard value

bgn
Begin

cnt
Continue

ansiabort
ANSI abort

end
End

ituabort
ITU abort

ituuni
ITU unidirectional

resp
Response

ANSI TCAP PKGTYPE—
ansiuni, qwp, qwop, resp, cwp, cwop, ansiabort, any

ITU TCAP PKGTYPE—
bgn, ituabort, ituuni, any, end, cnt

saddr (optional)

Start Address (Similar to GTA). This parameter specifies the beginning of a range of MAP digits (IMEI/MSI/MSISDN/VLRNB/SMRPOA/SMRPDA).

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is *1 - 21* decimal digits; valid digits are *0-9*

If the Hex Digit Support for GTT feature is enabled and on, the range is *1 - 21* hexadecimal digits; valid digits are *0-9, a-f, A-F*

Example

```
dlt-
gta:gttsn=setcdgta:gta=123456789012345678901:egta=2234567890123
45678901
```

```
dlt-gta:gttsn=t800:gta=919461:egta=919468
```

```
dlt-
gta:gttsn=setcggta:gta=323456789012345678901:egta=4234567890123
45678901
```

```
dlt-gta:gttsn=setcgpc:cgpca=001-001-001
```

```
dlt-gta:gttsn=setopc:opca=002-001-001
```

```
dlt-gta:gttsn=setcgssn:cgssn=100:ecgssn=200
```

The following example specifies hexadecimal digits for the GTA and EGTA.

```
dlt-gta:gttsn=set1:gta=abcd:egta=abce
```


The following examples specify the GTA translations when the FLOBR feature is on.

```
dlt-gta:gttsn=setcdssn:cdssn=100:ecdssn=150
```

```
dlt-gta:gttsn=setdpc:dpci=1-101-1
```

```
dlt-gta:gttsn=gtt1:cgpcn16=45-1-0
```

```
dlt-gta:gttsn=setimsi:saddr=3234567890:eaddr=4234567890
```

Dependencies

The `gttsn` parameter must be specified, cannot have a value of *none*, and must match an existing `gttsn`.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

The length of the specified `gta/saddr` parameter must match the number of digits provisioned for the specified GTT set when the VGTT feature is turned off. If the VGTT feature is turned on, then up to 10 GTA/SADDR lengths can exist per GTT set. If the Support for 16 GTT Lengths in VGTT feature is turned on, then up to 16 GTA/SADDR lengths can exist per GTT set.

3571 E3571 Cmd Rej: GTA/SADDR Length does not match GTT Set number of digits

The specified `gta/egta` or `saddr/eaddr` range must exist for the specified GTT set in the STP active database. While an exact match is not required, you cannot specify an overlap with another range. If the range overlaps, an error is generated that displays a list of overlapped global title addresses. An example follows that shows what happens when the user attempts to enter a global title address range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, the error message displays the list of overlapped global title addresses:

```
The following GTA ranges overlap the input GTA range START GTA END GTA 8005550000
8005551999 8005552000 8005553999 8005554000 8005555999 DLT-GTA: MASP A -
Command Aborted
```

2401 E2401 Cmd Rej: GTA/SADDR range overlaps a current range

If the `egta/eaddr` parameter is specified, the `gta/saddr` and `egta/eaddr` value must be the same length and the `egta/eaddr` value must be greater than the `gta/saddr` value.

2403 E2403 Cmd Rej: Length of EGTA/EADDR must be equal to length of GTA/SADDR

The GTT table cannot be full in case a delete command causes a split requiring more entries to be added.

2462 E2462 Cmd Rej: GTT table is full

The `cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16`, `opc/opca/opci/opcn/opcn24/opcn16`, `cgssn`, `gta`, `cdssn`, `opcode/acn/pkgtype`, `opcode/family/pkgtype`, `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` or `saddr` parameter must be specified.

4400 E4400 Cmd Rej: GTA/CGPC/OPC/CGSSN/CDSSN/OPCODE/DPC/SADDR must be specified

The `cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16`, `opc/opca/opci/opcn/opcn24/opcn16` and `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameters must have a valid value within the range for each subfield.

2169 E2169 Cmd Rej: Point code out of range

If specified, the `ecgssn/ecdssn` parameter must be greater than the `cgssn/cdssn` parameter.

4404 E4404 Cmd Rej: End value must be greater than or equal to a starting value

The Origin-based SCCP Routing feature must be enabled when specifying the `cgpc/cgpcacgpcicgpcncgpcn24/cgpcn16`, `opc/opcacopcicpcn/opcn24/opcn16`, or `(e) cgssn` parameters.

4393 E4393 Cmd Rej: Origin Based SCCP Routing feature must be enabled

The `gta` parameter must be specified if the GTTSN set type has a value of `cdgta` or `cggta`, and cannot be specified for other set types.

4406 E4406 Cmd Rej: GTA parm must be specified if GTTSN is type of CDGTA/CGGTA

The `cgpc/cgpcacgpcicgpcncgpcn24/cgpcn16` parameter must be specified if the GTTSN set type has a value of `cgpc`, and cannot be specified for other set types.

4407 E4407 Cmd Rej: CGPCx parm must be specified if GTTSN is type of CGPC

The `opc/opcacopcicpcn/opcn24/opcn16` parameter must be specified if the GTTSN set type has a value of `opc`, and cannot be specified for other set types.

4408 E4408 Cmd Rej: OPCx parm must be specified if GTTSN is type of OPC

The `cgssn` parameter must be specified if the GTTSN set type has a value of `cgssn`, and cannot be specified for other set types.

4409 E4409 Cmd Rej: CGSSN parm must be specified if GTTSN is type of CGSSN

If the specified GTT Set is an ANSI set, then the `cgpc/cgpcacgpcicgpcncgpcn24/cgpcn16`, `opc/opcacopcicpcn/opcn24/opcn16`, and `dpc/dpca/dpcidpcn/dpcn24/dpcn16` parameters must be valid ANSI point codes. If the specified GTT Set is an ITU set, then the `cgpcicgpcncgpcn24/cgpcn16`, `opcicpcn/opcn24/opcn16`, and `dpcidpcn/dpcn24/dpcn16` parameters must be valid ITU point codes.

3570 E3570 Cmd Rej: Point Code type does not match GTT Set network domain

The range specified by the `cgssn/ecgssn` and `cdssn/ecdssn` parameters must exist for the specified GTT set.

4415 E4415 Cmd Rej: CGSSN/CDSSN range does not exist

The translation entry associated with the specified point code (`dpc/dpca/dpcidpcn/dpcn24/dpcn16`, `pc/pca/pcipcncpcn24/pcn16`, or `opc/opcacopcicpcn/opcn24/opcn16` or `opcode` value must already exist.

4510 E4510 Cmd Rej: Translation entry does not exist

The range specified by the `cgssn/ecgssn` and `cdssn/ecdssn` parameters cannot overlap an existing range for the specified GTT set.

4412 E4412 Cmd Rej: CGSSN/CDSSN range cannot overlap an existing range

The `cgpc`, `cgssn`, `gta`, `opc`, `cdssn`, `opcode` and `saddr` parameters cannot be specified together in the command.

If the `cgssn` and `cdssn` parameters are both specified in the same command (in any order), then only the value for the last of the two parameters specified is used during processing.

3332 E3332 Cmd Rej: GTA/CGPC/OPC/CGSSN/CDSSN/OPCODE/DPC/ADDR are mutually exclusive

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the `gta/saddr` or `egta/eaddr` parameters.

3006 E3006 Cmd Rej: Hex Digit Support for GTT feature must be ON

If the specified GTT set has a set type of `opcode` (see the `ent-gttset` command), then the `opcode/acn/pkgtype` or `opcode/family/pkgtype` parameters must be specified. These parameters cannot be specified for GTT sets with other set types.

5107 E5107 Cmd Rej: OPCODE param must be specified if GTTSN settype is OPCODE

If the specified GTT set has a set type of `cdssn` (see the `ent-gttset` command), then the `cdssn` parameter must be specified. The `cdssn` parameter cannot be specified for GTT sets with other set types.

5108 E5108 Cmd Rej: CDSSN param must be specified if GTTSN settype is CDSSN

The value specified for the `gttsn` parameter must match the name of an existing GTT Set.

3561 E3561 Cmd Rej: GTT Set specified by GTT Set Name/index does not exist

A TOBR quantity feature must be turned on before the `opcode`, `pkgtype`, `acn`, `family`, `saddr`, `eaddr` or `defmapvr` parameter can be specified.

5105 E5105 Cmd Rej: One of the TOBR quantity feature must be ON

The `opcode`, `pkgtype`, and `family` parameters must be specified together for ANSI TCAP translations. The `opcode`, `pkgtype`, and `acn` parameters must be specified together for ITU TCAP translations.

5106 E5106 Cmd Rej: OPCODE,PKGTYPE,ACN/FAMILY must be specified together

If the `cgssn` parameter is specified, then the `ecdssn` parameter cannot be specified. If the `cdssn` parameter is specified, then the `ecgssn` parameter cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `family` parameter is specified, then the `pkgtype` parameter must have a value of *ansiuni*, *qwp*, *qwop*, *resp*, *cwp*, *cwop*, *ansiabort*, or *any*.

5140 E5140 Cmd Rej: FAMILY parameter is allowed with ANSI TCAP PKGTYPE

If the `acn` parameter is specified, then the `pkgtype` parameter must have a value of *bgn*, *ituabort*, *ituuni*, *any*, *end*, or *cnt*.

5141 E5141 Cmd Rej: ACN parameter is allowed with ITU TCAP PKGTYPE

If the `opcodeltag` is specified by `opcodeltag` parameter, then the `pkgtype`, `opcode` and `acn` must be specified.

E3701 Cmd Rej: PkgType, Opcode and ACN must be specified.

If the `pkgtype=ituabort` parameter is specified, then a value of *none* must be specified for the `acn`, `opcode` and `opcodeltag` parameters.

If the `pkgtype=ansiabort` parameter is specified, then a value of `none` must be specified for the `family` and `opcode` parameters.

E5144 Cmd Rej: PKGTYPE abort requires ACN/FAMILY/OPCODE/OPTAG value none

The GTT Action Set table is corrupt or cannot be found.

5197 E5197 Cmd Rej: Unable to access GTT Action Set table

If the GTT set specified by the `gttsn` parameter has a set type of `dpc` (see the `ent-gttset` command), then the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter must be specified. If the set type has a value other than `dpc`, then the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter cannot be specified.

5267 E5267 Cmd Rej: DPCx parameter must be specified if GTTSN set type is DPC

The FLOBR feature must be turned on before the `cdssn`, `ecdssn`, or `dpc` parameter can be specified.

5060 E5060 Cmd Rej: Flexible Linkset Optional Based Routing must be ON

If the translation entry is referenced in GTT Action Path table, then the entry cannot be deleted.

5318 E5318 Cmd Rej: GTT Actions Path(s) associated with Translation entry

The specified GTT set must have a set type of `opcode` (see the `ent-gttset` command) before the `opcode/acn/pkgtype` or `opcode/family/pkgtype` parameters can be specified. The specified GTT set must have a set type of `cdssn`, `cgssn`, `cdgta/cgta`, `opc`, or `cgpc` before the `cdssn`, `cgssn`, `gta`, `opc`, or `cgpc` parameter, respectively, can be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `acn` and `family` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `opc` or `dpc` parameter is specified, then the `(e)gta`, `(e)cgssn`, `(e)cdssn`, and `opcode` parameters cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

SADDR parameter must be specified if GTT set specified by `gttsn` parameter is of MBR type (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA).

3449 E3449 Cmd Rej: SADDR must be specified for MBR GTT settypes

If the `saddr` parameter is specified, then the `ecgssn/ecdssn` parameters cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

Notes

If a GTT is being deleted or changed and the point code (DPC or RTE) is not found in the route table (unless the point code is the STP's true point code), the following message is displayed in the terminal scroll area:

```
NOTICE: No DPC and/or RTE found for GTT being deleted or changed.
```

The above situation may occur for the following reasons:

A database was upgraded from a release prior to EAGLE Release 27.1 or IP7 Secure Gateway Release 3.0 when GTT entries were not linked to the route table and the deletion of the DPC was permitted. The GTT referenced a DPC/RTE that was deleted, and the enforce reference counts between the GTT and route tables were not updated.

- A serious problem occurred in which the reference count rules were not enforced and a DPC and/or RTE were deleted while being referenced by a GTT entry. This indicates a software error; notify the Customer Care Center.

The error message E2478 was deleted in release 41.0 for PR 137896.

The error message E5099 was deleted in release 42.0 for PR 137290.

Output

The following example specifies GTA translations when the FLOBR feature is on. `dlt-gta:gttsn=setcdssn:cdssn=100`

```
rlghncxa03w 10-03-10 09:04:21 EST EAGLE 42.0.0
DLT-GTA: MASP A - CMPLTD
;
```

Related Topics

- [chg-gta](#)
- [ent-gta](#)
- [rtv-gta](#)

4.1.211 dlt-gtcnv

Use this command to delete entries from the Default Global Title Conversion table. The particular entry to be deleted is identified by the direction in conjunction with the TTA or TTI, or with the TTI, NP, and NAI.

Parameters

dir (mandatory)

Direction of conversion.

Range:***atoi***

ANSI to ITU conversion

itoa

ITU to ANSI conversion

both

Conversion in both directions

nai (optional)

Nature of Address Indicator. This parameter is mandatory when `gtixlat=24` is specified, and cannot be specified when `gtixlat=22` is specified.

Range:

0 - 63, *

Default:

No change to current value

np (optional)

Numbering Plan. This parameter is mandatory when `gtixlat=24` is specified, and cannot be specified when `gtixlat=22` is specified.

Range:

0 - 15, *

Default:

No change to current value

tta (optional)

ANSI translation type. This parameter is mandatory when `dir=atoi` or `dir=both` is specified.

Range:

0 - 255, *

Default:

No change to current value

tti (optional)

ITU translation type. This parameter is required when `dir=atoi` is specified.

Range:

0 - 255, *

Default:

No change to current value

Example

The following example deletes an ANSI-to-ITU entry using the TTA of 10 to identify the entry.

```
dlt-gtcnv:dir=atoi:tta=10
```

The following example deletes an ANSI-to-ITU entry using the TTA of 11 to identify the entry.

```
dlt-gtcnv:dir=atoi:tta=11
```

The following example deletes a ITU-to-ANSI entry using the TTI of 7, NAI of 8, and NP of 6 to identify the entry.

```
dlt-gtcnv:dir=ittoa:tti=7:nai=8:np=6
```

The following example deletes a BOTH (ANSI <-> ITU) entry using the TTI of 9 and TTA of 12 to identify the entry.

```
dlt-gtcnv:dir=both:tta=12:tti=9
```

The following example deletes a BOTH (ANSI <-> ITU) entry using the TTI of 7, NAI of 6, NP of 4, and TTA of 12 to identify the entry.

```
dlt-gtcnv:dir=both:tta=12:tti=7:np=4:nai=6
```

The following example deletes an ANSI-to-ITU default entry using the TTA of * to identify the entry.

```
dlt-gtcnv:dir=atoi:tta=*
```

The following example deletes an ITU-to-ANSI default entry using the TTI and NAI of * and NP of * to identify the entry.

```
dlt-gtcnv:dir=ittoa:tti=*:nai=*:np=*
```

Dependencies

The ANSI/ITU SCCP Conversion feature must be enabled before this command can be entered.

4171 E4171 Cmd Rej: SCCP Conversion feature must be enabled

The specified `dir`, `tta`, `tti`, `np`, and `nai` parameter combination must already exist in the database.

4120 E4120 Cmd Rej: Key values: DIR, TTA, TTI, NP, NAI does not exist

If the `dir=atoi` parameter is specified, then the `tta` parameter must be specified.

4035 E4035 Cmd Rej: TTA must be specified for a direction of ATOI

If the `dir=atoi` parameter is specified, then the `tti`, `nai`, and `np` parameters cannot be specified.

4901 E4901 Cmd Rej: TTI, NP, NAI cannot be specified for a direction of ATOI

If the `dir=ittoa` parameter is specified, then the `tti` parameter must be specified.

4115 E4115 Cmd Rej: TTI must be specified for a direction of ITOA

If the `dir=ittoa` parameter is specified, then a wildcard value (*) must be specified for the `tti`, `np`, and `nai` parameters.

4118 E4118 Cmd Rej: Wildcard/Asterisk required for TTI, NP, NAI if DIR is ITOA

If the `dir=both` parameter is specified, then the `tta` and `tti` parameters must be specified.

4036 E4036 Cmd Rej: At least TTA, TTI must be specified for a direction of BOTH

If the `dir=both` parameter is specified, then a wildcard value (*) cannot be specified for any of the other parameters.

4116 E4116 Cmd Rej: Wildcard/Asterisk invalid for direction of BOTH

If specified, the `nai` and `np` parameters must be specified together in the command.

4122 E4122 Cmd Rej: Both NP and NAI must be specified if either is present

If the `dir=itoa` and `gtixlat=22` parameters are specified, then wildcard values (*) cannot be specified. The `dir=itoa` and `gtixlat=24` parameters must be specified before wildcard values can be specified.

4299 E4299 Cmd Rej: Cannot enter a wildcard with XLAT=2, Use XLAT=4 for wildcard

If the `dir=itoa` parameter is specified, then the `tta` parameter cannot be specified.

4114 E4114 Cmd Rej: TTA cannot be specified for a direction of ITOA

Notes

To delete an ANSI-to-ITU entry, specify the direction (`dir`) and TTA.

To delete an ITU-to-ANSI entry when `gtixlat=22`, specify the direction and TTI.

To delete an ITU-to-ANSI entry when `gtixlat=24`, specify the direction, TTI, NAI, and NP.

To delete a BOTH (ANSI <-> ITU) entry when `gtixlat=22`, specify the direction, TTA and TTI.

To delete a BOTH (ANSI <-> ITU) entry when `gtixlat=24`, specify the direction, TTA, TTI, NP and NAI.

Output

```
dlt-gtcnv:dir=both:tta=12:tti=9
```

```

rlghncxa03w 03-03-18 08:50:12 EST  EAGLE 31.3.0
DLT-GTCNV: MASP A - COMPLTD
;

```

Related Topics

- [chg-gtcnv](#)
- [ent-gtcnv](#)
- [rtrv-gtcnv](#)

4.1.212 dlt-gtmod

Use this command to delete an existing GT Modification (GTMOD) entry. The GTMOD entry consists of a GTMOD ID and GTMOD specific data.

Parameters

gtmodid (mandatory)

GT Modification Identifier.

Range:

ayyyyyyy

1 alphabetic character followed by 8 alphanumeric characters

Example

```
dlt-gtmod:gtmodid=set1
```

Dependencies

The GTMOD table is corrupt or cannot be found.

5284 E5284 Cmd Rej: Failed reading GTMOD table

If the GTMOD identifier is referenced in the GTT or GTT Action tables, then the identifier cannot be deleted.

5287 E5287 Cmd Rej: GTMODID referenced in Translation/GTT Action tables

The value specified for the `gtmodid` parameter must already exist in the GTMOD table.

5285 E5285 Cmd Rej: GTMODID does not exist

The `gtmodid=none` parameter cannot be specified.

5292 E5292 Cmd Rej: GTMODID must not be specified as NONE

Output

```
dlt-gtmodid:gtmodid=set1
```

```
tekelecstp 10-03-08 18:38:05 EST EAGLE 42.0.0
```

```
GTMOD table is (2 of 100000) 1% full
```

```
DLT-GTMOD: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-gtmod](#)
- [ent-gtmod](#)
- [rtrv-gtmod](#)

4.1.213 dlt-gtt

Use this command to remove the routing of messages for specified global title addresses from designated destinations and their subsystem numbers.

 **Note:**

If the EGTT feature is turned on, then the GTT Selector (`ent/chg/dlt/rtrvgttssel`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrvgta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. It is not recommended to run `ent/dlt/rtrv-tt & ent/chg/dlt/rtrv-gtt` commands as it may cause the advance GTA fields of GTT entry to be reset to the default values.

Parameters**gta (mandatory)**

Global title start address. The beginning of a range of global title digits.

Range:

1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are 0-9

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

egta (optional)

Global title end address. The end of a range of global title digits.

Range:

1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are 0-9

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F .

Default:

value of the `gta` parameter

ttn (optional)

Translation type name.

Range:

ayyyyyyy

1 alphabetic character followed by up to 8 alphanumeric characters

Default:

No translation name is given

type/typea/typei/typen/typen24/typeis/typens (optional)

Translation type. This parameter identifies the translation type and network type. This parameter is the decimal representation of the 1-byte field used in SS7.

The `type` and `typea` parameters specify an ANSI network.

The `typei` parameter specifies an ITU-international network.

The `typen` parameter specifies an ITU-national network.

The `typen24` parameter specifies a 24-bit ITU-national network.

The `typeis` parameter specifies an ITU-international spare network.

The `typens` parameter specifies an ITU-national spare network. A translation type numeric value may be entered as ANSI type (`type` or `typea`) and as an ITU type (`typi/typen/typen24/typeis/typens`). However, they are separate entities. The point code domain translation types for GTT are handled by the EAGLE protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I spare, ITU-N, ITU-N spare, and ITU-N24.

Range:

0 - 255

Default:

No translation type is specified

Example

```
dlt-gtt:type=252:ttn=lidb9:gta=408908:egta=408988
```

```
dlt-gtt:gta=919833:typen24=4
```

```
dlt-gtt:ttn=set1:gta=abcd123456789a:egta=abcE123456789F
```

```
dlt-gtt:gta=123456:typeis=5
```

```
dlt-gtt:gta=123456:typens=5
```

Dependencies

If translation type is specified, it must exist in the database.

2466 E2466 Cmd Rej: Translation Type specified does not exist

If the `ttn` parameter is specified, the name must correspond to a translation type entry.

2468 E2468 Cmd Rej: TTN specified does not exist

If both `ttn` and `type` are specified, `ttn` must correspond to the given translation type.

2473 E2473 Cmd Rej: TTN and TYPE do not correspond to each other

The `type` or `ttn` parameter must be specified.

2475 E2475 Cmd Rej: Either TYPE or TTN must be specified

The `gta` length must equal the number of digits specified by the translation type. If the VGTT (variable length GTT) feature is turned on, you can have up to 10 GTA lengths per translation type. When you enter the `ent-gtt` command to create entries, the software keeps track of the lengths and allows only ten different lengths. The global title address specified for the translation type must then have the same number of digits as an existing GTA.

3571 E3571 Cmd Rej: GTA Length does not match GTT Set number of digits

The global title address range as expressed by the `gta` and `egta` parameters must already exist in the global title translation.

2402 E2402 Cmd Rej: GTA/SADDR range does not exist

The range, as specified by the GTA and EGTA, must be exactly the same as a current entry or be contained within an existing range in the GTT data for the specified translation type. If the range overlaps, an error is generated that displays a list of overlapped global title addresses. An example follows that shows what happens when the user attempts to delete a global title address range (such as 8005550000 to 8005559999) that overlaps an existing

range. The overlapping links must match. If they do not, the error message displays the list of overlapped global title addresses:

```
The following GTA ranges overlap the input GTA range START GTA END GTA
8005550000 8005551999 8005552000 8005553999 8005554000 8005555999 DLT-
GTT: MASP A - Command Aborted
2401 E2401 Cmd Rej: GTA range overlaps a current range
```

If the address range as specified by the start and end global title addresses does not exactly match the existing range, the range is split. All addresses in the existing range that are outside of the specified range are used to create new ranges. The specified range is deleted.

2403 E2403 Cmd Rej: Length of EGTA must be equal to length of GTA

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the `gta` or `egta` parameters.

3006 E3006 Cmd Rej: Hex Digit Support for GTT feature must be ON

If the `egta` parameter is specified, the value must be greater than the value specified for the `gta` parameter.

2420 E2420 Cmd Rej: EGTA must be greater than or equal to GTA

The `tt` parameter cannot be specified with a value that has been defined as an alias for another translation type.

2465 E2465 Cmd Rej: Translation TYPE defined as an alias

The length of the specified GTA must match the number of digits provisioned for the specified Translation Type or the Translation Type referenced by the specified Translation Type Name, unless the PVGTT or VGTT feature is on. In the case the PVGTT feature is on the length of the specified GTA and EGTA can be less than or equal to the number of digits provisioned for the corresponding TT. In the case the VGTT feature is on, up to 10 different lengths can be provisioned per TT.

2404 E2404 Cmd Rej: GTA does not match translation type's number of digits

The `gta` length is not defined for the specified translation type entity.

4009 E4009 Cmd Rej: GTA Length is not defined for TT

The GTT table cannot be full.

2462 E2462 Cmd Rej: GTT table is full

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

The GTT set associated with the translation type specified by the `ttn` parameter must have a set type of `cdgta` (see the `ent-gttset` command).

4997 E4997 Cmd Rej: SETTYPE of specified GTTSET must be CdGTA

The network domain of the translation type specified by the `ttn` parameter cannot be CROSS (see the `ent-gttset` command).

5371 E5371 Cmd Rej: Network domain of corresponding ttn must not be CROSS

The `ttn=none` parameter cannot be specified.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

The `xlat=none` parameter cannot be specified.

5268 E5268 Cmd Rej: XLAT=NONE entry not supported for GTT commands

If the translation entry is referenced in GTT Action Path table, then the entry cannot be deleted.

5318 E5318 Cmd Rej: GTT Actions Path(s) associated with Translation entry

Notes

If the OBSR or FLOBR feature is turned on, then this command can delete only translation entries that have been provisioned by GTA commands and that have a set type of CdGTA.

Output

```
dlt-gtt:type=252:ttn=lidb9:gta=408908:egta=408988
```

```
rlghncxa03w 04-01-07 11:43:07 EST EAGLE 31.3.0
DLT-GTT: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-gtt](#)
- [ent-gtt](#)
- [rtrv-gtt](#)

4.1.214 dlt-gttact

Use this command to delete an existing Global Title Translations (GTT) Action entry.

Parameters

actid (mandatory)

GTT Action ID. The Action ID associated with the GTT Action entry.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

Example

```
dlt-gttact:actid=discl
```

Dependencies

The specified Action ID must already exist in the database.

5071 E5071 Cmd Rej: GTT Action Id does not exist

The GTT Action table is corrupt or cannot be found.

5067 E5067 Cmd Rej: Unable to access GTT Action table

The Action ID specified by the `actid` parameter cannot be referenced by an Action Set or an action entry that is associated an action of `fwd/scpval/sfthrot`.

5198 E5198 Cmd Rej: GTT Action entry is referenced

The Action ID specified by the `actid` parameter cannot be associated with an action of `none` or `fallback`.

5069 E5069 Cmd Rej: (New) GTT Action Id must not be NONE/FALLBACK

The GTT destination must exist in the DSTN table.

4753 E4753 Cmd Rej: DSTN table entry was not found

Output

```
dlt-gttact:actid=discl
```

```
tekelecstp 10-02-04 18:38:05 EST EAGLE 42.0.0
dlt-gttact:actid=discl
Command entered at terminal #4.
```

```
GTT Action table is (1 of 2000) 1% full
```

```
DLT-GTTACT: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-gttact](#)
- [ent-gttact](#)
- [rtv-gttact](#)

4.1.215 dlt-gttapath

Use this command to delete a GTT Action Path entry. A GTT Action Path entry consists of pairs of "setname + value" for Opcode/CgGTA/CdGTA. Each of these "setname + value" pairs should already be defined in the GTT translation table.

Parameters

gttpn (mandatory)

GTT Path name.

Range:

`ayyy`

1 leading alphabetic character and up to 4 following alphanumeric characters.

Example

```
dlt-gttapath:gttpn=path1
```

Dependencies

The GTA table is corrupt or cannot be found.

3119 E3119 Cmd Rej: Failed Reading GTT TRANS table

The GTT Action Path table is corrupt or cannot be found.

5186 E5186 Cmd Rej: Unable to access GTT Action Path table

The GTT Action - DISCARD, GTT Action - FORWARD, or GTT Action - DUPLICATE feature must be enabled before this command can be entered.

3451 E3451 Cmd Rej: Controlled Feature is not enabled

The GTT path name specified by the `gttpn` parameter must already exist in the database.

5378 E5378 Cmd Rej: Specified path name doesn't exist

The value specified for the `gttpn` parameter cannot be a reserved word.

3040 E3040 Cmd Rej: <string> cannot be used in this command

Output

```
dlt-gttapath:gttpn=path1
```

```
tekelecstp 10-02-04 18:29:41 EST EAGLE 42.0.0
dlt-gttapath:gttpn=path1
Command entered at terminal #4.
```

```
GTT Action Path table is (2 of 10000) 1% full
```

```
DLT-GTTAPATH: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-gttapath](#)
- [ent-gttapath](#)
- [rtv-gttapath](#)

4.1.216 dlt-gttaset

Use this command to delete an existing Global Title Translations (GTT) Action Set.

Parameters

actsn (mandatory)

GTT Action Set Name.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

Example

```
dlt-gttaset:actsn=asetdisc1
```

Dependencies

The specified GTT Action Set must already exist in the database.

5196 E5196 Cmd Rej: GTT Action Set does not exist

The GTT Action table is corrupt or cannot be found.

5067 E5067 Cmd Rej: Unable to access GTT Action table

The GTT Action entry cannot be referred by any translation entry.

5112 E5112 Cmd Rej: GTT Action Set is referenced by translations

The `actsn=none` parameter cannot be specified.

5113 E5113 Cmd Rej: (New) GTT Action Set name must not be none.

The GTT Action Set table is corrupt or cannot be found.

5197 E5197 Cmd Rej: Unable to access GTT Action Set table

The EGTT feature must be turned on before this command can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

Output

```
dlt-gttaset:actsn=asetdisc1
```

```
tekelecstp 10-02-04 18:38:05 EST  EAGLE 42.0.0
dlt-gttaset:actsn=asetdisc1
Command entered at terminal #4.
```

```
GTT Action Set table is (1 of 20000) 1% full
```

```
DLT-GTTASET: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-gttaset](#)
- [ent-gttaset](#)
- [rtv-gttaset](#)

4.1.217 dlt-gttset

Use this command to delete an applicable global title translation (GTT) selector.

 **Note:**

When the EGTT feature is turned on, the GTT Selector (`ent/chg/dlt/rtrv-gttset`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrv-gta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. However, the Translation Type and Global Title Translation commands continue to work according to their original functionality when the EGTT feature is turned on.

Parameters **Note:**

The nature of address indicator parameters (`naiv` or `nai`) can be specified using a mnemonic or an explicit value. Either the mnemonic or the explicit value can be specified; however, both values cannot be specified at the same time for the same parameter. [Table 58: NAIV/NAI Mapping](#) shows the mapping between the `naiv` and `nai` parameter values.

 **Note:**

The numbering plan parameters (`npv` or `np`) can be specified using a mnemonic or an explicit value. Either the mnemonic or explicit value can be specified; however, both values cannot be specified at the same time for the same parameter. [Table A-8](#) shows the mapping between the `npv` and `np` parameter values.

gti/gtia/gtii/gtin/gtin24/gtiis/gtins/gtin16 (mandatory)

Global title indicator.

For all EGTT selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), **gtin** (ITU national), **gtin24** (24-bit ITU national), **gtiis** (ITU international spare), **gtins** (ITU national spare) and **gtin16** (16-bit ITU national).

For the selector commands, `gti` and `gtia` are equivalent. GTT selectors can be provisioned for the same translation type (TT) with different ITU domains.

Range:

0, 2, 4

Supported value for ANSI: `gti=0, 2` and `gtia=0, 2`

Supported values for ITU: `gtii/gtin/gtin24/gtiis/gtins/gtin16=0, 2, 4`

cgssn (optional)

CgPA subsystem number.

Range:

0 - 255

eaglegen (optional)

This parameter specifies whether the selector is used by EAGLE generated messages.

Range:

yes
used by EAGLE generated messages

lsn (optional)

Linkset name.

Range:

ayyyyyyyy
1 alphabetic character followed by up to 9 alphanumeric characters

msgtype (optional)

SCCP message type.

Allow one or more SCCP message types (UDT/UDTS/XUDT/XUDTS) for every GTT Selector entry. This will help in screening different message types differently.

Range:

sub

u

us

x

xs

all

Default

all

nai (optional)

Nature of Address indicator.

Range:

sub

rsvd

natl

intl

dflt

nai v (optional)

Nature of Address indicator value.

Range:

0 - 127

np (optional)

Numbering Plan.

Range:*e164**generic**x121**f69**e210**e212**e214**private**dflt***npv (optional)**

Numbering Plan value.

Range:*0 - 15***selid (optional)**

Selector ID.

Range:*0 - 65534***tt (optional)**

Translation type.

Range:*0 - 255***Example**`dlt-gtttsel:gti=2:tt=10``dlt-gtttsel:gtin=4:tt=0:np=dflt:nai=dflt``dlt-gtttsel:gtia=2:tt=21:cgssn=20:selid=1:lsn=ls10``dlt-gtttsel:gtia=2:tt=2:eaglegen=yes``dlt-gtttsel:gti=0:selid=2``dlt-gtttsel:gtiis=0``dlt-gtttsel:gtins=0``dlt-gtttsel:gtin16=2:tt=10``dlt-gtttsel:npv=2:naiv=14:msgtype=x,us:gtii=4:TT=245``dlt-gtttsel:npv=2:naiv=14:msgtype=xs,us:gtin=4:TT=242:cgssn=10`

Dependencies

The EGTT feature must be turned on before this command can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

The `np` and `npv` parameters cannot be specified together in the same command.

3551 E3551 Cmd Rej: NP and NPV must not be specified together

The `nai` and `naiv` parameters cannot be specified together in the same command.

3552 E3552 Cmd Rej: NAI and NAIV must not be specified together

The `gti/gtia=4`, `gti(x)=1`, and `gti(x)=3` parameters cannot be specified.

3553 E3553 Cmd Rej: GTI(A)=4, and GTI(x)=1 and 3 are not supported

If the `gti/gtia/gtii/gtin/gtin24/gtiis/gtins/gtin16 =2` parameter is specified, then the `np/npv` and `nai/naiv` parameters cannot be specified.

3554 E3554 Cmd Rej: NP(V) and NAI(V) must not be specified for given GTI value

If the `gtii/gtin/gtin24/gtiis/gtins/gtin16 =4` parameter is specified, then an `np(v)` and `nai(v)` parameter combination must be specified. These parameters can be specified in any combination: `np/naiv`, `npv/nai`, `np/nai`, or `npv/naiv`.

3555 E3555 Cmd Rej: NP(V) and NAI(V) must be specified for given GTI value

The SSNSELID table must be accessible.

4469 E4469 Cmd Rej: Failed reading SSNSELID table

The FLOBR feature must be turned on before the `lsn` or `eaglegen` parameters can be specified.

5060 E5060 Cmd Rej: Flexible Linkset Optional Based Routing must be ON

If the `eaglegen=yes` parameter is specified, then the `msgtype`, `lsn`, `selid`, or `cgssn` parameters cannot be specified.

5061 E5061 Cmd Rej: Cannot use msgtype/lsn/selid/gttsn/cg* field if eaglegen=yes

The GTT selector specified by the `gti(x)`, `tt`, and `np(v)` and `nai(v)` parameters must already exist.

5122 E5122 Cmd Rej: CdPA/CgPA GTT Selector does not exist

A value of `df1t` must be specified for the `np` and `nai` parameters, or neither parameter can have a value of `df1t`.

3578 E3578 Cmd Rej: NP and NAI must be specified as DFLT together

A database error occurred while trying to access the SSNSELID table.

2601 E2601 Cmd Rej: Command aborted due to system error

The OBSR feature must be enabled before the `cgssn` parameter can be specified.

4393 E4393 Cmd Rej: Origin Based SCCP Routing feature must be enabled

If a value of `df1t` is specified for the `np` and `nai` parameters, then the `cgssn`, `selid`, `lsn`, or `eaglegen` parameters cannot be specified.

5132 E5132 Cmd Rej: Invalid parameter(s) specified with NP=DFLT and NAI=DFLT

The linkset specified by the `lsn` parameter must already exist.

2346 E2346 Cmd Rej: Linkset not defined

If the `gti(x)=0` parameter is specified, then the `eaglegen`, `tt`, `np/npv`, and `nai/naiv` parameters cannot be specified.

3507 E3507 Cmd Rej: EAGLEGEN,TT,NP(V),NAI(V) parameters mustn't be specified

If a value of 2 or 4 is specified for the `gti(x)` parameter, then the `tt` parameter must be specified.

4367 E4367 Cmd Rej: TT parameter must be specified

Notes

There is no J7 FAK dependency on GTIA/GTIN16/GTIN24 parameters. The command can be entered successfully whether the J7 FAK is enabled or not enabled.

GTT Selector entries configured using GTIN24/GTIN16 parameters shall be treated as ITU-N24 entries if the J7 FAK is disabled and treated as ITU-N16 entries if the J7 FAK is enabled.

In the `msgtype` parameter, the parameter values correspond to SCCP message types as given in the following list:

- 'u' implies SCCP UDT message
- 'us' implies SCCP UDTS message
- 'x' implies SCCP XUDT message
- 'xs' implies to SCCP XUDTS messages, and
- 'all' implies all SCCP messages

This command will delete the EXACT match of the GTTSEL parameteric values provided in command. For example, a given selector is provisioned with `msgtype=u,us`. To delete the said selector, only the following command can be used:

```
dlt-gttset:gtii=2:tt=17:msgtype=u,us
```

Similarly, to delete a given selector provisioned with `msgtype=all`, only the following commands can be used:

```
dlt-gttset:gtii=2:tt=32:msgtype=all
dlt-gttset:gtii=2:tt=32
```

Output

```
dlt-gttset:gti=0
```

```
tekelecstp 10-02-05 16:35:13 EST Eagle 42.0.0
dlt-gttset:gti=0
Command entered at terminal #4.
DLT-GTTSEL: MASP A - COMPLTD
;
```

```
dlt-gttset:msgtype=u:gti=2:tt=253

tekelecstp 17-06-16 02:49:32 EST EAGLE 46.6.0.0.0-71.1.1.0
dlt-gttset:msgtype=u:gti=2:tt=253
Command entered at terminal #4.
DLT-GTTSEL: MASP A - COMPLTD
;

dlt-gttset:msgtype=u,us,x:gti=2:tt=253

tekelecstp 17-06-16 02:49:32 EST EAGLE 46.6.0.0.0-71.1.1.0
dlt-gttset:msgtype=u,us,x:gti=2:tt=253
Command entered at terminal #4.
DLT-GTTSEL: MASP A - COMPLTD
;
```

Related Topics

- [chg-gttset](#)
- [ent-gttset](#)
- [rtrv-gttset](#)

4.1.218 dlt-gttset

Use this command to delete the specified global title translation set.

 **Note:**

When the EGTT feature is turned on, the GTT Selector (`ent/chg/dlt/rtrv-gttset`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrv-gta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. However, the Translation Type and Global Title Translation commands continue to work according to their original functionality when the EGTT feature is turned on.

Parameters**gttsn (mandatory)**

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters

Example

```
dlt-gttset:gttsn=t800
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

The `gttsn` parameter must be specified, cannot have a value of *none*, and must match an existing GTT set.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

The GTT set cannot be deleted if it is referenced in the GTTSEL or GTA tables or if the GTT set is used by the IS41SMSCGTTSN option (see the `ent/chg-gsmsmsopts` command) or BPARTYGTTSN option (see the `ent/chg-is41smsopts` command).

The GTT set cannot be deleted if it is referenced by *npsn*.

3566 E3566 Cmd Rej: GTT Set is being referred by other entities

If a translation is provisioned in the specified GTT set, or if the GTT set is referred by any translation, then the GTT set cannot be deleted.

3567 E3567 Cmd Rej: GTT Set must not be used by or assigned to any Translation

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

The value specified for the `gttsn` parameter must match the name of an existing GTT Set.

3561 E3561 Cmd Rej: GTT Set specified by GTT Set Name/index does not exist

Notes

None

Output

```
dlt-gttset:gttsn=t800
```

```
rlghncxa03w 09-08-09 08:20:26 EST EAGLE 41.1.0  
DLT-GTTSET: MASP A - CMPLTD
```

```
GTT-SET table is (3 of 2000) 1% full.
```

```
;
```

Related Topics

- [chg-gttset](#)
- [ent-gttset](#)
- [rtrv-gttset](#)

4.1.219 dlt-gws-redirect

Use this command to delete the provisioning of the redirect function and subsequently to disable the gateway screening redirect function. After the gateway screening redirect function is disabled, you must use `ent-gws-redirect` to enable the function again.

Parameters

This command has no parameters.

Example

```
dlt-gws-redirect
```

Dependencies

The redirect function data that will be deleted (removed) with this command must exist in the database.

2641 E2641 Cmd Rej: Redirect function data has not been entered

Notes

None

Output

```
dlt-gws-redirect
```

```
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0  
DLT-GWS-REDIRECT: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-gws-redirect](#)
- [ent-gws-redirect](#)
- [rtrv-gws-redirect](#)

4.1.220 dlt-home-smsc

Use this command to delete HOME SMSC specific addresses currently used to identify Short Message Service Centers in the database. This command updates the HOME SMSCADDR table.

Parameters

smsc (mandatory)

Short Message Service Center address.

Range:
1-21 digits
1-21 hexadecimal digits

Example

```
dlt-home-smsc:smc=552611646
```

Dependencies

One of the following features must be enabled before this command can be entered.

- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- MT-Based GSM SMS NP
- MT-Based IS41 SMS NP
- Portability Check for Mobile Originated SMS

4703 E4703 Cmd Rej: MNP SMS, MO/MT SMS NP or MO SMS IS412GSM Migr must be enbld

The specified HOME SMSC address must exist in the HOME SMSCADDR table.

3476 E3476 Cmd Rej: HOME SMSC Address to be deleted does not exist in database

The HOME SMSCADDR table must be accessible.

3475 E3475 Cmd Rej: Failure reading HOME SMSC Address entries

The GSM DBMM table must be accessible.

3546 E3546 Cmd Rej: Failed reading GSM DBMM Table

Notes

None

Output

```
dlt-home-smsc:smc=552611646
```

```
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0  
DLT-HOME-SMSC: MASP A - COMPLTD
```

;

Related Topics

- [ent-home-smsc](#)
- [rtv-home-smsc](#)

4.1.221 dlt-homern

Use this command to delete a routing number prefix from the HOMERN table.

Parameters

rn (mandatory)

The home routing number prefix

Range:

1 - 15 digits

Example

```
dlt-homern:rn=C441234
```

Dependencies

The specified routing number must already exist in the HOMERN table.

3931 E3931 Cmd Rej: RN does not exist in HOMERN table

A value of *none* cannot be specified for the *rn* parameter.

3502 E3502 Cmd Rej: The NONE value is not allowed in this case

The A-Port, AINPQ, G-Port, INP, or V-Flex feature must be turned on before this command can be entered.

4080 E4080 Cmd Rej: INP/AINPQ, GPORT, APORT or VFLEX feature must be ON

The HOMERN table must be accessible.

3926 E926 Cmd Rej: Failed reading HOMERN table

Notes

None

Output

```
dlt-homern:rn=C441234
```

```
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0  
HOMERN table is (1 of 100) 1% full  
DLT-HOMERN: MASP A - COMPLTD
```

```
;
```

Related Topics

- [ent-homern](#)
- [rtrv-homern](#)

4.1.222 dlt-ip-conn

Use this command to delete existing SIP/ENUM/SCCP/SFAPP/IPS with SFLOG connection information. The IPCONN table supports the provisioning information related to the SIP/ENUM/SCCP/SFAPP/IPS with SFLOG connections.

Parameters

cname (mandatory)

Connection name. This parameter specifies the unique logical name assigned to each SIP/ENUM/IPS with SFLOG connection.

Range:

ZZZZZZZZZZZZZZZZ

A string of alphanumeric characters, beginning with a letter and upto 15 characters in length. Valid values are a..z, A..Z, 0..9.

Example

```
dlt-ip-conn:cname=conn1101a
```

Dependencies

SIPNP Feature must be enabled before deleting any existing SIP connection.

At least one ENUM/SCCP/SFAPP/IPS with SFLOG card must be provisioned before entering any ENUM/SCCP/SFAPP/IPS connection information.

3179 E3179 Cmd Rej: SIPNP Feat not enabled or required card not provisioned

IPCONN table should be accessible.

2668 E2668 Cmd Rej: Failure accessing IPCONN table

The value specified for the CNAME parameter must already exist in the IPCONN table.

3739 E3739 Cmd Rej: No Entry found

Any Connection that is still OPEN to receive traffic cannot be deleted (the open parameter set to yes with the chg-ip-conn command).

2682 E2682 Cmd Rej: Cannot delete an open Connection

Notes

None

Output

```
dlt-ip-conn:cname=conn1102a
```

```
tekelecstp 12-06-25 15:29:14 EST EAGLE 45.0.0
dlt-ip-conn:cname=conn1102a
Command entered at terminal #4.
DLT-IP-CONN: MASP A - COMPLTD
```

;

Related Topics

- [ent-ip-conn](#)

Output

```
dlt-ip-host:host=gw100.nc.tekelec.com

      rlghncxa03w 04-02-17 15:35:05 EST  EAGLE 31.3.0
      DLT-IP-HOST: MASP A - COMPLTD
;
```

Related Topics

- [ent-ip-host](#)
- [rtrv-ip-host](#)

4.1.224 dlt-ip-node

Use this command to remove an IP node from the database that is directly connected to a TCP/IP data link used for the STP LAN feature. You can remove a particular connection, a particular application on a node, or an entire node.

Parameters

ipaddr (mandatory)

The node's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is *192.126.100.5*, where *192.126.100* is the network number and *5* is the machine's host number.

Range:

1-223, 0-255

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

force (optional)

Whether or not to remove all applications associated with the node, thus removing the entire node from the database.

Range:

yes

Delete all connections to node

no

Delete specified application or connection

Default:

no

ipapp1 (optional)

The IP application supported by the node.

Range:

Default:
none

ipport (optional)

The logical IP port that addresses the application on the node.

Range:
1024 - 5000

Default:
none

loc (optional)

The card location as stenciled on the shelf of the system.

Range:
1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 530, 5311 - 5318,
6101 - 6108, 6111 - 6118

Default:
none

Example

To delete the connection for a TCP/IP link associated with an IPPORT on a specified location:

```
dlt-ip-node:ipaddr=193.4.201.50:ipport=1024:loc=1201
```

To delete the connection for TCP/IP links associated with an IPPORT:

```
dlt-ip-node:ipaddr=193.4.201.50:ipport=1024
```

To delete all connections for a TCP/IP link associated with any application on a specified location:

```
dlt-ip-node:ipaddr=193.4.201.50:loc=1201
```

To delete all connections for TCP/IP links associated with any application on any location:

```
dlt-ip-node:ipaddr=193.4.201.50:force=yes
```

Dependencies

The `ipappl` must be supported by the node.

2627 E2627 Cmd Rej: IPAPPL on node not connected to any TCP/IP link

The `ipport` must exist.

2626 E2626 Cmd Rej: IPPORT on Node not connected to any TCP/IP link

The `ipaddr` must exist.

2625 E2625 Cmd Rej: IPADDR not assigned to any TCP/IP link

The `force` parameter must be specified to remove an entire node.

2621 E2621 Cmd Rej: FORCE=YES must be specified to delete entire node

The `ipappl`, `ipport`, `loc`, or `force=yes` parameter must be specified.

N/A N/A

If the `force=yes` parameter is specified, the `ipappl`, `ipport`, and `loc` parameters cannot be specified.

2620 E2620 Cmd Rej: No optional parameters may be specified if FORCE=YES

The `ipappl` and `ipport` parameters cannot be specified together in the command.

2619 E2619 Cmd Rej: Only one of IPAPPL or IPPORT may be specified

If the `loc` parameter is specified, the shelf and card must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

If the `loc` parameter is specified, the specified card must have a TCP/IP data link assigned to it.

2604 E2604 Cmd Rej: Card location not assigned a TCP/IP link

If the `loc` parameter is specified, the IP port on the node must be assigned to the application for the specified TCP/IP data link.

2622 E2622 Cmd Rej: IPADDR not assigned to specified LOC

If the `loc` and `ipaddr` parameters are specified, the specified IP address must match the IP address of the card location's remote IP node.

2705 E2705 Cmd Rej: IP Node Address never entered or Card DB corrupt

If the `loc` and `ipport` parameters are specified, the specified IP port must match the card location's remote IP port.

N/A N/A

If the `loc` and `ipappl` parameters are specified, the specified IP application must match the card location's remote IP application.

N/A N/A

Notes

A particular application can be specified by giving either the application's name or its IP port on the node.

Only Class A, Class B, and Class C IP addresses are supported by the STP LAN feature.

Output

```
dlt-ip-node:ipaddr=193.4.201.50:loc=1201
```

```
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0  
Deleting multiple nodes on disk - please wait...
```

```
DLT-IP-NODE: MASP A - COMPLTD  
;
```

Related Topics

- [ent-ip-node](#)
- [rtrv-ip-node](#)

4.1.225 dlt-ip-rte

Use this command to delete a static IP route entry from the Static IP Route table (destination IP address, subnet mask, and gateway IP address) for the specified card.

▲ Caution:

The deletion of static IP routes can adversely affect IP connection oriented transports.

Parameters

loc (mandatory)

Card location. The unique identifier of a specific IP card in the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

dest (mandatory)

Destination IP Address. The remote destination host or network destination IP Address that is to be removed.

Range:

4 numbers separated by dots, with each number in the range of 0-255.
The IP address 0.0.0.0 is not valid.

force (optional)

A value of yes is required when the card is allowed and this command is to be completed.

Range:

yes

no

Default:

no

Example

```
dlt-ip-rte:loc=1301:dest=128.252.10.5  
dlt-ip-rte:loc=1301:dest=128.252.10.5:force=yes
```

Dependencies

The specified destination IP address (`dest` parameter):

- Must not be the default route (0.0.0.0)
- Must not correspond to any loopback address (i.e. 127.X.X.X)
- Must not reside on this card's A or B network

3585 E3585 Cmd Rej: Dest IP Address is invalid

The specified destination IP address must exist in the Static IP Route table.

3588 E3588 Cmd Rej: Dest IP Address does not exist for this card

The card in the location specified with the `loc` parameter should typically be inhibited for this command to complete successfully. The `force=yes` parameter is required when the card is allowed and the command is entered.

2747 E2747 Cmd Rej: FORCE=YES is required when card is allowed

Notes

None

Output

```
dlt-ip-rte:loc=1301:dest=128.252.10.5  
  
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0  
DLT-IP-RTE: MASP A - COMPLTD  
;
```

Related Topics

- [rtv-ip-lnk](#)

4.1.226 dlt-j1

Use this command to delete J1 interface.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

j1port (mandatory)

The value must be a J1 port that has already been configured with a J1 interface on the specified T1 card with application as CCS7ITU.

Range:

1-8

Example

```
dlt-j1:loc=1101:j1port=2
```

Dependencies

The specified card location (loc parameter) must be equipped.

3136 E3136 Cmd Rej: J1 card location is unequipped

The card in the specified card location (loc parameter) must be a LIMT1 card type and application must be CCS7ITU.

2212 E2212 Cmd Rej: Invalid card type for this command

The port specified by the j1port parameter must be already equipped with J1 interface.

3128 E3128 Cmd Rej: The J1PORT at the specified location is not equipped

The J1 table must be accessible.

3164 E3164 Cmd Rej: Failed reading the J1 table

The Card (IMT) table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

All signaling links providing timeslots serviced by the specified J1 interface must be deleted before the J1 interface can be deleted. Use the dlt-slk command to delete the signaling links providing the timeslots.

3170 E3170 Cmd Rej: All signaling links serviced by J1 must be deleted.

Card locations 1113 - 1118 (OAM, TDM, MDAL cards) cannot be specified as values for the loc parameter.

2154 E2154 Cmd Rej: Card slot reserved by system

J1port must be in range from 1 to 8.

2017 E2017 Cmd Rej: Integer is out of range, 1..8 - j1port

Notes

None.

Output

```
dlt-j1:loc=1101:j1port=1

tekelecstp 13-12-20 12:57:15 EST 46.0.0-65.3.0
dlt-j1:j1port=1:loc=1101
DLT-J1: MASP A - COMPLTD
;
```

Related Topics

- [chg-j1](#)
- [ent-j1](#)
- [rtrv-j1](#)
- [tst-j1](#)

4.1.227 dlt-lbp

Use this command to delete one or all far-end loopback points maintained in the Link Fault Sectionalization table for testing data signaling link elements in a single CCS7 transmission path.

Parameters**link (mandatory)**

SS7 signaling link. The SS7 signaling link that is to be tested.

Synonym:

port

Range:

a, b, a1 - a31, b1 - b31

Not all card types support all `link` parameter values.

See [Table A-1](#) for valid `link` parameter range values for each type of card that can have assigned signaling link ports.

loc (mandatory)

Card location. The unique identifier of the card containing the signaling link to be used for loopback point testing.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

a11 (optional)

Deletes all loopback points for the specified signaling link or deletes only the link specified on the `lbp` parameter.

Range:

yes

lbp (optional)

Loopback point ID. This parameter identifies a far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to and including the target device).

Range:

1 - 32

Example

```
dlt-lbp:loc=1101:link=a:lbp=1
```

```
dlt-lbp:loc=1101:link=a:all=yes
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `lbp` parameter and the `all` parameter cannot be specified together in the command.

2902 E2902 Cmd Rej: LBP or ALL parameter must be specified exclusively

The Link Fault Sectionalization (LFS) feature must be on before this command can be entered.

2870 E2870 Cmd Rej: LFS feature must be ON

The loopback point (LBP) must have been previously defined.

2901 E2901 Cmd Rej: LBP must have been previously defined in database

The card location indicated by the `loc` parameter must indicate an E5-E1T1-B card, provisioned with the LIMT1 card type, with either the SS7ANSI or CCS7ITU application.

2892 E2892 Cmd Rej: LOC is not LFS capable

The card location specified in the `loc` parameter must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The card location specified in the `loc` parameter cannot be reserved by the system.

2376 E2376 Cmd Rej: Specified LOC is invalid

The Link Fault Sectionalization database Loopback Point (LBP) table is not accessible.

2891 E2891 Cmd Rej: Failed reading Link Fault Sectionalization table

Notes

None

Output

```
dlt-lbp:loc=1101:link=a:lbp=1
```

```
rlghncxa03w 05-02-17 15:35:05 EST EAGLE5 33.0.0
DLT-LBP: MASP A - COMPLTD
;
```

Related Topics

- [act-lbp](#)
- [chg-lbp](#)
- [dact-lbp](#)
- [ent-lbp](#)
- [rtrv-lbp](#)

4.1.228 dlt-lg-card

Use this command to delete an LG card.

The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
dlt-lg-card:loc=1302
```

Dependencies

The card location must not be 1113-1118, or xy09 and xy10 where x is the frame and y is the shelf.

2154 E2154 Cmd Rej: Card slot reserved by system

All LG engines must be removed or disassociated from the LG card.

5211 E5211 Cmd Rej: LG Card still associated with LG Engines

Card must be deactivated before it can be deleted.

3726 E3726 Cmd Rej: Active device state does not permit database change

The card location specified in the `loc` parameter must be of a provisioned LG card.

5239 E5239 Cmd Rej: LG card not defined

The LG Card table is corrupt or cannot be found.

5222 E5222 Cmd Rej: Unable to read LG Card table

The `loc` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

Output

Related Topics

- [act-lg-card](#)
- [chg-lg-card](#)
- [dact-lg-card](#)
- [ent-lg-card](#)
- [rept-stat-lg](#)
- [rtrv-lg-card](#)

4.1.229 dlt-lg-engine

Use this command to delete an LG engine.

The command class is `TKLC_INTERNAL` inheriting properties of `DEBUG` class. The Load Generator is supported on `IPSG`, `IPLHC`, `IPGHC` and `SS7HC` GPLs.

Parameters

engine (mandatory)

Range:

ayyyyyyyy

Up to 10 alphanumeric characters; the first character must be a letter.

Example

```
dlt-lg-engine:engine=txengine1
```

Dependencies

The LG Engine table is corrupt or cannot be found.

5212 E5212 Cmd Rej: Unable to read LG Engine table

The engine name specified must pre-exist in the LG Engine table.

5209 E5209 Cmd Rej: LG Engine not defined

Engine must be deactivated before it can be deleted.

3726 E3726 Cmd Rej: Active device state does not permit database change

Rx engine must be removed or disassociated from the Tx engine.

5276 E5276 Cmd Rej: RxEngine is associated with TxEngine

Output

Related Topics

- [act-lg-engine](#)
- [dact-lg-engine](#)
- [ent-lg-engine](#)
- [rept-stat-lg](#)
- [rtrv-lg-engine](#)

4.1.230 dlt-lg-event

Use this command to delete an LG event. The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

event (mandatory)

Range:

aaaaaaaa

Up to 10 alphanumeric characters; the first character must be a letter

Example

```
dlt-lg-event:event=txisup1
```

Dependencies

When failed to read LG Event table.

5223 E5223 Cmd Rej: Unable to read LG Event table

The value specified for the `event` parameter must already exist in the table

5227 E5227 Cmd Rej: LG Event not defined

The LG Event name specified in the command should not be referenced in the LG Engine table.

5228 E5228 Cmd Rej: LG Event associated with LG Engine

The `event` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

Output

Related Topics

- [chg-lg-event](#)
- [ent-lg-event](#)
- [rept-stat-lg](#)

- [rept-stat-lg](#)
- [rtrv-lg-event](#)

4.1.231 dlt-lg-grp

Use this command to delete an LG group. The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

grp (mandatory)

Range:

aaaaaaaa

Up to 10 alphanumeric characters; the first character must be a letter

Example

```
dlt-lg-grp:grp=lgroup1
```

Dependencies

The value specified for the `grp` parameter must already exist in the LG Group table.

5207 E5207 Cmd Rej: LG Group not defined

An LG group can be deleted only when no LG cards are associated with that group.

5208 E5208 Cmd Rej: LG cards in service

The Group must be deactivated before it can be deleted.

3726 E3726 Cmd Rej: Active device state does not permit database change

The LG Group table is corrupt or cannot be found.

5221 E5221 Cmd Rej: Unable to read LG Group table

The `grp` parameter is mandatory

2379 E2379 Cmd Rej: Missing parameter

Output

Related Topics

- [act-lg-grp](#)
- [dact-lg-grp](#)
- [ent-lg-grp](#)
- [rept-stat-lg](#)
- [rtrv-lg-grp](#)

4.1.232 dlt-lnp-serv

Use this command to delete from the database an LNP service or an alias translation type associated with an LNP service.

Parameters

serv (mandatory)

Reserved service type name.

Range:

ain

in

pcs

wnp

class

lidb

cnam

isvm

lnpqs

wsmc

udf1

udf2

udf3

udf4

lrnqt

alias (optional)

Alias translation type.

Range:

000 - 255

Example

```
dlt-lnp-serv:serv=lidb:alias=236
```

```
dlt-lnp-serv:serv=lrnqt
```

Dependencies

The LNP feature must be turned on before this command can be entered.

3009 E3009 Cmd Rej: LNP feature must be ON

The value of the `serv` parameter must already exist in the LNP database.

3146 E3146 Cmd Rej: Service type is not in LNP database

The service must not be referenced in the LNP database.

3147 E3147 Cmd Rej: Translation Type referenced in LNP database

The value of the `alias` parameter must be associated with the value of the specified `serv` parameter.

3172 E3172 Cmd Rej: ALIAS is not assigned to SERV

The value specified for the `alias` parameter cannot already exist in the LNP database as a true translation type.

2460 E2460 Cmd Rej: Alias defined as translation type

The LNP TT SERV table is corrupt or cannot be found.

3123 E3123 Cmd Rej: Failed Reading LNP TT SERV table

All aliases associated with the LNP service must be deleted before the service can be deleted.

3199 E3199 Cmd Rej: To change or delete SERV, it must have no LNP aliases

The value of the `alias` parameter must exist in the LNP database.

2324 E2324 Cmd Rej: Alias not defined

The LNP database is corrupt or cannot be found.

2416 E2416 Cmd Rej: Unable to access database. Severe database failure

The GTT Action table is corrupt or cannot be found.

5067 E5067 Cmd Rej: Unable to access GTT Action table

Notes

None

Output

```
dlt-lnp-serv:serv=cnam:alias=23
```

```
rlghncxa03w 10-11-09 16:40:40 EST EAGLE 43.0.0  
DLT-LNP-SERV: MASP A - COMPLTD  
Command Completed.
```

;

Related Topics

- [chg-lnp-serv](#)
- [ent-lnp-serv](#)
- [rtv-lnp-serv](#)

4.1.233 dlt-loopset

Use this command to delete loopset and point code data from the database. This command updates the Loopset table.

Note:

A total of 6 point codes can be deleted each time this command is issued. If the command is issued twice, all point codes in a loopset can be deleted, creating an empty loopset.

Parameters

name (mandatory)

Loopset name. This parameter specifies an entry in the Loopset table.

Range:

ayyyyyyy

1 alphabetic and up to 7 alphanumeric characters

force (optional)

The `force=yes` parameter must be specified to delete a single point code entry from a loopset that is being used by GTT.

Range:

yes

pc1 (optional)

ANSI point code list with subfields *network indicator-network cluster-network cluster-member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*). This parameter allows up to 6 comma-delimited entries in the point code list.

Synonym:

pcla

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc1i (optional)

ITU international point code list with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range:*s-, p-, ps-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**zone—0-7**area—000-255**id—0-7*The point code *0-000-0* is not a valid point code.**pc1n (optional)**

ITU national point code list in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range:*s-, p-, ps-, 0-16383, aa-zz, none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14Enter *none* to delete the point code.**pc1n24 (optional)**

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. This parameter allows up to 6 comma-delimited entries in the point code list.

Range:*p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000-255**ssa—000-255**sp—000-255***pc1n16 (optional)**

16-bit ITU national point code with subfields *unit number sub number area main number area (un-sna-mna)*. This parameter allows up to 6 comma-delimited entries in the point code list.

Range:*p--, 000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

```
prefix---p  
un---000---127  
sna---000---15  
mna---000---31
```

Example

This example deletes the entire loopset table entry for the loopset RTP7 when that set is not being used by GTT.

```
dlt-loopset:name=rtp7
```

This example deletes a single point code in the entry for the loopset RTP2 when that set is being used by GTT.

```
dlt-loopset:name=rtp2:pc1=3-3-9:force=yes
```

This example deletes a point code for the loopset RTP1 when the loopset is not being used by GTT.

```
dlt-loopset:name=rtp1:pc1=3-3-9
```

This example deletes a point code for the loopset RTP1 when the loopset is not being used by GTT.

```
dlt-loopset:name=rtp1:pc1n16=3-3-9
```

Dependencies

The value of the `name` parameter must already exist in the database.

4568 E4568 Cmd Rej: Loop Set entry does not exist

The SCCP Loop Detection feature must be enabled before this command can be entered.

4565 E4565 Cmd Rej: SCCP Loop Detection Feature is not enabled

The GTT feature must be turned on before this command can be entered.

2584 E2584 Cmd Rej: GTT feature must be ON

A loopset entry cannot be deleted when it is being used by GTT.

4569 E4569 Cmd Rej: Cannot delete loopset when in use by GTT

If a point code in the Loopset table is being used by GTT, then the `force=yes` parameter must be specified before the `pc1/pc1i/pc1n/pc1n24/pc1n16` parameter can be specified.

4570 E4570 Cmd Rej: Point Code in use by GTT Force parameter required

The Loopset table must be accessible.

4567 E4567 Cmd Rej: Cannot access LoopSet table

The values for the `pc1` parameter cannot consist of any invalid point codes. The valid point codes must be consecutively specified and separated by commas.

4627 E4627 Cmd Rej: Valid point codes must be continuous in point code list

The `name=none` parameter cannot be specified.

4628 E4628 Cmd Rej: NONE is an invalid name for a loopset entry

At least one valid point code must be specified as a value for the `pcl` parameter.

4626 E4626 Cmd Rej: Must have at least 1 valid PC in a point code list

The values for the `pcl` parameter must be unique.

4624 E4624 Cmd Rej: PCs in point code list must be unique

The GTT table must be accessible.

3118 E3118 Cmd Rej: Failed Reading GTT TT table

The value of the `pcl` parameter must exist in the loopset entry in the database.

4596 E4596 Cmd Rej: Point Code does not exist in the Loopset Table entry

Notes

There is no J7 feature dependency on the `pcln16` parameter. The command can be entered successfully when the J7 feature is not enabled.

There is no J7 feature dependency on the `pcl/pcla/pcln2` 4 parameters. The command can be entered successfully when the J7 feature is enabled.

Output

The following example deletes a single point code in the entry for the loopset RTP2 when the set is being used by GTT. `dlt-`

```
loopset:name=rtp2:pcl=3-3-9:force=yes
```

```

rlghncxa03w 07-02-10 08:48:25 EST  EAGLE Rel 35.6.0
LOOPSET table is (11 of 1000) 1% full
DLT-LOOPSET: MASP A - COMPLTD
;

```

Related Topics

- [chg-loopset](#)
- [ent-loopset](#)
- [rtv-loopset](#)

4.1.234 dlt-ls

Use this command to remove a linkset from the system database. A linkset is a group of signaling links carrying traffic to the same signaling point.

Parameters

lsn (mandatory)

Linkset name. This parameter specifies the name of the linkset. Only one linkset name per command can be specified.

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Example

```
dlt-ls:lsn=lsna
```

Dependencies

The linkset must be in the database.

2346 E2346 Cmd Rej: Linkset not defined

The linkset can be removed only if all links associated with the linkset have been removed.

2342 E2342 Cmd Rej: Links assigned to linkset

If the linkset is referenced by the historic routeset of any destination, then this command cannot be entered.

2348 E2348 Cmd Rej: Linkset referenced by destination historic route

The specified linkset cannot be deleted if it has or is a mate linkset.

4216 E4216 Cmd Rej: Linkset cannot be the mate of another linkset

A gateway linkset can be deleted only from a SEAS terminal, and not from a system terminal.

2932 E2932 Cmd Rej: SEAS Gateway Linkset can not be deleted locally

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The linkset cannot be deleted if an SAPC entry is present for the linkset.

4128 E4128 Cmd Rej: SAPC entry present for the linkset

If the linkset is referenced by the historic routeset of any exception route destination, then this command cannot be entered.

4607 E4607 Cmd Rej: Linkset referenced by exception route historic route

The Route Exception table is corrupt or cannot be found.

4379 E4379 Cmd Rej: Failed to access Route Exception Table

SAPC entry present for the linkset.

4133 E4133 Cmd Rej: Group code required for ITUN when ITUDUPPC feat is ON

If multiple linksets are assigned to an adjacent point code, then the proxy linkset must be the final linkset that is deleted.

4692 E4692 Cmd Rej: One LS must use PPC assigned to APC in route(dstn) table

If the linkset that is specified by the `lsn` parameter is used as an incoming linkset for an exception route entry (see the `rtv-rtx` command), then this command cannot be entered.

4814 E4814 Cmd Rej: Linkset referenced by exception route ILSN

If the linkset is referenced by the GTT selector table, then this command cannot be entered.

5073 E5073 Cmd Rej: Linkset referenced by GTT selector table

The GTT selector table is corrupt or cannot be found.

3543 E3543 Cmd Rej: Failed reading GTT Selector Table

The SAPC table is corrupt or cannot be found.

3282 E3282 Cmd Rej: Failed reading the SAPC table

The GTT destination must exist in the DSTN table.

4753 E4753 Cmd Rej: DSTN table entry was not found

Notes

When a linkset is removed from the system database, the related entries are removed automatically from the translation type mapping table.

Deleted MTT 4848 (MB).

Output

```
dlt-ls:lsn=lsna
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Link set table is (114 of 1024) 11% full
DLT-LS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-l3t](#)
- [ent-ls](#)
- [rept-stat-ls](#)
- [rtv-ls](#)

4.1.235 dlt-map

Use this command to remove mate application entries, groups, or an Alternate RI Mate associated with a MAP Set. This command removes one or more entries from the Remote Point Code Subsystem Number table.

Caution:

If PC/SSNs within a weighted entity set are deleted such that the entity set's multiplicity mode becomes solitary or dominant, the weight values are reset to indicate a non-weighted entity set.

**Note:**

See the "Notes" section for this command for additional information on multiplicity modes.

**Note:**

The GTT LS ARI feature must be enabled before an Alternate RI Mate can be deleted from a MAP Set.

Parameters**Note:**

At least one of these parameters must be specified: `all`, `ssn`.

**Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

pc (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24/pcn16 (mandatory)

Post-GTT-translated point code.

pci (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*
zone—*0-7*
area—*000-255*
id—*0-7*

The point code *0-000-0* is not a valid point code.

pcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-
nnnnn—*0-16383*
gc—*aa-zz*
m1-m2-m3-m4—*0-14* for each member; values must sum to *14*

pcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—*000-255*
ssa—*000-255*
sp—*000-255*

pcn16 (mandatory)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

a11 (optional)

This parameter must be specified to remove all subsystem numbers associated with this point code. If this parameter is not specified, only the specified subsystem number is removed.

Range:

yes

Default:

no

mapset (optional)

The MAP set ID.

Range:

1 - 36000, dflt

dflt —Default MAP set

Default:

dflt —If the Flexible GTT Load Sharing (FGTTLS) feature is not enabled,

mrnset (optional)

Alternate RI Mate MRN Set ID.

Range:

1 - 3000, dflt

ssn (optional)

Subsystem Number.

Range:

2 - 255

Default:

The specified subsystem number is removed for the given point code.

Example

This example deletes the single entry PC 1 with an SSN value of 123 from its mated group. If this is the last entry in the group then the PC is also deleted from the MAP tables:

```
dlt-map:pc=1-1-1:ssn=123
```

This example deletes each entry of PC 1-1-1 and all SSNs associated with the PC from each of the PC/SSN mated groups. The PC is also deleted from the MAP tables:

```
dlt-map:pc=1-1-1:all=yes
```

This example deletes subsystem 10 associated with spare PC 1 from the MAP table.

```
dlt-map:pci=s-1-1-0:ssn=10
```

This example deletes subsystem 10 associated with PC 1 in MAP set 362.

```
dlt-map:pc=1-1-1:ssn=10:mapset=362
```

This example deletes PC 1 along with all the subsystems associated with this PC in the default MAP set.

```
dlt-map:pc=1-1-2:all=yes:mapset=dflt
```

This example deletes the Alternate RI Mate associated with MAP Set 362.

```
dlt-map:mapset=362:mrnset=1
```

This example deletes the Alternate RI Mate for the default MAP Set and PC/SSN 1-1-1/10.

```
dlt-map:mapset=dfmt:pc=1-1-1:ssn=10:mrnset=1
```

This example deletes the entry from MAP set.

```
dlt-map:mapset=1:pc=1-1-1:ssn=10
```

This example deletes the 16 bit PC entry from MAP set.

```
dlt-map:mapset=1:pcn16=1-1-1:ssn=10
```

Dependencies

The `all` and `ssn` parameters cannot be specified together in the command.

2455 E2455 Cmd Rej: ALL cannot be specified with a subsystem

If the `all=yes` parameter is specified, all SSNs for the given PC are removed.

2422 E2422 Cmd Rej: ALL=YES must be specified to delete all SSNs for a PC

The DPC of the primary subsystem must be a full PC.

2864 E2864 Cmd Rej: Address (PCx) of primary subsystem must be a full PC

The specified remote PC must exist in the MAP table.

2452 E2452 Cmd Rej: Remote point code does not exist in MAP table

The specified SSN must exist in the MAP table entity set associated with the specified remote PC.

2456 E2456 Cmd Rej: SSN does not exist for given remote point code

An STP true point code that is assigned to an AIQ, ATINPQ, EIR, INP, LNP, or V-Flex subsystem cannot be deleted.

3287 E3287 Cmd Rej: Map with STP True PC has a local subsystem SS-APPL assigned

If the `pcn` parameter is specified, the format of the PC must match the format that was assigned with the `chg-stpopts:npcfmti` parameter.

2997 E2997 Cmd Rej: PC must match NPCFMTI set in CHG-STPOPTS

The Site Identification table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

If the FGTTLS feature is not enabled, the `mapset` parameter cannot be specified. If the FGTTLS feature is enabled, the `mapset` parameter must be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The specified MAP set must exist in the database.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

The specified PC/SSN/MAP set must already be provisioned in the MAP table.

4528 E4528 Cmd Rej: PC/SSN doesn't exist in MAPSET

If the `pc` and `mapset` parameters are specified, and the `all=yes` parameter is specified, then at least one entry for that PC/MAP set must exist in the MAP table.

4543 E4543 Cmd Rej: PC/MAPSET does not exist in MAP table

If the FGTTLS feature is enabled, then a MAP entry cannot be deleted if the entry is referenced in the MRN, GTT, GTA, GTT Action, GSM MAP Opcode, or GSM MAP Screening table using the MAPSET/PC/SSN combination, or if the entry is referenced in the MRN, GTT, GTA, GSM MAP Opcode, GSM MAP Screening, or PPSOPTS table using the MAPSET/PC combination, and the entry is the last entry in that MAP set with the specified point code.

If the FGTTLS feature is not enabled, then a MAP entry cannot be deleted if the entry is referenced in the GTT, GTA, GTT Action, GSM MAP Opcode, or GSM MAP Screening table using the PC/SSN combination or if the entry is referenced in the GTT, GTA, GSM MAP Opcode, GSM MAP Screening, or PPSOPTS table using the point code, and the entry is the last entry in the default MAP set with that point code.

4529 E4529 Cmd Rej: MAP entry is being referred by other entities

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

PC "Point code out of range".

2169 E2169 Cmd Rej: Point code out of range

If the `pcn` or `mpcn` parameter is specified, then the format of the parameter must match the format dictated by the `chg-stpopts:npcfnti` command.

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

The GTT LS ARI feature must be enabled before the `mrnset` parameter can be specified.

5041 E5041 Cmd Rej: GTT LS ARI Feature must be enabled

The value specified for the `mrnset` parameter must already be associated with a MAP Set.

5047 E5047 Cmd Rej: Incorrect Alternate RI Mate is specified

The MRN table is corrupt or cannot be found.

2999 E2999 Cmd Rej: Failed reading the MRN table

If the `mrnset` parameter is specified, then the `all` parameter cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If a MAP set is referenced in the GTT table without an associated point code and subsystem number, then the MAP set cannot be deleted.

5469 E5469 Cmd Rej: MAPSET is being referred by GTT Table entities

Notes

For the MAP commands, an entity set consists of a group of PC/SSNs that are used for traffic distribution, and an RC group consists of PC/SSNs within an entity set that have the same RC. In loadsharing mode, an entity set contains 1 RC group. In combined/dominant loadsharing mode, an entity set can contain multiple loadsharing groups.

The EAGLE supports the following modes for nodes/subsystems:

- When a PC/SSN pair is not replicated, the pair is in *solitary* mode. The subsystem acts as the only application, with no backup. If this subsystem fails, messages routed to it are discarded and SCCP management returns “Subsystem Unavailable” messages to the originator.
- A group of replicated PC/SSN pairs are in *dominant* mode if each PC/SSN pair in the group has a unique RC. The specified subsystem with the lowest RC acts as the primary subsystem, while the mate subsystem acts as a backup. In the event of congestion, messages route to the mate subsystem. When the congestion subsides, messages are again routed to the primary (dominant) subsystem.
- A group of replicated PC/SSN pairs are in *load sharing* mode if each PC/SSN pair in the group has the same RC. All messages are evenly distributed at the SCCP level to all nodes/subsystems in the group. In the event of congestion or failure, the non-affected subsystem assumes the load of its failed or congested mate.
- The *combined load sharing/dominant* mode supports a combination of load sharing and dominant mode. A group of PC/SSN pairs are in combined load sharing/dominant mode when at least two of the PC/SSN pairs have the same RC and another node subsystem in the group has a different RC. A combination of node accessibility and RC determines the preferred PC/SSN.

In this command, only ITU-international and ITU national PCs support the spare point code subtype prefix (s-).

When the FGTTLS feature is on, MAP load sharing sets are supported. Each MAP set is identified by a new `mapset` parameter.

When the Weighted GTT Loadsharing feature is turned on, weighted entity sets and RC groups are supported, and threshold values can be assigned to each PC/SSN.

Output

```
dlt-map:pc=1-1-0:ssn=10:mapset=362
```

```
tekelecstp 08-12-22 12:20:10 EST EAGLE 40.1.0
DLT-MAP: MASP A - COMPLTD
```

```
;
```

```
dlt-map:mapset=362:mrnset=1
```

```
tekelecstp 08-12-22 12:20:10 EST EAGLE 40.1.0
DLT-MAP: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-map](#)
- [ent-map](#)
- [rtrv-map](#)

4.1.236 dlt-mate-stp

Use this command to delete an PC (secondary point code) from the database. Also use this command to change an PC by first removing the PC from the database and then using the ent-mate-stp command to enter the new PC value.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

pc (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255

The point code 000-000-000 is not a valid point code.

pc/pca/pci/pcn/pcn24/pcn16 (mandatory)

Secondary point code.

pci (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-s

zone-0-7

area-000-255

id-0-7

The point code 000-000-000 is not a valid point code.

pcn (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-s

nnnnn-0-16383

gc-aa-zz

m1-m2-m3-m4-0-14 for each member; values must sum to 14

pcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa-000-255

ssa-000-255

sp-000-255

pcn16 (mandatory)

16-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

Example

`dlt-mate-stp:pc=10-20-30`

`dlt-mate-stp:pcn24=98-98-98`

`dlt-mate-stp:pcn=s-12345`

`dlt-mate-stp:pcn16=121-10-30`

Dependencies

A point code is not present in Mate STP table.

2657 E2657 Cmd Rej: Point code not defined.

Output

```
dlt-mate-stp:pci=1-1-1
```

```
Command Accepted - Processing
```

```
tekelecstp 18-05-29 11:09:12 MST EAGLE 46.6.2.0.0-73.19.0
dlt-mate-stp:pci=1-1-1
Command entered at terminal #2.
;
tekelecstp 18-05-29 11:09:13 MST EAGLE 46.6.2.0.0-73.19.0
DLT-MATE-STP: MASP B - COMPLTD
;
```

Related Topics

- [ent-mate-stp](#)
- [rtrv-mate-stp](#)

4.1.237 dlt-mrn

Use this command to delete entries or an Alternate RI Mate from the MRN table. A single command can delete one point code from the group, or delete the entire group.

Caution:

If PCs within a weighted entity set are deleted such that the entity set's multiplicity mode becomes dominant, the weight values are reset to indicate a non-weighted entity set.

Note:

See the "Notes" section for this command for additional information on multiplicity modes.

Note:

The GTT LS ARI feature must be enabled before an Alternate RI Mate can be deleted from an MRN Set.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

pc (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24/pcn16 (mandatory)

Post-GTT-translated point code.

pci (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—*0-16383*

gc—*aa-zz*

m1-m2-m3-m4—*0-14* for each member; values must sum to *14*

pcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—*000-255*

ssa—*000-255*

sp—*000-255*

pcn16 (mandatory)

16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

a11 (optional)

This parameter is used to delete the entire group of point codes that contains the specified point code in the MRN table.

Range:

yes

mapset (optional)

Alternate RI Mate MAP Set ID.

Range:

1 - 36000, dflt

mrnset (optional)

The MRN set ID.

Range:

1 - 3000, dflt

dflt —Default MRN set

pc1 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca1

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc1/pca1/pci1/pcn1/pcn241/pcn161 (optional)

Alternate post-GTT-translated point code.

pc2 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca2

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc2/pca2/pci2/pcn2/pcn242/pcn162 (optional)

Alternate post-GTT-translated point code.

pc3 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca3

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc3/pca3/pci3/pcn3/pcn243/pcn163 (optional)

Post-GTT-translated point code.

pc4 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca4

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc4/pca4/pci4/pcn4/pcn244/pcn164 (optional)

Alternate post-GTT-translated point code.

pci1 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pci2 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pci3 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:*s*-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s**zone*—0-7*area*—000-255*id*—0-7

The point code 0-000-0 is not a valid point code.

pci4 (optional)ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)**Range:***s*-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s**zone*—0-7*area*—000-255*id*—0-7

The point code 0-000-0 is not a valid point code.

pcn1 (optional)ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-*nnnnn*—0-16383*gc*—*aa-zz**m1-m2-m3-m4*—0-14 for each member; values must sum to 14**pcn2 (optional)**ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn241 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn242 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn243 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn244 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn3 (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-`

`stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn4 (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn161 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

pcn162 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

pcn163 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

pcn164 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

Example

This example deletes the entire entry for the specified point code (the point code plus all of its associated point codes):

```
dlt-mrn:pc=1-1-0
```

This example finds point codes 1-1-0 and 1-1-1, and deletes them from the group that contains them in the MRN table:

```
dlt-mrn:pc=1-1-0:pc1=1-1-1
```

This example deletes the entire group of point codes that contains the specified point code from the MRN table:

```
dlt-mrn:pc=1-1-0:all=yes
```

This examples includes a spare point codes:

```
dlt-mrn:pci=s-2-2-1
dlt-mrn:pc=1-1-9:mrnset=df1t
dlt-mrn:pc=1-1-1:pc1=1-1-9:mrnset=111
dlt-mrn:pc=1-1-9:all=yes:mrnset=111
```

This example deletes the Alternate RI Mate for MRN Set 111:

```
dlt-mrn:mrnset=111:mapset=123
```

This example deletes the Alternate RI Mate for the default MRN Set and PC 1-1-1:

```
dlt-mrn:mrnset=df1t:pc=1-1-1:mapset=123
```

This example deletes the entry from the MRN set:

```
dlt-mrn:mrnset=1:pc=1-1-1
```

Example for 16 bit PC entry:

```
dlt-mrn:pcn16=1-1-0:mrnset=df1t
```

Dependencies

ITU-N point codes must be the format set by the `npcfmti` parameter of the `chg-stpopts` command. (Use the `rtrv-stpopts` command to display the STP option settings.)

2997 E2997 Cmd Rej: PC must match NPCFMTI set in CHG-STPOPTS

A point code that is specified in the command must already exist in the MRN table.

2849 E2849 Cmd Rej: PC must already exist in the MRN table

The PCs in an entity set cannot be deleted if the deletion leaves only one PC in the entity set. If this occurs, the entire entity set must be deleted by specifying the `all=yes` parameter.

2977 E2977 Cmd Rej: Cannot leave a solitary PC in group

The `mrnset` parameter can be specified only when the Flexible GTT Load Sharing (FGTTLS) feature is enabled.

4479 E4479 Cmd Rej: MRNSET must be specified (only) if FGTTLS feature is enabled

If the FGTTLS feature is enabled, then the specified PC must already exist in the specified MRN set.

4483 E4483 Cmd Rej: PC does not exist in specified MRNSET

The specified MRN set must already exist in the MRN table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

If the FGTTLS feature is enabled, then an MRN entry cannot be deleted if the entry is referenced in the MAP, GTT, GTA, GTT Action, or PPSOPTS table, using the MRNSET/PC combination. If the FGTTLS feature is not enabled, then the entry cannot be deleted if the entry is referenced in the GTT, GTA, GTT Action, or PPSOPTS table, using the point code.

4484 E4484 Cmd Rej: MRN entry is being referred by other entities

If the `all=yes` parameter is specified, the `pc` parameter must be specified, and the `pc1/pc2/pc3/pc4` parameters cannot be specified.

2786 E2786 Cmd Rej: One PC parameter required with ALL parameter

The same point code value cannot be entered more than once for deletion.

2979 E2979 Cmd Rej: Cannot enter the same PC more than once

The `pc/pc1/pc2/pc3/pc4` parameter values must be full point codes.

2865 E2865 Cmd Rej: Address (MPCx) of mate subsystem must be a full PC

The GTT LS ARI feature must be enabled before the `mapset` parameter can be specified.

5041 E5041 Cmd Rej: GTT LS ARI Feature must be enabled

The value specified for the `mrnset` parameter must already be associated with a MAP Set.

5047 E5047 Cmd Rej: Incorrect Alternate RI Mate is specified

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

If the `mapset` parameter is specified, then the `pc1`, `pc2`, `pc3`, `pc4`, and `all` parameters cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

An MRN set cannot be deleted if the MRN set is referenced in the GTT table without an associated point code.

5382 E5382 Cmd Rej: MRNSET is being referred by GTT Table entities

Notes

For the MRN commands, an entity set consists of a group of PCs that are used for traffic distribution, and an RC group consists of PCs within an entity set that have the same RC. In loadsharing mode, an entity set contains 1 RC group. In combined/dominant loadsharing mode, an entity set can contain multiple loadsharing groups.

The EAGLE supports the following modes for nodes/subsystems:

- A group of replicated PCs are in *dominant* mode if each PC in the group has a unique RC. The specified subsystem with the lowest RC acts as the primary subsystem, while the mate subsystem acts as a backup. In the event of congestion, messages route to the mate subsystem. When the congestion subsides, messages are again routed to the primary (dominant) subsystem.
- A group of replicated PCs are in *load sharing* mode if each PC in the group has the same RC. All messages are evenly distributed at the SCCP level to all nodes/subsystems in the group. In the event of congestion or failure, the non-affected subsystem assumes the load of its failed or congested mate.
- The *combined load sharing/dominant* mode supports a combination of load sharing and dominant mode. A group of PC are in combined load sharing/dominant mode when at least two of the PC have the same RC and another node subsystem in the group has a different RC. A combination of node accessibility and RC determines the preferred PC.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

The Flexible Intermediate GTT Loadsharing feature adds support for loadsharing sets, which are identified by the `mrnset` parameter.

The Flexible GTT Loadsharing feature and the Intermediate GTT Loadsharing feature used together support MRN sets for flexible intermediate GTT loadsharing.

When the Weighted GTT Loadsharing feature is turned on, weighted entity sets and RC groups are supported, and threshold values can be assigned to each PC/SSN.

E3358 was deleted in release 44.0 for PR 168592.

Output

```
dlt-mrn:pc=1-1-1:mrnset=111
```

```
tekelecstp 08-12-22 12:20:10 EST EAGLE 40.1.0
DLT-MRN : MASP A - COMPLTD
;
```

```
dlt-mrn:mrnset=111:mapset=123
```

```
tekelecstp 08-12-22 12:20:10 EST EAGLE 40.1.0
DLT-MRN : MASP A - COMPLTD
;
```

Related Topics

- [chg-mrn](#)
- [ent-mrn](#)
- [rtrv-mrn](#)

4.1.238 dlt-na

Use this command to delete a previously defined network appearance.

Parameters

na (mandatory)

Network appearance.

Range:

0 - 4294967295

type (mandatory)

Type of the network appearance to be deleted.

Range:

ansi

itui

ituis

itun

ituns

itun24

itun16

gc (optional)

Group Code of the network appearance.

Range:

yy

2 alphabetic characters; valid values are *aa-zz*

Example

```
dlt-na:type=ansi:na=10
```

```
dlt-na:type=itui:na=11
```

```
dlt-na:type=itun:na=10
```

```
dlt-na:type=itun:na=11:gc=fr
```

Dependencies

If a value of *ansi*, *itui*, *ituis*, *itun16*, or *itun24* is specified for the `type` parameter, then the `gc` parameter cannot be specified.

4132 E4132 Cmd Rej: Group code not allowed with specified network type

The specified network appearance must exist in the Network Appearance table

4138 E4138 Cmd Rej: NA entry not found

Notes

The ITUDUPPC feature must be turned on before a group code can be deleted for an ITU-N network type

Output

```
dlt-na:pstncat=5000:pstnid=1:force=yes
```

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
DLT-NA: MASP A - COMPLTD
;
```

Related Topics

- [ent-na](#)
- [rtrv-na](#)

4.1.239 dlt-npp-as

Use this command to delete an NPP Action Set (AS) entry.

Parameters

asn (mandatory)

Action set name. This parameter specifies the name of the AS.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Example

```
dlt-npp-as:asn=asn1
```

Dependencies

The value specified for the `asn` parameter must exist in the NPP AS table.

4881 E4881 Cmd Rej: Action Set does not exist

If the AS is referenced by a NPP Service Rule Set, then this command cannot be entered.

4893 E4893 Cmd Rej: Action Set referenced

Output

```
dlt-npp-as:asn=asn1
```

```
tekelecstp 09-02-19 13:57:06 EST EAGLE 40.1.0  
NPP-AS table is (4 of 1024) 1% full.
```

```
DLT-NPP-AS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-npp-as](#)
- [dlt-npp-srs](#)
- [ent-npp-as](#)
- [rtrv-npp-as](#)

4.1.240 dlt-npp-srs

Use this command to delete an NPP Service Rule Set (SRS).

Parameters

f_{d1} (mandatory)

Filter digit length. The number of digits on the incoming digit string that is filtered by the NPP.

Range:

1 - 32, *

*—multiple lengths of messages can be filtered

f_{nai} (mandatory)

Filter Nature of Address Indicator (NAI).

Range:

intl

filter messages with NAI=INTL

natl

filter messages with NAI=NATL

nai1

filter messages with NAI=NAI1

nai2

filter messages with NAI=NAI2

nai3

filter messages with NAI=NAI3

unkn

filter messages when the NAI is unknown

f_{px} (mandatory)

Filter prefix. The prefix used to filter incoming digit strings.

Range:

1-16 digits, ?, *

1 - 16 hexadecimal digits inclusive of single digit wildcard (?); or wildcard (*) matching the entire digit string;

Valid values are 0-9, a-f, A-F, ?, *

f_{srvn} (mandatory)

Service name. The name of the NPP Service.

Range:

nppt

NPP Test Service

idprcdpn

IDPRCDPN Service

idprcgpn

IDPRCGPN Service

tif

TIF Service

tif2

TIF2 Service

tif3

TIF3 Service

mosmsicgpn

MOSMSICGPN Service

mosmsicdpn

MOSMSICDPN Service

mosmsgcgpn

MOSMSGCGPN Service

mosmsgcdpn

MOSMSGCDPN Service

iarcdpn

IARCDPN Service

iarcgpn

IARCGPN Service

idprcdpn2

IDPRCDPN2 Service

idprcdpn3

IDPRCDPN3 Service

idprcdpn4

IDPRCDPN4 Service

tifcgpn

TIFCGPN Service

tifcgpn2

TIFCGPN2 Service

tifcgpn3

TIFCGPN3 Service

Example

```
dlt-npp-srs:svn=nppt:fpfx=a:fdl=10:fnai=intl
```

```
dlt-npp-srs:svn=idprcdpn4:fnai=intl:fdl=12:fpfx=91
```

Dependencies

The NPP Rule must exist in the NPP Rule table.

4891 E4891 Cmd Rej: Rule does not exist

Notes

MTT 4945 deleted for PR 194868 in rel 43.0

None

Output

```
dlt-npp-srs:svrn=nppt:fpfx=abc:fdl=16:fnai=intl
```

```
tekelecstp 09-02-19 13:57:01 EST EAGLE 40.1.0
NPP-SRS table is (0 of 8192) 0% full.
```

```
DLT-NPP-SRS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-npp-as](#)
- [chg-npp-srs](#)
- [dlt-npp-srs](#)
- [ent-npp-as](#)
- [rtrv-npp-as](#)
- [rtrv-npp-srs](#)

4.1.241 dlt-pct

Use this command to delete a Point Code and CIC Translation.

Parameters**epc (mandatory)**

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

epca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

epci (mandatory)

ITU international destination point code with subfields *zone-area-id*.

Range:*0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

epcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range:*0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*nnnnn—0-16383**gc—aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

realpc (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym:*realpca***Range:***000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

realpci (mandatory)

ITU international destination point code with subfields *zone-area-id*.

Range:*0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

realpcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-`

`stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range:

0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

ecice (optional)

The end of the Emulated Circuit Identification Code range.

Range:

*0 - 16383, 0 - 4095, 0 - 4294967295, **

0-4095—ITU TUP/ISUP

0-16383—ANSI ISUP

0-4294967295—ANSI Q.BICC

Default:

*

ecics (optional)

The start of the Emulated Circuit Identification Code range.

Range: *0 - 16383, 0 - 4095, 0 - 4294967295, **

0-4095 —ITU TUP/ISUP

0-16383 —ANSI ISUP

0-4294967295 —ANSI Q.BICC

Default:

*

filtpc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

filtpca

Range:

*0-255, **

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When `chg-sid:pctype=ansi` is specified, *ni=000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni=001–005*.

When `chg-sid:pctype=ansi` is specified, *nc=000* is valid if *ni=006–255*.

When `chg-sid:pctype=ansi` is specified, *ni-*-** is valid if *ni =006–255*.

The point code *000-000-000* is not a valid point code.

filtpci (optional)

ITU international destination point code with subfields *zone-area-id*.

Range:

0-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

filtpcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range:

16363, aa-zz, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

rcice (optional)

The end of the Real Circuit Identification Code range.

Range:

0 - 4294967295, *

0-4095—ITU TUP/ISUP

0-16383 —ANSI ISUP

0-4294967295 —ANSI Q.BICC

Default:

*

rcics (optional)

The start of the Real Circuit Identification Code range.

Range:

0 - 4294967295, *

0-4095 —ITU TUP/ISUP

0-16383 —ANSI ISUP

0-4294967295 —ANSI Q.BICC

Default:

*

si (optional)

Service Indicator

Range:

0

NM

3
SCCP

5
ISUP

4
TUP

13
ANSI Q. BICC

Default:
*

ssn (optional)
SCCP Subsystem number

Range:
0 - 255, *

Default:
*

Example

```
dlt-pct:epc=1-1-1:si=3:ssn=10
```

```
dlt-pct:realpc=2-2-2:si=5:ecics=20
```

Dependencies

The values specified for the `epc/epca/epci/epcn`, `filtpc/filtpca/filtpci/filtpcn`, and `realpc/realpca/realpci/realpcn` parameters must be within the range specified by the parameter definition.

2169 E2169 Cmd Rej: Point code out of range

The value specified for the `ecice` or `rcice` parameter must be equal to or greater than the value specified for the `ecics` or `rcics` parameter, respectively.

4404 E4404 Cmd Rej: End value must be greater than or equal to a starting value

A full point code must be specified as the value for the `realpc/realpca/realpci/realpcn` and `epc/epca/epci/epcn` parameters.

3090 E3090 Cmd Rej: Full Point Code must be specified

A PCT quantity feature must be enabled before this command can be entered.

5391 E5391 Cmd Rej: PCT feature must be enabled

If the ITUDUPPC feature is on, and ITU-N Point codes are specified, then the values specified for the `epcn`, `realpcn`, and `filtpcn` parameters must have the same group code.

5394 E5394 Cmd Rej: Group Code of EPC, RealPC and FiltPC must match

The Point Code and CIC Translation (PCT) table is corrupt or cannot be found.

5392 E5392 Cmd Rej: The PCT table is corrupt or cannot be found

The values specified for the `epc/epca/epci/epcn`, `filtpc/filtpca/filtpci/filtpcn`, and `realpc/realpca/realpci/realpcn` parameters must have the same domain.

4606 E4606 Cmd Rej: Point code type mismatch

If the `ssn` or `ecics` parameter is specified, then the `si` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

A spare point code cannot be specified as a value for the `epci/epcn`, `filtpci/filtpcn`, and `realpci/realpcn` parameters.

5400 E5400 Cmd Rej: Spare point code is not allowed

A PCT translation entry with the specified parameters must exist.

5401 E5401 Cmd Rej: Single translation entry not found

The `si=3` parameter must be specified before the `ssn` parameter can be specified.

5424 E5424 Cmd Rej: Invalid SI value specified

If the `ecice` or `rcice` parameter is specified, then the `ecics` or `rcics` parameter must be specified, respectively.

4580 E4580 Cmd Rej: CIC must be specified if ECIC is specified

If the `rcics` parameter is specified, then the `ecics` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

If the `ecics`, `ecice`, and `rcics` parameters are specified, then the `rcice` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

A value of 4, 5, or 13 must be specified for the `si` parameter before the `ecice/ecics` and `rcice/rcics` parameters can be specified.

5424 E5424 Cmd Rej: Invalid SI value specified

The values specified for the `epc/epca/epci/epcn`, `filtpc/filtpca/filtpci/filtpcn`, and `realpc/realpca/realpci/realpcn` parameters cannot be the same as the STP point code.

2168 E2168 Cmd Rej: Point code matches a STP point code

The values specified for the `epc/epca/epci/epcn`, `filtpc/filtpca/filtpci/filtpcn`, and `realpc/realpca/realpci/realpcn` parameters cannot be the same as the STP capability point code.

2167 E2167 Cmd Rej: Point code matches a STP capability point code

The values specified for the `realpc/realpca/realpci/realpcn` and `filtpc/filtpca/filtpci/filtpcn` parameters must already exist in the Route table.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

The values specified for the `realpc/realpca/realpci/realpcn` and `filtpc/filtpca/filtpci/filtpcn` parameters must have at least one route for each value defined in the Route table.

2642 E2642 Cmd Rej: DPC must have at least one route defined

The value specified for the `ecics/ecice` and `rcics/rcice` parameters must be within the range specified by the parameter definition.

3878 E3878 Cmd Rej: CIC outside of valid range for SI

The difference between the values specified for the `ecice` and `ecics` parameters must be equal to the difference between the values specified for the `rcice` and `rcics` parameters.

5426 E5426 Cmd Rej: ECICS/ECICE and RCICS/RCICE should be in same range

The `ssn` and `cic` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `ecics`, `rcics` and `rcice` parameters are specified, then the `ecice` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

If the same value is specified for the `epc` and `realpc` parameters, then the values specified for the `ecics/ecice` and `rcics/rcice` parameters cannot indicate the same range.

5433 E5433 Cmd Rej: ECIC/Real CIC range can't be same if EPC is same as Real PC

Only one of the `filtpca`, `filtpci`, and `filtpcn` parameters can be specified in the command.

5440 E5440 Cmd Rej: Only one of FILTPC/A, FILTPCI, or FILTPCN may be specified

The value specified for the `epc/epci/epcn` parameter cannot be the same as a secondary point code.

4238 E4238 Cmd Rej: Point code matches a STP secondary point code.

Output

```
dlt-pct:epc=1-1-1:realpc=5-5-5:si=3:ssn=10
```

```
tekelecstp 10-08-10 18:29:41 EST EAGLE 43.0.0
dlt-pct:epc=1-1-1:realpc=5-5-5:si=3:ssn=10
Command entered at terminal #4.
DLT-PCT: MASP A - COMPLTD
```

```
;
```

Related Topics

- [ent-pct](#)
- [rtrv-pct](#)

1-5 for ISUP NP with EPAP feature prefix values

6 for the ISUP NP with EPAP feature Insertion Country Code

7 for the ISUP NP with EPAP feature Deletion Condition value

Default:

Current value

Example

Delete a prefix with prefix number 1 for the ISUP NP with EPAP feature.

```
dlt-prefix:feature="isup np with epap":prefix=1004:prefixnum=1
```

Delete a prefix with prefix number 2 and specify part of the GSM MAP SRI Redirect feature name.

```
dlt-prefix:feature="GSM MAP SRI":prefix=104:prefixnum=2
```

Dependencies

The specified feature name must be the name of an enabled controlled feature as it is displayed in the `rtrv-ctrl-feat` command output. The specified feature must be one of the following features that are supported by this command:

- GSM MAP SRI Redirect
- ISUP NP for EPAP

4347 E4347 Cmd Rej: Feature Name is not valid

The specified feature prefix value must already exist in the database.

4350 E4350 Cmd Rej: Feature Prefix not found

The specified feature prefix value must not be used by the specified feature in the database.

4349 E4349 Cmd Rej: Feature Prefix still in use

The FEATPFX table is corrupt or cannot be found by the system.

4364 E4364 Cmd Rej: Failed reading FEATPFX table

Notes

None

Output

```
dlt-prefix:feature="isup np with epap":prefix=1004:prefixnum=1
```

```
rlghncxa03w 04-09-20 09:04:14 EST EAGLE 31.11.0  
DLT-PREFIX: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-prefix](#)

- [rtrv-ctrl-feat](#)
- [rtrv-prefix](#)

4.1.243 dlt-rmt-appl

Use this command to remove remote application assignments from the database.

Parameters

ipc (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

ipca

Range:

p-, *000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

ipc/ipca/ipci/ipcn/ipcn24/ipcn16 (mandatory)

End node's internal point code.

ipci (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, *0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

ipcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s-, p-, ps-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**ipcn24 (mandatory)**24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).**Range:***p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000—255**ssa—000—255**sp—000—255***ipcn16 (mandatory)**16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*. The *prefix* indicates a private point code (*prefix-un-sna-mna*).**Range:***p-, 000---127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix---p**un---000---127**sna---000---15**mna---000---31***si (mandatory)**

Service indicator value that designates which user part is assigned to IPC.

Range:*3 - 15***ssn (optional)**SCCP subsystem number. Valid only if *si*=3. This parameter is the starting value of the range if the *ssne* parameter is specified.**Range:***0 - 255***ssne (optional)**

Specifies the end range of subsystem number.

Range:

1 - 255

Example

```
dlt-rmt-appl:ipc=0-0-1:si=3:ssn=5
```

```
dlt-rmt-appl:ipc=0-0-1:si=5
```

```
dlt-rmt-appl:ipcn24=1-100-1:si=5
```

```
dlt-rmt-appl:ipci=ps-2-2-2:si=5
```

```
dlt-rmt-appl:ipcn16=1-2-1:si=5
```

Dependencies

Partial point codes are not allowed.

2166 E2166 Cmd Rej: Partial point codes are not allowed

The `ssn` parameter is required if `si=3`.

3743 E3743 Cmd Rej: SSN required if SI is 3

The `ssn` and `ssne` parameters are not allowed unless `si=3`.

3757 E3757 Cmd Rej: SSN is not allowed unless SI is 3

The `ssne` parameter value must be greater than the `ssn` parameter value.

3018 E3018 Cmd Rej: SSNE should be greater than SSN

The specified `ipc` must be previously defined in the Destination table.

2657 E2657 Cmd Rej: Point code not defined

The new entry cannot conflict with an existing entry.

3019 E3019 Cmd Rej: Conflicts with existing entry

The `ipc`, `si`, `ssn`, and `ssne` parameter values must all match a value in the Destination table.

3020 E3020 Cmd Rej: Remote Application not found

Notes

To specify a range of subsystem numbers, specify the `ssn` parameter value as the start of the range and the `ssne` parameter value as the end of the range.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

Output

```
dlt-rmt-appl:ipc=0-0-1:si=3:ssn=5
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
```

```
DLT-RMT-APPL: MASP A - COMPLTD
;
```

Related Topics

- [ent-rmt-appl](#)
- [rtrv-rmt-appl](#)

4.1.244 dlt-rte

Use this command to remove either a single route or all routes from the system database.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

The `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` or `cic` parameter must be specified. If the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter is specified, then action is taken upon the historic routes of the destination entity only.

a11 (optional)

This parameter removes all destinations from the system database.

Range:

yes

Default:

no

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

*p-, 000-255, **

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001–005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000-255

ssa—000-255

sp—000-255

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:*p--*, *000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix--p**un---000---127**sna---000---15**mna---000---31***lsn (optional)**

The name of the linkset associated with the route.

**Note:**

This parameter must be specified when the `all` parameter is not specified, and cannot be specified when the `all=yes` parameter is specified.

Range:*aaaaaaaaaa*

1 alphabetic character followed by 9 alphanumeric characters

Default:

No linkset name is specified

Example

Delete route to DPC 1-1-1 using linkset HQ435326:

```
dlt-rte:dpc=1-1-1:lsn=hq435326
```

Delete all routes to DPC 2-2-2:

```
dlt-rte:dpc=2-2-2:all=yes
```

Delete route to DPCN 3-15-15-15-sp using link E1M2ITUN:

```
dlt-rte:dpcn=3-15-15-15-sp:lsn=e1m2itun
```

Delete route for DPCN24 10-100-14 using linkset WE123624:

```
dlt-rte:dpcn24=10-100-14:lsn=we123624:rc=10
```

Delete route to private point code DPC p-1-1-1 using linkset HQ 325426:

```
dlt-rte:dpc=p-1-1-1:lsn=hq325426
```

Delete all routes to private point code DPC p-21-*-*:

```
dlt-rte:dpc=p-21-*-*:all=yes
```

Delete route to spare point code DPCI s-1-100-1 using linkset WE123624:

```
dlt-rte:dpci=s-1-100-1:lsn=we123624
```

Delete route to spare point code DPCN16 121-10-15 using linkset WE123624:

```
dlt-rte:dpcn16=121-10-15:lsn=we123624
```

Dependencies

The `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter must exist in the Destination Point Code table.

2657 E2657 Cmd Rej: Point code not defined

The value of the `lsn` parameter must exist in the Linkset table.

2357 E2357 Cmd Rej: Linkset is unequipped

If the `all=yes` parameter is specified, then the `lsn` parameter cannot be specified.

2331 E2331 Cmd Rej: Cannot specify LSN parameter with ALL=YES

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The destination point code of a route must be a full point code (*ni-nc-ncm*) or a cluster point code (*ni-nc-**).

2886 E2886 Cmd Rej: DSTN address must be a full, network or cluster PC

If the specified destination address is a full point code address (*ni-nc-ncm*) and is a member of a provisioned cluster (*ni-nc-**), then whether the ordered routes can be deleted is determined by the destination address's nested cluster allowed indicator. This value is set with the `ncai` parameter of the `ent/chg-dstn` commands:

- If the `ncai=no` parameter is specified, then the ordered route cannot be deleted.
- If the `ncai=yes` parameter is specified, then the destination address is a member of a provisioned nested cluster where the ordered routes of the provisioned members can be deleted. Deletion of the ordered routes of a provisioned member results in the provisioned member assuming the attributes of its cluster

If the specified destination address is a network cluster address (*ni-nc-**), then the method used to delete the specified ordered route attributes is determined by the setting of the destination address's nested cluster allowed indicator. This value is set with the `ncai` parameter of the `ent/chg-dstn` commands.

- If the `ncai=no` parameter is specified, then the specified ordered route is deleted for each signaling point code having the same network identifier (*ni*) and network cluster (*nc*) codes.
- If the `ncai=yes` parameter is specified, then the specified destination is a nested cluster where deletion of the cluster route will not delete the ordered route of the provisioned member.

2879 E2879 Cmd Rej: Ordered routes cannot be deleted from cluster members

If the `dpcn` parameter is specified, the format of the point code(s) must match the format you assigned with the `chg-stpopts:npcfmti` parameter.

2997 E2997 Cmd Rej: PC must match NPCFMTI set in CHG-STPOPTS

The last route for the specified destination point code being removed cannot be referenced by a mated application, or a concerned signaling point code. If any of

the destinations referencing the specified routset exist in the MAP table, then the last route of the routeset cannot be deleted.

2643 E2643 Cmd Rej: Cannot delete last route to DPC ref. in MAP table

If any of the destinations referencing the routset is used by the redirect function, then the last route of the routeset cannot be deleted.

2645 E2645 Cmd Rej: Cannot delete last route to DPC ref. by redirect func

The last route to a destination point code that exists in the MRN table cannot be deleted until the point code is deleted from the MRN table. If any of the destinations referencing the specified routset exists in the MRN table, then the last route of the routeset cannot be deleted.

3015 E3015 Cmd Rej: Cannot delete last route to a DPC referencd by the MRN table

The last route to a destination point code that still exists in the Concerned Secondary Point Code (CSPC) table cannot be deleted until the point code is deleted from the CSPC table. If any of the destinations referencing the routset exist in the CSPC table, then the last route of the routeset cannot be deleted.

4268 E4268 Cmd Rej: Cannot delete last route to DPC ref. in CSPC table

If the destination point codes associated with the routeset are referenced by GTT, then the last route cannot be deleted. If the last route to a destination point code is referenced by a GTT, then the route cannot be deleted until one of the following actions is performed:

- Delete the GTT using the route's destination.
- Change the route used by the GTT to a route using a different destination.
- Add another route using the same destination.

2356 E2356 Cmd Rej: Last route to DPC in use by GTT

The NRT feature must be turned on before the `dpc/dpca` parameter can be specified.

2955 E2955 Cmd Rej: Network Routing is only valid if the NRT feature is ON

When using network routing, if the destination point code has a value of * in the `nc` field, the `ncm` field must also be * (for example, `dpc=21-*-*`).

2956 E2956 Cmd Rej: NCM must be * when using Network Routing

If the routeset does not contain routes, then the `all=yes` parameter cannot be specified.

2358 E2358 Cmd Rej: Routeset is empty

If the destination point code is specified, then the linkset must exist in the historic routeset.

2351 E2351 Cmd Rej: Linkset not assigned in route table

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The Redirect table is corrupt or cannot be found.

2639 E2639 Cmd Rej: Failed reading redirect table

The last route to a destination that contains exception routes cannot be deleted. If any of the destinations referencing the specified routset contains exception routes, then the last route of the routeset cannot be deleted.

If a cluster point code is provisioned with `ncai=no`, and any cluster member has an associated exception route, then the routeset cannot be deleted using the `all=yes` parameter.

4416 E4416 Cmd Rej: Cant dlt last/all route to DSTN/member that has xception rte

The Route Exception table is corrupt or cannot be found.

4379 E4379 Cmd Rej: Failed to access Route Exception Table

The value of the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter cannot exist in the Application Filter table.

4438 E4438 Cmd Rej: Entered DPC exists in APPFLT table

The last route to a destination point code that still exists in the Prepaid SMS Options (PPSOPTS) table cannot be deleted until the point code is deleted from the PPSOPTS table. If any of the destinations referencing the routset exist in the PPSOPTS table, then the last route of the routeset cannot be deleted.

4194 E4194 Cmd Rej: Cannot delete last route to DPC referenced in PPSOPTS table

If multiple routes are assigned to a point code, then the route that uses the proxy linkset must be the final route that is deleted.

4708 E4708 Cmd Rej: One route must use PPC assigned in route(dstn) table

The network type of the linkset and routeset must match.

3877 E3877 Cmd Rej: ANSI/ITU point code type mismatch

The last route to a destination point code that exists in the PCT table cannot be deleted until the Filter Point Code or the Real Point Code is deleted from the table.

5397 E5397 Cmd Rej: Cannot delete last route to DPC referenced in PCT table

The Prepaid SMS Options Table must be available.

3351 E3351 Cmd Rej: Failed reading Prepaid SMS Options Table

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

Output

```
dlt-rte:dpc=1-1-1:lsn=1s01
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-RTE: MASP A - COMPLTD
```

```
;
```

This example shows the output when the GTT feature is turned on:

```
dlt-rtx:dpc=2-2-2:all=yes
```

```
rlghncxa03w 10-03-06 11:43:04 EST EAGLE 42.0.0
WARNING - ROUTE MAY BE REFERENCED BY MAP OR CSPC.
DLT-RTE: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-dstn](#)
- [chg-rtx](#)
- [dlt-dstn](#)
- [ent-dstn](#)
- [ent-rtx](#)
- [rept-stat-dstn](#)
- [rept-stat-rtx](#)
- [rtv-dstn](#)
- [rtv-rtx](#)

4.1.245 dlt-rtx

Use this command to delete an exception route entry. If only the `dpc` and criteria (`opc/ilsn/cic/si`) parameters are specified, then all exception route entries associated with those parameters are deleted.

Parameters

dpc (mandatory)

ANSI destination point code with subfields *network indicator-network-cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (mandatory)

Destination point code.

dpci (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

dpcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000-255

ssa—000-255

sp—000-255

dpcn16 (mandatory)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

cic (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the `ecic` parameter as exception routing criteria for the specified exception route.

Range:

0 - 16383

ecic (optional)

Ending Circuit Identification Code. This parameter and the `cic` parameter define the CIC range that is used as exception routing criteria for the specified exception route.

Range:

16383

ilsn (optional)

Incoming Link Set Name. The name of the originating linkset. This value is used as part of the exception routing criteria for the specified exception route.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

lsn (optional)

Linkset Name. The name of the linkset associated with the specified exception route.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

opc (optional)

ANSI origination point code with subfields *network indicator-network-cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

opc/opca/opci/opcn/opcn24/opcn16 (optional)

Originating Point Code

opci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

opcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

opcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000-255

ssa—000-255

sp—000-255

opcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

si (optional)

Service Indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range:

3 - 15

Example

```
dlt-rtx:dPCA=1-1-1:opc:2-3-3:lsn=1set1
dlt-rtx:dPCA=1-2-1:si=3:lsn=1set2
dlt-rtx:dPCA=1-3-1:ilsn=1set2:lsn=1set3
dlt-rtx:dPCI=2-100-1:si=5:lsn=1set5
dlt-rtx:dPCI=2-100-1:si=6
dlt-rtx:dPCI=2-100-1:opc=8-**-*
dlt-rtx:dPCN16=121-10-15:opcN:121-3-30:lsn=1set1
```

Dependencies

Only one of the *opc*, *ilsn*, *cic*, or *si* parameters can be specified for an exception route entry.

4435 E4435 Cmd Rej: OPC/ILSN/CIC/SI is mandatory and mutually exclusive

If the *ecic* parameter is specified, the *cic* parameter must also be specified.

4580 E4580 Cmd Rej: CIC must be specified if ECIC is specified

The *ecic* parameter value cannot be less than the *cic* parameter value.

4404 E4404 Cmd Rej: End value must be greater than or equal to a starting value

The Origin-Based MTP Routing feature must be enabled and turned on before this command can be entered.

4584 E4584 Cmd Rej: MTP Origin Based Routing Feature must be ON

The linkset name, as defined by the *ilsn* or *lsn* parameter, must exist.

2346 E2346 Cmd Rej: Linkset not defined

The specified combination of exception route parameter conditions must exist.

4380 E4380 Cmd Rej: Route Exception does not exist

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The Route Exception table is corrupt or cannot be found.

4379 E4379 Cmd Rej: Failed to access Route Exception Table

The value specified for the destination point code must be a full point code and not a cluster or network point code.

2859 E2859 Cmd Rej: Destination address must be a full point code

The point code specified by the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter must exist in the destination table.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

The route to be deleted cannot be the last route or route set in the RTX table.

4781 E4781 Cmd Rej: Cannot delete a route if an empty RTX results.

Output

This example deletes a specific exception route:

```
dlt-rtx:dpca=1-3-1:ilsn=1set2:lsn=1set3
```

```
stdcfg2b 06-05-19 18:20:11 EST EAGLE 35.0.0  
DLT-RTX: MASP A - COMPLTD
```

This example deletes all exception routes for a specific exception criteria:

```
dlt-rtx:dpci=2-100-2:opc=8-**-*
```

```
tekelecstp 08-02-25 10:54:07 EST EAGLE 38.0.0  
Command entered at terminal #4.  
DLT-RTX: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-rtx](#)
- [ent-rtx](#)
- [rept-stat-rtx](#)
- [rtrv-rtx](#)

4.1.246 dlt-sccp-serv

Use this command to remove entries from the SCCP Service table. The command may either remove a PC from a group or remove the entire group.

Parameters

serv (mandatory)

The name of the service being deleted.

Range:

gflex

gport

a11 (optional)

Deletes all point codes from a service.

Range:

yes

pc1 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc1/pca1/pci1/pcn1/pcn241 (optional)

Post GTT-translated point code 1.

pc2 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca2

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc2/pca2/pci2/pcn2/pcn242 (optional)

Post GTT-translated point code 2.

pc3 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca3

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc3/pca3/pci3/pcn3/pcn243 (optional)

Post GTT-translated point code 3.

pc4 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc4/pca4/pci4/pcn4/pcn244 (optional)

Post GTT-translated point code 4.

pci1 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pci2 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:*s*-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s**zone*—0-7*area*—000-255*id*—0-7

The point code 0-000-0 is not a valid point code.

pci3 (optional)ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).**Range:***s*-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s**zone*—0-7*area*—000-255*id*—0-7

The point code 0-000-0 is not a valid point code.

pci4 (optional)ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).**Range:***s*-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s**zone*—0-7*area*—000-255*id*—0-7

The point code 0-000-0 is not a valid point code.

pcn1 (optional)ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s**nnnnn*—0-16383*gc*—*aa-zz**m1-m2-m3-m4*—0-14 for each member; values must sum to 14

pcn2 (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn241 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn242 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn243 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn244 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn3 (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn4 (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Example

To delete a specified PC from the G-Port service:

```
dlt-sccp-serv:serv=gport:pca2=3-3-3
```

To delete all PCs from the G-Port service and to specify a network PC to delete:

```
dlt-sccp-serv:serv=gport:all=yes:pca1=1-1-1
```

Dependencies

At least one PC must be specified.

4587 E4587 Cmd Rej: At least one point code must be specified

The MRN table must be accessible.

2999 E2999 Cmd Rej: Failed reading the MRN table

The SCCP Service table must be accessible.

4585 E4585 Cmd Rej: Failed reading SCCP service table

The specified PC must already exist in the SCCP Service table.

4591 E4591 Cmd Rej: PC must already exist in the SCCP-SERV set

The same point code cannot be specified more than once.

2979 E2979 Cmd Rej: Cannot enter the same PC more than once

The specified point code must already exist in the specified MRN set in the SCCP-SERV table.

4483 E4483 Cmd Rej: PC does not exist in specified MRNSET

At least one point code must be specified.

4587 E4587 Cmd Rej: At least one point code must be specified

The specified MRN set must already exist in the SCCP-SERV table portion of the MRN table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
dlt-sccp-serv: serv=gport:pca2=3-3-3
```

```
tekelecstp 05-12-20 08:54:59 EST EAGLE 35.0.0
DLT-SCCP-SRV: MASP A - COMPLTD
;
```

Related Topics

- [chg-sccp-serv](#)
- [rtrv-sccp-serv](#)

4.1.247 dlt-scr-aftpc

Use this command to remove a specific screening reference in the allowed affected point code category.

Parameters

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

ssn (mandatory)

Subsystem number.

Range:

*0 - 255, **

*—the full range of values from 0–255

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, **

*—the full range of values from 0–255

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

*0 - 7, **

*—the full range of values from 0–

7

mna (optional)

16-bit ITU national *main number area*. The *mna* in the point code represented by *un-sna-mna*.

Range:

*0--31, **

*—the full range of values from 0–31

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code *msa-ssa-sp*.

Range:

*0 - 255, **

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

*0 - 255, **

*—the full range of values from 0–255

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*

Range:

0 - 255, *

*—the full range of values from 0–255

npc (optional)

ITU national point code.

**Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A for information on converting the point code format.

Range:

0 - 16383, *

*—the full range of values from 0–16383

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

sna (optional)

16-bit ITU national *sub number area*. The *sna* in the point code represented by *un-sna-mna*.

Range:

0--15, *

*—the full range of values from 0–15

sp (optional)

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

un (optional)

16-bit ITU-national *unit number*. The *un* of the point code represented by *un-sna-mna*.

Range:

0--127, *

*—the full range of values from 0–127

zone (optional)

ITU international zone. The *zone* in the point code represented by *zone-area-id*.

Range:

0 - 7, *

*—the full range of values from 0–7

Example

```
dlt-scr-aftpc:sr=iecn:ni=240:nc=010:ncm=010:ssn=012
```

```
dlt-scr-aftpc:sr=aft1:zone=1:area=2:id=3:ssn=1:pcst=s
```

```
dlt-scr-aftpc:sr=aft2:un=1:sna=2:mna=3:ssn=1
```

Dependencies

A complete point code must be specified, and must be one, and only one of the five point code parameter combinations: *ni-nc-ncm*, *zone-area-id*, *msa-ssa-sp*, *un-sna-mna* or *npc*.

2556 E2556 Cmd Rej: A complete point code must be entered

The affected point code or point code range (given by *ni-nc-ncm/ssn*, *zone-area-id*, *msa-ssa-sp*, *un-sna-mna* or *npc*) to be removed from the table must already exist in the screening reference.

2559 E2559 Cmd Rej: PC/SSN does not exist in given SR

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If asterisk values are specified, the range cannot overlap or contain any of the point code ranges that already exist in the allowed affected point code screening category.

N/A N/A

If *zone=** is specified, *area=** and *id=** must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `area=*` is specified, `id=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `ssa=*` is specified, `sp=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `msa=*` is specified, `ssa=*` and `sp=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `sna=*` is specified, `mna=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `un=*` is specified, `sna=*` and `mna=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range 0-255, the `ni` and the `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

The character `c` is not a valid value for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `msa`, `ssa`, `sp`, `un`, `sna`, `mna`, and `npc` parameters.

2527 E2527 Cmd Rej: C value not allowed

The specified screening reference (`sr`) must already exist in the database.

N/A N/A

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`,

ssa, *sp*) or for 16-bit ITU national point codes (parameters *un*, *sna*, *mna*). The *pcst* parameter cannot be specified for ANSI, ITU-N24 or ITU-N16 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

No AFTPC screening reference (*sr*) can be deleted that is referenced by an entity in another screening set.

2498 E2498 Cmd Rej: Last entry in given SR is ref'ed by another screen

The *sr*, *ni*, *nc*, *ncm*, and *ssn* parameters, or the *zone*, *area*, *id*, and *npc* parameters cannot be deleted if they are the last entry in the screening reference and the screening reference is part of a screen set.

N/A N/A

If only one entry exists, the *sr* cannot be referenced by another screening table. If the *sr* is not referenced by another screening table, the entire screening table is deleted.

N/A N/A

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the `dlt-scr-aftpc:sr=ied:ni=240:nc=010:ncm="":ssn=*` command is entered, the only entry that will be removed from the database is the entry in screening reference *iec* that contains the values *ni=240*, *nc=010*, *ncm=**, and *ssn=**. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the `rtrv-scr-aftpc` output with asterisks as the same parameter values specified in the `dlt-scr-aftpc` command.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The *pcst* parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=012
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-AFTPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-AFTPC: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-aftpc](#)
- [ent-scr-aftpc](#)
- [rtrv-scr-aftpc](#)

4.1.248 dlt-scr-blkdpc

Use this command to remove a specific screening reference from the blocked DPC category. Deleting the last point code (*c*) also deletes the screening reference.

Parameters**sr (mandatory)**

Screening reference. This parameter specifies the point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, *, C*

*—the full range of values from 0–255

C—continue

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

*0 - 7, *, C*

*—the full range of values from 0–7

C—continue

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

*0--31, *, C*

*—the full range of values from 0–31

C—continue

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

*0 - 255, *, C*

*—the full range of values from 0–255

C—continue

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

npc (optional)

ITU national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A for information on converting the point code format.

Range:

0 - 16383, *, C

*—the full range of values from 0–16383

C—continue

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s**Default:***none***sna (optional)**

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:*0--15, *, C*

*—the full range of values from 0–15

C—continue

sp (optional)

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:*0 - 255, *, C*

*—the full range of values from 0–255

C—continue

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:*0 - 255, *, C*

*—the full range of values from 0–255

C—continue

un (optional)

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:*0--127, *, C*

*—the full range of values from 0–127

C—continue

zone (optional)

ITU international zone. The *zone* in the point code represented by *zone-area-id*.

Range:*0 - 7, *, C*

*—the full range of values from 0–255

C—continue

Example

```
dlt-scr-blkdpc:sr=iec:ni=240:nc=010:ncm=010
```

```
dlt-scr-blkdpc:sr=bdp1:npc=128:pcst=s
```

```
dlt-scr-blkdpc:sr=bdp1:un=125:sna=12:mna=17
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

A complete point code must be specified, using the `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or `npc` combination unless a value of `c` is specified.

2556 E2556 Cmd Rej: A complete point code must be entered

The blocked DPC or blocked DPC range specified by `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or the `npc` parameter must already exist in the specified screening reference.

3272 E3272 Cmd Rej: PC does not match existing entry in given SR

The point code to delete cannot have the value `c-c-c` if there is another point code in the blocked screening reference. The last screening reference to be deleted must have `ni`, `zone`, `msa`, `un`, or `npc` equal to `c`.

2496 E2496 Cmd Rej: NI, ZONE, MSA, UN or NPC cannot be C - more than one exists

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If `msa=*` is specified, `ssa=*` and `sp=*` must be specified.

N/A N/A

If `un=*` is specified, `sna=*` and `mna=*` must be specified.

N/A N/A

If the `msa=c` parameter is specified, then the `ssa` and `sp` parameters must have a value of `c` or must not be specified. If the `msa=c` parameter is specified, and the `ssa` and the `sp` parameters are not specified, then the `ssa` and `sp` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `un=c` parameter is specified, then the `sna` and `mna` parameters must have a value of `c` or must not be specified. If the `un=c` parameter is specified, and the `sna` and the `mna` parameters are not specified, then the `sna` and `mna` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `n` and the `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `ni=c` parameter is specified, then the `nc` and the `ncm` parameters must have a value of `c` or must not be specified. If the `ni=c` parameter is specified, and the `nc` and the `ncm` parameters are not specified, then the `nc` and `ncm` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

The last screening reference (`sr`) entry cannot be deleted if it is referenced by another screen.

2498 E2498 Cmd Rej: Last entry in given SR is ref'ed by another screen

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `zone=c` parameter is specified, then the `area` and `id` parameters must have a value of `c` or must not be specified. If the `zone=c` parameter is specified, and the `area` and the `id` parameters are not specified, then the `area` and `id` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

If the screening reference is not referenced by any other screen, and if all entries are removed, the entire screening reference can be removed using `ni-nc-ncm`, `zone-area-id`, `un-sna-mna`, or `msa-ssa-sp` equal to `c` or `npc=c`. If more than one entry exists, `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or `npc` cannot equal `c`.

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when

the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the `dlt-scr-blkdpc:sr=ied:ni=240:nc=010:nccm=":ssn=*` command is entered, the only entry that will be removed from the database is the entry in screening reference *iec* that contains the values *ni=240*, *nc=010*, *ncm=**, and *ssn=**. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the `rtrv-scr-blkdpc` output with asterisks as the same parameter values specified in the `dlt-scr-blkdpc` command.

The asterisk (*) value cannot be specified with the character *c*. For example, a point code *c-c-c* is not allowed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, *ni=025&&100* specifies all network indicators for ANSI point codes from 25 - 100.

The character *c* is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in each unique blocked DPC screening reference to allow the screening process to continue. This entry consists of a screening reference, point code, *nsfi*, and *nsr*. The point code is in the form of subfields *ni-nc-ncm*, *zone-area-id*, *un-sna-mna* or *msa-ssa-sp* equal to *c-c-c* or *npc=c*. When the character *c* is specified, the *nsfi* and *nsr* parameters must be specified.

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code *c*. The *nsfi* and *nsr* in this entry are examined to determine the next step in the screening process.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The *pcst* parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-blkdpc:sr=iec:ni=240:nc=010:ncm=010
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-BLKDPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-BLKDPC: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-blkdpc](#)
- [ent-scr-blkdpc](#)
- [rtrv-scr-blkdpc](#)

4.1.249 dlt-scr-blkopc

Use this command to remove a specific screening reference from the blocked OPC category.

Parameters

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, *, C*

*—the full range of values from 0–255

C—continue

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

*0 - 7, *, C*

*—the full range of values from 0–7

C—continue

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

*0--31, *, C*

*—the full range of values from 0–31

C -- Continue

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

*0 - 255, *, C*

*—the full range of values from 0–7

C—continue

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

npc (optional)

ITU national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) for information on converting the point code format.

Range:

0 - 16383, *, C

*—the full range of values from 0–16383

C—continue

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:*none**s***Default:***none*

sna (optional)

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

0--15, *, C

*—the full range of values from 0–15

C -- Continue

sp (optional)

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

un (optional)

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:

0--127, *, C

*—the full range of values from 0–127

C -- Continue

zone (optional)

ITU international zone. The *zone* in the point code represented by *zone-area-id*.

Range:

0 - 7, *, C

*—the full range of values from 0–255

C—continue

Example

```
dlt-scr-blkopc:sr=iec:ni=240:nc=010:ncm=010
```

```
dlt-scr-blkopc:sr=bop1:npc=128:pcst=s
```

```
dlt-scr-blkopc:sr=bop1:un=125:sna=12:mna=17
```

Dependencies

A complete point code must be specified, using the *ni-nc-ncm*, *zone-area-id*, *msa-ssa-sp*, *un-sna-mna*, or *npc* combination unless a value of *c* is specified.

2556 E2556 Cmd Rej: A complete point code must be entered

The blocked OPC specified by `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or the `npc` parameter must already exist in the screening reference or within an existing range of OPCs.

3272 E3272 Cmd Rej: PC does not match existing entry in given SR

The point code to delete cannot have the value `c-c-c` if there is another point code in the blocked screening reference. The last screening reference to be deleted must have `ni`, `zone`, `msa`, `un`, or `npc` equal to `c`.

2496 E2496 Cmd Rej: NI, ZONE, MSA, UN or NPC cannot be C - more than one exists

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If the `msa=c` parameter is specified, then the `ssa` and `sp` parameters must have a value of `c` or must not be specified. If the `msa=c` parameter is specified, and the `ssa` and the `sp` parameters are not specified, then the `ssa` and `sp` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `un=c` parameter is specified, then the `sna` and `mna` parameters must have a value of `c` or must not be specified. If the `un=c` parameter is specified, and the `sna` and the `sp` parameters are not specified, then the `sna` and `mna` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and the `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `ni=c` parameter is specified, then the `nc` and the `ncm` parameters must have a value of `c` or must not be specified. If the `ni=c` parameter is specified, and the `nc` and `ncm` parameters are not specified, then the `nc` and `ncm` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters *ni*, *nc*, *ncm*) or for 24-bit ITU national point codes (parameters *msa*, *ssa*, *sp*) or for 16-bit ITU national point codes (parameters *un*, *sna*, *mna*). The *pcst* parameter cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

The Spare Point Code Support feature must be enabled before the *pcst* and *npcst* parameters can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The last screening reference (*sr*) entry cannot be deleted if it is referenced by another screen.

2498 E2498 Cmd Rej: Last entry in given SR is ref'ed by another screen

If the *zone=c* parameter is specified, then the *area* and *id* parameters must have a value of *c* or must not be specified. If the *zone=c* parameter is specified, and the *area* and the *id* parameters are not specified, then the *area* and *id* parameters default to a value of *c*.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

If the screening reference is not referenced by any other screen, and if all entries are removed, the entire screening reference can be removed using *ni-nc-ncm*, *zone-area-id*, *un-sna-mna*, or *msa-ssa-sp* equal to *c-c-c* or *npc=c*. If more than one entry exists, *ni-nc-ncm*, *zone-area-id*, *un-sna-mna*, *msa-ssa-sp*, or *npc* must not equal *c*.

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the `dlt-scr-blkopc:sr=ied:ni=240:nc=010:ncm=":ssn=*` command is entered, the only entry that will be removed from the database is the entry in screening reference *iec* that contains the values *ni=240*, *nc=010*, *ncm=**, and *ssn=**. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the `rtrv-scr-blkopc` output with asterisks as the same parameter values specified in the `dlt-scr-blkopc` command.

The asterisk (*) value cannot be specified with the character *c*. For example, a point code *c-c-** is not allowed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, *ni=025&&100* specifies all network indicators for ANSI point codes from 25 - 100.

The character *c* is used in the blocked OPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the

blocked OPC screens. When screening for a blocked OPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in each unique blocked OPC screening reference to allow the screening process to continue. This entry consists of a screening reference, point code, `nsfi`, and `nsr`. The point code is `npc=c` or in the form of subfields `ni-nc-ncm`, `zone-area-id`, or `msa-ssa-sp`, `un-sna-mna` equal to `c-c-c`. When the character `c` is specified, the `nsfi` and `nsr` must be specified.

When the point code does not match any entries in the blocked OPC screens, the screening process is directed to the screening reference with the point code `c-c-c`. The `nsfi` and `nsr` in this entry are examined to determine the next step in the screening process.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-blkopc:sr=iec:ni=240:nc=010:ncm=010
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-BLKOPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-BLKOPC: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-blkopc](#)
- [ent-scr-blkopc](#)
- [rtrv-scr-blkopc](#)

4.1.250 dlt-scr-cdpa

Use this command to remove a specific screening reference from the allowed called party address category.

Parameters

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

`ayyy`

1 alphabetic character followed by up to 3 alphanumeric characters

ssn (mandatory)

Subsystem number.

Range:

`0 - 255, *`

*—the full range of values from 0–255

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

0 - 7, *, C

*—the full range of values from 0–7

C—continue

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

0--31, *

*—the full range of values from 0–31

msa (optional)

24-bit ITU national signaling point. The *msa* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ni (optional)

Network indicator value. This parameter specifies one or more ni values for the network cluster and network cluster member values identified in the nc and ncm parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

npc (optional)

ITU national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) for information on converting the point code format.

Range:

0 - 16383, *, C

*—the full range of values from 0–16383

C—continue

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

scmgfid (optional)

SCCP management format ID. This parameter consists of a one-octet field and uniquely defines the function and format of each SCMG message. A single value or a range of values can be specified.

Range:

1 - 255, *

*—the full range of values from 0–255

sna (optional)

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

0--15, *

*—the full range of values from 0–15

sp (optional)

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

un (optional)

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:

0--127, *

*—the full range of values from 0–127

zone (optional)

ITU international zone. The *zone* in the point code represented by *zone-area-id*.

Range:

0 - 7, *, C

*—the full range of values from 0–255

C—continue

Example

```
dlt-scr-cdpa:sr=iec:ni=240:nc=010:ncm=010:ssn=012
```

```
dlt-scr-  
cdpa:sr=cdpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:pcst=s
```

```
dlt-scr-cdpa:sr=cdp2:un=1:sna=2:mna=3:ssn=1
```

Dependencies

A complete point code must be specified, and must be one and only one of the five point code parameter combinations: *ni-nc-ncm*, *zone-area-id*, *msa-ssa-sp*, *un-sna-mna*, or *npc*, except for entering *c*.

2556 E2556 Cmd Rej: A complete point code must be entered

The CDPA point code, *ssn*, and *scmgfid* to be removed must exist in the CDPA entity set.

2517 E2517 Cmd Rej: PC/SSN/SCMGFID does not exist in given SR

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

The specified screening reference (`sr`) must already exist in the database.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point code (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N24 or ITU-N16 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

A CDPA screening reference (`sr`) cannot be deleted if it referenced by an entity in another screening set.

2498 E2498 Cmd Rej: Last entry in given SR is ref'ed by another screen

If the `ssn` parameter is a value other than 1, the `scmgfid` parameter cannot be specified.

2508 E2508 Cmd Rej: SCMGFID is invalid

If the `ssn=1` parameter is specified, the `scmgfid` parameter must be specified.

2508 E2508 Cmd Rej: SCMGFID is invalid

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

If only one entry exists and is not referenced by another screening table, the entire screening table is removed.

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the `dlt-scr-cdpa:sr=ied:ni=240:nc=010:nccm=":ssn=*` command is entered, the only entry that will be removed from the database is the entry in screening reference *iec* that contains the values `ni=240`, `nc=010`, `ncm=*`, and `ssn=*`. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the `rtrv-scr-cdpa` output with asterisks as the same parameter values specified in the `dlt-scr-cdpa` command.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100 .

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-cdpa:sr=iec:ni=240:nc=010:nccm=010:ssn=012
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-CDPA: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-CDPA: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-cdpa](#)
- [ent-scr-cdpa](#)
- [rtrv-scr-cdpa](#)

4.1.251 dlt-scr-cgpa

Use this command to remove a specific screening reference from the allowed calling party address category.

Parameters

ri (mandatory)

Routing indicator. Routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range:

dpc

Allow a called party address with a routing indicator value of "DPC/SSN."

gt

Screening stops and gateway screening is bypassed as a forced pass.

*

Allow both routing indicator values.

sccpmt (mandatory)

SCCP message type.

Range:

9

UDT

10

UDTS

17

XUDT

18

XUDTS

*

the full range of values

sr (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

ssn (mandatory)

Subsystem number.

Range:

*1 - 255, **

*—the full range of values from 1–255

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, **

*—the full range of values from 0–255

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

*0 - 7, **

*—the full range of values from 0–7

mna (optional)

16-bit ITU national *main number area*. The *mna* in the point code represented by *un-sna-mna*.

Range:

0--31, *

* -- the full range of values from 0--31

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

npc (optional)

ITU national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) for information on converting the point code format.

Range:

0 - 16383, *

*—the full range of values from 0–16383

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

sna (optional)

16-bit ITU national *sub number area*. The *sna* in the point code represented by *un-sna-mna*.

Range:

0--15, *

* -- the full range of values from 0--15

sp (optional)

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

un (optional)

16-bit ITU national *unit number*. The *un* of the point code represented by *un-sna-mna*.

Range:

0--127, *

* -- the full range of values from 0--127

zone (optional)

ITU international zone. The *zone* in the point code represented by *zone-area-id*.

Range:

0 - 7, *

*—the full range of values from 0–7

Example

```
dlt-scr-cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=012
dlt-scr-cgpa:sr=cdp1:ni=5:nc=5:ncm=5:ssn=1:ri=dpc:sccpmt=009
dlt-scr-
cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:pcst=s
dlt-scr-cgpa:sr=cgp1:un=1:sna=2:mna=1:ssn=1:sccpmt=9:ri=*
```

Dependencies

A complete point code must be specified, and must be one, and only one of the five point code parameter combinations: *ni-nc-ncm*, *zone-area-id*, *msa-ssa-sp*, *un-sna-mna*, or *npc*.

2556 E2556 Cmd Rej: A complete point code must be entered

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

The CGPA point code, *ri*, *ssn*, and *sccpmt* to be removed must exist in the CGPA entity set.

2515 E2515 Cmd Rej: PC/SSN/RI/SCCPMT does not exist in given SR

If the *nc* parameter is specified as a range, the *ncm* parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the *nc* parameter is specified as a single value or a range, a single value must be specified for the *ni* parameter.

2511 E2511 Cmd Rej: NC is invalid

If the *nc* parameter is specified as an asterisk, the *ncm* parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the *ncm* parameter is specified as a single value, or a range other than the full range of 0–255, the *ni* and the *nc* parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the *ni* parameter is specified as an asterisk or as a range, the *nc* and *ncm* parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

The specified screening reference (*sr*) must already exist in the database.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Spare Point Code Support feature must be enabled before the *pcst* parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters *ni*, *nc*, *ncm*) or for 24-bit ITU national point codes (parameters *msa*, *ssa*, *sp*) or for 16-bit ITU national point codes (parameters *un*, *sna*, *mna*). The *pcst* parameter cannot be specified for ANSI, ITU-N24 or ITU-N16 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

A CGPA screening reference (*sr*) cannot be deleted if it is referenced by an entity in another screening set.

2498 E2498 Cmd Rej: Last entry in given SR is ref'ed by another screen

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the `dlt-scr-cgpa:sr=ied:ni=240:nc=010:ncm=":ssn=*` command is entered, the only entry that will be removed from the database is the entry in screening reference *iec* that contains the values *ni=240*, *nc=010*, *ncm=**, and *ssn=**. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the `rtrv-scr-cgpa` output with asterisks as the same parameter values specified in the `dlt-scr-cgpa` command.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

The routing indicator in the calling party address provides routing instructions for the receiving signaling point. When the routing indicator specifies global title, the message is routed based on the global title digits. If the routing indicator specifies DPC, the message is routed based on the DPC/subsystem number in the calling party address.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The *pcst* parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=012
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
```

```
DLT-SCR-CGPA: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-CGPA: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-cgpa](#)
- [ent-scr-cgpa](#)
- [rtrv-scr-cgpa](#)

4.1.252 dlt-scr-destfld

Use this command to remove a specific screening reference from the allowed affected destination field (DESTFLD) category.

Parameters

sr (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, **

*—the full range of values from 0–255

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

*0 - 7, **

*—the full range of values from 0–7

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

*0--31, **

*—the full range of values from 0–31

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

*0 - 255, **

*—the full range of values from 0–255

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

npc (optional)

ITU national point code.

**Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) for information on converting the point code format.

Range:

0 - 16383, *

*—the full range of values from 0–255

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

sna (optional)

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

0--15, *

*—the full range of values from 0–15

sp (optional)

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

un (optional)

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:

0--127, *

*—the full range of values from 0–127

zone (optional)

ITU international zone. The *zone* in the point code represented by *zone-area-id*.

Range:

0 - 7, *

*—the full range of values from 0–7

Example

```
dlt-scr-destfld:sr=iec:ni=240:nc=010:ncm=010
```

```
dlt-scr-destfld:sr=dst1:zone=1:area=2:id=3:pcst=s
```

```
dlt-scr-destfld:sr=dst1:un=125:sna=12:mna=17
```

Dependencies

A complete point code must be specified, using the *ni-nc-ncm*, *zone-area-id*, *msa-ssa-sp*, *un-sna-mna*, or *npc* combination unless a value of *c* is specified.

2556 E2556 Cmd Rej: A complete point code must be entered

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If the `zone=*` parameter is specified, then the `area=*` and the `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `area=*` parameter is specified, then the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `ssa=*` parameter is specified, then the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, then the `ssa=*` and the `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and the `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

The DESTFLD specified by `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or the `npc` parameter must already exist in the screening reference.

3272 E3272 Cmd Rej: PC does not match existing entry in given SR

If only one entry exists, the `sr` cannot be referenced by another screening table. If the `sr` is not referenced by another screening table, the entire screening table is deleted.

2498 E2498 Cmd Rej: Last entry in given SR is ref'ed by another screen

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N16 and ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `nsfi=fail` parameter is specified, then the `nni`, `nc`, `nncm`, `narea`, `nzone`, `nid`, `nmsa`, `nssa`, `nsp`, `nun`, `nsna`, `nmna`, and `npc` parameters cannot have a value of `c`.

2527 E2527 Cmd Rej: C value not allowed

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the `dlt-scr-destfld:sr=ied:ni=240:nc=010:nccm=":ssn=*` command is entered, the only entry that will be removed from the database is the entry in screening reference `iec` that contains the values `ni=240`, `nc=010`, `ncm=*`, and `ssn=*`. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the `rtrv-scr-destfld` output with asterisks as the same parameter values specified in the `dlt-scr-destfld` command.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-destfld:sr=iec:ni=240:nc=010:ncm=010
```

```
rlghncxa03w 04-02-13 11:49:47 EST EAGLE 31.3.0
DLT-SCR-DESTFLD: SCREEN SET AFFECTED - SS01 25% FULL
DLT-SCR-DESTFLD: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-destfld](#)
- [ent-scr-destfld](#)
- [rtrv-scr-destfld](#)

4.1.253 dlt-scr-dpc

Use this command to remove a specific screening reference from the allowed DPC category.

Parameters**sr (mandatory)**

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, **

*—the full range of values from 0–255

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

*0 - 7, **

*—the full range of values from 0–7

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

*0--31, **

*—the full range of values from 0–31

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

*0 - 255, **

*—the full range of values from 0–255

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

npc (optional)

ITU national point code.

**Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) for information on converting the point code format.

Range:

0 - 16383, *

*—the full range of values from 0–16383

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (S-).

Range:*none**s***Default:***none***sna (optional)**

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

0--15, *

*—the full range of values from 0–15

sp (optional)24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.**Range:**

0 - 255, *

*—the full range of values from 0–255

ssa (optional)24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.**Range:**

0 - 255, *

*—the full range of values from 0–255

un (optional)16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.**Range:**

0--127, *

*—the full range of values from 0–127

zone (optional)ITU international zone. The *zone* in the point code represented by *zone-area-id*.**Range:**

0 - 7, *

*—the full range of values from 0–7

Example

```
dlt-scr-dpc:sr=iec:ni=240:nc=010:ncm=010
```

```
dlt-scr-dpc:sr=dpc1:npc=128:pcst=s
```

```
dlt-scr-dpc:sr=dpc2:un=1:sna=2:mna=1
```

Dependencies

A complete point code must be specified, using the *ni-nc-ncm*, *zone-area-id*, *msa-ssa-sp*, *un-sna-mna*, or *npc* combination unless a value of *c* is specified.

2556 E2556 Cmd Rej: A complete point code must be entered

The DPC specified by *ni-nc-ncm*, *zone-area-id*, *msa-ssa-sp*, *un-sna-mna*, or the *npc* parameter must already exist in the screening reference or within an existing range of DPCs.

3272 E3272 Cmd Rej: PC does not match existing entry in given SR

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If only one entry exists, the `sr` must not be referenced by another screening table. If the `sr` is not referenced by another screening table, the entire screening table is deleted.

2498 E2498 Cmd Rej: Last entry in given SR is ref'ed by another screen

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N24, or ITU-N16 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `nsfi=fail` parameter is specified, then the `nni`, `nc`, `nncm`, `narea`, `nzone`, `nid`, `nmsa`, `nssa`, `nsp`, `nun`, `nsna`, `nmna`, and `npc` parameters cannot have a value of `c`.

2527 E2527 Cmd Rej: C value not allowed

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the `dlt-scr-dpc:sr=ied:ni=240:nc=010:nccm=":ssn=*` command is entered, the only entry that will be removed from the database is the entry in screening reference *iec* that contains the values `ni=240`, `nc=010`, `ncm=*`, and `ssn=*`. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the `rtrv-scr-dpc` output with asterisks as the same parameter values specified in the `dlt-scr-dpc` command.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-dpc:sr=iec:ni=240:nc=010:ncm=010
```

```

rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-DPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-DPC: MASP A - COMPLTD
;

```

Related Topics

- [chg-scr-dpc](#)
- [ent-scr-dpc](#)
- [rtrv-scr-dpc](#)

4.1.254 dlt-scr-isup

Use this command to delete an allowed ISUP screening reference from the Allowed ISUP entity set.

Parameters

isupmt/tupmt (mandatory)

ISUP or TUP message type.

Range:

0 - 255, *

*—the full range of values from 0–255

sr (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Example

```
dlt-scr-isup:sr=iec:isupmt=9
dlt-scr-isup:sr=iec:isupmt=1&&2
dlt-scr-isup:tupmt=1:sr=tu01
```

Dependencies

The specified `sr` must exist in the Allowed ISUP entity set.

N/A N/A

The specified `isupmt` or `tupmt` parameter value must already exist in the specified `sr`.

2520 E2520 Cmd Rej: ISUPMT/TUPMT does not exist in given SR

The last entry in the specified `sr` cannot be deleted if the entry is referenced by another screen.

N/A N/A

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

The ISUPMT (ISUP Message Type) parameter must be specified for a SEAS command.

3506 E3506 Cmd Rej: ISUP Message Type must be valid

Notes

An asterisk can be specified for a parameter value in the `chg/dlt-scr-isup` commands *only* if that parameter value was specified as an asterisk in the `ent-scr-isup` command to define the parameter value.

A range of values can be specified for the `isupmt` or `tupmt` parameter, by separating the values that define the range by two ampersands (`&&`); for example, `isupmt=025&&100` specifies all ISUP message types from 25 - 100. The value to the left of the `&&` must be less than the value to the right of the `&&` in the range.

Output

No screen sets are listed in the following example, because the specified screening reference is not associated with any screen sets.

```
dlt-scr-isup:sr=iec:isupmt=9

tekelecstp 02-09-02 11:59:41 EST EAGLE 30.0.0
DLT-SCR-ISUP: MASP A - COMPLTD
;
```

No screen sets are listed in the following example, because the specified screening reference is not associated with any screen sets. `dlt-scr-isup:sr=iec:isupmt=1&&2`

```
tekelecstp 02-09-02 12:00:30 EST EAGLE 30.0.0
DLT-SCR-ISUP: MASP A - COMPLTD
;
```

The following example lists the screen sets that are associated with the specified screening reference. `dlt-scr-isup:tupmt=1:sr=tu01`

```
tekelecstp 03-11-02 12:00:30 EST EAGLE 31.3.0
Extended Processing Time Required -- Please Wait
Notice: The number of screensets affected is 2.
DLT-SCR-ISUP: SCREEN SET AFFECTED - ist1 1% FULL
DLT-SCR-ISUP: SCREEN SET AFFECTED - ist2 1% FULL
DLT-SCR-ISUP: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-isup](#)
- [ent-scr-isup](#)
- [rtrv-scr-isup](#)

4.1.255 dlt-scr-opc

Use this command to remove a specific screening reference from the allowed OPC category.

Parameters

sr (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, **

*—the full range of values from 0–255

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

0 - 7, *

*—the full range of values from 0–7

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

0--31, *

*—the full range of values from 0–31

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

npc (optional)

ITU national point code.

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) for information on converting the point code format.

Range:

0 - 16383, *

*—the full range of values from 0-16383

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s).

Range:

none

s

Default:

none

sna (optional)

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

0--15, *

*—the full range of values from 0–15

sp (optional)

24-bit ITU national signaling point. The *spin* the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

un (optional)

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:

0--127, *

*—the full range of values from 0–127

zone (optional)

ITU international zone. The *zone* in the point code represented by *zone-area-id*.

Range:

0 - 7, *

*—the full range of values from 0–7

Example

```
dlt-scr-opc:sr=iec:ni=240:nc=010:ncm=010
```

```
dlt-scr-opc:sr=opc1:npc=128:pcst=s
```

```
dlt-scr-opc:sr=opc2:un=1:sna=2:mna=1
```

Dependencies

A complete point code must be specified, using the `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or `npc` combination unless a value of `c` for “continue” is specified.

2556 E2556 Cmd Rej: A complete point code must be entered

The OPC specified by `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or the `npc` parameter must already exist in the screening reference or within an existing range of OPCs.

3272 E3272 Cmd Rej: PC does not match existing entry in given SR

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If only one entry exists, the `sr` must not be referenced by another screening table. If the `sr` is not referenced by another screening table, the entire screening table is deleted.

2498 E2498 Cmd Rej: Last entry in given SR is ref'ed by another screen

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N24, or ITU-N16 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `nsfi=fail` parameter is specified, then the `nni`, `nc`, `nncm`, `narea`, `nzone`, `nid`, `nmsa`, `nssa`, `nsp`, `un`, `sna`, `mna`, and `npc` parameters cannot have a value of `c`.

2527 E2527 Cmd Rej: C value not allowed

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the `dlt-scr-dpc:sr=ied:ni=240:nc=010:nccm=":ssn=*` command is entered, the only entry that will be removed from the database is the entry in screening reference `iec` that contains the values `ni=240`, `nc=010`, `ncm=*`, and `ssn=*`. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the `rtrv-scr-dpc` output with asterisks as the same parameter values specified in the `dlt-scr-dpc` command.

A range of values is specified by separating the values that define the range by two ampersands (`&&`); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

The spare point code subtype prefix (`s-`) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-opc:sr=iec:ni=240:nc=010:ncm=010
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-OPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-OPC: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-opc](#)
- [ent-scr-opc](#)
- [rtrv-scr-opc](#)

4.1.256 dlt-scr-sio

Use this command to remove a specific screening reference from the allowed service indicator octet (SIO) category.

Parameters

nic (mandatory)

Network indicator code. This parameter specifies whether the message originated from an international (0) or national (2) network.

Range:

0 - 3, *

*—the full range of values from 0–255

pri (mandatory)

New message priority. The new message priority in the SIO.

Range: 0 - 3, *

*—the full range of values from 0–255

Default:

Current value

si (mandatory)

Service indicator. The service indicator identifies the type of message. The values are defined in Telcordia TR-NWT-000246.

Range:

00

01-15

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

h0 (optional)

This parameter is mandatory if the *si* parameter has a value of *00*, *01*, *02*, or *03*. Otherwise, the *h0* parameter is undefined.

Range:

0 - 15

Default:

Current value or undefined

h1 (optional)

This parameter is mandatory if the *si* parameter has a value of *00*, *01*, *02*, or *03*. Otherwise, the *h1* parameter is undefined.

Range:

0 - 15

Default:

Current value or undefined

Example

```
dlt-scr-sio:sr=iec:nic=1:si=1:h0=4:h1=2:pri=*
```

```
dlt-scr-sio:sr=iec:nic=1:si=3:pri=2
```

Dependencies

The `h0` and `h1` parameters cannot be specified if the `si` parameter is specified and is not equal to `00`, `01`, or `02`.

N/A N/A

The parameter to be removed must be in the screening reference.

2569 E2569 Cmd Rej: SIO does not exist in given SR

Valid combinations for the `h0/h1` parameters:

- `h0` is a single value— `h1` can be a single value, range, or an asterisk
- `h0` is a range— `h1` can be an asterisk
- `h0` is an asterisk— `h1` can be an asterisk

3269 E3269 Cmd Rej: Invalid H0/H1 or NH0/NH1 specified

The `sr`, `nic`, `si`, `pri`, and `h0/h1` parameters cannot be removed if they are the last entry in the screening reference and the screening reference is part of a screen set.

2498 E2498 Cmd Rej: Last entry in given SR is ref'd by another screen

If the `si` parameter has value of `00`, `01`, or `02`, the `h0` and `h1` parameters must be specified. Otherwise, the `h0` parameter cannot be specified.

2488 E2488 Cmd Rej: H0 and H1 must be specified for given SI

If the value of the `si` parameter value is greater than 2, then the `h0` and `h1` parameters cannot be specified.

2490 E2490 Cmd Rej: H0 and H1 cannot be specified for SI greater than 2

If asterisks or ranges are specified for the heading codes, nothing that matches the +combination of `nic`, `si`, and the specified heading codes can already exist in the allowed SIO entity set for the screening reference.

2393 E2393 Cmd Rej: Terminal is not equipped

The specified screening reference (`sr`) must already exist in the database.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

For SEAS commands, the `pri` parameter specified must be in the range 0-3, *.

2562 E2562 Cmd Rej: A specific PRI must be specific in the range (0-3, *)

For SEAS commands, the `h0` parameter specified must be in the range 0-15, *.

2563 E2563 Cmd Rej: A specific H0 must be specified in the range (0-15, *)

For SEAS commands, the `h1` parameter specified must be in the range 0-15, *.

2566 E2566 Cmd Rej: A specific H1 must be specified in the range (0-15, *)

Notes

The network identifier specifies whether the message originated from an international (0) or a national (2) network.

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the `dlt-scr-sio:sr=iec:ni=240:nc=010:nccm=":ssn=*` command is entered, the only entry that will be removed from the database is the entry in screening reference `iec` that contains the values `ni=240`, `nc=010`, `nccm=*`, and `ssn=*`. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the `rtrv-scr-sio` output with asterisks as the same parameter values specified in the `dlt-scr-sio` command.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

Output

```
dlt-scr-sio:sr=iec:nic=1:si=3:pri=2
```

```
rlghncxa03w 04-02-14 16:45:50 EST EAGLE 31.3.0
DLT-SCR-SIO: SCREEN SET AFFECTED - SS01 25% FULL
DLT-SCR-SIO: SCREEN SET AFFECTED - SS04 35% FULL
DLT-SCR-SIO: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-sio](#)
- [ent-scr-sio](#)
- [rtrv-scr-sio](#)

4.1.257 dlt-scr-tt

Use this command to remove a specific screening reference from the allowed translation type category.

Parameters

sr (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

type (mandatory)

Translation type. The GTT type value in the CdPA.

Range:

0 - 255, *

*—the full range of values from 0–255

Example

```
dlt-scr-tt:sr=iec:type=012
```

Dependencies

The screening reference must exist.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The `sr` and `type` parameters cannot be removed if they are the last entry in the screening reference and the screening reference is part of a screen set.

2498 E2498 Cmd Rej: Last entry in given SR is ref'd by another screen

The allowed `type` to be removed must already exist in the screening reference.

N/A N/A

The single value or range specified for the allowed `type` to be deleted from the TT screen for the allowed TT screening reference must already exist in that TT screen.

2574 E2574 Cmd Rej: TYPE does not exist in given SR

The value specified for the `type` parameter must be within the allowed range.

2524 E2524 Cmd Rej: A specific TT must be specified in the range (1-255,*)

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the `dlt-scr-tt:sr=ied:type=":ssn=*` command is entered, the only entry that will be removed from the database is the entry in screening reference `iec` that contains an asterisk as the value for the `type` parameter. For an entry to be specified in this command with an asterisk as the value for the `type` parameter, that entry must be shown in the `rtrv-scr-tt` output with an asterisk as the value for the `type` parameter.

Output

```
dlt-scr-tt:sr=iec:type=012
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0  
DLT-SCR-TT: SCREEN SET AFFECTED - IEC 25% FULL  
DLT-SCR-TT: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-scr-tt](#)
- [ent-scr-tt](#)
- [rtrv-scr-tt](#)

4.1.258 dlt-scrset

Use this command to remove a screen set definition from the database. A screen set is a group of screening references that belong to various categories. This command does not remove any gateway screening tables.

Parameters

scrn (mandatory)

Screen set name. Each screening reference must have a unique name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Example

```
dlt-scrset:scrn=nc27
```

Dependencies

The screen set name must exist.

2361 E2361 Cmd Rej: Screen set name not defined

Before the screen set can be removed, it must be removed from all linksets.

2568 E2568 Cmd Rej: Screen set name is referenced by a link set

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

The system validates the command to ensure that the specified screen set name is in use.

Output

```
dlt-scrset:scrn=nc27
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0  
DLT-SCRSET: MASP A - COMPLTD  
;
```

Related Topics

- [chg-scrset](#)
- [ent-scrset](#)
- [rtrv-scrset](#)

4.1.259 dlt-shlf

Use this command to remove a shelf from the system database.

Parameters

loc (mandatory)

Location of the shelf to be deleted.

Range:

1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100, 6200, 6300

Example

```
dlt-shlf:loc=2300
```

```
dlt-shlf:loc=6200
```

Dependencies

The frame and shelf values of the shelf location parameter (`loc`) must be within the valid range (`xyzz`, where `x`=frame and `y`=shelf; `zz` is always 00 for this command).

2152 E2152 Cmd Rej: Shelf ID out of range

The equipment shelf must have been configured previously.

2202 E2202 Cmd Rej: Shelf location already equipped

The specified shelf cannot have any configured cards.

2203 E2203 Cmd Rej: All cards on shelf must be unequipped

The Shelf table is corrupt or cannot be found by the system.

2104 E2104 Cmd Rej: Failed reading the shelf table

The IMT table is corrupt or cannot be found by the system.

2102 E2102 Cmd Rej: Failed reading the IMT table

A string of 1 to 64 characters. Valid values are (0-9, A-Z), +, *, #, .(period), @ or DFLT (default).

px (optional)

Prefix

Range:

ZZZZZZZZZZZZZZZZ

A string of 1 to 15 characters. Valid values are hex digits (0-9, A-F), +, *, -, #.

Example

```
dlt-sip-npp:phctxt=abc.com:px=111111
```

```
dlt-sip-npp:phctxt=xyz.com
```

```
dlt-sip-npp:phctxt=a+bc.com
```

Dependencies

SIPNP Feature must be enabled before entering any number normalization rules.

2590 E2590 Cmd Rej: SIPNP Feature must be enabled

SIP Phone Context table (SIPPHCXT) should be accessible.

2594 E2594 Cmd Rej: Failed reading SIP Phone Context table

SIP Prefix table (SIPNPPFX) should be accessible.

2637 E2637 Cmd Rej: Failed reading SIP Prefix table

SIP DBMM 2 table should be accessible.

2649 E2649 Cmd Rej: Failed reading DBMM 2 table

Phone Context cannot be deleted if it still has some Prefix assigned to it.

2654 E2654 Cmd Rej: Assigned PFXs must be deleted before PHCXT can be deleted

Requested SIP Prefix entry must exist in the SIPNPPFX table.

2655 E2655 Cmd Rej: SIP Prefix entry does not exist

Requested SIP Phone Context entry must exist in the SIPPHCXT table.

2656 E2656 Cmd Rej: SIP Phone Context entry does not exist

Default Phone Context cannot be deleted from the SIPPHCXT table.

2673 E2673 Cmd Rej: Default Phone Context cannot be deleted

Notes

None.

Output

This example displays the output when all the parameters are specified:

```
dlt-sip-npp:phctxt=x+yz.com:px=12
```

```
tekelecstp 12-07-09 19:08:39 EST EAGLE 45.0.0
dlt-sip-npp:phctxt=x+yz.com:px=12
Command entered at terminal #4.
PHCTXTID table is (3 of 101) 3% full.
DLT-SIP-NPP: MASP A - COMPLTD
```

```
;
```

Related Topics

- [ent-sip-npp](#)
- [rtrv-sip-npp](#)
- [chg-sip-npp](#)

4.1.261 dlt-slk

Use this command to remove a signaling link from the system database.

Parameters

link (mandatory)

Signaling link on the card specified in the `loc` parameter. The links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all link parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have a location specified in the `loc` parameter.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

force (optional)

This parameter must be used to remove the last link in a linkset without having to remove all of the routes that referenced the linkset.

Range:**yes****no****Default:***no***Example**

```
dlt-slk:loc=1211:link=a
```

```
dlt-slk:loc=1201:link=b:force=yes
```

Dependencies

Card locations 1113 - 1118 cannot be specified.

2154 E2154 Cmd Rej: Card slot reserved by system

The frame and shelf portions of the specified card location (*loc*) can be 11 - 13, 21 - 23, 31 - 33, 41 - 43, 51 - 53, and 61 . (The card location is *xyss*, where *x* is the frame, *y* is the shelf, and *ss* is the slot.)

2152 E2152 Cmd Rej: Shelf ID out of range

Links A16 - A31 and B16 - B31 cannot be specified for even-numbered card locations. HC MIM cards are dual-slot cards. The links are assigned only to the cards in odd-numbered locations.

Links A32-A63 and B32-B63 is only applicable for SLIC cards running the IPSPG application.

3494 E3494 Cmd Rej: Link is invalid for card location

The specified link must exist in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

The signaling link must be in the unavailable (UAV) state before it can be removed. Enter the `rept-stat-slk` command to verify the state of the signaling link.

3726 E3726 Cmd Rej: Active device state does not permit database change

The signaling link cannot have an active LFS test in progress when this command is entered to delete the link.

2106 E2106 Cmd Rej: Link is in test mode

The `force=yes` parameter must be specified to remove the last signaling link in a linkset that is assigned to a route.

2128 E2128 Cmd Rej: Linkset assigned to route must have at least one link

To remove the last signaling link on a card, the state of the card must be OOS-MT-DSBLD.

3726 E3726 Cmd Rej: Active device state does not permit database change

The card must be inhibited before the last link on the card can be deleted.

3726 E3726 Cmd Rej: Active device state does not permit database change

An IPLIMx or IPGWx signaling link assigned to a local host cannot be deleted if it has a socket or association with connection status `open=yes`.

3448 E3448 Cmd Rej: LHOST has open socket or association

The Route table must be accessible.

2648 E2648 Cmd Rej: Failed reading the route table

The Link table must be accessible.

2103 E2103 Cmd Rej: Failed reading the link table

The Linkset table must be accessible.

2122 E2122 Cmd Rej: Failed reading linkset table

The slot portion of the specified card location (`loc`) can be 1 - 8 and 11 - 18 . Slots 09 and 10 cannot be specified. (The card location is `xyss`, where `x` is the frame, `y` is the shelf, and `ss` is the slot.)

2153 E2153 Cmd Rej: Card slot location out of range

If deleting the link causes the provisioned link count to fall below the `numslk` thresholds configured for the corresponding IPSPG-M3UA linkset (see the `chg-lsopts` command), then the command cannot be entered.

If values of 0 or 1 are specified for all of the `numslk` threshold parameters, then the last link can be deleted.

4943 E4943 Cmd Rej: Number of links in the linkset falls below NUMSLK value

SLK can only be deleted if no LG Engine is associated with it.

5238 E5238 Cmd Rej: LG Engine is associated with PORT(SLK)

If the `lsrestrict=on` parameter is specified (see the `chg-ss7opts` command), and if deleting the link would send the number of links assigned to the linkset below the value specified for the `tfatcabmlq` parameter (see the `chg-ls` command), then the link cannot be deleted.

2860 E2860 Cmd Rej: TFATCABMLQ value exceeds number of links in link set

The GTT destination must exist in the DSTN table.

4753 E4753 Cmd Rej: DSTN table entry was not found

Notes

This command disassociates the equipment of a link from a logical signaling link. The link must first be placed in the unavailable (UAV) state by entering the `chg-slk` (or `canc-slk`) command before this command can be used to disconnect it. Entering this command results in the link entity being deleted from the STP's link entity set. The link is then considered to be "disconnected." The link on the STP becomes unassigned (spare) but retains the existing equipment type and options; the link remains in the "equipped" provisioning state unless that state is changed by subsequent local craft activity. The link is also no longer associated with its assigned linkset.

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

Installation Guide provides an illustration of card locations.

Signaling links and scheduled UI measurement reports

If the Integrated Measurements feature is turned on, the measurements subsystem is provisioned (see the `chg-measopts` command), and the latest deletion causes the provisioned link count to fall to 700, then the measurements subsystem automatically enables the scheduled UI measurements report.

MTT 2976 and MTT 3494 are deleted as part of EPM-B.

Output

```
dlt-slk:loc=1211:link=a

rlghncxa03w 05-02-07 11:11:28 EST  EAGLE5 33.0.0
DLT-SLK: MASP A - COMPLTD
;
```

Related Topics

- [act-slk](#)
- [blk-slk](#)
- [chg-lsopts](#)
- [dact-slk](#)
- [ent-slk](#)
- [inh-slk](#)
- [rept-stat-slk](#)
- [rtrv-slk](#)
- [tst-slk](#)
- [ublk-slk](#)
- [unhb-slk](#)

4.1.262 dlt-snmp-host

Use this command to delete an existing entry in the SNMP Host table.

Parameters

host (optional)

Host name. This parameter is used as the search key to locate a specific table entry. Either HOST or IPADDR must be specified, but both cannot be used in the same command.

Range:

XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX

A string of characters, beginning with a letter and comprising up to 32 characters in length. Valid values are a..z, A..Z, 0..9, or .

ipaddr (optional)

IP Address. This parameter is used as the search key to locate a specific table entry. Either HOST or IPADDR must be specified, but both cannot be used in the same command.

Range:

4 numbers separated by dots, with each number in the range of 0-255.

Example

```
dlt-snmp-host:host=snmpmgr
dlt-snmp-host:ipaddr=10.25.60.99
```

Dependencies

The specified HOST or IPADDR must exist in the SNMP Host table.

2170 E2170 Cmd Rej: SNMP host table entry not found for specified HOST/IPADDR

The SNMP feature must be enabled before an SNMP Host can be configured.

2268 E2268 Cmd Rej: SNMP feature must be enabled

To locate a table entry, either the HOST or IPADDR parameters must be specified, but both cannot be used in the same command.

2315 E2315 Cmd Rej: Either HOST or IPADDR must be specified, but not both

Notes

None.

Output

```
dlt-snmp-host:ipaddr=10.25.55.25

tekelecstp 12-06-13 11:08:11 EST 45.0.0-64.66.0
dlt-snmp-host:ipaddr=10.25.55.25
Command entered at terminal #4.
SNMP HOST table is (1 of 2) 50% full
DLT-SNMP-HOST: MASP A - COMPLTD
;
```

Related Topics

- [ent-snmp-host](#)
- [chg-snmp-host](#)
- [rtrv-snmp-host](#)

4.1.263 dlt-spc

Use this command to delete an SPC (secondary point code) from the database. Also use this command to change an SPC by first removing the SPC from the database and then using the `ent-spc` command to enter the new SPC value.

Parameters

**Note:**

See [Point Code Formats and Conversion](#) in Appendix A for a detailed description of point code formats, rules for specification, and examples.

spc (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

spca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

spc/spca/spci/spcn/spcn24/spcn16 (mandatory)

Secondary point code.

spci (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

spcn (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

spcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

spcn16 (mandatory)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

Example

```
dlt-spc:spc=10-20-30
```

```
dlt-spc:spcn24=98-98-98
```

```
dlt-spc:spcn=s-12345
```

```
dlt-spc:spcn16=121-10-30
```

Dependencies

A secondary point code that is referenced in the Destination table cannot be deleted.

3819 E3819 Cmd Rej: SPC may not be referenced in the STP's route table

SPC table must be accessible.

3807 E3807 Cmd Rej: Failed reading Secondary Point Code (SPC) table

Route Destination table must be accessible.

2648 E2648 Cmd Rej: Failed reading the route table

If the value specified for the `spc` parameter is referenced in the Linkset table, then the parameter cannot be deleted.

4633 E4633 Cmd Rej: SPC may not be referenced in the STP's linkset table

Linkset table must be accessible.

2122 E2122 Cmd Rej: Failed reading linkset table

The MPC feature must be turned on before this command can be entered.

3867 E3867 Cmd Rej: MPC feature must be enabled

The value specified for the `spc` parameter must exist in the Secondary Point Code table.

3814 E3814 Cmd Rej: SPC does not exist

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
dlt-spc:spc=10-20-30
```

```
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
Secondary Point Code table is (7 of 40) 17% full
DLT-SPC: MASP A - COMPLTD
```

```
;
```

```
dlt-spc:spcn16=126-10-30
```

```
rlghncxa03w 14-06-22 08:50:12 EST EAGLE 46.0.0
Secondary Point Code table is (7 of 40) 17% full
DLT-SPC: MASP A - COMPLTD
```

```
;
```

Related Topics

- [ent-spc](#)
- [rtrv-spc](#)

4.1.264 dlt-srvsel

Use this command to delete a service selector.

Parameters

gti/gtia/gtii/gtin/gtin24 (mandatory)

Global title indicator. For all service selector commands, the domain is defined as GTI and GTIA (ANSI), GTII (ITU international), and GTIN (ITU national). For the service selector commands, GTI and GTIA are equivalent.

Range:

2, 4

Supported value for ANSI: `gti=2`, `gtia=2`

Supported values for ITU: `gtii=0`, `gtii=2`, `gtii=4`, `gtin=0`, `gtin=2`, `gtin=4`, `gtin24=2`, `gtin24=0`, `gtin24=4`

ssn (mandatory)

Subsystem number.

Range:

0 - 255

tt (mandatory)

Translation type.

Range:

0 - 255

nai (optional)

Nature of Address indicator.

Range:

sub

rsvd

natl

intl

naiv (optional)

Nature of Address indicator value.

Range:

0 - 127

np (optional)

Numbering Plan.

Range:

e164

generic

x121

f69

e210

e212

e214

private

npv (optional)

Numbering Plan value.

Range:

0 - 15

Example

```
dlt-srvsel:gti=2:ssn=250:tt=10
dlt-srvsel:gtin=4:tt=0:ssn=100:np=e164:nai=sub
dlt-srvsel:gtin24=4:tt=4:ssn=20:np=e164:nai=intl
dlt-srvsel:gtii=4:tt=4:np=e164:nai=intl:ssn=9
dlt-srvsel:gtii=4:tt=5:np=e164:nai=intl:ssn=*
dlt-srvsel:gtii=0:tt=0:ssn=*
```

Dependencies

The `np` and `npv` parameters cannot be specified together in the command.

3551 E3551 Cmd Rej: NP and NPV must not be specified together

The `nai` and `naiv` parameters cannot be specified together in the command.

3552 E3552 Cmd Rej: NAI and NAIV must not be specified together

The value 0, 4 is not valid for the `gti` and `gtia` parameters.

3553 E3553 Cmd Rej: GTI(A)=4, and GTI(x)=1 and 3 are not supported

The values 1 and 3 are not valid for the `gti/gtia/gtii/gtin/gtin24` parameters.

3553 E3553 Cmd Rej: GTI(A)=4, and GTI(x)=1 and 3 are not supported

If the `gtii/gtin/gtin24=4` parameter is specified, then an `np(v)` and `nai(v)` parameter combination must be specified. These parameters can be specified in the following combinations: `np/naiv`, `npv/nai`, `np/nai`, or `npv/naiv`.

3555 E3555 Cmd Rej: NP(V) and NAI(V) must be specified for given GTI value

If the `gti/gtia/gtii/gtin/gtin24=0` or `2` parameter is specified, no `np(v)` and `nai(v)` parameter combinations can be specified.

3554 E3554 Cmd Rej: NP(V) and NAI(V) must not be specified for given GTI value

An entry must already exist that matches the `gti/gtia/gtii/gtin/gtin24`, `tt`, `ssn`, and `np(v)` and `nai(v)` combination of parameters.

4900 E4900 Cmd Rej: Entry does not exist with specified GTIN24-TT-NP(V)-NAI(V)

The requested service selector entry must exist in the database.

3504 E3504 Cmd Rej: GSM Selector does not exist

The GSM DBMM table must be accessible.

3546 E3546 Cmd Rej: Failed reading GSM DBMM Table

Notes

None

Output

```
dlt-srvsel:gti=2:ssn=250:tt=10
```

```
rlghncxa03w 07-10-05 16:40:40 EST EAGLE 37.5.0  
Service Selector table is (114 of 1024) 11% full  
DLT-SRVSEL: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-srvsel](#)
- [ent-srvsel](#)
- [rtv-srvsel](#)

4.1.265 dlt-ss-appl

Use this command to remove the application from the database.

Parameters

app1 (mandatory)

Application type.

Range:

lnp

inp

eir

vflex

atinpq

aiq

sfapp

Example

```
dlt-ss-appl:appl=inp
```

Dependencies

The LNP feature must be turned on before the `appl=lnp` parameter can be specified.

3009 E3009 Cmd Rej: LNP feature must be ON

The INP feature must be turned on before the `dlt-ss-appl:appl=inp` command can be entered.

3524 E3524 Cmd Rej: INP/AINPQ feature must be ON

The Equipment Identity Register (EIR) feature must be turned on before the `dlt-ss-appl:appl=eir` command can be entered.

3699 E3699 Cmd Rej: EIR feature must be ON

The value specified for the `appl` parameter must already exist in the SS-APPL table.

3529 E3529 Cmd Rej: Application type not in SS-APPL table

The LNP database and the SS-APPL table are corrupt or cannot be found.

3638 E3638 Cmd Rej: Failed Reading SS Appl table

The subsystem must be inhibited before `status=offline` can be specified. This condition is not true in the case of SFAPP, as the status is not changed to offline for SFAPP, but the entry is deleted.

3155 E3155 Cmd Rej: Subsystem must be inhibited before it can be deleted

Application type must exist in the LNP database (non DBS 1.0 only)

3152 E3152 Cmd Rej: Application type not in LNP database

Unable to access database. Severe database failure.

2601 E2601 Cmd Rej: Command aborted due to system error

Failed reading SSAPPL table. (non-DBS 1.0 systems only)

3124 E3124 Cmd Rej: Failed Reading LNP SS Appl table

The V-Flex feature must be turned on before the `appl=vflex` parameter can be specified.

4142 E4142 Cmd Rej: VFLEX feature must be ON

The ATINP feature must be enabled before the `appl=atinpq` parameter can be entered.

4816 E4816 Cmd Rej: ATINP feature must be enabled

The ANSI41 AIQ feature must be enabled before the `appl=aiq` parameter can be specified.

5158 E5158 Cmd Rej: ANSI41 AIQ feature must be enabled

Notes

When a subsystem application is deleted, the following message is displayed:

CAUTION: DELETED APPL SSN MAY BE REFERENCED BY GTT ENTRY

Output

```
dlt-ss-appl:appl=aiq
```

```
tekelecstp 09-12-03 17:34:20 EST EAGLE 42.0.0
DLT-SS-APPL: MASP A - CAUTION: DELETED APPL SSN MAY BE REFERENCED BY GTT
ENTRY
DLT-SS-APPL: MASP A - COMPLTD
;
```

Related Topics

- [chg-ss-appl](#)
- [ent-ss-appl](#)
- [rtrv-ss-appl](#)

4.1.266 dlt-subnetid

Use this command to delete a Subnet ID entry from the Subnet ID list, for the ISUP NP with EPAP feature.

Parameters**subnetid (mandatory)**

Subnet ID

Range:

1 - 15 digits

Example

```
dlt-subnetid:subnetid=886933
```

Dependencies

The `subnetid=none` parameter cannot be specified.

N/A N/A

The SUBNETID table is corrupt or cannot be found by the system.

4352 E4352 Cmd Rej: SUBNETID table is full

The specified Vendor ID entry must already exist in the SUBNETID table.

4355 E4355 Cmd Rej: SUBNETID does not exist in SUBNETID table

Notes

None.

Output

```
dlt-subnetid:subnetid=886933
```

```
rlghncxa03w 04-10-07 11:11:28 EST EAGLE 31.11.0  
SUBNETID table is (6 of 50) 3% full  
DLT-SUBNETID: MASP A - COMPLTD
```

;

Related Topics

- [ent-subnetid](#)
- [rtrv-subnetid](#)

4.1.267 dlt-t1

Use this command to delete an interface for E5-E1T1-B cards used as T1 or ST-HSL-A cards.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

t1port (mandatory)

T1 card port number. The value must be a T1 port for which an interface has already been configured on the specified T1 card.

Range:

1 - 8

Example

```
dlt-t1:loc=1205:t1port=2
```

Dependencies

The specified card location (`loc` parameter) must be equipped.

2739 E2739 Cmd Rej: T1 card location is unequipped

The card in the specified card location (`loc` parameter) must be a LIMT1 card type.

2212 E2212 Cmd Rej: Invalid card type for this command

The port specified by the `t1port` parameter must be already equipped with a T1 interface.

2737 E2737 Cmd Rej: The T1PORT at the specified location is not equipped

The E1/T1 table must be accessible.

4059 E4059 Cmd Rej: Failed reading the E1/T1 table

The Card (IMT) table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

All signaling links providing timeslots serviced by the specified T1 interface must be deleted before the T1 interface can be deleted. Use the `dlt-slk` command to delete the signaling links providing the timeslots.

4057 E4057 Cmd Rej: All signaling links serviced by this E1/T1 must be deleted

Card locations 1113 - 1118 (E5-MASP and E5-MDAL cards) cannot be specified as values for the `loc` parameter.

2154 E2154 Cmd Rej: Card slot reserved by system

Notes

None.

Output

```
dlt-t1:loc=1205:t1port=1
```

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0  
DLT-T1: MASP A - COMPLTD
```

;

Related Topics

- [chg-t1](#)
- [ent-t1](#)
- [rtrv-e1](#)
- [tst-t1](#)

4.1.268 dlt-tt

Use this command to remove a translation type from the system database.

Note:

When the EGTT feature is turned on, the GTT Selector (`ent/chg/dlt/rtrv-gttset`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrv-gta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. However, the Translation Type and Global Title Translation commands continue to work according to their original functionality when the EGTT feature is turned on.

Parameters

alias (optional)

The global title translation type

Range:

000 - 255

Default:

No translation type given

ttn (optional)

Translation type name.

Range:

ayyyyyyy

1 alphabetic character followed by up to 8 alphanumeric characters

Default:

No translation name is given

type/typea/typei/typen/typen24/typeis/typens (optional)

Translation type. This parameter identifies the translation type and network type. This parameter is the decimal representation of the 1-byte field used in SS7.

The `type` and `typea` parameters specify an ANSI network.

The `typei` parameter specifies an ITU-international network.

The `typen` parameter specifies an ITU-national network.

The `typen24` parameter specifies a 24-bit ITU-national network.

The `typeis` parameter specifies an ITU-international spare network.

The `typens` parameter specifies an ITU-national spare network.

A translation type numeric value may be entered as ANSI type and as an ITU type. However, they are separate entities.

The point code domain translation types for GTT are handled by the EAGLE protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I spare, ITU-N, ITU-N spare, and ITU-N24.

Range:

0 - 255

Default:

No translation type is specified

Example

```
dlt-tt:type=230
dlt-tt:ttn=lidb
dlt-tt:type=230:ttn=lidb
dlt-tt:type=230:ttn=lidb:alias=030
dlt-tt:typeis=3
dlt-tt:typens=4
dlt-tt:typeis=1:ttn=setitu001
```

Dependencies

Asterisk (*) parameter values are not allowed in this command.

2478 E2478 Cmd Rej: Wild card entries are not allowed in this command

To delete a translation type, the translation type, the translation name, or both, must be specified.

2474 E2474 Cmd Rej: Translation TYPE must be specified

If the translation type is specified, it must already exist in the database for the network type.

2466 E2466 Cmd Rej: Translation Type specified does not exist

If the translation name is specified, it must already exist in the database.

2468 E2468 Cmd Rej: TTN specified does not exist

If the translation type is specified, it cannot be an `alias` value.

2465 E2465 Cmd Rej: Translation TYPE defined as an alias

If both the translation type and translation name are specified, they must correspond.

2473 E2473 Cmd Rej: TTN and TYPE do not correspond to each other

The translation type cannot be deleted if there are current GTT entries that reference it.

2472 E2472 Cmd Rej: Translation TYPE is referenced by GTT entry

To delete an `alias`, both the alias and the translation type must be specified, and both must already exist in the database for the network type.

2463 E2463 Cmd Rej: Alias not assigned to translation type

If an `alias` is specified, it must be associated with the specified translation type and cannot be the value of an existing translation type.

2460 E2460 Cmd Rej: Alias defined as translation type

The `type` or `ttn` parameter must be specified.

2475 E2475 Cmd Rej: Either TYPE or TTN must be specified

If aliases exist, they must be removed from the database before the translation types can be removed.

2471 E2471 Cmd Rej: Translation TYPE has an alias

The GTT set associated with the translation type specified by the `ttn` parameter must have a set type of CDGTA (see the `ent-gttset` command).

4997 E4997 Cmd Rej: SETTYPE of specified GTTSET must be CdGTA

The network domain of the translation type specified by the `ttn` parameter cannot be CROSS (see the `ent-gttset` command).

5371 E5371 Cmd Rej: Network domain of corresponding ttn must not be CROSS

The `ttn=none` parameter cannot be specified.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

Notes

If the specified translation type entry is not referenced by a current global title translation entry and does not have any aliases, the translation type entry is removed.

This command can delete only selector entries that have been provisioned by GTT Selector commands, have a GTI value of 2, and a set type of CdGTA.

If the EGTT feature is turned on:

- For ANSI, if the GTT selector of a true entry is deleted using the `dlt-gttset` command, then the aliases for the entry or the entry itself cannot be deleted.
- For ITU, if a true GTT selector entry (GTI=2 or GTI=4) is deleted using the `dlt-gttset` command, or if the GTTSN of an entry is changed using the `chg-`

gttset command, then the aliases for that entry or the entry itself cannot be deleted.

Output

```
dlt-tt:typens=4
```

```
tekelecstp 10-03-28 16:51:25 EST Eagle 42.0.0  
DLT-TT: MASP A - COMPLTD  
;
```

Related Topics

- [ent-tt](#)
- [rtrv-tt](#)

4.1.269 dlt-ttmap

Use this command to delete from the database a mapped SS7 message translation type (TT) for a given gateway linkset name. For example, suppose you are mapping the translation type 001 (before TT mapping) to 238 (after TT mapping). You can use this command to delete that mapping from the database.

Parameters

lsn (mandatory)

Linkset name. The unique network identifier for the gateway linkset.

Range:

ayyyyyyyyy

1 alphabetic character followed by 9 alphanumeric characters

ett (optional)

Translation type before mapping. The identification of the type of global title translation in the SS7 message *before* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range:

0 - 255

io (optional)

Incoming or outgoing. The system uses this parameter to indicate whether the translation type mapping data provisioned for the gateway linkset is for SS7 messages *received* or *sent* on the linkset.

Range:

i
incoming

o
outgoing

Default:
Both incoming and outgoing

Example

```
dlt-ttmap:lsn=n c001:io=i:ett=128:mtt=55
```

Dependencies

The linkset must be defined and the linkset table must be accessible.

N/A N/A

The translation type mapping table must be accessible.

N/A N/A

None

N/A N/A

Notes

None

Output

```
dlt-ttmap:lsn=nc001:io=i:ett=128:mtt=55
```

```
rlghncxa03w 04-02-22 11:18:50 EST EAGLE 31.3.0
TTMAP table for nc001 is (2 of 64) 3% full
DLT-TTMAP: MASP A - COMPLTD
;
```

Related Topics

- [chg-ttmap](#)
- [ent-ttmap](#)
- [rtv-ttmap](#)

4.1.270 dlt-uim-acthresh

Use this command to clear the level of activity threshold that is used to report UIM messages.

Parameters

uimn (mandatory)

The UIM number.

Range:
1000 - 1999

Example

Clears UIM number 1333 message threshold:

```
dlt-uim-acthresh:uimn=1333
```

Dependencies

The `uimn` parameter value must be a numeric value in the range of 1000–1999 .

N/A N/A

The specified `uimn` value must exist in the UIM Threshold database table.

N/A N/A

The `uimn` parameter must be within the valid range: 1000-1999 for UIMs.

Notes

None

Output

```
dlt-uim-acthresh:uimn=1333
```

```
rlghncxa03w 04-02-01 08:50:12 EST EAGLE 31.3.0
DLT-UIM-ACTHRESH: MASP A - COMPLTD
;
```

Related Topics

- [rtrv-uim-acthresh](#)
- [set-uim-acthresh](#)

4.1.271 dlt-user

Use this command to remove a user from the system database.

Parameters

uid (mandatory)

User ID

Range:

azzzzzzzzzzzzzzzzz

1 alphabetic character followed by up to 15 alphanumeric characters

Example

```
dlt-user:uid=terryjohnson
```

Dependencies

The first character must be a letter.

N/A N/A

Notes

If the user being removed is logged onto the system, this command logs the user off immediately.

Output

```
dlt-user:uid=terryjohnson
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0  
DLT-USER: MASP A - COMPLTD
```

```
;
```

Related Topics

- [act-user](#)
- [chg-pid](#)
- [chg-user](#)
- [dact-user](#)
- [ent-user](#)
- [login](#)
- [logout](#)
- [rept-stat-user](#)
- [rtrv-secu-user](#)
- [rtrv-user](#)

4.1.272 dlt-vendid

Use this command to delete a Vendor ID entry from the Vendor ID list, for the GSM MAP SRI Redirect to Serving HLR feature.

Parameters

vendid (mandatory)

Vendor ID

Range:

1 - 15 digits

Example

```
dlt-vendid:vendid=886933
```

Dependencies

The VENDID table is corrupt or cannot be found by the system.

4317 E4317 Cmd Rej: Failed reading VENDID table

The specified Vendor ID entry must already exist in the VendID table.

4319 E4319 Cmd Rej: VENDID does not exist in VENDID table

Notes

None.

Output

```
dlt-vendid:venid=886933
```

```
rlghncxa03w 04-10-07 11:11:28 EST EAGLE 31.11.0
VENDID table is (6 of 200) 3% full
DLT-VENDID: MASP A - COMPLTD
```

;

Related Topics

- [ent-venid](#)
- [rtv-venid](#)

4.1.273 dlt-vflx-cd

Use this command to delete call decision criteria from the Call Decision table. The V-Flex feature must be enabled before this command can be entered.

Parameters

cdn (mandatory)

Call decision name. This parameter specifies the entry in the Call Decision table to be deleted.

Range:

ayyy

1 alphabetic character followed by 3 alphanumeric characters

Example

```
dlt-vflx-cd:cdn=cdn1
```

Dependencies

The value specified for the `cdn` parameter cannot be a reserved word, such as *none*.

3040 E3040 Cmd Rej: <string> cannot be used in this command

The Call Decision table is corrupt or cannot be found.

4095 E4095 Cmd Rej: Failed reading Call Decision table

The value specified for the `cdn` parameter must already exist in the Call Decision table.

4338 E4338 Cmd Rej: CDN does not exist in the database

The V-Flex feature must be enabled before this command can be entered.

4641 E4641 Cmd Rej: VFLEX feature must be enabled

Output

```
dlt-vflx-cd:cdn=cdn1
```

```
rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0  
DLT-VFLX-CD: MASP A - COMPLTD  
;
```

Related Topics

- [chg-vflx-cd](#)
- [ent-vflx-cd](#)
- [rtrv-vflx-cd](#)

4.1.274 dlt-vflx-rn

Use this command to delete a voice mail routing number from the Routing Number table. The V-Flex feature must be enabled before this command can be entered.

Parameters

rname (mandatory)

Routing number name. This parameter specifies the voice mail routing number to be deleted.

Range:

ayyyyyyy

1 alphabetic character followed by 7 alphanumeric characters.

Example

```
dlt-vflx-rn:rname=rn01
```

Dependencies

The V-Flex feature must be enabled before this command can be entered.

4641 E4641 Cmd Rej: VFLEX feature must be enabled

The Routing Number table is corrupt or cannot be found.

4642 E4642 Cmd Rej: Unable to read Routing Number table

The value specified for the `rname` parameter must already exist in the Routing Number table.

4646 E4646 Cmd Rej: RNAME doesn't exist in the database

The value specified for the `rname` parameter cannot be referenced by an entry in the VMSID table.

4648 E4648 Cmd Rej: RN entry is being referred by other entities

The value specified for the `rname` parameter cannot be a reserved word such as *none*.

3040 E3040 Cmd Rej: <string> cannot be used in this command

Output

```
dlt-vflx-rn:rname=rn02
```

```
rlghncxa03w 08-05-29 08:51:12 EST EAGLE 39.0.0  
DLT-VFLX-RN: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-vflx-rn](#)
- [ent-vflx-rn](#)
- [rtrv-vflx-rn](#)

4.1.275 dlt-vflx-vmsid

Use this command to delete a voice mail server ID from the VMSID table.

Parameters

id (mandatory)

The voice mail server to be deleted.

Range:

1 - 15 dgts, *dflt*

Valid digits are *0-9, A-F, a-f*

dflt —the default VMS ID

Example

```
dlt-vflx-vmsid:id=1234ae4
```

Dependencies

The V-Flex feature must be enabled before this command can be entered.

4641 E4641 Cmd Rej: VFLEX feature must be enabled

The value specified for the `vmsid` parameter must already exist in the VMSID table.

4661 E4661 Cmd Rej: VMS ID does not exist in the database

The VMSID table is corrupt or cannot be found.

4663 E4663 Cmd Rej: Failed reading VMSID table

The Routing Number table is corrupt or cannot be found.

4642 E4642 Cmd Rej: Unable to read Routing Number table

The GTT DBMM table is corrupt or cannot be found.

3120 E3120 Cmd Rej: Failed Reading GTT DBMM table

Output

```
dlt-vflx-vmsid:id=1234ae5
```

```
rlghncxa03w 08-05-29 08:51:12 EST EAGLE 39.0.0  
DLT-VFLX-VMSID: MASP A - COMPLTD  
;
```

Related Topics

- [chg-vflx-vmsid](#)
- [ent-vflx-vmsid](#)
- [rtrv-vflx-vmsid](#)

4.1.276 dlt-vlr-prof

Use this command to delete a Visitor Location Register (VLR) Profile for a mobile subscriber for existing entries.

Parameters

vlr (mandatory)

VLR Number: Hexadecimal digit GT Number with variable length (1 to 16).

Range:

Hexadecimal digit string 1 to 16 digits

Example

```
dlt-vlr-prof:vlr=4234
```

Dependencies

VLR_PROF table must be accessible.

3604 E3604 Failure reading VLR Profile Table

VLR DBMM table must be accessible.

3610 E3610 Failure reading VLR DBMM Table

OLDVLR and NEWVLR parameter length must be in the range 1 to 5 digits as per current restriction.

3603 E3603 VLR length is out of range. Range: 1...5

OLDVLR or NEWVLR parameter must be existing in VLR-PROF table

3607 E3607 No entry found for entered VLR in VLR profile tbl

Entry being deleted should not be referenced in roaming table

3609 E3609 A reference of this entry exists in VLR roaming tbl.

Output

```
dlt-vlr-prof:vlr=9234

tekelecstp 17-11-23 14:08:49 MST EAGLE 46.5.1.5.0-73.2.0
  dlt-vlr-prof:vlr=9234
  Command entered at terminal #17.
;

tekelecstp 17-11-23 14:08:49 MST EAGLE 46.5.1.5.0-73.2.0
DLT-VLR-PROF: MASP A - Cannot access standby fixed disk.
DLT-VLR-PROF: MASP A - Simplex database update.
Command Accepted - Processing

VLR-PROF table is (4 of 500) 1% full.

;
tekelecstp 17-11-23 14:08:49 MST EAGLE 46.5.1.5.0-73.2.0
DLT-VLR-PROF: MASP A - COMPLTD
;
Command Executed
```

Output

```
rtrv-vlr-prof

tekelecstp 17-11-23 14:21:51 MST EAGLE 46.5.1.5.0-73.2.0
  rtrv-vlr-prof:num=50000
  Command entered at terminal #17.
;

Command Accepted - Processing
tekelecstp 17-11-23 14:21:51 MST EAGLE 46.5.1.5.0-73.2.0

VLRIDX  VLRNb          FILTER    AGEOFLOC    LASTUEACTIVITY  REFCNT
1         1234          whitelist no           no                1
2         56545         whitelist no           no                1
3         4234          blacklist no           no                0
4         9234          whitelist no           yes               0

VLR-PROF table is (4 of 500) 1% full.

;

rtrv-vlr-prof:num=2

tekelecstp 17-11-23 14:23:35 MST EAGLE 46.5.1.5.0-73.2.0
  rtrv-vlr-prof:num=2
```

```
Command entered at terminal #17.
;

Command Accepted - Processing
tekelecstp 17-11-23 14:23:35 MST EAGLE 46.5.1.5.0-73.2.0

VLRIDX VLRNb          FILTER      AGEOFLOC   LASTUEACTIVITY
REFCNT
1      1234           whitelist  no
no                1

2      56545         whitelist  no
no                1

VLR-PROF table is (4 of 500) 1% full.

;

rtrv-vlr-prof:filter=blacklist

tekelecstp 17-11-23 14:23:23 MST EAGLE 46.5.1.5.0-73.2.0
rtrv-vlr-prof:filter=blacklist
Command entered at terminal #17.
;

Command Accepted - Processing
tekelecstp 17-11-23 14:23:23 MST EAGLE 46.5.1.5.0-73.2.0

VLRIDX VLRNb          FILTER      AGEOFLOC   LASTUEACTIVITY
REFCNT
3      4234           blacklist  no
no                0

VLR-PROF table is (4 of 500) 1% full.

;

rtrv-vlr-prof:filter=whitelist:num=1

tekelecstp 17-10-12 18:11:44 EST EAGLE 46.5.1.5.0-73.2.0
rtrv-vlr-prof:filter=whitelist:num=1
Command entered at terminal #23.
;

Command Accepted - Processing
tekelecstp 17-10-12 18:11:44 EST EAGLE 46.5.1.5.0-73.2.0

VLRIDX VLRNb          FILTER      AGEOFLOC
LASTUEACTIVITY  REFCNT
1      17071         whitelist  no
no                1
```

```
VLR-PROF table is (2 of 50000) 1% full.

;
Command Executed

rtrv-vlr-prof:vlr=1707

tekelecstp 17-10-12 18:11:00 EST EAGLE 46.5.1.5.0-73.2.0
  rtrv-vlr-prof:vlr=1707
  Command entered at terminal #23.
;

Command Accepted - Processing
  tekelecstp 17-10-12 18:11:00 EST EAGLE 46.5.1.5.0-73.2.0

  VLRIDX  VLRNb          FILTER      AGEOFLOC   LASTUEACTIVITY
REFCNT
    2      1707          whitelist   no         no              1

VLR-PROF table is (2 of 50000) 1% full.

;
Command Executed

rtrv-vlr-prof:vlr=100

Command Accepted - Processing

  tekelecstp 17-11-27 14:43:15 MST EAGLE 46.5.1.5.0-73.2.0
  rtrv-vlr-prof:vlr=100
  Command entered at terminal #2.
;

tekelecstp 17-11-27 14:43:15 MST EAGLE 46.5.1.5.0-73.2.0

  VLRIDX  VLRNb          FILTER      AGEOFLOC   LASTUEACTIVITY
REFCNT

  No VLR Profiles matching the specified criteria were found.

VLR-PROF table is (3 of 500) 1% full.

;
```

Legend

- **VLRIDX** - Index of entry in VLR table.
- **VLRNb** - VLR Number
- **FILTER** - Flag to findout whether the number is whitelisted, blacklisted, or graylisted.
- **GEOFLOC** - Whether age of location is supported or not.

- **LASTUEACTIVITY** - Whether the last use activity is supported or not.
- **REFCNT** - Number of times this entry is referred in VLR_ROAM table.

Related Topics

- [chg-vlr-prof](#)
- [ent-vlr-prof](#)
- [rtrv-vlr-prof](#)

4.1.277 dlt-vlr-roaming

Use this command to delete a Visitor Location Register (VLR) Roaming entry for a mobile subscriber for existing entries.

Parameters

oldv1r (mandatory)

VLR Number from which mobile subscriber has moved, hexadecimal digit GT number with variable length (1 to 16).

Range:

Hexadecimal digit string 1 to 16 digits

newv1r (mandatory)

VLR Number to which mobile subscriber has moved, hexadecimal digit GT number with variable length (1 to 16).

Range:

Hexadecimal digit string 1 to 16 digits

Example

```
dlt-vlr-roaming:newv1r=12345:oldv1r=56780
```

Dependencies

VLR_PROF table must be accessible.

3604 E3604 Failure reading VLR Profile Table

VLR_DBMM table must be accessible.

3610 E3610 Failure reading VLR_DBMM Table

VLR_ROAM table must be accessible.

3602 E3602 Failure reading VLR_Roaming Table

OLDVLR and NEWVLR parameter length must be in the range 1 to 5 digits as per current restriction.

3603 E3603 VLR length is out of range. Range: 1....5

OLDVLR or NEWVLR parameter must be existing in VLR-PROF table

3607 E3607 No entry found for entered VLR in VLR profile tbl

The entry should be existing in VLR_ROAM table

3601 E3601 OLD and NEW VLR combination does not exist.

Output

```
dlt-vlr-roaming:newvlr=12345:oldvlr=56780

tekelecstp 17-11-23 16:23:44 MST EAGLE 46.5.1.5.0-73.2.0
  dlt-vlr-roaming:oldvlr=1234:newvlr=56545:time=20
  Command entered at terminal #17.
;

tekelecstp 17-11-23 16:23:44 MST EAGLE 46.5.1.5.0-73.2.0
  DLT-VLR-ROAMING: MASP A - Cannot access standby fixed disk.
  DLT-VLR-ROAMING: MASP A - Simplex database update.
Command Accepted - Processing

  VLR-ROAMING table is (1 of 1000) 1% full.
;

tekelecstp 17-11-23 16:23:44 MST EAGLE 46.5.1.5.0-73.2.0
  DLT-VLR-ROAMING: MASP A - COMPLTD
;
```

Related Topics

- [chg-vlr-roaming](#)
- [ent-vlr-roaming](#)
- [rtrv-vlr-roaming](#)

4.1.278 enable-ctrl-feat

Use this command to enable a controlled feature that the customer is entitled to use.



Note:

The “LNP (Local Number Portability) feature” is turned on when the LNP ported TNs quantity is greater than 0 in the `rtrv-ctrl-feat` command output (an LNP ported TNs quantity feature access key has been enabled and turned on).

Parameters

partnum (mandatory)

Part number. The part number for the feature.

Range:

893000000 - 893999999

Do not include dashes in the 9-digit number.

faak (optional)

Feature Access Key. The Feature Access Key for the feature.

Range:
aaaaaaaaaaaa
13 alphanumeric characters

**Note:**

The FAK parameter has no significance starting with Release 46.3. The parameter is used only for backward compatibility.

Example

```
enable-ctrl-feat:partnum=893xxxxxxx
```

Dependencies

The phrase "Service Module cards" refers to E5-SM4G or E5-SM8G-B cards when any of these cards can be used. If a specific card is required, then the appropriate requirement is listed.

The Dual ExAP Config feature cannot be enabled before the E5-SM4G Throughput Cap feature is enabled.

2479 E2479 Cmd Rej: E5-SM4G Throughput Cap feature must be enabled.

The system serial number must be locked in the database before this command can be entered for the feature (see the `ent-serial-num` command).

3233 E3233 Cmd Rej: System serial number has not been locked

A feature cannot be enabled with this command when the feature has already been enabled with a permanently ON feature access key or a feature access key for a quantity that is greater than the quantity specified in the command.

3827 E3827 Cmd Rej: No change requested

The GTT feature must be on before the IDP Screening for Prepaid feature can be enabled.

4546 E4546 Cmd Rej: GTT must be ON before IDPS can be enabled

The value specified for the `partnum` parameter must be the correct part number for the feature.

3450 E3450 Cmd Rej: Invalid Part Number

A valid system serial number must be entered in the database before this command can be entered for the feature (see the `ent-serial-num` command).

3453 E3453 Cmd Rej: Database does not contain a serial number

The Feature Control database (FEATCTRL.TBL) is corrupt; database maintenance is required.

4037 E4037 Cmd Rej: Error in FEATCTRL.TBL database, maintenance required

The LNP ELAP Configuration feature and the WNP feature must be turned on before the LNP SMS feature can be enabled.

3598 E3598 Cmd Rej: LNP ELAP Configuration and WNP features must be ON

The GTT feature must be turned on before the XGTT Table Expansion feature can be enabled.

3103 E3103 Cmd Rej: GTT must be ON before XGTT can be enabled

Both cards that run the OAM application in the system must be GPSM-II cards before the XGTT Table Expansion feature can be enabled.

3105 E3105 Cmd Rej: XGTT requires both OAMS running on GPSMII cards

The DSTN5000 feature bit for the 5000 Routesets feature must be turned on before the 6000 Routesets, 7000 Routesets, 8000 Routesets, or 10,000 Routesets feature can be enabled.

3421 E3421 Cmd Rej: DSTN5000 feature must be ON

The 7000 Routesets or 8000 Routesets feature cannot be enabled if more than 8000 alias point codes are already assigned in the system.

The 10,000 Routesets feature cannot be enabled if more than 10000 alias point codes are already assigned in the system.

4280 E4280 Cmd Rej: Alias PCs exceed Max allowed for Feature Quantity

If the LNP (an LNP ported TNs quantity), LNP 150,000 LRNs, or LNP 300,000 NPANXX feature is enabled, then none of the following features can be enabled unless the Dual ExAP Config feature is enabled:

- AINPQ
- A-Port
- ATINP
- Equipment Identity Register (EIR)
- G-Flex
- G-Port
- Info Analyzed Relay Base (IAR Base)
- INP
- IS41 GSM Migration (IGM)
- MO SMS ASD
- MO SMS GRN
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- MTP Msgs for SCCP Apps
- Portability Check for MO SMS
- Prepaid IDP Query Relay (IDP Relay)
- Prepaid SMS Intercept Phase 1 (PPSMS)
- TIF Number Portability
- TIF Number Substitution
- TIF Subscriber CgPN Blacklist
- V-Flex

3334 E3334 Cmd Rej: LNP and specified feature are mutually exclusive

The LNP feature (an LNP ported TNs quantity) must be enabled before the LNP 150,000 LRNs feature or the LNP 300.000 NPANXXs feature can be enabled.

3009 E3009 Cmd Rej: LNP feature must be ON

A card with unknown hardware is detected in system (possibly in the process of loading, or a loading error has occurred).

3243 E3243 Cmd Rej: Unknown hardware configuration

The LNP ELAP Configuration feature must be enabled and turned on before any LNP quantity features can be enabled.

3456 E3456 Cmd Rej: LNP ELAP Configuration feature must be ON

The LNP feature for 24 million TNs requires all Service Module cards with a minimum of 2GB of memory.

3462 E3462 Cmd Rej: LNP ported TNs 24million Qty Feat Require at least DSM2GB

The LNP feature for 36 million TNs requires all Service Module cards with a minimum of 3GB of memory.

3463 E3463 Cmd Rej: LNP ported TNs 36million Qty Feat Require at least DSM3GB

The LNP feature for LNP ported TNs quantities of 48 million TNs to 192 million TNs requires all Service Module cards with a minimum of 4GB of memory.

The LNP feature for LNP ported TNs quantities of 204 million TNs to 228 million TNs requires all Service Module cards with a minimum of 4GB of memory.

3464 E3464 Cmd Rej: LNP ported TNs 48 to 192 M Qty Feat Req at least DSM4GB

The 150,000 LNP LRNs feature requires all Service Module cards with a minimum of 2GB of memory.

3796 E3796 Cmd Rej: LNP ported LRNs 150K Qty Feat Requires at least DSM2GB

The 300,000 LNP NPANXXs feature requires all Service Module cards with a minimum of 2GB of memory.

3795 E3795 Cmd Rej: LNP ported NPANXXs 300K Qty Feat Requires at least DSM2GB

The GTT feature bit must be turned on (see the `chg-feat` command) before the following features can be enabled:

- Advanced GT Modification (AMGTT)
- ANSI41 AIQ
- ATI Number Portability Query (ATINP)
- Dual ExAP Config
- E5-SM4G Throughput Capacity
- Equipment Identity Register (EIR)
- G-Flex
- GSM Map Screening (GSM)

- Hex Digit Support for GTT
- Info Analyzed Relay Base (IAR Base)
- Intermediate GTT Loadsharing (IGTTLS)
- LNP ELAP Configuration
- LNP ported LRNs
- LNP ported NPANXXs
- LNP ported TNs
- MO SMS ASD
- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- MTP Msgs for SCCP Apps
- MTP Routed Gateway Screening Stop Action
- Portability Check for MO SMS (MNPSMS)
- Prepaid SMS Intercept Ph1 (PPSMS)
- SCCP Loop Detection
- TIF Additional Subscriber Data
- TIF Generic Routing Number
- TIF Number Portability
- TIF Number Substitution
- TIF Range CgPN Blacklist
- TIF SCS Forwarding
- TIF Simple Number Substitution
- TIF Subscriber CgPN Blacklist
- Transaction-based GTT Loadsharing (TBGTTLS)
- Voice Mail Router (V-Flex)

2584 E2584 Cmd Rej: GTT feature must be ON

If the SCCP Conversion or TCAP Conversion feature is turned on, then the ANSI/ITU SCCP Conversion feature cannot be enabled.

4201 E4201 Cmd Rej: SCCPCNV,TCAPCNV must be disabled

The ANSI/ITU SCCP Conversion feature requires Service Module cards in the system.

4202 E4202 Cmd Rej: SCCP Conversion feature requires at least TSM Hardware

The GSM Map Screening (GSM) feature must be turned on before the Enhanced GSM Map Screening (EGSM) feature can be enabled.

3883 E3883 Cmd Rej: GSM Map Screening feature must be ON

The Enhanced GSM Map Screening (EGSM) feature must be turned on before the MTP MAP Screening feature can be enabled.

4166 E4166 Cmd Rej: EGMS must be ON before MTP MAP Screening can be enabled

The Measurements Platform feature must be turned on and the Measurements Platform collection function must be enabled (see the `chg-measopts:platformenable=on` parameter) before the MTP MAP Screening feature can be enabled (at least one MCPM card must be active).

3088 E3088 Cmd Rej: Platformenable or Oamhcmeas option must be on

The G-Port feature must be turned on before the following features can be enabled:

- GSM MAP SRI Redirect for Serving HLR
- ISUP NP with EPAP
- MNP Circular Route Prevention
- Prepaid SMS Intercept Phase 1 (PPSMS)

3991 E3991 Cmd Rej: GPORT feature must be ON

The GWS (Gateway Screening) feature must be turned on before the following features can be enabled:

- Integrated GLS
- ISUP NP with EPAP
- TIF Additional Subscriber Data
- TIF Generic Routing Number
- TIF Number Portability
- TIF Number Substitution
- TIF Range CgPN Blacklist
- TIF SCS Forwarding
- TIF Simple Number Substitution
- TIF Subscriber CgPN Blacklist

2585 E2585 Cmd Rej: GWS feature must be ON

The following features cannot be enabled if the ANSIGFLEX system option is enabled (see the `chg-stpopts` command) AND E5-SM4G Throughput Cap quantity key for 6800 or above has not been enabled:

- 1100 TPS/DSM for ITU NP
- ANSI-41 INP Query (AINPQ)
- A-Port
- ATINP
- Equipment Identity Register (EIR)
- G-Flex MAP Layer Routing
- G-Port

- Info Analyzed Relay Base
- INP
- IS41 GSM Migration (IGM)
- MO SMS ASD
- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- Portability Check for MO SMS
- TIF Number Portability
- TIF Number Substitution
- TIF Selective Screening
- TIF Subscriber CgPN Blacklist
- V-Flex

2690 E2690 Cmd Rej: E5-SM4G Throughput Cap qty 6800 or above must be enabled

The following features cannot be enabled if the ANSIGFLEX system option is enabled (see the `chg-stpopts` command) AND DSM is equipped in the system

- 1100 TPS/DSM for ITU NP
- ANSI-41 INP Query (AINPQ)
- A-Port
- ATINP
- Equipment Identity Register (EIR)
- G-Flex MAP Layer Routing
- G-Port
- Info Analyzed Relay Base
- INP
- IS41 GSM Migration (IGM)
- MO SMS ASD
- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- Portability Check for MO SMS
- TIF Number Portability
- TIF Number Substitution
- TIF Selective Screening
- TIF Subscriber CgPN Blacklist

- V-Flex

5415 E5415 Cmd Rej: Feature can not be enabled with non-SMXG VSCCP in system

Before an LNP ported TNS quantity greater than 96 million numbers can be enabled, an ELAP system that supports a quantity greater than 96 million numbers must be available to the EAGLE.

- The ELAP software must be at version 4.0 to support LNP ported TNS quantities greater than 96 million numbers and up to 120 million numbers.
- The ELAP software must be at version 5.0 or greater to support LNP ported TNS quantities greater than 120 million numbers. A quantity greater than 120 million numbers cannot be enabled until the ELAP is upgraded to the required software level, and the appropriate ELAP commands are issued to convert the 120 Million LNP Numbers database structure to the data compaction structure for more than 120 million numbers.

The `rept-stat-mps` command can be entered at the EAGLE to determine the ELAP software version.

4325 E4325 Cmd Rej: ELAP architecture does not support LNP quantity requested

Service Module cards running the VSCCP application must be present in the system before the following features can be enabled:

- AINPQ
- ANSI41 AIQ
- A-Port
- ATI Number Portability Query (ATINP)
- EIR
- Enhanced GSM MAP Screening (EGMS)
- Flexible GTT Load Sharing
- G-Flex
- G-Port
- INP
- IS41 GSM Migration (IGM)
- LNP ELAP Configuration
- MO SMS ASD
- MO SMS B-Party Routing
- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- Origin-based SCCP Routing (OBSR)
- PPSMS
- SCCP Loop Detection

- TIF Additional Subscriber Data
- TIF Generic Routing Number
- TIF Number Portability
- TIF Number Substitution
- TIF Range CgPN Blacklist
- TIF SCS Forwarding
- TIF Simple Number Substitution
- TIF Subscriber CgPN Blacklist
- Transaction-based GTT Loadsharing (TBGTTLS)
- Weighted GTT Loadsharing (WGTTLS)
- V-Flex

3584 E3584 Cmd Rej: Feature configuration requires DSM card with VSCCP appl

Before LNP ported TNs quantities greater than 96 million numbers can be enabled, an ELAP system must be available to validate its software version to the EAGLE.

4326 E4326 Cmd Rej: ELAP must be available to verify LNP quantity support

The Enhanced GTT (EGTT) feature must be turned on before the following features can be enabled

- Flexible Linkset Optional Based Routing (FLOBR)
- GTT Action - DISCARD
- GTT Action - DUPLICATE
- GTT Action - FORWARD
- MO SMS B-Party Routing
- Origin-based SCCP Routing

3557 E3557 Cmd Rej: EGTT must be ON

At least one of the EPAP-based ITU NP features (G-Port, A-Port, INP, IGM, EIR, IDP Relay, ANSI-41 INP Query, V-Flex, or PPSMS) must be turned on before the 1100 TPS/DSM for ITU NP feature can be enabled.

4950 E4950 Cmd Rej: At least one ITU NP feature must be ON

The GTT feature must be turned on before the A-Port feature can be enabled.

2086 E2086 Cmd Rej: GTT must be turned ON for A-Port

The GTT feature must be turned on before the G-Port feature can be enabled.

2087 E2087 Cmd Rej: GTT must be turned ON for G-Port

The GTT feature must be turned on before the IS41 GSM Migration (IGM) feature can be enabled.

2088 E2088 Cmd Rej: GTT must be turned ON for IGM

If a DSM card with less than 4 gigabytes of memory is present in the system, the following features cannot be enabled

- A-Port
- MO SMS ASD
- MO SMS B-Party Routing
- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO SMS Prepaid Intercept on B-Party
- Portability Check for MO SMS
- PPSMS

3363 E3363 Cmd Rej: Feature cannot be enabled with DSM less than 4G is present

The PPSMS feature cannot be enabled if the LNP ELAP Configuration feature is turned on.

3396 E3396 Cmd Rej: LNP and PPSMS Intercept Ph1 features are mutually exclusive

Service Module cards must be provisioned in the system before the Prepaid IDP Query Relay feature can be enabled.

4501 E4501 Cmd Rej: Enabling of IDPR requires VSCCP DSM card

The GTT feature must be turned on before the Prepaid IDP Query Relay feature can be enabled.

4502 E4502 Cmd Rej: GTT must be ON before IDPR can be enabled

The IP User Interface feature must be enabled before the SEAS Over IP feature can be enabled.

4351 E4351 Cmd Rej: Telnet Feature must be enabled

If the TIF (Number Portability/ Additional Subscriber Data / Generic Routing Number) is enabled, then the LNP feature cannot be enabled. If the LNP feature is enabled, then the TIF (Number Portability/ Additional Subscriber Data / Generic Routing Number) feature cannot be enabled.

3356 E3356 Cmd Rej: TIF feature is mutually exclusive with LNP

The Multiple Point Code (MPC) feature must be turned on before the Multiple Linksets to Single Adjacent PC (MLS) feature can be enabled.

3867 E3867 Cmd Rej: MPC feature must be enabled

The G-Flex feature must be turned on before the G-Flex MAP Layer Routing feature can be enabled.

3500 E3500 Cmd Rej: GFLEX feature must be ON

The STP Options table is corrupt or cannot be found by the system.

2852 E2852 Cmd Rej: Failed reading STP Options table

The G-Port feature must be enabled before the following features can be enabled:

- G-Port SRI Query for Prepaid
- MT-Based GSM SMS NP

4371 E4371 Cmd Rej: GPORT must be enabled

The A-Port feature must be enabled before the MT-Based IS41 SMS NP feature can be enabled.

4433 E4433 Cmd Rej: APORT must be enabled

The AMGTT CdPA Only feature cannot be enabled using the `enable-ctrl-feat` command. This feature is automatically enabled and turned on if the MGTT feature was on before upgrade to EAGLE Release 38.0 occurred.

4790 E4790 Cmd Rej: AMGTT CdPA Only feature cannot be enabled

The AMGTT CdPA Only feature must be turned on before the AMGTT CgPA Upgrade feature can be enabled.

4791 E4791 Cmd Rej: AMGTT CdPA Only must be ON

If the AMGTT CdPA Only feature or the AMGTT CgPA Upgrade feature is turned on, then the AMGTT feature cannot be enabled.

4792 E4792 Cmd Rej: AMGTT CdPA Only or AMGTT CgPA Upgrade must not be ON

The LNP (an LNP ported TNs quantity), LNP 150,000 LRNs, or LNP 300,000 NPANXX feature cannot be enabled if the INP or AINPQ feature is turned on or if any of the features listed below is enabled. If the LNP (an LNP ported TNs quantity), LNP 150,000 LRNs, or LNP 300,000 NPANXX feature is enabled, then none of the features listed below can be enabled.

- A-Port
- ATINP
- Equipment Identity Register (EIR)
- G-Flex
- G-Port
- Info Analyzed Relay Base (IAR Base)
- IDP Screening for Prepaid
- IS41 GSM Migration (IGM)
- MO SMS ASD
- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- MTP Msgs for SCCP Apps
- Portability Check for MO SMS (MNPSMS)
- Prepaid IDP Query Relay (IDP Relay)
- Prepaid SMS Intercept Phase 1 (PPSMS)
- TIF Number Portability
- TIF Number Substitution
- TIF Subscriber CgPN Blacklist
- V-Flex

4070 E4070 Cmd Rej: LNP is mutually exclusive with an existing feature

The MT-Based GSM SMS NP feature must be enabled before the MT-Based GSM MMS NP feature can be enabled.

4701 E4701 Cmd Rej: MT-Based GSM SMS NP must be enabled

The LNP ported TNs 24 Million Quantity feature or greater must be turned on before the LRNQT feature can be enabled.

4830 E4830 Cmd Rej: LNP ported TNs (24Million or more) Qty Feature must be ON

The Intermediate GTT Load Sharing feature must be turned on before the GTT LS ARI feature can be enabled.

2996 E2996 Cmd Rej: Intermed GTT Load Sharing feature must be ON

The Flexible GTT Load Sharing feature must be enabled before the GTT LS ARI feature can be enabled.

5055 E5055 Cmd Rej: Flexible GTT Load Sharing Feature must be enabled

The Flexible Linkset Optional Based Routing (FLOBR) feature must be turned on before the TCAP Opcode Based Routing (TOBR) feature can be enabled.

5060 E5060 Cmd Rej: Flexible Linkset Optional Based Routing must be ON

The Variable Length GTT (VGTT) feature must be turned on before the Support for 16 GTT Lengths in VGTT feature can be enabled.

N/A N/A

The TOBR feature must be turned on before any of the TOBR Quantity features can be enabled.

5099 E5099 Cmd Rej: TCAP Opcode Based Routing feature must be turned ON

A TOBR quantity feature cannot be enabled if a TOBR feature with a higher quantity is enabled.

5100 E5100 Cmd Rej: Larger Opcode Quantity FAK should be provided

If the TOBR quantity feature of maximum quantity level is enabled, then no other TOBR Quantity feature can be enabled.

5101 E5101 Cmd Rej: Maximum Opcode Quantity FAK already enabled

The Prepaid IDP Query Relay feature must be turned on before the following features can be enabled:

- IDP A-Party Blacklist
- IDP A-Party Routing
- IDP Service Key Routing

5024 E5024 Cmd Rej: Prepaid IDP Query Relay feature must be activated

The INP feature must be turned on before the INP CRP feature can be enabled.

5033 E5033 Cmd Rej: INP feature must be ON

The Default Country Code must be provisioned (see the `defcc` parameter in the `chg-stpopts` command) before the ATINP, IAR Base, MT-Based GSM SMS NP, or MT-Based IS41 SMS NP feature can be enabled.

4618 E4618 Cmd Rej: STPOPTS DefCC must not be NONE

If the system contains any cards other than those listed below, then the 2800 links quantity of the Large System # Links feature cannot be enabled:

- E5-ATM-B
- E5-E1T1-B
- E5-ENET-B
- E5-IPSM
- E5-MCPM-B
- E5-OAM
- E5-SM4G
- E5-SM8G-B
- E5-TSM
- HIPR2

4581 E4581 Cmd Rej: Unsupported Hardware is equipped in the system

The Info Analyzed Relay Base (IAR Base) feature must be enabled before the IAR NP, IAR GRN, or IAR ASD feature can be enabled.

5150 E5150 Cmd Rej: Info Analyzed Relay Base feature must be enabled

The S-Port feature and the IDP A-Party Blacklist feature cannot both be enabled in the system.

4927 E4927 Cmd Rej: S-Port feature exclusive of A-Party Blacklist feature

The value specified for the `partnum` parameter must consist of 9 digits, without any dashes. The first three digits are 893. The next six values are numeric (0...9).

2017 E2017 Cmd Rej: `<parm_desc>` is out of range, `<min>..<max>` - `<parm>`

The Service Portability (S-Port) feature must be enabled before the S-Port Subscriber Differentiation feature can be enabled.

4926 E4926 Cmd Rej: Service Portability feature must be enabled

If the system is not in mixed mode and is equipped with GPSM-II/TDM card(s), then the Integrated GLS and Integrated Measurements features cannot be enabled.

4916 E4916 Cmd Rej: Command invalid for hardware configuration

The A-Port or IGM feature must be turned on before the LOCREQ Query Response feature can be enabled.

2084 E2084 Cmd Rej: A-Port or IGM must be turned ON

If a PCT feature of maximum quantity level is enabled, then a PCT feature of a lower quantity cannot be enabled.

5395 E5395 Cmd Rej: Maximum PCT Quantity FAK already enabled

A PCT feature cannot be enabled if the quantity is higher than the quantity of the associated FAK.

5396 E5396 Cmd Rej: Larger PCT Quantity FAK is required

If a DSM card is provisioned in the system, then the FLOBR, GTT Action – DUPLICATE, and VGTT-16 features cannot be enabled.

5059 E5059 Cmd Rej: Configuration requires E5-SM4G card or better

If an EOAM card is in the active or standby MASP location, then the 10,000 Routesets feature cannot be enabled.

4581 E4581 Cmd Rej: Unsupported Hardware is equipped in the system

The VCI value for any ATM link (see the `ent-slk` command) must be less than or equal to 16383 before a 3 Links per Card feature quantity can be enabled.

5439 E5439 Cmd Rej: ATM link with VCI greater than 16383 exists

The `mtplprst` option must be configured (see the `chg-stpopts` command) before the Origin-based MTP Routing feature can be enabled.

4579 E4579 Cmd Rej: MTPLPRST option must be on

The `matchseq=dn` parameter must be specified (see the `chg-tifopts` command) before the TIF Number Substitution feature can be enabled.

5093 E5093 Cmd Rej: TIF NS feature cannot be Enabled unless MATCHSEQ is DN

Each provisioned Service Module card must have at least 4G memory before the AINPQ feature can be enabled.

3517 E3517 Cmd Rej: VSCCP cards have insufficient extended memory

At least one EPAP related feature must be turned on before the EPAP Data Split feature can be enabled.

4815 E4815 Cmd Rej: At least one EPAP related feature must be ON

The EPAP Data Split feature requires E5-SM4G or E5-SM8G-B cards.

5415 E5415 Cmd Rej: Feature can not be enabled with non-SMXG VSCCP in system

ISUP NP with EPAP feature cannot be enabled once Dual ExAP Config feature has been enabled.

2807 E2807 Cmd Rej: Dual ExAP Config feature must NOT be Enabled.

TIF Selective Screening feature is mutually exclusive with TIF Number Substitution feature. TIF Selective Screening feature uses Number Substitution digit field to store Call Types associated with DN.

2482 E2482 Cmd Rej: TIF Sel Scr and TIF NS features are mutually exclusive

The Default Country Code must be provisioned (see the `defcc` parameter in the `chg-stpopts` command) before the SIP NP feature can be enabled.

4618 E4618 Cmd Rej: STPOPTS DefCC must not be NONE.

The J7 support feature cannot be enabled if ANSI or ITUN-24 SID is already provisioned.

2802 E2802 Cmd Rej: J7 Support feature cannot be Enabled.

The EPM A/E5-SM4G cards are not supported when the SMxG 13,600 TPS Throughput Capacity feature is enabled.

3510 E3510 Cmd Rej: EPMA/SM4G card not supported for this feature

Notes

XGTT or XMAP (GTT or MAP Table Increase) Feature

After the XGTT feature is enabled, the feature cannot be disabled or turned off.

After the XMAP feature is enabled, the feature cannot be disabled or turned off.

1500 Links and 2000 Links Support

After the 1500 Links feature or the 2000 Links Support feature is enabled, the feature cannot be disabled or turned off.

SE-HSL SLK Capacity

The SE-HSL feature allows unchannelized E1 links to be provisioned. The maximum number of unchannelized signaling links that can be assigned to E5-E1T1-B cards in the system with each SE-HSL SLK Capacity quantity feature access key are:

- 893-0130-01—4
- 893-0130-02—8
- 893-0130-03—16
- 893-0130-04—24
- 893-0130-05—32
- 893-0130-06—40
- 893-0130-07—48
- 893-0130-08—56
- 893-0130-09—64
- 893-0130-10—72
- 893-0130-11—80
- 893-0130-12—88
- 893-0130-13—96
- 893-0130-14—104
- 893-0130-15—112
- 893-0130-16—120

LNP Ported Numbers Capacity, LNP NPANXXs, LNP LRNs, and LNP ELAP Configuration Features

[Table 4-21](#) lists the minimum Service Module hardware type required by each LNP quantity feature. Quantities of 204-228 million TNs require DSM cards and do not support E5-SM4G or E5-SM8G-B cards. Quantities of 240-504 million TNs require E5-SM4G or E5-SM8G-B cards.

Quantities of 516-756 million TNs require SLIC cards.

Table 4-21 Minimum Hardware Required for LNP Quantity Features

Object / Capacity	Minimum Hardware	Part Number
156 Million TNs	4 GB Service Module card	893-0110-17
168 Million TNs	4 GB Service Module card	893-0110-18
180 Million TNs	4 GB Service Module card	893-0110-19
192 Million TNs	4 GB Service Module card	893-0110-20
204 Million TNs	This capacity was previously supported only on the 4 GB DSM card. Starting with EAGLE Release 46.0, the DSM card is no longer supported; therefore this specific capacity limit is no longer supported.	893-0110-21
216 Million TNs	This capacity was previously supported only on the 4 GB DSM card. Starting with EAGLE Release 46.0, the DSM card is no longer supported; therefore this specific capacity limit is no longer supported.	893-0110-22
228 Million TNs	This capacity was previously supported only on the 4 GB DSM card. Starting with EAGLE Release 46.0, the DSM card is no longer supported; therefore this specific capacity limit is no longer supported.	893-0110-23
240 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-24
252 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-25
264 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-26
276 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-27
288 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-28
300 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-29
312 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-30
324 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-31
336 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-32
348 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-33
360 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-34
372 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-35
384 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-36
396 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-37
408 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-38
420 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-39
432 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-40

Table 4-21 (Cont.) Minimum Hardware Required for LNP Quantity Features

Object / Capacity	Minimum Hardware	Part Number
444 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-41
456 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-42
468 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-43
480 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-44
492 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-45
504 Million TNs	E5-SM4G/E5-SM8G-B	893-0110-46
516 Million TNs	SLIC	893011047
528 Million TNs	SLIC	893011048
540 Million TNs	SLIC	893011049
552 Million TNs	SLIC	893011050
564 Million TNs	SLIC	893011051
576 Million TNs	SLIC	893011052
588 Million TNs	SLIC	893011053
600 Million TNs	SLIC	893011054
612 Million TNs	SLIC	893011055
624 Million TNs	SLIC	893011056
636 Million TNs	SLIC	893011057
648 Million TNs	SLIC	893011058
660 Million TNs	SLIC	893011059
672 Million TNs	SLIC	893011060
684 Million TNs	SLIC	893011061
696 Million TNs	SLIC	893011062
708 Million TNs	SLIC	893011063
720 Million TNs	SLIC	893011064
732 Million TNs	SLIC	893011065
744 Million TNs	SLIC	893011066
756 Million TNs	SLIC	893011067
150,000 NPANXXs	4 GB Service Module card	893-0094-01
300,000 NPANXXs	4 GB Service Module card	893-0094-02
100,000 LRNs	4 GB Service Module card	893-0105-05
150,000 LRNs	4 GB Service Module card	893-0105-01

Flexible GTT Load Sharing

The Flexible GTT Load Sharing feature allows a PC or PC/SSN combination to be provisioned in multiple load-sharing relationships for post-GTT load sharing of intermediate and final GTT traffic.

Load sharing for intermediate GTT traffic requires the Intermediate GTT Load Sharing feature, which can be run in conjunction with the Flexible GTT Load Sharing feature. Intermediate GTT load sharing is performed through the MRN table, and the GTT destination is a PC. If both the Intermediate and Flexible GTT Load Sharing features are on, different load-sharing relationships can be defined between the same set of PCs, and different sets of destinations can contain the same PCs.

Load sharing for final GTT traffic is performed through the MAP table, and the GTT destination is a PC/SSN combination. If the Flexible GTT Load Sharing feature is on, different load-sharing relationships can be defined between the same set of PC/SSNs, and different sets of destinations can contain the same PC/SSN combinations.

Weighted GTT Loadsharing

The Weighted GTT Loadsharing feature allows a PC or PC/SSN combination to be provisioned with weights and threshold values to change the loadsharing method. This weight is relative to the weights of the PCs or PC/SSNs that have the same relative cost (RC group) and determines the relative percentage of traffic sent to the PC or PC/SSN. If the total available weight of the PCs or PC/SSNs in the RC group falls below the threshold, that RC group is not used and the next lowest RC group is used for traffic loadsharing.

SEAS Over IP

All database commands associated with the SEAS Over IP feature can be entered after the SEAS Over IP feature is enabled.

SCCP Loop Detection

The SCCP Loop Detection feature allows sets of point codes that form a routing loop in the network to be specified. These sets are linked with GTT sets and are checked during intermediate and final GTT traffic routing. If a loop exists, either the system can simply be notified or the traffic can be discarded. The SCCP Loop Detection feature requires the GTT feature and is supported on Service Module cards.

Multiple Linksets to a Single Adjacent PC (MLS)

The MLS feature allows multiple linksets to be established to a single adjacent destination point code.

Voice Mail Router (V-Flex)

The V-Flex feature allows calls to be routed to a specific voice mail server based on subscriber and call context data.

Proxy Point Code Capacity

The Proxy Point Code feature allows the EAGLE to assume the point codes of other nodes. The total numbers of proxy point codes that can be provisioned in the system for each quantity are:

- 893-0187-01—10
- 893-0187-02—20
- 893-0187-03—30
- 893-0187-04—40
- 893-0187-05—50
- 893-0187-06—60
- 893-0187-07—70
- 893-0187-08—80
- 893-0187-09—90
- 893-0187-10—100

E5-SM4G and E5-SM8G-B Throughput Capacity

The E5-SM4G and E5-SM8G-B Throughput Capacity feature is a quantity feature that is used to increase the SCCP traffic processing capacity of an E5-SM4G or E5-SM8G-B card.

- 893-0191-01—5000 TPS
- 893-0191-02—6800 TPS
- 893-0191-03—10,000 TPS
- 893-0191-04—13,600 TPS

Table 4-22 displays the TPS capacities for each E5-SM4G Throughput Capacity Quantity

Table 4-22 TPS Capacities

Feature Quantity Part Number	Maximum TPS Capacity per Card	Maximum System TPS Capacity*
893-0191-01	3125 (if one or more EPAP-based features are enabled)	75,000 TPS with one or more EPAP-based features and 24+1 cards 96,875 TPS with one or more EPAP-based features and 31+1 cards
	5000 (if no EPAP-based features are enabled)	155,000 TPS (if one or more GTT-based features is turned on) and 31+1 cards 40,000 TPS (if one or more ELAP-based features is enabled) with 8+1 cards 85,000 TPS (if one or more ELAP-based features is enabled) with 17+1 cards
893-0191-02	6800	210,800 TPS with or without EPAP-based features and 31+1 cards 163,200 TPS with one or more EPAP-based features and 24+1 cards 54,400 TPS with ELAP and 8+1 cards 115,600 TPS with ELAP and 17+1 cards
893-0191-03**	10,000	310,000 TPS with or without EPAP-based features and 31+1 cards 240,000 TPS with one or more EPAP-related features and 24+1 cards 80,000 TPS with ELAP and 8+1 cards 170,000 TPS with ELAP and 17+1 cards

Table 4-22 (Cont.) TPS Capacities

Feature Quantity Part Number	Maximum TPS Capacity per Card	Maximum System TPS Capacity*
893-0191-04** ***	13,600	421,600 TPS with or without EPAP-based features and 31+1 cards 326,400 TPS with one or more EPAP-related features and 24+1 cards 108,800 TPS with ELAP and 8+1 cards 231,200 TPS with ELAP and 17+1 cards

*32 cards implies an N+1 configuration, so 31 cards are used for calculating actual TPS capacity.

** Requires E5-SM8G-B

*** Requires B cards (E5-E1T1-B is recommended) or SLIC cards throughout a node.

HIPR2

The HIPR2 High Rate Mode feature (Part Number 893-0201-01) must be enabled before the EAGLE can use the entire channel for data and provide a throughput rate of 2.5Gbps. If this feature is not enabled, then the EAGLE provides an effective inter-shelf throughput rate of 1Gbps.

Advanced GT Modification (AMGTT)

There are three AMGTT features:

- Part number 893-0218-01: Advanced Global Title Modification (AMGTT). Allows non-MGTT customers to enable CdPA and CgPA functions after upgrade.
- Part number 893-0218-02: Advanced Global Title Modification, Called Party Only (AMGTT CdPA Only). Allows existing MGTT customers to continue using CdPA modification functions after upgrade. Does not allow any CgPA modification capabilities. The AMGTT CdPA Only feature cannot be enabled by this command. It is automatically enabled upon upgrading from the source release to EAGLE release 38.0 if the MGTT feature was turned on prior to the upgrade.
- Part number 893-0218-03: Advanced Global Title Modification, Calling Party Upgrade (AMGTT CgPA Upgrade). Allows existing MGTT customers to upgrade to AMGTT after upgrade to EAGLE release 38.0. Requires the AMGTT CdPA Only feature to be enabled, and allows full AMGTT CdPA and CgPA modification.

Prepaid IDP Query Relay

The IDPRCDPN(X) NPP Service must be turned on before the Prepaid IDP Query Relay feature can be turned on. The IDPRCGPN NPP service must be turned on to process Calling Party Numbers. The IDPRCGPN Service is reached from the IDPRCDPN Service. The following warning message appears while enabling the Prepaid IDP Query Relay feature:

 **Caution:**

Any of the IDPRCDPN(X) NPP services must be ON before turning ON the IDPR feature.

MO SMS IS41-to-GSM Migration

The MO SMS IS41-to-GSM Migration feature addresses modifications to the MO-based IS41 SMS NP feature (893-0194-01) required to meet certain IS41-to-GSM Migration call flows. This feature also allows the IS412GSM Migration Prefix to be used as a prefix instead of the RTDB RN/SP when an SMS is destined for a GSM-migrated subscriber.

SLS Bit Rotation by Incoming Linkset (ISLSBR)

The ISLSBR feature allows SLS Bit rotation to occur on an incoming linkset. This feature provides the ability to configure distribution in an ANSI or ITU network.

Eagle Additional Subscriber Data

Prepaid IDP Query Relay and TIF framework features support ASD data, which can be associated with individual subscribers and ranges. IDPR and TIF ASD/GRN features address the addition of ASD fields into the EAGLE. The ASD feature allows generic data to be associated with DN and DN Block subscriber records.

Prepaid SMS Intercept Ph1

The MOSMSGCDPN and MOSMSGCGPN services must be provisioned before the MO SMS Prepaid Check feature is turned on for "Prepaid SMS Intercept Ph1" to be functional. The following warning message appears while enabling the MO SMS Prepaid Check feature:

 **Caution:**

MOSMSGCDPN or/and MOSMSGCGPN NPP Services must be turned on for the feature to be functional.

MO-based IS41 SMS NP and MO SMS IS41-to-GSM Migration

The MOSMSICDPN NPP service must be provisioned before the MO-based IS41 SMS NP or the MO SMS IS41-to-GSM Migration feature is turned on for the feature to be functional. The following warning message appears while enabling these features:

 **Caution:**

MOSMSICDPN NPP Services must be turned on for the feature to be functional.

Portability Check for MO SMS

The MOSMSGCGPN NPP service must be enabled before the Portability Check for MO SMS feature is turned on for the feature to be functional. The following warning message appears while enabling the feature:

▲ Caution:

MOSMSGCGPN NPP Services must be turned on for the feature to be functional.

MO-based GSM SMS NP

The MOSMSGCDPN NPP service must be provisioned before the MO-based GSM SMS NP feature is turned on for the feature to be functional. The following warning message appears while enabling the feature:

▲ Caution:

MOSMSGCDPN NPP Services must be turned on for the feature to be functional.

GTT Load Sharing With Alternate Routing Indicator

The GTT Load Sharing with Alternate Routing Indicator (GTT LS ARI) feature allows loadsharing relationships to be established between the MAP and MRN table in that the MAP and MRN sets allow provisioning of MRN and MAP sets, respectively, as the Alternate Mate RI if the point codes in the MAP or MRN table are unavailable.

ST-HSL-A SLK Capacity

The ST-HSL-A feature allows unchannelized T1 links to be provisioned. The total number of unchannelized signaling links that can be assigned to E5-E1T1-B cards in the system with each ST-HSL-A SLK Capacity quantity feature access key is enabled are:

- 893-0273-01—4
- 893-0273-02—8
- 893-0273-03—16
- 893-0273-04—24
- 893-0273-05—32
- 893-0273-06—40
- 893-0273-07—48
- 893-0273-08—56
- 893-0273-09—64
- 893-0273-10—72
- 893-0273-11—80
- 893-0273-12—88
- 893-0273-13—96
- 893-0273-14—104
- 893-0273-15—112

- 893-0273-16—120
- 893-0273-07—128
- 893-0273-18—136
- 893-0273-19—144
- 893-0273-20—152
- 893-0273-21—160
- 893-0273-22—168
- 893-0273-23—176
- 893-0273-24—180

MO SMS ASD, MO SMS GRN

The MOSMSGCGPN, MOSMSGCDPN, MOSMSICGPN, or MOSMSICDPN NPP service must be provisioned before the MO SMS ASD or MO SMS GRN feature is turned on for the feature to be functional. The following warning message appears while enabling the feature:

Caution:

MOSMSGCDPN, MOSMSICDPN, MOSMSGCGPN or/and MOSMSICGPN NPP Services must be turned on for the feature to be functional.

Large MSU Support for IP Signaling

The Large MSU Support for IP Signaling feature supports MSUs having a Service Information Field (SIF) up to 4095 bytes over M2PA and M3UA Protocols with Service Indicator (SI) values ranging from 6 to 15. The values for the Service Indicators are:

- 6, 7—Data
- 9—Broadband ISDN
- 10—Satellite ISDN
- 13—BICC
- 14—H.248
- 8, 11, 12, 15—Spare

EPAP based features

If Global Title Translation (GTT) is on and more than 25 SCCP cards are provisioned, then when the first EPAP based feature is enabled, a warning is issued to state that the EAGLE must be connected to an EPAP T1200 or higher. Subsequent commands for enabling EPAP based features are accepted without any warning.

XUDT UDT Conversion feature

The XUDT UDT Conversion feature allows the following SCCP message conversions:

- UDT(S) messages to XUDT(S) messages
- Non-segmented XUDT(S) messages to UDT(S) messages
- Segmented XUDT(S) messages to UDT(S) messages

MTT 3354 deleted for PR 165345 MB

3 Links per Card feature

The 3 Links per Card feature is a quantity feature that supports a third link (A1) on an E5-ATM-B card. Each quantity FAK supports the 3 Links per card feature in an increment of 5 cards, up to a maximum of 385 cards. Part numbers range from 893-0391-01 (supports the feature on 5 cards) to 893-0391-77 (supports the feature on 385 cards).

Point Code and CIC Translation (PCT)

The PCT feature is a quantity feature that allows the EAGLE to change the destination point code (DPC) and originating point code (OPC) of an MTP-routed MSU to previously configured values. The quantity is used to define the maximum number of allowed translations:

- 893-0372-01—25 translations
- 893-0372-02—50 translations
- 893-0372-03—75 translations
- 893-0372-04—100 translations
- 893-0372-05—150 translations
- 893-0372-06—200 translations
- 893-0372-07—250 translations
- 893-0372-08—1000 translations

Integrated GLS

The E5-OAM Integrated GLS (Integrated GLS) feature allows the E5-MASP cards to support the function of GLS cards for Gateway Screening. If the Integrated GLS feature is turned on, then the E5-MASP accepts the bind requests for the GWS screenset from network cards, binds the requested screenset, and downloads the screenset to the requested network cards.

If the Integrated GLS feature is turned OFF, then the E5-MASP cards do not service the requests for binding screensets and the network cards continue to send binding requests for screen sets to the active GLS cards.

E5-ENET-B IPSP High Throughput

The E5-ENET-B IPSP High Throughput feature allows the E5-ENET-B card running the IPSP application to have a maximum capacity of 9500 TPS. If the feature is not turned on, then the E5-ENET-B card running the IPSP application has a maximum capacity of 6500 TPS.

EPAP Data Split

The EPAP Data Split feature allows EPAP data to be split into DN and IMSI subsets. Each subset is loaded on a specific set of E5-SM4G or E5-SM8G-B cards. The maximum capacity for each data subset (120 million) can be loaded on the associated set of cards. Therefore, splitting the data allows a system-wide EPAP data capacity of 240 million.

Dual ExAP Config

Warning: Enabling the Dual ExAP Config feature will disable functions of ISUP NP with EPAP and TINP.

Prior to enabling the Dual ExAP Config feature, upgrade the ISUP NP with EPAP and TINP features to TIF if one or both of those features are present in the system.

The Dual ExAP Config feature is allowed to be turned on regardless of whether the ISUP NP with EPAP or TINP features are already turned on.

If the Dual ExAP Config is turned on while ISUP NP with EPAP and TINP are not upgraded to TIF, these two features will stop working.

SIP Number Portability

The SIP-based Number Portability feature allows the E5-SM8G-B card running the SIPHC application to support SIP interfaces on EAGLE and also provide SIP based Number Portability using EAGLE's RTDB/RIDB.

1M System TPS

The 1M System TPS feature allows provisioning 1,000,000 TPS on SIGTRAN and ATM cards collectively. If the feature is not turned on, then the system will support 750,000 TPS or 500,000 TPS only based on the state of HIPR2 High Rate Mode feature. If the HIPR2 High Rate Mode feature is ON and the 1M System TPS is OFF, the system will support 750,000 TPS. If the HIPR2 High Rate Mode feature is OFF and the 1M System TPS is OFF, the system will support 500,000 TPS. HIPR2 High Rate Mode feature is a mandatory feature for turning ON the 1M System TPS feature.

S13/S13' Interface for EIR

The Diameter S13/S13' Interface for EIR feature allows the E5-SM8G-B card running the DEIRHC application to support Diameter S13/S13' interface on EAGLE and also provide EIR functionality on 3G and LTE networks.

Output

```
enable-ctrl-feat:partnum=893xxxxxxx
```

```
tekelecstp 08-12-04 13:55:19 EST EAGLE 46.3.0
enable-ctrl-feat:partnum=893xxxxxxx
Command entered at terminal #4.
ENABLE-CTRL-FEAT: MASP A - COMPLTD
;
```

This example shows the output when more than 25 SCCP cards are provisioned and first EPAP-based feature is enabled:

This warning is issued when the first and only the first EPAP based feature is enabled.

```
enable-ctrl-feat:partnum=89xxxxxxx
```

```
tekelecstp 10-02-26 15:40:56 EST EAGLE 46.3.0
enable-ctrl-feat:partnum=893xxxxxxx
Command entered at terminal #4.
```

```
Warning: The Eagle must be connected to an EPAP T1200 or higher
```

```
ENABLE-CTRL-FEAT: MASP A - COMPLTD  
;
```

Related Topics

- [chg-ctrl-feat](#)
- [rtrv-ctrl-feat](#)

4.1.279 ent-acg-mic

Use this command to assign Automatic Call Gapping (ACG) controls to certain queries. The control can apply to all queries or to specific query services and called party digits. If the EAGLE LNP query service receives a query to which a control applies, then the EAGLE sends an ACG component, encoded as configured, with the response.

Parameters

drtn (mandatory)

Duration index. The amount of time that the ACG is in effect. This number is mapped to a time value at the LNP node.

Range:

1 - 13

Default:

The current value

aintvl (optional)

AIN interval index

Range:

1 - 15

Default:

The current value

dgts (optional)

Digits

Range:

000 - 999, 000000 - 9999999999

Specify 3 digits or 6-10 digits.

intvl (optional)

IN Interval index. The amount of time between ACGs. This number is mapped to a time value for the LNP node.

Range:

0 - 15

Default:

Current value

nd (optional)

Number of digits

Range:

3, 6 - 10

Default:

The current value

serv (optional)

Query service

Range:*ain**in***type (optional)**

Type of control

Range:*all**sd***Default:***sd***Example**

```
ent-acg-mic:type=all:nd=6:drtn=6:intvl=2:aintvl=7
```

```
ent-acg-mic:serv=ain:dgts=9194602132:drtn=13:aintvl=1
```

```
ent-acg-mic:type=sd:serv=in:dgts=919:drtn=8:intvl=3
```

Dependencies

If the `type=all` parameter is specified, then the `nd`, `intvl`, and `aintvl` parameters must be specified.

3056 E3056 Cmd Rej: Parameters ND, INTVL, and AINTVL are required

If the `type=all` parameter is specified, the optional parameters `serv` and `dgts` cannot be specified.

3057 E3057 Cmd Rej: Parameters SERV and DGTS are not allowed for TYPE = ALL

If the `type=sd` parameter is specified, the optional parameters `serv` and `dgts` must be specified.

3058 E3058 Cmd Rej: Parameters SERV and DGTS are required

If the `type=sd` parameter is specified, then the `nd` parameter cannot be specified.

3059 E3059 Cmd Rej: Parameter ND is not allowed

If the `serv=in` parameter is specified, the `aintvl` parameter cannot be specified.

3063 E3063 Cmd Rej: Parameter AINTVL is not allowed

If the `serv=ain` parameter is specified, the optional parameter `intvl` cannot be specified.

3061 E3061 Cmd Rej: Parameter INTVL is not allowed

If the `serv=in` parameter is specified, the optional parameter `intvl` must be specified.

3062 E3062 Cmd Rej: Parameter INTVL is required

If the `serv=ain` parameter is specified, the optional parameter `aintvl` must be specified.

3060 E3060 Cmd Rej: Parameter AINTVL is required

The `dgts` parameter value must be specified as 3 or 6–10 digits.

3064 E3064 Cmd Rej: DGTS parameter must be 3 or 6-10 digits

A valid value must be specified for the `nd` parameter.

3065 E3065 Cmd Rej: ND parameter must be 3 or 6-10

The LNP feature must be turned on before this command can be entered.

3009 E3009 Cmd Rej: LNP feature must be ON

If the `type=all` parameter is specified, then an MIC with the `type=all` parameter cannot already exist.

3066 E3066 Cmd Rej: A MIC of TYPE=ALL already exists

If the `type=sd` parameter is specified, a MIC with the same service and digits must not already exist.

3067 E3067 Cmd Rej: A MIC with the same service and digits already exists

The ACG MIC table must be accessible.

3055 E3055 Cmd Rej: Failed reading ACG MIC table

A maximum of 256 `type=sd` MICs are allowed.

3068 E3068 Cmd Rej: Table full - a maximum of 256 TYPE=SD MICs are allowed

Notes

None

Output

```
ent-acg-mic:type=all:nd=6:drtn=6:intvl=2:aintvl=7
```

```
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
ACG MIC table is (11 of 256) 4% full of type SD
ENT-ACG-MIC: MASP A - COMPLTD
```

;

Related Topics

- [chg-acg-mic](#)
- [dlt-acg-mic](#)
- [rept-stat-lnp](#)
- [rtrv-acg-mic](#)

4.1.280 ent-acg-noc

Use this command to enter the values for the automatic call gapping (ACG) controls that you want to send when you reach the specified node overload level. The definition is comprised of the threshold LNP query rates for node overload levels and the values for the ACG to be sent when at the level. If a level is not defined, it is not used. Level 10 is predefined.

Parameters**drtn (mandatory)**

Duration index. The amount of time that the ACG is in effect. This number is mapped to a time value at the LNP node.

Range:

1 - 13

Default:

The current value

intvl (mandatory)

Interval index. The amount of time between ACGs. This number is mapped to a time value for the LNP node.

Range:

0 - 15

Default:

Current value

lvl (mandatory)

Overload level.

Range:

1 - 9

qr (mandatory)

Query rate. The number of LNP queries, which define a particular overload level, in a 30-second period.

Range:

1 - 2147483647

and (optional)

AIN number of digits. The number of digits in the global title address of an AIN query.

Range:**6****10****Default:****6****ind (optional)**

IN number of digits. The number of digits in the global title address of an IN query.

Range:**6****10****Default:****6****Example**

```
ent-acg-noc:lvl=3:qr=300000:and=10:ind=6:drtn=6:intvl=3
```

Dependencies

The ACG NOC table must be accessible.

3053 E3053 Cmd Rej: Failed reading ACG NOC table

The LNP feature must be turned on before this command can be entered.

3009 E3009 Cmd Rej: LNP feature must be ON

Either 6 or 10 must be specified for the `and` parameter.

3074 E3074 Cmd Rej: AND parameter must be 6 or 10

The specified overload level must not already be defined.

3076 E3076 Cmd Rej: The specified overload level has already been defined

Either 6 or 10 must be specified for the `ind` parameter.

3075 E3075 Cmd Rej: IND parameter must be 6 or 10

Notes

None

Output

```
ent-acg-noc:lvl=3:qr=300000:and=10:ind=6:drtn=6:intvl=3
```

```
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
ENT-ACG-NOC: MASP A - COMPLTD
;
```

Related Topics

- [chg-acg-noc](#)
- [dlt-acg-noc](#)
- [rept-stat-lnp](#)
- [rtrv-acg-noc](#)

4.1.281 ent-appl-rtkey

Use this command to configure static entries in the Routing Key table, which associates a routing key with a socket name.

There are three types of routing keys, as follows:

- DPC, SI, SSN routing keys, which are used to route SCCP messages
- DPC, SI routing keys, which are used to route non-SCCP and non-ISUP messages
- DPC, SI, CIC routing keys, which are used to route ISUP messages

Parameters**Note:**

See [Point Code Formats and Conversion](#) in Appendix A for a detailed description of point code formats, rules for specification, and examples.

asname (mandatory)

Application Server (AS) name assigned to this routing key.

Range:

ayyyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter

cice (optional)

The end range of circuit identification codes assigned to the routing key.

Range:

0 - 4294967295

See [Table A-4](#) for valid CIC values for specified SI and MSU types.

cics (optional)

The start range of circuit identification codes assigned to the routing key.

Range:

0 - 4294967295

See [Table A-4](#) for valid CIC values for specified SI and MSU types.

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:*dPCA***Range:**

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

dpc/dPCA/dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:*s-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**dpcn24 (optional)**

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255
ssa—000–255
sp—000–255

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

opc (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym:

opca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

opc/opca/opci/opcn/opcn24/opcn16 (optional)

Originating point code. This parameter is valid and required if a value of 4, 5, or 13 is specified for the *si* parameter and the *type=full* parameter is specified.

opci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

opcn (optional)

New ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

opcn24 (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

opcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

rcontext (optional)

Routing context. The new routing context for a routing key. The routing context uniquely identifies the routing key.

Routing context is mandatory for routing keys associated with SUA Application Servers. Routing context is optional for routing keys associated with M3UA Application Servers.

Range:

0 - 4294967295

si (optional)

Service indicator.

Range:

0-15 or equivalent text values

Number =Text—Description0=*snm*—Signaling network management messages1=*regtest*—Signaling network testing and maintenance regular2=*spltes*—Signaling network testing and maintenance special3=*sccp*—SCCP4=*tup*—Telephone user part5=*isup*—ISDN user part13=*qbicc***ssn (optional)**

Subsystem number.

Range:

0 - 255

type (optional)

The type of routing key.

Range:*full**partial**default***Default:***full***Example**

ent-appl-rtkey:asname=suaas1:dpc=8-8-8:si=3:ssn=5:rcontext=100

ent-appl-
rtkey:asname=suaas2:dpc=8-8-8:si=3:type=partial:rcontext=101

ent-appl-rtkey:asname=suaas3:dpc=8-8-8:type=partial:rcontext=102

ent-appl-rtkey:asname=suaas4:si= 3:type=partial:rcontext=103

ent-appl-rtkey:asname=suaas5:type=default:rcontext=104

ent-appl-
rtkey:asname=m3uaas1:dpc=8-8-9:si=5:opc=3-3-3:cics=1:cice=100:rconte
xt=200ent-appl-
rtkey:asname=m3uaas2:dpc=8-8-9:si=5:opc=3-3-3:type=partial:rcontext=
201ent-appl-
rtkey:asname=m3uaas3:dpc=8-8-9:si=5:type=partial:rcontext=202

ent-appl-rtkey:asname=m3uaas4:dpc=8-8-9:type=partial:rcontext=203

```

ent-appl-rtkey:asname=m3uaas5:si= 5:type=partial:rcontext=204
ent-appl-rtkey:asname=m3uaas6:type=default:rcontext=205
ent-appl-
rtkey:dpci=s-3-11-1:si=5:opci=s-4-11-1:cics=1:cice=1000:asname=
asitu
ent-appl-rtkey:dpc=1-1-1:si=3:asname=as1:ssn=255
ent-appl-
rtkey:dpci=3-11-1:si=3:opci=4-11-1:cics=1:cice=1000:asname=asit
u:rcontext=7
ent-appl-
rtkey:dpcn16=121-10-15:si=3:opcn16=121-10-16:asname=asitu

```

Dependencies

The `srkq` parameter (see the `chg-sg-opts` command) limits the maximum number of static routing keys that can be provisioned using this command. For SS7IPGW and IPGWI applications running on E5-ENET-B cards, there is a limit of 2500 routing keys in the system.

3842 E3842 Cmd Rej: Entries in static route key table cannot exceed SRKQ

The `ssn` parameter is valid only when the `si=3` (or `sccp`) parameter is specified.

3757 E3757 Cmd Rej: SSN is not allowed unless SI is 3

The value specified for the `cics` parameter must be less than or equal to the value specified for the `cice` parameter.

3783 E3783 Cmd Rej: CICS must be less than or equal CICE

The ISUP routing-over-IP feature must be turned on before a DPC/SI/CIC routing key to route ISUP messages can be specified.

3785 E3785 Cmd Rej: IPISUP Feature must be ON

A circuit identification code range (`cics - cice`) cannot be specified that overlaps an existing routing key.

3786 E3786 Cmd Rej: CIC Range overlaps an existing routing key

When a value of 4, 5, or 13 (*tup*, *isup*, or *qbicc*) is specified for the `si` parameter, the `opc`, `cics`, and `cice` parameters are required. The `opc`, `cics`, and `cice` parameters can be specified only if a value of 4, 5, or 13 is specified for the `si` parameter. See [Table A-4](#) for valid `cic` and `si` values for MSU types.

3788 E3788 Cmd Rej: OPC, CICS, CICE are required if SI is 4, 5 or 13

Partial point codes are not allowed; no asterisks can be specified in the routing key in the command.

2166 E2166 Cmd Rej: Partial point codes are not allowed

Mixed point code types are not allowed; the types for the `opc` and `dpc` parameters must match.

N/A N/A

A DPC/SI routing key must be specified when the DPC is ANSI and the `si=4` parameter is specified (TUP is used only in an ITU network).

3874 E3874 Cmd Rej: TUP must use DPC/SI route key if DPC is ANSI

When the `type=full` parameter is specified, the `dpc` and `si` parameters must also be specified.

3999 E3999 Cmd Rej: When `type=full`, DPC and SI must be specified

The group codes for the `dpc` and `opc` parameter values must match when both parameters are entered in the command.

4001 E4001 Cmd Rej: Group Code of DPCN and OPCN must match

The `rcontext` parameter must be specified for routing keys that are associated with SUA Application Servers.

4161 E4161 Cmd Rej: Routing Context is required for SUA

The specified `rcontext` parameter value must not already exist in the database.

N/A N/A

If specified, the service indicator parameter must be `si=3` for routing keys that are associated with SUA Application Servers.

4262 E4262 Cmd Rej: SI value must be 3 for SUA

An AS cannot be simultaneously assigned to a routing key with routing contexts and routing keys without routing context.

4300 E4300 Cmd Rej: Conns cannot exist in rkeys with and without rcontext

To assign an M3UA or SUA association to multiple routing keys with routing context, the M3UA/SUA association must be assigned to more than one AS and each AS must be assigned to a routing key with routing context.

N/A N/A

The AS name and parameters specified for a routing key must use an address format that is valid for the adapter type used by the ASP associations assigned to the AS.

N/A N/A

If the `type=default` parameter is specified, then the `rcontext` and `asname` parameters are the only optional parameters that can be specified.

4067 E4067 Cmd Rej: Invalid combination of parameters for a default routing key

The following four types of partial routing keys are supported:

- DPC/SI/OPC (ignore CIC) can be used as a partial match key for CIC- based traffic.
- DPC/SI (ignore all other fields) can be used as a partial match key for CIC- based traffic or SCCP traffic.
- DPC only (ignore all other fields) can be used as a partial match for any type of traffic.
- SI only (ignore all other fields) can be used as a partial match for any type of traffic.

3955 E3955 Cmd Rej: Invalid combination of parameters for a partial routing key

The DPC entered cannot be an APC or SAPC for an IPGWx linkset. Routing keys cannot be provisioned for the fake adjacent node.

4597 E4597 Cmd Rej: RTKEY DPC cannot be IPGWx APC or SAPC

AS can be associated to only one routing key that contains a routing context value.

4272 E4272 Max number of rcontexts per AS exceeded

The J7 support feature must be enabled before the `dpcn16/opcn16` parameters can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

Mixed point code types are not allowed, the types for the `opc` and `dpc` must match.

2501 E2501 Cmd Rej: Mixed point code types are not allowed.

The routing context value should be unique.

4139 E4139 Cmd Rej: Routing Context already equipped

The `opc`, `cics`, and `cice` parameters can be specified with the `si` parameter only if the `si` parameter has a value of 4, 5, or 13 (or `tup`, `isup`, or `qbicc`).

3789 E3789 Cmd Rej: OPC, CICS, CICE are not allowed unless SI is 4, 5 or 13

Notes

The Routing Key table associates a routing key with a socket name or an Application Server (AS).

The routing key can be associated with up to 16 socket names or with 1 AS.

The OPC and DPC cannot specify a cluster route.

Group codes are required for ITU-N point codes and spare point codes (DPCN/OPCN) when the ITU Duplicate Point Code feature (ITUDUPPC) is turned on, and not allowed when the feature is off.

Routing context is a routing key parameter that uniquely identifies routing keys. Routing context is mandatory for routing keys associated with SUA Application Servers and optional for routing keys associated with M3UA Application Servers. An AS cannot be simultaneously assigned to routing keys with routing contexts and routing keys without routing contexts.

An AS cannot be simultaneously assigned to a routing key with routing contexts and routing keys without routing contexts.

An AS can be associated with multiple routing keys that do not contain routing context. An AS can be associated with only 1 routing key with routing context. To assign an M3UA or SUA association to multiple routing keys with routing context, the M3UA/SUA association must be assigned to more than one AS and each AS must be assigned to a routing key with routing context.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

The `opc`, `cics`, and `cice` parameters can be specified with the `si` parameter only if the `si` parameter has a value of 4, 5, or 13 (or `tup`, `isup`, or `qbicc`).

3789 E3789 Cmd Rej: OPC, CICS, CICE are not allowed unless SI is 4, 5 or 13.

Output

```
ent-appl-rtkey:dpc=2-2-2:asname=assoc1:type=partial
```

```
rlghncxa03w 08-04-17 15:35:05 EST EAGLE 38.0.0
ENT-APPL-RTKEY: MASP A - COMPLTD
;
```

Related Topics

- [dlt-appl-rtkey](#)
- [rtrv-appl-rtkey](#)

4.1.282 ent-as

Use this command to create an Application Server (AS) as a logical entity to serve a specific routing key. This command enters a new AS into the AS table and assigns an M3UA or SUA SCTP association to it, or assigns an M3UA or SUA SCTP association to an existing AS.

Parameters

aname (mandatory)

Name of the M3UA or SUA SCTP association.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

asname (mandatory)

Name of the Application Server (AS).

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

Example

```
ent-as:asname=asx:aname=asxp1
```

Dependencies

The specified `aname` must exist in the IPAPSOCK table.

N/A N/A

The adapter layer for each association assigned to the AS must be defined.

N/A N/A

SUA Application Servers must have routing keys with assigned routing contexts.

N/A N/A

The service indicator must be `si=3` for routing keys that are associated with SUA Application Servers.

4262 E4262 Cmd Rej: SI value must be 3 for SUA

The adapter layer must be the same for all M3UA/SUA associations assigned to the AS.

4083 E4083 Cmd Rej: Connection adapter type does not match AS adapter type

The value specified for the `aname` parameter cannot refer to an IPLIMx or IPSPG association.

3447 E3447 Cmd Rej: IPLIMx and IPSPG connections cannot be resident in AS

The `asname=default` parameter cannot be specified.

3420 E3420 Cmd Rej: 'Default' is an invalid ASNAME

An association can be assigned to a maximum of 50 application servers.

4374 E4374 Cmd Rej: Association in maximum allowed application servers

Notes

The DCM card has 16 MB of memory. Socket/association limits are based on card memory as is the ratio of associations to sockets. This ratio, known as the trade ratio, defines the number of sockets that are equivalent to one association with respect to memory consumption.

By default the AS recovery timer value is set to 200 ms when an AS is entered. This value can be changed at any time using the `chg-as` command. The new timer value will be used the next time the AS enters the AS-Pending state.

The trade ratio states the quantity of associations to sockets that may be provisioned on a certain card, as follows:

Trade Ratio = a:s

Where:

a=association : s=socket

The maximum sockets/associations per DCM card are:

- Socket to Association Ratio—8:1
- Max Sockets—50
- Max Associations—4

Output

```
ent-as:asame=asx:aname=asxp1
```

```
rlghncxa03w 05-05-17 15:35:05 EST EAGLE 34.0.0  
ENT-AS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-as](#)
- [dlt-as](#)

Range:
1024 - 65535

Default:
0

Example

```
ent-
assoc:aname=assoc1:lhost=gw105.nc.tekelec.com:lport=1030 :rhost=gw10
0.nc.tekelec.com:rport=1030:adapter=m3ua
```

```
ent-
assoc:aname=assoc1:lhost=gw105.nc.tekelec.com:lport=1030 :rhost=gw10
0.nc.tekelec.com:rport=1030:adapter=diam
```

Dependencies

The value specified for the `aname` parameter must already exist in the IP Socket/Association (IPAPSOCK) table.

N/A N/A

The hostnames specified in the `lhost` and `alhost` parameters must refer to different IP addresses.

3618 E3618 Cmd Rej: LHOST and ALHOST must refer to different IP addresses

The IP host names specified in the `lhost` and `alhost` parameters must exist in the IP Host table and must be provisioned as local to this EAGLE.

N/A N/A

The hostnames specified in the `lhost` and `alhost` parameters must refer to IP addresses on the same IP card.

3619 E3619 Cmd Rej: LHOST and ALHOST must refer to IP address on the same card

If the `m2patset` parameter is specified, then the `adapter=m2pa` parameter must be specified.

3469 E3469 Cmd Rej: M2PATSET requires M2PA adapter type

If the card is running an IPLIMI application, then an association with `adapter=sua` or `m3ua` cannot be assigned as a value for the `lhost` parameter. If the card is running the DEIRHC GPL, then the adapter type must be DIAM.

4077 E4077 Cmd Rej: Parameters incompatible with adapter type

Association connection parameters (`lhost`, `rhost`, `lport`, `rport`) must be unique.

4091 E4091 Cmd Rej: Association connection parameters must be unique

The card location for the card associated with the `lhost` and `alhost` must exist in the IP Link table.

N/A N/A

The allowed maximum is 1 association per signaling link on IPLIMx cards.

4092 E4092 Cmd Rej: Too many associations per SLK

There is a maximum of 50 connections (association-to-AS assignments + sockets) per Local Host on IPGWx cards.

N/A N/A

A maximum of 4000 connections (association-to-AS assignments + sockets) are allowed per system.

N/A N/A

If the value specified for the `lhost` parameter refers to an IPGW card or a DEIR card running the DEIRHC GPL, then the `link` parameter cannot be specified.

The value specified for the `link` parameter must be valid for the card and application type:

- Link A—card running the SS7IPGW or IPGWI application
- Links A - A7 and B - B7—card running the IPLIMI application

3860 E3860 Cmd Rej: Link not valid for card or application type

A maximum of 32 associations can be provisioned on an IPGW card.

4093 E4093 Cmd Rej: Too many associations per card

The value specified for the `host` parameter must begin with an alphabetic character and can contain a..z, A..Z, 0..9, - (hyphen), or . (period). If the host name contains a hyphen, then the host name must be enclosed within quotation marks.

3731 E3731 Cmd Rej: Invalid Hostname

LHOST with REALM and RHOST with REALM are mandatory parameters for an association with adapter type DIAM.

2805 E2805 Cmd Rej: Host and Realm required for diameter connection

RHOST is a mandatory parameter for a DIAM association.

2731 E2731 Cmd Rej: RHOST required for DIAM association

If the LHOST is defined on Port A its ALHOST must be on PORT B.

If the LHOST is defined on Port B its ALHOST must be on PORT A.

If the LHOST is defined on Port C, its ALHOST must be PORT D.

If the LHOST is defined on Port D, its ALHOST must be PORT C.

3627 E3627 Cmd Rej: Invalid combination of LHOST and ALHOST interfaces

RHOST must be present in the IPHOST table.

3739 E3739 Cmd Rej: No Entry found

Remote IP address (RHOST) must not exist in the IPLINK table.

2685 E2685 Cmd Rej: Remote IP address exists in the IPLINK table

The IP Socket/Association (IPAPSOCK) table cannot contain more than 4000 entries.

3748 E3748 Cmd Rej: Socket Table full

The requested buffer size increase cannot exceed the available buffer space on the card. Use the `rtrv-assoc` command with the `aname`, `lhost`, or `alhost` parameter to display used and total buffer space on the card.

4602 E4602 Cmd Rej: Requested Assoc Buffer Space Exceeds Available Buffer Space

IP address associated with the LHOST and ALHOST should be of the same IP version.

3258 E3258 Cmd Rej: LHOST and ALHOST must be of the same IP version.

IP address associated with the LHOST and RHOST should be of the same IP version.

3264 E3264 Cmd Rej: LHOST and RHOST must be of the same IP version.

Association name must be unique

4096 E4096 Cmd Rej: Association name already exists

The `alhost` or `lhost` should be present in IP link table

3095 E3095 Cmd Rej: LHOST/ALHOST location not found

Notes

The IPAPSOCK table is used to associate the Local Host/Local Port to a Remote Host/Remote Port. This fully specifies the connection.

For a diameter association, the IPAPSOCK table is used to associate the Local Host/Local Realm/Local Port to a Remote Host/Remote Realm/Remote Port. This fully specifies the diameter connection.

SCTP associations can be configured as either uni-homed or multi-homed endpoints. Uni-homed endpoints are SCTP associations configured with the `lhost` parameter specified and the `alhost` parameter not specified. In this case, the `lhost` represents an IP address that corresponds to either the A or B or C or D network of the IP application card (see `chg-ip-lnk`). Multi-homed endpoints are SCTP associations configured with both the `lhost` and `alhost` parameters specified. In this case, the `lhost` represents an IP address corresponding to one of the networks (A, B, C or D) of the IP card while the `alhost` represents an IP address corresponding to the other network of the same IP card.

If a valid `lhost` parameter is specified that equates to a valid IP address, the `lhost` maps directly to a card location in the IP Link table, which can then determine the card's application (IPLIMx or SS7IPGWx). If the application is an IPLIMx, two additional validation checks are made:

- The `adapter` parameter value must equal `m3ua` or `m2pa`.
- The `ipliml2` value for the IPLIMx signaling link must be the same as the association `adapter` parameter value.
- The `ipliml2` value for an IPLIMx signaling link cannot be set to `m3ua`.

If the determination of the application running on the card or the signal link cannot be performed when the `ent-assoc` command is executed, the check will be performed by the `chg-assoc` command.

An association with an `adapter` value of `m2pa` cannot be assigned to an SS7IPGW or IPGWl host.

There are fields in the IPAPSOCK table that receive default values even though there are no parameters on this command for changing those fields. If a different value is desired, the

`chg-assoc` command must be used. The `chg-assoc` command can also be used if the hostnames are too long to fit on the command line with other parameters. The fields in question and their default values are:

- `open=no`
- `alw=no`
- `rmode=lin`
- `rmin=120`
- `rmax=800`
- `rtimes=10`
- `cwmin=3000`
- `ver=rfc`
- `istrms=2`
- `ostrms=2`

For the M2PA RFC feature, when the application is IPLIMx and the `adapter=m2pa` parameter is specified, the supported M2PA version is set to M2PA RFC by default.

For the S13/S13' EIR feature, if the E5-SM8G-B card is running the DEIRHC GPL, an adapter other than `diam` cannot be specified.

Output

```
ent-  
assoc:aname=assoc1:lhost=gw105.nc.tekelec.com:lport=1030 :rhost  
=gw100.nc.tekelec.com:rport=1030:adapter=m3ua
```

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0  
ENT-ASSOC: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-assoc](#)
- [dlt-assoc](#)
- [rtv-assoc](#)

4.1.284 ent-card

Use this command to add a card to the database. The card type and application specifies the function assigned to the card.

Parameters

Note:

The phrase "Service Module card" refers to an E5-SM8G-B or SLIC card when any of these cards can be used to provision the VSCCP, DEIRHC, SIPHC, and ENUMHC application. The cards are provisioned with the `type=dsm` or `type=slic` and `appl=deirhc/enumhc/siphc/vsccp` parameters.

app1 (mandatory)

Application. The application for the card.

Range:

xyyyyyy

1 alphabetic character followed by up to 6 alphanumeric characters. Valid applications are:

atmansi—Used by E5-ATM-B cards to support ANSI high-speed ATM signaling links and T1 functions.

atmitu—Used by E5-ATM-B cards to support ITU E1 high-speed ATM signaling links and E1 functions.

ccs7itu—Used by E5-E1T1-B, and SLIC cards for ITU-TSS MTP functions.

deirhc—Used by E5-SM8G-B and SLIC cards to support the S13/S13' EIR feature.

elap - Used by E5-APP-B card to support ELAP/LNP functionality.

enumhc - Used by E5-SM8G-B and SLIC cards to support the ENUM application.

epap - Used by E5-APP-B card to support EPAP/RTDB functionality.

eroute—Used by STC and E5-STC cards for EAGLE 5 Integrated Monitoring Support functions.

gls—Used by E5-TSM cards for downloading gateway screening to LIM and Service Module cards.

imf --- Used by E5-APP-B card to support IMF functionality.

ipgwi—Used by E5-ENET-B cards for IP point-to-multipoint connectivity for ITU point codes.

iplimi—Used by E5-ENET-B cards for IP point-to-point connectivity for ITU point codes.

ips—Used by E5-IPSM and E5-ENET-B cards for the IP User Interface feature.

ipsg—Used by E5-ENET-B, and SLIC cards to support the combined functionality of IPLIMx M2PA and IPGWx M3UA.

lsms - Used by E5-APP-B card to support LSMS/LNP functionality.

mcp—Used by E5-MCPM-B cards for the Measurements Platform feature.

nas - Used by E5-APP-B card to support NAS (storage of LNPDB from LSMS) functionality.

sfapp— Used by SLIC cards to support the SFAPP application.

siphc— Used by E5-SM8G-B and SLIC Cards to support SIP application.

ss7ansi—Used by E5-E1T1-B, and SLIC cards for ANSI MTP functions.

ss7ipgw— Used by E5-ENET-B cards for TCP/IP point-to-multipoint connectivity.

switch - Used by Telco switch to add power consumed by Telco Switch to Frame Power Budget. This is not an application gpl.

vsccp—Used by Service Module cards to support EPAP-based features and LNP features. If no EPAP-based features or LNP features are turned on, and a Service Module card is present, the VSCCP GPL processes GTT traffic.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118, 6201 - 6208, 6211 - 6218, 6301 - 6308, 6311 - 6318

type (mandatory)

The type of hardware being added.

Range:***dcm***

Data Communications Module card (E5-ENET-B card). Applications for this card type are IPLIMI, SS7IPGW, and IPGWI.

dsm

E5-SM8G-B or SLIC card to support EPAP-based features, LNP features, and the GTT feature. The application for this card type is VSCCP. The E5-SM8G-B and SLIC cards also supports the S13/S13' EIR, ENUM, and SIP Number Portability features. The application for the E5-SM8G-B or SLIC card running the S13/S13' EIR, ENUM, or SIP application is DEIRHC, ENUMHC, or SIPHC respectively.

e5appb

E5-APP-B card to support ELAP, EPAP, IMF, LSMS, and NAS applications.

enet

E5-ENET-B card to support the IP Signaling Gateway. The application for this card type is IP SG.

enetb

E5-ENET-B or SLIC card to support the IP Signaling Gateway. The application for this card type is IP SG

ipsm

IP Services Module card (E5-IPSM or E5-ENET-B card) to support the IP User Interface feature. The application for this card type is IPS.

limatm

E5-ATM-B card to support high-speed signaling links. The application for this card type is ATMANSI.

lime1atm

E5-ATM-B card to support high-speed signaling links. The application for this card type is ATMITU.

lime1

E5-E1T1-B, or SLIC card used as an E1 card or an SE-HSL card. Applications for this card type are SS7ANSI and CCS7ITU.

limt1

E5-E1T1-B, or SLIC card used as a T1 card or an SE-HSL card; or E5- E1T1-B card used as an ST-HSL card. Applications for this card type are SS7ANSI or CCS7ITU

mcpm

E5-MCPM-B card used as a Measurement Collection and Polling Module (MCPM) card for the Measurements Platform feature. The application for this card type is MCP.

slic

SLIC card to support Service Module Applications and IP Signaling Gateway. The application for this card type are IPSPG (with or without GTT functionality), VSCCP, DEIRHC, SIPHC, ENUMHC, or SFAPP.

stc

E5-ENET-B or SLIC card used as a Signaling Transport Card (STC or E5-STC) for the EAGLE 5 Integrated Monitoring Support feature. The application for this card type is EROUTE.

telco

TELCO switch to add power consumed by Telco Switch to Frame Power Budget.

tsm

E5-TSM card used for Gateway Screening. The application for this card type is GLS.

data (optional)

The type of OAM/MPS data that can be loaded on an E5-SM8G-B or a SLIC card.

Range:**dn**

only DN related data from EPAP is loaded on the card

elap

ELAP data are loaded on the card

epap

all RTDB data (DN + IMSI) from EPAP are loaded on the card

 **Note:**

The *epap* value cannot be specified when the EPAP Data Split feature is ON.

gtt

only OAM data are loaded on the card. The card will not load any ELAP or EPAP data at all.

imsi

only IMSI related data from EPAP is loaded on the card

nosccp

only OAM data, excluding GTT data is loaded on the card. No GTT or MPS data will be downloaded on the card. This value (=nosccp) of the `data` parameter is valid only for IPSP card(s) with the `type=slic`.

**Note:**

The `nosccp` value signifies the absence of SCCP functionality on the IPSP card, and that it behaves as a regular IPSP card.

Default:

`nosccp`

force (optional)

If the `force=yes` parameter is used to add a LIM card to the database, it is recommended that you add the required number of Service Module cards to the database after the LIM card is added to avoid the loss of global title translation (GTT) traffic.

Range:

`no`

`yes`

Default:

`yes`

sflog (optional)

The `sflog=yes` parameter is used to configure a logging IPS card for logs collection.

Range:

`no`

`yes`

Default:

`no`

srvname (optional)

The name/identifier of the server/host running on E5-APP-B cards and Telco Switches.

Range:

YYYYYYYYYYYYYYY

Example

```
ent-card:loc=1206:type=limatm:appl=atmansi:force=yes
```

```
ent-card:loc=1208:type=limatm:appl=atmansi:force=no
```

```
ent-card:loc=1105:type=enet:appl=ipsg
```

```
ent-card:loc=1201:type=dsm:appl=vscpp:data=dn
```



```

ent-card:loc=1101:type=e5appb:appl=epap:srvname=tklcepap:force=yes
ent-card:loc=1103:type=e5appb:appl=elap:srvname=tklcelap
ent-card:loc=6201:type=telco:appl=switch:srvname=telco1
ent-card:loc=1101:type=dsm:appl=siphc:data=dn
ent-card:loc=1101:type=dsm:appl=vsccp:data=elap
ent-card:loc=1104:type=dsm:appl=deirhc
ent-card:loc=1101:type=dsm:appl=enumhc
ent-card:loc=1111:type=ipsm:appl=ips:sflog=yes
ent-card:loc=1103:type=slic:appl=ipsg
ent-card:loc=1105:type=slic:appl=vsccp //odd slot
ent-card:loc=1106:type=slic:appl=vsccp //even slot
ent-card:loc=1108:type=slic:appl=sfapp

```

Dependencies



Note:

The LNP feature is "turned on" when an LNP ported TNs quantity is shown in the `rtrv-ctrl-feat` command output.

For features that are enabled with the `enable-ctrl-feat` command, use the `rtrv-ctrl-feat` command to verify whether a feature is enabled or turned on. For features that are turned on with the `chg-feat` command, use the `rtrv-feat` command to display the ON or OFF status of the features.

[Table A-9](#) shows the card names, the only valid card type (`type` parameter) and application (`appl` parameter) combinations, the card part numbers, and the maximum number of cards allowed in the database.

3727 E3727 Cmd Rej: Max number of cards of application type already exist

The MAS Configuration table is corrupt or cannot be found.

2145 E2145 Cmd Rej: Failed reading MAS configuration table

2105 E2105 Cmd Rej: Invalid card TYPE and APPL load type combination

The card location must not be 1113-1118, xy09 or xy10 where x is the frame and y is the shelf.

2154 E2154 Cmd Rej: Card slot reserved by system

The specified shelf location must be provisioned and present in the frame.

2108 E2108 Cmd Rej: Shelf location not equipped

The specified card location cannot already be provisioned in the database.

2100 E2100 Cmd Rej: Card location already equipped

The DSM card must be inserted into an odd-numbered location. The $n+1$ slot next to the DSM card must be empty, where n is the odd-numbered location (for example, if the DSM card is in location 1101, then the 1102 slot must be empty and unprovisioned).

2025 E2025 Cmd Rej: Invalid card location

The Measurements Platform feature must be turned on before the command can be entered for an MCPM card (`type=mcpm:appl=mcp`).

2701 E2701 Cmd Rej: Meas Platform feature must be ON

A valid value must be specified for the `appl` parameter.

3710 E3710 Cmd Rej: APPL not valid for command

The Shelf table is corrupt or cannot be found.

2104 E2104 Cmd Rej: Failed reading the shelf table

The IMT (Card) table is corrupt or cannot be found.

2102 E2102 Cmd Rej: Failed reading the IMT table

A card that is in an active maintenance state cannot be provisioned with this command. A card must be in the Out-of Service-Memory Administration (OOS-MA) state before it can be provisioned.

3726 E3726 Cmd Rej: Active device state does not permit database change

The $n+1$ slot next to the DSM card must be empty, where n is the odd-numbered location (for example, if the DSM card is in location 1101, then the 1102 slot must be empty and unprovisioned).

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The GTT feature must be turned on to specify the `appl=vsccp` parameter.

2584 E2584 Cmd Rej: GTT feature must be ON

The GWS feature must be turned on to specify the `appl=gls` parameter.

2585 E2585 Cmd Rej: GWS feature must be ON

2583 E2583 Cmd Rej: LAN feature must be ON

A valid card type must be specified. See the description for the `type` parameter for a list of valid values.

2212 E2212 Cmd Rej: Invalid card type for this command

[Table A-9](#) lists the maximum number of cards of each card type and application that are allowed in the system.

3727 E3727 Cmd Rej: Max number of cards of application type already exist

The MAS Configuration table is corrupt or cannot be found.

2145 E2145 Cmd Rej: Failed reading MAS configuration table

All provisioned shelves must contain HIPR cards before more than 115 LIM-ATM cards can be provisioned.

3512 E3512 Cmd Rej: All provisioned shelves must have HIPR cards

E2441 Cmd Rej: Dual ExAP Config must be ON and EPAP Data Split must be OFF.

If ELAP or EPAP is specified for the data parameter for VSCCP, then the Dual ExAP Config feature must be enabled.

E2441 Cmd Rej: Dual ExAP Config must be ON and EPAP Data Split must be OFF.

When data=gtt is specified for VSCCP, either the Dual ExAP Config feature must be enabled or the EPAP Data Split feature must be turned ON.

2434 E2434 Cmd Rej: Dual ExAP Config or EPAP Data Split must be ON

If DN or IMSI is specified for the data parameter for VSCCP, the EPAP Data Split feature must be turned on.

5413 E5413 Cmd Rej: EPAP Data Split feature must be turned on

If the EPAP Data Split feature is turned on or the Dual ExAP Config feature is enabled, and the value specified for the loc parameter indicates an E5-SM8G-B or SLIC card, then the data parameter must be specified. The data parameter can be specified only for an E5-SM8G-B or SLIC card running the VSCCP or SIPHC application on an IPSCP card.

**Note:**

The data parameter is valid only for SLIC IPSP cards, and not ENET/ENET-B IPSP cards.

5414 E5414 Cmd Rej: DATA parm must be specified with VSCCP/SIPHC/IPSP Appl

The Diameter S13/S13' Interface for EIR feature must be enabled before the type=dsm and appl=deirhc parameters can be specified.

2724 E2724 Cmd Rej: S13 Feature Must Be Enabled

The data parameter is not allowed with the DEIRHC GPL.

The parameter sflog=yes can be specified only when the type=ipsm and appl=ips parameters are specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

A maximum of 32 EPAP based cards can be provisioned with type=dsm and data=EPAP/DN/IMSI.

A maximum of 2 SFLOG cards can be provisioned.

3727 E3727 Cmd Rej: Max number of cards of application type already exist

The SIPNP feature must be enabled before the type=dsm and appl=siphc parameters can be specified.

2590 E2590 Cmd Rej: SIPNP Feature must be enabled.

The DATA parameter can only be equal to EPAP/ELAP when type=dsm and appl=siphc parameters are specified.

If the IP3G32 GPL is running on the location specified by the `loc` parameter, then `data=gtt` and `data=nosccp` are the only valid values for the DATA parameter. If the GPL is anything but IP3G32 GPL, `data=nosccp` cannot be used for the card on that location.

E2670 Cmd Rej: Invalid value of DATA parameter for given APPL

The `srvname` parameter must be specified for an E5-APP-B card and Telco Switch.

2665 E2665 Cmd Rej: SRVNAME must be specified with E5APPB Card/Telco Switch

The `srvname` must be unique for each E5-APP-B card and Telco Switch to be provisioned in the system.

2666 E2666 Cmd Rej: SRVNAME already exists.

Unless the `force` parameter is specified, two E5-APP-B cards running the same application cannot be provisioned in slots drawing power from the same FAP power source. EAGLE shelf card slots XXX1, XXX2, XXX5, and XXX6 draw power from the A designation FAP power source. Cards XXX3, XXX4, XXX7, and XXX8 draw power from the B designation FAP power source.

2667 E2667 Cmd Rej: Same Power source of E5APPB cards running same application

The `srvname` parameter can only be used with E5-APP-B card or Telco Switch.

2131 E2131 Cmd Rej: Parameters not valid for card type.

Telco switch can only be provisioned in a shelf with type equal to FPB.

2676 E2676 Cmd Rej: Telco switch can be provisioned only in FPB shelf.

E5-APP-B card and Telco switch cannot be provisioned in the same shelf. They are mutually exclusive.

2677 E2677 Cmd Rej: E5APPB card and Telco switch are not allowed on the same shelf.

A maximum of 6 Telco switches can be provisioned in a shelf.

2678 E2678 Cmd Rej: Maximum 6 TELCO Switches can be provisioned in a shelf.

E5-ENET-B, SLIC, and E5-APP-B cards can be provisioned if the shelf FAN bit is turned ON.

3866 E3866 Cmd Rej: Shelf FAN bit must be enabled

When re-entering the command for the provisioning of the 26th Service Module card, the re-entered command must specify `type=dsm` and the same `loc` value as the original command. See "Service Module Cards" under [Notes](#) for more information.

5275 E5275 Cmd Rej: ent-card command for type DSM already in progress

The `data` parameter can only be specified for IP3G application running on SLIC card.

3540 E3540 Cmd Rej: DATA parm can be entered for IP3G appl running on SLIC card only.

Notes

ITU Environment

The `force` parameter can be specified to add the card even if its addition would exceed the SCCP TPS threshold. If the `force=yes` parameter is specified, the command is accepted but the following warning message appears:

```
WARNING: System current rated TPS unable to support additional SS7 card =  
use FORCE=YES.
```

If the `force=yes` parameter is specified, it is recommended that the required number of Service Module cards be added to the database after the LIM card is added. This action avoids the loss of GTT traffic. Another option is to add additional Service Module cards or to increase the SCCP TPS threshold, and then add the LIM card. This action prevents the alarm from being triggered.

For additional information on using the `force` parameter, see Chapter 4, "System Administration Procedures" of *Database Administration - System Management User's Guide*.

STC Cards

STC cards are E5-ENET-B cards that run the EROUTE application. E5-ENET-B cards provisioned with `type=stc` can be referred to as E5-STC cards.

The `type=stc` and `appl=eroute` parameters apply only when the EAGLE 5 Integrated Monitoring Support (E5IS) feature is turned on.

An "n+1" STC configuration is required to provide redundancy: therefore, a minimum of two STC cards must be provisioned in the EAGLE.

The EAGLE can contain a maximum of 32 STC cards.

The STC cards must be provisioned in the same shelf that contains the cards or links being monitored.

E5-SM8G-B/SLIC Cards

If an LNP feature quantity that is greater than 192 million numbers and less than 240 million numbers is present in a node, and there is an attempt to insert an E5-SM8G-B or SLIC card, then the card auto-inhibits (see the `alw-card` command).

IPSM Cards

IPSM cards consist of E5-IPSM and E5-ENET-B cards.

A maximum of three IPSM cards are supported for a single EAGLE node, on any shelf or combination of shelves.

Apart from these, two more cards with application type IPS can be configured on E5-ENET-B cards for the SS7 Firewall Logging feature.

IPSG Cards

IPSG cards consist of E5-ENET-B, or SLIC cards running the IP Signaling Gateway application (`type=enet`, `enetb` or `slic`, and `appl=ipsg`). The IPSG application combines the functionality of IPLIMx M2PA and IPGWx M3UA. They can also have GTT-enabled capabilities support with SLIC running the 64-bit IPSG GPL.

If an E5-ENET-B card is inserted in a slot provisioned for SLIC, then the E5-ENET-B card will be auto-inhibited and issue a degraded mode alarm.

E5-ATM-B Cards

E5-ATM-B cards support ANSI and ITU implementations. The cards can support 3 ATM signaling links, operating at 1 Erlang.

IP Signaling Capacity Guidelines

System limits on the total number of cards allowed in the system are not enforced by the `ent-card` command. If the HIPR2 High Rate Mode feature is turned off, then the total IP Signaling TPS for the system must be less than or equal to 500,000 TPS. If the HIPR2 High Rate Mode feature is turned on, then the total IP Signaling TPS for the system must be less than or equal to 750,000 TPS. If the HIPR2 High Rate Mode and 1M System TPS features are turned on, then the total IP Signaling TPS for the system must be less than or equal to 1,000,000 TPS.

E5-TSM Cards

A maximum of eight E5-TSM cards are supported for a single EAGLE node, on any shelf or combination of shelves, to support the GLS application for Gateway Screening.

Fast Copy Cards

E5-ENET-B, or SLIC cards running the IPSG or IPGHC GPL are considered to be *FC-capable*. A card running the IPGHC GPL must be in the IS-NR State before the card can be considered *FC-capable*. This restriction does not apply to cards running the IPSG GPL. An *FC-capable* card is considered *FC-enabled* when Fast Copy monitoring is enabled for the respective GPL.

Service Module Cards

Service Module cards consist of E5-SM8G-B or SLIC cards.

If the `ent-card` command is issued while an EPAP-based feature is enabled, then a warning is issued only for the provisioning of the 26th Service Module card. The command must be re-entered within 30 seconds to be accepted. If the command is entered a second time with `type=dsm` and a different `loc` specified, the command will be rejected.

For Service Module applications (VSCCP, ENUMHC, SIPHC, DEIRHC), the `ent-card` command can be used to provision E5-SM4G and E5-SM8G-B cards only in even numbered slots and the next odd numbered slot has to be empty since these cards are dual slots. There is no such restriction with SLIC cards since it is a single slot card, as in, these applications can be provisioned either in even numbered slot or odd numbered slot.

E5-E1T1-B Cards

E5-T1T1-B cards support ANSI and ITU implementations and can be used to replace the cards.

Each E5-E1T1-B card provides access to eight E1/T1 ports. Each card supports up to two SE-HSL signaling links on one of the eight ports (links A or B).

EPM and EPM-B Based Cards

Release 44.0 introduces the E5-ATM-B, E5-ENET-B, and E5-MCPM-B cards and Release 45.0 introduces the E5-E1T1-B card, which are all based on a new EPM-B. If the Message Flow Control option is provisioned (see the [chg-stpopts](#) command), and fan trays are installed, then the EPM-B cards can co-exist and be hot-swapped with the EPM cards. The E5-ENET-B and SLIC card running the IPS application and the

E5-MCPM-B card do not require Message Flow Control, except for cards configured as SFLOG.

Service and Link Interface Cards

Release 46.3 introduced the EAGLE's Service and Link Interface Card (SLIC). These cards are the next generation, general purpose EAGLE processors and can be installed in any EAGLE shelf equipped with fan trays. In Release 46.3 the SLIC card supports the IPSPG application and is hot-swappable with E5-ENET-B cards. In Release 46.5, the SLIC card supports VSCCP, SIPHC, ENUMHC, DEIRHC, CCS7ITU and SS7ANSI applications.

MCPM Cards

E5-MCPM-B cards are the MCPM cards. These cards are used to perform Measurements collection and reporting functionality for nodes with a link capacity greater than 2,400 (1,200 if 15 Minute Measurements is enabled). E5-OAM Integrated Measurements is used for nodes with a link capacity of 2400/1200 or less.

E5-APP-B Cards

E5-APP-B cards support the ELAP, EPAP, IMF, LSMS and NAS applications. E5-APP-B card is dual-slot card. These cards host the EPAP, ELAP, IMF, LSMS and NAS application servers that can be placed in any odd numbered slot in any EAGLE shelf. These cards do not connect to the IMT bus. The ENT-CARD command only reserves a slot in an EAGLE shelf for this card. An E5-APP-B card cannot be provisioned if there is another E5-APP-B card already on the same source of power unless the force parameter is specified.

TELCO Switches

Telco Switches are not application cards. The support of Telco Switches is added in the ENT-CARD command to reserve a slot in an Eagle shelf (type=FPB) and add the power consumed by Telco Switch to the Frame Power Budget. These switches will not be connected to the IMT bus. Telco Switch and E5-APP-B cards will be mutually exclusive for a shelf. There can be a maximum of 6 Telco Switches in a shelf.

Output

```
ent-card:loc=1206:type=lime1:appl=ss7ansi

    rlghncxa03w 06-06-01 11:11:28 EST  EAGLE 35.0.0
    ENT-CARD: MASP A - COMPLTD
;

ent-card:loc=1101:type=dsm:appl=siphc

tekelecstp 12-07-27 10:24:14 EST EAGLE 45.0.0
ent-card:loc=1101:type=dsm:appl=siphc
Command entered at terminal #4.
ENT-CARD: MASP A - COMPLTD
;
```

This example shows the output when the `ent-card` command is not re-issued within 30 seconds for the provisioning of 26th SCCP card when any EPAP based feature is enabled.

```
ent-card:type=dsm:appl=vsccp:loc=1306
```

```
tekelecstp 10-02-27 23:06:21 EST EAGLE 42.0.0
ent-card:type=dsm:appl=vsccp:loc=1306
Command entered at terminal #1.
```

```
;
```

```
CAUTION: Please ensure EPAP Application Server is running on
hardware supporting 32 SCCP cards e.g.:
```

```
T1200.
```

```
Re-enter command within 30 seconds to confirm change.
```

```
tekelecstp 10-02-27 23:06:21 EST EAGLE 42.0.0
ENT-CARD: MASP B - Command Aborted
```

```
> Command is not re-entered within 30 seconds.
```

```
ENT-CARD command (Type=DSM) confirmation timer expired
```

This example shows the output when the `ent-card` command is re-issued within 30 seconds for the provisioning of 26th SCCP card when any EPAP based feature is enabled.

```
ent-card:type=dsm:appl=vsccp:loc=1306
```

```
tekelecstp 10-02-27 23:07:16 EST EAGLE 42.0.0
ent-card:type=dsm:appl=vsccp:loc=1306
Command entered at terminal #1.
```

```
;
```

```
CAUTION: Please ensure EPAP Application Server is running on
hardware supporting 32 SCCP cards e.g.:
```

```
T1200.
```

```
Re-enter command within 30 seconds to confirm change.
```

```
tekelecstp 10-02-27 23:07:16 EST EAGLE 42.0.0
ENT-CARD: MASP B - Command Aborted
```

```
> ent-card command is re-issued within 30 seconds.
```

```
> ent-card:type=dsm:appl=vsccp:loc=1306
```

```
Command Accepted - Processing
```

```
tekelecstp 10-02-27 23:07:28 EST EAGLE 42.0.0
ent-card:type=dsm:appl=vsccp:loc=1306
Command entered at terminal #1.
```

```
;
```

```
tekelecstp 10-02-27 23:07:28 EST EAGLE 42.0.0
ENT-CARD: MASP B - COMPLTD
```

```
;
```


This example shows the output when the `ent-card` command is issued for the provisioning of any additional (>26 and <=32) SCCP card when any EPAP based feature is enabled.

```
ent-card:type=dsm:appl=vsccp:loc=1307
```

```
tekelecstp 10-02-27 23:11:18 EST EAGLE 42.0.0
ent-card:type=dsm:appl=vsccp:loc=1307
Command entered at terminal #1.
```

```
;
```

```
tekelecstp 10-02-27 23:11:18 EST EAGLE 42.0.0
ENT-CARD: MASP B - COMPLTD
```

```
;
```

```
ent-card:loc=1105:type=e5appb:appl=epap:srvname=tklcepap1
```

```
tekelecstp 12-07-13 11:42:29 EST 45.0.0-64.37.0
ent-card:loc=1105:type=e5appb:appl=epap:srvname=tklcepap1
Command entered at terminal #4.
ENT-CARD: MASP A - COMPLTD
```

```
;
```

```
ent-card:loc=1103:type=e5appb:appl=elap:srvname=tklcelap1
```

```
tekelecstp 12-07-13 11:42:55 EST 45.0.0-64.37.0
ent-card:loc=1103:type=e5appb:appl=elap:srvname=tklcelap1
Command entered at terminal #4.
ENT-CARD: MASP A - COMPLTD
```

```
ent-card:loc=1101:type=e5appb:appl=epap:srvname=tklcepap2
```

```
tekelecstp 12-07-13 11:43:29 EST 45.0.0-64.37.0
ent-card:loc=1101:type=e5appb:appl=epap:srvname=tklcepap2
Command entered at terminal #4.
Command Rejected: E2667 - Same Power source of E5APPB cards running same
application
```

```
ENT-CARD: MASP A - Command Aborted
```

This example shows the output when the `ent-card` command is issued for provisioning the 1st TELCO Switch in a shelf.

```
ent-card:loc=6201:type=telco:appl=switch:srvname=telcol
tekelecstp 12-09-06 10:58:45 EST 45.0.0
ent-card:loc=6201:type=telco:appl=switch:srvname=telcol
Command entered at terminal #4.
```

WARNING: Minimum two TELCO Switches are needed per shelf.

```
ENT-CARD: MASP A - COMPLTD.  
;
```

This example shows the output when the ent-card command is issued for the provisioning the 7th TELCO Switch in a shelf.

```
ent-card:lock=6211:type=telco:appl=switch:srvname=telcol1
```

```
tekelecstp 12-09-06 11:01:50 EST 45.0.0  
ent-card:loc=6211:type=telco:appl=switch:srvname=telcol1  
Command entered at terminal #4.  
Command Rejected: E2678 - Maximum 6 TELCO Switches can be provisioned  
in a shelf
```

```
ENT-CARD: MASP A - Command Aborted
```

```
ent-card:loc=1101:type=dsm:appl=siphc
```

```
tekelecstp 12-07-27 10:24:47 EST EAGLE 45.0.0  
ent-card:loc=1101:type=dsm:appl=siphc  
Command entered at terminal #4.  
ENT-CARD: MASP A - COMPLTD  
;
```

This example shows the output to configure an E5-SM8G-B or SLIC card running the DEIRHC GPL.

```
ent-card:loc=1103:type=dsm:appl=deirhc
```

```
tekelecstp 13-04-5 10:24:47 EST EAGLE 45.1  
ent-card:loc=1103:type=dsm:appl=deirhc  
Command entered at terminal #4.  
ENT-CARD: MASP A - COMPLTD  
;
```

This example shows the output to configure a logging card running the IPSHC GPL.

```
ent-card:loc=1111:type=ipsm:appl=ips:sflog=yes
```

```
tekelecstp 15-05-27 14:56:16 EST Eagle 46.3.0  
ent-card:loc=1111:type=ipsm:appl=ips:sflog=yes  
Command entered at terminal #4.  
ENT-CARD: MASP A - COMPLTD  
;
```

This example shows the output to configure a SLIC card running the IPSG GPL.

```
ent-card:loc=1101:type=slic:appl=ipsg
```

```
Command Accepted - Processing
```

```
tekelecstp 17-04-20 14:28:49 EST EAGLE 46.6.0.0-71.1.0
ent-card:loc=1101:type=slic:appl=ipsg
Command entered at terminal #1.
;
tekelecstp 17-04-20 14:28:49 EST EAGLE 46.6.0.0-71.1.0
ENT-CARD: MASP A - Cannot access standby fixed disk.
ENT-CARD: MASP A - Simplex database update.
ENT-CARD: MASP A - COMPLTD
;
```

This example shows the output when DATA parameter is specified with an ENETB card running the IPSP appl:

```
ent-card:loc=1101:type=enetb:appl=ipsg:data=gtt
```

```
tekelecstp 17-05-22 11:20:29 EST EAGLE 46.6
ent-card:loc=1101:type=enetb:appl=ipsg:data=gtt
Command entered at terminal #4.
Command Rejected: E3540 - DATA parm can be entered specified for IPSP appl
running on SLIC card only.

ENT-CARD: MASP A - Command Aborted
```

This example shows the output to configure a SLIC card running the SCCPHC GPL.

```
ent-card:loc=1105:type=slic:appl=vsccp
```

```
Command Accepted - Processing
```

```
e9021503 18-03-22 12:47:26 EST EAGLE 46.5.1.0-70.40.0
ent-card:loc=1105:type=slic:appl=vsccp
Command entered at terminal #2.
;
e9021503 18-03-22 12:47:27 EST EAGLE 46.5.1.0-70.40.0
*C 8446.0331 *C SCCP SYSTEM SCCP is not available
;
e9021503 18-03-22 12:47:27 EST EAGLE 46.5.1.0-70.40.0
ENT-CARD: MASP B - COMPLTD
```

This example shows the output to configure a SLIC card running the SFAPP GPL:

```
ent-card:loc=1108:type=slic:appl=sfapp
```

```
tekelecstp 17-11-13 04:40:52 EST EAGLE 46.5.1.5-73.2.0
ent-card:loc=1108:type=slic:appl=sfapp
Command entered at terminal #17.
;
```

```

Command Accepted - Processing
  tekelecstp 17-11-13 04:40:52 EST  EAGLE 46.5.1.5.0-73.2.0
  ENT-CARD: MASP A - COMPLTD
;
Command Executed

```

Related Topics

- [chg-card](#)
- [dlt-card](#)
- [init-card](#)
- [rept-stat-card](#)
- [rmv-card](#)
- [rtrv-card](#)

4.1.285 ent-csl

Use this command to enter new screening data into the Common Screening List (CSL). The Common Screening List commands are used to tailor certain types of general screening information to specific features.

Parameters

ds (optional)

Digit string. A unique string of digits that is used by the specified screening feature.

Range:

1-15 hexadecimal digits.
Valid digits are 0-9, a-f, A-F.

- 1-6 digits—Prepaid IDP Query Relay *ccnc* list
- 1-15 digits—Prepaid IDP Query Relay *gt* list
- 1-10 digits—Prepaid IDP Query Relay *skbcsm* list
- 4 digits—IDP Screening for Prepaid *skts* list
- 1-15 digits—IDP Screening for Prepaid *insl* list
- 1-15 digits—VFLEX *vmprfx* list
- 1-6 digits—Info Analyzed Relay Base *ccnc* list
- 1-15 digits—Info Analyzed Relay Base *gt* list
- 2 digits—Info Analyzed Relay Base *trig* list
- 1-15 digits — EIR *imsipfx* list

Table 4-23 lists valid hexadecimal values for the Info Analyzed Relay Base *trig* list *ds* entries.

feature (optional)

Feature name. The name of the enabled feature for which the command is entered.



Note:

The `pn` or `feature` parameter must be specified to identify the feature.

Range:

`ayyyyyyyyyyyyyyyyyyyyyyyyyyy`

1 alphabetic character followed by up to 24 optional alphanumeric characters, including spaces and special characters, enclosed in double quotation marks (" ").

- EIR
- IDP Screening for Prepaid
- IDP Service Key Routing
- Info Analyzed Relay Base
- Prepaid IDP Query Relay
- VFLEX

list (optional)

The name of the Common Screening List associated with the feature.



Note:

This parameter must be specified when the feature uses more than one type of Common Screening List.

Range:

ccnc

CC+NC List

delpfx

Delete Prefix List

gt

Global Title List

imsipfx

IMSI Screening Prefix List

insl

In Network Subscriber List

npbypass

SIP NPBYPASS List

skbcm

SK+BCSM List

skts

SK+TS List

trig
Trigger List

vmplx
Voice Mail Prefix List

opcdpc
OPC + DPC List

The following screening lists are valid for the indicated features:

- *ccnc*, *gt*—Prepaid IDP Query Relay and Info Analyzed Relay Base
- *imsipfx* ---EIR

 **Note:**

If the list argument is not specified in this command, then `list=imsipfx` by default is taken.

- *skbcm*—Prepaid IDP Query Relay and IDP Service Key Routing
- *skts*, *insl*—IDP Screening for Prepaid
- *trig*—Info Analyzed Relay Base
- *vmplx*—VFLEX
- *opcdpc*—Prepaid IDP Query Relay

The *delpfx* list is not supported at this time. This list should only be used by Oracle personnel.

dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code.

dpci(optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-s

zone-0-7

area-000-255

id-0-7

The point code *0-000-0* is not a valid point code.

dpcn(optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfnti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield

indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-s-

nnnnn-0-16383

gc-aa-zz

m1-m2-m3-m4-0-14 for each member; values must sum to 14

dpcn24(optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000 - 255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa-000-255

ssa-000-255

sp-000-255

dpcn16(optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:

000 - 127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

opci/opcn/opcn24/opcn16 (optional)

Originating point code.

opci(optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-s

zone-0-7

area-000-255

id-0-7

The point code *0-000-0* is not a valid point code.

opcn(optional)

New ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-s-

nnnnn-0-16383

gc-aa-zz

m1-m2-m3-m4-0-14 for each member; values must sum to 14.

opcn24(optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000 - 255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa-000-255

ssa-000-255

sp-000-255

opcn16(optional)

opcn24(optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:

000 - 127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

Range:

000 - 255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa-000-255

ssa-000-255

sp-000-255

p1 (optional)

Parameter Value 1. This parameter is specific to the feature and list that use the parameter.

Range:

ZZZZZZZZZZ

Valid values for the IDP Service Key Routing feature are:

- 3 or *prepaid1*—Prepaid Portability Type 3 for the SKBCSM list
- 4 or *prepaid2*—Prepaid Portability Type 4 for the SKBCSM list
- 6-35 or *prepaid3-prepaid32*—Prepaid Portability Types 6 through 35 for the SKBCSM list
- 255 or *prepaidno*—No Prepaid Portability Type for the SKBCSM list

Valid values for the EIR feature are:

- 1 or *range* - Check only Range IMEI Table for the IMSIPFX list
- 2 or *individual* - Check only Individual IMEI Table for the IMSIPFX list
- 3 or *both* - Check Individual IMEI Table then Range IMEI Table for the IMSIPFX list
- 4 or *none* - No check in either Individual or Range IMEI Table for the IMSIPFX list

Valid values for the Prepaid IDP Query Relay feature are:

- 0, 1—National or International for the DELPFX list, which is for Oracle personnel use ONLY.

**Note:**

The *p1* parameter is used by the IDP Service Key Routing feature or the EIR feature.

Default:

prepaidno

p2 (optional)

Parameter Value 2. The IDP Relay Service that is associated with an SKBCSM list DS entry. Multiple IDP Relay Services can be provisioned for use with NPP or Response Type for EIR feature that is associated with an *imsipfx* list DS Entry. This value can be entered as a number or as a mnemonic.

Range:

ZZZZZZZZZZ

Valid values for the Prepaid IDP Query Relay feature are:

- 1 or *idprcdpn* —IDPRCDPN Service for the SKBCSM list
- 2 or *idprcdpn2* —IDPRCDPN2 Service for the SKBCSM list
- 3 or *idprcdpn3* —IDPRCDPN3 Service for the SKBCSM list
- 4 or *idprcdpn4* —IDPRCDPN4 Service for the SKBCSM list

Valid values for the EIR feature are:

- 1 or *whitelist* - Response Type as Whitelist for *imsipfx* list.
- 2 or *graylist* - Response Type as Graylist for *imsipfx* list.
- 3 or *blacklist* - Response Type as Blacklist for *imsipfx* list.
- 4 or *unknown* - Response Type as Unknown for *imsipfx* list.

 **Note:**

The p2 parameter is used by the Prepaid IDP Query Relay feature or the EIR feature.

Default:

idprcdpn

p3 (optional)

Parameter Value 3. The IDP Relay Service that is associated with a GT list DS entry. Multiple IDP Relay Services can be provisioned for use with NPP or Response Type for EIR feature that is associated with an *imsipfx* list DS Entry. This value can be entered as a number or as a mnemonic.

Default:

P3 by default is *idprcdpn*

Range:

ZZZZZZZZZZ

Valid values for Prepaid IDP Query Relay features are:

- *1* or *idprcdpn*—IDPRCDPN Service for the GT list
- *2* or *idprcdpn2*—IDPRCDPN2 Service for the GT list
- *3* or *idprcdpn3*—IDPRCDPN3 Service for the GT list
- *4* or *idprcdpn4*—IDPRCDPN4 Service for the GT list

pc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

 **Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

Synonym:

pca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24 (optional)

Point code.

pci (optional)

ITU international point code with subfields *zone-area-id*.

Range:

0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

pcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

pfxstrip (optional)

This parameter in NPBYPASS list indicates whether matched prefix must be deleted or not.

Range:

yes

no

Default:

no

pn (optional)

Part number. The 9-digit "893xxxxxx" part number of the feature for which the command is entered. The `rtrv-ctrl-feat` command description shows the part number in the command output example.

 **Note:**

The `pn` or `feature` parameter must be specified to identify the feature.

Range:

893000000 - 893999999

The first 3 digits are 893. Do not separate the digits with dashes or spaces. The following part numbers are valid for this command:

- 893012301---EIR
- 893015501—IDP Screening for Prepaid
- 893034201—Info Analyzed Relay Base
- 893016001—Prepaid IDP Query Relay
- 893016701—VFLEX

scpgta (optional)

Signaling Control Point (SCP) Global Title Address (GTA). The value used by the SKGTARTG Service Action in IDP Relay IDPRCDPN(X) Services to replace the SCCP CdPA GTA in the outgoing message.

Range:

1 - 21 hexadecimal digits. Valid digits are 0-9, a-f, A-F.

 **Note:**

The `scpgta` parameter is used by the Prepaid IDP Query Relay feature.

Default:

none

Example

```
ent-csl:feature="Prepaid IDP Query Relay":list=ccnc:ds=123456
ent-csl:pn=893015001:list=ins1:ds=123456789bcdEF
ent-csl:feature="Prepaid IDP Query
Relay":list=skbcsm:ds=0000000056:p2=idprcdpn2:scpgta=896589
ent-
csl:feature="EIR":list=imsipfx:ds=401134134:p1=range:p2=whitelis
t
ent-csl:pn=893016001:list=opcdpc:dpci=4-5-6
ent-csl:pn=893016001:list=opcdpc:dpci=4-5-6:opci=2-3-4
```

Dependencies

An enabled feature must be specified using either a valid part number (`pn` parameter) or feature name (`feature` parameter). The specified feature must use a Common Screening List.

4458 E4458 Cmd Rej: Common screening list feature is required

The feature that is specified in the `feature` parameter must be enabled.

4468 E4468 Cmd Rej: Common screening list requested feature must be enabled

The `list` parameter must be specified for features that use more than one type of screening list.

4459 E4459 Cmd Rej: Common screening list type is required

The value specified for the `list` parameter must be valid for the specified screening feature.

4460 E4460 Cmd Rej: Common screening list type is invalid

The length of the digit string specified for the `ds` parameter must be valid for the screening feature and list type.

4493 E4493 Cmd Rej: Common screening list DS length invalid

A valid `ds` parameter value is required for the specified feature and list type.

4340 E4340 Cmd Rej: Common screening list key invalid

The following parameters are allowed with the indicated common screening list type:

- `list=gt` — `ds` parameter
- `list=ccnc` — `ds` parameter
- `list=imsipfx---` `ds` parameter
- `list=insl---` `ds` parameter
- `list=skbcm` — `ds` and `scpgta` parameters
- `list=skts` — `ds` parameter
- `list=trig` — `ds` parameter
- `list=vmpfx` — `ds` parameter

4464 E4464 Cmd Rej: Common screening list invalid parameter combination

The leading digit pattern of the value specified for the `ds` parameter must be unique in the specified screening list for the indicated feature.

4489 E4489 Cmd Rej: Common screening list key must be unique

The Common Screening List table is corrupt or cannot be found.

4467 E4467 Cmd Rej: Common screening list read fail

Each list table is allowed to contain a maximum number of entries:

- IDP Screening for Prepaid
 - INSL —50 entries
 - SKTS—25 entries
- Prepaid IDP Query Relay
 - CCNC —20 entries
 - GT—500 entries

- SKBCSM—150 entries
- VFLEX
 - VMPFX—100 entries
- Info Analyzed Relay Base
 - CCNC—20 entries
 - GT—500 entries
 - TRIG—150 entries
- EIR
 - IMSIPFX — 100000 entries

4466 E4466 Cmd Rej: Common screening list full

The `pc` or `ds` parameter must be specified in the command. The parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The value specified for the feature parameter must be a valid feature name for a feature that uses a Common Screening List. The feature name must be specified as it appears in the `rtrv-ctrl-feat` command output. Enough of the name must be specified to make the name unique when two features begin with the same word or acronym.

4339 E4339 Cmd Rej: Common screening list feature invalid

The value specified for the `ds` parameter must be unique in the specified screening list for the indicated feature.

4461 E4461 Cmd Rej: Common screening list entry already exists

The `scpgta` and `pc` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `scpgta` parameter is specified, then the `ds` parameter must be specified.

4340 E4340 Cmd Rej: Common screening list key invalid

A valid `p1` and `p2` parameter value is required for the specified feature and list type.

4499 E4499 Cmd Rej: Common screening list invalid parameter value

`P3` parameter can only be entered when `mergein` is on in `TTROPTS`.

3677 E3677 Cmd Rej: MERGE_IN should be ON to use P3

If list type `opcdpc` given, then `p1`, `p2`, `p3`, `ds`, `scpgta` and `pc` parameters cannot be specified.

For IDPR service, if list type `opcdpc` given, then `opc/dpc` parameter must be specified and the types for the OPC and DPC must match.

Notes

[Table 4-23](#) lists the decimal values, the hexadecimal values, and the mnemonic for each TRIGTYPE code that can appear in the CSL TRIG list.

Table 4-23 TRIGTYPE Hexadecimal Codes

Hex	Decimal	Mnemonic	Hex	Decimal	Mnemonic
00	0	Unspecified	1A	26	Inter-LATA_ Toll_Call.
01	1	All_Calls.	1B	27	World_Zone_ Call.
02	2	Double_ Introducing _Star.	1C	28	International_ Call.
03	3	Single_ Introducing_ Star.	1D	29	Unrecognized_ Number.
04	4	Reserved	1E	30	Prior_ Agreement.
05	5	Double_ Introducing_ Pound.	1F	31	Specific_ Called_Party_ Digit_String
06	6	Single_ Introducing_ Pound.	20	32	Mobile_ Termination
07	7	Revertive_Call.	21	33	Advanced_ Termination
08	8	0_Digit.	22	34	Location
09	9	1_Digit.	23	35	Locally_Allowe d _Specific_Digit _String
0A	10	2_Digit.	24	36	Orgination_ Attempt_ Authorized.
0B	11	3_Digit.	25	37	Calling_ Routing_ Address _Available.
0C	12	4_Digit.	26	38	Initial_ Termination
0D	13	5_Digit.	27	39	Called_ Routing_ Address_ Available
0E	14	6_Digit.	29	40	O_Answer.
0F	15	7_Digit.	29	41	O_Disconnect.
10	16	8_Digit.	2A	42	O_Called_ Party_Busy.
11	17	9_Digit.	2B	43	O_No_Answer.
12	18	10_Digit.	40	64	Terminating_ Resource_ Available

Table 4-23 (Cont.) TRIGTYPE Hexadecimal Codes

Hex	Decimal	Mnemonic	Hex	Decimal	Mnemonic
13	19	11_Digit.	41	65	T_Busy.
14	20	12_Digit.	42	66	T_No_Answer.
15	21	13_Digit.	43	67	T_No_Page_Response.
16	22	14_Digit.	44	68	T_Unroutable.
17	23	15_Digit.	45	69	T_Answer.
18	24	Local_Call.	46	70	T_Disconnect.
19	25	Intra-LATA _Toll_Call.			

Output

```
ent-csl:feature="VFLEX":list=vmpfx:ds=123456789abcdEF
```

```
tekelecstp 08-05-22 13:53:59 EST EAGLE 39.0.0
VM Prefix List table is (1 of 100) 1% full
ENT-CSL: MASP A - COMPLTD
```

```
;
```

```
ent-csl:pn=893040601:list=npbypass:ds=0000000012:pxstrip=yes
```

```
tekelecstp 12-06-25 15:29:14 EST EAGLE 45.0.0
ent-csl:pn=893040601:list=npbypass:ds=0000000012:pxstrip=yes
Command entered at terminal #4.
PFX List (2 of 1000) 1%
ENT-CSL: MASP A - COMPLTD
```

```
;
```

```
ent-
csl:feature="EIR":list=imsipfx:ds=4444444441:p1=range:p2=whitel
ist
```

```
tekelecstp 20-02-09 02:52:23 EST EAGLE 46.9.0.0.0
ent-
csl:feature="eir":list=imsipfx:ds=4444444441:p1=range:p2=whitelist
Command entered at terminal #4.
PFX List ( 5 of 100000) 1%
ENT-CSL: MASP A - COMPLTD;
```

Related Topics

- [chg-csl](#)
- [dlt-csl](#)
- [rtrv-csl](#)

- [rtrv-ctrl-feat](#)

4.1.286 ent-cspc

Use this command to add signaling points to a current broadcast signaling point code group. These point codes are notified of the receipt by the system of subsystem-prohibited (SSP) and subsystem-allowed (SSA) SS7 SCCP management messages from an application at an adjacent signaling point and subsystem. This command can also be used to add new groups to the table.

Note:

The command must be entered first with the group only (no point code); then the command must be entered again with the group code and the point code.

Parameters

Note:

See [Point Code Formats and Conversion](#) in Appendix A for a detailed description of point code formats, rules for specification, and examples.

grp (mandatory)

Name of the group. This parameter is a character string associated with this broadcast list.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

pc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001–005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.

The point code `000-000-000` is not a valid point code.

pc/pca/pci/pcn/pcn24/pcn16 (optional)

Point code.

This parameter is mandatory when the group and point code are entered, after the group has been entered.

pci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—000-255

ssa—000-255

sp—000-255

pcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code.

Range:

p-, 000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-p

un-000-127

sna-000-15

mna-000-31

Example

```
ent-cspc:grp=grp01:pc=144-201-001
ent-cspc:grp=group02:pcn24=10-100-10
ent-cspc:grp=grp01
ent-cspc:grp=grp01:pc=240-3-55
ent-cspc:grp=grp01:pci=7-233-5
ent-cspc:grp=grp01:pci=s-7-233-5
ent-cspc:grp=grp01:pcn24=234-56-245
ent-cspc:grp=grp01:pcn16=123-13-27
```

Dependencies

Reserved words (for example, " none ") cannot be used to name a group.

3040 E3040 Cmd Rej: <string> cannot be used in this command

The specified CSPC Broadcast group name must not exist if a point code is not specified. If the specified group name does not exist, and a point code is not specified, a new group is created.

2408 E2408 Cmd Rej: CSPC broadcast group already exists

The Spare Point Code Support feature must be enabled before the spare point code prefix s- can be specified for an ITU-I or ITU-N point code.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

If the CSPC group name and a point code are specified, the group name must exist in the database.

2411 E2411 Cmd Rej: CSPC group does not exist

The specified point code must exist in the Routing Table and cannot already exist in the specified group.

2413 E2413 Cmd Rej: PC already exists in CSPC group

The destination point code must be a full point code (*ni-nc-ncm*).

N/A N/A

The concerned signaling point code must have been specified previously as a full point code destination, or it must be a member of a previously specified cluster.

N/A N/A

A maximum of 2550 Concerned Signaling Point Code Broadcast groups can be defined.

2410 E2410 Cmd Rej: CSPC broadcast group table is full

A maximum of 96 point codes can be defined for each group.

2415 E2415 Cmd Rej: Concerned node table for this group is full

If the ANSI/ITU SCCP Conversion feature is not enabled, then the first point code to be entered defines the network type for the group. All subsequent point codes for the group must be for the same network type.

2449 E2449 Cmd Rej: CSPC group network type does not match PC network type

The ANSI/ITU SCCP Conversion feature must be enabled before the point codes in a group can be of different network types.

2449 E2449 Cmd Rej: CSPC group network type does not match PC network type

The point code must exist in the routing table.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

A routeset and link that provides a path to the new CSPC must be configured before the `ent-cspc` command can be entered.

5072 E5072 Cmd Rej: PC has no allowed route

Notes

To broadcast SSPs and SSAs to one or more mated applications, each mate's point code must be added to the CSPC group. Otherwise the broadcast is not sent to the mate.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (`s-`).

Output

The command must be entered with just the `grp` parameter to define a new group in the database.

```
ent-cspc:grp=grp01
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-CSPC: MASP A - COMPLTD
```

```
;
```

The command must specify an existing group and a point code to add the point code to the group.

```
ent-cspc:grp=grp01:pc=144-201-001
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-CSPC: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-cspc](#)
- [rtrv-cspc](#)

4.1.287 ent-dconn

Use this parameter to enter DEIR connection information. The DCONN table supports the provisioning information related to the Diameter connections.

Parameters**dcname (mandatory)**

Diameter connection name. This parameter specifies the unique logical name assigned to each diameter connection.

Range:

aaaaaaaaaaaaaaaa

A string of alphanumeric characters, beginning with a letter and up to 15 characters in length. Valid values are *a..z*, *A..Z*, *0..9*.

Default:

No change to the current value

System Default:

null

aname (mandatory)

Association name linked with particular diameter connection.

Range:

aaaaaaaaaaaaaaaa

A string of alphanumeric characters, beginning with a letter and up to 15 characters in length. Valid values are *a..z*, *A..Z*, *0..9*.

Default:

No change to the current value

System Default:

null

maxtps (optional)

Maximum TPS. This is the maximum TPS for a diameter connection. The unused card capacity will be allocated among the connections that have exceeded their RSVDTPS up to the limit of the MAXTPS value provisioned for the particular connection.

Range:

100 - 8000

Default:

No change to the current value

System Default:

8000

rsvdtps (optional)

Reserved TPS. This is the guaranteed TPS (Transactions per second) for a diameter connection. Total RSVDTPS on a card cannot exceed 8000.

Range:

100 - 8000

Default:

No change to the current value

System Default:

250

td (optional)

Diameter Peer Disconnect timer. This timer is used to control how long the S13 process will wait for a DPA (Disconnect Peer Answer) response before sending a DPR (Disconnect Peer Request). The value given to a timer is in seconds.

Range:

1 - 10

Default:

No change to the current value

System Default:

3

tw (optional)

Diameter Watchdog timer. This timer is used to control how long the S13 process will wait for a DWA (Diameter Watchdog Answer) response before sending a DWR (Diameter Watchdog Request). The value given to a timer is in seconds.

Range:

6 - 30

Default:

No change to the current value

System Default:

6

Example

```
ent-dconn:dcname=connection1:aname=assoc1:rsvdtps=1000
ent-
dconn:dcname=connection2:aname=assoc2:rsvdtps=500:td=5:tw=10
ent-dconn:dcname=connection3:aname=assoc3:maxtps=5000:td=2
```

Dependencies

S13/S13' EIR feature must be enabled before entering any diameter connection.

2724 E2724 Cmd Rej: S13 Feature Must Be Enabled

DCONN table should be accessible.

2735 E2735 Cmd Rej: Failed reading DCONN table

A unique DCNAME must be specified for a new connection.

2588 E2588 Cmd Rej: Connection Name already exists

The adapter for the association linked to diameter connection on DEIR card must be of type DIAM.

2799 E2799 Cmd Rej: Association adapter is not DIAM

ANAME must be present in IPAPSOCK table.

4099 E4099 Cmd Rej: Association name not found

ANAME cannot be assigned to another diameter connection.

2792 E2792 Cmd Rej: Association already assigned to Connection

Any OPEN association cannot be assigned to a new diameter connection (the open parameter set to *yes/no* with the *chg-assoc* command).

3448 E3448 Cmd Rej: LHOST has open socket or association

RSVDTPS of all the diameter connections on a particular card must not exceed the MAXTPS.

2808 E2808 Cmd Rej: TPS exceeded on DEIR card

RSVDTPS of a diameter connection must be less than or equal to MAXTPS.

2732 E2732 Cmd Rej: RSVDTPS must be less than or equal to MAXTPS

Notes

The `ent-assoc` command should be used to configure an association for the adapter type = DIAM prior to establishing any diameter connection.

Maximum of 32 connections can be provisioned per Diameter card and maximum of 16 diameter cards are allowed. So, maximum of 512 diameter connections can be provisioned.

Output

```
ent-dconn:dcname=connection1:aname=assoc1:rsvdtps=1000
```

```
tekelecstp 13-03-20 15:04:28 EST EAGLE 45.1.0
ent-dconn:dcname=connection1:aname=assoc1:rsvdtps=1000
Command entered at terminal #4.
ENT-DCONN: MASP A - COMPLTD
;
```

```
ent-dconn:dcname=connection3:aname=assoc3:maxtps=5000:td=2
```

```
tekelecstp 12-06-25 15:04:28 EST EAGLE 45.1.0
ent-dconn:dcname=connection3:aname=assoc3:maxtps=5000:td=2
Command entered at terminal #4.
```

```
ENT-DCONN: MASP A - COMPLTD  
;
```

Related Topics

- [chg-dconn](#)
- [dlt-dconn](#)
- [rtrv-dconn](#)

4.1.288 ent-dlk

Use this command to add a TCP/IP data link to the database. The TCP/IP data link is used to send copies of SS7 MSUs (selected by the gateway screening feature) to a remote host for further processing.

Parameters

ipaddr (mandatory)

The TCP/IP data link's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is *192.126.100.5*, where *192.126.100* is the network number and *5* is the machine's host number.

Range:

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

auto (optional)

Automatic. This parameter specifies whether the hardware automatically determines duplex and speed.



Note:

This parameter is valid only for E5-ENET-B cards

Range:

yes

Duplex and speed are automatically determined.

no

Duplex and speed are not automatically determined.

Default:

yes

duplex (optional)

The mode of operation of the interface

**Note:**

This parameter is valid only for E5-ENET-B cards

Range:***half***

The mode of operation of the interface is half duplex.

full

The mode of operation of the interface is full duplex.

Default:

half

speed (optional)

The bandwidth for the interface in megabits per second

Range:

10

100

Default:

10

Example

```
ent-dlk:loc=1201:ipaddr=196.3.202.45
```

```
ent-dlk:loc=1101:ipaddr=192.168.63.11:speed=10:duplex=half
```

```
ent-dlk:loc=1107:ipaddr=192.168.63.12:auto=yes
```

Dependencies

The shelf and card must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The IP address (*ipaddr*) cannot be in the TCP/IP link table and cannot be a TCP/IP node.

2607 E2607 Cmd Rej: IPADDR assigned to a TCP/IP node

The specified card cannot contain any data links.

2133 E2133 Cmd Rej: There is a link already assigned to this port

The specified card's status must be out of service maintenance disabled (OOS-MT-DSBLD).

Enter the `rept-stat-card` command to verify the state of the card.

2603 E2603 Cmd Rej: Card must be inhibited before executing this command

The specified TCP/IP data link cannot be in the database.

2638 E2638 Cmd Rej: IPADDR already assigned to another TCP/IP link

2071 E2071 Cmd Rej: Network Portion Invalid

If the `auto=yes` parameter is specified, then the `speed` and `duplex` parameters cannot be specified.

3740 E3740 Cmd Rej: If AUTO=yes, Then Duplex and SPEED are not allowed

The `speed` and `duplex` parameters must be specified together in the command.

3343 E3343 Cmd Rej: Speed and Duplex must be specified together

If the `speed=100` parameter is specified, then an E5-ENET-B card must be used.

4490 E4490 Cmd Rej: Card type must be DCM/SLIC for a 100Mbit link

The IP address (`ipaddr`) cannot be in the TCP/IP link table and cannot be a TCP/IP router.

2636 E2636 Cmd Rej: IPADDR assigned to a TCP/IP Router

Notes

The value of the `ipaddr` parameter cannot match the TCP/IP default router's IP address (the `iprte` parameter of the `ent-ip-node` command).

Output

```
ent-dlk:loc=1201:ipaddr=196.3.202.45
```

```
tekelecstp 07-04-03 11:12:34 EST EAGLE 37.0.0
ENT-DLK: MASP A - COMPLTD
;
```

The following example issues an error message because the first octet of the IP address is a loopback address. `ent-dlk:loc=1201:ipaddr=127.3.202.45`

```
rlghncxa03w 07-04-03 11:43:04 EST EAGLE 37.0.0
Command Rejected : First octet of IPADDR cannot be 127.
ENT-DLK: MASP A - COMPLTD
;
```

Related Topics

- [act-dlk](#)
- [canc-dlk](#)
- [dlt-dlk](#)
- [rept-stat-dlk](#)
- [rtrv-dlk](#)

- [tst-dlk](#)

4.1.289 ent-dstn

Use this command to add a destination address (a destination point code, capability point code, or network cluster address) and the associated destination attributes to the destination point code table.

Caution:

When using the Network Routing feature, limited network management is provided for point codes not covered by full point code routing, Cluster Routing, or Nested Cluster Routing.

Parameters

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (mandatory)

Destination point code.

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

p-, *000-255*, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-p-

The asterisk value (*) is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, *0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000-255

ssa—000-255

sp—000-255

Default:

No change to current value.

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*). The *prefix* indicates a private point code (*prefix-un-sna-mna*).

Range:

p-, 000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-p

un-000-127

sna-000-15

mna-000-31

Default:

No change to the current value.

aliasa/aliasi/aliasn/aliasn24/aliasn16 (optional)

Alias point code.

aliasa (optional)

ANSI alias point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. This parameter is not valid if an ANSI (DPC or DPCA) point code is entered.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

aliasi (optional)

ITU international alias point code list with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

If an ITU international destination (DPCI) point code is entered, then the *dpci* and *aliasi prefix* subfields cannot be the same (both spare or both non-spare). Up to 2 comma-delimited entries can be entered in the point code list.

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

aliasn (optional)

ITU national alias point code list in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

If an ITU national destination (DPCN) point code is entered, then the *dpcn* and *aliasn prefix* subfields cannot be the same (both spare or both non-spare). Up to 2 comma-delimited entries can be entered in the point code list.

Range:*s-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**aliasn24 (optional)**24-bit ITU national alias point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. This parameter is not valid if a 24-bit ITU national (DPCN24) point code is entered.**Range:**

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*msa—000–255**ssa—000–255**sp—000–255***aliasn16 (optional)**16-bit ITU national *alias* point code with subfields *unit number-sub number area-main number area (un-sna-mna)*. This parameter is not valid if a 16-bit ITU national (DPCN16) point code is entered.**Range:**

000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*un-000-127**sna-000-15**mna-000-31***bei (optional)**

Broadcast exception indicator. This parameter specifies whether the STP broadcasts network management messages to adjacent signaling points.

**Note:**

The network management messages contain information about the indicated cluster and any of that cluster's member signaling points that are on its exception list. The messages whose broadcast is determined by this parameter are:

- TFP—transfer prohibited
- TCP—transfer cluster prohibited

- TFA—transfer allowed
- TCA—transfer cluster allowed

Range:**yes**

Network management messages are not broadcast

no

Network management messages are broadcast

Default:

yes —If the DPC is a member whose associated cluster destination has `bei=yes` specified.

no —for DPCs in the cluster or if the DPC is a member whose associated cluster destination has `bei=no` specified or the `bei` parameter is not specified.

c11i (optional)

The Common Language Location Identifier assigned to this destination.

Range:

ayyyyyyyyy

1 alphabetic character followed by 10 alphanumeric characters

Default:

Null string

domain (optional)

The network in which the destination entity or node exists.

Range:

ss7

Default:

ss7

e1ei (optional)

Exception-list exclusion indicator, for cluster destinations only. This parameter specifies whether the system excludes or includes (maintains) a dynamic status exception list (x-list) for each cluster route used to reach the member signaling points that make up the cluster.

Range:**yes**

Do not maintain a dynamic status x-list

no

Maintain a dynamic status x-list

Default:

no

homescp (optional)

This parameter specifies whether the destination point code (DPC) is considered a Home SCP when performing SCCP processing for messages with no Global Title Address Digits (Global Title Indicator (GTI) is set to zero)

This parameter can only be set to "yes" for full DPCs.

Range:**yes**

the DPC is considered a Home SCP

no

the DPC is not considered a Home SCP

System Default:

no

homesmsc (optional)

This parameter specifies whether the DPC is considered a Home SMSC when performing SCCP processing for messages with no Global Title Address Digits (GTI is set to zero).

This parameter can only be set to "yes" for full DPCs.

Range:**yes**

the DPC is considered a Home SMSC

no

the DPC is not considered a Home SMSC

System Default:

no

ncai (optional)

Nested cluster allowed indicator. Specifies whether the route to the cluster point code can be different for provisioned members of the cluster. A point code is a member of a cluster point code if it has the same network identifier (NI) and network cluster (NC) values as the cluster point code. This parameter can be specified only for cluster point codes. Nested cluster routing is allowed if this parameter is set to *yes* and the CRMD and NCR features are turned on.

Range:**yes**

The cluster point code is a nested cluster point code. Point codes that are members of this cluster point code can be assigned to route sets that are different from the route set assigned to the cluster point code.

no

The cluster point code is not a nested cluster point code. Point codes that are members of this cluster point code must be assigned to the same route set assigned to the cluster point code.

Default:

no

nprst (optional)

NM bits reset. This parameter specifies whether the NM bits should be set to 00. This parameter applies only to ITU IAM messages. The `nptype=nm` parameter must be specified (see the `chg-tifopts` command) before this parameter can be specified.

Range:**off**

Do not set NM Bits to 00 in an ITU IAM message if the TIFOPTS `nptype` option value is *nm*

on

Set the NM Bits to 00 in an ITU IAM message if the TIFOPTS `nptype` option value is *nm*

System Default:

off

ppc/ppca/ppci/ppcn/ppcn24/ppcn16 (optional)

Proxy point code.

The proxy point code must be a full point code.

ppc (optional)

ANSI proxy point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

The proxy point code must be a full point code.

Synonym:

ppca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

ppci (optional)

ITU international proxy point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

ppcn (optional)

ITU national proxy point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

ppcn24 (optional)

24-bit ITU national proxy point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

ppcn16 (optional)

16-bit ITU national proxy point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un-000-127

sna-000-15

mna-000-31

prx (optional)

Proxy point code indicator. This parameter specifies whether a destination is used as a proxy point code.

Range:

yes

The destination is used as a proxy point code.

no

The destination is not used a proxy point code.

Default:

no

Will not be used as a proxy point code.

rcause (optional)

Release cause. The condition that triggers the sending of a Release message.

 **Note:**

If the `rlcopc` parameter is specified (see the `chg-tifopts` command), and a value of 0 - 127 is specified for the `rcause` parameter, then the `rcause` parameter value overrides the values specified for the TIFOPTS `rcausenp` and `rcausepfx` parameters.

Range:

0 - 127, *none*

none —use the values specified for the TIFOPTS table's `rcausenp` and `rcausepfx` parameters

System Default:

none

sccpmsgcnv (optional)

SCCP UDT(S)/XUDT(S) Message Conversion Indicator. The type of conversion performed on messages for the specified destination.

Range:***none***

conversion is not required on messages for the destination

udt2xudt

convert all UDT(S) messages for the destination to XUDT(S) messages

xudt2udt

convert all non-segmented XUDT(S) messages for the destination to UDT(S) messages

sxudt2udt

convert all segmented and non-segmented XUDT(S) messages for the destination to UDT(S) messages

Default:

none

spc/spca/spci/spcn/spcn24/spcn16 (optional)

Secondary point code.

spc (optional)

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

spca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

spci (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

spcn (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

spcn24 (optional)

24-bit ITU national secondary point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:*p*-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p**msa*—000—255*ssa*—000—255*sp*—000—255**spcn16 (optional)**16-bit ITU national secondary point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). The *prefix* indicates a private point code (*prefix-un-sna-mna*).**Range:***p*-, 000-127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---*p**un*--000---127*sna*---000---15*mna*---000---31**splitiam (optional)**

This parameter specifies when and how to split an ITU IAM message into 1 IAM message + 1 SAM message.

This parameter applies only to ITU IAM messages.

Range:15-31, *none*

15-31 - Maximum number of CdPN digits allowed in the IAM message before splitting occurs. The remaining digits, up to a total of 32, are encoded in the SAM message.

none -the value specified for the TIFOPTS table's *splitiam* parameter is used to determine when to split the IAM message**System Default:***none***Example**

To add destination 8-1-1 with CLLI of systest1:

ent-dstn:dpc=8-1-1:clli=systest1:bei=yes

To add destination 8 with ITU and national aliases:

ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

To add cluster 20-2-*:

ent-dstn:dpc=20-2-*:elei=yes:bei=yes

To add a destination with an SPC of 100:

ent-dstn:dpc=20-2-2:spc=100-100-100

To add nested cluster 21-2-*:

```
ent-dstn:dpc=21-2-*:elei=yes:bei=yes:ncai=yes
```

To add network routing destination 21-*-*:

```
ent-dstn:dpc=21-*-*
```

To add ITU national destination 7654 with a group code of FR and secondary point code of 7050:

```
ent-dstn:dpcn=7654-fr:spc=7050-fr
```

To add ITU-N 24-bit destination 15-100-10:

```
ent-dstn:dpcn24=15-100-10:bei=no
```

To add a 24-bit ITU-N destination with a 24-bit ITU-N secondary point code of 99:

```
ent-dstn:dpcn24=12-12-12:spcn24=99-99-99
```

To add destination 1-6-1 with a 24-bit ITU-N alias:

```
ent-dstn:dpci=1-6-1:aliasn24=4-4-4
```

To add private ANSI destination point code p-100-100-101 with spare point code alias s-1-123-1:

```
ent-  
dstn:dpc=p-100-100-101:spca=2-2-3:aliasi=s-1-123-1:aliasn=128
```

To add spare ITU-I destination point code s-2-100-1 with ANSI alias point code 121-120-120 and ITU-N alias spare point code s-129:

```
ent-  
dstn:dpci=s-2-100-1:spci=s-2-129-9:aliasa=121-120-120:aliasn=s-  
129
```

To add spare ITU-N destination point code s-231 with ITU-N secondary point code 129, ANSI alias point code 120, and ITU-I alias spare point code s-2-123-2:

```
ent-  
dstn:dpcn=s-231:spcn=129:aliasa=120-120-122:aliasi=s-2-123-2
```

To define a destination as a proxy point code:

```
ent-dstn:dpc=11-11-11:prx=yes
```

To associate a proxy point code with a destination point code:

```
ent-dstn:dpc=11-11-11:ppc=2-7-2
```

To add ITU-I destination point code 3-30-3 with ITU-I spare alias s-3-30-3:

```
ent-dstn:dpci=3-30-3:aliasi=s-3-30-3
```

To add ITU-N destination point code 8199-aa with ITU-I aliases s-4-0-7 and 4-0-7:

```
ent-dstn:dpcn=8199-aa:aliasi=s-4-0-7,4-0-7
```

To add destination 11 with SCCPMSGCNV type as UDT2XUDT:

```
ent-dstn:dpc=11-11-11:sccpmsgcnv=udt2xudt
```

To add ITU-N 16-bit destination 121-10-5:

```
ent-dstn:dpcn16=121-10-5
```

Dependencies



Note:

A full point code contains numerical values for all three segments of the point code.

The ANSI self-ID destination point code for the STP must be defined before ANSI destinations can be entered.

2725 E2725 Cmd Rej: ANSI site id not defined

The ITU-I self-ID destination point code for the STP must be defined before ITU-I destinations can be entered.

2726 E2726 Cmd Rej: ITU-INTL site id not defined

The ITU-N self-ID or SPCN destination point code for the STP must be defined before ITU-N destinations can be entered.

2727 E2727 Cmd Rej: ITU-NATL site id not defined

The 24-bit ITU-N self-ID or SPCN24 destination point code for the STP must be defined before 24-bit ITU-N destinations can be entered. (See the `chg-sid` command.)

2785 E2785 Cmd Rej: ITU-N 24bit site id not defined

The Destination point code table can contain up to 2000 entries.

2359 E2359 Cmd Rej: Route table is full

The destination address must be a full point code or a cluster point code.

2886 E2886 Cmd Rej: DSTN address must be a full, network or cluster PC

The specified destination address cannot already exist in the Destination entity set.

2333 E2333 Cmd Rej: DPC is already being used

A destination address cannot already be defined as an alias address.

2322 E2322 Cmd Rej: Alias defined as a destination point code

The Spare Point Code Support feature must be enabled before the spare point code prefix (s-) can be specified for an ITU-I or ITU-N destination, secondary, or alias point code.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The specified `dpc` value cannot match the point code, secondary point code, or capability point code of the system.

2168 E2168 Cmd Rej: Point code matches a STP point code

A destination can have up to two alias point codes. A destination alias point code type (ANSI, ITU-I, ITU-N, ITU-N24) must not match that destination's true point code type. If both alias point codes are defined, the point code types of the aliases must not match.

4238 E4238 Cmd Rej: Point code matches a STP secondary point code.

Alias point codes are supported only for full point code destinations.

2854 E2854 Cmd Rej: Alias PCs are not valid for cluster destinations

Alias point codes for destinations must be full point codes.

2863 E2863 Cmd Rej: Destination's alias PCs must be full PCs

An alias point code cannot already be defined as a destination point code.

2332 E2332 Cmd Rej: Point code defined as an alias

The format of the specified `dpcn` or `aliasn` parameter must match the format that was assigned with the `chg-stpopts:npcfmti` parameter.

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

If the 7000 Routesets or 8000 Routesets feature is enabled, then the total number of provisioned aliases in the system cannot exceed 8000. If the 10,000 Routesets feature is enabled, then the total number of provisioned aliases in the system cannot exceed 10000.

4298 E4298 Cmd Rej: Alias PC table is full

If an ANSI or ITU-I point code is specified, the `aliasn` or the `aliasn24` parameter can be specified, but not both.

3497 E3497 Cmd Rej: Either ALIASN or ALIASN24, not both, for destination

A 24-bit ITU-N point code cannot have:

- A 14-bit ITU-N alias point code
- An ANSI alias point code

2839 E2839 Cmd Rej: Invalid parameter for ITU-N 24bit point code

A 24-bit ITU-National point code can have an ITU-I point code alias. This allows conversion of 14-bit ITU-I routing label to 24-bit routing label and vice versa.

2839 E2839 Cmd Rej: Invalid parameter for ITU-N 24bit point code

An ITU-I point code can have either a 14-bit ITU-N alias or a 24-bit ITU-N alias, but not both.

3497 E3497 Cmd Rej: Either ALIASN or ALIASN24, not both, for destination

A 14-bit ITU-N point code cannot have a 24-bit ITU-N alias point code.

2839 E2839 Cmd Rej: Invalid parameter for ITU-N 24bit point code

An ANSI point code cannot have a 24-bit ITU-N alias point code.

2839 E2839 Cmd Rej: Invalid parameter for ITU-N 24bit point code

The CRMD feature must be turned on before a cluster destination point code (*ni-nc-**) can be specified.

2855 E2855 Cmd Rej: Cluster DPCs are only valid if the CRMD feature is ON

A cluster destination cannot be defined using the same network identifier (*ni*) and network cluster (*nc*) subfields of any previously defined alias ANSI point codes.

2875 E2875 Cmd Rej: Network/Cluster cannot have alias DPC members

The CRMD (Cluster Routing and Management Diversity) and NCR (Nested Cluster Routing) features must be turned on before the `ncai` parameter can be specified.

2856 E2856 Cmd Rej: ELEI is only valid if the CRMD feature is ON

If the `ncai=yes` parameter is specified, then the maximum number of provisioned nested clusters must be no greater than 500.

2836 E2836 Cmd Rej: Too many nested cluster dstn entered

When a cluster point code is specified, the collection of signaling points sharing the same network identifier (*ni*) and network cluster (*nc*) subfields must have the same route set.

2877 E2877 Cmd Rej: NCAI required if cluster members have different route set

Cluster DPCs are not allowed to inherit cluster members that have routes with A or E linkset types.

4260 E4260 Cmd Rej: Cluster DPCs can't inherit A or E linkset types

Network routing is valid only if the Network Routing (NRT) feature is turned on.

2955 E2955 Cmd Rej: Network Routing is only valid if the NRT feature is ON

When using network routing, if the destination point code has a value of * in the *nc* subfield, the *ncm* subfield must also be * (e.g., `dpc=21-**-*`).

2956 E2956 Cmd Rej: NCM must be * when using Network Routing

The `ncai` parameter can be specified only for cluster destinations.

2869 E2869 Cmd Rej: NCAI parm is only valid if both feat CRMD & NCR are ON

Alias ANSI point codes cannot have the same network identifier (*ni*) and network cluster (*nc*) subfields as a cluster point code that is already defined.

2876 E2876 Cmd Rej: Alias DPCs cannot be a member of a Network or Cluster

The CRMD feature must be turned on before the `elei` parameter can be specified.

2856 E2856 Cmd Rej: ELEI is only valid if the CRMD feature is ON

The `elei` parameter can be specified only for cluster destinations (e.g., `dpc=ni-nc-*`).

2853 E2853 Cmd Rej: ELEI is only valid for cluster destinations

The CLLI of the destination point code cannot match the CLLI of the system.

2163 E2163 Cmd Rej: CLLI used by STP

A reserved word cannot be specified for the destination identifier (`clli`).

3040 E3040 Cmd Rej: <string> cannot be used in this command

If the corresponding destination for the specified destination point code is an adjacent signaling point (matched a Far End point code in its linkset entity set), the CLLI of the specified destination point code cannot be assigned to any other destination address.

2163 E2163 Cmd Rej: CLLI used by STP

The value of the `dpc` parameter must be a valid point code.

2340 E2340 Cmd Rej: Invalid point code

If specified, the `spc` parameter value must already be configured as a secondary point code in the Secondary Point Code table.

3814 E3814 Cmd Rej: SPC does not exist

The value specified for the `spc` parameter must be a full point code.

3822 E3822 Cmd Rej: SPC must be a full point code

If the `spc` parameter is specified, the `domain=ss7` parameter must be specified.

3823 E3823 Cmd Rej: Domain must be SS7 if SPC is specified

If the `spc` parameter is specified, then the value specified for the `dpc` parameter must be a full point code.

2859 E2859 Cmd Rej: Destination address must be a full point code

The network type of the value specified for the `spc` parameter must match the network type of the value specified for the `dpc` parameter.

3821 E3821 Cmd Rej: SPC & DPC must be the same network type

If an ITU national destination is provisioned and the ITUDUPPC feature is turned on, and if the destination does not use an SPC, the group code of the destination must be the same as the group code of the ITU national true point code.

For example, if the ITU national true point code has a group code of `ee`, then you can add destinations with group codes of `ee` without using an SPC. Destinations with a group code of `ff`, however, must use an SPC with a group code of `ff`.

3880 E3880 Cmd Rej: Grp Code of dstn & True PC must match if no Secondary PC

The Route table cannot be full.

2359 E2359 Cmd Rej: Route table is full

If an ITU national destination is provisioned and the ITUDUPPC feature is turned on, and if the destination uses an SPC, then the group code of the destination must match the group code of the SPC.

For example, if the ITU national true point code has a group code of `ee`, then you can add destinations with group codes of `ee` without using an SPC. Destinations with a group code of `ff`, must use an SPC with a group code of `ff`.

3881 E3881 Cmd Rej: Group Code and/or Spare Point Code of DPC and SPC must match

The `ncai` parameter can be specified only for cluster destinations (for example (`dpc=ni-nc-*`)).

2868 E2868 Cmd Rej: Invalid NCAI parameter has been entered

The value of the `clli` parameter cannot already exist in the Route table.

2184 E2184 Cmd Rej: CLLI is already being used by a route

The ICNP feature must be turned on before the `icnpxlat`, `cgpafmt`, and `cdpafmt` parameters can be specified.

4497 E4497 Cmd Rej: ICNP feature must be activated

The NCR feature must be enabled before the `ncai` parameter can be enabled.

2837 E2837 Cmd Rej: NCR must be enabled to enter NCAI param

The MAS configuration table is corrupt or cannot be found.

2145 E2145 Cmd Rej: Failed reading MAS configuration table

The route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

If the 6000 Routesets feature is turned on, and the destination point code to be provisioned is above 5000, then the GPSM-II OAM cards must be used.

3284 E3284 Cmd Rej: OAM card(s) must be of type GPSM-II

The `alias` parameter must be specified with a different point code type than the `dpc` parameter.

The `aliasa` and `dpca` parameters cannot be specified together in the command. The `aliasi` and `dpci` parameters and the `aliasn` and `dpcn` parameters cannot be specified together in the command if the `prefix` subfields are the same (both are spare or both are non-spare).

2325 E2325 Cmd Rej: Alias type matches DPC type

The Proxy Point Code feature must be enabled before the `prx=yes` parameter can be specified.

4677 E4677 Cmd Rej: PRX allowed only if PPC feature is enabled

The Proxy Point Code feature must be enabled before the `ppc` parameter can be specified.

4678 E4678 Cmd Rej: PPC allowed only if PPC feature is enabled

If the `ppc` parameter or the `prx=yes` parameter is specified, then the value specified for the `dpc` parameter must be a full point code.

2859 E2859 Cmd Rej: Destination address must be a full point code

The `spc` and `ppc` parameters cannot be specified together in the command.

4681 E4681 Cmd Rej: SPC and PPC are mutually exclusive

The values specified for the `dpc` and `ppc` parameters must have the same network type.

4682 E4682 Cmd Rej: PPC and DPC must be of the same network type

The values specified for the `dpc` and `ppc` parameters must have the same group code.

4683 E4683 Cmd Rej: Group code of PPC and DPC must match

The number of proxy destinations cannot exceed the value given by the enabled Proxy Point Code quantity feature.

4684 E4684 Cmd Rej: Allowed Proxy PC capacity exceeded

If the value of the `dpc` parameter is a private point code, then the `prx=yes` parameter cannot be specified.

4723 E4723 Cmd Rej: PRX=YES not supported for Private PC

If the value of the `dpc` parameter is a private point code, then the `ppc` parameter cannot be specified.

4722 E4722 Cmd Rej: PPC not supported for Private PC

The `dpc` parameter and the `prx=yes` parameter must be specified before the `ppc` parameter can be specified.

4724 E4724 Cmd Rej: Proxy PC not defined in route(dstn) table

The total number of proxy destinations cannot exceed the total capacity (100) of the Proxy Point Code feature.

4730 E4730 Cmd Rej: Maximum Proxy PC capacity exceeded

The `prx` parameter must have a value of `yes` or `no`.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

Cluster destination point codes cannot inherit cluster members that have routes using proxy linksets.

4731 E4731 Cmd Rej: Cluster DPCs can't inherit PRX linkset type

The spare ITU-I self-ID destination point code for the STP must be defined before spare ITU-I destinations can be entered.

4787 E4787 Cmd Rej: SPARE ITU-INTL site id not defined

The spare ITU-N self-ID destination point code for the STP must be defined before spare ITU-N destinations can be entered.

4788 E4788 Cmd Rej: SPARE ITU-NATL site id not defined

A maximum of two aliases can be specified per destination point code.

5001 E5001 Cmd Rej: Up to two alias PCs are supported per DPC

If the `dpci` parameter is specified, then a combination of ITUI and ANSI aliases cannot be specified. If the `dpcn` parameter is specified, then a combination of ITUN and ANSI aliases cannot be specified.

5074 E5074 Cmd Rej: ITU destination does not support ANSI/ITU alias combination

Two ITUI or two ITUN aliases can be specified for the same destination point code only if the aliases have different prefixes. One alias must be spare and one non-spare.

4985 E4985 Cmd Rej: Destination does not support same ITU ntwk alias combination

The TIF Number Portability feature must be enabled before the `rcause` or `nprst` parameter can be specified.

3357 E3357 Cmd Rej: TIF feature must be enabled

A TIF feature must be enabled before the `splitiam` parameter can be specified.

4982 E4982 Cmd Rej: At least one TIF feature must be enabled

The XUDT UDT Conversion feature must be turned on before the `sccpmsgcnv` parameter can be specified.

5384 E5384 Cmd Rej: XUDT UDT Conversion feature must be activated

The value specified for the `ppc` parameter must already exist in the DSTN table and the `prx=yes` parameter must be assigned.

4728 E4728 Cmd Rej: PPC destination in route(dstn) table is not proxy

ITU-N16 destination cannot be provisioned if ITU-N16 site id is not provisioned.

2806 E2806 Cmd Rej: ITU-N 16bit site id not defined

The J7 Support feature must be enabled before the `aliasn16` parameter can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

If the J7 Support feature is enabled then the `aliasa` and `aliasn24` parameters cannot be specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled.

Spare point codes for `aliasn 1` and `aliasn 2` must be different, and spare point codes for `aliasi 1` and `aliasi 2` must be different.

4992 E4992 Cmd Rej: ITU aliases with matching Spares are not allowed

Notes

Upon initial installation of the system, the self point code must be entered before you enter any destination.

When you define a DPC with the unique destination signaling point of a provisioned cluster, the DPC automatically inherits the route set of its cluster if the `ncai=no` parameter is specified. If the `ncai=yes` parameter is specified, the provisioned members can have a different route set.

When you define a cluster point code for previously defined destination signaling points, the cluster automatically inherits the unique route set of its members.

For ITU national duplicate point codes, you cannot change a destination's group code. To move a destination from one group to another, provision a new destination that uses the new group code and delete the old destination.

The system requires that the destination point code of each routeset be entered in the database. For example, to enter 6000 routesets in the database, 6000 destination point codes must be entered in the database.

If you have turned on the 5000 Routes feature, prior to provisioning the additional routing table entries, you must issue the `chg-stpopts` command to specify the maximum number of allowed DPCs and dynamic x-list entries.

If the 6000, 7000, 8000, or 10,000 Routesets feature is enabled, then in order to enter more than 2000 destination point codes, the maximum number of point codes that can be configured on the system must be changed to 6000, 7000, 8000, or 10000 respectively, using the `mtpdpcq` parameter of the `chg-stpopts` command.

In this command, only ITU-international and ITU national point codes and aliases support the spare point code subtype prefix (s-). Only ITU-international and ITU national point codes support the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-). Aliases do not support the private (internal) point code prefix.

If the Proxy Point Code feature is enabled, then the value specified for the `ppc` or `dpc` parameter (when the destination point code is designated as a proxy point code) must be full point codes. Cluster point codes and private point codes are not supported.

One of `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` is mandatory and they are mutually exclusive.

Only one of `aliasa/aliasi/aliasn/aliasn24/aliasn16` can be specified as they are mutually exclusive.

Only one of `spc/spca/spci/spcn/spcn24/spcn16` can be specified as they are mutually exclusive.

Output

This example shows the output with the NCR, NRT, and CRMD features off and all Routes and Routesets features off:

```
ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124
```

```
rlghncxa03w 04-08-17 15:35:05 EST EAGLE 31.8.0
Destination table is (10 of 2000) 1% full
Alias table is (8 of 12000) 1% full
ENT-DSTN: MASP A - COMPLTD
;
```

This example shows the output with the NCR, NRT, and CRMD features off and the DSTN5000 (5000 Routes) feature on:

```
ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124
```

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (10 of 5000) 1% full
Alias table is (8 of 12000) 1% full
ENT-DSTN: MASP A - COMPLTD
;
```

This example shows the output with one or more of the NCR, NRT, or CRMD features on and the DSTN5000 (5000 Routes) feature on:

```
ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124
```

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 5000
  FULL DPC(s): 9
  NETWORK DPC(s): 0
  CLUSTER DPC(s): 1
  TOTAL DPC(s): 10
  CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 12000
  ALIASES USED: 8
  CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
```

```
ENT-DSTN: MASP A - COMPLTD
;
```

This example shows the output with the NCR, NRT, and CRMD features off and the 6000 Routesets feature on:

```
ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 6000) 1% full
Alias table is (8 of 12000) 1% full
ENT-DSTN: MASP A - COMPLTD
;
```

Thus example shows the output with one or more of the NCR, NRT, or CRMD features on and the 6000 Routesets feature on:

```
ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 6000
  FULL DPC(s): 46
  NETWORK DPC(s): 1
  CLUSTER DPC(s): 1
  TOTAL DPC(s): 12
  CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 12000
  ALIASES USED: 8
  CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
ENT-DSTN: MASP A - COMPLTD
;
```

This example shows the output with the NCR, NRT, and CRMD features off. When the 7000 Routesets quantity feature is on, the Destination table line shows "...of 7000". When the 8000 Routesets quantity feature is on, the Destination table line shows "...of 8000."

```
ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 7000) 1% full
Alias table is (8 of 8000) 1% full
ENT-DSTN: MASP A - COMPLTD
;
```

This example shows the output with one or more of the NCR, NRT, or CRMD features on. When the 7000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "7000". When the 8000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "8000."

```
ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124
```

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 8000
  FULL DPC(s): 9
  NETWORK DPC(s): 0
  CLUSTER DPC(s): 1
  TOTAL DPC(s): 10
  CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 8000
  ALIASES USED: 8
  CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
ENT-DSTN: MASP A - COMPLTD
;
```

This example shows the output when none of the NCR, NRT, or CRMD features on. A destination is defined as a proxy point code.

```
ent-dstn:dpc=11-11-11:prx=yes
```

```
tekelecstp 07-03-07 16:34:32 EST EAGLE 37.5.0
Destination table is (11 of 2000) 1% full
Alias table is (0 of 12000) 0% full
PPC table is (2 of 10) 20% full
ENT-DSTN: MASP A - COMPLTD
;
```

This example shows the output when one or more of the NCR, NRT, or CRMD features are on. The destination refers to a proxy point code.

```
ent-dstn:dpc=1-1-1:ppc=11-11-11
```

```
tekelecstp 07-03-05 17:34:18 EST EAGLE 37.5.0
DESTINATION ENTRIES ALLOCATED: 2000
  FULL DPC(s): 27
  EXCEPTION DPC(s): 0
  NETWORK DPC(s): 1
  CLUSTER DPC(s): 1
  Proxy DPC(s): 1
  TOTAL DPC(s): 30
  CAPACITY (% FULL): 2%
ALIASES ALLOCATED: 12000
  ALIASES USED: 0
  CAPACITY (% FULL): 0%
X-LIST ENTRIES ALLOCATED: 500
ENT-DSTN: MASP A - COMPLTD
;
```

This example shows the output when the NCR, NRT, and CRMD features are off and the 10,000 Routesets feature is on:


```
ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

rlghncxa03w 10-08-17 08:29:15 EST EAGLE 43.0.0
Destination table is (10 of 10000) 1% full
Alias table is (8 of 10000) 1% full
ENT-DSTN: MASP A - COMPLTD

;
```

This example shows the output when one or more of the NCR, NRT, or CRMD features and the 10,000 Routesets feature is on:

```
ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

rlghncxa03w 10-08-17 08:29:15 EST EAGLE 43.0.0
DESTINATION ENTRIES ALLOCATED: 10000
  FULL DPC(s): 9
  NETWORK DPC(s): 0
  CLUSTER DPC(s): 1
  TOTAL DPC(s): 10
  CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 10000
  ALIASES USED: 8
  CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
ENT-DSTN: MASP A - COMPLTD

;
```

This example shows the output when the J7 feature is enabled:

```
ent-dstn:dpci=1-2-6:aliasn16=2-4-6

tekelecstp 13-02-27 13:58:55 EST 45.0.0-64.56.0
ent-dstn:dpc=1-2-6:aliasn16=2-4-6
Command entered at terminal #4.
Destination table is (2 of 2000) 1% full
Alias table is (1 of 12000) 0% full

ENT-DSTN: MASP A - COMPLTD

;
```

Related Topics

- [chg-dstn](#)
- [chg-rte](#)
- [dlt-dstn](#)
- [dlt-rte](#)
- [ent-rte](#)
- [rept-stat-dstn](#)
- [rept-stat-rte](#)

- [rtrv-dstn](#)
- [rtrv-rte](#)

4.1.290 ent-e1

Use this command to enter an interface into the system for E5-E1T1-B cards used as an E1 or SE-HSL cards.

Any of the 8 ports can be specified when the card is used as a standard E1 card. No more than 2 ports on the E5-E1T1-B can have defined E1 interfaces.

Parameters

e1port (mandatory)

E1 card port number. The value must be an E1 port for which an interface has not been configured on the specified E1 card.

Range:

1 - 8

Any 2 of the 8 ports on an E5-E1T1-B card can be specified when the card is used as an SE-HSL card.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

crc4 (optional)

CRC4 enable or disable indicator.

Range:

on

off

Default:

on

encode (optional)

Indicator for use of HDB3 or AMI encoding/decoding.

Range:

hdb3

ami

**Note:**

AMI encoding is supported for cards that are used as E1 cards (not as SE-HSL cards).

Default:

hdb3

linkclass (optional)

Link class for links that are assigned to E1 cards (“channelized” links) or SE-HSL cards (“unchannelized” links).

Range:

chan

unchan

Default:

chan

minsurate (optional)

Minimum signal unit rate. The minimum number of SUs present on a link uniformly distributed. This parameter is valid only when the `linkclass=unchan` parameter is specified for an SE-HSL card.

Range:

500 - 2000

Default:

1000

si (optional)

Value of two Spare International bits of NFAS data.

Range:

0 - 3

Default:

0

sn (optional)

Value of five Spare International bits of NFAS data.

Range:

0 - 31

Default:

0

t1tse1 (optional)

Timing source.

Range:*line - slave timing source**external - master timing source***Default:***line***Example**

```
ent-e1:loc=1205:elport=1:crc4=off:encode=hdb3:si=2:sn=12
ent-e1:loc=1205:elport=2:encode=ami
ent-
e1:loc=1203:crc4=on:elport=2:encode=hdb3:linkclass=unchan:minsu
rate=2000
ent-e1:loc=1205:elport=1:crc4=off:encode=hdb3:eltsel=external:
si=2:sn=12
ent-e1:loc=1205:elport=1:crc4=off:encode=hdb3:eltsel=line:
si=2:sn=12
```

Dependencies

The card location specified by the `loc` parameter must be equipped.

4076 E4076 Cmd Rej: E1 card location is unequipped

The card specified by the `loc` parameter must be an LIME1 card type.

2212 E2212 Cmd Rej: Invalid card type for this command

The E1/T1 table is corrupt or cannot be found.

4059 E4059 Cmd Rej: Failed reading the E1/T1 table

The Card (IMT) table is corrupt or cannot be found.

2102 E2102 Cmd Rej: Failed reading the IMT table

The port specified by the `elport` parameter cannot already be equipped with an E1 interface.

4054 E4054 Cmd Rej: The E1PORT at the specified location is already equipped

The `minsurate` parameter can be specified only when the `linkclass=unchan` parameter is specified.

3047 E3047 Cmd Rej: Parameter combination invalid

Only 2 ports can be used for E1 interfaces on an E5-E1T1-B card that is used as an SE-HSL card. Any 2 of the 8 ports can be used on the SE-HSL card.

4044 E4044 Cmd Rej: Only two E1/T1 ports allowed for Linkclass=Unchan

The shelf FAN bit must be turned ON for the shelf on which an E5-E1T1-B card is being used as an E1 or SE-HSL card.

3866 E3866 Cmd Rej: Shelf FAN bit feature must be enabled

HIPR2 cards must be equipped in card locations `xy09` and `xy10` (`x` is the frame, `y` is the shelf) on each EAGLE shelf that contains one or more E5-E1T1-B cards that are used as E1 or SE-HSL cards.

3490 E3490 Cmd Rej: HIPR/HIPR2 must be equipped on the shelf for this card

An SE-HSL feature quantity must be enabled before the `linkclass=unchan` parameter can be specified for an SE-HSL card.

4282 E4282 Cmd Rej: An HSL feature key must be enabled for Linkclass=Unchan

Channelized and unchannelized E1 ports (mixed mode) are not allowed on a single card (the card cannot be used as an E1 card and an SE-HSL card at the same time).

4274 E4274 Cmd Rej: Cannot mix Unchannelized and Channelized modes on E1/T1 card

4595 E4595 Cmd Rej: Only one E1/T1 port allowed for Linkclass=Unchan

Card locations 1113 - 1118 (E5-MASP and E5-MDAL cards) cannot be specified as values for the `loc` parameter.

2154 E2154 Cmd Rej: Card slot reserved by system

The `encode=ami` parameter is supported only for cards used as E1 cards (not as SE-HSL cards).

4121 E4121 Cmd Rej: ENCODE = AMI not currently supported

Locations `xy09` and `xy10`, where `x` is the frame and `y` is the shelf, cannot be specified as values for the `loc` parameter.

2016 E2016 Cmd Rej: `<parm_desc>` is out of range - `<parm>`

Notes

One or two E1 interfaces must be defined on an E1 card after the E1 card type (LIME1) is defined in the database (see the `ent-card` command), and before the signaling links and associated timeslots are defined for the E1 card (see the `ent-slk` command).

External timing is derived from the EAGLE High-Speed Master Clock (1.544 MHz for T1 or 2.048 MHz for E1); therefore, the Master Timing feature is required. Line timing is derived from its received data stream, if present.

Up to 8 E1 interfaces can be defined on a card used as an E1 card after the E1 card type (LIME1) is defined in the database (with the `ent-card` command), and before the signaling links and associated timeslots are defined for the E1 card.

For an SE-HSL card, the `minsurate` parameter indicates the least number of SUs present on a link uniformly distributed. The number of SUs present is the `minsurate` parameter value (without link traffic) or the `minsurate` parameter value minus the number of MSUs (with link traffic).

Output

```
ent-e1:loc=1205:elport=1:crc4=off:encode=hdb3:si=2:sn=12
```

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
```

```
ENT-E1: MASP A - COMPLTD
;
```

Related Topics

- [chg-e1](#)
- [dlt-e1](#)
- [rtrv-e1](#)
- [tst-e1](#)

4.1.291 ent-enum-acl

Use this command to make an entry in the ENUM Access Control List (ACL) Table. The ENUM ACL Table supports the provisioning information related to the allowed IP Addresses for the ENUM application.

Parameters

ipaddr (mandatory)

This is a TCP/IP address expressed in standard dot notation. It specifies allowed IP addresses for the ENUM application.

Range:

Four numbers separated by dots, with each number in the range of 0-255, *.



Note:

It also supports wildcard characters as follows:

```
xxx.xxx.xxx.*
```

```
xxx.xxx.*.*
```

```
xxx.*.*.*
```

where xxx can be any number in range of 0-255.

System Default:

```
0.0.0.0
```

Example

```
ent-enum-acl:ipaddr=10.248.13.9
ent-enum-acl:ipaddr=10.248.13.*
ent-enum-acl:ipaddr=10.248.*.*
ent-enum-acl:ipaddr=10.*.*.*
ent-enum-acl:ipaddr6="2003:db8::*"
ent-enum-acl:ipaddr6="2004:1234:abcd::3456:abc6"
ent-enum-acl:ipaddr6="2005:*:*:*:*:*:*:*"
```

Dependencies

The ENUM ACL Table should be accessible.

3182 E3182 Cmd Rej: Failure accessing ENUMACL table

An overlapping IP Address cannot be provisioned in the ENUM ACL Table.

3196 E3196 Cmd Rej: Overlapping entry must be removed

The IP Address specified by the IPADDR parameter must be a valid IP address.

2704 E2704 Cmd Rej: Invalid IPADDR

A maximum of 100 IP addresses can be defined in the ENUM ACL Table.

3193 E3193 Cmd Rej: ENUM ACL table is full

The IP address specified by the IPADDR parameter must be unique.

3760 E3760 Cmd Rej: IP Address must be unique

Notes

Wildcard IP addresses are allowed to support the ranges of IP addresses.

Output

```
ent-enum-acl:ipaddr=10.248.13.*
```

```
tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
ent-enum-acl:ipaddr=10.248.13.*
Command entered at terminal #4.
ENT-ENUM-ACL: MASP A - COMPLTD
;
```

Related Topics

- [dlt-enum-acl](#)
- [rtrv-enum-acl](#)

4.1.292 ent-enum-prof

Use this command to configure the data used to generate the ENUM response for three supported resource record formats such as NAPTR, NS and CNAME. The ENUM Profile Table is used to configure the resource record data.

Parameters

prn (mandatory)

Profile name. This parameter specifies the unique logical name assigned to the profile entry used to generate the ENUM response.

Dependencies

The ENUM Profile Table should be accessible.

3184 E3184 Cmd Rej: Failure accessing ENUMPROF table

The domain name for regular expression (RRDOMAIN) can be specified only with RTYPE=NAPTR.

3190 E3190 Cmd Rej: RRDOMAIN must be specified

For RTYPE=NS or CNAME, the replacement domain name (RPDOMAIN) must be specified.

3191 E3191 Cmd Rej: RPDOMAIN must be specified

The SPARM, PREF and RRDOMAIN parameters are valid only for RTYPE=NAPTR.

The RRDOMAIN parameter is valid for SPARM=SIP or SPARM=PSTNSIP.

2155 E2155 Cmd Rej: Invalid parameter combination specified

A unique profile name must be specified for a new profile.

3206 E3206 Cmd Rej: Profile name must be unique

A maximum of 1024 entries can be provisioned in the ENUM Profile Table.

3222 E3222 Cmd Rej: ENUM PROF Table is full

The RRDOMAIN parameter must be specified with either SPARM=SIP or SPARM=PSTNSIP.

3230 E3230 Cmd Rej: RRDOMAIN must be specified with sparm=sip/pstnsip

A profile name of "none" cannot be specified.

3246 E3246 Cmd Rej: 'none' is an invalid profile name

Notes

The requirement of using PREFIX in the regular expression is only for PSTN-SIP (NAPTR query). As such, PREFIX will not be applied for PSTN-TEL and SIP (NAPTR queries).

PREFIX can be configured for PSTN-TEL and SIP profiles, but it will not be used.

Output

```

> ent-enum-
prof:prn=pr1:rtype=naptr:sparm=pstnsip:rrdomain=abc.oracle.com
  tekelecstp 18-05-29 03:13:20 MST EST EAGLE 46.1.0
  ent-enum-
prof:prn=pr1:rtype=naptr:sparm=pstnsip:rrdomain=abc.oracle.com
  Command entered at terminal #19.
;

```

```

Command Accepted - Processing
  tekelecstp 18-05-29 03:13:20 MST EST EAGLE 46.1.0

```

```
ENT-ENUM-PROF: MASP B - COMPLTD
;
> ent-enum-prof:prn=pr2:rtype=naptr:sparm=pstnsip:rrdomain=abc.oracle.com
tekelecstp 18-05-29 03:15:20 MST EST EAGLE 46.1.0
ent-enum-prof:prn=pr2:rtype=naptr:sparm=pstnsip:rrdomain=abc.oracle.com
Command entered at terminal #19.
;

Command Accepted - Processing
tekelecstp 18-05-29 03:15:20 MST EST EAGLE 46.1.0
ENT-ENUM-PROF: MASP B - COMPLTD
;
> ent-enum-prof:prn=pr3:rtype=ns:rpdomain=def.oracle.com
tekelecstp 18-05-29 03:18:20 MST EST EAGLE 46.1.0
ent-enum-prof:prn=pr3:rtype=ns:rpdomain=def.oracle.com
Command entered at terminal #19.
;

Command Accepted - Processing
tekelecstp 18-05-29 03:18:20 MST EST EAGLE 46.1.0
ENT-ENUM-PROF: MASP B - COMPLTD
;
> ent-enum-prof:prn=pr7:rtype=naptr:rrdomain=sr73.blackbird.com:sparm=sip

eagle10 16-08-12 15:13:28 MST EAGLE 46.4.0.0.0-69.8.0
2428.1321 CARD 1101 INFO Eagle RTDB Birthdate Mismatch
eagle10 16-08-12 15:13:48 MST EAGLE 46.4.0.0.0-69.8.0
ent-enum-prof:prn=pr7:rtype=naptr:rrdomain=sr71.blackbird.com:sparm=sip
Command entered at terminal #17.
;

Command Accepted - Processing
eagle10 16-08-12 15:13:48 MST EAGLE 46.4.0.0.0-69.8.0
ENT-ENUM-PROF: MASP A - COMPLTD
;
Command Executed
Report Date:16-08-12 Time:15:13:28
;

ent-enum-prof:prn=prof1:sparm=pstntel:rtype=naptr

tekelecstp 16-08-25 06:14:53 EST EAGLE 46.4.0.0.0-69.10.0
ent-enum-prof:prn=prof1:sparm=pstntel:rtype=naptr
Command entered at terminal #4.
ENT-ENUM-PROF: MASP A - COMPLTD
;

> ent-enum-prof:rtype=naptr:prn=pr7:sparm=sip:rrdomain=a.b.com:prefix=3698

Command Accepted - Processing

tekelecstp 19-01-03 14:00:52 MST EAGLE 46.8.0.0.0-75.18.11
```

```
ent-enum-  
prof:rtype=naptr:prn=pr3:sparm=sip:rrdomain=abcd:prefix=3698  
Command entered at terminal #3.  
;  
  
tekelecstp 19-01-03 14:00:52 MST EAGLE 46.8.0.0-75.18.11  
ENT-ENUM-PROF: MASP B - COMPLTD  
;
```

Related Topics

- [chg-enum-prof](#)
- [dlt-enum-prof](#)
- [rtrv-enum-prof](#)

4.1.293 ent-enum-profsel

Use this command to make an entry in the ENUM Profile Selection Table and the ENUM DN Block Table. The ENUM Profile Selection Table supports the provisioning information related to mapping of Entity Id to Profile Id. The ENUM DN Block Table supports the provisioning information related to mapping of DN Block to Profile Id.

Parameters

edn (optional)

End Dialed Number

Range:

5-15 digits

entityid (optional)

Network Entity

Range:

1-15 hex-digits (0-9, a-f)

prn1 (optional)

Profile Name

Range:

ZZZZZZZZZZ

A string of alphanumeric characters, beginning with a letter and with a maximum length of 10 characters. Valid values are a..z, A..Z, 0..9.

Note:

Response type of specified profile must be NS

prn2 (optional)

Profile Name

Range:*ZZZZZZZZZZ*

A string of alphanumeric characters, beginning with a letter and with a maximum length of 10 characters. Valid values are a..z, A..Z, 0..9.

**Note:**

Response type of specified profile must be CNAME

prn3 (optional)

Profile Name

Range:*ZZZZZZZZZZ*

A string of alphanumeric characters, beginning with a letter and with a maximum length of 10 characters. Valid values are a..z, A..Z, 0..9.

**Note:**

Response type of specified profile must be NAPTR

prn4 (optional)

Profile Name

Range:*ZZZZZZZZZZ*

A string of alphanumeric characters, beginning with a letter and with a maximum length of 10 characters. Valid values are a..z, A..Z, 0..9.

**Note:**

Response type of specified profile must be NAPTR

sdn (optional)

Start Dialed Number

Range:

5-15 digits

Example

```
ent-enum-  
profsel:entityid=12345:prn1=ns1:prn2=cname1:prn3=naptr1:prn4=naptr2
```

```
ent-enum-  
profsel:sdn=12345:edn=12400:prn1=ns1:prn2=cname1:prn3=naptr1:pr  
n4=naptr2
```

Dependencies

The ENUM Profile Selection Table should be accessible.

3183 E3183 Cmd Rej: Failure accessing ENUMPRID table

The ENUM DN Block Table should be accessible.

3185 E3185 Cmd Rej: Failure accessing ENUM DNBLK table

The ENUM Profile Table should be accessible.

3184 E3184 Cmd Rej: Failure accessing ENUMPROF table

Either ENTITYID or SDN and EDN must be specified.

3194 E3194 Cmd Rej: ENTITYID or SDN and EDN must be specified

ENTITYID cannot be specified with SDN or EDN.

2155 E2155 Cmd Rej: Invalid parameter combination specified

At least one profile must be specified.

3189 E3189 Cmd Rej: At least one profile name must be specified

The profile name specified by the prnX (x=1,2,3,4) parameter must be provisioned in the ENUM Profile Table.

3192 E3192 Cmd Rej: Profile Name not present in ENUM PROF table

SDN and EDN digit length must be the same.

3203 E3203 Cmd Rej: SDN and EDN digit length must be the same

EDN must be greater than or equal to SDN.

3204 E3204 Cmd Rej: EDN must be greater than or equal to SDN

The response type specified by profile name prn1, prn2, prn3 and prn4 should be NS, CNAME, NAPTR and NAPTR respectively.

3208 E3208 Cmd Rej: Order of the profile is incorrect

The entity ID value must be unique in the ENUM Profile Selection Table.

3207 E3207 Cmd Rej: Entity ID must be unique

NAPTR profile names must be unique.

3219 E3219 Cmd Rej: NAPTR profiles must be unique

A maximum of 1024 entries can be provisioned in the ENUM Profile Selection Table.

3221 E3221 Cmd Rej: ENUM PRID Table is full

A maximum of 1024 entries can be provisioned in the ENUM DN Block Table.

3223 E3223 Cmd Rej: ENUM DNBLK Table is full

The SDN and EDN cannot already be provisioned in the ENUM Profile Selection Table.

3236 E3236 Cmd Rej: SDN and EDN must be unique

The default profile cannot be associated with any profile selection entry.

3234 E3234 Cmd Rej: Default Profile cannot be associated with any profsel entry

If SDN is specified then EDN must be specified or vice-versa.

3229 E3229 Cmd Rej: SDN and EDN must be specified

Overlapping SDN and EDN cannot already be provisioned in the ENUM DN Block Table.

3196 E3196 Cmd Rej: Overlapping entry must be removed

Notes

Response type specified by profile name prn1, prn2, prn3 and prn4 should be NS, CNAME, NAPTR and NAPTR respectively.

Entity Id and SDN/EDN are mutually exclusive.

SDN must be specified with EDN and vice-versa.

Output

This example displays output when entity id specified:

```
ent-enum-  
profsel:entityid=1234:prn1=ns1:prn2=cname1:prn3=naptr1:prn4=naptr2
```

```
tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0  
ent-enum-  
profsel:entityid=1234:prn1=ns1:prn2=cname1:prn3=naptr1:prn3=naptr2  
Command entered at terminal #4.  
ENT-ENUM-PROFSEL: MASP A - COMPLTD  
;
```

This example displays output when SDN and EDN specified:

```
ent-enum-  
profsel:sdn=12345:edn=23456:prn1=ns1:prn2=cname1:prn3=naptr1:prn4=na  
ptr2
```

```
tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0  
ent-enum-  
profsel:sdn=12345:edn=23456:prn1=ns1:prn2=cname1:prn3=naptr1:prn3=naptr2  
Command entered at terminal #4.  
ENT-ENUM-PROFSEL: MASP A - COMPLTD  
;
```

Related Topics

- [chg-enum-profsel](#)
- [dlt-enum-profsel](#)

- [rtrv-enum-profsel](#)

4.1.294 ent-frm-pwr

Use this command to add a new entry to the Frame Power Threshold (FPT) table. The frame-level power threshold value in the table is compared with the current calculated maximum power consumption for a particular frame, and appropriate alarms are raised if that consumption exceeds the threshold limit.

The entries in the Frame Power Threshold table contain a Frame ID and the corresponding power threshold value. You can use the following commands to display the threshold and calculated maximum power consumption for the frames in the system.

- The `rtrv-frm-pwr` command displays the current provisioned frame power threshold for each provisioned frame.
- The `rtrv-stp:display=power` command displays the provisioned frame power threshold for each provisioned frame, and displays the maximum calculated power consumption for each frame, based on card population.
- The `rtrv-stp:display=power:frm=xxxx` command displays the provisioned frame power threshold for the specified frame, the maximum calculated power consumption for the frame based on card population, and the maximum power consumption for each card in the frame and for a fan assembly for each shelf.

Note:

The frame-level power threshold value needs to be determined from the capacity in Amps of the fuse alarm panel (FAP) for the frame. Contact your site engineer to determine the FAP capacity.

Parameters

frm (mandatory)

Frame ID.

Range:

cf00

Control frame

ef00

First extension frame

ef01

Second extension frame

ef02

Third extension frame

ef03

Fourth extension frame

ef04

Fifth extension frame

thrshld (optional)

Threshold. The frame-level power threshold value, in Amps. This value is compared with the current calculated maximum power consumption for a particular frame (use the `rttrv-stp:display=power:frm=` command to obtain the maximum power consumption value), and the appropriate alarms are raised if current consumption exceeds the threshold limit. The value of the `thrshld` parameter needs to be determined from the capacity of the fuse alarm panel (FAP) for the frame. Contact your site engineer to determine the frame FAP capacity.

Range:

30 - 65

Default:

30

Example

Enter the frame power threshold value for the first extension frame.

```
ent-frm-pwr:frm=ef00:thrshld=55
```

Dependencies

A valid value must be specified for the `frm` parameter.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

The valid range for the `thrshld` parameter is 30-65 Amps.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

The specified power threshold value (`thrshld` parameter) cannot already be provisioned for the specified frame.

4537 E4537 Cmd Rej: Power Threshold entry already exists in FPT table

The specified frame (`frm` parameter) must be a provisioned frame.

4541 E4541 Cmd Rej: Entered Frame must be a provisioned frame

The Frame Power Threshold table must be accessible.

4539 E4539 Cmd Rej: Failed reading FPT table

Notes

The maximum calculated power for a frame is based on the cards that are populated in the system, and includes a fan tray assembly for every shelf (the system cannot detect the presence or absence of a fan tray, and assumes presence for the calculation). These values are typically much higher than the actual power being drawn; the values cannot be used as a gauge of the actual power consumption of the EAGLE.

Output

```
ent-frm-pwr:frm=ef00:thrshld=55
```

```
tekelecstp 06-04-11 15:18:41 EST EAGLE 35.0.0  
FRAME POWER THRESHOLD table is (4 of 10) 40% full  
ENT-FRM-PWR: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-frm-pwr](#)
- [dlt-frm-pwr](#)
- [rtrv-frm-pwr](#)
- [rtrv-stp](#)

4.1.295 ent-ftp-serv

Use this command to write an entry into the FTP Server table for an FTP Server.

Note:

The FTP Server table entry for the Oracle Communications EAGLE FTP Table Base Retrieval (FTRA) is entered through input from FTRA. Though the entry can be made with this command at the EAGLE, the information entered at the EAGLE will be overwritten by the information sent by FTRA.

Parameters

app (mandatory)

Application. This parameter specifies the FTP Client application that interfaces with the FTP server.

Range:

db

Database Backup\Restore application

dist

EAGLE Software Release Distribution application

meas

Measurements Platform application

sflog

SS7 Firewall Logging application

user

Oracle Communications EAGLE FTP Table Base Retrieval (FTRA)

ipaddr (mandatory)

IP Address of the FTP Server.

login (mandatory)

FTP Server Username (A prompt for entering a password appears on a separate line.)

Range:

ZZZZZZZZZZZZZZZZ

1 to 15 alphanumeric characters; mixed-case is allowed

path (mandatory)

FTP path used to locate the file that will be sent.

Range:

ZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZ (up to 100)

Up to 100 characters; mixed-case string in double quotes with valid FTP path format

prio (mandatory)

Priority of this FTP server when there is more than one FTP Server for this application.

Range:

1 - 10

security (optional)

The parameter specifies whether the FTP connection is secure or not.

Range:

on

Set the FTP connection to be secure.

off

Set the FTP connection to be unsecure.

System Default:

on

Example

```
ent-ftp-  
serv:app=meas:ipaddr=1.255.0.102:login=ftpmeas1:path="~meas":prio=1  
  
ent-ftp-  
serv:app=user:ipaddr=1.255.0.102:login=tekperson1:path="~/data":prio  
=1  
  
ent-ftp-serv:app=dist:ipaddr=192.168.53.195:  
  
login=pvftp:prio=1:path="/remote/labftp1/pvftp/dallen2ftp"  
  
ent-ftp-serv:app=db:ipaddr=192.168.53.195:  
  
login=pvftp:prio=1:path="/remote/labftp1/pvftp/aholden"  
  
ent-ftp-serv:ipaddr=10.248.13.9:app=meas:login=root:path="/  
root":prio=5:security=on  
  
ent-ftp-serv:ipaddr=10.248.13.9:app=sflog:login=root:path="/  
root":prio=1:security=on
```

Dependencies

A separate prompt appears for you to enter the FTP server password that will be used with the FTP Server Username (`login`). You must enter a password that is at least 1 and not more than 15 characters long. If you enter an invalid password (you press the Return key without entering a password, or you enter more than 15 characters), you must enter the entire command again to cause the password prompt to appear again. The password that you enter is not displayed as you enter it.

3089 E3089 Cmd Rej: FTP Server password must be 1 - 15 characters in length

An entry for the specified application ID at the specified priority cannot already exist.

2772 E2772 Cmd Rej: Entry already exists for this application at this priority

An entry for the specified application ID at the specified IP address cannot already exist.

2769 E2769 Cmd Rej: Entry already exists for this application at this IP Address

The `app` parameter must specify an application that uses the FTP Support feature.

N/A N/A

The `ipaddr` parameter must specify a valid IP address for the FTP server.

N/A N/A

The `path` parameter value must be in a valid FTP path format.

N/A N/A

The `prio` parameter specifies a priority for use of an FTP server by an application when the application has more than one FTP server defined in the table. Each FTP server defined for use by the application must have a priority from 1 to 10 assigned. The available FTP server with the highest priority (smallest number) will be used first by the application.

N/A N/A

The FTP Server table can contain entries for a maximum of 10 FTP servers: however, the number of FTP servers supported by an application may be less than 10. Entries that are made for an application cannot be made for more than the maximum number of FTP servers supported by the application.

- The Measurements Platform application (`app=meas`) supports 3 FTP servers.
- The FTP-based Table Retrieve Application (FTRA) (`app=user`) supports 2 FTP servers.
- The Database (`app=db`) and Software Distribution (`app=dist`) applications each support 1 FTP server.
- The SS7 Firewall Logging application (`app=sflog`) supports 2 FTP servers.

2779 E2779 Cmd Rej: Max number of FTPSERV table entries exist for this APP

The `security` parameter must be set with value ON when the SS7 Firewall Logging application (`app=sflog`) is configured.

3499 E3499 Cmd Rej: Security parameter must be ON

Notes

The same FTP server can be defined more than once, but the specified application must be different for each entry.

The FTP connection will be secure when the `security` parameter is ON. The secure FTP connection (SFTP) uses port 22, which must be opened in the customer's network.

Output

```
ent-ftp-  
serv:app=meas:ipaddr=1.255.0.102:login=ftpmeas1:path=~meas":prio=1
```

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0  
Enter Password:*****  
FTP SERV table is (1 of 10) 10% full  
ENT-FTP-SERV: MASP A - COMPLTD  
;
```

```
ent-ftp-  
serv:app=user:ipaddr=1.255.0.102:login=tekperson1:path=~data":prio=  
1
```

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0  
Enter Password:*****  
FTP SERV table is (2 of 10) 20% full  
ENT-FTP-SERV: MASP A - COMPLTD  
;
```

The following command provisions the FTP Server entry with 'security=on' to use a secure SFTP server.

```
ent-ftp-serv:ipaddr=10.248.13.100:app=user:login=root:path="/  
root":prio=4:security=on.
```

```
tekelecstp 12-09-19 14:49:17 EST 45.0.0-64.42.0  
ent-ftp-serv:ipaddr=10.248.13.100:app=user:login=root:path="/  
root":prio=4:security=on  
Command entered at terminal #4.  
Enter Password:***  
FTP SERV table is (3 of 10) 30% full  
ENT-FTP-SERV: MASP A- COMPLTD  
;
```

```
ent-ftp-  
serv:ipaddr=10.248.13.9:app=sflog:prio=1:login=root:path=data:securi  
ty=on
```

```
tekelecstp 15-05-27 15:36:05 EST Eagle 46.3.0  
ent-ftp-
```

```
serv:ipaddr=10.248.13.9:app=sflog:prio=1:login=root:path=data:security=
on
Command entered at terminal #4.
Enter Password :*****
FTP SERV table is (3 of 10) 30% full
ENT-FTP-SERV: MASP A - COMPLTD
;
```

Related Topics

- [chg-ftp-serv](#)
- [dlt-ftp-serv](#)
- [rtrv-ftp-serv](#)

4.1.296 ent-gen-name

Use this command to add a generic name into the database.

Parameters

gname (mandatory)

Generic name. Each Generic name must be unique in the system. Maximum 15 characters can be provisioned. Valid values are (0-9, A-Z), *, SPACE, all special characters.

Range:

ZZZZZZZZZZZZZZZZ

ZZZZZZ

ZZZ*

****ZZZ***

ZZ*ZZ

****ZZ****

settype (mandatory)

Set Type. Set to which generic name belong.

Range:

SetA

SetB

Both

None

Example

Add generic name POLICE with settype BOTH:

```
ent-gen-name:gname="POLICE":settype=BOTH
```

Add generic name HOSP* with settype SETB:

```
ent-gen-name:gname="HOSP*":settype=SETB
```

Add generic name *ICE with settype SETA:

```
ent-gen-name:gname="*ICE":settype=SETA
```

Add generic name EOC CANADA with settype NONE:

```
ent-gen-name:gname="EOC CANADA":settype=NONE
```

Dependencies

Missing mandatory parameter

2011 E2011 Cmd Rej:Missing mandatory parameter-gname

2011 E2011 Cmd Rej:Missing mandatory parameter-settype

Generic name entered is invalid i.e. Generic name in following format is restricted:

- Name with more than two ASTERIK(*) i.e. zz*zz*zz*zz
- Two consecutive ASTERIK(*) i.e. zzz**zz
- Two ASTERICK(*) if they are not at extermes i.e. zz*zz*

3642 E3642 Cmd Rej: Invalid Generic Name

Unable to read generic name table

3645 E3645 Cmd Rej: Unable to read Generic name table

Subset or Superset of the generic name entered already exist in the database

3643 E3643 Cmd Rej: Similar Generic name already exist

Generic name table is full

3644 E3644 Cmd Rej: Generic name table full

Notes

Maximum 5000 unique generic name can be provisioned.

The generic name supports wildcarding using ASTERIK (*)

If gname="*" is provisioned as first entry than no more generic name can be configured. Also gname="*" cannot be configured, if atleast one entry is already provisioned.

Output

```
ent-gen-name:gname="hosp*":settype=both
```

```
tekelecstp 19-10-04 02:44:06 EST EAGLE 46.9.0.0.0-76.4.0
ent-gen-name:gname="hosp*":settype=both
Command entered at terminal #4.
ENT-GEN-NAME: MASP A - COMPLTD
```

```
;  
  
ent-gen-name:gname="eos canada":settype=none  
  
tekelecstp 21-11-24 22:06:36 MST EAGLE 47.0  
ent-gen-name:gname="eos canada":settype=none  
Command entered at terminal #1.  
ENT-GEN-NAME: MASP B - COMPLTD  
;
```

Related Topics

- [chg-gen-name](#)
- [dlt-gen-name](#)
- [rtrv-gen-name](#)

4.1.297 ent-gserv-data

Use this command to enter translation type, originating point code, or global title address data in the GSERV table. These values are used to determine whether a Send Routing Information (SRI) request should receive G-Port SRI Query for Prepaid service or normal G-Port SRI service.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

gta (optional)

Global title address. Use this parameter to specify a calling party (CgPA) global title address.

Range:

1 - 21 digits

opc (optional)

ANSI originating point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code *prefix-ni-nc-ncm*.

Synonym:

opca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*-

When `chg-sid:pctype=ansi` is specified, *ni* = 000 is not valid.

When `chg-sid:pctype=ansi` is specified, *nc* = 000 is not valid if *ni* = 001-005.

When `chg-sid:pctype=ansi` is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

opc/opca/opci/opcn/opcn24 (optional)

Originating point code. Use these parameters to specify message transfer part (MTP) originating point codes.

opci (optional)

ITU international originating point code with subfields *zone-area-id*.

Range:

s-, *p*-, *ps*-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

opcn (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*).

Range:

s-, *p*-, *ps*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps*

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

opcn24 (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—000-255

ssa—000-255

sp—000-255

tt (optional)

Translation type. Use this parameter to specify a called party (CdPA) translation type.

Range:
0 - 255

Example

```
ent-gserv-data:tt=26  
ent-gserv-data:opc=1-1-1  
ent-gserv-data:gta=9194605500
```

Dependencies

Duplicate entries cannot exist in the GSERV table.

3167 E3167 Cmd Rej: GSERV Entry already exists

The system is busy, or the GSERV table is corrupted.

3215 E3215 Cmd Rej: Cannot access GSERV table

The G-Port SRI Query for Prepaid feature must be enabled before this command can be entered.

3216 E3216 Cmd Rej: G-Port SRI Query for Prepaid feature is not enabled

A new entry cannot be added to the GSERV table because all available space is in use. A maximum of 256 `tt` values, 50 `gta` values, and 50 `opc` values can be entered in the GSERV table.

3260 E3260 Cmd Rej: GSERV Table is full

The `tt`, `opc`, and `gta` parameters cannot be specified within the same command.

2609 E2609 Cmd Rej: Only one optional parameter may be specified

The G-Port feature must be enabled before this command can be entered.

4371 E4371 Cmd Rej: GPORT must be enabled

Notes

A translation type, originating point code, or global title address value must be entered in the GSERV table and must match the corresponding SRI Query parameter for an SRI message to receive the G-Port SRI Query for Prepaid service.

The G-Port SRI Query for Prepaid feature must be on before entries in the GSERV table can be used to affect a G-Port SRI query

Output

```
ent-gserv-data:tt=26
```

```
mystp 06-07-27 22:58:17 EST EAGLE 35.2.0  
ENT-GSERV-DATA: MASP A - COMPLTD
```

Related Topics

- [dlt-gserv-data](#)

- [rtrv-gserv-data](#)

4.1.298 ent-gsmmap-scrn

Use this command to assign the GSM (Global System for Mobile Telecommunication) MAP (Mobile Application Part) screening entries that filter or allow TCAP messages for certain MAP operation codes. The messages are filtered or allowed based on CgPA GTA+NPV+NAIV, CdPA GTA+NPV+NAIV, and forbidden (*forbid*) parameters. Each CgPA entry is associated with one or more CdPA entries and one or more CgPA entries are associated with a MAP Opcode. This command provisions both CgPA and CdPA entries into the database.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

cgscr (mandatory)

CGPA screening reference. This parameter specifies a CGPA entry for an OPNAME.

Range:

ayyy

1 alphabetic character and up to 3 optional alphanumeric characters

opname (mandatory)

Operation code name. This parameter references the operation code (*opcode*) defined with the `ent-gsms-opcode` command. GSM Map Screening is performed on the specified address or addresses for the referenced operation code.

Range:

ayyyyyyy

Up to 8 alphanumeric characters

action (optional)

The screening action to take if a message is forbidden as defined by the *forbid* parameter.

Range:

atierr

Generate an ATI reject message. This option is only valid for ATI MAP operation codes.

discard

Discard the MSU

dupdisc

Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is discarded.

duplicate

Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

forward

Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

pass

Route the message as normal to the destination.

route

Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

Default:

discard

cdsr (optional)

CDPA screening reference. A CDPA entry for a combination of CGSR and OPNAME.

Range:

ayyy

1 alphabetic character and up to 3 optional alphanumeric characters

eaddr (optional)

Ending CDPA address. This parameter is used with the `npv`, `naiv`, `cgsr`, and `cdsr` parameters.

Range:

1-15 digits

Valid digits are 0–9, a-f, A-F

forbid (optional)

Forbidden parameter value. A forbidden parameter for the entered address. If a forbidden parameter is detected, then the message is rejected by the action defined by the `action` parameter.

Range:***all***

All parameters are forbidden. Take the specified screening action defined by the `action` parameter for messages arriving at the system.

none

None of the parameters are forbidden. Route the message to its destination.

state

Take the specified screening action defined by the `naction` parameter for messages arriving at the system that contain `state` as the forbidden parameter for the entered address/operation code combination.

 **Note:**

The `state` parameter is valid only for GSM ATI messages.

location

Take the specified screening action defined by the `naction` parameter for messages arriving at the system that contain `location` as the forbidden parameter for the entered address/operation code combination.

 **Note:**

The `location` parameter is valid only for GSM ATI messages.

Default:

all

force (optional)

Check Mated Application Override. This parameter must be used to complete command execution if the `pc/pca/pci/pcn/pcn24` and `ssn` parameter combination (if the `ssn` parameter has a value other than *none*) specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).

Range:

yes

no

Default:

no

mapset (optional)

MAP set ID.

Range:

1 - 36000, dflt

dflt —Default MAP set

naiv (optional)

Nature of Address value for the address or range of CgPA and CdPA addresses. If a message is screened and does not contain matching `npv` and `naiv` values, the message is rejected. The message is rejected with the default action defined by the `ent-gsms-opcode` command for the operation code (`opcode`) parameter entry referenced by the operation name (`opname`) parameter.

This parameter must be specified with the `npv` parameter.

Range:

*0 - 127, **

Default:

npv (optional)

Numbering Plan value for the address or range of CgPA and CdPA addresses. If a message is screened and does not contain matching `npv` and `naiv` values, the message is rejected. The message is rejected with the default action defined by the `ent-gsms-opcode` command for the operation code (`opcode`) parameter entry referenced by the operation name (`opname`) parameter.

This parameter must be specified with the `naiv` parameter.

Range:

0 - 15, *

Default:

*

pc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001-005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006-255`.

The point code `000-000-000` is not a valid point code.

pc/pca/pci/pcn/pcn24 (optional)

Point code. The Point Code and SSN parameters are used to enter the node to which the input message will be routed.

pci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code `0-000-0` is not a valid point code.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

ri (optional)

Routing indicator. This parameter specifies whether a subsequent global title translation is required.

This parameter can be specified only when the value specified for the `action` parameter is *forward*, *duplicate*, or *dupdisc*.

Range:

gt

ssn

System Default:

ssn

saddr (optional)

Starting origination address.

With the `npv`, `naiv`, and `cgsr` parameters, this parameter is for a single CGPA entry or the starting CGPA address in the range to be screened.

With the `npv`, `naiv`, and `cdsr` parameters, this parameter is for a single CDPA entry or the starting CDPA address in the range to be screened.

Range:

1-15 digits, *

Valid digits are 0–9, *a-f*, *A-F*

Default:

*

ssn (optional)

Subsystem Number. The Point Code and SSN are used to change the defined node where the input message will be routed.

Range:

002 - 255, *none*

Default:
none

tt (optional)

Translation type. The value that the CdPA TT is set to as the result of Enhanced GSM Map Screening.

This parameter can be specified only if the value specified for the `action` parameter is *forward*, *duplicate*, or *dupdisc*.

Range:
0 - 255, none

Default:
none

Example

The following example adds a MAP OPNAME of ATI with a range of allowed addresses, defines a forbidden parameter for that range of addresses and an action to take if the forbidden parameter is detected, and sets the NPV and NAIV values. This example is wrapped to the next line for readability:

```
ent-gsmmap-
scrn:saddr=919461:eaddr=919462:opname=ati:action=discard:forbid
=state :npv=1:naiv=4:cgsr=fela
```

The following example adds a MAP OPNAME of ATI of with a range of allowed addresses, defines a forbidden parameter for that range of addresses and an action to take if the forbidden parameter is detected, and sets the NPV and NAIV values. The command also defines an ITU International Point Code with Subsystem Number 5, and forbids by `location` messages that have an action of *forward*. This example is wrapped to the next line for readability:

```
ent-gsmmap-
scrn:saddr=919461:eaddr=919462:opname=ati:action=forward:pci=1-
1-1 :ssn=5:force=yes:forbid=location:cgsr=fela
```

The following example adds a MAP OPNAME of XYZ with an allowed hexadecimal address of abcdefabcdefabc, defines the action *discard* to take if a forbidden parameter is detected, and sets the NPV and NAIV values. The command also defines a CGSR of FELA. This example is wrapped to the next line for readability:

```
ent-gsmmap-
scrn:opname=xyz:saddr=abcdefabcdefabc:npv=10:naiv=10:cgsr=fela
:action=discard

ent-gsmmap-
scrn:opname=test2:cgsr=t1:cdsr=cd3:saddr=125:pci=s-1-1-1:ssn=10
:action=duplicate

ent-gsmmap-
scrn:opname=test2:cgsr=cg1:cdsr=cd1:saddr=125:pci=1-1-1:ssn=10
:action=duplicate:mapset=11

ent-gsmmap-
scrn:opname=test3:cgsr=ad:action=forward:pc=1-1-2:ssn=12:ri=gt
```



```
ent-gsmmap-  
scrn:opname=test4:cgsr=ksl:action=forward:mapset=df1t:pc=1-2-3 :ssn=  
12:tt=11
```

Dependencies

The GSM Map Screening feature must be turned on before this command can be entered.

3883 E3883 Cmd Rej: GSM Map Screening feature must be ON

The EGMS feature must be turned on before:

- The `saddr=*` parameter can be specified.
- Values for the `saddr` and `eaddr` parameters can contain hexadecimal digits.
- The `cdsr` parameter can be specified.
- The `pc/pca` parameter can be specified.

4285 E4285 Cmd Rej: Enhanced GSM Map Screening feature must be ON

If the `eaddr` parameter is specified, the `saddr` parameter must be specified.

3898 E3898 Cmd Rej: EADDR can not be specified without SADDR

If the `eaddr` parameter is specified, then its value must contain the same number of digits as the value of the `saddr` parameter.

3894 E3894 Cmd Rej: SADDR and EADDR must have the same number of digits

If the `eaddr` parameter is specified, its value must be greater than the `saddr` parameter value.

3895 E3895 Cmd Rej: EADDR must be greater than SADDR

If the `saddr=*` parameter is specified, then the `eaddr` parameter cannot be specified.

4286 E4286 Cmd Rej: EADDR shouldn't be specified when SADDR = *

If the `opname` parameter is specified, its value must exist in the GSM MAP Op-Code table.

3892 E3892 Cmd Rej: OPNAME does not exist in the database

A value of *state* or *location* cannot be specified for the `forbid` parameter unless the operation code (`opcode`) referenced by the `opname` parameter is 71.

3902 E3902 Cmd Rej: FORBID can not be STATE or LOCATION for the given OPNAME

The `action=atierr` parameter cannot be specified unless the operation code (`opcode`) referenced by the `opname` parameter is 71.

3903 E3903 Cmd Rej: Screening action can not be ATIERR for the given OPNAME

The GSM MAP Screening table cannot be full.

3906 E3906 Cmd Rej: The GSM Map Screening table is full

The GSM MAP Screening table must have at least two free entries to provision a CgPA entry, because a default wildcard CdPA entry is created for each CgPA entry.

4284 E4284 Cmd Rej: CGPA entry can't be provisioned

If a single entry is specified for the CgPA/CdPA (the `eaddr` parameter is not specified), then the combination of `saddr/npv/naiv` and `opname` parameters cannot already exist in the GSM MAP screening table.

3897 E3897 Cmd Rej: GSM MAP SCRN entry already exists or overlaps another entry

If a range entry is specified for the CgPA/CdPA (the `eaddr` parameter is specified), then the `saddr/eaddr/npv/naiv` and `opname` combination cannot already exist or overlap another range entry in the GSM MAP screening table.

3897 E3897 Cmd Rej: GSM MAP SCRN entry already exists or overlaps another entry

If a CdPA entry is being created, then the CGSR must already exist for the specified OPNAME.

3905 E3905 Cmd Rej: CGSR doesn't exist for specified OPNAME

If a CgPA entry is being created, the CGSR cannot already exist for the specified OPNAME.

4289 E4289 Cmd Rej: (N)CGSR already exists for specified OPNAME

The specified `cdsr` cannot already exist for the specified `cgsr`.

4293 E4293 Cmd Rej: (N)CDSR already exists for specified CGSR

If specified, the `pc/pca/pci/pcn/pcn24` parameter must be a full point code.

3090 E3090 Cmd Rej: Full Point Code must be specified

If the `action` parameter is specified with a value of *forward*, *duplicate*, or *dupdisc*, the `pc/pca/pci/pcn/pcn24` and `ssn` parameters must be specified.

3091 E3091 Cmd Rej: PC/SSN must be given with Action FORWARD, DUPLICATE, DUPDISC

The `pc/pca/pci/pcn/pcn24` and `ssn` parameters can be specified only if the `action` parameter is specified with a value of *forward*, *duplicate*, or *dupdisc*.

3080 E3080 Cmd Rej: ACTION must be specified as FORWARD, DUPLICATE, or DUPDISC

The `force` parameter can be specified only if the `pc/pca/pci/pcn /pcn24` and `ssn` parameters are specified.

3902 E3902 Cmd Rej: FORBID can not be STATE or LOCATION for the given OPNAME

If the `pc/pca/pci/pcn/pcn24` and `ssn` parameters are specified, and the `force` parameter is not specified as *yes*, then the PC/SSN must be populated in the SCCP Application entity set (Remote Point Code/MAP Table).

2450 E2450 Cmd Rej: PC/SSN does not exist as a mated application

The values for the `npv` and `naiv` parameters must both be numbers or asterisks (*).

4087 E4087 Cmd Rej: Both NPV and NAIV must be either * or numbers

The GSM Map screening table must be accessible.

3890 E3890 Cmd Rej: Failure reading the GSM MAP SCRN Table

The GSM Map Op-Code table must be accessible.

3889 E3889 Cmd Rej: Failure reading the GSM OPCODE Table

The Route table must be accessible.

2648 E2648 Cmd Rej: Failed reading the route table

If specified, the `pc/pca/pci/pcn/pcn24` parameter value must exist as a destination in the Ordered Route entity set or reside in a cluster (ANSI only) that exists as a destination in the Ordered Route entity set (for global title routing).

2417 E2417 Cmd Rej: Point code does not exist in the routing table

The `opname` parameter must consist of alphanumeric characters.

2040 E2040 Cmd Rej: String pattern nonconformance, alphanumeric - <parm>

The `opname` parameter must be entered.

2011 E2011 Cmd Rej: Missing mandatory parameter - <parm>

The `cgsr` parameter must be entered.

2011 E2011 Cmd Rej: Missing mandatory parameter - <parm>

The `saddr` and `eaddr` parameters must each be between 1 - 15 digits in length.

2045 E2045 Cmd Rej: <parm_desc> num digits incorrect, min <min> max <max> - <parm>

The `npv` parameter must be in range (0 - 15, *).

2051 E2051 Cmd Rej: Incorrect information unit, expecting number - <parm>

The `naiv` parameter must be in range (0 - 127, *).

2051 E2051 Cmd Rej: Incorrect information unit, expecting number - <parm>

The `saddr` parameter must have valid hexadecimal digits (0 - 9, a-f, A-F, or *).

2062 E2062 Cmd Rej: Incorrect information unit, expecting number or none - %s

The `eaddr` parameter must have valid hexadecimal digits (0 - 9, a - f, A - F).

2062 E2062 Cmd Rej: Incorrect information unit, expecting number or none - %s

The `cgsr` and `cdsr` parameters must each begin with an alphabetic character.

2041 E2041 Cmd Rej: String pattern nonconformance, alphabetic - <parm>

The `cgsr` and `cdsr` parameters must each consist of 1-4 alphanumeric characters.

2039 E2039 Cmd Rej: <parm_desc> too long, min <min>, max <max> - <parm>

If the `action` parameter has a value of *forward*, *duplicate*, or *dupdisc*, then the `mapset` parameter must be specified.

4530 E4530 Cmd Rej: MAPSET must be specified if action is FORWARD/DUP/DUPDISC

If the `mapset`, `ri`, or `tt` parameter is specified, then the value specified for the `action` parameter must be *forward*, *duplicate*, or *dupdisc*.

3080 E3080 Cmd Rej: ACTION must be specified as FORWARD, DUPLICATE, or DUPDISC

The Flexible GTT Load Sharing feature must be enabled before the `mapset` parameter can be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The specified MAP set must exist.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

If the value of the `mapset` parameter is not `dfmt`, then the specified PC/SSN must exist in the specified MAP set.

4528 E4528 Cmd Rej: PC/SSN doesn't exist in MAPSET

If the `mapset=dfmt` parameter is specified, and the `force` parameter is not specified as `yes`, then the specified PC/SSN must exist in the specified MAP set.

4528 E4528 Cmd Rej: PC/SSN doesn't exist in MAPSET

The MAP Table must be accessible.

4524 E4524 Cmd Rej: Failed Reading MAP table

If the `action` parameter has a value of `forward`, `duplicate`, or `dupdisc`, then the value specified for the `pc/pca/pci/pcn/pcn24` parameter cannot be associated with a proxy point code.

4713 E4713 Cmd Rej: PRX using DPC not allowed in GSM tables

If the `ri=ssn` parameter is specified, then the `ssn=none` parameter cannot be specified.

4880 E4880 Cmd Rej: SSN must not be NONE if RI is SSN

If the `forbid=none` parameter is specified, then the `action=pass` parameter must be specified.

4993 E4993 Cmd Rej: If specified, (n)action must be PASS when (n)forbid=NONE

If the FGTTLS feature is enabled, the `mapset` parameter is specified, and the `ssn` parameter is not specified or has a value of `none`, then the specified MAPSET/PC combination must already exist in the MAP table.

4543 E4543 Cmd Rej: PC/MAPSET does not exist in MAP table

If the FGTTLS feature is not enabled and the `ssn` parameter is not specified or has a value of `none`, then the specified point code must already exist in the MAP table.

2419 E2419 Cmd Rej: Point code does not exist in the remote point code table

Notes

GSM screening entries are handled differently from other screening entries such as GWS (gateway screening) in the system database. The following differences apply to provisioning GSM screening entries:

- GSM screening entries can be either single entries or range entries.
- Single entries have precedence in screening over range entries. Thus the single entries are searched first and if a match is found, the range entries are never searched.

- Range entries can overlap single entries.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
ent-gsmmap-
scrn:opname=test2:cgsr=cg1:cdsr=cd1:saddr=125:pci=1-1-1:ssn=10:ac
tion=duplicate:mapset=11

tekelecstp 06-05-29 13:24:41 EST EAGLE 35.0.0
GSM Map Screening table is (1 of 4000) 1% full
ENT-GSMMAP-SCRN: MASP A - COMPLTD
;

ent-gsmmap-
scrn:opname=test3:cgsr=ad:action=forward:pc=1-1-2:ssn=12:ri=gt

tekelecstp 08-01-18 17:03:01 EST EAGLE 38.0.0
GSM MAP Screening Table (4 of 4000) is 1% full
ENT-GSMMAP-SCRN: MASP A - COMPLTD
;

ent-gsmmap-
scrn:opname=test4:cgsr=ks1:action=forward:mapset=df1t:pc=1-2-3:ssn=1
2:tt=11

tekelecstp 08-08-20 19:13:01 EST EAGLE 39.2.0
GSM MAP Screening Table (1 of 4000) is 1% full
ENT-GSMMAP-SCRN: MASP A - COMPLTD
;
```

Related Topics

- [chg-gsmmap-scrn](#)
- [chg-map](#)
- [dlt-gsmmap-scrn](#)
- [dlt-map](#)
- [rtrv-gsmmap-scrn](#)
- [rtrv-map](#)

4.1.299 ent-gsms-opcode

Use this command to assign the concerned GSM (Global System for Mobile Telecommunication) MAP (mobile application part) screening operation codes and the default screening action for the operation code. This command allows the craftsman to provision a list of all operation codes that the system uses in performing GSM screening.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

opcode (mandatory)

MAP operation code. This parameter refers to the actual decimal value of the MAP operation codes from the TCAP layer of GSM MAP messages.

Range:

0 - 255, *

If a decimal Map Opcode is not found in the database, then the asterisk (wildcard *), if provisioned, will constitute a match when screening the MSUs.

opname (mandatory)

Operation code name. The `opname` value is defined with the `ent-gsmmap-scrn` command.

Range:

ayyyyyyy

Up to 8 alphanumeric characters

df1tact (optional)

Default screening action for a MAP operation code. The default screening action is used when a matching CGPA address+NPV+NAIV entry is not found in the GSM MAP screening table.

Range:

atierr

Do not route the MSU. An ATI (Any Time Interrogation) reject message is generated. This option is only valid for ATI MAP operation codes.

discard

Do not route the MSU. The MSU is discarded (thrown away) and an appropriate UIM is issued.

dupdisc

Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is discarded.

duplicate

Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

forward

Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

pass

Route the message as normal to the destination.

route

Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

Default:

discard

force (optional)

Check Mated Application Override. This parameter must be used to complete command execution if the *pc/pca/pci/pcn/pcn24* and *ssn* parameter combination (if the *ssn* parameter has a value other than *none*) specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).

Range:

yes

no

Default:

no

mapset (optional)

MAP set ID.

Range:

1 - 36000, dflt

dflt —Default MAP set

pc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24 (optional)

Point code. The `pc/pca/pci/ncn/pcn24` and `ssn` parameters allow the user to change the defined node to which the input message will be routed.

pci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

ri (optional)

Routing indicator. This parameter specifies whether a subsequent global title translation is required.

 **Note:**

This parameter can be specified only when the value specified for the `dfltact` parameter is *forward*, *duplicate*, or *dupdisc*.

Range:*gt**ssn***System Default:***ssn***ssn (optional)**

Subsystem Number. The `pc/pca/pci/pcn/pcn24` and `ssn` parameters are used to change the defined node where the input message will be routed.

Range:*002 - 255***Default:***none***tt (optional)**

Translation type. The value that the CdPA TT is set to as the result of Enhanced GSM Map Screening.

The parameter can be specified only if the value specified for the `dfltact` parameter is *forward*, *duplicate*, or *dupdisc*.

Range:*0 - 255, none***Default:***none***Example**

This example adds a MAP operation code of 71 with a name of ATI with a default action of DISCARD:

```
ent-gsms-opcode:opcode=71:opname=ati:dfltact=discard
```

This example adds a MAP operation code of 71 with a name of ATI, a default action of FORWARD, an international point code of 1, a subsystem number of 5, and forces:

```
ent-gsms-  
opcode:opcode=71:opname=ati:dfltact=forward:pci=1-1-1:ssn=5:force=yes
```

This example adds a MAP operation code of 71 with a name of ATI, a default action of DUPLICATE, an international point code of 1, a subsystem number of 5, and forces:

```
ent-gsms-  
opcode:opcode=71:opname=ati:dfltact=duplicate:pci=1-1-1:ssn=5:force=yes
```

This example adds a MAP operation code of 71 with a name of ATI, a default action of DUPDISC, an international point code of 1, a subsystem number of 5, and forces:

```
ent-gsms-  
opcode:opcode=71:opname=ati:dfltact=dupdisc:pci=1-1-1:ssn=5:force=yes
```

This example adds a MAP operation code of * with a name of XYZ, a default action of DUPLICATE, an ANSI point code of 8, a subsystem number of 20:

```
ent-gsms-  
opcode:opcode=*:opname=xyz:pca=8-8-8:dfltact=duplicate:ssn=20
```

This example adds a MAP operation code of 22 with a name of ATI with a default action of DISCARD:

```
ent-gsms-opcode:opcode=22:opname=ati:dfltact=discard
```

This example shows a spare point code:

```
ent-gsms-  
opcode:opname=test3:opcode=3:pci=s-1-1-1:dfltact=duplicate:ssn=10:force
```

This example shows a MAP set value. The Flexible GTT Load Sharing feature is ON.

```
ent-gsms-  
opcode:opname=test3:opcode=3:pc=1-1-1:dfltact=duplicate:ssn=10:mapset=7
```

This example adds a MAP operation code of 27 with a name of TEST3, a default action of FORWARD, an ANSI point code of 1, a subsystem number of 12 and a routing indicator of GT:

```
ent-gsms-  
opcode:opname=test3:opcode=27:dfltact=forward:pca=1-1-2:ssn=12:ri=gt
```

This example shows a translation type value:

```
ent-gsms-  
opcode:opname=test4:opcode=32:dfltact=forward:mapset=dflt:pc=1-2-3:ssn=12:tt=11
```

Dependencies

The GSM Map Screening feature must be turned on before this command can be entered.

3883 E3883 Cmd Rej: GSM Map Screening feature must be ON

A valid value must be specified for the `dfltact` parameter.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

The `opcode` parameter value must be specified as a number in the range 0-255 or as *.

2018 E2018 Cmd Rej: <parm_desc> is out of range, <min>..<max>,'<char>' - <parm>

The reserved word *none* cannot be specified as a value for the `opname` parameter.

2001 E2001 Cmd Rej: Undefined msg#

The `pc/pca/pci/pcn/pcn24` and `ssn` parameters can be specified only if the `dfltact` parameter is specified and its value is *forward*, *duplicate*, or *dupdisc*.

2780 E2780 Cmd Rej: DFLTACT must be specified as FORWARD, DUPLICATE, or DUPDISC

If the `dfltact` parameter is specified with a value of *forward*, *duplicate*, or *dupdisc*, then the `pc/pca/pci/pcn/pcn24` and `ssn` parameter must be specified.

3091 E3091 Cmd Rej: PC/SSN must be given with Action FORWARD, DUPLICATE, DUPDISC

The `force` parameter can be specified only if the `pc/pca/pci/pcn/pcn24` and the `ssn` parameters are specified.

3092 E3092 Cmd Rej: PC/SSN must be specified if FORCE is specified

The `dfltact=atierr` parameter cannot be specified unless the value of the operation code referenced by the `opname` parameter is 71. The `atierr` option is valid only for ATI MAP operation codes, and the `opcode=71` parameter signifies an ATI MAP operation code.

3904 E3904 Cmd Rej: DFLTACT can not be ATIERR unless OP CODE=71

The value specified for the `opcode` parameter cannot already exist in the GSM Map Op-Code table.

3887 E3887 Cmd Rej: OP CODE already exists

The value specified for the `opname` parameter cannot already be used in the GSM Map Op-Code table.

3888 E3888 Cmd Rej: OPNAME already used

If the `pc/pca/pci/pcn/pcn24` and `ssn` parameters are specified, and the `force` parameter is not specified as *yes*, then the PC-SSN must exist in the SCCP Application entity set (Remote Point Code / Mated Application Table).

2450 E2450 Cmd Rej: PC/SSN does not exist as a mated application

The Enhanced GSM Map Screening feature must be enabled and turned on before the `opcode=*` parameter can be specified.

4285 E4285 Cmd Rej: Enhanced GSM Map Screening feature must be ON

If specified, the `pc/pca/pci/pcn /pcn24` parameter value must be a full point code.

3090 E3090 Cmd Rej: Full Point Code must be specified

The GSM MAP Op-Code table must be accessible.

3889 E3889 Cmd Rej: Failure reading the GSM OP CODE Table

The Route table must be accessible.

2648 E2648 Cmd Rej: Failed reading the route table

If specified, the `pc/pca/pci/pcn/pcn24` parameter value must exist as a destination in the Ordered Route entity set or reside in a cluster (ANSI only) that exists as a destination in the Ordered Route entity set (for global title routing).

2417 E2417 Cmd Rej: Point code does not exist in the routing table

The Enhanced GSM Map Screening feature must be enabled and turned on when the PC/PCA is specified.

4285 E4285 Cmd Rej: Enhanced GSM Map Screening feature must be ON

The `opname` parameter must consist of alphanumeric characters.

2040 E2040 Cmd Rej: String pattern nonconformance, alphanumeric - <parm>

The `opname` parameter must be no more than 8 characters in length.

2039 E2039 Cmd Rej: <parm_desc> too long, min <min>, max <max> - <parm>

If the `mapset`, `ri`, or `tt` parameter is specified, then the value specified for the `dfltact` parameter must be *forward*, *duplicate*, or *dupdisc*.

2780 E2780 Cmd Rej: DFLTACT must be specified as FORWARD, DUPLICATE, or DUPDISC

If the `dfltact` parameter is specified as *forward*, *duplicate*, or *dupdisc*, then the `mapset` parameter must be specified.

4530 E4530 Cmd Rej: MAPSET must be specified if action is FORWARD/DUP/DUPDISC

The Flexible GTT Load Sharing feature must be enabled before the `mapset` parameter can be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The specified MAP set must exist.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

If the `mapset` parameter is not specified as *dflt*, or if the `mapset=dflt` parameter is specified, and the `force` parameter is not specified as *yes*, then the specified PC/SSN must exist in the specified MAP set.

4528 E4528 Cmd Rej: PC/SSN doesn't exist in MAPSET

The MAP table must be accessible.

4524 E4524 Cmd Rej: Failed Reading MAP table

If the `dfltact` parameter has a value of *forward*, *duplicate*, or *dupdisc*, then the value specified for the `pc/pca/pci/pcn/pcn24` parameter cannot be associated with a proxy point code.

4713 E4713 Cmd Rej: PRX using DPC not allowed in GSM tables

If the `ri=ssn` parameter is specified, then the `ssn=none` parameter cannot be specified.

4880 E4880 Cmd Rej: SSN must not be NONE if RI is SSN

If the FGTTLS feature is enabled, the `mapset` parameter is specified and the `ssn` parameter is not specified or has a value of *none*, then the specified MAPSET/PC combination must already exist in the MAP table.

4543 E4543 Cmd Rej: PC/MAPSET does not exist in MAP table

If the FGTTLS feature is not enabled and the `ssn` parameter is not specified or has a value of `none`, then the specified point code must already exist in the MAP table.

2419 E2419 Cmd Rej: Point code does not exist in the remote point code table

Notes

Origination Addresses are considered to be the SCCP CGPA address as well as the Numbering Plan and Nature of Address values.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
ent-gsms-  
opcode:opname=test3:opcode=3:pc=1-1-1:dfltact=duplicate:ssn=10:mapset=7
```

```
tekelecstp 06-05-29 13:21:58 EST EAGLE 35.0.0  
ENT-GSMS-OPCODE: MASP A - COMPLTD
```

;

```
ent-gsms-  
opcode:opname=test3:opcode=27:dfltact=forward:pca=1-1-2:ssn=12:ri=gt
```

```
tekelecstp 08-01-18 16:56:43 EST EAGLE 38.0.0  
ENT-GSM-OPCODE: MASP A - COMPLTD
```

;

```
ent-gsms-  
opcode:opname=test4:opcode=32:dfltact=forward:mapset=dflt:pc=1-2-3:ssn=12:tt=11
```

```
tekelecstp 08-08-20 19:13:01 EST EAGLE 39.2.0  
ENT-GSM-OPCODE: MASP A - COMPLTD
```

;

Related Topics

- [chg-gsms-opcode](#)
- [dlt-gsms-opcode](#)
- [rtrv-gsms-opcode](#)

4.1.300 ent-gsmssn-scrn

Use this command to provision origination and destination SSNs (subsystem numbers) to be screened using the GSM (Global System for Mobile Telecommunication) MAP (mobile application part) screening feature. The value of the `ssn` parameter that is entered with this

command is added to the GSM SSN screening table. All the MAP messages with the originating or destination SSN entered are screened using the GSM Map screening feature.

Parameters

ssn (mandatory)

Subsystem number.

Range:

000 - 255

type (mandatory)

Subsystem type.

Range:

dest

destination SSN

orig

origination SSN

Example

The following example adds an originating subsystem of 10 to the GSM SSN Screening table:

```
ent-gsmssn-scrn:ssn=10:type=orig
```

Dependencies

The GSM Map Screening feature must be turned on before this command can be entered.

3883 E3883 Cmd Rej: GSM Map Screening feature must be ON

The GSM SSN screening table is corrupt or cannot be found.

3885 E3885 Cmd Rej: Failure reading the GSM SSN Screening Table

A value for the `ssn` and `type` parameter combination cannot be specified that already exists in the GSM SSN screening table.

3884 E3884 Cmd Rej: SSN/TYPE combination already exists

The `ssn` value must be a valid numeric between **0** and **255**

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

The type parameter value must be *orig* or *dest*.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

Notes

None

Output

```
ent-gsmssn-scrn:ssn=10:type=orig

      rlghncxa03w 04-01-10 11:43:04 EST  EAGLE 31.3.0
      ENT-GSMSSN-SCRN: MASP A - COMPLTD
;
```

Related Topics

- [dlt-gsmssn-scrn](#)
- [rtrv-gsmssn-scrn](#)

4.1.301 ent-gta

Use this command to specify the GTA (global title address) information for applicable global title selectors required to specify a global title entry.

This command adds the routing object (a destination address and a subsystem number) for messages requiring a global title translation. The translation is performed on the basis of the global title address (GTA), global title indicator (GTI), numbering plan (NP), nature of address indicator (NAI), and translation type (TT) of each SS7 SCCP message directed to the STP with a routing indicator of 0, indicating a GTT is required.

Note:

If the EGTT feature is turned on, then the GTT Selector (`ent/chg/dlt/rtrvgtttsel`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrvgta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. It is not recommended to run `ent/dlt/rtrv-tt & ent/chg/dlt/rtrv-gtt` commands as it may cause the advance GTA fields of GTT entry to be reset to the default values.

Parameters

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

gttsn (mandatory)

GTT set name. The entity to which global title addresses and selectors are assigned.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters

xlat (mandatory)

Translate indicator. This parameter specifies translation actions and routing actions.

Range:

dpc

dpcngt

dpcssn

none

acn (optional)

Application context name. This parameter specifies the ITU TCAP *acn* field in the incoming MSU.

Range:

*0 - 255, *, none*

The *acn* supports up to 7 subfields separated by dash (e.g.,
1-202-33-104-54-26-007)

* —any valid value in the ITU TCAP *acn* field in the incoming MSU

none —there is no ITU TCAP *acn* field in the incoming MSU

actsn (optional)

GTT Action Set Name.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

ccgt (optional)

Cancel called global title indicator.

Range:

yes

no

Default:

no

cdselid (optional)

CdPA Selector ID.

Range:

0 - 65534

cdssn (optional)

Starting CdPA subsystem number.

Range:

0 - 255

cgcnvsn (optional)

CgPA conversion set name.

Range:*ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters

cggtmod (optional)

Calling party GT modification indicator. This parameter specifies whether calling party global title modification is required.

Range:*yes**no***Default:***no***cgpc (optional)**ANSI CgPA point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.**Synonym:***cgpca***Range:***0-255, **

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni=001-005*.When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006-255*.When *chg-sid:pctype=ansi* is specified, *ni-*-** is valid if *ni =006-255*.The point code *000-000-000* is not a valid point code.**cgpcaction (optional)**

This parameter is used to provide the required abilities, indicating what any particular translation needs to do with CgPA PC.

Range:*dflt*

protocol will be allowed to perform all the required processing/conversion with CGPC.

ignore

CGPC will be left as it was in incoming MSU.

remove

CGPC will be removed from outgoing MSU.

Default:*dflt*

cgpci (optional)

ITU international CgPA point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

cgpcn (optional)

ITU national CgPA point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

cgpcn24 (optional)

24-bit ITU national CgPA point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

cgpcn16 (optional)

16-bit ITU national CgPA point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*un---*000---127

sna---000---15

mna---000---31

cgse1id (optional)

CgPA Selector ID.

Range:

0 - 65534

cgssn (optional)

Starting CgPA subsystem number.

Range:

0 - 255

defmapvr (optional)

Default MAP version for MBR opcodes. This parameter is used to provide the default MAP version for supported MBR opcodes if Application Context Name (ACN) is not present in an incoming MAP message.

Range:

v1

v2

v3

Default:

v3

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

dpca

Range:

*0-255, **

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni=001-005*.

When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006-255*.

When *chg-sid:pctype=ansi* is specified, *ni-*.** is valid if *ni =006-255*.

The point code *000-000-000* is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Point Code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:*s-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*

The point code 0-000-0 is not a valid point code.

dpcn (optional)ITU destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**dpcn24 (optional)**24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).**Range:**

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*msa—000-255**ssa—000-255**sp—000-255***dpcn16 (optional)**16-bit ITU national destination point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).**Range:**

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*un---000---127**sna---000---15**mna---000---31*

eaddr (optional)

End Address (similar to EGTA). This parameter specifies the end of a range of MAP digits (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA).

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

Default:

Same as the specified `SADDR` value

ecdssn (optional)

Ending CdPA subsystem number.

Range:

0 - 255

ecgssn (optional)

Ending CgPA subsystem number.

Range:

0 - 255

egta (optional)

End global title address. This parameter specifies the end of a range of global title digits.

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

Default:

Same as the specified `gta` value

fallback (optional)

Fallback option. The action taken when the final translation does not match while performing GTT using a FLOBR-specific GTT mode.

Range:**yes**

perform GTT based on the last matched entry

no

GTT fails and the MSU is discarded

sysdfit

use the system-wide default fallback option in the SCCOPTS table

Default:

sysdfit

family (optional)

The ANSI TCAP *family* field in the incoming MSU.

Range:

0 - 255, *, *none*

*—any valid value in the ANSI TCAP *family* field in the incoming MSU

none—there is no value in the ANSI TCAP *family* field in the incoming MSU

force (optional)

Check mated application override. This parameter must be used to complete command execution if the *pci/pcn* and *ssn* parameter combination specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).

Range:

yes

no

Default:

no

gta (optional)

Global title address. The beginning of a range of global title digits.

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

gtmodid (optional)

Global title modification identifier.

Range:

aaaaaaaa

1 alphabetic character followed by up to 8 alphanumeric characters

Default:

none

loopset (optional)

SCCP loopset name. This parameter associates a translation set with a loopset.

Range:

aaaaaaa

1 leading alphabetic character and up to 7 following alphanumeric characters.

none—There is no association between the translation set and any loopset.

Default:

none

mapset (optional)

MAP set ID. This parameter specifies the Mated Application set ID.

Range:

1 - 36000, *dflt*
dflt —Default MAP set

mrnset (optional)

MRN set ID. The Mated Relay Node set ID.

Range:

1 - 3000, *dflt*, *none*
dflt —Default MRN set
none —The GTA translation does not participate in any load sharing

opc (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

opca

Range:

0-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni=001–005*.

When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006–255*.

When *chg-sid:pctype=ansi* is specified, *ni-**-** is valid if *ni =006–255*.

The point code *000-000-000* is not a valid point code.

opc/opca/opci/opcn/opcn24/opcn16 (optional)

Originating Point Code

opci (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*
zone—0-7
area—000-255
id—0-7

The point code *0-000-0* is not a valid point code.

opcn (optional)

ITU originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-*nnnnn*—0-16383*gc*—*aa-zz**m1-m2-m3-m4*—0-14 for each member; values must sum to 14**opc24 (optional)**24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.**Range:**

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255*ssa*—000-255*sp*—000-255**opc16 (optional)**16-bit ITU national originating point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.**Range:**

000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127*sna*---000---15*mna*---000---31**opcodetag (optional)**

The ITU TCAP opcodetag field in the incoming MSU.

Range:*none, local, global, any**none* —there is no value in the ITU TCAP opcodetag field in the incoming MSU*local* —The opcodetag is local in the ITU TCAP opcodetag field in the incoming MSU*global* —The opcodetag is global in the ITU TCAP opcodetag field in the incoming MSU*any* — any valid value in the ITU TCAP opcodetag field in the incoming MSU**Default:**

any

opcsn (optional)

The OPC GTT set name.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

optsn (optional)

Optional gtt set name.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters.

pc (optional)ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).**Synonym:**

pca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p-*When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.The point code *000-000-000* is not a valid point code.**pc/pca/pci/pcn/pcn24/pcn16 (optional)**

Point code.

pci (optional)ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).**Range:**

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**zone—0-7**area—000-255**id—0-7*The point code *0-000-0* is not a valid point code.**pcn (optional)**ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s-, p-, ps-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**pcn24 (optional)**24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).**Range:***p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000–255**ssa—000–255**sp—000–255***pcn16 (optional)**16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*. The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).**Range:***p, 000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix---p**un---000---127**sna---000---15**mna---000---31***pkgtype (optional)**

The ANSI and ITU TCAP package type.

Range:***ituuni***

ITU unidirectional

qwp

Query with Permission

qwop

Query without Permission

resp
Response

cwp
Conversation with Permission

cwop
Conversation without Permission

any
Wildcard value

bgn
Begin

end
End

cnt
Continue

ituabort
ITU abort

ansiabort
ANSI abort

ansiuni
ANSI unidirectional

ANSI TCAP Package Types
ansiuni, qwp, qwop, resp, cwp, cwop, ansiabort, any

ITU TCAP Package Types
bgn, ituabort, ituuni, any, end, cnt

ppmeasreqd (optional)

This parameter specifies whether Per Path measurements are required.

Range:

yes
per path measurements are required

no
per path measurements are not required

Default:

No change to the current value

prio (optional)

This parameter assigns priority to an OPCODE GTTSET based translation.

Range:

1 - 1024

1 is the highest priority and 1024 the lowest

Default:

1024

ri (optional)

Routing indicator.

Range:**gt**

Allow a called party address with a routing indicator value of "global title."

ssn

Allow a called party address with a routing indicator value of "DPC/SSN."

saddr (optional)

Start Address (similar to GTA). This parameter specifies the beginning of a range of MAP digits (IMEI/MSI/MSISDN/VLRNB/SMRPOA/SMRPDA).

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

ssn (optional)

New translated subsystem number.

Range:

002 - 255

Default:

none

testmode (optional)

This parameter is used to invoke a field-safe Test Tool in order to debug the FLOBR/TOBR rules.

 **Caution:**

If the `testmode=on` parameter is specified, then the rule is used only by test messages. The rule is ignored by 'live' traffic. If the `testmode=off` parameter is specified, then both test and live messages use the rule. Changing from `testmode=off` to `testmode=on` is equivalent to deleting the rule for live traffic.

Range:**on**

Process the translation rules defined in the test message

off

Perform standard GTT behavior

Default:*off***transmeasrqd (optional)**

GTT Translation Measurement Required. This parameter specifies whether to perform per GTT Translation Measurements.

Range:**yes**

perform per GTT Translation Measurements

no

do not perform per GTT Translation Measurements

Default:*no***Example**

The lines in some examples are wrapped for readability:

```
ent-gta:gttsn=lidb:gta=9195554321:xlat=dpc:ri=gt:pc=001-255-253
ent-gta:gttsn=t800:gta=919460:xlat=dpc:ri=gt:pc=001-255-252
ent-gta:gttsn=t800:gta=919461:egta=919468:
xlat=dpc:ssn:ri=ssn:pc=001-255-252:ssn=254
ent-gta:gttsn=setint000:gta=391951212000000:
egta=391951212399999:xlat=dpc:ssn :ri=ssn:pci=1-253-1:ssn=255
ent-gta:gttsn=imsi:gta=591975593000000:
egta=591975593299999:xlat=dpcngt:ri=gt :pci=004-167-25
ent-gta:gttsn=test:gta=100000:egta=199999:
pca=1-1-1:ssn=123:xlat=dpcngt:gtmodid=set1
ent-gta:gttsn=test2:gta=123:egta=321:
pcn=222:ssn=10:xlat=dpcngt:ri=gt:gtmodid=set2
ent-gta:xlat=dpc:ssn:ri=ssn:pcn24=8-8-8:gttsn=any:gta=919833:ssn=20
ent-gta:xlat=dpc:ssn:ri=ssn:ssn=10:gta=12345678901:
egta=23456789012:gtmodid=set3:pcn=s-124: gttsn=setnat003
ent-gta:xlat=dpc:ssn:ri=ssn:ssn=10:gta=12345688901:
egta=23456889012:pcn=s-128-aa: gttsn=setnat003
ent-gta:gta=987666799012345678901:egta=987667321099765432101
xlat=dpcngt:ri=gt:pcn=s-124-aa:ccgt=no: gttsn=setnat003:gtmodid=set6
ent-gta:xlat=dpc:ssn:ri=ssn:ssn=10:gta=13345688901:
egta=24456889012:pci=s-1-230-2:gttsn=itui1
```

```

ent-
gta:gttsn=tbla:xlat=dpc:ri=gt:pc=1-1-1:gta=1234567700:mrnset=df
lt
ent-gta:gttsn=tbla:xlat=dpc:ri=gt:pc=1-1-1:gta=1234567890:
egta=2234567890:mrnset=23
ent-gta:gttsn=tbla:xlat=dpcngt:ri=gt:pc=1-1-2:gta=2345678901:
egta=3456789012:mrnset=54
ent-gta:gttsn=tbla:xlat=dpcngt:ri=gt:pc=1-1-3:gta=3456789012:
egta=4567890123:mrnset=none
ent-gta:gttsn=tblx:xlat=dpcssn:ri=ssn:pc=1-1-1:gta=1234567890:
egta=2234567890:ssn=10:mapset=23
ent-gta:gttsn=tblx:xlat=dpc:ri=ssn:pc=2-2-2:gta=2345678911:
egta=3456789022:mapset=df1t
ent-
gta:gttsn=t800:gta=919460:xlat=dpc:ri=gt:pc=001-255-252:transme
asrqd=yes

```

This example provisions GTA translations when TOBR is turned on.

```

ent-
gta:gttsn=setopcode:opcode=*:pkgtype=bgn:acn=*:xlat=dpc:ri=gt:p
ci=1-1-1:prio=1024:opcodeltag=local

```

This example provisions Advanced CdPA GTA translations.

```

ent-
gta:gttsn=setcdgta:gta=123456789012345678901:egta=2234567890123
45678901:
xlat=dpcssn:ri=ssn:pca=001-001-001:ssn=100:optsn=setcggta:opcsn
=setopc

```

This example provisions GTA translations when FLOBR is turned on.

```

ent-gta:gttsn=setcdgta:gta=1234567890:egta=2234567890:
xlat=dpcssn:ri=ssn:pca=001-001-001:ssn=100:fallback=yes:testmod
e=on
ent-gta:gttsn=setudts1:gta=423456789012345678901:
xlat=dpc:ri=gt:pc=2-2-2:egta=523456789012345678901:actsn=actudt
s1
ent-
gta:gttsn=setcggta:gta=323456789012345678901:egta=4234567890123
45678901:
xlat=dpcssn:ri=ssn:pca=001-001-001:ssn=20:optsn=setcgssn
ent-gta:gttsn=cggtadsc:gta=623456789012345678901:

```

```

egta=623456789012345678901: actsn=actdisc1
ent-gta:gttsn=setcgpc:cgpca=001-001-001:xlat=dpcssn:
ri=ssn: pca=001-001-001:ssn=20:optsn=setcgssn
ent-gta:gttsn=cgpcudt2:xlat=dpc:ri=gt:pc=2-2-2:
cgpca=001-001-009:actsn=actudts2
ent-gta:gttsn=setopc:opca=002-001-001:xlat=dpcssn:
ri=ssn: pca=001-001-001:ssn=20:optsn=setcgssn
ent-gta:gttsn=opcdisc3:opca=002-001-001:actsn=actdisc1
ent-gta:gttsn=setcgssn:cgssn=100:ecgssn=200:
xlat=dpcssn:ri=ssn: pca=001-001-001:ssn=20
ent-gta:gttsn=cgssnud3:xlat=dpc:ri=gt:pc=001-002-003:
cgssn=100:ecgssn=200:actsn=actudts1: ppmeasreqd=yes
ent-
gta:gttsn=setans004:gta=981817:xlat=dpc:pc=1-1-1:ri=gt:cggtmod=yes
ent-gta:gttsn=tblx:xlat=dpcssn:ri=ssn:pc=1-1-1:
gta=1234567890:egta=2234567890:ssn=10: mapset=23:loopset=raleigh1

```

The following example provisions the flexible GTA translations when the FLOBR and OBSR features are turned on.

```

ent-gta:gttsn=setcggta:gta=1234567890:egta=2234567890:
xlat=dpcssn:ri=ssn:pca=001-001-001:ssn=100:fallback=yes:opcsn=setopc
sn
ent-gta:gttsn=setopc:opca=2-2-2:xlat=dpcssn:ri=ssn:
pca=001-001-002:ssn=100:optsn=setcgpc:fallback=no
ent-gta:gttsn=setcdgta:gta=567565756552:
xlat=dpc:ri=gt:pc=1-1-2:optsn=setcgpc:fallback=no:opcsn=setopc

```

This example provisions GTA translation when the FLOBR feature is turned on.

```
ent-gta:gttsn=setcdssn:cdssn=5:xlat=dpc:ri=gt:pc=1-1-1:opcsn=setopc
```

These examples provision the GTA translations when the TOBR and OBSR features are turned on.

```

ent-gta:gttsn=setopcode:pkgtype=qwop:opcode=none:family=*:
xlat=dpc:ri=gt:pc=2-2-2:opcsn=setopc: optsn=setcdgta
ent-gta:gttsn=setopcode:pkgtype=bgn:opcode=none:acn=1-2-3-4-5-6-7:
xlat=dpc:ri=gt:pc=2-2-2:opcsn=setopc: optsn=setcdgta
ent-gta:gttsn=setopcode:pkgtype=bgn:opcode=2:defmapvr=v2:
xlat=dpc:ri=gt:pci=2-2-2:opcsn=setopc:optsn=imsil

```

```
ent-
gta:gttsn=imsil:xlat=dpc:ri=gt:pc=1-1-1:saddr=1234567890:eaddr=
2234567890
```

This example provisions a DPC translation when the FLOBR feature is turned on.

```
ent-
gta:gttsn=setdpc:xlat=dpc:ri=gt:pc=1-1-1:dpc=1-1-2:optsn=setdpc
1

ent-gta:gttsn=setcdgta:xlat=none:actsn=asetdisc:ppmeasreqd=yes

ent-gta:gttsn=setopcode:pkgtype=bgn:opcode=none:

acn=1-2-3-4-5-6-8:xlat=none:mapset=1: mrnset=1
```

Example for 16 bit PC and CGPCACTION param.

```
ent-gta:gttsn=gttl1:xlat=dpc:ri=ssn:pcn16=1-14-0:cgpcn16=45-1-0:
mapset=dflt:cgpcaction=ignore
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

The ANSI/ITU SCCP Conversion feature must be enabled before a translated PC that is of a different domain than the GTT set specified by the `gttsn` parameter can be specified.

3570 E3570 Cmd Rej: Point Code type does not match GTT Set network domain

The ANSI/ITU SCCP Conversion feature must be enabled before a translated PC and a translation type in different network types can be specified.

2470 E2470 Cmd Rej: Point Code network type does not match TT network type

The `gttsn` parameter must be specified and must match an existing `gttsn`.

3561 E3561 Cmd Rej: GTT Set specified by GTT Set Name/index does not exist

The `pc/pca/pci/pcn/pcn24/pcn16` parameter cannot be out of range.

2169 E2169 Cmd Rej: Point code out of range

If the `egta/eaddr` parameter is specified, then the values of the `gta/saddr` and `egta/eaddr` parameters must be the same length.

2403 E2403 Cmd Rej: Length of EGTA/EADDR must be equal to length of GTA/SADDR

The length of the specified `gta/saddr` parameter must match the number of digits provisioned for the specified GTT set (`gttsn`) when VGTT is OFF. If the VGTT (variable length GTT) feature is turned on, then up to 10 GTA/SADDR lengths can exist per GTT set. If the Support for 16 GTT Lengths in VGTT feature is turned on, then up to 16 GTA/SADDR lengths can exist per GTT set.

3571 E3571 Cmd Rej: GTA/SADDR Length does not match GTT Set number of digits

The specified `gta/egta` or `saddr/eaddr` range must exist for the specified GTT set in the STP active database. While an exact match is not required, you cannot specify

an overlap with another range. If the range overlaps, an error is generated that displays a list of overlapped global title addresses. An example follows that shows what happens when the user attempts to enter a global title address range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, the error message displays the list of overlapped global title addresses:

```
The following GTA ranges overlap the input GTA range START GTA END GTA
8005550000 8005551999 8005552000 8005553999 8005554000 8005555999 ENT-GTA:
MASP A - Command Aborted
```

2401 E2401 Cmd Rej: GTA/SADDR range overlaps a current range

If the translated point code is of type ANSI, the `ngti` parameter of the referred GTMOD cannot be 4. For ANSI PCs, the `ngti` value must be 2.

4903 E4903 Cmd Rej: If NGTI of referred GTMOD is 4, PC cannot be ANSI

If the new or existing `pc/pca/pci/pcn/pcn24/pcn16` parameter is the STP point code or capability point code, then the `ccgt=no` parameter must be specified.

3573 E3573 Cmd Rej: CCGT must be NO when PC is the STP's PC or CPC

If the `xlat=dpcngt` parameter is specified, then the `ri=gt` parameter must be specified.

2480 E2480 Cmd Rej: RI=GT must be specified when XLAT=DPCNGT

If the `ssn` parameter is specified, then the `xlat=dpcssn` parameter must be specified.

2457 E2457 Cmd Rej: SSN can only be specified when XLAT=DPCSSN

If the `xlat=dpcssn` parameter is specified, then the `ssn` parameter must be specified.

2481 E2481 Cmd Rej: SSN must be specified when XLAT=DPCSSN

If the value specified for the `pc/pca/pci/pcn/pcn24/pcn16` parameter is the STP's true point code, the `xlat=dpcssn` and `ri=ssn` parameters must be specified.

3648 E3648 Cmd Rej: XLAT must be DPCSSN and RI must be SSN if PC is the True PC

If the value specified for the `pc/pca/pci/pcn/pcn24/pcn16` parameter is the STP's true point code and the `ssn` parameter is specified, the `ssn` parameter must exist in the SS-APPL table.

3612 E3612 Cmd Rej: SSN must be in SS-APPL table when PC is true point code

Unless the PC is the STP true PC, the value specified for the `pc/pca/pci/pcn/pcn24/pcn16` parameter must exist as a destination in the Route table or reside in a cluster that exists as a destination in the Route table (for global routing).

2417 E2417 Cmd Rej: Point code does not exist in the routing table

If a final GTT (the `ri=ssn` parameter is specified with the `xlat=dpc` parameter and without the `force=yes` parameter), then the PC (`pc/pca/pci/pcn/pcn24/pcn16`) must exist in the Remote Point Code/MAP table. The `force=yes` parameter can be specified to execute the command when the PC is not in the table; the following warning message is displayed in the scroll area of the terminal:

```
CAUTION: DPC DOES NOT EXIST IN MATED APPLICATION TABLE.
```

2419 E2419 Cmd Rej: Point code does not exist in the remote point code table

If the `ccgt=yes` parameter is specified, then the `ri=ssn` parameter must be specified.

3572 E3572 Cmd Rej: RI must be SSN when CCGT is YES

If the `ri=gt` parameter is specified, then the `ccgt=no` parameter must be specified.

3577 E3577 Cmd Rej; CCGT must be NO when the RI is set to GT.

If the `pc/pca/pci/pcn/pcn24/pcn16` parameter is any of the STP's PCs or CPCs, then the `ccgt=no` parameter must be specified.

3573 E3573 Cmd Rej: CCGT must be NO when PC is the STP's PC or CPC

If the XGTT feature is enabled, the GTT table can contain up to either 400,000 or 1,000,000 entries, depending on the controlled feature Part Number that is enabled. If XGTT is not enabled, the GTT table can contain up to 269,999 user entries. An error message is displayed if a command entry would result in more than the allowed maximum number of entries in the table.

2462 E2462 Cmd Rej: GTT table is full

If the `egta/eaddr` parameter is specified, then the value of the `egta/eaddr` parameter must be greater than or equal to the value of the `gta/saddr` parameter.

2420 E2420 Cmd Rej: EGTA/EADDR must be greater than or equal to GTA/SADDR

The GTT Set Name must not be *none*.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

The `pc/pca/pci/pcn/pcn24/pcn16` parameter must be a full PC.

2859 E2859 Cmd Rej: Destination address must be a full point code

If the VGTT feature is turned on, then up to 10 GTA/SADDR lengths can exist per GTT set. If the Support for 16 GTT Lengths in VGTT feature is turned on, then up to 16 GTA/SADDR lengths can exist per GTT set.

4008 E4008 Cmd Rej: Exceeding max GTA/SADDR Lengths supported per GTTSET

The GTT Selector table is corrupt or cannot be found.

3543 E3543 Cmd Rej: Failed reading GTT Selector Table

The GTT Set table is corrupt or cannot be found.

3554 E3554 Cmd Rej: NP(V) and NAI(V) must not be specified for given GTI value

The GTA table is corrupt or cannot be found.

3119 E3119 Cmd Rej: Failed Reading GTT TRANS table

The GTT DBMM table is corrupt or cannot be found.

3120 E3120 Cmd Rej: Failed Reading GTT DBMM table

A severe system fault has occurred, and the command was rejected.

2416 E2416 Cmd Rej: Unable to access database. Severe database failure

The Site ID table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The SS-APPL table is corrupt or cannot be found.

3638 E3638 Cmd Rej: Failed Reading SS Appl table

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The MRN table is corrupt or cannot be found.

2999 E2999 Cmd Rej: Failed reading the MRN table

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

If the `ri=ssn` parameter is specified, then the `mrnset` parameter must not be specified.

4475 E4475 Cmd Rej: MRNSET must be specified (only) if RI parameter is GT

If the Flexible GTT Load Sharing feature is enabled, then the specified PC must already exist in the specified MRN set.

4483 E4483 Cmd Rej: PC does not exist in specified MRNSET

The specified MRN set must already exist in the MRN table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

The `mrnset` parameter can only be specified when the Flexible GTT Load-Sharing feature is enabled.

4479 E4479 Cmd Rej: MRNSET must be specified (only) if FGTTLS feature is enabled

If the `ri=gt` parameter is specified, then the `mrnset` parameter must be specified.

4475 E4475 Cmd Rej: MRNSET must be specified (only) if RI parameter is GT

The `mapset` parameter can only be specified if the Flexible GTT Load Sharing feature is enabled, and the `ri=ssn` parameter is specified. If the `ri=ssn` parameter is specified, the `mapset` parameter must be specified. If the `ri=gt` parameter is specified, the `mapset` parameter cannot be specified.

4532 E4532 Cmd Rej: MAPSET must be specified (only) if RI parameter is SSN

The Flexible GTT Load Sharing feature must be enabled before the `mapset` parameter can be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The specified PC and SSN must exist in the specified MAP set.

4528 E4528 Cmd Rej: PC/SSN doesn't exist in MAPSET

The specified MAP set must exist in the database.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

If the `xlat=dpc` parameter is specified, and the `force` parameter is not specified as yes, then the specified PC and MAP set must exist in the MAP table.

4543 E4543 Cmd Rej: PC/MAPSET does not exist in MAP table

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

The `gta`, `cgpc/cgpcac/cgpci/cgpcn/cgpcn24/cgpcn16`, `opc/opca/opci/opcn/opcn24/opcn16`, `cgssn`, `cdssn`, `opcode/acn/pkgtype`, `opcode/family/pkgtype`, `dpc/dpca/dpci/dpcn/dpcn24/dpcn16`, or `saddr` parameter must be specified.

4400 E4400 Cmd Rej: GTA/CGPC/OPC/CGSSN/CDSSN/OPCODE/DPC/SADDR must be specified

The `cdselid`, `cgselid`, and `optsn` parameters cannot be specified together in the command. If the GTT set has a set type of `cdgta`, `cdssn`, or `opcode`, then the `opcsn` parameter can be specified with one of the above parameters.

4398 E4398 Cmd Rej: OPTSN and CGSELID/CDSELID are mutually exclusive

If the `cgssn` parameter is specified, then the `optsn` and `cgselid` parameters cannot be specified.

4403 E4403 Cmd Rej: CGSSN cannot be specified with OPTSN/OPCSN/CGSELID

The `cgpc/cgpcac/cgpci/cgpcn/cgpcn24/cgpcn16`, `opc/opca/opci/opcn/opcn24/opcn16` and `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameters must have a valid value within the range for each subfield.

2169 E2169 Cmd Rej: Point code out of range

The value specified for the `ecgssn` or `ecdssn` parameter must be greater than the value specified for the `cgssn` or `cdssn` parameter.

4404 E4404 Cmd Rej: End value must be greater than or equal to a starting value

The OBSR feature must be enabled before the `opcsn`, `optsn`, `cgpc/cgpcac/cgpci/cgpcn/cgpcn24/cgpcn16`, `opc/opca/opci/opcn/opcn24/opcn16`, or (e) `cgssn` parameters can be specified.

4393 E4393 Cmd Rej: Origin Based SCCP Routing feature must be enabled

If the GTT set specified by the `gttsn` parameter (GTTSN set) has a set type of `cdgta` (see the `ent-gttset` command), then the `optsn` parameter cannot specify a GTT set (OPTSN set) with a set type of `cgssn`.

If the GTTSN set has a set type of `cdgta`, then the OPTSN set must have a set type of `cgta` or `cgpc`.

The FLOBR feature must be turned on before a GTTSN set with a set type of `cgpc`, `cgta`, or `opc` can be specified with an OPTSN with a set type other than `cgssn`.

If the FLOBR feature is turned on, and the GTTSN set has a set type of `cdgta` or `cdssn`, then the OPTSN set cannot have a set type of `opc`.

If the TOBR feature is turned on, and the GTTSN set has a set type of `opcode`, then the OPTSN set cannot have a set type of `opc`.

If the GTTSN set has a set type of MBR (`imei/imsi/vlrnb/msisdn/smrpda/smrpoa`), then the OPTSN set type cannot have the same set type as GTTSN.

If the OPTSN set has a set type of MBR (*imei/imsi/vlrnb/msisdn/smrpda/smrpoa*), then the GTTSET must have a set type of MBR (*imei/imsi/vlrnb/msisdn/smrpda/smrpoa*) or *opcode*.

4405 E4405 Cmd Rej: OPTSN GTT set type is not compatible with GTTSN set type

The GTA must be specified if the GTTSN set type has a value of *cdgta* or *cggta*. The GTA cannot be specified for other set types.

4406 E4406 Cmd Rej: GTA parm must be specified if GTTSN is type of CDGTA/CGGTA

If the GTTSN set type has a value of *cgpc*, the *cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16* parameter must be specified. This parameter cannot be specified for other set types.

4407 E4407 Cmd Rej: CGPCx parm must be specified if GTTSN is type of CGPC

The *opc/opca/opci/opcn/opcn24/opcn16* parameter must be specified if the GTTSN set type has a value of *opc*. These parameters cannot be specified for other set types.

4408 E4408 Cmd Rej: OPCx parm must be specified if GTTSN is type of OPC

If the GTTSN set type has a value of *cgssn*, the *cgssn* parameter must be specified. The *cgssn* parameter cannot be specified for GTTSN of other types.

4409 E4409 Cmd Rej: CGSSN parm must be specified if GTTSN is type of CGSSN

The range specified by the *cdssn/ecdssn* and *cgssn/ecgssn* parameters cannot overlap a currently existing range for the specified GTT set.

4412 E4412 Cmd Rej: CGSSN/CDSSN range cannot overlap an existing range

The GTT set name specified by the *opcsn* parameter must have a set type of *opc* (see the `ent-gttset` command).

4399 E4399 Cmd Rej: Set type of GTT Set Name doesn't match

The OPC subsystem number set domain must be the same as the GTTSN set domain. If the GTT subsystem number set domain is ANSI, then the OPC subsystem number set domain must be ANSI. If the GTT subsystem number set domain is ITU, then the OPC subsystem number set domain must be ITU.

4522 E4522 Cmd Rej: OPCS set domain must be the same as GTTSN set domain

The translation entry specified by the *cgpc*, *opcode*, *opc*, or *dpc* parameters cannot already exist.

4509 E4509 Cmd Rej: Translation entry already exists

The *cgpc*, *cgssn*, *gta*, *opc*, *cdssn*, *opcode*, *dpc*, and *saddr* parameters cannot be specified together in the command.

If the *cgssn* and *cdssn* parameters are both specified in the same command (in any order), then only the value for the last of the two parameters specified is used during processing.

3332 E3332 Cmd Rej: GTA/CGPC/OPC/CG-CDSSN/OPCODE/DPC/ADDR are mutually exclusive

The Hex Digit Support for GTT feature must be turned on before hexadecimal digits can be specified for the *gta/saddr* or *egta/eaddr* parameter.

3006 E3006 Cmd Rej: Hex Digit Support for GTT feature must be ON

The value of the `loopset` parameter must already exist in the database.

4568 E4568 Cmd Rej: Loop Set entry does not exist

The SCCP Loop Detection feature must be enabled before the `loopset` parameter can be specified.

4565 E4565 Cmd Rej: SCCP Loop Detection Feature is not enabled

The Loopset table is corrupt or cannot be found.

4567 E4567 Cmd Rej: Cannot access LoopSet table

The value specified for the `pc` parameter cannot be associated with a proxy point code.

4707 E4707 Cmd Rej: PRX using DPC not allowed in GTT, MAP, MRN tables

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the `cggmod` parameter can be specified.

4789 E4789 Cmd Rej: Either AMGTT or AMGTT CgPA Upgrade feature must be ON

The FLOBR feature must be turned on before the `fallback`, `cdselid`, `cdssn`, `ecdssn`, or `dpc` parameter can be specified.

5060 E5060 Cmd Rej: Flexible Linkset Optional Based Routing must be ON

The FLOBR feature must be turned on before the `gttsn` parameter can specify a GTT set with a set type other than `cdgta` (see the `ent-gttset` command) in the same command with the `cgselid` parameter.

4457 E4457 Cmd Rej: CGSELID is valid only if specified GTTSN set type is CDGTA

The OBSR feature must be enabled or the FLOBR feature must be turned on before the `cgselid` parameter can be specified.

5063 E5063 Cmd Rej: OBSR must be enabled or FLOBR must be ON

The ANSI/ITU SCCP Conversion feature must be enabled before the GTT set specified by the `optsn` parameter can have a different domain than the GTT set specified by the `gttsn` parameter.

5103 E5103 Cmd Rej: OPTSN set domain must be the same as GTTSN set domain

A TOBR quantity feature must be turned on before the `opcode`, `pkgtype`, `acn`, `family`, `saddr`, `eaddr`, or `defmapvr` parameter can be specified.

5105 E5105 Cmd Rej: One of the TOBR quantity feature must be ON

The `opcode`, `pkgtype`, and `family` parameters must be specified together for ANSI TCAP translations. The `opcode`, `pkgtype`, and `acn` parameters must be specified together for ITU TCAP translations.

5106 E5106 Cmd Rej: OP CODE,PKGTYPE,ACN/FAMILY must be specified together

If the `opcodetag` is specified by `opcodetag` parameter, then the `pkgtype`, `opcode` and `acn` must be specified.

E3701 Cmd Rej: PkgType, Opcode and ACN must be specified.

If the GTT set specified by the `gttsn` parameter has a set type of *opcode* (see the `ent-gttset` command), then the `opcode/acn/pkgtype` or `opcode/family/pkgtype` parameter must be specified. These parameters cannot be specified for GTT sets of any other set types.

5107 E5107 Cmd Rej: OPCODE param must be specified if GTTSN settype is OPCODE

If the GTT set specified by the `gttsn` parameter has a set type of *cdssn* (see the `ent-gttset` command), then the `cdssn` parameter must be specified. This parameter cannot be specified for GTT sets with other set types.

5108 E5108 Cmd Rej: CDSSN param must be specified if GTTSN settype is CDSSN

The maximum number of OPCODE translation entries cannot exceed the value that is set by the associated TOBR quantity feature.

5109 E5109 Cmd Rej: Exceeding TOBR Quantity feature OPCODE translations limit

The GTT set specified by the `gttsn` parameter must have a set type of *cdgta*, *opcode*, or *cdssn* (see the `ent-gttset` command) before the `opcsn` parameter can be specified.

5110 E5110 Cmd Rej: OPCSN is valid with cdgta/cdssn/opcode GTTSN type

The same value cannot be specified for the `gttsn` and `optsn` parameters.

5111 E5111 Cmd Rej: The GTTSN set name must not be same as OPTSN set name

The ANSI/ITU SCCP conversion feature must be enabled and the FLOBR feature must be turned on before the `cgcnvsn` parameter can be specified.

5124 E5124 Cmd Rej: SCCP Conversion and FLOBR features must be ON

The GTT set specified by the `gttsn` parameter must have a set type of *cdgta* or *cggta* (see the `ent-gttset` command) before the `cgcnvsn` parameter can be specified.

5127 E5127 Cmd Rej: CGCNVSN is invalid when GTTSET type is not cggta/cdgta

If the `cgssn` parameter is specified, then the `ecdssn` parameter cannot be specified. If the `cdssn` parameter is specified, then the `ecgssn` parameter cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The GTT set specified by the `gttsn` parameter cannot be the same as the GTT set specified by the `cgcnvsn` parameter.

5139 E5139 Cmd Rej: CGCNVSN Gttset name cannot be same as GTTSN Gttset name

If the `family` parameter is specified, then a value of *ansiuni*, *qwp*, *qwop*, *resp*, *cwp*, *cwop*, *ansiabort*, or *any* must be specified for the `pkgtype` parameter.

5140 E5140 Cmd Rej: FAMILY parameter is allowed with ANSI TCAP PKGTYPE

If the `acn` parameter is specified, then a value of *bgn*, *ituabort*, *ituuni*, *any*, *end*, or *cnt* must be specified for the `pkgtype` parameter.

5141 E5141 Cmd Rej: ACN parameter is allowed with ITU TCAP PKGTYPE

The GTT set specified by the `optsn`, `opcsn`, and `cgcnvsn` parameters must match an existing GTT set.

5143 E5143 Cmd Rej: GTT Set specified by OPTSN/OPCSN/CGCNVSN does not exist

If the `pkgtype=ituabort` parameter is specified, then a value of *none* must be specified for the `acn`, `opcode` and `opcodetag` parameters.

If the `pkgtype=ansiabort` parameter is specified, then a value of *none* must be specified for the `family` and `opcode` parameters.

E5144 Cmd Rej: PKGTYPE abort requires ACN/FAMILY/OPCODE/OPTAG value *none*.

If the `family` and `opcode` parameters are specified in the command, then either both parameters must have a value of *none* or neither parameter can have a value of *none*.

5148 E5148 Cmd Rej: Both FAMILY and OPCODE must be NONE if either is NONE

One or more point codes in the command will exceed the maximum number of entries in the MAP table.

4526 E4526 Cmd Rej: MAP table is full

The OBSR feature must be enabled or the FLOBR feature must be turned on before the `optsn` parameter can be specified.

5063 E5063 Cmd Rej: OBSR must be enabled or FLOBR must be ON

The specified GTT Action Set must already exist in the database.

5196 E5196 Cmd Rej: GTT Action Set does not exist

Failure while reading GTT Action Set Table.

5197 E5197 Cmd Rej: Unable to access GTT Action Set table

The `actsn=none` parameter cannot be specified.

5113 E5113 Cmd Rej: (New) GTT Action Set name must not be *none*.

The `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter must be specified if the GTTSN set type is `dpc` (see the `ent-gttset` command). If the GTT set has a set type other than `dpc`, then the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter cannot be specified.

5267 E5267 Cmd Rej: DPCx parameter must be specified if GTTSN set type is DPC

If the `xlat=none` parameter is specified, then the `ri`, `pc/pca/pci/pcn/pcn24/pcn16`, `force`, `ssn` and `ccgt` parameters cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The value specified for the `gtmodid` parameter must already exist in the GTMOD table.

5285 E5285 Cmd Rej: GTMODID does not exist

The GTMOD table is corrupt or cannot be found.

5284 E5284 Cmd Rej: Failed reading GTMOD table

The `gtmodid=none` parameter cannot be specified.

5292 E5292 Cmd Rej: GTMODID must not be specified as NONE

If the FGTTLS feature is enabled, and the `xlat=none` parameter is specified, then the `mrnset` or `mapset` parameter must be specified.

5381 E5381 Cmd Rej: If FGTTLS feat enabled, specify MAPSET and/or MRNSET

The specified GTT set must have a set type of `opcode` (see the `ent-gttset` command) before the `opcode/acn/pkgtype` or `opcode/family/pkgtype` parameters can be specified. The specified GTT set must have a set type of `cdssn`, `cgssn`, `cdgta/cgta`, `opc`, or `cgpc` before the `cdssn`, `cgssn`, `gta`, `opc`, or `cgpc` parameter, respectively, can be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `acn` and `family` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `opc` or `dpc` parameter is specified, then the `(e)gta`, `(e)cgssn`, `(e)cdssn`, `eaddr`, and `opcode` parameters cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The J7 Support feature must be enabled before the `cgpcn16/opcn16/dpcn16` parameters can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 Support feature must not be enabled before the `cgpcn24/opcn24/dpcn24/cgpcn24/opcn24/dpcn24` parameters can be specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The `saddr` parameter must be specified if the GTT set specified by the `gttsn` parameter is of MBR type (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA).

3449 E3449 Cmd Rej: SADDR must be specified for MBR GTT settypes

If the GTT set specified by the `optsn` parameter is of MBR type (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA) in the GTA command for the ITU opcode entry, then the package type specified via the `pkgtype` parameter must be ITU BGN/CNT/END.

3459 E3459 Cmd Rej: GTTSET MBR Settypes Support ITU BGN/CNT/END Pkgtype

The `defmapvr` parameter can be specified in the GTA command for the ITU opcode entry if the GTT set specified by the `optsn` parameter is of MBR type (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA).

3460 E3460 Cmd Rej: DEFMAPVR is supported by MBR GTT settypes

The `PRIO` parameter can be specified with OP CODE GTT set types only.

3552 E3522 Cmd Rej: CHECKMULCOMP/PRIO can be specified with OP CODE SETTYPES only

If the `GTA/EGTA` parameter is specified, then the `EADDR` parameter cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `SADDR` parameter is specified, then the `ECGSSN/ECSSN` parameter cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `OPCODE` parameter is specified, then the `EADDR/EGTA/ ECGSSN/ECDSSN` parameter cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `CGPC` parameter is specified, then the `EADDR/EGTA/ECGSSN/ECDSSN` parameter cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `ECGSSN/ECDSSN` parameter is specified, then the `EADDR/EGTA` parameter cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

SSN configured for SFAPP cannot be used in any command for any configuration

3558 E3558 Cmd Rej: SFAPP SSN can not be used

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

When the Flexible GTT Load Sharing feature and the Intermediate GTT Load Sharing feature are on, multiple relationships can be defined among set of destination point codes in the MRN table, which already exists in the EAGLE. The relationship used in a particular translation is based on the GTA digits used for translation. The MRN set and the post-translation PC create a key that is used to perform lookups in the MRN table. The lookup results in a set of alternate PCs, one of which is selected, based on PC relative cost, to route the MSU in the most cost effective way.

When the Flexible GTT Load Sharing feature is enabled, multiple relationships can be defined among a set of PC/SSNs in the existing MAP table. The relationship used in a particular translation is based on the GTA digits used for translation.

When the Origin-based SCCP Routing feature is turned on, the CdPA GTA, CgPA GTA, CgPA PC, CgPA SSN, and OPC entries can be provisioned. When provisioning, the following rules apply:

- The Advanced CdPA GTA entry can associate with CgPA GTA set, CgPA PC set, or SELID and OPC set.
- The CgPA GTA, CgPA PC, or OPC entry can associate with the CgPA SSN set.
- The CgPA SSN entry cannot associate with any other GTT set.
- The Advanced CdPA GTA entry may contain SELID, which is (together with the CgPA information) derived from incoming MSU to search the Selector table again for the CgPA GTA or CgPA PC Set.

When the Origin-based SCCP Routing feature is enabled, the GTA and EGTA can be used for the CgPA translation as well as the CdPA GTA translation.

The Flexible GTT Load Sharing feature introduces the `mrnset` parameter. The MRN set and the post-translation PC create a key that is used to perform look ups in the

MRN table. This lookup results in a set of alternate PCs, from which one is selected, based on PCs relative cost, to route the MSU in the most cost effective way.

A loopset consists of a set of point codes that form a routing loop in the network. If the SCCP Loop Detection feature is enabled, then the loopset can be associated with or disassociated from specified translation entries. Loopsets that are associated with translation entries are checked during intermediate and final GTT traffic routing. If a loop exists, then the system can be notified with or without discarding the associated traffic.

The maximum length of the resulting GTA string must not exceed 21 digits when translation is complete.

If the FLOBR GTT hierarchy is provisioned on a linkset, then translations do not have to be searched in a predetermined manner. If a translation points to another GTTSET/SELID, then database searches continue. The number of searches is limited by the following conditions:

- The same GTT set name cannot be referred more than once.
- Up to 7 database searches can be performed.
- For MBR, the same GTT set type (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA) cannot be referred more than once.

If the FLOBR feature is turned on, then any translation can point to any GTTSETs other than that specified by the GTTSN. The CdPA GTA and CdPA SSN translations can also point to an OPCODE. For CdPA GTA and CdPA SSN translations, if an OPTSN GTTSET/SELID is provisioned apart from an OPCODE, then the OPTSN GTTSET/SELID takes precedence over the OPCODE.

The MBR GTT set type translation entries (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA) can be configured only when the TOBR feature is turned on. The GTT sets of the types mentioned above are allowed to be provisioned ONLY in GTA entries from a GTT set of the type OPCODE or one of the other GTT set types supported by this feature (SS7 Firewall).

Translations, supporting ANSI or ITU opcodes, associated with the TOBR feature:

- ANSI Opcode—ANSI opcode specifier, ANSI TCAP Package type, and Family
- ITU Opcode—ITU opcode, ITU TCAP Package Type, Opcodetag and ACN

Translations associated with the FLOBR feature:

- CdPA SSN Translations—Can be configured with routing and flexible routing data. The provisioning rules for CdPA SSN translations are the same as CgPA SSN translations in OBSR.
- DPC Translations—The provisioning rules for DPC translations are the same as OPC translations except that the OPCODE parameter cannot be configured for DPC translations.

Output

```
ent-
gta:gttsn=opcdis3:xlat=dpc:ri=gt:pc=1-1-1:opca=002-001-001:actsn=act
discl:ppmeasreqd=yes
```

```
tekelecstp 10-02-24 12:09:18 EST EAGLE 42.0.0
ENT-GTA: MASP A - COMPLTD
```

```
;
```

```
ent-  
gta:gttsn=imsil:xlat=dpc:ri=gt:pc=1-1-1:saddr=1234567890:eaddr=  
2234567890
```

```
tekelecstp 15-05-24 12:09:18 EST EAGLE 46.3.0  
ENT-GTA: MASP A - COMPLTD
```

```
;
```

```
ent-  
gta:gttsn=setopcode:opcode=*:pkgtype=bgn:acn=*:xlat=dpc:ri=gt:p  
ci=1-1-1:prio=1024: opcodetag=global
```

```
tekelecstp 16-11-07 14:13:13 MST EAGLE 46.5.0.0.0-70.5.0  
ENT-GTA: MASP A - COMPLTD
```

```
;
```

```
ent-  
gta:gttsn=imsi3:xlat=dpc:ri=gt:pc=1-1-1:saddr=1234567890:transm  
easrqd=yes
```

```
tekelecstp 17-05-11 15:09:18 EST EAGLE 46.6.0  
ENT-GTA: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-gta](#)
- [dlt-gta](#)
- [rtrv-gta](#)

4.1.302 ent-gtcnv

Use this command to provision the Default Global Title Conversion table. The table is used during conversion for MTP-routed cross network SCCP UDT(S), XUDT(S) and SCCP Management messages. It is also used during conversion for GT routed messages when a matching entry exists in the Global Title address table but the NGTI value is not provisioned.

Parameters

dir (mandatory)

Direction of conversion.

Range:

atoi

ANSI to ITU conversion

itoa

ITU to ANSI conversion

both

conversion in both directions

gtixlat (mandatory)

Global Title Indicator conversion. This parameter is expressed in the form of the ANSI GTI and the ITU GTI.

Range:**22**

Converts an incoming ANSI GTI 2 to an outgoing ITU GTI 2 or an incoming ITU GTI 2 to an outgoing ANSI GTI 2

24

Converts an incoming ANSI GTI 2 to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI 2

tta (mandatory)

ANSI translation type.

Range:

0 - 255, *

tti (mandatory)

ITU translation type.

Range:

0 - 255, *

nai (optional)

Nature of address indicator. This parameter is mandatory when `gtixlat=24` is specified, and not specified when `gtixlat=22` is specified.

Range:

0 - 63, *

Default:

Not set

np (optional)

Numbering plan. This parameter is mandatory when `gtixlat=24` is specified, and not specified when `gtixlat=22` is specified.

Range:

0 - 15, *

Default:

Not set

npdd (optional)

New prefix digits to be deleted. The number of new prefix digits to be deleted. These digits will be replaced with the new prefix digits string (`npds`).

Range:

0 - 21

Default:

0

npds (optional)

New prefix digits string. The new prefix digits string that will replace the received prefix digits string.

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are 0-9

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F

Default:

No digits

nsdd (optional)

New suffix digits to be deleted. This parameter identifies the new suffix digits to be deleted that will replace the received suffix digits to be deleted.

Range:

0 - 21

Default:

0

nsds (optional)

New suffix digits string. The new suffix digits string that will replace the received suffix digits string.

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are 0-9

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F

Default:

No digits

Example

The following example assigns an entry used for ANSI to ITU conversion where the conversion is from GTI 2 to GTI 2.

```
ent-gtcnv:dir=atoi:gtixlat=22:tta=10:tti=5
```

The following example assigns an entry used for ANSI to ITU conversion where the conversion is from GTI 2 to GTI 4. The `nsdd` parameter specifies that the last 3 digits are to be removed from the end of the address digits, and the `nsds` parameter specifies that the digits 123 are to be appended to the end of the remaining address digits.

```
ent-
gtcnv:dir=atoi:gtixlat=24:tta=11:tti=7:nai=8:np=6:nsdd=3:nsds=1
23
```

The following example assigns an entry used for ITU to ANSI conversion where the conversion is from GTI 2 to GTI 2. The `npdd` parameter specifies that the first 3 digits are to be deleted from the beginning of the address digits, and the `npds` parameter specifies that the digits 407 should be appended to the beginning of the remaining address digits.

```
ent-gtcnv:dir=ittoa:gtixlat=22:tta=11:tti=7:npdd=3:npds=407
```

The following example assigns an entry used for ITU to ANSI conversion where the conversion is from GTI 2 to GTI 4. The `nsds` parameter specifies that the digits 45667 are to be appended to the end of the address digits.

```
ent-gtcnv:dir=ittoa:gtixlat=24:tta=11:tti=7:nai=8:np=6:nsds=45667
```

The following example assigns an entry used for ANSI/ITU conversion in both directions where the conversion is from GTI 2 to GTI 2.

```
ent-gtcnv:dir=both:gtixlat=22:tta=11:tti=7
```

The following example assigns an entry used for ANSI/ITU conversion where an incoming ANSI GTI 2 is converted to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI 2.

```
ent-gtcnv:dir=both:gtixlat=24:tta=12:tti=9:nai=6:np=4
```

The following example assigns a default entry for ANSI to ITU conversion where the conversion is from GTI 2 to GTI 2.

```
ent-gtcnv:dir=atoi:gtixlat=24:tta=*:tti=4:nai=6:np=5
```

The following example assigns a default entry for ITU to ANSI where the conversion is from GTI 2 to GTI 4. The `npds` parameter specifies that the digits 919 are to be appended to the beginning of the address digits.

```
ent-gtcnv:dir=ittoa:gtixlat=24:tta=17:tti=*:nai=*:np=*:npds=919
```

The following example specifies hexadecimal digits for the `npds` parameter.

```
ent-  
gtcnv:dir=atoi:gtixlat=22:tta=*:tti=4:npdd=3:npds=abcdef0123456789
```

The following example assigns a default entry for ITU to ANSI where the conversion is from GTI 2 to GTI 4. The `npds` parameter specifies that the digits 123 are to be appended to the beginning of the address digits and the `nsds` parameter specifies that the digits 407 are to be appended to the end of the address digits

```
ent-  
gtcnv:dir=ittoa:gtixlat=24:tta=17:tti=*:nai=*:np=*:npds=123:nsds=407
```

Dependencies

The ANSI/ITU SCCP Conversion feature must be enabled before this command can be entered.

4171 E4171 Cmd Rej: SCCP Conversion feature must be enabled

If the `gtixlat=22` parameter is specified, then the `nai` and `np` parameters cannot be specified.

4033 E4033 Cmd Rej: If GTIXLAT is 22, NAI and NP cannot be specified

If the `gtixlat=24` parameter is specified, then the `nai` and `np` parameters must be specified.

4034 E4034 Cmd Rej: If GTIXLAT is 24, NAI and NP must be specified

If the `dir=both` parameter is specified, then a wildcard value (*) cannot be specified for any of the other parameters.

4116 E4116 Cmd Rej: Wildcard/Asterisk invalid for direction of BOTH

If the `dir=atoi` parameter is specified, then a wildcard value (*) can be specified only for the `tta` parameter.

4117 E4117 Cmd Rej: Wildcard/Asterisk combination invalid for direction

If the `dir=itoa` parameter is specified, then a wildcard value (*) must be specified for the `tti`, `np`, and `nai` parameters.

4118 E4118 Cmd Rej: Wildcard/Asterisk required for TTI, NP, NAI if DIR is ITOA

The specified `dir`, `tta`, `tti`, `np`, and `nai` parameter combination cannot already exist in the database.

4119 E4119 Cmd Rej: Key values: DIR, TTA, TTI, NP, NAI already exist

The `nsdd/nsds` and `npdd/npds` parameters cannot be specified together in the command.

4170 E4170 Cmd Rej: Prefix & Suffix digit modification parameters can't be mixed

The Default Global Title Conversion table can contain a maximum of 1000 entries.

4169 E4169 Cmd Rej: GT Conversion table is full

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the `npds` and `nsds` parameters.

3006 E3006 Cmd Rej: Hex Digit Support for GTT feature must be ON

Notes

The use of asterisks (wildcards) is allowed only once for each direction of ANSI to ITU and ITU to ANSI. This provides a configurable default.

In the conversion direction of ANSI to ITU, an asterisk can be specified only for the ANSI `tta` parameter.

In the conversion direction of ITU to ANSI, the asterisk value must be specified for the `itu`, `tti`, `np`, and `nai` parameters.

Asterisks are not allowed when conversion is in both directions (`dir=both`).

The suffix digit manipulation parameters `nsdd` and `nsds` cannot be specified in the same command with the prefix digit manipulation parameters `npdd` and `npds` parameters. The `npdd` and `nsdd` parameters specify how many digits to delete, if any, from the beginning or end respectively of the Global Title address digits. The `npds` and `nsds` parameters specify what digits, if any, to append to the beginning or end respectively of the Global Title address digits.

The `gtixlat` parameter is expressed in the form of the ANSI GTI and the ITU GTI. The `gtixlat` parameter is used to indicate the conversion of the Global Title Indicator between the ANSI and ITU standards. For example: A `gtixlat` value of 24 converts an incoming ANSI GTI 2 to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI 2.

Output

```
ent-gtcnv:dir=atoi:gtixlat=22:tta=10:tti=5

      rlghncxa03w 04-01-07 11:43:07 EST  EAGLE 31.3.0
      ENT-GTCNV:  MASP A - COMPLTD
;

```

Related Topics

- [chg-gtcnv](#)
- [dlt-gtcnv](#)
- [rtrv-gtcnv](#)

4.1.303 ent-gtmod

Use this command to enter GT Modification (GTMOD) data in the GTMOD table. The GTMOD entry consists of a GTMOD ID and GTMOD specific data. After the GTMOD ID is provisioned, it can be used in GTT and GTT Action commands.

Parameters**Note:**

Definitions for the feature options specified by the `on` and `off` parameters are located in the Notes section.

gtmodid (mandatory)

GTMOD identifier.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

cgpassn (optional)

Calling party subsystem number. This parameter specifies the calling party subsystem address that receives the message.

Range:

002 - 255

ngti (optional)

New global title indicator. This parameter specifies whether a new GTI translation format is type 2 or type 4.

Range:

2

4**nnai (optional)**

New nature of address indicator. The value that replaces the received NNAI.

Range:
0 - 127

nnp (optional)

New numbering plan. The value that is used to replace the received numbering plan.

Range:
0 - 15

npdd (optional)

Number of prefix digits to be deleted. The number of digits to be deleted from the prefix of the received GT address.

Range:
1 - 21

npds (optional)

New prefix digits string. The digits to be prefixed to the received GT address.

Range:
1 - 21 digits
If the Hex Digit Support for GTT feature is not enabled, the range is *1 - 21* decimal digits; valid digits are *0-9*
If the Hex Digit Support for GTT feature is enabled and on, the range is *1 - 21* hexadecimal digits; valid digits are *0-9, a-f, A-F*

nsdd (optional)

Number of suffix digits to be deleted. The number of digits to be deleted from the suffix of the received GT address.

Range: 1 - 21

nsds (optional)

New suffix digits string. The digits to be suffixed to the received GT address.

Range:
1 - 21 digits
If the Hex Digit Support for GTT feature is not enabled, the range is *1 - 21* decimal digits; valid digits are *0-9*
If the Hex Digit Support for GTT feature is enabled and on, the range is *1 - 21* hexadecimal digits; valid digits are *0-9, a-f, A-F*

ntt (optional)

New Translation type. This parameter specifies the value that replaces the received Translation Type.

Range:
0 - 255

off (optional)

Disables or turns off the specified feature options. This parameter specifies a comma-separated list of feature options that are requested to be turned off. Up to 8 feature options can be specified in the list.

Range:

gt0fill

on (optional)

Enables or turns on the specified feature options. This parameter specifies a comma-separated list of feature options that are requested to be turned on. Up to 8 feature options can be specified in the list.

Range:

gt0fill

precd (optional)

Precedence. This parameter specifies whether the prefix or suffix takes precedence while modifying the received GT address.

Range:

px

if the *npdd* and *npds* parameters are specified

sfx

if the *nsdd* and *nsds* parameters are specified

Example

```
ent-gtmod:gtmodid=set1:npdd=5:npds=123:off=gt0fill:ntt=10
```

```
ent-gtmod:gtmodid=gtmodset4:npdd=5:npds=123:nsdd=2:
```

```
nsds=1234:ngti=4:on=gt0fill:nnai=12:nnp=5:precd=sfx
```

```
ent-gtmod:gtmodid=setntt:ntt=12
```

Dependencies

If the *ngti=4* parameter is specified, then the *nnp* and *nnai* parameters must be specified.

4175 E4175 Cmd Rej: If NGTI is 4, NNP and NNAI must be specified

If the *ngti=2* parameter is specified, the *nnp* and *nnai* parameters cannot be specified.

4176 E4176 Cmd Rej: If NGTI is 2, NNP and NNAI cannot be specified

The ANSI/ITU SCCP Conversion feature must be enabled before the *ngti* parameter can be specified.

4171 E4171 Cmd Rej: SCCP Conversion feature must be enabled

The Hex Digit Support for GTT feature must be turned on before hexadecimal digits can be specified for the *npds* or *nsds* parameters.

3006 E3006 Cmd Rej: Hex Digit Support for GTT feature must be ON

The GTMOD table cannot contain more than 100000 entries.

5283 E5283 Cmd Rej: GTMOD table is full

The GTMOD table is corrupt or cannot be found.

5284 E5284 Cmd Rej: Failed reading GTMOD table

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The AMGTT, AMGTT CdPA Only, or AMGTT CgPA Upgrade feature must be turned on before any parameter except the `ntt` parameter can be specified.

2789 E2789 Cmd Rej: AMGTT/AMGTT CdPA Only/AMGTT CgPA Upgrade must be ON

The value specified for the `gtmodid` parameter cannot already exist in the GTMOD table.

5286 E5286 Cmd Rej: GTMODID already exist

The combined digit length of the values specified for the `npds` and `nsds` parameters cannot be greater than 21.

5290 E5290 Cmd Rej: Combined digit length of NPDS & NSDS must not exceed 21

If the `npdd/npds` and `nsdd/nsds` parameters are specified, then the `precd` parameter must be specified.

5289 E5289 Cmd Rej: PRECD must be specified when NPD(x) and NSD(x) are specified

The `gtmodid=none` parameter cannot be specified.

5292 E5292 Cmd Rej: GTMODID must not be specified as NONE

If the `precd` parameter is specified, then the `npdd`, `npds`, `nsdd`, or `nsds` parameter must be specified.

4198 E4198 Cmd Rej: If PRECD specified, NPDS/NSDS/NPDD/NSDD must be specified

If the `on=gt0fill` parameter is specified, then the `ngti` parameter must be specified.

4174 E4174 Cmd Rej: GT0FILL can be specified as ON only if NGTI is specified

The same value cannot be specified for the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

SSN configured for SFAPP cannot be used in any command for any configuration

3558 E3558 Cmd Rej: SFAPP SSN can not be used

Notes

on/off options

- `gt0fill` —GT zero fill. Specifies whether the last 0 of the GTA is a treated as a valid digit (OFF) or as filler (ON) during GT Modification for the `gti(x)=2` to `gti(x)=4` scenario.

Output

```
ent-gtmod:gtmodid=set5:ngti=4:nnp=4:nnai=2:on=gt0fill
```

```
tekelecstp 10-03-08 14:43:31 EST EAGLE 42.0.0
```

```
GTMOD table is (2 of 50000) 1% full
```

```
ENT-GTMOD: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-gtmod](#)
- [dlt-gtmod](#)
- [rtrv-gtmod](#)

4.1.304 ent-gtt

Use this command to add the routing object, DPC, and subsystem number for messages requiring global title translation. The translation is performed on the basis of the global title address (GTA) and translation type (TT) for each SS7 SCCP message directed to the STP's self-identity DPC or CPC with a routing indicator of 0, indicating a GTT is required.

Note:

If the EGTT feature is turned on, then the GTT Selector (`ent/chg/dlt/rtrvgtttsel`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrvgta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. It is not recommended to run `ent/dlt/rtrv-tt & ent/chg/dlt/rtrv-gtt` commands as it may cause the advance GTA fields of GTT entry to be reset to the default values.

Parameters

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

gta (mandatory)

Global title address. The beginning of a range of global title digits.

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

pc (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

pca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24 (mandatory)

Point code.

pci (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—000–255

ssa—000–255

sp—000–255

ri (mandatory)

Route indicator. This parameter specifies whether a subsequent global title translation is required.

Range:

gt

Subsequent translation is required.

ssn

Subsequent translation is not required.

xlat (mandatory)

Translate indicator. The type of global title translation to be performed.

Range:

dpc

dpcssn

dpcngt

cggtmod (optional)

Calling party GT modification indicator. This parameter specifies whether calling party global title modification is required.

Range:

yes

no

Default:

no

egta (optional)

Global title end address. The end of a range of global title digits.

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

Default:the `gta` value**force (optional)**When a final GTT is specified, the DPC and subsystem number must be configured in the mated application table (`xlat=dpc` and `ri=ssn`). The `force=yes` parameter overrides this restriction.**Range:***yes**no***Default:***no***gtmodid (optional)**

Global title modification identifier.

Range:*ayyyyyyy*

1 leading alphabetic character followed by up to 8 alphanumeric characters

Default:*none***loopset (optional)**

SCCP loopset name. This parameter associates a translation set with a loopset.

Range:*ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters.

none —There is no association between the translation set and any loopset**Default:***none***mapset (optional)**

MAP set ID.

Range:*1 - 36000, dflt**dflt* —Default MAP set**mrnset (optional)**

MRN set ID.

Range:

1 - 3000, *dflt*, *none*
dflt —Default MRN Set ID
none —Removes the specified MRN Set ID from the MRN table

ssn (optional)

Subsystem number. The subsystem address that will receive the message.
 This parameter is required and can only be specified if the `xlat=dpcssn` parameter is specified.

Range:

002 - 255

ttn (optional)

Translation type name. The name is of local significance only, and is related to the translation type.

Range:

ayyyyyyy
 1 alphabetic character followed by up to 8 alphanumeric characters

Default:

No translation name is given

type/typea/typei/typen/typen24/typeis/typens (optional)

Translation type. This parameter identifies the translation type and network type. This parameter is the decimal representation of the 1-byte field used in SS7.
 The `type` and `typea` parameters specify an ANSI network.
 The `typei` parameter specifies an ITU-international network.
 The `typen` parameter specifies an ITU-national network.
 The `typen24` parameter specifies a 24-bit ITU-national network.
 The `typeis` parameter specifies an ITU-international spare network.
 The `typens` parameter specifies an ITU-national spare network.
 A translation type numeric value may be entered as an ANSI type (`type/typea`) and as an ITU type (`typei/typen/typen24/typeis/typens`). However, they are separate entities.
 The point code domain translation types for GTT are handled by the EAGLE protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I spare, ITU-N, ITU-N spare, and ITU-N24.

Range:

000 - 255

Default:

No translation type is specified

Example

The lines in the following examples are wrapped for readability:

```
ent-gtt:type=3:gta=9195551212:egta=9195552000:
xlat=dpcssn:ri=ssn:pc=001-255-255:ssn=255

ent-gtt:ttn=lidb1:gta=9105551212:egta=9105554000:
xlat=dpcngt:ri=gt:pc=001-255-254

ent-gtt:ttn=c800:gta=9195554321:xlat=dpc:ri=gt:pc=001-255-253
```

```

ent-gtt:type=4:gta=919460:xlat=dpc:ri=ssn:pc=001-255-252
ent-gtt:type=4:gta=919461:xlat=dpc:ssn:ri=gt:ssn=254
ent-gtt:typepa=210:ttn=test:gta=100000:egta=199999:
pca=1-1-1:ssn=123:xlat=dpcngt:ri=gt:gtmodid=abc1
ent-gtt:type=100:ttn=test2:gta=123:egta=321:
pcn=222:ssn=10:xlat=dpcngt:ri=gt:gtmodid=id1
ent-
gtt:pcn24=8-8-8:gta=919833:xlat=dpc:ssn:ri=ssn:ssn=20:typen24=4
ent-gtt:typepa=100:ttn=test2:gta=123:egta=321:
pci=2-2-2:ssn=10:xlat=dpcngt:ri=gt
ent-
gtt:xlat=dpc:ssn:ssn=10:ri=gt:pci=s-1-21-1:gta=123456:typei=3
ent-gtt:xlat=dpc:ssn:ssn=10:ri=gt:pcn=s-124:gta=123456:typen=3
ent-gtt:xlat=dpc:ssn:ssn=10:ri=gt:pcn=s-125-
aa:gta=123456:typen=3
ent-gtt:type=1:xlat=dpc:ri=gt:pc=1-1-1:
gta=1234567890:egta=2234567890:mrnset=23
ent-gtt:type=1:xlat=dpcngt:ri=gt:pc=1-1-2:
gta=2345678901:egta=3456789012:mrnset=54
ent-gtt:type=1:xlat=dpcngt:ri=gt:pc=1-1-3:
gta=3456789013:egta=3456789019:mrnset=df1t
ent-gtt:type=1:xlat=dpcngt:ri=gt:pc=1-1-3:
gta=3456789012:egta=4567890123:mrnset=none
ent-gtt:type=1:xlat=dpc:ssn:ri=ssn:pc=1-1-1:
gta=1234567890:egta=2234567890:ssn=10:mapset=23
ent-gtt:type=1:xlat=dpc:ssn:ri=ssn:pc=2-2-2:
gta=2345678911:egta=3456789022:ssn=25:mapset=df1t

```

This example specifies hexadecimal digits for the *gta* and *egta* parameters.

```

ent-
gtt:ttt=set1:xlat=dpc:ssn:ri=ssn:ssn=10:pc=1-1-1:gta=abcd:egta=a
bce

```

This example specifies that calling party GT modification is required.

```

ent-gtt:xlat=dpc:pc=1-1-1:ri=gt:gta=981234:type=4:cggmod=yes
ent-gtt:xlat=dpc:ri=gt:pci=s-1-1-4:gta=123456:typeis=5
ent-gtt:xlat=dpc:ri=gt:pcn=s-111:gta=123456:typens=5

```

Dependencies

The end address must be greater than or equal to the start address.

2420 E2420 Cmd Rej: EGTA must be greater than or equal to GTA

The `pcn` parameter format must match the format that was assigned with the `chg-stpopts:npcfmti` parameter.

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

Point code entries must be full point codes. Partial point codes are not allowed.

2859 E2859 Cmd Rej: Destination address must be a full point code

The start global title address length must be equal to the number of digits specified by the given translation type. If the VGTT (variable length GTT) feature is turned on, then up to 10 GTA lengths per translation type can be provisioned. When this command is entered to create entries, the software keeps track of the lengths and allows only 10 different lengths. The global title address specified for the translation type must then have the same number of digits as an existing GTA.

2404 E2404 Cmd Rej: GTA does not match translation type's number of digits

If the end global title address is specified, its length must equal the length of the start global title address.

2403 E2403 Cmd Rej: Length of EGTA must be equal to length of GTA

The maximum length of the resulting GTA string must not exceed 21 digits when translation is complete.

2404 E2404 Cmd Rej: GTA does not match translation type's number of digits

If the translation type is specified, then it must already exist and cannot be an alias.

2466 E2466 Cmd Rej: Translation Type specified does not exist

The ANSI/ITU SCCP Conversion feature must be enabled before a translated PC and a translation type in different network types can be specified.

2470 E2470 Cmd Rej: Point Code network type does not match TT network type

When the translated point code is of type ANSI, the `ngti` parameter of the referred GTMOD cannot have a value of 4. For ANSI PCs, the `ngti` parameter must have a value of 2.

4903 E4903 Cmd Rej: If NGTI of referred GTMOD is 4, PC cannot be ANSI

The range, as specified by the start and end global title addresses, cannot exist in the global title translation data for the specified translation type. Each range may be contained completely within a previously defined range, in which case splitting is performed. However, if the ranges overlap, splitting cannot occur, the command is rejected, and a list of overlapped global title addresses is displayed. An example follows that shows what happens when the user attempts to enter a global title address range (such as 8005550000 to 8005559999) that

overlaps an existing range. The overlapping links must match. If they do not, error message E2401 is generated displaying the list of overlapped global title addresses:

```
The following GTA ranges overlap the input GTA range
START GTA END GTA 8005550000 8005551999 8005552000 8005553999
8005554000 8005555999 ENT-GTT: MASP A - Command Aborted
```

2401 E2401 Cmd Rej: GTA range overlaps a current range

If a final GTT is specified with the `ri=ssn` parameter and the `xlat=dpc` parameter, and if the value of the `force` parameter is not `yes`, the point code must be configured in the Remote Point Code/MAP Table.

2419 E2419 Cmd Rej: Point code does not exist in the remote point code table

The `xlat=dpcssn` parameter must be specified before the `ssn` parameter can be specified.

2457 E2457 Cmd Rej: SSN can only be specified when XLAT=DPCSSN

If the `xlat=dpcssn` parameter is specified, then the `ssn` parameter must be specified.

2481 E2481 Cmd Rej: SSN must be specified when XLAT=DPCSSN

Table 4-24 shows the valid combinations for the `xlat`, `ri`, and `ssn` parameters. All other combinations are rejected.

Table 4-24 Valid ent-gtt Routing Parameter Combinations

XLAT Value	RI Value	Routing Action	SSN Value
DPC	GT	Translate DPC only and route on GT	Cannot specify
DPC	SSN	Translate DPC only and route on SSN	Cannot specify
DPCSSN	GT	Translate DPC and SSN and route on GT	Must specify
DPCSSN	SSN	Translate DPC and SSN and route on SSN	Must specify
DPCNGT	GT	Translate DPC only and route on GT	Cannot specify

N/A N/A

If the XGTT feature is enabled, then the GTT table can have up to either 400,000 or 1,000,000 entries, depending on the controlled feature Part Number that is enabled. If XGTT is not enabled, then the GTT table can contain up to 269,999 user entries.

2462 E2462 Cmd Rej: GTT table is full

To enter this command, the Remote Point Code table cannot be full.

2454 E2454 Cmd Rej: Remote point code table is full

To enter this command, the subsystem table for primary remote point codes cannot be full.

2453 E2453 Cmd Rej: Subsystem table for primary remote point code is full

If the `ri=ssn` parameter is specified, the `mrnset` parameter cannot be specified.

4475 E4475 Cmd Rej: MRNSET must be specified (only) if RI parameter is GT

If the Flexible GTT Load Sharing feature is enabled, the specified PC must already exist in the specified MRN set.

4483 E4483 Cmd Rej: PC does not exist in specified MRNSET

The specified MRN set must already exist in the MRN table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

The Flexible GTT Load Sharing feature must be enabled before the `mrnset` parameter can be specified.

4479 E4479 Cmd Rej: MRNSET must be specified (only) if FGTTLS feature is enabled

If the `ri=gt` parameter is specified, then the `mrnset` parameter must be specified.

4475 E4475 Cmd Rej: MRNSET must be specified (only) if RI parameter is GT

The MRN table is corrupt or cannot be found.

2999 E2999 Cmd Rej: Failed reading the MRN table

If the `ri=gt` parameter is specified, the `mapset` parameter cannot be specified.

4532 E4532 Cmd Rej: MAPSET must be specified (only) if RI parameter is SSN

The Flexible GTT Load Sharing feature must be enabled before the `mapset` parameter can be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The `mapset` parameter can only be specified if the Flexible GTT Load Sharing feature is enabled, and the `ri=ssn` parameter is specified. If the `ri=ssn` parameter is specified, the `mapset` parameter must be specified. If the `ri=gt` parameter is specified, the `mapset` parameter cannot be specified.

4532 E4532 Cmd Rej: MAPSET must be specified (only) if RI parameter is SSN

The specified PC and SSN must exist in the specified MAP set.

4528 E4528 Cmd Rej: PC/SSN doesn't exist in MAPSET

At least one entry must be provisioned in the specified MAP set in the MAP table.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

If the `xlat=dpc` parameter is specified, and the `force` parameter is not specified as yes, the specified PC and MAP set must exist in the MAP table.

4543 E4543 Cmd Rej: PC/MAPSET does not exist in MAP table

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

The Hex Digit Support for GTT feature must be turned on before hexadecimal digits can be specified for the `gta` or `egta` parameters.

3006 E3006 Cmd Rej: Hex Digit Support for GTT feature must be ON

The SCCP Loop Detection feature must be enabled before the `loopset` parameter can be specified.

4565 E4565 Cmd Rej: SCCP Loop Detection Feature is not enabled

The value of the `loopset` parameter must already exist in the database.

4568 E4568 Cmd Rej: Loop Set entry does not exist

The `tt` or the `ttn` parameter must be specified.

2475 E2475 Cmd Rej: Either TYPE or TTN must be specified

The value specified for the `pc/pca/pci/pcn/pcn24` parameter must be a valid point code.

2169 E2169 Cmd Rej: Point code out of range

The SCCP Loop Detection feature must be enabled before the `loopset` parameter can be specified.

4565 E4565 Cmd Rej: SCCP Loop Detection Feature is not enabled

The value of the `loopset` parameter must exist in the Loopset table.

4568 E4568 Cmd Rej: Loop Set entry does not exist

If the value of the `pc/pca/pci/pcn/pcn24` parameter is the True Point Code, then the `xlat=dpcssn` parameter and the `ri=ssn` parameter must be specified.

3648 E3648 Cmd Rej: XLAT must be DPCSSN and RI must be SSN if PC is the True PC

If the `ssn` parameter is specified, and if the value of the `pc/pca/pci/pcn/pcn24` parameter is the True Point Code, then the value of the `ssn` parameter must exist in the SS-APPL table.

3612 E3612 Cmd Rej: SSN must be in SS-APPL table when PC is true point code

The value of the `pc/pca/pci/pcn/pcn24` parameter must exist as a destination in the ordered route entity set or must reside in a cluster (ANSI only) that exists as a destination in the ordered route entity set (for global title routing).

2417 E2417 Cmd Rej: Point code does not exist in the routing table

If the VGTT feature is turned on, then up to 10 GTA lengths can exist per translation type. If the Support for 16 GTT Lengths in VGTT feature is turned on, then up to 16 GTA lengths can exist per translation type.

4007 E4007 Cmd Rej: Exceeding max GTA Lengths supported per TT

The value of the `tt` parameter must not be defined as an alias.

2465 E2465 Cmd Rej: Translation TYPE defined as an alias

If both the translation type (`tt`) and translation type name (`ttn`) are specified, the translation type name (`ttn`) must match that of the specified translation type (`tt`).

2473 E2473 Cmd Rej: TTN and TYPE do not correspond to each other

If the `tt` parameter is not specified, then the value of the `ttn` parameter must match the value of a `tt` parameter in the STP database.

2468 E2468 Cmd Rej: TTN specified does not exist

If the `xlat=dpcngt` parameter is specified, then the `ri=gt` parameter must be specified.

2480 E2480 Cmd Rej: RI=GT must be specified when XLAT=DPCNGT

The site identification table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The Loopset table is corrupt or cannot be found.

4567 E4567 Cmd Rej: Cannot access LoopSet table

The database is corrupt or cannot be found.

2416 E2416 Cmd Rej: Unable to access database. Severe database failure

The GTT table cannot be full.

2462 E2462 Cmd Rej: GTT table is full

The value specified for the `pc` parameter cannot be associated with a proxy point code.

4707 E4707 Cmd Rej: PRX using DPC not allowed in GTT, MAP, MRN tables

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the `cggmod` parameter can be specified.

4789 E4789 Cmd Rej: Either AMGTT or AMGTT CgPA Upgrade feature must be ON

One or more point codes in the command will exceed the maximum number of entries in the MAP table.

4526 E4526 Cmd Rej: MAP table is full

The GTT set associated with the translation type specified by the `ttn` parameter must have a set type of `cdgta` (see the `ent-gttset` command).

4997 E4997 Cmd Rej: SETTYPE of specified GTTSET must be CdGTA

The value specified for the `gtmodid` parameter must already exist in the GTMOD table.

5285 E5285 Cmd Rej: GTMODID does not exist

The GTMOD table is corrupt or cannot be found.

5284 E5284 Cmd Rej: Failed reading GTMOD table

The `gtmodid=none` parameter cannot be specified.

5292 E5292 Cmd Rej: GTMODID must not be specified as NONE

The network domain of the translation type specified by the `ttn` parameter cannot be CROSS (see the `ent-gttset` command).

5371 E5371 Cmd Rej: Network domain of corresponding ttn must not be CROSS

The `ttn=none` parameter cannot be specified.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

The length of the specified `gta` parameter must match the number of digits provisioned for the specified GTT set (`gttsn`) when the VGTT feature is turned off. If the VGTT feature is turned on, then up to 10 GTA lengths can exist per GTT set. If the Support for 16 GTT Lengths in VGTT feature is turned on, then up to 16 GTA lengths can exist per GTT set.

3571 E3571 Cmd Rej: GTA Length does not match GTT Set number of digits

SSN configured for SFAPP cannot be used in any command for any configuration

3558 E3558 Cmd Rej: SFAPP SSN can not be used

Notes

The routing indicator provides routing instructions to the receiving signaling point. If the routing indicator specifies global title, global title translation then needs to be performed at another signaling point.

Up to 200,000 entries are allowed for an individual translation type if all SCCP cards are E5-TSM cards or DSM cards.

The ANSI point code 0 and the ITU-I point code 0-000-0 are not valid point codes.

The EAGLE does not require a MAP table entry to be configured prior to provisioning a GTT entry. The EAGLE assumes that the GTT entry is for a solitary point code/subsystem and automatically creates a MAP entry for the point code/subsystem.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

When the Flexible GTT Load Sharing (FGTTLS) feature and the Intermediate GTT Load Sharing feature are on, multiple relationships can be defined among a set of destination point codes in the MRN table that exists in the EAGLE. The relationship used in a particular translation is based on the GTA digits used for translation. The MRN set and the post-translation PC creates a key that is used to perform lookups in the MRN table. The lookup results in a set of alternate PCs, one of which is selected, based on the PCs relative cost, to route the MSU in the most cost-effective way.

The FGTTLS feature introduces the `mrnset` parameter. The MRNSET and post-translation PC create a key that is used to perform lookup tasks in the MRN table. This lookup results in a set of alternate PCs, from which one is selected, based on the PCs relative cost, to route the MSU in the most cost-effective way.

When the FGTTLS feature is turned on, multiple relationships can be defined among set of PC/SSNs in the existing MAP table. The relationship used in a particular translation is based on the GTA digits used for translation.

When the FGTTLS feature is ON, the `mapset` parameter is used. The MAP set and PC/SSN creates a key that is used to perform lookup tasks in the MAP table. The lookup into the MAP table results in a set of mate PC/SSNs, from which one is selected to route the MSU in the most cost-effective way.

If the AMGTT feature is turned off, then the Default GT Conversion Table is used for conversion.

A loopset consists of a set of point codes that form a routing loop in the network. If the SCCP Loop Detection feature is enabled, then the loopset can be associated with or disassociated from specified translation entries. Loopsets that are associated with translation entries are checked during intermediate and final GTT traffic routing. If a loop exists, then the system can be notified with or without discarding the associated traffic.

If the OBSR or FLOBR feature is turned on, then this command can provision only translation entries with a set type of CdGTA.

If the EGTT feature is turned on, then the following occurs:

- For ANSI, if the GTT selector of a true entry is deleted using the `dlt-gttset` command, then a GTT entry cannot be created for that translation type.
- For ITU, if a true GTT selector entry (GTI=2 or GTI=4) is deleted using the `dlt-gttset` command, or if the GTT set name of an entry is changed using the `chg-gttset` command, then a GTT entry cannot be created for that translation type.

Output

```
ent-
gtt:xlata=dpc:pc=12-1-11:ri=gt:gta=981234:type=4:cggmod=yes:gtmodid=
set1

tekelecstp 10-03-09 12:06:11 EST EAGLE 42.0.0
ENT-GTT: MASP A - COMPLTD
;
```

Related Topics

- [chg-gtt](#)
- [dlt-gtt](#)
- [rtrv-gtt](#)

4.1.305 ent-gttact

Use this command to enter a Global Title Translations (GTT) Action entry. A GTT Action entry consists of an Action ID, an action, and action-specific data. The action specified in the entry determines the actions performed the MSU during translation.

Parameters



Note:

Definitions for the feature options specified by the `on` and `off` parameters are located in the Notes section.

act (mandatory)

Action. The action applied to the message.

Range:***disc***

discard message with no return error

dup

route a copy of the message to a specified duplicate node

fwd

route the original message to a specified forward node instead of the destination indicated by the GTT/ DB data

scpval

perform the SCCP MAP validation on MO/MT-FSM messages

sflog

send a copy of original message to SFLOG card

sfthrot

discard message if threshold exceeded

srvc

apply service (GPORT/GFLEX/SMSMR) on the message

tcaperr

discard message that has a specified TCAP error

udts

discard message and send UDTS/XUDTS

sfapp

route message to SFAPP card

actid (mandatory)

This parameter specifies the Action ID associated with the GTT action entry.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

atcaperr (optional)

ANSI TCAP Error Cause. The reason for discarding the message containing the ANSI TCAP portion that is associated with the TCAPERR GTT Action.

Range:

0 - 255

atirescmodid (optional)

Calling party global title modification identifier for ATI. The GTMOD ID to be associated with the calling party of a SFAPP GTT Action entry.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

Default:

None

bursts (optional)

This parameter signifies the number of previous 30-second windows from which the unused capacity can be carried over to the current window.

Range:

0 - 2

Default:

0

cdgtmodid (optional)

Called party global title modification identifier. The GTMOD ID to be associated with the called party of a GTT Action entry.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

Default:

None

cggtmodid (optional)

Calling party global title modification identifier. The GTMOD ID to be associated with the calling party of a GTT Action entry.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

Default:

None

cgpc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

cgpca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

cgpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:*s-, p-, ps-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**zone—0-7**area—000-255**id—0-7*The point code *0-000-0* is not a valid point code.**cgpcn (optional)**ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).**Range:***s-, p-, ps-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**cgpcn24 (optional)**24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).**Range:***p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000-255**ssa—000-255**sp—000-255***cgpcn16 (optional)**16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).**Range:***p, 000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

cgpcogmsg (optional)

The data that is used as the Calling Party Point Code in the outgoing message.

Range:***dflt***

Default. The standard Global Title Translation process supplies the CgPA PC.

cgpcicmsg

CgPA PC data from the incoming MSU

opcicmsg

OPC data from the incoming MSU

provcgpc

provisioned CGPC/CGPCA/CGPCI/CGPCN/CGPCN24/CGPCN16 data in the GTT Action

remove

CGPC will be removed from outgoing MSU

Default:

dflt

defactid (optional)

Default Action ID. The default action that is performed when the *fwd* GTT Action fails to route the MSU or when the *sftthrot* or *scpvall* GTT Action fails.

Range: ayyyyyyyy

1 leading alphabetic character followed by 8 alphanumeric characters

The *defactid* parameter can take one of the following values:

- GTT Action ID with a GTT Action of *disc*, *udts*, or *tcaperr* (see the *act* parameter). This value must already be defined in the GTT Action table.
- *fallback* —The MSU is routed using routing data in the translated MSU when action is *fwd*. When action is set to *scpvall/sftthrot*, the MSU is discarded.

Default:

fallback

failactid (optional)

Fail Action ID. The default action that is performed to route the message when the VLR Validation fails on Stateful App.

Range:

aaaaaaaa

1 leading alphabetic character followed by 8 alphanumeric characters

The *failactid* parameter can take one of the following values:

- GTT Action ID with a GTT Action of disc, udts or tcaperr (see the `act` parameter). This value must already be defined in the GTT Action table.
- fallback -The MSU is discarded.

Default:

fallback

fwdgtt (optional)

Forward GTT. The forward GTT Action ID that is to be used to route the MSU.

Range:

ayyyyyyy

hlraddr (optional)

It is used to address the HLR for the ATI message.

Range:

USECDPA --- Use the CDPA GTA from the query message

TCAPPARM --- GTT translation shall be performed on MAP Parameter. MAP parameter will be used in SCCP CDPA for GTT translation

FWDACT --- Route the message to a specified forward node indicated in FWD GTT Action ID

Default:

USECDPA

itcaperr (optional)

ITU TCAP Error Cause. The reason for discarding the message containing the ITU TCAP portion that is associated with the TCAPERR GTT Action.

Range:

0 - 255

loopset (optional)

SCCP loopset name. The loopset associated with a GTT action.

Range:

ayyyyyyy

1 leading alphabetic character and up to 7 following alphanumeric characters.

none —There is no association between the screening action and any loopset.

Default:

none

mapset (optional)

MAP Set ID. This parameter specifies the Mated Application Set ID.

Range:

1 - 36000, dflt

dflt —Default MAP set

mrnset (optional)

MRN Set ID. The Mated Relay Node Set ID.

Range:

1 - 3000, *dflt*, *none*

dflt —Default MRN Set ID

none —The GTT Action does not participate in any load sharing.

ndgt (optional)

Number of digits to be matched. This parameter is used to specify the number of digits that must be matched between the *SCCP* parameter and *MAP* parameter.

Range:

1 - 21, *all*

all —All the digits present in the *SCCP* parameter and *MAP* parameter are matched.

Default:

all

off (optional)

Disables or turns off the specified feature options. This parameter specifies a comma-separated list of feature options that are requested to be turned off. Up to 8 feature options can be specified in the list.

Range:

uimreqd

useicmsg

handlresp

on (optional)

Enables or turns on the specified feature options. A comma-separated list of feature options that are requested to be turned on. Up to 8 feature options can be specified in the list.

Range:

uimreqd

useicmsg

handlresp

pc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

pca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001-005`.
 When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006-255`.
 The point code `000-000-000` is not a valid point code.

pci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, *0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*, *p-*, *ps*

zone—*0-7*

area—*000-255*

id—*0-7*

The point code `0-000-0` is not a valid point code.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*, *p-*, *ps*

nnnnn—*0-16383*

gc—*aa-zz*

m1-m2-m3-m4—*0-14* for each member; values must sum to 14

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, *000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—*000-255*

ssa—*000-255*

sp—*000-255*

pcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:*p--*, *000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix--p**un---000---127**sna---000---15**mna---000---31***psirescgmodid (optional)**

Calling party global title modification identifier for PSI. The GTMOD ID to be associated with the calling party of a SFAPP GTT Action entry.

Range:*ayyyyyyy*

1 leading alphabetic character followed by up to 8 alphanumeric characters

Default:

None

ri (optional)

Routing indicator. The routing indicator in the SCCP called party address of the duplicated copy of MSU.

Range:*gt**ssn*

route by subsystem number

Default:*ssn***scfaddr (optional)**

GSM SCFAddressparameter must be specified when sfapp action needs to be performed.

Range:*2 digits - 18 digits***snai (optional)**

The service nature of address indicator.

Range:*Sub ---* Subscriber Number*Natl ---* National significant number*intl ---* International number*rnidn ---* Routing number prefix and international dialed/directory number

rnndn --- Routing number prefix and national dialed/directory number

rnsdn --- Routing number prefix and subscriber dialed/directory number

ccrndn --- Country code, routing number, and national directory number

snp (optional)

The service numbering plan.

Range:

e164 --- E.164 numbering plan

e212 --- E.212 numbering plan

e214 --- E.214 numbering plan

sprm (optional)

SCCP Parameter. This parameter is used to determine whether the SCCP GTA, NP, and NAI (if GTI=4 and NP/NAI is present) will be picked up from CDPA or CGPA and used for comparison.

Range:

CDPA --- SCCP CDPA GTA, NP, and NAI (if GTI=4 and NP/NAI is present) will be used for comparison

CGPA --- SCCP CGPA GTA, NP, and NAI (if GTI=4 and NP/NAI is present) will be used for comparison

Default:

CDPA

svccerr (optional)

The action to be taken when the Service triggered by GTT Action Service fails. The MSU can be processed by either applying the results of the pre-Service GTT, or continue with the specific Service error.

Range:

SRVC --- Continue with specific service error

GTT --- Apply the result of pre-GTT service

Default:

SRVC

svcname (optional)

Service to be applied on the MSU when *act* is set to *svc*.

Range:

GFLEX, *GPORT*, *SMSMR*

ssn (optional)

Subsystem number. The subsystem number in the SCCP called party address of the MSU.

Range:

2 - 255

Default:
none

threshold (optional)

If the number of MSUs serviced by the SFTHROT action exceeds this value, MSUs are discarded.

Range:
1- 42949676295

Default:
1

tprm (optional)

TCAP Parameter. This parameter is used to determine whether the MAP digits, NP, and NON (if NP and NON are present) will be picked up from SMRPDA or SMRPOA and used for comparison.

Range:
SMRPDA --- MAP digits, NP, and NON (if NP and NON are present) from SMRPDA will be used for comparison

SMRPOA --- MAP digits, NP, and NON (if NP and NON are present) from SMRPOA will be used for comparison

Default:
SMRPDA

tt (optional)

New Translation Type

Range:
0 - 255

udtserr (optional)

UDTS Error Cause. The reason associated with the UDTS GTT Action for discarding the message.

Range:
0 - 255

valtype (optional)

Validation Type. This parameter is used to decide whether SCCP/TCAP parameter should be used for the validation of the MSU or IR21.xml file data should be used for the validation of the MSU. This parameter is mandatory when act=scpval.

Range:
sccptotcap

ir21totcap

Example

Provisioning GTT Action entry with action type duplicate:

```
ent-gttact:actid=dup1:act=dup:pc=1-1-1:ssn=10:ri=ssn:mapset=20
```

```
ent-gttact:actid=actudts:act=udts:udtserr=10
```

```
ent-gttact:actid=actdisc:act=disc
ent-gttact:actid=actfwd:act=fwd:pc=2-2-2:ssn=2:ri=ssn:mapset=10
ent-gttact:act=dup:actid=actdup2:pca=1-1-1:ssn=15:ri=gt:
cdgtmodid=set1:cggmodid=set5:loopset=loop1:cgpca=2-2-2:cgpcogm
sg=provcgpc
ent-gttact:actid=actfwd2:act=fwd:pc=2-2-2:ssn=2:
ri=ssn:defactid=actdisc:on=useicmsg
ent-
gttact:act=dup:actid=actdup3:pc=1-1-1:ri=gt:mrnset=dflt:cgpc=2-
2-2
ent-
gttact:act=fwd:actid=actfwd3:pc=1-1-1:ri=gt:mrnset=dflt:cgpcogm
sg=dflt
ent-gttact:act=fwd:actid=actfwd4:pc=1-1-1:
ri=gt:mrnset=dflt:defactid=fallback
ent-gttact:actid=acttcap:act=tcaperr:atcaperr=5
ent-
gttact:act=fwd:actid=actfwd5:pcn16=1-14-0:ri=gt:mrnset=dflt:cgp
cogmsg=remove
ent-
gttact:actid=actsrv:act=svr:svrname=gflex:snp=e164:snai=sub:
svrerr=gtt
ent-gttact:actid=actsflog:act=sflog
ent-gttact:actid=sfthrot1:act=sfthrot:bursts=1:threshold=2500
ent-
gttact:actid=scpvall:act=scpval:valtype=sccptotcap:sprm=cdpa:tp
rm=smrpda:
ndgt=15:on=uimreqd:defactid=actdisc
ent-gttact:actid=scpvall:act=scpval:valtype=ir21totcap
ent-
gttact:actid=sfapp10:act=sfapp:scfaddr=19:hlraddr=usecdpa:faila
ctid=actdisc
ent-
gttact:actid=sfapp10:act=sfapp:scfaddr=19:hlraddr=tcapparm:tt=1
0
ent-
gttact:actid=sfapp10:act=sfapp:scfaddr=19:hlraddr=fwdact:fwdggt
=actsfapp
ent-
gttact:actid=sfapp10:act=sfapp:scfaddr=19:atirescgmodid=set1
```

```
ent-gttact:actid=sfapp10:act=sfapp:scfaddr=1912:psirescgmodid=set5
```

```
ent-gttact:actid=sfapp10:act=sfapp:scfaddr=19:on=handlresp
```

Dependencies

A value of *disc*, *udts*, *tcaperr*, *scpval*, or *sfapp* must be specified for the *act* parameter before a value of *uimreqd* can be specified for the *on* or *off* parameter.

5068 E5068 Cmd Rej: Uimreqd only valid for DISC/UDTS/TCAPERR/SCPVAL/SFAPP

The GTT Action table cannot contain more than 2000 entries.

5066 E5066 Cmd Rej: GTT Action table is full

The GTT Action table is corrupt or cannot be found.

5067 E5067 Cmd Rej: Unable to access GTT Action table

If a value of *dup* or *fwd* is specified for the *act* parameter then the *pc/pca/pci/pcn/pcn24/pcn16* parameter must be specified.

If the *ri=ssn* parameter is specified, then the *ssn* parameter must be specified.

If the value of the *cgpcogmsg=provcgpc* parameter is specified, then the *cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16* parameter must be specified.

The *sprm* and *tprm* parameters must be specified when *act* is set to *scpval*.

If the *hlraddr=tcapparm* parameter is specified, then the *tt* parameter must be specified.

If the *hlraddr=fwdact* parameter is specified, then the *fwdgtt* parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

The GTT Action - DISCARD feature must be enabled before a value of *disc*, *udts*, or *tcaperr* can be specified for the *act* parameter.

5119 E5119 Cmd Rej: GTT Action- DISCARD Feature must be enabled

The GTT Action - DUPLICATE feature must be enabled before the *act=dup* parameter can be specified.

5120 E5120 Cmd Rej: GTT Action- DUPLICATE Feature must be enabled

The specified PC and SSN must already exist in the specified MAP set.

4528 E4528 Cmd Rej: PC/SSN doesn't exist in MAPSET

If the *ri=ssn* parameter is specified, then the *mrnset* parameter cannot be specified.

4475 E4475 Cmd Rej: MRNSET must be specified (only) if RI parameter is GT

The Flexible GTT Load-Sharing feature must be enabled before the *mrnset* parameter can be specified.

4479 E4479 Cmd Rej: MRNSET must be specified (only) if FGTTLS feature is enabled

If the *ri=gt* parameter is specified, then the *mapset* parameter cannot be specified.

4532 E4532 Cmd Rej: MAPSET must be specified (only) if RI parameter is SSN

The Flexible GTT Load Sharing feature must be enabled before the `mapset` parameter can be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The specified MAP set must already exist in the database.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

The specified MRN set must already exist in the MRN table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

If the Flexible GTT Load Sharing feature is enabled, the specified PC must already exist in the specified MRN set.

4483 E4483 Cmd Rej: PC does not exist in specified MRNSET

The point code specified for the `pc/pca/pci/pcn/pcn24/pcn16` and `cgpc/cgpcacgpci/cgpcn/cgpcn24/cgpcn16` parameters must be within the range specified by the parameter definition.

2169 E2169 Cmd Rej: Point code out of range

The point code specified for the `pc/pci/pcn/pcn24/pcn16` parameter must be a full point code.

3090 E3090 Cmd Rej: Full Point Code must be specified

A value of `dup` or `fwd` must be specified for the `act` parameter before the `pc/pca/pci/pcn/pcn24/pcn16`, `cgpc/cgpcacgpci/cgpcn/cgpcn24/cgpcn16`, `ssn`, `ri`, `mrnset`, `mapset`, `loopset`, `cgpcogmsg`, `cdgtmodid`, or `cggtmodid` parameter can be specified and before a value of `useicmsg` can be specified for the `on` or `off` parameter.

The `act=tcaperr` parameter must be specified before the `atcaperr` and `itcaperr` parameters can be specified.

The `act=udts` parameter must be specified before the `udtserr` parameter can be specified.

The `act=fwd/sfthrot/scpval/sfapp` parameter must be specified before the `defactid` parameter can be specified.

The Service Numbering Plan (`snp`), Service Nature of Address Indicator (`snaI`), Service name (`svcname`) and Service Error Cause (`svcerr`) parameters can only be specified if action type is `svc`.

The `threshold` or `bursts` parameter can only be specified when `act=sfthrot` is specified.

The `tprm`, `sprm`, and `ndgt` parameters can only be specified if action type is `scpval/sfapp`.

The `scfaddr`, `hIaddr`, `tt`, `failactid` and `fwdggt` parameters can only be specified if action type is `sfapp`.

2155 E2155 Cmd Rej: Invalid parameter combination specified

A value of `none` or `fallback` cannot be specified for the `actid` parameter.

5069 E5069 Cmd Rej: (New) GTT Action Id must not be NONE/FALLBACK

The GTT Action entry specified by the `actid` parameter cannot already exist in the database.

5199 E5199 Cmd Rej: (New) GTT Action Id already exist

If the value specified for the `pc/pca/pci/pcn/pcn24/pcn16` parameter is the STP true point code, then the value specified for the `ssn` parameter must already exist in the SS-APPL table.

3612 E3612 Cmd Rej: SSN must be in SS-APPL table when PC is true point code

The value specified for the `pc/pca/pci/pcn/pcn24/pcn16` parameter must already exist as a destination in the Route table.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

The value specified for the `pc` parameter cannot be associated with a proxy point code.

4707 E4707 Cmd Rej: PRX using DPC not allowed in GTT, MAP, MRN tables

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

If the `pc/pca/pci/pcn/pcn24/pcn16`, `ri=ssn` and `ssn` parameters are specified, then the PC/SSN must be populated in the SCCP Application entity set (Remote Point Code/MAP Table).

2450 E2450 Cmd Rej: PC/SSN does not exist as a mated application

The SS-APPL table is corrupt or cannot be found.

3638 E3638 Cmd Rej: Failed Reading SS Appl table

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The STP Self-identity table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The MRN table is corrupt or cannot be found.

2999 E2999 Cmd Rej: Failed reading the MRN table

If the value specified for the `pc/pca/pci/pcn/pcn24/pcn16` parameter is the STP's true point code, then the `ri=ssn` parameter must be specified.

5245 E5245 Cmd Rej: RI must be SSN if PC is the True PC

The value specified for the `loopset` parameter must already exist in the database.

4568 E4568 Cmd Rej: Loop Set entry does not exist

The SCCP Loop Detection feature must be enabled before the `loopset` parameter can be specified.

4565 E4565 Cmd Rej: SCCP Loop Detection Feature is not enabled

The Loopset table is corrupt or cannot be found.

4567 E4567 Cmd Rej: Cannot access LoopSet table

The GTT Action - FORWARD feature must be enabled before the `act=fwd` parameter can be specified.

5201 E5201 Cmd Rej: GTT Action- FORWARD Feature must be enabled

The GTMOD table is corrupt or cannot be found.

5284 E5284 Cmd Rej: Failed reading GTMOD table

The value specified for the `pc/pca/pci/pcn/pcn24/pcn16` parameter must be a point code that is already associated with a valid route.

5072 E5072 Cmd Rej: PC has no allowed route

The AMGTT feature must be enabled before the `cggtmodid` parameter can be specified.

4789 E4789 Cmd Rej: Either AMGTT or AMGTT CgPA Upgrade feature must be ON

The value specified for the `cdgtmodid` and `cggtmodid` parameters must already exist in the GTMOD table.

5291 E5291 Cmd Rej: CGGTMODID/CDGTMODID does not exist

A value of *none* cannot be specified for the `cdgtmodid` or `cggtmodid` parameter.

5296 E5296 Cmd Rej: CDGTMODID/CGGTMODID must not be specified as NONE

A value of *disc*, *utds*, or *tcaperr* must be specified for the `defactid/failactid` parameter.

5172 E5172 Cmd Rej: Invalid action type

The GTT Action ID specified by the `defactid` or `failactid` parameter must already exist.

5071 E5071 Cmd Rej: GTT Action Id does not exist

The values specified for the `pc/pca/pci/pcn/pcn24/pcn16` and `cgpc/cgpga/cgpci/cgpcn/cgpcn24/cgpcn16` parameters must have the same domain.

5299 E5299 Cmd Rej: PC and CGPC must be of same domain

The `loopset=none` parameter cannot be specified.

5310 E5310 Cmd Rej: Loop Set must not be specified as NONE

The `defactid=none` or `failactid=none` parameter cannot be specified.

5298 E5298 Cmd Rej: Default/Fail ACTID must not be specified as NONE

The same value cannot be specified for the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

The `snp`, `snai`, and `srvcname` parameters must be specified when `act` is set to `svrc`.

3125 E3125 Cmd Rej: SNP, SNAI and SRVCNAME is mandatory for svrc action

The GFLEX Feature must be activated if the GFLEX service is entered with the SRVCNAME parameter.

3500 E3500 Cmd Rej: GFLEX feature must be ON

The GPORT Feature must be activated if the GPORT service is entered with the SRVCNAME parameter.

3991 E3991 Cmd Rej: GPORT feature must be ON

When the service specified is GFLEX, SNAI must be specified as subscriber, national or international.

3114 E3114 Cmd Rej: For GFLEX, the SNAI must be SUB, NATL OR INTL

The Portability Check for Mobile Originated SMS feature/PPSMS feature must be turned ON, or the MO SMS ASD/MO SMS B-Party Routing/MO SMS GRN/MO SMS IS41-to-GSM Migration/MO-based GSM SMS NP/MO-based IS41 SMS NP feature must be ENABLED before the SMSMR Service is entered with SRVCNAME parameter.

3107 E3107 Cmd Rej: At least one of SMSMR services must be configured

When service is specified as GPORT or SMSMR, the SNP must be specified as E164.

3990 E3990 Cmd Rej: (N)SNP must be E164 when (N)SERV=GPORT/SMSMR

The GTT Action - FORWARD/DISCARD/DUPLICATE feature must be enabled before the `act=svrc` parameter can be specified.

3451 E3451 Cmd Rej: Controlled Feature is not enabled

The GTT destination must exist in the DSTN table.

4753 E4753 Cmd Rej: DSTN table entry was not found

More than 32 SFTHROT GTT Actions are not permitted.

3277 E3277 Cmd Rej: Maximum number of SFTHROT/SFAPP Action already provisioned

A value of *fwd*, *dup*, or *scpval* must be specified for the `act` parameter before a value of *useicmsg* can be specified for the `on` or `off` parameter.

3465 E3465 Cmd Rej: USEICMSG only valid for FWD/DUP/SCPVAL

The EGTT feature must be on before the SCPVAL GTT Action can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

A value of *none* cannot be specified for the `atirescgmodid` and `psirescgmodid` parameter.

5292 E5292 CmdRej: GTMODID must not be specified as NONE

The value specified for the `atirescgmodid` and `psirescgmodid` parameters must already exist in the GTMOD table.

5285 E5285 CmdRej: GTMODID does not exist.

AMGTT feature must be enabled, if `atirescgmodid` or `psirescgmodid` is specified.

2789 E2789 Cmd Rej: AMGTT/AMGTT CdPA Only/AMGTT CgPA Upgrade must be ON

Notes

on/off options

- *uimreqd* —UIM required. Specifies whether a UIM should be generated.
- *useicmsg* —Use Incoming Message. Specifies whether to apply GTT Action data to the message as the message was received (OFF) or after any EPAP or GTT translation/modification data has been applied (ON).
- *handlresp* —Specifies whether the ATI/PSI response will be sent to SFAPP card or not.

GTI, TT and NPDS must be provisioned in GTMOD table to associate `gtmodid` with `ATIRESCGMODID` or `PSIRESCGMODID`.

Output

```
ent-gttact:actid=discl:act=disc
```

```
tekelecstp 10-02-04 18:29:41 EST EAGLE 42.0.0
ent-gttact:actid=discl:act=disc
Command entered at terminal #4.
```

```
GTT Action table is (1 of 2000) 1% full
```

```
ENT-GTTACT: MASP A - COMPLTD
```

```
;
```

```
ent-gttact:actid=sfthrot1:act=sfthrot
```

```
tekelecstp 15-05-27 15:43:58 EST Eagle 46.3.0
ent-gttact:actid=sfthrot1:act=sfthrot
Command entered at terminal #4.
```

```
GTT Action table is (1 of 2000) 1% full
```

```
ENT-GTTACT: MASP A - COMPLTD
```

```
;
```

```
ent-gttact:actid=sflog1:act=sflog
```

```
tekelecstp 15-05-27 15:43:58 EST Eagle 46.3.0
ent-gttact:actid=sflog1:act=sflog
Command entered at terminal #4.
```

```
GTT Action table is (1 of 2000) 1% full
```

```
ENT-GTTACT: MASP A - COMPLTD
```

```
;
```

```
ent-  
gttact:actid=scpvall:act=scpval:sprm=cdpa:tprm=smrpda:ndgt=15:on=uim  
reqd:defactid=actdisc
```

```
tekelecstp 15-05-29 10:25:11 EST Eagle 46.3.0  
ent-gttact:actid=scpvall:act=scpval:sprm=cdpa:tprm=smrpda:ndgt=15:  
on=uimreqd:defactid=actdisc  
Command entered at terminal #4.
```

```
GTT Action table is (10 of 2000) 1% full
```

```
ENT-GTTACT: MASP A - COMPLTD
```

```
;
```

```
ent-gttact:actid=sfapp10:act=sfapp:scfaddr=19:hlraddr=usecdpa
```

```
tekelecstp 17-11-22 10:01:01 EST EAGLE 46.5.1.5.0-73.2.0  
ent-gttact:actid=sfapp10:act=sfapp:scfaddr=19:hlraddr=usecdpa  
Command entered at terminal #17.
```

```
;
```

```
Command Accepted - Processing
```

```
tekelecstp 17-11-22 10:01:01 EST EAGLE 46.5.1.5.0-73.2.0
```

```
GTT-ACT table is (9 of 2000) 1% full.
```

```
;
```

```
tekelecstp 17-11-22 10:01:02 EST EAGLE 46.5.1.5.0-73.2.0
```

```
ENT-GTTACT: MASP B - COMPLTD
```

```
;
```

```
Command Executed
```

```
ent-gttact:actid=sfapp13:act=sfapp:scfaddr=16:failactid=fallback
```

```
tekelecstp 17-11-22 10:07:39 EST EAGLE 46.5.1.5.0-73.2.0  
7406.1083 SYSTEM INFO REPT COND: system alive  
tekelecstp 17-11-22 10:07:47 EST EAGLE 46.5.1.5.0-73.2.0  
ent-gttact:actid=sfapp13:act=sfapp:scfaddr=16:failactid=fallback  
Command entered at terminal #17.
```

```
;
```

```
Command Accepted - Processing
```

```
tekelecstp 17-11-22 10:07:47 EST EAGLE 46.5.1.5.0-73.2.0
```

```
GTT-ACT table is (10 of 2000) 1% full.
```

```
;
```

```
tekelecstp 17-11-22 10:07:47 EST EAGLE 46.5.1.5.0-73.2.0
```

```
ENT-GTTACT: MASP B - COMPLTD
```

```
;
```

```
Command Executed
```

```

ent-
gttact:actid=sfapp3:scfaddr=6762:act=sfapp:atirescgmodid=set1

tekelecstp 18-05-07 10:13:26 EST EAGLE 46.7.0.0-74.5.0
ent-gttact:actid=sfapp3:scfaddr=6762:act=sfapp:atirescgmodid=set1
Command entered at terminal #4.

GTT-ACT table is (3 of 2000) 1% full.

ENT-GTTACT: MASP A - COMPLTD
;

```

Related Topics

- [chg-gttact](#)
- [dlt-gttact](#)
- [rtrv-gttact](#)

4.1.306 ent-gttapath

Use this command to enter a GTT Action path entry. A GTT Action path consists of pairs of "setname + value" for Opcode/CgGTA/CdGTA. Each "setname + value" pair must already be defined in the GTT translation table.

Parameters

gttpn (mandatory)

GTT Path name.

Range:

ayyyy

1 leading alphabetic character and up to 4 following alphanumeric characters

acn (optional)

Application context name. The ITU TCAP *acn* field in the incoming MSU.

Range:

0 - 255, none

none—there is no ITU TCAP *acn* field in the incoming MSU

cdgta (optional)

Called Party Global Title Address.

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F

cdgttsn (optional)

GTT set name (CDPA type).

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters

cggta (optional)

Calling Party Global Title Address.

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F

cggtsn (optional)

GTT set name (CGPA type).

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

family (optional)

The ANSI TCAP *family* field in the incoming MSU.

Range:

0 - 255, *none*

none—there is no value in the ANSI TCAP *family* field in the incoming MSU

opcode (optional)

This parameter specifies the TCAP *opcode* field in the incoming MSU.

Range:

0 - 255, *none*

none—there is no value in the TCAP *opcode* field in the incoming MSU

opgtsn (optional)

GTT set name (Opcode type).

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters

pkgtype (optional)

The ANSI and ITU TCAP package type.

Range:

ituuni

ITU unidirectional

qwp

Query with Permission

qwop

Query without Permission

resp
Response

cwp
Conversation with Permission

cwop
Conversation without Permission

any
Wildcard value

bgn
Begin

end
End

cnt
Continue

ituabort
ITU abort

ansiabort
ANSI abort

ansiuni
ANSI unidirectional

ANSI TCAP Package Types—*ansiuni, qwp, qwop, resp, cwp, cwop, ansiabort, any*

ITU TCAP Package Types—*bgn, ituabort, ituuni, any, end, cnt*

Example

```
ent-
gttapath:gttpn=path1:opgttsn=opsn1:acn=111-111-111-111-111-111-
111: opcode=123:pkgtype=ituuni:cdgttsn=cdsn1:cdgta=7654
```

```
ent-
gttapath:gttpn=path2:cggtsn=cgsn2:cggta=45673:opgttsn=opsn2:op
code=124: family=2:pkgtype=ansiuni
```

```
ent-
gttapath:gttpn=path3:opgttsn=opsn2:pkgtype=ansiuni:opcode=124:f
amily=2: cggtsn=cgsn3:cggta=987654:cdgttsn=cdsn1:cdgta=123456
```

Dependencies

If the `family` parameter is specified, then a value of *ansiuni, qwp, qwop, resp, cwp, cwop, ansiabort*, or *any* must be specified for the `pkgtype` parameter.

5140 E5140 Cmd Rej: FAMILY parameter is allowed with ANSI TCAP PKGTYPE

If the `acn` parameter is specified, then a value of *bgn, ituabort, ituuni, any, end, or cnt* must be specified for the `pkgtype` parameter.

5141 E5141 Cmd Rej: ACN parameter is allowed with ITU TCAP PKGTYPE

If the `pkgtype=ituabort` parameter is specified, then a value of *none* must be specified for the `acn` and `opcode` parameters.

If the `pkgtype=ansiabort` is specified then a value of *none* must be specified for the `family` and `opcode` parameters.

5144 E5144 Cmd Rej: PKGTYPE abort requires ACN/FAMILY/OPCODE value none

The `opcode`, `pkgtype`, and `family` parameters must be specified together for ANSI TCAP translations. The `opcode`, `pkgtype`, and `acn` parameters must be specified together for ITU TCAP translations.

5106 E5106 Cmd Rej: OPCODE,PKGTYPE,ACN/FAMILY must be specified together

If the `family` and `opcode` parameters are specified in the command, then both parameters must have a value of *none* or neither parameter can have a value of *none*.

5148 E5148 Cmd Rej: Both FAMILY and OPCODE must be NONE if either is NONE

The GTA table is corrupt or cannot be found.

3119 E3119 Cmd Rej: Failed Reading GTT TRANS table

The GTT DBMM table is corrupt or cannot be found.

3120 E3120 Cmd Rej: Failed Reading GTT DBMM table

A value of *none* cannot be specified for the `opgttsn`, `cgttsn`, or `cdgttsn` parameter.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

The GTT Action Path table cannot contain more than 10000 entries.

5185 E5185 Cmd Rej: GTT Action Path table is full

The GTT Action Path table is corrupt or cannot be found.

5186 E5186 Cmd Rej: Unable to access GTT Action Path table

The path specified cannot already exist in the GTT Action Path table.

5187 E5187 Cmd Rej: Specified Path entry already exists

The `acn` and `family` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The GTT Action - DISCARD, GTT Action - FORWARD, or GTT Action - DUPLICATE feature must be enabled before this command can be entered.

3451 E3451 Cmd Rej: Controlled Feature is not enabled

A translation entry corresponding to the specified (`opgttsn + opcode + pkgtype + acn/family`)/(`cgttsn + cgtta`)/(`cdgttsn + cdgta`) parameters must already exist.

4510 E4510 Cmd Rej: Translation entry does not exist

At least one GTT set-value combination must be specified.

5319 E5319 Cmd Rej: At least one set-value combination must be specified

The value specified for the `opgttsn`, `cgttsn`, or `cdgttsn` parameter must match an existing GTT setname.

3561 E3561 Cmd Rej: GTT Set specified by GTT Set Name/index does not exist

The GTT set name specified by the `opgttsn`, `cggtsn`, and `cdgttsn` parameters must have set types of `opcode`, `cggta`, and `cdgta`, respectively.

4399 E4399 Cmd Rej: Set type of GTT Set Name doesn't match

The GTT Set table must be accessible.

3544 E3544 Cmd Rej: Failed reading GTT Set Table

The GTA value specified by the `cggta` or `cdgta` parameter must be the start GTA in the translation entry.

5375 E5375 Cmd Rej: Specified CgGTA/CdGTA not a start GTA in a Translation entry

The GTT path name specified by the `gttpn` parameter must not exist in the GTT Action Path table.

5376 E5376 Cmd Rej: Specified path name already exists

The value specified for the `gttpn` parameter cannot be a reserved word.

3040 E3040 Cmd Rej: <string> cannot be used in this command

Output

```
ent-
gttspath:gttpn=path2:cggtsn=cgsn2:cggta=45673:opgttsn=opsn2:op
code=124:family=2: pkgtype=ansiuni
```

```
tekelecstp 10-02-04 18:29:41 EST EAGLE 42.0.0
```

```
ent-
```

```
gttspath:gttpn=path2:cggtsn=cgsn2:cggta=45673:opgttsn=opsn2:op
code=124: family=2:pkgtype=ansiuni
```

```
Command entered at terminal #4.
```

```
GTT Action Path table is (1 of 10000) 1% full
```

```
ENT-GTTAPATH: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-gttspath](#)
- [dlt-gttspath](#)
- [rtv-gttspath](#)

4.1.307 ent-gttaset

Use this command to enter a Global Title Translations (GTT) Action Set. A GTT Action Set consists of an Action Set name and a group of actions. The specified actions determine what actions that applied to the MSU during translation.

Parameters



Note:

Definitions for the feature options specified by the `on` and `off` parameters are located in the Notes section.

actsn (mandatory)

GTT Action Set Name.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

actid1 (optional)

GTT Action ID 1. The first action ID associated with the GTT action set.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

actid2 (optional)

GTT Action ID 2. The second action ID associated with the GTT action set.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

actid3 (optional)

GTT Action ID 3. The third action ID associated with the GTT action set.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

actid4 (optional)

GTT Action ID 4. The fourth action ID associated with the GTT action set.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

actid5 (optional)

GTT Action ID 5. The fifth action ID associated with the GTT action set.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

actid6 (optional)

GTT Action ID 6. The sixth action ID associated with the GTT action set.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

off (optional)

Disables or turns off the specified feature options. This parameter specifies a comma-separated list of feature options that are requested to be turned off. Up to 8 feature options can be specified in the list.

Range:*testmode***on (optional)**

Enables or turns on the specified feature options. This parameter specifies a comma-separated list of feature options that are requested to be turned on. Up to 8 feature options can be specified in the list.

Range:*testmode***Example**

```
ent-gttaset:actsn=asetdisc1:actid1=disc1
ent-gttaset:actsn=aset2:actid1=dup1:actid2=disc1
ent-
gttaset:actsn=aset3:actid1=actfwd:actid2=actdup1:on=testmode
ent-gttaset:actsn=aset4:actid1=dup1:actid2=actsrv
ent-gttaset:actsn=aset5:actid1=dup1:actid2=scpval1:actid3=fwd1
```

Dependencies

The GTT Action table must be accessible.

5067 E5067 Cmd Rej: Unable to access GTT Action table

The Action ID specified by the *actid1/actid2/actid3/actid4/actid5/actid6* parameter(s) must already exist in the GTT Action table.

5071 E5071 Cmd Rej: GTT Action Id does not exist

At least one Action ID in the Action Set must be associated with an action other than *none* or *fallback*.

5069 E5069 Cmd Rej: (New) GTT Action Id must not be NONE/FALLBACK

The value specified by the *actid* parameter cannot already exist in a GTT Action Set.

5234 E5234 Cmd Rej: GTT Action Id already provisioned in GTT Action Set

The GTT Action Set table cannot contain more than 20000 entries

5200 E5200 Cmd Rej: GTT Action Set table is full

Failure while reading the GTT Action Set table.

5197 E5197 Cmd Rej: Unable to access GTT Action Set table

The `actsn=none` parameter cannot be specified.

5113 E5113 Cmd Rej: (New) GTT Action Set name must not be none.

Only one Action ID in an Action Set can be associated with an action of *disc*, *udts*, *svvc*, *sflog*, *sfthrot*, or *tcaperr*.

If an Action ID associated with an action of *fwd* is specified, then no other Action ID in the Action Set can be associated with an action of *disc*, *udts*, *tcaperr*, *svvc*, or *fwd*.

If an Action ID associated with an action of *svvc* is specified, then no other Action ID in the same Action Set can be associated with an action of *fwd*, *disc*, *udts*, *tcaperr*, or *svvc*.

If the Action Set contains 5 Action IDs associated with an action of *dup*, then the remaining action ID cannot be associated with an action of *dup*.

Action IDs associated with an action of *disc*, *udts*, *tcaperr*, or *fwd* must be the last actions in an Action Set.

Action IDs associated with an action of *sfthrot* must be the first action in an Action Set.

If the Action Set contains 2 Action IDs associated with an action of *scpval*, then the remaining Action ID cannot be associated with an action of *scpval*.

5172 E5172 Cmd Rej: Invalid action type

One of the optional parameters must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `actid1/actid2/actid3/actid4/actid5/actid6` parameters must each specify a unique GTT Action ID in the command.

5236 E5236 Cmd Rej: GTT Action Ids should be unique in a GTT Action Set

The EGTT feature must be on before this command can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

The same values cannot be specified for the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

A maximum of 2 SCPVAL GTT Actions are allowed in an Action Set. Both Action Sets should have a different combination of SPRM and TPRM.

3498 E3498 Cmd Rej: SPRM & TPRM combination must be unique in a GTTAct Set

Notes

on/off options

- `testmode` —invokes a field-safe Test Tool used to debug the GTT Action Set rules

Output

```
ent-
gttaset:actsn=asetdisc1:actid1=disc1:actid2=dup1:actid3=dup2:actid4=
dup3: actid5=dup4:actid6=dup5:on=testmode
```

```
tekelecstp 10-02-04 18:29:41 EST EAGLE 42.0.0
```

```

ent-
gttaset:actsn=asetdisc1:actid1=disc1:actid2=dup1:actid3=dup2:actid4=dup
3:actid5=dup4:
actid6=dup5:on=testmode
  Command entered at terminal #4.

GTT Action Set table is (1 of 20000) 1% full

ENT-GTTASET: MASP A - COMPLTD
;

```

Related Topics

- [chg-gttaset](#)
- [dlt-gttaset](#)
- [rtrv-gttaset](#)

4.1.308 ent-gttset

Use this command to assign applicable global title selectors to a GTT set for enhanced global title translations. If the EGTT feature is turned on, then the GTT Selector ([ent/chg/dlt/rtrv-gttset](#)), GTT Set ([ent/dlt/rtrv-gttset](#)), and GTA ([ent/chg/dlt/rtrv-gta](#)) commands replace the Translation Type ([ent/dlt/rtrv-tt](#)) and Global Title Translation ([ent/chg/dlt/rtrv-gtt](#)) commands. However, the Translation Type and Global Title Translation commands continue to work according to their original functionality when the EGTT feature is on.

Parameters

Note:

The nature of address indicator parameters ([naiv](#) or [nai](#)) and the numbering plan parameters ([npv](#) or [np](#)) can be specified using a mnemonic or an explicit value. Either the mnemonic or the explicit value can be specified: however, both values cannot be specified at the same time for the same parameter. [NAIV/NAI Mapping](#) shows the mapping between the [naiv](#) and [nai](#) values. [NPV/NP Mapping](#) shows the mapping between the [npv](#) and [np](#) values.

gti/gtia/gtii/gtin/gtin24/gtiis/gtins/gtin16 (mandatory)

Global title indicator.

For all EGTT selector commands, the domain is defined as GTI and GTIA (ANSI), GTII (ITU international), GTIN (ITU national), GTIN24 (24-bit ITU national), GTIIS (ITU international spare), GTINS (ITU national spare) and GTIN16 (16-bit ITU National). For the selector commands, [gti](#) and [gtia](#) are equivalent. GTT selectors can be provisioned for the same translation type (TT) with different ITU domains. GTT selectors are provisioned independently for each domain. For example, if an entry with [gtii=2](#) and [tt=4](#) already exists, an entry with [gtin=2](#) and [tt=4](#) can be specified.

Range:

0, 2, 4

Supported values for ANSI: gti=0, 2 and gtia=0, 2

Supported values for ITU: gtii/gtin/gtin24/gtiis/gtins/gtin16=0, 2, 4

cdgtasn (optional)

CdPA GTA GTT set name.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters

cdgttsn (optional)

CdPA GTT set name.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters

cggtasn (optional)

CgPA GTA GTT set name.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters

cggttsn (optional)

CgPA GTT set name.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters

cgpcsn (optional)

CgPA PC GTT set name.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters

cgssn (optional)

CgPA subsystem number.

Range: 0 - 255**eaglegen (optional)**

This parameter specifies whether the selector is used by EAGLE generated messages.

Range:**yes**

Indicates selector used only by Eagle generated MSU.

gttsn (optional)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters

lsn (optional)

Linkset name.

Range:

ayyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

msgtype (optional)

SCCP message type.

Allow one or more SCCP message types (UDT/UDTS/XUDT/XUDTS) for every GTT Selector entry. This will help in screening different message types differently.

Range:

sub

u

us

x

xs

all

Default

all

nai (optional)

Nature of address indicator.

Range:

sub

rsvd

natl

intl

naiv (optional)

Nature of address indicator value.

Range:

0 - 127

np (optional)

Numbering plan.

Range:**e164****generic****x121****f69****e210****e212****e214****private****npv (optional)**

Numbering plan value.

Range:

0 - 15

selid (optional)

Selector ID.

Range:

0 - 65534

tt (optional)

Translation type.

Range:

0 - 255

Example

```

ent-gttset:gti=0:cdgttsn=acdgt
ent-gttset:gtia=2:tt=10:gttsn=t800
ent-gttset:gtia=2:tt=253:gttsn=setans253
ent-gttset:gtii=4:tt=0:np=e164:nai=intl:gttsn=setint000
ent-gttset:gtii=2:tt=0:gttsn=setint000
ent-gttset:gtin=4:tt=9:np=e214:nai=natl:gttsn=imsi
ent-gttset:gtii=4:tt=0:np=e164:nai=sub:gttsn=setint000
ent-gttset:gtia=2:tt=20:cdgtasn=setcdgta:
cggtasn=setcggta:cgssn=10:selid=0
ent-gttset:gtia=2:tt=21:cggttsn=setcgpc:cdgttsn=setcdgta:
cgssn=20:selid=1:lsn=ls10
ent-gttset:gtii=2:tt=40:cdgtasn=setcdgta:cgpcsn=setcgpc:cgssn=12

```

```

ent-gttset:gtii=2:tt=41:cgpcsn=setcgpc:cgssn=255:selid=65534
ent-gttset:gtin=4:tt=60:npv=5:naiv=5:cdgtasn=setcdgta
ent-gttset:gtin=4:tt=60:npv=5:naiv=6:cgpcsn=setcgpc:cgssn=112
ent-gttset:gtia=2:tt=9:cdgttsn=lidb:eaglegen=yes
ent-gttset:gti=0:cdgttsn=acdgtta:selid=1
ent-gttset:gtin16=0:cgpcsn=abc
ent-gttset:gtin16=2:cgpcsn=abc:tt=10
ent-gttset:gtin16=4:cgpcsn=abc:tt=10:np=x121:nai=natl
ent-gttset:msgtype=u:gtin16=4:cgpcsn=abc:tt=10:np=x121:nai=natl
ent-
gttset:msgtype=u,us,x:gtii=4:cdgtasn=abc:tt=10:np=x121:nai=natl

```

Dependencies

The EGTT feature must be turned on before this command can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

The `np` and `npv` parameters cannot be specified in the same command.

3551 E3551 Cmd Rej: NP and NPV must not be specified together

The `nai` and `naiv` parameters cannot be specified in the same command.

3552 E3552 Cmd Rej: NAI and NAIV must not be specified together

The `gti`, `gtia=4`, `gti(x)=1`, and `gti(x)=3` parameters cannot be specified.

3553 E3553 Cmd Rej: GTI(A)=4, and GTI(x)=1 and 3 are not supported

If the `gti/gtia/gtii/gtin/gtin24/gtiis/gtins/gtin16=2` parameter is specified, then the `np/npv` and `nai/naiv` parameters cannot be specified.

3554 E3554 Cmd Rej: NP(V) and NAI(V) must not be specified for given GTI value

If the `gtii/gtin/gtin24/gtiis/gtins/gtin16=4` parameter is specified, the `np(v)` and `nai(v)` parameters must be specified. These parameters can be specified in any combination: `np/naiv`, `npv/nai`, `np/nai`, or `npv/naiv`.

3555 E3555 Cmd Rej: NP(V) and NAI(V) must be specified for given GTI value

A value of *none* cannot be specified for the `gttsn`, `cdgtasn`, `cggtasn`, `cgpcsn`, `cdgttsn`, and `cggttsn` parameters.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

The GTT Selector table must be accessible.

3543 E3543 Cmd Rej: Failed reading GTT Selector Table

The GTT Set table must be accessible.

3544 E3544 Cmd Rej: Failed reading GTT Set Table

At least one GTT set name parameter must be specified. These parameters include:

- `cdgtasn`, `cggtasn`, or `cgpcsn` if the OBSR feature is enabled
- `cdgttsn` or `cggttsn` if the FLOBR feature is turned on
- `gttsn` if the OBSR feature is not enabled and the FLOBR feature is not turned on

4397 E4397 Cmd Rej: At least one GTT Set Name must be specified

The OBSR feature must be enabled before the `cggtasn`, `cgpcsn`, `cgssn`, or `cdgtasn` parameters can be specified.

4393 E4393 Cmd Rej: Origin Based SCCP Routing feature must be enabled

The SSNSELID Table cannot contain more than 100,000 entries.

4414 E4414 Cmd Rej: SSNSELID Table is full

The SSNSELID table must be accessible.

4469 E4469 Cmd Rej: Failed reading SSNSELID table

The linkset specified by the `lsn` parameter must already exist.

2346 E2346 Cmd Rej: Linkset not defined

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The FLOBR feature must be turned on before the `lsn`, `eagleleg`, `cdgttsn`, and `cggttsn` parameters can be specified.

5060 E5060 Cmd Rej: Flexible Linkset Optional Based Routing must be ON

If the FLOBR feature is turned on, then the `cdgtasn`, `cggtasn`, and `cgpcsn` parameters cannot be specified.

5064 E5064 Cmd Rej: CDGTASN/CGGTASN/CGPCSN are not valid when FLOBR ON

The value specified for the `cdgtasn` or `gttsn` parameter must match the name of an existing GTT set.

4511 E4511 Cmd Rej: CdPA GTT Set does not exist

The GTT set specified by the `cdgtasn` or `gttsn` parameter must have a set type of `cdgta` (see the `ent-gttset` command).

4519 E4519 Cmd Rej: CdPA GTT Set type must be `cdgta`

An entry cannot already exist that matches the `eagleleg`, `gti`, `tt`, and `np(v)`, and `nai(v)` parameter combination for the specified CdPA and/or CgPA selector. If a GTT Selector entry is already provisioned for the given `gti`, `tt`, `np(v)` and `nai(v)` combination with `msgtype=all`, another entry for the same combination but different `msgtype` (`u/us/x/xs`) is not allowed.

5121 E5121 Cmd Rej: CdPA/CgPA GTT Selector already exists

The GTT set specified by the `gttsn`, `cdgtasn`, or `cdgttsn` parameter must already exist in the GTT Set table.

4511 E4511 Cmd Rej: CdPA GTT Set does not exist

The network domain of the specified GTT selector must match the domain of the GTT set that is specified by the `gttsn`, `cdgtasn`, or `cdgttsn` parameter, unless the domain of the GTT set has a value of `cross`.

3562 E3562 Cmd Rej: Network domains of GTI and CdPA GTT Set must match

The GTT set specified by the `cggttsn`, `cggtasn` or `cgpcsn` parameter must already exist in the GTT Set table.

4486 E4486 Cmd Rej: CgPA GTT Set does not exist

The network domain of the GTT set that is specified by the `cggttsn`, `cggtasn`, or `cgpcsn` parameter must match the domain specified by the `gti(x)` parameter.

4487 E4487 Cmd Rej: Network domains of GTI and CgPA GTT Set must match

The set type of the GTT set specified by the `cggtasn` or `cgpcsn` parameter must match the set type of the corresponding entry in the GTT Set table.

4488 E4488 Cmd Rej: CGGTASN/CGPCSN set type doesn't match

The GTT Set specified by the `cdgtasn` or `gttsn` parameter must have a set type of `cdgta` (see the `ent-gttset` command).

4519 E4519 Cmd Rej: CdPA GTT Set type must be `cdgta`

The `gttsn` parameter cannot be specified if the OBSR feature is enabled or the FLOBR feature is turned on.

2083 E2083 Cmd Rej: GTTSN parameter mustn't be specified

The GTTDBMM Table cannot contain more than 42,502 entries.

3686 E3686 Cmd Rej: GTT DBMM table is full

The GTTDBMM table is corrupt or cannot be found.

3120 E3120 Cmd Rej: Failed Reading GTT DBMM table

A database error occurred while trying to access the SSNSELID table.

2601 E2601 Cmd Rej: Command aborted due to system error

If the `gti(x)=4` parameter is specified, then the GTT selector table cannot have more than 5 `nai` entries per `tt/np` combination.

3563 E3563 Cmd Rej: NAI entries per TT-NP combination has reached allowed max

The `cggtasn`, `cgpcsn`, and `cggttsn` parameters cannot be specified together in the command.

5128 E5128 Cmd Rej: CGGTASN, CGPCSN and CGGTTSN are mutually exclusive

The `gttsn`, `cdgtasn`, and `cdgttsn` parameters cannot be specified together in the command.

5129 E5129 Cmd Rej: GTTSN, CDGTASN and CDGTTSN are mutually exclusive

If the `gttsn`, `cdgttsn`, or `cdgtasn` parameter is specified, then the `cgssn` parameter cannot be specified. If the `cggtasn`, `cgpcsn` or `cggttsn` parameter is specified, then the `cgssn` parameter must be specified.

5130 E5130 Cmd Rej: CGSSN must not be specified with GTTSN, CDGTTSN or CDGTASN

If the `cdgttsn` or `cggtsn` parameter is specified, then the `lsn` parameter must be specified.

5062 E5062 Cmd Rej: CDGTTSN and/or CGGTTSN must be specified with LSN

If the `eaglegen=yes` parameter is specified, then the `msgtype`, `lsn`, `selid`, `gttsn`, `cdgtasn`, `cgssn`, `cggtsn`, `cggtasn`, and `cgpcsn` parameters cannot be specified.

5061 E5061 Cmd Rej: Cannot use `msgtype/lsn/selid/gttsn/cg*` field if `eaglegen=yes`

If the `gti(x)=0` parameter is specified, then the `eaglegen`, `tt`, `np/npv`, and `nai/naiv` parameters cannot be specified.

3507 E3507 Cmd Rej: EAGLEGEN,TT,NP(V),NAI(V) parameters mustn't be specified

If a value of 2 or 4 is specified for the `gti(x)` parameter, then the `tt` parameter must be specified.

4367 E4367 Cmd Rej: TT parameter must be specified

For existing TTs with `gtii/gtin/gtin24/gtiis/gtins/gtin16=4`, the domain of the new entry must match the existing domain.

3121 E3121 Cmd Rej: Domain indicated by GTIx must match that of existing TT

The MBR supported GTT set types (IMEI/IMSI/MSISDN/VLRNB/SMRPDA/SMRPOA) cannot be referenced by GTT selectors.

3508 E3508 Cmd Rej: MBR settypes cannot be referenced by GTT selectors

SSN configured for SFAPP cannot be used in any command for any configuration

3558 E3558 Cmd Rej: SFAPP SSN can not be used

Notes

For `gtii/gtin=4`, DFLT may appear in the `rtrv-gttset` output, but `dflt` cannot be specified as value for the `np` or `nai` parameters when the `ent-gttset` command is entered. If a new GTT selector is specified that matches an existing GTT selector's GTI and TT and the existing selector has `dflt` as the value for the `np` and/or `nai` parameters, a new entry is created with the new `np` and `nai` parameter values. The existing GTT selector entry with the `dflt` value is also retained. The `np/nai` parameter value `dflt` can be specified for the `chg/dlt/rtrv-gttset` commands.

The Origin-based SCCP Routing feature allows two GTT sets to be assigned to a GTT selector: CDGTASN and CGGTASN or CDGTASN and CGPCSN. The CGGTASN and CGPCSN GTT sets are mutually exclusive and cannot be assigned to the same GTT selector.

There is no J7 FAK dependency on the GTIA/GTIN16/GTIN24 parameters. The command can be entered successfully whether the J7 FAK is enabled or not enabled.

GTT Selector entries configured using the GTIN24/GTIN16 parameters shall be treated as ITU-N24 entries if the J7 FAK is disabled and shall be treated as ITU-N16 entries if the J7 FAK is enabled.

In the `msgtype` parameter, the parameter values correspond to SCCP message types as given in the following list:

- 'u' implies SCCP UDT message
- 'us' implies SCCP UDTS message
- 'x' implies SCCP XUDT message
- 'xs' implies to SCCP XUUDTS messages, and
- 'all' implies all SCCP messages

Using this parameter, a GTT Selector entry can be made to select one or more types of messages. For similar `gti(x)`, `tt`, `np` and `nai` values but different `msgtype` values, different selector entries will be made.

The user cannot enter a selector with an existing message type again. For example, if the user is trying to add a selector with message type as "`xs, u`" and an existing message type is "`xs, x`", it cannot be added because the selector with message type "`xs`" already exists and the message type is a part of a key to the GTT Selector table and cannot be changed.

To enter a selector with message type `xs, u` either delete the existing `xs, x` entry and enter a selector again with "`xs, x, u`" as the message type, or add an another entry with the message type as "`u`". Please refer the output for example.

Output

```
ent-gtttsel:gti=0:cdgttsn=acdgtta
```

```
tekelecstp 10-04-05 15:41:49 EST Eagle 42.0.0
ent-gtttsel:gti=0:cdgttsn=acdgtta
Command entered at terminal #4.
ENT-GTTSEL: MASP A - COMPLTD
```

```
;
```

```
ent-gtttsel:msgtype=u,us:gti=0:cdgttsn=acdgtta
```

```
tekelecstp 17-05-11 13:09:15 EST EAGLE 46.6.0.0.0-71.2.0
ent-gtttsel:msgtype=u,us:gti=0:cdgttsn=acdgtta
Command entered at terminal #4.
ENT-GTTSEL: MASP A - COMPLTD
```

```
;
```

```
ent-
gttsel:msgtype=x,xs:gtin=4:np=e164:nai=intl:tt=0:cggtttsn=gttcgg
ta
```

```
tekelecstp 17-12-27 06:35:47 EST EAGLE 46.6.0.0.0-71.21.0
ent-
gttsel:msgtype=x,xs:gtin=4:np=e164:nai=intl:tt=0:cggtttsn=gttcggta
Command entered at terminal #4.
ENT-GTTSEL: MASP A - COMPLTD
```

```
;
```

```
rtrv-gttset
```

```
tekelecstp 17-12-27 06:35:51 EST EAGLE 46.6.0.0.0-71.21.0
```

```
rtrv-gttset
```

```
Command entered at terminal #4.
```

MSGTYPE	GTI	ANSI	TT	NP	NAI	SSN	SELID	LSN	CDPA	CGPA
									GTTSET	GTTSET
									GTTSET	GTTSET
									GTTSET	GTTSET
x, xs	4	0	e164	intl	any	none	any		----	gttcggtta
									(---)	(cggtta)
									GTTSET	GTTSET
									GTTSET	GTTSET
									GTTSET	GTTSET
									GTTSET	GTTSET
									GTTSET	GTTSET

```
;
```

```
ent-
```

```
gttset:msgtype=xs,u:gtin=4:np=e164:nai=intl:tt=0:cggttsn=gttcggtta
```

```
tekelecstp 17-12-27 06:36:27 EST EAGLE 46.6.0.0.0-71.21.0
```

```
ent-gttset:msgtype=xs,u:gtin=4:np=e164:nai=intl:tt=0:cggttsn=gttcggtta
```

```
Command entered at terminal #4.
```

```
E5121 Cmd Rej: CdPA/CgPA GTT Selector already exists
```

```
ENT-GTTSEL: MASP A - Command Aborted
```

```
ent-
```

```
gttset:msgtype=xs,u:gtin=4:np=e164:nai=intl:tt=0:cdgttsn=gttcdgta
```

```
tekelecstp 17-12-27 06:39:10 EST EAGLE 46.6.0.0.0-71.21.0
```

```
ent-gttset:msgtype=xs,u:gtin=4:np=e164:nai=intl:tt=0:cdgttsn=gttcdgta
```

```
Command entered at terminal #4.
```

```
ENT-GTTSEL: MASP A - COMPLTD
```

```
;
```

```
rtrv-gttset
```

```
tekelecstp 17-12-27 06:39:17 EST EAGLE 46.6.0.0.0-71.21.0
```

```
rtrv-gttset
```

```
Command entered at terminal #4.
```

```

      GTI          CG          CDPA          CGPA
MSGTYPE ANSI TT NP      NAI SSN SELID LSN      GTTSET
GTTSET
```

```

      GTI          CG          CDPA          CGPA
MSGTYPE INT TT NP      NAI SSN SELID LSN      GTTSET
GTTSET
```

```

      GTI          CG          CDPA          CGPA
MSGTYPE NAT TT NP      NAI SSN SELID LSN      GTTSET
GTTSET
      x,xs      4      0      e164      intl any none any      gttcdgta
gttcggta
                                           (cdgta)
(cggta)
```

```

      GTI          CG          CDPA          CGPA
MSGTYPE N24 TT NP      NAI SSN SELID LSN      GTTSET
GTTSET
```

```

      GTI          CG          CDPA          CGPA
MSGTYPE INTS TT NP      NAI SSN SELID LSN      GTTSET
GTTSET
```

```

      GTI          CG          CDPA          CGPA
MSGTYPE NATS TT NP      NAI SSN SELID LSN      GTTSET
GTTSET
```

```
;
```

Related Topics

- [chg-gttset](#)
- [dlt-gttset](#)
- [rtrv-gttset](#)

4.1.309 ent-gttset

Use this command to specify the attributes of a new GTT set (a set of global title translations). A GTT set consists of a GTT set name, the number of digits allocated for

the GTA (global title address), the domain of the point codes used in the translation, and a pointer to a GTA tree. After the GTT set is provisioned, you can enter subsequent GTT Selector commands and GTA commands.

Parameters

gttsn (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

netdom (mandatory)

Network domain. This command does not distinguish between ITU national or ITU international because the Enhanced Global Title Translation (EGTT) feature does not discriminate between the ITU-I and ITU-N translations.

This parameter refers to the incoming message network domain.

Range:

ansi

itu

cross

checkmulcomp (optional)

This option indicates whether or not to find translation for multiple components (up to 3 components, if present) of a TCAP message.

Range:

on

Perform lookup for translation for multiple components.

off

Perform lookup for translation for first component only.

Default:

No change to the current value

gttsetmeasrqd (optional)

GTTSET Measurement required. This parameter specifies whether to perform per GTTSET measurements.

Range:

yes

perform per GTTSET Measurements

no

do not perform per GTTSET Measurements

pertrans

perform per GTT Translation Measurements

Default:

No change to the current value

***ndgt* (optional)**

Number of digits. This parameter specifies the number of digits required for GTAs associated with the GTT set.

Range:

1 - 21

Default:

6

***npsn* (optional)**

GTT set name (Not Present Set Name). This parameter can have IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA GTT set types.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

***settype* (optional)**

GTT set type.

Range:

cdgta

cdssn

cggtta

cgpc

cgssn

dpc

imei

imsi

msisdn

opc

opcode

smrpda

smrpoa

vlrnb

sxudt (optional)

Segmented XUDT. This parameter specifies whether TOBR will support the processing of segmented XUDT message.

Range:**yes**

perform decoding of segmented XUDT message

no

do not perform decoding of segmented XUDT message

Default:

no

Example

```
ent-gttset:gttsn=lidb:ndgt=10:netdom=ansient-
gttset:gttsn=t800:netdom=ansi

ent-gttset:gttsn=setint000:netdom=itu:ndgt=15

ent-gttset:gttsn=setcdgt:netdom=cross:ndgt=10:settype=cdgta
ent-gttset:gttsn=setcggg:netdom=ansi:ndgt=11:settype=cggta
ent-gttset:gttsn=setxyz:netdom=ansi:ndgt=11:settype=cggta
ent-gttset:gttsn=setopc:netdom=itu:settype=opc
ent-gttset:gttsn=setcggc:netdom=ansi:settype=cggc
ent-gttset:gttsn=setssn:netdom=ansi:settype=cgssn
ent-gttset:gttsn=setopcode:settype=opcode
ent-gttset:gttsn=setcdssn:netdom=ansi:settype=cdssn
ent-gttset:gttsn=setdpc:netdom=ansi:settype=dpc
ent-gttset:gttsn=imsil:settype=imsi:netdom=itu
ent-gttset:gttsn=msisdnl:settype=msisdn:npsn=imsil:netdom=itu
ent-gttset:gttsn=setopcode:settype=opcode:netdom=itu:checkmulcomp=on
ent-gttset:gttsn=imei1:settype=imei:netdom=itu

ent-
gttset:gttsn=imsil:settype=imsi:netdom=itu:gttsetmeasrqd=pertrans
ent-gttset:gttsn=op1:settype=opcode:netdom=itu:sxudt=yes
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

The GTT Set table cannot contain more than 2000 entries.

3564 E3564 Cmd Rej: GTT Set table is full

The `gttsn=none` parameter cannot be specified.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

If the VGTT (Variable Length GTT) feature is turned on, the `ndgt` parameter cannot be specified.

4011 E4011 Cmd Rej: NDGT Parameter is invalid for VGTT

The `gttsn` parameter must be specified and must not match an existing `gttsn`.

3560 E3560 Cmd Rej: (n)GTT Set specified by GTTSN already exists

The GTT Set table must be accessible.

3544 E3544 Cmd Rej: Failed reading GTT Set Table

The GTT DBMM table must be accessible.

3120 E3120 Cmd Rej: Failed Reading GTT DBMM table

If the `settype` parameter has a value of `cgssn`, `opc`, `cgpc`, `cdssn`, `opcode`, or `dpc`, then the `ndgt` parameter cannot be specified.

4535 E4535 Cmd Rej: NDGT parameter mustn't be specified

The `netdom=cross` parameter can be specified if the `settype=cdgta/imei/imsi/msisdn/vlrnb/smrpoa/smrpda` parameter is specified.

4402 E4402 Cmd Rej: SETTYPE must be CDGTA/MBR Type when NETDOM=CROSS

The Origin-based SCCP Routing feature must be turned on if the value of the `settype` parameter is `cggta`, `cgssn`, `opc`, or `cgpc`.

4393 E4393 Cmd Rej: Origin Based SCCP Routing feature must be enabled

If the OBSR feature is enabled or the FLOBR feature is turned on, then the `settype` parameter must be specified.

4536 E4536 Cmd Rej: settype parameter must be specified

The ANSI/ITU SCCP Conversion feature must be enabled before the `netdom=cross` parameter can be specified.

4171 E4171 Cmd Rej: SCCP Conversion feature must be enabled

The TOBR feature must be turned on before the `settype=opcode/imei/imsi/msisdn/vlrnb/smrpoa/smrpda` parameter can be specified.

5099 E5099 Cmd Rej: TCAP Opcode Based Routing feature must be turned ON

The OBSR feature must be enabled or the FLOBR feature must be turned on before the `settype` parameter can be specified and before more than 950 GTT set entries can be provisioned.

5063 E5063 Cmd Rej: OBSR must be enabled or FLOBR must be ON

The FLOBR feature must be turned on before a value of `cdssn` or `dpc` can be specified for the `settype` parameter.

5060 E5060 Cmd Rej: Flexible Linkset Optional Based Routing must be ON

The `NPSN` parameter must be specified with the `IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA` GTT set types.

`NPSN` must be of MBR set type only.

3284 E3284 Cmd Rej: `NPSN` Param only supports MBR SETTYPES

The GTT set type of the GTT set entry referred to by the `NPSN` parameter should be different from the GTT set type referred to by the `GTTSN` parameter.

3401 E3401 Cmd Rej: `NPSN` SETTYPE should be different from GTT SETTYPE.

The value specified for the `NPSN` parameter must match the name of an existing GTT set of `IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA` set types.

3400 E3400 Cmd Rej: `NPSN` not configured under GTTSET

The GTTSET domain and associated `NPSN` set domain must match when the SCCP conversion feature is not ON.

3274 E3274 Cmd Rej: GTTSET and `NPSN` set domain mismatch

`CHECKMULCOMP` parameter can be specified with `OPCODE` GTT set types only.

E3522 Cmd Rej: `CHECKMULCOMP/PRIO` can be specified with `OPCODE` SETTYPES only

The `SXUDT` parameter must be specified with the `OPCODE` GTT set type only.

3458 E3458 Cmd Rej: `DEFMAPVR/SXUDT` can be specified with `OPCODE` SETTYPES only.

Notes

When the Origin-based SCCP Routing feature is turned on, VGTT is supported only for CdPA GTA and CgPA GTA. The cross network domain is supported for CdPA GTA and `IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA` GTT set type entries.

Output

```
ent-gttset:gttsn=setcdssn:netdom=ansi:settype=cdssn
```

```
tekelecstp 10-03-12 18:28:54 EST EAGLE 42.0.0
ENT-GTTSET: MASP A - COMPLTD
```

```
GTT-SET table is (3 of 2000) 1% full.
```

```
;
```

```
ent-gttset:gttsn=setimsi:netdom=itu:settype=imsi:npsn=msisdn
```

```
tekelecstp 15-06-12 18:28:54 EST EAGLE 46.3.0
ENT-GTTSET: MASP A - COMPLTD
```

```
GTT-SET table is (3 of 2000) 1% full.
```

```
;
```

```
ent-  
gttset:gttsn=setopcode:settype=opcode:netdom=itu:checkmulcomp=on
```

```
tekelecstp 16-10-10 13:54:11 MST EAGLE 46.5.0.0-70.5.0  
ENT-GTTSET: MASP A - COMPLTD
```

```
;
```

```
ent-  
gttset:gttsn=imei1:netdom=itu:settype=imei:gttsetmeasrqd=yes
```

```
tekelecstp 17-05-11 15:30:34 EST EAGLE 46.6.0  
ENT-GTTSET: MASP A - COMPLTD
```

```
GTT-SET table is (3 of 10000) 1% full.
```

```
;
```

```
ent-gttset:gttsn=opcode1:netdom=itu:settype=opcode:sxudt=yes
```

```
tekelecstp 17-07-15 15:22:17 EST EAGLE 46.6.0  
ENT-GTTSET: MASP A - COMPLTD
```

```
GTT-SET table is (5 of 10000) 1% full.
```

```
;
```

Related Topics

- [chg-gttset](#)
- [dlt-gttset](#)
- [rtrv-gttset](#)

4.1.310 ent-gws-redirect

Use this command to provision the gateway screening redirect function. The Redirect table must be provisioned before configuring gateway screening to redirect received MSUs. The values that are specified with this command are stored in the Redirect table, and they are used to set the variable fields of the MSUs being redirected. For example, if the `ri=gt` parameter is specified, the value `gt` is set for the routing indicator in the called party address (CDPA) of the MSU being redirected.

Parameters

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

dpc (mandatory)

Specifies the value used to set the ANSI destination point code field in the routing label of the MSU that is being redirected. The ANSI point code has subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

dpca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (mandatory)

Destination point code.

dpci (mandatory)

Specifies the value used to set the ITU international destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *zone-area-id*.

Range:

0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

dpcn (mandatory)

Specifies the value used to set the ITU national destination point code field in the routing label of the MSU that is being redirected. The point code is in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) when the *chg-stpopts:npcfmti* flexible point code option is on. A group code (*gc*) must be specified when the ITUDUPPC feature is on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range:

0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (mandatory)

Specifies the value used to set the 24-bit ITU national destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:*000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*msa—000—255**ssa—000—255**sp—000—255***dpcn16 (mandatory)**

Specifies the value used to set the 16-bit ITU national destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:*000---127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*un---000---127**sna---000---15**mna---000---31***gta (mandatory)**

Specifies the value used to set the global title address (dialed digits) in the SCCP called party address of the MSU being redirected.

Range:*1 - 21 digits***ri (mandatory)**

Specifies the value used to set the routing indicator in the SCCP called party address of the MSU being redirected. Use the *gt* value to route by global title digits or use the *ssn* value to route by subsystem number.

Range:*gt**ssn***ssn (mandatory)**

Specifies the value used to set the subsystem number (SSN) in the SCCP called party address of the MSU being redirected. This number is the SSN of the SCP to which all MSUs meeting the redirect criteria are to be redirected.

Range:*000 - 255***tt (mandatory)**

Identifies the type of the global title translation (GTT). This value is the decimal representation of the 1-byte field used in SS7 and is used to set the type of the GTT in the SCCP called party address of the MSU being redirected.

Range: *000 - 255*

enabled (optional)

Specifies whether MSUs that have passed gateway screening are to be redirected (*enabled=on*) or routed as normal (*enabled=off*).

Range:

on

off

Default:

on

Example

```
ent-gws-redirect:dpc=1-40-1:ri=gt:ssn=10:tt=1:gta=180833:enabled=on
```

```
ent-gws-  
redirect:dpc=1-40-1:ri=ssn:ssn=10:tt=1:gta=1800833:enabled=off
```

```
ent-gws-redirect:dpcn16=1-14-0:ri=gt:ssn=10:tt=10:gta=1:enabled=on
```

Dependencies

The `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter must be defined in the Destination table or defined as the STP site point code.

2657 E2657 Cmd Rej: Point code not defined

If the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter is defined as a destination, it must have at least one route defined.

2642 E2642 Cmd Rej: DPC must have at least one route defined

The redirect function data can be entered only once.

2640 E2640 Cmd Rej: Redirect function data has already been entered

Notes

The SCCP screening functions (CGPA, TT, CDPA, and AFTPC) cannot select an MSU to be redirected.

Do not apply a Redirect Stop Action on the Adjacent Node point code for the BLKOPC and OPC screening functions.

Do not apply a Redirect Stop Action for an allowed DPC screen rule if the rule contains the self-identity point code of the EAGLE where the screening rule is applied. This is because the redirection of SLTAs and SLTMs (Signal Link Test Messages and Acknowledgements) will not return to the originating EAGLE and will cause the link to fail.

If `gwsa=off` and `gws=off` are specified for all linksets, gateway screening and the GWS redirect function for the DTA feature are disabled.

Output

```
ent-gws-redirect:dpc=1-40-1:ri=gt:ssn=10:tt=1:gta=180833:enabled=on
```

```
rlghncxa03w 03-11-10 11:43:04 EST EAGLE 31.6.0
```

```
ENT-GWS-REDIRECT: MASP A - COMPLTD  
;
```

Related Topics

- [chg-gws-redirect](#)
- [dlt-gws-redirect](#)
- [rtrv-gws-redirect](#)

4.1.311 ent-home-smsc

Use this command to enter HOME SMSC specific addresses, currently used to identify Short Message Service Centers in the database. This command updates the HOME SMSCADDR table.

Parameters

smsc (mandatory)

Identifies the type of the Short Message Service Center address.

Range:

1-21 hexadecimal digits. Valid digits are 0-9, a-f, A-F .

Example

```
ent-home-smsc:smsc=256489
```

```
ent-home-smsc:smsc=256489a98bccee56ad237
```

Dependencies

The Portability Check for Mobile Originated SMS (MNPSMS) feature must be turned on or one of the following features must be enabled before this command can be entered.

- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- MT-Based GSM SMS NP
- MT-Based IS41 SMS NP

4702 E4702 Cmd Rej: MNP SMS must be ON or MO/MT SMS feature must be enabled

The specified HOME SMSC address cannot already exist in the HOME SMSCADDR table.

3477 E3477 Cmd Rej: HOME SMSC Address already exists

The HOME SMSCADDR table can contain a maximum of 500 entries.

3478 E3478 Cmd Rej: HOME SMSC Table is Full

The HOME SMSCADDR table must be accessible.

3475 E3475 Cmd Rej: Failure reading HOME SMSC Address entries

The GSM DBMM table must be accessible.

3546 E3546 Cmd Rej: Failed reading GSM DBMM Table

Notes

None

Output

```
ent-home-smsc:smsc=256489
```

```
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
ENT-HOME-SMSC: MASP A - COMPLTD
;
```

Related Topics

- [dlt-home-smsc](#)
- [rtrv-home-smsc](#)

4.1.312 ent-homern

Use this command to enter up to 100 routing number prefixes for the operating network into the HOMERN table.

Parameters

rn (mandatory)

The home routing number prefix.

Range:

1-15 hexadecimal digits. Valid digits are *0-9, a-f, A-F* .

Example

```
ent-homern:rn=C441234
```

Dependencies

The HOMERN table cannot be full.

3925 E3925 Cmd Rej: HOMERN table is full

The routing number must not already exist in the HOMERN table.

3930 E3930 Cmd Rej: RN already exists in HOMERN table

The `rn=none` parameter cannot be specified.

3502 E3502 Cmd Rej: The NONE value is not allowed in this case

The A-Port, AINPQ, G-Port, INP, or V-Flex feature must be turned on before this command can be entered.

Range:
1024 - 65535

**Note:**

For EEDB connection using IPS card, port 17529 should be used

Example

```
ent-ip-conn:prot=tcp:lhost=lss1:lport=2019:cname=connection1
```

```
ent-ip-conn:prot=udp:lhost=enumhost:lport=2014:cname=enumudp
```

Dependencies

SIPNP Feature must be enabled before entering any SIP connection information.

At least one ENUM card must be provisioned before entering any ENUM connection information.

At least one IPS card with SFLOG=yes must be provisioned before entering any TCP connection information on IPS.

At least one SCCP/SFAPP card must be provisioned before entering any Visualization connection information.

3179 E3179 Cmd Rej: SIPNP Feat not enabled or required card not provisioned

IPCONN table should be accessible.

2668 E2668 Cmd Rej: Failure accessing IPCONN table

A unique CNAME must be specified for a new connection.

2588 E2588 Cmd Rej: Connection Name already exists

The value specified for the HOST parameter must begin with an alphabetic character and can contain a..z, A..Z, 0..9, - (hyphen), or . (period).

3731 E3731 Cmd Rej: Invalid Hostname

New connections cannot be made if the Number of CNAMES or TCP/UDP connections have reached the maximum limit.

2589 E2589 Cmd Rej: Maximum number of Connections provisioned

Duplicate LHOST, RHOST, LPORT and RPORT entry combination is not allowed.

2674 E2674 Cmd Rej: Connection parameters must be unique

Connections can only be made with a LHOST that is configured on a SIP card.

2684 E2684 Cmd Rej: Specified LHOST is not valid for Card and Appl Type

Remote IP address (RHOST) must not exist in the IPLINK table.

2685 E2685 Cmd Rej: Remote IP address exists in the IPLINK table

The TCP protocol is not supported for ENUMHC; only the UDP protocol is supported.

3180 E3180 Cmd Rej: TCP protocol is not supported for ENUM card

Only one UDP can be provision per interface (lhost).

E3528 Cmd Rej: Only one UDP can provision per lhost

The UDP protocol is not supported for SCCP/SFAPP/IPS card with SFLOG; only the TCP protocol is supported.

E4741 Cmd Rej: UDP connection not supported on card

Visualization connection supports on Port c on SCCP and SFAPP card.

3180 E3180 Cmd Rej: IPCONN supports on Port c on SCCP and SFAPP card

Valid LPORT values are from range 1024 to 65535. ENUM application support one extra LPORT value that is 53.

3702 Cmd Rej: LPORT must be in range 1024-65535 or 53 (only for ENUM)

Notes

The `ent-ip-host` command should be used to define local host names and remote host names for IP addresses. This is an existing command and will be used to configure the local host and remote host for an IP address prior to adding any SIP connection.

Maximum of 16 connections can be provisioned against a local host.

If the host name contains a hyphen, then the host name must be enclosed within quotation marks.

LPORT=53 must be allowed only for ENUM application. LPORT 54 to 1023 must not be supported for any of the application and the command should be rejected with MTT number 3702.

For LPORT value below 53 and above 65535, command should be rejected with MTT number 2017.

Output

```
ent-ip-conn:prot=tcp:lhost=lss1:lport=2020:rhost=rss1:rport=2020:cname=connection5
```

```
tekelecstp 12-06-25 15:04:28 EST EAGLE 45.0.0
  ent-ip-conn:prot=tcp:lhost=
lss1:lport=2020:rhost=rss1:rport=2020:cname=connection5
  Command entered at terminal #4.
  ENT-IP-CONN: MASP A - COMPLTD
;
```

Related Topics

- [chg-ip-conn](#)
- [dlt-ip-conn](#)
- [rtv-ip-conn](#)


```
ent-ip-  
host:host=gw100.nc.tekelec.com:ipaddr=150.001.001.001:type=local  
  
ent-ip-host:host="gw100.nc-tekelec.com":ipaddr=150.001.001.001  
  
ent-ip-host:host=abc:ipaddr=250.001.001.001:type=remote:realm=xyz
```

Dependencies

The value specified for the IP Address parameter cannot already exist in the IP Host table.

3760 E3760 Cmd Rej: IP Address must be unique

A valid value must be specified for the `host` parameter. If the host name contains a hyphen, then the host name must be enclosed within quotation marks.

3731 E3731 Cmd Rej: Invalid Hostname

The `ipaddr=0.0.0.0` parameter cannot be specified.

2704 E2704 Cmd Rej: Invalid IPADDR

The value specified for the `host` parameter cannot already exist in the IP Host table.

3735 E3735 Cmd Rej: Hostname must be unique

The IP Host table can have a maximum of 4096 host entries.

3738 E3738 Cmd Rej: Host table is full

If a remote host is used (the `type=remote` parameter is specified), then the value specified for the IP Address cannot already exist in the IP Link table.

4385 E4385 Cmd Rej: Use `type=local` or remove IP Address from IPLNK table

If a local host is used (the `type=local` parameter is specified), then the value specified for the IP Address must already exist in the IP Link table.

4384 E4384 Cmd Rej: Use `type=remote` or enter IP Address in IPLNK table

A valid value must be specified for the `realm` parameter. If the realm contains a hyphen, then the realm must be enclosed within quotation marks.

2730 E2730 Cmd Rej: Invalid Realm

HOST and REALM must be specified together for the host associated with diameter connection.

2805 E2805 Cmd Rej: Host and Realm required for diameter connection

Notes

If the realm contains a hyphen, then the realm must be enclosed within quotation marks.

Realm is mandatory for all the IP hosts associated with diameter connections.

Output

```
ent-ip-  
host:host=gw100.nc.tekelec.com:ipaddr=150.001.001.001:type=local
```

```
rlghncxa03w 05-07-17 15:35:05 EST EAGLE 34.0.0  
ENT-IP-HOST: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-ip-host](#)
- [rtrv-ip-host](#)

4.1.315 ent-ip-node

Use this command to define the IP address of a node.

Parameters

cap (mandatory)

The maximum percentage of Ethernet capacity for the node connection. This capacity is added to other connections to this node for the total capacity of the node.



Note:

The value specified for this parameter can be used to calculate throughput for E5-ENET-B cards. Refer to the *Notes* section for more information.

Range:

1 - 100

ipaddr (mandatory)

The node's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is *192.126.100.5*, where *192.126.100* is the network number and *5* is the machine's host number.

Range:

4 numbers separated by dots
1-233-first number
0-255-the other three numbers

ipapp1 (mandatory)

The IP application supported by the node.

Range:

ipport (mandatory)

The logical IP port that addresses the application on the node.

Range:

1024 - 5000

loc (mandatory)

The card location as stenciled on the shelf of the system that contains the TCP/IP link that will be directly connected to the node.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

iprte (optional)

The default router IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number.

Range:

4 numbers separated by dots
1-233-first number
0-255-the other three numbers

Example**Dependencies**

The shelf and card must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The node IP address cannot be 127.x.x.x, where x is a number from 1 to 254.

N/A N/A

The specified card location must be equipped with a TCP/IP data link.

2604 E2604 Cmd Rej: Card location not assigned a TCP/IP link

The IP address must be unique to the TCP/IP link table and to the TCP/IP nodes.

2610 E2610 Cmd Rej: IPADDR assigned to a TCP/IP link

Only one node can be connected for each data link and each application. The IP address, IP application, and card location combination must be unique in the database.

N/A N/A

The IP port on each node cannot already be assigned to another application.

2612 E2612 Cmd Rej: IPPORT already assigned

The class of the IP address (`ipaddr`) must match the class of the assigned TCP/IP data link's IP address. The system supports three classes of IP addresses, Class A, Class B, and

Class C. Class A IP addresses can contain only the values 1 - 126 in the first field of the IP address. Class B IP addresses can contain only the values 128 - 191 in the first field of the IP address. Class C IP addresses can contain only the values 192 - 223 in the first field of the IP address.

2614 E2614 Cmd Rej: IPADDR w/o IPRTE must match first octet of TCP/IP link

The network portion of the IP address (`ipaddr`) must match the network portion of the IP address assigned to the TCP/IP data link. The network portion of the IP address is based on the class of the IP address. If the IP address is a Class A IP address, the first field is the network portion of the IP address. If the IP address is a Class B IP address, the first two fields are the network portion of the IP address. If the IP address is a Class C IP address, the first three fields are the network portion of the IP address.

2616 E2616 Cmd Rej: IPADDR w/o IPRTE must match first 3 octets of TCP/IP link

If the network portion and class of the IP address of the TCP/IP node matches the class of the assigned TCP/IP data link's IP address, the `iprte` parameter cannot be specified. The `iprte` parameter can be specified only with the `ent-ip-node` command when the network portion and class of the TCP/IP node does not match the class of the assigned TCP/IP data link's IP address. The values of the `ipaddr` parameter, the IP address of the TCP/IP node, and the `iprte` parameter cannot be the same.

2615 E2615 Cmd Rej: IPADDR w/o IPRTE must match first 2 octets of TCP/IP link

The capacity of all connections to the given node cannot be greater than 100%.

2611 E2611 Cmd Rej: Total Ethernet Capacity is greater than 100%% for IP Node

The router's IP address must not be assigned to a local TCP/IP data link.

2632 E2632 Cmd Rej: IPRTE address assigned to TCP/IP link

The router's IP address must be in the same network as the node's IP address.

2633 E2633 Cmd Rej: IPRTE must use 1st octet of Class A TCP/IP Link

2634 E2634 Cmd Rej: IPRTE must use 1st 2 octets of Class B TCP/IP Link

2635 E2635 Cmd Rej: IPRTE must use 1st 3 octets of Class C TCP/IP Link

Notes

If the IP address is a Class A IP address, do not use the IP addresses `127.x.x.x`, where `x` is a number from 1 - 254. These addresses are reserved for loopback.

Using the CAP Value to Calculate Throughput for E5-ENET-B Cards

The value specified for the `cap` parameter can be used to calculate the throughput in transactions per second (TPS) for E5-ENET-B cards. The TPS value is the smaller of the following values:

- `GPL_CARD_CAPACITY`
 - E5-ENET-B card—15000
- $175 \text{ [or } 17.5] * \text{ cap parameter value}$

▲ Caution:

The 175 multiplier is used only when the link negotiates to 100 Mbits/second full duplex. If the link is a different value than 100 Mbits/second full duplex, then a multiplier of 17.5 is used.

Output**Related Topics**

- [dlt-ip-node](#)
- [rtrv-ip-node](#)

4.1.316 ent-ip-rte

Use this command to configure the destination IP address, subnet mask, and the gateway IP address for the specified card in the Static IP Route table.

Parameters**loc (mandatory)**

Card location. The unique identifier of a specific IP card in the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

dest (mandatory)

Destination IP Address. The IP Address of a remote destination host or network to be reached.

Range:

4 numbers separated by dots, with each number in the range of 0–255.
The IP address 0.0.0.0 is not valid.

gtwy (optional)

Gateway IP Address. The IP address assigned to the gateway router that will properly forward IP datagrams with the destination IP address (*dest*) to the next-hop gateway router or final destination host.

Range:

4 numbers separated by dots, with each number in the range of 0–255.
The IP address 0.0.0.0 is not valid.

submask (mandatory)

The subnet mask of the destination IP address, in the form of an IP address with a restricted range of values. This parameter is required if the *ipaddr* parameter is entered.

Range:

The value must be valid for the class of the entered IP address.

Valid for Class A Networks

- 255.0.0
- 255.192.0
- 255.224.0
- 255.240.0
- 255.248.0
- 255.252.0
- 255.254.0
- 255.255.128.0

Valid for Class A or B Networks

- 255.255.0.0
- 255.255.192.0
- 255.255.224.0
- 255.255.240.0
- 255.255.248.0
- 255.255.252.0
- 255.255.254.0
- 255.255.255.128

Valid for Class A, B, or C Networks

- 255.255.255.0
- 255.255.255.192
- 255.255.255.224
- 255.255.255.240
- 255.255.255.248
- 255.255.255.252

 **Note:**

The value `255.255.255.255` must be specified if the destination IP address represents a host address. If the destination IP address represents a network address, a value must be specified that identifies the network ID and host ID portions of the address.

Example

```
ent-ip-rte:loc=1301:dest=128.252.10.5:submask=255.255.255.255:  
gtwy=140.188.13.33
```

Dependencies

The specified destination IP address (`dest` parameter):

- Must not be the default route (0.0.0.0)
- Must not correspond to any loopback address (i.e. 127.X.X.X)
- Must be unique per card
- Must not reside on any local network on the card

3587 E3587 Cmd Rej: Dest IPAddr can't be local to any of the n/w on the card

The specified gateway IP address (`gtwy` parameter):

- Must not be the default route (0.0.0.0)
- Must not correspond to any loopback address (i.e. 127.X.X.X)
- Must correspond to a host IP address that resides on any local network on the card

3791 E3791 Cmd Rej: Gtwy IP Address is invalid

The IP address must be defined for any or all networks for the card before this command can be entered. (See the [chg-ip-lnk](#) command.)

3589 E3589 Cmd Rej: Specified cards interface IP Address must be assigned

Each destination IP address entered into the Static IP Route table must be unique for the card.

3586 E3586 Cmd Rej: Dest IP Address already exists for this card

A maximum of 64 static IP routes can be defined for a card.

3793 E3793 Cmd Rej: Max IP Route entries already exist for this card.

A maximum of 2048 static IP routes can be defined in the IP Route table.

3794 E3794 Cmd Rej: IP Route table full

The `loc` parameter value must correspond to an E5-ENET-B card running the IPGWI, IPLIMI, IPSG, or SS7IPGW application.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The network address specified by the `dest` and `submask` parameters must be different from the network address specified by the `pvn` and `pvnmask`, `fcna` and `fcnamask`, and `fcnb` and `fcnbmask` parameters of the NETOPTS table.

4333 E4333 Cmd Rej: The specified IP route is assigned to PVN/FCNA/FCNB

Notes

The Static IP Route table is used to store static IP route entries. Static routes are maintained across card initialization, failures, and reloads. These types of routes are used when the IP Layer cannot determine routes dynamically. Static IP route entries can be added or deleted dynamically.

Output

```
ent-ip-rte:loc=1301:dest=128.252.10.5:submask=255.255.255.255:  
gtwy=140.188.13.33
```

```
rlghncxa03w 12-07-24 15:35:05 EST EAGLE 45.0.0  
IP Route table is (1 of 2048) 1% full  
ENT-IP-RTE: MASP A - COMPLTD  
;
```

Related Topics

- [dlt-ip-rte](#)
- [rtrv-ip-rte](#)

4.1.317 ent-j1

Use this command to enter a J1 interface on a T1 card.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

j1port (mandatory)

J1 port number.

The value must be a J1 port for which an interface has not been configured on the specified J1 card.

Range:

1-8

encode (optional)

Indicator for use of B8ZS or AMI encoding/decoding.

Range:

b8zs

ami

Default:

b8zs

j1tsel (optional)

Timing source

Range:*line*

slave timing source

external

master timing source

Default:*line***l1 (optional)**

T1 cable length in feet between the EAGLE and the connecting node.

Range:

0-655

Default:

133

Example

```
ent-j1:loc=1101:j1port=1:encode=ami:j1tsel=external
```

```
ent-j1:loc=1102:j1port=1:j1tsel=line
```

```
ent-j1:loc=1103:j1port=2
```

Dependencies

The specified card location (loc parameter) must be equipped.

3136 E3136 Cmd Rej: J1 card location is unequipped

The J1 table must be accessible.

3164 E3164 Cmd Rej: Failed reading the J1 table

The Card (IMT) table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

The port specified by the j1port parameter must not be already equipped with a J1 interface.

3130 E3130 Cmd Rej: The J1PORT at the specified location is already equipped

Card locations 1113 - 1118 (OAM, TDM, MDAL cards) cannot be specified as values for the loc parameter.

2154 E2154 Cmd Rej: Card slot reserved by system

The specified card location must be provisioned with type as limt1 and appl as ccs7itu.

2212 E2212 Cmd Rej: Invalid card type for this command

The card must not be provisioned with any E1/T1 ports.

2212 E2212 Cmd Rej: Invalid card type for this command.

The j1port parameter must be in the range from 1 to 8.

2017 E2017 Cmd Rej: Integer is out of range, 1..8 - j1port

IMT card location cannot be specified.

2016 E2016 Cmd Rej: Card Location is out of range - loc

The J7 support feature must be enabled before the J1 port can be provisioned.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

Notes

There is not a new card type for J1. The J1 interface will be provisioned on a T1.

Once the J1 interface is provisioned on it, no T1 interface will be allowed on the T1 card.

This card will be treated as a J1 card.

Output

```
ent-j1:loc=1101:j1port=1:encode=ami:j1tsel=external
```

```
tekelecstp 13-12-20 12:12:36 EST 46.0.0-65.3.0
ent-j1:loc=1101:j1port=1:encode=ami:j1tsel=external
ENT-J1: MASP A - COMPLTD
;
```

Related Topics

- [chg-j1](#)
- [dlt-j1](#)
- [rtrv-j1](#)
- [tst-j1](#)

4.1.318 ent-lbp

Use this command to assign a far-end loopback point for testing data signaling link elements in a SS7 transmission path.

Parameters

lbp (mandatory)

Loopback point ID. A far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to and including the target device).

Range:

1 - 32

lfst (mandatory)

Link fault sectionalization test. The type of link fault sectionalization loopback test to be performed.

Range:

llt
latching loopback test

nlt
nonlatching loopback test

link (mandatory)

SS7 signaling link. The SS7 signaling link that is to be tested.

Synonym:

port

Range:

a, b, a1 - a31, b1 - b31

Not all card types support all `link` parameter values.

See [Table A-1](#) for valid `link` parameter range values for each type of card that can have assigned signaling link ports.

loc (mandatory)

Card location. The unique identifier of a specific application subsystem located in the STP.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

rle (mandatory)

Remote link element. The link element to be looped back for testing.

Range:

ds0

ocu

csu

dsu

nei

c11i (optional)

The Common Language Location Identifier (CLLI) code, or other mnemonic identifier, used to refer to the given loopback point.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 10 alphanumeric characters

rep (optional)

Repetition count. The number of link elements of the same type (not including the target device) that lie between the STP and the link element to be tested.

Range:

0 - 31

Default:

0—If the link element to be looped back for testing is NEI (*rle=nei* is specified)

0—If the LFS test is NLT (non-latched); *lfst=nl* is specified

0—If no other LBP for this link has the same *rle* value

1–30—Next sequential number for subsequent loopback points of the link to be tested (*rle* is specified as anything but *nei*)

Example

```
ent-
lbp:loc=1101:link=a:lbp=1:rle=ds0:lfst=llt:rep=0:clli=rlghncxa0
5w

ent-lbp:loc=1101:port=a:lbp=2:rle=nei:lfst=llt

ent-
lbp:loc=1205:port=a1:lbp=1:rle=ds0:lfst=llt:clli=rlghncxa05w:rep=1
```

Dependencies

The Link Fault Sectionalization (LFS) feature must be on before this command can be entered.

2870 E2870 Cmd Rej: LFS feature must be ON

The card location (*loc* parameter) must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The *rle=ds0* parameter and the *rle=nei* parameter cannot be specified when the *lfst=nl* parameter is specified. The DS0 and Network Element Interface (NEI) link elements do not support non-latching loopbacks.

2896 E2896 Cmd Rej: DS0 and NEI link elements do not support non-latching tests

If the *rle=nei* parameter is specified, the *rep=0* parameter must be specified.

2895 E2895 Cmd Rej: REP must be zero if link element to be tested is NEI

The *rep* parameter can be specified only if the *lfst=llt* parameter is specified.

2897 E2897 Cmd Rej: REP is only valid if LFST is defined as LLT

Each specified *rep* parameter value must be greater than any previously specified *rep* value and less than any subsequent specified *rep* value.

2893 E2893 Cmd Rej: REP must be greater than prev. and less than subsequent REP

The specified *clli* cannot be a reserved word.

3040 E3040 Cmd Rej: <string> cannot be used in this command

The loopback point (LBP) cannot have been previously defined.

2894 E2894 Cmd Rej: LBP has already been provisioned

The value specified for the `lbp` parameter cannot exceed the `lbp` parameter value previously defined for a loopback point with `rle=nei` specified.

2898 E2898 Cmd Rej: LBP cannot exceed previously defined NEI LBP value

For each SS7 signaling link, only one loopback point with `rle=nei` specified can be defined.

2899 E2899 Cmd Rej: NEI LBP has already been defined for the CCS7 link

The `rep` parameter must be specified if taking the default value results in duplicate `rep` values for loopback points.

2914 E2914 Cmd Rej: REP parameter must be specified

The loopback point with `rle=nei` specified must be the terminating SS7 signaling link element.

2900 E2900 Cmd Rej: NEI LBP must be defined as the last link element

The card location must contain a provisioned E5-E1T1-B card, provisioned with the LIMT1 card type, that is running either the SS7ANSI or CCS7ITU application.

2892 E2892 Cmd Rej: LOC is not LFS capable

The card location (`loc` parameter) must not be reserved by the system.

2376 E2376 Cmd Rej: Specified LOC is invalid

The Link Fault Sectionalization database Loopback Point (LBP) table is not accessible.

2891 E2891 Cmd Rej: Failed reading Link Fault Sectionalization table

The values specified for the `loc` and `link` parameters must already exist in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

Notes

None

Output

```
ent-lbp:loc=1101:link=a:lbp=2:rle=nei:lfst=11t
```

```
rlghncxa03w 05-02-17 15:35:05 EST EAGLE5 33.0.0  
ENT-LBP: MASP A - COMPLTD
```

;

Related Topics

- [act-lbp](#)
- [chg-lbp](#)
- [dact-lbp](#)
- [dlt-lbp](#)
- [rtrv-lbp](#)

4.1.319 ent-lg-card

Use this command to create a new LG card. An LG Card is associated with a single LG Group. The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSP, IPLHC, IPGHC and SS7HC GPLs.

Parameters

grp (mandatory)

LG group name

Range:

ayyyyyyyy Up to 10 alphanumeric characters; the first character must be a letter.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

Example

```
ent-lg-card:loc=1301:grp=lggroup1
```

Dependencies

The card location must not be 1113-1118, or xy09 and xy10 where x is the frame and y is the shelf.

2154 E2154 Cmd Rej: Card slot reserved by system

The valid card types are DCM, ENET, LIME1, and LIMT1.

2212 E2212 Cmd Rej: Invalid card type for this command

The specified group name value must exist in the database.

5207 E5207 Cmd Rej: LG Group not defined

The card location specified in the `loc` parameter must not be associated with another LG group.

2100 E2100 Cmd Rej: Card location already equipped

The LG Card table is corrupt or cannot be found.

5222 E5222 Cmd Rej: Unable to read LG Card table

The card in the specified card location must be a LIM and must exist.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

The card location specified in the `loc` parameter must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The LG Group table is corrupt or cannot be found.

5221 E5221 Cmd Rej: Unable to read LG Group table

The `loc` and `grp` parameters are mandatory

2379 E2379 Cmd Rej: Missing parameter

The IMT table is corrupt or cannot be found.

2102 E2102 Cmd Rej: Failed reading the IMT table

Only E-5 Class cards are supported card types for a card to be an LG card

2105 E2105 Cmd Rej: Invalid card TYPE and APPL load type combination

Output

Related Topics

- [act-lg-card](#)
- [chg-lg-card](#)
- [dact-lg-card](#)
- [dlt-lg-card](#)
- [rept-stat-lg](#)
- [rtrv-lg-card](#)

4.1.320 ent-lg-engine

Use this command to create an LG engine. An LG Engine is associated with a single LG Card. The command class is `TKLC_INTERNAL` inheriting properties of `DEBUG` class. The Load Generator is supported on `IPSG`, `IPLHC`, `IPGHC` and `SS7HC` GPLs.

Parameters

engine (mandatory)

Range: `aaaaaaaa`

Up to 10 alphanumeric characters; the first character must be a letter.

event (mandatory)

Range: `aaaaaaaa`

Up to 10 alphanumeric characters; the first character must be a letter

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 -

4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

action (optional)

Transmitting and receiving actions of a LG Engine.

Range:***snk***

Rx Action: Sink Mode

ret

Rx Action: Return Mode

retl2

Rx Action: Return by L2 Mode

cong

Rx Action: Congestion

cap

Rx Action: capture mode

pbk

Tx Action: Playback mode

port (optional)

The signaling link on the card specified in the `loc` parameter. The links can be specified in any sequence or pattern.

Synonym:

link

Range:

a, b, a1 - a31, b1 - b31

Not all card types support all `link` parameter values.

See [Summary of Range Values for :link Parameter](#) for valid `link` parameter range values for each type of card that can have a location specified in the `loc` parameter.

rxengine (optional)

Receiving LG Engine name.

Range:

ayyyyyyyy

Up to 10 alphanumeric characters; the first character must be a letter.

txrate (optional)

Transmission rate of a LG Engine.

Range:

0 - 10000

Example

```
ent-lg-  
engine:engine=txengine1:loc=1302:event=txisup1:port=a:txrate=100  
  
ent-lg-engine:engine=rxengine1:loc=1302:event=rxisup1:action=cap  
  
ent-lg-  
engine:engine=txengine2:loc=1302:event=txisup2:action=pbk:rxengine=r  
xengine1
```

Dependencies

The value specified for the `engine` parameter cannot already exist in the LG Engine table.

5214 E5214 Cmd Rej: LG Engine already defined

The LG Engine table is corrupt or cannot be found.

5212 E5212 Cmd Rej: Unable to read LG Engine table

The number of engines associated with a card should not exceed the max limit.

5216 E5216 Cmd Rej: Too many LG Engines associated with LG card

The number of events associated with a engine should not exceed the max limit.

5217 E5217 Cmd Rej: LG Event associated with too many LG Engines

The `txrate` parameter cannot be specified with the parameter `event` of Rx type.

5218 E5218 Cmd Rej: TxRate cannot be assigned to Rx Event direction

The `action` parameter of type PBK can only be assigned to Tx event direction.

5219 E5219 Cmd Rej: Action can not be assigned to Tx Event direction

The engine name specified shouldn't be an Eagle reserved name

3040 E3040 Cmd Rej: <string> cannot be used in this command

The `action` parameter of type SNK/RET/RETL2/CONG/CAP can only be assigned to RX event direction.

5229 E5229 Cmd Rej: Action can not be assigned to Rx Event Direction

The card location specified in the `loc` parameter must be of a provisioned LG card.

5239 E5239 Cmd Rej: LG card not defined

The port specified in the command must be provisioned.

2373 E2373 Cmd Rej: Link is unequipped in the database

The `rxengine` parameter cannot be specified with the `action` parameter of type other than PBK.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The specified **Rx** `engine` parameter value must be associated with the card.

5210 E5210 Cmd Rej: RxEngine not defined on this card

The Rxengine specified must pre-exist in the LG Engine table.

5249 E5249 Cmd Rej: LG RxEngine not defined

Engine specified in RxEngine parameter must of Rx Type.

5241 E5241 Cmd Rej: Invalid RxEngine defined

The LG Event name specified in the command must exist in the table

5227 E5227 Cmd Rej: LG Event not defined

The LG Engine table cannot already be full.

5213 E5213 Cmd Rej: LG Engine table is full

SIF Size > 272 not supported on ss7hc

4763 E4763 Cmd Rej: Invalid SIF size of event specified for SS7HC card

The Rx Event can not be associated to more than one Engine on the same LG card

5280 E5280 Cmd Rej: Duplicate DPC cannot be assigned to same LG card

The LG Card and Event specified in the command must belong to same network

5259 E5259 Cmd Rej: LG Card and event network variant does not match

The `port` parameter cannot be specified with the parameter `event` of Rx type.

5230 E5230 Cmd Rej: Port can not be assigned to Rx Event Direction

Output

Related Topics

- [act-lg-engine](#)
- [dact-lg-engine](#)
- [dlt-lg-engine](#)
- [rept-stat-lg](#)
- [rtrv-lg-engine](#)

4.1.321 ent-lg-event

Use this command to create a new LG event. The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSTG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

dir (mandatory)

Type of Event (Tx or Rx)

Range:

Tx

Transmit Event

Rx
Receive Event**dpc (mandatory)**

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:*dPCA***Range:***p-, 000-255, **

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

dpc/dPCA/dpci/dpcn/dpcn24 (mandatory)

Destination point code

dpci (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:*s-, p-, ps-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

dpcn (mandatory)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:*s-, p-, ps-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**nnnnn—0-16383**gc—aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000–255

ssa—000–255

sp—000–255

event (mandatory)**Range:**

aaaaaaaa Up to 10 alphanumeric characters; the first character must be a letter

h0h1 (mandatory)

SNM Type

Range:

tfa

tfp

tfc

tfr

rct

upu

opc (mandatory)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Range:

p-, 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

opc/opca/opci/opcn/opcn24 (mandatory)

Originating Point Code

opci (mandatory)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

opcn (mandatory)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The prefix subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

opcn24 (mandatory)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000-255

ssa—000-255

sp—000-255

si (mandatory)

MSU Service Indicator

Range:

0 - 15

SI value:

0 = SNM

1,2, 6-12, 14 = TEST

3 = SCCP

4 = TUP

5 = ISUP
13 = BICC
15 = H248

cause (optional)

Cause Code for UPUs

Range:

0 - 15

Default:

0

class (optional)

Internal or External

Range:

int

Internal

cnglv1 (optional)

Congestion Level for TFCs

Range:

0 - 3

Default:

0

cpc (optional)

ANSI capability point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

cpc

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

cpc/cpca/cpci/cpcn/cpcn24 (optional)

Capability point code. The code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network to which the STP belongs.

cpci (optional)**Range:**

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*
zone—*0-7*
area—*000-255*
id—*0-7*

The point code *0-000-0* is not a valid point code.

Default:

No change to existing point code value.

cpcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-
nnnnn—*0-16383*
gc—*aa-zz*
m1-m2-m3-m4—*0-14* for each member; values must sum to 14

Default:

No change to existing point code value.

cpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—*000-255*
ssa—*000-255*
sp—*000-255*

Default:

No change to existing point code value.

egta (optional)

End global title address. The end of a range of global title digits.

Range:

1 - 21

maxcic (optional)

Maximum CIC Selector

Range:
0 - 4294967295

Default:
4294967295

maxsize (optional)
Maximum Service Message SIF Size

Range:
0 - 4095

maxsls (optional)
Maximum SLS selector

Range:
0-255 -ANSI
0-15 -ITU

Default:
255 -ANSI
15 -ITU

mincic (optional)
Minimum CIC Selector

Range:
0 - 4294967295

Default:
0

minsize (optional)
Minimum Service Message SIF Size

Range:
0 - 4095

Default:
60 -SCCP MSUs
40 -other MSUs

System Default:
0

minsls (optional)
Minimum SLS Selector

Range:
0-255 -ANSI
0-15 -ITU

Default:
0

priority (optional)
Service Message Priority

Range:

0 - 3

Default:

0

ri (optional)

GTT or SSN

Range:

gtt

ssn

sclass (optional)

Range:

0 - 1

sgta (optional)

Start of global title address. The beginning of a range of global title digits.

Range:

1 - 21

ssn (optional)

Subsystem number. The application's subsystem number. This attribute is composed of the decimal representation of the 1-byte field used in the SS7 protocol.

Range:

2 - 255

Default:

5

System Default:

0

tt (optional)

Translation type.

Range:

0 - 255

Default:

100

type (optional)

Event Type

Range:

MSU

Default:

MSU

usrId (optional)

User ID for UPUs

Range:

0 - 15

Default:

5

System Default:

0

Example

```
ent-lg-
event:event=txisup1:dir=tx:type=msu:si=5:dpc=2-2-2:opc=1-1-1

ent-lg-event:event=txisup1:dir=tx:si=5:dpc=4-4-4:opc=3-3-3

ent-lg-event:event=rxisup1:dir=rx:dpc=3-3-3
```

Dependencies

If the `mincic/maxcic` parameter is specified, the `si` parameter must be 4 (*tup*), 5 (*isup*) or 13 (*bicc*).

If the `tt/ssn/sgta/egta` parameter is specified, the `si=3 (sccp)` parameter must be specified.

If the `h0h1/cnglv1/cause/usrId/cpc` parameter is specified, the `si=0 (snm)` parameter must be specified.

5251 E5251 Cmd Rej: Invalid parameter for SI type

When failed to read LG Event table.

5223 E5223 Cmd Rej: Unable to read LG Event table

The event name specified shouldn't be an Eagle reserved name

3040 E3040 Cmd Rej: <string> cannot be used in this command

The `event` and `dir` parameters must be specified.

The `dpc` parameter is mandatory with Rx event type

The `opc`, `dpc`, and `si` parameters are mandatory with Tx event.

The `h0h1` parameter is mandatory for `si=0 (snm)` Tx event.

2379 E2379 Cmd Rej: Missing parameter

The `mincic` specified must be less than `maxcic`.

5242 E5242 Cmd Rej: MINCIC cannot be greater than MAXCIC

The `minsize` specified must be less than `maxsize`.

5243 E5243 Cmd Rej: MINSIZE cannot be greater than MAXSIZE

The `minsls` specified must be less than `maxsls`.

5244 E5244 Cmd Rej: MINSLS cannot be greater than MAXSLS

The value specified for the event parameter cannot already exist in the LG Event table.

5247 E5247 Cmd Rej: LG Event already defined

ITU SLS must be less than 15.

5250 E5250 Cmd Rej: ITU SLS cannot be greater than 15

The LG Event Table cannot be full.

5226 E5226 Cmd Rej: LG event table is full

A valid SIF size must be specified with SI value.

5233 E5233 Cmd Rej: Invalid SIF size for SI Type

The same `dpc` parameter cannot be assigned to more than one Event of Rx type.

5258 E5258 Cmd Rej: Duplicate DPC cannot be assigned to RX event

When other optional parameters are specified with Rx event

When `sgta/egta/tt` parameters are specified with `RI=SSN` for Tx event

2155 E2155 Cmd Rej: Invalid parameter combination specified

The network type for the `opc` and `dpc` parameters must match.

4387 E4387 Cmd Rej: OPC must not be identical to DPC

If the `ri=gt` parameter is specified, then the `sgta/egta` parameters must be specified.

5225 E5225 Cmd Rej: SGTA/EGTA must be specified with `RI=GT`

The lengths of the `sgta` and `egta` parameters must match.

2403 E2403 Cmd Rej: Length of EGTA must be equal to length of GTA

The `egta` and `sgta` parameters must be specified together in the command.

2409 E2409 Cmd Rej: EGTA cannot be specified without GTA

The value specified for the `egta` parameter must be greater than or equal to the value specified for the `sgta` parameter.

2420 E2420 Cmd Rej: EGTA must be greater than or equal to GTA

Notes

Mandatory and optional event parameters can be organized into two groups: generic and event type specific parameters. The generic parameters are applicable to any event type whereas event type specific are applicable only to a specific event type.

Generic event parameters are shown below:

Table 4-25 ENT-LG-EVENT Generic Parameters

Parameter	Description	Mand/Opt	Applicable Event Direction	Valid Values
event	event name	M	Any	

Table 4-25 (Cont.) ENT-LG-EVENT Generic Parameters

dir	transmit or receive	M	Any	Tx, Rx
class	internal or external	O	Tx	INT Default : INT
type	event type (msu)	O	Any	MSU Default: MSU

Configurable parameters specific to each type of event are shown below:

Common MSU related configuration parameters when DIR (direction) parameter is Rx, are as follows:

Table 4-26 ENT-LG-EVENT Rx MSU Event Type common Parameters

Parameter	Description	Mand/Opt	Valid Values
dpca	Destination PC (ANSI)	M	
dpci	Destination PC (ITU)	M	
dpcn	Destination PC (ITU National)	M	
dpcn24	Destination PC (24 bit ITU national)	M	

Common MSU related configuration parameters when DIR (direction) parameter is Tx, are as follows:

Table 4-27 ENT-LG-EVENT Tx MSU Event Type common Parameters

Parameter	Description	Mand/Opt	Valid Values
dpca	Destination PC (ANSI)	M	
dpci	Destination PC (ITU)	M	
dpcn	Destination PC (ITU National)	M	
dpcn24	Destination PC (24 bit ITU national)	M	
opca	Origination PC (ANSI)	M	
opci	Origination PC (ITU)	M	
opcn	Origination PC (ITU National)	M	
opcn24	Origination PC (24 bit ITU national)	M	
priority	Service message priority	O	
minsls	Minimum SLS selector	O	
maxsls	Maximum SLS selector	O	
minsize	Minimum service message SIF size	O	0 – 4095

Table 4-27 (Cont.) ENT-LG-EVENT Tx MSU Event Type common Parameters

maxsize	Maximum service message SIF size	O	0 – 4095
si	MSU service indicator	M	0-SNM, 1,2, 6-12, 14 - TEST 3-SCCP, 4-TUP, 5-ISUP, 13-BICC 15-H248

For MSU event type, Service indicators (SI) can have different formats, and consequently unique parameters. Following tables list these parameters related to MSU event type and SI.

Table 4-28 ENT-LG-EVENT Tx MSU Event Type Specific Parameters (SI = 0)

Parameter	Description	Mand/Opt	Valid Values
h0h1	SNM type	M	TFA, TFP, TFC, TFR, RCT or UPU
cpca	concerned destination (ANSI)	O	
cpci	concerned destination (ITU)	O	
cpcn	concerned destination (ITU National)	O	
cpcn24	concerned destination (24 bit ITU National)	O	
cnglvl	congestion level for TFCs	O	0-3
cause	cause code for UPU	O	0-15
usrid	user ID for UPU	O	0-15

Table 4-29 ENT-LG-EVENT Tx MSU Event Type Specific Parameters (SI = 1, 2, 6-12, 14, 15)

Parameter	Description	Mand/Opt	Valid Values
None			

Table 4-30 ENT-LG-EVENT Tx MSU Event Type Specific Parameters (SI = 3)

Parameter	Description	Mand/Opt	Valid Values
tt	Translation Type	O	0 – 255
ssn	Sub System Number	O	0 – 255
sgta	Start of global title address	O	1-21 digits

Table 4-30 (Cont.) ENT-LG-EVENT Tx MSU Event Type Specific Parameters (SI = 3)

egta	End of global title address	O	1-21 digits
sclass	Class of service	O	0 – 1
ri	Routing Indicator (GT or SSN)	O	GT, SSN

Table 4-31 ENT-LG-EVENT Tx MSU Event Type Specific Parameters (SI = 4, 5, 13)

Parameter	Description	Mand/Opt	Valid Values
mincic	Minimum CIC selector	O	0..4294967295
maxcic	Maximum CIC selector	O	0..4294967295

Output**Related Topics**

- [chg-lg-event](#)
- [dlt-lg-event](#)
- [rept-stat-lg](#)
- [rtrv-lg-event](#)

4.1.322 ent-lg-grp

Use this command to create an LG group. The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSG, IPLHC, IPGHC and SS7HC GPLs.

Parameters**grp (mandatory)****Range:**

aaaaaaaa

Up to 10 alphanumeric characters; the first character must be a letter

Example

```
ent-lg-grp:grp=lgroup1
```

Dependencies

The group name specified shouldn't be an Eagle reserved name

3040 E3040 Cmd Rej: <string> cannot be used in this command

An LG group with the specified name shouldn't pre-exist in the system.

5206 E5206 Cmd Rej: LG Group already defined

The LG Group table cannot be full.

5224 E5224 Cmd Rej: LG group table is full

The LG Group table is corrupt or cannot be found.

5221 E5221 Cmd Rej: Unable to read LG Group table

grpis mandatory parameter for this command

2379 E2379 Cmd Rej: Missing parameter

Output

Related Topics

- [act-lg-grp](#)
- [dact-lg-grp](#)
- [dlt-lg-grp](#)
- [rept-stat-lg](#)
- [rtrv-lg-grp](#)

4.1.323 ent-lnp-serv

Use this command to reserve an LNP translation type for a unique LNP service. The available services include up to six query services (*ain*, *in*, *pcs*, *lnpqs*, *wnp*, and *lrnqt*) and any combination of six message relay or user-defined services. Translation type names can also be defined and are defaulted to the corresponding reserved service type names.



Note:

LNP Translation Type name referenced in the ENT-LNP-SERV command is different from the Translation Type name referenced in ENT-TT command.

A maximum of 10 LNP services can be assigned in systems with up to 12 million numbers, and a maximum of 15 LNP services can be assigned in systems with more than 12 million numbers (using ELAP). Two of these assigned services will always be reserved for administration of AIN and IN Translation Types. Administration of Message Relay user defined services will also be allowed.

Parameters

serv (mandatory)

Reserved service type name.

Range:

ain

in

pcs

wnp

class

lidx

cnam

isvm

lnpqs

wmsvc

udf1

udf2

udf3

udf4

lnqst

alias (optional)

Alias translation type.

Range:

000 - 255

df1tact (optional)

This parameter specifies the default action associated with the LNP TT Service entry.

Range:

ayyyyyyy

1 leading alphabetic followed by up to 8 alphanumeric characters. This parameter can have one of the following values:

- a valid GTT Action ID of type *disc/udts/tcaperr* that already exists in the GTT Action table
- *fallback* —Fallback to the relay data for MSUs relayed by LNP using relay data from the LNP database provided by the LNP Message Relay service. For an LNP Query message, the MSU is sent to the LNP local subsystem.
- *falltogtt* —Fallback to GTT. The GTT selector search is performed again, using *gttselid=none*.

Default:

fallback

dv (optional)

Digits valid.

Range:

sccp

tcap

Default:

sccp —If *serv* has a value of *class*, *lidx*, *cnam*, *isvm*, *wsmsc*, *udf1*, *udf2*, *udf3*, *udf4*
tcap —If *serv* has a value of *ain*, *in*, *pcs*, *wnp*, *lnpqs*, *lnqt*

gttselid (optional)

GTT Selector ID. This parameter specifies the ID used to perform GTT on the MSU processed by the LNP Message Relay or LNP Query Service.

Range:

0 - 65534

Default:

none

off (optional)

Disables or turns off the specified feature options. This parameter specifies a comma-separated list of feature options that are requested to be turned off. Up to 10 feature options can be specified in the list.

Range:

gttrqd

on (optional)

Enables or turns on the specified feature options. This parameter specifies a comma-separated list of feature options that are requested to be turned on. Up to 10 feature options can be specified in the list.

Range:

gttrqd

rqdtblnop (optional)

The action performed with a message that arrives at an SCCP card that does not have the necessary LNP table, and the current message routing is subsystem.

Range:

udts

generate UDTs for the processed MSU

disc

discard the processed MSU

Default:

No change to the current value

tt (optional)

Translation type.

Range:

000 - 255

ttn (optional)

User defined LNP Translation Type name.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters, the value *none* is not allowed.

Default:Reserved service type name (*serv* parameter)**Example**

```
ent-lnp-
serv:serv=class:tt=10:ttn=class1:dfltact=discl:on=gttrqd:gttsel
id=100
```

```
ent-lnp-serv:serv=lidb:tt=16:dv=tcap:ttn=mrlidb
```

```
ent-lnp-serv:serv=lrnqt:tt=239:dv=tcap
```

Dependencies

The same value cannot be specified for the *on* and *off* parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

The *dfltact=none* parameter cannot be specified.

5298 E5298 Cmd Rej: Default ACTID must not be specified as NONE

The EGTT feature must be turned on before the *gttselid*, *dfltact*, or *on/off=gttrqd* parameter can be specified.

3557 E3557 Cmd Rej: EGTT must be ON

If a GTT Action ID is specified as the value for the *dfltact* parameter, then the Action ID must already exist in the GTT Action table.

5071 E5071 Cmd Rej: GTT Action Id does not exist

If a GTT Action ID is specified as a value for the *dfltact* parameter, then the GTT Action ID must be associated with an action of *disc/udts/tcaperr*.

5172 E5172 Cmd Rej: Invalid action type

The LNP feature must be turned on before this command can be entered.

3009 E3009 Cmd Rej: LNP feature must be ON

The PLNP feature must be turned on before the *serv=pcs* parameter can be specified.

3245 E3245 Cmd Rej: PLNP feature must be ON

The WNP feature must be turned on before the *serv=wnp* parameter can be specified.

3647 E3647 Cmd Rej: WNP feature must be ON

The LNP SMS feature must be turned on before the *serv=wsmc* parameter can be specified.

3599 E3599 Cmd Rej: WSMSC feature must be Activated

If a value of *udf1*, *udf2*, *udf3*, or *udf4* is specified for the *serv* parameter, then the *dfltact*, *gttselid* and *on/off=gttrqd* parameters cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The *tt* parameter must be specified if the *alias* parameter is not specified.

2474 E2474 Cmd Rej: Translation TYPE must be specified

The *ttn=none* parameter cannot be specified.

3225 E3225 Cmd Rej: NONE is a reserved name and cannot be used for a TTN

If a value of *udf1*, *udf2*, *udf3*, *udf4*, or *wsmisc* is specified for the *serv* parameter, then the *dv=sccp* parameter must be specified.

3250 E3250 Cmd Rej: DV must be SCCP when SERV is a user defined type or WSMISC

If the *lnpqs*, *ain*, *in*, *pcs*, *wnp*, or *lnqt* value is specified for the *serv* parameter, then the *dv=tcap* parameter must be specified.

3251 E3251 Cmd Rej: If specified, (N)DV must be TCAP for specified service

A reserved service type name can be specified for the *ttn* parameter only if it matches the *serv* parameter value.

3252 E3252 Cmd Rej: A TTN-reserved service type name only if it matches SERV

The value of the *tt* parameter cannot already exist in the LNP database.

3139 E3139 Cmd Rej: Translation Type is already in LNP database

If the *tt* parameter is specified, then the value of the *serv* parameter cannot exist in the LNP database.

3140 E3140 Cmd Rej: Service Type is already in LNP database

A maximum of 6 Message Relay services are allowed.

3266 E3266 Cmd Rej: Only 6 message relay services can be assigned

If the *alias* parameter is specified, then the *serv* parameter must already have an assigned translation type.

3122 E3122 Cmd Rej: SERV has not been assigned a true TT

When the *alias* parameter is specified, its value cannot already exist in the LNP database as a true translation type for this service.

2460 E2460 Cmd Rej: Alias defined as translation type

If the *alias* parameter is specified, then the specified alias cannot be in use.

2459 E2459 Cmd Rej: Alias already in use

The LNP database is corrupt or cannot be found.

2601 E2601 Cmd Rej: Command aborted due to system error

If the *tt* parameter is specified, then its value cannot already exist in the LNP database as an alias for this service.

2465 E2465 Cmd Rej: Translation TYPE defined as an alias

The LNP TT SERV table is corrupt or cannot be found.

3123 E3123 Cmd Rej: Failed Reading LNP TT SERV table

The value of the `ttn` parameter cannot exist in the LNP database.

2467 E2467 Cmd Rej: TTN already in use

The LRNQT feature must be turned on before the `serv= lrnqt` parameter can be specified.

4817 E4817 Cmd Rej: ITU TCAP LRN Query (LRNQT) feature must be ON

If the `alias` parameter is specified, then the `tt`, `ttn`, and `dv` parameters cannot be specified.

3186 E3186 Cmd Rej: TT, TTN, & DV parameters are not allowed with ALIAS

The GTT Action table is corrupt or cannot be found.

5067 E5067 Cmd Rej: Unable to access GTT Action table

The `nrqdtblnop` parameter requires that the Dual ExAP Config feature is enabled.

2400 E2400 Cmd Rej: Dual ExAP Config feature must be enabled

The `defactid=none` parameter cannot be specified.

5298 E5298 Cmd Rej: Default/Fail ACTID must not be specified as NONE

Notes

on/off options

gttrqd —GTT required. Specifies whether GTT is performed after the successful completion of an LNP Message Relay service and before initiation of an LNP Query service. This option has a default of OFF.

Translation type names must be unique for LNP services.

A translation type name can be a reserved service type name only if it matches the specified service.

TTN

LNP Translation type name referenced in the ENT-LNP-SERV command is different from the Translation type name referenced in ENT-TT command.

Output

```
ent-lnp-serv:tt=1:serv=lidb:on=gttrqd:dfltact=falltogtt
```

```
rlghncxa03w 10-11-08 08:50:12 EST EAGLE 43.0.0
ENT-LNP-SERV: MASP A - COMPLTD
;
```

Related Topics

- [chg-lnp-serv](#)
- [dlt-lnp-serv](#)

- [rtrv-lnp-serv](#)

4.1.324 ent-loopset

Use this command to enter the loopset information into the database. This command updates the Loopset table.

Parameters

name (mandatory)

Loopset name. This parameter specifies an entry in the Loopset table. The *name=none* parameter cannot be specified.

Range:

ayyyyyyy

1 alphabetic and up to 7 alphanumeric characters

pc1 (mandatory)

ANSI point code list with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*). This parameter allows up to 6 comma-delimited entries in the point code list.

Synonym:

pcla

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc1i (mandatory)

ITU international point code list with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pc1n (mandatory)

ITU national point code list in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the

ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pc1n24 (mandatory)

24-bit ITU national point code list with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. This parameter allows up to 6 comma-delimited entries in the point code list.

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000–255

ssa—000–255

sp—000–255

pc1n16 (mandatory)

16-bit ITU national point code with subfields *unit number sub number area main number area (un-sna-mna)*. This parameter allows up to 6 comma-delimited entries in the point code list.

Range:

p---, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (--).

prefix---p

un---000---127

sna---000---15

mna---000---31

mode (optional)

Mode of operation. This parameter specifies whether the message is discarded when an SCCP loop is detected.

Range:

notify

Generates a UIM without discarding the message.

discard

Generates a UIM and discards the message.

Default:

notify

Example

This example creates a new loopset using the default mode of *notify*.

```
ent-loopset:name=rtp1:pc1=3-3-3,5-5-5,7-7-7,3-4-3
```

This example creates a new loopset and sets the mode to *discard*.

```
ent-loopset:name=rtp2:mode=discard:pc1=3-3-3,5-5-5,7-7-7,3-4-3
```

This example creates a new loopset with four 16-bit ITU-N point codes.

```
ent-loopset:name=rtp1:pc1n16=3-3-3,5-5-5,7-7-7,3-4-3
```

Dependencies

The value of the `name` parameter cannot already exist in the database.

4577 E4577 Cmd Rej: Loop Set entry already exists

The SCCP Loop Detection feature must be enabled before this command can be entered.

4565 E4565 Cmd Rej: SCCP Loop Detection Feature is not enabled

The GTT feature must be turned on before this command can be entered.

2584 E2584 Cmd Rej: GTT feature must be ON

The Loopset table can hold a maximum of 1,000 loopset entries, with each entry containing up to 12 point codes. Additional loopset entries and point codes cannot be added when the table is full.

4566 E4566 Cmd Rej: LoopSet Table is full

The Loopset table must be accessible.

4567 E4567 Cmd Rej: Cannot access LoopSet table

The values for the `pc1` parameter must be unique.

4624 E4624 Cmd Rej: PCs in point code list must be unique

The `name=none` parameter cannot be specified.

4628 E4628 Cmd Rej: NONE is an invalid name for a loopset entry

At least one valid point code must be specified as a value for the `pc1` parameter.

4626 E4626 Cmd Rej: Must have at least 1 valid PC in a point code list

The values for the `pc1` parameter cannot consist of any invalid point codes. The valid point codes must be consecutively specified and separated by commas.

4627 E4627 Cmd Rej: Valid point codes must be continuous in point code list

Notes

There is no J7 FAK dependency on the `apcln16/rpcln16/pc1n16/npc1n16/pc2n16/npc2n16` parameters. The command can be entered successfully when the J7 FAK is not enabled.

There is no J7 FAK dependency on the `apcln24/rpcln24/pc1n24/npc1n24/pc2n24/npc2n24` parameters. The command can be entered successfully when the J7 FAK is enabled.

There is no J7 FAK dependency on the `apcl/ apcla/rpcla/pc1a/npc1a/pc2a/npc2a` parameters. The command can be entered successfully when the J7 FAK is enabled.

Output

The following example creates a new loopset and sets the mode to *discard*. `ent-loopset:name=rtp2:mode=discard:pc1=3-3-3,5-5-5,7-7-7,3-4-3`

```

r1ghncxa03w 07-02-10 08:31:28 EST  EAGLE Rel 35.6.0
LOOPSET table is (12 of 1000) 1% full
ENT-LOOPSET: MASP A - COMPLTD
;

```

Related Topics

- [chg-loopset](#)
- [dlt-loopset](#)
- [rtrv-loopset](#)

4.1.325 ent-ls

Use this command to add a linkset, with its assigned far-end point code and other linkset attributes, to the database.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

apc (mandatory)

ANSI adjacent destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

apca

Range:*p-*, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix-p-*When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.The point code *000-000-000* is not a valid point code.**apc/apca/apci/apcn/apcn24/apcn16 (mandatory)**

Adjacent point code. The DPC of the adjacent signaling node at the far end of the linkset.

apci (mandatory)ITU international adjacent destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).**Range:***s--*, *p--*, *ps--*, 0--255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix--s--, *p--*, *ps**zone--0-7**area--000--255**id--0--7*The point code *0--000--0* is not a valid point code.**apcn (mandatory)**ITU national adjacent destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s--*, *p--*, *ps--*, 0--16383, *aa--zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix--s--, *p--*, *ps**nnnnn--0--16383**gc--aa--zz**m1--m2--m3--m4---0--14* for each member; values must sum to 14**apcn24 (mandatory)**24-bit ITU national adjacent destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).**Range:***p---*, 000---255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix--p

msa---000---225

ssa---000---225

sp---000---225

apcn16 (mandatory)

16-bit ITU national point code with subfields *unit number sub number area main number area (un-sna-mna)*. The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--,000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000--127

sna---000--15

mna---000--31

lsn (mandatory)

Linkset name. Each linkset name must be unique in the system.

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

lst (mandatory)

Linkset type. The linkset type of the specified linkset as defined in Telcordia GR-246-CORE, T1.111.5.

Range:

a

Access links

b

Bridge links

c

Cross links

d

Diagonal links

e
Extended links

prx
Proxy links

adapter (optional)

The adapter layer for links provisioned in an IPSG linkset.

Range:

m3ua

m2pa

Default:

m2pa

apcntype (optional)

ITU-N Adjacent Point Code Type. The format used for changeover and changeover acknowledgement messages.

Range:

itun

ITU National Adjacent Point Code Type

itunchina

ITU National China Adjacent Point Code Type

Default:

itun

as18 (optional)

Adjacent SLS 8-bit indicator. This parameter specifies whether the adjacent node is sending MSUs with 8-bit SLSs.

Range:

yes

no

Default:

no

asnotif (optional)

AS notification. This parameter specifies whether AS notifications should be sent for IPSG-M3UA linkset.

Range:

yes

no

Default:

yes

bei (optional)

Broadcast exception indicator. This parameter specifies whether TFP (transfer prohibited) messages are allowed to be broadcast on the linkset.

Range:

yes

TFPs are not broadcast

no

TFPs are broadcast

Default:

no

cggtmod (optional)

Calling party GT modification indicator. This parameter specifies whether calling party global title modification is required for the specified linkset.

Range:

yes

no

Default:

no

cgpnblset (optional)

Calling party blacklist set

Range:

1-255, none

System Default:

none

chgntp3opc (optional)

Change MTP3 OPC. This parameter specifies whether to change MTP3 OPC with SPC. With this parameter off, OPC-to-SPC conversion will not take place and the outgoing MSU will have the original OPC.

Range:

on

off

Default:

on

c11i (optional)

Far-end Common Language Location Identifier (CLLI). The CLLI assigned to the linkset.

Range:

ayyyyyyyyyy

1 alphabetic character followed by up to 10 alphanumeric characters

Default:

CLLI of the adjacent point code

gnameset (optional)

Generic Name Set type. The new settype for an IPSG-M3UA linkset.

Range:

seta

setb

both

none

System Default:

none

gsmscrn (optional)

GSM MAP screening. This parameter specifies whether GSM MAP screening is allowed.

Range:

on

off

Default:

off

gttmode (optional)

Global title translation mode. The GTT Mode hierarchy for each link set.

Range:

cd

CdPA GTT only

cg

CgPA GTT only

acdcd

Advanced CdPA GTT, CdPA GTT

acdgcg

Advanced CdPA GTT, CgPA GTT, CdPA GTT

acdcdcg

Advanced CdPA GTT, CdPA GTT, CgPA GTT

cgacdcd

CgPA GTT, Advanced CdPA GTT, CdPA GTT

cgcd
CgPA GTT, CdPA GTT

sysdfflt
System wide default value

fcd
FLOBR CdPA only

fcg
FLOBR CgPA only

fcgfgd
FLOBR CgPA, FLOBR CdPA

fcdfcg
FLOBR CdPA, FLOBR CgPA

cdcg
CdPA GTT, CgPA GTT

Default:
sysdfflt

gwsa (optional)

Gateway screening action. This parameter specifies whether gateway screening is on or off for the specified linkset.

Range:

on

off

Default:
on —if *scrn* is specified
off —if *scrn* is not specified

gwsd (optional)

Gateway screening MSU discard. This parameter specifies whether the discarding of MSUs that bypass the gateway screening function due to load-shedding is on or off. This parameter is also used with the redirect function; MSUs that cannot be screened are discarded if *gwsd=on* is specified.

Range:

on

off

Default:
off

gwsmsg (optional)

Gateway screening messaging. This parameter specifies whether messages are generated for each message screened by gateway screening.

Range:*on, off***Default:***off***ipsg (optional)**

IP signaling gateway adjacent point code. This parameter specifies whether a linkset is entered for an IP SG card. The specified adjacent point code is an IP gateway adjacent point code.

Range:*yes**no***Default:***no***islrsb (optional)**

Incoming rotated signaling link selection (SLS) bit. The bit (1–4 for ITU and 1 – 8 for ANSI linksets) to rotate as the new SLS LSB (Least Significant Bit) of the incoming linkset. The SLS is not modified in the outgoing message.

[Table 4-32](#) shows how the rotation affects the four bits of the ITU SLS during linkset selection:

If This Bit is Selected...	Then Bit Locations 4 3 2 1 Are Rotated To...	Description
Bit 4	3 2 1 4	SLS = 0110 becomes Rotated SLS = 1100 SLS = 1011 becomes Rotated SLS = 0111
Bit 3	2 1 4 3	SLS = 0110 becomes Rotated SLS = 1001 SLS = 1011 becomes Rotated SLS = 1110
Bit 2	1 4 3 2	SLS = 0110 becomes Rotated SLS = 0011 SLS = 1011 becomes Rotated SLS = 1101
Bit 1	No rotation is performed because bit 1 is the existing LSB	-

[Table 4-33](#) shows how the rotation affects the eight bits of the ANSI SLS during linkset selection:

If This Bit is Selected...	Then Bit Locations 8 7 6 5 4 3 2 1 Are Rotated To...	Description
Bit 8	7 6 5 4 3 2 1 8	SLS = 10010110 becomes Rotated SLS = 00101101 SLS = 11001011 becomes Rotated SLS = 10010111

If This Bit is Selected...	Then Bit Locations 8 7 6 5 4 3 2 1 Are Rotated To...	
Bit 7	6 5 4 3 2 1 8 7	SLS = 10010110 becomes Rotated SLS = 01011010 SLS = 11001011 becomes Rotated SLS = 00101111
Bit 6	5 4 3 2 1 8 7 6	SLS = 10010110 becomes Rotated SLS = 10110100 SLS = 11001011 becomes Rotated SLS = 01011110
Bit 5	4 3 2 1 8 7 6 5	SLS = 10010110 becomes Rotated SLS = 01101001 SLS = 11001011 becomes Rotated SLS = 10111100
Bit 4	3 2 1 8 7 6 5 4	SLS = 10010110 becomes Rotated SLS = 11010010 SLS = 11001011 becomes Rotated SLS = 01111001
Bit 3	2 1 8 7 6 5 4 3	SLS = 10010110 becomes Rotated SLS = 10100101 SLS = 11001011 becomes Rotated SLS = 11110010
Bit 2	1 8 7 6 5 4 3 2	SLS = 10010110 becomes Rotated SLS = 01001011 SLS = 11001011 becomes Rotated SLS = 11100101
Bit 1	No rotation is performed because bit 1 is the existing LSB.	

This parameter is used for ITU or ANSI messages on a per-linkset basis.

Range:

1 - 8

ITU linksets— 1 - 4

ANSI linksets— 1 - 8

The `rsls8=yes` parameter must be specified (see the `chg-lsopts` command) before a value greater than 5 can be specified for the `islsrsb` parameter.

Default:

1

itutfr (optional)

ITU TFR (Transfer Restricted) procedure indicator. This parameter specifies whether the TFR procedure is on or off on a per-linkset basis. This parameter is valid for ITU national linksets only.

Range:

on

off

Default:*off***l3tset (optional)**

Link timer set. This parameter value is the value that is defined with the `chg-l3t` command.

Range:*1***Default:***1***lsusealm (optional)**

IPTPS linkset alarm threshold percent. The percent of the linkset TPS (IPTPS) at which an alarm is generated to indicate that the actual linkset TPS is approaching the configured IPTPS value for the linkset.

Range:*10 - 100***Default:***100***maxslktps (optional)**

Maximum per signaling link TPS. The maximum capacity a link is permitted when sufficient unused capacity is present on the host card.

**Note:**

This parameter can only be specified for links in IPSP linksets.

**Note:**

If the HIPR2 High Rate Mode feature is turned off, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 500,000. If the HIPR2 High Rate Mode feature is turned on, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 750,000. If the HIPR2 High Rate Mode and 1M System TPS features are turned on, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 1,000,000.

Range:*25 - 12,000*

 **Note:**

The maximum value that can be specified for this parameter depends on the type of IPSP card that is used:

- E5-ENET-B card when the E5-ENET-B IPSP High Throughput feature is turned off-6500 TPS
- E5-ENET-B card when the E5-ENET-B IPSP High Throughput feature is turned on-9500 TPS
- SLIC card - 12,000 TPS

System Default:

value of `slktps/rsvdslktps` parameter

mtprse (optional)

ANSI or ITU MTP Restart equipped. This parameter specifies whether the node adjacent to the linkset is equipped with MTP Restart.

Range:

yes
equipped

no
not equipped

Default:

no

multgc (optional)

Multiple group codes. This parameter specifies whether multiple group codes can be specified.

Range:

yes

no

Default:

no

nis (optional)

Network Indicator Spare. This parameter specifies whether the Network Indicator Spare option is on or off for the specified linkset. When this option is enabled, the Network Spare value for network indicator for both ANSI and ITU-National (ITU-N) links is supported by the system.

Range:

on

off

Default:*off***ppc (optional)**

ANSI proxy point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

The proxy point code must be a full point code.

Synonym:*ppca***Range:***000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

ppc/ppca/ppci/ppcn/ppcn24/ppcn16 (optional)

Proxy Point Code

The proxy point code must be a full point code.

ppci (optional)

ITU international proxy point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code.

Range:*s-, 0-255, none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*

Enter *none* to delete the point code.

The point code *0-000-0* is not a valid point code.

ppcn (optional)

ITU national proxy point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (*members*) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:*s-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-**nnnnn—0-16383**gc—aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

ppcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

ppcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area (un-sna-mna)*.

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

randsls (optional)

Random SLS (signaling link selection). This parameter is used to apply random SLS generation for the specified linkset.

The `randsls=perls` parameter must be specified in the `chg-stpopts` command before specifying the `randsls` parameter in the `ent-ls` command to enable random SLS generation on a per linkset basis.

Range:***off***

Disables random SLS generation on a specified linkset.

class0

Enables random SLS generation for Class0 SCCP traffic on a specified linkset.

all

Enables random SLS generation for Class0 and Class1 SCCP traffic on a specified ITU linkset and for Class0 and ISUP traffic on a specified ANSI linkset.

Default:

off

rcontext (optional)

Routing context. The new routing context for an IPSP-M3UA linkset.

Range:

0 - 4294967295

System Default:

none

scrn (optional)

Gateway screening screen set. The gateway screening screen set assigned to this linkset.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

none —Deletes screen set association with the linkset

s1ktps (optional)

Reserved per signaling link TPS for IPSP Linkset. The capacity guaranteed to each link in the linkset.

 **Note:**

This parameter is required for each link in an IPSP linkset. The parameter cannot be specified for links in non-IPSP linksets. The guaranteed capacity for the links hosted by an IPSP card cannot exceed the IPSP card capacity.

 **Note:**

If the HIPR2 High Rate Mode feature is turned off, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 500,000. If the HIPR2 High Rate Mode feature is turned on, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 750,000. If the HIPR2 High Rate Mode and 1M System TPS features are turned on, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 1,000,000.

Synonym:

rsvdsktps

Range:

0 - 12,000

 **Note:**

The maximum value that can be specified for this parameter depends on the type of IPSPG card that is used:

- E5-ENET-B card when the E5-ENET-B IPSPG High Throughput feature is turned off-6500 TPS
- E5-ENET-B card when the E5-ENET-B IPSPG High Throughput feature is turned on-9500 TPS
- SLIC card - 12,000 TPS

s1kusealm (optional)

IPTPS signaling link alarm threshold percent. The percent of the link TPS at which an alarm is generated to indicate that the actual link TPS is approaching the alarmed IPTPS (*s1ktps/rsvds1ktps* or *maxs1ktps*) configured for the link.

System Default:

80

s1sci (optional)

5-bit to 8-bit SLS conversion indicator. This parameter specifies whether the 5-bit to 8-bit SLS conversion feature is used to select links for outgoing messages direct to the given linkset. When enabled, the system replaces any 5-bit SLS values contained in received messages, with a random 8-bit value before the 5-bit SLS values are used by the STP to select the outgoing link in that linkset.

Range:

yes
enabled

no
disabled

Default:

no

s1socbit (optional)

Other CIC (Circuit Identification Code) Bit. If the SLSOCB feature is turned on, this parameter specifies whether the Other CIC Bit option is to be used during link selection. If the option is to be used, specify which bit (5– 16) of the CIC is to be used as the other CIC bit. During link selection, the specified bit acts as the most significant bit of the new SLS and bits 2 through 4 of the received CIC become the least significant bits of the new SLS. This parameter is used for ITU-ISUP messages. The SLS is not modified in the outgoing message. The following example shows a received CIC where bit 9 is the other CIC bit (*s1socbit=9*). The new SLS is 0100.

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
0	0	0	0	1	0	0	0	1	0	0	1	1	0	0	1
New SLS							0					1	0	0	

Range:

5 - 16, none

Default:*none***s1srsb (optional)**

Rotated signaling link selection (SLS) bit. The bit (1–4) to rotate as the new SLS Least Significant Bit (LSB). The SLS is not modified in the outgoing message. [Table 4-35](#) shows how the rotation affects the four bits of the SLS during linkset selection:

If This Bit is Selected...	Then Bit Locations 4 3 2 1 Are Rotated To...	Description
Bit 4	3 2 1 4	SLS = 0110 becomes Rotated SLS = 1100 SLS = 1011 becomes Rotated SLS = 0111
Bit 3	2 1 4 3	SLS = 0110 becomes Rotated SLS = 1001 SLS = 1011 becomes Rotated SLS = 1110
Bit 2	1 4 3 2	SLS = 0110 becomes Rotated SLS = 0011 SLS = 1011 becomes Rotated SLS = 1101
Bit 1	No rotation is performed because bit 1 is the existing LSB	-

This parameter is used for ITU messages on a per-linkset basis.

Range:*1 - 4***Default:***1***s1tset (optional)**

SLTM record. The SLTM record to be associated with the linkset.

Range:*0 - 20**0* –sets the linkset to SLT reflect mode**Default:***1 - ANSI**2 - ITU***spc (optional)**

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range:*000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001–005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.

The point code `000-000-000` is not a valid point code.

spc/spca/spci/spcn/spcn24/spcn16 (optional)

Secondary point code.

spci (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*

zone—0-7

area—000-255

id—0-7

The point code `0-000-0` is not a valid point code.

spcn (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

spcn24 (optional)

24-bit ITU national secondary point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

spcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:*000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*un---000---127**sna---000---15**mna---000---31***tpsalmtype (optional)**

IPSG IPTPS threshold alarm type. The IPTPS threshold that can be alarmed.

Range:*slktps*

the SLKTPS/RSVDSLKTPS threshold is alarmed

maxslktps

the MAXSLKTPS threshold is alarmed

System Default:*slktps***visualizedata (optional)**

Linkset based Visualization option.

Range:*off*

Visualization is off on this linkset

risky

Only risky opcodes (based on FS11) will be visualize on this linkset

all

All opcodes will be visualize on this linkset

System Default:*off***Example**

Adds linkset WY64438 with APC 144-201-1 AND LIST C:

```
ent-ls:lsn=wy644368:apc=144-201-001:lst=c
```

Adds linkset LSITUA1 with APCN 5 and LST C. The APCN uses a four-part format where the maximum number of bits in each position is defined by the `chg-stpopts:npcfmti` parameter:

```
ent-ls:lsn=lsitua1:apcn=5-5-5-1:lst=c
```

Adds linkset EXP123 with APCN 2-3-4-5-aa, which has a duplicate point code group of *aa* and linkset type *a*. The ITU national duplicate point code (ITUDUPPC) feature is turned on, so the ITU national point code contains a group code:

```
ent-ls:lsn=exp123:apcn=2-3-4-5-aa:lst=a
```

Add a linkset in which all applicable MSUs arriving on the linkset are screened using the GSM MAP screening feature:

```
ent-ls:lsn=lsitu1:apcn=5000:lst=a:gsmscrn=on
```

Adds linkset LSN24 with 24-bit ITU-N APCN24 10-100-10 and linkset type a:

```
ent-ls:lsn=lsn24:apcn24=10-100-10:lst=a
```

Adds linkset LSA2 with private APC p-1-2-4:

```
ent-ls:lst=a:lsn=lsa2:apc=p-1-2-4
```

Adds linkset LSN410234 with private and spare APCN ps-1-1-1-2047-aa:

```
ent-ls:lst=b:lsn=lsn410234:apcn=ps-1-1-1-2047-aa
```

Adds linkset LSI00001 with spare APCI s-1-1-209-7:

```
ent-ls:lst=b:lsn=lsi00001:apci=s-1-1-209-7
```

Adds linkset LSN24 with APCN24 10-100-10 with an APCNTYPE of *itunchina* and linkset type a:

```
ent-ls:lsn=lsn24:apcn24=10-100-10:lst=a:apcntype=itunchina
```

Adds linkset LSA using the global title translation mode CGACDCD:

```
ent-ls:lsn=lsa:lst=a:apca=1-1-1:gttmode=cgacdcd
```

Enables random SLS generation for Class0 and Class1 SCCP traffic on ITU linkset LSA:

```
ent-ls:lsn=lsa:lst=a:apci=1-1-2:randsls=all
```

Adds a linkset in which calling party global title modification is required for all GT routed MSUs arriving on the linkset:

```
ent-ls:lsn=ls2:apc=2-2-2:lst=a:cggmod=yes
```

Adds an IPSG-M3UA linkset:

```
ent-  
ls:lsn=ls1201:apc=10-10-10:lst=a:adapter=m3ua:ipsg=yes:slktps=1  
00
```

Adds an IPSG-M2PA linkset:

```
ent-ls:lsn=lsm2pa:apc=5-6-7:lst=c:ipsg=yes:slktps=300
```

Adds a linkset and sets the Incoming SLS Bit Rotation on the 2nd Bit:

```
ent-ls:lsn=lsa:lst=a:apci=1-1-2:islsrsb=2
```

Adds linkset LSA using GTT mode FCDFCG when the Flexible Option Based Routing (FLOBR) feature is turned on:

```
ent-ls:lsn=lsa:lst=a:apca=1-1-1:gttmode=fcdfcg
```

Adds ANSI linkset LSA and sets the Incoming SLS Bit Rotation to the 6th bit (the 6th bit in the SLS is used as the LSB):

```
ent-ls:lsn=lsa:lst=a:apca=1-1-1:islsrsb=6
```


Converts the linkset to SLT reflect mode:

```
ent-ls:lsn=ls1:lst=a:apca=1-1-1:sltset=0
```

Add linkset LS1 with 16-bit ITU-N APCN16 120-11-12 and sets linkset to SLT reflect mode:

```
ent-ls:lsn=ls1:lst=a:apcn16=120-11-12:sltset=0
```

Add linkset ls113 with gnameset=seta

```
ent-ls:lsn=ls113:gnameset=seta
```

Add linkset ls113 with cgpnblset=5

```
ent-ls:lsn=ls113:cgpnblset=5
```

Dependencies

The value specified for the `apc` parameter must be a full point code.

2859 E2859 Cmd Rej: Destination address must be a full point code

The specified adjacent point code cannot exist as an alias point code.

2332 E2332 Cmd Rej: Point code defined as an alias

If the `gwsa=on`, `gwsn=on`, and `gwsd=on` parameters are specified, the `scrn` parameter must be specified.

2336 E2336 Cmd Rej: GWSA, GWSM, GWSD are invalid without SCRSET specified

The specified adjacent point code cannot be the same as the self-ID destination point code of the STP.

2168 E2168 Cmd Rej: Point code matches a STP point code

The specified adjacent point code cannot be the same as any self-ID capability point codes of the STP.

2167 E2167 Cmd Rej: Point code matches a STP capability point code

If the system is configured for ANSI point codes, and the `nc=0` parameter is specified, then the value of the `ni` parameter must be 6 or greater.

2169 E2169 Cmd Rej: Point code out of range

The specified linkset name cannot already exist in the database.

2345 E2345 Cmd Rej: Linkset already defined

The specified adjacent point code cannot be assigned to any other linkset.

2343 E2343 Cmd Rej: Linkset APC/SAPC is already being used

The maximum number of linksets that can be defined in the system is 1024.

2347 E2347 Cmd Rej: Linkset table full

The specified screen set (`scrn` parameter) must exist in the database.

2361 E2361 Cmd Rej: Screen set name not defined

If the `gwsd=on` parameter is specified, the `gwsa=on` parameter must be specified.

2337 E2337 Cmd Rej: If GWSA=OFF then GWSD must also be OFF

If a destination point code matching the specified far-end point code exists, the far-end CLLI for the given linkset must match the destination identifier (DI) of that matching destination.

2335 E2335 Cmd Rej: CLLI is not identical to that of matching Destination

The `mtprse` parameter can be specified only if the MTP Restart feature MTPRS (for ANSI) is turned on. The `rtrv-feat` command can be used to verify whether the feature is turned on (`mtprs=yes` in the output).

2834 E2834 Cmd Rej: MTPRSE parameter is only valid if MTPRS feature is ON

If the `ipgwapc=yes` parameter is specified or the `ipsg=yes` and the `adapter=m3ua` parameters are specified, then the `mtprse=yes` parameter cannot be specified.

3781 E3781 Cmd Rej: MTP restart option invalid for IPGWx and IPGS-M3UA linksets

The `asl8=yes` parameter can be assigned only to an ANSI linkset (a linkset containing an adjacent point code in the SS7 domain).

2848 E2848 Cmd Rej: ASL8 is only valid for ANSI link sets

The `apcntype` parameter can be specified only for ITU-N and ITU-N24 linksets.

4278 E4278 Cmd Rej: APCNTYPE parameter is only valid for ITUN/ITUN24 link sets

The Other CIC (Circuit Identification Code) Bit Used feature (SLSOCB) feature must be turned on before the `slocbit` parameter can be specified.

3863 E3863 Cmd Rej: SLSOCBIT parameter not permitted if SLSOCB Feature is OFF

The `slocbit` parameter is valid only for ITU linksets.

3862 E3862 Cmd Rej: SLSOCBIT parameter is only valid for ITU Link Sets

The `slrsrb` parameter is valid only for ITU linksets.

3864 E3864 Cmd Rej: SLRSRB parameter is only valid for ITU Link Sets

The GSM Map Screening feature must be turned on (see the `enable/chg-ctrl-feat` commands) before the `gmscrn` parameter can be specified.

3883 E3883 Cmd Rej: GSM Map Screening feature must be ON

The `itutfr` parameter is valid only for ITU linksets.

3871 E3871 Cmd Rej: ITUTFR parameter is only valid for ITU link sets

The ITU National Duplicate Point Code (ITUDUPPC) feature must be turned on before the `multgc=yes` parameter can be specified.

4039 E4039 Cmd Rej: MULTGC=YES not allowed if ITUDUPPC feature is OFF

The `multgc=yes` parameter is valid only for ITU-N or ITU-I point codes.

4060 E4060 Cmd Rej: MULTGC=YES requires ITU-N or ITU-I point code

If the HIPR2 High Rate Mode feature is turned off, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 500,000. If the HIPR2 High Rate Mode feature is turned on, then the sum of the TPS values assigned

to all linksets in the system must be less than or equal to 750,000. If the HIPR2 High Rate Mode and 1M System TPS features are turned on, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 1,000,000.

4255 E4255 Cmd Rej: Total provisioned system TPS limit exceeded

The `ipgwapc=yes` or the `ipsg=yes` parameter must be specified before the `lsusealm` parameter can be specified.

4253 E4253 Cmd Rej: LSUSEALM allowed only for IPGWx and IP SG linksets

The `ipgwapc=yes` or the `ipsg=yes` parameter must be specified before the `slkusealm` parameter can be specified.

4254 E4254 Cmd Rej: SLKUSEALM allowed only for IPGWx and IP SG linksets

The Enhanced GSM Map Screening feature must be turned on before the `gmsmcrn=on` parameter can be specified for an ANSI linkset.

4285 E4285 Cmd Rej: Enhanced GSM Map Screening feature must be ON

The `mtpmse` parameter can be specified only if the MTP Restart feature ITUMTPRS (for ITU), is turned on. The `rtrv-feat` command can be used to verify whether the feature is turned on (`itumtps=yes` in the output).

3851 E3851 Cmd Rej: MTPRSE parameter is only valid if ITUMTPRS feature is ON

The STP Site ID table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The MAS Configuration table is corrupt or cannot be found.

2145 E2145 Cmd Rej: Failed reading MAS configuration table

A point code cannot be assigned to a linkset as an APC if the point code has been provisioned with exception routes.

4369 E4369 Cmd Rej: Cannot assign APC with exception routes to linkset

The Route Exception table is corrupt or cannot be found.

4379 E4379 Cmd Rej: Failed to access Route Exception Table

The Origin-based SCCP Routing feature must be turned on before the `gtmode` parameter can have a value of `acdc`, `cgacdc`, `acdcgc`, `acdcgcg`, `cgcd`, `cdcg`, or `cg`.

5096 E5096 Cmd Rej: Origin Based SCCP Routing feature must be ON.

If APCN is specified for the Adjacent Point Code then the format of APCN must match the format dictated by the NPCFMTI parameter via the CHG-STPOPTS command.

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

The value of the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter must exist in the Destination Point Code table.

2657 E2657 Cmd Rej: Point code not defined

The `gsmscrn` parameter can be specified only for ITU linksets.

3900 E3900 Cmd Rej: GSM Map Screening feature must be enabled

The value specified for the `spc` parameter must be a full point code.

3822 E3822 Cmd Rej: SPC must be a full point code

If the Multiple Linksets to a Single Adjacent Point Code (MLS) feature is enabled and turned on, then a maximum of 6 non-IPGW linksets can be created using the same adjacent point code.

4632 E4632 Cmd Rej: Max linksets to same APC exceeded

The values specified by the `spc` and `apc` parameters must have the same network type.

3821 E3821 Cmd Rej: SPC & DPC must be the same network type

The Multiple Linksets to a Single Adjacent Point Code (MLS) feature must be turned on before the `spc` parameter can be specified.

4631 E4631 Cmd Rej: Multiple Linksets to Single Adjacent PC feature must be ON

The value specified by the `spc` parameter must already exist in the SPC table.

3814 E3814 Cmd Rej: SPC does not exist

The SPC table must be accessible.

3807 E3807 Cmd Rej: Failed reading Secondary Point Code (SPC) table

The specified combination of the `apc` and `spc` parameters must be unique for each linkset.

4760 E4760 Cmd Rej: Linkset APC/SPC pair is already being used

The value specified for the `spc` parameter cannot already be specified as a secondary point code for an adjacent destination point code.

4636 E4636 Cmd Rej: SPC may not exist as an SPC in the route table for the APC

The Proxy Point Code feature must be enabled before the `lst=prx` parameter can be specified.

4695 E4695 Cmd Rej: LST=PRX is valid only if PPC feature is enabled

The Proxy Point Code feature must be enabled before the `ppc` parameter can be specified.

4678 E4678 Cmd Rej: PPC allowed only if PPC feature is enabled

The value specified for the `ppc` parameter must be a full point code.

4696 E4696 Cmd Rej: PPC must be a full point code

The `lst=prx` parameter must be specified before the `ppc` parameter can be specified. If the `lst=prx` parameter is specified, then the `ppc` parameter must be specified.

4689 E4689 Cmd Rej: PPC must be specified if and only if linktype is PRX

The values specified for the `apc` and `ppc` parameters must have the same network type.

4697 E4697 Cmd Rej: PPC and APC must be of the same network type

The values specified for the `apc` and `ppc` parameters must have the same group code.

4698 E4698 Cmd Rej: Group code of PPC and APC must match

The `spc` and `ppc` parameters cannot be specified together in the command.

4694 E4694 Cmd Rej: APC must not use SPC and PPC together

The `ppc` parameter cannot be specified for more than 10 linksets.

4690 E4690 Cmd Rej: Cannot use one PPC for more than 10 linksets

Two adjacent point codes cannot reference each other as proxy point codes.

4691 E4691 Cmd Rej: Two point codes must not refer each other as PPC

The `apc` parameter and the `prx=yes` parameter must be specified before the `ppc` parameter can be specified.

4724 E4724 Cmd Rej: Proxy PC not defined in route(dstn) table

A valid value must be specified for the `lst` parameter.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

The `spc` and `ppc` parameters cannot be specified together in the command.

4681 E4681 Cmd Rej: SPC and PPC are mutually exclusive

All of the linksets for an adjacent destination point code must be of the same type.

4758 E4758 Cmd Rej: Linkset types must match for all linksets to the same APC

The specified combination of the `apc` and `ppc` parameters must be unique for each linkset.

4729 E4729 Cmd Rej: Linkset APC/PPC pair is already being used

The value specified for the proxy point code must be defined in the Destination table before the `lst=prx` parameter can be specified.

4688 E4688 Cmd Rej: LST=PRX if & only if APC uses PPC in route(dstn) table

If multiple linksets are defined for the `apc` parameter, and if a proxy point code is defined for the `apc` parameter, then the first linkset defined in the `ent-ls` command must use the proxy point code.

4692 E4692 Cmd Rej: One LS must use PPC assigned to APC in route(dstn) table

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the `cggmod` parameter can be specified.

4789 E4789 Cmd Rej: Either AMGTT or AMGTT CgPA Upgrade feature must be ON

The `ipsg=yes` parameter must be specified before the `adapter` parameter can be specified.

4658 E4658 Cmd Rej: ADAPTER can only be specified when IPSP=YES

The `ipsg=yes` and `adapter=m3ua` parameters must be specified before the `asnotif` parameter can be specified.

4666 E4666 Cmd Rej: ASNOTIF prohibited unless IPSP=YES and ADAPTER=M3UA

The `ipsg=yes` and the `adapter=m3ua` parameters must be specified before the `rcontext` parameter can be specified.

4659 E4659 Cmd Rej: RCONTEXT prohibited unless IPSP=YES and ADAPTER=M3UA

If the `ipsg=yes` parameter is specified, then the `slktps/rsvdslktps` or `maxslktps` parameter must be specified.

4812 E4812 Cmd Rej: SLKTPS is required for IPSP linksets

The `ipsg=yes` parameter must be specified before the `slktps/rsvdslktps` or `maxslktps` parameter can be specified.

4811 E4811 Cmd Rej: SLKTPS is prohibited for non-IPSP linksets

The `ipsg=yes` and `adapter=m3ua` parameters must be specified before the `lst=a` parameter can be specified.

4667 E4667 Cmd Rej: IPSP=YES and ADAPTER=M3UA requires LST=A

A maximum of one IPGW linkset or a maximum of 6 of any other linksets are allowed between any APC and the EAGLE.

4632 E4632 Cmd Rej: Max linksets to same APC exceeded

If the `ipsg=yes` and `adapter=m3ua` parameters are specified, then the `multgc=yes` parameter cannot be specified.

4826 E4826 Cmd Rej: MULTGC is prohibited on IPSP-M3UA linksets

The ISLSBR feature must be enabled before the `islsrsb` parameter can be specified.

5025 E5025 Cmd Rej: islsrsb is valid only if ISLSBR Feature is enabled

The FLOBR feature must be turned on before a value of `fcd`, `fcg`, `fcgfc`, or `fcdfcg` can be specified for the `gttmode` parameter.

5060 E5060 Cmd Rej: Flexible Linkset Optional Based Routing must be ON

The SAPC table is corrupt or cannot be found.

3282 E3282 Cmd Rej: Failed reading the SAPC table

The `rsls8=yes` parameter (see the `chg-lsopts` command) must be specified for an ANSI linkset before a value greater than 5 can be specified for the `islsrsb` parameter.

5089 E5089 Cmd Rej: ISLSRSB value must be < 6 when RLS8 is no

If an ITU linkset is used, then a value of 1 – 4 must be specified for the `islsrsb` parameter.

5044 E5044 Cmd Rej: For ITU link sets, ISLSRSB must be in the range (1-4)

The value specified for the `slktps/rsvdslktps` parameter must be less than or equal to the value specified for the `maxslktps` parameter.

5075 E5075 Cmd Rej: SLKTPS/RSVDSLKTPS must be less than or equal to MAXSLKTPS

The value specified for the `ppc` parameter must already exist in the DSTN table and the `prx=yes` parameter must be assigned (see the `ent-dstn` command).

4728 E4728 Cmd Rej: PPC destination in route(dstn) table is not proxy

The `sltset=0` parameter can be specified only for a type A linkset (`lst=a`).

5412 E5412 Cmd Rej: Linkset type must be A for SLTSET=0

The value specified for the `slktps/rsvdslktps` and `maxslktps` parameters must be within the allowed range.

4806 E4806 Cmd Rej: TPS exceeded allowed range

The ITUTFR **cannot** be specified for a linkset to be configured for APCN16.

3047 E3047 Cmd Rej: Parameter combination invalid.

The NIS **cannot** be specified for a linkset to be configured for APCN16.

3047 E3047 Cmd Rej: Parameter combination invalid.

The PPC specified must not be a private point code.

4722 E2722 Cmd Rej: PPC not supported for Private PC

The MTP Restart Equipped (MTPRSE) parameter is only valid for adjacent ANSI nodes in the SS7 domain.

2835 E2835 Cmd Rej: MTPRSE is only valid in the SS7 domain

The adapter type specified must be either `m3ua` or `m2pa`.

4074 E4074 Cmd Rej: Could not locate adapter type

Notes

Of the 1024 maximum linksets supported, up to 255 of the linksets can be gateway linksets.

The system supports a maximum of 2800 links and all of them can be used at one time.

The links that directly connect the system with an adjacent node are grouped into one or more linksets. A linkset can contain up to 8 (international standards) or 16 (national standards) signaling links, depending on how the system was configured when the network was created.

Each linkset must be assigned the same physical links at both ends of the link (local and adjacent signaling points) and each link must be assigned the same link number.

Signaling link acknowledgments (SLTA) are the same type of maintenance message as the SLTMs received on the link.

If the `gwsa=off` and `gws=off` parameters are specified, all MSUs are passed.

If the `gwsa=off` and `gwsm=off` parameters are specified for all linksets, gateway screening and the GWS redirect function for the DTA feature are disabled.

If the `gwsa=off` and `gwsm=on` parameters are specified, all MSUs pass, but MRNs are generated if an MSU matches a screening condition.

If the `gwsa=on` and `gwsm=off` parameters are specified, MSUs are screened but messages are not generated.

If the `gwsa=on` and `gwsm=on` parameters are specified, MSUs are screened and MRNs are generated at the rate of one MRN every 20 seconds per link.

If the `asl8=yes` parameter is specified with the `lst=a` parameter (a linkset containing access signaling links), this indicates that the originator of the MSUs is generating 8-bit SLSs. For other linkset types, the `asl8=yes` parameter indicates that the adjacent STP is converting 5-bit SLSs to 8-bit SLSs. The SLS in MSUs received by the system on a linkset that has the `asl8=yes` parameter assigned to it will not be converted. These MSUs are assumed to contain 8-bit SLSs.

The Network Indicator Spare (`nis`) parameter can be specified only for ANSI and ITU-N links.

The `mtprse` parameter value can be specified independently of the value specified on the `mtprsi` parameter of the `chg-stpopts` command.

The MTP restart option (`mtprse`) is not a valid option on point-to-multipoint IP links (DCM cards equipped as SS7IPGW links).

When two linksets are used as a combined linkset, each linkset must have the same `slsci` and `asl8` values and the same `slsocbit` and `slsrsb/slsrsb` values.

Caution:

This is not enforced in the system and there is no warning mechanism if the values of these parameters are not the same for each linkset.

MTP restart provides an orderly process for bringing signaling links back into service after the system has been isolated and restarted. A greater preference is given to restoring the STP to network service in an orderly fashion than to the speed of recovery. The time required is system dependent as shown:

- up to 64 LIMs—62 seconds (Link Alignment Delay)
- 64 - 127 LIMs—97 seconds
- 128 - 191 LIMs—132 seconds
- more than 191 LIMs—167 seconds

The `slsrsb` parameter alone does not provide an even distribution of ITU-ISUP messages across all links within a linkset. The system uses all four bits of the SLS to determine the actual link to route messages. Because the static bit is simply rotated within the SLS, all possible values of the SLS field are still not realized. The `slsocbit` parameter must also be specified to provide an even distribution across all links within the linkset. If both parameters are specified for a given linkset, the SLS field is processed in the following order.

- The SLS is modified using the Other CIC Bit option.

- The modified SLS is modified again using the Rotated SLS Bit option.
- The modified SLS is used by the existing linkset and link selection algorithms to select a link
- The ISUP message is sent out the link containing the original, unmodified SLS field.

If the ITU National Duplicate Point Code (ITUDUPPC) feature is turned on, for each group that is defined, a separate ITU national C linkset must be provisioned. The C linkset is used as the alternate route for point codes in the group.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All point code types support the private (internal) point code subtype prefix (p-).

The ITU National and ITU National China Adjacent Point Code types indicate the format that is used for changeover and changeover acknowledgement messages. China specifies a 16-bit field for data in changeover messages. The FSN occupies the first 12 bits. The trailing 4 bits are spare and are coded as 0. ITU uses a 24-bit field for data in the extended changeover/changeover acknowledgement messages. The FSN is encoded in the first 12 bits. The last 12 bits of the field are spare and are coded as zero.

The `randsls` parameter value applies to SCCP ITU-T messages and Class0 and ISUP ANSI messages when random SLS generation is set to occur on a per linkset basis (the `randsls=perls` parameter is specified in the `chg-stpopts` command).

If the `randsls=perls` parameter is specified in the `chg-stpopts` command, it is recommended that the linksets in a combined linkset be provisioned with the same `randsls` value to avoid undesired SLS distribution.

The value specified for the `ppc` parameter must be a full point code. Cluster point codes and private point codes are not supported.

Invalid point codes (ANSI network = 0) can be used for the adjacent point code of an IPGWx linkset. Private point codes (p-) can be used for IPGWx linksets, as adjacent point codes (`ent-ls:apc=xxx`) or internal point codes (`ent-rmt-appl:ipc=xxx`). Ordinary point codes can be used in all cases as APCs or IPCs.

If the ISLSBR feature is turned on, and Incoming SLS Bit Rotation is applied to an MSU, then the outgoing SLS bit rotation is not applied for that MSU. If the ISLSBR feature is turned off, or Incoming SLS Bit Rotation is not applied to an MSU, then the outgoing SLS bit rotation is applied for that MSU.

The valid ISLSRSB values for ITU link sets are 1 – 4 and for ANSI link sets are 1 – 8.

The `randsls` parameter is applied on an incoming linkset for ANSI messages and on an outgoing linkset for ITU messages.

The `chgntp3opc` parameter is applied on the outgoing linkset.

The `chgntp3opc` parameter will be nullified if the `sccpopts:mtprggt` option is set to `fullggt`.

Output

```
ent-ls:lsn=lsa:lst=a:apca=1-1-1:gttmode=fcdfcg
```

```
tekelecstp 09-03-22 12:14:11 EST EAGLE 41.0.0  
Link set table is (1 of 1024) 1% full.
```

```
ENT-LS: MASP A - COMPLTD  
;
```

Related Topics

- [chg-ls](#)
- [chg-lsopts](#)
- [dlt-ls](#)
- [ent-dstn](#)
- [rtrv-ls](#)

4.1.326 ent-map

Use this command to create new entries in the MAP table, which allow the assignment of mated applications and Alternate RI Mate searches for use with SCCP network management. A mated application is used if the local application becomes unavailable. An Alternate RI Mate is used if all mated applications within a MAP Set become unavailable or congested.

Note:

A MAP set is a logical grouping of a set of PC/SSNs that already exist in the EAGLE MAP table. The Flexible GTT Load Sharing (FGTTLs) feature allows a PC/SSN combination to be part of more than one load-sharing group, with each PC/SSN combination defined by a different MAP set.

Note:

If the FGTTLs feature is enabled, then all existing entries in the MAP table and all existing GTA translations in the GTT table with ri=ssn are stored in default MAP sets. Additional MAP sets can be provisioned, and GTT entries can be associated to the MAP sets.

Note:

The GTT Load Sharing with Alternate Routing Indicator (GTT LS ARI) feature must be enabled to provision Alternate RI Mates.

Parameters

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

pc (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24/pcn16 (mandatory)

Primary remote point code.

pci (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:*000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*msa—000–255**ssa—000–255**sp—000–255***pcn16 (mandatory)**

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:*000---127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (--).

*un---000---127**sna---000---15**mna---000---31***ssn (mandatory)**

Subsystem number. The application's subsystem number. This attribute is composed of the decimal representation of the 1-byte field used in the SS7 protocol.

Range:*2 - 255***grp (optional)**

Concerned point code broadcast list (CSPC) group name. The name of a group of point codes that should be notified of the subsystem status. A different CSPC group can be assigned to each mated PC/SSN. For ANSI, the EAGLE broadcasts SSP or SSA to the mate subsystem only if the mate's point code is provisioned as part of the CSPC group to receive an SSP or SSA. This parameter must be provisioned for a node if the node is to receive SSP or SSA broadcasts, even if the node is a mated application.

Range:*ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters

Default:

Current value.

 **Note:**

If the `grp` parameter value is specified, and the specified point code and SSN is assigned to multiple mated applications, the `grp` value for all mated applications containing the specified point code and SSN will be changed to the values specified in this procedure.

mapset (optional)

MAP Set ID.

Range:

dflt

new

Default:

dflt if the FGTTLS feature is not enabled

materc (optional)

Mate relative cost. The RC assigned to the mate PC/SSN that is being added to the entity set. The EAGLE determines the multiplicity mode based on the relative costs (the `rc` and `materc` parameters) of the subsystem.

Range:

0 - 99

Default:

50

mpc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

mpca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001–005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

Default:

000

mpc/mpca/mpci/mpcn/mpcn24/mpcn16 (optional)

Mate remote point code.

mpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

Default:

0-000-0

mpcn (optional)

ITU national point code with subfield ITU number (*nnnnn*). The *prefix* subfield indicates a spare point code.

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Default:

00000

mpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Default:

000

mpcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (--).

un---000---127

sna---000---15

mna---000---31

Default:

000

mrnc (optional)

Message routing under congestion. This parameter indicates whether Class 0 messages to the specified PC/SSN can be routed to the next preferred node/subsystem when that PC/SSN is congested.

Range:

yes

no

Default:

yes —if ANSI

no —if ITU

mrnpc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

mrnpca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

Default:

000

mrnpc/mrnpca/mrnpai/mrnpai/mrnpai24/mrnpai16 (optional)

Alternate RI Mate point code.

mrnpai (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s
zone—0-7
area—000-255
id—0-7

The point code 0-000-0 is not a valid point code.

Default:

0-000-0

mrnpcn (optional)

ITU national point code with subfield ITU number (*nnnnn*). The *prefix* subfield indicates a spare point code.

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-
nnnnn—0-16383
gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Default:

00000

mrnpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255
ssa—000-255
sp—000-255

Default:

000

mrnpcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000--127

Specify a valid value for each subfield of the point, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna--000--31

Default:

000

mrnset (optional)

Alternate RI Mate MRN Set ID. The MRN Set where the Alternate RI Mate search is performed.

Range:

1 - 3000, dflt

dflt —default MRN Set

If the `mrnpc` parameter is specified, and the `mrnset` parameter is not specified, then the value for the `mrnset` parameter is automatically set to *dflt*.

mssn (optional)

Mate subsystem number. The mate application's subsystem number. This attribute is the decimal representation of the one-byte field used in the SS7 protocol.

Range:

2 - 255

Default:

Parameter is not used

mwt (optional)

Mate point code weight. The weight assigned to the mate PC/SSN that is being added to a weighted entity set.

Range:

1 - 99

rc (optional)

Relative cost. The EAGLE determines the multiplicity mode based on the relative costs (the `rc` and `materc` parameters) of the subsystem. (See *Notes* for additional information on multiplicity modes).

Range:

0 - 99

Default:

10

srm (optional)

Subsystem routing messages. This parameter specifies whether subsystem routing messages (SBR, SNR) are transmitted between the mated applications.



Note:

This value can be provisioned in any of the multiplicity modes, but its value only affects traffic if the multiplicity mode is *DOM* or *COM*. See the *Notes* section for more information on multiplicity modes.

Range:*yes**no***Default:***yes* —if ANSI*no* —if ITU**sso (optional)**

Subsystem status option. This parameter specifies whether or not the PC/SSN is to initiate a subsystem test when a RESUME is received for the PC.

Range:*on**off***Default:***off***thr (optional)**

Threshold. The in-service threshold assigned to each PC/SSN in a weighted entity set or RC group. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

**Note:**

If this parameter is not specified, a value of 1% is assigned to each weighted PC/SSN.

Range:*1 - 100***wt (optional)**

Weight. The weight assigned to the primary PC/SSN that is being added to the weighted entity set.

Range:*1 - 99***Example**

In this example, the `rc` parameter is not required for a solitary PC/SSN pair. If the `rc` parameter is not specified, the relative cost defaults to 10.

```
ent-map:pc=1-1-1:ssn=10:grp=xyz
```

This example enters 1 and 1 into the MAP table. The `rc` and `materc` parameters are required for this command, which defines a map group.

```
ent-
```

```
map:pc=1-1-0:ssn=10:rc=10:mpc=1-1-1:mssn=10:materc=20:grp=xyz:s  
rm=on
```

These examples enter a solitary point code in the MAP table with the Subsystem Status Option set to ON:

```
ent-map:pc=1-1-3:ssn=20:grp=abc:sso=on
```

```
ent-map:pc=2-2-3:ssn=20:grp=abc
```

This example sets the Subsystem Status Option to ON for the primary and mate:

```
ent-map:pc=1-1-4:ssn=10:rc=10:mpc=1-1-1:mssn=10:materc=20:sso=on
```

This example enters a solitary point code in the MAP table with the Subsystem Status Option set to OFF (the default):

```
ent-map:pc=1-1-6:ssn=10:rc=10:mpc=1-1-7:mssn=10:materc=20
```

This example creates a new MAP Set with Alternate RI Mate 1-1-3/1:

```
ent-
```

```
map:pc=1-1-1:ssn=15:rc=10:mpc=1-1-2:mssn=25:materc=20:mapset=new:mrnset=1:mrnpc=1-1-3
```

The following example creates a new MAP set, and enters 1 and 1 into the newly created MAP set:

```
ent-map:pc=1-1-1:ssn=10:rc=10:mpc=1-1-2:mssn=20:materc=20:mapset=new
```

The following example enters 1 and 1 into the default MAP set:

```
ent-
```

```
map:pc=1-1-1:ssn=15:rc=10:mpc=1-1-2:mssn=25:materc=20:mapset=df1t
```

The following example creates a new MAP set and enters a solitary PC/SSN value of 1:

```
ent-map:pc=1-1-1:ssn=10:mapset=new
```

This example enters a solitary PC/SSN of 1 into the default MAP set:

```
ent-map:pc=1-1-2:ssn=15:mapset=df1t
```

This example creates a new MAP set and enters a solitary PC/SSN 1 with the subsystem option ON. It specifies the `sso=on` parameter for all instances of PC/SSN 1:

```
ent-map:pc=1-1-1:ssn=10:sso=on:mapset=new
```

This example enters a solitary PC/SSN of 1 into the default MAP set with the subsystem option ON. The `sso=on` parameter is specified for all instances of PC/SSN 1:

```
ent-map:pc=1-1-3:ssn=15:sso=on:mapset=df1t
```

These examples create a weighted shared PC/SSN pair:

```
ent-
```

```
map:pc=1-1-1:ssn=10:rc=20:wt=30:mpc=1-2-1:mssn=10:materc=20:mwt=20
```

```
ent-
```

```
map:pc=1-1-1:ssn=10:rc=20:wt=30:mpc=1-2-1:mssn=10:materc=20:mwt=20:thr=40
```

This example creates a new MAP Set with a different ITU network type point code for the Alternate RI Mate PC:

```
ent-
```

```
map:pci=1-001-1:ssn=15:rc=10:mpci=1-001-2:mssn=25:materc=20:mapset=new:mrnpcn=00126:mrnset=2
```

Example for 16 bit PC:

```
ent-  
map:pcn16=1-2-3:ssn=10:rc=20:wt=30:mpcn16=1-1-1:mssn=10:materc=  
20:mwt=20:thr=40
```

Dependencies

The PC/SSN pair cannot already exist in the MAP table.

2440 E2440 Cmd Rej: Primary PC/SSN pair already exists

The specified MPC/MSSN pair cannot already exist in the MAP table.

2431 E2431 Cmd Rej: MPC/MSSN pair already exists

The `apca` and `pcn24/pcn16` parameters cannot be specified for the same MAP set. The `pci` and `pcn` parameters cannot be specified for the same MAP set if the MAP set contains a true point code.

2429 E2429 Cmd Rej: MPC network type does not match PC network type

If a subsystem is configured for a subsystem number (SSN) value in the SS-APPL table, then the specified MAP table entry for that subsystem must be a valid point code type for that subsystem. The following point code types are not valid for the indicated subsystems:

- For the INP subsystem, the True Point code cannot be an ITU-I point code.
- For the AIQ, ATINPQ, VFLEX, and EIR subsystems, the True Point code cannot be an ITU-N24 point code.

4189 E4189 Cmd Rej: Invalid PC type for the subsystem associated with SSN value.

The ANSI/ITU SCCP Conversion feature must be enabled before the network type of the CPC broadcast group can be different from the network type of the point code.

2449 E2449 Cmd Rej: CSPC group network type does not match PC network type

If the `pci`, `pcn`, or `pcn24/pcn16` parameter is specified, then the `srn=yes` parameter cannot be specified.

2424 E2424 Cmd Rej: SRM=YES cannot be entered with ITU point code types

The primary remote point code must already exist in the Route table, as a destination in the ordered route entity set, or in a cluster destination for which ordered routes are specified.

2451 E2451 Cmd Rej: Primary remote PC does not exist in routing table

If a CSPC broadcast list group name is specified, it must already exist.

2411 E2411 Cmd Rej: CSPC group does not exist

A maximum of 1024 unique remote point codes are allowed.

2454 E2454 Cmd Rej: Remote point code table is full

A maximum of 12 SSNs per remote point code can be entered.

2453 E2453 Cmd Rej: Subsystem table for primary remote point code is full

The primary subsystem DPCs must be full point codes.

2864 E2864 Cmd Rej: Address (PCx) of primary subsystem must be a full PC

The mate subsystem DPCs must be full point codes.

2865 E2865 Cmd Rej: Address (MPCx) of mate subsystem must be a full PC

The LNP, V-Flex, EIR, or INP feature must be turned on or the ANSI41 AIQ or ATINP feature must be enabled before a value that is a true point code can be specified for the `pca/mpca` parameter.

4716 E4716 Cmd Rej: LNP/VFLEX/EIR/INP must be ON or ATINP/AIQ must be enabled

The AINPQ, EIR, INP, or V-Flex feature must be turned on or the ANSI41 AIQ or ATINP feature must be enabled before a value that is a true point code can be specified for the `pcn/mpcn` parameter.

4183 E4183 Cmd Rej: INP/AINPQ/EIR/VFLEX must be ON or ATINP/AIQ must be enabled

The EIR or V-Flex feature must be turned on or the ANSI41 AIQ or ATINP feature must be enabled before a value that is a true point code can be specified for the `pai/mpai` parameter.

4717 E4717 Cmd Rej: EIR/VFLEX must be ON or ATINP/AIQ must be enabled

If the `mpc/mpca/mpci/mpcn/mpcn24/mpcn16` parameter is specified, then the value must exist in the Routing table.

2427 E2427 Cmd Rej: MPC does not exist in routing Table

If the `mssn` or `materc` parameter is specified, then the `mpc` parameter must be specified.

2432 E2432 Cmd Rej: MSSN or MATERC entered, MPC must also be given

If the `pc` parameter value is an EAGLE true point code, the subsystem must have a lower relative cost than all other mated subsystems in the group.

2990 E2990 Cmd Rej: Relative Cost (RC) of true PC must be less than RC of mate

The `ssn` parameter cannot be specified with a point code value that is the system true point code.

3466 E3466 Cmd Rej: SSO parameter is not compatible with True PC

A true point code cannot be routed to itself.

2994 E2994 Cmd Rej: True Point Code may not be routed to self

The `mpc` and `mssn` parameters cannot have the same values as the `pc` and `ssn` parameters.

2425 E2425 Cmd Rej: Mate PC/SSN cannot be same as PC/SSN

The point code must already exist in the Concerned Point Code (CSPC) group.

2414 E2414 Cmd Rej: PC does not exist in CSPC group

The number of MPC Subsystem entries must not exceed the table capacity.

2430 E2430 Cmd Rej: Subsystem table for MPC is full

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The Site Identification table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

If the Flexible GTT Load Sharing feature is not enabled, then the `mapset` parameter cannot be specified. If the Flexible GTT Load Sharing feature is enabled, then the `mapset` parameter must be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The EAGLE True PC can be provisioned only in the default MAP set.

4608 E4608 Cmd Rej: True Point Code can exist only in Default MAPSET

The Weighted GTT Loadsharing feature must be turned on before the `wt`, `mwt`, or `thr` parameters can be specified.

3370 E3370 Cmd Rej: Weighted GTT Load-Sharing feature must be ON.

If the `thr` parameter is specified, the `wt` and `mwt` parameters must be specified.

3386 E3386 Cmd Rej: WT and MWT must be specified with THR

If the `mpc` parameter is specified, the `rc` parameter must be specified.

2989 E2989 Cmd Rej: RC must be specified for PC since MPC is specified

The `wt` and `mwt` parameters must be specified together in the same command.

3387 E3387 Cmd Rej: WT and MWT must be specified together

If the `materc` parameter value equals the `rc` parameter value, a Loadshared Group is indicated, and the `rc`, `mpc`, `materc`, and `mwt` parameters must be specified.

3385 E3385 Cmd Rej: Weight can't be specified to create SOL or DOM groups.

If the `chg-sid:pctype=ansi` command is entered, a value of `ni=000` cannot be specified.

If the `chg-sid:pctype=ansi` command is entered, and a value of `ni=001 – 005` is specified, a value of `nc=000` cannot be specified.

2169 E2169 Cmd Rej: Point code out of range

If the `mpc` parameter value is a true point code, the subsystem must have a lower RC than all other mated subsystems in the entity set.

2991 E2991 Cmd Rej: Relative Cost (RC) of true MPC must be less than RC of mate

The maximum number of entries in the MAP table cannot be exceeded.

4526 E4526 Cmd Rej: MAP table is full

The maximum number of possible entries in the MAP table for the specified True Point Code cannot be exceeded. Maximum entries for the ANSI, ITU-I, and ITU-N point codes are:

- ANSI—2 (ANS41 AIQ and LNP), 4 (ANSI41 AIQ, ATINPQ, INP, and V-FLEX)
- ITU-I—4 (ANSI41 AIQ, ATINPQ, EIR, V-FLEX)
- ITU-N—5 (ANSI41 AIQ, ATINPQ, EIR, INP, and V-FLEX)

**Note:**

LNP is mutually exclusive with ATINPQ and V-FLEX, unless the Dual ExAP Config feature is enabled.

3290 E3290 Cmd Rej: True PC already exists in MAP table

If the `mwt` parameter is specified, the `mpc` parameter must be specified.

3393 E3393 Cmd Rej: MPC must be specified since MWT is specified

If the `mpc` parameter is specified, the `mssn` and `materc` parameters must be specified.

2992 E2992 Cmd Rej: MSSN and MateRC must be specified since MPC is specified

The entity set being created must be either solitary or dominant to use the true point code as a point code.

2987 E2987 Cmd Rej: The TPC can be used only when creating a SOL or DOM group

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

If the `thr` parameter is specified, the `rc1`, `rc2`, `rc3`, and `rc4` parameters must be of equal value.

3372 E3372 Cmd Rej: All specified RC values must be equal

If the `mpc` parameter is specified, then the `mssn` parameter must be specified.

2428 E2428 Cmd Rej: MPC entered, MSSN must also be given

SRM=YES cannot be entered with ITU point codes.

2424 E2424 Cmd Rej: SRM=YES cannot be entered with ITU point code types

If the `mpc` or `mssn` parameter is specified, then the `materc` parameter must be specified.

2985 E2985 Cmd Rej: Mate Relative Cost (MateRC) required if MPC/MSSN is entered

If the `pc/ssn` parameters and the `mpc/mssn` parameters are specified, then the `rc` parameter must be specified.

2986 E2986 Cmd Rej: Relative Cost (RC) is required for PC/SSN and MPC/MSSN

If the `pcn` or `mpcn` parameter is specified, then the format of the parameter must match the format dictated by the `chg-stpopts:npcfmti` command.

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

A True PC cannot be routed to itself.

2993 E2993 Cmd Rej: True Point Code must remain primary entity

The Spare Point Code Support feature must be enabled to allow provisioning of an ITU-I or ITU-N spare point code.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The True Point Code can be provisioned only in the default MAPSET.

4555 E4555 Cmd Rej: Version parameter not supported for SUA or M3UA

Unable to access database. Severe database failure.

2416 E2416 Cmd Rej: Unable to access database. Severe database failure

Failed reading SS APPL table.

3124 E3124 Cmd Rej: Failed Reading LNP SS Appl table

The values specified for the `pc` and `npc` parameters cannot be associated with proxy point codes.

4707 E4707 Cmd Rej: PRX using DPC not allowed in GTT, MAP, MRN tables

If the `mrnset` parameter is specified, then the `mrnpc` parameter must be specified.

5043 E5043 Cmd Rej: MRNPC must be specified when MRNSET is specified

The GTT LS ARI feature must be enabled before the `mrnset` or `mrnpc` parameters can be specified.

5041 E5041 Cmd Rej: GTT LS ARI Feature must be enabled

The value specified for the `mrnpc/mrnpca/mrnpai/mrnpai/mrnpai24/mrnpai16` parameter must be a full point code.

5040 E5040 Cmd Rej: Alternate RI Mate PC must be a full PC

The point codes and alternate RI Mate point codes must have the same network type as shown:

- ITUI, ITU-N, ITU-I spare, ITU-N-spare—ITUI, ITU-N, ITU-I spare, ITU-N-spare
- ANSI—ANSI
- ITUN-24—ITUN-24
- ITUN-16 ---ITUN-16

5042 E5042 Cmd Rej: PC and Alternate RI Mate PC network types don't match

The value specified for the `mrnset` parameter must already exist in the MRN table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

The MRN table is corrupt or cannot be found.

2999 E2999 Cmd Rej: Failed reading the MRN table

The value specified for the `mrnpc` parameter must already exist in the specified MRN Set.

4483 E4483 Cmd Rej: PC does not exist in specified MRNSET

The `mrnset` parameter cannot be specified if the MAP Set specified by the `mapset` parameter contains a True Point Code.

5088 E5088 Cmd Rej: ARI Mate can't be provisioned for a MAPSET having TPC

The `ent-map` command will reject provisioning of local subsystem for ITUN16 SID, so that ITUN16 MSUs won't be forwarded to Local Subsystems.

2809 E2809 Cmd Rej: ITUN16 SID is not allowed for MAP commands in J7 Support.

SSN configured for SFAPP cannot be used in any command for any configuration

3558 E3558 Cmd Rej: SFAPP SSN can not be used

Notes

Up to 128 PC/SSN pairs can be entered into a mated PC/SSN group.

Multiplicity Modes

For the `-map` commands, an entity set consists of a group of PC/SSNs that are used for traffic distribution, and an RC group consists of PC/SSNs within an entity set that have the same RC. In *loadsharing* mode, an entity set contains 1 RC group. In *combined loadsharing/dominant* mode, an entity set can contain multiple loadsharing groups.



Note:

For *dominant* and *combined loadsharing/dominant* modes, the PC/SSN in the MAP table where traffic distribution initializes is determined by the result of GTT translation and is referred to as the preferred PC/SSN. The preferred PC/SSN may not be the lowest cost entry.

The EAGLE supports the following multiplicity modes for nodes/subsystems:

- When a PC/SSN pair is not replicated, the pair is in *solitary* (SOL) mode. The subsystem acts as the only application, with no backup. If this subsystem fails, messages routed to it are discarded and SCCP management returns “Subsystem Unavailable” messages to the originator.
- A group of replicated PC/SSN pairs are in *dominant* (DOM) mode if each PC/SSN pair in the group has a unique RC. The specified subsystem with the lowest RC acts as the primary subsystem, while the mate subsystem acts as a backup.
- A group of replicated PC/SSN pairs are in *load sharing* (SHR) mode if each PC/SSN pair in the group has the same RC. All messages are evenly distributed at the SCCP level to all nodes/subsystems in the group. If failure occurs, the non-affected subsystem assumes the load of its failed mate.
- The *combined load sharing/dominant* (COM) mode supports a combination of load sharing and dominant mode. A group of PC/SSN pairs are in COM mode when at least two of the PC/SSN pairs have the same RC and another node subsystem in the group has a different RC.

If the XMAP feature is enabled, the MAP table can have up to either 2000 or 3000 entries, depending on the controlled feature Part Number that is enabled. If XMAP is not enabled, the MAP table can contain up to 1024 user entries.

The `SSO` parameter changes the initialization of the subsystem status (“prohibited” or “allowed”) for PC/SSN MAP entries. The EAGLE previously marked the subsystem status “allowed” for each PC/SSN entry. The `SSO` parameter marks the subsystem status “prohibited” for each new entry that has `SSO=on`. This causes the EAGLE to generate an SST to the remote point-code when an MTP-RESUME is received. Upon reception of an SSA, the subsystem status is marked “allowed”.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

When the Flexible GTT Load Sharing feature is on, MAP load sharing sets are supported. Each set is identified by the `mapset` parameter.

When the Weighted GTT Loadsharing feature is turned on, weighted entity sets and RC groups are supported, and threshold values can be assigned to each PC/SSN.

When the GTT Load Sharing with Alternate Routing Indicator feature is enabled, an Alternate RI Mate can be provisioned.

Output

```
ent-
map:pc=1-1-1:ssn=10:rc=10:mpc=1-1-2:mssn=20:materc=20:mapset=new
w
```

```
tekelecstp 11-03-22 11:22:28 EST EAGLE 44.0.0
ent-
map:pc=1-1-1:ssn=10:rc=10:mpc=1-1-2:mssn=20:materc=20:mapset=new
Command entered at terminal #4.
ENT-MAP: MASP A - MESSAGE: EXTENDED PROCESSING REQUIRED

New MAPSET Created : MAPSETID = 362
ENT-MAP: MASP A - COMPLTD
;
```

```
ent-map:pc=1-1-1:ssn=10:rc=10:mapset=dflt:mrnset=1:mrnpc=1-1-2

tekelecstp 11-03-12 11:22:28 EST EAGLE 44.0.0
ent-map:pc=1-1-1:ssn=10:rc=10:mapset=dflt:mrnset=1:mrnpc=1-1-2
Command entered at terminal #4.
ENT-MAP: MASP A - MESSAGE: EXTENDED PROCESSING REQUIRED
ENT-MAP: MASP A - COMPLTD
;
```

```
ent-map:pc=1-1-1:ssn=100:rc=10:mrc=no:srm=no

tekelecstp 11-03-12 11:22:28 EST EAGLE 44.0.0
ent-map:pc=1-1-1:ssn=100:rc=10:mrc=no:srm=no
Command entered at terminal #4.
ENT-MAP: MASP A - MESSAGE: EXTENDED PROCESSING REQUIRED
CAUTION: THE VALUE OF SRM IS EFFECTIVE WHEN MULT IS COM OR DOM AND
THE VALUE OF MRC IS EFFECTIVE WHEN MULT IS DOM.
ENT-MAP: MASP A - COMPLTD
;
```

Related Topics

- [chg-map](#)
- [dlt-map](#)
- [rtrv-map](#)

4.1.327 ent-mate-stp

Use this command to enter mate or self PC (point code) into the database.

Note:

This command is used to populate the mate STP table, and is used to route responses to queries generated by the EAGLE for SFAPP UC #3/4 back to the originating EAGLE if a member of a set of EAGLES is forming a gateway. For messages to be routed properly, the table in each of the members of the set must have the same entries.

Parameters

pc (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255The point code 000-000-000 is not a valid point code.

pc/pca/pci/pcn/pcn24/pcn16 (mandatory)

Point code.

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

pci (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-s

zone-0-7

area-000-255

id-0-7

The point code 000-000-000 is not a valid point code.

pcn (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix-s

nnnnn-0-16383

gc-aa-zz

m1-m2-m3-m4-0-14 for each member; values must sum to 14

pcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa-000-255

ssa-000-255

sp-000-255

pcn16 (mandatory)

16-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

Example

This example adds a point code:

```
ent-mate-stp:pc=10-20-30
```

This example adds a 24-bit ITU-N secondary point code:

```
ent-mate-stp:pcn24=99-99-99
```

This example adds a spare ITU-N secondary point code:

```
ent-mate-stp:pcn=s-12345
```

This example adds a 16-bit ITU-N secondary point code:

```
ent-mate-stp:pcn16=121-5-10
```

Dependencies

Mate STP point code must be present in either destination table or SID table.

3613 E3613 Cmd Rej: DPC must exist for the STP entry

Point code already exist in mate STP table.

3614 E3614 Cmd Rej: STP point code already in use

Point code entered must be in same network as other existing point codes.

2787 E2787 Cmd Rej: PC network type does not match existing PC network type

Mate stp table is full.

Notes

- The command is rejected when the point code is in invalid format.
- The command is rejected when point code is of a different network than the existing point codes/code's network.
- The command is rejected when the stp_table is full, as in, there are 16 point codes in the table already.
- The command is rejected when the point code specified already exists in the table.
- The command is rejected when no DPC (destination point code) exists for the specified point code. To add a new point code in the STP table, either it should be in the SID table or it should exist in the destination point code table.

Output

```
ent-mate-stp:pci=3-3-1
```

```
Searching destination table on disk - please wait...
```

```
Searching route table on disk - please wait...
```

```
Command Accepted - Processing
```

```
tekelecstp 18-05-28 17:24:37 MST EAGLE 46.6.2.0.0-73.19.0
```

```
ent-mate-stp:pci=3-3-1
```

```
Command entered at terminal #2.
```

```
;
```

```
tekelecstp 18-05-28 17:24:38 MST EAGLE 46.6.2.0.0-73.19.0
```

```
ENT-MATE-STP: MASP B - COMPLTD
```

Related Topics

- [dlt-mate-stp](#)
- [rtrv-mate-stp](#)

4.1.328 ent-mrn

Use this command to assign point codes and Alternate RI Mates in the Mated Relay Node (MRN) table. The Intermediate GTT Loadsharing feature must be on before this command can be entered. The GTT Load Sharing with Alternate Routing Indicator (GTT LS ARI) feature must be enabled to provision Alternate RI Mates.

If the Flexible GTT Loadsharing feature is enabled, use this command to create a new MRN set, or to add entries to an existing MRN set in the MRN table. If the Flexible GTT Loadsharing feature is turned on, then MRN sets are used.

Note:

If only the Intermediate GTT Loadsharing feature is turned on, the MRN table can contain a maximum of 3000 entries. If the Intermediate GTT Loadsharing feature is on and the Flexible GTT Loadsharing feature is enabled, the MRN table can contain a maximum of 6000 entries.

Caution:

If any entries are provisioned in the SCCP-SERV table, the maximum number of entries that the MRN table can contain is reduced by that amount. Check the `rtv-sccp-serv` command output to see if entries exist in the SCCP-SERV table.

Note:

An MRN set is a logical grouping of PCs that already exist in the EAGLE MRN table. The Intermediate GTT Loadsharing feature allows PCs to be part of more than one load-sharing group, with each PC defined by a different MRN set. If the Intermediate GTT Loadsharing feature is enabled, then all existing entries in the MRN table and all existing GTA translations in the GTT table with `ri=gta` are stored in default MRN sets. Additional MRN sets can be provisioned, and GTT entries can be associated to the MRN sets.

Parameters

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

If a point code is being added to an existing weighted entity set, and the `df1wt` parameter is not specified, the `wt1/wt2/wt3/wt4` parameter must be specified. The `wt1/wt2/wt3/wt4` parameter can only be specified if at least two of the `rc/rc1/rc2/rc3/rc4` parameters are equal, creating a weighted entity set.

pc (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24/pcn16 (mandatory)

Post-GTT-translated point code.

pci (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*msa—000—255**ssa—000—255**sp—000—255***pcn16 (mandatory)**16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.**Range:**

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*un---000---127**sna---000---15**mna---000---31***df1wt (optional)**Default weight. The weight to be assigned to a specified PC that is not assigned a weight with the *wt/wt1/wt2/wt3/wt4* parameter. **Note:**If a PC weight is specified with the *wt/wt1/wt2/wt3/wt4* parameter and the *df1wt* parameter is specified, the default weight is ignored, and the PC is assigned the weight specified by its respective weight parameter.**Range:**

1 - 99

mappc (optional)ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.**Synonym:***mapca***Range:**

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.The point code *000-000-000* is not a valid point code.

Default:

000

mappc/mappca/mappci/mappcn/mappcn24/mappcn16 (optional)

Alternate RI Mate point code.

mappci (optional)ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).**Range:***s-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*

The point code 0-000-0 is not a valid point code.

Default:

0-000-0

mappcn (optional)ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**Default:**

00000

mappcn24 (optional)24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).**Range:**

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*msa—000-255**ssa—000-255**sp—000-255*

Default:
000

mappcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:
000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

Default:
000

mapset (optional)

Alternate RI Mate MAP Set ID. The MAP Set where the Alternate RI Mate search is performed.

Range:
1 - 36000, *dflt*
dflt—default MAP Set



Note:

If the `mappc` and `mapssn` parameters are specified, and the `mapset` parameter is not specified, then the `mapset` parameter is automatically set to a value of `dflt`.

mapssn (optional)

Alternate RI Mate subsystem number.

Range:
2 - 255, *, *none*

Default:
none

mrnset (optional)

MRN set ID.

Range:
1 - 3000, *dflt*, *new*
dflt—default MRN set
new—create a new MRN set

pc1 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca1

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001–005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

pc1/pca1/pci1/pcn1/pcn241/pcn161 (optional)

Alternate post-GTT-translated point code.

pc2 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca2

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001–005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

pc2/pca2/pci2/pcn2/pcn242/pcn162 (optional)

Alternate post-GTT-translated point code.

pc3 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca3

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001–005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

pc3/pca3/pci3/pcn3/pcn243/pcn163 (optional)

Alternate post-GTT-translated point code.

pc4 (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca4

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc4/pca4/pci4/pcn4/pcn244/pcn164 (optional)

Alternate post-GTT-translated point code.

pci1 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pci2 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pci3 (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:*s*-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s**zone*—0-7*area*—000-255*id*—0-7

The point code 0-000-0 is not a valid point code.

pci4 (optional)ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).**Range:**

0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0-7*area*—000-255*id*—0-7

The point code 0-000-0 is not a valid point code.

pcn1 (optional)ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-*nnnnn*—0-16383*gc*—*aa-zz**m1-m2-m3-m4*—0-14 for each member; values must sum to 14**pcn2 (optional)**ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-*nnnnn*—0-16383

gc—aa-zz
m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn241 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn242 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn243 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn244 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn3 (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when

the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn4 (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmt.i` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn161 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

pcn162 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

pcn163 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

pcn164 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

rc (optional)

Relative cost. The relative cost of the route for the primary PC.

Range:

0 - 99

rc1 (optional)

Relative cost 1. The relative cost of the route for mate PC 1.

Range:

0 - 99

rc2 (optional)

Relative cost 2. The relative cost of the route for mate PC 2.

Range:
0 - 99

rc3 (optional)

Relative cost 3. The relative cost of the route for mate PC 3.

Range:
0 - 99

rc4 (optional)

Relative cost 4. The relative cost of the route for mate PC 4.

Range:
0 - 99

thr (optional)

Threshold. The in-service threshold of all PCs in a weighted entity set or RC group. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

 **Note:**

If a threshold value is not specified when creating a new RC group in an existing entity set, the new RC group is assigned a threshold value of 1%.

Range:
1 - 100

wt (optional)

Weight. The weight assigned to the primary PC.

 **Note:**

If PCs are being added to an existing entity set, the `wt` parameter cannot be specified. If a new entity set is being created, the `wt` parameter can only be specified if at least two of the specified RC values are equal, which creates a weighted entity set.

Range:
1 - 99

wt1 (optional)

Weight 1. The weight assigned to the mate PC 1 that is being added to the weighted entity set.

Range:
1 - 99

wt2 (optional)

Weight 2. The weight assigned to the mate PC 2 that is being added to the weighted entity set.

Range:

1 - 99

wt3 (optional)

Weight 3. The weight assigned to the mate PC 3 that is being added to the weighted entity set. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

Range:

1 - 99

wt4 (optional)

Weight 4. The weight assigned to the mate PC 4 that is being added to the weighted entity set.

Range:

1 - 99

Example

This example enters point code 1 into the MRN table with a relative cost of 10 and associates point code 1 with it as a point code with a relative cost of 20.

```
ent-mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=20
```

This example updates the group containing point code 1 in the MRN table, to add point code 1 with relative cost of 20 and point code 1 with relative cost of 30 to the group.

```
ent-mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=20:pc2=1-1-10:rc2=30
```

These examples include spare point codes:

```
ent-  
mrn:pci=s-2-2-1:rc=10:pci1=s-2-2-2:rc1=11:pci2=2-100-1:rc2=12
```

```
ent-mrn:pcn=s-1-1-1-123-aa:rc=1:pcn1=1-1-1-235-  
aa:rc1=2:pcn2=s-1-1-1-235-aa:rc2=3
```

```
ent-mrn:pc=1-1-1:rc=10:pc1=1-1-2:rc1=10:mrnset=df1t
```

```
ent-  
mrn:pc=1-1-1:rc=10:pc1=1-1-2:rc1=20:pc2=1-1-3:rc2=30:apc3=1-1-4  
:rc3=40:apc4=1-1-5:rc4=50:mrnset=new
```

```
ent-mrn:pc=1-1-3:pc1=1-1-6:rc1=60:pc2=1-1-7:rc2=70:mrnset=111
```

These examples create a new weighted entity set:

```
ent-mrn:pc=1-1-0:rc=10:wt=30:pc1=1-1-1:rc1=10:wt1=10
```

```
ent-mrn:pc=1-1-0:rc=10:wt=30:pc1=1-1-1:rc1=10:wt1=10:thr=50
```

```
ent-  
mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=10:pc2=1-3-2:rc2=20:wt2=30:pc3  
=1-10-2:rc3=20:df1twt=20
```

```
ent-  
mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=10:wt1=30:pc2=1-3-2:rc2=10:df1  
twt=20:thr=60
```

```

ent-
mrn:pc=1-1-0:pc1=2-2-2:rc1=20:pc2=1-1-10:rc2=30:pc3=1-3-2:rc3=10:wt3
=20: dfltw=30

ent-
mrn:pc=1-1-0:pc1=2-2-2:rc1=20:wt1=10:pc2=1-1-10:rc2=20:wt2=40:thr=30

ent-
mrn:pc=1-1-0:pc1=2-2-2:rc1=20:wt1=40:pc2=1-1-10:rc2=20:pc3=1-3-2:rc3
=20: dfltw=25:thr=30

ent-mrn:pc=1-1-0:pc1=2-2-2:rc1=20:wt1=10:pc2=1-1-10:rc2=30:wt2=40

ent-mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=20:pc2=1-1-10:rc2=30:mapset=1:
mappc=2-1-1:mapssn=*

ent-
mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=20:pc2=1-1-10:rc2=30:mappc=2-1-1:ma
pssn=*

ent-
mrn:pci=1-001-0:rc=10:pci1=1-001-1:rc1=20:pci2=1-001-10:rc2=30:mapse
t=1: mappcn=00126:mapssn=12

ent-
mrn:pcn16=1-14-0:rc=10:wt=30:pcn161=40-2-3:rc1=10:wt1=10:mrnset=dflt

```

Dependencies

The Intermediate Global Title Translation Loadsharing feature must be turned on before this command can be entered.

2996 E2996 Cmd Rej: Intermed GTT Load Sharing feature must be ON

The `apca` and `pcn24/pcn16` parameters cannot be specified for the same MRN set.

2787 E2787 Cmd Rej: PC network type does not match existing PC network type

When a point code parameter is specified, its relative cost parameter must be specified.

2815 E2815 Cmd Rej: PC and RC must be entered as a pair

Point codes cannot have the same value as the EAGLE SID.

2998 E2998 Cmd Rej: PC cannot match the SID

The same point code value cannot be entered more than once in the MRN table.

2979 E2979 Cmd Rej: Cannot enter the same PC more than once

ITU-N point codes must be in the format set by the `npcfmti` parameter of the `chg-stpopts` command. (Use the `rtrv-stpopts` command to display the STP option settings.)

2997 E2997 Cmd Rej: PC must match NPCFMTI set in CHG-STPOPTS

Remote point codes must already exist as destinations in the Ordered Route entity set or reside in a cluster destination for which ordered routes are specified.

2427 E2427 Cmd Rej: MPC does not exist in routing Table

One or more point codes in the command will exceed the maximum number of point codes that can be entered into the MRN table (3000 if the IGTTLS feature is turned on and 6000 if the IGTTLS and FGTTLS features are turned on)..

2817 E2817 Cmd Rej: MRN table is full

The Flexible GTT Load-Sharing feature must be enabled before the `mrnset` parameter can be specified.

4479 E4479 Cmd Rej: MRNSET must be specified (only) if FGTTLS feature is enabled

If the Flexible GTT Loadsharing feature is enabled, then the specified PC must already exist in the specified MRN set.

4483 E4483 Cmd Rej: PC does not exist in specified MRNSET

The specified MRN set must already exist in the MRN table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

When creating a new weighted entity set, the `mrnset=new` or `mrnset=dflt` parameter must be specified.

4482 E4482 Cmd Rej: NEW or DFLT MRNSET must be specified

Each point code group can contain a maximum of 128 point codes.

2818 E2818 Cmd Rej: A maximum of 128 PCs are allowed in a group

The Weighted GTT Loadsharing feature must be turned on before the `wt/wt1/wt2/wt3/wt4`, `thr`, and `dfltwt` parameters can be specified.

3370 E3370 Cmd Rej: Weighted GTT Load-Sharing feature must be ON.

If the `wt/wt1/wt2/wt3/wt4` parameter is specified, the corresponding `pc/pc1/pc2/pc3/pc4` parameter must be specified.

3371 E3371 Cmd Rej: WT_x must have a matching PC_x specified.

When creating or modifying a weighted entity set, the `dfltwt` parameter must be specified, or an individual weight must be specified for each PC.

3380 E3380 Cmd Rej: WT_x required for all specified PC_x values.

Entity sets in a solitary or dominant loadsharing mode cannot have weights assigned to the PCs. When creating an entity set, if all of the RC values are unique, the `wt/wt1/wt2/wt3/wt4` and `thr` parameters cannot be specified.

3385 E3385 Cmd Rej: Weight can't be specified to create SOL or DOM groups.

If the `thr` parameter is specified, the `rc1`, `rc2`, `rc3`, and `rc4` parameters must be of equal value.

3372 E3372 Cmd Rej: All specified RC values must be equal

If the `thr` parameter is specified, the associated `wt/wt1/wt2/wt3/wt4` parameter or the `dfltwt` parameter must be specified.

3373 E3373 Cmd Rej: WT_x or DFLTWT must be specified with THR

At least one additional point code must be specified.

3087 E3087 Cmd Rej: Must enter at least one PC/RC pair

Any specified point code must be a full point code.

2865 E2865 Cmd Rej: Address (MPCx) of mate subsystem must be a full PC

If the `chg-sid:pctype=ansi` command is entered, a value of `ni=000` cannot be specified.

If the `chg-sid:pctype=ansi` command is entered, and a value of `ni=001 – 005` is specified, a value of `nc=000` cannot be specified

2169 E2169 Cmd Rej: Point code out of range

The SID table is corrupt or could not be found by the system.

2874 E2874 Cmd Rej: Failed reading site identification table

If a new point code is being added to the MRN table, the `pc` and `rc` parameters must be specified together in the command.

If the Flexible GTT Loadsharing feature is enabled, and the `mrnset=new` parameter is specified, the `pc` and `rc` parameters must be specified together in the command.

3086 E3086 Cmd Rej: New PC and RC must be entered as a pair

The Route table is corrupt or could not be found by the system.

2648 E2648 Cmd Rej: Failed reading the route table

If the `pc1/pc2/pc3/pc4` parameter is specified, the `pc` parameter value must already exist in the MRN table.

2849 E2849 Cmd Rej: PC must already exist in the MRN table

A new point code that is specified in the command must not already exist in the MRN table.

2816 E2816 Cmd Rej: PC already exists in the MRN entity set

If the `rc` parameter is not specified, the `wt` parameter cannot be specified.

3374 E3374 Cmd Rej: WT parameter can't be specified

If PCs are being added to a weighted entity set, the `wt/wt1/wt2/wt3/wt4` parameter or the `dfltwt` parameter must be specified.

3381 E3381 Cmd Rej: Must specify wight for new point codes for weighted groups

If PCs are being added to a non-weighted entity set, the `wt/wt1/wt2/wt3/wt4` and the `dfltwt` parameters cannot be specified.

3382 E3382 Cmd Rej: Can't specify weight for non-weighted groups.

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

If the `wt/wt1/wt2/wt3/wt4` parameters are specified, the `dfltwt` parameter cannot be specified.

3391 E3391 Cmd Rej: DFLTWT can't be specified when WT_x for each PC_x is specified

The value specified for the `pc/pc1/pc2/pc3/pc4` parameter cannot be associated with a proxy point code.

4707 E4707 Cmd Rej: PRX using DPC not allowed in GTT, MAP, MRN tables

The GTT LS ARI feature must be enabled before the `mapset`, `mappc`, or `mapssn` parameter can be specified.

5041 E5041 Cmd Rej: GTT LS ARI Feature must be enabled

The value specified for the `mappc/mappca/mappci/mappcn/mappcn24/mappcn16` parameter must be a full point code.

5040 E5040 Cmd Rej: Alternate RI Mate PC must be a full PC

The point codes and alternate RI Mate point codes must have the same network type as shown:

- ITUI, ITU-N, ITU-I spare, ITU-N-spare—ITUI, ITU-N, ITU-I spare, ITU-N-spare
- ANSI—ANSI
- ITUN-24—ITUN-24
- ITUN-16---ITUN-16

5042 E5042 Cmd Rej: PC and Alternate RI Mate PC network types don't match

The specified MAPSET must already exist in the MAP table.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

If the `mapset` parameter is specified, then the `mappc` and `mapssn` parameters must be specified.

5048 E5048 Cmd Rej: MAPPC/MAPSSN must be specified when MAPSET is specified

The `mappc` and `mapssn` parameters must be specified together in the command.

5049 E5049 Cmd Rej: MAPPC and MAPSSN must be specified together

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

The values specified for the `mappc` and `mapssn` parameters must already exist in the specified MAP Set.

5051 E5051 Cmd Rej: MAPPC/MAPSSN does not exist in MAPSET

The values specified for the `mapset` and `mappc` parameters must already exist in the MAP table.

5052 E5052 Cmd Rej: MAPPC/MAPSET does not exist in MAP table

The value specified for the `mappc` parameter cannot match an STP point code.

5083 E5083 Cmd Rej: MAPPC can't be TPC or Mate of TPC

The `ent-mrn` command cannot be used to change an Alternate RI Mate that has already been specified for an MRN Set. Use the `chg-mrn` command to modify the Alternate RI Mate.

5086 E5086 Cmd Rej: Alternate RI Mate already provisioned

SSN configured for SFAPP cannot be used in any command for any configuration

3558 E3558 Cmd Rej: SFAPP SSN can not be used

Notes

For the `-mrn` commands, an entity set consists of a group of PCs that are used for traffic distribution, and an RC group consists of PCs within an entity set that have the same RC. In loadsharing mode, an entity set contains 1 RC group. In combined/dominant loadsharing mode, an entity set can contain multiple loadsharing groups.

The EAGLE supports the following modes for nodes and subsystems:

- A group of replicated PCs are in *dominant* mode if each PC in the group has a unique RC. The specified subsystem with the lowest RC acts as the primary subsystem, while the mate subsystem acts as a backup. In the event of congestion, messages route to the mate subsystem. When the congestion subsides, messages are again routed to the primary (dominant) subsystem.
- A group of replicated PCs are in *load sharing* mode if each PC in the group has the same RC. All messages are evenly distributed at the SCCP level to all nodes/subsystems in the group. In the event of congestion or failure, the non-affected subsystem assumes the load of its failed or congested mate.
- The *combined load sharing/dominant* mode supports a combination of load sharing and dominant mode. A group of PCs are in combined load sharing/dominant mode when at least two of the PCs have the same RC and another node subsystem in the group has a different RC. A combination of node accessibility and RC determines the preferred PC.

The `ent-mrn` command cannot be used to change the relative cost value for a point code; the `chg-mrn` command must be used.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (S-).

If the `ent-mrn` command is used to add PCs to an existing weighted entity set, and the threshold is specified, all RC group values specified with `rc/rc1/rc2/rc3/rc4` parameters for the alternate post-GTT-translated point codes must be equal.

The following rules apply when the `ent-mrn` command is used to add PCs to RC groups:

- If a threshold value is specified and the PCs are being added to an existing RC group in the existing entity set, the RC group threshold is changed to the specified threshold value and both pre-existing and new PCs in the RC group assume the new threshold value.
- If a threshold value is specified and the PCs are creating a new RC group in the existing entity set, the new RC group assumes the specified threshold value.
- If a threshold value is not specified and the PCs are being added to an existing RC group in the existing entity set, the RC group threshold does not change and the PC assumes the threshold value of the existing RC group.

When the Weighted GTT Loadsharing feature is turned on, weighted entity sets and RC groups are supported, and threshold values can be assigned to each PC.

Entries cannot be provisioned in the MRN table unless routes are also provisioned for corresponding point codes. However, an entry without a configured route may result from upgrading to a new EAGLE release. If such an entry occurs, then traffic will not be routed to the corresponding point code. The entry can be deleted, or a route for the entry can be configured.

When a node is marked congested in the MRN or MAP table, traffic continues to be routed to that node. When the congested node becomes prohibited, traffic is diverted to another node.

Output

```
ent-  
mrn:pc=1-1-1:rc=10:pc1=1-1-2:rc1=20:pc2=1-1-3:rc2=30:apc3=1-1-4  
:rc3=40:apc4=1-1-5: rc4=50: mrnset=new
```

```
tekelecstp 11-03-04 12:59:14 EST EAGLE 44.0.0  
ent-  
mrn:pc=1-1-1:rc=10:pc1=1-1-2:rc1=20:pc2=1-1-3:rc2=30:apc3=1-1-4:rc3=40:  
apc4=1-1-5: rc4=50:mrnset=new  
Command entered at terminal #4.  
ENT-MRN: MASP A - MESSAGE: EXTENDED PROCESSING REQUIRED  
  
New MRNSET Created : MRNSETID = 112  
ENT-MRN: MASP A - COMPLTD  
;
```

```
ent-  
mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=10:mrnset=dfmt:mapset=dfmt:map  
pc=1-1-2:mapssn=10
```

```
tekelecstp 11-03-04 12:15:32 EST EAGLE 44.0.0  
ent-  
mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=10:mrnset=dfmt:mapset=dfmt:mappc=1-1-2  
:mapssn=10  
Command entered at terminal #4.  
ENT-MRN: MASP A - MESSAGE: EXTENDED PROCESSING REQUIRED  
ENT-MRN: MASP A - COMPLTD  
;
```

Related Topics

- [chg-mrn](#)
- [dlt-mrn](#)
- [rtrv-mrn](#)

4.1.329 ent-na

Use this command to enter a new network appearance in the Network Appearance table.

Parameters

na (mandatory)

Network appearance.

Range:

0 - 4294967295

type (mandatory)

Type of the network appearance.

Range:

ansi

itui

ituis

itun

ituns

itun24

itun16

gc (optional)

Group Code of the network appearance.

Range:

yy

Example

```
ent-na:type=ansi:na=10
```

```
ent-na:type=itun:na=11:gc=fr
```

Dependencies

The value specified for the *na* parameter cannot already exist in the Network Appearance table.

4136 E4136 Cmd Rej: NA already equipped

The Network Appearance table can contain a maximum of 45 entries.

4265 E4265 Cmd Rej: Network Appearance table full

The value specified for the *gc* or *na* parameter cannot already be equipped.

4137 E4137 Cmd Rej: Group code or network type already equipped

A value of *itun* or *ituns* must be specified for the *type* parameter before the *gc* parameter can be specified.

4132 E4132 Cmd Rej: Group code not allowed with specified network type

If the ITUDUPPC feature is turned on, and a value of *itun* or *ituns* is specified for the *type* parameter, then the *gc* parameter must be specified.

4133 E4133 Cmd Rej: Group code required for ITUN when ITUDUPPC feat is ON

If the ITUDUPPC feature is turned off, then the *gc* parameter cannot be specified.

4134 E4134 Cmd Rej: Group code not allowed when ITUDUPPC feat is OFF

The value specified for the *gc* parameter must already exist in the SID or SPC table.

4135 E4135 Cmd Rej: Group code must be in SID or SPC table

The Spare Point Code Support feature must be enabled before the `ituis` or `ituns` network type can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The J7 Support feature must be enabled before the `type=itun16` parameter is specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

If the J7 support feature is enabled then the `type=(ansi or itun24)` parameter can not be specified.

2801 E2801 Cmd Rej: J7 Support feature must not be Enabled.

Notes

Network Appearance identifies the SS7 network context of the message, for the purposes of logically separating signaling traffic between the SGP and ASP over a common SCTP association. A unique network appearance value can be associated with ANSI, ITUI, 14-bit ITU-N or 24-bit ITU-N networks. When the ITUDUPPC (ITU National Duplicate Point Code) feature is turned on, network appearance can be associated with a specific 14-bit ITU-N group code.

Output

```
ent-na:type=ansi:na=10
```

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
ENT-NA: MASP A - COMPLTD
;
```

Related Topics

- [dlt-na](#)
- [rtrv-na](#)

4.1.330 ent-npp-as

Use this command to enter a Numbering Plan Processor (NPP) Action Set (AS). An AS is a collection of Conditioning Actions (CAs), Service Actions (SAs), and Formatting Actions (FAs).

Parameters



Note:

CAs and FAs are processed in the order that they are specified in the comma-separated list.

 **Note:**

CAs and FAs are processed in consecutive order.

 **Note:**

SAs are processed in order of high-to-low precedence and must be specified in high-to-low precedence order in the comma-separated list. The SAs cannot be duplicated in the list. If multiple SAs in the list have the same precedence, then those SAs are processed in the order in which they appear in the list.

 **Note:**

SAs are processed in order of high-to-low precedence. The SAs must be specified in high-to-low precedence order in the list, and cannot be duplicated in the comma separated list. If multiple SAs in the list have the same precedence, then those SAs are processed in the order in which they appear in the list.

 **Note:**

The `ac*`, `dn*`, `sn*`, and `cc*` values refer to all CAs that begin with `ac`, `dn`, `sn`, or `cc`, respectively.

 **Note:**

Refer to the *Numbering Plan Processor (NPP) Overview* and to the Feature Manual for the feature of interest for more information on provisioning Action Sets and for definitions for the CA, FA, and SA values.

 **Note:**

The `sa(X) dgt s` parameters are currently not supported by any feature.

 **Note:**

The `sa(X) val` parameters are used by the TIF Range CgPN Blacklist, TIF Subscriber CgPN Blacklist, and TIF Selective Screening features. Up to 2 numerical values can be specified in each list.

 **Note:**

Support of a numerical values list (`sa (X) val` parameter) is specific to the Service and Service Action.

asn (mandatory)

Action set name. The name of the AS.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

ca (optional)

Conditioning Action list. A comma-separated CA list that can be applied to an incoming digit string. Up to 12 CAs can be specified in the list. The CAs are processed in the order in which they are specified in the list.

Range:

ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, accgpn, accgpn1, accgpn2, accgpn3, accgpn4, accgpn5, accgpn6, accgpn7, accgpn8, acdef, aclac, cc1, cc2, cc3, ccdef, cccgpn, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn11, dn12, dn13, dn14, dn15, dnx, fpx, ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfb1, pfb2, pfb3, pfb4, pfb5, pfb6, pfb7, pfb8, pfc1, pfc2, pfc3, pfc4, pfc5, pfc6, pfc7, pfc8, pfd1, pfd2, pfd3, pfd4, pfd5, pfd6, pfd7, pfd8, pfe1, pfe2, pfe3, pfe4, pfe5, pfe6, pfe7, pfe8, pxf1, pxf2, pxf3, pxf4, pxf5, pxf6, pxf7, pxf8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, znx

fa (optional)

Formatting Action list. A comma-separated FA list that can be applied to the outgoing digit string. Up to 12 FAs can be specified in the list. The FAs are processed in the order they are specified in the list and cannot be duplicated.

Range:

ac, asd, asdothor, cc, dlma, dlmb, dlmc, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, dn, fpx, grn, grnothor, orig, pfxa, pfb, pfc, pfd, pfe, pxf, rn, rnospodn, rnosposn, rnospozn, sn, sp, sfrimsi, vmid, zn

Default:

orig

ofnai (optional)

Outgoing filter nature of address indicator. This parameter specifies the filter nature of address indicator (FNAI) class of the outgoing digit string.

Range:

intl

intl value provisioned in the `chg-npp-serv` command

natl

natl value provisioned in the `chg-npp-serv` command

nai1

nai1 value provisioned in the `chg-npp-serv` command

nai2

nai2 value provisioned in the `chg-npp-serv` command

nai3

nai3 value provisioned in the `chg-npp-serv` command

unkn

unkn value provisioned in the `chg-npp-serv` command

inc

NAI of the incoming digit string

Default:

inc

sa (optional)

Service Action list. A comma-separated SA list that can be applied to an incoming digit string. Up to 8 SAs can be specified in the list. The SAs must be specified in high-to-low precedence order in the list, and cannot be duplicated in the list.

**Note:**

SAs are service-specific.

Range:

asdlkup, blk1stqry, blk1strly, blnfnrls, blrls, cdial, ccncchk, cdpnnp, cgpnasdrqd, cgpngrnrqd, cgpnp, cgpnrng, cgpnsvcrqd, crp, fpxrls, fraudchk, fwdscs, grnlkup, inprtg, lacck, migrate, nocgpnrls, npnrls, nprelay, nprls, nscgpn, nscdpn, pprelay, rtdbtrn, rtdbtsp, rtdbtrnsp, skgstartg, snsccgpn, selscr, tifgnbl, tiflsbl, tifrdbl

sa1dgt1 (optional)

Service Action 1 digit string. This parameter specifies a digit string that can be used with the first SA.

Range:

1 - 8 hexadecimal digits. Valid digits are 0-9, a-f, A-F.

sa1val (optional)

Service Action 1 numerical values list. A comma-separated numerical values list that can be used with the first SA.

Range:

0 - 65534

sa2dgt1 (optional)

Service Action 2 digit string. A digit string that can be used with the second SA.

Range:

1 - 8 hexadecimal digits Valid digits are 0-9, a-f, A-F.

sa2va1 (optional)

Service Action 2 numerical values list. A comma-separated numerical values list that can be used with the second SA.

Range:

0 - 65534

sa3dgtts (optional)

Service Action 3 digit string. A digit string that can be used with the third SA.

Range:

1-8 hexadecimal digits. Valid digits are 0-9, a-f, A-F.

sa3va1 (optional)

Service Action 3 numerical values list. A comma-separated numerical values list that can be used with the third SA.

Range:

0 - 65534

sa4dgtts (optional)

Service Action 4 digit string. A digit string that can be used with the fourth SA.

Range:

1-8 hexadecimal digits. Valid digits are 0-9, a-f, A-F.

sa4va1 (optional)

Service Action 4 numerical values list. A comma-separated numerical values list that can be used with the fourth SA.

Range:

0 - 65534

sa5dgtts (optional)

Service Action 5 digit string. A digit string that can be used with the fifth SA.

Range:

1-8 hexadecimal digits. Valid digits are 0-9, a-f, A-F.

sa5va1 (optional)

Service Action 5 numerical values list. A comma-separated numerical values list that can be used with the fifth SA.

Range:

0 - 65534

sa6dgtts (optional)

Service Action 6 digit string. A digit string that can be used with the sixth SA.

Range:

1-8 hexadecimal digits. Valid digits are 0-9, a-f, A-F.

sa6va1 (optional)

Service Action 6 numerical values list. A comma-separated numerical values list that can be used with the sixth SA.

Range:
0 - 65534

sa7dgts (optional)

Service Action 7 digit string. a digit string that can be used with the seventh SA.

Range:
1-8 hexadecimal digits. Valid digits are 0-9, a-f, A-F.

sa7val (optional)

Service Action 7 numerical values list. A comma-separated numerical values list that can be used with the seventh SA.

Range:
0 - 65534

sa8dgts (optional)

Service Action 8 digit string. A digit string that can be used with the eighth SA.

Range:
1-8 hexadecimal digits. Valid digits are 0-9, a-f, A-F.

sa8val (optional)

Service action 8 numerical values list. A comma-separated numerical values list that can be used with the eighth SA.

Range:
0 - 65534

Example

```
ent-npp-as:asn=asn1:ca=ign1,ign2,ign4,znx:fa=zn
ent-npp-as:asn=asn4:ca=fpx,cc2,ign3,dn4:fa=dn,cc
ent-npp-as:asn=asn5:ca=ac8,sn8,cc3:fa=sn,ac,cc:
sa=rtdbtrn,rtdbtsp,rtdbtrnsp,cdial
ent-npp-as:asn=asn1:ca=znx:fa=asd:sa=asdlkup
ent-npp-as:asn=asn10:ca=cc2,ac2,snx:sa=migrate,cdpnp:fa=cc,rnosposn
ent-npp-as:asn=asn9:ca=fpx,cc2,dnx:sa=fraudchk,pprelay:fa=cc,dn
ent-npp-as:asn=set10:ca=znx:sa=blrls,blnfndrls,nscgpn:
sa1val=10,20:sa2val=31,41:fa=zn:ofnai=intl
ent-npp-as:asn=asn7:ca=cc2,ac3,sn5:sa=inprt,skgtartg
ent-npp-as:asn=set32:ca=cc2,accgpn5,snx
ent-npp-as:asn=tifcd7:ca=znx:sa=selscr,cgpnnp:sa1val=12,none:fa=zn
ent-npp-as:asn=set1:ca=znx:sa=tifgnbl
```

Dependencies

The value specified for the `asn` parameter cannot already exist in the NPP AS table.

4892 E4892 Cmd Rej: Action Set already exists

One of the following combinations of Conditioning Actions must be specified for the AS:

- znx
- cc*, dn*
- cc*, ac*, sn*

The Formatting Actions specified for the AS must contain the corresponding Formatting Action that a Conditioning Action will populate or load.

4898 E4898 Cmd Rej: Minimum Number Conditioning Not Met

The AS must contain a CA that can load or populate the specified FA.

4934 E4934 Cmd Rej: Formating Action Not Loaded

The CAs within an AS cannot condition more than 32 digits.

4960 E4960 Cmd Rej: Conditioning Actions condition too many digits

The AS cannot contain CAs that load or populate the same FA.

4964 E4964 Cmd Rej: Duplicate CAs loading same FA invalid

Conditioning Actions must be specified for inclusion in an individual Action Set using valid number conditioning rules:

- If the ZNX Conditioning Action is specified, then the CC*, AC*, SN*, DN*, and DNX Conditioning Actions cannot be specified.
- If the CC* AND DN* or DNX Conditioning Actions are specified, then the AC*, SN*, SNX, and ZNX Conditioning Actions cannot be specified.
- If the CC*, AC*, AND SN* or SNX Conditioning Actions are specified, then the DN*, DNX, and ZNX Conditioning Actions cannot be specified.

4965 E4965 Cmd Rej: CAs violate number conditioning

The AS cannot contain the following combinations of FAs:

- If the DN FA is specified, then the AC, SN, and ZN FAs cannot be specified.
- If the ZN FA is specified, then the AC, CC, SN, and DN FAs cannot be specified.
- If the SN FA is specified, then the ZN and DN FAs cannot be specified.
- If the RNOSPODN, RNOSPOSN, or RNOSPOZN FA is specified, then the RN, SP, SN, DN, and ZN FAs cannot be specified.
- The RNOSPODN, RNOSPOSN, and RNOSPOZN FAs cannot be specified together in the command.

4968 E4968 Cmd Rej: FAs violate number formatting

If specified, the FPFX CA must be the first value (*fpfx*) in the `ca` list.

4970 E4970 Cmd Rej: FPFX must be first in CA set

If specified, the ZNX, SNX, or DNX CA must be the final value (*znx*, *snx*, or *dnx*) in the `ca` list.

4971 E4971 Cmd Rej: ZNX/DNX/SNX must be last in CA set

A maximum of 1024 (1K) AS entries can be specified in the NPP system.

4956 E4956 Cmd Rej: System Action Set maximum (1024) reached

If no Service Actions are provisioned, then the `sa1val` parameter cannot be specified.

5353 E5353 Cmd Rej: SA1VAL requires SA1 to be provisioned

If less than 2 Service Actions are provisioned, then the `sa2val` parameter cannot be specified.

5354 E5354 Cmd Rej: SA2VAL requires SA2 to be provisioned

If less than 3 Service Actions are provisioned, then the `sa3val` parameter cannot be specified.

5355 E5355 Cmd Rej: SA3VAL requires SA3 to be provisioned

If less than 4 Service Actions are provisioned, then the `sa4val` parameter cannot be specified.

5356 E5356 Cmd Rej: SA4VAL requires SA4 to be provisioned

If less than 5 Service Actions are provisioned, then the `sa5val` parameter cannot be specified.

5357 E5357 Cmd Rej: SA5VAL requires SA5 to be provisioned

If less than 6 Service Actions are provisioned, then the `sa6val` parameter cannot be specified.

5358 E5358 Cmd Rej: SA6VAL requires SA6 to be provisioned

If less than 7 Service Actions are provisioned, then the `sa7val` parameter cannot be specified.

5359 E5359 Cmd Rej: SA7VAL requires SA7 to be provisioned

If less than 8 Service Actions are provisioned, then the `sa8val` parameter cannot be specified.

5360 E5360 Cmd Rej: SA8VAL requires SA8 to be provisioned

If no Service Actions are provisioned, then the `sa1dgts` parameter cannot be specified.

5361 E5361 Cmd Rej: SA1DGTS requires SA1 to be provisioned

If less than 2 Service Actions are provisioned, then the `sa2dgts` parameter cannot be specified.

5362 E5362 Cmd Rej: SA2DGTS requires SA2 to be provisioned

If less than 3 Service Actions are provisioned, then the `sa3dgts` parameter cannot be specified.

5363 E5363 Cmd Rej: SA3DGTS requires SA3 to be provisioned

If less than 4 Service Actions are provisioned, then the `sa4dgts` parameter cannot be specified.

5364 E5364 Cmd Rej: SA4DGTS requires SA4 to be provisioned

If less than 5 Service Actions are provisioned, then the `sa5dgt`s parameter cannot be specified.

5365 E5365 Cmd Rej: SA5DGTS requires SA5 to be provisioned

If less than 6 Service Actions are provisioned, then the `sa6dgt`s parameter cannot be specified.

5366 E5366 Cmd Rej: SA6DGTS requires SA6 to be provisioned

If less than 7 Service Actions are provisioned, then the `sa7dgt`s parameter cannot be specified.

5367 E5367 Cmd Rej: SA7DGTS requires SA7 to be provisioned

If less than 8 Service Actions are provisioned, then the `sa8dgt`s parameter cannot be specified.

5368 E5368 Cmd Rej: SA8DGTS requires SA8 to be provisioned

Notes



Note:

When a new Action Set is entered using the `ent-npp-as` command, the FANF, FASP, FARN, FANE, FASCRCRCD, and FASCRCRGC FA lists are unpopulated. These lists are populated using the `chg-npp-as` command.

Output

```
ent-npp-as:asn=asn6:ca=znx:sa=nscdpn,nscgpn:fa=zn:ofnai=intl
```

```
tekelecstp 09-08-18 11:25:31 EAGLE 41.1.0  
NPP-AS table is (5 of 1024) 1% full.
```

```
ENT-NPP-AS: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-npp-as](#)
- [dlt-npp-as](#)
- [rtv-npp-as](#)

4.1.331 ent-npp-srs

Use this command to enter a Numbering Plan Processor (NPP) Service Rule Set entry. A Service Rule Set (SRS) is a collection of NPP Rules that are associated with a NPP Service. A NPP Rule is an association between a single NPP filter and a single NPP Action Set.

Parameters

asn (mandatory)

Action set name. The name of the AS.

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

fd1 (mandatory)

Filter digit length. This parameter specifies the number of digits on the incoming digit string that is filtered by the NPP.

Range:

*1 - 32, **

*—multiple lengths of digit strings can be filtered

fnai (mandatory)

Filter nature of address indicator. The filter Nature of Address Indicator (NAI) class.

Range:

intl

filter messages with NAI=INTL

natl

filter messages with NAI=NATL

nai1

filter messages with NAI=NAI1

nai2

filter messages with NAI=NAI2

nai3

filter messages with NAI=NAI3

unkn

filter messages when NAI=UNKN

The `chg-npp-serv` command is used to assign values to the various FNAI classes.

fpfx (mandatory)

Filter prefix. The prefix used to filter incoming digit strings.

Range:

1-16 digits *, ?

1 - 16 hexadecimal digits inclusive of single digit wildcard (?); or wildcard (*) matching the entire digit string; valid digits are ?, 0-9, a-f, A-F.

srvn (mandatory)

Service name. The name of the NPP service.

Range:

nppt
NPP Test Service

idprcdpn
IDPRCDPN Service

idprcgpn
IDPRCGPN Service

tif
TIF Service

tif2
TIF2 Service

tif3
TIF3 Service

mosmsicgpn
MOSMSICGPN Service

mosmsicdpn
MOSMSICDPN Service

mosmsgcgpn
MOSMSGCGPN Service

mosmsgcdpn
MOSMSGCDPN Service

iarcdpn
IARCDPN Service

iarcgpn
IARCGPN Service

idprcdpn2
IDPRCDPN2 Service

idprcdpn3
IDPRCDPN3 Service

idprcdpn4
IDPRCDPN4 Service

tifcgpn
TIFCGPN Service

tifcgpn2
TIFCGPN2 Service

tifcgpn3
TIFCGPN3 Service

invkserv (optional)

Invoke service name. The name of the NPP service to be invoked.

**Note:**

As of Release 44.0, only the *tifcgpn*, *tifcgpn2*, *tifcgpn3*, and *none* values are supported.

Range:***nppt***

NPP Test Service

idprcdpn

IDPRCDPN Service

idprcgpn

IDPRCGPN Service

tif

TIF Service

tif2

TIF2 Service

tif3

TIF3 Service

mosmsicgpn

MOSMSICGPN Service

mosmsicdpn

MOSMSICDPN Service

mosmsgcgpn

MOSMSGCGPN Service

mosmsgcdpn

MOSMSGCDPN Service

iarcdpn

IARCDPN Service

iarcgpn

IARCGPN Service

idprcdpn2

IDPRCDPN2 Service

idprcdpn3

IDPRCDPN3 Service

idprcdpn4

IDPRCDPN4 Service

tifcgn
TIFCGPN Service

tifcgn2
TIFCGPN2 Service

tifcgn3
TIFCGPN3 Service

none
no additional NPP services are invoked

Default:
none

Example

```
ent-npp-srs:svrn=nppt:fpfx=a:fdl=10:fnai=intl:asn=asn2  
  
ent-npp-  
srs:svrn=tif:fnai=INTL:fpfx=9090:fdl=*:asn=set1:invkserv=tifcgn  
n  
  
ent-npp-srs:svrn=nppt:asn=testzn1:fnai=nai2:fdl=*:fpfx=1?2?3  
  
ent-npp-srs:svrn=tif:fpfx=12:fdl=*:fnai=intl:asn=set32
```

Dependencies

The value specified for the `asn` parameter must exist in the NPP AS table.

4881 E4881 Cmd Rej: Action Set does not exist

The AS specified by the `asn` parameter cannot contain Conditioning Actions that are not supported by the service specified by the `svrn` parameter.

4882 E4882 Cmd Rej: Rule contains unsupported Conditioning Actions

The AS specified by the `asn` parameter cannot contain Service Actions that are not supported by the service specified by the `svrn` parameter.

4883 E4883 Cmd Rej: Rule contains unsupported Service Actions

The AS specified by the `asn` parameter cannot contain Formatting Actions that are not supported by the service specified by the `svrn` parameter.

4884 E4884 Cmd Rej: Rule contains unsupported Formatting Actions

The AS specified by the `asn` parameter cannot contain Service Actions that do not conform to the precedence order supported by the service specified by the `svrn` parameter.

4885 E4885 Cmd Rej: Rule violates Service Action precedence

The Conditioning Actions in the AS specified by the `asn` parameter cannot condition more digits than allowed by the `fdl` parameter.

4886 E4886 Cmd Rej: Rule conditions too many digits

If the `fdl=*` parameter is specified, then the AS specified by the `asn` parameter must contain Conditioning Actions that support variable digit string conditioning.

4887 E4887 Cmd Rej: Rule does not condition a variable length digit string

A maximum of 8192 (8K) rules can be specified in the NPP system.

4888 E4888 Cmd Rej: System Rule maximum (8192) reached

A maximum of 4096 (4K) service rules can be specified in the NPP system.

4889 E4889 Cmd Rej: Service Rule maximum (4096) reached

The NPP Rule cannot already exist within the NPP Rule table.

4890 E4890 Cmd Rej: Rule already exists

If a values other than * is specified for the `fpx` and `fdl` parameters, then the value specified for the `fpx` parameter cannot be greater than the value specified for the `fdl` parameter.

4940 E4940 Cmd Rej: Rule with Longer FPFX than FDL Invalid

All of the features that are associated with the Service Actions in the AS specified by the `asn` parameter must be turned on before the AS can be used.

4808 E4808 Cmd Rej: Service Action(s) require an MPS dependent feature to be ON

The Service Actions in the AS specified by the `asn` parameter cannot violate mutual exclusivity rules defined by the service specified by the `srvn` parameter.

4823 E4823 SAs specified are mutually exclusive

The AS specified by the `asn` parameter cannot contain an OFNAI class with a value of *none*.

4868 E4868 Cmd Rej: action set contains OFNAI value not defined by service

At least one TIF feature must be turned on before an AS containing the CDIAL Service Action can be specified as a value for the `asn` parameter.

4977 E4977 Cmd Rej: At least one TIF feature must be ON

The TIF SCS Forwarding feature must be turned on before an AS containing the FWDSCS Service Action can be specified.

4988 E4988 Cmd Rej: TIF SCS Forwarding feature must be ON

The TIF Simple Number Substitution feature must be turned on before an AS containing the SNSCGPN Service Action can be specified as a value for the `asn` parameter.

4989 E4989 Cmd Rej: TIF Simple Number Substitution feature must be ON

The TIF Number Portability feature must be turned on before an AS containing the CRP, NPNRLS, CGPNNPRQD, NPRELA, or NPRLS Service Action can be specified as a value for the `asn` parameter.

4994 E4994 Cmd Rej: TIF Number Portability feature must be ON

The IDPR ASD feature must be enabled before an AS containing the ASDLKUP or CGPNASDRQD Service Action can be specified as a value for the `asn` parameter with the IDPRCDPN(X) or IDPRCGPN service.

5022 E5022 Cmd Rej: IDPR ASD feature must be enabled

The IDPR GRN feature must be enabled before an AS containing the GRNLKUP or GPNGRNRQD Service Action can be specified as a value for the `asn` parameter with the IDPRCDPN(X) or IDPRCGPN service.

5023 E5023 Cmd Rej: IDPR GRN feature must be enabled

An AS containing the ASDLKUP and CGPNASDRQD and SAs cannot be specified as a value for the `asn` parameter.

5026 E5026 Cmd Rej: ASDLKUP and CGPNASDRQD SAs are mutually exclusive

An AS containing the GRNLKUP and CGPNGRNRQD Service Actions cannot be specified as a value for the `asn` parameter.

5027 E5027 Cmd Rej: GRNLKUP and CGPNGRNRQD SAs are mutually exclusive

The TIF GRN feature must be enabled before an AS containing the GRNLKUP or CGPNGRNRQD SAs can be specified as a value for the `asn` parameter with the TIF services.

5021 E5021 Cmd Rej: TIF GRN feature must be enabled

The TIF ASD feature must be enabled before an AS containing the ASDLKUP or CGPNASDRQD SA can be specified as a value for the `asn` parameter with the TIF services.

5020 E5020 Cmd Rej: TIF ASD feature must be enabled

If a value of `mosmsgcdpn`, `mosmsgcgpn`, `mosmsicdpn`, or `mosmsicgpn` is specified for the `srvn` parameter, then the MO SMS ASD feature must be enabled before an AS containing the ASDLKUP or CGPNASDRQD Service Action can be specified as a value for the `asn` parameter.

5030 E5030 Cmd Rej: MO SMS ASD Feature must be enabled

If a value of `mosmsgcdpn`, `mosmsgcgpn`, `mosmsicdpn`, or `mosmsicgpn` is specified for the `srvn` parameter, then the MO SMS GRN feature must be enabled before an AS containing the CGPNGRNRQD or GRNLKUP Service Action can be specified as a value for the `asn` parameter.

5031 E5031 Cmd Rej: MO SMS GRN Feature must be enabled

If the `fpfx=*` parameter is specified, then an AS containing the FPFX Conditioning Action cannot be specified as value for the `asn` parameter.

4941 E4941 Cmd Rej: Rule with FPFX=* value cannot have AS with CA(x)=FPFX

The value specified for the `fpfx` parameter cannot have a ? as the final character.

4945 E4945 Cmd Rej: FPFX value cannot end with a '?'

The TIF Number Substitution feature must be enabled before an AS containing the NSCGPN or NSCDPN Service Action can be specified.

5091 E5091 Cmd Rej: TIF Number Substitution feature must be Enabled

The AS specified by the `asn` parameter cannot contain both the NSCGPN and SNSCGPN Service Actions.

5092 E5092 Cmd Rej: NSCGPN and SNSCGPN SAs are mutually exclusive

If a value of *mosmsgcdpn* or *mosmsgcgpn* is specified for the *srvn* parameter, then the Prepaid SMS Intercept Ph1 feature must be enabled before an AS containing the PPRELAY Service Action can be specified as a value for the *asn* parameter.

3474 E3474 Cmd Rej: Prepaid SMS Intercept Ph1 feature must be enabled

If the *srvn=mosmsgcgpn* parameter is specified, then the Portability Check for MO SMS feature must be enabled before an AS containing the FRAUDCHK Service Action can be specified as a value for the *asn* parameter.

3479 E3479 Cmd Rej: Port Check for MO SMS feature must be enabled

If the *srvn=mosmsicdpn* parameter is specified, then the MO SMS IS41-to-GSM Migration feature must be enabled before an AS containing the MIGRATE Service Action can be specified as a value for the *asn* parameter.

4957 E4957 Cmd Rej: MO SMS IS41-to-GSM Migration feature must be enabled

If the *srvn=mosmsicdpn* parameter is specified, then the MO-based IS41 SMS NP feature must be enabled before an AS containing the CDPNNP Service Action can be specified as a value for the *asn* parameter.

5115 E5115 Cmd Rej: MO-based IS41 SMS NP must be enabled

If the *srvn=mosmsgcdpn* parameter is specified, then the MO-based GSM SMS NP feature must be enabled before an AS containing the CDPNNP Service Action can be specified as a value for the *asn* parameter.

5116 E5116 Cmd Rej: MO-based GSM SMS NP must be enabled

The IDP A-Party Routing feature must be enabled before the AS specified by the *asn* parameter can contain the CGPNRTG Service Action.

4734 E4734 Cmd Rej: IDP A-Party Routing feature must be enabled

The IDP A-Party Blacklist feature must be enabled before the AS specified for the *asn* parameter can contain the BLKLSTQRY or BLKLSTRLY Service Action.

4737 E4737 Cmd Rej: IDP A-Party Blacklist feature must be enabled

If the AS specified by the *asn* parameter contains the BLKLSTQRY Service Action, then the AS cannot contain any other Service Actions.

4738 E4738 Cmd Rej: BLKLSTQRY and BLKLSTRLY SAs are mutually exclusive

The NPP Unlimited SDWC Characters feature must be turned on before a single digit wildcard (?) can be specified as a value for the *fpx* parameter more than 25 times across all of the rules for an NPP service.

4786 E4786 Cmd Rej: Max 25 FFX single digit wildcard chars '?' per NPP service

If the *srvn=idprcdpn(X)* parameter is specified, then the Action Set specified by the *asn* parameter cannot contain both the ACCGPN* and the CCCGPN Conditioning Actions.

4736 E4736 Cmd Rej: ACCgPN(X) and CCCgPN CAs are mutually exclusive

If a value of *iarcdpn* or *iargcpn* is specified for the *srvn* parameter, then the IAR ASD feature must be enabled before an AS containing the ASDLKUP or CGPNASDRQD Service Action can be specified as a value for the *asn* parameter.

5153 E5153 Cmd Rej: Info Analyzed Relay ASD feature must be enabled

If a value of *iarcdpn* or *iargcpn* is specified for the *srvn* parameter, then the IAR GRN feature must be enabled before an AS containing the GRNLKUP or CGPNGRNRQD Service Action can be specified as a value for the *asn* parameter.

5154 E5154 Cmd Rej: Info Analyzed Relay GRN feature must be enabled

If a value of *iarcdpn* or *iargcpn* is specified for the *srvn* parameter, then the IAR Base feature must be enabled before an AS containing the CCNCCHK, CDIAL, or CGPNSRVRQD Service Action can be specified as a value for the *asn* parameter.

5150 E5150 Cmd Rej: Info Analyzed Relay Base feature must be enabled

If a value of *iarcdpn* or *iargcpn* is specified for the *srvn* parameter, then the IAR NP feature must be enabled before an AS containing the CDNNP or CGNNP Service Action can be specified as a value for the *asn* parameter.

5152 E5152 Cmd Rej: Info Analyzed Relay NP feature must be enabled

If the NPP Service specified by the *srvn* parameter does not support invoking another NPP Service, then only a value of *none* can be specified for the *invkserv* parameter.

5320 E5320 Cmd Rej: INVKSERV value must be NONE for specified SRVN value

If the NPP Service specified by the *srvn* parameter can invoke the TIFCGPN NPP Service, then only a value of *tifcgn* or *none* can be specified for the *invkserv* parameter.

5321 E5321 Cmd Rej: INVKSERV value must be NONE or TIFCGPN

If the NPP Service specified by the *srvn* parameter can invoke the TIFCGPN2 NPP Service, then only a value of *tifcgn2* or *none* can be specified for the *invkserv* parameter.

5322 E5322 Cmd Rej: INVKSERV value must be NONE or TIFCGPN2

If the NPP Service specified by the *srvn* parameter can invoke the TIFCGPN3 NPP Service, then only a value of *tifcgn3* or *none* can be specified for the *invkserv* parameter.

5323 E5323 Cmd Rej: INVKSERV value must be NONE or TIFCGPN3

If the AS specified by the *asn* parameter contains the ASDOTHER or GRNOTHER Formatting Action, then the *invkserv=none* parameter cannot be specified.

5324 E5324 Cmd Rej: FAs ASDOTHER and GRNOTHER require INVKSERV not equal to NONE

If the AS specified by the *asn* parameter contains the CGPNASDRQD, CGPNGRNRQD, CGPNSVCRQD, NSCGPN, or SNSCGPN Service Action, then only a value of *none* can be specified for the *invkserv* parameter.

5325 E5325 Cmd Rej: Action Set with CgPN SAs require Rule INVKSERV equal to NONE

The TIF Range CgPN Blacklist feature must be enabled before:

- an AS containing the NOCGPNRLS Service Action can be specified as a value for the *asn* parameter and a value of *tif*, *tif2*, or *tif3* can be specified for the *srvn* parameter

- an AS containing the FPFXRLS Service Action can be specified as a value for the `asn` parameter and a value of `tifcgnp`, `tifcgnp2`, or `tifcgnp3` can be specified for the `srvn` parameter.

5326 E5326 Cmd Rej: TIF Range CgPN Blacklist feature must be enabled

If the AS specified by the `asn` parameter contains the FPFXRLS Service Action, then no other Service Action can be specified in the AS.

5327 E5327 Cmd Rej: SA FPFXRLS is mutually exclusive with all other SAs

If the AS specified by the `asn` parameter contains the FPFXRLS Service Action, then the AS must also contain a numerical values list with 2 numerical values.

5328 E5328 Cmd Rej: SA FPFXRLS requires 2 SA(X)VAL values

If the AS specified by the `asn` parameter contains the TIFLSBL Service Action, then the AS must also contain a numerical values list with 2 numerical values.

3684 E3684 Cmd Rej: SA TIFLSBL requires 2 SA(X)VAL values

If the AS specified by the `asn` parameter contains the TIFGNBL Service Action, then the AS must also contain a numerical values list with 2 numerical values.

3692 E3692 Cmd Rej: SA TIFGNBL requires 2 SA(X)VAL values

If the AS specified by the `asn` parameter contains the FPFXRLS Service Action, then the 2 numerical values specified by the numerical values list must each be between 0-127.

5329 E5329 Cmd Rej: SA FPFXRLS SA(X)VAL values must be between 0-127

If the AS specified by the `asn` parameter contains the TIFLSBL Service Action, then the 2 numerical values specified by the numerical values list must each be between 0-127.

3696 E3696 Cmd Rej: SA TIFLSBL SA(X)VAL values must be between 0-127

If the AS specified by the `asn` parameter contains the TIFGNBL Service Action, then the 2 numerical values specified by the numerical values list must each be between 0-127.

3700 E3700 Cmd Rej: SA TIFGNBL SA(X)VAL values must be between 0-127

If the AS specified by the `asn` parameter contains the NOCGPNRLS Service Action, then the AS must also contain a numerical values list with 2 numerical values.

5330 E5330 Cmd Rej: SA NOCGPNRLS requires 2 SA(X)VAL values

If the AS specified by the `asn` parameter contains the NOCGPNRLS Service Action, then the 2 numerical values specified by the numerical values list must each be between 0-127.

5331 E5331 Cmd Rej: SA NOCGPNRLS SA(X)VAL values must be between 0-127

The TIF Subscr CgPN Blacklist feature must be enabled before an AS containing the BLRLS or BLNFNDRLS Service Action can be specified as a value for the `asn` parameter, and a value of `tifcgnp`, `tifcgnp2`, or `tifcgnp3` can be specified as a value for the `srvn` parameter.

5332 E5332 Cmd Rej: TIF Subscr CgPN Blacklist feature must be enabled

If the AS specified by the `asn` parameter contains the BLRLS Service Action, then the AS must also contain a numerical values list with 2 numerical values.

5333 E5333 Cmd Rej: SA BLRLS requires 2 SA(X)VAL values

If the AS specified by the `asn` parameter contains the BLRLS Service Action, then the 2 numerical values specified by the numerical values list must each be between 0-127.

5334 E5334 Cmd Rej: SA BLRLS SA(X)VAL values must be between 0-127

If the AS specified by the `asn` parameter contains the BLNFNDRLS Service Action, then the AS must also contain a numerical values list with 2 numerical values.

5335 E5335 Cmd Rej: SA BLNFNDRLS requires 2 SA(X)VAL values

If the AS specified by the `asn` parameter contains the BLNFNDRLS Service Action, then the 2 numerical values specified by the numerical values list must each be between 0-127.

5336 E5336 Cmd Rej: SA BLNFNDRLS SA(X)VAL values must be between 0-127

If the Service specified by the `srvn` parameter does not support a numerical value list for the first Service Action in the AS specified by the `asn` parameter, then the `sa1val` parameter in the AS can only have a value of *none*.

5337 E5337 Cmd Rej: SA1 does not support SA1VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a numerical value list for the second Service Action in the AS specified by the `asn` parameter, then the `sa2val` parameter in the AS can only have a value of *none*.

5338 E5338 Cmd Rej: SA2 does not support SA2VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a numerical value list for the third Service Action in the AS specified by the `asn` parameter, then the `sa3val` parameter in the AS can only have a value of *none*.

5339 E5339 Cmd Rej: SA3 does not support SA3VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a numerical value list for the fourth Service Action in the AS specified by the `asn` parameter, then the `sa4val` parameter in the AS can only have a value of *none*.

5340 E5340 Cmd Rej: SA4 does not support SA4VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a numerical value list for the fifth Service Action in the AS specified by the `asn` parameter, then the `sa5val` parameter in the AS can only have a value of *none*.

5341 E5341 Cmd Rej: SA5 does not support SA5VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a numerical value list for the sixth Service Action in the AS specified by the `asn` parameter, then the `sa6val` parameter in the AS can only have a value of *none*.

5342 E5342 Cmd Rej: SA6 does not support SA6VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a numerical value list for the seventh Service Action in the AS specified by the `asn` parameter, then the `sa7val` parameter in the AS can only have a value of *none*.

5343 E5343 Cmd Rej: SA7 does not support SA7VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a numerical value list for the eighth Service Action in the AS specified by the `asn` parameter, then the `sa8val` parameter in the AS can only have a value of *none*.

5344 E5344 Cmd Rej: SA8 does not support SA8VAL for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the first Service Action in the AS specified by the `asn` parameter, then the `sa1dgts` parameter in the AS can only have a value of *none*.

5345 E5345 Cmd Rej: SA1 does not support SA1DGTS for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the second Service Action in the AS specified by the `asn` parameter, then the `sa2dgts` parameter in the AS can only have a value of *none*.

5346 E5346 Cmd Rej: SA2 does not support SA2DGTS for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the third Service Action in the AS specified by the `asn` parameter, then the `sa3dgts` parameter in the AS can only have a value of *none*.

5347 E5347 Cmd Rej: SA3 does not support SA3DGTS for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the fourth Service Action in the AS specified by the `asn` parameter, then the `sa4dgts` parameter in the AS can only have a value of *none*.

5348 E5348 Cmd Rej: SA4 does not support SA4DGTS for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the fifth Service Action in the AS specified by the `asn` parameter, then the `sa5dgts` parameter in the AS can only have a value of *none*.

5349 E5349 Cmd Rej: SA5 does not support SA5DGTS for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the sixth Service Action in the AS specified by the `asn` parameter, then the `sa6dgts` parameter in the AS can only have a value of *none*.

5350 E5350 Cmd Rej: SA6 does not support SA6DGTS for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the seventh Service Action in the AS specified by the `asn` parameter, then the `sa7dgts` parameter in the AS can only have a value of *none*.

5351 E5351 Cmd Rej: SA7 does not support SA7DGTS for specified SRVN value

If the Service specified by the `srvn` parameter does not support a digit string for the eighth Service Action in the AS specified by the `asn` parameter, then the `sa8dgts` parameter in the AS can only have a value of *none*.

5352 E5352 Cmd Rej: SA8 does not support SA8DGTS for specified SRVN value

If the NPP Unlimited SDWC Characters feature is turned on, then the value specified for the `fpfx` parameter cannot contain more than three single digit wildcards (?).

4856 E4856 Cmd Rej: PFX contains more than three ?

If the NPP Unlimited SDWC Characters feature is turned on, then the value specified for the `fpx` parameter can contain single digit wildcards (?) within only the first six digits.

4958 E4958 Cmd Rej: ? must be in the first six FPFX digits

The TIF Selective Screening feature must be enabled before an AS containing the SELSCR, FPFXRLS, BLRLS, or BLNFNDRLS Service Action can be specified as a value for the `asn` parameter, and a value of `tif`, `tif2`, or `tif3` can be specified as a value for the `srvn` parameter.

2330 E2330 Cmd Rej: TIF Selective Screening feature must be enabled

If the AS specified by the `asn` parameter contains the SELSCR Service Action, then no TIF Number Substitution (NSCGPN or NSCDPN) Service Action can be specified in the AS.

2352 E2352 Cmd Rej: SA SELSCR is mutually exclusive with TIF NS SAs.

If the AS specified by the `asn` parameter contains the SELSCR Service Action, then the 2 numerical values specified by the numerical values list must be none or between 0-127.

2363 E2363 Cmd Rej: SA SELSCR SA(X)VAL values must be none or between 0-127.

Only one call type can be specified for the SELSCR SA. If the AS specified by the `asn` parameter contains the SELSCR SA, the corresponding SA Digit String specified must be none or between 1-FF.

2591 E2591 Cmd Rej: SA SELSCR SA(X)DGTS value must be none or between 1-FF.

The CGPNSVCRQD and NPNRLS Service Actions cannot exist within the same Action Set.

4987 E4987 Cmd Rej: Service actions CgpnSvcRqd and NPRLS are mutually exclusive

SUBCDPN must be configured in TIFOPTS in order to apply TIFRDNBL SA.

3639 E3639 Cmd Rej: SUBCDPN should be configured in TIFOPTS for TIFRDNBL SA.

ASD related SAs cannot be configured in same srs.

E5026 Cmd Rej: ASDLKUP, CGPNASDRQD and TIFRDNBL are mutually exclusive.

Notes

None.

The following error messages were deleted in release 41.1 for PR 135911: E4856 and E4958. These two error messages were re-added and slightly modified for PR 194229 that is in releases 42.1 and 44.0 (and later). These two error messages are NOT in release 43.0.

Output

```
ent-npp-srs:srvn=nppt:fpx=abc:fdl=16:fnai=intl:asn=asn3
```

```
tekelecstp 09-02-19 13:57:09 EST EAGLE 40.1.0
```

```
NPP-SRS table is (1 of 8192) 1% full.

ENT-NPP-SRS: MASP A - COMPLTD
;
```

Related Topics

- [chg-npp-as](#)
- [chg-npp-srs](#)
- [dlt-npp-srs](#)
- [ent-npp-as](#)
- [rtrv-npp-as](#)
- [rtrv-npp-srs](#)

4.1.332 ent-pct

Use this command to enter Point Code and CIC Translations.

Parameters

epc (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

epca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

epci (mandatory)

ITU international destination point code with subfields *zone-area-id*.

Range:

0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

epcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-*

`stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range:

0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

realpc (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

realpca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001–005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

realpci (mandatory)

ITU international destination point code with subfields *zone-area-id*.

Range:

0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

realpcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range:

0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

ecice (optional)

The end of the Emulated Circuit Identification Code range.

Range:

0-4095
ITU TUP/ISUP

0-16383
ANSI ISUP

0-4294967295
ANSI Q.BICC

*

Default:

*

ecics (optional)

The start of the Emulated Circuit Identification Code range.

Range:

0-4095
ITU TUP/ISUP

0-16383
ANSI ISUP

0-4294967295
ANSI Q.BICC

*

Default:

*

filtpc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

filtpca

Range:

0-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

When *chg-sid:pctype=ansi* is specified, *ni-*.** is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

filtpci (optional)

ITU international destination point code with subfields *zone-area-id*.

Range:

0-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

filtpcn (optional)ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).**Range:**

0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14**rcice (optional)**

The end of the Real Circuit Identification Code range.

Range:**0-4095**

ITU TUP/ISUP

0-16383

ANSI ISUP

0-4294967295

ANSI Q.BICC

*

Default:

*

rcics (optional)

The start of the Real Circuit Identification Code range.

Range:**0-4095**

ITU TUP/ISUP

0-16383

ANSI ISUP

0-4294967295

ANSI Q.BICC

*

Default:

*

relcause (optional)

Release Cause

Range:

0 - 127

Default:

0

si (optional)

Service Indicator

Range:**0**

NM

3

SCCP

5

ISUP

4

TUP

13

ANSI Q. BICC

*

Default:

*

ssn (optional)

SCCP Subsystem number

Range:

0 - 255

Default:

*

Example`ent-pct:epc=1-1-1:realpc=2-2-2:si=5:ecics=100:ecice=200``ent-pct:epc=1-1-2:realpc=2-2-3:si=3:ssn=10:filtpc=5-5-5`**Dependencies**

If the `ecice` or `rcice` parameter is specified, then the `ecics` or `rcics` parameter must be specified, respectively.

4580 E4580 Cmd Rej: CIC must be specified if ECIC is specified

The value specified for the `ecice/rcice` parameter must be equal to or greater than the value specified for the `ecics/rcics` parameter, respectively.

4404 E4404 Cmd Rej: End value must be greater than or equal to a starting value

Full point codes must be specified as the values for the `realpc/realpca/realpci/realpcn` and `epc/epca/epci/epcn` parameters.

3090 E3090 Cmd Rej: Full Point Code must be specified

The PCT table is corrupt or cannot be found.

5392 E5392 Cmd Rej: The PCT table is corrupt or cannot be found

The PCT table cannot contain more entries than the amount specified by the FAK for the PCT quantity feature.

5390 E5390 Cmd Rej: PCT table is full

The `si=3` parameter must be specified before the `ssn` parameter can be specified.

5424 E5424 Cmd Rej: Invalid SI value specified

The values specified for the `realpc/realpca/realpci/realpcn` and `filtpc/filtpca/filtpci/filtpcn` parameters must already exist in the Route table.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The values specified for the `epc/epca/epci/epcn`, `filtpc/filtpca/filtpci/filtpcn`, and `realpc/realpca/realpci/realpcn` parameters must have the same domain.

4606 E4606 Cmd Rej: Point code type mismatch

A PCT quantity feature must be enabled before this command can be specified.

5391 E5391 Cmd Rej: PCT feature must be enabled

If the `ssn` or `ecics` parameter is specified, then the `si` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

Duplicate values for the following Key combinations are not allowed:

- `epc/epca/epci/epcn + filtpc/filtpca/filtpci/filtpcn + si + ssn/(ecics/ecice)`
- `realpc/realpca/realpci/realpcn + filtpc/filtpca/filtpci/filtpcn + si + ssn/(rcics/rcice)`

5393 E5393 Cmd Rej: Duplicate keys are not allowed

The values specified for the `realpc/realpca/realpci/realpcn` and `filtpc/filtpca/filtpci/filtpcn` parameters must have at least one route for each value defined in the Route table.

2642 E2642 Cmd Rej: DPC must have at least one route defined

If the ITUDUPPC feature is turned on, and ITU-N Point codes are specified, then the values specified for the `epcn`, `realpcn`, and `filtpcn` parameters must have the same group code.

5394 E5394 Cmd Rej: Group Code of EPC, RealPC and FiltPC must match

A total of 250 unique `epc` and `rpc` values are supported in the PCT table.

5398 E5398 Cmd Rej: Max no of unique EPCs/RealPCs cannot exceed 250

A total of 100 PCT Translations with a single `epc` and `realpc` value are supported in the PCT table.

5399 E5399 Cmd Rej: Max no of PCT Translations per EPC/RealPC cannot exceed 100

A spare point code cannot be specified as a value for the `epci/epcn`, `filtpci/filtpcn`, and `realpci/realpcn` parameters.

5400 E5400 Cmd Rej: Spare point code is not allowed

The `ecics` parameter must be specified before the `relcause` parameter can be specified.

2379 E2379 Cmd Rej: Missing parameter

A value of 4, 5, or 13 must be specified for the `si` parameter before the `ecice/ecics` and `rcice/rcics` parameters can be specified.

5424 E5424 Cmd Rej: Invalid SI value specified

If the `rcics` parameter is specified, then the `ecics` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

If the `ecics`, `ecice`, and `rcics` parameters are specified, then the `rcice` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

The values specified for the `epc/epca/epci/epcn`, `filtpc/filtpca/filtpci/filtpcn`, and `realpc/realpca/realpci/realpcn` parameters cannot be the same as the STP point code.

2168 E2168 Cmd Rej: Point code matches a STP point code

The values specified for the `epc/epca/epci/epcn`, `filtpc/filtpca/filtpci/filtpcn`, and `realpc/realpca/realpci/realpcn` parameters cannot be the same as the STP capability point code.

2167 E2167 Cmd Rej: Point code matches a STP capability point code

The value specified for the `ecics/ecice` and `rcics/rcice` parameters must be within the range specified by the parameter definition.

3878 E3878 Cmd Rej: CIC outside of valid range for SI

The difference between the values specified for the `ecice` and `ecics` parameters must be equal to the difference between the values specified for the `rcice` and `rcics` parameters.

5426 E5426 Cmd Rej: ECICS/ECICE and RCICS/RCICE should be in same range

A value of 5 or 13 must be specified for the `si` parameter before the `relcause` parameters can be specified.

5424 E5424 Cmd Rej: Invalid SI value specified

The `ssn` and `cic` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `ecics`, `rcics`, and `rcice` parameters are specified, then the `ecice` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

If the same value is specified for the `epc` and `realpc` parameters, then the values specified for the `ecics/ecice` and `rcics/rcice` parameters cannot indicate the same range.

5433 E5433 Cmd Rej: ECIC/Real CIC range can't be same if EPC is same as Real PC

Only one of the `filtpc/filtpca/filtpci/filtpcn` parameters can be specified in the command.

5440 E5440 Cmd Rej: Only one of FILTPC/A, FILTPCI, or FILTPCN may be specified

The value specified for the `epc/epci/epcn` parameter cannot be the same as a secondary point code.

4238 E4238 Cmd Rej: Point code matches a STP secondary point code.**Output**

```
ent-
pct:epc=1-1-1:realpc=5-5-5:si=13:ecics=10:ecice=20:relcause=15
```

```
tekelecstp 10-08-10 18:29:41 EST EAGLE 43.0.0
ent-pct:epc=1-1-1:realpc=5-5-5:si=13:ecice=10:ecics=20:relcause=15
Command entered at terminal #4.
ENT-PCT: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-pct](#)
- [rtrv-pct](#)

4.1.333 ent-rmt-appl

Use this command to assign user parts to an internal point code that, in turn, assigns user parts to an End Office node.

Parameters**Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

ipc (mandatory)

ANSI point code with subfields network indicator-network cluster-network cluster member (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

ipca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

ipc/ipca/ipci/ipcn/ipcn24/ipcn16 (mandatory)

End Node's internal point code.

ipci (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

ipcn (mandatory)

ITU national point code with subfield ITU number (*nnnnn*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

ipcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range:*p-*, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000—255**ssa—000—255**sp—000—255***ipcn16 (mandatory)**16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*. The *prefix* indicates a private point code (*prefix- un-sna-mna*).**Range:***p--*, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix---p**un---000---127**sna---000---15**mna---000---31***si (mandatory)**

Service indicator value that designates which user part is assigned to the IPC.

Range:

3 - 15

ssn (optional)SCCP subsystem number. Valid only if *si*=3. Use *ssn* as the starting value of the range if *ssne* is specified.**Range:**

0 - 255

ssne (optional)

The end of the range of subsystem numbers.

Range:

1 - 255

Example`ent-rmt-appl:ipc=0-0-1:si=3:ssn=5``ent-rmt-appl:ipc=0-0-1:si=3:ssn=5:ssne=100``ent-rmt-appl:ipc=0-0-1:si=5``ent-rmt-appl:ipcn24=1-100-1:si=5``ent-rmt-appl:ipc=p-1-1-1:si=3:ssn=5:ssne=102`


```
ent-rmt-appl:ipci=ps-2-2-2:si=5
```

```
ent-rmt-appl:ipcn16=1-2-1:si=5
```

Dependencies

Partial point codes are not allowed.

2166 E2166 Cmd Rej: Partial point codes are not allowed

The `ssn` parameter is required if `si=3`.

3743 E3743 Cmd Rej: SSN required if SI is 3

The `ssn` and `ssne` parameters are not allowed unless `si=3`.

3757 E3757 Cmd Rej: SSN is not allowed unless SI is 3

The `ssne` parameter value must be greater than the `ssn` parameter value.

3018 E3018 Cmd Rej: SSNE should be greater than SSN

The specified IPC must be previously defined in the destination table.

2657 E2657 Cmd Rej: Point code not defined

The new entry cannot conflict with an existing entry.

3019 E3019 Cmd Rej: Conflicts with existing entry

Notes

To specify a range of subsystem numbers, specify the `ssn` parameter value as the start of the range and the `ssne` parameter value as the end of the range.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

Output

```
ent-rmt-appl:ipc=0-0-1:si=3:ssn=5
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
ENT-RMT-APPL: MASP A - COMPLTD
;
```

Related Topics

- [dlt-rmt-appl](#)
- [rtrv-rmt-appl](#)

4.1.334 ent-rte

Use this command to add a route to the system.

 **Caution:**

When using the Network Routing feature, limited network management is provided for point codes not covered by full point code routing, Cluster Routing, or Nested Cluster Routing.

Parameters **Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

lsn (mandatory)

The linkset name associated with this route.

Range:

ayyyyyyyy

1 alphabetic character followed by 9 alphanumeric characters

rc (mandatory)

The relative cost of the route

Range:

0 - 99

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dPCA

Range:

p-, 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When `chg-sid:pctype=ansi` is specified, *ni* = 000 is not valid.

When `chg-sid:pctype=ansi` is specified, *nc* = 000 is not valid if *ni* = 001–005.

When `chg-sid:pctype=ansi` is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

dpc/dPCA/dPCi/dPCn/dPCn24/dPCn16 (optional)

Destination point code.

dpci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000-255

ssa—000-255

sp—000-255

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*). The *prefix* indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

force (optional)

This parameter allows a route to be added to the database even if the linkset to be assigned to the route does not have any signaling links in it.

Range:

yes

Example

Adds route for DPC 1 to linkset WE123642:

```
ent-rte:dpc=1-1-1:lsn=we123642:rc=25
```

Adds route for DPC 21-*-* to linkset WE123642:

```
ent-rte:dpc=21-*-*:lsn=we123642:rc=25
```

Adds route for DPCN24 10-100-14 to linkset WE123624:

```
ent-rte:dpcn24=10-100-14:lsn=we123624:rc=10
```

Adds route for private DPC p-1-1-1 to linkset WE123642:

```
ent-rte:dpc=p-1-1-1:lsn=we123642:rc=25
```

Adds route for private and spare DPCN ps-4082-ge to linkset E1NITUN:

```
ent-rte:dpc=ps-4082-ge:lsn=e1ntitun:rc=10
```

Adds route for private DPCN24 p-10-100-14 to linkset WE123642:

```
ent-rte:dpcn24=p-10-100-1:lsn=we123642:rc=10
```

Adds route for private and spare DPCI s-1-100-1 to linkset UE123642:

```
ent-rte:dpci=s-1-100-1:lsn=ue123642:rc=10
```

Adds route for DPCN16 121-10-15 to linkset WE123642:

```
ent-rte:dpcn16=121-10-15:lsn=we123642:rc=10
```

Dependencies

The value of the `lsn` parameter must exist in the STP database.

2346 E2346 Cmd Rej: Linkset not defined

The DPC must be in the Destination Point Code table.

2657 E2657 Cmd Rej: Point code not defined

The destination point code of a route must be a full point code (*ni-nc-ncm*), a cluster point code (*ni-nc-**), or a network point code (*ni-*-**).

2886 E2886 Cmd Rej: DSTN address must be a full, network or cluster PC

If the specified destination address is a full point code address (*ni-nc-ncm*) and is a member of a provisioned cluster (*ni-nc-**), whether ordered routes can be assigned is determined by the destination address's NCAI (nested cluster allowed indicator). The `ncai=yes/no` parameter is set with the `ncai` parameter of the `ent/chg-dstn` commands.

- If the `ncai=no` parameter is specified, destinations comprising a cluster inherit their ordered routes from the cluster.
- If the `ncai=yes` parameter is specified, then the destination address is a member of a provisioned nested cluster where ordered routes can be assigned to a provisioned member.

2878 E2878 Cmd Rej: Ordered routes cannot be assigned to cluster members

If the specified destination address is a network cluster address (*ni-nc-**), the assignment of the specified ordered route attributes is determined by the setting of the destination address's NCAI (nested cluster allowed indicator). The `ncai=yes/no` parameter is set with the `ncai` parameter of the `ent/chg-dstn` commands.

- If the `ncai=no` parameter is specified, the collection of signaling point codes having the same network identifier (the `ni` parameter) and network cluster (the `nc` parameter) code are assigned the specified ordered route.
- If the `ncai=yes` parameter is specified, then the specified destination is a network cluster address where provisioned members's signaling point codes can be assigned the same or different ordered routes from the cluster.

2878 E2878 Cmd Rej: Ordered routes cannot be assigned to cluster members

If the `dpcn` parameter is specified, the format of the point code(s) must match the format that was assigned with `chg-stpopts:npcfmti`.

2997 E2997 Cmd Rej: PC must match NPCFMTI set in CHG-STPOPTS

The `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter cannot be specified with a private point code (-p) unless the route is an IPGW route.

4279 E4279 Cmd Rej: Only IPGWx routes are allowed for private PCs

The route destination's type must match the route's linkset adjacent point code or the route's linkset secondary adjacent point code type.

3616 E3616 Cmd Rej: APC/SAPC type and group code must match DPC

If the `ipgwapc=yes` parameter is specified for the linkset, then the associated `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter cannot have a cluster route assigned.

3830 E3830 Cmd Rej: DPC can't specify cluster rte for IPGWx or IPSG-M3UA linkset

The linkset must be defined with at least one link. To override this requirement, specify `force=yes`.

2128 E2128 Cmd Rej: Linkset assigned to route must have at least one link

The 6-Way Loadsharing on Routesets feature must be turned on before more than 2 routes can be provisioned with the same relative cost.

2350 E2350 Cmd Rej: At most two linksets can be assigned same cost

A linkset can be entered only once as a route for each destination or for a routeset.

2355 E2355 Cmd Rej: Linkset already assigned to route

If the specified destination address is a network address (*ni-*-**), or network cluster address (*ni-nc-**), the linkset type (see the `chg-ls` command) used in the route must be *b*, *c*, or *d*.

2349 E2349 Cmd Rej: Linkset Type used for network/cluster route can't be A or E

All routes with ANSI DPCs must use ANSI linkset APCs. A route with an ITU-I DPC can go over an ITU-N APC and an ITU-N DPC can go over an ITU-I APC.

3837 E3837 Cmd Rej: Command not valid for IPGHC

If the link set name (the `lsn` parameter) references a link set that has the `ipgwapc=yes` parameter specified, the DPC must not be a cluster route.

2878 E2878 Cmd Rej: Ordered routes cannot be assigned to cluster members

The NRT feature must be turned on before the `dpc/dpca` parameter can be specified using the asterisk (*) in the `nc` or `ncm` subfields.

2955 E2955 Cmd Rej: Network Routing is only valid if the NRT feature is ON

When using network routing, if the DPC has a value of * in the `nc` field, the `ncm` field must also be * (for example, `dpc=21-*-*`).

2956 E2956 Cmd Rej: NCM must be * when using Network Routing

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The STP Site ID table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The value of the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter cannot be the same as the EAGLE point code.

2168 E2168 Cmd Rej: Point code matches a STP point code

The value of the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter cannot be the same as the EAGLE capability point code.

2167 E2167 Cmd Rej: Point code matches a STP capability point code

The value of the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter cannot have already been assigned to an APC or SAPC for an IPGWx linkset. The entered route must include the APC or SAPC's linkset with the destination equal to the APC or SAPC.

4582 E4582 Cmd Rej: Single rte to APC or SAPC for IPGW LS allowed

If `dpcn` is specified then the format of `dpcn` must match the format dictated by the `chg-stpopts:npcfmti` command

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

The ITU-N ordered route destination's group code must match the route's Link Set Adjacent PC's group code for all linksets other than IPGWI and IPLHC.

3882 E3882 Cmd Rej: Group Code of destination & Link set Adjacent PC must match

The group code must match for all linksets because the ITU Duplicate Point Code feature is on.

3616 E3616 Cmd Rej: APC/SAPC type and group code must match DPC

All linksets in a routeset must have the same network type. The network type of the routeset must be the same as the network type of the destination point code.

3877 E3877 Cmd Rej: ANSI/ITU point code type mismatch

If multiple routes are defined for the destination point code, and if a proxy point code is assigned to the destination point code, then the first route defined in the `ent-rte` command must use the proxy linkset.

4708 E4708 Cmd Rej: One route must use PPC assigned in route(dstn) table

If the `dpc` parameter has a network cluster address (`ni-nc-*`) or network address (`ni-*-*`), then the `lst=prx` parameter cannot be specified.

4726 E4726 Cmd Rej: Linkset Type for Network/Cluster Route can't be PRX

The SAPC table is corrupt or cannot be found.

3282 E3282 Cmd Rej: Failed reading the SAPC table

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

Output

```
ent-rte:dpc=1-1-1:lsn=we123642:rc=25
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0  
ENT-RTE: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-dstn](#)
- [chg-rte](#)
- [dlt-dstn](#)
- [dlt-rte](#)
- [ent-dstn](#)
- [rept-stat-dstn](#)
- [rept-stat-rte](#)
- [rtrv-dstn](#)
- [rtrv-rte](#)

4.1.335 ent-rtx

Use this command to enter an exception route entry. An exception route is associated with an entry in the Routing table. When the Origin-Based MTP Routing feature is enabled and turned on, the least cost route available for an MSU to be routed to a Destination Point Code over a specified linkset is used.

Up to 6 routes can be defined to a single entry in the Routing table. Up to 8000 routesets can be defined for an STP. This total must include at least one normal route (not an exception route). The remaining 7999 routesets can include any combination of normal and exception routes.

Note:

A routeset is a collection of routes to a destination. Each routeset can have up to 6 routes, with 16 links on each route. An exception routeset is a collection of up to 6 exception routes that have the same DPC, exception class, and criteria.

Parameters

dpc (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (mandatory)

Destination point code.

dpci (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps*

zone—*0-7*

area—*000-255*

id—*0-7*

The point code *0-000-0* is not a valid point code.

dpcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmiti` flexible point code option. A group code must be specified when the ITUDUPPDC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p*-, *ps*-, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps*

nnnnn—*0-16383*

gc—*aa-zz*

m1-m2-m3-m4—*0-14* for each member; values must sum to 14

dpcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, *000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—*000-255*

ssa—*000-255*

sp—*000-255*

dpcn16 (mandatory)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, *000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---*p*

un---*000*---*127*

sna---*000*---*15*

mna---*000*---*31*

lsn (mandatory)

Linkset Name. The name of the linkset that is associated with the specified exception route.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

rc (mandatory)

Relative Cost. The relative cost associated with the specified exception route.

Range:

0 - 99

cic (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the `ecic` parameter as exception routing criteria for the specified exception route.

Range:

0 - 16383

ecic (optional)

Ending Circuit Identification Code. This parameter, together with the `cic` parameter, defines the CIC range that is used as exception routing criteria for the specified exception route.

Range:

0 - 16383

force (optional)

The `force=yes` parameter must be specified when the `ilsn` parameter value is the same as the `lsn` parameter value.

Range:

yes

ilsn (optional)

Incoming Link Set Name. The name of the originating linkset. This value is used as part of the exception routing criteria for the specified exception route.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

opc (optional)

ANSI origination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

opca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

opc/opca/opci/opcn/opcn24/opcn16 (optional)

Originating Point Code

opci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

opcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmit* flexible point code option. A group code must be specified when the ITUDUPPDC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

opcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, *000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000-255

ssa—000-255

sp—000-255

opcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, *000--127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (--).

prefix---p

un--000---127

sna--000--15

mna--000--31

si (optional)

Service Indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range:

3 - 15

Example

```
ent-rtx:dpc=1-1-1:opca=2-3-3:lsn=1set1:rc=30
```

```
ent-rtx:dpc=1-3-1:ilsn=1set2:lsn=1set3:rc=20
```

```
ent-rtx:dpc=2-100-1:si=5:lsn=1set5:rc=50
```

The variables in the Scroll Area messages that are used by this command can have the following values:

<Cmd Keyword> = ENT-RTX

<Table> = Link Set

<Table> = Route

<Table> = rtx

Searching rtx table on disk - please wait...

Dependencies

Only one of the *opc*, *ilsn*, *cic*, or *si* parameters can be specified for a exception route entry.

4435 E4435 Cmd Rej: OPC/ILSN/CIC/SI is mandatory and mutually exclusive

For an ANSI origination point code that is defined using asterisks (*nnn-*-**), the value of the *network identifier* subfield (*nnn*) must be greater than 5.

2169 E2169 Cmd Rej: Point code out of range

If the *ecic* parameter is specified, the *cic* parameter must also be specified.

4580 E4580 Cmd Rej: CIC must be specified if ECIC is specified

The *ecic* parameter value cannot be less than the *cic* parameter value.

4404 E4404 Cmd Rej: End value must be greater than or equal to a starting value

The *opc/opca/opci/opcn/opcn24/opcn16* parameter value cannot be the same as the *dpc* parameter value.

4387 E4387 Cmd Rej: OPC must not be identical to DPC

The Origin-Based MTP Routing feature must be enabled and turned on before this command can be entered.

4584 E4584 Cmd Rej: MTP Origin Based Routing Feature must be ON

The point code specified by the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter must already exist in the Route table.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

The value specified for the `dpc` parameter cannot already be used as an adjacent point code (APC).

4388 E4388 Cmd Rej: Exception route cannot be assigned to adjacent point code

The linkset name, as defined by the `ilsn` or `lsn` parameter, must exist.

2346 E2346 Cmd Rej: Linkset not defined

An exception route entry cannot already exist with the same input parameter values, other than the relative cost.

4375 E4375 Cmd Rej: Route Exception already exists for input parameters

The 6-Way Loadsharing on Routesets feature must be turned on before more than 2 routes can be provisioned with the same relative cost for a given exception route criteria.

4376 E4376 Cmd Rej: Maximum matching Route Exceptions already exist for DPC

A maximum of 6 exception routes can be associated with the specified DPC and criteria.

4377 E4377 Cmd Rej: Maximum Route Exceptions already exist per DPC and Criteria

A maximum total of 8000 exception routes and normal routes can be defined for the EAGLE. At least one route must be a normal (not exception) route. The remaining routes (up to 7999) can be all normal routes, all exception routes, or any combination of normal and exception routes.

4378 E4378 Cmd Rej: Maximum Route Exceptions already exist for this STP

The network domain of the adjacent point code in the linkset or of the routes in the specified routeset must be the same as the network domain of the specified destination point code or its alias.

3877 E3877 Cmd Rej: ANSI/ITU point code type mismatch

The adjacent or secondary point code type and group code of the linkset or linksets in the specified routeset must match the point code type and group code of the destination point code.

3616 E3616 Cmd Rej: APC/SAPC type and group code must match DPC

The specified CIC/ECIC range must not overlap an existing range.

4381 E4381 Cmd Rej: CIC Range overlaps an existing range

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The Route Exception table is corrupt or cannot be found.

4379 E4379 Cmd Rej: Failed to access Route Exception Table

If the `ilsn` and `lsn` parameters have the same value, or if the value specified for the `opc/opca/opci/opcn/opcn24/opcn16` parameter is the same as the APC of the linkset specified by the `lsn` parameter, then the `force=yes` parameter must be specified.

3799 E3799 Cmd Rej: FORCE=YES must be specified

The `opcn` parameter must be in the same ITU-N group as the `dpcn` parameter.

4001 E4001 Cmd Rej: Group Code of DPCN and OPCN must match

The Group Code of the APCN in the `ilsn` parameter must be the same as the Group Code of the `dpcn` parameter.

4905 E4905 Cmd Rej: Group Code of APCN of ILSN must be equal to that of DPCN

ANSI network routing and cluster point codes as OPC exception route criteria are not allowed for ITU destinations.

4111 E4111 Cmd Rej: Network/Cluster OPC cannot be criteria for DPCI/DPCN

ITU point codes as OPC exception route criteria are not allowed for ANSI Network and Cluster destination.

4112 E4112 Cmd Rej: ITU OPC cannot be the criteria for Network/Cluster ANSI DPC

If the `lsn` parameter is specified, then the `rc` parameter must be specified.

4750 E4750 Cmd Rej: A cost must be specified with a linkset

If a proxy destination is used, then this command cannot be entered.

4733 E4733 Cmd Rej: Exception route does not support proxy destinations

The value specified for the destination point code must be a full point code and not a cluster or network point code.

2859 E2859 Cmd Rej: Destination address must be a full point code

The destination point code specified by the `dpc` parameter must have routes provisioned.

4799 E4799 Cmd Rej: DPC does not have any routes provisioned

The Nested Cluster Routing feature must be turned on before an exception route can be assigned to cluster members.

4391 E4391 Cmd Rej: Exception route cannot be assigned to cluster members

The STPOPTS table is corrupt or cannot be found.

2852 E2852 Cmd Rej: Failed reading STP Options table

The value specified for the `opc/opca/opci/opcn/opcn24/opcn16` parameter cannot be the same as the adjacent point code of the linkset specified by the `lsn` parameter.

4925 E4925 Cmd Rej: OPC must not be identical to APC of linkset

The J7 Support feature must be enabled before the `dpcn16/opcn16` parameter can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled

Output

```
ent-rtx:dpci=2-100-1:si=5:lsn=1set5:rc=50
```

```
stdcfg2b 06-05-19 18:20:11 EST EAGLE 35.0.0  
ENT-RTX: MASP A - COMPLTD
```

Related Topics

- [chg-rtx](#)
- [dlt-rtx](#)
- [rept-stat-rtx](#)
- [rtrv-rtx](#)

4.1.336 ent-scr-aftpc

Use this command to add a specific allowed affected point code (AFTPC) screening reference in the AFTPC entity set.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

nsfi (mandatory)

The next screening category that is used in the gateway screening process.

Range:

stop

The gateway screening process ends and the message proceeds through normal routing.

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

ssn (mandatory)

Subsystem number.

Range:

0 - 255, *

*—the full range of values from 0–255

actname (optional)

Name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

0 - 255, *

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

0 - 7, *

*—the full range of values from 0–255

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

0---31, *

*---the full range of values from 0--31

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

npc (optional)

ITU national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) for information on converting the point code format.

Range:

0 - 16383, *

*—the full range of values from 0–16383

nsr (optional)

Next screening reference. This parameter specifies which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No change to the current value

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:*none***sna (optional)**

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:*0--15, ****---the full range of values from 0--15***sp (optional)**

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:*0 - 255, ****—the full range of values from 0–255***ssa (optional)**

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:*0 - 255, ****—the full range of values from 0–255***un (optional)**

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:*0--127, ****---the full range of values from 0--127***zone (optional)**

ITU international zone. The *zone* in the point code represented by *zone-area-id*.

Range:*0 - 7, ****—the full range of values from 0–255***Example**

```
ent-scr-aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=012:nsfi=stop
```

```
ent-scr-
```

```
aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=012:nsfi=stop:actname=copy
```

```
ent-scr-aftpc:nsfi=stop:sr=af01:ssn=1:msa=255:ssa=255:sp=255
```

```
ent-scr-aftpc:sr=aft1:zone=1:area=2:id=3:nsfi=stop:ssn=1:pcst=s
```

```
ent-scr-aftpc:nsfi=stop:sr=af02:ssn=1:un=10:sna=2:mna=5
```

Dependencies

▲ Caution:

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gws=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, and must be one, and only one of the five point code parameter combinations: `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or `npc`.

2556 E2556 Cmd Rej: A complete point code must be entered

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

The character `c` is not a valid value for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `msa`, `ssa`, `sp`, `un`, `sna`, `mna`, and `npc` parameters.

2527 E2527 Cmd Rej: C value not allowed

If `zone=*` is specified, `area=*` and `id=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `area=*` is specified, `id=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `msa=*` is specified, `ssa=*` and `sp=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `ssa=*` is specified, `sp=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `un=*` is specified, `sna=*` and `mna=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `sna=*` is specified, `mna=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If specified, the `nsfi` parameter value must be `stop`.

3271 E3271 Cmd Rej: NSFI is invalid

If the `nsfi=stop` parameter is specified, the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

If the screening reference exists, the new affected point code and subsystem number to be added cannot already exist in the AFTPC entity set.

2561 E2561 Cmd Rej: PC/SSN already exists in given SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` and `npcst` parameters cannot be specified for ANSI, ITU-N24 and ITU-N16 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

The Gateway Screening Rules table can contain a maximum of 360,600 rules.

2565 E2565 Cmd Rej: Gateway screening rules table is full

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The J7 support feature must be enabled before the `un`, `sna`, or `mna` parameters can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 support feature must not be enabled before the `msa`, `ssa`, or `sp` parameters can be specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

If the screening reference is valid, but does not exist, a new AFTPC screen is created.

If the screening reference exists, a new rule is added to the AFTPC screening table.

If asterisks or ranges are specified for the allowed AFTPCs, nothing that matches the specified range of AFTPCs can already exist in the AFTPC screen for the screening reference.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original `ent-scr-aftpc` command.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix to has the spare point code prefix.

There is no feature dependency on ANSI point code parameters, i.e., `ni`, `nc`, `ncm`. The command can be entered successfully whether the J7 feature is enabled or not enabled.

Output

```
ent-scr-aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=012:nsfi=stop
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-AFTPC: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-AFTPC: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-aftpc](#)
- [dlt-scr-aftpc](#)
- [rtrv-scr-aftpc](#)

4.1.337 ent-scr-blkdpc

Use this command to add a specific blocked destination point code (BLKDPC) screening reference, and associated attributes, to the BLKDPC's table. The associated attributes are: destination point code, next screening function identifier, and next screening reference. The

destination point codes listed on this screen are prohibited from sending SS7 messages to the network.

Parameters

nsfi (mandatory)

The next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

cgpa

Allowed CGPA is the next screening category.

destfld

Allowed destination field (DESTFLD) is the next screening category.

fail

Discard the received message.

isup

ISUP message type (ISUP) is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

actname (optional)

Name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyy

1 alphabetic character followed by up to 5 alphanumeric characters

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, *, C*

*—the full range of values from 0–255

C—continue

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

0 - 7, *, C

*—the full range of values from 0–7

C—continue

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

0--31, *, C

*--the full range of values from 0--31

C -- continue

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

npc (optional)

ITU national point code.

**Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A for information on converting the point code format.

Range:

0 - 16383, *, C

*—the full range of values from 0–16383

C—continue

nsr (optional)

Next screening reference. This parameter specifies which screening reference in the screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No value given

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

sna (optional)

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

0--15, *, C

*--the full range of values from 0--15

C -- continue

sp (optional)

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ssa (optional)24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.**Range:**

0 - 255, *, C

*—the full range of values from 0–255

C—continue

un (optional)16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.**Range:**

0--127, *, C

*--the full range of values from 0--127

C --continue

zone (optional)ITU international zone. The *zone* in the point code represented by *zone-area-id*.**Range:**

0 - 7, *, C

*—the full range of values from 0–7

C—continue

Example

```
ent-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=wrds
ent-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=stop
ent-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=stop:actname=copy
ent-scr-blkdpc:sr=iec:ni=240:nc=*:ncm=*:nsfi=fail
ent-scr-blkdpc:sr=bdp1:zone=1:area=2:id=3:nsfi=fail:pcst=none
ent-scr-blkdpc:sr=bdp1:zone=2:area=2:id=3:nsfi=fail:pcst=s
ent-scr-blkdpc:sr=bdp1:npc=128:nsfi=fail:pcst=s
ent-scr-blkdpc:sr=bl01:un=1:sna=2:mna=3:nsfi=fail
```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gws=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 360,600 rules.

2565 E2565 Cmd Rej: Gateway screening rules table is full

A complete point code must be specified, using the `ni-nc-ncm`, `zone-area-id`, `un-sna-mna`, `msa-ssa-sp`, or `npc` combination unless a value of `c` is specified.

2556 E2556 Cmd Rej: A complete point code must be entered

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

When a blocked screening reference is created, the first entry for the `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, or `un-sna-mna` must be `c-c-c` or `npc=c` must be specified. Subsequent entries can be specific point codes.

2525 E2525 Cmd Rej: NI,ZONE,MSA,UN or NPC must be C when creating new blocked SR.

If the `actname` parameter is specified, then the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `area=*` parameter is specified, then the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, then the `ssa=*` and the `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and the `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=c` parameter is specified, then the `ssa` and the `sp` parameters must have a value of `c` or cannot be specified. If the `msa=c` parameter is specified, and the `ssa` and the `sp` parameters are not specified, then the `ssa` and `sp` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `un=c` parameter is specified, then the `sna` and the `mna` parameters must have a value of `c` or cannot be specified. If the `un=c` parameter is specified, and the `sna` and the `mna` parameters are not specified, then the `sna` and `mna` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `ni=c` parameter is specified, then the `nc` and `ncm` parameters must have a value of `c` or cannot be specified. If the `ni=c` parameter is specified, and the `nc` and the `ncm` parameters are not specified, then the `nc` and `ncm` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the specified `ni-nc-ncm`, `zone-area-id`, `un-sna-mna` or `msa-ssa-sp` is not equal to `c-c-c`, or if the `npc=c` parameter is not specified, then the `nsfi=fail` parameter must be specified, and the `nsr` parameter cannot be specified.

2549 E2549 Cmd Rej: NSFI must be FAIL

If the `nsfi` parameter has a value other than `stop` or `fail`, the `nsr` parameter must be specified and must exist.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

The `nsfi` and `nsr` parameters must point to an existing screen, or the `nsfi=stop` parameter must be specified, and the `nsr` parameter cannot be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

If the `sr` does not exist, then the `ni-nc-ncm`, `zone-area-id`, `un-sna-mna` or `msa-ssa-sp` parameters must equal `c-c-c`, or the `npc=c` parameter must be specified, and the `nsfi=fail` parameter cannot be specified.

2547 E2547 Cmd Rej: NSFI must not be FAIL

If the specified screening reference exists:

- The `ni-nc-ncm`, `zone-area-id`, `un-sna-mna` or `msa-ssa-sp` must equal `c-c-c` or `npc` cannot equal `c`.
- The `nsfi` parameter must have a value of `fail`.
- The `nsr` parameter cannot be specified.

- The blocked DPC, given by `ni-nc-ncm`, `zone-area-id`, or `npc`, to be added to the BLKDPC screening table for the blocked DPC screening reference cannot exist as defined or within an existing range of DPCs.

2558 E2558 Cmd Rej: Point code already exists in given SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The `pcst` parameter cannot be specified with `c` for a blocked screen reference (`sr`).

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N16 and ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `ssa=*` parameter is specified, then the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `zone=*` parameter is specified, then the `area=*` and the `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `zone=c` parameter is specified, then the `area` and `id` parameters must have a value of `c` or cannot be specified. If the `zone=c` parameter is specified, and the `area` and `id` parameters are not specified, then the `area` and `id` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

The value of the `nsfi` parameter must be valid for the BLKDPC entity type.

3271 E3271 Cmd Rej: NSFI is invalid

If a blocked screening reference exists, then the `ni`, `zone`, `msa`, `un`, and `npc` parameters cannot have a value of `c`.

2497 E2497 Cmd Rej: NI, ZONE, MSA, UN or NPC cannot be C for existing blocked SR

The Gateway Screening Stop Action table is corrupt or cannot be found.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The J7 support feature must be enabled before the `un/sna/mna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled

The J7 support feature must not be enabled before the `msa,ssa,sp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

When a blocked DPC screening reference is created, the first entry for a point code must be `c-c-c`, or `c` for the `npc` parameter. Subsequent entries must be specific point codes.

The character `c` is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the blocked DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, `nsfi`, and `nsr`. The point code is in the form of `npc=c`, or of subfields equal to `c-c-c`. When the character `c` is specified, the `nsfi` and `nsr` parameters must be specified.

If the character `c` is specified for the parameters `ni-nc-ncm`, `zone-area-id`, `un-sna-mna` or `msa-ssa-sp`, the character `c` is the only value that can be specified for all three parameters. No other values can be used. For example, a point code `c-c-255` is not allowed. The point code must be `c-c-c`. The asterisk value cannot be used with the character `c` (for example, a point code `c-c-*` is not allowed).

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code `c-c-c` or `npc=c`. The `nsfi` and `nsr` in this entry are examined to determine the next step in the screening process.

If the current `ni-nc-ncm`, `zone-area-id`, `un-sna-mna` or `msa-ssa-sp` is equal to `c-c-c` or `npc=c`, only the `nsfi` and `nsr` parameters can be changed. Otherwise, only the blocked DPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (`&&`); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original `ent-scr-blkdpc` command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters, i.e., `ni`, `nc`, `ncm`. The command can be entered successfully whether the J7 feature is enabled or not enabled.

Output

```
ent-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=wrds
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-BLKDPC: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-BLKDPC: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-blkdpc](#)
- [dlt-scr-blkdpc](#)
- [rtrv-scr-blkdpc](#)

4.1.338 ent-scr-blkopc

Use this command to add a specific blocked originating point code (BLKOPC) screening reference and associated attributes `OPC`, `nsfi`, and `nsr` to the BLKOPC entity set. Any messages received on the link assigned to this screening reference that match the attributes in this table are blocked from entering the network.

Parameters

nsfi (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

blkdpc

Blocked DPC is the next screening category.

cgpa

Allowed CGPA is the next screening category.

dpc

Allowed DPC is the next screening category.

fail

Discard the received message.

sio

Allowed SIO is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

actname (optional)

Name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters

area (optional)

ITU international area. The *area* of the point code represented by *zone-area-id*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

id (optional)

ITU international ID. This parameter specifies the *ID* of the point code represented by *zone-area-id*.

Range:

0 - 7, *, C

*—the full range of values from 0–255

C—continue

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

0--31, *, C

*--the full range of values from 0--31

C ---continue

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255
C—continue

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

npc (optional)

ITU national point code.

**Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) for information on converting the point code format.

Range:

0 - 16383, *, C

*—the full range of values from 0–255

C—continue

nsr (optional)

Next screening reference. This parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (S-).

Range:*none**s***Default:***none***sna (optional)**16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.**Range:***0--15, *, C***--the full range of values from 0--15**C ---continue***sp (optional)**24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.**Range:***0 - 255, *, C***—the full range of values from 0–255**C—continue***ssa (optional)**24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.**Range:***0 - 255, *, C***—the full range of values from 0–255**C—continue***un (optional)**16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.**Range:***0--127, *, C***--the full range of values from 0--127**C ---continue***zone (optional)**ITU internationalzone. The *zone* in the point code represented by *zone-area-id*.**Range:***0 - 7, *, C***—the full range of values from 0–255**C—continue***Example**

```
ent-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=wrds
```

```
ent-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=stop
```

```
ent-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=stop:actname=copy
```

```
ent-scr-blkopc:sr=iec:ni=240:nc=*:ncm=*:nsfi=fail
```

```
ent-scr-blkopc:sr=bo30:nsfi=stop:msa=c:ssa=c:sp=c
ent-scr-blkopc:sr=bo30:nsfi=fail:msa=1:ssa=2:sp=3
ent-scr-blkopc:sr=bo30:nsfi=fail:msa=3:ssa=*:sp=*
ent-scr-blkopc:sr=bop1:zone=1:area=2:id=3:nsfi=fail:pcst=none
ent-scr-blkopc:sr=bop1:npc=128:nsfi=fail:pcst=s
ent-scr-blkopc:sr=bl01:un=1:sna=2:mna=3:nsfi=fail
```

Dependencies

▲ Caution:

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gwsn=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 360,600 rules.

2565 E2565 Cmd Rej: Gateway screening rules table is full

A complete point code must be specified, using the `ni-nc-ncm`, `zone-area-id`, `un-sna-mna`, `msa-ssa-sp`, or `npc` combination unless a value of `c` is specified.

2556 E2556 Cmd Rej: A complete point code must be entered

The ANSI point code value 000-000-000 and the ITU-International point code value 0-000-0 cannot be specified.

2564 E2564 Cmd Rej: Point code out of range

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

When a blocked screening reference is created, the first entry for the `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp` or `un-sna-mna` must be `c-c-c` or `npc=c` must be specified. Subsequent entries can be specific point codes.

2525 E2525 Cmd Rej: NI,ZONE,MSA,UN or NPC must be C when creating new blocked SR

If asterisks or ranges are specified for the blocked OPCs, nothing that matches the specified range of blocked OPCs can already exist in the BLKOPC screening table for the screening reference.

2558 E2558 Cmd Rej: Point code already exists in given SR

If the `actname` parameter is specified, then the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

The value of the `actname` parameter must exist in the Gateway Screening Stop Action table.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If `area=*` is specified, `id=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `msa=*` is specified, `ssa=*` and `sp=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `un=*` is specified, `sna=*` and `mna=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=c` parameter is specified, then the `ssa` and `sp` parameters must have a value of `c` or cannot be specified. If the `msa=c` parameter is specified, and the `ssa` and the `sp` parameters are not specified, then the `ssa` and `sp` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `un=c` parameter is specified, then the `sna` and `mna` parameters must have a value of `c` or cannot be specified. If the `un=c` parameter is specified, and the `sna` and the `mna` parameters are not specified, then the `sna` and `mna` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `ni=c` parameter is specified, then the `nc` and the `ncm` parameters must have a value of `c` or cannot be specified. If the `ni=c` parameter is specified, and the `nc` and the `ncm` parameters are not specified, then the `nc` and `ncm` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the specified `ni-nc-ncm`, `zone-area-id`, `un-sna-mna` or `msa-ssa-sp` is not equal to `c-c-c`, or if the `npc=c` parameter is not specified, then the `nsfi=fail` parameter must be specified, and the `nsr` parameter cannot be specified.

2549 E2549 Cmd Rej: NSFI must be FAIL

If the value of the `nsfi` parameter is not `stop` or `fail`, then the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

The `nsfi` and `nsr` parameters must point to an existing screen, or the `nsfi=stop` parameter must be specified, and the `nsr` parameter cannot be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

If the `sr` does not exist, then the `ni-nc-ncm`, `zone-area-id`, `un-sna-mna` or `msa-ssa-sp` parameters must equal `c-c-c`, or the `npc=c` parameter must be specified, and the `nsfi=fail` parameter cannot be specified.

2547 E2547 Cmd Rej: NSFI must not be FAIL

If the specified screening reference exists:

- The `ni-nc-ncm`, `zone-area-id`, `un-sna-mna` or `msa-ssa-sp` must equal `c-c-c` or `npc=c` cannot be specified.
- The `nsfi` parameter must be `fail`.
- The `nsr` parameter cannot be specified.
- The blocked OPC, specified by `ni-nc-ncm`, `zone-area-id`, `un-sna-mna`, `msa-ssa-sp`, or `npc`, to be added to the BLKOPC screening table for the blocked OPC screening reference cannot exist as defined or within an existing range of OPCs.

2558 E2558 Cmd Rej: Point code already exists in given SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The `pcst` parameter cannot be specified with `c` for a blocked screen reference (`sr`).

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `sna`). The `pcst` parameter cannot be specified for ANSI, ITU-N16 and ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If `ssa=*` is specified, `sp=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `sna=*` is specified, `mna =*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `zone=*` is specified, `area=*` and `id=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `zone=c` parameter is specified, then the `area` and `id` parameters must have a value of `c` or cannot be specified. If the `zone=c` parameter is specified, and the `area`

and the `id` parameters are not specified, then the `area` and `id` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

The specified `nsfi` parameter value must be valid for the BLKOPC entity type.

3271 E3271 Cmd Rej: NSFI is invalid

The Gateway Screening Stop Action table is corrupt or cannot be found.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

If a blocked screening reference exists, then the `ni`, `zone`, `msa`, `un` and `npc` parameters cannot have a value of `c`.

2497 E2497 Cmd Rej: NI, ZONE, MSA, UN or NPC cannot be C for existing blocked SR

The J7 support feature must be enabled before the `un/ sna/ mna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 support feature must not be enabled before the `msa`, `ssa`, `sp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

When a blocked DPC screening reference is created, the first entry for a point code must be `c-c-c`, or the `npc=c` parameter must be specified. Subsequent entries must be specific point codes.

The character `c` is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the blocked DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, `nsfi`, and `nsr`. The point code is in the form of `npc=c` or subfields equal to `c-c-c`. When the character `c` is specified, the `nsfi` and `nsr` parameters must be specified.

If the character `c` is specified for the parameters `ni-nc-ncm`, `zone-area-id`, `un-sna-mna` or `msa-ssa-sp`, the character `c` is the only value that can be specified for all three parameters. For example, a point code `c-c-255` is not allowed. The point code must be `c-c-c`. The asterisk value cannot be used with the character `c` (for example, a point code `c-c-*` is not allowed).

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code `c-c-c` or `npc=c`. The `nsfi` and `nsr` in this entry are examined to determine the next step in the screening process.

If the current `ni-nc-ncm`, `zone-area-id`, `un-sna-mna` or `msa-ssa-sp` is equal to `c-c-c` or `npc=c`, only the `nsfi` and `nsr` can be changed. Otherwise, only the blocked DPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original `ent-scr-blkopc` command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters, i.e., `ni`, `nc`, `ncm`. The command can be entered successfully whether the J7 feature is enabled or not enabled.

Output

```
ent-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=wrds
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-BLKOPC: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-BLKOPC: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-blkopc](#)
- [dlt-scr-blkopc](#)
- [rtrv-scr-blkopc](#)

4.1.339 ent-scr-cdpa

Use this command to add a specific allowed called party address (CDPA) screening reference in the CDPA entity set.

Parameters

nsfi (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:***aftp***

Allowed affected point code is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

sr (mandatory)

Screening reference. This parameter specifies the screening reference name for the CdPA.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

ssn (mandatory)

Subsystem number

Range:

*0 - 255, **

actname (optional)

Name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, **

*—the full range of values from 0–255

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

*0 - 7, **

*—the full range of values from 0–7

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

*0--31, **

*---the full range of values from 0--31

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

npc (optional)

ITU national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) for information on converting the point code format.

Range:

0 - 16383, *

*—the full range of values from 0–16383

nsr (optional)

Next screening reference. This parameter specifies which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:
No value given

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:
none
s

Default:
none

scmgfid (optional)

SCMG Format ID. The following SCCP message types are screened against the Allowed CDPA table and all others are passed: UDT, UDTS, XU DT, XU DTS.

Range:
*1 - 255, **
*—the full range of values from 1–255

sna (optional)

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:
*0--15, **
*---the full range of values from 0--15

sp (optional)

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:
*0 - 255, **
*—the full range of values from 0–255

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:
*0 - 255, **
*—the full range of values from 0–255

un (optional)

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:
*0--127, **
*---the full range of values from 0--127

zone (optional)

ITU international zone. The *zone* in the point code represented by *zone-area-id*.

Range:

0 - 7, *

*—the full range of values from 0–7

Example

```
ent-scr-
cdpa:sr=iec:ni=240:nc=010:ncm=*:ssn=224:nsfi=aftpc:nsr=wrds

ent-scr-
cdpa:sr=iec:ni=240:nc=010:ncm=*:ssn=224:nsfi=stop:actname=copy

ent-scr-
cdpa:sr=cdp1:zone=1:area=2:id=3:ssn=1:nsfi=stop:scmgfid=1:pcst=
s

ent-scr-cdpa:sr=cdp2:un=1:sna=2:mna=1:ssn=1:nsfi=stop
```

Dependencies**⚠ Caution:**

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gws=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 360,600 rules.

2565 E2565 Cmd Rej: Gateway screening rules table is full

A complete point code must be specified, and must be one and only one of the five point code parameter combinations: `ni-nc-ncm`, `zone-area-id`, `un-sna-mna`, `msa-ssa-sp`, or `npc`.

2556 E2556 Cmd Rej: A complete point code must be entered

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The new CDPA entry to be added cannot match any specific, range, or asterisk entry already existing in the specified screening table.

2516 E2516 Cmd Rej: PC/SSN/SCMGFID already exists in given SR

The character `c` is not a valid value for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `msa`, `ssa`, `sp`, `una`, `sna`, `mna`, and `npc` parameters.

2527 E2527 Cmd Rej: C value not allowed

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

When the `actname` parameter is specified, the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and the `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nnc` parameter is specified as a range, the `nncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

When `nsfi=aftpc` is specified, the `ssn=1` parameter must be specified.

2484 E2484 Cmd Rej: SSN must be 1 if NSFI=AFTPC

When `nsfi` is a value other than `stop`, the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

When `nsfi=stop` is specified, the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

When `ssn=1` is specified, the `scmgfid` parameter must be specified.

2508 E2508 Cmd Rej: SCMGFID is invalid

When `ssn` is not 1, the `scmgfid` parameter cannot be specified.

2508 E2508 Cmd Rej: SCMGFID is invalid

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-

bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

The specified value for the `nsfi` parameter is not valid for `cdpa` screen.

3271 E3271 Cmd Rej: NSFI is invalid

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The next screening function identifier (`nsfi`) and the next screening reference (`nsr`) must point to an existing screen, or the `nsfi=stop` parameter must be specified and the `nsr` parameter cannot be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

The J7 support feature must be enabled before the `un/sna/mna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 support feature must not be enabled before the `msa/ssa/sp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

If the screening reference is valid, but does not exist, a new CDPA screen is created.

If the screening reference exists, a new rule is added to the CDPA screening table.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original `ent-scr-cdpa` command.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters, i.e., `ni`, `nc`, `ncm`. The command can be entered successfully whether the J7 feature is enabled or not enabled.

Output

```
ent-scr-cdpa:sr=iec:ni=240:nc=010:ncm=*:ssn=224:nsfi=aftpc:nsr=wrds
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-CDPA: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-CDPA: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-cdpa](#)
- [dlt-scr-cdpa](#)
- [rtv-scr-cdpa](#)

4.1.340 ent-scr-cgpa

Use this command to add a specific allowed calling party address (CGPA) screening reference in the CGPA entity set.

Parameters

nsfi (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

cdpa

Allowed called party address is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

tt

Allowed translation type is the next screening category.

ri (mandatory)

Routing indicator. This parameter provides routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range:

dpc

Allow a called party address with a routing indicator value of "DPC/SSN."

gt

Screening stops and gateway screening is bypassed as a forced pass.

*

A full range of values.

sr (mandatory)

Screening reference. The screening reference name for the CgPA.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

ssn (mandatory)

Subsystem number

Range:

*1 - 255, **

actname (optional)

Name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, **

*—the full range of values from 0–255

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

*0 - 7, **

*—the full range of values from 0–7

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

*0--31, **

*---the full range of values from 0--31

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

*0 - 255, **

*—the full range of values from 0–255

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

npc (optional)

ITU national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) for information on converting the point code format.

Range:

0 - 16383

nsr (optional)

Next screening reference. This parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:*none**s***Default:***none***sccpmt (optional)**

SCCP message type

Range:**9**

UDT

10

UDTS

17

XUDT

18

XUDTS

*

Default:

*

sna (optional)16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.**Range:***0--15, ****--the full range of values from 0--15***sp (optional)**24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.**Range:***0 - 255, ****--the full range of values from 0--255***ssa (optional)**24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.**Range:***0 - 255, ****--the full range of values from 0--255***un (optional)**16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:

0--127, *

*--the full range of values from 0--127

zone (optional)ITU international zone. The *zone* in the point code represented by *zone-area-id*.**Range:**

0 - 7, *

*—the full range of values from 0–255

Example

```
ent-scr-
cgpa:sr=iec:ni=240:nc=010:ncm=*:ssn=224:nsfi=aftpc:nsr=wr5:ri=dpc

ent-scr-
cgpa:sr=iec:ni=240:nc=010:ncm=*:ssn=224:nsfi=stop:ri=dpc:actname=cop
y

ent-scr-
cgpa:sr=cdp1:ni=5:nc=5:ncm=5:ssn=1:ri=dpc:sccpmt=9:nsfi=sdpa:nsr=cdp
1

ent-scr-
cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:nsfi=stop:pcst=s

ent-scr-cgpa:sr=cgp1:un=1:sna=2:mna=1:ssn=1:sccpmt=9:nsfi=stop:ri=*
```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gwsn=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 360,600 rules.

2565 E2565 Cmd Rej: Gateway screening rules table is full

A complete point code must be specified, and must be one, and only one of the five point code parameter combinations: `ni-nc-ncm`, `zone-area-id`, `un-sna-mna`, `msa-ssa-sp`, or `npc`.

2556 E2556 Cmd Rej: A complete point code must be entered

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

The new CGPA point code, `ri`, `sccpmt`, and `ssn` to be added can not already exist in the CGPA entity set.

2514 E2514 Cmd Rej: PC/SSN/RI/SCCPMT already exists in given SR

The character *c* is not a valid value for the *ni*, *nc*, *ncm*, *zone*, *area*, *id*, *msa*, *ssa*, *sp*, *un*, *sna*, *mna*, and *npc* parameters.

2527 E2527 Cmd Rej: C value not allowed

The value of the *actname* parameter must already be defined in the Gateway Screening Stop Action table with the *chg-gws-actset* command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

When the *actname* parameter is specified, the *nsfi=stop* parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If *area=** is specified, *id=** must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If *msa=** is specified, *ssa=** and *sp=** must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If *un=** is specified, *sna=** and *mna=** must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the *nc* parameter is specified as a range, the *ncm* parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the *nc* parameter is specified as a single value or a range, a single value must be specified for the *ni* parameter.

2511 E2511 Cmd Rej: NC is invalid

If the *nc* parameter is specified as an asterisk, the *ncm* parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the *ncm* parameter is specified as a single value, or a range other than the full range of 0–255, the *ni* and *nc* parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the *ni* parameter is specified as an asterisk or as a range, the *nc* and *ncm* parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

The Spare Point Code Support feature must be enabled before the *pcst* parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters *ni*, *nc*, *ncm*) or for 24-bit ITU national point codes (parameters *msa*, *ssa*, *sp*) or for 16-bit ITU national point codes (parameters *un*, *sna*, *mna*). The *pcst* parameter cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

The screen referenced by `nsfi` and `nsr` must already exist.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

The `nsr` parameter must be specified, if `nsfi` is not equal to `stop`.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

When `nsfi=stop` is specified, the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

The `nsfi=tt` parameter can be specified only if the `ri=gt` parameter or the `ri=*` parameter is specified.

2492 E2492 Cmd Rej: The NSFI / RI combination is invalid

The `nsfi=cdpa` parameter can be specified only if the `ri=dpc` parameter or the `ri=*` parameter is specified.

2492 E2492 Cmd Rej: The NSFI / RI combination is invalid

If `ssa=*` is specified, `sp=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `sna=*` is specified, `mna=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If `zone=*` is specified, `area=*` and `id=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

The specified value for the `nsfi` parameter is not valid for `cgpa` screen.

3271 E3271 Cmd Rej: NSFI is invalid

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

Valid values must be specified for the `nscpmt` and `scpmt` parameters.

2446 E2446 Cmd Rej: SCCPMT must be specified as 9, 10, 17, 18, or *

The J7 Support feature must be enabled before the `un/ sna/ mna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 Support feature must not be enabled before the `msa/ ssa/ sp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100 .

If the screening reference is valid, but does not exist, a new CGPA screening table is created.

If the screening reference exists, a new rule is added to the CGPA screening table. Only one rule may exist for a given `ni-nc-ncm/ssn/ri/sccpmt` (or `zone-area-id` or `npc`) combination. This implies that for a given combination, only one value of `ri` may be specified. The `ri` for a given combination can be `dpc`, `gt`, or `*`, but not `dpc` and `gt` independently.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original `ent-scr-cgpa` command.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters, i.e., `ni`, `nc`, `ncm`. The command can be entered successfully whether the J7 Support feature is enabled or not enabled.

Output

```
ent-scr-
cgpa:sr=iec:ni=240:nc=010:ncm=*:ssn=224:nsfi=aftpc:nsr=wr5:ri=
dpc
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-CGPA: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-CGPA: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-cgpa](#)
- [dlt-scr-cgpa](#)
- [rtrv-scr-cgpa](#)

4.1.341 ent-scr-destfld

Use this command to add an allowed affected destination field (DESTFLD) screening reference and associated attributes (destination point code, next screening function

identifier, and next screening reference) to the allowed DESTFLD entity set. One or more point codes can be associated with the allowed DESTFLD screening reference. MTP Network Management messages regarding the DESTFLDs listed in this entity set are accepted from another network.

Parameters

nsfi (mandatory)

This parameter indicates that the gateway screening process should stop.

Range:

stop

The gateway screening process ends and the message proceeds through normal routing.

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters.

actname (optional)

Name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, **

*—the full range of values from 0–255

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

*0 - 7, **

*—the full range of values from 0–7

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

*0---31, **

*---the full range of values from 0--31

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

*—the full range of values from 0–255

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

npc (optional)

ITU national point code.

**Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) for information on converting the point code format.

Range:

0 - 16383, *

*—the full range of values from 0–16383

nsr (optional)

Next screening reference. This parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:*ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:*none**s***Default:***none***sna (optional)**16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.**Range:***0---15, ****---the full range of values from 0--15***sp (optional)**24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.**Range:***0 - 255, ****---the full range of values from 0--255***ssa (optional)**24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.**Range:***0 - 255***---the full range of values from 0--255***un (optional)**16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.**Range:***0---127, ****---the full range of values from 0--127***zone (optional)**ITU international zone. The *zone* in the point code represented by *zone-area-id*.**Range:***0 - 7***---the full range of values from 0--7***Example**`ent-scr-destfld:sr=iec:ni=240:nc=010:ncm=010-012:nsfi=stop``ent-scr-destfld:sr=iec1:ni=1:nc=1:ncm=1:nsfi=stop:actname=copy`

```
ent-scr-destfld:sr=dst1:zone=1:area=2:id=3:nsfi=stop:pcst=s
```

```
ent-scr-destfld:sr=iec:un=120:sna=10:mna=15:nsfi=stop
```

Dependencies

Caution:

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gws=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 360,600 rules.

2565 E2565 Cmd Rej: Gateway screening rules table is full

The destination point code specified by `ni-nc-ncm`, `zone-area-id`, `un-sna-mna`, `msa-ssa-sp`, or the `npc` parameter must not already exist in the screening reference or within an existing range of DPCs.

2558 E2558 Cmd Rej: Point code already exists in given SR

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If the `actname` parameter is specified, then the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `area=*` parameter is specified, then the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, then the `ssa=*` and the `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and the `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

The `nsfi=stop` parameter must be specified in the command.

3271 E3271 Cmd Rej: NSFI is invalid

If the `nsfi=stop` parameter is specified, then the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

If the `ssa=*` parameter is specified, then the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `zone=*` parameter is specified, then the `area=*` and the `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` and `npcst` parameters cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `nsfi=fail` parameter is specified, then the `nni`, `nc`, `ncm`, `narea`, `nzone`, `nid`, `nmsa`, `nssa`, `nsp`, `nun`, `nsna`, `nmna`, and `npc` parameters cannot have a value of `c`.

2527 E2527 Cmd Rej: C value not allowed

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The J7 support feature must be enabled before the `un/ sna/ mna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 support feature must not be enabled before the `msa/ssa/sp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25-100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original `ent-scr-destfld` command.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters, i.e., `ni`, `nc`, `ncm`. The command can be entered successfully whether the J7 feature is enabled or not enabled.

Output

```
ent-scr-destfld:sr=iec:ni=240:nc=010:ncm=010-012:nsfi=stop
```

```
rlghncxa03w 04-02-13 11:49:47 EST EAGLE 31.3.0
ENT-SCR-DESTFLD: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-DESTFLD: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-destfld](#)
- [dlt-scr-destfld](#)
- [rtv-scr-destfld](#)

4.1.342 ent-scr-dpc

Use this command to add an allowed DPC screening reference and associated attributes (destination point code, next screening function identifier, next screening function reference) to the allowed DPC entity set. One or more DPCs may be associated with the allowed DPC screening reference. The DPCs listed in this entity set are allowed to receive SS7 messages from another network.

Parameters

nsfi (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

blkdpc

Blocked DPC is the next screening category.

cgpa

Allowed CGPA is the next screening category.

destfld

Allowed destination field (DESTFLD) is the next screening category.

isup

ISUP message type (ISUP) is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

sx (mandatory)

Allowed DPC screening reference name. A set of one or more allowed destination point codes.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

actname (optional)

Name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, *, C*

*—the full range of values from 0–255

C—continue

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*.

Range:

*0 - 7, *, C*

*—the full range of values from 0–7
C—continue

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

0---31, *, C
*---the full range of values from 0--31
C ---continue

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C
*—the full range of values from 0–255
C—continue

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

000 - 255, *, C
*—the full range of values from 0–255
C—continue

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C
*—the full range of values from 0–255
C—continue

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C
*—the full range of values from 0–255
C—continue

npc (optional)

ITU national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) for information on converting the point code format.

Range:

0 - 16383, *, C

*—the full range of values from 0–16383

C—continue

nsr (optional)

Next screening reference. This parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No value given

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

sna (optional)

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

0---15, *, C

*---the full range of values from 0--15

C ---continue

sp (optional)

24-bit ITU national signaling point. This parameter specifies the *sp* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

un (optional)

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:

0--127, *, C

*--the full range of values from 0--127

C ---continue

zone (optional)

ITU international zone. This parameter specifies the *zone* in the point code represented by *zone-area-id*.

Range:

0 - 7, *, C

*—the full range of values from 0–7

C—continue

Example

```
ent-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nsfi=stop:actname=cncf
```

```
ent-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nsfi=blkdpc:nsr=bdp1
```

```
ent-scr-dpc:sr=dpc1:zone=1:area=2:id=3:nsfi=fail:pcst=none
```

```
ent-scr-dpc:sr=dpc1:zone=2:area=2:id=3:nsfi=fail:pcst=s
```

```
ent-scr-dpc:sr=dpc1:npc=128:nsfi=fail:pcst=s
```

```
ent-scr-dpc:sr=dpc2:un=1:sna=2:mna=1:nsfi=stop
```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gws=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 360,600 rules.

2565 E2565 Cmd Rej: Gateway screening rules table is full

The destination point code specified by `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or the `npc` parameter must not already exist in the screening reference or within an existing range of DPCs.

2558 E2558 Cmd Rej: Point code already exists in given SR

If the `actname` parameter is specified, then the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `area=*` parameter is specified, then the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, then the `ssa=*` and the `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and the `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

The `nsfi` and `nsr` parameters must point to an existing screen, or the `nsfi=stop` parameter must be specified, and the `nsr` parameter cannot be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

If the `nsfi=stop` parameter is not specified, then the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

If the `ssa=*` parameter is specified, then the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `zone=*` parameter is specified, then the `area=*` and `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `nsfi=fail` parameter is specified, then the `ni`, `nc`, `ncm`, `area`, `zone`, `id`, `msa`, `ssa`, `sp`, `un`, `sna`, `mna`, and `npc` parameters cannot have a value of `c`.

2527 E2527 Cmd Rej: C value not allowed

The value of the `nsfi` parameter must be valid for the BLKDPC entity type.

3271 E3271 Cmd Rej: NSFI is invalid

The Gateway Screening Stop Action table is corrupt or cannot be found.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The J7 support feature must be enabled before the `un/ sna/ mna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 support feature must not be enabled before the `msa/ ssa/ sp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

When a DPC screening reference is created, the first entry for a point code must be `c-c-c`, or `c` for the `npc` parameter. Subsequent entries must be specific point codes.

The character `c` is used in the DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the DPC screens. When screening for a DPC and the point code being screened does not match any of

the point codes in the DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, `nsfi`, and `nsr`. The point code is in the form of `npc=c` or subfields equal to `c-c-c`. When the character `c` is specified, the `nsfi` and `nsr` parameters must be specified.

If the character `c` is specified for the parameters `ni-nc-ncm`, `zone-area-id`, `un-sna-mna` or `msa-ssa-sp`, the character `c` is the only value that can be specified for all three parameters. For example, a point code `c-c-255` is not allowed. The asterisk (*) value cannot be used with the character `c` (for example, a point code `c-c-*` is not allowed).

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code `c-c-c` or `npc=c`. The `nsfi` and `nsr` in this entry are examined to determine the next step in the screening process.

If the current `ni-nc-ncm`, `zone-area-id`, `un-sna-mna` or `msa-ssa-sp` is equal to `c-c-c` or `npc=c`, only the `nsfi` and `nsr` can be changed. Otherwise, only the blocked DPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

An asterisk cannot be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original `ent-scr-dpc` command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters, i.e., `ni`, `nc`, `ncm`. The command can be entered successfully whether the J7 feature is enabled or not enabled.

Output

```
ent-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nsfi=stop:actname=cncf
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-DPC: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-DPC: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-scr-dpc](#)
- [dlt-scr-dpc](#)
- [rtrv-scr-dpc](#)

4.1.343 ent-scr-isup

Use this command to add an allowed ISUP or TUP screening reference to the Allowed ISUP entity set. One or more message types can be associated with the allowed ISUP screening reference. The ISUP message types listed in this entity set are accepted from another network.

Parameters

isupmt/tupmt (mandatory)

ISUP or TUP message type.

Range:

0 - 255, *

*—the full range of values from 0–255

sr (mandatory)

Individual ISUP screening reference to which this rule will be added. If the specified `sr` does not exist, it will be created.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

actname (optional)

Name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process.

Range:

stop

The gateway screening process ends and the message proceeds through normal routing.

nsr (optional)

Next screening reference. This parameter indicates which screening reference in the specified screening category (`nsfi`) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Example

```
ent-scr-isup:sr=iec:isupmt=1:nsfi=stop
```

```
ent-scr-isup:sr=ibig:isupmt=1&&128:nsfi=stop
```

```
ent-scr-isup:sr=iall:isupmt=*:nsfi=stop
```

```
ent-scr-isup:tupmt=20:sr=tu01:nsfi=stop
```

Dependencies

If the `actname` parameter is specified, the `nsfi=stop` parameter must be specified.

N/A N/A

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command.

N/A N/A

The specified `isupmt` parameter or `tupmt` parameter value must not already exist in the specified `sr`.

N/A N/A

If the `nsfi` parameter is specified, the value must be `stop`.

N/A N/A

The `nsr` parameter cannot be specified if the `nsfi=stop` parameter is specified.

N/A N/A

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

The Gateway Screening Rules table can contain a maximum of 360,600 rules.

2565 E2565 Cmd Rej: Gateway screening rules table is full

Notes

A range of values can be specified for the `isupmt` or `tupmt` parameter by separating the values that define the range by two ampersands (&&); for example, `isupmt=025&&100` specifies all ISUP message types from 25-100. The value to the left of the && must be less than the value to the right of the && in the range.

An asterisk cannot be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original `ent-scr-isup` command.

TUP does not apply to SEAS. ISUP Message Type is the default.

To use TUP message type screening, an SIO screening reference with `si=04` (TUP) must exist in the SIO table. The TUP screening reference specifies the SIO screening reference as the next screening reference parameter (`nsr`) value.

To use ISUP message type screening, an SIO screening reference with `si=05` (ISUP) must exist in the SIO table. The ISUP screening reference specifies the ISUP SIO screening reference as the next screening reference parameter (`nsr`) value.

To screen for TUP and ISUP message types using a combined ISUP/TUP screen set, the SIO screening reference with `si=4` and the SIO screening reference with `si=5` must be two different screening references. The TUP screening reference specifies the SIO screening

reference as the next screening reference parameter (*nsr*) value, and the ISUP screening reference specifies the SIO ISUP screening reference as the next screening reference parameter (*nsr*) value.

Output

When a screen reference is specified that is not yet associated with a screen set, the following output appears:

```
ent-scr-isup:sr=iec:isupmt=1:nsfi=stop

tekelecstp 04-09-02 09:39:13 EST EAGLE 31.3.0
ENT-SCR-ISUP: MASP A - COMPLTD
;
```

When a screen reference is specified that is already associated with one or more screen sets, the following output appears:

```
ent-scr-isup:tupmt=20:sr=tu01:nsfi=stop

tekelecstp 04-11-17 16:22:27 EST EAGLE 31.4.0
Extended Processing Time Required -- Please Wait
Notice: The number of screensets affected is 2.
ENT-SCR-ISUP: SCREEN SET AFFECTED - ist1 1% FULL
ENT-SCR-ISUP: SCREEN SET AFFECTED - ist2 1% FULL
ENT-SCR-ISUP: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-isup](#)
- [dlt-scr-isup](#)
- [rtrv-scr-isup](#)

4.1.344 ent-scr-opc

Use this command to add an allowed OPC screening reference and associated attributes (originating point code, next screening function identifier, next screening function reference) to the allowed OPC entity set. One or more OPCs may be associated with the allowed OPC screening reference. Each OPC listed in this entity set is allowed to send SS7 messages to the customer's network.

Parameters

nsfi (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:***blkdpc***

Blocked DPC is the next screening category.

blkopc

Blocked OPC is the next screening category.

cgpa

Allowed CGPA is the next screening category.

dpc

Allowed DPC is the next screening category.

sio

Allowed SIO is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

sr (mandatory)

Screening reference. A set of one or more allowed OPCs.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

actname (optional)

Name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters

area (optional)

ITU international area. The *area* in the point code represented by *zone-area-id*.

Range:

*0 - 255, *, C*

*—the full range of values from 0–255

C—continue

id (optional)

ITU international ID. The *ID* in the point code represented by *zone-area-id*. A

Range:

*0 - 7, *, C*

*—the full range of values from 0–7

C—continue

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

0--31, *, C

*--the full range of values from 0--31

C—continue

msa (optional)

24-bit ITU-national main signaling area value. The *msa* of the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

nc (optional)

Network cluster value. This parameter specifies one or more *nc* values for the network indicator and network cluster member values specified in the *ni* and *ncm* parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ncm (optional)

Network cluster member value. This parameter specifies one or more *ncm* values for the network indicator and network cluster values identified in the *ni* and *nc* parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—the full range of values from 0–255

C—continue

ni (optional)

Network indicator value. This parameter specifies one or more *ni* values for the network cluster and network cluster member values identified in the *nc* and *ncm* parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *, C

*—full range of values from 0-255

C—continue

npc (optional)

ITU national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) for information on converting the point code format.

Range:

0 - 16383, *, C

*—full range of values from 0-255

C—continue

nsr (optional)

Next screening reference. This parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No value given

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

sna (optional)

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

0---15, *, C

*---the full range of values from 0--15

C—continue

sp (optional)

24-bit ITU national signaling point. The *sp* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—full range of values from 0-255

C—continue

ssa (optional)

24-bit ITU national sub signaling area. The *ssa* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *, C

*—full range of values from 0-255

C—continue

un (optional)16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.**Range:**

0---127, *, C

*---the full range of values from 0--127

C—continue

zone (optional)ITU international zone. The *zone* in the point code represented by *zone-area-id*.**Range:**

0 - 7, *, C

*—full range of values from 7

C—continue

Example

```
ent-scr-opc:sr=iec:nsfi=stop
ent-scr-opc:sr=iec:ni=240:nsfi=sio:nsr=iec
ent-scr-opc:sr=iec:ni=240:nc=010:ncm=010:nsfi=stop:actname=copy
ent-scr-opc:sr=iec:ni=240:nc=010:ncm=010:nsfi=dpc:nsr=iec
ent-scr-opc:sr=opc1:zone=1:area=2:id=3:nsfi=fail:pcst=none
ent-scr-opc:sr=opc1:zone=2:area=2:id=3:nsfi=fail:pcst=s
ent-scr-opc:sr=opc1:npc=128:nsfi=fail:pcst=s
ent-scr-opc:sr=opc2:un=1:sna=2:mna=1:nsfi=stop
```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gws=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 360,600 rules.

2565 E2565 Cmd Rej: Gateway screening rules table is full

A complete point code must be specified, using the `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna` or `npc` combination unless a value of `c` is specified.

2556 E2556 Cmd Rej: A complete point code must be entered

The OPC specified by `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna` or the `npc` parameter must already exist in the screening reference or within an existing range of OPCs.

2558 E2558 Cmd Rej: Point code already exists in given SR

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If the `actname` parameter is specified, then the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `area=*` parameter is specified, then the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, then the `ssa=*` and the `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and the `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 0–255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range.

2511 E2511 Cmd Rej: NC is invalid

The `nsfi` and `nsr` parameters must point to an existing screen, or the `nsfi=stop` parameter must be specified, and the `nsr` parameter cannot be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

If the `nsfi=stop` parameter is not specified, then the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

The `nsr` parameter must be specified if `nsfi` is not equal to `stop`.

N/A N/A

If the `ssa=*` parameter is specified, then the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `zone=*` parameter is specified, then the `area=*` and `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `nsfi=fail` parameter is specified, then the `nni`, `nc`, `nncm`, `narea`, `nzone`, `nid`, `nmsa`, `nssa`, `nsp`, `nun`, `nsna`, `nmna`, and `npc` parameters cannot have a value of `c`.

2527 E2527 Cmd Rej: C value not allowed

The value of the `nsfi` parameter must be valid for the OPC entity type.

3271 E3271 Cmd Rej: NSFI is invalid

The Gateway Screening Stop Action table is corrupt or cannot be found.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The J7 support feature must be enabled before the `un/ sna/ mna` parameters are specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The J7 support feature must not be enabled before the `msa/ ssa/ sp` parameters are specified.

2801 E2801 Cmd Rej: J7 Support feature must not be enabled

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

When an OPC screening reference is created, the first entry for a point code must be *c-c-c* or *c* for the *npc* parameter. Subsequent entries must be specific point codes.

The character *c* is used in the OPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the OPC screens. When screening for a DPC and the point code being screened does not match any of the point codes in the DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the OPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, *nsfi*, and *nsr*. The point code is in the form of *npc=c* or subfields equal to *c-c-c*. When the character *c* is specified, the *nsfi* and *nsr* parameters must be specified.

If the character *c* is specified for the parameters *ni-nc-ncm*, *zone-area-id*, *un-sna-mna* or *msa-ssa-sp*, the character *c* is the only value that can be specified for all three parameters. For example, a point code *c-c-255* is not allowed. The point code must be *c-c-c*. The asterisk value cannot be used with the character *c* (for example, a point code *c-c-** is not allowed).

When the point code does not match any entries in the blocked OPC screens, the screening process is directed to the screening reference with the point code *c* or *npc=c*. The *nsfi* and *nsr* in this entry are examined to determine the next step in the screening process.

If the current *ni-nc-ncm*, *zone-area-id*, *un-sna-mna* or *msa-ssa-sp* is equal to *c-c-c* or *npc=c*, only the *nsfi* and *nsr* can be changed. Otherwise, only the OPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, *ni=025&&100* specifies all network indicators for ANSI point codes from 25 - 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original *ent-scr-opc* command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The *pcst* parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

There is no feature dependency on ANSI point code parameters, i.e., *ni*, *nc*, *ncm*. The command can be entered successfully whether the J7 feature is enabled or not enabled.

Output

```
ent-scr-opc:sr=iec:nsfi=stop
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-OPC: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-OPC: MASP A - COMPLTD
;
```

Related Topics

- [chg-scr-opc](#)
- [dlt-scr-opc](#)
- [rtv-scr-opc](#)

4.1.345 ent-scr-sio

Use this command to add an allowed SIO screening reference and associated attributes (network indicator, service indicator, message priority, H0 heading code, H1 heading code, next screening function identifier, next screening function reference) to the allowed SIO entity set.

 **Note:**

To use TUP message type screening, an SIO screening reference with `si=04` (TUP) must be defined in the SIO table. This SIO screening reference is specified in the `ent-scr-isup` command as the next screening reference (`nsr`) value in a screening reference for TUP message types

Parameters**nic (mandatory)**

Network indicator code. NIC for the SIO screening reference specified in the `sr` parameter. The NIC is the last 2 bits of the subservice field of an SIO.

Range:

0 - 3, *

*—full range of values from 0-3

nsfi (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:***blkdpc***

Blocked DPC is the next screening category.

cdpa***cgpa***

Allowed CGPA is the next screening category.

destfld

Allowed destination field (DESTFLD) is the next screening category.

dpc

Allowed DPC is the next screening category.

isup

ISUP message type (ISUP) is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

pri (mandatory)

Message priority. A single priority, or the beginning of a range of priorities for the SIO screening reference specified by the `sr` parameter .

Range:

0 - 3, *

*—full range of values from 0-3

si (mandatory)

Service indicator. SI for the SIO screening reference specified in the `sr` parameter. The SI is the first 4 bits of an SIO. The SS7 code directs the message to the MTP-user at the destination code.

Range:

00 - 15

sr (mandatory)

The allowed SIO screening reference name. This parameter specifies a set of one or more `si/nic/pri` combinations.

Range:

ayyy

1 alphabetic character followed by up to 5 alphanumeric characters

actname (optional)

Name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyy

1 alphabetic character followed by up to 5 alphanumeric characters

h0 (optional)

H0 heading code. New H0 heading code for the screening reference specified in the `sr` parameter.

Range:

0 - 15, *

*—full range of values from 0-15

Default:

Value given if `si` value is 00, 01, 02

h1 (optional)

H1 Heading Code. H1 heading code for the screening reference specified in the `sr` parameter.

Range:

0 - 15, *

*—full range of values from 0-15

Default:Value given if `si` value is 00, 01, 02**nsr (optional)**

Next screening reference. This parameter specifies which screening reference in the specified screening category (`nsfi`) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Example

```
ent-scr-
sio:sr=iec:nic=1:si=1:h0=01&&03:h1=*:pri=*:nsfi=dpc:nsr=abc

ent-scr-sio:sr=iec:nic=1:si=3:pri=2:nsfi=stop

ent-scr-sio:sr=iec:nic=1:si=4:pri=3:nsfi=stop:actname=cncf
```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gws=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

If the `actname` parameter is specified, then the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `si` parameter is equal to 00, 01, or 02, the `h0` and `h1` parameters must be specified. Otherwise, the `h0` parameter cannot be specified.

2488 E2488 Cmd Rej: H0 and H1 must be specified for given SI

Valid combinations for the `h0/h1` and `nh0/nh1` parameters are:

- `h0` is a single value—`h1` can be a single value, range, or an asterisk
- `h0` is a range—`h1` can be an asterisk
- `h0` is an asterisk—`h1` can be an asterisk

3269 E3269 Cmd Rej: Invalid H0/H1 or NH0/NH1 specified

If the screening reference exists, the `nic`, `si`, `h0/h1`, and priorities to be added to the allowed SIO entity set for the SIO screening reference cannot exist in that allowed SIO entity set.

3273 E3273 Cmd Rej: NIC, SI, H0/H1, and PRI entry already exists in given SR

If asterisks or ranges are specified for the heading codes, nothing that matches the combination of `nic`, `si`, and the specified heading codes can already exist in the allowed SIO entity set for the screening reference.

2393 E2393 Cmd Rej: Terminal is not equipped

If the screening reference does not exist, a new screening reference for the allowed SIO entity set is created.

N/A N/A

The `nsfi` and `nsr` parameters must point to an existing screen, or the `nsfi=stop` parameter must be specified, and the `nsr` parameter cannot be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

The values specified for the `nsfi` and `si` parameters must meet the mapping requirements as shown:

- `nsfi=destfld` — `si=00`
- `nsfi=cdpa` — `si=03`
- `nsfi=cgpa` — `si=03`
- `nsfi=isup` — `si=05`

3271 E3271 Cmd Rej: NSFI is invalid

Use [Table 4-36](#) to determine the acceptable combination of the specified parameter values:

Table 4-36 Additional Valid ent-scr-sio Parameter Combinations

si value:	nic value	pri value	h0 value:	h1 value:
00	s, *	s, *, r	s	s, *, r
00	s, *	s, *, r	*, r	*
01, 02	s, *	s, *, r	s	s, *, r
01, 02	s, *	s, *, r	*, r	*
03-15	s, *	s, *, r	u	u
Legend				
• s = single value				
• r = range				
• * = asterisk				
• u = unspecified				

N/A N/A

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

If the `nsfi` parameter has a value other than `stop` or `fail`, the `nsr` parameter must be specified and must exist.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

If the `nsfi=stop` parameter is specified, then the `nsr` parameter must be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

If the `si` parameter is greater than 2, the `h0` and `h1` parameters must not be specified.

2490 E2490 Cmd Rej: H0 and H1 cannot be specified for SI greater than 2

The Gateway Screening Rules table can contain a maximum of 360,600 rules.

2565 E2565 Cmd Rej: Gateway screening rules table is full

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

For SEAS commands, the `pri` parameter specified must be in the range 0-3, *.

2562 E2562 Cmd Rej: A specific PRI must be specified in the range (0-3, *)

For SEAS commands, the `h0` parameter specified must be in the range 0-15, *.

2563 E2563 Cmd Rej: A specific H0 must be specified in the range (0-15, *)

For SEAS commands, the `h1` parameter specified must be in the range 0-15, *.

2566 E2566 Cmd Rej: A specific H1 must be specified in the range (0-15, *)

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `pri=0&&2` specifies all message priorities for the range 0 - 2.

If the screen set reaches 100% capacity (indicated by the **100% Full** message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

To use TUP message type screening, an SIO screening reference with `si=04` (TUP) must be defined in the SIO table. To use ISUP message type screening, a rule with `si=05` (ISUP) must be defined in the SIO table. To use a combined ISUP/TUP screen set for TUP and ISUP message screening, the SIO screening reference with `si=4` and the SIO screening reference with `si=5` must be two different screening references.

The `h0` and `h1` parameters cannot be specified if `si` is not equal to 00, 01, or 02.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original `ent-scr-sio` command.

Output

```
ent-scr-sio:sr=iec:nic=1:si=1:h0=01&&03:h1=*:pri=*:nsfi=dpc:nsr=abc
```

```
rlghncxa03w 04-02-14 16:45:50 EST EAGLE 31.3.0
ENT-SCR-SIO: SCREEN SET AFFECTED - SS01 25% FULL
ENT-SCR-SIO: SCREEN SET AFFECTED - SS04 35% FULL
ENT-SCR-SIO: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-scr-sio](#)
- [dlt-scr-sio](#)
- [rtrv-scr-sio](#)

4.1.346 ent-scr-tt

Use this command to add a specific allowed translation type (TT) screening reference in the TT entity set.

Parameters**nsfi (mandatory)**

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:***cdpa***

Allowed CDPA is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

sr (mandatory)

Screening reference. The point code's unique screening reference name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

type (mandatory)

Translation type. The GTT type value in the CdPA. This value is the decimal representation of the 1-byte field used in SS7.

Range:

*000 - 255, **

*—full range of values from 0-255

actname (optional)

The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

nsr (optional)

Next screening reference. This parameter indicates which screening reference in the specified screening category (`nsfi`) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No value given

Example

```
ent-scr-tt:sr=iec:type=012:nsfi=cdpa:nsr=wr5
```

```
ent-scr-tt:sr=iec:type=012:nsfi=stop:actname=copy
```

Dependencies**▲ Caution:**

Even though gateway screening is in the screen test mode, as defined by the `gwsa=off` and `gws=on` parameters, the gateway screening action in the stop action set specified by the `actname` parameter of the screen set will be performed at the end of the screening process.

If the screening reference is valid, but does not exist, a new TT screen is created.

N/A N/A

If the screening reference exists, a new rule is added to the TT screening table.

N/A N/A

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original `ent-scr-tt` command.

N/A N/A

If the `actname` parameter is specified, the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `nsfi=stop` parameter is specified, the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

If the `nsfi` parameter has a value other than `stop`, the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

If the `nsr` parameter is specified, the specified screening reference must exist.

N/A N/A

If the screening reference (`sr`) exists, the single value or range specified for the allowed `type` to be added to the TT screen for the allowed TT screening reference must not already exist in that TT screen.

2575 E2575 Cmd Rej: TYPE matches existing TYPE in given SR

If an asterisk is specified for the allowed `type`, nothing can already exist in the TT screen for the screening reference.

N/A N/A

The Gateway Screening Stop Action table is corrupt or cannot be found.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The specified value for the `nsfi` parameter is not valid for TT screen.

3271 E3271 Cmd Rej: NSFI is invalid

The screen referenced by `sfi` and `nsr` must already exist.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

The Gateway Screening Rules table can contain a maximum of 360,600 rules.

2565 E2565 Cmd Rej: Gateway screening rules table is full

The value specified for the `type` parameter must be within the allowed range.

2524 E2524 Cmd Rej: A specific TT must be specified in the range (1-255,*)

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

Output

```
ent-scr-tt:sr=iec:type=012:nsfi=cdpa:nsr=wr5
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-TT: SCREEN SET AFFECTED - IEC 25% FULL
```

```
ENT-SCR-TT: MASP A - COMPLTD  
;
```

Related Topics

- [chg-scr-tt](#)
- [dlt-scr-tt](#)
- [rtrv-scr-tt](#)

4.1.347 ent-scrset

Use this command to create a new screen set and point it to its first screen. A screen set is a set of screens (filters) that can be assigned to a linkset. SS7 messages transmitted on a linkset assigned to a screen set require screening by the system, if screening is enabled.

Parameters

nsfi (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

blkdpc

Blocked DPC is the next screening category.

blkopc

Blocked OPC is the next screening category.

dpc

Allowed DPC is the next screening category.

opc

Allowed OPC is the next screening category.

sio

Allowed SIO is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

scrn (mandatory)

Screenset name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

actname (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the *actname* parameter in conjunction with the gateway screening stop action table (see [chg-gws-actset](#) and [rtrv-gws-actset](#)).

Range:

ayyyyy 1 alphabetic character followed by up to 5 alphanumeric characters.

destfld (optional)

This parameter turns on and off the automatic allowed affected destination screening for network management messages against the routing table, self point codes, and capability point codes. When this parameter is ON, the automatic screening is applied at the end of the provisioned screen set.

Range:

yes

no

Default:

yes

nsr (optional)

Next screening reference. This parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No value given

Example

```
ent-scrset:scrn=ss01:nsfi=opc:nsr=iec
ent-scrset:scrn=ss02:nsfi=stop
ent-scrset:scrn=empt:nsfi=stop:destfld=yes
ent-scrset:scrn=scr1:nsfi=stop:actname=copy
```

Dependencies

Even though gateway screening is in the screen test mode, as defined by the parameters *gwsa=off* and *gws=on*, the gateway screening action in the stop action set specified by the *actname* parameter of the screen set will be performed at the end of the screening process.

The *nsfi=stop* parameter must be specified before the *actname* parameter can be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

The value of the *actname* parameter must already be defined in the Gateway Screening Stop Action table with the *chg-gws-actset* command. These values are shown in the *ACTNAME* field of the *rtrv-gws-actset* command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the *nsfi=stop* parameter is specified, then the *nsr* parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

The specified screen set name cannot be in use by another screen set.

2567 E2567 Cmd Rej: Screen set name already exists

A maximum of 63 user-defined screen sets can be defined in the database.

2500 E2500 Cmd Rej: Maximum number of screen sets exceeded

The `nsfi` and `nsr` parameters must point to one or more existing entities in another entity set, or the `nsfi=stop` parameter must be specified, and the `nsr` parameter cannot be specified.

2552 E2552 Cmd Rej: NSFI and NSR do not reference an existing screen

If the `nsfi=stop` parameter is not specified, then the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

The Gateway Screening (GWS) Stop Action Set table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The `nsfi` parameter must be valid for the SCRSET entity.

3271 E3271 Cmd Rej: NSFI is invalid

The Gateway Screening (GWS)/Global Title Translation (GTT) shared database resource (DBMM.TBL) cannot be full.

2557 E2557 Cmd Rej: GWS table is full

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

Entering a new screen set may take a few minutes of processor time. The following message appears in the scroll area:

```
Extended processing time required-please wait
```

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

Output

```
ent-scrset:scrn=ss01:nsfi=opc:nsr=iec
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCRSET: SCREEN SET AFFECTED - SS01 25% FULL
ENT-SCRSET: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-scrset](#)
- [dlt-scrset](#)
- [rtrv-scrset](#)

4.1.348 ent-serial-num

Use this command to enter and lock the NT serial number into the database for an EAGLE STP.

You must enter the serial number at least once without specifying the *lock* parameter. As long as you enter the command without the *lock* parameter, you can enter the system serial number as many times as needed. After the correct serial number is entered, you must use the *lock=yes* parameter to lock the serial number table. You cannot change the serial number with administration commands after the table is locked.

Parameters**serial (mandatory)**

The system NT Serial Number.

Range:

aaayyyyyyy

Up to 10 alphanumeric characters; mixed case is allowed.

The first two characters (the prefix) must be letters. The remaining characters must be numbers. The serial number cannot contain spaces or special characters.

lock (optional)

This parameter is used to lock the Serial Number table when the serial number is entered for the system.

 **Caution:**

After the serial number is locked, you cannot enter it again or change it in the database. You can use the command without the `lock` parameter to enter the serial number as many times as needed; then enter the command with the `lock` parameter and the correct serial number to lock the serial number table.

Range:

yes

Default:

Not locked

Example

```
ent-serial-num:serial=nt00000123
```

```
ent-serial-num:serial=nt00000123:lock=yes
```

Dependencies

The serial number must be entered at least once without specifying the `lock` parameter.

4233 E4233 Cmd Rej: Lock cannot be specified on first NT Serial Number entry

The system serial number that is entered when the `lock` parameter is specified must match the serial number that was previously entered in the Serial Number table by using the command without the `lock` parameter.

3591 E3591 Cmd Rej: Invalid System serial number

The system serial number cannot be entered again after the Serial Number table is locked.

3592 E3592 Cmd Rej: System serial number is already locked in database

The system serial number must start with two alphabetical characters.

4230 E4230 Cmd Rej: First 2 characters of Serial Number must be alphabetical

The format of the serial number should be AANNNNNNNN where NNNNNNNN must be numeric digits (0 - 9).

4231 E4231 Cmd Rej: Last 8 characters of Serial Number must be numerical

The format of the serial number needs to be 2 alphabetical letters followed by 8 numbers (e.g., NT01234567.)

4232 E4232 Cmd Rej: NT Serial Number must be 10 characters long

Notes

None

Output

```
ent-serial-num:serial=nt00000123
```

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
ENT-SERIAL-NUM: MASP A - COMPLTD
;
```

Related Topics

- [rtrv-serial-num](#)

4.1.349 ent-shlf

Use this command to add an equipment shelf to the database.

Parameters

loc (mandatory)

The location of the shelf.

Range:

1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300,
6100, 6200, 6300

type (mandatory)

The type of equipment shelf to be configured.

Range

ext, fpb

fan (optional)

This parameter turns ON/OFF the FAN option. If it is turned ON, the FAN power for this shelf will be added to the Frame Power Budget.

Range

off,

on

Example

```
ent-shlf:type=ext:loc=1200
ent-shlf:type=imtswch:loc=6100
ent-shlf:type=fpb:loc=6200:fan=on
```

Dependencies

The frame and shelf values of the shelf location parameter (`loc`) must be within the valid range (`xyzz`, where `x`=frame and `y`=shelf; `zz` is always 00 for this command).

N/A N/A

The specified shelf location must not have been configured previously.

2202 E2202 Cmd Rej: Shelf location already equipped

The Shelf table is corrupt or cannot be found by the system.

2104 E2104 Cmd Rej: Failed reading the shelf table

A shelf cannot be provisioned at location 1100. This location is reserved for the control shelf.

2201 E2201 Cmd Rej: Shelf location 1100 is reserved for the control shelf

The shelf locations 6200 and 6300 are reserved for shelf type FPB only. However, shelf with `type=fpb` can be provisioned in any shelf location from 1200 to 6300.

2675 E2675 Cmd Rej: Shelf locations 6200 and 6300 are reserved for FPB shelf.

Notes

None

Output

```
ent-shlf:type=ext:loc=1200
```

rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0

```

ENT-SHLF: MASP A - COMPLTD
;

ent-shlf:type=fpb:loc=6300:fan=on

tekelecstp 03-09-12 11:11:28 EST EAGLE 45.0.0
ENT-SHLF: MASP A - COMPLTD
;

```

Related Topics

- [dlt-shlf](#)
- [rtrv-shlf](#)

4.1.350 ent-sid

Use this command to define additional true point codes for an STP. This command allows newly defined true point codes to be distributed to the cards without requiring system initialization.

Parameters

pc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24/pcn16 (optional)

STP true point code.

pci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255
id—0-7

The point code *0-000-0* is not a valid point code.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

pcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

Example

To create a site identification STP PC for ITU-N and ITU-I:

```
ent-sid:pcn=123:pci=1-1-1
```

To create a site identification STP PC for ITU-N Spare and ITU-I Spare:

```
ent-sid:pcn=s-123:pci=s-1-1-1
```

To create a site identification STP PC for ITU-N16:

```
ent-sid:pcn16=125-1-6
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The Spare Point Code Support feature must be enabled before an ITU-I or ITU-N spare point code can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

If the system is configured for ANSI format point codes, the specified network indicator value (*ni*) of the `pc` parameter must be 6 or greater when the specified cluster value is 0 (*nc*).

2169 E2169 Cmd Rej: Point code out of range

The `pcn` and `pcn24` parameters cannot be specified together in the command.

2647 E2647 Cmd Rej: Only one of PCN or PCN24 may be specified

The specified STP point code must not have been previously defined as a capability point code.

2189 E2189 Cmd Rej: Site point code is already being used

An STP point code cannot exist that is the same type (ANSI, ITU-I, ITU-N, ITU-N24, ITU-N16, ITU-ISpare, or ITU-NSpare) as the specified STP point code or must not have been previously defined as a capability point code.

2189 E2189 Cmd Rej: Site point code is already being used

The value of the `pc/pca/pci/pcn/pcn24/pcn16` parameter must be a full point code.

2861 E2861 Cmd Rej: Site PC, CPCs and NCPCs must be full point codes

The SID table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

ITU-N STP destination point codes can be specified only as full point codes.

3921 E3921 Cmd Rej: ITU National Point Code must be full point code

Invalid parameter was specified.

2014 E2014 Cmd Rej: Unrecognized parameter identifier

ANSI or ITUN-24 SID cannot be provisioned if the J7 feature is enabled.

2802 E2801 Cmd Rej: J7 Support feature must not be Enabled

3238 E3238 Cmd Rej: ANSI or ITUN-24 SID cannot be provisioned

A string of 1 to 64 characters. Valid values are (0-9, A-Z), +, *, #, .(period), @ or DFLT (default).

npdd (optional)

Number of prefix digits to be deleted from the incoming digit string. If NPDD is zero then no digits are deleted.

Range:

ZZZZZZZZZZZZZZZZ

An integer in the range of 0 to 15.

Default:

No change to the current value.

System Default:

0

npds (optional)

New prefix digits to be substituted to digit string after deleting the NPDD. If NPDS is NONE then no digits are prepended.

Range:

ZZZZZZZZZZZZZZZZ

A string of 1 to 15 characters. Valid values are hex digits (0-9, A-F) and NONE.

Default:

No change to the current value

System Default:

none

pfx (mandatory)

Prefix

Range:

ZZZZZZZZZZZZZZZZ

A string of 1 to 15 characters. Valid values are hex digits (0-9, A-F), +, *, -, #.

Example

```
ent-sip-npp:phctxt=abc.com:pfx=101
```

```
ent-sip-npp:phctxt=abc.com:pfx=121:npdd=5:npds=2f
```

```
ent-sip-npp:phctxt=a*bc.com:pfx=91*:npdd=5:npds=af1
```

```
ent-sip-npp:phctxt=df1t:pfx=*121#
```

Dependencies

SIPNP Feature must be enabled before entering any number normalization rules.

2590 E2590 Cmd Rej: SIPNP Feature must be enabled

SIP Phone Context table (SIPPHCXT) should be accessible.

2594 E2594 Cmd Rej: Failed reading SIP Phone Context table

SIP Prefix table (SIPNNPFX) should be accessible.

2637 E2637 Cmd Rej: Failed reading SIP Prefix table

SIP DBMM 2 table should be accessible.

2649 E2649 Cmd Rej: Failed reading DBMM 2 table

A maximum of 101 entries can be added in the SIP Phone Context table (SIPPHCXT).

2644 E2644 Cmd Rej: SIP Phone Context table is full

A maximum of 50 prefixes for each phone context can be added in the SIP Prefix table (SIPNNPFX).

2646 E2646 Cmd Rej: SIP Prefix table is full

Prefixes must be unique. Duplicate Prefix entries are not allowed.

2651 E2651 Cmd Rej: SIP Prefix entry already exists

Phone Contexts must be unique. Duplicate Phone Context entries are not allowed.

2672 E2672 Cmd Rej: SIP Phone Context already exists

At least one NPDD or NPDS must be specified with non-default (other than 0, NONE) value.

2686 E2686 Cmd Rej: Both NPDS and NPDD can not be set to default values

SIPPHCXT table can have a maximum of 101 Phone Contexts which includes 100 Unique and 1 DFLT.

2068 E2068 Cmd Rej: Only 100 Unique and 1 DFLT PHCTXT allowed

A valid Phone Context/Prefix value should be given.

2053 E2053 Cmd Rej: Incorrect information unit, expect string - <parm>

The PHCTXT parameter value must contain no more than 64 characters and the PFX parameter value must contain no more than 15 characters.

2039 E2039 Cmd Rej: <parm_desc> too long, min <min>, max <max> - <parm>

Notes

None.

Output

This example displays the output when all the parameters are specified:

```
ent-sip-npp:phctxt=a*bc.com:pfx=91:npdd=5:npds=af1
```

```
tekelecstp 12-07-16 10:05:45 EST EAGLE 45.0.0
ent-sip-npp:phctxt=a*bc.com:pfx=91:npdd=5:npds=af1
Command entered at terminal #4.
PHCTXTID table is (2 of 101) 2% full.
ENT-SIP-NPP: MASP A - COMPLTD
;
```

This example displays the output when just the `phctxt` and `px` parameters are specified:

```
ent-sip-npp:phctxt=linea.com:px=*121#

tekelecstp 12-07-09 18:59:31 EST 45.0.0-64.35.0
ent-sip-npp:phctxt=linea.com:px=*121#
Command entered at terminal #4.
PHCTXTID table is (1 of 101) 1% full.
ENT-SIP-NPP: MASP A - COMPLTD
;
```

Related Topics

- [dlt-sip-npp](#)
- [rtrv-sip-npp](#)
- [chg-sip-npp](#)

4.1.352 ent-slk

Use this command to add a low-speed or high-speed (ATM or IP) signaling link to a linkset in the database.

Signaling links are the only elements in the database directly supported by a hardware device. When a link is added to a linkset, the link remains in the state OOS-MT-DSBLD (out of service maintenance disabled) until it is activated.

For E5-E1T1-B cards, use this command to associate a signaling link and a timeslot with the E1, T1 or J1 interface that will service the timeslot.

For E5-E1T1-B cards used for SE-HSL links, use this command to assign links A and B on any 2 of the 8 E5-E1T1-B card ports.

Up to 64 signaling links can be assigned to one E5-E1T1-B card, allowing links A, A1 - A31, B, and B1 - B31 to be provisioned.

Up to 128 signaling links can be assigned to SLIC cards running IPSP application, allowing links A, A1 - A63, B, and B1 - B63 to be provisioned.

Up to 3 signaling links can be assigned to an E5-ATM-B card, allowing links A, A1, and B to be provisioned.



Note:

The `link` parameter has been added as a synonym for the `port` parameter. Either `port` or `link` can be used for a few more EAGLE releases; then the `port` parameter will be removed.

Parameters

link (mandatory)

The signaling link on the card specified in the `loc` parameter. The links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all `link` parameter values.

See [Table A-1](#) for valid `link` parameter range values for each type of card that can have a location specified in the `loc` parameter.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

lsn (mandatory)

Linkset name. The linkset name must be unique.

Range:

aaaaaaaa

1 alphabetic character followed by up to 9 alphanumeric characters

slc (mandatory)

Signaling link code. The SLC must be unique within the linkset. It must be the same at both the system location and the distant node.

Range:

0 - 15

aname (optional)

Association name. The association assigned to the signaling link added in an IPSP linkset.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

atmtsel (optional)

ATM timing selector. The timing source for the ATM signaling link—internal, line, or external. Internal timing is derived from an internal clock source operating at 1.544 MHz \pm 200 Hz for ANSI links and 2.048 MHz \pm 103 Hz for ITU links. External timing is derived from the High-Speed Master Clock (T1 or E1). Line timing is derived from its received data stream, if present.

 **Caution:**

The internal timing source is used for debug purposes only, and is not to be used for production operation.

If you are using the 2.048 MHz reference clock as the timing source for E1 signaling links, the `atmtsel=external` parameter must be specified for high-speed ATM signaling links. The `atmtsel` parameter is not valid in the command when the `elport` parameter is specified for an E1 signaling link. For information on the E1 interface, see the *Database Administration - SS7 User's Guide*.

Range:*external**internal**line***Default:***line***bps (optional)**

Transmission rate for the link in bits per second.

 **Note:**

Links with different speeds can be mixed within a linkset. Mixing of high speed links and low speed links in a linkset is supported for migration purposes and is not recommended for standard provisioning.

Range:*1536000, 1544000, 1984000, 2048000, 56000, 64000*

The value specified for the `bps` parameter must be supported for the associated card application:

- SS7ANSI—56000 or 64000
- CCS7ITU—56000 or 64000
- ATMANSI—1544000
- SS7ANSI, CCS7ITU (E1 SE-HSL cards)—1984000
- SS7ANSI, CCS7ITU, (T1 SE-HSL-A cards)—1536000
- ATMITU—2048000
- CCS7ITU, (J1 cards) --- 64000

Default:*56000***Default: (For J1 links)***64000*

e1atmcr4 (optional)

CRC4 multi-frame structure enable/disable indicator.

Range:

on

off

Default:

on

e1atmsi (optional)

Value of two Spare International bits of NFAS data.

Range:

0 - 3

Default:

3

e1atmsn (optional)

Value of five Spare National bits of NFAS data.

Range:

0 - 31

Default:

0

e1port (optional)

Port for the E1 interface on the E1 card where a signaling link and timeslot or an SE-HSL link is being assigned.

Range:

1 - 8

Any 2, but no more than 2, of the 8 ports on an E5-E1T1-B card can be specified when the card is used as an SE-HSL card.

Default:

1

ecm (optional)

Error correction method.

Range:

basic

pcr

Default:

basic

j1port (optional)

Port for the J1 interface on the J1 card where a signaling link and timeslot is being assigned.

Range:

1-8

Ports 1 through 8 can be specified for E5-E1T1B cards.

Default:

1

12tset (optional)

Level 2 timer set

A signaling link can be assigned to any of the thirty-five timer sets.

Range:

1 - 40

1-10 —ANSI low speed links

11-20 —ITU low speed links

21-25 —ITUN China high speed links

26-30 —ITUN Q703.A high speed links

31-35 —Unchannelized T1 high speed links

36 --40---- ITUN16 Japan low speed links

Default:

1 — ANSI low speed links

11 — ITU low speed links

21 — ITUN China high speed links (SE-HSL link in a linkset defined with the `apctype=ituchina` parameter)26 — ITUN Q703.A high speed links (SE-HSL link in a linkset defined with the `apctype=itun` parameter)

31 — Unchannelized T1 high speed links

36----ITUN16 Japan low speed links

11 (optional)

ATM line length in feet.

Range:

0 - 7

0 —0-110 feet

1 —110-220 feet

2 —220-330 feet

3 —330-440 feet

4 —440-550 feet

5 —550-660 feet

6 —More than 660 feet

7 —Allows use of external line buildout networks

Default:

0

1pset (optional)

Link parameter set identifier

Range:

1 - 30

Default:

1 — ANSI
21 — ITU

pcrn1 (optional)

Threshold of the number of MSUs available for retransmission. If the error correction method being used is PCR and this threshold is reached, no new MSUs or FISUs are sent. The retransmission cycle is continued up to the last MSU entered into the retransmission buffer in the order in which they were originally transmitted.

Range:

1 - 1023
low speed E1/T1 links: 1 - 127
unchannelized T1 links: 1 - 1023

Default:

76 — low speed E1/T1 links.
608 — unchannelized T1 links.

pcrn2 (optional)

Threshold of the number of MSU octets available for retransmission. If the error correction method being used is PCR, and this threshold is reached, no new MSUs or FISUs are sent. The retransmission cycle is continued up to the last MSU entered into the retransmission buffer in the order in which they were originally transmitted.

Range:

300 - 287744
low speed E1/T1 links: 300 - 35500
unchannelized T1 links: 7200 - 287744

Default:

3800 — low speed E1/T1 links.
32224 — unchannelized T1 links.

t1port (optional)

Port for the T1 interface on the T1 card where a signaling link and timeslot or an ST-HSL-A link is being assigned.

Range:

1 - 8
Any 2, but no more than 2, of the 8 ports on an E5-E1T1-B card can be specified when the card is used as an ST-HSL-A card.

Default:

1

ts (optional)

E1 or T1 timeslot for the assigned signaling link.

Range:

1 - 31

E1 range:

1-31

T1 range:
1 - 24

J1 range:
1-24

vci (optional)

Virtual channel identifier.

Range:
5, 32 - 65535
0-4 and 6-31 are reserved values; they cannot be specified in the command.

Default:
5

vpi (optional)

Virtual path identifier.

Range:
0 - 4095

Default:
0

Example

```
ent-
slk:loc=1201:link=a:slc=3:lsn=c1201001:l2tset=3:bps=64000:ecm=b
asic
```

```
ent-
slk:loc=1201:link=a:slc=3:lsn=c1201001:l2tset=3:ecm=pcr:pcrn1=5
0:pcrn2=4000
```

This example adds signaling link A to linkset LSHCAP:

```
ent-slk:loc=1304:link=a:slc=0:lsn=lshcap:lpset=3:vci=5:vpi=15
```

```
ent-
slk:loc=1302:link=a:slc=5:lsn=atm1302a:lpset=3:vci=10:vpi=15:l1
=0:atmtsel=external
```

This example adds a link to linkset LS1 at 56 KB:

```
ent-slk:loc=1205:link=a1:slc=0:lsn=ls1
```

This example assigns a timeslot for the signaling link on an E1 card that uses E1 port 1:

```
ent-slk:loc=1206:link=a:slc=0:lsn=e1jwk:ts=1
```

This example assigns a timeslot for a signaling link on an E1 card that uses E1 port 2:

```
ent-slk:loc=1205:link=b:slc=0:lsn=e1typ:ts=1:e1port=2
```

This example adds a timeslot for a signaling link using E1 port 2 and signaling link B2:

```
ent-slk:loc=1205:link=b2:slc=0:lsn=e1typ:ts=1:e1port=2
```

This example adds a timeslot for a signaling link using signaling link A2. The T1 interface defaults to the interface defined for T1 port 1 (`t1port` parameter not specified):

```
ent-slk:loc=1207:link=a2:slc=0:lsn=t1jwk:bps=64000:ts=1
```

This example adds a timeslot for a signaling link using T1 port 2 and signaling link B2:

```
ent-slk:loc=1207:link=b2:slc=0:lsn=t1typ:ts=1:t1port=2
```

This example adds a signaling link to linkset LS1 at 2048000 bps for an ATM card that will use the CRC4 multi-frame structure:

```
ent-  
slk:loc=1205:link=a:slc=0:lsn=ls1:bps=2048000:atmsel=line:elatmcr4=  
on
```

This example adds a link to linkset LS1 at 56 Kbps for a card that is provisioned as an E1 card:

```
ent-slk:loc=1205:link=a31:slc=0:lsn=ls1:elport=4:ts=4
```

This example adds a link to linkset LS2 at 64 Kbps for a card provisioned as a T1 card:

```
ent-slk:loc=1207:link=b27:slc=3:lsn=ls2:t1port=8:ts=6:bps=64000
```

This example adds signaling link B to linkset LSE5ATM on an E5-ATM-B card:

```
ent-slk:loc=1305:link=b:slc=1:lsn=lse5atm:lpset=3:vci=5:vpi=15
```

This example adds signaling link A1 to linkset L2E5ATM on an E5-ATM-B card:

```
ent-slk:loc=1303:link=a1:slc=1:lsn=l2e5atm:lpset=3:vci=5:vpi=15
```

This example assigns a timeslot for the signaling link on a J1 card that uses the J1 port:

```
ent-  
slk:lsn=ls2:j1port=2:slc=9:port=a3:loc=1102:ts=5:bps=64000:ecm=basic
```

Dependencies

Card locations 1113 - 1118 cannot be specified.

2154 E2154 Cmd Rej: Card slot reserved by system

The `ecm=pcr` parameter must be specified before the `pcrn1` and `pcrn2` parameters can be specified for the SS7ANSI and CCS7ITU applications.

2121 E2121 Cmd Rej: PCRN1 and PCRN2 parameters are invalid if ECM=BASIC

The value specified for the `bps` parameter must be supported for the associated card application.

2146 E2146 Cmd Rej: BPS value not supported

If the card application is SS7ANSI or CCS7ITU, then a value of 56000 or 64000, respectively, must be specified for the `bps` parameter. If SE-HSL or ST-HSL-A cards are used, then a value of 1984000 or 1536000, respectively, must be specified for the `bps` parameter.

2119 E2119 Cmd Rej: BPS must be 56000 or 64000

A value of 1544000 must be specified for the `bps` parameter if the card application is ATMANSI.

3406 E3406 Cmd Rej: BPS must be 1544000 for LIMATM cards

A value 2048000 must be specified for the `bps` parameter if the card type is LIME1ATM.

3298 E3298 Cmd Rej: If specified, BPS must be 2048000 for LIME1ATM Card

The card application must be ATMANSI before the `bps=1544000` parameter can be specified. The card application must be ATMITU before the `bps=2048000` parameter can be specified.

3418 E3418 Cmd Rej: Specified BPS is invalid

A value of 1984000 or 1536000 must be specified for the `bps` parameter if the card is an E5-E1T1-B card used for SE-HSL or ST-HSL-A links (the `linkclass=unchan` parameter is specified in the `ent-e1` or `ent-t1` command) respectively.

4276 E4276 Cmd Rej: BPS value not valid for Linkclass=Unchan

The values 0 - 4 and 6 - 31 cannot be specified for the `vci` parameter; these values are reserved system values.

3404 E3404 Cmd Rej: VCI values 0..4 and 6..31 are reserved

The linkset type must be valid for the card:

- The linkset adjacent point code (APC) type must be the same as the card application type (ANSI or ITU).
- IPSP-M2PA linksets cannot contain IPGWx and IPSP-M3UA link types. During migration to an IPSP-M2PA linkset, link types other than IPGWx or IPSP-M3UA can be added to the linkset. After the linkset is transitioned to IPSP-M2PA, only IPSP-M2PA and IPLIMx links can be added.
- IPSP-M3UA linksets cannot contain SS7IPGW, IPGWI, and IPGHC link types. After the linkset is transitioned to IPSP-M3UA, only IPSP-M3UA links can be added to the linkset.

2126 E2126 Cmd Rej: Invalid linkset type for card

The specified linkset name must exist in the database.

2346 E2346 Cmd Rej: Linkset not defined

The value of the `slc` parameter cannot be used by more than one link in the linkset.

2132 E2132 Cmd Rej: The specified SLC is in use

A card must be equipped in the specified card location.

2101 E2101 Cmd Rej: Card location is unequipped

The card in the specified card location must be a LIM or MIM and must exist.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

A link cannot be already assigned to the specified port.

2133 E2133 Cmd Rej: There is a link already assigned to this port

The parameters that are specified for the command must be valid for the type of card in the specified card location.

2131 E2131 Cmd Rej: Parameters not valid for card type

If a low-speed link is assigned to a card (card application is not ATMANSI or ATMITU), then the ATM high-speed link and E1 ATM parameters (`atmtsel`, `elatmcrc4`, `etatmsi`, `elatmsn`, `ll`, `lpset`, `vci`, and `vpi`) cannot be specified.

3408 E3408 Cmd Rej: ATM parameters not valid for card type

If an ATM high-speed link is assigned to a card (card application is ATMANSI), then the low-speed link parameters (`ecm`, `l2tset`, `pcrn1`, and `pcrn2`) cannot be specified.

3407 E3407 Cmd Rej: LSL parameters not valid for card type

If an IP link is assigned to a card (card application is SS7IPGW, IPGWI, or IPLIMI), then the following low-speed link parameters, ATM high-speed link parameters, and E1 ATM high-speed link parameters cannot be specified: `lpset`, `vci`, `vpi`, `ll`, `atmtsel`, `elatmcrc4`, `elatmsi`, `elatmsn`, `ecm`, `l2tset`, `pcrn1`, and `pcrn2`.

3770 E3770 Cmd Rej: SS7 parameters cannot be specified for IP7 link

The value specified for the `link` parameter must be valid for the specified card type and application:

- A4 - A-15 and B4 - B15—card type is LIME1 or LIMT1 for an E5-E1T1-B card, and the card application is SS7ANSI or CCS7ITU
- A16 - A31 and B16 - B31 --- card type is LIME1 or LIMT1 for an E5-E1T1-B card used as an E1 or T1 card, and the card application is SS7ANSI or CCS7ITU.
- A4 - A31 and B4 - B31—cannot be specified for an SE-HSL or an ST-HSL-A card
- A - A7 and B - B7—E5-ENET-B cards running the IPLIMI application
- A - A15 and B - B15—E5-ENET-B, or SLIC cards running the IPSP application
- A, A1 - A63 and B, B1 - B63-SLIC card running the IPSP application

3494 E3494 Cmd Rej: Link is invalid for card location

HIPR2 cards must be in card locations `xy09` and `xy10` on any shelf that contains one or more E5-E1T1-B, E5-ENET-B, or SLIC cards. When links A4 - A31 or B4 - B31 are specified, the system verifies that HIPR2 cards are in card locations `xy09` and `xy10` on the same shelf with the specified E5-E1T1-B, E5-ENET-B, or SLIC card.

3490 E3490 Cmd Rej: HIPR/HIPR2 must be equipped on the shelf for this card

If the card application is SS7IPGW or IPGWI, then the `link=a` parameter must be specified.

3768 E3768 Cmd Rej: PORT B not supported for device

If an E5-E1T1-B card is used for SE-HSL or ST-HSL-A links, then only the `link=a` parameter or `link=b` parameter can be specified.

4281 E4281 Cmd Rej: Specified link not supported for Linkclass=Unchan

If the specified linkset has a mate linkset, only 1 SS7IPGW or IPGWI signaling link can be assigned to the specified linkset. The assigned link must be an SS7IPGW or IPGWI link.

3772 E3772 Cmd Rej: Only one SS7IPGW or IPGWI link allowed in mated linkset

Up to 8 IPGWx signaling links can be assigned to one linkset if the linkset is not mated.

4224 E4224 Cmd Rej: Up to 8 SS7IPGW or IPGWI links allowed in un-mated linkset

If an IP link is assigned to a card running the SS7IPGW application, then the `lsn` parameter must reference a linkset that specifies an IP gateway adjacent point code.

3829 E3829 Cmd Rej: Link set with IPGWAPC=YES requires SS7IPGW/IPGWI GPL

If an IP link is assigned to a card running the IPGWI application, then the `lsn` parameter must reference a linkset that specifies an IP gateway adjacent point code.

3828 E3828 Cmd Rej: Card GPL type IPGWx requires a link set with IPGWAPC=YES

If the `multgc=yes` parameter is specified, then all links assigned to the linkset must be of the same type.

4003 E4003 Cmd Rej: MULTGC=YES requires IPSEG-M2PA, IPGWI, or IPLIMI links

If `multgc=yes` parameter is specified, then the card in the specified location must be running the IPGWI, IPLIMI, or IPSEG application.

4045 E4045 Cmd Rej: Linkset with MULTGC=YES requires IPGWI/IPLIMI/IPSEG GPL

Linksets with 14-bit ITU-N and 24-bit ITU-N APCs or SAPCs can contain only IPGWI or IPLIMI M3UA links. These links support 14-bit ITU-N and 24-bit ITU-N traffic simultaneously.

Linksets containing 24-bit ITU-N APCs or SAPCs cannot contain E1 ATM links. These links do not support 24-bit ITU-N traffic.

3538 E3538 Cmd Rej: Linkset SLK requires ITUN APC/SAPC to be 14bit or 24bit only

A maximum of 1200, 1500, 2000, or 2800 links is allowed in the system. The maximum depends on the enabled Large System # Links quantity (see the `rtrv-ctrl-feat` command output). A FAK is required to enable support for more than 1200 links. A mixture of T1 ATM high-speed, E1 ATM high-speed, SE-HSL, IP, and low-speed signaling links is supported.

3409 E3409 Cmd Rej: Max number combined LSLs and HSLs already entered

If a card location is specified for an E1, T1, or Channel card (card type LIME1, LIMT1, or LIMCH), then the `ts` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

A specific timeslot can be assigned in the `ts` parameter to only one E1 signaling link for the E1 interface that services that timeslot.

2131 E2131 Cmd Rej: Parameters not valid for card type

A specific timeslot can be assigned in the `ts` parameter to only one T1 signaling link for the T1 interface that services that timeslot.

2746 E2746 Cmd Rej: TS value on the T1 already in use by a signaling link

The `ts` parameter value for a T1 link must be in the range 1-24.

2748 E2748 Cmd Rej: T1 TS value must be specified in the range (1-24)

The `ts` parameter cannot be specified for E5-E1T1-B cards that are used for SE-HSL or ST-HSL-A links (the `linkclass=unchan` parameter is specified in the `ent-e1` or `ent-t1` command).

4275 E4275 Cmd Rej: Cannot specify TS when Linkclass=Unchan

The Card (IMT) table is corrupt or cannot be found.

2102 E2102 Cmd Rej: Failed reading the IMT table

The Link table is corrupt or cannot be found.

2103 E2103 Cmd Rej: Failed reading the link table

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The E1/T1 table is corrupt or cannot be found.

4059 E4059 Cmd Rej: Failed reading the E1/T1 table

The Extended Link table is corrupt or cannot be found.

2599 E2599 Cmd Rej: Failed reading the extended link table

If the card is an IPSP card, then the `ipsg=yes` parameter must be specified (see the `ent-ls` command).

4809 E4809 Cmd Rej: GPL type IPSP requires linkset with IPSP=YES

If an IPSP linkset and card are used, then the `aname` parameter must be specified.

4805 E4805 Cmd Rej: ANAME is required for an IPSP link

If the `aname=m3ua` parameter is specified, then a maximum of 16 signaling links can be assigned.

4836 E4836 Cmd Rej: Limit 16 SLKs per IPSP-M3UA association

If the `aname=m2pa` parameter is specified, then only one signaling link can be assigned.

4835 E4835 Cmd Rej: Limit 1 SLK per IPSP-M2PA association

The total TPS of all signaling links configured for an IPSP card cannot exceed 6500 TPS for an E5-ENET-B or SLIC card when the `type=enetb` parameter is specified (see the `ent-card` command).

The total TPS of all signaling links configured for an IPSP card cannot exceed 10,000 TPS for a SLIC card when the `type=slic` parameter is specified (see the `ent-card` command).

4807 E4807 Cmd Rej: TPS exceeded for card

If the HIPR2 High Rate Mode feature is turned off, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 500,000. If the HIPR2 High Rate Mode feature is turned on, then the sum of the TPS values must be less than or equal to 750,000. If the HIPR2 High Rate Mode and 1M System TPS features are turned on, then the sum of the TPS values assigned to all linksets in the system must be less than or equal to 1,000,000. The total provisioned system TPS is equal to SIGTRAN TPS + ATM TPS.

4255 E4255 Cmd Rej: Total provisioned system TPS limit exceeded

The value specified for the `aname` parameter must already exist in the database.

4099 E4099 Cmd Rej: Association name not found

The adapter assigned to the association must be the same as the adapter assigned to the linkset.

4802 E4802 Cmd Rej: Association ADAPTER type doesn't match linkset ADAPTER type

The value specified for the `aname` parameter must be associated with the value specified for the `loc` parameter.

4803 E4803 Cmd Rej: Association and LOC must reference same card

Linksets must have same routing context to share an association.

4828 E4828 Cmd Rej: Unique RCONTEXT required if associations in multiple lsets

The `aname` parameter can be specified only for IPSG links.

4804 E4804 Cmd Rej: ANAME is prohibited for a non-IPSG link

The specified parameter must be valid for the card type and use:

- `elport` —E5-E1T1-B cards used as E1 cards
- `t1port` —E5-E1T1-B cards used as T1 cards
- `j1port`—E5-E1T1-B cards used as J1 cards
- `ts` —E5-E1T1-B cards used as E1/T1 cards
- `lsn`, `slc`, `loc`, `port`, `bps`, `lpset`, `atmsel`, `vci`, `vpi`, `elatmcrc4`, `elatmsi`, and `elatmsn`—E5-ATM-B cards. Low-speed link parameters (`ecm`, `l2tset`, `pcrn1`, and `pcrn2`) cannot be specified.
- `elport` and `l2tset` —E5-E1T1-B cards used as SE-HSL cards
- `t1port` and `l2tset`—E5-E1T1-B cards used as ST-HSL-A cards

2131 E2131 Cmd Rej: Parameters not valid for card type

The E1 interface for the card at the location specified by the `loc` parameter must be defined (see the `ent-e1` command) before a signaling link can be assigned to the port.

4055 E4055 Cmd Rej: The E1PORT at the specified location is not equipped

The card location specified by the `e1loc` parameter must contain an E5-E1T1-B card that is used as an E1 card.

4076 E4076 Cmd Rej: E1 card location is unequipped

The specified card slot must be equipped with the valid card type.

2212 E2212 Cmd Rej: Invalid card type for this command

The value specified for the `ts` parameter cannot already be in use by the E1 card.

4051 E4051 Cmd Rej: TS value on the E1 already in use by a signaling link

The T1 interface of the T1 card specified by the `loc` parameter must already be defined (see the `ent-t1` command) before a signaling link can be assigned to the card.

3455 E3455 Cmd Rej: SCTP Association or SLK provisioned: Card supports 16 links

If a multi-port LIM card is used, then the `bps=56000` parameter must be specified.

2974 E2974 Cmd Rej: BPS must be 56000 for all ports on Multi Port LIM

If the `loc` parameter indicates an ST-HSL-A card, then the `t1port` parameter must be specified.

4215 E4215 Cmd Rej: LOC and T1PORT parameter combination must be specified

3866 E3866 Cmd Rej: Shelf FAN bit feature must be enabled

If the `loc` parameter indicates an SE-HSL card, then the `e1port` parameter must be specified.

4214 E4214 Cmd Rej: LOC and E1PORT parameter combination must be specified

If the link is In-Service, then this command cannot be entered.

3726 E3726 Cmd Rej: Active device state does not permit database change

Links must be available in the linkset that is specified by the `lsn` parameter.

2130 E2130 Cmd Rej: Maximum number of links are assigned to this linkset

The domain of the linkset specified by the `lsn` parameter must match the domain of the link specified by the `link` parameter.

2587 E2587 Cmd Rej: Card GPL of link does not match domain of linkset APC

The link capacity cannot exceed the maximum allowed by the SE-HSL or ST-HSL-A FAK.

3482 E3482 Cmd Rej: Link capacity exceeds limit allowed by HSL feature key

The L2 timer range must be valid for the type of signaling link being provisioned as shown:

- ANSI LSL—1 - 10
- ITU LSL—11 - 20
- E1-HSL (China)—21 - 25
- E1-HSL (ITUN)—26 - 30
- T1-HSL-A—31 - 35
- J1 LSL ---- 36-40

2127 E2127 Cmd Rej: L2 timer not valid for the signaling link type

The same value cannot be specified for the `aname` parameter for multiple links in the same linkset.

4829 E4829 Cmd Rej: Multiple links w/in same linkset cannot share an association

The same value must be specified for the `ecm` parameter for all links in a linkset.

2124 E2124 Cmd Rej: All links of LSN must use same error correction method

The T1 interface on the card at the location specified by the `loc` parameter must be defined (see the `ent-t1` command) before a signaling link can be assigned to the port.

2737 E2737 Cmd Rej: The T1PORT at the specified location is not equipped

The N1/N2 thresholds for PCR Error Correction Mode (ECM) specified by the `pcrn1` and `pcrn2` parameters must be within the range specified for the link type. Only low speed E1/T1 (LSL) and Unchannelized T1 links support PCR ECM.

4922 E4922 Cmd Rej: PCR N1/N2 threshold is out of range for the link type

E5-ATM-B cards must be inhibited before the card can support an A1 link.

2603 E2603 Cmd Rej: Card must be inhibited before executing this command

If a 3 Links per Card feature quantity is enabled, and an E5-ATM-B card is used, then the value specified for the `vci` parameter must be less than or equal to 16383.

5437 E5437 Cmd Rej: VCI value greater than 16383 not allowed

A 3 Links per Card feature quantity must be enabled before the `link=a1` parameter can be specified for an E5-ATM-B card.

The maximum number of E5-ATM-B cards with 3 links cannot exceed the value that is set by the 3 Links per Card quantity feature.

5462 E5462 Cmd Rej: Number of ATM cards with 3 links exceeds allowable quantity

The value specified for the `link` parameter when an ATM card is used must be valid:

- `a-a1`, `b`—E5-ATM-B card running the ATMANSI or ATMITU application

2972 E2972 Cmd Rej: Specified Link is not valid for Card and Appl Type

The BPS parameter value must be 64000 for J1 links. By default, BPS is 64000 for J1 links.

3160 E3160 Cmd Rej: BPS must be 64000 for J1 links in ent-slk.

The Time Slot parameter value must not be greater than 24 for J1 links. The range for the Time Slot is 1 - 24.

3161 E3161 Cmd Rej: Time Slot must not be greater than 24 for J1 links.

The ECM parameter value must be BASIC for J1 links. By default, ECM is BASIC for J1 links.

3163 E3163 Cmd Rej: ECM must be basic for J1 links.

The J1 table must be accessible.

3164 E3164 Cmd Rej: Failed reading the J1 table

A specific timeslot can be assigned in the `ts` parameter to only one J1 signaling link for the J1 interface that services that timeslot.

3171 E3171 Cmd Rej: TS value on the J1 already in use by a signaling link

The value specified for the SLC parameter must be in the range of 0 to 15.

2017 E2017 Cmd Rej: Integer is out of range, 0..15 - slc.

The value specified for TS parameter must be in the range of 0 to 15.

2017 E2017 Cmd Rej: Integer is out of range, 1..31 - ts

Notes

The `ll` parameter is not available in the SEAS database.

If a signaling link is assigned to a card that is running the ATMANSI or ATMITU application, and the `bps`, `vci`, `vpi`, `elatmcrc4`, `elatmsi`, `elatmsn`, `ll`, `atmsel`, and `lpset` parameters are not specified, then the ATM default values are assigned for these parameters.

The MTP Level 2 timers (`l2tset` parameter) are not valid for IP links or for ATM links.

A link is equipped when it is physically operational, that is, when the hardware is in place that is needed to support the link.

Signaling Links for E5-E1T1-B Cards

An E5-E1T1-B card can be used for E1, T1, or J1 card functions, but not both at the same time. E1 cards and T1 cards can coexist in the same EAGLE.

Each signaling link for an E1, T1, or J1 card must be associated with a timeslot assigned in this command. Each signaling link and timeslot assigned for an E1, T1, or J1 card must be associated with an E1, T1, or J1 interface that has been defined for one of the ports on the card (see the `ent-e1` or `ent-t1` command, respectively).

Timeslots and signaling links are defined in the `ent-slk` command by a combination of card location (`loc` parameter), the signaling link that uses the timeslot (A, A1-A31, B, B1-B31), the timeslot number (`ts`), and the port for the servicing E1, T1, or J1 interface on the E1, T1, or J1 card (`e1port` or `t1port` parameter). Timeslot numbers must be unique to the E1, T1, or J1 interface that services the timeslot; that is, the same timeslot cannot be assigned to the same E1, T1, or J1 interface for more than one signaling link.

Each E5-E1T1-B card used as an E1 card can have up to 64 signaling links assigned to the card. Each E1 interface on the card can service 1-31 timeslots.

Each E5-E1T1-B card used as a T1 card can have up to 64 signaling links assigned to the card. Each T1 interface on the card can service 1-24 timeslots.

Each E5-E1T1-B card used as a J1 card can have up to 64 signaling links assigned to the card. Each J1 interface on the card can service 1-24 timeslots.

Signaling Links for E5-ATM-B Cards

An E5-ATM-B card can support E1 or T1 card functions: however, the card cannot support both functions at the same time. Cards running E1 and T1 functions can coexist in the same EAGLE.

Each E5-ATM-B card can have up to 3 signaling links assigned to the card. Only the A, A1, or B link can be used. The card must be inhibited, a 3 Links per Card feature quantity must be enabled, and the value specified for the `vci` parameter must be less than or equal to 16383 before the A1 link can be provisioned.

The A, A1, and B links can be provisioned for a location if a card is not seated in that location. However, if a card other than an E5-ATM-B card is inserted in this location, then the card is auto-inhibited.

Signaling Links for IPSG Cards

An IPSG card supports both M2PA and M3UA signaling links.

The E5-ENET-B card supports up to 32 signaling links per card, 16 M3UA links per association, and 32 associations per card.

The SLIC card supports up to 128 signaling links per card, 16 M3UA links per association, and 128 associations per card.

Multiple M3UA signaling links with routing context (different linksets/AS, up to 16) can use a single association.

Each M3UA AS-ASP instance maps to a signaling link. Signaling link state depends upon AS-ASP state, as well as administrative action.

The IPSP card can share M2PA linksets with IPLIMI, and IPLHC cards, but the card cannot share M3UA linksets with SS7IPGW, IPGWI, and IPGHC cards.

The IPSP card supports ANSI and ITU and ITUN/ITUN24 signaling links simultaneously on one card and on one association. Each signaling link resides in a set of networks determined by the APC and SAPCs of the assigned linkset.

The `slktps` parameter specified for the IPSP linkset (see the `ent/chg-ls` command) specifies the TPS for each link provisioned for that linkset.

HSL and LSL in same linkset

Mixing of high speed links and low speed links in a linkset is supported for migration purposes and is not recommended for standard provisioning.

Signaling links and scheduled UI measurement reports

If the Integrated Measurements feature is turned on, then the measurements subsystem automatically disables the scheduled UI measurements reports, including the daily scheduled reports, if the entered link causes the provisioned link count to exceed 700.

Output

```
ent-slk:loc=1303:link=a1:slc=7:lsn=12e5atm:lpset=3:vci=5:vpi=15
```

```

eagle1 10-10-11 13:15:03 EST EAGLE 43.0.0
ent-slk:loc=1303:port=a1:slc=7:lsn=12e5atm:ts=1:elport=1
Command entered at terminal #4.
ENT-SLK: MASP A - COMPLTD
;

```

J1 links output:

```
ent-
slk:lsn=ls2:j1port=2:slc=9:port=a3:loc=1102:ts=5:bps=64000:ecm=
basic
```

```

tekelecstp 13-12-20 11:11:40 EST 46.0.0-65.3.0
ent-
slk:lsn=ls2:j1port=2:slc=9:port=a3:loc=1102:ts=5:bps=64000:ecm=basic
Command entered at terminal #4.
ENT-SLK: MASP A - COMPLTD
;

```

Related Topics

- [act-slk](#)
- [blk-slk](#)
- [canc-slk](#)
- [dact-slk](#)
- [dlt-slk](#)

- [inh-slk](#)
- [rept-stat-slk](#)
- [rtrv-slk](#)
- [tst-slk](#)
- [ublk-slk](#)
- [unhb-slk](#)

4.1.353 ent-snmp-host

Use this command to write an entry into the SNMP Host table to configure an SNMP northbound interface.

Parameters

host (mandatory)

Host name. This parameter specifies the logical name of the device associated with the specified IP address.

Special characters, such as hyphens, can be used in the host name if the host name is enclosed in double quotes (" ").

Range:

ZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZ

A string of characters, beginning with a letter and comprising up to 32 characters in length. Valid values are a..z, A..Z, 0..9, or .

ipaddr (mandatory)

The IP address associated with the host name. This is a TCP/IP address expressed in standard dot notation.

Range

4 numbers separated by dots, with each number in the range of 0-255.

cmdport (optional)

SNMP interface command port ID.

Range:

161, 1024..65535

This is the port that the SNMP agent will monitor for commands such as GET and SET.

Default:

161

hb (optional)

Heartbeat notification interval

Range:

0, 60, 120, 300, 600, 900, 1800, 3600, 5400, 7200

Default:

60

Output

```
ent-snmphost:host=snmphost1:ipaddr=192.168.54.100
```

```
tekelecstp 12-06-13 10:31:11 EST 45.0.0-64.66.0
ent-snmphost:host=snmphost1:ipaddr=192.168.54.100
Command entered at terminal #4.
SNMP HOST table is (1 of 2) 50% full
ENT-SNMP-HOST: MASP A-COMPLTD
;
```

```
ent-snmphost:host="snmp-
srvr":ipaddr=10.25.55.25:hb=300:trapcomm="passwd"
```

```
tekelecstp 12-06-13 10:33:31 EST 45.0.0-64.66.0
ent-snmphost:host="snmp-srvr":ipaddr=10.25.55.25:hb=300:trapcomm="passwd"
Command entered at terminal #4
SNMP HOST table is (2 of 2) 100% full
ENT-SNMP-HOST: MASP A - COMPLTD
;
```

Related Topics

- [chg-snmphost](#)
- [dlt-snmphost](#)
- [rtrv-snmphost](#)

4.1.354 ent-spc

Use this command to enter an SPC (secondary point code) into the database.

Parameters**spc (mandatory)**

ANSI point code with subfields network indicator-network cluster-network cluster member (*ni-nc-ncm*).

Synonym:

spca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

spc/spca/spci/spcn/spcn24/spcn16 (mandatory)

Secondary point code.

 **Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

spci (mandatory)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

spcn (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmr` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

spcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

spcn16 (mandatory)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

Example

This example adds a secondary point code:

```
ent-spc:spc=10-20-30
```

This example adds a 24-bit ITU-N secondary point code:

```
ent-spc:spcn24=99-99-99
```

This example adds a spare ITU-N secondary point code:

```
ent-spc:spcn=s-12345
```

This example adds a 16-bit ITU-N secondary point code:

```
ent-spc:spcn16=121-5-10
```

Dependencies

The Spare Point Code Support feature must be enabled before a spare point code (prefix s-) can be specified in the command.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The value specified for the `spc` parameter must be a full point code.

3820 E3820 Cmd Rej: Site SPC must be a full point code

The ANSI point code range requirements have been violated for an ANSI SID. For the ANSI secondary point code with subfields *ni-nc-ncm*, the *ni* component cannot equal 000, the *nc* component cannot equal 000 if the *ni* component is 001 - 005

2169 E2169 Cmd Rej: Point code out of range

The specified secondary point code to be added must not already exist as a secondary point code.

3812 E3812 Cmd Rej: The SPC already exists

A maximum of 40 secondary point codes may be defined.

3815 E3815 Cmd Rej: The maximum number of SPCs has already been defined

The MPC feature must be turned on before a secondary point code can be added using this command.

3867 E3867 Cmd Rej: MPC feature must be enabled

The value specified for the `spc` parameter cannot already exist in the Destination table as a destination point code, true point code, or concerned point code.

3809 E3809 Cmd Rej: SPC may not exist in the STP's route table

The specified secondary point code cannot match an existing true point code or capability point code in the Site Identification table.

3810 E3810 Cmd Rej: SPC may not exist as a TPC or CPC in the SID table

STP Site ID table must be accessible.

2874 E2874 Cmd Rej: Failed reading site identification table

SPC table must be accessible.

3807 E3807 Cmd Rej: Failed reading Secondary Point Code (SPC) table

Route Destination table must be accessible.

2648 E2648 Cmd Rej: Failed reading the route table

The value specified for the `spc/spca/spci/spcn/spcn24/spcn16` parameter cannot be the same as any Emulated Point Code value in the PCT table.

5466 E5466 Cmd Rej: Point Code matches an Emulated Point Code in PCT table

The J7 support feature must be enabled before the `spcn16` parameter can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

The SPC/SPCA/SPCN24 parameters are not allowed if the J7 support feature is enabled.

2801 E2801 Cmd Rej: J7 Support feature must not be Enabled.

Notes

If the `spcn` parameter is specified, its format must match the format that was assigned with the `chg-stpopts:npcfmti` parameter.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
ent-spc:spc=10-20-30
```

```
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
Secondary Point Code table is (7 of 40) 17% full
ENT-SPC: MASP A - COMPLTD
```

```
;
```

```
ent-spc:spcn16=121-2-15
```

```
tekelecstp 13-02-27 17:01:18 EST EAGLE 45.0.0-64.56.0
Secondary Point Code table is (3 of 40) 8% full.
ENT-SPC: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-spc](#)
- [rtrv-spc](#)

4.1.355 ent-srvsel

Use this command to assign the applicable service selectors required to specify a service entry for DSM services.

Parameters**Note:**

Definitions for the feature options specified by the on and off parameters are located in the Notes section.

**Note:**

The nature of address indicator parameters (*naiv* or *nai*) and the numbering plan parameters (*npv* or *np*) can be specified using a mnemonic or an explicit value. Either the mnemonic or the explicit value can be specified; however, both values cannot be specified at the same time for the same parameter. [NAIV/NAI Mapping](#) shows the mapping between the *naiv* and *nai* values. [Table A-8](#) shows the mapping between the *npv* and *np* values.

gti/gtia/gtii/gtin/gtin24 (mandatory)

Global title indicator. For all service selector commands, the domain is defined as GTI and GTIA (ANSI), GTI (ITU international), and GTIN (ITU national). For the service selector commands, GTI and GTIA are equivalent.

Range:

Supported value for ANSI: *gti=2* and *gtia=2*

Supported values for ITU: *gtii= 0, 2, 4*; *gtin=0, 2, 4*; *gtin24= 0, 2, 4*

serv (mandatory)

DSM service.

**Note:**

The *gport* service cannot be used for the Prepaid SMS Intercept Phase 1 (PPSMS) or the Portability Check for Mobile Originated SMS feature; use the *smsmr* service. The *mnp* service includes the G-Port, A-Port, and IS41 GSM Migration services.

Range:

eir
Equipment Identity Register

gflex
GSM flexible numbering

gport
GSM number portability

inpq
INP query

inpmr
INP message relay

smsmr
MO SMS ASD, MO SMS B-Party Routing, MO SMS GRN, MO-based GSM SMS NP, MO-based IS41 SMS NP, MO SMS IS41-to-GSM Migration, Portability Check for MO SMS, Prepaid SMS Intercept Phase 1

idps
IDP Screening for Prepaid

idpr
Prepaid IDP Query Relay

mnp
Mobile Number Portability

vflex
Voice Mail Router

atinp
ATI Number Portability Query (ATINP)

ttr
Triggerless TCAP Relay

aiq
ANSI41 Analyzed Information Query

ssn (mandatory)
Subsystem number.

Range:
0 - 255

tt (mandatory)
Translation type.

Range:
0 - 255

df1tact (optional)

This parameter specifies the default Action ID associated with the service selector entry.

Range:

ayyyyyyy

1 leading alphabetic followed by up to 8 alphanumeric characters

The `df1tact` parameter can have one of the following values:

- a GTT Action ID that exists in the GTT Action table and has an associated GTT Action of *disc/udts/tcaperr*
- *fallback* —Fallback to the Relay data. The relayed MSU is routed as per routing data provided by the service.
- *falltogtt* —Fallback to GTT. If the `gttselid` parameter has a value other than *none*, and the GTT selector search fails, then the GTT selector search is performed again using `gttselid=none`.

Default:

fallback

gttselid (optional)

The GTT Selector ID used for performing GTT on messages relayed by the service.

Range:

0 - 65534

nai (optional)

Nature of Address indicator.

Range:

sub

rsvd

natl

intl

naiv (optional)

Nature of Address indicator value.

Range:

0 - 127

np (optional)

Numbering Plan.

Range:

e164

generic

x121

f69

e210

e212

e214

private

npv (optional)

Numbering Plan value.

Range:

0 - 15

off (optional)

Disables or turns off the specified feature options. A comma-separated list of feature options that are requested to be turned off. Up to 10 feature options can be specified in the list.

Range:

gttrqd

on (optional)

Enables or turns on the specified feature options. A comma-separated list of feature options that are requested to be turned on. Up to 10 feature options can be specified in the list.

Range:

gttrqd

rqdtb1nop (optional)

The action performed if a message arrives at an SCCP card that does not have the necessary RTDB table, and the current message routing is GT.

Range:

udts

generate UDTS for the processed MSU

gtt

fall through to GTT for the processed MSU

disc

discard the processed MSU

snai (optional)

Service nature of address indicator.

Range:

natl

National significant number

intl
International number

rnidn
Routing number prefix and international dialed/directory number

rnndn
Routing number prefix and national dialed/directory number

rnsdn
Routing number prefix and subscriber dialed/directory number

ccrndn
Country code, routing number, and national directory number

sub
Subscriber number

snp (optional)
Service numbering plan.

Range:

e164

e212

e214

Example

```
ent-srvsel:gtii=4:tt=20:np=e164:nai=intl:serv=eir:ssn=*
```

```
ent-  
srvsel:gtin24=4:tt=4:np=e164:nai=intl:serv=gport:snp=e164:snai=intl:  
ssn=9
```

```
ent-srvsel:gtii=4:tt=4:np=e164:nai=intl:serv=eir:ssn=11
```

```
ent-  
srvsel:gtin=4:tt=9:np=e214:nai=natl:snp=e164:snai=intl:serv=gflex:ss  
n=250
```

```
ent-srvsel:gtii=2:tt=6:snai=intl:snp=e164:serv=smsmr:ssn=10
```

```
ent-  
srvsel:gtii=2:tt=6:snai=intl:snp=e164:serv=gport:ssn=10:on=gttrqd:gt  
tselid=4: dfltact=act2
```

```
ent-  
srvsel:gtii=4:tt=20:np=e164:nai=intl:serv=eir:ssn=*:rqdtblnop=disc
```

```
ent-srvsel:gtii=0:tt=0:serv=idpr:ssn=*
```

Dependencies

The Service Selector table cannot contain more than 1024 entries.

3533 E3533 Cmd Rej: Serv Selector table is full

The G-Flex feature must be turned on before the `serv=gflex` parameter can be specified.

3500 E3500 Cmd Rej: GFLEX feature must be ON

The INP feature must be turned on before the `serv=inpnr` or `serv=inpq` parameter can be specified.

3524 E3524 Cmd Rej: INP/AINPQ feature must be ON

The G-Port feature must be turned on before the `serv=gport` parameter can be specified.

3989 E3989 Cmd Rej: GPORT feature must be ON when (N)SERV=GPORT

The Equipment Identity Register (EIR) feature must be turned on before the `serv=eir` parameter can be specified.

3699 E3699 Cmd Rej: EIR feature must be ON

The `np` and `npv` parameters cannot be specified together in the command.

3551 E3551 Cmd Rej: NP and NPV must not be specified together

The `nai` and `nai v` parameters cannot be specified together in the command.

3552 E3552 Cmd Rej: NAI and NAI V must not be specified together

The `gtia=4` parameter cannot be specified.

3553 E3553 Cmd Rej: GTI(A)=4, and GTI(x)=1 and 3 are not supported

The values 1 and 3 are not valid for the `gti/gtia/gtii/gtin/gtin24` parameters.

3553 E3553 Cmd Rej: GTI(A)=4, and GTI(x)=1 and 3 are not supported

If the `gti/gtia/gtii/gtin/gtin24=0` , 2 parameter is specified, then the `np(v)` and `nai(v)` parameter combinations cannot be specified.

3554 E3554 Cmd Rej: NP(V) and NAI(V) must not be specified for given GTI value

If the `gtii/gtin/gtin24=4` parameter is specified, then an `np(v)` and `nai(v)` parameter combination must be specified. The parameters can be specified in the following combinations: `np/nai v`, `npv/nai`, `np/nai`, or `npv/nai v`.

3555 E3555 Cmd Rej: NP(V) and NAI(V) must be specified for given GTI value

If the `serv` parameter has a value of `inpnr`, `gport` or `eir`, then the `gtia` and `gti` parameters cannot be specified.

3942 E3942 Cmd Rej: GTI/GTIA is invalid for specified (N)SERV

If the `serv=inpnr` parameter is specified, then the `snp=e164` parameter must be specified.

3939 E3939 Cmd Rej: (N)SNP must be E164 when (N)SERV=INPNR

If the `serv=inpq` parameter is specified, then the `gtii` parameter cannot be specified.

3941 E3941 Cmd Rej: GTII must not be specified when (N)SERV = INPQ

If the value specified for the `snai` parameter is `rnidn`, `rnndn`, or `rnsdn`, then the value specified for the `serv` parameter must be `inpmr`, `gport`, or `smsmr`.

3940 E3940 Cmd Rej: (N)SERV value is invalid for the specified (N)SNAI

If the value specified for the `serv` parameter is `gflex`, `gport`, `inpmr`, or `smsmr`, then the `snai` and `snp` parameters must be specified.

3944 E3944 Cmd Rej: SNAI and SNP must be specified for requested service

If the value specified for the `serv` parameter is `aiq`, `atinp`, `eir`, `idpr`, `inpq`, `ttr`, or `vflex` then the `snai` and `snp` parameters cannot be specified.

3943 E3943 Cmd Rej: SNP/SNAI mustn't be specified for requested service

If the `snai=ccrndn` parameter is specified, then the value specified for the `serv` parameter must be `gport` or `smsmr`.

3994 E3994 Cmd Rej: (N)SERV must be GPORT/SMSMR when (N)SNAI=CCRNDN

If the value specified for the `serv` parameter is `gport` or `smsmr`, then the `snp=e164` parameter must be specified.

3990 E3990 Cmd Rej: (N)SNP must be E164 when (N)SERV=GPORT/SMSMR

An entry cannot already exist that matches the new `gti/gtii/gtin/gtin24`, `tt`, `ssn`, `np(v)`, and `nai(v)` combination of parameters.

3937 E3937 Cmd Rej: Entry already exists with specified GTI-TT-NP(V)-NAI(V)-SSN

For the specified `gti/gtia/gtii/gtin`, `tt`, `np(v)`, `nai(v)`, and `ssn=*` parameters, an entry matching a specific `ssn` cannot already exist.

4180 E4180 Cmd Rej: Wildcard SSN already exists

For the specified `gti/gtia/gtii/gtin`, `tt`, `np(v)`, `nai(v)`, and `ssn` parameters, an entry matching the `ssn=*` parameter cannot already exist.

4181 E4181 Cmd Rej: Specific SSN already exists

If the `ansigflex` STP option is enabled (see the `chg-stpotps` command), then an ITU service selector cannot be entered.

4297 E4297 Cmd Rej: ITU entries not allowed when ANSIGFLEX is on

The IDP Screening for Prepaid feature must be on before the `serv=idps` parameter can be specified.

4545 E4545 Cmd Rej: IDP Screening for Prepaid feature must be ON when SERV=IDPS

If the `serv=idps` parameter is specified, then the supported mandatory parameters are `tt`, `serv`, `ssn`, `gtin`, and `gtii`. Supported optional parameters are `np` and `nai`.

4548 E4548 Cmd Rej: Requested service parameters not supported when SERV=IDPS

The Prepaid IDP Query Relay feature must be turned on or the IAR Base feature must be enabled before the `serv=ttr` parameter can be specified.

4500 E4500 Cmd Rej: IDPR must be ON or IAR Base must be enabled when SERV=TTR

If a value of *idpr* or *ttr* is specified for the *serv* parameter, then the only valid mandatory service parameters are *tt*, *serv*, *ssn*, *gtii*, and *gtin*, and the only valid optional parameters are *np* and *nai*.

4505 E4505 Cmd Rej: Service parameters not supported when SERV=IDPR or TTR

If the A-Port or IGM feature is enabled, then the *serv=gport* parameter cannot be specified.

2814 E2814 Cmd Rej: GPORT invalid if APORT or IGM is enabled

An entry cannot already exist that matches the new *gti/gtii/gtin/gtin24*, *tt*, *ssn*, *np(v)*, and *nai(v)* combination of parameters.

3946 E3946 Cmd Rej: Entry already exists with specified GTII-TT-NP(V)-NAI(V)-SSN

An entry cannot already exist that matches the new *gti/gtii/gtin/gtin24*, *tt*, *ssn*, *np(v)*, and *nai(v)* combination of parameters.

3947 E3947 Cmd Rej: Entry already exists with specified GTIN-TT-NP(V)-NAI(V)-SSN

An entry cannot already exist that matches the new *gti/gtii/gtin/gtin24*, *tt*, *ssn*, *np(v)*, and *nai(v)* combination of parameters.

4069 E4069 Cmd Rej: Entry exists with specified GTIN24-TT-NP(V)-NAI(V)-SSN

The V-Flex feature must be turned on before the *serv=vflex* parameter can be specified.

4142 E4142 Cmd Rej: VFLEX feature must be ON

The ATINP feature must be enabled before the *serv=atinp* parameter can be specified.

4816 E4816 Cmd Rej: ATINP feature must be enabled

The PPSMS or Portability Check for Mobile Originated SMS feature must be turned on, or the MO SMS ASD, MO SMS GRN, MO SMS B-Party Routing, MO SMS IS41-to-GSM Migration, MO-based GSM SMS NP, or MO-based IS41 SMS NP feature must be enabled before the *serv=smsmr* parameter can be specified.

3631 E3631 Cmd Rej: Incompatible Feature/Option status

If a value of *aiq*, *atinp*, or *eir* is specified for the *serv* parameter, then the *gtin24* parameter cannot be specified.

4838 E4838 Cmd Rej: GTIN24 must not be specified when (N)SERV = ATINP/AIQ/EIR

The Prepaid IDP Query Relay feature must be turned on before the *serv=idpr* parameter can be specified.

5024 E5024 Cmd Rej: Prepaid IDP Query Relay feature must be activated

The ANSI41 AIQ feature must be enabled before the *serv=aiq* parameter can be specified.

5158 E5158 Cmd Rej: ANSI41 AIQ feature must be enabled

The A-Port or IGM feature must be turned on, or the A-Port or IGM feature must be enabled and the G-Port feature must be turned on before the *serv=mdp* parameter can be specified.

2085 E2085 Cmd Rej: A-Port, G-Port or IGM must be turned ON

If a DSM4G card is active in the system, then the `on=gttrqd` parameter cannot be specified.

5059 E5059 Cmd Rej: Configuration requires E5-SM4G card or better

The `dfltact`, `gttselid`, and `on/off=gttrqd` parameters are supported for only the IDPR, TTR, MNP, GPORT, SMSMR, GFLEX, and INPMR services.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If a GTT Action ID is specified as the value for the `dfltact` parameter, then the Action ID must already exist in the GTT Action table.

5071 E5071 Cmd Rej: GTT Action Id does not exist

The GTT Action table is corrupt or cannot be found.

5067 E5067 Cmd Rej: Unable to access GTT Action table

A valid value must be specified for the `dfltact` parameter.

5172 E5172 Cmd Rej: Invalid action type

The EGTT feature must be turned on before the `gttselid` or `dfltact` parameter can be specified.

3557 E3557 Cmd Rej: EGTT must be ON

The same value cannot be specified for the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

The `dfltact=none` parameter cannot be specified.

5298 E5298 Cmd Rej: Default ACTID must not be specified as NONE

The EPAP Data Split feature or the Dual ExAP Config feature must be on before the `rqdtblnop` parameter can be specified.

2434 E2434 Dual ExAP Config or EPAP Data Split must be ON

If a value of `inpq`, `vflex`, `atinp`, or `eir` is specified for the `serv` parameter, then the `rqdtblnop=gtt` parameter cannot be specified.

5476 E5476 Cmd Rej: Invalid RQDTBLNOP value for service

If a value of `aiq` or `idps` is specified for the `serv` parameter, then the `rqdtblnop` parameter cannot be specified.

5477 E5477 Cmd Rej: RQDTBLNOP must NOT be specified

The requested service selector entry must exist in the database.

3504 E3504 Cmd Rej: GSM Selector does not exist

The GSM DBMM table must be accessible.

3546 E3546 Cmd Rej: Failed reading GSM DBMM Table

Only for IDP Relay feature, `gtii/gtin/gtin24=0` can be specified.

If the `serv=idpr` parameter is specified and the `gti/gtia/gtii/gtin/gtin24=0`, `tt=0` parameter is entered, then the `gti/gtia/gtii/gtin/gtin24=2`, `tt=0` parameter combinations cannot be entered. The parameters can be specified in the following combinations: `gtii=0 tt=0`, or `gtii=2 tt=0`.

Notes

on/off options

- `gtrqd` —GTT required. Specifies whether GTT is required after service execution is complete and the message is relayed by the service. This option is supported for the IDPR, MNP, TTR, GPORT, SMSMR, GFLEX, and INPMR services.

Output

```
ent-srvsel:gtia=4:tt=10:ssn=25:snai=natl:serv=aiq
```

```
tekelecstp 09-12-03 16:40:40 EST EAGLE 42.0.0
Service Selector table is (114 of 1024) 11% full
ENT-SRVSEL: MASP A - COMPLTD
```

```
;
```

```
ent-srvsel:gtia=2:tt=20:ssn=105:snai=natl:serv=inp
```

```
tekelecstp 13-09-26 11:51:11 EST EAGLE 46.0.0
Service Selector table is (11 of 1024) 1% full
ENT-SRVSEL: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-srvsel](#)
- [dlt-srvsel](#)
- [rtrv-srvsel](#)

4.1.356 ent-ss-appl

Use this command to reserve a subsystem number for an application and set the application status to be online or offline. One subsystem can be defined per application. The application must be unique.

Parameters

app1 (mandatory)

Application type.

Range:

Inp

inp

eir

vflex

atinq

aiq

sfapp

ssn (mandatory)

Primary subsystem number.

Range:

2 - 255

rqdtblnop (optional)

The action performed if a message arrives at an SCCP card that does not have the necessary RTDB table, and the current message routing is subsystem.

Range:

udts

generate UDTs for the processed MSU

disc

discard the processed MSU

stat (optional)

Status. In the case of SFAPP, stat can only have the value of online and it defaults to this value.

Range:

offline

online

Default:

offline (online in case of SFAPP)

Example

```
ent-ss-appl:appl=inp:ssn=16:stat=online
```

```
ent-ss-appl:appl=inp:ssn=15:stat=offline:rqdtblnop=disc
```

Dependencies

The LNP feature must be turned on before the `appl=inp` parameter can be specified.

3009 E3009 Cmd Rej: LNP feature must be ON

The INP feature must be turned on before the `appl=inp` parameter can be specified.

3524 E3524 Cmd Rej: INP/AINPQ feature must be ON

The EIR feature must be turned on before the `appl=eir` parameter can be specified.

3699 E3699 Cmd Rej: EIR feature must be ON

The value specified for the `appl` parameter cannot already be assigned.

N/A N/A

The maximum number of applications must not already be assigned.

3150 E3150 Cmd Rej: Application already assigned

The LNP database is corrupt or cannot be found.

2601 E2601 Cmd Rej: Command aborted due to system error

For LNP, the STP true point code and LNP subsystem must exist in the MAP table.

3288 E3288 Cmd Rej: STP True PC and LNP SSN does not exist in MAP table

For INP, the STP true point code and INP subsystem must exist in the MAP table.

3928 E3928 Cmd Rej: STP True PC and INP Subsystem does not exist in MAP Table

For EIR, the STP true point code and EIR subsystem must exist in the MAP table.

4182 E4182 Cmd Rej: STP True PC and EIR Subsystem does not exist in MAP Table

STP True Point Code must exist in MAP table

3286 E3286 Cmd Rej: STP True PC does not exist in MAP table

The SSAPPL table is corrupt or cannot be found (non-DBS 1.0 systems only).

3124 E3124 Cmd Rej: Failed Reading LNP SS Appl table

The SSAPPL table is corrupt or cannot be found (DBS 1.0 systems only)

3638 E3638 Cmd Rej: Failed Reading SS Appl table

If the V-Flex feature is turned on, then the STP true point code and V-Flex subsystem must exist in the MAP table.

4674 E4674 Cmd Rej: STP True PC and VFLEX Subsystem does not exist in MAP Table

The V-Flex feature must be turned on before the `appl=vflex` parameter can be specified.

4142 E4142 Cmd Rej: VFLEX feature must be ON

The RPC3 table is corrupt or cannot be found.

4525 E4525 Cmd Rej: Failed Reading RPC3 table

The ATINP feature must be enabled before the `appl=atinpq` parameter can be specified.

4816 E4816 Cmd Rej: ATINP feature must be enabled

For ATINP, the STP true point code and ATINPQ subsystem must exist in the MAP table.

4876 E4876 Cmd Rej: STP True PC and ATINPQ Subsystem does not exist in MAP Table

The value specified for the `ssn` parameter cannot already exist in the SS-APPL table.

4181 E4181 Cmd Rej: Specific SSN already exists

The specified MAP table entry for a subsystem number (SSN) value in the SS-APPL table, must be a valid point code type for that subsystem. The following point code types are not valid for the indicated subsystems:

- For the INP subsystem, the True Point code cannot be an ITU-I point code.
- For the EIR subsystem, the True Point code cannot be an ANSI point code.
- For the AIQ, ATINPQ, or VFLEX subsystem, the True Point code can not be an ITU-N24 point code.

4177 E4177 Cmd Rej: Invalid TPCs are present in the MAP table for specified SSN

The ANSI41 AIQ feature must be enabled before the `appl=aiq` parameter can be specified.

5158 E5158 Cmd Rej: ANSI41 AIQ feature must be enabled

The STP true point code and a MAP entry for the AIQ subsystem must be provisioned in the MAP table before the `appl=aiq` parameter can be specified.

5161 E5161 Cmd Rej: STP True PC and AIQ Subsystem does not exist in MAP Table

The EPAP Data Split feature OR Dual ExAP Config feature must be on before the `rqdtblnop` parameter can be specified.

5413 E5413 Cmd Rej: EPAP Data Split feature must be turned on

2434 E2434 Dual ExAP Config or EPAP Data Split must be ON

If the `appl=aiq` parameter is specified, then the `rqdtblnop` parameter cannot be specified.

5477 E5477 Cmd Rej: RQDTBLNOP must NOT be specified

If the `appl=sfapp` parameter is specified, then the `stat` parameter cannot take the value `offline`.

3549 E3549 Offline state is not allowed for `sfapp`

For SFAPP, the value specified in the `ssn` parameter should not have an existing entry in MAP table that is associated with STP's own True PC; however, it is valid if the `ssn` is associated with point codes other than the STP's own True PC in any table.

4181 E4181 Cmd Rej: Specific SSN already exists

Notes

If not specified, the application subsystem status defaults to OFFLINE. When the application is OFFLINE, the application subsystem is down. For SFAPP, this defaults to ONLINE and cannot be changed to OFFLINE in any case.

The LNP application status applies to both message relay and LNP query.

Output

```
ent-ss-appl:appl=aiq:ssn=18:stat=online
```

```
tekelecstp 09-12-03 16:40:40 EST EAGLE 42.0.0
```

```
ENT-SS-APPL: MASP A - COMPLTD  
;
```

Related Topics

- [chg-ss-appl](#)
- [dlt-ss-appl](#)
- [rtrv-ss-appl](#)

4.1.357 ent-subnetid

Use this command to enter elements into the Subnet ID list, for the ISUP NP with EPAP feature. Each entry is identified by the Subnet ID and the Subnet number.

The Subnet ID length (`subnetidlen` parameter) must be entered first, before the command is entered the second time to enter the Subnet ID and Subnet Number.

Parameters

subnetid (optional)

Vendor Subnet ID

Range:

1 - 15 digits

Valid digits are 0-9, a-f, A-F.

**Note:**

The number must contain the number of digits defined by the `subnetidlen` parameter.

subnetidlen (optional)

Subnet ID Length.

Range:

1 - 15

All Subnet IDs defined for the ISUP NP with EPAP feature must contain this number of digits.

subnetnum (optional)

Subnet Number. A reference to the prefix number for the ISUP NP with EPAP feature (see the `chg-prefix` command).

Range:

1

Corresponds to the prefix defined with prefix number 1

2

Corresponds to the prefix defined with prefix number 2

3
Corresponds to the prefix defined with prefix number 3

4
Corresponds to the prefix defined with prefix number 4

5
Corresponds to the prefix defined with prefix number 5

Example

```
ent-subnetid:subnetidlen=6  
ent-subnetid:subnetid=886933:subnetnum=1
```

Dependencies

The value *none* cannot be specified for the `subnetid` parameter.

N/A N/A

The ISUP NP with EPAP feature must be enabled before this command can be entered.

4356 E4356 Cmd Rej: ISUP NP with EPAP feature must be enabled

The SUBNETID table can contain a maximum of 50 entries.

4352 E4352 Cmd Rej: SUBNETID table is full

The specified ID entry cannot already exist in the SUBNETID table.

4354 E4354 Cmd Rej: SUBNETID already exists in SUBNETID table

The SUBNETID table is corrupt or cannot be found by the system.

4353 E4353 Cmd Rej: Failed reading SUBNETID table

All SUBNETID table entries must have the number of digits defined by the `subnetidlen` parameter value.

4357 E4357 Cmd Rej: All SUBNETID table entries must be of length SUBNETIDLEN

The prefix with the same prefix number as the specified Subnet Number must already be provisioned for the ISUP NP with EPA feature.

4359 E4359 Cmd Rej: For SUBNETNUM specified the prefix is not provisioned

The Subnet ID length cannot be changed unless the SUBNETID table is empty. All Subnet IDs must be deleted from the table before a different Subnet ID length can be entered.

4358 E4358 Cmd Rej: SUBNETIDLEN may only be changed if SUBNETID table is empty

The Subnet ID length must be entered before any Subnet IDs can be defined.

4362 E4362 Cmd Rej: SUBNETIDLEN must be set before Subnet ID may be entered

The `subnetidlen` parameter cannot be specified in the same command with the `subnetid` and `subnetnum` parameters.

4363 E4363 Cmd Rej: Enter param SUBNETIDLEN, or params SUBNETID and SUBNETNUM

Notes

None.

Output

The Subnet ID length must be entered first.

```
ent-subnetid:subnetidlen=6
```

```
rlghncxa03w 04-10-07 11:11:28 EST EAGLE 31.11.0
ENT-SUBNETID: MASP A - COMPLTD
;
```

The first Subnet ID and Subnet number can be entered after the Subnet ID length has been entered.

```
ent-subnetid:subnetid=886933:subnetnum=1
```

```
rlghncxa03w 04-10-07 11:11:28 EST EAGLE 31.11.0
VENDID table is (6 of 50) 11% full
ENT-SUBNETID: MASP A - COMPLTD
;
```

Related Topics

- [dlt-subnetid](#)
- [rtrv-subnetid](#)

4.1.358 ent-t1

Use this command to enter an interface for an E5-E1T1-B card used as a T1 or ST-HSL-A card.

Parameters**loc (mandatory)**

The card location as stenciled on the shelf of the system.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

t1port (mandatory)

T1 card port number. The value must be a T1 port for which an interface has not been configured on the specified T1 card.

Range:

1 - 8

Any 2 of the 8 ports on an E5-E1T1-B card can be specified when the card is used as an ST-HSL-A card.

encode (optional)

Indicator for use of B8ZS or AMI encoding/decoding.

Range:

b8zs

ami

Default:

b8zs

framing (optional)

Indicator for framing format. *esfperf* is the framing format with performance monitoring.

Range:

sf, esf, esfperf

Default:

sf

linkclass (optional)

Link class for links assigned to T1 cards (channelized links) or ST-HSL-A cards (unchannelized links).

Range:

chan

unchan

Default:

chan

l1 (optional)

T1 cable length in feet between the EAGLE and the connecting node.

Range:

0 - 655

Default:

133

minsurate (optional)

Minimum signal unit rate. The minimum number of SUs present on a link uniformly distributed.

 **Note:**

The `linkclass=unchan` parameter must be specified for an ST-HSL-A card before this parameter can be specified.

Range:

400 - 1600

Default:

1000

t1tsel (optional)

Timing source.

Range:

line - slave timing source

external - master timing source

Default:

line

Example

```
ent-t1:loc=1205:t1port=1:encode=ami:framing=sf:ll=100
ent-t1:loc=1203:t1port=1
ent-t1:loc=1203:t1port=2:linkclass=unchan:minsrate=1200
ent-
t1:loc=1205:t1port=1:encode=ami:t1tsel=external:framing=sf:ll=1
00
ent-t1:loc=1205:t1port=2:encode=b8zs:t1tsel=line:framing=sf
```

Dependencies

The specified card location (`loc` parameter) must be equipped.

2739 E2739 Cmd Rej: T1 card location is unequipped

The card specified by the `loc` parameter must be a LIMT1 card type.

2212 E2212 Cmd Rej: Invalid card type for this command

The E1/T1 table must be accessible.

4059 E4059 Cmd Rej: Failed reading the E1/T1 table

The Card (IMT) table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

The port specified by the `t1port` parameter must not be already equipped with a T1 interface.

2733 E2733 Cmd Rej: The T1PORT at the specified location is already equipped

3866 E3866 Cmd Rej: Shelf FAN bit feature must be enabled

HIPR2 cards must be equipped in card locations *xy09* and *xy10* (*x* is the frame, *y* is the shelf) on each EAGLE shelf that contains one or more /E5-E1T1-B cards that are used as T1 cards or ST-HSL-A cards.

3490 E3490 Cmd Rej: HIPR/HIPR2 must be equipped on the shelf for this card

Card locations 1113 - 1118 (E5-MASP and E5-MDAL cards) cannot be specified as values for the `loc` parameter.

2154 E2154 Cmd Rej: Card slot reserved by system

The `linkclass=unchan` parameter must be specified before the `minsurate` parameter can be specified.

3047 E3047 Cmd Rej: Parameter combination invalid

An ST-HSL-A feature quantity must be enabled before the `linkclass=unchan` parameter can be specified for an ST-HSL-A card.

4282 E4282 Cmd Rej: An HSL feature key must be enabled for Linkclass=Unchan

Channelized and unchannelized T1 ports (mixed mode) cannot be specified on a single card (the card cannot be used as a T1 card and an ST-HSL-A card at the same time).

4274 E4274 Cmd Rej: Cannot mix Unchannelized and Channelized modes on E1/T1 card

Only 2 of the 8 ports can be used for T1 interfaces on an E5-E1T1-B card that is used as an ST-HSL-A card.

4044 E4044 Cmd Rej: Only two E1/T1 ports allowed for Linkclass=Unchan

4595 E4595 Cmd Rej: Only one E1/T1 port allowed for Linkclass=Unchan

The ST-HSL-A feature must be turned on before the `framing=esfperf` parameter can be specified.

3872 E3872 Cmd Rej: FRAMING=ESFPERF not supported

Notes

One or two T1 interfaces must be defined on a T1 card after the T1 card type (LIMT1) is defined in the database, and before the signaling links and associated timeslots are defined for the T1 card.

External timing is derived from the EAGLE High-Speed Master Clock (1.544 MHz for T1 or 2.048 MHz for E1); therefore, the Master Timing feature is required. Line timing is derived from its received data stream, if present.

Up to 8 T1 interfaces can be defined on an /E5-E1T1-B card used as a T1 card after the T1 card type (LIMT1) is defined in the database, and before the signaling links and associated timeslots are defined for the T1 card.

For an ST-HSL-A card, the `minsurate` parameter indicates the least number of SUs present on a link uniformly distributed. The number of SUs present is the `minsurate` parameter value (without link traffic) and the `minsurate` parameter value minus the number of MSUs (with link traffic).

Output

```
ent-tt1:loc=1205:t1port=1:encode=ami:framing=sf:ll=100
```

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
```

```
ENT-T1: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-t1](#)
- [dlt-t1](#)
- [rtrv-t1](#)
- [tst-t1](#)

4.1.359 ent-tt

Use this command to add a translation type to the system database.

**Note:**

If the EGTT feature is turned on, then the GTT Selector (`ent/chg/dlt/rtrvgtttsel`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrvgta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. It is not recommended to run `ent/dlt/rtrv-tt & ent/chg/dlt/rtrv-gtt` commands as it may cause the advance GTA fields of GTT entry to be reset to the default values.

Parameters**type/typea/typei/typen/typen24/typeis/typens (mandatory)**

The translation type and network type. This value is the decimal representation of the 1-byte field used in SS7.

The `type` and `typea` parameters specify an ANSI network.

The `typei` parameter specifies an ITU-international network.

The `typen` parameter specifies an ITU-national network.

The `typen24` parameter specifies a 24-bit ITU-national network.

The `typeis` parameter specifies an ITU-international spare network.

The `typens` parameter specifies an ITU-national spare network.

A translation type numeric value may be entered as ANSI type (`type/typea`) and as an ITU type (`typei/typen/typen24/typeis/typens`). However, they are separate entities.

The point code domain translation types for GTT are handled by the EAGLE protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I spare, ITU-N, ITU-N spare, and ITU-N24.

Range:
000 - 255

Default:
No translation type is specified

alias (optional)
The alias of the global title translation type

Range:
000 - 255

Default:
No alias assignment is made.

ndgt (optional)
The number of digits contained in the global title translation. This parameter is not valid if the VGTT (variable length GTT) feature is turned on.

Range:
1 - 21

Default:
6 (not applicable if the VGTT feature is on)

ttn (optional)
Translation type name.

Range:
ayyyyyyy
1 alphabetic character followed by up to 8 alphanumeric characters

Default:
"set" + "ans"|"int"|"nat"|"24n"|"ins"|"nas" + 3-digit TT value

Example

```
ent-tt:type=230:ttn=lidb:ndgt=5
ent-tt:type=230:ttn=lidb:alias=007
ent-tt:type=2:ndgt=5
ent-tt:type=3
ent-tt:typens=2
ent-tt:typeeis=1:ttn=setitu001
```

Dependencies

The translation type specified by `type/typea/typei/typen/typen24/typeeis/typens` cannot already exist in the database containing the ANSI and ITU types.

2464 E2464 Cmd Rej: Translation Type already exists

The `alias` and `ndgt` parameters cannot be specified together in the command.

2469 E2469 Cmd Rej: NDGT parameter not permitted with ALIAS

The translation type name must be unique.

2467 E2467 Cmd Rej: TTN already in use

The `ndgt` parameter is not valid if the VGTT (variable length GTT) feature is turned on.

4011 E4011 Cmd Rej: NDGT Parameter is invalid for VGTT

The value specified for the `type/typea/typei/typen/typen24/typeis/typens` parameter cannot be an alias value.

2465 E2465 Cmd Rej: Translation TYPE defined as an alias

The value specified for the `type/typea/typei/typen/typen24/typeis/typens` parameter must already exist in the database for the network type.

2466 E2466 Cmd Rej: Translation Type specified does not exist

The value specified for the `ttn` parameter must already exist in the database.

2468 E2468 Cmd Rej: TTN specified does not exist

The values specified for the `type/typea/typei/typen/typen24/typeis/typens` and `ttn` parameters must refer to the same entity.

2473 E2473 Cmd Rej: TTN and TYPE do not correspond to each other

The value specified for the `alias` parameter must be associated with the specified translation type and cannot be the value of an existing translation type.

2460 E2460 Cmd Rej: Alias defined as translation type

The value specified for the `alias` parameter cannot be an existing alias value for the specified network type.

2459 E2459 Cmd Rej: Alias already in use

The network domain of the translation type specified by the `ttn` parameter cannot be CROSS (see the `ent-gttset` command) when entering an alias entry for that `ttn`.

5371 E5371 Cmd Rej: Network domain of corresponding `ttn` must not be CROSS

The `ttn=none` parameter cannot be specified.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

Notes

The new translation type is entered into the translation type table along with the translation name and the number of digits used by the translation type.

The `ttn` parameter always refers to a translation type. Aliases do not have translation type names.

If the OBR or FLOBR feature is turned on, then the `ent-tt` command can be used to provision only CdGTA GTT sets and GTT selectors. NP and NAI values cannot be specified for GTT selectors using the `ent-tt` command as `gtii=4` entries cannot be provisioned with this command.

If the EGTT feature is on, then the following occurs for this command:

- For ANSI, if the GTT selector of a true entry is deleted using the `dlt-gttset` command, a new entry using the same TTN cannot be created. If the true selector is deleted for an entry using the `dlt-gttset` command, then its aliases cannot be entered.
- For ITU, if a true GTT selector entry (GTI=2 or GTI=4) is deleted using the `dlt-gttset` command, or if the GTT set name of an entry is changed using the `chg-gttset` command, then a new entry for the same TTN cannot be created. If a true GTT selector entry is deleted using the `dlt-gttset` command, or if the GTT set name of an entry is changed using the `chg-gttset` command, then its aliases cannot be created.

Output

```
ent-tt:typeeis=1:ttn=setitu001
```

```
tekelecstp 10-04-28 16:45:34 EST Eagle 42.0.0
ENT-TT: MASP A - COMPLTD
;
```

Related Topics

- [dlt-tt](#)
- [rtrv-tt](#)

4.1.360 ent-ttmap

Use this command to add a mapped SS7 message translation type (TT) for a given gateway linkset name. With this command you can add to the database the identification of the type of allowed global title translation in the SS7 message before and after translation type mapping. For example, you can use this command to add to the database that you want the SS7 message translation type 001 (before TT mapping) mapped to 254 (after TT mapping).

Parameters

ett (mandatory)

Translation type before mapping. The identification of the type of global title translation in the SS7 message *before* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range:

000 - 255

io (mandatory)

Incoming or outgoing. The system uses this parameter to indicate whether the translation type mapping data provisioned for the gateway linkset is for SS7 messages *received* or *sent* on the linkset.

Range:

i
incoming

o
outgoing

lsn (mandatory)

Linkset name. The unique network identifier for the gateway linkset.

Range:

ayyyyyyyy

1 alphabetic character followed by 9 alphanumeric characters

mtt (mandatory)

Mapped translation type. The identification of the type of global title translation in the SS7 message after translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range:

000 - 255

Example

```
ent-ttmap:lsn=nc001:io=i:ett=128:mtt=16
```

Dependencies

The linkset must be defined.

2346 E2346 Cmd Rej: Linkset not defined

The linkset table must be accessible.

2122 E2122 Cmd Rej: Failed reading linkset table

The translation type mapping table must be accessible.

2840 E2840 Cmd Rej: Failed reading tt map table

The Translation Type Mapping table must not be full for the linkset specified in the `lsn` parameter. Translation type mapping entries are supported for up to 255 linksets.

2841 E2841 Cmd Rej: tt map table full for LSN specified

Notes

None

Output

```
ent-ttmap:lsn=nc001:io=i:ett=128:mtt=16
```

```
rlghncxa03w 04-02-21 13:09:27 EST EAGLE 31.3.0  
ENT-TTMAP: MASP A - COMPLTD
```

```
TTMAP table for nc001 is (2 of 64) 3% full
```

;

Related Topics

- [chg-ttmap](#)
- [dlt-ttmap](#)
- [rtrv-ttmap](#)

4.1.361 ent-user

Use this command to add a user to the database. When you first enter the command, the system prompts you for the user's password, which must follow the administered password guidelines. For security reasons, the password is not displayed. After successfully entering a user password, you are prompted to verify it by entering it again.

Parameters **Note:**

All `cc (X)` parameters consist of a configurable command class name (`ayy`), and indicator (`-yes` or `-no`) to specify whether the command class is allowed. A value of `ayy-yes` indicates that the value is allowed. A value of `ayy-no` indicates that the value is not allowed.

uid (mandatory)

User ID

Range:

azzzzzzzzzzzzzzz

1 alphabetic character followed by up to 15 alphanumeric characters (including asterisks, single quotes, and commas)

a11 (optional)

This parameter specifies whether the user ID is assigned all non-configurable command classes (LINK, SA, SYS, PU, DB, DBG, LNP).

Range:

yes

no

Default:

no

cc1 (optional)

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:

ayy-yes, ayy-no

ayy—Command class name of 1 alphabetic character followed by 2 alphanumeric characters

no —the command class is not allowed
yes —the command class is not allowed

cc2 (optional)

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:

ayy-yes, *ayy-no*
ayy—Command class name of 1 alphabetic character followed by 2 alphanumeric characters
no —the command class is not allowed
yes —the command class is not allowed

cc3 (optional)

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:

ayy-yes, *ayy-no*
ayy —Command class name of 1 alphabetic character followed by 2 alphanumeric characters
no —the command class is not allowed
yes —the command class is allowed

cc4 (optional)

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:

ayy-yes, *ayy-no*
ayy—Command class name of 1 alphabetic character followed by 2 alphanumeric characters
no —the command class is not allowed
yes —the command class is allowed

cc5 (optional)

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:

ayy-yes, *ayy-no*
ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters
no —the command class is not allowed
yes —the command class is allowed

cc6 (optional)

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:

ayy-yes, *ayy-no*
ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

no —the command class is not allowed
yes —the command class is allowed

cc7 (optional)

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:

ayy-yes, ayy-no

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

no —the command class is not allowed

yes —the command class is allowed

cc8 (optional)

Configurable command class name and an indicator to specify whether the User ID can enter commands assigned to the specified command class.

Range:

ayy-yes, ayy-no

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

no —the command class is not allowed.

yes —the command class is allowed

db (optional)

Access to all commands in command class Database Administration.

Range:

yes

no

Default:

no

dbg (optional)

Access to all commands in command class Debug.

Range:

yes

no

Default:

no

link (optional)

Access to all commands in command class Link Maintenance.

Range:

yes

no

Default:

no

page (optional)

The maximum age of the password, in days. The STP automatically prompts the user for a new password at login if the user's password is older than the value specified for this parameter.

Range:

0-999

Default:

The value specified for the `page` parameter in the `chg-secu-dflt` command

pu (optional)

Access to all commands in command class Program Update.

Range:

yes

no

Default:

no

revoke (optional)

Revoke the user ID. The system rejects login attempts for a revoked user ID.

Range:

yes

no

Default:

no

sa (optional)

Access to all commands in command class Security Administration.

Range:

yes

no

Default:

no

sys (optional)

Access to all commands in command class System Maintenance.

Range:*yes**no***Default:***no***uout (optional)**

User ID aging interval. The number of successive days a user ID can go unused (no successful login) before the system denies login of that user ID.

Range:*0 - 999***Default:**

The value specified for the `uout` parameter in the `chg-secu-dflt` command

Example

```
ent-user:uid=john:db=yes
```

```
ent-user:uid=john*mayer:db=yes
```

```
ent-user:uid=user123:cc5=u21-yes:cc8=u32-yes
```

Dependencies

Passwords cannot be created or modified from a telnet terminal (terminal IDs 17-40) without the OA&M IP Security Enhancements feature turned on.

2723 E2723 Cmd Rej: Password operations not allowed on a non-secure terminal

The specified user ID cannot already exist.

2197 E2197 Cmd Rej: The specified user identification is already defined

The user IDs *seas* or *none* cannot be entered because they are reserved for system use. Up to 100 users can be entered.

3040 E3040 Cmd Rej: <string> cannot be used in this command

The `revoke=yes` parameter cannot be specified for a user ID with system administration authorization.

2759 E2759 Cmd Rej: Revocation of security admin userID not allowed

The Command Class Management feature must be enabled before a configurable command class name can be specified in the `cc1-cc8` parameters.

2246 E2246 Cmd Rej: Command Class Management feature must be enabled

The CCCNAMES table must be accessible.

2598 E2598 Cmd Rej: Cccnames table must be accessible

The UserID table must be accessible.

2196 E2196 Cmd Rej: Failed reading the user identification table

The Security Defaults table must be accessible.

2760 E2760 Cmd Rej: Failed reading the security defaults table

The `cc1-cc8` parameter values must have valid default or provisioned configurable command class names. Default names are `u01-u32`.

2266 E2266 Cmd Rej: Class name is not an existing configurable command class

Notes

To disable user ID aging, specify the `uout=0` parameter.

The *Database Administration Manual - System Management* provides a list of all commands allowed within each command class.

Up to 8 configurable command class name parameters can be specified in one command. Additional commands can be entered to assign user access for more than 8 names. To assign user access for all 32 available configurable command class names, four commands could be entered with 8 names specified in each command.

A password must be entered for the newly-created userID. The system issues a separate prompt for this password and disables character echo at the terminal so that the entered password is not displayed on the screen.

After the password has been entered, the system issues a second prompt, and the password must be entered again. This ensures that no typing mistakes were made on the first entry.

Use the following rules for creating passwords:

- A new password cannot contain more than 20 characters.
- A new password must contain at least the number of characters that is specified in the `minlen` parameter of the `chg-secu-dflt` command.
- A new password must contain at least the number of alphabetic (`alpha` parameter), numeric (`num` parameter), and punctuation (`punc` parameter) characters that is specified in the `chg-secu-dflt` command.
- A new password cannot contain the associated user ID.

As a default, the command class Basic is assigned to all users. If no other command class is assigned, the user still has access to commands in the Basic class.

Output

```
ent-user:uid=john*mayer:db=yes
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
ENT-USER: MASP A - COMPLTD
```

```
;
```

```
ent-user:uid=test
```

```
tklcl1121003 21-06-24 15:03:15 EST EAGLE 47.0.0.0.0
New password must contain:
- between 8 and 20 characters
- at least 8 alphabetic character(s) ('a'-'z')
- at least 1 numeric character(s) ('0'-'9')
```

```
- at least 1 punctuation character(s) (e.g. $#@#)
New password must:
- be unique from the old password
- be unique from the last 8 historical password(s)
- not reuse more than 4 character(s) from the old password
;
tklcl1121003 21-06-24 15:03:26 EST EAGLE 47.0.0.0.0
ENT-USER: MASP A - COMPLTD
;
```

Related Topics

- [act-user](#)
- [chg-pid](#)
- [chg-user](#)
- [dact-user](#)
- [dlt-user](#)
- [login](#)
- [logout](#)
- [rept-stat-user](#)
- [rtrv-secu-user](#)
- [rtrv-user](#)

4.1.362 ent-vendid

Use this command to enter elements into the Vendor ID list, for the GSM MAP SRI Redirect to Serving HLR (also called GSM MAP SRI Redirect) feature. Each entry is identified by the Vendor ID and the Vendor number.

The Vendor ID length (`vendidlen` parameter) must be entered first, before the command is entered the second time to enter the Vendor ID and Vendor Number.

Parameters

vendid (optional)

Vendor ID

Range:

1 - 15 digits

vendidlen (optional)

Vendor ID Length. All Vendor IDs defined for the GSM MAP SRI Redirect for Serving HLR feature must contain this number of digits.

Range:

1 - 15

vendnum (optional)

Vendor Number. The Vendor Number is used as a reference to the prefix for the GSM MAP SRI Redirect for Serving HLR feature.

 **Note:**

The prefix values in the range are defined in the `chg-prefix` command.

Range:**1 - 128****1**

Corresponds to the prefix defined with prefix number 1

2

Corresponds to the prefix defined with prefix number 2

..

..

128

Corresponds to the prefix defined with prefix number 128

vendtype (optional)

Vendor Type. The Vendor Type is used with the GSM MAP SRI Redirect for Serving HLR feature to allow multiple networks for the same equipment vendor.

Range:**1 - 32****Example**

```
ent-vendidvend:len=6
ent-vendid:vendid=886933:vendnum=1:vendtype=1
ent-vendid:vendid=886939:vendnum=5:vendtype=9
```

Dependencies

The `vendid=none` parameter cannot be specified.

N/A N/A

The GSM MAP SRI Redirect feature must be enabled before this command can be entered.

4320 E4320 Cmd Rej: SRI Redirect Feature must be enabled

The VENDID table can contain a maximum of 500 entries.

4316 E4316 Cmd Rej: VENDID table is full

The specified ID entry cannot already exist in the VENDID table.

4318 E4318 Cmd Rej: VENDID already exists in VENDID table

The VENDID table is corrupt or cannot be found by the system.

4317 E4317 Cmd Rej: Failed reading VENDID table

All VENDID table entries must have the number of digits defined by the `vendidlen` parameter value.

4321 E4321 Cmd Rej: All VENDID table entries must be of length VENDIDLEN

The prefix with the same prefix number as the specified Vendor Number must already be provisioned for the GSM MAP SRI Redirect feature.

4327 E4327 Cmd Rej: For VENDNUM specified the prefix is not provisioned

The Vendor ID length cannot be changed unless the VENDID table is empty. All Vendor IDs must be deleted from the table before a different Vendor ID length can be entered.

4322 E4322 Cmd Rej: VENDIDLEN may only be changed if VENDID table is empty

The Vendor ID length must be entered before any Vendor IDs can be defined.

4360 E4360 Cmd Rej: VENDIDLEN must be set before Vendor ID may be entered

The `vendidlen` parameter cannot be specified in the same command with the `vendid`, `vendidlen`, and `vendtype` parameters. Either the `vendidlen` parameter, or the `vendid`, `vendidlen`, and `vendtype` parameters can be specified in the command.

4361 E4361 Cmd Rej: Enter VENDIDLEN, or VENDID, VENDNUM and VENDTYPE

Notes

None.

Output

```
ent-vendid:vendidlen=6
```

```
rlghncxa03w 04-10-07 11:11:28 EST EAGLE 31.11.0
ENT-VENDID: MASP A - COMPLTD
```

```
;
```

```
ent-vendid:venid=886933:vendnum=1:vendtype=1
```

```
rlghncxa03w 04-10-07 11:11:28 EST EAGLE 31.11.0
VENDID table is (6 of 200) 3% full
ENT-VENDID: MASP A - COMPLTD
```

```
;
```

```
ent-vendid:vendid=886939:vendnum=5:vendtype=9
```

```
tekelecstp 14-05-30 14:12:00 EST EAGLE 46.1.0
VENDID table is (35 of 500) 7% full
ENT-VENDID: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-vendid](#)

- [rtrv-vendid](#)

4.1.363 ent-vflx-cd

Use this command to provision the call decision criteria that is used to create a voice mail routing number. This command creates a new entry in the V-Flex Call Decision Table. The V-Flex feature must be enabled before this command can be entered.

Parameters

bcap (mandatory)

The INAP/CAP bearer capabilities for the call.

The INAP/CAP bearer capabilities are used to determine the type of mail that is used by the call, such as voice, video, multimedia, etc.

Range:

0 - 31, none

none —BCAP is not present in the incoming MSU.

cdn (mandatory)

Call decision name. This parameter specifies an entry in the call decision table.

Range:

ayyy

1 alphabetic character followed by 3 alphanumeric characters

dnstat (mandatory)

Dialed number status. This parameter specifies whether the MSISDN is found in the EPAP RTDB.

Range:

fnd

DN found in RTDB

nfn

DN not found in RTDB

It does not matter whether the DN is found in RTDB

rnidx (mandatory)

Routing number index. The index associated with the generated voice mail routing number.

Range:

0 - 9

vmdig (mandatory)

Voice mail number or voice mail prefix digits. A voice mail number or voice mail digits for the call decision entry.

 **Note:**

If the call is redirected (the `rdi=redir` parameter is specified), then the value specified for the `vmdig` parameter represents a voice mail number. If the call is not redirected (the `rdi=dir` parameter is specified), then the value specified for the `vmdig` parameter represents a set of voice mail digits.

Range:

1 - 15

Valid digits are 0-9, A-F, a-f

rdi (optional)

Redirection indicator. This parameter specifies whether the call is redirected.

Range:**dir**

call is not redirected

redir

call is redirected

Default:*dir***Example**

```
ent-vflx-
cd:dnstat=fnd:rdi=redir:bcap=31:vmdig=abcdef123456abc:rnidx=0:cdn=cd
n1
```

Dependencies

The V-Flex feature must be enabled before this command can be entered.

4641 E4641 Cmd Rej: VFLEX feature must be enabled

The value specified for the `cdn` parameter cannot be a reserved word, such as *none*.

3040 E3040 Cmd Rej: <string> cannot be used in this command

The value specified for the `cdn` parameter cannot already exist in the Call Decision table.

4341 E4341 Cmd Rej: (N)CDN already exists in the database

An entry with the specified `dnstat`, `rdi`, `bcap`, and `vmdig` parameters cannot already exist in the Call Decision table.

4649 E4649 Cmd Rej: Entry with RDI, DNSTAT, BCAP, (N)VMDIG already exists

The Call Decision table is corrupt or cannot be found.

4095 E4095 Cmd Rej: Failed reading Call Decision table

The value specified for the `vmdig` parameter cannot differ from a value that already exists in the Call Decision table by only the value of the `dnstat` parameter. The values specified for the `rdi` and `bcap` parameters must differ as well.

4656 E4656 Cmd Rej: Similar entry exists with different DNSTAT value

The maximum number of 25 entries cannot already be provisioned for a given `rdi`, `dnstat`, and `bcap`.

4706 E4706 Cmd Rej: Maximum number of entries already exist for RDI,DNSTAT,BCAP

Output

```
ent-vflx-
cd:dnstat=fnd:rdi=redir:bcap=31:vmdig=abcdef123456abc:rnidx=0:cdn=cdn1
```

```
rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0
ENT-VFLX-CD: MASP A - COMPLTD
```

```
;
```

```
ent-vflx-
cd:dnstat=nfnd:bcap=none:vmdig=dadbeefeed:rnidx=9:cdn=cdn2
```

```
rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0
ENT-VFLX-CD: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-vflx-cd](#)
- [dlt-vflx-cd](#)
- [rtrv-vflx-cd](#)

4.1.364 ent-vflx-rn

Use this command to associate a routing number name to a set of voice mail routing numbers. This command creates an entry in the Routing Number table. The V-Flex feature must be enabled before this command can be entered.

Parameters

rn (mandatory)

Routing number. The voice mail routing number.

Range:

1 - 15 digits. Valid digits are 0-9, A-F, a-f.

rnname (mandatory)

Routing number name. The name associated with the voice mail routing number.

Range:

ayyyyyyy

1 alphabetic character followed by 7 alphanumeric characters

Example

```
ent-vflx-rn:rnname=rn01:rn=123ABCDF012
```

Dependencies

The V-Flex feature must be enabled before this command can be specified.

4641 E4641 Cmd Rej: VFLEX feature must be enabled

The Routing Number table is corrupt or cannot be found.

4642 E4642 Cmd Rej: Unable to read Routing Number table

The Routing Number table cannot contain more than 10,000 entries.

4643 E4643 Cmd Rej: Routing Number table is full

The value specified for the `rnname` parameter cannot already exist in the database.

4644 E4644 Cmd Rej: (N)RNNAME already exists in the database

The value specified for the `rn` parameter cannot already exist in the database.

4645 E4645 Cmd Rej: (N)RN already exists in the database

The value specified for the `rnname` parameter cannot be a reserved word, such as *none*.

3040 E3040 Cmd Rej: <string> cannot be used in this command

Output

```
ent-vflx-rn:rnname=rn01:rn=1234ABCDF56
```

```
rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0  
ENT-VFLX-RN: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-vflx-rn](#)
- [dlt-vflx-rn](#)
- [rtrv-vflx-rn](#)

4.1.365 ent-vflx-vmsid

Use this command to provision a voice mail server ID and associate up to 10 routing number names with the ID. This command creates an entry in the VMSID table. The V-Flex feature must be enabled before this command can be entered.

Parameters**id (mandatory)**

The ID of the voice mail server.

Range:

1 - 15 digits, *dflt*

Valid digits are *0-9, A-F, a-f*

dflt—a set of routing numbers used when a query is received with an invalid MSISDN or an MSISDN that is not found in the RTDB

idx0 (optional)

Index 0. The routing number name for index 0.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

idx1 (optional)

Index 1. The routing number name for index 1.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

idx2 (optional)

Index 2. The routing number name for index 2.

Range:

ayyyyyyy

1 alphabetic character followed by upto 7 alphanumeric characters

idx3 (optional)

Index 3. The routing number name for index 3.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

idx4 (optional)

Index 4. The routing number name for index 4.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

idx5 (optional)

Index 5. The routing number name for index 5.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

idx6 (optional)

Index 6. The routing number name for index 6.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

idx7 (optional)

Index 7. The routing number name for index 7.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

idx8 (optional)

Index 8. The routing number name for index 8.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

idx9 (optional)

Index 9. The routing number name for index 9.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Example

This example provisions a VMS ID and associates a routing number name with index 0:

```
ent-vflx-vmsid:id=123456abcdef123:idx0=RN45
```

This example provisions a VMS ID and associates routing number names with index 0 and index 5:

```
ent-vflx-vmsid:id=DADBEEFEED:idx0=rn15:idx5=rn30
```

Dependencies

The V-Flex feature must be enabled before this command can be entered.

4641 E4641 Cmd Rej: VFLEX feature must be enabled

The values specified for the `idx*` parameters must already exist in the Routing Number table.

4665 E4665 Cmd Rej: <Specified RN Name> does not exist in the Routing Number table

The Routing Number table is corrupt or cannot be found.

4642 E4642 Cmd Rej: Unable to read Routing Number table

The VMSID table is corrupt or cannot be found.

4663 E4663 Cmd Rej: Failed reading VMSID table

The value specified for the `id` parameter cannot already exist in the VMSID table.

4664 E4664 Cmd Rej: VMS ID already exists in the database

The GTT DBMM table is corrupt or cannot be found.

3120 E3120 Cmd Rej: Failed Reading GTT DBMM table

The `idx*=none` parameter cannot be specified.

3502 E3502 Cmd Rej: The NONE value is not allowed in this case

The VMSID table contains a maximum of 1000 entries.

4671 E4671 Cmd Rej: VMSID table is full

The value specified for the `rname` parameter must already exist in the Routing Number table.

4646 E4646 Cmd Rej: RNNAME doesn't exist in the database

Output

```
ent-vflx-vmsid:id=123456abcdef123:idx0=rn45
```

```
rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0
ENT-VFLX-VMSID: MASP A - COMPLTD
```

```
;
```

```
ent-vflx-vmsid:id=DADBEEFEED:idx0=rn15:idx5=rn30
```

```
rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0
ENT-VFLX-VMSID: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-vflx-vmsid](#)
- [dlt-vflx-vmsid](#)
- [rtrv-vflx-vmsid](#)

4.1.366 ent-vlr-prof

Use this command to enter a Visitor Location Register (VLR) Profile for a mobile subscriber. A VLR-Profile entry helps in getting information required to locate the user while roaming and is subsequently used in VLR-ROAM table.

Parameters

vlr (mandatory)

VLR Number: Hexadecimal digit GT Number with variable length (1 to 16).

Range:

Hexadecimal digit string 1 to 16 digits

filter (optional)

Determines the category in which the number falls into.

Range:

whitelist

blacklist

graylist

Default:
graylist

ageofloc (optional)

Determines whether the duration at which the location was last updated must be taken into consideration.

Range:
yes

no

Default:
no

lastact (optional)

Determines whether last user activity must be taken into consideration.

Range:
yes

no

Default:
no

imeirtrv (optional)

Determines whether the VLR challenge by the IMEI is enabled for the given profile entry's last user activity has to be taken into consideration.

Range:
yes

no

Default:
no

Example

```
ent-vlr-prof:vlr=12345
```

```
ent-vlr-prof:vlr=4234:filter=blacklist
```

```
ent-vlr-prof:vlr=4234:filter=blacklist
```

```
ent-vlr-prof:vlr=12345:imeirtrv=no
```

Dependencies

VLR_PROF table must be accessible.

3604 E3604 Failure reading VLR Profile Table

VLR parameter must be unique.

3605 E3605 An entry with entered VLR already exists in VLR profile tbl.

VLR parameter specified must neither be a subset of more than 2 existing vlrs present nor be a superset of more than 2 existing vlr entries in VLR-PROF table.

3608 E3608 Max no of VLR entries provisioned with same leading digits

Output

```
ent-vlr-prof:vlr=9234:ageofloc=no:lastact=yes

tekelecstp 17-11-23 14:08:49 MST  EAGLE 46.5.1.5.0-73.2.0
ent-vlr-prof:vlr=9234:ageofloc=no:lastact=yes
Command entered at terminal #17.
;

tekelecstp 17-11-23 14:08:49 MST  EAGLE 46.5.1.5.0-73.2.0
ENT-VLR-PROF: MASP A - Cannot access standby fixed disk.
ENT-VLR-PROF: MASP A - Simplex database update.
Command Accepted - Processing

VLR-PROF table is (4 of 500) 1% full.

;
tekelecstp 17-11-23 14:08:49 MST  EAGLE 46.5.1.5.0-73.2.0
ENT-VLR-PROF: MASP A - COMPLTD
;
Command Executed
```

The following example shows that VLR parameter specified must not be a superset of more than 2 existing vlr entries present in VLR-PROF table:

```
ent-vlr-prof:vlr=1234
```

```
E3608 Cmd Rej: Max no of VLR entries provisioned with same leading
digits
```

```
tekelecstp 17-11-27 13:06:46 MST  EAGLE 46.5.1.5.0-73.2.0
ent-vlr-prof:vlr=1234
Command entered at terminal #2.
;

tekelecstp 17-11-27 13:06:46 MST  EAGLE 46.5.1.5.0-73.2.0
ENT-VLR-PROF: MASP A - Cannot access standby fixed disk.
ENT-VLR-PROF: MASP A - Simplex database update.

List of existing matching entries for entered VLR:

1      123      whitelist  no
no      0

2      12      whitelist  no
no      0

ENT-VLR-PROF: MASP A - Command Aborted
;
```


The below example shows that VLR parameter specified must not be a subset of more than 2 existing vlr entries present in VLR-PROF table:

```
ent-vlr-prof:vlr=1

E3608 Cmd Rej: Max no of VLR entries provisioned with same leading digits

tekelecstp 17-11-27 13:06:46 MST EAGLE 46.5.1.5.0-73.2.0
ent-vlr-prof:vlr=1
Command entered at terminal #2.
;

tekelecstp 17-11-27 13:06:46 MST EAGLE 46.5.1.5.0-73.2.0
ENT-VLR-PROF: MASP A - Cannot access standby fixed disk.
ENT-VLR-PROF: MASP A - Simplex database update.

List of existing matching entries for entered VLR:

1      123      whitelist  no      no      0
2      12       whitelist  no      no      0

ENT-VLR-PROF: MASP A - Command Aborted
;
```

Related Topics

- [chg-vlr-prof](#)
- [dlt-vlr-prof](#)
- [rtv-vlr-prof](#)

4.1.367 ent-vlr-roaming

Use this command to enter a Visitor Location Register (VLR) roaming entry for a mobile subscriber. A VLR-Roaming entry uses existing entries for both new as well as old entries from vlr-prof table.

Parameters

oldvlr (mandatory)

VLR Number from which mobile subscriber has moved, hexadecimal digit GT number with variable length (1 to 16).

Range:

Hexadecimal digit string 1 to 16 digits

newvlr (mandatory)

VLR Number to which mobile subscriber has moved, hexadecimal digit GT number with variable length (1 to 16).

Range:

Hexadecimal digit string 1 to 16 digits

time (mandatory)

Duration for which the roaming must occur. Time is in minutes.

Range:

1-1440

Example

```
ent-vlr-roaming:newvlr=12345:oldvlr=56780:time=10
```

Dependencies

VLR_PROF table must be accessible.

3604 E3604 Failure reading VLR Profile Table

VLR_DBMM table must be accessible.

3610 E3610 Failure reading VLR_DBMM Table

VLR_ROAM table must be accessible.

3602 E3602 Failure reading VLR Roaming Table

OLDVLR as well as NEWVLR parameter length must be in the range 1 to 5 digits as per current restriction.

3603 E3603 VLR length is out of range. Range: 1...5

OLDVLR or NEWVLR parameter must be existing in VLR-PROF table

3607 E3607 No entry found for entered VLR in VLR profile tbl

The entry should not be existing in VLR_ROAM table

3569 E3569 OLDVLR and NEW VLR combination already exists.

OLDVLR as well as NEWVLR parameter must not be mentioned as blacklisted in vlr table.

3574 E3574 BLACKLIST VLR number is not allowed

Entries over 1000 are not allowed

3580 E3580 VLR ROAMING Table is FULL

Value for OLDVLR and NEWVLR parameter must not be same.

3600 E3600 OLD and NEW VLR should be different

Output

```
ent-vlr-roaming:oldvlr=1234:newvlr=56545:time=20
```

```
tekelecstp 17-11-23 16:23:44 MST EAGLE 46.5.1.5.0-73.2.0
```

```
ent-vlr-roaming:oldvlr=1234:newvlr=56545:time=20
```

```
Command entered at terminal #17.
```

```
;
```

```
tekelecstp 17-11-23 16:23:44 MST EAGLE 46.5.1.5.0-73.2.0
```

```
ENT-VLR-ROAMING: MASP A - Cannot access standby fixed disk.
```

```
ENT-VLR-ROAMING: MASP A - Simplex database update.
```

```
Command Accepted - Processing

VLR-ROAMING table is (1 of 1000) 1% full.

;
tekelecstp 17-11-23 16:23:44 MST EAGLE 46.5.1.5.0-73.2.0
ENT-VLR-ROAMING: MASP A - COMPLTD
;
```

Related Topics

- [chg-vlr-roaming](#)
- [dlt-vlr-roaming](#)
- [rtrv-vlr-roaming](#)

4.1.368 flash-card

Use this command to load all flash images (GPL) supported by a specified card. This command performs the same functions as the `init-flash` and the `act-flash` commands.

Parameters

code (mandatory)

The GPL type to be loaded.

Range:

appr
Approved GPL

trial
Trial GPL

loc (mandatory)

Card address. The location of the card as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1113, 1115, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

force (optional)

This parameter is used to force the command to work on an IS-NR card. Links provisioned on the card are inhibited during command execution. The card and inhibited links are restored to their previous state when the command is completed.

Range:

yes

no

Default:

no

mode (optional)

This parameter converts the flash GPL of cards present in the Upgrade SET lists (RTRV-UPGRADE-CONFIG:DISPLAY=SETS)

Range:

migrate2

Flashes all the cards present in the Upgrade SETs that are running on BLMCAP and/or BLSLC32. Converts BLMCAP to BLDC32 and BLSLC32 to BLSLC932 respectively.

Cards running BLDC32 or BLSLC64 are not affected.

Uses the data in the SETs to decide which cards to migrate simultaneously.

The migration sequence follows the same sequence as used by the Upgrade operations. The OAM cancels the links and boots the cards as the flash GPL changes occur. The use of SETs by the OAM ensures that sufficient signaling link capacity remains available at all times, and prevents disabling all links in the same linkset.

Example

```
flash-card:loc=1105:code=trial
```

```
flash-card:loc=1105:code=appr:force=yes
```

```
flash-card:mode=migrate2
```

Dependencies

Cards do not have to be provisioned to use the `flash-card` command. However, if the specified card is provisioned and not inhibited, use of the `force` parameter is required.

2603 E2603 Cmd Rej: Card must be inhibited before executing this command

The specified card locations must be running a flashable software image.

N/A N/A

This command cannot be used to load flash images for MUX cards. Use the `init-flash` command.

2016 E2016 Cmd Rej: <parm_desc> is out of range - <parm>

If the even-numbered E5-TDM (1114,1116) is specified, the flash occurs on the odd-numbered E5-MCAP running OAM (1113,1115).

N/A N/A

The specified card location cannot be the active E5-MASP (either the active E5-MCAP or the active E5-TDM).

3949 E3949 Cmd Rej: Specified card cannot be the Active MASP

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The card specified in the location parameter must be present and able to communicate over the IMT. The card does not have to be provisioned in the database.

2269 E2269 Cmd Rej: Unable to communicate with card at location

If the card is already running the specified code load, it cannot be loaded by this command.

4440 E4440 Cmd Rej: Card running the specified code load.

This command cannot be entered if an IMT Rate Change sequence is in progress.

5184 E5184 Cmd Rej: IMT Rate Change sequence is in progress

This command cannot be entered during an Extended Bit Error Rate Test (BERT).

3043 E3043 Cmd Rej: IMT test in progress

Notes

The specified card must be present and able to communicate over the IMT.

A card that is already running the specified code load cannot be reflashed using the `force` parameter. The `act-flash` and `init-flash` commands must then be used to reload the same code level.

Output

```
flash-card:code=appr:force=yes:loc=1112
```

```
Command Accepted - Processing
```

```

tekelecstp 18-01-18 16:06:22 MST  EAGLE 46.5.1.5.0-73.3.0
flash-card:code=appr:force=yes:loc=1112
Command entered at terminal #1.
;

tekelecstp 18-01-18 16:06:55 MST  EAGLE 46.5.1.5.0-73.3.0
Flash Card: FLASH GPL required to be downloaded on card 1112
BLMCAP      : Running version 143-001-000  Expected version 143-002-000
;

tekelecstp 18-01-18 16:07:14 MST  EAGLE 46.5.1.5.0-73.3.0
Flash Card: Downloading BLMCAP on card 1112
Flash Card: Card(s) will reset after the flash GPL download.
;

tekelecstp 18-01-18 16:07:56 MST  EAGLE 46.5.1.5.0-73.3.0
Flash Card: Activating BLMCAP on card 1112
;

tekelecstp 18-01-18 16:08:25 MST  EAGLE 46.5.1.5.0-73.3.0
Flash Card: Card 1112 flash activation complete.
;

Flash Card: Activating links on card 1112.
;

tekelecstp 18-01-11 16:09:11 EST  EAGLE5 39.0.0
```

```
Command Completed.
;

> flash-card:mode=migrate2

Command Accepted - Processing

tklc1121001 20-03-02 01:05:43 EST EAGLE 46.9.0.0.0-76.11.0
flash-card:mode=migrate2
Command entered at terminal #3.
;

tklc1121001 20-03-02 01:05:43 EST EAGLE 46.9.0.0.0-76.11.0
Recovery Required: Manually flash inhibited card 1112.
;

tklc1121001 20-03-02 01:05:43 EST EAGLE 46.9.0.0.0-76.11.0
Recovery Required: Manually flash inhibited card 1107.
;

tklc1121001 20-03-02 01:05:43 EST EAGLE 46.9.0.0.0-76.11.0
Network Conversion: Inhibiting card 1108.
;

tklc1121001 20-03-02 01:05:43 EST EAGLE 46.9.0.0.0-76.11.0
** 8007.0539 ** ENET 1108,A Ethernet Interface Down
;

tklc1121001 20-03-02 01:06:04 EST EAGLE 46.9.0.0.0-76.11.0
* 8010.0107 * IMT BUS A Minor IMT failure detected
;

tklc1121001 20-03-02 01:06:06 EST EAGLE 46.9.0.0.0-76.11.0
8011.0106 IMT BUS A IMT Bus alarm cleared
;

tklc1121001 20-03-02 01:06:06 EST EAGLE 46.9.0.0.0-76.11.0
Network Conversion: Downloading BLSL932 on IPSP card 1108
Network Conversion: Card(s) will reset after the flash GPL
download.
;

tklc1121001 20-03-02 01:06:07 EST EAGLE 46.9.0.0.0-76.11.0
MBUS DBG: GPL download timeout: 1140000 (MS) 19 (MINS)
;

tklc1121001 20-03-02 01:07:56 EST EAGLE 46.9.0.0.0-76.11.0
Network Conversion: Card 1108 flash download complete.
;
```

```
tklcl1121001 20-03-02 01:08:11 EST EAGLE 46.9.0.0.0-76.11.0
* 8023.0004 * GPL SYSTEM BLSL932      Card is running non-activated GPL
;

tklcl1121001 20-03-02 01:08:14 EST EAGLE 46.9.0.0.0-76.11.0
Network Conversion: FLASH GPL(s) required to be activated on card 1108
      BLSL932 : Running inactive version 059-011-000
;

tklcl1121001 20-03-02 01:08:14 EST EAGLE 46.9.0.0.0-76.11.0
Network Conversion: Activating BLSL932 on card 1108
;

tklcl1121001 20-03-02 01:08:53 EST EAGLE 46.9.0.0.0-76.11.0
Network Conversion: Card 1108 flash activation complete.
;

tklcl1121001 20-03-02 01:09:00 EST EAGLE 46.9.0.0.0-76.11.0
8029.0005      GPL SYSTEM BLSL932      Alarm cleared running non-activated
GPL
;

tklcl1121001 20-03-02 01:09:06 EST EAGLE 46.9.0.0.0-76.11.0
Network Conversion: Allowing card 1108
;

tklcl1121001 20-03-02 01:09:07 EST EAGLE 46.9.0.0.0-76.11.0
MBUS DBG: Card Loading Timeout: 8 minutes.
;

tklcl1121001 20-03-02 01:09:07 EST EAGLE 46.9.0.0.0-76.11.0
Network Conversion: Cards loading, wait for them to return to IS-NR.
;

tklcl1121001 20-03-02 01:09:39 EST EAGLE 46.9.0.0.0-76.11.0
8033.0096      CARD 1108 IP6G69        Card has been reloaded
;

tklcl1121001 20-03-02 01:09:48 EST EAGLE 46.9.0.0.0-76.11.0
8035.0540      ENET 1108,A            Ethernet Interface Up
;

tklcl1121001 20-03-02 01:10:24 EST EAGLE 46.9.0.0.0-76.11.0
Command Completed.
;
```

Related Topics

- [act-flash](#)
- [init-flash](#)

- [chg-upgrade-config](#)
- [rtrv-upgrade-config](#)

4.1.369 format-disk

Use this command to format and initialize a removable drive or standby Terminal Disk Module (TDM).



Note:

The `format-disk` command leaves the disk unusable until the `chg-db` and `copy-gpl` commands are entered.

Parameters

type (mandatory)

The type of drive to format.

Range:

fixed

The standby fixed disk on the standby TDM

meas

The removable measurement drive

system

The removable system drive (latched recessed USB port on the MASP card).

usb

The flush-mounted (not-latched) USB port on the MASP card.

force (optional)

This parameter provides some protection against data loss due to reformatting a used system removable drive.

Range:

yes

no

Default:

no

loc (optional)

The location of the disk that is being formatted.

Range:

1114

The TDM

1116

The TDM

1113

The latched USB port

1115

The latched USB port

low (optional)

This parameter provides control over whether a low-level format will be performed on the target disk. Specifying `low=no` can be used to decrease formatting time.

Range:*yes**no***Default:***yes***prtnggrp (optional)**

Partition group. The disk partition group to be formatted. Specifying the inactive group is relevant only when `type=fixed` is specified.

 **Caution:**

Do not enter the `format-disk:prtnggrp=inactive` command unless directed to by the Customer Care Center to avoid possible loss of a previously archived software release.

Range:*active**inactive***Default:***active***Example**

```
format-disk:type=system
```

```
format-disk:type=meas:force=yes
```

Dependencies

The `type=fixed` parameter must be specified before the `prtnggrp` parameter can be specified.

If the `prtnggrp` parameter is specified, then the `low=no` parameter must be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified.

Measurements collection must be inhibited during execution of this command. If measurements are not inhibited, this command cannot be executed.

- Do not enter the `chg-measopts:collect=on` command while the `format-disk` command is in progress. This results in read and write errors, because the standby disk is not accessible.
- Do not enter the `format-disk` command until the 30 minute measurements processing or the midnight measurements processing has completed, because inhibiting measurements during these periods results in the loss of measurement data for the period being processed.

2160 E2160 Cmd Rej: Measurements collect must be off

If a removable flash drive that is inserted into the latched USB port contains EAGLE data, then the `force=yes` parameter is required.

2161 E2161 Cmd Rej: Removable drive contains Eagle data (use FORCE=YES)

If a plug-in flash drive that is inserted into the flush-mounted USB port contains EAGLE data, then the `force=yes` parameter is required.

2162 E2162 Cmd Rej: USB drive contains Eagle data (use FORCE=YES)

If the medium that is being formatted contains system data, then the `force=yes` parameter is required.

2164 E2164 Cmd Rej: Fixed disk contains Eagle data (use FORCE=YES)

The `force=yes` parameter must be specified if the drive to be formatted is recognized as a system removable drive. This parameter is optional if the drive is not recognized as a system removable drive. Only drives that have a **dms.cfg** file are recognized as system removable drives.

A removable drive must be inserted and made ready before the `type=meas` or `type=system` parameter can be specified in the command.

2165 E2165 Cmd Rej: Removable drive not inserted

If the `force=yes` parameter is specified, the disk should not require low-level formatting, and the `format=no` parameter should be specified.

N/A N/A

The card with the standby OAM must be available when this command is entered.

2398 E2398 Cmd Rej: Standby MASP is unavailable

The standby fixed disk could not be accessed. There could be a hardware problem.

2824 E2824 Cmd Rej: Could not access standby fixed disk

The active fixed disk could not be accessed. There could be a hardware problem.

2826 E2826 Cmd Rej: Could not access active fixed disk

The source and destination disks are not compatible. There could be a hardware problem.

2828 E2828 Cmd Rej: Source and destination disks not compatible

The system cannot determine the capacity of the disk that is being formatted.

2829 E2829 Cmd Rej: Destination disk capacity equals 0

Refer to *Database Administration - System Management User's Guide* for detailed instructions to resolve this issue.

2831 E2831 Cmd Rej: Current database not coherent

The standby fixed disk contains security log entries that have not yet been uploaded. Upload the log entries before formatting the disk to avoid loss of log data.

3004 E3004 Cmd Rej: Un-uploaded security log entries exist on standby fixed disk

The OAMHC GPL version that is running in the active OAM card location must be the same GPL version that is running in the standby OAM card location.

3778 E3778 Cmd Rej: Active/Stby GPL versions are not compatible.

OAM Measurements collection cannot be in progress when this command is entered.

4113 E4113 Cmd Rej: Measurement collection in progress, Retry later.

A value of 1114 or 1116 must be specified for the `loc` parameter before the `type=fixed` parameter can be specified.

4912 E4912 Cmd Rej: Disk invalid for specified Location

An E5-MCAP card must be installed before the `type=usb` parameter can be specified.

4921 E4921 Cmd Rej: Type invalid for hardware configuration

The OAM card must be able to read the media being formatted.

2311 E2311 Cmd Rej: Disk read/config error

The `format-disk` command cannot be issued when SFAPP(P)->OAM sync is ON.

3637 E3637 Cmd Rej: Turn OFF SFAPP(P)->OAM sync before this command

Notes

The `low=no` parameter should be specified when upgrading a spare TDM. The `low=yes` parameter should be specified when there is a suspected hardware problem.

When the `type=meas` parameter is specified, a measurements removable drive is built.

When the `type=system` parameter is specified, a system removable drive is built.

A system removable drive can contain only GPLs and the database, not measurement data. After formatting, the drive does not contain any data, but can be used as the destination disk of the `copy-gpl` and `chg-db:action=backup:dest=remove` commands. The `copy-gpl` command copies all approved GPLs from the fixed disk on the active TDM to the system removable drive, providing a backup copy of the approved GPLs. The `chg-db:action=backup:dest=remove` command copies the database from the current partition of the fixed disk on the active TDM to a system removable drive, providing a backup copy of the database.

A measurements removable drive can contain only measurement data, not database information and GPLs. After formatting, the drive does not contain any data, but can be used as the destination disk of the `copy-meas` command. The `copy-meas` command copies all measurement data from the fixed disk on the active TDM to a measurements removable drive for offline processing of the measurement data.

The database audit and GPL audit facilities are automatically disabled during execution of this command. When this command has completed (successful or not), the database and GPL audit facilities are automatically re-enabled.

All commands that affect the database are disallowed for the duration of the command. Attempts to use such commands are rejected, and an error message is displayed explaining that the command has been rejected.

During the upgrade process, files made obsolete by the upgrade process are deleted, freeing up disk space.

If the `format-disk` command is initiated and the standby OAM initialization is not complete, command processing is delayed. If standby initialization fails, the command proceeds to allow the standby TDM to recover from a previous `format-disk` or `copy-disk` failure. In such cases, the following messages appear:

```
Standby MASP has not finished initializing - please wait...
```

```
Standby MASP initialization timed out - continuing...
```

The `dms.cfg` file on either the active TDM or a system formatted removable drive is used by the `format-disk` command when formatting the target disk. The location of the `dms.cfg` file cannot be specified by the `format-disk` command. The value of the `type` parameter is used to determine the target disk to format and the location of the `dms.cfg` file on which to base the format. [Table 4-37](#) shows the location of the `dms.cfg` file based on the value of the `type` parameter for the `format-disk` command.

Table 4-37 DMS.CFG File Location for format-disk Command

Value of the type Parameter	Target Disk (Card Location)	Location of the DMS.CFG File
<i>fixed</i>	Standby TDM (1114 or 1116)	Latched USB Port (1113 or 1115)
<i>system</i>	Latched USB Port (1113 or 1115)	Active TDM (1114 or 1116)
<i>meas</i>	Latched USB Port (1113 or 1115)	Active TDM (1114 or 1116)

The `format-disk` command can create a maximum disk partition size of 2047 Mbytes, based on a 16-bit cluster size. A cluster is composed of 64 512-Kilobyte sectors. The physical capacity of the disk being formatted determines the formatted size of the disk and the number of partitions created on the disk.

[Table 4-38](#) shows the format capacities of each type of disk used on the system and the number of partitions created on each disk.

Table 4-38 Disk Format Capacity

Target Disk Type	Disk Location	Target Capacity	Number of Partitions	Formatted Size of Partition
Latched USB Port	1113 or 1115	2 Gigabytes	1	1.9 GB
TDM	1114 or 1116	540 Mbytes	1	507 Mbytes
TDM	1114 or 1116	2 Gigabytes	1	2014 Mbytes
TDM	1114 or 1116	4 Gigabytes	2	2047 Mbytes

Output

```
format-disk:type=system
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk of system removable media started.
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk (removable media) format in progress.
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk (removable media) format in progress.
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk (removable media) format is complete.
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk of system removable media completed.
Measurements collection may be turned on now if desired.
```

```
;
```

```
format-disk:type=fixed:low=no:force=yes
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk of standby fixed disk started.
Extended processing required, please wait.
```

```
;
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk (fixed) format in progress.
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk (fixed) format is complete.
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk of standby fixed disk completed.
Measurements collection may be turned on now if desired.
```

```
;
```

Related Topics

- [chg-db](#)
- [copy-disk](#)
- [copy-gpl](#)
- [copy-meas](#)
- [disp-disk-dir](#)
- [rept-stat-db](#)
- [rtrv-gpl](#)

4.1.370 inh-alm

Use this command to inhibit the reporting of alarms for the given device. Inhibited alarms will not generate unsolicited output or cause alarm indicators to be turned on. All `rept-stat-xxx` commands continue to display the alarm with an indication that the device has its alarms inhibited.

The frame alarm LEDs are off for the inhibited alarm. This command does not affect the alarm counts on the VT320 banner. The fourth box on the right of the VT320 Control Area indicates the number of devices in the system with inhibited alarms.

Parameters**Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

dev (mandatory)

Device. The device where the reporting of alarms is to be inhibited.

Range:***applsock***

IP gateway application socket

as

IP gateway Application Server

card

Cards in the database

cdt

Customer defined troubles

clock

System clock

dlk

IP ports on the VSCCP, EROUTE, MCP, and FC-capable cards

e1port

E1 port on E5-E1T1-B cards

enet

Ethernet

ls

Linksets

lsmsconn

Communication link between the LSMS and the EMS

route

Route

rtx

Exception Route

slk

Signaling links

t1port

T1 port on E5-E1T1, or E5-E1T1-B cards

tps

TPS subsystem

trm

Terminals

asname (optional)

Gateway Application Server name. Used with the `dev=as` parameter to inhibit alarms for the named Application Server.

Range:

aaaaaaaaaaaaaaaa

up to 15 alphanumeric characters; the first character must be a letter

cic (optional)

Starting Circuit Identification Code. Used with the `ecic` parameter to define the CIC range that is used as an exception routing criterion for the specified exception route.

Range:

0 - 16383

dpcc (optional)

ANSI destination point code with subfields network indicator-network cluster-network cluster member (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:*p*-, 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*-The asterisk value (*) is not valid for the *ni* subfield.When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.The point code *000-000-000* is not a valid point code.**dpc/dpca/dpci/dpcn/dpcn24 /dpcn16 (optional)**

Destination Point Code

dpci (optional)ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).**Range:***s*-, *p*-, *ps*-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps**zone*—0-7*area*—000-255*id*—0-7The point code *0-000-0* is not a valid point code.**dpcn (optional)**ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s*-, *p*-, *ps*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps**nnnnn*—0-16383*gc*—*aa-zz**m1-m2-m3-m4*—0-14 for each member; values must sum to 14**dpcn24 (optional)**24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point*. The *prefix* subfield indicates a private point code.**Range:***p*-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p
msa—000–255
ssa—000–255
sp—000–255

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code.

Range:

p--, *000---127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

dur (optional)

Duration. The period for which the alarms are inhibited.

Range:***perm***

permanent inhibition of an alarm

temp

temporary inhibition of an alarm

timed

inhibition of an alarm for a specified duration

 **Note:**

If the `dur=temp` parameter is specified, then an alarm inhibit lasts as long as the alarm is present. If the system boots or switches over, then the alarm inhibit is removed. If the `dur=perm` parameter is specified, then the alarm inhibit remains after the alarm is cleared or is no longer present, and after a boot/ switchover. The `dur=timed` parameter behaves the same as the `dur=perm` parameter, but for a set time period.

Default:

perm

e1port (optional)

Port ID. The E1 port on the specified E1 card.

This parameter is mandatory if the `dev=e1port` parameter is specified.

Range:

1 - 8

ecic (optional)

Ending Circuit Identification Code. Used with the `cic` parameter to define the CIC range that is used as exception routing criteria for the specified exception route.

Range:

0 - 16383

edate (optional)

Expiry date. The date on which a timed alarm inhibit expires, at the time specified in the `etime` parameter value.

**Note:**

This parameter is valid and required when the `dur=timed` parameter is specified.

Range:

101 - 991231

Specify the date in the format of *year*, followed by *month*, followed by *day* (*yymmdd*).

etime (optional)

Expiry time. The time at which a timed alarm inhibit expires, on the date specified in the `edate` parameter value.

This parameter is valid and required when the `dur=timed` parameter is specified.

Range:

0 - 2359

Specify the time in the format of *hour* followed by *minute* (*hhmm*).

force (optional)

Allows critical alarms to be inhibited on a device.

This parameter is mandatory if the `lvl=crit` parameter is specified.

The `criticalminh` STP option must be turned on before this parameter can be specified.

Range:**yes****no****Default:**

no

id (optional)

Identification number of the customer-defined trouble. Customer-defined troubles 1 - 4 are generated critical alarms and cannot be specified as values for this parameter.

Range:

5 - 16

ilsn (optional)

Incoming Link Set Name. The name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range:

aaaaaaaa

1 alphabetic character followed by up to 9 alphanumeric characters

link (optional)

Signaling link on the card specified in the `loc` parameter.

Synonym:

port

Range:

a, b, a1 - a31, b1 - b31

a1, a2, b1, b2 — `dev=lsmsconn`

a, b, a1-a31, b1-b31 — `dev=slk` for an E5-E1T1, or E5-E1T1-B

a1, b1 — `dev=dlk` for an FC-capable card

a, b — `dev=enet`

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1113, 1115, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318, 3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118

lsn (optional)

Linkset name. The name of the linkset for which the report information is to be displayed.

Range:

aaaaaaaa

1 alphabetic character followed by up to 9 alphanumeric characters

lv1 (optional)

The alarm severity level (critical, major, or minor).

Range:

crit

majr

minr

Default:

majr

opc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

opca

Range:

0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

opc/opca/opci/opcn/opcn24/opcn16 (optional)

Origination point code.

opci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

opcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

opc24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000—255

ssa—000—255

sp—000—255

opc16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area (un-sna-mna)*. The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

si (optional)

Service Indicator. This parameter is used as the exception routing criterion for the specified exception route.

Range:

0 - 15

sname (optional)

Gateway application socket. Used with the `dev=applsock` parameter to inhibit alarms for the named application socket.

Range:

aaaaaaaaaaaaaaaa

1 to 15 alphanumeric characters

t1port (optional)

Port ID. This parameter is mandatory if the `dev=t1port` parameter is specified.

Range:

1 - 8

trm (optional)

Terminal ID. The ID number of the terminal whose characteristics are to be retrieved and displayed.

Range:
1 - 40

Example

```
inh-alm:dev=route:dpc=1-1-1:dur=perm:lvl=crit:force=yes
inh-alm:dev=rtx:dpc=1-101-1:opc=4-4-4
inh-
alm:dev=route:dpc=1-1-1:dur=timed:lvl=crit:edate=050515:etime=2
300:force=yes
inh-alm:dev=enet:loc=1201:port=a
inh-alm:dev=enet:loc=1101:port=a:dur=temp:lvl=minr
inh-alm:loc=1102:dev=dlk:port=a1
inh-alm:dev=rtx:dpcn16=121-10-15:opc16=121-10-16
```

Dependencies

This command is not allowed in upgrade mode.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

The parameters that can be specified with the `dev` parameter vary, depending on the value specified for the `dev` parameter as shown:

- `dev=(any value) — dur or lvl`
- `dev=asname — as`
- `dev=dpc/dpca/dpci/dpcn/dpcn24/dpcn16 — route`
- `dev=id — cdt`
- `dev=loc — card, dlk, elport, slk, tlport, enet`
- `dev=lsn — ls`
- `dev=elport — elport`
- `dev=link (link=a, b)— dlk, slk, enet`
- `dev=link (link=a1, b1)— dlk (For FC-capable cards)`
- `dev=link (link=a, b, a1, a2, b1, b2, a3, b3)— slk`
- `dev=link (link=a1, a2, b1, b2)— lsmsconn`
- `dev=sname — applsock`
- `dev=tlport — tlport`
- `dev=trm — trm`

2965 E2965 Cmd Rej: Too many parameters entered

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The linkset specified by the `lsn` parameter must be equipped in the database.

2384 E2384 Cmd Rej: Link set is not equipped

This command will not execute while the signaling link is running either a Link Fault Sectionalization test or a Loopback test. An AST of LFS or LPBK must be cleared before signaling link alarms can be inhibited.

2954 E2954 Cmd Rej: DEV state does not allow alarms to be inhibited

This command cannot be used to permanently inhibit XLIST point codes.

3909 E3909 Cmd Rej: XLIST Point codes may not be permanently inhibited

Before critical alarms can be inhibited, the STP option `criticalminh` must be enabled. The `chg-stpopts:criticalminh=yes` command enables this option.

3436 E3436 Cmd Rej: CRITICALMINH not set when trying to inhibit critical alarms

Alarms cannot already be inhibited for the specified device.

3434 E3434 Cmd Rej: The alarms are already inhibited for this device

The Device Alarm Inhibit table is corrupt or cannot be found.

3437 E3437 Cmd Rej: Device alarm inhibit table not accessible

The STP Options table is corrupt or cannot be found.

2852 E2852 Cmd Rej: Failed reading STP Options table

If the `lvl=crit` parameter is specified, the `force=yes` parameter must be specified.

2371 E2371 Cmd Rej: Force parameter required

When the `dev=card` parameter is specified, the `loc` parameter must be specified.

2366 E2366 Cmd Rej: LOC must be specified

When the `dev=dlk` parameter is specified, the `loc` parameter must be specified.

2366 E2366 Cmd Rej: LOC must be specified

When the `dev=slk` parameter is specified, the `loc` parameter and the `link` parameter must be specified.

2903 E2903 Cmd Rej: LOC and PORT parameter combination must be specified

When the `dev=e1port` parameter is specified, the `loc` and `e1port` parameters must be specified.

4214 E4214 Cmd Rej: LOC and E1PORT parameter combination must be specified

When the `dev=t1port` parameter is specified, the `loc` and `t1port` parameter must be specified.

4215 E4215 Cmd Rej: LOC and T1PORT parameter combination must be specified

When the `dev=ls` parameter is specified, the `lsn` parameter must be specified.

2951 E2951 Cmd Rej: LSN must be specified

When the `dev=trm` parameter is specified, the `trm` parameter must be specified.

2966 E2966 Cmd Rej: TRM must be specified

When the `dev=cdt` parameter is specified, the `id` parameter must be specified.

2953 E2953 Cmd Rej: ID must be specified

When the `dev=lsmsconn` parameter is specified, the `link` parameter must be specified.

2952 E2952 Cmd Rej: PORT must be specified

When the `dev=route` parameter is specified, the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter must be specified.

3433 E3433 Cmd Rej: DPC parameter must be specified

When the `dev=applsock` parameter is specified, the `sname` parameter must be specified.

2949 E2949 Cmd Rej: SNAME must be specified

If the `dev=as` parameter is specified, the `asname` parameter must be specified.

4068 E4068 Cmd Rej: Must specify ASNAME

If the `sname` parameter is specified, the socket name must exist in the IPAPSOCK table.

3767 E3767 Cmd Rej: Socket Name not defined

If a point code parameter is specified, the point code must exist in the Routing table.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

If the `dev=slk` or `dev=dlk` parameter is specified, the specified `link` must exist in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

The card location that is specified in the `loc` parameter must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The specified device type must be supported by the card in the specified card location.

4366 E4366 Cmd Rej: Dev parameter is not supported by the specified location

The Origin-Based MTP Routing feature must be on before the `dev=rtx` parameter can be specified.

4584 E4584 Cmd Rej: MTP Origin Based Routing Feature must be ON

Permanent alarm inhibit is not allowed on the cluster PC if either the cluster or a member PC of the cluster is already alarm inhibited.

2080 E2080 Cmd Rej: Alarms already inhibited for cluster PC or its member PCs

When the `dur=timed` parameter is specified, the `edate` and `etime` parameters must be specified.

4550 E4550 Cmd Rej: Both EDATE and ETIME parameters are required

If the `dur` parameter has a value other than *timed*, the `edate` and `etime` parameters cannot be specified.

2965 E2965 Cmd Rej: Too many parameters entered

The `edate` parameter value must be a date equal to or later than the current system date. If the current system date is specified, then the `etime` parameter value must be a time later than the current system time. If a date later than the current system date is specified, then the `etime` parameter value can be any valid time in the format `hhmm`.

4549 E4549 Cmd Rej: EDATE/ETIME must be greater than system date/time

This command cannot be used to change the level of inhibition on a device.

3333 E3333 Cmd Rej: Alarm Inhibition Level cannot be changed

If the `dev=enet` parameter is specified, then the `loc` and `port` parameters must be specified.

2903 E2903 Cmd Rej: LOC and PORT parameter combination must be specified

The card specified by the `loc` parameter must be provisioned with an IPS, MCP, EROUTE, VSCCP, IPSG, IPLIM, IPLIMI, SS7IPGW, or IPGWI application.

2131 E2131 Cmd Rej: Parameters not valid for card type

The value specified for the `elport/tlport` parameter must be in the range 1-8.

2950 E2950 Cmd Rej: PORT parameter invalid for DEV selected

The `link` parameter must be valid for the selected device type.

2950 E2950 Cmd Rej: PORT parameter invalid for DEV selected

The J7 Support feature must be enabled before the `opcn16/dpcn16` parameters can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

Notes

If critical alarms are inhibited, all alarms (critical, major, and minor) are disabled. Likewise, if major alarms are inhibited, both major and minor alarms are disabled.

The `dur` parameter allows alarms to be inhibited on a temporary basis. If a device has its alarms temporarily disabled, the device's alarms are automatically enabled after the alarm clears.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

Output

```
inh-alm:dev=route:dpc=1-1-1:dur=perm:lvl=crit
```

```

rlghncxa03w 04-02-23 13:20:59 EST  EAGLE 31.3.0
Alarms are permanently inhibited.
;
rlghncxa03w 04-02-23 13:20:59 EST  EAGLE 31.3.0
Command Completed.
;
```

```
inh-alm:dev=rtx:dpc=1-101-1:opc=4-4-4

    stdcfg2b 06-05-27 20:20:35 EST EAGLE 35.0.0
    Alarms are permanently inhibited
    Command Completed.
;

inh-
alm:dev=route:dpc=1-1-1:dur=timed:lvl=crit:edate=050515:etime=2
300:force=yes

    tekelecstp 07-02-27 13:20:59 EST EAGLE 35.6.0
    Alarms are timed inhibited.
;
    tekelecstp 07-02-27 13:20:59 EST EAGLE 35.6.0
    Command Completed
;

inh-alm:dev=enet:loc=1201:port=a

    stdcfg2b 07-02-07 20:20:35 EST EAGLE 35.6.0
    Alarms are permanently inhibited
    Command Completed.
;

inh-alm:dev=enet:loc=1101:port=a:dur=temp:lvl=minr

    stdcfg2b 07-02-07 20:20:35 EST EAGLE 35.6.0
    Temporary alarm inhibit level less than alarm level on device
    Command Completed.
;
```

Related Topics

- [rept-stat-alm](#)
- [rept-stat-card](#)
- [rept-stat-cdt](#)
- [rept-stat-dlk](#)
- [rept-stat-dstn](#)
- [rept-stat-ls](#)
- [rept-stat-rte](#)
- [rept-stat-rtx](#)
- [rept-stat-seas](#)
- [rept-stat-slk](#)

- [rept-stat-sys](#)
- [rept-stat-trbl](#)
- [rept-stat-trm](#)
- [rtrv-log](#)
- [unhb-alm](#)

4.1.371 inh-card

Use this command to change the state of the card from in-service normal (IS-NR) to Out-of-Service Maintenance-Disabled (OOS-MT-DSBLD). A user can then test the card or physically remove it from the shelf.

Parameters

eLoc (optional)

End location. The location of the last card of a range of cards to be inhibited.

Range:

1101 - 1108, 1111 - 1113, 1115, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

force (optional)

Force indicator. This parameter is required if:

- The specified card is the last card supporting a linkset, SCCP subsystem, MPS-to-Service Module connection, E1, T1, Measurements Platform subsystem, or GLS
- The TDM contains a security log with un-uploaded entries or any other TDM process in progress
- The specified E5-E1T1-B card is in channel bridging mode
- The specified card has the last in-service SEAS terminal configured.

Range:

yes

no

Default:

no



Note:

If the *force* parameter is specified in the command along with the *sloc* and *eLoc* parameters, then the *force* parameter's value is applied to all the cards within the *sloc-eLoc* range, including *sloc* and *eLoc*.

loc (optional)

Card address. The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1113, 1115, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

sloc (optional)

Start location. The location of the first card of a range of cards to be inhibited.

Range:

1101 - 1108, 1111 - 1113, 1115, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
inh-card:loc=1101
inh-card:loc=1201:force=yes
inh-card:sloc=1101:eloc=1111
inh-card:sloc=1101:eloc=1111:force=yes
```

Dependencies

No other action commands can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

TDM and MDAL cards cannot be inhibited. E5-APP-B cards and Telco Switches cannot be inhibited. Card locations 1114, 1116, 1117, xx09, and xx10 cannot be specified as values for the `loc` parameter.

2378 E2378 Cmd Rej: The specified card cannot be inhibited

If the card contains signaling or data links, all links must be out of service (OOS-MT-DSBLD) before the card can be inhibited.

2631 E2631 Cmd Rej: Link must be cancelled before executing this command

If the card is type LIME1, all signaling links providing timeslots serviced by the E1 interfaces assigned to the card must be deactivated, unless `force=yes` is specified.

4048 E4048 Cmd Rej: All signaling links serviced by the E1 must be deactivated

If the card is type LIMT1, all signaling links providing timeslots serviced by the T1 interfaces assigned to the card must be deactivated, unless `force=yes` is specified.

2736 E2736 Cmd Rej: All signaling links serviced by the T1 must be deactivated

The shelf and card must be equipped.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

If the specified card is the only in-service MPS-Service Module, the `force=yes` parameter must be specified.

3779 E3779 Cmd Rej: FORCE=YES must be specified

If inhibiting the Service Module card would cause less than 80% of the in-service normal (IS-NR) LIM cards to have VSCCP service (i.e., cause the system to enter an unstable loading mode), the `force=yes` parameter must be specified.

2371 E2371 Cmd Rej: Force parameter required

If the Integrated GLS feature is turned OFF and the specified card is only GLS card remaining, then the `force=yes` parameter is required.

2371 E2371 Cmd Rej: Force parameter required

The card that is specified by the `loc/sloc/eloc` parameter cannot be running the active OAM.

3949 E3949 Cmd Rej: Specified card cannot be the Active MASP

If the specified card has the last in-service SEAS Terminal configured, then the `force=yes` parameter must be specified to inhibit the card.

4478 E4478 Cmd Rej: Force must be specified to inhibit the last SEAS terminal

The card location (`loc`) must be within the allowed range.

2016 E2016 Cmd Rej: `<parm_desc>` is out of range - `<parm>`

The standby fixed disk cannot be initialized while un-uploaded security log entries exist.

3004 E3004 Cmd Rej: Un-uploaded security log entries exist on standby fixed disk

The `loc` parameter cannot be specified with the `eloc` and `sloc` parameters.

Either the `loc` parameter or the `eloc` and `sloc` parameters must be specified.

The `eloc` and `sloc` parameters must be specified together in the command.

The `sloc` parameter value cannot be greater than the `eloc` parameter value.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `inh-card` command cannot be issued when SFAPP(P)->OAM sync is ON.

3637 E3637 Cmd Rej: Turn OFF SFAPP(P)->OAM sync before this command

This command cannot be entered when CAT2 IPSM to OAM syncing is in progress.

3652 E3652 Cmd Rej: IPSM to OAM SYNC in progress

Notes

The function of this command is the same as the `rmv-card` command.

When this command is entered, the card is initialized and enters the OOS-MT-DSBLD state. It has no affect if the card is already OOS-MT-DSBLD.

▲ Caution:

This command can be used to disable Measurements Platform measurements collection after the collection function has been enabled with the `chg-measopts:platformenable=on` command. To disable collection, ALL MCPM cards in the system must be inhibited. THIS CAN RESULT IN LOSING ALL PAST MEASUREMENT DATA ON THE CARDS. Use the `alw-card` command to enable measurements collection after the MCPM cards have been inhibited.

When an IPSM card is inhibited, the active SEAS terminals are set to the state OOS-MT/FLT.

Output

```
inh-card:loc=1101

      rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
      Card has been inhibited.
;

inh-card:sloc=1101:eloc=1107

Command Accepted - Processing

      tekelecstp 15-04-22 16:52:31 MST  EAGLE5 47.0.0-66.1.0
      inh-card:sloc=1101:eloc=1107
      Command entered at terminal #4.
;

      tekelecstp 15-04-22 16:52:31 MST  EAGLE5 47.0.0-66.1.0
      inh-card command for location 1101-1107 Started
;

      tekelecstp 15-04-22 16:52:31 MST  EAGLE5 47.0.0-66.1.0
      LOC 1101: INHIBIT OPERATION COMPLETED
      LOC 1103: INHIBIT OPERATION COMPLETED
      LOC 1105: INHIBIT OPERATION COMPLETED
      LOC 1107: INHIBIT OPERATION COMPLETED
      ALL CARDS HAVE BEEN INHIBITED
      inh-card command for location 1101-1107 Completed
;

      tekelecstp 15-04-22 16:52:31 MST  EAGLE5 47.0.0-66.1.0
      Command Completed.
;
```

Related Topics

- [alw-card](#)

- dlt-card
- ent-card
- init-card
- rept-stat-card
- rmv-card
- rtrv-card

4.1.372 inh-imt

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. This command removes the IMT bus from service.

Caution:

Use this command only when directed by the Customer Care Center.

Parameters

bus (mandatory)

IMT bus to be inhibited

Range:

a, b

force (optional)

This parameter forces inhibition of a specified bus where an IMT Rate change sequence is in progress.

Range:

yes

no

Default:

no

Example

```
inh-imt:bus=a
```

```
inh-imt:bus=a:force=yes
```

Dependencies

Valid IMT bus entries are "A" or "B".

2247 E2247 Cmd Rej: Bus parameter invalid

The alternate IMT bus must be in-service normal (IS-NR) in order for the specified bus to be inhibited.

2738 E2738 Cmd Rej: Can not inhibit IMT bus - alternate bus is in abnormal state

This command cannot be entered during an IMT Fault Isolation Test or an Extended Bit Error Rate Test (BERT).

3043 E3043 Cmd Rej: IMT test in progress

The `force=yes` parameter must be specified to inhibit a bus where an IMT Rate Change sequence is in progress.

5379 E5379 Cmd Rej: IMT Rate Change sequence is in progress on the specified bus

If an IMT Rate Change sequence is in progress on the alternate bus, then this command cannot be entered.

5380 E5380 Cmd Rej: IMT Rate Change sequence is in progress on the alternate bus

Notes

Cards not connected to the other IMT bus will reinitialize.

All traffic is rerouted to the alternate IMT bus.

The function of this command is the same as the `rmv-imt` command.

Output

```
inh-imt:bus=a
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0  
Inhibit IMT Bus A command issued
```

```
rlghncxa03w 04-01-07 13:12:41 EST EAGLE 31.3.0  
3116.0098 IMT BUS A IMT inhibited
```

```
;
```

Related Topics

- [alw-imt](#)
- [clr-imt-stats](#)
- [conn-imt](#)
- [disc-imt](#)
- [rept-imt-lvl1](#)
- [rept-imt-lvl2](#)
- [rept-stat-imt](#)
- [rmv-imt](#)
- [rst-imt](#)

4.1.373 inh-map-ss

Use this command to shut down (inhibit) a mated application subsystem. Currently, the AIQ, ATINPQ, EIR, INP, INPQS, LNP, and V-Flex and subsystems can be inhibited. The specified subsystem attempts a coordinated shutdown. If the coordinated shutdown fails, a UIM is issued indicating the shutdown failed. If the `force` parameter

is specified, the subsystem is forced to shut down, and a coordinated shutdown is not performed.

Parameters

ssn (mandatory)

The AIQ, ATINPQ, EIR, INP, LNP or V-Flex subsystem number.

Range:

2 - 255

force (optional)

This parameter forces the shutdown of the AIQ, ATINPQ, EIR, INP, LNP or V-Flex subsystem.

Range:

yes

no

Default:

no

Example

```
inh-map-ss:ssn=10
```

```
inh-map-ss:ssn=10:force=yes
```

Dependencies

The EIR, INP, LNP, or V-Flex feature must be turned on or the ANSI41 AIQ or ATINP feature must be enabled before this command can be entered.

3929 E3929 Cmd Rej: LNP/INP/EIR/VFLEX must be ON or ATINP/AIQ must be enabled

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The specified `ssn` parameter value must represent the AIQ, ATINPQ, EIR, INP, LNP or V-Flex subsystem.

3581 E3581 Cmd Rej: SSN value must be LNP, INP, EIR, VFLEX, ATINPQ or AIQ SSN

The EAGLE must be configured with at least one card running the SCCP application.

2374 E2374 Cmd Rej: SCCP not Configured

Notes

If the LNPQS subsystem is disabled, any GTT requiring Message Relay is also disabled because they both use the same database. This causes the EAGLE to generate a TFP for the EAGLE CPCs. Traffic is then routed to the mate. If both Message Relay GTT and non Message Relay GTT use the same CPC, this could affect the GTT.

Table 4-39 Route Set Test When LNP is Offline

Network Management	Concerned PC	Network Management
RSP	CPC	TFA concerning CPC
RSP	LNP CPC	None
RSP	TPC	TFA concerning TPC
RSR	CPC	TFA concerning CPC
RSR	LNP CPC	TFP concerning LNP CPC
RSR	TPC	TFA concerning TPC

Table 4-40 shows what actions the system takes when LNP is offline and a message arrives requiring LNP. This table assumes that SCCP cards are available.

Table 4-40 Receiving Messages when LNP is Offline

Routing Indicator in Incoming Message	DPC	Result of GTT	Message Handling	Network Management
rt-on-gt	Capability PC	rt-on-ssn, LNP subsystem	Reroute to mate	TFP concerning CPC
rt-on-gt	True PC	rt-on-ssn, LNP subsystem	Reroute to mate	None
rt-on-gt	Capability PC	Message Relay required	Generate UDTS	TFP concerning CPC
rt-on-gt	True PC	Message Relay required	Generate UDTS	None
rt-on-ssn	Capability PC	Not applicable	Generate UDTS	None
rt-on-ssn	True PC	Not applicable	Generate UDTS	SSP concerning True PC

Output

```
inh-map-ss:ssn=30
```

```
rlghncxa03w 04-02-24 10:37:22 EST EAGLE5 31.0.0
Inhibit map subsystem command sent to all SCCP cards.
Command Completed.
```

```
;
```

```
inh-map-ss:ssn=30:force=yes
```

```
rlghncxa03w 04-02-24 10:37:22 EST EAGLE5 31.0.0
Inhibit map subsystem command sent to all SCCP cards.
Command Completed.
```

```
;
```

Related Topics

- [alw-map-ss](#)
- [rept-stat-lnp](#)
- [rept-stat-sccp](#)

4.1.374 inh-slk

Use this command to prevent message signal units (MSU) from being transmitted on a specified, previously uninhibited signaling link.

**Note:**

The signaling link's inhibited status is not preserved across a LIM reboot.

Parameters**link (mandatory)**

The signaling link on the card that is specified in the `loc` parameter. The links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all `link` parameter values.

See [Table A-1](#) for valid `link` parameter range values for each type of card that can have a location specified in the `loc` parameter.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
inh-slk:loc=1307:link=b
```

Dependencies

A card location must be specified that is valid and defined in the database.

2376 E2376 Cmd Rej: Specified LOC is invalid

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The card must be equipped and must be one of the following cards:

- E5-E1T1-B, card running the SS7ANSI or CCS7ITU application
- E5-ATM-B card running the ATMANSI or ATMITU application
- E5-ENET-B card running the IPLIMI, or IPSP application
- SLIC card running the IPSP application

2101 E2101 Cmd Rej: Card location is unequipped

The card must contain signaling links.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

The signaling link must be equipped in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

If an IPSP-M3UA signaling link is used, then this command cannot be entered.

4077 E4077 Cmd Rej: Parameters incompatible with adapter type

This command is not valid for E5-ENET-B cards with IPGWI links.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

If an ATM card is used, then a valid value must be specified for the `link` parameter:

- `a-a1`, `b`—E5-ATM-B card running the ATMANSI or ATMITU application

2972 E2972 Cmd Rej: Specified Link is not valid for Card and Appl Type

This command is not supported for links associated with J7 APCs.

2810 E2810 Cmd Rej: Command is not valid for ITU-N16 links.

This command is not valid for IPSP-M3UA signaling links.

4813 E4813 Cmd Rej: Command not valid for IPSP-M3UA

Notes

If the link is already inhibited, the system does not execute the command.

If the link is aligned, it attempts to perform a changeover to alternate links. If it is not aligned, it cannot carry traffic.

If the link is the last link in the linkset, or if the node assigned to the link is inaccessible by another route, then the SS7 changeover procedure cannot occur, the inhibit request is denied, and UIM 1150 is issued. The UIM can be retrieved from the logs or from a terminal with the appropriate TRM settings.

If the `inh-slk` command is followed by the `init-card` command, the inhibition of the signaling link is not preserved after the `init-card` command completes.

The `inh-slk` command might time out if a far-end remote does not respond to the inhibit message.

Output

```
inh-slk:loc=1301:link=a
```

```
rlghncxa03w 05-01-07 11:11:28 EST EAGLE5 33.0.0  
Inhibit Link message sent to card  
;
```

Related Topics

- [act-slk](#)
- [blk-slk](#)
- [dact-slk](#)
- [dlt-slk](#)
- [ent-slk](#)
- [rept-stat-slk](#)
- [rtrv-slk](#)
- [tst-slk](#)
- [ublk-slk](#)
- [unhb-slk](#)

4.1.375 inh-trm

Use this command to set the primary state of a serial port to OOS-MT-DSBLD . It sets the secondary state to MANUAL . The serial port is not available to perform service functions. There is no outgoing traffic from the serial port, and all incoming traffic is ignored.

Parameters

trm (mandatory)

The ID of serial port to be inhibited

Range:

1 - 40

force (optional)

This parameter forces the removal of a specified terminal, even if it is last in-service SEAS terminal available.

Range:

yes

no

Default:

no

Example

```
inh-trm:trm=5  
inh-trm:trm=1:force=yes
```

Dependencies

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The IP User Interface feature must be enabled before terminal ports 17 through 40 can be specified for the `trm` parameter.

2365 E2365 Cmd Rej: TELNET Feature must be activated first

The terminal specified by the `trm` parameter must be equipped.

2372 E2372 Cmd Rej: Terminal is not equipped

This command cannot be used to inhibit the terminal from which the command is entered.

3473 E3473 Cmd Rej: The last active serial port cannot be inhibited

The `force=yes` parameter must be specified to inhibit the last in-service SEAS terminal.

4478 E4478 Cmd Rej: Force must be specified to inhibit the last SEAS terminal

Notes

When inhibiting an already inhibited terminal, a warning message is echoed to the scroll area, but no action is taken.

Output

```
inh-trm:trm=5  
  
rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0  
Inhibit message sent to terminal  
;  
  
inh-trm:trm=17:force=yes  
  
tekelecstp 07-01-23 18:46:01 EST  EAGLE 37.5.0  
Inhibit message sent to terminal  
;
```

Related Topics

- [act-echo](#)
- [alw-trm](#)
- [canc-echo](#)

- [chg-trm](#)
- [dact-echo](#)
- [rept-stat-trm](#)
- [rmv-trm](#)
- [rst-trm](#)
- [rtrv-trm](#)

4.1.376 init-card

Use this command to cause a soft reset of a card. It has the same result as a hard reset (card boots, application, and data load), except that connect status is not affected; that is, if a card is not connected, it stays that way.

When the command is issued, there is a 10-second wait before the card is reset. This wait period is intended to ensure that all database updates are complete before the card is reset.

▲ Caution:

Resetting more than 8 Service Module cards at once may result in an extended reload time for the Service Module cards.

Parameters

app1 (optional)

Application. The type of application residing on the card.

▲ Caution:

Because the `app1` parameter causes all LIMs running the assigned application to reload, it should be used only during periods of low traffic.

Range:

xyyyyyy

1 alphabetic character followed by up to 6 alphanumeric characters. Valid applications are:

all—Used to reset EAGLE cards. Cannot be specified unless `serial=yes` is also specified.

atmansi—Used by E5-ATM-B cards to support high-speed ATM signaling links and T1 functions.

atmitu—Used by E5-ATM-B cards to support E1 high-speed signaling links and E1 functions.

ccs7itu—Used by E5-E1T1-B cards for ITU-TSS MTP functions.

deirhc—Used by E5-SM8G-B and SLIC cards to support the S13/S13' EIR feature.

enumhc—Used by E5-SM8G-B and SLIC cards to support the ENUM application.

eroute—Used by E5-ENET-B cards for EAGLE 5 Integrated Monitoring Support functions.

gls—Used by E5-TSM cards for downloading gateway screening to LIM cards and Service Module cards.

ipgwi—Used by E5-ENET-B cards for point-to-multipoint IP connectivity for ITU point codes. The system allows a maximum of 125 cards to be assigned the IPGWI application.

iplimi—Used by E5-ENET-B cards for point-to-point IP connectivity for ITU point codes.

ips—Used by E5-IPSM and E5-ENET-B cards for the IP User Interface feature.

ipsg—Used by E5-ENET-B cards to support the combined functionality of IPLIMx M2PA and IPGWx M3UA.

mcp—Used by E5-MCPM-B cards for the Measurements Platform feature

oam—Used by both MASP Cards running GPLs that support the OAM application

siphc—Used by E5-SM8G-B and SLIC Cards to support SIP application

ss7ansi—Used by E5-E1T1-B cards for the MTP functions

ss7ipgw—Application software for point-to-multipoint IP connectivity. The system allows a maximum of 125 cards to be assigned the SS7IPGW application.

vsccp—Used by Service Module cards to support EPAP-based features and LNP features. If no EPAP-based features or LNP features are turned on, and a Service Module card is present, the *vsccp* application processes normal GTT traffic.

Default:

The application assigned to the card

data (optional)

High memory refresh. This parameter causes data to be reloaded to the specified card.



Note:

The LNP feature or an EPAP-based feature must be turned on or the ATINP feature must be enabled before this parameter can be specified. This parameter applies only to Service Module cards that (1) run the VSCCP application and contain an RTDB or (2) run the DEIRHC application.

Range:

refresh

Causes data to be reloaded to the specified card.

persist

Indicates that the database is not to be reloaded to the card. Used to request that the EAGLE perform a warm restart of the requested cards. The EAGLE performs various checks to ensure that all conditions necessary to initiate the warm restart are in place. The *force* parameter is required if all of the specified cards do not meet the warm restart requirements. During the card initialization and loading sequence, a warm restart is performed for all cards that meet the warm restart conditions.

Default:

refresh

force (optional)

Force indicator. Enables the command to be processed under the following conditions:

- If `serial=yes` and all cards of the specified GPL type are not IS-NR or OOS-MT-DSBLD.
- If `initclk=yes` and the TDM card specified in the `loc` parameter is the only good HS clock source that is currently active. A temporary clock outage will occur.
- If `initclk=yes` and `appl=oam` is specified (bitfiles on both TDMs will be initialized). A temporary clock outage will occur.

Range:**yes****no****Default:***no***initclk (optional)**

Initialize TDM Bitfile indicator. If TDM reload would cause a system clock outage, the `initclk` parameter cannot be specified unless `force=yes` is also specified.

▲ Caution:

The resulting clock outage will probably cause loss of traffic on all links.

The following scenarios will cause such clock outages:

- Simplex MASP configuration (a system with a single TDM).
- Bad clock status on the remaining TDM.

Range:*yes, no*

If `initclk=yes` is specified with a single TDM card location, the bitfile for the specified TDM reloads.

If `initclk=yes` is specified with `appl=oam` and `force=yes`, the bitfile reloads on both TDMs.

loc (optional)

Card address. The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1116, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2301 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

When the `initclk` parameter is not specified, the listed card locations are valid.

When the `initclk` parameter is specified, card locations 1113, 1114, 1115, and 1116 are valid.

Entering locations 1114 and 1116 results in the same action as entering 1113 and 1115.

Default:

All valid card locations are initialized.

perdata (optional)

Persist a particular DB type on all cards (irrespective of the card's type).

Range:

all

Persist all data (GTT/MPS) that can be persisted on the card

mps

Persist only MPS data on the card that supports persistence of MPS DB

gtt

Persist only GTT data on the card that supports persistence of GTT DB

Default:

all

**Note:**

The `perdata` parameter can only be specified where `data=persist` is given.

prtnggrp (optional)

Partition group. The disk partition group that is used as the source for downloading the appropriate GPL.

A value of 1113 or 1115 must be specified for the `loc` parameter before this parameter can be specified.

Range:

active

the active partition group

inactive

the inactive partition group

Default:

active

serial (optional)

Controls the manner in which cards are initialized.

Range:

yes

cards of the specified APPL type are initialized one at a time

no

cards of the specified APPL type are initialized simultaneously

Default:

no

type (optional)

SM Type. The type of RTDB data that can be loaded on an E5-SM8G-B or SLIC card.

Range:***dn***

initialize SM cards running the SIP64, ENUM64 or SCCP64 gpl, with SM type DN.

elap

initialize SM cards running the SIP64 or SCCP64 gpl, with SM type ELAP.

epap

initialize SM cards running the SIP64, ENUM64, DEIR64, or SCCP64 gpl, with SM type EPAP.

gtt

initialize SM or SLIC cards running the SCCP64, GTT enabled IPSPG gpl, with SM type GTT.

imsi

initialize SM cards running the DEIR64 or SCCP64 gpl, with SM type IMSI.

nosccp

initialize the SLIC card running the IPSPG application having no GTT functionality.

Default:

none

Example

```
init-card:loc=1113:prtnggrp=inactive
init-card:loc=1101:data=persist
init-card:loc=1113:initclk=yes
init-card:appl=oam:initclk=yes:force=yes
init-card:appl=ipsg
init-card:type=epap
init-card:appl=deirhc
init-card:appl=deirhc:data=persist
init-card:appl=enumhc
init-card:appl=ipsg:type=gtt
init-card:appl=ipsg:type=nosccp
init-card:appl=ipsg:data=persist:perdata=gtt
```

Dependencies

The shelf and card must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The `loc` or `appl` or `type` parameter must be specified in the command. The parameters cannot be specified together in the command, except for when `appl=ipsg`.

This command cannot be entered when CAT2 IPSM to OAM syncing is in progress.

3652 E3652 Cmd Rej: IPSM to OAM SYNC in progress

 **Note:**

An exception to this MTT is when `appl=ipsg`. In this case, it is possible to specify the 'type' parameter. The legal values of the 'type' parameter with `appl=ipsg` are `type=gtt` (Initialize all GTT-enabled IP SG cards) and `type=nosccp` (Initialize all GTT-disabled IP SG cards).

3104 E3104 Cmd Rej: Either LOC or APPL or TYPE must be specified

The following card locations (`loc` parameter) are not allowed for this command: 1117, 1118, and all `xy09` and `xy10` card locations (where `x` is the frame and `y` is the shelf).

N/A N/A

If the `loc` and `initclk` parameters are specified, the `loc` parameter value must be card location 1113 or 1115. If the `appl` and `initclk` parameters are specified, the `appl` parameter value must be `oam`.

2235 E2235 Cmd Rej: Card location must be 1113 or 1115, or APPL=(E)OAM

The `force` parameter must be specified for the cards that are not in the In-service Normal state.

3728 E3728 Cmd Rej: Card(s) not in-service normal - FORCE parameter required

The `serial` parameter is valid only when used with the `appl` parameter.

3775 E3775 Cmd Rej: SERIAL param valid only with APPL param

The `appl=all` parameter can be specified only when the `serial=yes` parameter is also specified.

3777 E3777 Cmd Rej: APPL=ALL can only be selected when SERIAL=YES is specified

A valid value must be specified for the `appl` parameter.

3710 E3710 Cmd Rej: APPL not valid for command

The `initclk`, `appl`, and `data` parameters must be specified before the `force` parameter can be specified.

3847 E3847 Cmd Rej: FORCE valid only with APPL, DATA or INITCLK parameters

The `data` parameter is valid only for SCCP card locations or GPLs/MPS database (VSCCP) card locations or GPLs/SIP/ENUM/DEIR card locations, GPLs, or GTT-enabled IP SG card locations.

3852 E3852 Cmd Rej: Specified APPL/LOC/TYPE not supported with DATA parameter

The card location (`loc`) must be within the allowed range.

2016 E2016 Cmd Rej: `<parm_desc>` is out of range - `<parm>`

The specified card must exist in the card database and must be a logical processing element.

2270 E2270 Cmd Rej: Card does not exist or is not an LPE

An EPAP-based feature or an LNP feature that is warm-restart-capable must be enabled, or SIP or DEIR must be enabled, or at least one ENUM card or one GTT-enabled IPSP card must be present before this command can be entered with the `data=persist` parameter.

2592 E2592 Cmd Rej: Warm Restart capable Feature must be enabled

If the `serial=yes` parameter is specified, the `appl` parameter must specify a network type application value or must be equal to *all*.

3776 E3776 Cmd Rej: Invalid APPL selection for SERIAL init card command

A primary Service Module card must be provisioned.

3112 E3112 Cmd Rej: Loading Mode unstable due to SCCP service is deficient

The link interface module service cannot be loaded due to non availability of the system resources.

3111 E3111 Cmd Rej: Loading Mode unstable. System's LIM service is unavailable

The command cannot be executed if system maintenance is in progress.

3110 E3110 Cmd Rej: Loading Mode unstable due to maint. baseline not established

The A-Port, EIR, G-Flex, G-Port, INP, IS41 GSM Migration (IGM), LNP ELAP Configuration, PPSMS, Prepaid IDP Relay Query (IDP Relay), or V-Flex feature must be turned on, or the ATINP feature must be enabled before the `data` parameter can be specified.

2592 E2592 Cmd Rej: Warm Restart capable Feature must be enabled

If a removable drive is inserted in the system, then the `prtnggrp=inactive` parameter cannot be specified.

4851 E4851 Cmd Rej: Removable media can not be inserted

The `loc` parameter must be specified with a value of 1113 or 1115 before the `prtnggrp` parameter can be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If an Extended BERT is running, the `appl` parameter cannot be specified in this command to initialize multiple cards.

3043 E3043 Cmd Rej: IMT test in progress

If type specified is *epap*, *elap* or *gtt* for VSCCP, then the Dual ExAP Config, SIPNP or DEIR feature must be enabled. For `appl=ipsg` and `type=gtt`, no such features must be enabled.

3115 E3115 Cmd Rej: Dual ExAP Config/SIPNP/DEIR Feature must be enabled

If type specified is *imsi* or *dn* for VSCCP, then the EPAP Data Split feature must be ON.

5413 E5413 Cmd Rej: EPAP Data Split feature must be turned on

The `data` parameter can only be specified for VSCCP/SIPHC/IPSG Application cards.

 **Note:**

The `data` parameter is valid only for SLIC IPSG cards and not for ENET/ENET-B IPSG cards.

5414 E5414 Cmd Rej: DATA parm must be specified with VSCCP/ SIPHC/IPSG Appl

If the IPSG application is running with SLIC H/W on the location specified by the `loc` parameter, then `type=gtt` and `type=nosccp` are the only valid values of the `type` parameter. For any other APPL, `type=nosccp` is an invalid value of the `type` parameter.

5474 E5474 Cmd Rej: Card does not support specified data type

The `perdata` parameter is only valid when `data=persist` and the `loc/appl` parameter is specified. The `type` parameter with `perdata` is redundant and not allowed.

 **Note:**

- The card at the specified `loc` must either run the IPSG32 GPL or VSCCP application
- The card `appl` specified must either be IPSG or VSCCP

3513 E3513 Cmd Rej: Invalid parameter combination with PERDATA param

With IPSG/VSCCP application, the `type` parameter is allowed. For `appl=ipsg`, `type` can be `nosccp/gtt` only. And, for `appl=vsccp`, `type` can be `dn/imsi/epap/elap/gtt` only.

3520 E3520 Cmd Rej: Invalid TYPE and APPL combination

The `init-card` command cannot be issued when SFAPP(P)->OAM sync is ON.

3637 E3637 Cmd Rej: Turn OFF SFAPP(P)->OAM sync before this command

Notes

The TDM card has a processor but no application.

If the `type` specified is `gtt` in the `init-card` command and only a GTT-enabled IPSG card is present in system, then the MTT 3115 will not be observed, as there is no dependency of the Dual ExAP feature on GTT-enabled IPSG card.

Table 4-41 Using init-card Parameters

SCENARIO	INIT COMMAND
Cold boot all VSCCP cards	<code>init-card:appl=vsccp</code>

Table 4-41 (Cont.) Using init-card Parameters

SCENARIO	INIT COMMAND
Cold boot all GTT-enabled IPSPG cards	<code>init-card:appl=ipsg:type=gtt</code>
Cold boot all GTT-disabled IPSPG cards	<code>init-card:appl=ipsg:type=nosccp</code>
Warm boot all GTT-enabled IPSPG cards	<code>init-card:appl=ipsg:type=gtt:data=persist:perdata=gtt</code>
Warm boot a GTT-enabled IPSPG card location (e.g., 1106)	<code>init-card:loc=1106:data=persist:perdata=gtt</code>
Warm boot all cards of the specified application that have ExAP/DN/IMSI data (e.g., vsccp)	<code>init-card:appl=vsccp:type=dn:data=persist:perdata=mps</code>
Warm boot a card that has MPS and/or GTT data (e.g., 1106)	<code>init-card:loc=1106:data=persist:perdata=all</code>
Boot all IPSPG cards and persist GTT data on all GTT-enabled IPSPG cards	<code>init-card:appl=ipsg:data=persist:perdata=gtt</code>
Boot all SCCP cards and persist whatever data is on those cards	<code>init-card:appl=vsccp:data=persist:perdata=all</code>

Output

```
init-card:loc=1201

Init Card command issued to card 1201

3021.0013 * CARD 1201 CCS7ITU      Card is isolated from the system

3022.0201 * SLK 1201,A lsnssp2    SLK unavailable for traffic
          SLC=0      FECLLI=-----

3023.1201 * SLK 1201,B lsnstpi    SLK unavailable for traffic
          SLC=0      FECLLI=-----

;

init-card:appl=all:serial=yes

Command entered at terminal #3.
Init Card command issued to card 1201

* 3021.0013 * CARD 1201 SS7ANSI    Card is isolated from the system
** 3022.0236 ** SLK 1201,A lsnssp2 REPT-LKF: not aligned
          SLC=0      FECLLI=-----          CLASS=MTP2

3023.0014  CARD 1201 SS7ANSI      Card is present
```

```
3024.0200    SLK 1201,A lsnssp2    RCVRV-LKF: link available
              SLC=0      FECLLI=-----          CLASS=MTP2

Init Card command issued to card 1202

*   3026.0013 * CARD 1202 ATMANSI    Card is isolated from the
system

**  3026.0236 ** SLK 1202,A lsnssp3    REPT-LKF: not aligned
              SLC=0      FECLLI=-----          CLASS=SAAL

3027.0014    CARD 1202 ATMANSI    Card is present

3028.0200    SLK 1202,A lsnssp3    RCVRV-LKF: link available
              SLC=0      FECLLI=-----          CLASS=SAAL
;

init-card:loc=1101:data=refresh

Command entered at terminal #10.
Init Card command issued to card 1101
**  1127.0013 ** CARD 1101 SSCP      Card is isolated from the
system
              ASSY SN:  97361659

1128.0329    SSCP SYSTEM          SSCP capacity normal, card(s)
abnormal

1129.0014    CARD 1101 SSCP      Card is present
              ASSY SN:  97361659

1234.1238    SYSTEM              INFO Full LNP database reload initiated:
CARD=1101    GPL=SCCP          CAUSE=USER REQUEST
Report Date: 00-02-24 Time: 16:27:19

5402.1241    SYSTEM              INFO REPT EVT: LNP Incremental Loading.
database levels loaded :      0 of  1145
Report Date: 00-02-24 Time: 16:52:04

1234.1239    SYSTEM              INFO LNP updates inhibited: loading
stability
Report Date: 00-02-24 Time: 16:52:07

1234.1240    SYSTEM              INFO LNP updates allowed: loading
stability
Report Date: 00-02-24 Time: 16:52:09

1130.0096    CARD 1101 SSCP      Card has been reloaded

1131.0328    SSCP SYSTEM          SSCP is available
;
```



```
init-card:loc=1115:initclk=yes

tekelecstp 04-07-17 13:01:59 EST EAGLE 31.6.0
Init Card command issued to card 1115
;

tekelecstp 04-07-17 13:01:59 EST EAGLE 31.6.0
* 3021.0013 * CARD 1115 OAMHC      Card is isolated from the system
;

tekelecstp 04-07-17 13:03:10 EST EAGLE 31.6.0
3022.0014   CARD 1115 OAMHC      Card is present
          ASSY SN: 1216115
;

init-card:appl=siphc

tekelecstp 12-07-09 19:08:39 EST EST EAGLE 45.0.0
init-card:appl=siphc
Command entered at terminal #18.
;

Command Accepted - Processing
tekelecstp 12-07-09 19:08:39 EST EST EAGLE 45.0.0
Init Card command issued to card 1101
;

tekelecstp 12-07-09 19:08:39 EST EST EAGLE 45.0.0
Initialized all SIPHC cards.
;

Command Executed

Report Date:02-13-06 Time:17:09:52
;

tekelecstp 12-07-09 19:08:39 EST EST EAGLE 45.0.0
** 2167.0013 ** CARD 1101 SIPHC      Card is isolated from the system;

tekelecstp 12-07-09 19:08:39 EST EST EAGLE 45.0.0
2168.0014   CARD 1101 SIPHC      Card is present

tekelecstp 12-07-09 19:08:39 EST EST EAGLE 45.0.0
2169.0096   CARD 1101 SIPHC      Card has been reloaded

;

init-card:appl=deirhc

eagle7 13-06-21 10:05:10 MST EAGLE 45.1.0
init-card:appl=deirhc:data=persist
Command entered at terminal #18.
;
```

```
Command Accepted - Processing
  eagle7 13-06-21 10:15:11 MST  EAGLE 45.1.0
  Init Card command issued to card 1207
;
  eagle7 13-06-21 10:15:11 MST  EAGLE 45.1.0
  Init Card command issued to card 1217

  eagle7 13-06-21 10:15:11 MST  EAGLE 45.1.0
  Initialized all DEIRHC cards.
;
Command Executed
  eagle7 13-06-21 10:15:14 MST  EAGLE 45.1.0
** 6738.0013 ** CARD 1207 DEIRHC      Card is isolated from the
system
          ASSY SN: 10209135227
;
  eagle7 13-06-21 10:15:14 MST  EAGLE 45.1.0
*C 6739.0483 *C DEIR SYSTEM          DEIR System is not available
;
  eagle7 13-06-21 10:15:14 MST  EAGLE 45.1.0
** 6740.0539 ** ENET 1207,A        Ethernet Interface Down
;
  eagle7 13-06-21 10:15:15 MST  EAGLE 45.1.0
** 6741.0539 ** ENET 1207,B        Ethernet Interface Down
;
  eagle7 13-06-21 10:15:15 MST  EAGLE 45.1.0
** 6742.0084 ** DLK 1207,A  DEIRHC  IP Connection Unavailable
          Failed Channels:  Prov  Dnld  UDP
;
  eagle7 13-06-21 10:15:15 MST  EAGLE 45.1.0
** 6743.0013 ** CARD 1217 DEIRHC      Card is isolated from the
system
          ASSY SN: 10208097026
;
  eagle7 13-06-21 10:15:15 MST  EAGLE 45.1.0
** 6744.0539 ** ENET 1217,A        Ethernet Interface Down
;
  eagle7 13-06-21 10:15:16 MST  EAGLE 45.1.0
** 6745.0539 ** ENET 1217,B        Ethernet Interface Down
;
  eagle7 13-06-21 10:15:16 MST  EAGLE 45.1.0
** 6746.0084 ** DLK 1217,A  DEIRHC  IP Connection Unavailable
          Failed Channels:  Prov  Dnld  UDP
;
  eagle7 13-06-21 10:16:01 MST  EAGLE 45.1.0
  6757.0014      CARD 1217 DEIRHC      Card is present
          ASSY SN: 10208097026
;
  eagle7 13-06-21 10:16:01 MST  EAGLE 45.1.0
  6759.0014      CARD 1207 DEIRHC      Card is present
          ASSY SN: 10209135227
;
  eagle7 13-06-21 10:23:01 MST  EAGLE 45.1.0
  6834.1238      SYSTEM      INFO      Full database reload initiated:
          CARD=1207      GPL=DEIRHC      CAUSE=USER REQUEST
```

```
Report Date:13-06-21 Time:10:17:59
;
eagle7 13-06-21 10:18:45 MST EAGLE 45.1.0
6768.0540 ENET 1207,A Ethernet Interface Up
;
eagle7 13-06-21 10:18:46 MST EAGLE 45.1.0
6769.0540 ENET 1207,B Ethernet Interface Up
;
eagle7 13-06-21 10:23:01 MST EAGLE 45.1.0
6834.1238 SYSTEM INFO Full database reload initiated:
CARD=1217 GPL=DEIRHC CAUSE=USER REQUEST
Report Date:13-06-21 Time:10:18:46
;
eagle7 13-06-21 10:18:46 MST EAGLE 45.1.0
6770.0085 DLK 1207,A DEIRHC IP Connection Available
;
eagle7 13-06-21 10:18:46 MST EAGLE 45.1.0
6771.0540 ENET 1217,A Ethernet Interface Up
;
eagle7 13-06-21 10:18:46 MST EAGLE 45.1.0
6772.0540 ENET 1217,B Ethernet Interface Up
;
eagle7 13-06-21 10:18:47 MST EAGLE 45.1.0
6773.0085 DLK 1217,A DEIRHC IP Connection Available
;
eagle7 13-06-21 10:19:02 MST EAGLE 45.1.0
6777.0096 CARD 1207 DEIRHC Card has been reloaded
;
eagle7 13-06-21 10:19:05 MST EAGLE 45.1.0
6775.0485 DEIR SYSTEM DEIR System is available
;
eagle7 13-06-21 10:19:06 MST EAGLE 45.1.0
6778.0096 CARD 1217 DEIRHC Card has been reloaded
;

init-card:appl=deirhc:data=persist

eagle7 13-06-21 10:05:10 MST EAGLE 45.1.0
init-card:appl=deirhc:data=persist
Command entered at terminal #18.
;

eagle7 13-06-21 10:05:11 MST EAGLE 45.1.0
Verifying card(s) persistent database - please wait
;
Command Accepted - Processing
eagle7 13-06-21 10:05:11 MST EAGLE 45.1.0
Init Card command issued to card 1207
;
eagle7 13-06-21 10:05:11 MST EAGLE 45.1.0
Init Card command issued to card 1217

eagle7 13-06-21 10:05:11 MST EAGLE 45.1.0
```

```
        Initialized all DEIRHC cards.
;
Command Executed
  eagle7 13-06-21 10:05:14 MST  EAGLE 45.1.0
** 6738.0013 ** CARD 1207 DEIRHC      Card is isolated from the
system
          ASSY SN: 10209135227
;
  eagle7 13-06-21 10:05:14 MST  EAGLE 45.1.0
*C 6739.0483 *C DEIR SYSTEM          DEIR System is not available
;
  eagle7 13-06-21 10:05:14 MST  EAGLE 45.1.0
** 6740.0539 ** ENET 1207,A          Ethernet Interface Down
;
  eagle7 13-06-21 10:05:15 MST  EAGLE 45.1.0
** 6741.0539 ** ENET 1207,B          Ethernet Interface Down
;
  eagle7 13-06-21 10:05:15 MST  EAGLE 45.1.0
** 6742.0084 ** DLK 1207,A  DEIRHC  IP Connection Unavailable
          Failed Channels:  Prov  Dnld  UDP
;
  eagle7 13-06-21 10:05:15 MST  EAGLE 45.1.0
** 6743.0013 ** CARD 1217 DEIRHC      Card is isolated from the
system
          ASSY SN: 10208097026
;
  eagle7 13-06-21 10:05:15 MST  EAGLE 45.1.0
** 6744.0539 ** ENET 1217,A          Ethernet Interface Down
;
  eagle7 13-06-21 10:05:16 MST  EAGLE 45.1.0
** 6745.0539 ** ENET 1217,B          Ethernet Interface Down
;
  eagle7 13-06-21 10:05:16 MST  EAGLE 45.1.0
** 6746.0084 ** DLK 1217,A  DEIRHC  IP Connection Unavailable
          Failed Channels:  Prov  Dnld  UDP
;
  eagle7 13-06-21 10:06:01 MST  EAGLE 45.1.0
  6757.0014   CARD 1217 DEIRHC      Card is present
          ASSY SN: 10208097026
;
  eagle7 13-06-21 10:06:01 MST  EAGLE 45.1.0
  6759.0014   CARD 1207 DEIRHC      Card is present
          ASSY SN: 10209135227
;
  eagle7 13-06-21 10:08:45 MST  EAGLE 45.1.0
  6768.0540   ENET 1207,A          Ethernet Interface Up
;
  eagle7 13-06-21 10:08:46 MST  EAGLE 45.1.0
  6769.0540   ENET 1207,B          Ethernet Interface Up
;
  eagle7 13-06-21 10:08:46 MST  EAGLE 45.1.0
  6770.0085   DLK 1207,A  DEIRHC  IP Connection Available
;
  eagle7 13-06-21 10:08:46 MST  EAGLE 45.1.0
  6771.0540   ENET 1217,A          Ethernet Interface Up
```

```
;
eagle7 13-06-21 10:08:46 MST EAGLE 45.1.0
6772.0540 ENET 1217,B Ethernet Interface Up
;
eagle7 13-06-21 10:08:47 MST EAGLE 45.1.0
6773.0085 DLK 1217,A DEIRHC IP Connection Available
;
eagle7 13-06-21 10:09:02 MST EAGLE 45.1.0
6777.0096 CARD 1207 DEIRHC Card has been reloaded
;
eagle7 13-06-21 10:09:05 MST EAGLE 45.1.0
6775.0485 DEIR SYSTEM DEIR System is available
;
eagle7 13-06-21 10:09:06 MST EAGLE 45.1.0
6778.0096 CARD 1217 DEIRHC Card has been reloaded
;

init-card:type=elap

init-card:type=elap
Command entered at terminal #17.
;

Command Accepted - Processing
Init Card command issued to card 1205
;

Initialized all ELAP cards.
6160.0013 ** CARD 1205 VSCCP Card is isolated from the system
6161.0331 *C SCPELAP SYSTEM SCCP is not available
6162.0014 CARD 1205 SCCPHC Card is present
;
```

Related Topics

- [dlt-card](#)
- [ent-card](#)
- [init-sys](#)
- [rept-stat-card](#)
- [rmv-card](#)
- [rtrv-card](#)

4.1.377 init-ext-stats

Use this command to cause the HIPR2 cards to collect Extended Statistics for later retrieval.

Parameters

bus (optional)

The IMT bus that contains the HIPR2 card where extended statistics are collected.

Range:

a

collect statistics for HIPR2 cards on the A bus

b

collect statistics for HIPR2 cards on the B bus

both

collect statistics for HIPR2 cards on both buses

Default:

both

delay (optional)

The number of milliseconds to wait before collecting HIPR2 Extended Statistics.

Range:

0 - 10000



Note:

The specified value is automatically rounded to a 10 ms boundary.

Default:

0

e1oc (optional)

The ending card location for a range of HIPR2 cards where extended statistics are collected.



Note:

Statistics are collected from only valid In-Service Normal HIPR2 cards within the range.

Range:

1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110

Default:

6110

loc (optional)

The location of a single HIPR2 card where statistics are collected.

Range:

1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110

Default:

all HIPR2 cards within the range specified by the `sloc` and `eloc` parameters

sloc (optional)

The starting card location for a range of HIPR2 cards where extended statistics are collected.

**Note:**

Statistics are collected from only valid In-Service Normal HIPR2 cards within the location range.

Range:

1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110

Default:

1109

Example

```
init-ext-stats
init-ext-stats:bus=a
init-ext-stats:sloc=1109:eloc=1110
init-ext-stats:loc=1109
```

Dependencies

The value specified for the `loc` or `sloc` and `eloc` parameters must indicate a valid card location. See the description of the desired parameter for a list of valid values.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

The range specified by the `sloc` and `eloc` parameters must include an MUX card location.

2212 E2212 Cmd Rej: Invalid card type for this command

The value specified for the `loc` parameter must be a valid MUX card location or the range specified by the `sloc` and `eloc` parameters must include an MUX card location.

2212 E2212 Cmd Rej: Invalid card type for this command

The value specified for the `delay` parameter must be between 0 - 10000.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

A value of `a`, `b`, or `both` must be specified for the `bus` parameter.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

The `loc` parameter cannot be specified in the same command with the `sloc` and `eloc` or `bus` parameters.

2155 E2155 Cmd Rej: Invalid parameter combination specified

An `init-ext-stats` or `copy-ext-stats` command cannot already be in progress when this command is entered.

2412 E2412 Cmd Rej: Command already in progress

Output

```
init-ext-stats
```

```
e5oam 10-02-06 00:56:54 EST EAGLE 42.0.0
init-ext-stats
Command entered at terminal #6.
;

e5oam 10-02-06 00:56:54 EST EAGLE 42.0.0
INIT-EXT_STATS: Init msg sent to the following MUX cards:
  CARD Location: 1209
  CARD Location: 1210
  CARD Location: 1109
  CARD Location: 1110
;

e5oam 10-02-06 00:56:54 EST EAGLE 42.0.0
Command Completed.
;
```

Related Topics

- [copy-ext-stats](#)

4.1.378 init-flash

Use this command to load the Board PROM to the inactive FLASH memory of a specified card or range of cards. When a card is reinitialized, it runs this version of the GPL in the card's inactive FLASH memory.

Parameters

bits (optional)

This parameter must be specified for one E5-class card in conjunction with `mode=rplceb1` or `mode=cnvrtbit`. It indicates whether the bootloader or the flash image will be converted to a 32-bit or a 64-bit image. The E5-class card must be inhibited before the bootloader or the flash image can be changed through this mode.

Range:

32 - convert to a 32-bit bootloader or flash image

64 - convert to a 64-bit bootloader or flash image

boot (optional)

This parameter specifies whether the EPME5-class card should boot after the command successfully completes.

Multiple images can be flashed without having to boot after each flash. If multiple images are being flashed to the E5-class card, this parameter can be used to prevent the card from booting after each image is flashed. If multiple images are being flashed and the card is allowed to boot after each flash, an image that is not activated after the card boots will be lost on a subsequent reset of the card. This option does not apply to MUX cards or IMT Switch cards.

Range:

yes

Reboot the card after the command completes successfully

no

Do not reboot the card after the command completes successfully.

Default:

yes

For E5-class cards, if the mode parameter is not specified or if `mode=foregrnd`, `mode=imgselct` or `mode=pvjoy`, then default value of `boot` parameter is `yes`. If the mode parameter is specified for E5-class card(s) as `mode=backgrnd`, then default value of `boot` parameter is `no`.

code (optional)

The version of the GPL being loaded onto the card.

Range:

appr

The approved GPL version

trial

The trial GPL version

The code parameter must be specified if the mode parameter is not specified as `mode=imgselct`; the code parameter must not be specified if the mode parameter is specified as `mode=imgselct`.

e1oc (optional)

End location. The location of the last card of a range of cards to be initialized.

Range:

1101 - 1113, 1115, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318, 3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118

force (optional)

This parameter is required to force the flash download on the in-service card(s).

Range:

yes

no

Default:

no

gp1 (optional)

Generic program load. The flash GPL type that is running on the cards in the specified range of cards.

Range:

xyyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters.

Valid GPLs: *bldc32*, *bldc64*, *blmcap*, *blslc32*, *blslc64*, *hipr2*, and *multiple*.

Use " *gp1=multiple* " to simultaneously flash multiple E5-class cards running different GPLs, such as BLDC32, BLDC64, BLMCAP, BLSLC32, and BLSLC64. The command will then flash all E5-class cards in the specified range.

initclk (optional)

Initialize clock. If this parameter is specified, then the card location should be 1113 or 1115.

Range:

yes

no

Default:

no

loc (optional)

The location of a single card to be initialized.

Range:

1101 - 1113, 1115, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318, 3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118

mode (optional)

If this parameter is specified for the E5-class cards, it indicates that the flashing of the E5-class card or range of cards will be performed in the specified mode. This parameter can be specified only for E5-class cards.

Range:

backgrnd

In this mode, the flash image will be copied into an inactive FLASH memory area of an E5-class card or range of cards. If the E5-class card in the specified location is provisioned, the E5-class card can be flashed without inhibiting it. The image uploaded with *mode=backgrnd* will run after the card boots upon receiving the command *init-flash:mode=imgselct*.

cnvrtbit

When used with this `mode` parameter value, `init-flash` will convert the E5-class card specified with the `loc` parameter to run on either a 32-bit or 64-bit flash image. The card will start running the target 32-bit or 64-bit flash image after it boots. The E5-class card must be inhibited before it can be flashed in this mode, and the `sloc/eloc` parameters may not be used.

foregrnd

In this mode, the flash image will be copied into an inactive FLASH memory area of an E5-class card or range of cards. After the E5-class card initializes, it runs this version of the GPL in the card's inactive FLASH memory. If the E5-class card in the specified location is provisioned, the E5-class card must be inhibited before it can be flashed in this mode.

imgselct

This mode will initialize the card(s), and load & run the image previously copied to the local FLASH memory with `mode=backgrnd`. Do not use this mode unless directed by Oracle's Customer Service.

pvjoy

In this mode, the flash image will be copied into inactive FLASH memory of an E5-class card or range of cards and the card(s) will initialize. After the E5-class card initializes, it will run the version of the GPL in the card's inactive FLASH memory. If the E5-class card in the specified location is provisioned, then the E5-class card can be flashed without inhibiting the E5-class card in the specified location. Debug must be enabled on the active OAM before this mode parameter value can be specified. Do not use this mode unless directed by Oracle's Customer Service.

rplcebl

In this mode, `init-flash` will replace the bootloader in the E5-class card specified with the `loc` parameter with either a 32-bit or 64-bit bootloader image and begin using it the next time the card boots. The E5-class card must be inhibited before the bootloader can be changed through this mode, and the `sloc/eloc` parameters may not be used.

Default:
foregrnd

sloc (optional)

Start location. Location of the first card of a range of cards to be initialized.

Range:

1101 - 1113, 1115, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318,
3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 -
5118, 5201 - 5218, 5301 - 5318, 6101 - 6118

Example

```
init-flash:loc=1105:code=trial
init-flash:loc=1113:code=appr:initclk=yes
init-flash:loc=1115:code=appr:initclk=yes:force=yes
```

```

init-flash:loc=1115:code=trial:initclk=no
init-flash:sloc=1302:eloc=1306:gpl=blisim:code=appr
init-flash:sloc=6305:eloc=6305:code=appr:gpl=blispm
init-flash:sloc=1105:eloc=1306:appr:gpl=blmcap:mode=foregrnd
init-flash:loc=1205:code=appr:mode=backgrnd

init-
flash:sloc=1201:eloc=1311:code=trial:gpl=blmcap:mode=backgrnd
init-flash:sloc=1201:eloc=1311:code=trial:mode=imgselct
init-flash:loc=1301:mode=rplcebl:bits=64
init-flash:loc=1301:code=trial:mode=cnvrtbit:bits=64
init-flash:sloc=1103:eloc=1306:code=appr:gpl=blmcap

```

Dependencies

The specified card must be an E5-class card or Service Module card. A MUX card can be specified for locations xy09 and xy10 (*x* is the frame and *y* is the shelf).

2212 E2212 Cmd Rej: Invalid card type for this command

Each specified card does not have to be defined in the database, but it does have to be aligned on the IMT bus.

2269 E2269 Cmd Rej: Unable to communicate with card at location

If the card in the specified card location is provisioned, then the card must be inhibited before this command is entered (unless the card is a MUX card or E5-class card with mode set to backgrnd, imgselct or pvjoy).

2603 E2603 Cmd Rej: Card must be inhibited before executing this command

If the target card is a MUX card, then both card locations specified in the `sloc` and `eloc` parameters must contain MUX cards on the same IMT bus. For these cards, the bus is implicit based on the specified location. Location xy09 specifies the MUX A Bus, and location xy10 specifies the MUX B Bus (*x* is the frame and *y* is the shelf). For example, `sloc=1109:eloc=6109` specifies all MUX cards on the A Bus only; `sloc=1110:eloc=6110` specifies all MUX cards on the B Bus only. MUX cards from both the A bus and B bus cannot be flash downloaded simultaneously.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `boot` parameter can be specified only if the target is an E5-class card.

4029 E4029 Cmd Rej: BOOT parameter is not valid with the specified card

A card location that contains the active MASP cannot be specified for the `loc`, `sloc`, or `eloc` parameter.

3949 E3949 Cmd Rej: Specified card cannot be the Active MASP

The provisioning subsystem mode (simple, duplex) must be established prior to executing the command.

2204 E2204 Cmd Rej: Waiting for duplex mode in provisioning subsystem

The `loc` parameter cannot be specified with the `eloc` and `sloc` parameters.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `loc` parameter or the `eloc` and `sloc` parameters must be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `eloc` and `sloc` parameters are specified, the `gpl` parameter must be specified. MUX cards in the locations specified in the `sloc` and `eloc` parameters must be running the specified general program load (`gpl`). If the `GPL` specified is not multiple, then other cards in the range of card locations can be running other `GPLs`, but will not be initialized and only the cards within the range that are running the specified `GPL` will be initialized.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `sloc` parameter value must be less than the `eloc` parameter value, when the two parameters are specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The specified card cannot be running an inactive flash `GPL` when the command is executed. If the `sloc` and `eloc` parameters are specified, cards within the range running an inactive flash `GPL` will be skipped. If there are no cards in the list because all the cards are running an inactive flash `GPL`, then `UIM 1119` (example in `Notes` section) will be raised and the command will be rejected.

2212 E2212 Cmd Rej: Invalid card type for this command

If the `initclk` parameter is specified, the card location parameter value must be `1113` or `1115`.

3291 E3291 Cmd Rej: Card location specified must be an OAM card

If `TDM` reload would cause a system clock outage, the `initclk` parameter cannot be specified unless `force=yes` is also specified.

 **Caution:**

The resulting clock outage will probably cause loss of traffic on all links.

3525 E3525 Cmd Rej: Command will cause system clock outage - Use `FORCE=YES`

No other related command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

A card location that is valid and defined in the database must be specified.

2376 E2376 Cmd Rej: Specified `LOC` is invalid

The `eloc` and `sloc` parameters must be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

MUX cards specified in the `sloc` and `eloc` location parameters must be running the specified `GPL`. For other `GPLs` including multiple, all cards within the range running the specified `GPL` will be flashed.

2272 E2272 Cmd Rej: Invalid GPL type for this command

This command cannot be entered if an IMT Rate Change sequence is in progress.

5184 E5184 Cmd Rej: IMT Rate Change sequence is in progress

This command cannot be entered during an Extended Bit Error Rate Test (BERT).

3043 E3043 Cmd Rej: IMT test in progress

The boot parameter cannot be specified with the mode=backgrnd, mode=imgselct or mode=pvjoy for the E5-class card.

2155 E2155 Cmd Rej: Invalid parameter combination specified

A card location that contains the MASP cannot be specified for the sloc or eloc parameter.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The mode parameter cannot be specified with the non E5-class card.

2212 E2212 Cmd Rej: Invalid card type for this command.

The gpl=multiple parameter can be specified only if the sloc and eloc parameters are specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The gpl=multiple parameter can be specified only if the card locations in the sloc and eloc parameters are E5-class cards.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The code parameter cannot be specified with mode=imgselct parameter for the E5-class card(s). If the mode=imgselct parameter is not specified, then the code parameter must be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The GPL parameter cannot be specified when the mode=rplcebl or mode=cnvrtbit parameter is used with the E5-class card.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The mode=cnvrtbit parameter must be specified with the loc, code, and bits parameters. Any other parameters like force, boot, initclk, and sloc/eloc cannot be specified when the mode=cnvrtbit parameter is specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The mode=rplcebl parameter must be specified with the loc and bits parameters. Any other parameters like force, boot, initclk, code, and sloc/eloc cannot be specified when the mode=rplcebl parameter is specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The mode=cnvrtbit parameter can be specified only when the E5-class card is an SM8GB card type.

2212 E2212 Cmd Rej: Invalid card type for this command

The `mode=rplcebl` parameter can be specified only when the E5-class card is either an SM8GB or a SLIC card type.

2212 E2212 Cmd Rej: Invalid card type for this command

The `mode=cnvrtbit` parameter can be specified with the `bits=64` parameter only when the E5-class card is running a 32-bit flash image (i.e., either BLMCAP or BLSLC32).

2212 E2212 Cmd Rej: Invalid card type for this command

The `mode=cnvrtbit` parameter can be specified with the `bits=32` parameter only when the E5-class card is running a 64-bit flash image (as in, BLDC64).

2212 E2212 Cmd Rej: Invalid card type for this command

Notes

Card locations 1114, 1116, and 1117 are not valid and cannot be specified.

For the E5-class cards, multiple images can be flashed without having to boot the card after each flash. If multiple images are being flashed to the card the `boot=no` parameter can be used to prevent the card from booting after each image is flashed. After flashing any number of images, the card can be reset either by entering the `init-flash` command with the `boot=yes` parameter or by entering the `init-card` command. If multiple images are being flashed and the card is allowed to boot after each flash, any images that are not activated after the card boots will be lost on a subsequent reset of the card.

If E5-OAMs are being used, then the `init-flash` command can be accepted even when the cards specified in the `sloc` and `eloc` parameter range contains 1113 and/or 1115 locations in it. But the cards in 1113 and 1115 are never included in the list to flash the cards.

For example, if "`sloc=1111:eloc=1215:gpl=blmcap`", neither 1113 nor 1115 would be included in the list to flash the cards and the command will be accepted. The only way to flash an E5-OAM card is to specify `loc=1113/1115` but the card location specified cannot be the active E5-MASP.

For `mode=backgrnd` or `mode=imgselct` to be accepted, the E5-class target card must already be running a 45.0.0=64.XX.YY release version or higher.

When the `sloc` and `eloc` parameters are specified for E5-class cards and one or more cards in the range are running an inactive Flash GPL, then UIM 1119 will be raised along with the flash results. UIM 1119 will capture the first 5 card locations along with the total number of cards that have been skipped because of running an inactive Flash GPL. Example:

```
XXXX.1119    CARD <Active OAM location>    INFO    Cards out of phase with
flash procedure
           Card List: 1101, 1102, 1103, 1105, 1111, ... ( 1 others)
```

To use a 64-bit flash image, the EAGLE must be running Release 46.3 or higher. Steps for converting an E5-SM8G-B card running BLMCAP to BLDC64 GPL and vice-versa:

- Flash BLMCAP --> BLDC64:
 1. Make sure the E5-SM8G-B card is running BLMCAP Release 46.3 or higher.
 2. Replace the bootloader with the new 64-bit version:

```
init-flash:loc=xxxx:mode=rplcebl:bits=64
```

- This command will not cause the card to boot.
- If the card is already running the new bootloader, this command does nothing.

3. Flash card to BLDC64:

```
init-flash:loc=xxxx:code=yyyyy:mode=cnvrtbit:bits=64
```

4. Activate flash.

5. The card is now running the 64-bit flash image.

• **Flash BLDC64 --> BLMCAP:**

1. The card is running BLDC64.

2. Flash card to BLMCAP (Release 46.3 or higher):

```
init-flash:loc=xxxx:code=yyyyy:mode=cnvrtbit:bits=32
```

3. Activate flash.

4. The card is now running the 32-bit flash image.

SLIC cards run either the 32-bit BLSLC32 flash GPL or the 64-bit BLSLC64 flash GPL.

To convert a SLIC card from the 32-bit to the 64-bit flash image:

1. Inhibit the card:

```
inh-card:loc=xxxx:force=yes
```

The card will boot and return to state OOS-MT-DSBLD.

2. Flash the card:

```
init-flash:loc=xxxx:code=appr:64gpl=blslc64
```

The card will boot and return to state OOS-MT-DSBLD.

3. Activate the 64-bit BLSLC64 flash GPL:

```
act-flash:loc=xxxx
```

The card will now accept 64-bit application GPLs from the OAM.

To convert a SLIC card from the 64-bit to the 32-bit flash image:

1. Inhibit the card:

```
inh-card:loc=xxxx:force=yes
```

The card will boot and return to state OOS-MT-DSBLD.

2. Flash the card:

```
init-flash:loc=xxxx:code=appr:gpl=blslc32
```


The card will boot and return to state OOS-MT-DSBLD.

3. Activate the 32-bit BLSLC32 flash GPL:

```
act-flash:loc=xxxx
```

The card will now accept 32-bit application GPLs from the OAM.

Output

```
init-flash:loc=1105:code=trial
```

```
rlghncxa03w 04-01-05 13:05:05 EST  EAGLE 31.3.0  
FLASH Memory Downloading for card 1105 Started.
```

```
rlghncxa03w 04-01-05 13:05:05 EST  EAGLE 31.3.0  
BPHCAP Downloading for card 1105 Complete.
```

```
rlghncxa03w 04-01-05 13:05:05 EST  EAGLE 31.3.0  
Command Completed.
```

```
;
```

```
init-flash:loc=1113:code=appr:initclk=yes
```

```
rlghncxa03w 04-03-08 10:02:04 EST  EAGLE 31.6.0  
FLASH Memory Download for card 1113 Started.
```

```
;
```

```
rlghncxa03w 04-03-08 10:02:23 EST  EAGLE 31.6.0  
FLASH Memory Download for card 1113 Completed.
```

```
;
```

```
init-flash:sloc=1101:eloc=1112:gpl=blmcap:code=appr
```

```
tekelecstp 18-01-15 02:28:23 EST  EAGLE 46.6.0.0.0-71.5.0  
FLASH Memory Download for cards 1101 - 1112 Started.
```

```
LOC 1101 : PASSED
```

```
LOC 1102 : PASSED
```

```
LOC 1112 : PASSED
```

```
ALL CARD RESULTS PASSED
```

```
;
```

```
Command Completed.
```

Related Topics

- [act-flash](#)
- [clr-imt-stats](#)
- [flash-card](#)

- [init-imt-gpl](#)
- [rept-imt-info](#)
- [rept-imt-lvl1](#)
- [rept-imt-lvl2](#)
- [tst-imt](#)

4.1.379 init-imt-gpl

Use this command to load the specified IMT GPL software to the specified card and to reset that card. The application software is reloaded following IMT reset.

Parameters

code (mandatory)

The IMT GPL to load to the card.

Range:

appr

The approved GPL version

refresh

Reload approved GPL version without card reset

trial

The trial GPL version

loc (optional)

The location of the card to be initialized.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

Default:

All locations

Example

```
init-imt-gpl:loc=1201:code=trial
```

```
init-imt-gpl:code=refresh
```

```
init-imt-gpl:code=appr
```

Dependencies

The card location shelf must be within the allowed ranges as specified on the `loc` parameter. The shelf is the first two digits of the `loc` parameter.

N/A N/A

The card location slot must be within the allowed ranges as specified on the `loc` parameter. The slot is the second two digits of the `loc` parameter.

N/A N/A

The card location cannot contain a card with flash memory (MUX).

2212 E2212 Cmd Rej: Invalid card type for this command

When this command is entered, no other action command can be in progress.

N/A N/A

If the `code=appr` or `code=trial` parameter is specified, the `loc` parameter must be specified.

2366 E2366 Cmd Rej: LOC must be specified

If the `code=trial` parameter is specified, the `loc` parameter must be specified, and the specified card location must be equipped and in service.

2387 E2387 Cmd Rej: Card is not in service

If the `code=appr` or `code=refresh` parameter is specified, the card must be connected to at least one IMT bus and communicating with the active MASP when the command is entered.

2269 E2269 Cmd Rej: Unable to communicate with card at location

This command cannot be entered if the `clr-imt-stats`, `rept-imt-info`, `rept-imt-lvl1`, `rept-imt-lvl2`, or `tst-imt` command is running.

2368 E2368 Cmd Rej: System busy - try again later

This command must not be entered during IMT statistics collection following an hourly boundary.

N/A N/A

A card location that is valid and defined in the database must be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

This command cannot be entered during an Extended Bit Error Rate Test (BERT).

3043 E3043 Cmd Rej: IMT test in progress

Notes

None

Output

```
init-imt-gpl:loc=1201:code=trial
```

```
rlghncxa03w 04-02-27 16:53:22 EST   EAGLE 31.3.0
Initializing IMT GPL for card 1201.
```

```
rlghncxa03w 04-02-27 16:53:22 EST   EAGLE 31.3.0
* 0192.0013 * CARD 1201 SS7ANSI      Card is isolated from the system
```

```
rlghncxa03w 04-02-27 16:53:22 EST EAGLE 31.3.0
0193.0014 CARD 1201 SS7ANSI Card is present

rlghncxa03w 04-02-27 16:53:22 EST EAGLE 31.3.0
0194.0096 CARD 1201 SS7ANSI Card has been reloaded
```

;

Related Topics

- [alw-card](#)
- [inh-card](#)
- [init-card](#)
- [rept-stat-card](#)

4.1.380 init-mux

This command is used to reset an individual MUX card, or a given IMT Bus A or B (which includes all MUX cards for that bus).

The command boots the MUX card processor and brings down the respective IMT bus temporarily (approximately 10 seconds) until the MUX card(s) come back into service.

Note:

When a card is disconnected from the IMT Bus, it may take several seconds for the card IMT Status to be updated. If an `init-mux` or `disc-imt` command is entered for the alternate IMT Bus before the card IMT Status is updated, then the card may reboot. After disconnecting the card from the IMT bus, use the `rept-stat-imt` or `rept-stat-card` command to determine whether the card IMT status is updated. Do not issue the `disc-imt` or `init-mux` command for the alternate IMT bus until the card status is updated.

Parameters

bus (optional)

The MUX bus to be reset. All MUX cards on the specified bus are reset.

Range:

a

b

Default:

a

force (optional)

This parameter is specified to override normal safeguards. The `force=yes` parameter can be used to reset an entire MUX bus when the alternate bus is non-

functional or to reset one MUX card during a fault isolation test (see the `tst-imt` command).

▲ Caution:

If the `force=yes` parameter is specified, and the alternate IMT bus is OOS, then all of the cards on the IMT that are running a GPL will initialize. If one or more cards are not aligned on the alternate bus, placing the alternate IMT in IS-ANR, only the non-aligned cards will initialize. Either occurrence could result in nodal isolation.

Range:

yes

no

Default:

no

hs (optional)

This parameter is specified to set the speed of the MUX bus. If the `hs=yes` parameter is specified, the MUX bus speed is set to 2.5 Gbps. If the `hs=no` parameter is specified, the MUX bus speed is set to 1 Gbps.

Range:

yes

no

Default:

yes

loc (optional)

The location of a single MUX card to be reset.

Range:

1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110

Example

```
init-mux:bus=a
```

```
init-mux:bus=a:hs=no
```

```
init-mux:loc=1109
```

```
init-mux:loc=6202
```

Dependencies

An `act/init-flash` command cannot be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The `bus` or `loc` parameter must be specified in the command. Both parameters cannot be specified in the command.

4032 E4032 Cmd Rej: Either BUS or Location (not both) must be specified

The `hs` parameter can be specified only when the `bus` parameter is specified.

3521 E3521 Cmd Rej: HS can only be specified with BUS

The `force=yes` parameter must be specified before this command can be entered during an IMT Fault Isolation test.

This command cannot be entered during an Extended Bit Error Rate Test (BERT) even if the `force=yes` parameter is specified.

3043 E3043 Cmd Rej: IMT test in progress

This command is not allowed during the IMT statistics collection period following an hourly boundary (IMT performance monitoring).

N/A N/A

This command cannot be entered if an IMT Rate Change sequence is in progress.

5184 E5184 Cmd Rej: IMT Rate Change sequence is in progress

If one or more cards are not aligned on the alternate bus, the alternate IMT state will become IS-ANR. If the alternate bus is IS-ANR, then the `force=yes` parameter must be specified.

2371 E2371 Cmd Rej: Force parameter required

Notes

The `hs` parameter should be specified only as a tool to facilitate updating spare cards for releases that support MUX bus speeds of 2.5 Gbps only. The `hs` parameter is persistent as long as the card remains powered. If the card loses power, it will default back to 2.5 Gbps.

Output

```
init-mux:loc=1109
```

```
rlghncxa03w 05-07-13 08:15:10 EST EAGLE 31.3.0  
Command Completed.
```

```
;
```

Related Topics

- [act-flash](#)
- [init-flash](#)

4.1.381 init-network

Use this command to reset all the network cards. The network cards are E5- TSMs and LIMs; that is, anything not part of the Maintenance and Administration Subsystem

(MAS). This command resets all the network cards by reloading GPLs and data to the cards. Use of this command requires maintenance personnel to be located at the site.

▲ Caution:

Using this command causes network nodal isolation; however, if the network nodal isolation is less than two seconds, it may not be detected and may not be reported. Also, in some cases when network nodal isolation has been detected and a large number of maintenance troubles are being reported, the network nodal isolation message may not be reported. An alarm is generated, however.

Parameters

force (optional)

Force the resetting of all the network cards.

Range:

yes

no

Default:

no

Example

```
init-network
```

Dependencies

The MASP must be in either *Upgrade Phase 3* mode or *Full Function* mode. (See the “Notes” section for this command for more information.)

2980 E2980 Cmd Rej: Must be in upgrade phase 3 or full function mode

The system database must be coherent when this command is entered.

2982 E2982 Cmd Rej: Database is incoherent

At least one card with the SS7ANSI or CCS7ITU application installed must exist with an in-service active signaling link.

2981 E2981 Cmd Rej: Already in nodal isolation

The `force=yes` parameter must be specified to override the required four-card SS7ANSI or CCS7ITU configuration. The system then selects the best available of the remaining SS7ANSI or CCS7ITU cards.

N/A N/A

This command cannot be entered during an Extended Bit Error Rate Test (BERT).

3043 E3043 Cmd Rej: IMT test in progress

Notes

Upgrade Phase 3

Upgrade Phase 3mode means that the MASPs are running GPLs that match the major revision defined for the approved GPLs, but the other network processors are only prepared to be upgraded.

Full Function

Full Function mode means that all MASPs are running GPLs that match the major revision defined for the approved GPLs. *Full Function* mode is the normal operating mode for the MASP.

Output

The command output scrolls into the scroll area of your display contiguously. However, for purposes of this example, each part has an explanation preceding it.

```
init-network

rlghncxa03w 06-05-27 08:15:10 EST EAGLE 35.0.0
(Reports the selection of an alternate card.)
rlghncxa03w 06-05-27 08:15:10 EST EAGLE 35.0.0
1234.1107 SYSTEM INFO INW ALT card as first to be
preloaded
CARD=1201 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:29:15
```

Reports the selection of a main card.

```
init-network

rlghncxa03w 06-05-27 08:15:10 EST EAGLE 35.0.0
1234.1108 SYSTEM INFO INW MAIN card as last to be reset
CARD=1202 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:29:17
```

Reports that the card cross loading is inhibited.

```
init-network

rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1109 SYSTEM INFO Asserted DDL inhibition
CARD=1113 GPL=OAM
Report Date: 06-05-27 Time: 16:27:18
```

Reports that a card reset has been issued.

```
init-network

rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1110 SYSTEM INFO Card reset command issued
CARD=1204 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:30:18
```


Reports that a card is being allowed to load.

```
init-network
```

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1111  SYSTEM          INFO  Allowing card to load
          CARD=1204      GPL=SS7ANSI
          Report Date: 06-05-27  Time: 16:30:18
```

Reports that INW is waiting for validation of card loading.

```
init-network
```

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1112  SYSTEM          INFO  Waiting for validation of card loading
          CARD=1204      GPL=SS7ANSI
          Report Date: 06-05-27  Time: 16:30:18
```

Reports that INW has detected successful completion of card loading.

```
init-network
```

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1113  SYSTEM          INFO  Detected card loaded
          CARD=1204      GPL=SS7ANSI
          Report Date: 06-05-27  Time: 16:30:18
```

Reports that INW has detected the reset or removal of a card.

```
init-network
```

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1114  SYSTEM          INFO  Detected card reset or removed
          CARD=1204      GPL=SS7ANSI
          Report Date: 06-05-27  Time: 16:30:18
```

Reports that the card is being allowed to crossload.

```
init-network
```

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1115  SYSTEM          INFO  Allowed card to skip DDL inhibited
          CARD=1204      GPL=SS7ANSI
          Report Date: 06-05-27  Time: 16:30:18
```

Reports that DDL inhibition has been removed.

```
init-network
```

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1116    SYSTEM          INFO  Removed DDL inhibition
           CARD=1113      GPL=OAM
           Report Date: 06-05-27  Time: 16:30:18
```

If `init-network` is entered during an upgrade, reports that the upgrade is to continue.

```
init-network
```

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1117    SYSTEM          INFO  Initialize OAMs to continue upgrade
           CARD=1113      GPL=OAM
           Report Date: 06-05-27  Time: 16:30:18
```

Reports that a card must be reset manually or removed.

```
init-network
```

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1118    SYSTEM          INFO  Card must be manually reset/removed
           CARD=1204      GPL=SS7ANSI
           Report Date: 06-05-27  Time: 16:30:18
```

Reports that a card has failed to reset.

```
init-network
```

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1119    SYSTEM          INFO  Card failed to reset
           CARD=1204      GPL=SS7ANSI
           Report Date: 06-05-27  Time: 16:30:18
```

Reports that a DDL inhibition assertion has failed.

```
init-network
```

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1120    SYSTEM          INFO  Failed to assert DDL inhibition
           CARD=1113      GPL=OAM
           Report Date: 06-05-27  Time: 16:30:18
```

Reports that an internal error has stopped an `init-network` .

```
init-network
```

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0  
Command Aborted : Internal error.
```

Reports that a failure to load a card has stopped an `init-network` .

```
init-network
```

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0  
Command Aborted : Card 1206 failed to load.
```

4.1.382 init-sys

Use this command to reset all cards in the system (except HIPR2 cards). When this command is entered, a caution message is displayed in the scroll area requesting to re-enter the command to confirm the operation. The command must be re-entered within 30 seconds. The only valid commands that can be entered after entering this command the second time are the `login` and `act-user` commands.

▲ Caution:

This command causes a complete system reload, and should be used only during periods of low traffic. Use this command only when directed by the Customer Care Center.

▲ Caution:

When this command executes, the system does not retain the manually initiated state (for example, OOS-MT-DSBLD) for the signaling link, card, or the terminal. After the command executes, the system attempts to bring all provisioned links, cards, and terminals on line, including those that were previously out of service. Each device must be put back into its previous state after the system is back on line. It is advisable to print or electronically capture the output of the `rept-stat-slk`, `rept-stat-card`, and `rept-stat-trm` commands for reference prior to issuing the `init-sys` command. To restore a device to its previous state, issue the appropriate inhibit/deactivate command listed in this manual in the section for each of the above `rept-stat` commands.

Parameters

data (optional)

High memory refresh. This parameter causes data to be reloaded to the specified card. This parameter is used to reload data if the G-Flex, G-Port, INP, or LNP feature is on, or the ATINP feature is enabled. This parameter is applicable only to network cards containing the MPS database (VSCCP/ENUM or S13 card running DEIRHC gpl).

Range:***refresh***

Causes data to be reloaded to the specified card.

persist

Indicates that the database is not to be reloaded to the card. Used to request that the EAGLE perform a warm restart of the requested cards. The EAGLE performs various checks to ensure that all conditions necessary to initiate the warm restart are in place.

Default:

refresh

force (optional)

Allows the command to be processed if the `data=persist` parameter is specified and all the network cards containing the LNP database cannot maintain a persistent LNP database over the reset.

Range:

yes

no

Default:

no

perdata (optional)

Persist a particular DB type on all cards (irrespective of the card's type).

Range:

all

Persist all data (GTT/MPS) that can be persisted on the card

mps

Persist only MPS data on the card that supports persistence of MPS DB

gtt

Persist only GTT data on the card that supports persistence of GTT DB

Default:

all

**Note:**

The `perdata` parameter can only be specified where `data=persist` is given.

Example

```
init-sys
init-sys:data=persist
init-sys:data=persist:perdata=mps
```

Dependencies

When this command is entered, another `init-sys` command cannot be in progress on another port.

2267 E2267 Cmd Rej: Init-sys already in progress at another terminal

An EPAP-based feature or an LNP feature that is warm-restart-capable must be enabled, or SIP or DEIR must be enabled, or at least one ENUM card or one GTT-enabled IPSP card must be present before this command can be entered with the `data=persist` parameter.

2592 E2592 Cmd Rej: Warm Restart capable Feature must be enabled

The value specified for the `data` parameter for the confirmation command must be the same value that was specified the first time.

3850 E3850 Cmd Rej: Parameters inconsistent on re-entering of command

The `force` parameter is valid only with the `data` parameter.

3848 E3848 Cmd Rej: FORCE parameter valid only with DATA parameter

The `perdata` parameter is valid only with the `data` parameter.

3513 E3513 Cmd Rej: Invalid parameter combination with PERDATA param

The `init-sys` command cannot be issued when SFAPP(P)->OAM sync is ON.

3637 E3637 Cmd Rej: Turn OFF SFAPP(P)->OAM sync before this command

This command cannot be entered when CAT2 IPSM to OAM syncing is in progress.

3652 E3652 Cmd Rej: IPSM to OAM SYNC in progress

Notes

When this command is entered the first time, 30 seconds are allowed to enter the command again. After the command is accepted, a delay of 10 seconds gives the system time to broadcast the information message regarding the system initialization.

From the time that the `init-sys` command is accepted, you must wait approximately two minutes before you can log into the system. If the system terminal is in the VT-100/VT-320 mode, the terminal display will be refreshed with nonzero alarm counts. During this 2-minute interval, an intermediate screen refresh caused by the MASPs' role change from active to standby, and from standby to active. This screen refresh is typically a partial refresh and the alarm indicators are set to zero.

If you are logged into the system in the KSR mode, you receive UAM 0009 (MASP became active) to indicate that you are now able to log into the system. UAM 0009 could be issued twice due to possible transient MASP role change (switching from active to standby). Following the execution of the `init-sys` command, the MASP that was active before the `init-sys` command was entered will be the active MASP when the system has finished reinitializing. E5-TSM cards are reloaded only in the event of power failure or hardware reboot. The execution of this command does not require E5-TSM cards to be reloaded.

When the `init-sys` command is given with `data=persist` and `perdata=all`, it means that all cards in the system will boot, but those that contain either MPS or GTT data as persistent will be warm booted, while others will be cold booted.

When the OA&M IP Security feature and the parameter SSH in SECUDFLT table are turned ON, and an IPSM card is inserted and initialized for the first time or is removed, inserted, and initialized again, the "SSH Host Keys Regenerated" UIM is displayed. The UIM shows the generated SSH Host Key fingerprint that must be provided at the secure client in order for secure information transfer to occur. The SSH Host Key fingerprint is changed whenever power is lost and restored to an IPSM card.

```
rlghncxa03 03-07-11 07:05:00 EST EAGLE 30.2.0
0021.1493 CARD 1111 INFO SSH Host Keys Regenerated
DSA Server Host Key FTRA-formatted Fingerprint=
84 7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d
Report Date:03-07-11 Time:22:27:36
```

When the OA&M IP Security feature and the parameter SSH in SECUDFLT table are turned ON, and an IPSM card is restarted with this command, the "SSH Host Keys Loaded" UIM is displayed. The UIM shows the current SSH Host Key fingerprint. The SSH Host Key fingerprint is not changed if the IPSM card does not lose power.

```
rlghncxa03 01-07-11 07:05:00 EST EAGLE 30.2.0
0021.1493 CARD 1111 INFO SSH Host Keys Loaded
DSA Server Host Key FTRA-formatted Fingerprint=
84 7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d
Report Date:03-07-11 Time:22:27:36
```

Output

This example shows the output when the `init-sys` command is entered once, then entered again within 30 seconds, causing the system to start resetting all of its cards:

```
init-sys
```

```
rlghncxa03w 04-01-07 07:05:00 EST EAGLE 31.3.0
Command entered at terminal #3
```

```
rlghncxa03w 04-01-07 07:05:01 EST EAGLE 31.3.0
CAUTION: This command causes a complete system reload, and
will result in traffic loss.
Re-enter command within 30 seconds to confirm.
```

```
init-sys
```

```
rlghncxa03w 04-01-07 07:05:16 EST EAGLE 31.3.0
Command entered at terminal #3
```

```
rlghncxa03w 04-01-07 07:05:17 EST EAGLE 31.3.0
Init System command issued at terminal #3
```

This example shows the output when the `init-sys` command is entered once, and more than 30 seconds pass with no other keyboard entry:

```
init-sys
```

```
rlghncxa03w 04-01-05 07:05:00 EST  EAGLE 31.3.0
Command entered at terminal #3.

rlghncxa03w 04-01-05 07:05:01 EST  EAGLE 31.3.0
CAUTION: This command causes a complete system reload, and
will result in traffic loss.
Re-enter command within 30 seconds to confirm.

rlghncxa03w 04-01-05 07:05:31 EST  EAGLE 31.3.0
Init System command aborted due to confirmation timeout
```

This example shows the output when the `init-sys` command is entered once and then the `rls-alm:lvl=minr` command is entered, letting the 30-second timer expire for the second entry of the `init-sys` command:

```
init-sys
```

```
rlghncxa03w 04-01-05 07:05:00 EST  EAGLE 31.3.0
Command entered at terminal #3

rlghncxa03w 04-01-05 07:05:01 EST  EAGLE 31.3.0
CAUTION: This command causes a complete system reload, and
will result in traffic loss.
Re-enter command within 30 seconds to confirm.

rls-alm:lvl=minr
rlghncxa03w 04-01-05 07:05:10 EST  EAGLE 31.3.0
Command entered at terminal #3

rlghncxa03w 04-01-05 07:05:11 EST  EAGLE 31.3.0
All the minor alarms are released

rlghncxa03w 04-01-05 07:05:12 EST  EAGLE 31.3.0
Command Completed

rlghncxa03w 04-01-05 07:05:31 EST  EAGLE 31.3.0
Init System command aborted due to confirmation timeout
```

This example shows the output when the `init-sys` command is entered twice within 30 seconds, and the `data=persist` parameter is specified to perform a warm restart of the requested cards without reloading the database to the cards:

```
init-sys:data=persist
```

```
rlghncxa03w 04-01-05 07:05:31 EST  EAGLE 31.3.0
Command entered at terminal #3

rlghncxa03w 04-01-05 07:05:31 EST  EAGLE 31.3.0
CAUTION: This command causes a complete system reload, and will result
```

```
in
traffic loss.
Re-enter command within 30 seconds to confirm.

init-sys:data=persist
rlghncxa03w 04-01-05 07:05:31 EST  EAGLE 31.3.0
Command entered at terminal #3
rlghncxa03w 04-01-05 07:05:31 EST  EAGLE 31.3.0
Init System command issued at terminal #3
```

This example shows the output when the `init-sys` command is entered twice within 30 seconds, and the `force=yes` and `data=persist` parameter is specified to perform a warm restart of the requested cards without reloading the database to the cards:

```
init-sys:data=persist:force=yes

tekelecstp 02-01-01 21:49:15 MST  EAGLE5 46.2.0-65.42.0
init-sys:data=persist:force=yes
Command entered at terminal #17.
;

tekelecstp 02-01-01 21:49:15 MST  EAGLE5 46.2.0-65.42.0
Verifying card(s) persistent database - please wait

Command Accepted - Processing
tekelecstp 02-01-01 21:49:15 MST  EAGLE5 46.2.0-65.42.0
CAUTION: This command causes a complete system reload, and
will result in traffic loss.
Re-enter command within 30 seconds to confirm.
;
Command Executed

init-sys:data=persist:force=yes

tekelecstp 02-01-01 21:49:20 MST  EAGLE5 46.2.0-65.42.0
init-sys:data=persist:force=yes
Command entered at terminal #17.
;

Command Accepted - Processing
Command Executed
```

Related Topics

- [act-gpl](#)
- [chg-db](#)
- [chg-gpl](#)
- [copy-gpl](#)
- [copy-meas](#)

- [disp-disk-dir](#)
- [rept-stat-db](#)

4.1.383 lock

Use this command to lock a terminal's keyboard. When the keyboard is locked, the system accepts no keyboard commands other than the `unlock` command. The keyboard remains locked until the logged on user's login password is entered at the UNLOCK prompt. When the keyboard is locked, any idle terminal monitor in effect for the terminal is suspended temporarily.

Parameters

This command has no parameters.

Example

```
lock
```

Dependencies

The terminal cannot be an MGMT terminal used for Network Surveillance.

3079 E3079 Cmd Rej: Command cannot be executed on an MGMT terminal

The terminal cannot be a TELNET terminal (terminal IDs 17-40).

4283 E4283 Cmd Rej: Command cannot be executed on a Telnet terminal

Notes

A locked terminal can also be unlocked by entering the `inh-trm` command, followed by the `alw-trm` command.

Output

```
lock
```

```
rlghncxa03w 04-02-17 16:02:05 EST  EAGLE 31.3.0
Terminal keyboard is locked. Enter UNLOCK command to unlock.
;
```

Related Topics

- [unlock](#)

4.1.384 login

Use this command to log into the system. After you enter this command, the system requests a password. For security reasons, the password is not displayed at the terminal.

Parameters

uid (mandatory)

User ID. The system prompts the user for a valid password after entering in this ID.

Range:

azzzzzzzzzzzzzzzzz

1 alphabetic character followed by up to 15 alphanumeric characters

Example

```
login:uid=john
```

Dependencies

The user cannot be logged onto any terminal while changing the password.

2750 E2750 Cmd Rej: UserID already logged on (or is logging on) another terminal

The user ID must not be logged in to another port already, and it must not be revoked.

2752 E2752 Cmd Rej: UserID has become obsolete and cannot be used

The user ID must have been logged in successfully within the number of days specified on the `uout` parameter of the `ent-user` command.

2751 E2751 Cmd Rej: UserID has been revoked

The OA&M IP Security Enhancements feature must be turned on before the password can be changed from a Telnet terminal (IDs 17-40) if the user is logging in with the assigned ID and password for the first time, or the password has expired.

2723 E2723 Cmd Rej: Password operations not allowed on a non-secure terminal

The password can contain up to 20 characters.

2262 E2262 Cmd Rej: Password too long, 20 maximum

The password must contain at least the number of characters specified by the `minlen` parameter in the `chg-secu-dflt` command.

2263 E2263 Cmd Rej: Password does not contain enough characters

The password must contain at least the number of alphabetic characters specified by the `alpha` parameter in the `chg-secu-dflt` command.

2753 E2753 Cmd Rej: Password does not contain enough alphabetic characters

The password must contain at least the number of numeric characters specified by the `num` parameter in the `chg-secu-dflt` command.

2754 E2754 Cmd Rej: Password does not contain enough numeric characters

The password must contain at least the number of punctuation characters specified by the `punc` parameter in the `chg-secu-dflt` command.

2755 E2755 Cmd Rej: Password does not contain enough punctuation characters

The password cannot contain the associated User ID.

2761 E2761 Cmd Rej: Password cannot contain userID

The number of days specified by the `minintrvl` parameter in the `chg-secu-dflt` command must pass between password changes.

5190 E5190 Cmd Rej: Password change denied, too soon since last change

The password must contain fewer duplicate characters from the existing password than the number specified by the `pchreuse` parameter in the `chg-secu-dflt` command.

5191 E5191 Cmd Rej: Password has too many character matches with old password

The password cannot be the same as a previous password if the limit in the password history, specified by the `preuse` parameter of the `chg-secu-dflt` command, has been reached.

5192 E5192 Cmd Rej: Password matches a previous password

The current password cannot be entered as the new password.

5246 E5246 Cmd Rej: New password matches old password

The values specified for the `uid` parameter and for the password must already exist.

2757 E2757 Cmd Rej: Invalid userID/password combination

Notes

The `act-user` command can be used in place of `login`. The `act-user` command has been provided in compliance with TL1 standards.

When a new system is shipped, the user ID and password are set to the system. These should be changed immediately to ensure system security.

At the time of login, when a password is entered for a user, only the first 20 bytes are chosen for validation.

Output

When the `login` command is entered, a password prompt occurs. If the password and User ID are valid, then the login is processed. When a password change is required, password rules are displayed, and a new password is requested. The login is granted if the change is successful, then or if no password change is necessary.

After login is granted, a banner is displayed. This banner consists of the warning text provided on the `chg-secu-dflt` command, indications about the last login, and any unsuccessful login attempts.

This example shows the output for a normal login path with no request for new password:

```
login:uid=eagle
```

```
eagle5 10-02-19 19:37:16 EST EAGLE5 42.0.0
User logged in on terminal 3.
```

```
;
```

```
eagle5 10-02-19 19:37:16 EST EAGLE5 42.0.0
NOTICE: This is a private computer system.
Unauthorized access or use may lead to prosecution.
0 LOGIN failures since last successful LOGIN
```

```
Last successful LOGIN was on port 3 on 10-02-18 @ 20:38:26
;
```

This example shows the output for a login where a password change is required:

```
login:uid=user1

Enter Password :
Enter new password (password has expired and must be changed) :
Verify Password :
Command Accepted - Processing
  e5oam 10-02-19 23:30:57 EST  EAGLE 47.0.0.0.0
  login:uid=user1
  Command entered at terminal #3.
;

e5oam 10-02-19 23:30:59 EST  EAGLE 47.0.0.0.0
New password must contain:
  - between 8 and 20 characters
  - at least 1 alphabetic character(s) ('a'-'z')
  - at least 1 numeric character(s) ('0'-'9')
  - at least 1 punctuation character(s) (e.g. $%0#)
New password must:
  - be unique from the old password
  - be unique from the last 2 historical password(s)
  - not reuse more than 4 character(s) from the old password
;
```

The following is an example of logging when the EAGLE OA&M IP Security control feature (893400001) has a status of OFF. That Feature Control Status blocks all alarming with the use of non-secure IP protocols for FTP servers and the terminal SSH setting:

```
tekelecstp 16-10-24 13:31:13 EST  EAGLE 46.5.0.0.0-70.6.0
  login:uid=eagle
  Command entered at terminal #3.
;

tekelecstp 16-10-24 13:31:17 EST  EAGLE 46.5.0.0.0-70.6.0
  User logged in on terminal 3.
;

tekelecstp 16-10-24 13:31:17 EST  EAGLE 46.5.0.0.0-70.6.0

Copyright (c) 1993, 2015, Oracle and/or its affiliates. All rights
reserved.

NOTICE: This is a private computer system.
Unauthorized access or use may lead to prosecution.
1 LOGIN failures since last successful LOGIN
Last successful LOGIN was on port 4 on 16-10-24 @ 13:06:06

***WARNING: OA&M IP Security FAK-OFF, insecure access protocols
```

```
not alarmed
```

```
;
```

Related Topics

- [act-user](#)
- [chg-pid](#)
- [chg-secu-dflt](#)
- [chg-user](#)
- [dact-user](#)
- [dlt-user](#)
- [ent-user](#)
- [logout](#)
- [rept-stat-user](#)
- [rtrv-secu-dflt](#)
- [rtrv-secu-user](#)
- [rtrv-user](#)

4.1.385 logout

Use this command to end a user session. The `logout` command has the same affect as the `canc/dact-user` commands.

Parameters

This command has no parameters.

Example

```
logout
```

Dependencies

None

N/A N/A

Notes

The `canc/dact-user` commands can be used in place of `logout`.

Output

```
logout
```

```
rlghncxa03w 06-06-05 07:05:31 EST EAGLE 35.0.0  
Command Completed.
```

```
;
```


**Note:**

Pass-through commands shown in online help that are not documented in Chapter 6 are not supported at this time.

proc (optional)

Processor type.

Range:***appl***

Application processor

com

Communication processor

Default:

appl

Example

```
pass:loc=1201:cmd="ping 198.89.1.2"
```

```
pass:loc=1111:cmd="soipdata -f"
```

```
pass:loc=6312:cmd="help"
```

Dependencies

The value specified for the `loc` parameter must be valid for the card type and application:

- E5-ENET-B card running the IPGWI, IPLIMI, IPSG, or SS7IPGW application
- STC or E5-STC card running the EROUTE application
- IPSM card running the IPS application
- Service Module card running the VSCCP application
- E5-TSM card running the GLS application

2376 E2376 Cmd Rej: Specified LOC is invalid

The specified card location is out of range.

2016 E2016 Cmd Rej: <parm_desc> is out of range - <parm>

Syntax error found in the `pass` command.

3780 E3780 Cmd Rej: Syntax Error Found

Card is not in service

2387 E2387 Cmd Rej: Card is not in service

3782 E3782 Cmd Rej: Command Not Found

The `pass` command must include either the `cmd` or `shellcmd` parameter.

4439 E4439 Cmd Rej: Cmd or Shell parameter must be specified

Notes

None

Output

Output is shown in the individual Pass commands.

4.1.387 rept-ftp-meas

Use this command to manually initiate generation and FTP transfer of a measurements report from the Measurements Platform MCPM or Integrated Measurements enabled E5-OAM to an FTP server.

Parameters**enttype (mandatory)**

Entity type to report on in the measurements report.

Range:***aiq***

Measurements for ANSI41 AIQ

atinpq

Measurements for ATINP

deir

Measurements for S13/S13' EIR

eir

Measurements for Equipment Identity Register

enum

Measurements for ENUM Mobile Number Portability and Tier One Address Resolution

gtt"path

Measurements for GTT Actions Per-Path

gttset

Measurements per GTTSET

idpr

Measurements for IDPR

link

Measurements for signaling links

linkset

Measurements for linksets

lnp

Measurements for local number portability

Isdestni

Measurements for linkset destination network identifiers

Isonismt

Measurements for ISUP message type screening

Isorigni

Measurements for linkset originating network identifiers

mapscrn

Measurements for GSM MAP message screening

np

Measurements for INP, INP CRP, G-Port, A-Port, MO-based GSM SMS NP, MO-based IS41 SMS NP, IGM, MT-Based GSM SMS NP, and MT-Based IS41 SMS NP

origni

Measurements for originating network identifiers greater than 5

origninc

Measurements for originating network identifiers (less than 5, small networks) for network clusters

sctpasoc

Measurements per association for the SCTP protocol (used to carry M3UA, M2PA, and SUA traffic)

sctpcard

Measurements per card for the SCTP protocol (used to carry M3UA, M2PA, and SUA traffic)

sfthrot

Measurements for SFTHROT GTT Action

sip

Measurements for SIP

stp

Measurements pertaining to the Signaling Transfer Point in general or summarized totals recorded on the STP

tt

Measurements for translation types

ua

Measurements per application server/association for the M3UA and SUA protocols

vflex

Measurements for V-Flex

type (mandatory)

Type of measurement report.

Range:

avl
Availability measurements

avld
Daily availability measurements

avldth
Day to hour availability measurements.

comp
Component measurements

gtwy
Internetwork gateway-related data from the STP for ANSI and ITU measurements. ANSI gateway measurements are pegged on a per-linkset, per-Network Indicator basis, whereas ITU measurements are pegged on a per-linkset basis.

mtcd
Daily maintenance measurements

mtcdth
Day-to-hour maintenance measurements

mtch
Hourly maintenance measurements

mtcs
Link/linkset maintenance status

nm
Network management, on-demand

rbase
Schedule-report type record base measurements

systot
STP system totals

day (optional)

Day of the week for the specified daily measurement report.

Range:

mon

tue

wed

thu

fri

sat

sun**Default:**

If not specified, the previous single day is reported.

hh (optional)

Half-hour for the specified report. The end time for the collection interval. For example, `hh=0300` generates a report for the interval 2:30-3:00.

Range:

0000 - 2400

hhmm where *hh*=00 -24 (hour) and *mm*=00 or 30 (minute)

period (optional)

The relative period for the report.

Range:

active

last

specific

qh (optional)

Quarter-hour for the specified report. The end time for the collection interval. For example, `qh=0315` generates a report for the interval 3:00-3:15.

Range:

0000 - 2400

hhmm where *hh* = 00-24 (hour) and *mm* = 00, 15, 30 or 45

Example

```
rept-ftp-meas:type=systot:enttype=stp
```

```
rept-ftp-meas:type=systot:enttype=sip
```

```
rept-ftp-meas:type=mtch:enttype=deir
```

```
rept-ftp-meas:type=mtch:enttype=enum
```

```
rept-ftp-meas:type=mtcd:enttype=sfthrot
```

```
rept-ftp-meas:type=mtch:enttype=gttset
```

Dependencies

This command cannot be used to specify a report type if that report type is currently printing.

2305 E2305 Cmd Rej: On demand report currently being printed

A primary MCPM card must be available when this command is entered.

3117 E3117 Cmd Rej: No available primary MCP

The 15 Minute Measurements feature must be turned on and the 15 Minute Measurements collection option (`chg-measopts:collect15min=on` command) must be on before the `qh` parameter can be specified.

3690 E3690 Cmd Rej: QH cannot be specified unless 15 min meas is turned ON

The LNP feature must be turned on before the `mtchlnp=on`, `mtcdlnp=on`, or `enttype=lnp` parameter can be specified.

3009 E3009 Cmd Rej: LNP feature must be ON

The GSM Map Screening feature must be turned on before the `mtcdmap=on` and `enttype=mapscrn` parameters can be specified

3883 E3883 Cmd Rej: GSM Map Screening feature must be ON

The EIR feature must be turned on before the `enttype=eir` parameter can be specified,.

3699 E3699 Cmd Rej: EIR feature must be ON

If a value of `avl`, `avld`, `comp`, `gtwy`, `mtcd`, or `systot` is specified for the `type` parameter, then the value specified for the `hh` parameter must indicate a half-hour boundary (the end of the requested half-hour for the report). If the `type=mtch` parameter is specified, then the value specified for the `hh` parameter must indicate an hourly boundary (half hours ending in 00, such as 0100, etc).

2302 E2302 Cmd Rej: PERIOD must be 1/2 hour boundary

The `qh` parameter must specify a quarter-hourly boundary (the end of the requested quarter-hour for the report) for valid report types (`avld(th)`, `mtcd(th)`, `mtch`, `nm`, `rbase`, and `mtcs`) cannot be specified.

3689 E3689 Cmd Rej: Period must be 1/4 hour boundary

Hourly collection and report processing cannot be in progress when report type `mtch` is specified.

2290 E2290 Cmd Rej: Hourly measurement collection in progress

Day-to-hour collection and report processing cannot be in progress

- When report type `mtcd` is specified
- When report type `mtcdth` is specified

2276 E2276 Cmd Rej: Day-to-hour measurement collection in progress

Daily collection and report processing cannot be in progress when report type `mtcd` is specified.

2277 E2277 Cmd Rej: Daily measurement collection in progress

Half-hourly collection and report processing cannot be in progress when report type `comp`, `systot`, `avl`, or `gtwy` is specified.

2278 E2278 Cmd Rej: 30-minute measurement collection in progress

Quarter-hourly collection and report processing cannot be in progress when report type `comp`, `systot`, `avl`, or `gtwy` is specified.

3688 E3688 Cmd Rej: 15-minute measurement collection in progress

5-minute collection and report processing cannot be in progress when report type `nm` is specified.

2279 E2279 Cmd Rej: 5-minute measurement collection in progress

The *mtcdth* report type is unavailable between midnight and 1:00 AM (0100).

2275 E2275 Cmd Rej: Day-to-hour measurement data not yet collected

The *day* parameter can be specified only for report type *mtcd* and entity types *aiq*, *eir*, *Inp*, *np*, *vflex*, *mapscrn*, *atinq*, and *gttpath*.

3419 E3419 Cmd Rej: DAY is invalid for type-enttype combination

The *hh* and *qh* parameters cannot be specified together in the command.

3694 E3694 Cmd Rej: QH and HH cannot be specified together

When the *period=last* parameter is specified, the *hh*, *qh*, and *day* parameter cannot be specified.

2283 E2283 Cmd Rej: QH, HH, or DAY cannot be specified when PERIOD=LAST

When the *period=active* parameter is specified, the *hh*, *qh*, and *day* parameters cannot be specified.

2284 E2284 Cmd Rej: QH, HH, or DAY cannot be specified when PERIOD=ACTIVE

When the *period=specific* parameter is specified, the *hh*, *qh*, or *day* parameters must be specified.

2286 E2286 Cmd Rej: QH or HH must be specified when PERIOD=SPECIFIC

[Table 4-42](#) indicates valid parameter combinations for measurements reports; invalid combinations will generate an error message.

Table 4-42 rept-ftp-meas Valid Parameter Combinations

Param	avl	avld	avldth	comp	gtwy	mtcd	mtcdt h	mtch	mtcs	nm	systot	rbase
entity												
aiq						X		X				
atinq						X		X				
deir						X		X				
eir						X		X				
enum						X		X				
gttapat						X		X				
h												
gttset						X		X				
idpr											X	
link	X	X	X	X		X	X		X	X		X
linkset				X	X	X	X		X	X		X
Inp						X		X				
lsdestn					X							
i												
lsonis					X							
mt												
lorigni					X							

Table 4-42 (Cont.) rept-ftp-meas Valid Parameter Combinations

Parameter	Value	Value	Value	Value	Value	Value	Value	Value	Value	Value	Value	Value	Value
mapscr						X			X				
n													
np						X						X	
origni					X								
origin					X								
c													
sctpas			X			X		X					
oc													
sctpcar			X			X		X					
d													
sfthrot						X							X
SIP						X							X
stp				X		X		X			X		X
tt													X
ua			X			X		X					
:period													
active									X				X
last	X	X	X	X	X	X	X	X	X		X	X	
specific	X			X	X	X		X				X	

2281 E2281 Cmd Rej: Invalid ENTTYPE for this TYPE

An hourly boundary must be specified for report type `mtch`.

2291 E2291 Cmd Rej: PERIOD must be 1 hour boundary for report type

The `oamhcmeas=on` or `platformenable=on` parameter must be specified (see the `chg-measopts` command) before this command can be entered.

3088 E3088 Cmd Rej: Platformenable or Oamhcmeas option must be on

The V-Flex feature must be turned on before the `enttype=vflex` parameter can be specified.

4142 E4142 Cmd Rej: VFLEX feature must be ON

The A-Port, G-Port, IS41 GSM Migration, Prepaid SMS Intercept Ph1, TIF ASD, TIF GRN, TIF Number Portability, or TIF Simple Number Substitution feature must be enabled, or the INP, MO SMS IS41-to-GSM Migration, MO-based GSM SMS NP, or MO-based IS41 SMS NP feature must be turned on before the `mtchnp=on` or `mtcdnp=on` parameter can be specified.

3631 E3631 Cmd Rej: Incompatible Feature/Option status

The ANSI41 AIQ feature must be enabled before the `enttype=aiq` parameter can be specified.

5158 E5158 Cmd Rej: ANSI41 AIQ feature must be enabled

The Integrated Measurements or Measurements Platform feature must be turned on before this command can be entered.

5279 E5279 Cmd Rej: MEASPLAT or Integrated Measurements feature must be ON

The GTT Action - DUPLICATE, GTT Action - DISCARD, or GTT Action - FORWARD feature must be enabled before the `enttype=gttapath` parameter can be specified.

3451 E3451 Cmd Rej: Controlled Feature is not enabled

At least one SFTHROT GTT Action must be provisioned before the `enttype=sfthrot` parameter is specified.

3430 E3430 Cmd Rej: At least one SFTHROT GTT action must be configured

SIPNP Feature must be enabled before the `enttype=sip` and `type=mtcd/systot` parameters can be specified.

2590 E2590 Cmd Rej: SIPNP Feature must be enabled

Period/type parameter combinations:

- If the `period=specific` parameter is specified, then a value of *avl*, *mtcd*, *comp*, *systot*, *gtwy*, or *mtch* must be specified for the `type` parameter.
- If the `type=mtcd` and `period=specific` parameters are specified, then a value of *lnp*, *mapscrn*, *np*, *eir*, *vflex*, *atinpq*, *aiq*, or *gttapath* must be specified for the `enttype` parameter.
- If the `period=active` parameter is specified, then a value of *mtcs* or *rbase* must be specified for the `type` parameter.
- If the `period=last` parameter is specified, then a value of *mtcs* or *rbase* cannot be specified for the `type` parameter.

2280 E2280 Cmd Rej: Invalid PERIOD for this TYPE

At least one ENUM card must be present before the `enttype=enum` parameter can be specified.

3195 E3195 Cmd Rej: At least one ENUM card must be provisioned.

The EGTT feature must be turned ON before `enttype=gttset` parameter can be specified.

3557 E3557 Cmd Rej: EGTT must be ON

Notes

None

Output



Note:

Refer to *Measurements Reference* for the current release for `rept-ftp-meas` output examples.

```
rept-ftp-meas:type=mtcd:enttype=gttapath
```

```
tekelecstp 10-02-11 15:31:25 EST EAGLE 42.0.0
```

```
FTP measurement report request sent to primary MCP.
tekelecstp 10-02-11 15:31:25 EST EAGLE 42.0.0
Measurement Server Connection Successful
tekelecstp 10-02-11 15:31:25 EST EAGLE 42.0.0
REPT-FTP-MEAS request was successful.
;
```

```
rept-ftp-meas:type=systot:enttype=sip
```

```
tekelecstp 12-07-27 13:12:38 EST EAGLE 45.0.0
rept-ftp-meas:type=systot:enttype=sip
Command entered at terminal #4.
;
```

```
tekelecstp 12-07-27 13:12:38 EST EAGLE 45.0.0
FTP measurement report request sent to primary MCP.
;
```

```
tekelecstp 12-07-27 13:12:38 EST EAGLE 45.0.0
REPT-FTP-MEAS request was successful.
;
```

```
rept-ftp-meas:type=mtcd:enttype=deir
```

```
tekelecstp 13-03-15 13:12:38 EST EAGLE 45.1.0
rept-ftp-meas:type=mtcd:enttype=deir
Command entered at terminal #4.
```

```
tekelecstp 13-03-15 13:12:38 EST EAGLE 45.1.0
FTP measurement report request sent to primary MCP.
```

```
tekelecstp 13-03-15 13:12:38 EST EAGLE 45.1.0
REPT-FTP-MEAS request was successful.
```

```
rept-ftp-meas:type=mtcd:enttype=enum
```

```
tekelecstp 14-05-15 13:12:38 EST EAGLE 46.1.0
rept-ftp-meas:type=mtcd:enttype=enum
Command entered at terminal #4.
;
```

```
tekelecstp 14-05-15 13:12:38 EST EAGLE 46.1.0
```



```
FTP measurement report request sent to primary MCP.
;

tekelecstp 14-05-15 13:12:38 EST EAGLE 46.1.0
REPT-FTP-MEAS request was successful.
;

rept-ftp-meas:type=mtcd:enttype=sfthrot

tekelecstp 15-04-15 13:12:38 EST EAGLE 46.3.0
rept-ftp-meas:type=mtcd:enttype=sfthrot
Command entered at terminal #4.
tekelecstp 15-04-15 13:12:38 EST EAGLE 46.3.0
FTP measurement report request sent to primary MCP.

tekelecstp 15-04-15 13:12:38 EST EAGLE 46.3.0
REPT-FTP-MEAS request was successful
;

rept-ftp-meas:type=mtcd:enttype=gttset

tekelecstp 17-05-11 15:12:30 EST EAGLE 46.6.0
rept-ftp-meas:type=mtcd:enttype=gttset
Command entered at terminal #4.
tekelecstp 17-05-11 15:12:30 EST EAGLE 46.6.0
FTP measurement report request sent to primary MCP.

tekelecstp 17-05-11 15:12:30 EST EAGLE 46.6.0
REPT-FTP-MEAS request was successful
;
```

Related Topics

- [rept-meas](#)

4.1.388 rept-imt-info

Use this command to display the following statistics:

- IMT bus error statistics currently stored in the IMT fault isolation hourly statistics
- Current IMT bus use statistics. Bus use is the percentage of the capacity of the IMT bus that is used for data during a particular time.
- MUX card error statistics

Parameters

report (mandatory)

The type of report that is generated.

Range:

err
IMT bus error statistics

hmuxerr
HMUX card error statistics

hiprerr
HIPR card error statistics

hipr2err
HIPR2 card error statistics

ebucket (optional)

End bucket. The last one-hour time period (*bucket*) for which error statistics are reported.

Range:

0 - 15

Default:

If *sbucket* is specified—current *sbucket* value; information for only that time period is displayed.

If *sbucket* is not specified—*15*, the report includes statistics for all 16 time periods

e1oc (optional)

End location. Specifies the card location of the last card in the range for the report.

Range:

1101 - 1113, 1115, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318, 3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118

Default:

If *sloc* is specified—current *sloc* value; displays information for one card

If *sloc* is not specified—*1115*, which corresponds to IMT address 251 (*e=251*); displays information for entire range of locations.

erronly (optional)

This parameter filters the output to display only non-zero counts in the error report.

Range:

yes

no

Default:

yes

eshelf (optional)

The end shelf location for MUX statistics. This shelf location is the last shelf in the range.

Range:

1100, 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100

Default:

`sshelf` is specified—the report starts with the `sshelf` value
`sshelf` and `eshelf` are not specified—the report is generated for all shelves equipped with the specified MUX type

eslot (optional)

The end slot location for MUX statistics for the cards in the MUX shelf.

Range:

1 - 18

Default:

`sslot` is specified—current `sslot` value
`sslot` is not specified—no default

mode (optional)

The display mode used in the error report.

Range:***full***

Displays information for each card along with a summary report

stats

Displays only individual card statistics

summary

Displays the summary portion of the report

Default:

summary

sbucket (optional)

Start bucket. The first one-hour time period (bucket) for which error statistics are reported.

Range:

0 - 15

Default:

0

sloc (optional)

Start location. The card location of the first card in the range for the report.

Range:

1101 - 1113, 1115, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318, 3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118

Default:

`eloc` is specified—current `eloc` value
`eloc` and `sloc` are not specified—displays information for entire range of card locations

sshelf (optional)

The starting shelf location for MUX statistics. This location is the first shelf in the range.

Range:

1100, 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100

Default:

eshelf is specified—current *eshelf* value
eshelf and *sshelf* are not specified—report is generated for all shelves equipped with the specified MUX type

sslot (optional)

The starting slot location for MUX statistics for the cards in the MUX shelf.

Range:

1 - 18

Default:

eslot is specified—current *eslot* value
eslot is not specified—no default

trm (optional)

The serial port (printer location) where the report is sent.

Range:

1 - 16

Default:

Report displays on the terminal where the command is issued

Example

```
rept-imt-info:report=err  
rept-imt-info:report=err:sloc=1101:eloc=1102:mode=stats  
rept-imt-  
info:report=err:sloc=1101:eloc=1102:mode=full:erronly=no  
rept-imt-info:report=hiprerr:sbucket=0  
rept-imt-  
info:report=hiprerr:sshelf=1100:sslot=1:eslot=2:sbucket=0
```

Dependencies

No related IMT command can be in progress when this command is entered. Only one report can be active at a time.

2368 E2368 Cmd Rej: System busy - try again later

This command cannot be entered at a telnet terminal (terminal ID 17-40).

4283 E4283 Cmd Rej: Command cannot be executed on a Telnet terminal

This command cannot be entered during an IMT statistics collection period following an hourly boundary (IMT performance monitoring).

N/A N/A

3044 E3044 Cmd Rej: Invalid parameter specified for report type

The ending hourly time period cannot be less than the starting hourly time period.

3049 E3049 Cmd Rej: Ending bucket cannot be less than starting bucket

If the `sslot` and `eslot` parameters are specified, then the `sshelf` parameter must be specified and the `eshelf` parameter cannot be specified (slot information is reported for a single shelf).

2155 E2155 Cmd Rej: Invalid parameter combination specified

A value of `hmutexerr`, `hiprerr`, or `hipr2err` must be specified for the `report` parameter before the `sshelf` and `eshelf` parameters can be specified.

4027 E4027 Cmd Rej: S/ESHELF parameters are invalid with specified report type

The MUX card slots (09 and 10) cannot be specified for the `sslot` and `eslot` parameter values.

3481 E3481 Cmd Rej: S/ESLOT cannot be set to 9 or 10

A card location that is valid and defined in the database must be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

This command cannot be entered during an Extended Bit Error Rate Test (BERT).

3043 E3043 Cmd Rej: IMT test in progress

The shelf locations specified by the `sshelf` and `eshelf` parameters must be provisioned in the frame.

2108 E2108 Cmd Rej: Shelf location not equipped

The `report=err` parameter must be specified before the `erronly` and `mode` parameters can be specified.

3044 E3044 Cmd Rej: Invalid parameter specified for report type

The `sshelf` parameter must be specified, and a value of `hiprerr` or `hipr2err` must be specified for the `report` parameter before the `sslot` and `eslot` parameters can be specified.

3044 E3044 Cmd Rej: Invalid parameter specified for report type

A value of `hiprerr`, `hipr2err`, or `hmutexerr` must be specified for the `report` parameter before the `sshelf` or `eshelf` parameter can be specified.

3044 E3044 Cmd Rej: Invalid parameter specified for report type

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

Hourly Bucket Statistics

Hourly Bucket Statistics apply to cards on the IMT bus and to MUX cards. Each hourly time period (*bucket*) contains the statistics for a single hour. A total of 16 hourly time periods,

numbered 0 - 15, exist. Hourly time period 0 is the most-recent (current), and hourly time period 15 is the least-recent (oldest).

Each hour the statistics for the current hourly time period expire, and the hourly time periods advance. That is, after the advance, the statistics previously reported in hourly time period 0 are now reported in the hourly time period 1, and so on. The statistics reported in the hourly time period 15 are no longer available after the change.

When a card is reinitialized, it begins collecting statistics in hourly time period 0 and changes to hourly time period 1 at the start of the next hour. Thus, the first statistics that a card collects after being reinitialized may be for a partial hour.

MUX Statistics

A MUX card stores the statistics separately for each card on its shelf. If the `sloc` and `eloc` parameters are specified, then the card sends the statistics for each card to the OAM application for display. If the `sloc` and `eloc` parameters are not specified, then the card sends an aggregate number to the OAM application to represent statistics for all cards on its shelf.

Low Speed Summary

Table 4-43 rept-imt-info Statistics, Low Speed Summary (rept-imt-info:report=(hmutexerr, hiprerr, or hipr2err))

Stat Label – Low Speed Error & Event Counts	Explanation of Stat	Probable Cause	Recommended Action
IMT Rx Packet CRC Error	Receive CRC error: Bad Checksum in received IMT packet. Caused by corrupted data within the received packet. Detected by hardware.	Maintenance activity: Card insertion, removal, or boot. Does not occur in a normal system and indicates a hardware failure: defective LIM card, MUX card, FC cable or backplane.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a hardware issue is present. Contact the Customer Care Center.
IMT Rx Packet Format Error	Receive Format error: Occurs when the End of Message byte of an IMT packet is found missing. Detected by hardware/software.	Maintenance activity: Card insertion, removal, or boot. Does not occur in a normal system and indicates a hardware failure: defective LIM card, MUX card, FC cable or backplane.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a hardware issue is present. Contact the Customer Care Center.
IMT Rx Violation Error	Violation Error: Received an illegal character from the physical IMT transport (TAXI Interface). Detected by hardware	Card insertion, removal, or boot or defective hardware	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact the Customer Care Center.

Table 4-43 (Cont.) rept-imt-info Statistics, Low Speed Summary (rept-imt-info:report=(hmutexerr, hiprerr, or hipr2err))

Stat Label – Low Speed Error & Event Counts	Explanation of Stat	Probable Cause	Recommended Action
IMT Rx Command Error	Reserved.	Reserved.	Reserved.
IMT Rx FIFO Full	Receive FIFO Full: Watermark indication that this interface receiving data off the TAXI line is receiving traffic in excess of what it can handle. Some traffic will have been discarded. May cause retransmissions, CRC errors and Format errors.	Relatively heavy traffic on this interface can cause these counts to increment. If these counts occur in the field, a software problem may exist.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact the Customer Care Center.
IMT Rx FIFO Half Full	Receive FIFO Half Full: Watermark indication that the interface receiving data off the TAXI line has received substantial traffic.	Relatively heavy traffic on this interface can cause these counts to increment.	None. FIFO Half Full is an indication; no action is required.
IMT Tx FIFO Full	Transmit FIFO Full: The FIFO has overflowed and data has been lost. This stat is only meaningful for MUX card columns.	Relatively heavy traffic on this interface can cause these counts to increment. This condition should never occur. These events may indicate a software problem	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact the Customer Care Center.
IMT Tx FIFO Half Full	Transmit FIFO Half Full: Watermark indication that this interface is backed up through ½ of its available storage. This stat is only meaningful for MUX card columns.	Indicates that data was transmitted at a relatively high rate for a short period.	None. FIFO Half Full is just an indication; no action is required.
CPU Rx FIFO Empty Before SOM	Occurs when valid packet data is read from the CPU Rx FIFO and the beginning (SOM) of the packet is found missing before all data was read.	The SOM was corrupted while being written into the CPU Rx FIFO from the low speed link.	None. This error will automatically empty the FIFO so it is ready to continue receiving data. If the error continues, contact the Customer Care Center.

Table 4-43 (Cont.) rept-imt-info Statistics, Low Speed Summary (rept-imt-info:report=(hmutexerr, hiprerr, or hipr2err))

Stat Label – Low Speed Error & Event Counts	Explanation of Stat	Probable Cause	Recommended Action
CPU Rx FIFO Empty Before EOM	Occurs when valid packet data is read from the CPU Rx FIFO and the end (EOM) of the packet is found missing before all data was read.	The SOM was corrupted while being written into the CPU Rx FIFO or a partial packet was written into the FIFO from the low speed link.	None. This error will automatically empty the FIFO so that it is ready to continue receiving data. If the error continues, contact the Customer Care Center.
CPU Rx Packet SOM Before EOM	A Start of Message was received when an End of Message was expected from the IMT bus.	Packet was corrupted in the system (EOM lost) and has another packet appended to it.	None. If the problem persists, contact the Customer Care Center.
CPU Rx Packet CRC Error	Occurs when valid packet data is read from the CPU Rx FIFO and transferred to the processor memory and calculated CRC does NOT match the CRC word at the end of the packet.	The data was corrupted while being written into the CPU Rx FIFO or data coming from the low speed link is corrupted.	None. If the problem persists, contact the Customer Care Center.
DMA Terminal Count	Received IMT packet length is longer than the max allowed. Detected by hardware.	Card insertion/removal or boot.	None if card has booted or was just inserted. Clear the stats and if the problem persists, contact the Customer Care Center.
CPU Tx Buffer EOB	A packet that was being transmitted from the CPU Tx Buffer did not have an EOM.	The data was corrupted while being written into or being read from the FIFO.	None. If the problem persists, contact the Customer Care Center.
CPU Tx Buffer Full	Transmit Buffer Full: The Tx Buffer unexpectedly filled up.	Either the COM software attempted to transmit too much data at once or the Tx logic was unable to transmit the data.	None. If the problem persists, contact the Customer Care Center.
CPU Tx Buffer Half Full	Transmit Buffer Half Full: Watermark indication that this interface is backed up through ½ of its available storage.	Relatively heavy outbound traffic on this interface can cause these counts to increment.	None. Buffer Half Full is just an indication, no action is required.

Table 4-43 (Cont.) rept-imt-info Statistics, Low Speed Summary (rept-imt-info:report=(hmutexerr, hiprerr, or hipr2err))

Stat Label – Low Speed Error & Event Counts	Explanation of Stat	Probable Cause	Recommended Action
CPU Rx FIFO Full	Receive FIFO Full: The Rx FIFO unexpectedly filled up.	Indicates that data was received at a higher rate than could be processed by the Communications processor.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If the errors continue, a problem may exist. Contact the Customer Care Center.
CPU Rx FIFO Half Full	Receive FIFO Half Full: Watermark indication that this interface is backed up through ½ of its available storage.	Relatively heavy inbound traffic on this interface can cause these counts to increment.	None. FIFO half full is just an indication, no action is required.
IMT Bypass FIFO Full	IMT Bypass FIFO Full: The bypass FIFO unexpectedly filled up.	Relatively heavy traffic on this interface can cause these counts to increment. If these counts occur in the field, a software problem may exist.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If the errors continue, a problem may exist. Contact the Customer Care Center.
IMT Bypass FIFO Half Full	IMT Bypass FIFO Half Full: Watermark indication that this interface is backed up through ½ of its available storage.	Relatively heavy inbound traffic on this interface can cause these counts to increment.	None. FIFO half full is just an indication, no action is required.

High Speed Summary**Table 4-44 rept-imt-info Statistics, High Speed Summary**

Stat Label – High Speed Error & Event Counts	Explanation of Stat	Probable Cause	Recommended Action
IMT Rx Disparity Error	Fibre Channel Receive Packet with Disparity Errors: Parity error in received packet. Usually caused by corrupted data.	Should not occur in a properly functioning system and may indicate a hardware failure.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact the Customer Care Center.

Table 4-44 (Cont.) rept-imt-info Statistics, High Speed Summary

Stat Label – High Speed Error & Event Counts	Explanation of Stat	Probable Cause	Recommended Action
IMT Rx Sync Lost Error (This error count is not used in MUX card.)	Fibre Channel Receive Lost Synchronization Errors: The receiver on this interface lost synchronization.	Should not occur in a properly functioning system and may indicate a hardware failure.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact the Customer Care Center.
IMT Rx Code Word Error	Fibre Channel Receive code Word Errors: Error in received packet. Caused by corrupted data.	Should not occur in a properly functioning system and may indicate a hardware failure.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If the errors continue, a problem may exist. Contact the Customer Care Center.
IMT Rx Packet SOM Before EOM	Fibre Channel Receive Packet with Start of Message without a previous End of Message Errors: The software detected the start of a new packet before the end of the previous packet was detected.	Should not occur in a properly functioning system and may indicate a hardware failure.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.
IMT Bypass FIFO Full	Fibre Channel Bypass FIFO Full: The FIFO has over run and data has been lost. May result in significant downstream errors.	Should not occur in a properly functioning system, and may indicate a software or hardware failure.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact the Customer Care Center.
IMT Bypass FIFO Half Full	Fibre Channel Bypass FIFO Half Full: Watermark indication that this interface has backed up to the half way point of its capabilities.	Relatively heavy traffic on this interface can cause these counts to increment.	None. FIFO Half Full is just an indication: no action is required.
IMT Rx FIFO Full	Fibre Channel Receive FIFO Full: The FIFO has over run and data has been lost. May result in significant downstream errors.	Should not occur in a properly functioning system. Indicates a software or hardware failure	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact the Customer Care Center.

Table 4-44 (Cont.) rept-imt-info Statistics, High Speed Summary

Stat Label – High Speed Error & Event Counts	Explanation of Stat	Probable Cause	Recommended Action
IMT Rx FIFO Half Full	Fibre Channel Receive FIFO Half Full: Watermark indication that this interface has backed up to the half way point of its capabilities.	Relatively heavy traffic on this interface can cause these counts to increment.	None. FIFO Full in this case is just an indication; no action is required.
IMT Tx FIFO Full	Fibre Channel Transmit FIFO Full: Watermark indication that this interface has transmitted substantial traffic.	Relatively heavy traffic on this interface can cause these counts to increment.	None. FIFO Full in this case is just an indication; no action is required.
IMT Tx FIFO Half Full	Fibre Channel Transmit FIFO Half Full: Watermark indication that this interface has backed up to the half way point of its capabilities.	Relatively heavy traffic on this interface can cause these counts to increment.	None. FIFO Half Full is just an indication; no action is required.
CPU Rx Fifo Full	Receive FIFO Full: The Rx FIFO unexpectedly filled up.	Indicates that data was received at a higher rate than could be processed by the Communications processor.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If the errors continue, a problem may exist. Contact the Customer Care Center.
CPU Rx FIFO Half Full	Receive FIFO Half Full: Watermark indication that this interface is backed up through ½ of its available storage.	Relatively heavy inbound traffic on this interface can cause these counts to increment.	None. FIFO half full is just an indication, no action is required.
CPU Rx FIFO Empty Before SOM	Occurs when valid packet data is read from the CPU Rx FIFO and the beginning (SOM) of the packet is found missing before all data was read.	The SOM was corrupted while being written into the CPU Rx FIFO from the high speed link.	None. This error will automatically empty the FIFO so that it is ready to continue receiving data. If the problem persists, contact the Customer Care Center.
CPU Rx FIFO Empty Before EOM	Occurs when valid packet data is read from the CPU Rx FIFO and the beginning (SOM) of the packet is found missing before all data was read.	The SOM was corrupted while being written into the CPU Rx FIFO or a partial packet was written into the FIFO from the high speed link.	None. This error will automatically empty the FIFO so that it is ready to continue receiving data. If the problem persists, contact the Customer Care Center.

Table 4-44 (Cont.) rept-imt-info Statistics, High Speed Summary

Stat Label – High Speed Error & Event Counts	Explanation of Stat	Probable Cause	Recommended Action
CPU Rx Packet SOM Before EOM	A Start of Message was received when an End of Message was expected from the Fibre Channel bus.	Packet was corrupted in the system (EOM lost) and has another packet appended to it.	None. If the problem persists, contact the Customer Care Center.
CPU Rx Packet CRC Error	Occurs when valid packet data is read from the CPU Rx FIFO and transferred to the processor memory and calculated CRC does NOT match the CRC word at the end of the packet.	The data was corrupted while being written into the CPU Rx FIFO or data coming from the high speed link is corrupted.	None. If the problem persists, contact the Customer Care Center.
DMA Terminal Count	Received IMT packet length (on Fibre Channel) is longer than the max allowed. Detected by hardware.	Card insertion/removal or boot.	None if card has booted or was just inserted. Clear the stats and if the problem persists, contact the Customer Care Center.
CPU Tx Buffer EOB	A packet that was being transmitted from the CPU Tx Buffer did not have an EOM.	The data was corrupted while being written into or being read from the FIFO.	None. If the problem persists, contact Customer Care Center.
CPU Tx Buffer Full	Transmit Buffer Full: The Tx Buffer unexpectedly filled up.	Either the COM software attempted to transmit too much data at once or the Tx logic was unable to transmit the data.	None. If the problem persists, contact the Customer Care Center.
CPU Tx Buffer Half Full	Transmit Buffer Half Full: Watermark indication that this interface is backed up through ½ of its available storage.	Relatively heavy outbound traffic on this interface can cause these counts to increment.	None. Buffer Half Full is an indication, no action is required.
IXP Rx FIFO Full	Fibre Channel IXP Receive FIFO Full: The IXP Rx FIFO momentarily became full. This event can occur under normal conditions and it does not indicate an issue.	Relatively heavy traffic on this interface can cause these counts to increase.	None. FIFO Full in this case is just an indication; no action is required.
IXP Rx FIFO Half Full	Fibre Channel IXP Receive FIFO Half Full: Watermark indication that this interface has backed up to the half way point of its capabilities.	Relatively heavy traffic on this interface can cause these counts to increment.	None. FIFO Full in this case is just an indication; no action is required.
IMT Rx Byte Per Minute AVG	Average per minute	Normal behavior	None. Information only.

Table 4-44 (Cont.) rept-imt-info Statistics, High Speed Summary

Stat Label – High Speed Error & Event Counts	Explanation of Stat	Probable Cause	Recommended Action
IMT Rx Byte Per Second AVG	Average per second	Normal behavior	None. Information only.
IMT Tx Byte Per Minute AVG	Average per minute	Normal behavior	None. Information only.
IMT Tx Byte Per Second AVG	Average per second	Normal behavior	None. Information only.
IMT Rx Packet Per Minute AVG	Average per minute	Normal behavior	None. Information only.
IMT Rx Packet Per Second AVG	Average per second	Normal behavior	None. Information only.
IMT Tx Packet Per Minute AVG	Average per minute	Normal behavior	None. Information only.
IMT Tx Packet Per Second AVG	Average per second	Normal behavior	None. Information only.
IMT Rx Errors Per Minute AVG	Average per minute	Normal behavior	None. Information only.
IMT Rx Errors Per Second AVG	Average per second	Normal behavior	None. Information only.
IMT Tx Errors Per Minute AVG	Average per minute	Normal behavior	None. Information only.
IMT Tx Errors Per Second AVG	Average per second	Normal behavior	None. Information only.
IMT Rx Safety Per Minute AVG	Average per minute	Normal behavior	None. Information only.
IMT Rx Safety Per Second AVG	Average per second	Normal behavior	None. Information only.
IMT Rx MSU Byte Per Minute AVG	Average bytes per minute received on the line card interface within reliable delivery packets.	Normal behavior	None. Information only.
IMT Rx MSU Byte Per Second AVG	Average bytes per second received on the line card interface within reliable delivery packets.	Normal behavior	None. Information only.
IMT Rx ASU Byte Per Minute AVG	Average bytes per minute received on the line card interface within acknowledgment packets.	Normal behavior	None. Information only.
IMT Rx ASU Byte Per Second AVG	Average bytes per second received on the line card interface within acknowledgment packets.	Normal behavior	None. Information only.
IMT Rx DSU Byte Per Minute AVG	Average bytes per minute received on the line card interface within best effort delivery packets.	Normal behavior	None. Information only.

Table 4-44 (Cont.) rept-imt-info Statistics, High Speed Summary

Stat Label – High Speed Error & Event Counts	Explanation of Stat	Probable Cause	Recommended Action
IMT Rx DSU Byte Per Second AVG	Average bytes per second received on the line card interface within best effort delivery packets.	Normal behavior	None. Information only.
IMT Rx MSU Byte Count	Number of bytes received on the line card interface within reliable delivery packets.	Normal behavior	None. Information Only
IMT Rx ASU Byte Count	Number of bytes received on the line card interface within acknowledgment packets.	Normal behavior	None. Information only.
IMT Rx DSU Byte Count	Number of bytes received on the line card interface within best effort delivery packets.	Normal behavior	None. Information only.
IMT RX HSU Byte Count	Number of bytes received on the line card interface within mux specific packets.	Normal behavior	None. Information only.
IMT Rx LSSU Byte Count	Number of bytes received on the line card interface within virtual circuit alignment packets.	Normal behavior	None. Information only.
IMT Rx TSU Byte Count	Number of bytes received on the line card interface within test data packets.	Normal behavior	None. Information only
IMT Rx SSU Byte Count	Number of bytes received on the line card interface within safety packets.	Normal behavior.	None. Information only.
IMT Rx BSU Byte Count	Number of bytes received on the line card interface within broadcast packets.	Normal behavior	None. Information only.
IMT Rx Byte Other	Number of bytes received on the line card interface within data packets other than the above.	Normal behavior	None. Information only.
IMT Rx Total Byte Count	Number of bytes received on the line card interface within all types of packets.	Normal behavior	None. Information only.

Table 4-44 (Cont.) rept-imt-info Statistics, High Speed Summary

Stat Label – High Speed Error & Event Counts	Explanation of Stat	Probable Cause	Recommended Action
IMT Rx MSU Packet Count	Number of reliable delivery packets received on the IMT.	Normal behavior	None. Information only.
IMT Rx ASU Packet Count	Number of acknowledgment packets received on the IMT.	Normal behavior	None. Information only.
IMT Rx DSU Packet Count	Number of best effort delivery message data packets received on the IMT.	Normal behavior	None. Information only.
IMT Rx HSU Packet Count	Number of mux card data packets received on the IMT.	Normal behavior	None. Information only.
IMT Rx LSSU Packet Count	Number of virtual circuit alignment packets received on the IMT.	Normal behavior	None. Information only.
IMT Rx TSU Packet Count	Number of test data packets received on the IMT.	Normal behavior.	None. Information only.
IMT Rx SSU Packet Count	Number of safety packets received on the IMT.	Normal behavior	None. Information only.
IMT Rx BSU Packet Count	Number of broadcast data packets received on the IMT.	Normal behavior	None. Information only.
IMT Rx Packet Other	Number of all packets types not counted by one of the above.	Normal behavior	None. Information only.
IMT Rx Total Packet Count	Number of packets received on the IMT, all types.	Normal behavior	None. Information only.
IMT Rx MSU Packet Safety Count	Number of reliable delivery message data packets that did not arrive to the intended recipient on the IMT.	Normal behavior	None. Information only.
IMT Rx ASU Packet Safety Count	Number of acknowledgment packets that did not arrive to the intended recipient on the IMT.	Normal behavior	None. Information only.
IMT Rx DSU Packet Safety Count	Number of best effort delivery packets that did not arrive to the intended recipient on the IMT.	Normal behavior	None. Information only.
IMT Rx HSU Packet Safety Count	Number of mux card packets that did not arrive to the intended recipient on the IMT.	Normal behavior	None. Information only.

Table 4-44 (Cont.) rept-imt-info Statistics, High Speed Summary

Stat Label – High Speed Error & Event Counts	Explanation of Stat	Probable Cause	Recommended Action
IMT Rx LSSU Packet Safety Count	Number of virtual circuit alignment packets that did not arrive to the intended recipient on the IMT.	Normal behavior	None. Information only.
IMT Rx TSU Packet Safety Count	Number of test data packets that did not arrive to the intended recipient on the IMT.	Normal behavior	None. Information only.
IMT Rx SSU Packet Safety Count	Number of safety packets that did not arrive to the intended recipient on the IMT.	Normal behavior	None. Information only.
IMT Rx BSU Packet Safety Count	Number of broadcast data packets that did not arrive to the intended recipient on the IMT.	Normal behavior	None. Information only.
IMT Rx Other Packet Safety Count	Number of other packets types not included above that did not arrive to the intended recipient on the IMT.	Normal behavior	None. Information only.
IMT Rx Total Packet Safety Count	Number of all packets that did not arrive to the intended recipient on the IMT.	Normal behavior	None. Information only.
IMT Rx Packet Violation Error	Number of packets received that contained an illegal character.	Card insertion, removal, boot or defective hardware	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a hardware issue exists. Contact Customer Care Center.
IMT Rx Packet CRC Error	Receive CRC error: Bad Checksum in received IMT packet. Caused by corrupted data within the received packet. Detected by hardware.	Card insertion, removal, or boot. Does not occur in a normal system and indicates a hardware failure: defective LIM card, MUX card, FC cable or backplane.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a hardware issue exists. Contact Customer Care Center.
IMT Rx Packet Format Error	Receive Format error: Occurs when the End of Message byte of an IMT packet is found missing. Detected by hardware/ software.	Card insertion, removal, or boot. Does not occur in a normal system and indicates a hardware failure: defective LIM card, MUX card, FC cable or backplane.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a hardware issue exists. Contact Customer Care Center.

Table 4-44 (Cont.) rept-imt-info Statistics, High Speed Summary

Stat Label – High Speed Error & Event Counts	Explanation of Stat	Probable Cause	Recommended Action
IMT Rx Packet Discard Error	Number of packets received that were discarded by this interface.	Relatively heavy traffic on this interface can cause these counts to increment.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear then there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.
IMT Tx Packet Format Error	Number of packets transmitted that were detected to contain a data format error.	Maintenance activity: Card insertion, removal, or boot. Does not occur in a normal system and indicates a hardware failure: defective LIM card, MUX card, FC cable or backplane.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear then there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.
IMT Tx Packet Discard Error	Number of packets that were discarded by the transmit interface.	Relatively heavy traffic on this interface can cause these counts to increment.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear then there is no action to perform. If errors continue a problem may exist. Contact Customer Care Center.

Miscellaneous Summary

Table 4-45 rept-imt-info Statistics, Miscellaneous Summary

Stat Label – Low Speed Error & Event Counts	Explanation of Stat	Probable Cause	Recommended Action
Shelf ID UART Framing Error	The Mux card at this location detected a framing error within the data stream containing its shelf address, transmitted by the MASP through the clock cable.	These errors can occur when a Mux card or a MASP has booted or been inserted/ removed from the slot.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If the errors continue, a problem may exist. Contact the Customer Care Center.
Shelf ID UART Overrun Error	The Mux card at this location detected an overrun error in the data stream containing its shelf address, transmitted by the MASP through the clock cable.	These errors can occur when a Mux card or a MASP has booted or been inserted/ removed from the slot.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If the errors continue, a problem may exist. Contact the Customer Care Center.

Output

An asterisk (*) is appended to each statistic in the output when one or more MUX cards are unable to report statistics during the collection of IMT statistics.

IMT statistics are displayed as '-' instead of zero for counts when the IMT bus is down or inhibited in the output for `rept-imt-info` reports for MUX cards.

```
rept-imt-info:report=err
```

```
rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0
```

```
IMT Fault Isolation Error Statistics
```

```
=====
SUMMARY REPORT: Totals accumulated from all requested cards for
all buckets
```

Statistic	Bus A Value	Bus B Value
-----	-----	-----
Rcv CRC Err	12	1
Primary Ctl Rcv Err	23	3
Violation Err	34	5
CPU Rcv FIFO Full	45	12

```
;
```

```
rept-imt-info:report=err:sloc=1101:eloc=1102:mode=stats
```

```
rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0
```

```
IMT Fault Isolation Error Statistics
```

```
-----
Totals accumulated from all requested cards for each bucket
```

Bucket	Statistic	Bus A Value	Bus B Value
-----	-----	-----	-----
00	Rcv CRC Err	1	2
	Rcv Invalid Len	1012345678	0
	CPU Rcv FIFO Full	23	123
01	No errors in this bucket.		

```
.
```

```
. (data continues for each hourly time period)
```

```
;
```

```
rept-imt-
```

```
info:report=err:sloc=1101:eloc=1102:mode=full:erronly=no
```

```
rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0
```

```
IMT Fault Isolation Error Statistics
```

```
-----
Totals accumulated from all requested cards for each bucket
```

Bucket	Statistic	Bus A Value	Bus B Value
-----	-----	-----	-----
00	Rcv CRC Err	0	0
	Rcv Format Err	0	0
	Rcv Invalid Len	1	0

	Primary Ctl Rcv Err	0	0
	Primary Ctl Tx Err	0	0
	Primary Ctl Sanity Err	0	0
	Violation Err	1	0
	IMT Rcv FIFO Half Full	0	0
	IMT Rcv FIFO Full	0	0
	CPU Rcv FIFO Half Full	0	0
	CPU Rcv FIFO Full	0	0
	MSU Retransmitted	0	0
	DMA Terminal Ct Intrpt	0	0
	SSU Pkts Txd	0	0
	SSU Pkts Rcvd	0	0
01	Rcv CRC Err	3	0
	Rcv Format Err	0	0
	Rcv Invalid Len	0	0
	Primary Ctl Rcv Err	0	0
	Primary Ctl Tx Err	0	0
	Primary Ctl Sanity Err	0	0
	Violation Err	0	0
	IMT Rcv FIFO Half Full	0	0
	IMT Rcv FIFO Full	0	0
	CPU Rcv FIFO Half Full	0	0
	CPU Rcv FIFO Full	0	0
	MSU Retransmitted	0	0
	DMA Terminal Ct Intrpt	0	0
	SSU Pkts Txd	0	0
	SSU Pkts Rcvd	0	0

(data continues for each hourly time period)

=====

SUMMARY REPORT: Totals accumulated from all requested cards for all buckets

Statistic	Bus A Value	Bus B Value
-----	-----	-----
Rcv CRC Err	3	0
Rcv Format Err	0	0
Rcv Invalid Len	1	0
Primary Ctl Rcv Err	1012345678	0
Primary Ctl Tx Err	0	0
Primary Ctl Sanity Err	0	0
Violation Err	1	0
IMT Rcv FIFO Half Full	0	0
IMT Rcv FIFO Full	0	0
CPU Rcv FIFO Half Full	23	0
CPU Rcv FIFO Full	0	0
MSU Retransmitted	0	0
DMA Terminal Ct Intrpt	0	0
SSU Pkts Txd	1	0
SSU Pkts Rcvd	0	0

;

This example output displays the output when IMT Bus A and Bus B are normal and all HMUX cards are reporting the statistics:

rept-imt-info:report=hmuxerr:sbucket=0

rlghncxa03w 10-01-17 00:10:20 PST EAGLE 42.0.0

HMUX Summary Report: Summed across all requested cards for each bucket

Collecting HMUX stats: Extended processing time required.

HMUX Hourly Bucket Statistics

=====

====

Bucket	Low Speed Statistic	BUS A Value	BUS B Value
----	-----	-----	-----
00	IMT Rx Packet CRC Error	0123456789	0123456789
	IMT Rx Packet Format Error	0123456789	0123456789
	IMT Rx Violation Error	0123456789	0123456789
	CPU Rx FIFO Full	0123456789	0123456789
	CPU Rx FIFO Half Full	0123456789	0123456789
	CPU Rx FIFO Empty Before SOM	0123456789	0123456789
	CPU Rx FIFO Empty Before EOM	0123456789	0123456789
	CPU Rx Packet SOM Before EOM	0123456789	0123456789
	CPU Rx Packet CRC Error	0123456789	0123456789
	DMA terminal count	0123456789	0123456789
	CPU Tx Buffer EOB	0123456789	0123456789
	CPU Tx Buffer Full	0123456789	0123456789
	CPU Tx Buffer Half Full	0123456789	0123456789
	IMT Bypass FIFO Full	0123456789	0123456789
	IMT Bypass FIFO Half Full	0123456789	0123456789
	IMT Rx FIFO Full	0123456789	0123456789
	IMT Rx FIFO Half Full	0123456789	0123456789
	High Speed Statistic	BUS A Value	BUS B Value
	-----	-----	-----
	IMT Rx Packet CRC Error	0123456789	0123456789
	IMT Rx Disparity Error	0123456789	0123456789
	IMT Rx Sync Lost Error	0123456789	0123456789
	IMT Rx Code Word Error	0123456789	0123456789
	CPU Rx FIFO Full	0123456789	0123456789
	CPU Rx FIFO Half Full	0123456789	0123456789
	CPU Rx FIFO Empty Before SOM	0123456789	0123456789
	CPU Rx FIFO Empty Before EOM	0123456789	0123456789
	CPU Rx Packet SOM Before EOM	0123456789	0123456789
	CPU Rx Packet CRC Error	0123456789	0123456789
	DMA terminal count	0123456789	0123456789
	CPU Tx Buffer EOB	0123456789	0123456789
	CPU Tx Buffer Full	0123456789	0123456789
	CPU Tx Buffer Half Full	0123456789	0123456789
	IMT Bypass FIFO Full	0123456789	0123456789
	IMT Bypass FIFO Half Full	0123456789	0123456789
	IMT Rx FIFO Full	0123456789	0123456789
	IMT Rx FIFO Half Full	0123456789	0123456789
	Misc Speed Statistic	BUS A Value	BUS B Value
	-----	-----	-----
	Shelf ID UART Framing Error	0123456789	0123456789
	Shelf ID UART Overrun Error	0123456789	0123456789

HMUX CUMULATIVE Statistics

```

=====
Low Speed Statistic          BUS A Value  BUS B Value
-----
IMT Rx Packet CRC Error     0123456789  0123456789
IMT Rx Packet Format Error   0123456789  0123456789
IMT Rx Violation Error      0123456789  0123456789
CPU Rx FIFO Full            0123456789  0123456789
CPU Rx FIFO Half Full       0123456789  0123456789
CPU Rx FIFO Empty Before SOM 0123456789  0123456789
CPU Rx FIFO Empty Before EOM 0123456789  0123456789
CPU Rx Packet SOM Before EOM 0123456789  0123456789
CPU Rx Packet CRC Error     0123456789  0123456789
DMA terminal count           0123456789  0123456789
CPU Tx Buffer EOB            0123456789  0123456789
CPU Tx Buffer Full           0123456789  0123456789
CPU Tx Buffer Half Full      0123456789  0123456789
IMT Bypass FIFO Full        0123456789  0123456789
IMT Bypass FIFO Half Full   0123456789  0123456789
IMT Rx FIFO Full            0123456789  0123456789
IMT Rx FIFO Half Full       0123456789  0123456789

High Speed Statistic        BUS A Value  BUS B Value
-----
IMT Rx Packet CRC Error     0123456789  0123456789
IMT Rx Disparity Error      0123456789  0123456789
IMT Rx Sync Lost Error      0123456789  0123456789
IMT Rx Code Word Error      0123456789  0123456789
CPU Rx FIFO Full            0123456789  0123456789
CPU Rx FIFO Half Full       0123456789  0123456789
CPU Rx FIFO Empty Before SOM 0123456789  0123456789
CPU Rx FIFO Empty Before EOM 0123456789  0123456789
CPU Rx Packet SOM Before EOM 0123456789  0123456789
CPU Rx Packet CRC Error     0123456789  0123456789
DMA terminal count           0123456789  0123456789
CPU Tx Buffer EOB            0123456789  0123456789
CPU Tx Buffer Full           0123456789  0123456789
CPU Tx Buffer Half Full      0123456789  0123456789
IMT Bypass FIFO Full        0123456789  0123456789
IMT Bypass FIFO Half Full   0123456789  0123456789
IMT Rx FIFO Full            0123456789  0123456789
IMT Rx FIFO Half Full       0123456789  0123456789

Misc Speed Statistic        BUS A Value  BUS B Value
-----
Shelf ID UART Framing Error  0123456789  0123456789
Shelf ID UART Overrun Error  0123456789  0123456789
;

```

This example shows the output when IMT Bus A and Bus B are normal and all MUX cards are reporting the statistics:

rept-imt-info:report=hiprerr:sbucket=0

rlghncxa03w 10-01-17 00:10:20 PST EAGLE 42.0.0

HIPR Summary Report: Summed across all requested cards for each bucket

HIPR Hourly Bucket Statistics

=====
=====

Bucket	Loc	Low Speed Statistic	BUS A Value	BUS B Value
00	----	IMT Rx Packet CRC Error	0123456789	0123456789
		IMT Rx Packet Format Error	0123456789	0123456789
		IMT Rx Violation Error	0123456789	0123456789
		IMT Rx Command Error	0123456789	0123456789
		IMT Rx FIFO Full	0123456789	0123456789
		IMT Rx FIFO Half Full	0123456789	0123456789
		IMT Tx FIFO Full	0123456789	0123456789
		IMT Tx FIFO Half Full	0123456789	0123456789
		High Speed Statistic	BUS A Value	BUS B Value
		IMT Rx Packet Format Error	0123456789	0123456789
		IMT Rx Disparity Error	0123456789	0123456789
		IMT Rx Sync Lost Error	0123456789	0123456789
		IMT Rx Code Word Error	0123456789	0123456789
		IMT Rx Packet SOM Before EOM	0123456789	0123456789
		IMT Rx Packet CRC Error	0123456789	0123456789
		IMT Bypass FIFO Full	0123456789	0123456789
		IMT Bypass FIFO Half Full	0123456789	0123456789
		IMT Rx FIFO Full	0123456789	0123456789
		IMT Rx FIFO Half Full	0123456789	0123456789
		IMT Tx FIFO Full	0123456789	0123456789
		IMT Tx FIFO Half Full	0123456789	0123456789
		IXP Rx FIFO Full	0123456789	0123456789
		IXP Rx FIFO Half Full	0123456789	0123456789
		Misc Speed Statistic	BUS A Value	BUS B Value
		Shelf ID UART Framing Error	0123456789	0123456789
		Shelf ID UART Overrun Error	0123456789	0123456789

HIPR CUMULATIVE Statistics

=====
=====

Low Speed Statistic	BUS A Value	BUS B Value
IMT Rx Packet CRC Error	0123456789	0123456789
IMT Rx Packet Format Error	0123456789	0123456789
IMT Rx Violation Error	0123456789	0123456789

```

IMT Rx Command Error          0123456789  0123456789
IMT Rx FIFO Full              0123456789  0123456789
IMT Rx FIFO Half Full        0123456789  0123456789
IMT Tx FIFO Full              0123456789  0123456789
IMT Tx FIFO Half Full        0123456789  0123456789

High Speed Statistic          BUS A Value  BUS B Value
-----
IMT Rx Packet Format Error    0123456789  0123456789
IMT Rx Disparity Error       0123456789  0123456789
IMT Rx Sync Lost Error      0123456789  0123456789
IMT Rx Code Word Error      0123456789  0123456789
IMT Rx Packet SOM Before EOM 0123456789  0123456789
IMT Rx Packet CRC Error     0123456789  0123456789
IMT Bypass FIFO Full        0123456789  0123456789
IMT Bypass FIFO Half Full   0123456789  0123456789
IMT Rx FIFO Full            0123456789  0123456789
IMT Rx FIFO Half Full      0123456789  0123456789
IMT Tx FIFO Full            0123456789  0123456789
IMT Tx FIFO Half Full      0123456789  0123456789
IXP Rx FIFO Full            0123456789  0123456789
IXP Rx FIFO Half Full      0123456789  0123456789

Misc Speed Statistic          BUS A Value  BUS B Value
-----
Shelf ID UART Framing Error  0123456789  0123456789
Shelf ID UART Overrun Error  0123456789  0123456789

```

;

This example shows the output when both IMT Bus A and Bus B are normal and all MUX cards are reporting the statistics:

```
rept-imt-info:report=hiprerr:ssshelf=1100:sslot=1:eslot=2:sbucket=0
```

```
rlghncxa03w 10-01-17 00:10:20 PST EAGLE 42.0.0
```

```
  HIPR Summary Report: Summed across all requested cards for each bucket
```

```
  HIPR Hourly Bucket Statistics
```

```
=====
```

```

Bucket Loc  Low Speed Statistic          BUS A Value  BUS B Value
-----
00      1101  IMT Rx Packet CRC Error    0123456789  0123456789
          IMT Rx Packet Format Error 0123456789  0123456789
          IMT Rx Violation Error    0123456789  0123456789
          IMT Rx Command Error      0123456789  0123456789
          IMT Rx FIFO Full          0123456789  0123456789
          IMT Rx FIFO Half Full     0123456789  0123456789
          IMT Tx FIFO Full          0123456789  0123456789
          IMT Tx FIFO Half Full     0123456789  0123456789

```

```

Bucket Loc  Low Speed Statistic          BUS A Value  BUS B Value
-----

```

```

00      1102  IMT Rx Packet CRC Error      0123456789  0123456789
           IMT Rx Packet Format Error    0123456789  0123456789
           IMT Rx Violation Error       0123456789  0123456789
           IMT Rx Command Error         0123456789  0123456789
           IMT Rx FIFO Full             0123456789  0123456789
           IMT Rx FIFO Half Full        0123456789  0123456789
           IMT Tx FIFO Full             0123456789  0123456789
           IMT Tx FIFO Half Full        0123456789  0123456789

           High Speed Statistic          BUS A Value  BUS B Value
           -----
           IMT Rx Packet Format Error    0123456789  0123456789
           IMT Rx Disparity Error        0123456789  0123456789
           IMT Rx Sync Lost Error        0123456789  0123456789
           IMT Rx Code Word Error        0123456789  0123456789
           IMT Rx Packet SOM Before EOM  0123456789  0123456789
           IMT Rx Packet CRC Error       0123456789  0123456789
           IMT Bypass FIFO Full          0123456789  0123456789
           IMT Bypass FIFO Half Full     0123456789  0123456789
           IMT Rx FIFO Full             0123456789  0123456789
           IMT Rx FIFO Half Full        0123456789  0123456789
           IMT Tx FIFO Full             0123456789  0123456789
           IMT Tx FIFO Half Full        0123456789  0123456789
           IXP Rx FIFO Full             0123456789  0123456789
           IXP Rx FIFO Half Full        0123456789  0123456789
           Misc Speed Statistic          BUS A Value  BUS B Value
           -----
           Shelf ID UART Framing Error   0123456789  0123456789
           Shelf ID UART Overrun Error   0123456789  0123456789

```

HIPR CUMULATIVE Statistics

```

=====
====

           Low Speed Statistic          BUS A Value  BUS B Value
           -----
           IMT Rx Packet CRC Error      0123456789  0123456789
           IMT Rx Packet Format Error    0123456789  0123456789
           IMT Rx Violation Error       0123456789  0123456789
           IMT Rx Command Error         0123456789  0123456789
           IMT Rx FIFO Full             0123456789  0123456789
           IMT Rx FIFO Half Full        0123456789  0123456789
           IMT Tx FIFO Full             0123456789  0123456789
           IMT Tx FIFO Half Full        0123456789  0123456789

           High Speed Statistic          BUS A Value  BUS B Value
           -----
           IMT Rx Packet Format Error    0123456789  0123456789
           IMT Rx Disparity Error        0123456789  0123456789
           IMT Rx Sync Lost Error        0123456789  0123456789
           IMT Rx Code Word Error        0123456789  0123456789
           IMT Rx Packet SOM Before EOM  0123456789  0123456789
           IMT Rx Packet CRC Error       0123456789  0123456789
           IMT Bypass FIFO Full          0123456789  0123456789

```



```

IMT Bypass FIFO Half Full    0123456789    0123456789
IMT Rx FIFO Full             0123456789    0123456789
IMT Rx FIFO Half Full        0123456789    0123456789
IMT Tx FIFO Full             0123456789    0123456789
IMT Tx FIFO Half Full        0123456789    0123456789
IXP Rx FIFO Full             0123456789    0123456789
IXP Rx FIFO Half Full        0123456789    0123456789

Misc Speed Statistic          BUS A Value    BUS B Value
-----
Shelf ID UART Framing Error   0123456789    0123456789
Shelf ID UART Overrun Error   0123456789    0123456789

```

;

rept-imt-info:report=hipr2err:sbucket=0

tekelecstp 11-16-12 14:01:34 EST EAGLE 44.0.0

HIPR2 Summary Report: Summed across all requested cards for each bucket

HIPR2 Hourly Bucket Statistics

=====

```

      Bucket Loc  Low Speed Statistic          BUS A Value  BUS B
Value
-----
      00  ----  IMT Rx Packet CRC Error          0123456789
0123456789
              IMT Rx Packet Format Error          0123456789
0123456789
              IMT Rx Violation Error          0123456789
0123456789
              IMT Rx Command Error          0123456789
0123456789
              IMT Rx FIFO Full          0123456789
0123456789
              IMT Rx FIFO Half Full          0123456789
0123456789
              IMT Tx FIFO Full          0123456789
0123456789
              IMT Tx FIFO Half Full          0123456789
0123456789

High Speed Statistic          BUS A Value  BUS B
Value
-----
0123456789  IMT Rx Disparity Error          0123456789
0123456789  IMT Rx Code Word Error          0123456789
0123456789  IMT Rx Packet SOM Before EOM          0123456789

```

0123456789	IMT Bypass FIFO Full	0123456789
0123456789	IMT Bypass FIFO Half Full	0123456789
0123456789	IMT Rx FIFO Full	0123456789
0123456789	IMT Rx FIFO Half Full	0123456789
0123456789	IMT Tx FIFO Full	0123456789
0123456789	IMT Tx FIFO Half Full	0123456789
0123456789	IXP Rx FIFO Full	0123456789
0123456789	IXP Rx FIFO Half Full	0123456789
0123456789	IMT Rx Byte Per Minute AVG	0123456789
0123456789	IMT Rx Byte Per Second AVG	0123456789
0123456789	IMT Tx Byte Per Minute AVG	0123456789
0123456789	IMT Tx Byte Per Second AVG	0123456789
0123456789	IMT Rx Packet Per Minute AVG	0123456789
0123456789	IMT Rx Packet Per Second AVG	0123456789
0123456789	IMT Tx Packet Per Minute AVG	0123456789
0123456789	IMT Tx Packet Per Second AVG	0123456789
0123456789	IMT Rx Errors Per Minute AVG	0123456789
0123456789	IMT Rx Errors Per Second AVG	0123456789
0123456789	IMT Tx Errors Per Minute AVG	0123456789
0123456789	IMT Tx Errors Per Second AVG	0123456789
0123456789	IMT Rx Safety Per Minute AVG	0123456789
0123456789	IMT Rx Safety Per Second AVG	0123456789
0123456789	IMT Rx MSU Byte Per Minute AVG	0123456789
0123456789	IMT Rx MSU Byte Per Second AVG	0123456789
0123456789	IMT Rx ASU Byte Per Minute AVG	0123456789
0123456789	IMT Rx ASU Byte Per Second AVG	0123456789
0123456789	IMT Rx DSU Byte Per Minute AVG	0123456789

0123456789	IMT Rx DSU Byte Per Second AVG	0123456789
0123456789	IMT Rx MSU Byte Count	0123456789
0123456789	IMT Rx ASU Byte Count	0123456789
0123456789	IMT Rx DSU Byte Count	0123456789
0123456789	IMT Rx HSU Byte Count	0123456789
0123456789	IMT Rx LSSU Byte Count	0123456789
0123456789	IMT Rx TSU Byte Count	0123456789
0123456789	IMT Rx SSU Byte Count	0123456789
0123456789	IMT Rx BSU Byte Count	0123456789
0123456789	IMT Rx Byte Other	0123456789
0123456789	IMT Rx Total Byte Count	0123456789
0123456789	IMT Rx MSU Packet Count	0123456789
0123456789	IMT Rx ASU Packet Count	0123456789
0123456789	IMT Rx DSU Packet Count	0123456789
0123456789	IMT Rx HSU Packet Count	0123456789
0123456789	IMT Rx LSSU Packet Count	0123456789
0123456789	IMT Rx TSU Packet Count	0123456789
0123456789	IMT Rx SSU Packet Count	0123456789
0123456789	IMT Rx BSU Packet Count	0123456789
0123456789	IMT Rx Packet Other	0123456789
0123456789	IMT Rx Total Packet Count	0123456789
0123456789	IMT Rx MSU Packet Safety Count	0123456789
0123456789	IMT Rx ASU Packet Safety Count	0123456789
0123456789	IMT Rx DSU Packet Safety Count	0123456789
0123456789	IMT Rx HSU Packet Safety Count	0123456789
0123456789	IMT Rx LSSU Packet Safety Count	0123456789
0123456789	IMT Rx TSU Packet Safety Count	0123456789
0123456789	IMT Rx SSU Packet Safety Count	0123456789

0123456789	IMT Rx BSU Packet Safety Count	0123456789
0123456789	IMT Rx Other Packet Safety Count	0123456789
0123456789	IMT Rx Total Packet Safety Count	0123456789
0123456789	IMT Rx Packet Violation Error	0123456789
0123456789	IMT Rx Packet CRC Error	0123456789
0123456789	IMT Rx Packet Format Error	0123456789
0123456789	IMT Rx Packet Discard Error	0123456789
0123456789	IMT Tx Packet Format Error	0123456789
0123456789	IMT Tx Packet Discard Error	0123456789
	Misc Speed Statistic	BUS A Value
BUS B Value	-----	-----

0123456789	Shelf ID UART Framing Error	0123456789
0123456789	Shelf ID UART Overrun Error	0123456789

HIPR2 CUMULATIVE Statistics

```
=====
=====
Low Speed Statistic          BUS A Value
BUS B Value                  -----
-----
0123456789                  IMT Rx Packet CRC Error    0123456789
0123456789                  IMT Rx Packet Format Error  0123456789
0123456789                  IMT Rx Violation Error     0123456789
0123456789                  IMT Rx Command Error       0123456789
0123456789                  IMT Rx FIFO Full           0123456789
0123456789                  IMT Rx FIFO Half Full     0123456789
0123456789                  IMT Tx FIFO Full           0123456789
0123456789                  IMT Tx FIFO Half Full     0123456789
```

Value	High Speed Statistic	BUS A Value	BUS B
-----	-----	-----	
0123456789	IMT Rx Disparity Error	0123456789	
0123456789	IMT Rx Code Word Error	0123456789	
0123456789	IMT Rx Packet SOM Before EOM	0123456789	
0123456789	IMT Bypass FIFO Full	0123456789	
0123456789	IMT Bypass FIFO Half Full	0123456789	
0123456789	IMT Rx FIFO Full	0123456789	
0123456789	IMT Rx FIFO Half Full	0123456789	
0123456789	IMT Tx FIFO Full	0123456789	
0123456789	IMT Tx FIFO Half Full	0123456789	
0123456789	IXP Rx FIFO Full	0123456789	
0123456789	IXP Rx FIFO Half Full	0123456789	
0123456789	IMT Rx Byte Per Minute AVG	0123456789	
0123456789	IMT Rx Byte Per Second AVG	0123456789	
0123456789	IMT Tx Byte Per Minute AVG	0123456789	
0123456789	IMT Tx Byte Per Second AVG	0123456789	
0123456789	IMT Rx Packet Per Minute AVG	0123456789	
0123456789	IMT Rx Packet Per Second AVG	0123456789	
0123456789	IMT Tx Packet Per Minute AVG	0123456789	
0123456789	IMT Tx Packet Per Second AVG	0123456789	
0123456789	IMT Rx Errors Per Minute AVG	0123456789	
0123456789	IMT Rx Errors Per Second AVG	0123456789	
0123456789	IMT Tx Errors Per Minute AVG	0123456789	
0123456789	IMT Tx Errors Per Second AVG	0123456789	
0123456789	IMT Rx Safety Per Minute AVG	0123456789	
0123456789	IMT Rx Safety Per Second AVG	0123456789	

0123456789	IMT Rx MSU Byte Per Minute AVG	0123456789
0123456789	IMT Rx MSU Byte Per Second AVG	0123456789
0123456789	IMT Rx ASU Byte Per Minute AVG	0123456789
0123456789	IMT Rx ASU Byte Per Second AVG	0123456789
0123456789	IMT Rx DSU Byte Per Minute AVG	0123456789
0123456789	IMT Rx DSU Byte Per Second AVG	0123456789
0123456789	IMT Rx MSU Byte Count	0123456789
0123456789	IMT Rx ASU Byte Count	0123456789
0123456789	IMT Rx DSU Byte Count	0123456789
0123456789	IMT Rx HSU Byte Count	0123456789
0123456789	IMT Rx LSSU Byte Count	0123456789
0123456789	IMT Rx TSU Byte Count	0123456789
0123456789	IMT Rx SSU Byte Count	0123456789
0123456789	IMT Rx BSU Byte Count	0123456789
0123456789	IMT Rx Byte Other	0123456789
0123456789	IMT Rx Total Byte Count	0123456789
0123456789	IMT Rx MSU Packet Count	0123456789
0123456789	IMT Rx ASU Packet Count	0123456789
0123456789	IMT Rx DSU Packet Count	0123456789
0123456789	IMT Rx HSU Packet Count	0123456789
0123456789	IMT Rx LSSU Packet Count	0123456789
0123456789	IMT Rx TSU Packet Count	0123456789
0123456789	IMT Rx SSU Packet Count	0123456789
0123456789	IMT Rx BSU Packet Count	0123456789
0123456789	IMT Rx Packet Other	0123456789
0123456789	IMT Rx Total Packet Count	0123456789
0123456789	IMT Rx MSU Packet Safety Count	0123456789
0123456789	IMT Rx ASU Packet Safety Count	0123456789

```

0123456789          IMT Rx DSU Packet Safety Count          0123456789
0123456789          IMT Rx HSU Packet Safety Count          0123456789
0123456789          IMT Rx LSSU Packet Safety Count         0123456789
0123456789          IMT Rx TSU Packet Safety Count          0123456789
0123456789          IMT Rx SSU Packet Safety Count          0123456789
0123456789          IMT Rx BSU Packet Safety Count          0123456789
0123456789          IMT Rx Other Packet Safety Count        0123456789
0123456789          IMT Rx Total Packet Safety Count        0123456789
0123456789          IMT Rx Packet Violation Error          0123456789
0123456789          IMT Rx Packet CRC Error                0123456789
0123456789          IMT Rx Packet Format Error              0123456789
0123456789          IMT Rx Packet Discard Error            0123456789
0123456789          IMT Tx Packet Format Error              0123456789
0123456789          IMT Tx Packet Discard Error            0123456789
0123456789
                                Misc Speed Statistic          BUS A Value  BUS B
Value -----
-----
0123456789          Shelf ID UART Framing Error            0123456789
0123456789          Shelf ID UART Overrun Error            0123456789
0123456789
;

```

This example shows the output when IMT Bus A is inhibited:

```
rept-imt-info:report=hiprerr:sbucket=0
```

```
rlghncxa03w 10-01-27 00:10:20 PST EAGLE 42.0.0
```

```
  HIPR Summary Report: Summed across all requested cards for each bucket
```

```
  HIPR Hourly Bucket Statistics
```

```

=====
Bucket Loc  Low Speed Statistic          BUS A Value  BUS B Value
-----
00      ----  IMT Rx Packet CRC Error          -           0
          IMT Rx Packet Format Error          -           0

```

IMT Rx Violation Error	-	101
IMT Rx Command Error	-	0
IMT Rx FIFO Full	-	0
IMT Rx FIFO Half Full	-	0
IMT Tx FIFO Full	-	0
IMT Tx FIFO Half Full	-	0
High Speed Statistic		
-----	BUS A Value	BUS B Value
-----	-----	-----
IMT Rx Packet Format Error	-	0
IMT Rx Disparity Error	-	0
IMT Rx Sync Lost Error	-	0
IMT Rx Code Word Error	-	0
IMT Rx Packet SOM Before EOM	-	0
IMT Rx Packet CRC Error	-	0
IMT Bypass FIFO Full	-	0
IMT Bypass FIFO Half Full	-	0
IMT Rx FIFO Full	-	0
IMT Rx FIFO Half Full	-	0
IMT Tx FIFO Full	-	0
IMT Tx FIFO Half Full	-	0
IXP Rx FIFO Full	-	0
IXP Rx FIFO Half Full	-	0
Misc Speed Statistic		
-----	BUS A Value	BUS B Value
-----	-----	-----
Shelf ID UART Framing Error	-	0
Shelf ID UART Overrun Error	-	0

HIPR CUMULATIVE Statistics

```
=====
=====
```

Low Speed Statistic		
-----	BUS A Value	BUS B Value
-----	-----	-----
IMT Rx Packet CRC Error	-	0
IMT Rx Packet Format Error	-	0
IMT Rx Violation Error	-	1165
IMT Rx Command Error	-	0
IMT Rx FIFO Full	-	0
IMT Rx FIFO Half Full	-	0
IMT Tx FIFO Full	-	0
IMT Tx FIFO Half Full	-	1
High Speed Statistic		
-----	BUS A Value	BUS B Value
-----	-----	-----
IMT Rx Packet Format Error	-	0
IMT Rx Disparity Error	-	0
IMT Rx Sync Lost Error	-	0
IMT Rx Code Word Error	-	0
IMT Rx Packet SOM Before EOM	-	0
IMT Rx Packet CRC Error	-	0
IMT Bypass FIFO Full	-	1
IMT Bypass FIFO Half Full	-	1


```

IMT Rx FIFO Full          -          0
IMT Rx FIFO Half Full    -          0
IMT Tx FIFO Full         -          0
IMT Tx FIFO Half Full    -          0
IXP Rx FIFO Full         -          0
IXP Rx FIFO Half Full    -          0

Misc Speed Statistic      BUS A Value  BUS B Value
-----
Shelf ID UART Framing Error  -          35
Shelf ID UART Overrun Error  -          0

```

;

This example shows the output when at least one card on the IMT Bus does not respond when statistics are collected:

```
rept-imt-info:report=hiprerr:sbucket=0
```

```
rlghncxa03w 10-01-27 00:10:20 PST EAGLE 42.0.0
```

```
  HIPR Summary Report: Summed across all requested cards for each bucket
```

```
  HIPR Hourly Bucket Statistics
```

```

=====
Bucket Loc  Low Speed Statistic      BUS A Value  BUS B Value
-----
00         ----
IMT Rx Packet CRC Error    0            0
IMT Rx Packet Format Error  0            0
IMT Rx Violation Error     128          0
IMT Rx Command Error       0            0
IMT Rx FIFO Full           0            0
IMT Rx FIFO Half Full      0            0
IMT Tx FIFO Full           36           0
IMT Tx FIFO Half Full     182          0

High Speed Statistic      BUS A Value  BUS B Value
-----
IMT Rx Packet Format Error  0            0
IMT Rx Disparity Error     0            0
IMT Rx Sync Lost Error     0            0
IMT Rx Code Word Error     0            0
IMT Rx Packet SOM Before EOM 0            0
IMT Rx Packet CRC Error    0            0
IMT Bypass FIFO Full       0            0
IMT Bypass FIFO Half Full  0            0
IMT Rx FIFO Full           0            0
IMT Rx FIFO Half Full      0            0
IMT Tx FIFO Full           0            0
IMT Tx FIFO Half Full      0            0
IXP Rx FIFO Full           0            0
IXP Rx FIFO Half Full      0            0

Misc Speed Statistic      BUS A Value  BUS B Value
-----

```

Shelf ID UART Framing Error	2	0
Shelf ID UART Overrun Error	0	0

HIPR CUMULATIVE Statistics

```
=====
=====
Low Speed Statistic          BUS A Value  BUS B Value
-----
IMT Rx Packet CRC Error      0             0*
IMT Rx Packet Format Error    0             0*
IMT Rx Violation Error       1415          0*
IMT Rx Command Error         0             0*
IMT Rx FIFO Full             0             0*
IMT Rx FIFO Half Full        0             0*
IMT Tx FIFO Full             120           0*
IMT Tx FIFO Half Full        1113          0*

High Speed Statistic        BUS A Value  BUS B Value
-----
IMT Rx Packet Format Error    0             0*
IMT Rx Disparity Error        0             0*
IMT Rx Sync Lost Error        15            0*
IMT Rx Code Word Error        0             0*
IMT Rx Packet SOM Before EOM  0             0*
IMT Rx Packet CRC Error      0             0*
IMT Bypass FIFO Full          1             0*
IMT Bypass FIFO Half Full     1             0*
IMT Rx FIFO Full              0             0*
IMT Rx FIFO Half Full         0             0*
IMT Tx FIFO Full              0             0*
IMT Tx FIFO Half Full         0             0*
IXP Rx FIFO Full              0             0*
IXP Rx FIFO Half Full         0             0*

Misc Speed Statistic        BUS A Value  BUS B Value
-----
Shelf ID UART Framing Error   59            0*
Shelf ID UART Overrun Error   0             0*
```

;

Legend

IMT Statistics:

- **Bucket**—The hourly time periods (*buckets*) for which a report was requested.
- **Statistic**—The error statistic type for the IMT buses A and B.
- **Bus A Value**—The number of occurrences of the type of error displayed in the Statistic column for the IMT bus A.
- **Bus B Value**—The number of occurrences of the type of error displayed in the Statistic column for the IMT bus B.

- **Low Speed Statistic**—The error statistic type for the low speed 125 Mbps secondary rings with MUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).
- **High Speed Statistic**—The error statistic type for the high-speed 1 Gbps primary ring with MUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).
- **Misc Speed Statistics**—Shelf ID Universal Asynchronous Receiver Transmitter (UART) error counts on the MUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).
- **Bucket Summary**—The error count for each parameter for one hour for HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations). (The count is for the most recent part of an hour if the card was booted within an hour of executing the `rept-imt-info` command.)
- **Cumulative**—The running total error count for each parameter since card initialization for HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

MUX Statistics:

- **Bucket**—The hourly time periods (*buckets*) for which a report was requested.
- **Loc**—The card location (shelf and slot) for which information is displayed.
- **Low Speed Statistic**—The error statistic type for the low speed 125 Mbps secondary rings with MUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).
- **High Speed Statistic**—The error statistic type for the high-speed 1 Gbps primary ring with MUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).
- **Misc Speed Statistic**—The miscellaneous error statistic type.
- **Bus A**—The number of occurrences of the type of error displayed in the Statistic column for the IMT bus A.
- **Bus B**—The number of occurrences of the type of error displayed in the Statistic column for the IMT bus B.

Related Topics

- [clr-imt-stats](#)
- [init-imt-gpl](#)
- [rept-imt-lvl1](#)
- [rept-imt-lvl2](#)
- [tst-imt](#)

4.1.389 rept-imt-lvl1

Use this command to display IMT level 1 statistics for a card or a range of cards. A summary report of totals for all cards is also generated.

Parameters

e (optional)

End address. The IMT address of the last card in the range. A decimal value or a hexadecimal value can be specified for this parameter (see [Table 4-46](#) to map the values by card location).

Range:

0 - 251

The value can be specified in decimal (*0-251*) or hexadecimal (*h'00 – h'fe*)

Default:

If the `s` parameter is specified, the default value is the `s` parameter value.

If the `s` parameter is not specified, the `e` parameter cannot be specified and the `sloc` parameter must be specified.

e1oc (optional)

End location. The card location of the last card in the range.

Range:

1101 - 1108, 1111 - 1113, 1115, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Default:

If `sloc` is specified—current `sloc` value; displays information for one card

If `sloc` is not specified— *1115*, which corresponds to IMT address 251 (`e=251`); displays information for entire range of locations.

eshelf (optional)

End Shelf location. The shelf location of the last shelf in the range.

Range:

1100, 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100

Default:

if the `sshelf` parameter is specified—current `sshelf` value

if the `sshelf` parameter is not specified— *6100*, which displays information for entire range of shelves

filter (optional)

The filter that determines the information that is displayed in the report.

Range:

error

display all error counts

perf

display performance counts

erroronly

display non-zero error counts

full

display zero and non-zero error counts and performance counts

Default:

full

hs (optional)

This parameter specifies whether to include High Speed interface counts in the report.

Range:**no**

do not include High Speed interface counts

yes

include High Speed interface counts

Default:

no

r (optional)

Report type value

Range:**full**

Displays information for each card along with a summary report.

stats

Displays only individual card statistics.

summary

Displays the summary portion of the report.

Default:

full

s (optional)

Start address. The IMT address of the first (or only) card in the range. A decimal value or a hexadecimal value can be specified for this parameter (see [Table 4-46](#) to map the values by card location).

Range:

0 - 251

The value can be specified in decimal (0-251) or hexadecimal (h'00 – h'fb)

sloc (optional)

Start location. The card location of the first card in the range.

Range:

1101 - 1108, 1111 - 1113, 1115, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108,

4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108,
5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108,
6111 - 6118

Default:

If `eloc` is specified—current `eloc` value

If `eloc` is not specified—1201, which corresponds to IMT address 0 (`s=0`).

sshelf (optional)

Start Shelf location. The shelf location of the first shelf in the range.

 **Note:**

This parameter specified alone is the equivalent to specifying the IMT address range. For example, “sshelf=1200” is equivalent to specifying the IMT address range as “s=h'00:e=h'0f”.

Range:

1100, 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100,
5200, 5300, 6100

Default:

if the `eshelf` parameter is specified—the current `eshelf` value

if the `eshelf` parameter is not specified—1100, which displays information for the entire range of shelves

term (optional)

This parameter specifies the terminal port where the report is sent.

Range:

1 - 40

Default:

Report displays on the terminal where the command was issued

Example

This example requests low speed interface counts.

```
rept-imt-lvl1:s=h'00:e=h'00
```

This example requests a summary report of low speed interface counts.

```
rept-imt-lvl1:s=h'00:e=h'00:r=summary
```

This example requests low speed interface counts.

```
rept-imt-lvl1:sshelf=1200
```

This example requests low speed interface counts for individual cards.

```
rept-imt-lvl1:sshelf=1200:r=stats
```

This example requests low speed and high speed interface counts.

```
rept-imt-lvl1:sshelf=1200:hs=yes
```

This example requests low speed and high speed interface counts.

```
rept-imt-lvl1:s=h'00:e=h'00:hs=yes
```

This example requests an error report for non-zero error counts.

```
rept-imt-lvl1:s=h'00:e=h'00:filter=error-only
```

This example requests an error report for zero and non-zero error counts.

```
rept-imt-lvl1:s=h'00:e=h'00:filter=error
```

Dependencies

Only one report status command can be in progress at a time.

N/A N/A

The `s`, `sloc`, or `sshelf` parameter must be specified in the command.

3048 E3048 Cmd Rej: Starting address/location/shelf must be specified

This command cannot be entered during IMT statistics collection following an hourly boundary.

N/A N/A

The command cannot be entered if the `clr-imt-stats`, `rept-imt-info`, `rept-imt-lvl2`, or `tst-imt` command is running.

2368 E2368 Cmd Rej: System busy - try again later

Only one of the `sloc/eloc`, `s/e`, and `sshelf/eshelf` parameter combinations can be specified in the command.

3047 E3047 Cmd Rej: Parameter combination invalid

A card location that is valid and defined in the database must be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

This command cannot be entered during an Extended Bit Error Rate Test (BERT).

3043 E3043 Cmd Rej: IMT test in progress

Notes

[Table 4-46](#) maps each card location to the decimal and hexadecimal [Converting ITU National Point Code Formats](#) values that can be specified for the `s` and `e` parameters.

Table 4-46 Hexadecimal/Decimal Values for s and e Parameters

Card Location	Hexadecimal Value	Decimal Value	Card location	Hexadecimal Value	Decimal Value
Control Shelf 11					
1101	h'f0	240	1102	h'f1	241
1103	h'f2	242	1104	h'f3	243
1105	h'f4	244	1106	h'f5	245
1107	h'f6	246	1108	h'f7	247
1111	h'f8	248	1112	h'f9	249
1113	h'fa	250	1115	h'fb	251
Extension Shelf 12					
1201	h'00	0	1202	h'01	1

Table 4-46 (Cont.) Hexadecimal/Decimal Values for s and e Parameters

Card Location	Hexadecimal Value	Decimal Value	Card location	Hexadecimal Value	Decimal Value
1203	h'02	2	1204	h'03	3
1205	h'03	4	1206	h'05	5
1207	h'06	6	1208	h'07	7
1211	h'08	8	1212	h'09	9
1213	h'0a	10	1214	h'0b	11
1215	h'0c	12	1216	h'0d	13
1217	h'0e	14	1218	h'0f	15
Extension Shelf 13					
1301	h'10	16	1302	h'11	17
1303	h'12	18	1304	h'13	19
1305	h'14	20	1306	h'15	21
1307	h'16	22	1308	h'17	23
1311	h'18	24	1312	h'19	25
1313	h'1a	26	1314	h'1b	27
1315	h'1c	28	1316	h'1d	29
1317	h'1e	30	1318	h'1f	31
Extension Shelf 21					
2101	h'20	32	2102	h'21	33
2103	h'22	34	2104	h'23	35
2105	h'24	36	2106	h'25	37
2107	h'26	38	2108	h'27	39
2111	h'28	40	2112	h'29	41
2113	h'2a	42	2114	h'2b	43
2115	h'2c	44	2116	h'2d	45
2117	h'2e	46	2118	h'2f	47
Extension Shelf 22					
2201	h'30	48	2202	h'31	49
2203	h'32	50	2204	h'33	51
2205	h'34	52	2206	h'35	53
2207	h'36	54	2208	h'37	55
2211	h'38	56	2212	h'39	57
2213	h'3a	58	2214	h'3b	59
2215	h'3c	60	2216	h'3d	61
2217	h'3e	62	2218	h'3f	63
Extension Shelf 23					
2301	h'40	64	2302	h'41	65
2303	h'42	66	2304	h'43	67
2305	h'44	68	2306	h'45	69
2307	h'46	70	2308	h'47	71
2311	h'48	72	2312	h'49	73
2313	h'4a	74	2314	h'4b	75
2315	h'4c	76	2316	h'4d	77
2317	h'4e	78	2318	h'4f	79

Table 4-46 (Cont.) Hexadecimal/Decimal Values for s and e Parameters

Card Location	Hexadecimal Value	Decimal Value	Card location	Hexadecimal Value	Decimal Value
Extension Shelf 31					
3101	h'50	80	3102	h'51	81
3103	h'52	82	3104	h'53	83
3105	h'54	84	3106	h'55	85
3107	h'56	86	3108	h'57	87
3111	h'58	88	3112	h'59	89
3113	h'5a	90	3114	h'5b	91
3115	h'5c	92	3116	h'5d	93
3117	h'5e	94	3118	h'5f	95
Extension Shelf 32					
3201	h'60	96	3202	h'61	97
3203	h'62	98	3204	h'63	99
3205	h'64	100	3206	h'65	101
3207	h'66	102	3208	h'67	103
3211	h'68	104	3212	h'69	105
3213	h'6a	106	3214	h'6b	107
3215	h'6c	108	3216	h'6d	109
3217	h'6e	110	3218	h'6f	111
Extension Shelf 33					
3301	h'70	112	3303	h'71	113
3303	h'72	114	3304	h'73	115
3305	h'74	116	3306	h'75	117
3307	h'76	118	3308	h'77	119
3311	h'78	120	3312	h'79	121
3313	h'7a	122	3314	h'7b	123
3315	h'7c	124	3316	h'7d	125
3317	h'7e	126	3318	h'7f	127
Extension Shelf 41					
4101	h'80	128	4102	h'81	129
4103	h'82	130	4104	h'83	131
4105	h'84	132	4106	h'85	133
4107	h'86	134	4108	h'87	135
4111	h'88	136	4112	h'89	137
4113	h'8a	138	4114	h'8b	139
4115	h'8c	140	4116	h'8d	141
4117	h'8e	142	4118	h'8f	143
Extension Shelf 42					
4201	h'90	144	4202	h'91	145
4203	h'92	146	4204	h'93	147
4205	h'94	148	4206	h'95	149
4207	h'96	150	4208	h'97	151
4211	h'98	152	4212	h'99	153
4213	h'9a	154	4214	h'9b	155

Table 4-46 (Cont.) Hexadecimal/Decimal Values for s and e Parameters

Card Location	Hexadecimal Value	Decimal Value	Card location	Hexadecimal Value	Decimal Value
4215	h'9c	156	4216	h'9d	157
4217	h'9e	158	4218	h'9f	159
Extension Shelf 43					
4301	h'a0	160	4302	h'a1	161
4303	h'a2	162	4302	h'a3	163
4305	h'a4	164	4306	h'a5	165
4307	h'a6	166	4308	h'a7	167
4311	h'a8	168	4312	h'a9	169
4313	h'aa	170	4314	h'ab	171
4315	h'ac	172	4316	h'ad	173
4317	h'ae	174	4318	h'af	175
Extension Shelf 51					
5101	h'b0	176	5102	h'b1	177
5103	h'b2	178	5104	h'b3	179
5105	h'b4	180	5106	h'b5	181
5107	h'b6	182	5108	h'b7	183
5111	h'b8	184	5112	h'b9	185
5113	h'ba	186	5114	h'bb	187
5115	h'bc	188	5116	h'bd	189
5117	h'be	190	5118	h'bf	191
Extension Shelf 52					
5201	h'c0	192	5202	h'c1	193
5204	h'c2	194	5204	h'c3	195
5205	h'c4	196	5206	h'c5	197
5307	h'c6	198	5208	h'c7	199
5211	h'c8	200	5212	h'c9	201
5213	h'ca	202	5214	h'cb	203
5215	h'cc	204	5216	h'cd	205
5217	h'ce	206	5218	h'cf	207
Extension Shelf 53					
5301	h'd0	208	5302	h'd1	209
5303	h'd2	210	5304	h'd3	211
5305	h'd4	212	5306	h'd5	213
5307	h'd6	214	5308	h'd7	215
5311	h'd8	216	5312	h'd9	217
5313	h'da	218	5314	h'db	219
5315	h'dc	220	5316	h'dd	221
5317	h'de	222	5318	h'df	223
Extension Shelf 61					
6101	h'e0	224	6102	h'e1	225
6103	h'e2	226	6104	h'e3	227
6105	h'e4	228	6106	h'e5	229
6107	h'e6	230	6108	h'e7	231

Table 4-46 (Cont.) Hexadecimal/Decimal Values for s and e Parameters

Card Location	Hexadecimal Value	Decimal Value	Card location	Hexadecimal Value	Decimal Value
6111	h'e8	232	6112	h'e9	233
6113	h'ea	234	6114	h'eb	235
6115	h'ec	236	6116	h'ed	237
6117	h'ee	238	6118	h'ef	239

Low speed ring counts and performance counts

If an HMUX card is not present in the shelf, then HMUX low speed ring counts are not displayed. If HIPR or HIPR2 cards are not present in the shelf, then performance counts are not displayed.

[Table 4-47](#) describes the statistics that are shown in the report for each card and in the Summary of totals for all requested cards, and their possible causes and corrective actions.

These statistics are displayed when the `rept-imt-lvl1:sloc=xxxx:eloc=yyyy:r=full` command is entered.

Table 4-47 Level 1 IMT Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
Rx CRC Error	Receive CRC error: Bad Checksum in received IMT packet. Caused by corrupted data within the received packet. Detected by hardware.	Maintenance activity: Card insertion, removal, or boot. Does not occur in a normal system. Indicates a hardware failure: defective LIM card, MUX card, FC cable or backplane.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a hardware issue is present. Contact Customer Care Center.
Rx Format Error	Receive Format Error: Occurs when the End of Message byte of an IMT packet is found missing. Detected by hardware.	Service/Maintenance activity: Card insertion, removal, or boot. Does not occur in a normal system. Indicates a hardware failure: defective LIM card, MUX card, FC cable or backplane.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a hardware issue is present. Contact Customer Care Center.
Rx Inv Len	Receive Packet with Invalid Length: Card received an IMT packet where the actual length of the packet did not match the length indicated in the length field. Detected by software	Software defect. Does not occur in a normal system.	Contact Customer Care Center.

Table 4-47 (Cont.) Level 1 IMT Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
Rx FIFO Half Full	Receive FIFO Half Full: Watermark indication that this interface receiving data off the TAXI line has received substantial traffic.	Relatively heavy traffic on this interface can cause these counts to increment.	None. FIFO Half Full is an indication; no action required.
Rx FIFO Full	Receive FIFO Full: Watermark indication that this interface receiving data off the TAXI line is receiving traffic in excess of what it can handle. Some traffic will have been discarded. May cause retransmissions, CRC errors and Format errors. Detected by hardware	Relatively heavy traffic on this interface can cause these counts to increment. Seeing these counts in the field may indicate a software problem.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact the Customer Care Center.
CPU Rx FIFO Half Full	CPU Receive FIFO Half Full: Communication CPU on the card is becoming congested. Detected by hardware. This stat is only meaningful for cards that contain a BPxxxx GPL.	Relatively heavy traffic on this interface can cause these counts to increment. May indicate a SW problem.	None: FIFO Half Full is an indication; no action required.
CPU Rx FIFO Full	CPU Receive FIFO Full: Communication CPU on the card is becoming congested. Data has been dropped. May cause retransmissions, format and large packet errors. Detected by hardware. This stat is only meaningful for cards that contain a BPxxxx GPL.	Relatively heavy traffic on this interface can cause these counts to increment. May indicate a SW problem.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a hardware issue is present. Contact Customer Care Center.

Table 4-47 (Cont.) Level 1 IMT Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
CPU Rx MSU FIFO Full	<p>CPU Receive MSU FIFO Full: Watermark indication that the MSU traffic is in excess of what the card can handle. Traffic will have been discarded. Expect retransmissions and possibly other errors.</p> <p>This stat is only meaningful for cards that contain the IMTPCI GPL; the FIFO stores data determined to be a MSU with no CRC error.</p>	Relatively heavy traffic on this interface can cause these counts to increment. May indicate a SW problem.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a hardware issue is present. Contact Customer Care Center.
CPU Rx LSSU FIFO Full	<p>CPU Receive LSSU FIFO Full: Watermark indication that the LSSU traffic is in excess of what the card can handle.</p> <p>This stat is only meaningful for cards that contain the IMTPCI GPL; the FIFO stores data determined to be a LSSU with no CRC error.</p>	May indicate a hardware failure (i.e.: a defective board), although a software issue is also possible.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a hardware issue exists. Contact Customer Care Center.
CPU Rx XSU FIFO Full	<p>CPU Receive XSU FIFO Full: Watermark indication that the XSU traffic is in excess of what the card can handle.</p> <p>This stat is only meaningful for cards that contain the IMTPCI GPL; the FIFO stores data determined not to be a MSU, LSSU or ASU, and no CRC error. Data internal to this card has been lost.</p>	Relatively heavy traffic on this interface can cause these counts to increment.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a hardware issue exists. Contact Customer Care Center.

Table 4-47 (Cont.) Level 1 IMT Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
ASU Rx FIFO Half Full	CPU Receive ASU FIFO Half Full: Watermark indication that this interface has received substantial ASU traffic. This stat is only meaningful for cards that contain a BPxxxx GPL; the FIFO stores data determined to be an ASU with no CRC error.	Relatively heavy traffic on this interface can cause these counts to increment.	None. FIFO Half Full is an indication. No action required.
ASU Rx FIFO Full	CPU Receive ASU FIFO Full: Watermark indication that the ASU traffic is in excess of what the card can handle. ASUs will have been lost resulting in retransmission and other possible LVL1 errors. This stat is only meaningful for cards that contain a BPxxxx or IMTPCI GPL; the FIFO stores data determined to be an ASU with no CRC error.	Relatively heavy traffic on this interface can cause these counts to increment. Seeing these counts in the field may indicate a software problem.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a hardware issue exists. Contact Customer Care Center.
SSU Packet Rx	Safety Packets Received: This message type detects the loss of a card in the system if virtual connections between cards are lost.	Card insertion, removal, or boot, heavy traffic, abnormal conditions and/or software/hardware problems can result in these packets being generated.	None. These counts are an indication. No action required.
ASU Safety Pkt	ASU Safety Packets: ASU Unit has timed out on the IMT.	Card insertion, removal, or boot	None. These counts are only an indication. No action required.
TSU Safety Pkt	TSU Safety Packets: TSU Unit has timed out on the IMT	Card insertion, removal, or boot	None. These counts are only an indication. No action required.
BSU Safety Pkt	BSU Safety Packets: BSU Unit has timed out on the IMT.	Card insertion, removal, or boot	None. These counts are only an indication. No action required.
SSU Safety Pkt	SSU Safety Packets: SSU Unit has timed out on the IMT	Card insertion, removal, or boot	None. These counts are only an indication. No action required.

Table 4-47 (Cont.) Level 1 IMT Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
Other Safety Pkt	Other Safety Packets Received: Possible message types are MSU, DSU, ISU, and/or HSU.	Card insertion, removal, or boot	None. These counts are only an indication. No action required.
Pri Ctrl Rx Error	Primary control receive error: Corrupted packet received. Detected by hardware	Card insertion, removal, or boot	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.
Pri Ctrl Sanity Err	Primary Control Sanity Error: Internal hardware monitoring self check failed. Detected by hardware	Indicates that the hardware receive logic was unable to successfully process the incoming packet. May indicate a hardware problem.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.
RX HW flow control event	Indicates the number of times the HW RX FIFO's backed up to a point to request the other end to HOLD until room is made available in the RX FIFO. Counts in the MUX column indicate the receiver was backed up on the MUX. Counts in the COM side indicate the LIM receiver was backed up.	Does not indicate a problem just an indication of low level congestion. Should excessive counts be seen it could indicate a problem.	None. RX HW flow control event is an indication. No action is required.
Pri Ctrl No SOM	Primary Control No Start of Message Error: Incoming data was detected without a start of message (SOM.) This stat is only meaningful for cards that contain a BPxxxx GPL.	Card insertion, removal, or boot.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.

Table 4-47 (Cont.) Level 1 IMT Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
Pri Ctrl Tx Err	<p>Primary Control Transmit Error: Transmit logic encountered a problem sending a packet. Detected by hardware.</p> <p>This stat is only meaningful for application cards.</p>	Card insertion, removal, or boot.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.
Tx FIFO Half Full	<p>Transmit FIFO Half Full: Watermark indication that this interface is backed up through ½ of its available storage.</p> <p>This stat is only meaningful for MUX card columns.</p>	Indicates that data was transmitted at a relatively high rate for a short period.	None. FIFO Half Full is an indication. No action is required.
Tx FIFO Full	<p>Transmit FIFO Full: The FIFO has overflowed and data has been lost.</p> <p>This stat is only meaningful for MUX card columns.</p>	Relatively heavy traffic on this interface can cause these counts to increment. May indicate a software problem	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.
Future Field	Reserved	Reserved	Reserved
Future Field	Reserved	Reserved	Reserved
IMT Tx FIFO Half Full	<p>Transmit FIFO Half Full: Watermark indication that this interface is backed up through ½ of its available storage.</p> <p>This stat is only meaningful for MUX card columns.</p>	Indicates that data was transmitted at a relatively high rate for a short period.	None. FIFO Half Full is just an indication; no action is required.
IMT Tx FIFO Full	<p>Transmit FIFO Full: The FIFO has overflowed and data has been lost.</p> <p>This stat is only meaningful for MUX card columns.</p>	May indicate a software problem.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.
Tx FIFO 3/4 Full	Reserved	Reserved	Reserved

Table 4-47 (Cont.) Level 1 IMT Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
IMT By-pass FIFO Half Full	Watermark indication that this interface has backed to fill half on the FIFO. This stat is only meaningful for cards that contain a BLMCAP GPL.	May indicate that data was transmitted at a relatively high rate for a short period.	None. FIFO Half Full is an indication. No action is required.
IMT By-pass FIFO Full	By-pass FIFO overflowed data has been lost. This stat is only meaningful for cards that contain a BLMCAP GPL.	Very little if any data flows through this FIFO. May indicate a hardware problem	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center. The card may need to be replaced.
Pass thru CRC Error Lost Multicast Pkt	Reserved Lost Multicast Packets: This counter increments when the interface detects that one of these packets has not been delivered to a card in the list. This stat is only meaningful for application card columns.	Reserved Card insertion, removal, or boot. These events may indicate a software problem.	Reserved Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.
Invalid Interrupt	The interface generated a spurious interrupt. This stat is only meaningful for cards that contain an IMTPCI GPL.	May indicate a software or hardware defect.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center. The card may need to be replaced.
Error Int Overflow Large Pkt Error	Deprecated Large Packet Error: The interface has detected packets larger than allowed in the data stream. This stat is meaningful for all cards except those containing the IMTPCI GPL.	Deprecated Card insertion, removal, boot, or a hardware error. May indicate a hardware problem.	Deprecated Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.

Table 4-47 (Cont.) Level 1 IMT Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
MSU Retran / MUX LVL1 Cong	<p>COM - Retransmissions occur when a transmitted MSU does not receive an acknowledgment (ASU) within an engineered timeout value. Detected by software.</p> <p>This stat is only meaningful for application cards.</p> <p>MUX - Count of occurrences that the MUX has reached level 1 congestion on the transmit path to the LIM (works in conjunction with MFC)</p>	<p>COM - Card insertion, removal, or boot. May indicate hardware, software or configuration problems.</p> <p>MUX - Nothing specific to do except for monitor for excessive counts</p>	<p>COM - Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.</p> <p>MUX - Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.</p>
MSU ROE / MUX LVL2 Cong	<p>COM - MSU Returned On Error: Number of MSUs returned to the application as undeliverable. Each application is responsible for indicating their need for MSUs to be returned if undeliverable. This count is for messages that the application has deemed important and requested that they be returned if undeliverable. Detected by software.</p> <p>MUX - Count of occurrences that the MUX has reached level 2 congestion on the transmit path to the LIM (works in conjunction with MFC)</p>	<p>COM - Destination card is not available to receive packets.</p> <p>MUX - Nothing specific to do except monitor for excessive counts</p>	<p>COM - None. MSU Returned on Error is an indication. No action is required.</p> <p>MUX - Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.</p>

Table 4-47 (Cont.) Level 1 IMT Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
VC OS Cnt / MUX Cong Disc	<p>COM - Virtual Circuit Out of Service Count: Count of times a Virtual Circuit (VC) on this card has gone Out of Service.</p> <p>Note: The A and B bus counts will be the same. For the VC to drop, communications on both busses must be lost.</p> <p>This stat is only meaningful for application cards.</p> <p>MUX - Count of occurrences that the MUX has reached congestion discard on the transmit path to the LIM. More data is being delivered to the transmit queue than can be transmitted to the slot/LIM.</p>	<p>COM - Destination card is not available to receive packets, or software/hardware errors that cause the virtual connection(s) to be dropped. Could occur during normal maintenance (card replacement/upgrades, or booting).</p> <p>MUX - Packets are being dropped or re-transmitted internally. This should not occur.</p>	<p>COM - Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.</p> <p>MUX - Contact Customer Care Center.</p>
Bus Disconnect Count	<p>Bus Disconnect Count: Counts the times that the card has been disconnected from the bus.</p> <p>Note: The A and B bus counts can be different.</p> <p>This stat is only meaningful for application cards.</p>	<p>Any event that disconnects the card from the bus can cause this counter to increment (e.g. connectivity problems to the IMT bus, or issuing the <code>disc-imt</code> or <code>inh-imt</code> command)</p>	<p>If commands that disconnect the card from the bus have not been issued, clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.</p>
Violation Error	<p>Received an illegal character from the physical IMT transport (TAXI Interface). Detected by hardware</p>	<p>Card insertion, removal, or boot or defective hardware</p>	<p>Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue, a problem may exist. Contact Customer Care Center.</p>

Table 4-47 (Cont.) Level 1 IMT Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
Info: MSU Dropped no Rept	<p>MSU Dropped With No Report: Number of undeliverable MSUs that are not being returned to the application.</p> <p>Note: This statistic may be non-zero after executing the <code>rept-imt-lvl1</code> or <code>clr-imt-stats</code> command. During execution of these commands, the active MASP generates MSUs to unpopulated card slots. These MSUs result in an "MSU Dropped With No Report" count. To determine the number of unexpected "MSU Dropped With No Report" occurrences, the active MASP must be excluded from the <code>rept-imt-lvl1</code> card range.</p>	Destination card is not available to receive packets.	None. MSU Dropped is an indication. No action is required.
GBSU Resync	The count of how many times the GBSU receive sequence numbers have been resynchronized	These counts will occur on new card insertions, removals, boots, or a hardware error.	None. GBSU Resync is an indication. No action required.
GBSU Invalid Seq	The count of how many times a cards received a GBSU out of sequence.	This is unlikely but could occur on one bus (GBSU lost) and not the other bus.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear there is no action to perform. If stats continue to increase (and there are no booting cards), it is possible that the card's Dynamic Database may be inconsistent. Review the DDB status and if an issue exists, contact My Oracle Support.

Table 4-47 (Cont.) Level 1 IMT Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
GBSU Lost Packet	The count of lost GBSU packets in the system (This is received, not sent). In a clean system with counts cleared this count should stay at 0x00.	GBSUs may be occasionally lost in a congested system.	Use the LVL2 stats to determine/find the path of the lost GBSU. Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear there is no action to perform. If stats continue to increase (and there are no booting cards), there could be a problem with the system. Contact the My Oracle Support.
GBSU RX GRP Discard	This count reflects the amount of overhead that the GBSU logic adds to these cards , and it is the number of GBSU's sent to this card that the card was not subscribed for.	GBSU Discards are normal events.	None. GBSU RX GRP Discard is an indication. No action required.

Level 1 IMT Statistics, Low Speed Performance Counts

The probable cause for all Level 1 IMT Statistics, Low Speed Performance Counts is normal behavior. These counts are information only, and no action is required.

These statistics are displayed when the `rept-imt-lvl1:sloc=xxxx:eloc=yyyy:r=full` command is entered.

- All Packets—Number of packets transmitted on the IMT, all types
- All bytes—Number of bytes transmitted on the IMT, all types
- MSU Packets—Number of reliable delivery message data packets transmitted on the IMT
- MSU Bytes—Number of reliable delivery message data bytes transmitted on the IMT
- ASU Packets—Number of acknowledgment packets transmitted on the IMT
- ASU Bytes—Number of acknowledgment bytes transmitted on the IMT
- DSU Bytes—Number of best effort delivery message data bytes transmitted on the IMT
- HSU Packets—Number of mux card data packets transmitted on the IMT
- HSU Bytes—Number of mux card data bytes transmitted on the IMT
- TSU Bytes—Number of test bytes transmitted on the IMT
- TSU Packets—Number of test packets transmitted on the IMT
- LSSU Packets—Number of virtual circuit alignment packets transmitted on the IMT
- LSSU Bytes—Number of virtual circuit alignment bytes transmitted on the IMT
- BSU Packets—Number of broadcast data packets transmitted on the IMT
- BSU Bytes—Number of broadcast data bytes transmitted on the IMT

- SSU Packets—Number of Safety packets transmitted on the IMT
- SSU Bytes—Number of safety bytes transmitted on the IMT
- Othr Packets—Number of all packets types not counted by one of the above
- Othr Bytes—Number of all data bytes not counted by one of the above
- TAXI Util—Approximate percentage utilization of Low Speed data bus

High Speed Error Summary for Level 1 IMT Statistics

Table 4-48 displays the High Speed Error Summary for Level 1 IMT Statistics.

These statistics are displayed when the `rept-imt-lvl1:sloc=xxxx:eloc=yyyy:r=full` command is entered.

Table 4-48 Level 1 IMT Statistics, High Speed Error Summary

Stat Label	Explanation of Stat	Probable Cause	Recommended Action
HS Rx Packet CRC Error	Fibre Channel Receive Packet with CRC Errors: Checksum error in received packet. Caused by corrupted data.	May indicate a hardware failure	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue a problem may exist. Contact My Oracle Support.
HS Rx Packet Format Error	Fibre Channel Receive Packet with Format Errors: Format error in received packet. Usually caused by corrupted data.	May indicate a hardware failure	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue a problem may exist. Contact My Oracle Support.
HS Rx Disparity Error	Fibre Channel Receive Packet with Disparity Errors: Error in received packet. Caused by corrupted data.	May indicate a hardware failure	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue a problem may exist. Contact My Oracle Support.
HS Rx Sync Lost Error	Fibre Channel Receive Lost Synchronization Errors: The interface lost sync on the received stream.	May indicate a hardware failure.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue a problem may exist. Contact My Oracle Support.

Table 4-48 (Cont.) Level 1 IMT Statistics, High Speed Error Summary

Stat Label	Explanation of Stat	Probable Cause	Recommended Action
HS Rx Code Word Error	Fibre Channel Receive code Word Errors: Error in received packet. Caused by corrupted data.	May indicate a hardware failure.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue a problem may exist. Contact My Oracle Support.
HS Rx Packet SOM Before EOM	Fibre Channel Receive Packet with Start of Message without a previous End of Message Errors: The software received detected the start of a new packet before the end of the previous packet was detected.	May indicate a hardware failure.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue a problem may exist. Contact My Oracle Support.
HS Bypass FIFO Half Full	Fibre Channel Bypass FIFO Half Full: Watermark indication that this interface has backed up to the half way point of its capabilities.	Relatively heavy traffic on this interface can cause these counts to increment.	None. FIFO Half Full is an indication. No action is required.
HS Bypass FIFO Full	Fibre Channel Bypass FIFO Full: The FIFO has over run and data has been lost. May result is significant downstream errors.	Indicates a software or hardware failure	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue a problem may exist. Contact My Oracle Support.
HS Rx FIFO Half Full	Fibre Channel Receive FIFO Half Full: Watermark indication that this interface has backed up to the half way point of its capabilities.	Relatively heavy traffic on this interface can cause these counts to increment.	None. FIFO Half Full is an indication. No action is required.
HS Rx FIFO Full	Fibre Channel Receive FIFO Full: The FIFO has over run and data has been lost. May result is significant downstream errors.	Indicates a software or hardware failure	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue a problem may exist. Contact My Oracle Support.

Table 4-48 (Cont.) Level 1 IMT Statistics, High Speed Error Summary

Stat Label	Explanation of Stat	Probable Cause	Recommended Action
HS Tx FIFO Half Full	Fibre Channel Transmit FIFO Half Full: Watermark indication that this interface has backed up to the half way point of its capabilities.	Relatively heavy traffic on this interface can cause these counts to increment.	None. FIFO Half Full is an indication. No action is required.
HS Tx FIFO Full	Fibre Channel Transmit FIFO Full: Watermark indication that this interface has transmitted substantial traffic.	Relatively heavy traffic on this interface can cause these counts to increment.	None. FIFO Full is an indication. No action is required.
IXP RX FIFO Half Full	Fibre Channel IXP Receive FIFO Half full: Watermark indication that this interface has backed up to the half way point of its capabilities.	Relatively heavy traffic on this interface can cause these counts to increment.	None. FIFO Half Full is an indication. No action is required.
IXP Rx FIFO Full	Fibre Channel IXP Receive FIFO Full: The IXP Rx FIFO momentarily became full. This event can occur under normal conditions and it does not indicate an issue.	Relatively heavy traffic on this interface can cause these counts to increment.	None. FIFO Full is an indication. No action is required.
HS RX Large PKT Discard	A packet larger than allowed was processed on the receive path of the Fibre Channel. May result in significant downstream errors.	Indicates a software or hardware failure, unless the BUS is being brought up or being taken down.	Clear IMT stats, wait 1 hour and retrieve stats again. If stats are clear, there is no action to perform. If errors continue a problem may exist. Contact My Oracle Support.

Output

```
rept-imt-lvl1:sloc=1201
```

```
Command Accepted - Processing
```

```
tklcl070501 02-02-11 23:10:45 MST UNKNOWN ???.?-65.10.0
rept-imt-lvl1:sloc=1201
Command entered at terminal #5.
```

```
;
```

```
tklcl070501 02-02-11 23:10:45 MST UNKNOWN ???.?-65.10.0
Retrieving LVL1 data from Eagle cards...
```



```

-----
Card: H'0000      Elapsed Time (day - h:m:s):  0 - 04:56:52.0

Error Counts
Mux          A Bus          B Bus
             COM          MUX          COM
-----
Rx CRC Error          0          0          0
0
Rx Format Error       0          0          0
0
Rx Inv Len           0          N/A         0
0
Rx FIFO Half Full   0          0          0
0
Rx FIFO Full        0          0          0
0
CPU Rx FIFO Half Full 0          N/A         0
N/A
CPU Rx FIFO Full    0          N/A         0
N/A
CPU Rx MSU FIFO Full 0          N/A         0
N/A
CPU Rx LSSU FIFO Full 0          N/A         0
N/A
CPU Rx XSU FIFO Full 0          N/A         0
N/A
ASU Rx FIFO Half Full 0          N/A         0
N/A
ASU Rx FIFO Full    0          N/A         0
N/A
SSU Packet Rx       0          N/A         0
N/A
ASU Safety Pkt      0          N/A         0
N/A
TSU Safety Pkt      0          N/A         0
N/A
BSU Safety Pkt      0          N/A         0
N/A
SSU Safety Pkt      0          N/A         0
N/A
Other Safety Pkt    0          N/A         0
N/A
Pri Ctrl Rx Err     0          N/A         0
N/A
Pri Ctrl Sanity Err 0          N/A         0
N/A
RX HW flow control event 0          N/A         0
N/A
Pri Ctrl No SOM     0          N/A         0
N/A
Pri Ctrl Tx Err     0          N/A         0
N/A

```

0	Tx FIFO Half Full	0	N/A
0	N/A		
0	Tx FIFO Full	0	N/A
0	N/A		
0	Future Field	0	N/A
0	N/A		
0	Future Field	0	N/A
0	N/A		
0	IMT Tx FIFO Half Full	0	0
0	0		
0	IMT Tx FIFO Full	0	0
0	0		
0	Tx FIFO 3/4 Full	0	N/A
0	N/A		
0	IMT By-pass FIFO Half Full	0	N/A
0	N/A		
0	IMT By-pass FIFO Full	0	N/A
0	N/A		
0	Pass thru CRC Error	0	N/A
0	N/A		
0	Lost Multicast Pkt	0	N/A
0	N/A		
0	Invalid Interrupt	0	N/A
0	N/A		
0	Error Int Overflow	0	N/A
0	N/A		
0	Large Pkt Error	0	N/A
0	N/A		
0	MSU Retran / MUX LVL1 Cong	0	0
0	0		
0	MSU ROE / MUX LVL2 Cong	0	0
0	0		
0	VC OS Cnt / MUX Cong Disc	0	0
0	0		
0	Bus Disconnect Count	0	N/A
0	N/A		
0	Violation Error	0	0
0	0		

Low Speed Perf Counts		A Bus		B Bus
Rx	Tx	Rx	Tx	

135K	All Packets	120K	3440K	3328K
63M	All Bytes	13M	69M	
0K	MSU Packets	--	--	
2042K	MSU Bytes	--	--	8K
17K	ASU Packets	--	--	
	ASU Bytes	--	--	209K

```

374K
DSU  Packets      --      --      0K      0K
DSU  Bytes       --      --      0K      0K
HSU  Packets      --      --      0K      0K
HSU  Bytes       --      --      0K      0K
TSU  Packets      --      --      87K     87K
TSU  Bytes       --      --     12522K  12522K
LSSU Packets     --      --      3223K   0K
LSSU Bytes      --      --     51575K  0K
BSU  Packets     --      --      0K      0K
BSU  Bytes      --      --      0K      0K
SSU  Packets     --      --      0K      0K
SSU  Bytes      --      --      0K      0K
Othr Packets    --      --      0K      0K
Othr Bytes      --      --      0K      0K
TAXI Util       --      --      0       0

```

;

tklcl070501 02-02-11 23:10:54 MST UNKNOWN ????.?-65.10.0

=====

SUMMARY REPORT: Totals accumulated from 1 User slots

Error Counts	A Bus		B Bus
	COM	MUX	COM
MUX			
-----	-----	-----	-----
Rx CRC Error	0	0	0
0			
Rx Format Error	0	0	0
0			
Rx Inv Len	0	0	0
0			
Rx FIFO Half Full	0	0	0
0			
Rx FIFO Full	0	0	0
0			
CPU Rx FIFO Half Full	0	0	0
0			
CPU Rx FIFO Full	0	0	0
0			
CPU Rx MSU FIFO Full	0	N/A	0
N/A			
CPU Rx LSSU FIFO Full	0	N/A	0
N/A			
CPU Rx XSU FIFO Full	0	N/A	0
N/A			
ASU Rx FIFO Half Full	0	N/A	0
N/A			
ASU Rx FIFO Full	0	N/A	0

N/A			
0	SSU Packet Rx	0	N/A
0	N/A		
0	ASU Safety Pkt	0	N/A
0	N/A		
0	TSU Safety Pkt	0	N/A
0	N/A		
0	BSU Safety Pkt	0	N/A
0	N/A		
0	SSU Safety Pkt	0	N/A
0	N/A		
0	Other Safety Pkt	0	N/A
0	N/A		
0	Pri Ctrl Rx Err	0	N/A
0	N/A		
0	Pri Ctrl Sanity Err	0	N/A
0	N/A		
0	RX HW flow control event	0	N/A
0	N/A		
0	Pri Ctrl No SOM	0	N/A
0	N/A		
0	Pri Ctrl Tx Err	0	N/A
0	N/A		
0	Tx FIFO Half Full	0	N/A
0	N/A		
0	Tx FIFO Full	0	N/A
0	N/A		
0	Future Field	0	N/A
0	N/A		
0	Future Field	0	N/A
0	N/A		
0	IMT Tx FIFO Half Full	0	0
0	0		
0	IMT Tx FIFO Full	0	0
0	0		
0	Tx FIFO 3/4 Full	0	N/A
0	N/A		
0	IMT By-pass FIFO Half Full	0	N/A
0	N/A		
0	IMT By-pass FIFO Full	0	N/A
0	N/A		
0	Pass thru CRC Error	0	N/A
0	N/A		
0	Lost Multicast Pkt	0	N/A
0	N/A		
0	Invalid Interrupt	0	N/A
0	N/A		
0	Error Int Overflow	0	N/A
0	N/A		
0	Large Pkt Error	0	N/A
0	N/A		
0	MSU Retran / MUX LVL1 Cong	0	0
0	0		
0	MSU ROE / MUX LVL2 Cong	0	0
0	0		

```

VC OS Cnt / MUX Cong Disc          0          0          0
0
Bus Disconnect Count                0          N/A          0
N/A
Violation Error                     0          0          0
0

```

Low Speed Perf Counts	A Bus		B Bus	
	Rx	Tx	Rx	Tx
All Packets	0M	3M	3M	0M
All Bytes	13M	69M	63M	15M
MSU Packets	--	--	0K	17K
MSU Bytes	--	--	8K	2042K
ASU Packets	--	--	17K	31K
ASU Bytes	--	--	209K	374K
DSU Packets	--	--	0K	0K
DSU Bytes	--	--	0K	0K
HSU Packets	--	--	0K	0K
HSU Bytes	--	--	0K	0K
TSU Packets	--	--	87K	87K
TSU Bytes	--	--	12522K	12522K
LSSU Packets	--	--	3223K	0K
LSSU Bytes	--	--	51575K	0K
BSU Packets	--	--	0K	0K
BSU Bytes	--	--	0K	0K
SSU Packets	--	--	0K	0K
SSU Bytes	--	--	0K	0K
Othr Packets	--	--	0K	0K
Othr Bytes	--	--	0K	0K

```

-----
SUMMARY REPORT HS Totals accumullated from      1 HIPR2 Slots
                                                  1 HIPR Slots
                                                  0 HMUX Slots

```

High Speed Error Summary	A Bus	B Bus
HS Rx Packet CRC Error	--	0
HS Rx Packet Format Error	--	0
HS Rx Disparity Error	--	0
HS Rx Sync Lost Error	--	0
HS Rx Code Word Error	--	0
HS Rx Packet SOM Before EOM	--	0
HS Bypass FIFO Half Full	--	0
HS Bypass FIFO Full	--	0
HS Rx FIFO Half Full	--	0
HS Rx FIFO Full	--	0
HS Tx FIFO Half Full	--	0
HS Tx FIFO Full	--	0
IXP Rx FIFO Half Full	--	0
IXP Rx FIFO Full	--	0

HS RX Large PKT discard -- 0

 ;END OF REPORT
 ;

tklc1070501 02-02-11 23:11:06 MST UNKNOWN ???.?-65.10.0
 Command Completed.

rept-imt-lvl1:e=251:s=0:r=summary

Command Accepted - Processing

stpa9020901 16-12-30 05:20:16 EST EAGLE 46.5.0.0.0-70.12.0
 rept-imt-lvl1:e=251:s=0:r=summary
 Command entered at terminal #6.

;

stpa9020901 16-12-30 05:20:16 EST EAGLE 46.5.0.0.0-70.12.0
 Retrieving LVL1 data from Eagle cards...

=====
 ==

SUMMARY REPORT: Totals accumulated from 218 User slots

Bus	Error Counts	A Bus		B
		COM	MUX	COM
MUX	-----	-----	-----	-----
	Rx CRC Error	0	0	
553	1			
	Rx Format Error	0	7	0
458				
	Rx Inv Len	23	2942	23
3397				
	Rx FIFO Half Full	1	0	
6	0			
	Rx FIFO Full	0	0	
2	0			
	CPU Rx FIFO Half Full	0	0	
0	0			
	CPU Rx FIFO Full	0	0	
0	0			
	CPU Rx MSU FIFO Full	0	N/A	0
N/A				
	CPU Rx LSSU FIFO Full	0	N/A	0
N/A				

CPU Rx XSU FIFO Full	0	N/A	0	N/A
ASU Rx FIFO Half Full	0	N/A	0	N/A
ASU Rx FIFO Full	0	N/A	0	N/A
SSU Packet Rx	10501	N/A	10501	N/A
ASU Safety Pkt	0	N/A	0	N/A
TSU Safety Pkt	0	N/A	0	N/A
BSU Safety Pkt	0	N/A	0	N/A
SSU Safety Pkt	138	N/A	163	N/A
Other Safety Pkt	0	N/A	0	N/A
Pri Ctrl Rx Err	3	N/A	4	N/A
Pri Ctrl Sanity Err	0	N/A	0	N/A
RX HW flow control event	0	3	2	6
Pri Ctrl No SOM	0	N/A	0	N/A
Pri Ctrl Tx Err	0	N/A	0	N/A
Tx FIFO Half Full	0	N/A	0	N/A
Tx FIFO Full	0	N/A	0	N/A
GBSU Resync	6627053	N/A	6627053	N/A
GBSU Invalid Seq	1	N/A	1	N/A
IMT Tx FIFO Half Full	0	111133	0	118851
IMT Tx FIFO Full	0	0	0	0
Tx FIFO 3/4 Full	0	N/A	0	N/A
GBSU Lost Packet	89	N/A	89	N/A
GBSU RX GRP Discard	0	N/A	0	N/A
Future	0	N/A	0	N/A
Lost Multicast Pkt	2432	N/A	0	N/A
Invalid Interrupt	0	N/A	0	N/A
Error Int Overflow	0	N/A	0	N/A
Large Pkt Error	0	N/A	0	N/A
MSU Retran/MUX LVL1 Cong	186038	6281	186314	15016
MSU ROE/MUX Cong BSU Disc	184	0	184	0
VC OS Cnt/MUX Cong Disc	4574195	0	4574195	0
Bus Disconnect Count	0	N/A	0	N/A
Violation Error	80	27521	80	25791
Info: MSU Dropped no Rept	91798	N/A	91798	N/A

Low Speed Perf Counts	A Bus		B Bus	
	Rx	Tx	Rx	Tx
All Packets	26247M	35191M	30881M	39758M
All Bytes	265659M	473133M	262981M	411159M
MSU Packets	6574660K	6574652K	11342489K	11342478K
MSU Bytes	155370714K	159559021K	153192761K	190935334K
ASU Packets	17831677K	17831688K	17815194K	17815215K
ASU Bytes	78708121K	78708353K	78526845K	78527060K
DSU Packets	4830K	4830K	0K	0K
DSU Bytes	360553K	360554K	0K	0K
HSU Packets	102720K	5132K	102702K	5130K
HSU Bytes	2077810K	438111K	2077455K	437868K
TSU Packets	238690K	238684K	238691K	238691K
TSU Bytes	33997710K	33997698K	33996473K	33996461K
LSSU Packets	2020343K	109602K	2020155K	109705K
LSSU Bytes	32376702K	1804919K	32374244K	1807059K
BSU Packets	103665K	11270920K	103000K	11200670K
BSU Bytes	2697154K	293504718K	2678460K	291483278K
SSU Packets	36K	57K	36K	57K

```

      SSU Bytes          792K      778K      792K
777K
      Othr Packets      0K        0K
0K      Othr Bytes      9K        0K
9K      Othr Bytes      0K

```


```

SUMMARY REPORT HS Totals accumullated from      32 HIPR2 Slots
                                                0 HIPR Slots
                                                0 HMUX Slots

```

High Speed Error Summary	A Bus	B Bus
HS Rx Packet CRC Error	0	0
HS Rx Packet Format Error	0	0
HS Rx Disparity Error	0	0
HS Rx Sync Lost Error	0	0
HS Rx Code Word Error	0	0
HS Rx Packet SOM Before EOM	0	0
HS Bypass FIFO Half Full	0	0
HS Bypass FIFO Full	0	0
HS Rx FIFO Half Full	0	0
HS Rx FIFO Full	0	0
HS Tx FIFO Half Full	0	0
HS Tx FIFO Full	0	0
IXP Rx FIFO Half Full	5288	3752
IXP Rx FIFO Full	5288	3752
HS RX Large PKT discard		0


```

;END OF REPORT
;

      stpa9020901 16-12-30 05:20:18 EST EAGLE 46.5.0.0.0-70.12.0
      -> 0x4320c28 (imtu_mgr): 0x4320c28 (imtu_mgr): difftime = 40013
start_time
= 3, current time = 40016
difftime = 40013 start_time = 3, current time = 40016

;

      stpa9020901 16-12-30 05:20:26 EST EAGLE 46.5.0.0.0-70.12.0
      Command Completed.

;

```


 **Note:**

In the top portion of this sample output "Error Counts" there are three types of possible output for each field:

- 1) A decimal number (indicates a count)
- 2) "—" (indicates NO DATA)
- 3) "N/A" (indicates this field is not supported)

Legend

- **Card**—IMT address of the card in hexadecimal
- Elapsed Time (day - h:m:s)— Amount of time that has elapsed since a card reset has occurred or the IMT statistics were cleared with the `clr-imt-stats` command. This is shown in the format *day - h:m:s*, where *day* is the number of days that have elapsed, and *h:m:s* is the amount of time in the current day in hours, minutes, and seconds (and tenths of seconds).
- "--" in the statistics column signifies that the statistics count is not applicable for the corresponding Card type.
- **Error Count**—IMT level 1 error statistics displayed in this report.
- **Perf Count**—IMT level 1 performance statistics displayed in this report.
- **A Bus value** and **B Bus value**—Values of the IMT level 1 statistics on IMT bus A and IMT bus B. Refer to the Notes section for descriptions of the statistics that are shown in the report for each card and in the Summary of totals for all requested cards, and their possible causes and corrective actions. Contact My Oracle Support if the count is excessive in relation to other cards.

"Excessive" count is primarily determined by the operator based upon:

- Overall system behavior
- Duration of time from when the last statistics were taken
- Statistics of an individual card in relation to other cards

The following types of Packets are included in the counts:

- **Safety Packet**—When an IMT packet goes around the IMT, a pre-determined value in the packet is decremented by each card. When this value reaches zero, the card that receives the value equal to zero logs this as a safety packet and removes the IMT packet from the IMT.
- **Message Signaling Unit (MSU)**—IMT packet containing data
- **Acknowledgement Signaling Unit (ASU)**—ACK for an MSU that is sent from the destination card back to the originating card.
- **Test Signaling Unit (TSU)**—Typically used to keep the card on the bus. There are many types of TSUs one of which performs a heartbeat function.
- **Broadcast Signaling Unit (BSU)**—Function is the same as an MSU except that each card will process the BSU and then copy it to the next card for processing. Used for IMT maintenance functions.

- **Safety Signaling Unit (SSU)**—Anytime a packet times out (Safety Packet), the card that logged a safety packet sends an SSU to make sure the original destination card is still on the IMT bus.
- **Isolation Signaling Unit (ISU)**—These are only used by the Fault Isolation test (tst-imt), in an attempt to isolate a hard failure on an IMT bus.
- **Other Packets and Other Bytes**—These include the ISUs when Fault Isolation test (tst-imt) is run (IMT bus is inhibited).
- **GBSU**—GBSU Lost Packet and GBSU RX GRP Discard.

Related Topics

- [clr-imt-stats](#)
- [conn-imt](#)
- [disc-imt](#)
- [rept-imt-info](#)
- [rept-imt-lvl2](#)
- [rept-stat-imt](#)
- [rmv-imt](#)
- [rst-imt](#)
- [tst-imt](#)

4.1.390 rept-imt-lvl2

Use this command to display IMT level 2 statistics for a card. This report displays IMT traffic statistics for one or both IMT busses in the system. The report can be filtered as follows:

- Report statistics between the source card (specified with the `loc` or `l` parameter), whose statistics pool is queried for report information, and another card (specified with the `sloc` or `s` parameter).
- Report statistics between the source card and a range of cards (specified with the `sloc/eloc` or `s/e` parameter combination).

Parameters

b (optional)

IMT bus identification.

Range:

a
Displays statistics for IMT bus A.

b
Displays statistics for IMT bus B.

both
Displays statistics for both IMT busses, A and B.

Default:*both***e (optional)**

End address. The IMT address of the last card in the range. A decimal value or a hexadecimal value can be specified for this parameter (see [Table 4-46](#) to map the values by card location).

Range:*0 - 251*

The value can be specified in decimal (0 – 251) or hexadecimal (*h'00 – h'fe*).

Default:

If the *s* parameter is specified, the default is the *s* parameter value.

If the *s* parameter is not specified, the default is *251*.

e1oc (optional)

End location. Specifies the card location of the last card in the range.

Range:

1101 - 1108, 1111 - 1113, 1115, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Default:

If *sloc* is specified—current *sloc* value; displays information for one card.

If *sloc* is not specified—*1115*, which corresponds to IMT address *251* (*e=251*); displays information for entire range of locations.

1 (optional)

Source card IMT address. The IMT address of the card whose statistics pool is to be queried for report information.

Range:*0 - 251***1oc (optional)**

Source card location. The location of the card whose statistics pool is to be queried for report information.

Range:

1101 - 1108, 1111 - 1113, 1115, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

s (optional)

Start address. The IMT address of the first (or only) card in the range. A decimal value or a hexadecimal value can be specified for this parameter (see [Table 4-46](#) to map the values by card location).

Range:*0 - 251*The value can be specified in decimal (0 – 251) or hexadecimal (*h'00 – h'fe*)**Default:**If *e* is specified—current *l* parameter value.If *e* is not specified—*0*.**sloc (optional)**

Start location. The card location of the first card in the range.

Range:*1101 - 1108, 1111 - 1113, 1115, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118***Default:**If *eloc* is specified—current *sloc* value.If *eloc* is not specified—IMT address 0 (*s=0*).**trm (optional)**

Serial port (printer location) where the report is to be sent.

Range:*1 - 40***Default:**

The report displays on the terminal where the command was issued.

Example

```
rept-imt-lvl2:l=00:s=00:e=02:b=a
```

DependenciesThe *s/e* parameters and *sloc/eloc* parameters cannot be specified together in the command.

3047 E3047 Cmd Rej: Parameter combination invalid

This command cannot be entered if the `clr-imt-stats`, `rept-imt-info`, `rept-imt-lvl1`, or `tst-imt` command is running.

2368 E2368 Cmd Rej: System busy - try again later

The *l* or *loc* parameter must be specified.

3051 E3051 Cmd Rej: Source address/location must be specified

This command cannot be entered during IMT statistics collection following an hourly boundary.

N/A N/A

The *l* parameter or the *loc* parameter must be specified. Both parameters cannot be specified.

3050 E3050 Cmd Rej: L parameter cannot be used in combination with LOC

A card location must be specified that is valid and defined in the database.

2376 E2376 Cmd Rej: Specified LOC is invalid

This command cannot be entered during an Extended Bit Error Rate Test (BERT).

3043 E3043 Cmd Rej: IMT test in progress

Notes

[Table 4-46](#) maps each card location to the decimal and hexadecimal values that can be specified for the *s* and *e* parameters.

[Table 40](#) maps each card location to the decimal and hexadecimal values that can be specified for the *s* and *e* parameters.

Output

If the source card location falls within the range of cards specified with the *sloc/eloc* or *s/e* parameters, then the output report for the source card shows zeros. The zeros are reported because the source card location does not use the IMT to communicate with itself and, therefore, does not report any values or pegs for traffic routed to itself. This command reports the values or pegs received, transmitted, or re-transmitted across the IMT bus.

```
rept-imt-lvl2:sloc=1101:eloc=1115:loc=1101
```

```
tklc1170501 17-05-17 04:23:21 EST EAGLE 46.5.0.0.0-70.32.0
```

```
rept-imt-lvl2:sloc=1101:eloc=1115:loc=1101
```

```
Command entered at terminal #18.
```

```
;
```

```
Command Accepted - Processing
```

```
tklc1170501 17-05-17 04:23:21 EST EAGLE 46.5.0.0.0-70.32.0
```

```
Retrieving data from card...
```

```
-----  
Card: H'00f0      Bus: A
```

Field		f0	f1	f2	f3	f4	f5	f6	f7
-----		----	----	----	----	----	----	----	----
Link Status		ALGN	ALGN	ALGN	ALGN	ALGN	-OS-	ALGN	-OS-
OS Count	(dec)	1	3	3	3	12	0	12	0
Transmit BSN	(dec)	0	2	2	2	2	0	2	0
Transmit FSN	(dec)	0	209	2	2	2	0	2	0
Receive BSN	(dec)	0	209	2	2	2	0	2	0
Receive FSN	(dec)	1	3	3	3	3	1	3	1
Unack Messages	(dec)	0	0	0	0	0	0	0	0
Invalid Length	(dec)	0	0	0	0	0	0	0	0
Invalid rx BSN	(dec)	0	0	0	0	0	0	0	0
Invalid rx FSN	(dec)	0	0	0	0	0	0	0	0
GBSU sync count	(dec)	2	5	5	5	17	0	17	0
GBSU seq err	(dec)	0	0	0	0	0	0	0	0
GBSU lost pkt	(dec)	0	0	0	0	0	0	0	0
RTB Address	(hex)	0000	0000	0000	0000	0000	0000	0000	0000
Retx Count	(dec)	0	0	0	0	0	0	0	0

```

    Minimum ack time (ms)      4      4      4      4      4      0
4      0
    Maximum ack time (ms)      0      0      0      0      0      0
0      0
;
tklcl1170501 17-05-17 04:23:23 EST EAGLE 46.5.0.0.0-70.32.0

```


Card: H'00f0 Bus: A

Field		f8	f9	fa	fb
-----		----	----	----	----
Link Status		ALGN	ALGN	-OS-	ALGN
OS Count	(dec)	1	4	131	175
Transmit BSN	(dec)	2	2	2	158
Transmit FSN	(dec)	2	2	2	142
Receive BSN	(dec)	2	2	2	142
Receive FSN	(dec)	3	3	3	159
Unack Messages	(dec)	0	0	0	0
Invalid Length	(dec)	0	0	0	0
Invalid rx BSN	(dec)	0	0	0	0
Invalid rx FSN	(dec)	0	0	0	0
GBSU sync count	(dec)	1	5	0	0
GBSU seq err	(dec)	0	0	0	0
GBSU lost pkt	(dec)	0	0	0	0
RTB Address	(hex)	0000	0000	0000	0000
Retx Count	(dec)	0	0	1	0
Minimum ack time (ms)		4	4	4	4
Maximum ack time (ms)		0	0	0	0

```

;
tklcl1170501 17-05-17 04:23:24 EST EAGLE 46.5.0.0.0-70.32.0

```


Card: H'00f0 Bus: B

Field		f0	f1	f2	f3	f4	f5	f6
-----		----	----	----	----	----	----	----
Link Status		ALGN	ALGN	ALGN	ALGN	ALGN	-OS-	ALGN
OS-								
OS Count	(dec)	1	3	3	2	12	0	
11	0							
Transmit BSN	(dec)	0	0	0	0	0	0	
0	0							
Transmit FSN	(dec)	0	0	0	0	0	0	
0	0							
Receive BSN	(dec)	0	0	0	0	0	0	
0	0							
Receive FSN	(dec)	1	1	1	1	1	1	
1	1							
Unack Messages	(dec)	0	0	0	0	0	0	
0	0							

```

Invalid Length (dec) 0 0 0 0 0 0 0 0 0
Invalid rx BSN (dec) 0 0 0 0 0 0 0 0 0
Invalid rx FSN (dec) 0 0 0 0 0 0 0 0 0
GBSU sync count (dec) 0 0 0 0 0 0 0 0 0
GBSU seq err (dec) 0 0 0 0 0 0 0 0 0
GBSU lost pkt (dec) 0 0 0 0 0 0 0 0 0
RTB Address (hex) 0000 0000 0000 0000 0000 0000 0000 0000
Retx Count (dec) 0 1 1 1 0 0 0 0
Minimum ack time (ms) 4 4 4 4 4 0 4 0
Maximum ack time (ms) 0 0 0 0 0 0 0 0
;
tklcl1170501 17-05-17 04:23:25 EST EAGLE 46.5.0.0.0-70.32.0

```

```
-----
Card: H'00f0 Bus: B
```

Field	f8	f9	fa	fb
Link Status	ALGN	ALGN	-OS-	ALGN
OS Count (dec)	0	3	128	172
Transmit BSN (dec)	0	0	0	0
Transmit FSN (dec)	0	0	0	0
Receive BSN (dec)	0	0	0	0
Receive FSN (dec)	1	1	1	1
Unack Messages (dec)	0	0	0	0
Invalid Length (dec)	0	0	0	0
Invalid rx BSN (dec)	0	0	0	0
Invalid rx FSN (dec)	0	0	0	0
GBSU sync count (dec)	0	0	0	0
GBSU seq err (dec)	0	0	0	0
GBSU lost pkt (dec)	0	0	0	0
RTB Address (hex)	0000	0000	0000	0000
Retx Count (dec)	0	0	1	0
Minimum ack time (ms)	4	4	4	4
Maximum ack time (ms)	0	0	0	0

```

;
tklcl1170501 17-05-17 04:23:26 EST EAGLE 46.5.0.0.0-70.32.0

```

```
-----
;END OF REPORT
;

```

```
tklcl1170501 17-05-17 04:23:26 EST EAGLE 46.5.0.0.0-70.32.0
Command Completed.
```

```

;
Command Executed

```

Legend

- **Card**—IMT address of the card location specified by the 1 parameter in this command in hexadecimal
- **Bus**—IMT bus for which the IMT level 2 statistics are being reported
- **Field**—IMT level 2 statistics displayed in this report

- **00 - ef**—IMT address of the cards on the IMT bus in hexadecimal
- **Link Status**—Status of the link: ALGN (aligned) or OS (out of service)
- **OS Count**—Number of times the link has cycled between being aligned and being out of service
- **Transmit BSN**—Number of BSNs transmitted.
- **Transmit FSN**—Number of FSNs transmitted
- **Receive BSN**—Number of BSNs received
- **Receive FSN**—Sequence number for the next FSN that the source card location expects to receive
- **Unack Messages**—Number of unacknowledged messages received
- **Invalid Length**—Number of messages received with invalid length indicators
- **Invalid rx BSN**—Number of invalid BSNs received
- **Invalid rx FSN**—Number of invalid FSNs received
- **Invalid LSSU**—Number of invalid LSSUs received
- **Invalid ASU**—Number of invalid ASUs received
- **RTB Address**—Address of the retransmission buffer, in hexadecimal
- **Retx count**—Number of re-transmitted MSUs
- **Minimum ack time**—Minimum amount of time for an acknowledgment, in milliseconds
- **Maximum ack time**—Maximum amount of time for an acknowledgment, in milliseconds
- **GBSU sync count**— The count of how many times the GBSU sequence numbers have been resynced (This is received, not sent)
- **GBSU seq err**— The count of how many times a cards received a GBSU out of sequence
- **GBSU lost pkt**—The count of lost GBSU packets in the system (This is received, not sent)

Related Topics

- [clr-imt-stats](#)
- [conn-imt](#)
- [disc-imt](#)
- [rept-imt-info](#)
- [rept-imt-lvl1](#)
- [rept-stat-imt](#)
- [rmv-imt](#)
- [rst-imt](#)
- [tst-imt](#)

4.1.391 rept-meas

Use this command to generate measurement reports on demand. The reports display on the UI terminal, and are not transferred to the customer FTP server when the Measurements Platform feature is enabled.

Parameters

enttype (mandatory)

Entity type to report on.

Range:

idpr

Measurements for IDPR

link

Measurements for signaling links

Inkset

Measurements for linksets

Inp

Measurements for local number portability

Isdestni

Measurements for linkset destination network identifiers

Isonismt

Measurements for ISUP message type screening

Isorigni

Measurements for linkset originating network identifiers

mapscrn

Measurements for GSM MAP message screening

origni

Measurements for originating network identifiers greater than 5

originic

Measurements for originating network identifiers (less than 5, small networks) for network clusters

sctpasoc

Measurements per association for the SCTP protocol (used to carry M3UA, M2PA, SUA and DIAM traffic)

sctpcard

Measurements per card for the SCTP protocol (used to carry M3UA, M2PA, SUA and DIAM traffic)

sip

Measurements for SIP

stp

Measurements pertaining to the Signaling Transfer Point in general or summarized totals recorded on the STP

tt

Measurements for translation types

ua

Measurements per application server/association for the M3UA and SUA protocols

type (mandatory)

Type of measurement report.

Range:**avl**

Availability measurements

avld

Daily availability measurements

avldth

Day to hour availability measurements.

comp

Component measurements

gtwy

Internetwork gateway-related data from the STP for ANSI and ITU measurements. ANSI gateway measurements are pegged on a per-linkset, per-Network Indicator basis, whereas ITU measurements are pegged on a per-linkset basis.

mtcd

Daily maintenance measurements

mtcdth

Day-to-hour maintenance measurements

mtcs

Link/linkset maintenance status

nm

Network management, on-demand

rbase

Schedule-report type record base measurements

systot

STP system totals

aname (optional)

Association name. This parameter specifies the name assigned to the association in the IPAPSOCK table.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

asname (optional)

Application server name. The name of the application server.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter.

day (optional)

Day of the week for daily measurement reports.

Range:

mon

tue

wed

thu

fri

sat

sun

Default:

The previous single day report is generated.

hh (optional)

Half-hour interval. The ending time for the collection interval; for example, *hh=0300* generates a report for 2:30-3:00.

Range:

0000 - 2400

hhmm where *hh*= 00-24 (hour) and *mm*= 00 or 30 (minute)

Default:

The *hh* parameter value is not given.

link (optional)

The link on the card specified in the *loc* parameter

Synonym:

port

Range:

a, b, a1 - a31, b1 - b31

Not all card types support all *link* parameter values.

See [Table A-1](#) for valid *link* parameter range values for each type of card that can have assigned signaling link ports.

Default:
none

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

Default:
none

lsn (optional)

Linkset name for the linkset where link or linkset measurements are reported.

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Default:
none

nc (optional)

Network cluster for the specified GTWY measurement report.

Range:

0 - 255

Default:
none

ni (optional)

Network indicator for the specified GTWY measurement report.

Range:

0 - 255

Default:
none

nzo (optional)

Print non-zero measurements only.

Range:

yes

no

Default:

yes for types *avl*, *avld*, and *avldth*.

This parameter is not used with the other report types.

period (optional)

Relative time period to report.

Range:***last***

The previous collection interval

specific

A specific half-hourly interval (specified with the `hh` parameter)

active

The current collection interval

all

All collection intervals.

Default:

none

qh (optional)

Quarter-hour interval. This parameter implies the ending time for the collection interval; for example, `qh=0315` generates a report for **3:00-3:15**.

Range:

0000 - 2400

hhmm where *hh*= 00-24 (hour) and *mm*= 00, 15, 30, or 45 (minute)

Default:

none

trm (optional)

Serial port (printer location) where the report is to be sent.

Range:

1 - 16

Default:

none

tt (optional)

Translation type to be reported.

Range:

0 - 255

Default:

none

Example

```
rept-meas:enttype=link:type=avl:loc=1201:link=a
```

```
rept-meas:type=systot:enttype=tt:tt=26
```

```
rept-meas:type=mtcd:enttype=sctpasoc:aname=assoc01
```

```
rept-meas:type=mtcdth:enttype=ua:aname=assoc01:asname=appserv01
```

```
rept-meas:enttype=sip:type=mtcd
```

Dependencies

This command cannot be used to specify a report type if that report type is currently printing.

2305 E2305 Cmd Rej: On demand report currently being printed

Valid parameter combinations depend on the report type specified. These combinations are shown in [Table 4-49](#). An X in a cell indicates that the parameter is valid for the report type shown.

Table 4-49 Valid Parameter Combinations for the type Parameter

Parameter Value	systot	comp	mtcd	mtcdt	mtch	mtcs	nm	avl	avld	avldth	gtwy	rbase
enttype: link		X	X	X		X	X	X	X	X		X
enttype: linkset		X	X	X		X	X				X	X
enttype: lnpp			X		X							
enttype: lsdestnit											X	
enttype: lsonism											X	
enttype: lsigni											X	
enttype: mapscrn			X		X							
enttype: origni											X	
enttype: origin											X	
enttype: sctpasoc		X	X	X								
enttype: sctpcard		X	X	X								
enttype: sip	X		X									
enttype: stp	X		X	X		X					X	X
enttype: tt	X											
enttype: ua		X	X	X								
enttype: period: last	X	X	X	X	X		X	X	X	X	X	
enttype: period: specific	X	X			X			X			X	
enttype: period: active		X				X	X	X				X
enttype: period: all			X					X				
enttype: period: nzo								X	X	X		

2281 E2281 Cmd Rej: Invalid ENTTYPE for this TYPE

The entity specified by the `loc` parameter must be equipped in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

When `enttype=link` is specified, the card in the location specified by the `loc` parameter must be a LIM.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

Quarter-hourly collection and report processing cannot be in progress when report type `comp`, `systot`, `avl`, or `gtwy` is specified.

3688 E3688 Cmd Rej: 15-minute measurement collection in progress

The `mtcdth` report type is unavailable between midnight and 1:00 AM (0100).

2275 E2275 Cmd Rej: Day-to-hour measurement data not yet collected

Day-to-hour collection and report processing cannot be in progress when report type `mtcd` or `mtcdth` is specified.

2276 E2276 Cmd Rej: Day-to-hour measurement collection in progress

Daily collection and report processing cannot be in progress when report type `mtcd` is specified.

2277 E2277 Cmd Rej: Daily measurement collection in progress

Half-hourly collection and report processing cannot be in progress when report type `comp`, `systot`, `avl`, or `gtwy` is specified.

2278 E2278 Cmd Rej: 30-minute measurement collection in progress

5-minute collection and report processing cannot be in progress when report type `nm` is specified.

2279 E2279 Cmd Rej: 5-minute measurement collection in progress

If the `nc` parameter is specified for origin reports, then the `ni` parameter must be specified.

2309 E2309 Cmd Rej: NI required

If the `ni` parameter is specified for origin reports, then measurements data must be available at the time the command is entered.

2535 E2535 Cmd Rej: No match on NI parameter during retrieve

The **day** parameter can be specified only for report type `mtcd` and entity types `Inp` and `mapscrn`.

3419 E3419 Cmd Rej: DAY is invalid for type-enttype combination

A primary MCPM card must be available when the Measurements Platform collection option is enabled and this command is entered.

3117 E3117 Cmd Rej: No available primary MCP

The 15 Minute Measurements feature must be turned on and the 15 Minute Measurements collection option must be on before the `qh` parameter can be specified.

3690 E3690 Cmd Rej: QH cannot be specified unless 15 min meas is turned ON

The `hh` parameter must specify a half-hourly boundary (the end of the requested half-hour for the report) for valid report types.

2302 E2302 Cmd Rej: PERIOD must be 1/2 hour boundary

The `hh` and `qh` parameters cannot be specified together in the command.

3694 E3694 Cmd Rej: QH and HH cannot be specified together

When the `period=last` parameter is specified, the `hh`, `qh`, and `day` parameters cannot be specified.

2283 E2283 Cmd Rej: QH, HH, or DAY cannot be specified when PERIOD=LAST

If the `period=active` parameter is specified, then the `hh` and `qh` parameters cannot be specified.

2284 E2284 Cmd Rej: QH, HH, or DAY cannot be specified when PERIOD=ACTIVE

When the `period=specific` parameter is specified, the `hh`, `qh`, or `day` parameter must be specified. The `hh`, `qh`, and `day` parameters can be specified only if the `period=specific` parameter is specified.

2286 E2286 Cmd Rej: QH or HH must be specified when PERIOD=SPECIFIC

A quarter-hour boundary must be specified for the `qh` parameter.

3689 E3689 Cmd Rej: Period must be 1/4 hour boundary

The `hh` and `qh` parameters cannot be specified if a value of `avld`, `mtcd`, `nm`, `rbase`, or `mtcs` is specified for the `type` parameter.

2307 E2307 Cmd Rej: QH or HH is not valid for this TYPE

If the `link` parameter is specified, the `loc` parameter must be specified.

2296 E2296 Cmd Rej: Both LOC and LINK must be specified

The `lsn` and `loc` parameters cannot be specified together in the command.

2294 E2294 Cmd Rej: LSN and LOC parms are mutually exclusive

If the `enttype=link` parameter is specified, then the `loc` and `port` parameters or the `lsn` parameter must be specified.

2706 E2706 Cmd Rej: APPL is invalid for report or entity

The `period=active` parameter cannot be specified when the `enttype=stp` parameter or the `enttype=tt` parameter is specified.

2287 E2287 Cmd Rej: ACTIVE not available for type-enttype combination

If a value of `idpr`, `origni`, `origninc`, `stp`, or `tt` is specified for the `enttype` parameter, or if the `type=systot` parameter is specified, then the `lsn` parameter cannot be specified.

2301 E2301 Cmd Rej: LSN parameter not valid for type-enttype combination

For entity type `avl`, if `period=all` is specified, the `loc` and `port` parameters must be specified.

2289 E2289 Cmd Rej: LOC and LINK must be specified when PERIOD=ALL

A value of *avl*, *avld*, or *avldth* must be specified for the `type` parameter before the `nzo=yes` parameter can be specified.

2306 E2306 Cmd Rej: NZO is not valid for this TYPE

The `appl` and `loc` parameters cannot be specified in the same command.

2271 E2271 Cmd Rej: Either LOC or APPL (not both) must be specified

The `type=systot` and `loc` parameters cannot be specified in the same command.

2707 E2707 Cmd Rej: LOC is invalid for specified report TYPE

If the `type=gtwy` parameter is specified, and the value of the `enttype` parameter is *Isorigni*, *Isdestni*, or *Isonismt*, then the `ni` parameter cannot be specified for ITU linksets. The `ni` parameter is allowed only for ANSI linksets.

3579 E3579 Cmd Rej: NI parameter may not be specified for ITU linksets

If the `type=gtwy` parameter is specified, and a value of *Isdestni*, *Isonismt*, or *Isorigni* is specified for the `enttype` parameter for an ITU linkset, then only the `lsn` parameter can be specified.

2300 E2300 Cmd Rej: LSN must be specified

If the `enttype=sctpcard` parameter is specified, then the card in the location specified by the `loc` parameter must be an IPLIMx, IPGWx, or IPSG card.

2212 E2212 Cmd Rej: Invalid card type for this command

The `enttype=sctpasoc` or `enttype=ua` parameter must be specified before the `aname` parameter can be specified.

3397 E3397 Cmd Rej: ANAME is invalid for type-enttype combo

The `enttype=ua` parameter must be specified before the `asname` parameter can be specified.

4005 E4005 Cmd Rej: Either INP/AINPQ/GPORT must be ON or TINP must be enabled

If the `enttype=sctpcard` parameter is specified, then the `loc` parameter must be specified.

2366 E2366 Cmd Rej: LOC must be specified

If the `enttype=sctpcard` parameter is specified, then a card must be installed in the location specified by the `loc` parameter.

2101 E2101 Cmd Rej: Card location is unequipped

The `enttype=link` parameter must be specified before the `link` parameter can be specified.

2299 E2299 Cmd Rej: LINK parameter valid only when ENTTYPE=LINK

The `type=gtwy` parameter and the `enttype=origininc` parameter must be specified before the `nc` parameter can be specified.

3417 E3417 Cmd Rej: NC is invalid for type-enttype combo

The `type=gtwy` parameter must be specified, and a value of *Isdestni*, *Isonismt*, *Isorigni*, *origni*, or *origininc* must be specified for the `enttype` parameter before the `ni` parameter can be specified.

3416 E3416 Cmd Rej: NI is invalid for type-enttype combo

The `enttype=tt` parameter must be specified before the `tt` parameter can be specified. If the `enttype=tt` parameter is specified, then the `tt` parameter must be specified.

2297 E2297 Cmd Rej: TT parameter valid only when ENTTYPE=TT

If a value of *sctpasoc* or *ua* is specified for the `enttype` parameter, then the `aname` parameter must be specified.

3403 E3403 Cmd Rej: Association name must be specified

The association specified by the `aname` parameter must be provisioned in the system.

4099 E4099 Cmd Rej: Association name not found

If the `enttype=ua` parameter is specified, then the `asname` parameter must be specified.

3471 E3471 Cmd Rej: Application server name must be specified

The application server specified by the `asname` parameter must be provisioned in the system.

4079 E4079 Cmd Rej: Specified AS name not found

The association specified by the `aname` parameter must be assigned to the application server specified by the `asname` parameter.

3399 E3399 Cmd Rej: Association is not assigned to AS

The `lsn` and `link` parameters cannot be specified together in the command.

2295 E2295 Cmd Rej: LSN and LINK parms are mutually exclusive

If the `period=all` parameter is specified, then the `hh` and `qh` parameters cannot be specified.

2285 E2285 Cmd Rej: QH, HH, or DAY cannot be specified when PERIOD=ALL

Either the specified Linkset does not exist or no link is configured for it.

2384 E2384 Cmd Rej: Link set is not equipped

The A-Port, G-Port, IS41 GSM Migration, or Prepaid SMS Intercept Ph1 feature must be enabled, or the INP, MO SMS IS41-to-GSM Migration, MO-based GSM SMS NP, or MO-based IS41 SMS NP feature must be turned on before the `mtchnp=on` parameter or the `mtcdnp=on` parameter can be specified.

3631 E3631 Cmd Rej: Incompatible Feature/Option status

The value specified for the `appl` parameter must be a supported GPL.

3710 E3710 Cmd Rej: APPL not valid for command

If the `loc` parameter is specified, then a value of `,` `link`, or `sctpcard` must be specified for the `enttype` parameter. If the `enttype=lnkset` parameter is specified, then the `loc` parameter cannot be specified.

2298 E2298 Cmd Rej: LOC parameter not valid for this ENTTYPE

If the `enttype=link` parameter is specified, then the values specified for the `loc` and `link` parameters must already exist in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

Period/type combinations:

- If a value of `rbase` or `mtcs` is specified for the `type` parameter, then a value of `active` must be specified for the `period` parameter.
- If a value of `avld`, `avldth`, `mtcdth`, or `nm` is specified for the `type` parameter, then the `period=specific` parameter cannot be specified.
- If the `period=active` parameter is specified, then a value of `avld`, `avldth`, `mtcd`, `mtcdth`, or `systot` cannot be specified for the `type` parameter.
- The `type=avl` parameter must be specified before the `period=all` parameter can be specified.

2280 E2280 Cmd Rej: Invalid PERIOD for this TYPE

SIPNP Feature must be enabled before the `enttype=sip` and `type=mtcd/systot` parameters can be specified.

2590 E2590 Cmd Rej: SIPNP Feature must be enabled.

The location specified must be in the range from 1101 to 6118, except for MUX cards.

2152 E2152 Cmd Rej: Shelf ID out of range

If the `enttype=tt` parameter is specified, then the `tt` parameter must be specified.

2274 E2274 Cmd Rej: TT must be specified when ENTTYPE=TT

The `type` parameter must be one of the `AVL`, `AVLD`, `AVLDTH`, `COMP`, `GTWY`, `MTCD`, `MTCDTH`, `MTCS`, `NM`, `RBASE`, or `SYSTOT` range values.

2282 E2282 Cmd Rej: Unknown ENTTYPE

An entity type (ENTTYPE) of `DEIR`, `EIR`, or `VFLX` requires the `DAY` parameter to be specified.

3423 E3423 Cmd Rej: DAY must be specified when PERIOD=SPECIFIC

Retrievals with the `rept-meas` command for `period= LAST`, `SPECIFIC`, and `ALL` are rejected by the `EAGLE` if either `measplat` or `integrated measurements` is not enabled.

3088 E3088 Cmd Rej: Platformenable or `Oamhcmeas` option must be on

This command cannot be entered when `CAT2 IPSM to OAM syncing` is in progress.

3652 E3652 Cmd Rej: `IPSM to OAM SYNC` in progress

Notes

INP, GSM MAP Screening, LNP, G-Port, A-Port, and IGM measurements are available via FTP transfer only.

If an on-demand report is requested while the collection for that interval is in progress, the requested report will not be generated. The `rept-meas` command must be entered again.

If this command is executed, and one or more cards did not respond to the request for measurements because the card was Out-Of-Service, then the following warning message may appear:

```
Measurement data represents an incomplete interval
```

This message does not indicate that data was lost.

If this command is executed, and measurements data does not exist for the specified time, then the following message may appear:

```
LINK-COMP MEASUREMENT:  LOC: 1201, LINK: A, LSN: (MTP2)  
Measurement data are not current.
```

Default values are shown for LOC, LINK, and LSN. These values always appear in the message, no matter what values were specified in command.

Output



Note:

Refer to *Measurements Reference* for `rept-meas` output examples.

Related Topics

- [chg-meas](#)
- [copy-meas](#)
- [rept-ftp-meas](#)
- [rtrv-meas-sched](#)

4.1.392 rept-stat-alm

Use this command to provide status of all alarms.

Parameters

c11i (optional)

CLLI string. Displays only alarms that pertain to a particular CLLI.

Range:

ayyyyyyyyy

dev (optional)

Device. The type of device for which alarms are displayed.

Range:*applsock**as**card**cdt**clock**dlk**ls**lsmsconn**route**slk**trm**rtx**e1port**t1port**tps**enet***display (optional)**

Type of alarms to be displayed. When the `display=inhb` parameter is specified, the Alarm Inhibit Report appears in the command output and provides information about inhibited alarms in the system. The `dev` parameter can be specified with this parameter to display the Alarm Inhibit Report for a specific device type.

Range:*inhb***dur (optional)**

Duration. This parameter indicates whether to display permanently inhibited alarms, temporarily inhibited alarms, or timed inhibited alarms. This parameter is valid only when the `display=inhb` parameter is specified.

Range:*perm**temp**timed*

edate (optional)

Expiry date. This parameter allows the user to see timed alarm inhibits that will expire on the specified date.

Range:

101 - 991231

Specify the date in the format *year*, followed by *month*, followed by *day*.

Example

```
rept-stat-alm
rept-stat-alm:display=inhb:dev=card
rept-stat-alm:display=inhb:clli=slkset1:dev=ls
rept-stat-alm:display=inhb
rept-stat-alm:display=inhb:dur=timed
rept-stat-alm:display=inhb:dur=timed:edate=040520
```

Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The `dur` parameter can be specified only if the `display=inhb` parameter is specified.

4551 E4551 Cmd Rej: DISPLAY parameter is mandatory with DUR parameter

The `dur`, `dev`, or `clli` parameter can be specified only if the `display=inhb` parameter is specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `edate` parameter can be specified only if the `dur=timed` parameter is specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `dev` parameter can have only the values `slk`, `ls`, or `route` if the `clli` parameter is specified.

4554 E4554 Cmd Rej: DEV must be either SLK, LS or ROUTE if CLLI is specified

The `dur` parameter must be compatible with the specified device.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

The value specified for the `clli` parameter must already exist in the DSTN table.

2338 E2338 Cmd Rej: Invalid CLLI

The value specified for the `edate` parameter must be greater than the system date.

4549 E4549 Cmd Rej: EDATE/ETIME must be greater than system date/time

Notes

None

Output

This example shows the output when the system is clean and before a maintenance baseline has been established:

```
rept-stat-alm

tekelecstp 21-06-04 00:00:14 MST EAGLE 47.0.0.0.0-78.12.0
  ALARM TRANSFER= LMC
  ALARM MODE          CRIT= SLIENT      MAJR= SILENT      MINR= SLIENT
  ALARM FRAME 1      CRIT= 0           MAJR= 0           MINR= 0
  ALARM FRAME 2      CRIT= 0           MAJR= 0           MINR= 0
  ALARM FRAME 3      CRIT= 0           MAJR= 0           MINR= 0
  ALARM FRAME 4      CRIT= 0           MAJR= 0           MINR= 0
  ALARM FRAME 5      CRIT= 0           MAJR= 0           MINR= 0
  ALARM FRAME 6      CRIT= 0           MAJR= 0           MINR= 0
  PERM. INH. ALARMS  CRIT= 0           MAJR= 0           MINR= 0
  TEMP. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
  TIMED INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
  ACTIVE ALARMS      CRIT= 0           MAJR= 0           MINR= 0
  TOTAL ALARMS       CRIT= 0           MAJR= 0           MINR= 0

  Command Completed.
;
```

This example shows the output after critical and minor alarms are generated. Major alarms still show SILENT.

```
rept-stat-alm

tekelecstp 21-06-04 00:00:14 MST EAGLE 47.0.0.0.0-78.12.0
  ALARM TRANSFER= LMC
  ALARM MODE          CRIT= AUDIBLE     MAJR= SILENT      MINR= AUDIBLE
  ALARM FRAME 1      CRIT= 2           MAJR= 0           MINR= 17
  ALARM FRAME 2      CRIT= 0           MAJR= 0           MINR= 0
  ALARM FRAME 3      CRIT= 0           MAJR= 0           MINR= 0
  ALARM FRAME 4      CRIT= 0           MAJR= 0           MINR= 0
  ALARM FRAME 5      CRIT= 0           MAJR= 0           MINR= 0
  ALARM FRAME 6      CRIT= 0           MAJR= 0           MINR= 0
  PERM. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
  TEMP. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
  TIMED INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
  ACTIVE ALARMS      CRIT= 2           MAJR= 0           MINR= 17
  TOTAL ALARMS       CRIT= 2           MAJR= 0           MINR= 17

  Command Completed.
;
```

This example shows inhibited alarms:

rept-stat-alm

```

tklc1131002 21-05-30 01:17:10 EST EAGLE 47.0.0.0.0-78.12.0
ALARM TRANSFER= RMC
ALARM MODE          CRIT= AUDIBLE      MAJR= SILENT      MINR= AUDIBLE
ALARM FRAME 1      CRIT= 7          MAJR= 254         MINR= 36
ALARM FRAME 2      CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 3      CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 4      CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 5      CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 6      CRIT= 0          MAJR= 0           MINR= 0
PERM. INH. ALARMS  CRIT= 0          MAJR= 1           MINR= 0
TEMP. INH. ALARMS  CRIT= 0          MAJR= 0           MINR= 0
TIMED INH. ALARMS  CRIT= 0          MAJR= 0           MINR= 0
ACTIVE ALARMS      CRIT= 7          MAJR= 253         MINR= 36
TOTAL ALARMS       CRIT= 7          MAJR= 254         MINR= 36

```

Command Completed.

;

This example includes the Alarm Inhibit report for the card in location 1301.

rept-stat-alm:display=inhb:dev=card

```

rlghncxa03w 10-02-27 15:00:53 EST EAGLE 42.0.0
ALARM TRANSFER= RMC
ALARM MODE          CRIT= SILENT      MAJR= SILENT      MINR= SILENT
ALARM FRAME 1      CRIT= 11         MAJR= 24          MINR= 17
ALARM FRAME 2      CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 3      CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 4      CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 5      CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 6      CRIT= 0          MAJR= 0           MINR= 0
PERM. INH. ALARMS  CRIT= 0          MAJR= 4           MINR= 2
TEMP. INH. ALARMS  CRIT= 1          MAJR= 3           MINR= 1
TIMED INH. ALARMS  CRIT= 0          MAJR= 0           MINR= 0
ACTIVE ALARMS      CRIT= 11         MAJR= 23          MINR= 15
TOTAL ALARMS       CRIT= 13         MAJR= 30          MINR= 18

```

ALARM INHIBIT REPORT

```

-----
DEVICE    DEVICE IDENTIFIER  DURATION  INH LVL  ALM LVL  DATE
TIME
-----
CARD     1301              PERM     MAJR     MAJR
-----

```

Command Completed.

;

This example includes the Alarm Inhibit report for multiple device types. It includes point codes with point code subtype prefixes, and exception routes that require a

second line of display to uniquely identify the exception class/criteria of the routes. A plus sign (+) following the alarm level indicates that the current alarm is not inhibited because the level of the inhibit is less than the level of the alarm.

```
rept-stat-alm:display=inhb
```

```
rlghncxa03w 10-02-27 15:00:53 EST EAGLE 42.0.0
ALARM TRANSFER= RMC
ALARM MODE          CRIT= AUDIBLE          MAJR= SILENT          MINR= SILENT
ALARM FRAME 1      CRIT= 2              MAJR= 8              MINR= 0
ALARM FRAME 2      CRIT= 0              MAJR= 0              MINR= 0
ALARM FRAME 3      CRIT= 0              MAJR= 0              MINR= 0
ALARM FRAME 4      CRIT= 0              MAJR= 0              MINR= 0
ALARM FRAME 5      CRIT= 0              MAJR= 0              MINR= 0
ALARM FRAME 6      CRIT= 0              MAJR= 0              MINR= 0
PERM. INH. ALARMS  CRIT= 0              MAJR= 1              MINR= 0
TEMP. INH. ALARMS CRIT= 0              MAJR= 1              MINR= 0
TIMED INH. ALARMS CRIT= 0              MAJR= 0              MINR= 0
ACTIVE ALARMS      CRIT= 2              MAJR= 6              MINR= 0
TOTAL ALARMS      CRIT= 2              MAJR= 8              MINR= 0
```

ALARM INHIBIT REPORT

```
-----
DEVICE    DEVICE IDENTIFIER  DURATION  INH LVL  ALM LVL  DATE    TIME
-----  -
CARD      1101              PERM      MINR     MAJR+    ---    ---
ENET      1201,A            PERM      MAJR     MAJR     ---    ---
ENET      1201,B            TEMP      MAJR     MAJR     ---    ---
ENET      1101,A            PERM      MINR     MAJR+    ---    ---
```

Command Completed.

;

This example shows timed inhibited alarm information:

```
rept-stat-alm:display=inhb:dur=timed
```

```
rlghncxa03w 10-02-27 15:00:53 EST EAGLE 42.0.0
ALARM TRANSFER= RMC
ALARM MODE          CRIT= SILENT          MAJR= SILENT          MINR= SILENT
ALARM FRAME 1      CRIT= 5              MAJR= 3              MINR= 6
ALARM FRAME 2      CRIT= 0              MAJR= 0              MINR= 0
ALARM FRAME 3      CRIT= 0              MAJR= 0              MINR= 0
ALARM FRAME 4      CRIT= 0              MAJR= 0              MINR= 0
ALARM FRAME 5      CRIT= 0              MAJR= 0              MINR= 0
ALARM FRAME 6      CRIT= 0              MAJR= 0              MINR= 0
PERM. INH. ALARMS  CRIT= 0              MAJR= 0              MINR= 0
TEMP. INH. ALARMS CRIT= 0              MAJR= 0              MINR=
0
TIMED. INH. ALARMS CRIT= 1              MAJR= 2              MINR= 1
ACTIVE ALARMS      CRIT= 4              MAJR= 1              MINR= 5
TOTAL ALARMS      CRIT= 5              MAJR= 3              MINR= 6
```

```

ALARM INHIBIT REPORT
-----
DEVICE    DEVICE IDENTIFIER  DURATION  INH LVL  ALM LVL  DATE
TIME
-----  -----  -----  -----  -----  -----
1000     ROUTE ps-004-005-006      TIMED     CRIT     CRIT     06-08-01
1200     E1PORT 1101,1            TIMED     MAJR     MAJR     06-10-05
1100     T1PORT 1301,3            TIMED     MAJR     MAJR     06-08-01
1100     APPLSOCK sock1234567890  TIMED     MINR     MAJR     06-10-05

Command Completed.
;

```

This example shows timed inhibited alarm information for alarms that will expire on the specified date:

```
rept-stat-alm:display=inhb:dur=timed:edate=061001
```

```

upg1040403 10-02-27 14:09:58 EST EAGLE 42.0.0
ALARM TRANSFER= RMC
ALARM MODE      CRIT= SILENT      MAJR= SILENT      MINR= SILENT
ALARM FRAME 1   CRIT= 5           MAJR= 3           MINR= 6
ALARM FRAME 2   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 3   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 4   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 5   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 6   CRIT= 0           MAJR= 0           MINR= 0
PERM. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TEMP. INH. ALARMS CRIT= 0           MAJR= 0           MINR=
0
TIMED. INH. ALARMS CRIT= 1           MAJR= 2           MINR= 1
ACTIVE ALARMS      CRIT= 4           MAJR= 1           MINR= 5
TOTAL ALARMS      CRIT= 5           MAJR= 3           MINR= 6

```

```

ALARM INHIBIT REPORT
-----
DEVICE    DEVICE IDENTIFIER  DURATION  INH LVL  ALM LVL  DATE
TIME
-----  -----  -----  -----  -----  -----
1000     ROUTE ps-004-005-006      TIMED     CRIT     CRIT     06-10-01
1200     E1PORT 1101,1            TIMED     MAJR     MAJR     06-10-01

Command Completed.
;

```

This example shows inhibited alarm information for the linksets with the specified CLLI:

```
rept-stat-alm:display=inhb:clli=slkset1:dev=ls
```

```
upg1040403 10-03-27 14:09:58 EST EAGLE 42.0.0
ALARM TRANSFER= RMC
ALARM MODE          CRIT= SILENT          MAJR= SILENT          MINR= SILENT
ALARM FRAME 1      CRIT= 5              MAJR= 3              MINR= 6
ALARM FRAME 2      CRIT= 0              MAJR= 0              MINR= 0
ALARM FRAME 3      CRIT= 0              MAJR= 0              MINR= 0
ALARM FRAME 4      CRIT= 0              MAJR= 0              MINR= 0
ALARM FRAME 5      CRIT= 0              MAJR= 0              MINR= 0
ALARM FRAME 6      CRIT= 0              MAJR= 0              MINR= 0
PERM. INH. ALARMS  CRIT= 0              MAJR= 0              MINR= 0
TEMP. INH. ALARMS  CRIT= 0              MAJR= 0              MINR= 0
TIMED. INH. ALARMS CRIT= 1              MAJR= 2              MINR= 1
ACTIVE ALARMS      CRIT= 4              MAJR= 1              MINR= 5
TOTAL ALARMS       CRIT= 5              MAJR= 3              MINR= 6
```

ALARM INHIBIT REPORT

```
-----
DEVICE    DEVICE IDENTIFIER    DURATION  INH LVL  ALM LVL  DATE      TIME
-----    -
LS        slkset1              TIMED     MAJR     MAJR     06-10-01 1200
```

Command Completed.

Legend

- **ALARM TRANSFER**—The destination of the alarms. LMC=Local Maintenance Center, RMC=Remote Maintenance Center.
- **ALARM MODE**—Displays whether the critical, major, and minor alarms are silent or audible
- **ALARM FRAME 1**—Number of critical, major, and minor alarms detected in the control frame CF-00 (frame 1)
- **ALARM FRAME 2**—Number of critical, major, and minor alarms detected in extension frame EF-00 (frame 2)
- **ALARM FRAME 3**—Number of critical, major, and minor alarms detected in extension frame EF-01 (frame 3)
- **ALARM FRAME 4**—Number of critical, major, and minor alarms detected in extension frame EF-02 (frame 4)
- **ALARM FRAME 5**—Number of critical, major, and minor alarms detected in extension frame EF-03 (frame 5)
- **ALARM FRAME 6**—Number of critical, major, and minor alarms detected in extension frame EF-04 (frame 6) and all the miscellaneous OAP alarms.
- Following list contains miscellaneous OAP alarms:
MPS_UNAVAILABLE EPAP_AVAILABLE
LSMS_Q3_ASSOC_UNAVAILABLE
LSMS_Q3_ASSOC_AVAILABLE

LSMS_Q3_ASSOC_BULK_LOAD_DONE
 LSMS_Q3_ASSOC_BULK_LOAD_REQD
 SEAS_OAP_AVAILABLE
 SEAS_OAP_UNAVAIL
 SEAS_OAP_UAL_UNAVAIL
 LSMS_EMS_AGENT_UNAVAILABLE
 OAP_FILESYSTEM_FULL
 SEAS_OAP_ONE_TDM_UNAVAIL
 OAP_CONFIG_CHECKSUM_MISMATCH
 OAP_CONFIG_CHECKSUM_MATCH
 SEAS_X25_LINK_UNAVAIL
 SEAS_X25_UAL_UNAVAIL
 SEAS_X25_PVC_UNAVAIL
 SEAS_X25_PVC_SES_UNAVAIL
 SEAS_X25_LINK_AVAIL

- **PERM. INH. ALARMS**—Number of alarms that are permanently inhibited per alarm level
- **TEMP. INH. ALARMS**—Number of alarms that are temporarily inhibited per alarm level
- **TIMED. INH. ALARMS**—Number of alarms that are timed inhibited per alarm level
- **ACTIVE ALARMS**—Number of alarms still active per alarm level.
- **TOTAL ALARMS**—Total number of alarms per alarm level. The inhibited alarm count plus the active alarm count equals the total alarm count.
- **CRIT**—Critical alarms with silent/audible indicator
- **MAJOR**—Major alarms with silent/audible indicator
- **MINOR**—Minor alarms with silent/audible indicator

Alarm Inhibit Report:

- **DEVICE**—Device for which alarms are currently inhibited. Only devices that are alarm inhibited are shown.
- **ELEMENT**—Element of the device for which alarms are inhibited (such as card location, port, routing key, socket or association name)
- **DURATION**—Indicates whether the device is alarm inhibited permanently or temporarily or for a specific length of time
- **INH LVL**—Level in which devices are alarm inhibited (Critical, Major, Minor). The `inh-alm` command defaults the level to Major. Devices cannot be alarm inhibited at a critical level unless the `chg-stpopts` command's `critalminh` parameter is turned on.
- **ALM LVL**—Level of the current alarm on the device (Critical, Major, Minor). "None" indicates that there is currently no alarm on the device (DURATION should show "PERM"). A plus sign (+) seen following the alarm level indicates that the current

alarm is not inhibited because the level of the inhibit is less than the level of the alarm.

- **DATE**—Date on which a timed inhibited alarm will automatically clear at the specified time
- **TIME**—Time at which a timed inhibited alarm will automatically clear on the specified date

Related Topics

- [dact-alm-trns](#)
- [rept-stat-clk](#)
- [rept-stat-trbl](#)
- [rtrv-obit](#)
- [rtrv-trbl](#)

4.1.393 rept-stat-applsock

Use this command to display the status of the IP application sockets.

Parameters

lhost (optional)

Local host name. The logical name assigned to the local host device.

Range:

XX

A string of characters up to 60 characters in length. The first character must be a letter. Valid characters are *a-z*, *A-Z*, *0-9*, - (dash), . (period)

Default:

Current value

port (optional)

The signaling link port associated with this socket.

Range:

a, b, a1..a63, b1..b63

Not all card types support all *port* parameter values.

See [Table A-1](#) for valid *port* parameter range values for each type of card that can have signaling links.

Default:

Current value

rhost (optional)

Remote host name. The logical name assigned to the remote host device.

Range:

XX

A string of characters up to 60 characters in length. The first character must be a letter. Valid characters are *a-z*, *A-Z*, *0-9*, - (dash), . (period)

Default:

Current value

sname (optional)

Socket name. The name of the IP application socket to be reported.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

Default:

All IP application sockets are reported

Example

```
rept-stat-applsock
```

```
rept-stat-applsock:port=b
```

Dependencies

The `name` parameter value, if specified, must exist in the Socket table.

N/A N/A

A valid value must be specified for the `host` parameter. If the host name contains a hyphen, then the host name must be enclosed within quotation marks.

```
3731 E3731 Cmd Rej: Invalid Hostname
```

Notes

This command displays the primary states (PST) and the secondary state (SST). Primary states are:

- IS-NR—In-service normal
- IS-ANR—In-service abnormal (congested)
- OOS-MT—Out of service
- OOS-MT-DSBLD—Out-of-service maintenance-disabled (provisioned to be out of service by closing, prohibiting, or deactivation)

Secondary states are:

- ALMINH—Alarm inhibited
- OOS—Out-of-service
- NEA—Near-end allowed
- FEA—Far-end allowed
- NEP—Near-end prohibited
- FEP—Far-end prohibited

Output

```
rept-stat-applsock
```

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
SOCKET          PST          SST
socred          OOS-MT      ALMINH
```

```

socyellow      IS-ANR      ----
socblue        OOS-MT-DSBLD  ----
Command Completed
;

rept-stat-applsock

rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
SOCKET        PST          SST
ipg11051      IS-NR          NEA-FEA
ipg11071      IS-NR          NEA-FEA
ipl1201       IS-NR          NEA-FEA
Command Completed.
;

rept-stat-applsock:link=b

rlghncxa03w 04-02-17 15:35:05 EST EAGLE 34.0.0
SOCKET        PST          SST
ipl1201b     IS-NR          NEA-FEA
Command Completed.
;
```

4.1.394 rept-stat-as

Use this command to generate a report of the Application Server (AS) association status.

Parameters

aname (optional)

Association name to report on. This parameter causes the ASP states for a given association and all of the AS's that it is assigned to be displayed.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

asname (optional)

Application Server name; the AS name to report on. This parameter causes the the PST, SST, ASP state, and ASP-ID for each association in the AS to be displayed.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

Example

```
rept-stat-as
```

Dependencies

If an association is specified in the command, the specified association must exist in the AS table.

4079 E4079 Cmd Rej: Specified AS name not found

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

If the command is specified without a parameter, status for all AS associations is displayed.

This command displays the following states: ACTIVE, UP, DOWN, PENDING.

Output

```
rept-stat-as
```

ASNAME	PST	SST
m3ua0001	OOS-MT	AS-INACTIVE
m3ua0002	IS-NR	AS-ACTIVE
m3ua0003	OOS-MT-DSBLD	AS-DOWN
m3ua0004	IS-ANR	AS-PENDING

Command Completed.

;

```
rept-stat-as:asname=m3ua0001
```

ASNAME	PST	SST	ASP STATE	ASPID
m3ua0001	OOS-MT	AS-INACTIVE		
m3ua_1301	OOS-MT-DSBLD	----	ASP-DOWN	
m3ua_1302	OOS-MT	CONNECTING	ASP-DOWN	
m3ua_1303	IS-NR	ESTABLISHED	ASP-INACTIVE	

Command Completed.

;

```
rept-stat-as:aname=m3ua_1303
```

ASNAME	PST	SST
m3ua_1303	IS-NR	AS-ACTIVE

ASNAME	ANAME	ASP STATE
m3ua0001	m3ua_1303	ASP-INACTIVE
m3ua0002	m3ua_1303	ASP-ACTIVE
m3ua0003	m3ua_1303	ASP-DOWN

Command Completed.

;

Related Topics

- [chg-as](#)
- [ent-as](#)
- [rtrv-as](#)

4.1.395 rept-stat-assoc

Use this command to generate a report of the SCTP association's status.

Parameters

aname (optional)

Name of association to report on.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

lhost (optional)

The Local Host name as defined in the IP Host table.

Range:

XX

A string of characters up to 60 characters in length; the first character must be a letter
Valid characters are a-z, A-Z, 0-9, - (dash), and . (period).

link (optional)

The signaling link associated with this socket.

Synonym:

port

Range:

a, b, a1-a63, b1-b63

Not all card types support all link parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have assigned signaling links ports.

rhost (optional)

Name of Remote Host as defined in the IP Host table.

Range:

XX

A string of characters up to 60 characters in length. The first character must be a letter.

Valid characters are *a-z*, *A-Z*, *0-9*, *-* (dash), and *.* (period).

Example

```
rept-stat-assoc
```

```
rept-stat-assoc:aname= a23456789012345
```

Dependencies

If an association is specified in the command, the specified association must exist in the AS table.

N/A N/A

A valid value must be specified for the `host` parameter. If the host name contains a hyphen, then the host name must be enclosed within quotation marks.

```
3731 E3731 Cmd Rej: Invalid Hostname
```

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

This command displays the primary states (PST) and the secondary state (SST).

Primary states are:

- IS-NR—In-service normal
- IS-ANR—In-service abnormal (congested)
- OOS-MT—Out of service
- OOS-MT-DSBLD—Out-of-service maintenance-disabled (provisioned to be out of service by closing, prohibiting, or deactivation)

Connection states are:

- RESTRICTED
- OUT-OF-SERVICE
- CONNECTING
- ESTABLISHED—Valid only for M2PA associations

The **LINK** field values in the output are displayed as:

- "***"—If the association is assigned to multiple links.
- "--"—If the association is not assigned to any link.
- Appropriate LINK ID—If the association is assigned to only one link.

Output

```
rept-stat-assoc
```

```
eagle10212 08-01-29 10:41:52 EST EAGLE 38.0.0
CARD IPLNK
ANAME          LOC  PORT  LINK PST          SST
```

```

ASPID
  ipgi1303a      1303 A      A      OOS-MT      OOS
undefined
  ip11301b      1301 A      B      IS-NR      ESTABLISHED
  a1            1305 A      **     OOS-MT-DSBLD OOS
undefined
  ipg1308a1     1308 A      A      OOS-MT-DSBLD OOS
undefined
  sca           1306 A      A      IS-ANR      CONGESTED
  a2           1304 A      A      IS-ANR      EXCESS RETRANS
undefined
  sca7         1307 A,B     A      IS-NR      ESTABLISHED
undefined
  lavern       1305 A      A      IS-NR      ESTABLISHED
  ip11313b     1313 A      B      OOS-MT-DSBLD OOS
  ip11302a     1302 A      A      IS-NR      ESTABLISHED
  n            1315 A      A      OOS-MT      CONNECTING
  ipg1305a1    1305 A      A      OOS-MT-DSBLD OOS
undefined
  ip11301b3    1301 A      B3     IS-NR      ESTABLISHED
  m2pa1107a0   1107 A      --     OOS-MT-DSBLD OOS
  m2pa1107a1   1107 A      --     OOS-MT-DSBLD OOS
  ipg1215a01   1215 A      **     IS-NR      ESTABLISHED
undefined
  ipg1215a02   1215 A      **     IS-NR      ESTABLISHED
undefined
  ipg1215a03   1215 A      --     OOS-MT-DSBLD OOS
undefined
  ipg1215a04   1215 A      **     OOS-MT      OOS
undefined
  ipg1215a05   1215 A      --     OOS-MT-DSBLD OOS
undefined
  sg1305a      1305 A      A      IS-NR      ESTABLISHED
undefined
  Command Completed.

```

This example shows the output when the `aname` parameter is specified for an IPGWx association:

```
rept-stat-assoc:aname=a2
```

```

eagle10212 08-01-29 10:41:52 EST EAGLE 38.0.0
      CARD IPLNK
ANAME      LOC  PORT  LINK  PST      SST      ASPID
a2         1304 A     A     IS-ANR  EXCESS RETRANS  undefined
ALARM STATUS = * 0536 IP Connection Excess Retransmits

ASNAME      ANAME      ASP-STATE
as1         a2          ASP-UP

```

Command Completed.

This example shows the output when the `aname` parameter is specified for an M2PA association:

```
rept-stat-assoc:aname=assocm2pa
```

```
eagle10212 07-05-29 10:41:52 EST EAGLE 37.0.0
                CARD IPLNK
ANAME          LOC PORT  LINK PST          SST
assocm2pa      1301 A    A    IS-NR      ESTABLISHED
```

```
Command Completed.
```

This example shows the output when the `aname` parameter is specified for an IPSP-M3UA association:

```
rept-stat-assoc:aname=sg1305a
```

```
eagle10212 08-02-06 17:00:42 EST EAGLE 38.0.0
                CARD IPLNK
ANAME          LOC PORT  LINK PST          SST
ASPID
sg1305a        1305 A    A    IS-NR      ESTABLISHED
undefined
LSN            ANAME          ASP STATE
ls1305a        sg1305a          ACTIVE
```

```
Command Completed.
```

This example shows the output when the `port/link` parameter is specified for IPSP associations:

```
rept-stat-assoc:port=a15
```

```
tekelecstp 10-01-05 10:47:26 EST EAGLE 42.0.0
                CARD IPLNK
ANAME          LOC PORT  LINK PST          SST
ASPID
ipsgm3ua       1101 A    A15 IS-NR      ESTABLISHED
undefined
ipsgm2pa       1102 B    A15 IS-NR      ESTABLISHED
```

```
Command Completed.
```

This example shows the output when no parameter is specified for DIAM association:

```
rept-stat-assoc
```

```
tekelecstp 13-04-24 11:24:19 EST EAGLE 45.1.0
rept-stat-assoc
```

```

Command entered at terminal #26.
;

Command Accepted - Processing
tekelecstp 13-04-24 11:24:19 EST EAGLE 45.1.0
CARD IPLNK
  ANAME      LOC  PORT  LINK PST          SST          ASPID
  abc1      1105 B    --  IS-NR        ESTABLISHED
undefined
  abc2      1105 B    --  IS-NR        ESTABLISHED
undefined

Command Completed.
;
```

Related Topics

- [chg-assoc](#)
- [ent-assoc](#)
- [rtrv-assoc](#)

4.1.396 rept-stat-card

Use this command to display the card status and maintenance activity states. The output includes card location, the GPL version being used by the card, device type, device primary state, device secondary state, and device associated state.

Parameters

app1 (optional)

Application. The status of cards running the specified application.

Range:

xyyyyyy

1 alphabetic character followed by up to 6 alphanumeric characters. Valid applications are:

atmansi —Used by E5-ATM-B cards to support ATM high-speed signaling links and T1 functions.

atmitu —Used by E5-ATM-B cards to support E1 high-speed signaling links and E1 functions.

ccs7itu —Used by E5-E1T1-B cards for ITU MTP functions.

deirhc —Used by E5-SM8G-B and SLIC cards to support the DEIR application.

elap —Used by E5-APP-B cards to support the ELAP application.

enumhc —Used by E5-SM8G-B cards to support the ENUM Mobile Number Portability and Tier One Address Resolution application.

epap —Used by E5-APP-B cards to support the EPAP application.

eroute —Used by STC cards and E5-STC cards for the EAGLE 5 Integrated Monitoring Support functions

gls —Used by E5-TSM cards for downloading gateway screening to LIM and Service Module cards

ipgwi —Used by E5-ENET-B cards for point-to-multipoint IP connectivity for ITU point codes. A maximum of 125 cards can be assigned the IPGWI application.

iplimi —Used by E5-ENET-B cards for point-to-point IP connectivity for ITU point codes

ips —Used by E5-IPSM and E5-ENET-B cards for the IP User Interface feature.

ipsg —Used by E5-ENET-B, and SLIC cards to support the combined functionality of IPLIMx M2PA and IPGWx M3UA

lsms - Used by E5-APP-B cards to support LSMS application.

mcp —Used by E5-MCPM-B cards for the Measurements Platform feature.

nas - Used by E5-APP-B cards to support the NAS application.

siphc — Used by E5-SM8G-B cards to support the SIP application.

ss7ansi —Used by E5-E1T1-B cards for ANSI MTP functions

ss7ipgw —Used by E5-ENET-B cards for point-to-multipoint IP connectivity. The system allows a maximum of 125 cards to be assigned the SS7IPGW application.

switch - Used by Telco switch to add power consumed by Telco Switch to Frame Power Budget. This is not an application gpl.

vsccp —Used by Service Module cards to support EPAP-based features and the LNP ELAP Configuration features. If no EPAP-based or LNP ELAP Configuration feature is turned on, and a Service Module card is present, then normal GTT traffic is processed.

data (optional)

Data filter specification. The status of cards running the specified application with specified data.

Range:

nosccp

displays the status of a GTT-disabled IPSG card

gtt

displays the status of a GTT-enabled IPSG card and SM GTT card

 **Note:**

The `data` parameter is valid for IPSG and VSCCP applications only. If the `data` parameter is not specified, then both types of IPSG (GTT disabled and GTT enabled) cards will be displayed under `appl=ipsg`.

links (optional)

Filter specification. Report the maximum number of links, only equipped links, or only unequipped links on the card in the specified card location (`loc`).

Range:

all

Reports the maximum number of links available on the card in the specified `loc`

equip

Reports only links that are equipped

unequip

Reports only links that are unequipped

Default:

equip

loc (optional)

Card address. The card location as stenciled on the shelf of the system.

Range:

1101 - 1117, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318, 3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118, 6201 - 6218, 6301 - 6318

Default:

A status of all cards is displayed.

mode (optional)

Mode. The type of report to display (full or summary).

Range:

full

Default:

A summary report is displayed.

stat (optional)

Primary state filter. This parameter cannot be used with the `loc` or `mode` parameters. This filter allows printing of cards in a specified state (all in-service cards, for example).

Range:

all

All of the primary states

alminh

Alarms inhibited

anr

In service abnormal (IS-ANR)

dsbld

Out of service maintenance disabled (OOS-MT-DSBLD)

mt

Out of service maintenance (OOS-MT)

nr

In service normal (IS-NR)

Default:

all

Example

```
rept-stat-card
```

```
rept-stat-card:loc=1201
rept-stat-card:loc=1201:mode=full
rept-stat-card:stat=alminh
rept-stat-card:appl=ss7ansi
rept-stat-card:appl=siphc
rept-stat-card:loc=1205:links=equip:mode=full
rept-stat-card:appl=epap
rept-stat-card:appl=switch
rept-stat-card:appl=elap
rept-stat-card:appl=lsms
rept-stat-card:appl=nas
rept-stat-card:appl=enumhc
rept-stat-card:appl=ipsg:data=gtt
rept-stat-card:appl=ipsg:data=nosccp
```

Dependencies

No other command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The `mode` parameter can be specified only when the `loc` parameter is specified.

2366 E2366 Cmd Rej: LOC must be specified

Only one of the `loc` or `stat` parameters can be specified in the command.

2367 E2367 Cmd Rej: May not specify both LOC and STAT

Unless the `appl=vcssp/ipsg`, no other parameter can be specified with the `appl` parameter.

3691 E3691 Cmd Rej: No other parameters allowed with APPL specification

The shelf and card must be equipped.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The card location (`loc`) must be within the allowed range.

2016 E2016 Cmd Rej: <parm_desc> is out of range - <parm>

A valid value must be specified for the `appl` parameter.

3710 E3710 Cmd Rej: APPL not valid for command

The card location specified by the `loc` parameter must be equipped.

E2144 Cmd Rej: Location invalid for hardware configuration

The `data` parameter is not valid with an APPL other than IPSEG/VSCCP.

3516 E3516 Cmd Rej: APPL must be IPSPG/VSCCP with DATA parameter

The `data` parameter can take `nosccp` as a value only when the APPL specified is IPSPG.

2670 E2670 Cmd Rej: Invalid value of DATA parameter for given APPL

Notes

LIM cards show MFC results for SNM, SCCP, EROUTE, INM and MTP3. SCCP cards show MFC results for SNM, INM and MTP3 when the `mode=full` and `loc` parameters are specified.

The status displayed is for the previous 5 minutes and the previous 24 hours.

The following MFC status codes are used: G to indicate service request GRANTED, D to indicate service request DENIED, and N to indicate NO OPERATIONAL SERVERS AVAILABLE.

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

The `mode=full` parameter gives more information than the summary report.

A plus (+) symbol in the output indicates that the flash GPL currently being run has not yet been activated on the card. See the `act/init-flash` command for a list of flash GPLs.

E1 alarms are displayed in the alarm status field. When the `mode=full` parameter is specified, separate fields display status information from the UAM for each E1 interface on the card. For each E1 interface, the display shows the highest priority E1 failure that exists on that E1 card. When no E1 errors exist, the clearing E1 UAM text is displayed. When an E1 interface is not assigned to the card, no output is generated for that E1 position.

T1 alarms are displayed in the alarm status field. When the `mode=full` parameter is specified, separate fields display status information from the UAM for each T1 interface on the card. For each T1 interface, the display shows the highest priority T1 failure that exists on that T1 card. When no T1 errors exist, the clearing T1 UAM text is displayed. When an T1 interface is not assigned to the card, no output is generated for that T1 position.

If the `links=all` parameter is specified, then the maximum number of supported SS7 links on the card is displayed as shown. If the `links=unequip` parameter is specified, then the number of links displayed is equal to the maximum supported links minus the provisioned links. If the `links=equip` parameter is specified, then only the provisioned links are displayed.

Multiple cards of the same card type but different capacity can be installed into a slot configured with the `ent-card` command. The number of links supported cannot be determined until the card is physically installed into the configured slot.

Table 4-50 Maximum Supported Links based on Card Type and GPL

GPL with Card Type	Maximum Supported Links	
	Card Hardware Verified	Card Hardware Unknown
ATMHC on E5-ATM-B	3	3
SS7HC on E5-E1T1-B	64	64
IPLHC on E5-ENET-B	16	16
IPGHC on E5-ENET-B	1	1
IPSPG on E5-ENET-B/SLIC	32	32

Table 4-50 (Cont.) Maximum Supported Links based on Card Type and GPL

IPSG on SLIC	128	128
SIPHC on E5-SM8G-B/SLIC	17 (16 TCP & 1 UDP)	17 (16 TCP & 1 UDP)
ENUMHC on E5-SM8G-B/SLIC	1 (UDP)	1 (UDP)
DEIRHC on E5-SM8G-B/SLIC	32	32

The CARD WARNING field in the command output indicates a specific condition that can hinder the normal functioning of a card. For E5-E1T1-B cards, the "Obsolete Framer" warning indicates that a port configured on the card may get stuck in a Loss of Frame (LOF) state. If an E5-E1T1-B card displaying this warning is reloaded, and one of the ports on the card is reporting LOF, then the OAM reboots the card up to 5 times to attempt to clear the LOF condition when the card changes state from IS-ANR to IS-NR.

GTT-enabled IPSG cards have the IPSG application running on SLIC hardware, which is capable of SCCP (GTT) processing. GTT-disabled IPSG cards also have IPSG application running on E5-ENET-B or SLIC hardware, but they do not have SCCP (GTT) processing capability. To sort one from the other, the `data` parameter is used. The `data` parameter cannot be used with any application other than IPSG/VSCCP.

Interface A/D will be used for ExAP connectivity and interface B/C used for signaling network on the SLIC card running the DEIR/SIP/ENUM application.

Fast Copy Cards

E5-ENET-B, or SLIC cards running the IPSG or E5-ENET-B cards running the IPGHC GPL are considered to be *FC-capable*. A card running the IPGHC GPL must be in the IS-NR State before the card can be considered *FC-capable*. This restriction does not apply to cards running the IPSG GPL. An *FC-capable* card is considered *FC-enabled* when Fast Copy monitoring is enabled for the respective GPL.

Output

The clock status fields are reported when the `mode=full` report is selected. The clock status report includes a CLOCK A, CLOCK B, and CLOCK I status. The High Speed clock status report (displayed for ATM, E1 and T1 cards) includes HS CLOCK A, HS CLOCK B, and HS CLOCK I. The valid values for each clock status are *Idle*, *Active*, and *Fault*. The meanings of these values are:

- *Idle* —Clock is available but is not being used by the card
- *Active* —Clock is available and is being used by the card
- *Fault* —Clock is unavailable

Idle and *Active* are shown when the CLK or HS CLK distribution to the card is good. The *Active* value does not denote that the card is actually using the clock source for link alignment. Use the `rtrv-slk`, `rtrv-e1`, and `rtrv-t1` commands to determine what clock source each card is using for link alignment.

If the `mode=full` parameter is specified for an FC-enabled card, and Fast Copy functionality has been provisioned for the GPL (see the `chg-eisopts` command), then Fast Copy status and FC Link status is shown. For an E5-ENET-B or SLIC card running the IPGHC GPL, Fast Copy and Fast Copy link status is shown only when the card is in IS-NR state.

Abbreviated output is indicated by 3 vertical dots as shown:

.
.
.

The E5-MCPM-B card is an MCPM card. The *Type* field displays MCPM.

rept-stat-card

```
rlghncxa03w 12-03-09 16:35:57 IST EAGLE 45.0.0

CARD   VERSION      TYPE      GPL      PST      SST      AST
1102   128-002-000   LIMATM   ATMHC   IS-NR   Active   -----
1103   125-020-000   DSM      SCCPHC   IS-NR   Active   -----
1105   125-020-000   DSM      SCCPHC   IS-NR   Active   -----
1106   130-001-000   TSM      GLSHC   IS-NR   Active   -----
1107   125-020-000   STC      EROUTE   IS-NR   Active   -----
1108   134-000-000   MCPM     MCPHC   IS-NR   Active   -----
1109   125-020-000   HIPR2    HIPR2    IS-NR   Active   -----
1110   125-020-000   HIPR2    HIPR2    IS-NR   Active   -----
1111   125-020-000   IPSM     IPS      IS-NR   Active   -----
1113   070-019-002   E5MCAP   OAMHC    IS-NR   Standby  -----
1114   -----      E5TDM                    IS-NR   Active   -----
1115   070-019-002   E5MCAP   OAMHC    IS-NR   Active   -----
1116   -----      E5TDM                    IS-NR   Active   -----
1117   -----      MDAL                      IS-NR   Active   -----
1201   138-008-000   SLIC     IPSG     IS-NR   Active   -----
1206   134-060-000   DSM      DEIRHC   IS-NR   Active   -----
1209   125-020-000   HIPR2    HIPR2    IS-NR   Active   -----
1210   125-020-000   HIPR2    HIPR2    IS-NR   Active   -----
1112   138-008-000   SLIC     IPSG     IS-NR   Active   -----
1309   125-017-000   HIPR2    HIPR2    IS-NR   Active   -----
1310   125-017-000   HIPR2    HIPR2    IS-NR   Active   -----
1311   125-020-000   STC      EROUTE   IS-NR   Active   -----
2103   128-018-000   DCM      IPLHC    IS-NR   Active   -----
2109   128-022-000   HIPR2    HIPR2    IS-NR   Active   -----
2110   128-022-000   HIPR2    HIPR2    IS-NR   Active   -----
2111   128-018-000   STC      ERTHC    IS-NR   Active   -----
1213   053-000-058   E5ENET   IPSG     IS-NR   Active   -----
Command Completed.
```

;

This example shows the card status for the OAMHC of MASP A located in slot 1113, which is currently active.

This example also shows a Hardware Verification Code. The HW VERIFICATION CODE field is shown only in the `mode=full` report. "-----" is shown for cards with valid hardware. A numerical value is shown when invalid hardware is detected. All such cards will be auto-inhibited. The numerical values are listed in [Table 4-51](#). The E5-MDAL and MUX cards do not display the field in `mode=full` reports on their locations.

```
rept-stat-card:loc=1113:mode=full
```

```
tekelecstp 02-01-08 04:34:09 EST EAGLE 46.0.0
CARD VERSION TYPE GPL PST SST
AST
1113 134-068-000 E5MCAP OAMHC IS-NR Active
```

```
-----
```

```
ALARM STATUS = No Alarms
BLMCAP GPL version = 134-054-000
IMT BUS A = Conn
IMT BUS B = Conn
CLOCK A = Fault
CLOCK B = Active
CLOCK I = Idle
MBD BIP STATUS = Valid
MOTHER BOARD ID = E5-MCAP
DBD STATUS = Valid
DBD TYPE = 1G ENET
DBD MEMORY SIZE = 4096M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 32C ( 90F)
PEAK TEMPERATURE: = 32C ( 90F) [02-01-08 04:31]
TROUBLE TEXT VER. = Rev 134.10.2
APPLICATION SERVICING
```

```
TVG MFC TVG MFC
IPLNK STATUS
IPLNK IPADDR STATUS PST
A -----
```

```
Command Completed.
```

```
;
```

This example shows all cards that have alarms inhibited in the system:

```
rept-stat-card:stat=alminh
```

```
rlghncxa03w 04-02-04 12:57:21 EST EAGLE 31.6.0
CARD VERSION TYPE APPL PST SST AST
1211 023-001-000 LIMATM ATMANSI IS-NR Active ALMINH
```

```
Command Completed.
```

```
;
```

This example shows a full report for a specified HIPR2 card:

```
rept-stat-card:loc=1109:mode=full
```

```
tekelecstp 02-01-08 04:45:17 EST EAGLE 46.0.0
CARD VERSION TYPE GPL PST SST
AST
1109 134-046-000 HIPR2 HIPR2 IS-NR Active
```

```

-----
ALARM STATUS          = No Alarms.
TRIAL VERSION         = HIPR2 134-069-000
FPGA VERSION          = HIPR2 008-002-005-009
CURRENT TEMPERATURE  = NA
PEAK TEMPERATURE:    = NA

```

Command Completed.

;

This example shows output for an STC card used by the E5IS feature:

```
rept-stat-card:loc=1107
```

```

rlghncxa03w 10-01-09 16:35:57 IST EAGLE 42.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1107  128-015-000  STC      EROUTE  IS-NR    Active   -----
ALARM STATUS          = No Alarms.
BPDCM  GPL version = 128-108-000
IMT BUS A             = Conn
IMT BUS B             = Conn
CLOCK A               = Active
CLOCK B               = Idle
CLOCK I               = Idle
MBD BIP STATUS        = Valid
MOTHER BOARD ID       = Invalid
DBD STATUS            = Valid
DBD TYPE              = Invalid
DBD MEMORY SIZE       = 512M
HW VERIFICATION CODE = ----
ERROUTE % OCCUP       = 0%
NTP broadcast = VALID
Command Completed.

```

;

This example shows a full report for an STC card:

```
rept-stat-card:loc=1107:mode=full
```

```

rlghncxa03w 10-01-09 16:35:57 IST EAGLE 42.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1107  128-015-000  STC      EROUTE  IS-NR    Active   -----
ALARM STATUS          = No Alarms.
BPDCM  GPL version = 128-108-000
IMT BUS A             = Conn
IMT BUS B             = Conn
CLOCK A               = Active
CLOCK B               = Idle
CLOCK I               = Idle
MBD BIP STATUS        = Valid
MOTHER BOARD ID       = Invalid
DBD STATUS            = Valid

```

```

DBD TYPE                = Invalid
DBD MEMORY SIZE         = 512M
HW VERIFICATION CODE    = ----
EROUTE % OCCUP          = 0%
NTP broadcast           = VALID
IPLNK STATUS
  IPLNK  IPADDR                STATUS  PST
  A      -----              DOWN    OOS-MT
  B      192.168.63.45        UP      IS-NR
STC IP CONNECTION
  PORT  PST                    SST
  A      OOS-MT                Unavail
  B      IS-NR                  Active

```

This example shows output for an MCPM card used by the Measurements Platform feature:

```
rept-stat-card:loc=1105
```

```

rlghncxa03w 11-05-04 15:10:19 EST EAGLE 44.0.0
CARD  VERSION      TYPE    GPL      PST      SST
AST
1105  128-001-000  MCPM   MCP      IS-NR    Idle
-----
ALARM STATUS      = No Alarms.
BPDCM  GPL VERSION = 128-001-000
IMT BUS A         = Conn
IMT BUS B         = Conn

```

```
Command Completed.
```

```
;
```

This example shows output for an E5-SM4G card:

```
rept-stat-card:loc=6111
```

```

tklc1110501 10-12-09 17:26:29 EST EAGLE5 43.0.0
CARD  VERSION      TYPE    GPL      PST      SST
AST
6111  128-015-000  DSM     SCCPHC   IS-NR    Active
-----
ALARM STATUS      = No Alarms.
BLIXP  GPL version = 133-044-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CURRENT TEMPERATURE = 31C ( 88F)
PEAK TEMPERATURE:  = 32C ( 90F)    [07-04-12 15:55]
SCCP % OCCUP      = 1%

```

```
Command Completed.
```

```
;
```

This example shows a full report for an E5-SM4G card. The MFC option is ON.

```
rept-stat-card:loc=6111:mode=full
```

```
rlghncxa03w 11-02-09 16:35:57 IST EAGLE 44.0.0
CARD   VERSION   TYPE   GPL       PST       SST       AST
6111   134-000-000 DSM     SCCPHC   IS-NR     Active    -----
ALARM STATUS      = No Alarms.
BLIXP  GPL version = 133-044-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CLOCK A          = Active
CLOCK B          = Idle
CLOCK I          = Idle
MBD BIP STATUS   = Valid
MOTHER BOARD ID  = SMXG A
DBD STATUS       = Valid
DBD TYPE         = 1G ENET
DBD MEMORY SIZE  = 4096M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 31C ( 88F)
PEAK TEMPERATURE:  = 32C ( 90F)      [07-04-12 15:55]
SCCP % OCCUP     = 1%
APPLICATION SERVICING
          TVG     MFC           TVG     MFC
SNM      REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
INM      REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
MTP3     REQ STATUS = 24 hr:          ---, 5 min:          ---
IPLNK STATUS
IPLNK  IPADDR           STATUS   PST
A      10.220.9.9       UP       IS-NR
B      10.220.9.8       UP       IS-NR
DSM IP CONNECTION
PORT   PST             SST
A      OOS-MT         Unavail
B      OOS-MT         Unavail
Command Completed.
```

This example shows the output for all cards running the VSCCP application:

```
rept-stat-card:appl=vsccp
```

```
tk1c1110501 07-04-12 17:28:02 EST EAGLE5 46.0.0
CARD   VERSION   TYPE   GPL       PST       SST       AST
1107   128-015-000 DSM     SCCPHC   IS-NR     Active    -----
1317   -----     DSM     SCCPHC   OOS-MT    Isolated  -----
2217   128-015-000 DSM     SCCPHC   IS-NR     Active    -----
2317   -----     DSM     SCCPHC   OOS-MT    Isolated  -----
3103   -----     DSM     SCCPHC   OOS-MT-DSBLD Manual    -----
3201   128-015-000 DSM     SCCPHC   IS-NR     Active    -----
3203   128-015-000 DSM     SCCPHC   IS-NR     Active    -----
3205   128-015-000 DSM     SCCPHC   IS-NR     Active    -----
3207   128-015-000 DSM     SCCPHC   IS-NR     Active    -----
```

```

3211 128-015-000 DSM SCCPHC IS-NR Active
-----
3213 128-015-000 DSM SCCPHC IS-NR Active
-----
3215 128-015-000 DSM SCCPHC IS-NR Active
-----
3217 128-015-000 DSM SCCPHC IS-NR Active
-----
5317 128-015-000 DSM SCCPHC IS-NR Active
-----
6101 128-015-000 DSM SCCPHC IS-NR Active
-----
6103 128-015-000 DSM SCCPHC IS-NR Active
-----
6105 128-015-000 DSM SCCPHC IS-NR Active
-----
6107 128-015-000 DSM SCCPHC IS-NR Active
-----
6111 128-015-000 DSM SCCPHC IS-NR Active
-----
6113 128-015-000 DSM SCCPHC IS-NR Active
-----
6115 128-015-000 DSM SCCPHC IS-NR Active
-----
6117 128-015-000 DSM SCCPHC IS-NR Active
-----

```

Command Completed.

;

This example shows a full report for a HIPR2 card:

```
rept-stat-card:loc=2109:mode=full
```

```

rlghncxa03w 09-06-04 15:10:19 EST EAGLE 5 41.1.0
CARD VERSION TYPE GPL PST SST
AST
2109 128-022-000 HIPR2 HIPR2 IS-NR Active
-----
ALARM STATUS = No Alarms.
TRIAL VERSION = HIPR2 023-099-008
FPGA VERSION = HIPR2 008-001-003-002
CURRENT TEMPERATURE = 73C (164F)
PEAK TEMPERATURE: = 73C (164F) [02-01-05 10:12]

```

Command Completed.

;

This example shows a full report for a card running the IPSG GPL. Fast Copy functionality has been provisioned for the IPSG GPL.

rept-stat-card:loc=1102:mode=full

```

stpc9070501 11-05-04 17:43:56 EDT EAGLE5 44.0.0
CARD   VERSION   TYPE      GPL       PST       SST       AST
1102   009-054-000 E5ENET   IPSG      IS-NR     Active    -----
ALARM STATUS           = No Alarms.
BLIXP   GPL version = 009-054-000
IMT BUS A           = Conn
IMT BUS B           = Conn
CLOCK A            = Idle
CLOCK B            = Active
CLOCK I            = Idle
MBD BIP STATUS     = Valid
MOTHER BOARD ID    = EPM A
DBD STATUS        = Valid
DBD TYPE          = 1G ENET
DBD MEMORY SIZE    = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 42C (108F)
PEAK TEMPERATURE:  = 43C (110F)      [11-05-04 13:55]
SIGNALING LINK STATUS
  SLK   PST           LS           CLLI           E5IS
  A     IS-NR        stpa113n     stpa113n     INACTIVE
  B     IS-NR        sc2a115n     sc2a115n     INACTIVE
  A1    IS-NR        stpa113n     stpa113n     INACTIVE
  B1    IS-NR        sc2a115n     sc2a115n     INACTIVE
  A4    IS-NR        sp2a115n     sp2a115n     INACTIVE
  B4    IS-NR        sp3a116n     sp3a116n     INACTIVE
  A5    IS-NR        sp2a115n     sp2a115n     INACTIVE
  B5    IS-NR        sp3a116n     sp3a116n     INACTIVE
IPLNK STATUS
  IPLNK IPADDR           STATUS   PST
  A     10.251.100.166   UP       IS-NR
  B     10.251.102.27   UP       IS-NR
FCLNK STATUS
  A1    172.21.48.242   UP       IS-NR
  B1    172.22.48.242   UP       IS-NR
FASTCOPY STATUS
  ONLINE
ASSOCIATION STATUS
  ANAME           PST           SST
  ipn1102am2pa    IS-NR     ESTABLISHED
  ipn1102a1m2pa    IS-NR     ESTABLISHED
  gwn1102bm3ua     IS-NR     ESTABLISHED
  gwn1102b1m3ua    IS-NR     ESTABLISHED
  ipns1102a4m2pa   IS-NR     ESTABLISHED
  ipns1102a5m2pa   IS-NR     ESTABLISHED
  gwns1102b4m3ua   IS-NR     ESTABLISHED
  gwns1102b5m3ua   IS-NR     ESTABLISHED
APPLICATION SERVICING
  SNM   REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
  SCCP  REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
  EROUTE REQ STATUS = 24 hr: ----- G--, 5 min: ----- G--

```

```

INM      REQ STATUS = 24 hr: ----- G--, 5 min: ----- ---
MTP3    REQ STATUS = 24 hr:          G--, 5 min:          G--

```

Command Completed.

;

This example shows a full report for a card running the IPSG application and receiving pure MTP routed traffic. The MFC option and E5IS feature are ON.

```
rept-stat-card:loc=1105:mode=full
```

```

e1080403 11-03-10 14:46:53 EST  EAGLE 44.0.0
  CARD  VERSION      TYPE      GPL      PST      SST
AST
  1105  134-000-000  E5ENETB  IPSG      IS-NR      Active
-----
ALARM STATUS      = No Alarms.
BLMCPA  GPL version = 056-042-000
IMT BUS A        = Conn
IMT BUS B        = Conn
CLOCK A         = Active
CLOCK B         = Idle
CLOCK I         = Idle
MBD BIP STATUS   = Valid
MOTHER BOARD ID = EPM A
DBD STATUS      = Valid
DBD TYPE        = 1G ENET
DBD MEMORY SIZE = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 43C (110F)
PEAK TEMPERATURE:  = 45C (113F)      [11-03-08 10:18]
SIGNALING LINK STATUS
  SLK  PST          LS          CLLI          E5IS
  B2   IS-NR        ipsg1105b2  -----
INACTIVE
IPLNK STATUS
  IPLNK IPADDR      STATUS  PST
  A     10.254.101.121  UP      IS-NR
  B     10.254.100.4   UP      IS-NR
ASSOCIATION STATUS
  ANAME          PST          SST
  m3ua1105b2     IS-NR        ESTABLISHED
APPLICATION SERVICING
          TVG  MFC          TVG  MFC
SNM      REQ STATUS = 24 hr: GDNHSI ---, 5 min: GD----- ---
SCCP     REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
EROUTE   REQ STATUS = 24 hr: ----- GDN, 5 min: ----- G--
INM      REQ STATUS = 24 hr: G----- ---, 5 min: G----- ---
MTP3     REQ STATUS = 24 hr:          ---, 5 min:          ---

```

Command Completed.

;

This example shows a full report for an E5-TSM card:

```
rept-stat-card:loc=1106:mode=full
```

```
tekelecstp 10-12-09 19:15:28 EST EAGLE 43.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1106  130-001-000    TSM      GLSHC    IS-NR    Active   -----
ALARM STATUS      = No Alarms.
BLIXP  GPL version = 133-044-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CLOCK A          = Active
CLOCK B          = Idle
CLOCK I          = Idle
MBD BIP STATUS   = Valid
MOTHER BOARD ID  = EPM A
DBD STATUS       = Valid
DBD TYPE         = None
DBD MEMORY SIZE  = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 44C (112F)
PEAK TEMPERATURE: = 44C (112F)      [10-10-05 19:10]
```

Command Completed.

This example shows the output when E5-MCAP, E5-TDM, and E5-MDAL cards are used:

```
rept-stat-card
```

```
e5oam 14-12-01 15:38:32 EST EAGLE 46.2.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1109  030-009-000    HIPR2    HIPR2    IS-NR    Active   -----
1110  030-009-000    HIPR2    HIPR2    IS-NR    Active   -----
1113  030-010-008    E5MCAP   OAMHC    IS-NR    Standby  -----
1114  -----        E5TDM    -----  IS-NR    Active   -----
1115  030-010-008    E5MCAP   OAMHC    IS-NR    Active   -----
1116  -----        E5TDM    -----  IS-NR    Active   -----
1117  -----        E5MDAL   -----  OOS-MT   Isolated -----
```

Command Completed.

;

This example shows the output for a HIPR2 card, which does not support thermal monitoring:

```
rept-stat-card:loc=2109
```

```
rlghncxa03w 09-06-04 15:10:19 EST EAGLE 5 41.1.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
2109  128-022-000    HIPR2    HIPR2    IS-NR    Active   -----
ALARM STATUS      = No Alarms.
TRIAL VERSION     = HIPR2 023-099-008
FPGA VERSION      = HIPR2 008-001-003-002
```

```

CURRENT TEMPERATURE = NA
PEAK TEMPERATURE:   = NA

```

```
Command Completed.
```

```
;
```

This example shows the output for a HIPR2 card when the card is not in-service:

```
rept-stat-card:loc=1109
```

```

rlghncxa03w 09-06-04 15:10:19 EST EAGLE 5 41.1.0
CARD  VERSION      TYPE      GPL      PST      SST
AST
1209  -----      HIPR2      HIPR2      OOS-MT      Isolated
-----
ALARM STATUS      = No Alarms.
TRIAL VERSION     = HIPR2 023-099-008
FPGA VERSION      = HIPR2 -----
CURRENT TEMPERATURE = ----
PEAK TEMPERATURE: = ----

```

```
Command Completed.
```

```
;
```

This example shows the output for an E5-OAM card when the Integrated Measurements feature is turned on:

```
rept-stat-card:loc=1113
```

```

tekelecstp 02-01-08 04:50:35 EST EAGLE 46.0.0
CARD  VERSION      TYPE      GPL      PST      SST
AST
1113  134-068-000  E5MCAP    OAMHC      IS-NR      Active
-----
ALARM STATUS      = No Alarms
BLMCAP GPL version = 134-054-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CURRENT TEMPERATURE = 31C ( 88F)
PEAK TEMPERATURE:  = 32C ( 90F)      [02-01-08 04:31]

```

```
Command Completed.
```

```
;
```

This example shows a full report for the E5-MASP of MASP A located in slot 1113, which is currently active:

```
rept-stat-card:loc=1113:mode=full
```

```
tekelecstp 10-01-07 09:37:39 EST EAGLE 42.0.0
```

```

CARD   VERSION   TYPE     GPL       PST       SST       AST
1113   030-002-022 E5MCAP   OAMHC     IS-NR     Active    -----
ALARM STATUS           = No Alarms.
BLMCAP GPL version = 030-004-000
IMT BUS A              = Conn
IMT BUS B              = Conn
CLOCK A                = Active
CLOCK B                = Idle
CLOCK I                = Idle
MBD BIP STATUS        = Valid
MOTHER BOARD ID       = E5-MCAP
DBD STATUS             = Valid
DBD TYPE               = 1G ENET
DBD MEMORY SIZE       = 2048M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE   = 0C ( 32F)
PEAK TEMPERATURE:    = 0C ( 32F)    [00-00-00 00:00]
TROUBLE TEXT VER.    = Rev 133.1.2
TVG STATUS
IPLNK STATUS
  IPLNK IPADDR          STATUS   PST
  A     192.168.1.1    UP      IS-NR

```

This example shows a full report for an E5-MASP card when an IP mismatch condition exists:

```
rept-stat-card:loc=1113:mode=full
```

```

tekelecstp 10-01-07 09:37:39 EST EAGLE 42.0.0
CARD   VERSION   TYPE     GPL       PST       SST       AST
1113   030-002-022 E5MCAP   OAMHC     IS-NR     Active    -----
ALARM STATUS           = No Alarms.
BLMCAP GPL version = 030-004-000
IMT BUS A              = Conn
IMT BUS B              = Conn
CLOCK A                = Active
CLOCK B                = Idle
CLOCK I                = Idle
MBD BIP STATUS        = Valid
MOTHER BOARD ID       = E5-MCAP
DBD STATUS             = Valid
DBD TYPE               = 1G ENET
DBD MEMORY SIZE       = 2048M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE   = 0C ( 32F)
PEAK TEMPERATURE:    = 0C ( 32F)    [00-00-00 00:00]
TROUBLE TEXT VER.    = Rev 133.1.2
TVG STATUS
IPLNK STATUS
  IPLNK IPADDR          STATUS   PST
  A     192.168.1.1    UP      IS-NR
  IP Mismatch exists, reset required

```

This example shows a full report for an E5-ENET-B used as an STC card:

```
rept-stat-card:loc=1102:mode=full
```

```
rlghncxa03w 11-03-09 16:35:57 EST EAGLE 44.0.0
CARD   VERSION      TYPE      GPL        PST        SST
AST
1102   134-000-000   STC       ERTHC      IS-NR      Active
```

```
-----
```

```
ALARM STATUS      = No Alarms.
BLMCAP GPL version = 032-000-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CLOCK A          = Fault
CLOCK B          = Fault
CLOCK I          = Idle
MBD BIP STATUS   = Valid
MOTHER BOARD ID  = EPM B
DBD STATUS       = Valid
DBD TYPE         = 1G ENET
DBD MEMORY SIZE  = 2048M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 62C (144F)
PEAK TEMPERATURE: = 63C (146F)      [02-04-18 19:53]
EROUTE % OCCUP   = 0%
SOCKET = INACTIVE
NTP broadcast = VALID
IPLNK STATUS
  IPLNK IPADDR      STATUS   PST
  A     192.168.210.166 UP      IS-NR
  B     -----     DOWN    OOS-MT
STC IP CONNECTION
  PORT  PST          SST
  A     IS-NR       Active
  B     OOS-MT      Unavail
```

```
Command Completed.
```

```
;
```

This example shows a full report for an E5-ATM-B card.

```
rept-stat-card:loc=1107:mode=full
```

```
rlghncxa03w 11-03-10 14:00:53 EST EAGLE5 44.0.0
CARD   VERSION      TYPE      GPL        PST        SST
AST
1107   134-000-000   LIMATM   ATMHC      IS-NR      Active
```

```
-----
```

```
ALARM STATUS      = * 0022 Clock B for card failed, Clock A
normal
BLMCAP GPL version = 023-000-000
IMT BUS A         = Conn
IMT BUS B         = Conn
```

```

CLOCK A           = Active
CLOCK B           = Fault
CLOCK I           = Idle
HS CLOCK A        = Active
HS CLOCK B        = Fault
HS CLOCK I        = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = EPM B
DBD STATUS        = Valid
DBD TYPE          = ATM
DBD MEMORY SIZE   = 2048M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 54C (130F)
PEAK TEMPERATURE: = 55C (131F)      [20-12-22 10:55]
SIGNALING LINK STATUS
  SLK   PST           LS           CLLI
  A     IS-NR         lsatm11      -----
  B     IS-NR         lsatm11      -----
  A1    IS-NR         lsatm12      -----
APPLICATION SERVICING
          MFC           MFC
SNM      REQ STATUS = 24 hr: ---, 5 min: ---
SCCP     REQ STATUS = 24 hr: ---, 5 min: ---
INM      REQ STATUS = 24 hr: G--, 5 min: G--
MTP3     REQ STATUS = 24 hr: G--, 5 min: G--

```

Command Completed.

;

This example shows the output for an E5-ENET-B card used as an IPSM card:

```
rept-stat-card:loc=1103:mode=full
```

```

rlghncxa03w 11-03-09 16:35:57 IST EAGLE 44.0.0
CARD  VERSION    TYPE    GPL    PST    SST    AST
1103  134-000-000 IPSM    IPSHC  IS-NR  Active -----
ALARM STATUS      = No Alarms.
BLMCAP GPL version = 032-000-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CLOCK A           = Active
CLOCK B           = Idle
CLOCK I           = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = EPM B
DBD STATUS        = Valid
DBD TYPE          = 1G ENET
DBD MEMORY SIZE   = 2048M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 62C (144F)
PEAK TEMPERATURE: = 63C (146F)      [02-09-14 14:49]
SFLOG = NO
  IPLNK IPADDR    STATUS  PST
  A     10.220.9.9 UP      IS-NR

```

Command Completed.

;

This example shows the output for an E5-MCPM-B card:

```
rept-stat-card:loc=1108
```

```
tekelecstp 11-04-25 19:44:35 EST EAGLE5 44.0.0
CARD  VERSION      TYPE      GPL      PST      SST
AST
1108  134-000-000  MCPM      MCPHC    IS-NR    Active
```

```
ALARM STATUS      = No Alarms.
BLMCAP  GPL version = 134-000-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CLOCK A          = Active
CLOCK B          = Idle
CLOCK I          = Idle
MBD BIP STATUS   = Valid
MOTHER BOARD ID  = EPM B
DBD STATUS       = Valid
DBD TYPE         = 1G ENET
DBD MEMORY SIZE  = 4096M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 42C (108F)
PEAK TEMPERATURE:  = 42C (108F)      [11-04-24 04:32]
IPLNK STATUS
  IPLNK  IPADDR      STATUS  PST
  A      10.250.37.176  UP      IS-NR
MCP IP CONNECTION
  PORT  PST      SST
  A     IS-NR    Active
```

Command Completed.

;

This example shows a full report for an E5-MCPM-B card:

```
rept-stat-card:loc=1108:mode=full
```

```
tekelecstp 11-04-25 19:44:35 EST EAGLE5 44.0.0
CARD  VERSION      TYPE      GPL      PST      SST
AST
1108  134-000-000  MCPM      MCPHC    IS-NR    Active
```

```
ALARM STATUS      = No Alarms.
BLMCAP  GPL version = 134-000-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CLOCK A          = Active
```



```

CLOCK B          = Idle
CLOCK I          = Idle
MBD BIP STATUS  = Valid
MOTHER BOARD ID = EPM B
DBD STATUS      = Valid
DBD TYPE        = 1G ENET
DBD MEMORY SIZE = 4096M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 42C (108F)
PEAK TEMPERATURE:  = 42C (108F)      [11-04-24 04:32]
IPLNK STATUS
  IPLNK  IPADDR          STATUS  PST
  A      10.250.37.176    UP      IS-NR
MCP IP CONNECTION
  PORT  PST              SST
  A     IS-NR            Active

```

Command Completed.

;

This example shows the output for an E5-ENET-B card used as an IPSG card:

```
rept-stat-card:loc=1111:mode=full
```

```

stpc9070501 11-05-23 15:30:39 EDT EAGLE5 44.0.0
CARD  VERSION  TYPE  GPL  PST  SST  AST
1111  009-003-000  E5ENETB  IPSG  IS-NR  Active  -----
ALARM STATUS          = No Alarms.
BLMCAP  GPL version = 009-003-000
IMT BUS A             = Conn
IMT BUS B             = Conn
CLOCK A               = Idle
CLOCK B               = Active
CLOCK I               = Idle
MBD BIP STATUS        = Valid
MOTHER BOARD ID       = EPM B
DBD STATUS            = Valid
DBD TYPE               = 1G ENET
DBD MEMORY SIZE       = 2048M
HW VERIFICATION CODE  = ----
CURRENT TEMPERATURE   = 46C (115F)
PEAK TEMPERATURE:    = 46C (115F)      [11-05-23 15:09]
SIGNALING LINK STATUS
  SLK  PST              LS          CLLI          E5IS
  A    OOS-MT           ls1111n00  tklcc1111n0  INACTIVE
  A4   OOS-MT           lr1111n08  tkc1111n8   INACTIVE
IPLNK STATUS
  IPLNK  IPADDR          STATUS  PST
  A      10.251.105.68    UP      IS-NR
  B      -----         ----   ----
ASSOCIATION STATUS
  ANAME          PST          SST
  egwn1111am3ua  OOS-MT      CONNECTING
  egwns1111a4m3ua OOS-MT      CONNECTING
APPLICATION SERVICING

```

```

                TVG      MFC                TVG      MFC
SNM      REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
SCCP     REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
EROUTE   REQ STATUS = 24 hr: ----- G--, 5 min: ----- G--
INM      REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
MTP3     REQ STATUS = 24 hr:          ---, 5 min:          ---

```

Command Completed.

;

This example shows a full report when the EPAP Data Split feature is enabled:

```
rept-stat-card:loc=1201:mode=full
```

```

epap240m 12-01-29 11:53:07 CST EAGLE 45.0.0
CARD  VERSION      TYPE      GPL      PST      SST
AST
1201  074-012-005  LIME1    SS7HC    IS-NR    Active
-----

```

```

ALARM STATUS      = No Alarms.
BPMPPL  GPL version = 134-015-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CLOCK A          = Idle
CLOCK B          = Active
CLOCK I          = Idle
MBD BIP STATUS   = Valid
MOTHER BOARD ID  = MPL
DBD STATUS       = Valid
DBD TYPE         = None
DBD MEMORY SIZE  = 0M
HW VERIFICATION CODE = ----

```

SIGNALING LINK STATUS

```

SLK  PST          LS          CLLI
A    OOS-MT-DSBLD lsa1          -----

```

APPLICATION SERVICING

```

                TVG      MFC                TVG      MFC
SNM      REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
SCCP     REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
INM      REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
MTP3     REQ STATUS = 24 hr:          ---, 5 min:          ---
SCPDN    REQ STATUS = 24 hr:          ---, 5 min:          ---
SCPIMSI  REQ STATUS = 24 hr:          ---, 5 min:          ---

```

Command Completed.

;

This example shows a full report when the Dual ExAP Config feature is enabled:

```
rept-stat-card:loc=1201:mode=full
```

```

epap240m 12-01-29 11:53:07 CST EAGLE 45.0.0
CARD  VERSION      TYPE      GPL      PST      SST

```

```

AST
1201  074-012-005  LIMDS0  SS7ML  IS-NR  Active  -----
ALARM STATUS      = No Alarms.
BPMPPL  GPL version = 134-015-000
IMT BUS A        = Conn
IMT BUS B        = Conn
CLOCK A         = Idle
CLOCK B         = Active
CLOCK I         = Idle
MBD BIP STATUS   = Valid
MOTHER BOARD ID = MPL
DBD STATUS      = Valid
DBD TYPE        = None
DBD MEMORY SIZE = 0M
HW VERIFICATION CODE = ----
SIGNALING LINK STATUS
  SLK  PST                LS          CLLI
  A    OOS-MT-DSBLD      lsa1      -----
APPLICATION SERVICING
          TVG  MFC          TVG  MFC
SNM      REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
SCCP     REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
INM      REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
MTP3     REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
SCPEPAP  REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
SCPELAP  REQ STSTUS = 24 hr: ----- ---, 5 min: ----- ---

```

Command Completed.

;

This example shows a full report when both EPAP Data Split feature and Dual ExAP Config features are enabled:

rept-stat-card:loc=1201:mode=full

```

epap240m 12-01-29 11:53:07 CST  EAGLE 45.0.0
CARD  VERSION  TYPE  GPL  PST  SST  AST
1201  074-012-005  LIMDS0  SS7ML  IS-NR  Active  -----
ALARM STATUS      = No Alarms.
BPMPPL  GPL version = 134-015-000
IMT BUS A        = Conn
IMT BUS B        = Conn
CLOCK A         = Idle
CLOCK B         = Active
CLOCK I         = Idle
MBD BIP STATUS   = Valid
MOTHER BOARD ID = MPL
DBD STATUS      = Valid
DBD TYPE        = None
DBD MEMORY SIZE = 0M
HW VERIFICATION CODE = ----

```

```

SIGNALING LINK STATUS
  SLK   PST                LS           CLLI
  A     OOS-MT-DSBLD      lsa1          -----
APPLICATION SERVICING
          TVG   MFC           TVG   MFC
SNM      REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
SCCP     REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
INM      REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
MTP3     REQ STATUS = 24 hr:           ---, 5 min:           ---
SCPDN    REQ STATUS = 25 hr:           ---, 5 min:           ---
SCPIMSI  REQ STATUS = 25 hr:           ---, 5 min:           ---
SEPELAP  REQ STATUS = 25 hr:           ---, 5 min:           ---

```

Command Completed.

;

This example shows output for an E5-SM8G-B card running the SIP application:

```
rept-stat-card:loc=1205
```

```

tekelecstp 12-06-29 15:03:34 EST EAGLE 45.0.0
CARD  VERSION      TYPE      GPL      PST      SST
AST
1205  134-045-000  DSM      SIPHC    IS-NR    Active
-----
ALARM STATUS      = No Alarms.
BLIXP  GPL version = 134-045-000
IMT BUS A         = Conn
IMT BUS B         = Conn

```

Command Completed.

;

This example shows output for an E5-SM8G-B card running the SIP application with mode=full:

```
rept-stat-card:loc=1101:mode=full
```

```

tekelecstp 12-06-29 15:03:34 EST EAGLE 45.0.0
  rept-stat-card:loc=1101:mode=full
  Command entered at terminal #18.

```

;

Command Accepted - Processing

```

tekelecstp 12-06-29 15:03:34 EST EAGLE 45.0.0
CARD  VERSION      TYPE      GPL      PST      SST
AST
  1101  029-042-007  DSM      SIPHC    IS-NR    Active
-----
ALARM STATUS      = * 0022 Clock B for card failed, Clock A
normal
BLIXP  GPL version = 059-042-000
IMT BUS A         = Conn
IMT BUS B         = Disc

```

```

CLOCK A           = Active
CLOCK B           = Fault
CLOCK I           = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = SMXG A
DBD STATUS        = Valid
DBD TYPE          = None
DBD MEMORY SIZE   = 4096M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 46C (115F)
PEAK TEMPERATURE: = 46C (115F) [02-13-06 17:11]
IPLNK STATUS
  IPLNK IPADDR      STATUS  PST
  A     192.168.120.132  UP      IS-NR
  B     -----      ----   ----
DSM IP CONNECTION
  PORT  PST          SST
  A     IS-NR        Active
SIP CONNECTION STATUS
  CNAME  PROT        PST          OPEN
  conn1  TCP          IS-NR        YES
  conn2  UDP          IS-NR        YES
Command Completed.
;

```

This example shows output for an E5-SM8G-B card running the ENUM application:

```

rept-stat-card:loc=1205

tekelecstp 14-05-26 15:03:34 EST EAGLE 46.1.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1205  135-016-000  DSM      ENUMHC   IS-NR    Active   -----
  ALARM STATUS      = No Alarms.
  BLIXP  GPL version = 135-016-000
  IMT BUS A          = Conn
  IMT BUS B          = Conn
Command Completed.
;

```

This example shows the output when E5-APP-B cards exist in the system:

```

rept-stat-card

tekelecstp 12-14-13 11:48:18 EST 46.1.0-0.0.0
rept-stat-card
Command entered at terminal #4.
CARD  VERSION      TYPE      GPL      PST      SST      AST
1105  -----      E5APPB   EPAP     RSRVD    Avail    -----
1107  -----      E5APPB   ELAP     RSRVD    Avail    -----
1109  000-000-000    HIPR2    HIPR2    IS-NR    Active   -----
1110  000-000-000    HIPR2    HIPR2    IS-NR    Active   -----
1113  255-255-255    GPSM     EOAM     IS-NR    Active   -----
1114  -----      E5TDM    IS-NR    Active   -----

```

```

1115  255-255-255  GPSM      EOAM      IS-NR      Standby
-----
1116  -----      TDM              IS-NR      Active
-----
1117  -----      E5MDAL          IS-NR      Active
-----
6202  -----      TELCO      SWITCH    RSRVD      Avail
-----
6203  -----      TELCO      SWITCH    RSRVD      Avail
-----
Command Completed.
;

```

This example shows the report for a card location equipped with an E5-APP-B card:

```
rept-stat-card:loc=1105
```

```

tekelecstp 12-07-13 11:49:35 EST 45.0.0-64.37.0
rept-stat-card:loc=1105
Command entered at terminal #4.
CARD  VERSION      TYPE      GPL      PST      SST
AST
1105  -----      E5APPB    EPAP      RSRVD      Avail
-----
Command Completed.
;

```

These examples show the report for E5-APP-B application cards:

```
rept-stat-card:appl=epap
```

```

tekelecstp 12-07-13 11:52:44 EST 45.0.0-64.37.0
rept-stat-card:appl=epap
Command entered at terminal #4.
CARD  VERSION      TYPE      GPL      PST      SST
AST
1105  -----      E5APPB    EPAP      RSRVD      Avail
-----

Command Completed.
;

```

```
rept-stat-card:appl=elap
```

```

tekelecstp 12-07-13 11:54:41 EST 45.0.0-64.37.0
rept-stat-card:appl=elap
Command entered at terminal #4.
CARD  VERSION      TYPE      GPL      PST      SST
AST

```

```
1107 ----- E5APPB ELAP RSRVD Avail -----
```

```
Command Completed.
```

```
;
```

```
rept-stat-card:appl=lsms
```

```
tekelecstp 12-07-13 11:54:41 EST 45.0.0-64.37.0
```

```
rept-stat-card:appl=lsms
```

```
Command entered at terminal #4.
```

```
CARD  VERSION      TYPE      GPL      PST      SST      AST
1103  -----      E5APPB   LSMS     RSRVD    Avail    -----
```

```
Command Completed.
```

```
;
```

```
rept-stat-card:appl=nas
```

```
tekelecstp 12-07-13 11:54:41 EST 45.0.0-64.37.0
```

```
rept-stat-card:appl=nas
```

```
Command entered at terminal #4.
```

```
CARD  VERSION      TYPE      GPL      PST      SST      AST
1101  -----      E5APPB   NAS      RSRVD    Avail    -----
```

```
Command Completed.
```

```
;
```

This example shows the report for a card location equipped with a Telco Switch:

```
rept-stat-card:loc=6202
```

```
tekelecstp 12-09-06 11:43:37 EST 45.0.0
```

```
rept-stat-card:loc=6202
```

```
Command entered at terminal #4.
```

```
CARD  VERSION      TYPE      GPL      PST      SST      AST
6202  -----      TELCO    SWITCH  RSRVD    Avail    -----
```

```
Command Completed.
```

```
;
```

This example shows the report for Telco Switches with parameter appl=switch:

```
rept-stat-card:appl=switch
```

```
tekelecstp 12-09-06 11:44:19 EST 45.0.0
```

```
rept-stat-card:appl=switch
```

```

Command entered at terminal #4.
CARD  VERSION      TYPE      GPL      PST      SST      AST
6201  -----      TELCO    SWITCH  RSRVD    Avail    ----
6202  -----      TELCO    SWITCH  RSRVD    Avail    ----
Command Completed.
;

```

This example shows output for an E5-SM8G-B card running the DEIRHC GPL:

```
rept-stat-card:loc=1105
```

```

tekelecstp 13-04-24 11:18:57 EST  EAGLE 45.1.0
rept-stat-card:loc=1105
Command entered at terminal #26.
;

```

```

Command Accepted - Processing
tekelecstp 02-01-24 11:18:57 EST  EAGLE 45.1.0
CARD  VERSION      TYPE      GPL      PST      SST
AST
1105  011-056-006  DSM      DEIRHC   IS-NR    Active
---
ALARM STATUS          = No Alarm
BLIXP  GPL version = 008-056-003
IMT BUS A             = Conn
IMT BUS B             = Conn
CURRENT TEMPERATURE  = 33C ( 92F)
PEAK TEMPERATURE:    = 33C ( 92F)      [13-04-24 11:00]
DEIR SM DATA TYPE   = IMSI

Command Completed.
;

```

This example shows output for the DEIR application with mode=full:

```
rept-stat-card:loc=1105:mode=full
```

```

tekelecstp 13-04-24 11:28:54 EST  EAGLE 46.4.0.0-69.3.1
rept-stat-card:loc=1105:mode=full
Command entered at terminal #26.
;

```

```

Command Accepted - Processing
tekelecstp 02-01-24 11:22:54 EST  EAGLE 45.1.0
CARD  VERSION      TYPE      GPL      PST      SST
AST
1101  47-003-001  SLIC    DEIRHC   IS-NR    Active
-----
ALARM STATUS          = normal
BLDC64  GPL version = 008-056-003

```



```

IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A           = Active
CLOCK B           = Idle
CLOCK I           = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = SLIC
DBD STATUS        = Valid
DBD TYPE          = None
DBD MEMORY SIZE   = 8192M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 67C (153F 73C (164F)      [16-05-25 :40]
DEIR SM DATA TYPE = IMSI
IPLNK STATUS
  IPLNK  IPADDR          STATUS  PST
  A      192.168.120.135  UP      IS-NR  89
  C      10.248.14.55    DOWN    OOS-MT
  D      192.168.120.138  DOWN    OOS-MT
DSM IP CONNECTION
  PORT  PST              SST

IS-NR          Active
  D      OOS-MT          Unavail
DEIR CONNECTION STATUS
  DCNAME          STATUS  ANAME          STATUS
  abc1            UP      abc1            IS-NR
  abc2            UP      abc2            IS-NR
  abc3            DOWN    abc3            IS-NR

```

Command Completed.

;

This example shows the full report when an IPS card is provisioned as an SFLOG card:

```
rept-stat-card:loc=1107:mode=full
```

```

tekelecstp 15-05-27 15:43:58 EST  EAGLE 46.3.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1107  131-010-000  IPSM     IPSHC   IS-NR    Active   -----
ALARM STATUS      = No Alarm
BLIXP  GPL version = 133-044-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A           = Fault
CLOCK B           = Active
CLOCK I           = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = EPM B
DBD STATUS        = Valid
DBD TYPE          = 1G ENET
DBD MEMORY SIZE   = 2048M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 45C (113F)
PEAK TEMPERATURE:  = 45C (113F)      [15-05-27 15:43]
SFLOG = YES

```

```

IPLNK STATUS
  IPLNK  IPADDR          STATUS  PST
  A      10.254.101.121  UP      IS-NR

```

Command Completed.

;

This example shows the full report for an SCCP card with the SFLOG MFC service:

```
rept-stat-card:loc=1101:mode=full
```

```

tekelecstp 15-07-07 07:02:54 EST  EAGLE5 46.3.0
CARD  VERSION      TYPE      GPL      PST      SST
AST
1101  017-001-013  DSM      SCCPHC   IS-NR    Active
-----

```

```

ALARM STATUS      = No Alarms.
BLIXP  GPL version = 021-001-000
IMT BUS A        = Conn
IMT BUS B        = Conn
CLOCK A         = Active
CLOCK B         = Idle
CLOCK I         = Idle
MBD BIP STATUS   = Valid
MOTHER BOARD ID = SMXG A
DBD STATUS      = Valid
DBD TYPE        = None
DBD MEMORY SIZE = 4096M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 46C (115F)
PEAK TEMPERATURE:  = 46C (115F)      [15-07-07 07:02]
SCCP % OCCUP     = 1%
APPLICATION SERVICING

```

```

          TVG      MFC          TVG      MFC
SNM      REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
INM      REQ STATUS = 24 hr: ----- ---, 5 min: ----- ---
MTP3     REQ STATUS = 24 hr:          G--, 5 min:          ---
SFLOG    REQ STATUS = 24 hr:          ---, 5 min:          ---

```

```

IPLNK STATUS
  IPLNK  IPADDR          STATUS  PST
  A      -----          ----   ----
  B      -----          ----   ----

```

```

DSM IP CONNECTION
  PORT  PST          SST
  A     OOS-MA      Ueq
  B     OOS-MA      Ueq

```

Command Completed.

;

This example shows output for a SLIC card running the IPSG GPL with mode=full:

```
rept-stat-card:loc=1203:mode=full
```

```
stpa1090701 16-04-1624 11:09:37 EST EAGLE5 46.3.0.0.0-68.18.0
rept-stat-card:loc=1203:mode=full
Command entered at terminal #4.
```

```
;
```

```
stpa1090701 16-04-16 11:09:37 EST EAGLE5 46.3.0.0.0-68.18.0
1203 138-018-000 SLIC IPSP IS-NR Active -----
```

```
.
```

```
BLSLC32 GPL version = 138-018-000
```

```
Idle
```

```
Valid
```

```
MOTHER BOARD ID = SLIC
DBD STATUS = Valid
DBD TYPE = None
DBD MEMORY SIZE = 16384M
```

```
39C (103F)
```

```
PEAK TEMPERATURE: = 43C (110F) [16-04-12 06:24]
```

```
SLK PST LS CLLI
A IS-NR sd1c114a -----
A1 IS-NR sd2c114a -----
A2 IS-NR sd3c114a -----
A3 IS-NR sd4c114a -----
A4 IS-NR sd5c114a -----
```

```
IPLNK 103.50 UP IS-NR
```

```
B -----
```

```
eipa1203am2pa IS-NR ESTABLISHED
eipi1203alm2pa IS-NR ESTABLISHED
eipis1203a2m2pa IS-NR ESTABLISHED
eipn1203a3m2pa IS-NR ESTABLISHED
eipc1203a4m2pa IS-NR ESTABLISHED
```

```
APPLICATION SERVICING
```

```
MFC MFC
SNM REQ STATUS = 24 hr: G--, 5 min: ---
SCCP REQ STATUS = 24 hr: ---, 5 min: ---
INM REQ STATUS = 24 hr: G--, 5 min: ---
MTP3 REQ STATUS = 24 hr: G--, 5 min: G--
SCPEPAP REQ STATUS = 24 hr: ---, 5 min: ---
SCPELAP REQ STATUS = 24 hr: ---, 5 min: ---
```

```
;
```

```
rept-stat-card
```

```
Command Accepted - Processing
```

```
tekelecstp 16-05-25 12:38:37 EST EAGLE 46.4.0.0.0-69.3.1
rept-stat-card
Command entered at terminal #3.
```

```
;
```

```

tekelecstp 16-05-25 12:38:38 EST EAGLE 46.4.0.0.0-69.3.1
CARD   VERSION      TYPE      GPL      PST      SST
AST
  1101  -----      SLIC      GLSHC    OOS-MT-DSBLD  MEA
-----  1105  139-003-000 TSM      GLSHC    IS-NR
Active   -----
  1106  -----      SLIC      GLSHC    OOS-MT-DSBLD  MEA
-----
  1109  139-003-000  HIPR2    HIPR2    IS-NR        Active
-----
  1110  139-003-000  HIPR2    HIPR2    IS-NR        Active
-----
  1112  139-003-000  SLIC     IPSPG    IS-NR        Active
-----
  1113  030-003-001  E5MCAP   OAMHC    IS-NR        Active
-----
  1114  -----      E5TDM                    IS-NR        Active
-----
  1115  030-003-001  E5MCAP   OAMHC    IS-NR        Standby
-----
  1116  -----      E5TDM                    IS-NR        Active
-----
  1117  -----      E5MDAL                    OOS-MT        Isolated
-----

```

Command Completed.

This example shows output for a SLIC card running the ENUMHC GPL with mode=full:

```
rept-stat-card:loc=1103:mode=full
```

```

tekelecstp 16-06-22 03:19:34 EST EAGLE 46.4.0.0.0-69.3.1
rept-stat-card:loc=1103:mode=full
Command entered at terminal #18.
;

```

Command Accepted - Processing

```

tekelecstp 16-06-22 03:19:34 EST EAGLE 46.4.0.0.0-69.3.1
CARD   VERSION      TYPE      GPL      PST      SST
AST
  1103  139-002-000  SLIC     ENUMHC    IS-NR        Active
-----
ALARM STATUS          = No Alarms.
BLSLC32 GPL version  = 139-002-000
IMT BUS A             = Conn
IMT BUS B             = Conn
CLOCK A               = Active
CLOCK B               = Idle
CLOCK I               = Idle
MBD BIP STATUS        = Valid
MOTHER BOARD ID       = SLIC
DBD STATUS            = Valid
DBD TYPE              = None
DBD MEMORY SIZE       = 16384M

```

```

HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 73C (164F)
PEAK TEMPERATURE:   = 73C (164F)   [16-06-22 00:30]
IPLNK STATUS
  IPLNK  IPADDR          STATUS  PST
  A      192.168.120.132  UP      IS-NR
  B      10.248.13.81    UP      IS-NR

DSM IP CONNECTION
  PORT  PST          SST
  A     IS-NR       Active

ENUM CONNECTION STATUS
  CNAME      PROT          PST          OPEN
  conn1     UDP           IS-NR       YES
Command Completed.
;

```

This example shows output for a SLIC card running the SIPHC GPL with mode=full:

```

rept-stat-card:loc=1101:mode=full

tekelecstp 16-06-21 02:40:34 EST EAGLE 46.4.0.0.0-69.3.1
rept-stat-card:loc=1101:mode=fullentered at terminal #18.
;

Command Accepted - Processing
tekelecstp 16-06-21 02:40:34 EST EAGLE 46.4.0.0.0-69.3.1
1101  139-002-000  SLIC      SIPHC      IS-NR      Active      -----
      BLSLC32 GPL version = 139-002-000

SLIC
None
      DBD MEMORY SIZE      = 16384M
CURRENT TEMPERATURE      = 73C (164F)
PEAK TEMPERATURE:       = 73C (164F)   [16-06-21 02:40]
IPLNK STATUS
  IPLNK  IPADDR          STATUS  PST
  A      192.168.120.131  UP      IS-NR
  B      10.248.13.76    UP      IS-NR

DSM IP CONNECTION
  A     IS-NR       Active

```

This example shows output for a SLIC card running the ERTHC GPL with mode=full:

```

rept-stat-card:mode=full:loc=1107

tekelecstp 16-07-14 05:52:22 EST EAGLE 46.4.0.0.0-69.3.1
rept-stat-card:mode=full:loc=1107
Command entered at terminal #18.

```

```

;
Command Accepted - Processing
  tekelecstp 16-07-14 05:52:22 EST  EAGLE 46.4.0.0-69.3.1
  CARD  VERSION      TYPE      GPL      PST      SST
AST
  1107   139-002-000  SLIC      ERTHC    IS-NR     Active
-----
  ALARM STATUS          = No Alarms.
  BLSLC32 GPL version = 139-002-000
  IMT BUS A             = Conn
  IMT BUS B             = Conn
  CLOCK A              = Active
  CLOCK B              = Idle
  CLOCK I              = Idle
  MBD BIP STATUS       = Valid
  MOTHER BOARD ID     = SLIC
  DBD STATUS           = Valid
  DBD TYPE             = None
  DBD MEMORY SIZE     = 16384M
  HW VERIFICATION CODE = ----
  CURRENT TEMPERATURE = 73C (164F)
  PEAK TEMPERATURE:   = 73C (164F) [16-07-14 05:50]
  EROUTE % OCCUP      = 0%
  NTP broadcast = VALID
  IPLNK STATUS
    IPLNK  IPADDR          STATUS  PST
    A      -----          DOWN    OOS-MT
    B      -----          DOWN    OOS-MT
  STC IP CONNECTION
    PORT  PST              SST
    A     OOS-MT           Unavail
    B     OOS-MT           Unavail

  Command Completed.
;
Command Executed

```

This example shows output for a SLIC card running the MCPHC GPL with mode=full:

```
rept-stat-card:mode=full:loc=1107
```

```

  tekelecstp 16-07-14 06:09:15 EST  EAGLE 46.4.0.0-69.3.1
  rept-stat-card:mode=full:loc=1107
  Command entered at terminal #18.
;

```

```

Command Accepted - Processing
  tekelecstp 16-07-14 06:09:15 EST  EAGLE 46.4.0.0-69.3.1
  CARD  VERSION      TYPE      GPL      PST      SST
AST
  1107   139-002-000  SLIC      MCPHC    IS-NR     Active
-----
  ALARM STATUS          = No Alarms.
  BLSLC32 GPL version = 139-002-000

```

```

IMT BUS A           = Conn
IMT BUS B           = Conn
CLOCK A             = Active
CLOCK B             = Idle
CLOCK I             = Idle
MBD BIP STATUS      = Valid
MOTHER BOARD ID     = SLIC
DBD STATUS          = Valid
DBD TYPE            = None
DBD MEMORY SIZE     = 16384M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 73C (164F)
PEAK TEMPERATURE:  = 74C (166F)      [16-07-14 06:06]
IPLNK STATUS
  IPLNK  IPADDR          STATUS  PST
  A      10.248.13.93    ACTIVE   IS-NR    MCP IP CONNECTION
  PORT   PST            SST
  A      OOS-MT         Unavail

```

Command Completed.

```

;
Command Executed

```

This example shows output for a SLIC card running the SCCPHC GPL with mode=full:

```
rept-stat-card:loc=1107:mode=full
```

```

tekelecstp 16-07-14 06:37:51 EST EAGLE 46.4.0.0.0-69.3.1
rept-stat-card:loc=1107:mode=full
Command entered at terminal #18.

```

```
;
```

Command Accepted - Processing

```

tekelecstp 16-07-14 06:37:51 EST EAGLE 46.4.0.0.0-69.3.1
CARD  VERSION  TYPE  GPL  PST  SST  AST
1107  139-002-000 SLIC  SCCPHC  IS-NR  Active  -----
ALARM STATUS      = No Alarms.
BLSLC32 GPL version = 139-002-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CLOCK A           = Active
CLOCK B           = Idle
CLOCK I           = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = SLIC
DBD STATUS        = Valid
DBD TYPE          = None
DBD MEMORY SIZE   = 16384M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 72C (162F)
PEAK TEMPERATURE:  = 73C (164F)      [16-07-14 06:24]
SCCP % OCCUP      = 0%
APPLICATION SERVICING
                                MFC      MFC
SNM  REQ STATUS = 24 hr: ---, 5 min: ---

```

```

      INM      REQ STATUS = 24 hr: ---, 5 min: ---
      MTP3     REQ STATUS = 24 hr: ---, 5 min: ---
      SFLOG    REQ STATUS = 24 hr: ---, 5 min: ---
IPLNK STATUS
  IPLNK  IPADDR          STATUS    PST
  A      -----          ----     ----
  B      -----          ----     ----
DSM IP CONNECTION
  PORT  PST             SST
  A     OOS-MA         Ueq
  B     OOS-MA         Ueq

```

Command Completed.

```

;
Command Executed

```

Legend

- **CARD**—Location of the card
- **VERSION**—Version number of the application loaded on the card. Dashes (- - - - -) in the version column indicate one of the following conditions about the card:
 - The card is configured but is not physically present in the system.
 - The card does not run a GPL, such as TDM or MDAL cards.
 - The card is IS-ANR or is in the process of being loaded.
- **TYPE**—Card type entered in the database.
- **APPL**—Application loaded on the card
- **PST**—Primary state of the card. See [Possible Values for PST/SST/AST](#) .
- **SST**—Secondary state of the card. See [Possible Values for PST/SST/AST](#) .
- **AST**—Associated state of the card. See [Possible Values for PST/SST/AST](#) .

Message Flow Control status is displayed in these fields: SNM REQ STATUS (SNM messages), SCCP REQ STATUS (SCCP messages), EROUTE REQ STATUS (EROUTE messages), INM REQ STATUS (INM messages), MTP3 REQ STATUS (MTP3 messages), and SFLOG REQ STATUS.

For card type STC (EROUTE application), the MFC status is not displayed.

Message Flow Control status output is displayed as a series of these letters:

- **G**—MFC found a service with available capacity. Indicates normal system behavior.
- **D**—Servers were present in the system, but no server had available capacity. Indicates an overload, but MFC is working correctly.
- **N**—No operational server cards were available in the system for use by this card over the corresponding interval.

The HW VERIFICATION CODE field is shown only in the mode=full report. ----- is shown in the HW VERIFICATION CODE field for cards with valid hardware detected. One of the following numerical values is shown when invalid hardware is detected, and all such cards will be auto-inhibited.

* It is possible that the card will continually boot in these cases, before the alarm is ever displayed.

Table 4-51 Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
058	SS7IPGW, IPGWI, IPLIMI	E5-ENET-B does not support > 16 associations (IPLIMx). E5-ENET-B does not support > 50 associations (IPGWx).	422
059	VSCCP	MPS database has been detected to exceed capacity of Service Module extended memory (only for GPORT, GFLEX, INP, EIR features). UAMs 281, 283, and 285 are used for LNP and LNP ELAP Configuration features.	422
090	Various	Flash image on the card is incompatible with the current release of the EAGLE	570
099	E5-TSM	E5-TSM card equipped has one or more daughterboard.	99
102*	SS7IPGW, IPGWI	Non-DCM detected in slot.	99
103	SS7IPGW, IPGWI, IPLIMI	E5-ENET-B does not support >16 associations (IPLIMx). E5-ENET-B does not support >50 associations (IPGWx).	276
103	IPSG	E5-ENET-B does not support >32 associations (IPSG).	276
104	SS7IPGW, IPGWI,	E5-ENET-B does not support >0 sockets (IPLIMx). E5-ENET-B does not support >0 sockets (IPGWx).	276
105	SS7IPGW, IPGWI, IPLIMI	E5-ENET-B does not support > 0 (sockets + associations) (IPLIMx). E5-ENET-B does not support > 50 (sockets + associations) (IPGWx).	276
106	SS7IPGW, IPGWI, IPLIMI	E5-ENET-B does not support >3200Kb SCTP buffers (IPLIMx). E5-ENET-B does not support >3200Kb SCTP buffers (IPGWx).	276
132	IPLIMI	The actual card in the slot must be a high capacity MIM or LIME1 if card is provisioned as a LIME1 card.	99
136	E5-ATM-B	E5-ATM-B is provisioned	297

Table 4-51 (Cont.) Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
140	MCPHC	MCP card not running with D2G memory	422
141	IPS	E5-IPSM card not running with D2G memory.	422
142	MCP	E5-MCPM-B card not running with D4G memory.	422
150	various	Card is obsolete.	47
165	VSCCP	Hardware configuration does not support configured feature set.	99
170	EROUTE	Non-E5-ENET-B card detected in slot provisioned for eroute with card type STC.	99
172	IPSG	Non-SLIC card detected in slot provisioned for IPSG and card type is SLIC with data=gtt.	99
174	IPSG	SLIC hardware detected having 32-bit flash GPL (BLSLC32) in a slot provisioned for IPSG and card type is SLIC with data=gtt.	99
179	E5-ATM-B, E5-ENET-B, E5-E1T1-B	EPM-B based card detected and MFC is OFF.	99
180	SCCP, SS7ANSI	SCCP card equipped with DCM with MOBR on.	441
	DEIR, ENUM, SIP	If ports C and D are configured, the card location must be populated with SLIC cards only.	

Related Topics

- [dlt-card](#)
- [ent-card](#)
- [init-card](#)
- [rmv-card](#)
- [rtrv-card](#)

4.1.397 rept-stat-cdl

Use this command to generate a report of the signaling links currently in Command Driven Loopback (CDL) testing, including the amount of time the link has been in CDL testing.

Command Driven Loopback is the ability to locally drive a signaling link into a manual line loopback. The data received on the signaling link is echoed (transmitted) back.

This is effectively the reverse of the `tst-slk:loopback=lxvr` command, which loops the transmitted data back to the receive.

Parameters

link (optional)

SS7 signaling links. The signaling links that is being tested.

Synonym:

port

Range:

a, b, a1 - a31, b1 - b31

Not all card types support all `link` parameter values.

See [Table A-1](#) for valid `link` parameter range values for each type of card that can have assigned signaling link ports.

Default:

All signaling links that are in CDL testing are displayed.

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Default:

All cards containing signaling links that are in CDL testing are displayed.

loopback (optional)

Loopback test type.

Range:

line

payload



Note:

The `payload` value is valid only on LIM-ATM and E1-ATM cards.

Default:

All loopback tests are displayed.

Example

```
rept-stat-cdl
rept-stat-cdl:loc=1201
rept-stat-cdl:loc=1203:link=a
```

```
rept-stat-cdl:loopback=payload
```

Dependencies

If the `link` parameter is specified, the `loc` parameter must be specified.

2903 E2903 Cmd Rej: LOC and PORT parameter combination must be specified

The card location specified in the `loc` parameter must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The signaling link specified in the `link` parameter must be equipped.

2373 E2373 Cmd Rej: Link is unequipped in the database

This command is not available during upgrade.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

The card location specified in the `loc` parameter cannot be reserved by the system.

2376 E2376 Cmd Rej: Specified LOC is invalid

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information

Output

```
rept-stat-cdl
```

```
tekelecstp 03-11-27 01:29:06 EST EAGLE 31.3.0
SLK      CDL      CDL-TIME
1102,A1  LINE      00:04:01
1201,A   PAYLOAD   01:04:11
1203,A   LINE      00:22:21
1203,B   LINE      20:04:01
1208,A   LINE      01:05:22
1211,A   PAYLOAD   00:14:01
;
```

Legend

- **SLK**—The card and assigned signaling link that is in CDL testing
- **CDL**—Command Driven Loopback test type (LINE or PAYLOAD)
- **CDL-TIME**—Time that the signaling link has been in CDL testing. This value can be up to 99:59:59. The test can run longer than 100 hours, but this field will not record times longer than 100 hours.

Related Topics

- [act-cdl](#)
- [dact-cdl](#)

4.1.398 rept-stat-cdt

Use this command to display the customer-defined troubles. The Customer-Definable Alarms feature can be used to connect up to 10 external devices to the system for alarm reporting. These devices are defined in the system database as customer-defined troubles, and they are monitored so that any change in the state of these devices is reported as an unsolicited alarm message (UAM).

Parameters

This command has no parameters.

Example

```
rept-stat-cdt
```

Dependencies

No other status command can be in progress when this command is entered.

N/A N/A

Notes

These troubles are customer-defined and configured by the factory.

Output

```
rept-stat-cdt
```

```
rlghncxa03w 04-01-07 20:20:43 EST EAGLE 31.3.0
ID          ALARM STATUS
1   *C 0058  Critical Customer Trouble detected
2   *C 0050  Critical Holdover Clock trouble detected
3   *C 0058  Critical Customer Trouble detected
4   *C 0058  Critical Customer Trouble detected
5   I ** 0059  Major Customer Trouble detected
6   ** 0052  Major Holdover Clock trouble detected
7   ** 0059  Major Customer Trouble detected
8   ** 0059  Major Customer Trouble detected
9   I * 0060  Minor Customer Trouble detected
10  * 0054  Minor Holdover Clock trouble detected
11  * 0060  Minor Customer Trouble detected
12  * 0060  Minor Customer Trouble detected
13  * 0060  Minor Customer Trouble detected
14  I * 0060  Minor Customer Trouble detected
15  * 0060  Minor Customer Trouble detected
16  * 0060  Minor Customer Trouble detected
```

```
;
```

Legend

- **ID**—The customer defined trouble ID number followed by the status of the customer-defined trouble.

- **ALARM STATUS**—The status of the alarm for the specified device.

Related Topics

- [act-alm-trns](#)
- [canc-alm-trns](#)
- [dact-alm-trns](#)
- [rept-stat-clk](#)
- [rept-stat-trbl](#)
- [rls-alm](#)
- [rtrv-obit](#)
- [rtrv-trbl](#)

4.1.399 rept-stat-clk

Use this command to display the clock status summary for cards in the system.

Parameters

mode (optional)

Display mode. When `mode=full` is specified, the "Cards with bad clock source" section of the report is displayed

Range:

full

Example

```
rept-stat-clk
rept-stat-clk:mode=full
```

Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

Notes

The clock status report includes the status of all the clocks in the system (Clock A, Clock B, Clock I, High Speed (HS) Clock A, HS Clock B, etc.).

The Time Slot Counter Synchronization (TSC) clock appears only if the Time Slot Counter Synchronization (TSCSYNC) feature is turned on. See the `chg-feat` command.

The Composite clock sections of the report are the *Primary Comp Clock (CLK)* and *Secondary Comp CLK* fields in the COMPOSITE SYSTEM CLOCK section: the summary of the number of cards having bad status or using COMP CLKs: and the *CLK* columns in the "Cards with bad clock source" section that appears when the `mode=full` parameter is specified.

The HS clock sections of the report are the *Primary HS Clock (CLK)*, *Secondary HS CLK*, *HS CLK TYPE*, and *HS CLK LINELEN* fields in the HIGH SPEED SYSTEM CLOCK section: the summary of the number of cards having bad status or using HS CLKs: and the *HS CLK* columns in the "Cards with bad clock source" section that appears when the `mode=full` parameter is specified.

HS clock capable cards can support a link that is provisioned to use HS Master Timing. These cards include all cards with type LIME1 or LIMT1 and all cards that run the ATMANSI or ATMITU applications. The clock status values are the same as those listed in the `rept-stat-card:mode=full:loc=xxx` report.

For a complete list of the cards and their applications, see [Table A-9](#).

If HS clock A and B status is included in the "Cards with bad clock source" section, then cards that cannot be provisioned to use HS Master Timing display dashes for HS clock A and B status.

The PST/SST for the Primary Composite Clock (Comp Clk) 1114, Primary Comp Clk 1116, Secondary Comp Clk 1114, Secondary Comp Clk 1116, Primary HS Clk 1114, Primary HS Clk 1116, Secondary HS Clk 1114, and Secondary HS Clk 1116 can be one of the following values:

- IS-NR/active—clock source is valid, clock chosen as source
- IS-NR/idle—clock source is valid, clock not chosen as source
- OOS-MT/fault—clock source is invalid

The PST/ SST for the Composite System Clock and High Speed System Clock can be one of the following values:

- IS-NR/Idle—all cards showing good clock, clock not required
- IS-ANR/Idle—some cards showing bad clock, clock not required
- OOS-MT/Idle—all cards showing bad clock, clock not required
- IS-NR/Active—all cards "requiring clocks" showing good clock, clocks required
- IS-ANR/Fault—some cards "requiring clocks" showing bad clock, clocks required
- OOS-MT/Fault—all cards "requiring clocks" showing bad clock, clocks required

Note:

An asterisk (*) indicates that the card requires the indicated clock.

Output

Note:

A TDM card can use a local clock that is generated independently on each TDM as a clock source for the corresponding internal system clock. The system does not report the "cards bad" status for these internal clocks.

 **Note:**

The use of HS CLK I is not automatic when both the high-speed primary and secondary clocks are invalid. An E5-ATM-B card must be provisioned (using the `ent-slk:atmtsel=internal` command) to use the high-speed internal clock.

 **Note:**

The *Using* field in the Composite Clock section describes all of the cards that are using the Composite Clock, not just HS clock capable cards.

The following example shows output when two GSM-II cards are configured, and HS clock capable cards are not configured. The TSCSYNC feature is not turned on.

```
rept-stat-clk
```

```
tekelecstp 08-06-07 14:40:13 EST EAGLE 39.0.0
COMPOSITE                                PST      SST      AST
      SYSTEM CLOCK                        IS-NR    Idle
-----
ALARM STATUS = No Alarms.
      Primary Comp Clk 1114 (CLK A)  IS-NR    Active
-----
      Primary Comp Clk 1116 (CLK B)  IS-NR    Active
-----
      Secondary Comp Clk 1114 (CLK A) IS-NR    Idle
-----
      Secondary Comp Clk 1116 (CLK B) IS-NR    Idle
-----

Clock      Using      Bad
CLK A      2          0
CLK B      0          0
CLK I      0          --

HIGH SPEED                                PST      SST      AST
      SYSTEM CLOCK                        IS-NR    Idle
-----
ALARM STATUS = No Alarms.
      Primary HS Clk 1114 (HS CLK A)  IS-NR    Active
-----
      Primary HS Clk 1116 (HS CLK B)  IS-NR    Active
-----
      Secondary HS Clk 1114 (HS CLK A) IS-NR    Idle
-----
      Secondary HS Clk 1116 (HS CLK B) IS-NR    Idle
-----

HS CLK TYPE 1114      = RS422
```



```

HS CLK LINELEN 1114 = -----
HS CLK TYPE 1116   = RS422
HS CLK LINELEN 1116 = -----

```

```

Clock      Using      Bad
HS CLK A   0          0
HS CLK B   0          0
HS CLK I   0          --

```

Command Completed.

;

The following example shows output when two GPSM-II cards are configured and an HS clock capable card is configured. The TSCSYNC feature is not turned on.

rept-stat-clk

```

tekelecstp 08-06-07 14:40:13 EST EAGLE 39.0.0
COMPOSITE                                PST      SST      AST
  SYSTEM CLOCK                          IS-NR    Idle    -----
ALARM STATUS = No Alarms.
  Primary Comp Clk 1114 (CLK A)         IS-NR    Active  -----
  Primary Comp Clk 1116 (CLK B)         IS-NR    Active  -----
  Secondary Comp Clk 1114 (CLK A)       IS-NR    Idle    -----
  Secondary Comp Clk 1116 (CLK B)       IS-NR    Idle    -----

```

```

Clock      Using      Bad
CLK A      3          0
CLK B      0          0
CLK I      0          --

```

```

HIGH SPEED                                PST      SST      AST
  SYSTEM CLOCK                          IS-NR    Active  -----
ALARM STATUS = No Alarms.
  Primary HS Clk 1114 (HS CLK A)        IS-NR    Active  -----
  Primary HS Clk 1116 (HS CLK B)        IS-NR    Active  -----
  Secondary HS Clk 1114 (HS CLK A)      IS-NR    Idle    -----
  Secondary HS Clk 1116 (HS CLK B)      IS-NR    Idle    -----

```

```

HS CLK TYPE 1114   = RS422
HS CLK LINELEN 1114 = -----
HS CLK TYPE 1116   = RS422
HS CLK LINELEN 1116 = -----

```

```

Clock      Using      Bad
HS CLK A   1          0
HS CLK B   0          0
HS CLK I   0          --

```

Command Completed.

;

The following example shows output when two GPSM-II cards are configured and HS clock capable cards are not configured. The TSCSYNC feature is turned on.

```
rept-stat-clk
```

```

tekelecstp 08-05-07 14:40:13 EST EAGLE 39.0.0
COMPOSITE                                PST      SST      AST
      SYSTEM CLOCK                       IS-NR    Active
-----
ALARM STATUS = No Alarms.
      Primary Comp Clk 1114 (CLK A)  IS-NR    Active
-----
      Primary Comp Clk 1116 (CLK B)  IS-NR    Active
-----
      Secondary Comp Clk 1114 (CLK A) IS-NR    Idle
-----
      Secondary Comp Clk 1116 (CLK B) IS-NR    Idle
-----

Clock      Using      Bad
CLK A      2            0
CLK B      0            0
CLK I      0            --

Prefer Clock A   for TSC CLOCK

HIGH SPEED                                PST      SST      AST
      SYSTEM CLOCK                       IS-NR    Active
-----
ALARM STATUS = No Alarms.
      Primary HS Clk 1114 (HS CLK A)  IS-NR    Active
-----
      Primary HS Clk 1116 (HS CLK B)  IS-NR    Active
-----
      Secondary HS Clk 1114 (HS CLK A) IS-NR    Idle
-----
      Secondary HS Clk 1116 (HS CLK B) IS-NR    Idle
-----

HS CLK TYPE 1114      = RS422
HS CLK LINELEN 1114  = -----
HS CLK TYPE 1116      = RS422
HS CLK LINELEN 1116  = -----

Clock      Using      Bad
HS CLK A    0            0
HS CLK B    0            0
HS CLK I    0            --

Command Completed.
;

```

The following example shows output when two GPSM-II cards are configured and an HS clock capable card is configured. The TSCSYNC feature is turned on.

rept-stat-clk

```

tekelecstp 08-06-07 14:40:13 EST  EAGLE 39.0.0
COMPOSITE                               PST           SST           AST
  SYSTEM CLOCK                          IS-NR         Active        -----
ALARM STATUS = No Alarms.
  Primary Comp Clk 1114 (CLK A)         IS-NR         Active        -----
  Primary Comp Clk 1116 (CLK B)         IS-NR         Active        -----
  Secondary Comp Clk 1114 (CLK A)       IS-NR         Idle          -----
  Secondary Comp Clk 1116 (CLK B)       IS-NR         Idle          -----

```

```

Clock      Using      Bad
CLK A      3           0
CLK B      0           0
CLK I      0           --

```

Prefer Clock A for TSC CLOCK

```

HIGH SPEED                               PST           SST           AST
  SYSTEM CLOCK                          IS-NR         Active        -----
ALARM STATUS = No Alarms.
  Primary HS Clk 1114 (HS CLK A)        IS-NR         Active        -----
  Primary HS Clk 1116 (HS CLK B)        IS-NR         Active        -----
  Secondary HS Clk 1114 (HS CLK A)      IS-NR         Idle          -----
  Secondary HS Clk 1116 (HS CLK B)      IS-NR         Idle          -----

```

```

HS CLK TYPE 1114      = RS422
HS CLK LINELEN 1114  = -----
HS CLK TYPE 1116      = RS422
HS CLK LINELEN 1116  = -----

```

```

Clock      Using      Bad
HS CLK A   1           0
HS CLK B   0           0
HS CLK I   0           --

```

Command Completed.

;

The following example shows output when the `mode=full` parameter is specified and HS clock capable cards are configured. The TSCSYNC feature is turned on.

rept-stat-clk:mode=full

```

tekelecstp 08-06-07 14:40:13 EST  EAGLE 39.0.0
COMPOSITE                               PST           SST           AST
  SYSTEM CLOCK                          IS-ANR        Fault         -----
ALARM STATUS = No Alarms.
  Primary Comp Clk 1114 (CLK A)         IS-NR         Active        -----
  Primary Comp Clk 1116 (CLK B)         -----       -----       -----
  Secondary Comp Clk 1114 (CLK A)       IS-NR         Idle          -----
  Secondary Comp Clk 1116 (CLK B)       -----       -----       -----

```

```

Clock      Using      Bad
CLK A      4                1
CLK B      0                5
CLK I      0                --

Prefer Clock A   for TSC CLOCK

HIGH SPEED                                PST      SST      AST
SYSTEM CLOCK                                OOS-MT   Fault
-----
ALARM STATUS = No Alarms.
Primary HS Clk 1114   (HS CLK A) IS-NR      Active
-----
Primary HS Clk 1116   (HS CLK B) -----
-----
Secondary HS Clk 1114 (HS CLK A) IS-NR      Idle
-----
Secondary HS Clk 1116 (HS CLK B) -----
-----

HS CLK TYPE 1114      = E1 UNFRAMED
HS CLK LINELEN 1114   = SHORThAUL
HS CLK TYPE 1116      = -----
HS CLK LINELEN 1116   = -----

Clock      Using      Bad
HS CLK A   0                1
HS CLK B   0                1
HS CLK I   0                --

Cards with bad clock source:
CARD      CLK A      CLK B      HS CLK A   HS CLK B
1103      *Active   *Fault   -----
1104      Active    Fault    *Fault    *Fault
1106      *Active   *Fault   -----
1113      Active    Fault    -----
1205      Fault     Fault    -----

Command Completed.
;

```

The following example shows output when HS clock capable cards are not configured. The TSCSYNC feature is not turned on.

```
rept-stat-clk
```

```

tekelecstp 08-06-07 14:40:13 EST EAGLE 39.0.0
COMPOSITE                                PST      SST      AST
SYSTEM CLOCK                                IS-NR   Active
-----
ALARM STATUS = No Alarms.
Primary Comp Clk 1114 (CLK A) IS-NR      Active
-----

```

```

Primary Comp Clk 1116 (CLK B) IS-NR Active -----
Secondary Comp Clk 1114 (CLK A) IS-NR Idle -----
Secondary Comp Clk 1116 (CLK B) IS-NR Idle -----

```

```

Clock      Using      Bad
CLK A      3            0
CLK B      0            0
CLK I      0            --

```

```

HIGH SPEED                                PST      SST      AST
SYSTEM CLOCK                             IS-NR    Idle    -----

```

ALARM STATUS = No Alarms.

```

Primary HS Clk 1114 (HS CLK A) IS-NR Active -----
Primary HS Clk 1116 (HS CLK B) IS-NR Active -----
Secondary HS Clk 1114 (HS CLK A) IS-NR Idle -----
Secondary HS Clk 1116 (HS CLK B) IS-NR Idle -----

```

```

HS CLK TYPE 1114 = RS422
HS CLK LINELEN 1114 = -----
HS CLK TYPE 1116 = RS422
HS CLK LINELEN 1116 = -----

```

```

Clock      Using      Bad
HS CLK A   0            0
HS CLK B   0            0
HS CLK I   0            --

```

Command Completed.

;

Legend

- **COMPOSITE SYSTEM CLOCK**—Composite System clock status
- **ALARM STATUS**—System clock alarms; "No alarms" is shown when there are no alarms.
- **PRIMARY COMP CLK**—The status of the primary Composite clock input for a particular TDM
- **SECONDARY COMP CLK**—The status of the secondary Composite clock input for a particular TDM
- **CLK A** – Internal Eagle Clock sourced by the 1114 TDM from the selected clock source.
- **CLK B** – Internal Eagle Clock sourced by the 1116 TDM from the selected clock source.
- **CLK I** – Local clock generated independently on each LIM card.
- **Prefer CLOCK x for TSC CLOCK**—The preferred clock source of the Time Slot Counter Synchronization (TSC) clock; appears only when the TSCSYNC feature is turned on.
- **HIGH SPEED SYSTEM CLOCK**—HS system clock status
- **ALARM STATUS**—HS System clock alarms; "No alarms" is shown when there are no alarms.
- **PRIMARY HS CLK**—The status of the high-speed primary clock input for a particular TDM

- **SECONDARY HS CLK**—The status of the high-speed secondary clock input for a particular TDM
- **HS CLK TYPE**—HS clock source (see the chg-stpopts command) for a particular TDM
- **HS CLK LINELEN**—HS clock line length (see the chg-stpopts command) for a particular TDM
- **HS CLK A** – Internal Eagle High Speed Clock sourced by the 1114 TDM from the selected clock source.
- **HS CLK B** – Internal Eagle High Speed Clock sourced by the 1116 TDM from the selected clock source.
- **HS CLK I** – Local clock generated independently on each LIM card. The value for the internal high-speed clock (Cards using HSCLK I) is generated differently from the internal system clock (Cards using CLK I). The internal high speed clock is generated by the XILINX on the ATM applique's card. The internal system clock is generated by the Xilinx on the LIM main board when the LIM card does not have a valid system clock source (e.g., both A system clock and B system clock are bad at the LIM card).

Related Topics

- [rept-stat-card](#)
- [rept-stat-dstn](#)
- [rept-stat-imt](#)
- [rept-stat-ls](#)
- [rept-stat-sccp](#)
- [rept-stat-slk](#)
- [rept-stat-trbl](#)

4.1.400 rept-stat-cluster

Use this command to report summary status and statistical information for all provisioned clusters. Use this command also to report detailed routeset information for a specific cluster, provisioned cluster member, or dynamically-created x-list entry.



Note:

This command does not support 24-bit ITU national point codes.

Parameters

dpcc (optional)

ANSI destination point code of the cluster whose status is to be reported, with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

p-, 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*-

The asterisk value (*) is not valid for the *ni* subfield.

When `chg-sid:pctype=ansi` is specified, *ni* = 000 is not valid.

When `chg-sid:pctype=ansi` is specified, *nc* = 000 is not valid if *ni* = 001–005.

When `chg-sid:pctype=ansi` is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

Default:

Display summary for all provisioned clusters

mode (optional)

The type of display. Specify `mode=full` to display additional information for the specified DPC.

Range:

full

Default:

Display summary report

stat (optional)

This parameter reports on destinations whose status is the same as the state indicated by the parameter.

Range:

all

All of the primary states

alminh

Alarms inhibited

anr

In service abnormal (IS-ANR)

dsbld

Out of service maintenance disabled (OOS-MT-DSBLD)

mt

Out of service maintenance (OOS-MT)

nr

In service normal (IS-NR)

Default:

all

Example

```
rept-stat-cluster
```

```
rept-stat-cluster:stat=alminh
```

```
rept-stat-cluster:stat=MT
rept-stat-cluster:dpc=20-2-*
rept-stat-cluster:dpc=20-2-*:mode=full
rept-stat-cluster:dpc=20-2-5
```

Dependencies

If the `mode=full` parameter is specified, the `dpc/dpca` parameter must be specified.

2386 E2386 Cmd Rej: DPC parameter needed with MODE=FULL

The `stat` parameter cannot be specified with the `dpc/dpca` parameter in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The Cluster Routing and Management Diversity (CRMD) feature must be turned on before this command can be entered.

2581 E2581 Cmd Rej: CRMD feature must be ON

The specified DPC must exist.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

If a DPC is specified, it must be an x-list entry, a cluster DPC, or a member of a provisioned cluster.

2148 E2148 Cmd Rej: DPC must be a cluster DPC or cluster member

The destination address must be a full point code or a cluster point code specified as `ni-nc-*`. A DPC with `ni-nc-**` or `ni-nc-***` cannot be specified.

2886 E2886 Cmd Rej: DSTN address must be a full, network or cluster PC

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

Notes

If no parameters are specified, a summary report is produced, showing all provisioned clusters and their status.

If an FPC corresponding to a provisioned cluster member or an x-list entry is specified, then the status of only the specified FPC, along with routeset status, is displayed.

If a cluster destination is specified on the `dpc/dpca` parameter, then the status of the cluster and the routesets that have been defined for that cluster is displayed.

If the `mode=full` parameter and a DPC are specified, the Route/Destination table is searched, and all entries (cluster DPCs, provisioned cluster member DPCs, and x-list DPCs) belonging to the parent cluster are displayed along with their status. Also, if circular routing is in effect for the DPC, information useful in diagnosing and correcting the situation is displayed.

In the summary report, and in the detailed output when a cluster DPC is being reported, the number of provisioned members of the cluster, and the number of x-list entries that have been created for the cluster, are reported in the PROV and X-LIST columns, respectively.

When detailed information for an x-list entry is being reported, the reasons that the x-list entry was created, and the amount of time remaining on the x-list expiration timer, if applicable, in the format hh:mm is shown in the X-REASON and X-TIME columns, respectively. In x-list entries for which the expiration timer is not applicable, dashes "-----" are displayed.

MTT 4735 and 4732 deleted by MB

Output

This example shows the output when no parameters are specified. Summary information for all of the defined cluster DPCs is shown. The report shows the number of provisioned and x-list members of each cluster.

```
rept-stat-cluster
```

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA          ORIG   PST     SST       AST       PROV  XLIST
  020-002-*     CLUST IS-NR   Allowed  ACCESS    2     3
  020-020-*     CLUST IS-NR   Allowed  ACCESS    3     5
  020-021-*     CLUST OOS-MT Prohibit INACCESS  5     2
  020-022-*     CLUST IS-NR   Allowed  ALMINH    2     3
```

```
Command Completed.
```

```
;
```

This example shows the output when a provisioned cluster member DPC is specified. The report shows status information for the specified DPC plus route information.

```
rept-stat-cluster:dpc=20-2-1
```

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA          ORIG   PST     SST       AST
  020-002-001   PROV  IS-ANR  Restrict  ACCESS
ALARM STATUS           = No Alarms.
RTE  COST  LSN      APCA          LS STAT    NON-ADJ    ROUTE STAT
  1    10   lsnppp   003-003-003  Allowed    Allowed     Allowed
  2    --   -----   ***-***-***  -----    -----    -----
  3    --   -----   ***-***-***  -----    -----    -----
  4    --   -----   ***-***-***  -----    -----    -----
  5    --   -----   ***-***-***  -----    -----    -----
  6    --   -----   ***-***-***  -----    -----    -----
```

```
Command Completed.
```

```
;
```

This example shows the output when a specific cluster DPC is specified. The report shows count information about the cluster's provisioned and x-list members, plus the route information.

```
rept-stat-cluster:dpc=20-2-*
```

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA          ORIG    PST    SST    AST    PROV  X-LIST
  020-002-*    CLUST  IS-NR  Allowed ACCESS    2    3
ALARM STATUS      = No Alarms.
RTE COST  LSN    APCA          LS STAT  NON-ADJ  ROUTE STAT
  1   10  lsnppp  003-003-003  Allowed  Allowed  Allowed
  2   --  -----  ***-***-***  -----  -----  -----
  3   --  -----  ***-***-***  -----  -----  -----
  4   --  -----  ***-***-***  -----  -----  -----
  5   --  -----  ***-***-***  -----  -----  -----
  6   --  -----  ***-***-***  -----  -----  -----
```

```
Command Completed.
```

```
;
```

This example shows the output when an x-list cluster member DPC is specified. The report shows x-list related information (X-REASON, X-TIME) plus the route information. The report identifies the specified DPC as an x-list DPC.

```
rept-stat-cluster:dpc=20-2-5
```

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA          ORIG    PST    SST    AST    X-REASON X-TIME
  020-002-005  X-LIST IS-ANR  Restrict ACCESS    RT    08:20
ALARM STATUS      = No Alarms.
RTE COST  LSN    APCA          LS STAT  NON-ADJ  ROUTE STAT
  1   10  lsnppp  003-003-003  Allowed  Allowed  Allowed
  2   --  -----  ***-***-***  -----  -----  -----
  3   --  -----  ***-***-***  -----  -----  -----
  4   --  -----  ***-***-***  -----  -----  -----
  5   --  -----  ***-***-***  -----  -----  -----
  6   --  -----  ***-***-***  -----  -----  -----
```

```
Command Completed.
```

```
;
```

This example shows the output when a cluster DPC and mode=full is specified. The report shows summary status information for the provisioned and x-list DPCs that are members of the specified cluster.

```
rept-stat-cluster:dpc=20-2-*:mode=full
```

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA          ORIG    PST    SST    AST    PROV  X-LIST
  020-002-*    CLUST  IS-NR  Allowed ACCESS    2    3
ALARM STATUS      = No Alarms.
RTE COST  LSN    APCA          LS STAT  NON-ADJ  ROUTE STAT
  1   10  lsnppp  003-003-003  Allowed  Allowed  Allowed
  2   --  -----  ***-***-***  -----  -----  -----
```

```

3  --  -----  ***-***-***  -----  -----  -----
4  --  -----  ***-***-***  -----  -----  -----
5  --  -----  ***-***-***  -----  -----  -----
6  --  -----  ***-***-***  -----  -----  -----
DPCA          ORIG    PST    SST    AST    X-REASON X-TIME
020-002-*    CLUST  IS-NR  Allowed ACCESS -----
020-002-001  PROV   OOS-MT Prohibit INACCESS -----
020-002-002  PROV   IS-ANR Restrict ACCESS -----
020-002-126  X-LIST IS-ANR Restrict ACCESS RT      08:20
020-002-127  X-LIST OOS-MT Prohibit INACCESS CR      ----
020-002-128  X-LIST IS-ANR Restrict ACCESS CG RT   05:40
CIRCULAR ROUTING
XMIT LSN= ----- RC=--
RCV LSN= -----
MEMBER = ***-***-***

```

Command Completed.

;

This example shows the output when the `stat` parameter is specified. Only those clusters having a primary state (PST) matching the specified value are reported.

```
rept-stat-cluster:stat=alminh
```

```

rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
DPCA          ORIG    PST    SST    AST    PROV  XLIST
020-022-*    CLUST  IS-NR  Allowed ALMINH  2     3

```

Command Completed.

;

This example shows the output when specifying the `dpc` and `mode=full` parameters re specified. If a circular routing alarm is raised for a cluster member DPC, specifying these parameters displays information pertinent to the cluster member that is experiencing the circular routing condition.

```
rept-stat-cluster:dpc=20-2-127:mode=full
```

```

rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
DPCA          ORIG    PST    SST    AST
020-002-127  PROV   OOS-MT Prohibit INACCESS
ALARM STATUS = *C 0319 Circular routing detected
RTE COST LSN    APCA          LS STAT  NON-ADJ  ROUTE STAT
1  10  lsnppp  003-003-003  Allowed  Allowed  Allowed
2  --  -----  ***-***-***  -----  -----  -----
3  --  -----  ***-***-***  -----  -----  -----
4  --  -----  ***-***-***  -----  -----  -----
5  --  -----  ***-***-***  -----  -----  -----
6  --  -----  ***-***-***  -----  -----  -----
DPCA          ORIG    PST    SST    AST    X-REASON X-TIME
020-002-*    CLUST  IS-NR  Allowed ACCESS -----
020-002-001  PROV   OOS-MT Prohibit ACCESS -----

```

```

020-002-002 PROV IS-ANR Restrict ACCESS -----
020-002-126 X-LIST IS-ANR Restrict ACCESS RT 08:20
020-002-127 X-LIST OOS-MT Prohibit INACCESS CG CR -----
020-002-128 X-LIST IS-ANR Restrict ACCESS CR CG RT 05:40

```

```

CIRCULAR ROUTING
XMIT LSN= lsnppp RC---
RCV LSN= lsn01a
MEMBER = ***-***-***

```

Command Completed.

;

If a circular routing alarm is raised for a cluster DPC, then specifying the `dpc` and `mode=full` parameters displays information pertinent to the cluster member experiencing the circular routing condition. The value for the `MEMBER` field in this example represents the cluster member that had the circular routing condition. This is the same member for which an x-list entry could not be created.

 **Note:**

The circular routing member information shown in this output report displays as `***-***-***` if the specified DPC is not a cluster DPC or the information is not known by maintenance at the time the report is generated.

```
rept-stat-cluster:dpc=20-2-*:mode=full
```

```

rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
DPCA          ORIG    PST     SST      AST      PROV  X-LIST
020-002-*    CLUST  IS-NR   Allowed  ACCESS   2     3
ALARM STATUS = *C 0319 Circular routing detected
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1   10  lsnppp  003-003-003  Allowed  Allowed  Allowed
2   --  -----  ***-***-***  -----  -----  -----
3   --  -----  ***-***-***  -----  -----  -----
4   --  -----  ***-***-***  -----  -----  -----
5   --  -----  ***-***-***  -----  -----  -----
6   --  -----  ***-***-***  -----  -----  -----
DPCA          ORIG    PST     SST      AST      X-REASON X-TIME
020-002-*    CLUST  IS-NR   Allowed  ACCESS   -----  -----
020-002-001  PROV   OOS-MT  Prohibit INACCESS -----  -----
020-002-002  PROV   IS-ANR  Restrict ACCESS   -----  -----
020-002-126  X-LIST IS-ANR  Restrict ACCESS   RT     08:20
020-002-127  X-LIST OOS-MT  Prohibit INACCESS CR     -----
020-002-128  X-LIST IS-ANR  Restrict ACCESS   CG RT  05:40
CIRCULAR ROUTING
XMIT LSN= lsnppp RC---
RCV LSN= lsn01a
MEMBER = 020-002-129

```

Command Completed.

;

This example includes private point codes:

```
rept-stat-cluster:dpc=20-2-*:mode=full
```

```
rlghncxa03w 05-01-06 10:09:59 EST EAGLE 34.0.0
DPCA          ORIG   PST     SST       AST       PROV  XLIST
020-002-*     CLUST OOS-MT Idle     INACCESS  0      0
ALARM STATUS      = No Alarms.
RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1   10   ls11345678  p-001-001-003 Allowed  Allowed  Allowed
2   --   -----  *****_***_*** -----  -----  -----
3   --   -----  *****_***_*** -----  -----  -----
4   --   -----  *****_***_*** -----  -----  -----
5   --   -----  *****_***_*** -----  -----  -----
6   --   -----  *****_***_*** -----  -----  -----
DPCA          ORIG   PST     SST       AST       X-REASON X-TIME
020-002-*     CLUST IS-NR  Allowed  ACCESS  -----  -----
p-020-002-001 PROV  OOS-MT Prohibit INACCESS -----  -----
p-020-002-002 PROV  IS-ANR Restrict ACCESS  -----  -----
020-002-126 X-LIST IS-ANR Restrict ACCESS  RT      08:20
020-002-127 X-LIST OOS-MT Prohibit INACCESS CR      -----
020-002-128 X-LIST IS-ANR Restrict ACCESS  CG RT   05:40
CIRCULAR ROUTING INFO:
XMIT LSN----- RC---
RCV  LSN-----
MEMBER =-----
```

Command Completed.

;

Legend

- **ORIG**—Origination of the destination point code being reported. Possible values that can appear in the column are:
- **CLUST**—Entry is a provisioned cluster (*ni-nc-**) DPC
- **PROV**—Entry is a provisioned cluster member (*ni-nc-ncm*)
- **X-LIST**—Entry is a non-provisioned (i.e. dynamically-created) x-list cluster member
- **PST**—Primary state of the cluster. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the cluster. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the cluster. See [Possible Values for PST/SST/AST](#).
- **X-REASON**—Reasons that the X-LIST entries currently exist. The two-letter indicator values that can appear in this column are:
 - **RT**—X-LIST entry created due to routing
 - **CG**—X-LIST entry created due to congestion
 - **CR**—X-LIST entry created due to circular routing

The circular routing transmit/receive linkset information shown in the `mode=full` detailed output report displays as “-----” if no circular routing alarm exists for the DPC or the information is not known by maintenance at the time the report is generated.

Related Topics

- [chg-feat](#)
- [chg-stpopts](#)
- [rept-stat-cluster](#)
- [rtrv-stpopts](#)

4.1.401 rept-stat-db

Use this command to display a report showing various status indicators for the active and standby OAM database and the status of the database on each of the network cards.

If the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, EIR, G-Flex, G-Port, INP, LNP ELAP Configuration, Prepaid SMS Intercept Ph1 (PPSMS), SIP NP, or V-Flex feature is turned on, or the ATINP feature is enabled, then the status of the MPS databases and Service Module cards is displayed.

Parameters**db (optional)**

Report section or sections to display in the output. The content of each section depends on the specified or default value of the `display` parameter. MPS output appears only if a feature that uses the MPS is turned on in the system (A-Port, AINPQ, Diameter S13/S13' Interface for EIR, EIR, G-Flex, G-Port, INP, PPSMS, SIP NP, V-Flex, or the LNP ELAP Configuration controlled feature) or the ATINP feature is enabled.

Range:***all***

displays database and card output for the STP and MPS report sections

mps

displays database and card output for the MPS report section

stp

displays database and card output for the STP report section

gtt

displays database and card output for the GTT-enabled IPSPG card report section

Default:

all

display (optional)

Output type.

Range:***all***

Displays operational status of all databases (MASP A, MASP B, and MDAL) and all cards equipped in the database on the system.

brief

Displays operational status of databases in the active and standby MASP and of MPS databases if a feature that uses the MPS is turned on

except

Displays operational status information contained in the `display=brief` output along with the cards whose database level does not match the active fixed disk current partition or active MPS database

version

Displays the same information that is displayed with the `display=all` parameter except that the individual database status column is replaced with the database format version and status. Details of the status of the backup databases are displayed for MASP cards. No version information is shown for MPS databases; use the `rept-stat-mps` command.

Default:

brief

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118, 1113, 1115

Example

```
rept-stat-db
rept-stat-db:display=all
rept-stat-db:loc=1207
rept-stat-db:db=stp
rept-stat-db:db=gtt
```

Dependencies

The `db` and `loc` parameters cannot be specified at the same time. Also, `display=except` and `display=version` cannot be specified with `db=gtt`.

2155 E2155 Cmd Rej: Invalid parameter combination specified

For E5-OAM cards, values of 1117 and 1118 cannot be specified for the `loc` parameter.

2154 E2154 Cmd Rej: Card slot reserved by system

One of the following features must be turned on, the ATINP feature must be enabled, or at least one ENUM card must be provisioned before the `db=mps` parameter can be specified:

- A-Port
- AINPQ
- EIR
- G-Flex
- G-Port
- INP
- LNP ELAP Configuration
- Prepaid SMS Intercept Ph1
- SIP NP
- V-Flex

4102 E4102 Cmd Rej: At least one EPAP DB feature/LNP ELAP CFG MPS based feature must be enabled/ON

The shelf and card must be equipped.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The card location slot must be between 1 and 18, but not 9 or 10.

2153 E2153 Cmd Rej: Card slot location out of range

The shelf location must be 11xx, 12xx, 13xx, 21xx, 22xx, 23xx, 31xx, 32xx, 33xx, 41xx, 42xx, 43xx, 51xx, 52xx, 53xx, or 61xx.

2152 E2152 Cmd Rej: Shelf ID out of range

The frame value of the shelf location parameter (`loc`) must be within the valid range.

2150 E2150 Cmd Rej: Frame ID out of range

A valid value must be specified for the display parameter.

E2044 Cmd Rej: DisplayType value is undefined - display

Notes

If the `display`, `db`, or `loc` parameter is specified and the database for a particular card location is not accessible, hyphens are displayed in place of the data.

The output of the `rept-stat-db` command with no parameters specified or with the `display=brief` parameter shows the following information:

- Activity status of both the active and standby MASP, the date and time the last backup was performed on the removable drive (if inserted) and the fixed disk backup partition, coherency, the number of updates (level) to the backup partition of the fixed disk, and the current partition of the fixed disk
- If the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, EIR, G-Flex, G-Port, INP, PPSMS, SIPNP (if used with EPAP), or V-Flex feature is turned on, or the ATINP feature is enabled, EPAP A and EPAP B database status followed by Service Module card database status

- If the SIP NP (if used with ELAP) or LNP ELAP Configuration controlled feature is turned on, ELAP A and ELAP B database status followed by Service Module card database status
- If one or more GTT-enabled IPSC cards are configured, the GTT database status for all such cards

The output when the `display=except` parameter is specified shows the coherency and the number of updates for all the cards whose database level does not match the active fixed disk current partition, reference database level, or is incoherent. All databases that are not accessible are also displayed. In addition, the time stamp for the last database update is displayed for every card.

The output when the `display=all` parameter is specified shows the coherency and the number of updates for all of the distributed databases. In addition, the time stamp for the last database update is displayed for every card.

The output when the `display=version` parameter is specified shows the coherency and the number of updates for the active and standby databases, along with the database version and the operational status of each of these databases. If the LNP feature is turned on, the version of the LNP database is shown. No version is shown for EPAP or ELAP databases; use the `rept-stat-mps` command to display version information for these databases.

The output when the `loc` parameter specifies an equipped card shows the coherency and the number of updates to its database. In addition, the time stamp for the last database update is displayed for the specific card location.

The `db` parameter is used to limit the output of the command to the EAGLE STP information or the MPS information or GTT information for an IPSC card. The information is displayed as indicated by the `display` parameter value (`display=version` is not valid for `db=mps` and `db=gtt`; the command does not display the MPS database versions). The default `db` parameter value is `all`, which displays the information for the STP and MPS databases and cards as indicated by the `display` parameter value.

Output

Note:

Removable drive database information is shown only for the Active OAM slot, whether or not a removable drive is inserted into the standby OAM.

Note:

A status of 'OK' indicates that the database has no errors.

This example shows the output for a specified card. The disk is OFF-LINE indicating the disk has been dismantled. This is not necessarily a problem.

```
rept-stat-db:loc=1114
```

```
tekelecstp 08-08-29 08:38:25 NZST  EAGLE 39.2.0
CARD/APPL LOC  C  T  LEVEL          TIME LAST UPDATE  EXCEPTION
```

```

-----
-----
TDM-CRNT  1114  -  -  -  -  -  -  -  OFF-LINE
TDM-BKUP  1114  -  -  -  -  -  -  -
;

```

This example shows the output for a specified Service Module card used for EPAP or ELAP. The A-Port, AINPQ, Diameter S13/S13' Interface for EIR, EIR, G-Flex, G-Port, INP, LNP ELAP Configuration, PPSMS, SIP NP, or V-Flex feature is turned on, or the ATINP feature is enabled.

```
rept-stat-db:loc=1201
```

```

tekelecstp 08-08-29 08:38:25 NZST  EAGLE 39.2.0
CARD/APPL  LOC  C  T  LEVEL          TIME LAST UPDATE  EXCEPTION
-----
-----
VSCCP      1201  Y  N  12          08-05-29 08:53:48  -

                                EAGLE RTDB REPORT
CARD/APPL  LOC  C  BIRTHDATE          LEVEL          EXCEPTION
-----
-----
VSCCP      1201  Y  08-05-29 16:12:50      12345          -
;

```

This example shows the output when the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, EIR, G-Flex, G-Port, INP, LNP ELAP Configuration, PPSMS, SIP NP, and V-Flex features are not turned on, and the ATINP feature is not enabled:

```
rept-stat-db
```

```

tekelecstp 08-08-29 08:38:25 NZST  EAGLE 39.2.0
DATABASE STATUS: >> OK <<
          TDM 1114 ( ACTV )          TDM 1116 ( STDBY)
          C  LEVEL    TIME LAST BACKUP    C  LEVEL    TIME LAST
BACKUP
-----
-----
      FD BKUP Y          11 08-05-29 08:20:13 NZST Y          11 08-05-29
08:20:13 NZST
      FD CRNT Y          11          Y          11
          MDAL 1117
          -
      RD BKUP Y          1 08-05-29 15:44:20 NZST
;

```

This example shows the output when the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, EIR, G-Flex, G-Port, INP, LNP ELAP Configuration, PPSMS, SIP NP, and V-Flex features are not turned on, and the ATINP feature is not enabled:

```
rept-stat-db:display=all
```

```
tekelecstp 08-08-29 08:39:24 NZST EAGLE 39.2.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )                 TDM 1116 ( STDBY)
      C  LEVEL    TIME LAST BACKUP    C  LEVEL    TIME LAST BACKUP
      -----
-----
      FD BKUP Y          11 08-05-29 08:20:13 NZST Y          11 08-05-29 08:20:13
NZST
      FD CRNT Y          11                          Y          11
      MDAL 1117
      -----
RD BKUP Y          1 08-05-29 15:44:20 NZST
CARD/APPL  LOC   C  T  LEVEL          TIME LAST UPDATE  EXCEPTION
-----
SS7ANSI    1102  Y  N  11          08-05-29 08:04:00      -
SS7ANSI    1103  Y  N  11          08-05-29 08:04:00      -
VSCCP      1105  Y  N  11          08-05-29 08:04:00      -
TDM-CRNT   1114  Y  N  11          08-05-29 08:04:00      -
TDM-BKUP   1114  Y  -  11          08-05-29 08:04:00      -
TDM-CRNT   1116  Y  N  11          08-05-29 08:04:00      -
TDM-BKUP   1116  Y  -  11          08-05-29 08:04:00      -
MDAL       1117  Y  -  1          08-05-29 15:06:29    DIFF LEVEL
VSCCP      1201  Y  N  11          08-05-29 08:04:00      -
VSCCP      1203  Y  N  11          08-05-29 08:04:00      -
;
```

This example shows the output when the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, EIR, G-Flex, G-Port, INP, LNP ELAP Configuration, PPSMS, SIP NP, and V-Flex features are not turned on, and the ATINP feature is not enabled:

**Note:**

This command does not display version information for MPS databases. Use the `rept-stat-mps` command to display MPS database version information.

```
rept-stat-db:display=version
```

```
tekelecstp 08-08-29 08:51:21 NZST EAGLE 39.2.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )                 TDM 1116 ( STDBY)
      C  LEVEL    TIME LAST BACKUP    C  LEVEL    TIME LAST BACKUP
      -----
-----
      FD BKUP Y          11 08-05-29 08:20:13 NZST Y          11 08-05-29 08:20:13
NZST
      FD CRNT Y          11                          Y          11
      MDAL 1117
      -----
```

```
RD BKUP Y          1 08-05-24 15:44:20 NZST
;
```

This example shows the output when the LNP feature is turned on:

```
rept-stat-db:display=version
```

```
tekelecstp 02-10-29 08:51:21 NZST EAGLE 30.0.0
DATABASE STATUS: >> OK <<
          TDM 1114 ( ACTV )          TDM 1116 ( STDBY)
          C  LEVEL    TIME LAST BACKUP    C  LEVEL    TIME LAST
BACKUP
-----
      FD BKUP Y          11 02-10-29 08:20:13 NZST Y          11 02-10-29
08:20:13 NZST
      FD CRNT Y          11                      Y          11
      MDAL 1117
      - -----
      RD BKUP Y          1 02-10-24 15:44:20 NZST
      CARD/APPL LOC  C  T  LEVEL          TIME LAST UPDATE    VERSION
STATUS
-----
      TDM-CRNT  1114  Y  N  11          02-10-29 08:04:00  111-000-000
NORMAL
      LNP
      TDM-BKUP  1114  Y  -  11          02-10-29 08:04:00  111-000-000
NORMAL
      LNP
      TDM-CRNT  1116  Y  N  11          02-10-29 08:04:00  111-000-000
NORMAL
      LNP
      TDM-BKUP  1116  Y  -  11          02-10-29 08:04:00  111-000-000
NORMAL
      LNP
      MDAL      1117  Y  -  1          02-10-24 15:06:29  114-000-000
NORMAL
      LNP
      000-014-000
;
```

This example shows the output when the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, G-Flex, G-Port, EIR, INP, LNP ELAP Configuration, PPSMS, SIP NP, and V-Flex features are not turned on, and the ATINP feature is not enabled:

```
rept-stat-db:display=except
```

```
tekelecstp 08-08-29 08:55:54 NZST EAGLE 39.2.0
DATABASE STATUS: >> OK <<
          TDM 1114 ( ACTV )          TDM 1116 ( STDBY)
          C  LEVEL    TIME LAST BACKUP    C  LEVEL    TIME LAST
BACKUP
```

```

-----
      FD BKUP Y          11 08-05-29 08:20:13 NZST Y          11 08-05-29 08:20:13
NZST
      FD CRNT Y          12                                Y          12
      MDAL 1117
-----
      RD BKUP Y          1 07-10-24 15:44:20 NZST
      CARD/APPL  LOC    C  T  LEVEL          TIME LAST UPDATE    EXCEPTION
-----
      SS7ANSI    1103   Y  N  10           08-05-29 08:03:48    DIFF LEVEL
      TDM-BKUP   1114   Y  -  11           08-05-29 08:04:00    DIFF LEVEL
      TDM-BKUP   1116   Y  -  11           08-05-29 08:04:00    DIFF LEVEL
      MDAL       1117   Y  -  1           08-05-24 15:06:29    DIFF LEVEL
;

```

This example shows the output when the LNP ELAP Configuration controlled feature is turned on, and ELAP is used:

rept-stat-db

```

tekelecstp 02-10-29 08:39:24 NZST EAGLE 30.0.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )          TDM 1116 ( STDBY)
      C  LEVEL    TIME LAST BACKUP    C  LEVEL    TIME LAST BACKUP
-----
      FD BKUP Y          11 02-10-29 08:20:13 NZST Y          11 02-10-29 08:20:13
NZST
      FD CRNT Y          11                                Y          11
      MDAL 1117
-----
      RD BKUP Y          1 02-10-24 15:44:20 NZST
      ELAP A ( ACTV )
      C  BIRTHDATE          LEVEL          EXCEPTION
      -  - - - - - - - - - - - - - - - - - - - - - - - - - - - - -
      RTDB                Y  02-10-29 08:20:04          12345          -
      RTDB-EAGLE          02-10-29 08:20:04          12345          -
      ELAP B ( STDBY )
      C  BIRTHDATE          LEVEL          EXCEPTION
      -  - - - - - - - - - - - - - - - - - - - - - - - - - - - - -
      RTDB                Y  02-10-29 08:20:04          12345          -
      RTDB-EAGLE          02-10-29 08:20:04          12345          -
;

```

This example shows the output when the LNP ELAP Configuration controlled feature is turned on, and ELAP is used:

rept-stat-db:display=all

```

tekelecstp 02-10-29 08:39:24 NZST EAGLE 30.0.0
DATABASE STATUS: >> OK <<

```

```

TDM 1114 ( ACTV )
C  LEVEL      TIME LAST BACKUP
BACKUP
-----
FD BKUP Y      11 02-10-29 08:20:13 NZST Y      11 02-10-29
08:20:13 NZST
FD CRNT Y      11
MDAL 1117
-----
RD BKUP Y      1 02-10-24 15:44:20 NZST
CARD/APPL  LOC  C  T  LEVEL      TIME LAST UPDATE  EXCEPTION
-----
SS7ANSI    1102 Y  N  11      02-10-29 08:04:00  -
SS7ANSI    1103 Y  N  11      02-10-29 08:04:00  -
VSCCP      1105 Y  N  11      02-10-29 08:04:00  -
TDM-CRNT   1114 Y  N  11      02-10-29 08:04:00  -
TDM-BKUP   1114 Y  -  11      02-10-29 08:04:00  -
TDM-CRNT   1116 Y  N  11      02-10-29 08:04:00  -
TDM-BKUP   1116 Y  -  11      02-10-29 08:04:00  -
MDAL        1117 Y  -  1      02-10-24 15:06:29  DIFF LEVEL
VSCCP      1201 Y  N  11      02-10-29 08:04:00  -
VSCCP      1203 Y  N  11      02-10-29 08:04:00  -

ELAP A ( ACTV )
C  BIRTHDATE      LEVEL      EXCEPTION
-----
RTDB          Y  02-10-29 08:20:04  12345      -
RTDB-EAGLE   02-10-29 08:20:04  12345      -

ELAP B ( STDBY )
C  BIRTHDATE      LEVEL      EXCEPTION
-----
RTDB          Y  02-10-29 08:20:04  12345      -
RTDB-EAGLE   02-10-29 08:20:04  12345      -

EAGLE RTDB REPORT
CARD/APPL  LOC  C  BIRTHDATE      LEVEL      EXCEPTION
-----
VSCCP      1201 Y  02-10-29 08:20:04  12345      -
VSCCP      1203 Y  02-10-29 08:20:04  12345      -
VSCCP      1105 Y  02-10-29 08:20:04  12345      -

```

;

This example shows the output when the LNP ELAP Configuration controlled feature is turned on, and ELAP is used.

```
rept-stat-db:display=except
```

```

tekelecstp 02-10-29 08:55:54 NZST EAGLE 30.0.0
DATABASE STATUS: >> OK <<
TDM 1114 ( ACTV )
C  LEVEL      TIME LAST BACKUP
BACKUP
-----
TDM 1116 ( STDBY )
C  LEVEL      TIME LAST
-----

```

```

      FD BKUP Y          11 02-10-29 08:20:13 NZST Y          11 02-10-29 08:20:13
NZST
      FD CRNT Y          12                                Y          12
      MDAL 1117
      - -----
RD BKUP Y          1 02-10-24 15:44:20 NZST
CARD/APPL  LOC  C  T  LEVEL          TIME LAST UPDATE  EXCEPTION
-----
SS7ANSI     1103 Y  N  10          02-10-29 08:03:48  DIFF LEVEL
TDM-BKUP    1114 Y  -  11          02-10-29 08:04:00  DIFF LEVEL
TDM-BKUP    1116 Y  -  11          02-10-29 08:04:00  DIFF LEVEL
MDAL        1117 Y  -  1          02-10-24 15:06:29  DIFF LEVEL

      ELAP A ( ACTV )
      C  BIRTHDATE          LEVEL          EXCEPTION
      - -----
RTDB         Y  02-10-29 08:20:04          12345          -
RTDB-EAGLE   Y  02-10-29 08:20:04          12345          -

      ELAP B ( STDBY )
      C  BIRTHDATE          LEVEL          EXCEPTION
      - -----
RTDB         Y  02-10-29 08:20:04          12345          -
RTDB-EAGLE   Y  02-10-29 08:20:04          12345          -

      EAGLE RTDB REPORT
CARD/APPL  LOC  C  BIRTHDATE          LEVEL          EXCEPTION
-----
VSCCP      1203 Y  02-10-29 08:20:04          12340  DIFF LEVEL
;

```

This example shows the output when the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, G-Flex, G-Port, EIR, INP, PPSMS, SIP NP, or V-Flex feature is turned on, or the ATINP feature is enabled, and EPAP is used:

rept-stat-db

```

tekelecstp 16-09-01 12:44:22 EST  EAGLE 46.5.0.0.0-70.4.0
  DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )          TDM 1116 ( STDBY)
      C  LEVEL  TIME LAST BACKUP  C  LEVEL  TIME LAST BACKUP
      - -----
-----
      FD BKUP Y          11 16-09-01 12:44:22 EST  Y          11 16-09-01 12:44:22
EST
      FD CRNT Y          11                                Y          11
      GTT     Y          5651                            Y          5651
      - -----
      RD BKUP Y          1 16-09-01 12:44:22 EST
;

```

This example shows the output when the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, EIR, G-Flex, G-Port, INP, PPSMS, SIP NP, or V-Flex feature is turned on, or the ATINP feature is enabled, and EPAP is used:

```
rept-stat-db:display=all:db=stp
```

```
tekelecstp 16-09-01 12:44:22 EST   EAGLE 46.5.0.0.0-70.4.0
DATABASE STATUS: >> OK <<
          TDM 1114 ( ACTV )                TDM 1116 ( STDBY)
          C  LEVEL    TIME LAST BACKUP    C  LEVEL    TIME LAST
BACKUP
-----
          FD BKUP Y      11 16-09-01 12:44:22 EST Y      11 16-09-01
12:44:22 EST
          FD CRNT Y      11                      Y      11
          GTT    Y      5651                      Y      5651
          - - - - -
          RD BKUP Y      1 16-09-01 12:44:22 EST
CARD/APPL LOC  C  T  LEVEL          TIME LAST UPDATE    EXCEPTION
-----
          SS7ANSI 1102 Y  N  11          16-09-01 12:44:22    -
          SS7ANSI 1103 Y  N  11          16-09-01 12:44:22    -
          VSCCP   1105 Y  N  11          16-09-01 12:44:22    -
          TDM-CRNT 1114 Y  N  11          16-09-01 12:44:22    -
          TDM-BKUP 1114 Y  -  11          16-09-01 12:44:22    -
          TDM-CRNT 1116 Y  N  11          16-09-01 12:44:22    -
          TDM-BKUP 1116 Y  -  11          16-09-01 12:44:22    -
          VSCCP   1201 Y  N  11          16-09-01 12:44:22    -
          VSCCP   1203 Y  N  11          16-09-01 12:44:22    -
;

```

This example shows the output when the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, EIR, G-Flex, G-Port, INP, PPSMS, SIP NP, or V-Flex feature is turned on, or the ATINP feature is enabled, and EPAP is used:

```
rept-stat-db:display=except
```

```
tekelecstp 08-08-29 08:55:54 NZST  EAGLE 39.2.0
DATABASE STATUS: >> OK <<
          TDM 1114 ( ACTV )                TDM 1116 ( STDBY)
          C  LEVEL    TIME LAST BACKUP    C  LEVEL    TIME LAST
BACKUP
-----
          FD BKUP Y      11 08-05-29 08:20:13 NZST Y      11 08-05-29
08:20:13 NZST
          FD CRNT Y      12                      Y      12
          MDAL 1117
          - - - - -
          RD BKUP Y      1 02-10-24 15:44:20 NZST
CARD/APPL LOC  C  T  LEVEL          TIME LAST UPDATE    EXCEPTION
-----

```



```

-----
SS7ANSI      1103  Y  N  10          08-05-29 08:03:48  DIFF LEVEL
TDM-BKUP     1114  Y  -  11          08-05-29 08:04:00  DIFF LEVEL
TDM-BKUP     1116  Y  -  11          08-05-29 08:04:00  DIFF LEVEL
MDAL         1117  Y  -  1          08-05-29 15:06:29  DIFF LEVEL

          EPAP A ( ACTV )
          C  BIRTHDATE          LEVEL          EXCEPTION
          -  -----
PDB          Y  08-05-29 08:20:04      12345          -
RTDB         Y  08-05-29 08:20:04      12345          -
RTDB-EAGLE   Y  08-05-29 08:20:04      12345          -

          EPAP B ( STDBY )
          C  BIRTHDATE          LEVEL          EXCEPTION
          -  -----
PDB          Y  08-05-29 08:20:04      12345          -
RTDB         Y  08-05-29 08:20:04      12345          -
RTDB-EAGLE   Y  08-05-29 08:20:04      12345          -

          EAGLE RTDB REPORT
          CARD/APPL  LOC  C  BIRTHDATE          LEVEL          EXCEPTION
          -----
VSCCP        1203  Y  08-05-29 08:20:04      12340  DIFF LEVEL
;

```

This example shows the output when the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, G-Flex, G-Port, EIR, INP, LNP ELAP Configuration, PPSMS, SIPNP, and V-Flex features are not turned on, and the ATINP feature is not enabled:

rept-stat-db:db=stp

```

tekelecstp 08-08-29 08:39:24 NZST  EAGLE 39.2.0
DATABASE STATUS: >> OK <<
          TDM 1114 ( ACTV )          TDM 1116 ( STDBY )
          C  LEVEL    TIME LAST BACKUP    C  LEVEL    TIME LAST BACKUP
          -  -----
-----
          FD BKUP Y          11 08-05-29 08:20:13 NZST Y          11 08-05-29 08:20:13
NZST
          FD CRNT Y          11
          MDAL 1117
          -  -----
          RD BKUP Y          1 08-05-29 15:44:20 NZST
;

```

This example shows the output when the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, EIR, G-Flex, G-Port, INP, LNP ELAP Configuration, PPSMS, SIP NP, and V-Flex features are not turned on, and the ATINP feature is not enabled:

rept-stat-db:display=all:db=stp

```

tekelecstp 08-08-29 08:39:24 NZST  EAGLE 39.2.0
DATABASE STATUS: >> OK <<
          TDM 1114 ( ACTV )          TDM 1116 ( STDBY )

```

```

          C   LEVEL   TIME LAST BACKUP   C   LEVEL   TIME LAST
BACKUP   - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -
-----
          FD BKUP Y          11 07-08-29 08:20:13 NZST Y          11 07-08-29
08:20:13 NZST
          FD CRNT Y          11                                Y          11
          MDAL 1117
          - - - - -
          RD BKUP Y          1 02-10-24 15:44:20 NZST
CARD/APPL LOC   C   T   LEVEL           TIME LAST UPDATE   EXCEPTION
-----
-----
          SS7ANSI   1102 Y   N   11           07-08-29 08:04:00       -
          SS7ANSI   1103 Y   N   11           07-08-29 08:04:00       -
          VSCCP     1105 Y   N   11           07-08-29 08:04:00       -
          TDM-CRNT  1114 Y   N   11           07-08-29 08:04:00       -
          TDM-BKUP  1114 Y   -   11           07-08-29 08:04:00       -
          TDM-CRNT  1116 Y   N   11           07-08-29 08:04:00       -
          TDM-BKUP  1116 Y   -   11           07-08-29 08:04:00       -
          MDAL      1117 Y   -   1           07-08-24 15:06:29     DIFF LEVEL
          VSCCP     1201 Y   N   11           07-08-29 08:04:00       -
          VSCCP     1203 Y   N   11           07-08-29 08:04:00       -
;

```

This example shows the output when the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, G-Flex, G-Port, EIR, INP, LNP ELAP Configuration, PPSMS, SIP NP, and V-Flex features are not turned on and the ATINP feature is not enabled:

```
rept-stat-db:display=except:db=stp
```

```

tekelecstp 08-08-29 08:55:54 NZST EAGLE 39.2.0
DATABASE STATUS: >> OK <<
          TDM 1114 ( ACTV )                                TDM 1116 ( STDBY)
          C   LEVEL   TIME LAST BACKUP   C   LEVEL   TIME LAST
BACKUP   - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -
-----
          FD BKUP Y          11 08-05-29 08:20:13 NZST Y          11 08-05-29
08:20:13 NZST
          FD CRNT Y          12                                Y          12
          MDAL 1117
          - - - - -
          RD BKUP Y          1 08-05-24 15:44:20 NZST
CARD/APPL LOC   C   T   LEVEL           TIME LAST UPDATE   EXCEPTION
-----
-----
          SS7ANSI   1103 Y   N   10           08-05-29 08:03:48     DIFF LEVEL
          TDM-BKUP  1114 Y   -   11           08-05-29 08:04:00     DIFF LEVEL
          TDM-BKUP  1116 Y   -   11           08-05-29 08:04:00     DIFF LEVEL
          MDAL      1117 Y   -   1           08-05-29 15:06:29     DIFF LEVEL
;

```

This example shows the output when the LNP ELAP Configuration controlled feature is turned on, and ELAP is used:

```
rept-stat-db:db=mps
```

```
tekelecstp 02-10-29 08:55:54 NZST EAGLE 30.0.0
      ELAP A ( ACTV )
      C BIRTHDATE          LEVEL          EXCEPTION
      - - - - -
RTDB      Y 02-10-29 08:20:04      12345      -
RTDB-EAGLE      02-10-29 08:20:04      12345      -
      ELAP B ( STDBY )
      C BIRTHDATE          LEVEL          EXCEPTION
      - - - - -
RTDB      Y 02-10-29 08:20:04      12345      -
RTDB-EAGLE      02-10-29 08:20:04      12345      -
;
```

This example shows the output when the LNP ELAP Configuration feature is turned on, and ELAP is used. Card 1203 indicates a value 12 in the exception column. The value indicates the number of times that the Corruption Cross Correction function has corrected the card during the time that the card has been in service. More specifically, the card has encountered 12 corrupted records and has subsequently repaired them. This value persists until the card is reset.

```
rept-stat-db:display=all:db=mps
```

```
tekelecstp 02-10-29 08:55:54 NZST EAGLE 31.6.0
      ELAP A ( ACTV )
      C BIRTHDATE          LEVEL          EXCEPTION
      - - - - -
RTDB      Y 02-10-29 08:20:04      12345      -
RTDB-EAGLE      02-10-29 08:20:04      12345      -
      ELAP B ( STDBY )
      C BIRTHDATE          LEVEL          EXCEPTION
      - - - - -
RTDB      Y 02-10-29 08:20:04      12345      -
RTDB-EAGLE      02-10-29 08:20:04      12345      -
      EAGLE RTDB REPORT
      CARD/APPL  LOC  C BIRTHDATE          LEVEL          EXCEPTION          IN-SRVC
      - - - - -
-----
VSCCP      1201  Y 02-10-29 08:20:04      12345      -          10d 23h
21m
VSCCP      1203  Y 02-10-29 08:20:04      12345      12          10d 23h
21m
VSCCP      1105  Y 02-10-29 08:20:04      12345      -          5d  3h
1m
VSCCP      1201  Y 02-10-29 08:20:04      12345      -
VSCCP      1203  Y 02-10-29 08:20:04      12345      -
VSCCP      1105  Y 02-10-29 08:20:04      12345      -
```

```

;
;

```

This example shows the output when the LNP ELAP Configuration feature is turned on, and ELAP is used:

```
rept-stat-db:display=except:db=mps
```

```

tekelecstp 02-10-29 08:55:54 NZST EAGLE 31.6.0
      ELAP A ( ACTV )
      C BIRTHDATE          LEVEL          EXCEPTION
      - - - - -
RTDB      Y 02-10-29 08:20:04      12345      -
RTDB-EAGLE Y 02-10-29 08:20:04      12345      -

      ELAP B ( STDBY )
      C BIRTHDATE          LEVEL          EXCEPTION
      - - - - -
RTDB      Y 02-10-29 08:20:04      12345      -
RTDB-EAGLE Y 02-10-29 08:20:04      12345      -

      EAGLE RTDB REPORT
      CARD/APPL LOC C BIRTHDATE          LEVEL          EXCEPTION      IN-
      SRVC
      - - - - -
VSCCP      1203 Y 02-10-29 08:20:04      12340      DIFF LEVEL
10d 23h 21m
;

```

This example shows the output when the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, G-Flex, G-Port, EIR, INP, PPSMS, SIP NP, or V-Flex feature is turned on, or the ATINP feature is enabled, and EPAP is used:

```
rept-stat-db:db=mps
```

```

tekelecstp 08-08-29 08:55:54 NZST EAGLE 39.2.0
      EPAP A ( ACTV )
      C BIRTHDATE          LEVEL          EXCEPTION
      - - - - -
PDB      Y 08-05-29 08:20:04      12345      -
RTDB      Y 08-05-29 08:20:04      12345      -
RTDB-EAGLE Y 08-05-29 08:20:04      12345      -

      EPAP B ( STDBY )
      C BIRTHDATE          LEVEL          EXCEPTION
      - - - - -
PDB      Y 08-05-29 08:20:04      12345      -
RTDB      Y 08-05-29 08:20:04      12345      -
RTDB-EAGLE Y 08-05-29 08:20:04      12345      -
;

```

This example shows the output when the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, EIR, G-Flex, G-Port, EIR, INP, PPSMS, SIP NP, or V-Flex feature is turned on, or the ATINP feature is enabled, and EPAP is used:

```
rept-stat-db:display=all:db=mps
```

```
tekelecstp 08-05-29 08:55:54 NZST EAGLE 39.2.0
      EPAP A ( ACTV )
      C BIRTHDATE          LEVEL          EXCEPTION
      - - - - -
PDB      Y 07-08-29 08:20:04      12345          -
RTDB     Y 07-08-29 08:20:04      12345          -
RTDB-EAGLE Y 07-08-29 08:20:04      12345          -

      EPAP B ( STDBY )
      C BIRTHDATE          LEVEL          EXCEPTION
      - - - - -
PDB      Y 07-08-29 08:20:04      12345          -
RTDB     Y 07-08-29 08:20:04      12345          -
RTDB-EAGLE Y 07-08-29 08:20:04      12345          -

      EAGLE RTDB REPORT
      CARD/APPL LOC C BIRTHDATE          LEVEL          EXCEPTION          IN-SRVC
      - - - - -
-----
VSCCP    1201 Y 07-08-29 08:20:04      12345          -          10d 23h
21m
VSCCP    1203 Y 07-08-29 08:20:04      12345          -          10d 23h
21m
VSCCP    1105 Y 07-08-29 08:20:04      12345          -          5d
3h 1m
;
```

This example shows the output when the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, EIR, G-Flex, G-Port, INP, PPSMS, SIP NP, or V-Flex feature is turned on, or the ATINP feature is enabled, and EPAP is used:

```
rept-stat-db:display=except:db=mps
```

```
tekelecstp 08-08-29 08:55:54 NZST EAGLE 39.2.0
      EPAP A ( ACTV )
      C BIRTHDATE          LEVEL          EXCEPTION
      - - - - -
PDB      Y 07-08-29 08:20:04      12345          -
RTDB     Y 07-08-29 08:20:04      12345          -
RTDB-EAGLE Y 07-08-29 08:20:04      12345          -

      EPAP B ( STDBY )
      C BIRTHDATE          LEVEL          EXCEPTION
      - - - - -
PDB      Y 07-08-29 08:20:04      12345          -
RTDB     Y 07-08-29 08:20:04      12345          -
RTDB-EAGLE Y 07-08-29 08:20:04      12345          -
```

```

                                EAGLE RTDB REPORT
CARD/APPL  LOC  C  BIRTHDATE          LEVEL      EXCEPTION  IN-
SRVC
-----
VSCCP      1203 Y  07-08-29 08:20:04      12340  DIFF LEVEL
10d 23h 21m
;

```

This example shows the output when E5-MCAP and E5-TDM cards are used:

```
rept-stat-db
```

```

e5oam 08-12-01 15:25:40 EST  EAGLE 40.1.0
DATABASE STATUS: >> OK <<
                TDM 1114 ( STDBY)                TDM 1116 ( ACTV )
                C  LEVEL      TIME LAST BACKUP      C  LEVEL      TIME LAST
BACKUP
-----
FD BKUP Y          36 08-11-19 09:38:25 EST  Y          36 08-11-19
09:38:25 EST
FD CRNT Y          39                                Y          39
                MCAP 1113                                MCAP 1115
                - -----
RD BKUP Y          36 08-11-19 09:27:17 EST  Y          36 08-11-19
09:27:17 EST
USB BKP -          -          -          -          Y          3 08-11-07
01:11:22 EST
;

```

```
rept-stat-db:display=all
```

```

e5oam 08-12-01 15:26:27 EST  EAGLE 40.1.0
DATABASE STATUS: >> OK <<
                TDM 1114 ( STDBY)                TDM 1116 ( ACTV )
                C  LEVEL      TIME LAST BACKUP      C  LEVEL      TIME LAST
BACKUP
-----
FD BKUP Y          36 08-11-19 09:38:25 EST  Y          36 08-11-19
09:38:25 EST
FD CRNT Y          39                                Y          39
                MCAP 1113                                MCAP 1115
                - -----
RD BKUP Y          36 08-11-19 09:27:17 EST  Y          36 08-11-19
09:27:17 EST
USB BKP -          -          -          -          -          -          -          -
;

CARD/APPL  LOC  C  T  LEVEL          TIME LAST UPDATE  EXCEPTION
-----

```

```

-----
MCP          1108 - - - - - - - -
IPS          1111 Y N 39      08-11-22 10:21:54 -
OAM-RMV      1113 Y - 36      08-11-18 23:36:19 DIFF LEVEL
TDM-CRNT     1114 Y N 39      08-11-22 10:21:54 -
TDM-BKUP     1114 Y - 36      08-11-18 23:36:38 DIFF LEVEL
OAM-RMV      1115 Y - 36      08-11-18 23:36:19 DIFF LEVEL
OAM-USB      1115 Y - 3      08-11-07 01:11:22 DIFF LEVEL
TDM-CRNT     1116 Y N 39      08-11-22 10:21:54 -
TDM-BKUP     1116 Y - 36      08-11-18 23:36:38 DIFF LEVEL

```

The examples show output when the Dual ExAP Config feature is enabled and both LNP and EPAP base features are turned ON:

rept-stat-db

```

exap 12-07-03 09:31:29 MST EAGLE 45.0.0-64.34.0
DATABASE STATUS: >> OK <<

          TDM 1114 ( STDBY )                TDM 1116 ( ACTV )
          C LEVEL TIME LAST BACKUP         C LEVEL TIME LAST BACKUP
          - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -
-----
FD BKUP Y      1 - - - - - Y      1 - - - - -
FD CRNT Y      79 - - - - - Y      79 - - - - -
          MCAP 1113                      MCAP 1115
          - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -
RD BKUP Y      1 - - - - - Y      1 - - - - -
USB BKP - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -

          ELAP A ( STDBY )
          C BIRTHDATE LEVEL EXCEPTION
          - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -
RTDB          Y 11-08-01 13:50:00 6 -
RTDB-EAGLE    11-08-01 13:50:00 6 -

          ELAP B ( ACTV )
          C BIRTHDATE LEVEL EXCEPTION
          - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -
RTDB          Y 11-08-01 13:50:00 6 -
RTDB-EAGLE    11-08-01 13:50:00 6 -

          EPAP A ( STDBY )
          C BIRTHDATE LEVEL EXCEPTION
          - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -
PDB          09-06-12 12:09:46 104552913 -
RTDB          Y 09-06-12 12:09:46 104552913 -
RTDB-EAGLE    09-06-12 12:15:06 104552913 -

          EPAP B ( ACTV )
          C BIRTHDATE LEVEL EXCEPTION
          - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -
PDB          09-06-12 12:09:46 104552913 -
RTDB          Y 09-06-12 12:09:46 104552913 -
RTDB-EAGLE    09-06-12 12:15:06 104552913 -

```

;

rept-stat-db:display=all

exap 12-07-03 09:35:32 MST EAGLE 45.0.0-64.34.0

DATABASE STATUS: >> OK <<

TDM 1114 (STDBY)				TDM 1116 (ACTV)			
C	LEVEL	TIME LAST	BACKUP	C	LEVEL	TIME LAST	
BACKUP							
FD BKUP	Y	1	-	Y	1	-	-
FD CRNT	Y	79		Y	79		
		MCAP 1113				MCAP 1115	
RD BKUP	Y	1	-	Y	1	-	-
USB BKP	-	-	-	-	-	-	-

CARD/APPL	LOC	C	T	LEVEL	TIME LAST UPDATE	EXCEPTION
VSCCP	1101	Y	N	79	12-07-02 11:10:56	-
VSCCP	1103	Y	N	79	12-07-02 11:10:56	-
IPS	1105	Y	N	79	12-07-02 11:10:56	-
SS7ANSI	1107	Y	N	79	12-07-02 11:10:56	-
IPSG	1108	-	-	-	-	-
VSCCP	1111	Y	N	79	12-07-02 11:10:56	-
OAM-RMV	1113	Y	-	1	-	DIFF LEVEL
TDM-CRNT	1114	Y	N	79	12-07-02 11:10:56	-
TDM-BKUP	1114	Y	-	1	00-00-00 00:00:00	DIFF LEVEL
OAM-RMV	1115	Y	-	1	-	DIFF LEVEL
OAM-USB	1115	-	-	-	-	-
TDM-CRNT	1116	Y	N	79	12-07-02 11:10:56	-
TDM-BKUP	1116	Y	-	1	00-00-00 00:00:00	DIFF LEVEL
VSCCP	1201	-	-	-	-	-
CCS7ITU	1203	-	-	-	-	-
VSCCP	1205	-	-	-	-	-

ELAP A (STDBY)

C	BIRTHDATE	LEVEL	EXCEPTION
RTDB	11-08-01 13:50:00	6	-
RTDB-EAGLE	11-08-01 13:50:00	6	-

ELAP B (ACTV)

C	BIRTHDATE	LEVEL	EXCEPTION
RTDB	11-08-01 13:50:00	6	-
RTDB-EAGLE	11-08-01 13:50:00	6	-

EPAP A (STDBY)

C	BIRTHDATE	LEVEL	EXCEPTION
---	-----------	-------	-----------


```

-----
PDB          09-06-12 12:09:46 104552913 -
RTDB        Y 09-06-12 12:09:46 104552913 -
RTDB-EAGLE  09-06-12 12:15:06 104552913 -

EPAP B ( ACTV )
C BIRTHDATE          LEVEL      EXCEPTION
-----
PDB          09-06-12 12:09:46 104552913 -
RTDB        Y 09-06-12 12:09:46 104552913 -
RTDB-EAGLE  09-06-12 12:15:06 104552913 -

EAGLE RTDB REPORT
CARD/APPL  LOC  C BIRTHDATE          LEVEL      EXCEPTION  IN-SRVC
-----
VSCCP      1101 Y 11-08-01 17:50:00      6          -          7d 16h
33m
VSCCP      1111 Y 09-06-12 12:15:06 104552913 -          4d 18h
27m
;

```

rept-stat-db:db=mps

exap 12-07-03 09:36:17 MST EAGLE 45.0.0-64.34.0

```

ELAP A ( STDBY )
C BIRTHDATE          LEVEL      EXCEPTION
-----
RTDB        Y 11-08-01 13:50:00      6          -
RTDB-EAGLE  11-08-01 13:50:00      6          -

```

```

ELAP B ( ACTV )
C BIRTHDATE          LEVEL      EXCEPTION
-----
RTDB        Y 11-08-01 13:50:00      6          -
RTDB-EAGLE  11-08-01 13:50:00      6          -

```

```

EPAP A ( STDBY )
C BIRTHDATE          LEVEL      EXCEPTION
-----
PDB          09-06-12 12:09:46 104552913 -
RTDB        Y 09-06-12 12:09:46 104552913 -
RTDB-EAGLE  09-06-12 12:15:06 104552913 -

```

```

EPAP B ( ACTV )
C BIRTHDATE          LEVEL      EXCEPTION
-----
PDB          09-06-12 12:09:46 104552913 -
RTDB        Y 09-06-12 12:09:46 104552913 -
RTDB-EAGLE  09-06-12 12:15:06 104552913 -

```

;

The examples shows the GTT DB level on ACTIVE and STANDBY MASP when there is some GTT data available on the OAMs:

```
rept-stat-db:db=gtt

tekelecstp 16-08-25 02:57:00 EST   EAGLE 46.5.0.0.0-70.4.0
  rept-stat-db:db=gtt
  Command entered at terminal #23.
;
Command Accepted - Processing
  tekelecstp 16-08-25 02:57:00 EST   EAGLE 46.5.0.0.0-70.4.0
  DATABASE STATUS: >> OK <<
          TDM 1114 ( ACTV )           TDM 1116 ( STDBY )
          C  LEVEL    TIME LAST BACKUP   C  LEVEL    TIME LAST
BACKUP
-----
          GTT   Y     5651 16-08-25 02:57:00   Y     5651 16-08-25
02:57:00
```

The examples shows the GTT DB level on ACTIVE and STANDBY MASP when there is no GTT data on the OAMs:

```
rept-stat-db:db=gtt

tekelecstp 16-08-25 02:57:00 EST   EAGLE 46.5.0.0.0-70.4.0
  rept-stat-db:db=gtt
  Command entered at terminal #23.
;
Command Accepted - Processing
  tekelecstp 16-08-25 02:57:00 EST   EAGLE 46.5.0.0.0-70.4.0
  DATABASE STATUS: >> OK <<
          TDM 1114 ( ACTV )           TDM 1116 ( STDBY )
          C  LEVEL    TIME LAST BACKUP   C  LEVEL    TIME LAST
BACKUP
-----
          GTT   Y     5651 16-08-25 02:57:00   Y     5651 16-08-25
02:57:00
```

This example shows the GTT DB level on ACTIVE and STANDBY MASP and also on all GTT enabled IPSPG cards, irrespective of their state.

```
rept-stat-db:db=gtt:display=all

tekelecstp 16-08-25 02:57:00 EST   EAGLE 46.5.0.0.0-70.4.0
  rept-stat-db:db=gtt:display=all
  Command entered at terminal #22.
;
Command Accepted - Processing
  tekelecstp 16-08-25 02:57:00 EST   EAGLE 46.5.0.0.0-70.4.0
  DATABASE STATUS: >> OK <<
          TDM 1114 ( ACTV )           TDM 1116 ( STDBY )
          C  LEVEL    TIME LAST BACKUP   C  LEVEL    TIME LAST
BACKUP
```

```

-----
GTT      Y      5651 16-08-25 02:57:00      Y      5651 16-08-25 02:57:00

CARD/APPL LOC  C  T  LEVEL      TIME LAST UPDATE  EXCEPTION
-----
IPSG      1102 -  -  -          -          -          -
IPSG      1105 Y  N  5651      16-08-25 02:59:30 -
IPSG      1106 Y  N  5651      16-08-25 02:59:35 -
IPSG      1108 -  -  -          -          -          -
;
Command Executed

```

This example shows that with `db=gtt`, only two values of `DISPLAY` parameter are supported viz., `ALL` and `BRIEF`. This command will give an appropriate error message when `display=except` or `display=version` is specified with `db=gtt`.

```
rept-stat-db:display=except:db=gtt
```

```
tekelecstp 16-11-28 16:00:19 MST  EAGLE 46.5.0.0.0-70.7.0
rept-stat-db:display=except:db=gtt
Command entered at terminal #23.
;
```

E2155 Cmd Rej: Invalid parameter combination specified

```
> rept-stat-db:display=version:db=gtt
```

```
tekelecstp 16-11-28 16:06:31 MST  EAGLE 46.5.0.0.0-70.7.0
rept-stat-db:display=version:db=gtt
Command entered at terminal #23.
;
```

E2155 Cmd Rej: Invalid parameter combination specified

Legend

- **DATABASE STATUS**—Indicates any database alarms on the MASPs. Not used with `loc` parameter output.
 - **>> OK<<**—No database alarms
 - **>>NOT OK (DMS)<<**—Database DMS alarms are present
 - **>>NOT OK (DRMS)<<**—Database DRMS alarms are present
 - **>>NOT OK (DMS,DRMS)<<**—Database DMS and DRMS alarms are present
- **(ACTV MASP)**—The specified MASP is the active processor. Not used with `loc` parameter.
- **(STDBY MASP)**—The specified MASP is the standby processor. Not used with `loc` parameter.
- **(NOACCS)**—The specified processor is not accessible. Not used with `loc` parameter.
- **C**—Indicates whether the database is coherent

- **Y**—the database is coherent
- **N**—the database is not coherent
- Dash (-)—the database is not accessible
- **LEVEL**—Number of updates made to the database partitions
- **TIME LAST BACKUP**—Date and time the last change was performed on the removable drives (if inserted) and the backup partition of the fixed disk. Not used with `loc` parameter.
- **TIME LAST UPDATE**—Date and time of the last update on the card database from OAM. Not used with `loc` parameter.
- **GTT**—The Global Title Translation database on the OAM. This database is downloaded to Service Module and GTT enabled IPSP cards. If the birthdate or level do not match the SM/GTT enabled IPSP card, then the corresponding card generates an alarm.
- **RD BKUP**—Removable drive backup partition
- **FD BKUP**—Fixed disk backup partition
- **FD CRNT**—Fixed disk current partition. Not used with the `loc` parameter output.
- **DIFF CONTENTS**—The specified database's contents are different compared to the other database in that partition.
- **DIFF LEVEL**—The specified database's level does not match the level of the current partition of the active fixed disk (**FD CRNT**).
- **DIFF TIME**—The specified database's level matches the level of the current partition of the active fixed disk (**FD CRNT**), but the time that the database was updated, compared to the current partition of the active fixed disk (**FD CRNT**), is different. This exception indicator appears only if the time and date stamp in an update packet or in memory becomes corrupted.
- **CORRUPTED**—The specified database is corrupted.
- **INCOHERENT**—The specified database is incoherent.
- **EXCEPTION**—The following values can appear:
 - The condition of the specified database with which the system has detected a problem. These conditions are: **DIFF CONTENTS**, **DIFF LEVEL**, **DIFF TIME**, **CORRUPTED**, and **INCOHERENT**. A "-" indicates that the database was not accessible. A blank entry indicates that the database has no problems. This field is used with the `display=except`, `display=all`, and `loc` parameter outputs.
 - A value that indicates the number of times that the Corruption Cross Correction function has corrected the card during the time that the card has been in service. This value persists until the card is reset.
- **IN-SRVC**—Length of time the card has been in service
- **CARD/APPL**—Card type or application assigned to the card specified in the **LOC** field. Not used with the `display=brief` (default) output.
 - **TDM-BKUP**—Backup partition on the fixed disk on the TDM
 - **TDM-CRNT**—Current partition on the fixed disk on the TDM
- **LOC**—Card location of the database. Not used with `display=brief` (default) output.

- **T**—Indicates whether the specified database is in transition. A database is in transition when the database for the link interface module (LIM) or E5-TSM being loaded with the new screen set information after an update to the database, and the database has not reached the current reported database level. Not used with `display=brief` (default) output.
- **Y**—the database is in transition
- **N**—the database is not in transition.
- **TIME LAST BACKUP**—The date and time the last change was performed on the specified card and its associated database. A dash (–) in this field for the fixed drive (FD) or removable drive (RD) indicates that no backup has been created on that drive. Not used with `display=brief` (default) output.
- **VERSION**—Version number of each database (including the LNP database if the LNP feature is on)
 - **xxx-xxx-xxx**—Version number of the database
 - **UNKNOWN**—The `rept-stat-db` command can show the version number only for a database that is version 20.0.0 or later. Any database version that is earlier than version 20.0.0 cannot be determined and UNKNOWN is displayed for the database version number.
 - A dash “-” —The database is not available. Used only with `display=version` output.
- **STATUS**—Operational status of the database version. Used only with `display=version` output.
 - **NORMAL**—The database version is fully operational.
 - Blank entry—Indicates the database is not available or is unknown. A numeric value indicates the database is invalid. The value displayed is the status value found in the field and is for diagnostic purposes.
- **BIRTHDATE**—Date and time of creation for the database
- **EPAP A (ACTV)**—The active EAGLE Application Processor. This section appears only if the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, G-Port, G-Flex, EIR, INP, PPSMS, SIP NP (if used with EPAP), or V-Flex features are turned on or the ATINP feature is enabled.
 - **PDB**—Provisioning database status information
 - **RTDB**—Provisioning database status information used to create the resident Realtime Database. The RTDB information may be different than the PDB information if the PDB has been reloaded, or if the RTDB has not been loaded from the PDB. If the RTDB birthdate is different than the PDB or if the level is too old to be able to resynchronize the databases, then a "Reload Required" alarm is generated.
 - **RTDB-EAGLE**—EPAP resident Realtime Database status information. This database is downloaded to Service Module cards. If the birthdate or level do not match the Service Module card, then the Service Module card generates an alarm. The RTDB is reloaded from the PDB, and the birthdate and level are reset and do not match the database status information. This database status mismatch condition indicates an abnormal condition that requires Service Module cards to be reloaded.
- **EPAP B (STDBY)**—The standby EAGLE Application Processor. This section appears only if the A-Port, AINPQ, Diameter S13/S13' Interface for EIR, G-Port, G-Flex, EIR, INP,

PPSMS, SIP NP (if used with EPAP), or V-Flex features are turned on, or the ATINP feature is enabled.

- **PDB**—Provisioning database status information
- **RTDB**—The provisioning database status information used to create the resident Realtime Database. The RTDB information may be different than the PDB information if the PDB has been reloaded, or if the RTDB has not been loaded from the PDB. If the RTDB birthdate is different than the PDB or if the level is too old to be able to resynchronize the databases, then a "Reload Required" alarm is generated.
- **RTDB-EAGLE**—EPAP resident Realtime Database status information. This database is downloaded to Service Module cards. If the birthdate or level do not match the Service Module card, then the Service Module card generates an alarm. The RTDB is reloaded from the PDB, and the birthdate and level are reset and do not match the database status information. This database status mismatch condition indicates an abnormal condition that requires Service Module cards to be reloaded.
- **ELAP A (ACTV)**—The active EAGLE LNP Application Processor. This section appears only if the LNP ELAP Configuration or SIP NP (if used with ELAP) feature is turned on.
 - **RTDB-EAGLE**—ELAP resident Database status information. This database is downloaded to Service Module cards. If the birthdate or level do not match the Service Module card, then the Service Module card generates an alarm.
 - **TIME LAST UPDATE**—Date and time of the last update of the RTDB from the LSMS
- **ELAP B (STDBY)**—The standby EAGLE LNP Application Processor. This section appears only if the LNP ELAP Configuration or SIP NP (if used with ELAP) feature is turned on.
 - **RTDB-EAGLE**—The ELAP resident Realtime Database status information. This database is downloaded to Service Module cards. If the birthdate or level do not match the Service Module card, then the Service Module card generates an alarm.
 - **TIME LAST UPDATE**—Date and time of the last update of the RTDB from the LSMS

Related Topics

- [chg-db](#)
- [copy-meas](#)
- [disp-disk-dir](#)

4.1.402 rept-stat-ddb

Use this command to obtain the most recent dynamic database (DDB) audit report. The DDB audit report displays the checksums of the Route, Linkset, Link, CM Card, CM Cluster, Mated Application, and MTP globals. The report displays the exact status of active MTP card after audit and cause of that status.

Parameters

display (optional)

This parameter specifies the type of report to display.

Range:

brief

all

Default:

brief

filter (optional)

This parameter provides a full DDB audit report for cards that meet the specified criteria.

Range:

resp

Responding cards

nrsp

Non-responding cards

incn

Inconsistent cards

cons

Consistent cards

ncons

Not-consistent cards: includes cards marked as inconsistent, DDB update in progress, having idle period less than quiet period, and sending replies marked as NO_DATA

ndat

Cards marked as "No Data" because the checksum of dynamic tables is not available

nddl

Cards marked as "No Data " because the checksum of dynamic tables is not available due to the DDL crossload being in incomplete state

nddb

Cards marked as "No Data" because the checksum of dynamic tables is not available due to non-initialization of DDB

duip

Cards returning replies marked as "DDB update in progress"

duipt

Cards returning replies marked as "DDB update in progress" due to incomplete evaluation of TSRC task

duipc

Cards returning replies marked as "DDB update in progress" due to incomplete checksum calculation

nquiet

Cards returning replies having idle period less than the quiet period

list (optional)

This parameter displays a list of cards that meet the specified criteria.

Range:***resp***

Responding cards

nrsp

Non-responding cards

incn

Inconsistent cards

cons

Consistent cards

ncons

Not-consistent cards, including cards marked as inconsistent, DDB update in progress, having idle period less than quiet period, and sending replies marked as NO_DATA

ndat

Cards marked as "No Data " because the checksum of dynamic tables is not available

nddl

Cards marked as "No Data " because the checksum of dynamic tables is not available due to the DDL crossload being in incomplete state

nddb

Cards marked as "No Data " because the checksum of dynamic tables is not available due to non-initialization of the DDB

duip

Cards returning replies marked as "DDB update in progress"

duipt

Cards returning replies marked as "DDB update in progress" due to incomplete evaluation of TSRC task

duipc

Cards returning replies marked as "DDB update in progress" due to incomplete checksum calculation

nquiet

Cards returning replies marked as having the idle period less than the quiet period

Example

```
rept-stat-ddb
rept-stat-ddb:display=all
rept-stat-ddb:list=resp
rept-stat-ddb:filter=nddb
```

Dependencies

Audit data is available only if the execution of a periodic or manual DDB audit is complete (see the `aud-data` command).

4000 E4000 No data is available to display

If the system is in upgrade mode, then this command cannot be entered.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

The `display`, `list`, and `filter` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

Notes

A question mark (?) indicates that the corresponding card's status is not evaluated (Inconsistent/Consistent) when system status is marked as ABORTED.

Cards having an additional status of IGNORED responded with "DDB update in progress". These cards are not considered for calculating system status.

Output

The MATED APPL field is displayed only for Service Module cards.

```
rept-stat-ddb:display=all
```

```
tekelecstp 09-07-21 21:10:17 GMT EAGLE 41.1.0
DDB AUDIT REPORT
SYSTEM STATUS           : INCONSISTENT
ACTIVE MTP CARDS       : 21
NON RESPONDING CARDS   : 7: 1207 1208 1211 1212 2108 2111 2112
RESPONDING CARDS       : 14
CARDS WITH NO DATA    : 2
CARDS WITH DATA       : 12
CARDS FAILING QUIET PRD : 0
CARDS WITH DDB UPD IN PRG : 3
CARDS CONSIDERED FOR CKSM : 9
INCONSISTENT CARDS     : 2: 1203 2103
CONSISTENT CARDS       : 7
AUDIT START TIME       : 21/07/2009 21:07:54
QUIET PERIOD           : 600 ms
```

```
RTE          LINK SET  LINK          CM CARD  CM CLSTR  MATED APPL MTP
GLOBS
```

```

      LOC   STATUS      CAUSE              IDLE      DDB   UPD
ADDN'L STATUS
      H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8
H'000003e8
      1201  CONSISTENT              700      1000
      H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8
H'000003e8
      1202  CONSISTENT              700      1000
      H'000007d0 H'000007d0 H'000007d0 H'000007d0 H'000007d0 H'000007d0
H'000007d0
      1203  INCONSISTENT              700      1000
-----
-----
      1204  NODATA          (DDB INIT)          -----
      H'00000bb8 H'00000bb8 H'00000bb8 H'00000bb8 H'00000bb8 H'00000bb8
H'00000bb8
      1205  IN UPDATE 1    (TSRC,DDB)        700      1000
(IGNORED)
      H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8
H'000003e8
      1206  CONSISTENT              700      1000
-----
-----
      1207  NORESP              -----
-----
-----
      1208  NORESP              -----
-----
-----
      1211  NORESP              -----
-----
-----
      1212  NORESP              -----
      H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8
H'000003e8
      1213  CONSISTENT              700      1000
      H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8 -----
H'000003e8
      2101  CONSISTENT              700      1000
      H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8 -----
H'000003e8
      2102  CONSISTENT              700      1000
      H'000007d0 H'000007d0 H'000007d0 H'000007d0 H'000007d0 -----
H'000007d0
      2103  INCONSISTENT              700      1000      (WWA
UPD=2)
-----
-----
      2104  NODATA          (DDL XLOAD)          -----
      H'00000bb8 H'00000bb8 H'00000bb8 H'00000bb8 H'00000bb8 -----
H'00000bb8
      2105  IN UPDATE 2    (DDB)        700      1000
(IGNORED)
      H'00000bb8 H'00000bb8 H'00000bb8 H'00000bb8 H'00000bb8 -----
H'00000bb8

```

```

                2106 IN UPDATE 2 (TSRC,DDB)          700      1000      (IGNORED)
H'000003e8 H'000003e8 H'000003e8 H'000003e8 H'000003e8 -----
H'000003e8
                2107 CONSISTENT                      700      1000
-----
-----
                2108 NORESP                          -----
-----
-----
                2111 NORESP                          -----
-----
-----
                2112 NORESP                          -----
Command Completed.
;

```

rept-stat-ddb

```

tekelecstp 09-07-21 21:10:32 GMT EAGLE 41.1.0
DDB AUDIT REPORT
SYSTEM STATUS           : OK
ACTIVE MTP CARDS        : 10
NON RESPONDING CARDS    : 0
RESPONDING CARDS        : 10
CARDS WITH NO DATA     : 0
CARDS WITH DATA        : 10
CARDS FAILING QUIET PRD : 0
CARDS WITH DDB UPD IN PRG : 0
CARDS CONSIDERED FOR CKSM : 10
INCONSISTENT CARDS      : 0
CONSISTENT CARDS        : 0
AUDIT START TIME        : 21/07/2009 21:07:54
QUIET PERIOD            : 20 ms

Command Completed.
;

```

rept-stat-ddb:filter=incn

```

tekelecstp 09-07-21 21:09:32 GMT EAGLE 41.1.0
DDB AUDIT REPORT
SYSTEM STATUS           : INCONSISTENT
ACTIVE MTP CARDS        : 21
NON RESPONDING CARDS    : 7: 1207 1208 1211 1212 2108 2111 2112
RESPONDING CARDS        : 14
CARDS WITH NO DATA     : 2
CARDS WITH DATA        : 12
CARDS FAILING QUIET PRD : 0
CARDS WITH DDB UPD IN PRG : 3
CARDS CONSIDERED FOR CKSM : 9
INCONSISTENT CARDS      : 2: 1203 2103
CONSISTENT CARDS        : 7

```

```

AUDIT START TIME      : 21/07/2009 21:07:54
QUIET PERIOD          : 600 ms

```

```

RTE      LINK SET  LINK      CM CARD  CM CLSTR  MATED APPL
MTP GLOBS
  LOC  STATUS      CAUSE          IDLE      DDB UPD
ADDN'L STATUS
  H'000007d0 H'000007d0 H'000007d0 H'000007d0 H'000007d0 H'000007d0
H'000007d0
    1203 INCONSISTENT          700      1000
  H'000007d0 H'000007d0 H'000007d0 H'000007d0 H'000007d0 -----
H'000007d0
    2103 INCONSISTENT          700      1000      (WWA
UPD=2)

```

```
Command Completed.
```

```
;
```

```
rept-stat-ddb:list=nrsp
```

```

tekelecstp 09-07-21 21:07:54 GMT EAGLE 41.1.0
DDB AUDIT REPORT CARD LIST [ NON RESPONDING CARDS ] (6)
  1207, 1208, 1211, 1212, 2108, 2111

```

```
Command Completed.
```

```
;
```

MTP Cards sending replies marked as "DDB update in progress" are distributed in two rows depending upon the number of times the MTP card consecutively reported "DDB updates in progress". `rept-stat-ddb:list=duip`

```

tekelecstp 09-07-21 21:07:54 GMT EAGLE 41.1.0
DDB AUDIT REPORT CARD LIST [ DDB UPDATE IN PROGRESS ] (2)
DDB UPDATES IN PROGRESS (>= 6 TIMES) (0)

```

```
DDB UPDATES IN PROGRESS (< 6 TIMES) (2)
```

```
1205, 2105
```

```
Command Completed.
```

```
;
```

```
rept-stat-ddb:list=nquiet
```

```

tekelecstp 09-07-21 21:07:54 GMT EAGLE 41.1.0
DDB AUDIT REPORT CARD LIST [CARDS WITH NQUIET] (0)

```

```
Command Completed.
```

```
;
```

Legend

- **SYSTEM STATUS:**
 - **OK**—DDB is consistent on all active MTP cards or no active MTP card is present in system
 - **INCONSISTENT**—DDB is inconsistent
 - **UNKNOWN**—"All active MTP cards in the system responded without the checksum of DDB table" or "No active MTP card in the system responded to audit request"
 - **ABORTED**—"Checksums collected failed to meet the quiet period requirement" or "Number of cards responded with "DDB update in progress" greater than 25% number of cards responded with data"
- **ACTIVE MTP CARDS**—Number of active MTP cards
- **NON RESPONDING CARDS**—Number of non-responding cards
- **RESPONDING CARDS**—Number of responding cards
- **CARDS WITH NO DATA**—Cards sending replies without the checksum of dynamic tables, due to incomplete DDL crossload or DDB initialization
- **CARDS WITH DATA**—Cards sending replies with checksums
- **CARDS FAILING QUIET PRD**—Cards failing quiet time requirement
- **CARDS WITH DDB UPD IN PRG**—Cards sending replies marked as "DDB update in progress" due to DDB checksum not evaluated completely or TSRC task is incomplete
- **CARDS CONSIDERED FOR CKSM**—Cards sending correct replies. Replies are not marked with "DDB update in progress" or "Reply with no data".
- **INCONSISTENT CARDS**—Cards that are inconsistent
- **CONSISTENT CARDS**—Cards that are consistent
- **AUDIT START TIME**—Time that the audit started (*DD/MM/YYYYYY hh:ms:ssformat*)
- **QUIET PERIOD**—Minimum DDB idle time, in milliseconds, during which no DDB updates are applied
- **RTE**—Checksum of RTE Table
- **LINK SET**—Checksum of Link Set Table
- **LINK**—Checksum of Link Table
- **CM CARD**—Checksum of CM Card
- **CM CLSTR**—Checksum of CM Cluster
- **MATED APPL**—Checksum of Mated Application
- **MTP GLOBLs**—Checksum of MTP Globals Table
- **IDLE (PERIOD)**—Time elapsed, in milliseconds, since the last DDB update was received by this card
- **DDB UPD**—Total DDB updates received on the card
- **ADDN'L STATUS**—Display more information for the card, including WWA updates or whether card is considered for audit calculations
- **CAUSE**—Display the reason for sending replies of type "reply with no data " or "DDB update in progress". This value can be DDL (crossload not completed), DDB (dynamic

database is not initialised), (TSRC, DDB) (TSRC task is not completed) or DDB (checksums still needs to apply on tables).

- **?**—Card status is not evaluated (inconsistent/consistent) if the system status is marked as "ABORTED"
- **IGNORED**—Card responded with "DDB update in progress" and is not considered for calculating system status
- **WWA UPD**—Number of entries that were updated by the WWA

Related Topics

- [aud-data](#)
- [dbg-ddb](#)

4.1.403 rept-stat-deir

Use this command to display the overall status of the Diameter EIR service on the EAGLE.

Parameters

dcname (optional)

Diameter connection name. This parameter specifies the unique logical name assigned to each diameter connection. It shall display Status, TPS and Statistics of the Diameter connection specified.

Range:

ayyyyyyyyyyyyyyy

A string of alphanumeric characters, beginning with a letter and up to 15 characters in length. Valid values are a..z, A..Z, 0..9.

System Default:

null

loc (optional)

Diameter card location for which Card status, overall card TPS and total statistics of the card is to be reported.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

mode (optional)

Display Diameter connection statistics.

Range:

perf

Displays per card TPS statistics, DEIR Service statistics, and per connection TPS statistics.

stat

Displays per card TPS statistics, DEIR Service statistics, and per connection service statistics.

peakreset (optional)

Reset peak values for a card or a specified diameter connection.

Range:

yes

Reset the peak value.

no

Do not reset the peak value.

Example

```
rept-stat-deir
rept-stat-deir:loc=1207
rept-stat-deir:dcname=dc1207a
rept-stat-deir:mode=perf
rept-stat-deir:peakreset=yes:loc=1207
rept-stat-deir:mode=perf:loc=1207
rept-stat-deir:mode=stat:loc=1207
rept-stat-deir:mode=stat
```

Dependencies

S13/S13' EIR Feature must be activated before retrieving the overall status of DEIR cards.

2728 E2728 Cmd Rej: S13 Feature Must Be Activated

The (1) *mode* and *loc* parameters, (2) *loc* and *peakreset* parameters, or (3) *dcname* and *peakreset* parameters can be specified together. No other combination is allowed.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The location specified with this command should be of a DEIR card running DEIRHC gpl.

2074 E2074 Cmd Rej: Card location specified must be an DEIR card

At least one Diameter EIR card running the DEIRHC gpl must be configured.

2791 E2791 Cmd Rej: DEIR not Configured

The Diameter connection name specified must be present in the DCONN table.

2783 E2783 Cmd Rej: DCNAME not present in DCONN table

The card at the specified location must support this command.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

Diameter card location or diameter connection name must be specified with peakrest parameter.

3022 E3022 Cmd Rej: LOC or DCNAME must be specified

Notes

If optional parameters are specified, only the entries that match the entered parameters are displayed.

Output

This example displays output when no parameter is specified:

```
rept-stat-deir
```

```
tekelecstp 14-03-21 01:16:07 MST EAGLE 46.0.0 65.11.0
rept-stat-deir
Command entered at terminal #19.
```

```
;
```

Command Accepted - Processing

```
tekelecstp 14-03-21 01:16:07 MST EAGLE 46.0.0 65.11.0
DEIR ALARM STATUS = ** 0484 DEIR System normal, card(s) abnormal
DEIR Cards Configured=16 Cards IS-NR= 1
Average CPU Usage = 1%
```

CARD	VERSION	PST	SST	AST	TPS	PTPS
1201	-----	OOS-MT	Isolated	-----	0	0
1313	-----	OOS-MT	Isolated	-----	0	0
1101	013-011-001	IS-NR	Active	-----	86	86
1103	013-011-001	IS-NR	Active	-----	0	0
1105	013-011-001	IS-ANR	MPS Unavl	-----	0	0

```
---
```

TOTAL DEIR SERVICE STATISTICS:

```
====
```

SERVICE	SUCCESS	ERROR	WARNINGS	OVERFLOW	TOTAL
DEIR SRV: 1		0	2608	0	2609

Command Completed.

```
;
```


This example displays the AST state in the output when no parameter is specified and EPAP data is downloading on the card:

```
rept-stat-deir

eagle5stp 15-12-03 16:20:28 EST EAGLE5 46.3.0.0-68.3.0
rept-stat-deir
Command entered at terminal #20.
;

Command Accepted - Processing
eagle5stp 15-12-03 16:20:28 EST EAGLE5 46.3.0.0-68.3.0
DEIR ALARM STATUS = *C 0483 DEIR System is not available
DEIR Cards Configured= 1          Cards IS-NR= 0
Average CPU Usage = 0%

CARD      VERSION    PST           SST           AST           TPS     PTPS
-----
1101     015-003-013 IS-ANR        Standby       23%+         0        0
-----

TOTAL DEIR SERVICE STATISTICS:
=====
SERVICE  SUCCESS    ERROR    WARNINGS  OVERFLOW  TOTAL
DEIR SRV: 0          0          0          0          0

Command Completed.
;
```

This example displays output when LOC parameter is specified:

```
rept-stat-deir:loc=1101

tekelecstp 14-03-21 01:19:26 MST EAGLE 46.0.0 65.11.0
rept-stat-deir:loc=1101
Command entered at terminal #19.
;

Command Accepted - Processing
tekelecstp 14-03-21 01:19:26 MST EAGLE 46.0.0 65.11.0
CARD  VERSION    TYPE    PST           SST           AST
1101  013-011-001 DSM     IS-NR        Active        -----
CARD ALARM STATUS = No Alarms.
CPU USAGE = 1 %

TPS STATISTICS:
```

```
=====
===
                TPS      PEAK-TPS    PEAKTIMESTAMP
-----
                101      101         02-01-02 01:16:32
```

PER CONNECTION TPS STATISTICS:

```
=====
===
DCNAME          STATUS  RSVD-TPS  MAX-TPS  TPS  Peak-TPS
PEAKTIMESTAMP
-----
d1              UP      250       8000     1   1       02-01-02
01:19:03
d2              UP      250       8000    100  100     02-01-02
01:19:03
d31             DOWN    250       8000     0   0       02-01-02
01:19:03
d41             DOWN    250       8000     0   0       02-01-02
01:19:03
d3              DOWN    250       8000     0   0       02-01-02
01:19:03
d4              DOWN    250       8000     0   0       02-01-02
01:19:03
dd10            DOWN    250       8000     0   0       02-01-02
01:19:03
-----
---
```

Command Completed.

;

This example displays output when DCNAME parameter is specified:

```
rept-stat-deir:dcname=d1
```

```
tekelecstp 14-03-21 01:20:22 MST EAGLE 46.0.0 65.11.0
rept-stat-deir:dcname=d1
Command entered at terminal #19.
```

;

Command Accepted - Processing

```
tekelecstp 14-03-21 01:20:27 MST EAGLE 46.0.0 65.11.0
DCONN ALARM STATUS      = No Alarms.
```

```
DCNAME      STATUS
d1          UP
```

TPS STATISTICS:

```
=====
RSVD-TPS   MAX-TPS   TPS   PEAK-TPS   PEAKTIMESTAMP
250        8000        1     1           02-01-02 01:20:03
```

DCONN STATISTICS

```
=====
SUCCESS    ERROR    WARNING  OVERFLOW  TOTAL
0          0        30        0         30
```

Command Completed.

;

This example displays output when MODE=PERF parameter is specified:

```
rept-stat-deir:mode=perf
```

```
tekelecstp 14-03-21 01:24:15 MST EAGLE 46.0.0 65.11.0
rept-stat-deir:mode=perf
Command entered at terminal #19.
```

;

Command Accepted - Processing

```
tekelecstp 14-03-21 01:24:15 MST EAGLE 46.0.0 65.11.0
DEIR ALARM STATUS = ** 0484 DEIR System normal, card(s) abnormal
DEIR Cards Configured=16      Cards IS-NR= 1
Average CPU Usage = 1%
```

```

CARD      VERSION   PST          SST      TPS   PTPS   PTIMESTAMP
-----
1201     -----  OOS-MT      Isolated  0     0     00-00-00
00:00:00
1303     -----  OOS-MT      Isolated  0     0     00-00-00
00:00:00
1101     013-011-001 IS-NR      Active    101   101   02-01-02
01:23:09
1103     013-011-001 IS-NR      Active    0     0     00-00-00
00:00:00
1105     013-011-001 IS-ANR     MPS Unavl 0     0     00-00-00
00:00:00
```


TOTAL DEIR SERVICE STATISTICS:

=====
===

SERVICE	SUCCESS	ERROR	WARNINGS	OVERFLOW	TOTAL
DEIR SRV: 0	0	0	3035	0	3035

PER CONNECTION TPS STATISTICS:

=====
===

DCNAME	STATUS	RSVD-TPS	MAX-TPS	TPS	Peak-TPS	PEAKTIMESTAMP
--------	--------	----------	---------	-----	----------	---------------

d1	UP	250	8000	1	1	02-01-02
01:24:03						
d2	UP	250	8000	100	100	02-01-02
01:24:03						
d31	DOWN	250	8000	0	0	02-01-02
01:24:03						
d41	DOWN	250	8000	0	0	02-01-02
01:24:03						
d3	DOWN	250	8000	0	0	02-01-02
01:24:03						
d4	DOWN	250	8000	0	0	02-01-02
01:24:03						
dd10	DOWN	250	8000	0	0	02-01-02
01:24:03						
b1	DOWN	250	8000	0	0	00-00-00
00:00:00						
b2	DOWN	250	8000	0	0	00-00-00
00:00:00						
b31	DOWN	250	8000	0	0	00-00-00
00:00:00						
b41	DOWN	250	8000	0	0	00-00-00
00:00:00						
b3	DOWN	250	8000	0	0	00-00-00
00:00:00						
b4	DOWN	1500	8000	0	0	00-00-00
00:00:00						
b10	DOWN	250	8000	0	0	00-00-00
00:00:00						
aasw234edf56tgr	DOWN	250	8000	0	0	02-01-02
01:24:10						

Command Completed.

;

This example displays output when MODE=PERF parameter is specified along with location:

rept-stat-deir:mode=perf:loc=1101

tekelecstp 14-03-21 01:27:25 MST EAGLE 46.0.0 65.11.0

rept-stat-deir:mode=perf:loc=1101

Command entered at terminal #19.

;

Command Accepted - Processing

tekelecstp 14-03-21 01:27:26 MST EAGLE 46.0.0 65.11.0

CARD VERSION TYPE PST SST AST

1101 013-011-001 DSM IS-NR Active DB_DIFF

CARD ALARM STATUS = * 0034 Card database is inconsistent

CPU USAGE = 1 %

TPS STATISTICS:

```
=====
              TPS      PEAK-TPS      PEAKTIMESTAMP
-----
              101      101          02-01-02 01:23:09
-----
```

PER CONNECTION TPS STATISTICS:

```
=====
DCNAME          STATUS  RSVD-TPS  MAX-TPS  TPS  Peak-TPS  PEAKTIMESTAMP
-----
d1              UP      250      8000    1    1          02-01-02
01:27:04
d2              UP      250      8000   100  100          02-01-02
01:27:04
d31             DOWN    250      8000    0    0          02-01-02
01:27:04
d41             DOWN    250      8000    0    0          02-01-02
01:27:04
d3              DOWN    250      8000    0    0          02-01-02
01:27:04
d4              DOWN    250      8000    0    0          02-01-02
01:27:04
dd10            DOWN    250      8000    0    0          02-01-02
01:27:04
```


```
Command Completed.  
;
```

This example displays output when peakreset is specified with location:

```
rept-stat-deir:peakreset=yes:loc=1217
```

```
Command Accepted - Processing  
tekelecstp 13-04-15 05:38:52 MST EAGLE 45.1.0  
rept-stat-deir:peakreset=yes:loc=1101  
Command entered at terminal #2.  
;
```

```
tekelecstp 13-04-15 05:38:52 MST EAGLE 45.1.0  
Command Completed.  
;
```

This example displays output when peakreset is specified with dcname:

```
rept-stat-deir:peakreset=yes:dcname=dc1217
```

```
Command Accepted - Processing  
tekelecstp 13-05-10 09:38:52 MST EAGLE 45.1.0  
rept-stat-deir:peakreset=yes:dcname=dc1217  
Command entered at terminal #2.  
;
```

```
tekelecstp 13-04-15 05:38:52 MST EAGLE 45.1.0  
Command Completed.  
;
```

This example displays output when MODE = STAT parameter is specified:

```
rept-stat-deir:mode=stat
```

```
tekelecstp 14-03-21 01:24:15 MST EAGLE 46.0.0 65.11.0  
rept-stat-deir:mode=stat
```

Command entered at terminal #19.

;

Command Accepted - Processing

tekelecstp 14-03-21 01:24:15 MST EAGLE 46.0.0 65.11.0
 DEIR ALARM STATUS = ** 0484 DEIR System normal, card(s) abnormal
 DEIR Cards Configured=16 Cards IS-NR= 1
 Average CPU Usage = 1%

CARD	VERSION	PST	SST	TPS	PTPS	PTIMESTAMP
1201	-----	OOS-MT	Isolated	0	0	00-00-00
00:00:00						
1303	-----	OOS-MT	Isolated	0	0	00-00-00
00:00:00						
1101	013-011-001	IS-NR	Active	101	101	02-01-02
01:23:09						
1103	013-011-001	IS-NR	Active	0	0	00-00-00
00:00:00						
1105	013-011-001	IS-ANR	MPS Unavl	0	0	00-00-00
00:00:00						

TOTAL DEIR SERVICE STATISTICS:

SERVICE	SUCCESS	ERROR	WARNINGS	OVERFLOW	TOTAL
DEIR SRV: 0		0	3035	0	3035

PER CONNECTION SERVICE STATISTICS:

DCNAME	STATUS	SUCCESS	WARNING	ERRORS	OVERFLOW	TOTAL
d1	UP	0	30	0	0	30
d2	UP	0	3004	0	0	3004
d31	DOWN	0	0	0	0	0
d41	DOWN	0	0	0	0	0
d3	DOWN	0	0	0	0	0
d4	DOWN	0	0	0	0	0
dd10	DOWN	0	0	0	0	0
b1	DOWN	0	0	0	0	0
b2	DOWN	0	0	0	0	0
b31	DOWN	0	0	0	0	0
b41	DOWN	0	0	0	0	0
b3	DOWN	0	0	0	0	0
b4	DOWN	0	0	0	0	0
b10	DOWN	0	0	0	0	0

```

aasw234edf56tgr  DOWN    0        0        0        0        0
x1                DOWN    0        0        0        0        0

```

```

-----
---
```

Command Completed.

This example displays output when MODE = STAT parameter is specified along with location:

```
rept-stat-deir:mode=stat:loc=1101
```

```

tekelecstp 14-03-21 01:33:22 MST  EAGLE 46.0.0 65.11.0
rept-stat-deir:mode=stat:loc=1101
Command entered at terminal #19.
;

```

Command Accepted - Processing

```

tekelecstp 14-03-21 01:33:22 MST  EAGLE 46.0.0 65.11.0
CARD  VERSION      TYPE    PST          SST          AST
1101  013-011-001  DSM    IS-NR        Active       DB_DIFF
CARD ALARM STATUS    = ** 0484 DEIR System normal, card(s)
abnormal
CPU USAGE = 1 %

```

TPS STATISTICS:

```

=====
===
                TPS      PEAK-TPS    PEAKTIMESTAMP
-----
                101     101         02-01-02 01:23:09

```

PER CONNECTION SERVICE STATISTICS:

```

=====
===
DCNAME          STATUS  SUCCESS  WARNING  ERRORS  OVERFLOW
TOTAL
-----
d1              UP      0        30       0       0       30
d2              UP      0        3005    0       0
3005
d31            DOWN    0        0        0       0       0
d41            DOWN    0        0        0       0       0

```


d3	DOWN	0	0	0	0	0
d4	DOWN	0	0	0	0	0
dd10	DOWN	0	0	0	0	0

Command Completed.

;

Legend

This section defines the fields of the following `rept-stat-deir` reports:

- `rept-stat-deir`
- `rept-stat-deir:loc=1207`
- `rept-stat-deir:dcname=dc1207a`
- `rept-stat-deir:mode=perf`
- `rept-stat-deir:peakreset=yes:loc=1207`
- `rept-stat-deir:peakreset=yes:dcname=dc1217`
- `rept-stat-deir:mode=stat`
- `rept-stat-deir:mode=stat:loc=1101`

A dash (-) in an output field indicates that the statistic does not apply.

- **CARD IS-NR** -Number of DEIR cards running the DEIRHC GPL that can be used by the system (status is In-Service Normal, IS-NR).
- **CARD**-Card location of the DEIR card running the DEIRHC GPL
- **P**- The primary Service Module card. This card provides the MPS status to the EAGLE. This indicator is displayed between the card location and the GPL version.
- **VERSION** -Version number of the DEIRHC GPL running on the DEIR card.
- **PST** -Primary state of the card. See [Possible Values for PST/SST/AST](#).
- **SST**-Secondary state of the card. See [Possible Values for PST/SST/AST](#).
- **AST** -Associated state of the card. See [Possible Values for PST/SST/AST](#).
- **TPS** - TPS (Transactions per second) indicates the number of Diameter messages which are received on the DEIR cards or specified diameter connection.
- **RSVD-TPS**- Reserved TPS is the guaranteed TPS for a diameter connection.
- **MAX-TPS** - This is the maximum TPS for a diameter connection
- **PTPS/PEAK-TPS** ---
 - PTPS indicates the maximum TPS occurred on the card when executed with `loc` parameter.
 - PTPS indicates the maximum TPS occurred on a diameter connection when executed with `dcname` parameter.
- **PTIMESTAMP/PEAKTIMESTAMP** - The time when the PTPS occurred on the card or specified diameter connection.
- **DCNAME** -Diameter connection name.

- **STATUS** - UP or DOWN status of the diameter connection.
- **DEIR ALARM STATUS** - Displays DEIR system related alarms. If there are no system alarms present, this field displays No Alarms.
- **CARD ALARM STATUS** - Displays DEIR card specific alarms. If there are no card alarms present, this field displays No Alarms.
- **DCONN ALARM STATUS** - Displays diameter connection specific alarms. If there are no connection related alarms present, this field displays No Alarms.
- **TOTAL DEIR SERVICE STATISTICS**-System-wide view of per-service statistics. The report tracks the following information:
 - **SERVICE** --- Service running on the DEIR card. Currently only the EIR service is supported for the DEIR card.
 - **SUCCESS** -Total number of messages successfully processed by the DEIR card for the EIR service.
 - **ERROR** -Total number of messages with errors which are received by the DEIR cards for the EIR service.
 - **WARNINGS** -Total number of messages received for which either IMEI lookup failure occurred or Unknown equipment status is sent in response by the DEIR card for the EIR service.
 - **OVERFLOW** - Number of messages discarded due to congestion on a DEIR card.
 - **TOTAL** - Total number of messages received. It should be the sum of (Success + Error + Warnings) messages.
- **TPS STATISTICS**- Section of the report that provides TPS statistics on each Service Module card or diameter connection.
 - **TPS** - TPS (Transactions per second) indicates the number of Diameter messages which are received on the DEIR cards or specified diameter connection.
 - **PTPS** - PTPS indicates the maximum TPS that occurred on the card or specified diameter connection.
 - **PTIMESTAMP** - The time when the PTPS occurred on the card or specified diameter connection.
- **PER CONNECTION SERVICE STATISTICS** - Service statistics corresponds to each diameter connection
 - **DCNAME**-Diameter connection name.
 - **STATUS**- UP or DOWN status of the diameter connection.
 - **SUCCESS**-Total number of messages successfully processed on this particular Diameter connection by the DEIR card for the Diameter EIR service.
 - **WARNING**-Total number of messages received on this particular Diameter connection for which either IMEI lookup failure occurred or Unknown equipment status is sent in response by the DEIR card for Diameter EIR service.
 - **ERRORS**-Total number of messages with errors which are received on this particular Diameter connection by the DEIR cards for the Diameter EIR service.

- **OVERFLOW**-Number of messages received on this particular Diameter connection and discarded due to congestion.
- **TOTAL**- Total number of messages received on this particular diameter connection. It should be the sum of (Success + Warning + Errors) messages.
- **DCONN STATISTICS** -Statistics of diameter connection are displayed when DCNAME parameter is specified in `rept-stat-deir` command.
 - **SUCCESS**-Total number of messages successfully processed on this particular Diameter connection by the DEIR card for the Diameter EIR service.
 - **ERROR**-Total number of messages with errors which are received on this particular Diameter connection by DEIR cards for the Diameter EIR service.
 - **WARNING**-Total number of messages received on this particular Diameter connection for which either IMEI lookup failure occurred or Unknown equipment status is sent in response by the DEIR card for the Diameter EIR service.
 - **OVERFLOW**-Number of messages received on this particular Diameter connection and discarded due to congestion.
 - **TOTAL**- Total number of messages received. It should be the sum of (Success + Error + Warning) messages.
- **PER CONNECTION TPS STATISTICS** - TPS statistics corresponds to each diameter connection.
 - **DCNAME** -Diameter connection name.
 - **STATUS** -- UP or DOWN status of the diameter connection.
 - **RSVD-TPS** - Reserved TPS is the guaranteed TPS for a diameter connection.
 - **MAX-TPS** - This is the maximum TPS for a diameter connection.
 - **TPS** - TPS (Transactions per second) indicates the number of Diameter messages which are received on the DEIR cards or specified diameter connection.
 - **Peak-TPS** - Peak-TPS indicates the maximum TPS that occurred on the card or specified diameter connection.
 - **PEAKTIMESTAMP** - The time when the Peak-TPS occurred on the card or specified diameter connection.

Related Topics

- [rtrv-dconn](#)

4.1.404 rept-stat-dlk

Use this command to show the status of the TCP/IP data links. The secondary state (SST) of the TCP/IP data links shows whether the link is available, unavailable, or manually removed from service.

Parameters

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
 6101 - 6108, 6111 - 6118

Default:

All data links are shown.

Example

```
rept-stat-dlk
rept-stat-dlk:loc=1104
```

Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The ACM is the only valid card type for this command.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The specified card must have a TCP/IP data link assigned to it.

N/A N/A

The card location, frame, shelf, or slot must be within the allowed range.

2016 E2016 Cmd Rej: <parm_desc> is out of range - <parm>

The data link must be equipped in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

A card location that is valid and defined in the database must be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

Notes

None

Output

```
rept-stat-dlk

rlghncxa03w 10-01-27 17:00:36 EST  EAGLE 42.0.0
DLK          PST          SST          AST
1104         IS-NR         Active      ----
1206         IS-NR         Active      ALMINH
Command Completed.
;
```

```
rept-stat-dlk:loc=1104

rlghncxa03w 10-01-27 17:00:36 EST EAGLE 42.0.0
DLK          PST          SST          AST
1104         IS-NR        Active     ----
ALARM STATUS = No Alarms.
Command Completed.
;
```

Legend

- **DLK**—Card location of the TCP/IP data link
- **PST**—Primary state of the TCP/IP data link. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the TCP/IP data link. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the TCP/IP data link. See [Possible Values for PST/SST/AST](#).

Related Topics

- [act-dlk](#)
- [canc-dlk](#)
- [dlt-dlk](#)
- [ent-dlk](#)
- [rtrv-dlk](#)
- [tst-dlk](#)

4.1.405 rept-stat-dstn

Use this command to generate a report of the MTP point code status for provisioned point codes. Any provisioned destination can be specified, including a cluster destination (*ni-nc-**) or a network destination (*ni-*-**).

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

dpc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpcn

Range:*p*-, 000-255, *, **, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*-The asterisk values *, **, and *** are not valid for the *ni* subfield.If ** or *** is specified for the *nc* subfield, either *, **, or *** must be specified for the *ncm* subfield.When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.When *chg-sid:pctype=ansi* is specified, *nc=000* is not valid if *ni=001-005*.When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006-255*.When *chg-sid:pctype=ansi* is specified, *ni-*.** is valid if *ni= 006-255*.

The point code 000-000-000 is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code.

dpci (optional)ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).**Range:***s*-, *p*-, *ps*-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps**zone*—0-7*area*—000-255*id*—0-7

The point code 0-000-0 is not a valid point code.

dpcn (optional)ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s*-, *p*-, *ps*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps**nnnnn*—0-16383*gc*—*aa-zz**m1-m2-m3-m4*—0-14 for each member; values must sum to 14**dpcn24 (optional)**24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000—255

ssa—000—255

sp—000—255

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

mode (optional)

The type of display to produce. This parameter displays the point code's subsystem status along with the normal output.

Range:***full***

Comprehensive display of point code status, including *rtx*. If entered with a point code, status for that point code is displayed. If specified without a point code, the status of all routesets is displayed.

rtx

Displays exception route status, other than circular routing, if the Origin-based MTP Routing feature is on.

Default:

A summary report is displayed.

stat (optional)

The primary state filter. The state of the destination for which to generate a report. To generate a report for all destinations whose state is DSBLD, specify *stat=dsbld*.

Range:***all***

All of the primary states

alminh

Alarms inhibited

anr

In service abnormal (IS-ANR)

dsbld

Out of service maintenance disabled (OOS-MT-DSBLD)

mt

Out of service maintenance (OOS-MT)

nr

In service normal (IS-NR)

Default:*all***Example**

```
rept-stat-dstn
rept-stat-dstn:dpci=2-004-1:mode=full
rept-stat-dstn:dpc=9-3-6:mode=full
rept-stat-dstn:dpc=9-3-*:mode=full
rept-stat-dstn:dpc=9-3-*
rept-stat-dstn:dpc=9-3-**
rept-stat-dstn:dpc=9-3-***
rept-stat-dstn:dpc=9-3-***:stat=mt
rept-stat-dstn:dpc:9-4-***:stat=alminh
rept-stat-dstn:dpc=9-3-*:mode=rtx
rept-stat-dstn:mode=full
rept-stat-dstn:mode=rtx
rept-stat-dstn:dpc=1-1-1
rept-stat-dstn:dpcn16=1-1-1
```

Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

If a `dpc` parameter is specified, it must be the true destination point code (not an alias) and it must be defined in the database.

2388 E2388 Cmd Rej: Point code not equipped

The `stat` parameter can be specified with the `dpc` parameter only if the `dpc` parameter specifies one of the *ni-nc-** formats.

2890 E2890 Cmd Rej: DPC must be specified as wildcard when used with STAT

An x-list DPC cannot be specified in the `dpc` parameter.

2147 E2147 Cmd Rej: X-LIST DPC is not allowed

The `mode=rtx` parameter cannot be specified unless the Origin-Based MTP Routing feature is enabled and on.

4584 E4584 Cmd Rej: MTP Origin Based Routing Feature must be ON

The `mode` parameter cannot be specified with the `dpc` parameter if the `dpc` parameter specifies one of the `ni-nc-*` formats.

2886 E2886 Cmd Rej: DSTN address must be a full, network or cluster PC

When the `mode=full` parameter is specified, the `dpc/dpca/dpcn/dpci/dpcn24` parameter must be specified.

2386 E2386 Cmd Rej: DPC parameter needed with MODE=FULL

The destination address must be a full point code, a network destination, or a cluster point code.

2886 E2886 Cmd Rej: DSTN address must be a full, network or cluster PC

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

This command does not report the x-list point codes. Use the `rept-stat-cluster` command for a report of x-list point codes.

If the `mode=rtx` parameter is specified with a specific DPC, additional linkset, route and exception route information associated with the specified DPC is displayed.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

Summary description of the reports that are produced by the various DPC parameter syntaxes is shown:

- `rept-stat-dstn:dpc=ni-nc-ncm`—Report for fully provisioned destination *ni-nc-ncm*
- `rept-stat-dstn:dpc=ni-*-*`—Report for provisioned network destination with the specified network indicator. If * is specified in the *nc* field, * must be specified in the *ncm* field.
- `rept-stat-dstn:dpc=ni-***-*`—Report for the full network cluster for the specified *ni*
- `rept-stat-dstn:dpc=ni-****-*`—Report for the full network cluster and the network cluster address (if any) for the specified *ni*
- `rept-stat-dstn:dpc=ni-nc-*`—Report for provisioned cluster destination *ni-nc-**
- `rept-stat-dstn:dpc=ni-nc-**-*`—Report showing all destinations whose network (*ni*) and cluster (*nc*) components match those specified. The network cluster address *ni-nc-** (if it exists) is not reported.

- `rept-stat-dstn:dpc=ni-nc-***`—Report showing all destinations whose network (*ni*) and cluster (*nc*) components match those specified. The network cluster address *ni-nc-** (if it exists) is also reported.
- `rept-stat-dstn:dpcn24=msa-ssa-sp`—Report for fully provisioned 24-bit destination *main signaling area-sub signaling area-signaling point*

If the `mode=rtx` parameter is specified without a specific DPC, then status is provided for all exception route sets.

If the `mode=full` parameter is specified with a specific destination point code, then additional linkset, route, and exception route information associated with the specified destination is displayed, along with information that can be used to correct circular routing. If the `mode=full` parameter is specified without a specific destination point code, then status is provided for all regular and exception route sets.

Output

If the `dpc` parameter is not specified:

- If the `mode` parameter is not specified, then the command output lists the status of all provisioned destination point codes (DPCs) (routesets) in the system.
- If the `mode=rtx` parameter is specified, then the output lists the status of only those DPCs against which exception routes have been provisioned, and the status of the provisioned exception route sets associated with each DPCs.
- If the `mode=full` parameter is specified, then the command lists the status of all provisioned DPCs in the system, and the status of the provisioned exception route sets, if any, associated with each DPC.

If the `dpc` parameter is specified:

- If the `mode` parameter is not specified, then the output lists the status of all provisioned routes in the route set specified by that DPC.
- If the `mode=rtx` parameter is specified, then the output lists the status of all provisioned routes in the routeset specified by that DPC, and the status of all provisioned exception routesets associated with that DPC.
- If the `mode=full` parameter is specified, then the output lists the status of all provisioned routes in the routeset specified by that DPC, the status of all provisioned exception route sets associated with that DPC, any aliases associated with that DPC, and circular routing alarm information if any for that DPC.

This example shows the output when no parameters are specified:

```
rept-stat-dstn
```

```
tekelecstp 10-10-15 14:59:15 EST EAGLE 43.0.0
rept-stat-dstn
Command entered at terminal #4.
Extended Processing Time may be Required
```

DPCA	PST	SST	AST
001-001-003	OOS-MT	Idle	INACCESS
001-001-004	OOS-MT	Idle	INACCESS
001-001-005	OOS-MT	Idle	INACCESS
001-001-006	OOS-MT	Idle	INACCESS

```

001-001-007      OOS-MT      Idle      INACCESS
001-001-008      OOS-MT      Idle      INACCESS
001-001-009      OOS-MT      Idle      INACCESS
001-001-010      OOS-MT      Idle      INACCESS
001-001-011      OOS-MT      Idle      INACCESS
001-001-012      OOS-MT      Idle      INACCESS
001-001-013      OOS-MT      Idle      INACCESS
001-001-014      OOS-MT      Idle      INACCESS
001-001-015      OOS-MT      Idle      INACCESS
001-001-016      OOS-MT      Idle      INACCESS
001-001-017      OOS-MT      Idle      INACCESS
001-001-018      OOS-MT      Idle      INACCESS
001-001-019      OOS-MT      Idle      INACCESS
001-001-020      OOS-MT      Idle      INACCESS
001-001-021      OOS-MT      Idle      INACCESS
001-001-022      OOS-MT      Idle      INACCESS
001-001-023      OOS-MT      Idle      INACCESS
001-001-024      OOS-MT      Idle      INACCESS
001-001-025      OOS-MT      Idle      INACCESS
001-002-003      OOS-MT      Idle      INACCESS

DPCN             PST             SST             AST

DPCN24           PST             SST             AST

DPCI             PST             SST             AST

```

Command Completed.

;

This example shows the output when a cluster destination on the `dpc` parameter is specified. This output shows the cluster status and routeset information. Information on cluster members is not shown. Use `rept-stat-cluster` to obtain this information.

```
rept-stat-dstn:dpc=9-3-*
```

```

tekelecstp 09-03-21 10:31:06 EST  EAGLE 41.0.0
  DPCA             PST             SST             AST
  009-003-*       IS-NR          Allowed        ACCESS
ALARM STATUS      = No Alarms.
RTE COST  LSN      APCA             LS STAT  NON-ADJ  ROUTE STAT
1*  10  lsnstpa    042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb    092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc    128-101-022  Allowed  Allowed  Allowed
4   --  -----  ***-***-***  -----  -----  -----
5   --  -----  ***-***-***  -----  -----  -----
6   --  -----  ***-***-***  -----  -----  -----

```

Command Completed.

;

This example shows the output for an FPC or cluster destination for which circular routing has been detected:

```
rept-stat-dstn:dpc=9-3-6:mode=full
```

```
tekelecstp 08-03-21 10:31:06 EST EAGLE 41.0.0
  DPCA          PST          SST          AST
  009-003-006   OOS-MT        Prohibit  INACCESS
ALARM STATUS    = *C  xxxx Circular routing detected
RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE
STAT
  1*  10  lsnstpa      042-036-123  Allowed  Allowed
Allowed
  2   20  lsnstpb      092-240-103  Allowed  Allowed
Allowed
  3   30  lsnstpc      128-101-022  Allowed  Allowed
Allowed
  4   --  -----  ***-***-***  -----  -----
-----
  5   --  -----  ***-***-***  -----  -----
-----
  6   --  -----  ***-***-***  -----  -----
-----
```

```
SSN  SUBSYSTEM STATUS
```

```
ALIASA          ALIASN          ALIASI
-----
```

```
CIRCULAR ROUTING INFO:
```

```
XMIT LSN= lsnstpb  RC=--
RCV LSN= lsn01a
MEMBER= ***-***-***
```

```
Exception Routes:
```

```
Command Completed.
```

```
;
```

This example shows the outout when a cluster destination and the mode=full parameter is specified:

```
rept-stat-dstn:dpc=9-3-*:mode=full
```

```
tekelecstp 09-03-15 10:31:06 EST EAGLE 41.0.0
  DPCA          PST          SST          AST
  009-003-*     IS-NR          Allowed  ACCESS
ALARM STATUS    = *C  xxxx Circular routing detected
RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
  1*  10  lsnstpa      042-036-123  Allowed  Allowed  Allowed
  2   20  lsnstpb      092-240-103  Allowed  Allowed  Allowed
  3   30  lsnstpc      128-101-022  Allowed  Allowed  Allowed
  4   --  -----  ***-***-***  -----  -----  -----
  5   --  -----  ***-***-***  -----  -----  -----
  6   --  -----  ***-***-***  -----  -----  -----
```

```

SSN   SUBSYSTEM STATUS

      ALIASA           ALIASN           ALIASI
-----
CIRCULAR ROUTING INFO:
XMIT LSN=lsnstpb   RC=20
RCV  LSN=lsn01a
MEMBER= 009-003-006

Exception Routes:

Command Completed.
;

```

This example shows the circular routing alarm for a cluster destination. The alarm indicates that circular routing was detected for a member of the cluster, but no x-list entry could be created for that cluster. Circular routing detected on a cluster destination does not automatically force the output to display the status of the cluster as “OOS-MT Prohibit INACCESS” as it does for an FPC destination.

```
rept-stat-dstn:dpc=9-3-*
```

```

stdcfg1a 09-03-16 14:09:24 EST  EAGLE 41.0.0
DPCA           PST           SST           AST
009-003-*      IS-NR           Allowed      ACCESS
ALARM STATUS   = *C  xxxx Circular routing detected
RTE COST  LSN           APCA           LS STAT  NON-ADJ  ROUTE STAT
1*  10  lsnstpa           042-036-123   Allowed  Allowed  Allowed
2   20  lsnstpb           092-240-103   Allowed  Allowed  Allowed
3   30  lsnstpc           128-101-022   Allowed  Allowed  Allowed
4   --  -----   ----*-***-***-   -----   -----   -----
5   --  -----   ----*-***-***-   -----   -----   -----
6   --  -----   ----*-***-***-   -----   -----   -----

Command Completed.
;

```

This example shows the output if an FPC is specified for which no subsystems are defined. Also, because aliases cannot be defined for cluster destinations, this report shows only an empty header. The circular routing information portion of this report displays “-----” for the linkset names when no circular routing condition exists for the DPC.

```
rept-stat-dstn:dpc=9-3-*:mode=full
```

```

stdcfg1a 08-02-16 14:09:24 EST  EAGLE 38.0.0
Command entered at terminal #4.
DPCA           PST           SST           AST
009-003-*      IS-NR           Allowed      ACCESS
ALARM STATUS   = No Alarms.
RTE COST  LSN           APCA           LS STAT  NON-ADJ  ROUTE STAT

```

```

1* 10 lsnstpa      042-036-123  Allowed  Allowed
Allowed
2  20 lsnstpb      092-240-103  Allowed  Allowed
Allowed
3  30 lsnstpc      128-101-022  Allowed  Allowed
Allowed
4  -- -----  *****-***-***  -----  -----
-----
5  -- -----  *****-***-***  -----  -----
-----
6  -- -----  *****-***-***  -----  -----
-----

```

SSN SUBSYSTEM STATUS

```

ALIASA          ALIASN          ALIASI
-----

```

CIRCULAR ROUTING INFO:

```

XMIT LSN= ----- RC=--
RCV LSN= -----
MEMBER= ***-***-***

```

Exception Routes:

Command Completed.

;

This example shows the output when the `stat` parameter and the `ni-nc-**` or `ni-nc-***` DPC formats are specified. The output summary report includes only those destinations whose status matches the state specified.

```
rept-stat-dstn:dpc=9-4-***:stat=alminh
```

```

stdcfgla 10-10-16 14:09:24 EST EAGLE 43.0.0
rept-stat-dstn:dpc=9-4-***:stat=alminh
Command entered at terminal #4.
Extended Processing Time may be Required
DPCA          PST          SST          AST
009-004-006    IS-NR        Allowed      ALMINH
009-004-007    IS-NR        Allowed      ALMINH
.
.
.
009-004-056    IS-NR        Allowed      ALMINH

```

Command Completed.

;

This example shows the output for an ITU national point code where the `chg-stpopts:npcfmti` parameter has been set to `1-1-1-11`:

```
rept-stat-dstn:dpcn=1-1-1-1000
```

```
stdcfg1a 09-03-16 14:09:24 EST EAGLE 41.0.0
CAUTION : Node isolated...route status out of date!
DPCN          PST          SST          AST
1-1-1-1000    OOS-MT          Prohibit    INACCESS
ALARM STATUS   = *C 0313 DPC is prohibited
RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1   10   lsitu          1-1-1-1000    Prohibit  Allowed  Prohibit
2   --   -----      ---***---***---  -----  -----  -----
3   --   -----      ---***---***---  -----  -----  -----
4   --   -----      ---***---***---  -----  -----  -----
5   --   -----      ---***---***---  -----  -----  -----
6   --   -----      ---***---***---  -----  -----  -----
```

```
Command Completed.
```

```
;
```

The asterisks in the space after the route numbers in the following examples indicate which route (or combined route) is carrying traffic.

```
rept-stat-dstn:dpc=1-1-1
```

```
tekelecstp 09-03-24 09:19:04 EST EAGLE 41.0.0
DPCA          PST          SST          AST
001-001-001   IS-NR          Allowed     ACCESS
ALARM STATUS   = No Alarms.
RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1*  05   lse1e1          001-001-001    Allowed  Allowed  Allowed
2*  05   lse1e2          001-002-001    Allowed  Allowed  Allowed
3   10   lse1e3          001-003-001    Allowed  Allowed  Allowed
4   --   -----      ---***---***---  -----  -----  -----
5   --   -----      ---***---***---  -----  -----  -----
6   --   -----      ---***---***---  -----  -----  -----
```

```
Command Completed.
```

```
;
```

No asterisk appears after the route number in the following example; no routes were carrying traffic at the time.

```
rept-stat-dstn:dpc=1-1-1
```

```
stdcfg1a 09-03-16 14:09:24 EST EAGLE 41.0.0
DPCA          PST          SST          AST
001-001-001   OOS-MT          Prohibit    INACCESS
ALARM STATUS   = *C 0313 DPC is prohibited
RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1   05   lse1e1          001-001-001    Prohibit  Allowed  Prohibit
2   05   lse1e2          001-002-001    Prohibit  Allowed  Prohibit
3   10   lse1e3          001-003-001    Prohibit  Allowed  Prohibit
```

```

4  --  -----  ***-***-***  -----  -----  -----
5  --  -----  ***-***-***  -----  -----  -----
6  --  -----  ***-***-***  -----  -----  -----

```

Command Completed.

;

This example shows the output when the Origin-Based MTP Routing feature is on, a specific DSTN is requested, and the *rtx* mode is specified:

rept-stat-dstn:dpc=9-3-*:mode=rtx

```

tekelecstp 09-05-01 16:21:39 EST  EAGLE 41.0.0
  DPCA          PST          SST          AST
  009-003-*     IS-NR          Allowed  ACCESS
ALARM STATUS    = No Alarms.
RTE COST  LSN      APCA          LS STAT  NON ADJ  ROUTE STAT
1*  10  lsnstpa   042-36-23  Allowed  Allowed  Allowed
2   20  lsnstpb   092-40-03  Allowed  Allowed  Allowed
3   30  lsnstpc   128-01-22  Prohibit Prohibit  Allowed
4   --  -----  ***-***-***  -----  -----  -----
5   --  -----  ***-***-***  -----  -----  -----
6   --  -----  ***-***-***  -----  -----  -----

```

Exception Routes:

```

  OPCA          PST          SST          AST
  001-001-001   IS-NR          Allowed  ACCESS
  ILSN          PST          SST          AST
  lsnstpy       IS-NR          Allowed  ACCESS

```

Command Completed.

;

This example shows the output when the Origin-Based MTP Routing feature is on, a specific DSTN is requested, and the *full* mode is used:

rept-stat-dstn:dpc=9-3-*:mode=full

```

stdcfg1a 09-05-16 14:09:24 EST  EAGLE 41.0.0
  DPCA          PST          SST          AST
  009-003-006   OOS-MT          Prohibit INACCESS
ALARM STATUS    = *C 0319 REPT-MTPLP-DET: Circ rte det(cong)
RTE COST  LSN      APCA          LS STAT  NON-ADJ
ROUTE STAT
1*  10  lsnstpa   042-036-123  Allowed  Allowed
Allowed
2   20  lsnstpb   092-240-103  Allowed  Allowed
Allowed
3   30  lsnstpc   128-101-022  Allowed  Allowed
Allowed
4   --  -----  ***-***-***  -----  -----

```



```

-----
      5  --  -----  ----*-***-***-***  -----  -----  -----
      6  --  -----  ----*-***-***-***  -----  -----  -----

SSN   SUBSYSTEM STATUS

      ALIASA           ALIASN           ALIASI
-----  -----  -----

CIRCULAR ROUTING INFO:
XMIT LSN=lsnstpb   RC=20
RCV  LSN=lsn01a
MEMBER =-----

Exception Routes:
      OPCA           PST           SST           AST
      001-001-001   IS-NR           Allowed       ACCESS

      ILSN           PST           SST           AST
      lsnstpy       IS-NR           Allowed       ACCESS

Command Completed.
;

```

This example shows the output when the Origin-Based MTP Routing feature is on, and the *full* mode is specified:

```
rept-stat-dstn:mode=full
```

```

tekelecstp 10-10-29 10:26:56 EST  EAGLE 43.0.0
rept-stat-dstn:mode=full
Command entered at terminal #4.
Extended Processing Time may be Required
      DPCA           PST           SST           AST
      001-001-000   OOS-MT         Idle          INACCESS
      003-001-000   OOS-MT         Idle          INACCESS
      002-102-001   OOS-MT         Idle          INACCESS
      001-101-001   OOS-MT         Idle          INACCESS

      OPCA           PST           SST           AST
      001-001-001   OOS-MT         Idle          INACCESS
      002-001-000   OOS-MT         Idle          INACCESS

      ILSN           PST           SST           AST
      e2m1s1       OOS-MT         Idle          INACCESS

      CIC   ECIC           PST           SST           AST
      0     1000         OOS-MT         Idle          INACCESS

      SI           PST           SST           AST
      3           OOS-MT         Idle          INACCESS

      003-101-001   OOS-MT         Idle          INACCESS
      004-101-001   OOS-MT         Idle          INACCESS

```

007-101-001	OOS-MT	Idle	INACCESS
100-100-*	OOS-MT	Idle	INACCESS
100-100-001	OOS-MT	Idle	INACCESS
OPCA	PST	SST	AST
001-001-001	OOS-MT	Idle	INACCESS
002-002-002	OOS-MT	Idle	INACCESS
001-102-001	OOS-MT	Idle	INACCESS
200-200-001	OOS-MT	Idle	INACCESS
DPCN	PST	SST	AST
1-010-1	OOS-MT	Idle	INACCESS
1-020-2	OOS-MT	Idle	INACCESS
1-020-3	OOS-MT	Idle	INACCESS
1-020-4	OOS-MT	Idle	INACCESS
1-050-1	OOS-MT	Idle	INACCESS
OPCA	PST	SST	AST
002-001-000	OOS-MT	Idle	INACCESS
002-101-001	OOS-MT	Idle	INACCESS
DPCN24	PST	SST	AST
DPCI	PST	SST	AST
1-030-1	OOS-MT	Idle	INACCESS
1-030-2	OOS-MT	Idle	INACCESS
1-040-4	OOS-MT	Idle	INACCESS
1-070-1	OOS-MT	Idle	INACCESS
OPCN	PST	SST	AST
1-050-1	OOS-MT	Idle	INACCESS
IILSN	PST	SST	AST
npc1	OOS-MT	Idle	INACCESS

Command Completed.

;

This example shows the output when the Origin-Based MTP Routing feature is on and the *rtx* mode is used:

```
rept-stat-dstn:mode=rtx
```

```
stdcfg1a 10-10-16 14:09:24 EST EAGLE 43.0.0
rept-stat-dstn:mode=rtx
Command entered at terminal #4.
Extended Processing Time may be Required
```

DPCA	PST	SST	AST
001-101-001	OOS-MT	Idle	INACCESS
OPCA	PST	SST	AST
001-001-001	OOS-MT	Idle	INACCESS

```

002-001-000          OOS-MT          Idle          INACCESS

ILSN
e2m1s1              PST              SST           AST
                   OOS-MT          Idle          INACCESS

DPCN                PST              SST           AST
1-050-1            OOS-MT          Idle          INACCESS

OPCA                PST              SST           AST
002-001-000       OOS-MT          Idle          INACCESS
002-101-001       OOS-MT          Idle          INACCESS

DPCN24             PST              SST           AST

DPCI                PST              SST           AST
1-070-1            OOS-MT          Idle          INACCESS

OPCN                PST              SST           AST
1-050-1            OOS-MT          Idle          INACCESS

ILSN                PST              SST           AST
npc1               OOS-MT          Idle          INACCESS

```

Command Completed.

;

This example shows the output when the `mode=full` parameter is specified, and the Origin-Based MTP routing feature is not turned on:

```
rept-stat-dstn:mode=full
```

```

tekelecstp 10-10-29 10:26:56 EST  EAGLE 43.0.0
rept-stat-dstn:mode=full
Command entered at terminal #4.
Extended Processing Time may be Required
DPCA                PST              SST           AST
001-001-001        OOS-MT          Idle          INACCESS
002-002-002        OOS-MT          Idle          INACCESS
003-003-003        OOS-MT          Idle          INACCESS
004-004-004        OOS-MT          Idle          INACCESS
005-005-005        OOS-MT          Idle          INACCESS
SI                  PST              SST           AST
3                   OOS-MT          Idle          INACCESS
006-006-006        OOS-MT          Idle          INACCESS
007-007-007        OOS-MT          Idle          INACCESS
009-009-*          OOS-MT          Idle          INACCESS
008-008-*          OOS-MT          Idle          INACCESS

DPCN                PST              SST           AST
00101              OOS-MT          Idle          INACCESS
00102              OOS-MT          Idle          INACCESS
00103              OOS-MT          Idle          INACCESS
00104              OOS-MT          Idle          INACCESS
00105              OOS-MT          Idle          INACCESS

```

```

00106          OOS-MT          Idle          INACCESS
00107          OOS-MT          Idle          INACCESS

DPCN24         PST            SST            AST

DPCI          PST            SST            AST
2-100-1       OOS-MT          Idle          INACCESS
2-100-2       OOS-MT          Idle          INACCESS
2-100-3       OOS-MT          Idle          INACCESS
2-100-4       OOS-MT          Idle          INACCESS
2-100-5       OOS-MT          Idle          INACCESS
2-100-6       OOS-MT          Idle          INACCESS
2-100-7       OOS-MT          Idle          INACCESS
1-001-1       OOS-MT          Idle          INACCESS
1-001-2       OOS-MT          Idle          INACCESS

```

Command Completed.

;

This example shows the output when the `mode=rtx` parameter is specified, and the Origin-Based MTP Routing feature is not turned on:

```
rept-stat-dstn:mode=rtx
```

```

stdcfg1a 10-10-16 14:09:24 EST  EAGLE 43.0.0
rept-stat-dstn:mode=rtx
Command entered at terminal #4.
Extended Processing Time may be Required

```

```

DPCA          PST            SST            AST
005-005-005   OOS-MT          Idle          INACCESS

SI            PST            SST            AST
3            OOS-MT          Idle          INACCESS

```

Command Completed.

;

This example shows the output when `dpcn16` parameter is specified.

```
rept-stat-dstn:dpcn16=1-1-1
```

```

stdcfg1a 09-03-16 14:09:24 EST  EAGLE 41.0.0
DPCN16          PST            SST            AST
001-001-001     OOS-MT          Prohibit     INACCESS
ALARM STATUS    = *C 0313 DPC is prohibited
RTE COST  LSN      APCN16          LS STAT  NON-ADJ  ROUTE
STAT
1  05  lsele1  001-001-001  Prohibit  Allowed  Prohibit
2  05  lsele2  001-002-001  Prohibit  Allowed  Prohibit
3  10  lsele3  001-003-001  Prohibit  Allowed  Prohibit
4  --  -----  ***-***-***  -----  -----  -----
5  --  -----  ***-***-***  -----  -----  -----

```

6 -- ----- ***-***-*** -----

Command Completed.

;

Legend

- **DPC/DPCA**—ANSI destination point code of the route
- **DPCN**—ITU-TSS national destination point code of the route
- **DPCN24**—24-bit ITU national destination point code of the route
- **DPCI**—ITU-TSS international destination point code of the route
- **OPC/OPCA**—ANSI origination point code as exception routing criterion of the exception route
- **OPCN**—ITU-TSS national origination point code as exception routing criterion of the exception route
- **OPCN24**—24-bit ITU national origination point code as exception routing criterion of the exception route
- **OPCI**—ITU-TSS international origination point code as exception routing criterion of the exception route
- **ILSN**—Originating linkset as exception routing criterion of the exception route
- **CIC**—Starting Circuit Identification Code used as the exception routing criterion for this exception route
- **ECIC**—Ending Circuit Identification Code with CIC defines the CIC range used as exception routing criterion for this exception route
- **PST**—Primary state of the subsystem. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the subsystem. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the subsystem. See [Possible Values for PST/SST/AST](#).

Related Topics

- [chg-dstn](#)
- [chg-rte](#)
- [dlt-dstn](#)
- [dlt-rte](#)
- [ent-dstn](#)
- [ent-rte](#)
- [rept-stat-rte](#)
- [rtrv-dstn](#)
- [rtrv-rte](#)

4.1.406 rept-stat-e1

Use this command to display the E1 port status and signaling link status for cards with provisioned E1 ports.

Parameters

e1port (optional)

The E1 port number. When this parameter is specified, only the information for the specified E1 port on the card in the specified card location is displayed.

Range:

1 - 8

loc (optional)

The unique identifier of a specific LIME1 card located in the STP.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

Default:

Information for all LIME1 cards is reported.

Example

```
rept-stat-e1
```

Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The `loc` parameter must be specified when the `e1port` parameter is specified.

2366 E2366 Cmd Rej: LOC must be specified

The active TDM location cannot be specified in the `loc` parameter.

3645 E3645 Cmd Rej: Cannot specify the ACTIVE TDM location

Card locations 1117 and 1118 and the MUX card locations (`xy09` and `xy10` where `x` is the frame and `y` is the shelf) cannot be specified in the `loc` parameter.

2376 E2376 Cmd Rej: Specified LOC is invalid

Notes

Specifying the command without any parameters displays E1 port status for all cards with provisioned E1 ports.

If the `loc` parameter is specified, status is displayed for all E1 ports provisioned on the card in the specified location.

If the `loc` and `e1port` parameters are specified, the E1 port status summary is displayed for all E1 ports provisioned on the card in the specified location, followed by the status of all signaling links assigned to the specified E1 port on the card.

Output

This example shows the output when no parameters are specified:

```
rept-stat-e1
```

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC  E1PORT  PST          SST          AST
1203  1        IS-NR        Avail        PARENT
1203  2        IS-NR        Avail        PAIRED
1203  3        IS-NR        Avail        -----
1203  7        OOS-MT      Unavail     -----
1207  1        IS-NR        Avail        -----
1207  2        IS-NR        Avail        -----
Command Completed.
```

```
;
```

This example shows the output when the `loc` parameter is specified:

```
rept-stat-e1:loc=1203
```

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC  E1PORT  PST          SST          AST
1203  1        IS-NR        Avail        PARENT
1203  2        IS-NR        Avail        PAIRED
1203  3        IS-NR        Avail        -----
1203  7        OOS-MT      Unavail     -----
Command Completed.
```

```
;
```

This example shows the output when the `loc` and `elport` parameters are specified:

```
rept-stat-e1:loc=1203:elport=1
```

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC  E1PORT  PST          SST          AST
1203  1        IS-NR        Avail        PARENT
ALARM STATUS          = No Alarms.
UNAVAIL REASON        = --
SLK  TS  PST          SST          AST
A    1  IS-NR        Avail        ---
A1   2  IS-NR        Avail        ---
Command Completed.
```

```
;
```

```
rept-stat-e1:loc=1203:elport=2
```

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC  E1PORT  PST          SST          AST
```

```

1203  2      IS-NR      Avail      PAIRED
ALARM STATUS      = No Alarms.
UNAVAIL REASON    = --
Command Completed.
;

```

Legend

- **LOC**—Card location
- **E1PORT**—Number of the E1 port provisioned on the card in the specified location.
- **PST**—Primary state of the card. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the card. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the card. See [Possible Values for PST/SST/AST](#). The values *PARENT* and *PAIRED* refer to odd and even adjacent ports on the card that are provisioned in channel bridging mode.
- **ALARM STATUS**—Either "No Alarms" or current alarm number and text
- **UNAVAIL REASON**—Reason for the E1 port being unavailable
- **SLK**—Signaling link assigned to the E1 port
- **TS**—Timeslot assigned to the signaling link
- **PST**—Primary state of the signaling link. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the signaling link. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the signaling link. See [Possible Values for PST/SST/AST](#).

4.1.407 rept-stat-enet

Use this command to display a summary report of Ethernet status for all cards in the system that have configured Ethernet Interfaces.

Parameters

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118, 1113, 1115

Default:

All ENET data for the card location is displayed.

port (optional)

Ethernet interface port ID.

Range:*a, b, c, d***Default:**

All port data for ENET is displayed.

Ports *c* and *d* are displayed for the DEIR/SIP/ENUM applications running on the SLIC card.**Example**

```
rept-stat-enet
rept-stat-enet:loc=1101:port=b
rept-stat-enet:loc=1201:port=c
rept-stat-enet:loc=1201:port=d
```

Dependencies

Another command is already in progress.

2368 E2368 Cmd Rej: System busy - try again later

The `loc` and `port` parameters must be specified together in the command.

2903 E2903 Cmd Rej: LOC and PORT parameter combination must be specified

The shelf and card must be equipped, and the card specified by the `loc` parameter must have an application of IPS, MCP, EROUTE, VSCCP, IPSG, IPLIM, IPLIMI, SS7IPGW, IPGWI, SIP, ENUM, or DEIR.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The card in the location specified by the `loc` parameter must support the port specified by the `port` parameter.

2975 E2975 Cmd Rej: Specified Port is not supported

Notes

Interface A/D is used for ExAP connectivity, and interface B/C is used for signaling networks on SLIC cards running DEIR/SIP/ENUM application.

Output

This example shows the status of all configured Ethernet interfaces in the system:

```
rept-stat-enet

eagle10110 07-02-10 14:50:23 EST EAGLE 35.6.0
LOC  PORT  IPADDR          PST          SST          AST
1101  A      1.1.1.1         OOS-MT      Fault        ALMINH
1101  B      123.234.222.111 IS-ANR      Active       -----
1201  A      111.1.24.200   IS-NR      Active       -----
1201  B      2.31.234.1

OOS-MT      Fault      -----
```

```
Command Completed.
```

```
;
```

This example shows the summary for a specific card location and port when the Ethernet error count exceeds the threshold value:

```
rept-stat-enet:loc=1101:port=b
```

```
eagle10110 10-01-10 14:54:23 EST EAGLE 42.0.0
LOC  PORT IPADDR          PST          SST          AST
1101 B    123.234.222.111  IS-ANR      Active      -----
ALARM STATUS          = ** 0537 Ethernet error threshold exceeded
```

```
Command Completed.
```

```
;
```

This example shows the Ethernet interface summary for a specified card when the Ethernet interface is up, and the IP address is not assigned by the DHCP server:

```
rept-stat-enet:loc=1102:port=a
```

```
tekelecstp 10-01-17 12:54:48 MST EAGLE 42.0.0
LOC  PORT IPADDR          PST          SST          AST
1102 A    -----          IS-NR      Active      -----
ALARM STATUS          = No Alarms.
```

```
Command Completed.
```

This example shows the Ethernet interface summary for a specified card when the Ethernet interface is removed, and the DHCP lease of an assigned IP address has not expired:

```
rept-stat-enet:loc=1101:port=a
```

```
tekelecstp 10-01-17 12:54:48 MST EAGLE 42.0.0
LOC  PORT IPADDR          PST          SST          AST
1102 A    -----          IS-NR      Active      -----
ALARM STATUS          = No Alarms.
```

```
Command Completed.
```

This example shows the summary for a specified card when the Ethernet interface is up:

```
rept-stat-enet:loc=1101:port=a
```

```
tekelecstp 10-01-02 00:29:22 MST EAGLE 42.0.0
LOC  PORT IPADDR          PST          SST          AST
1101 A    192.168.63.213  IS-NR      Active      -----
ALARM STATUS          = No Alarms.
```

```
Command Completed.
;
```

Legend

- CARD—Location of the card
- VERSION—Version number of the application loaded on the card. Dashes (- - - -) in the version column indicate one of the following conditions about the card:
 - The card is configured but is not physically present in the system.
 - The card does not run a GPL, such as TDM or MDAL cards.
 - The card is IS-ANR or is in the process of being loaded.
- TYPE—Card type entered in the database
- APPL—Application loaded on the card
- PST—Primary state of the card. See [Possible Values for PST/SST/AST](#).
- SST—Secondary state of the card. See [Possible Values for PST/SST/AST](#).
- AST—Associated state of the card. See [Possible Values for PST/SST/AST](#).

4.1.408 rept-stat-enum

Use this command to display the overall status of the ENUM service on the EAGLE.

Parameters

loc (optional)

ENUM card location for which card status and card TPS usage data is to be reported.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

mode (optional)

It will display ENUM system alarm status and per card TPS statistics.

Range:

perf

Default:

Perf

peakreset (optional)

Reset peak values to the current TPS values.

Range:

yes

Example

```
rept-stat-enum
rept-stat-enum:peakreset=yes:loc=1101
rept-stat-enum:loc=1101
rept-stat-enum:mode=perf
```

Dependencies

The location specified with this command should be of an ENUM card running the ENUMHC gpl.

3187 E3187 Cmd Rej: Card location specified must be an ENUM card

An ENUM card running the ENUMHC application must be configured before this command can be entered.

3188 E3188 Cmd Rej: ENUM not Configured

The peakreset and loc parameters can be specified together. No other combination is allowed.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The shelf and card must be equipped, and the card specified by the loc parameter must have an application of enumhc.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The peakreset parameter should be specified with the loc parameter.

2366 E2366 Cmd Rej: LOC must be specified

Notes

If optional parameters are specified, only the entries that match the entered parameters are displayed.

Output

This example displays output when no parameter is specified:

```
rept-stat-enum

Command Executed
  tekelecstp 14-05-29 03:13:20 MST EST EAGLE 46.1.0
  rept-stat-enum
  Command entered at terminal #21.
;

Command Accepted - Processing
  tekelecstp 14-05-29 03:13:20 MST EST EAGLE 46.1.0
  ENUM ALARM STATUS = No Alarms
  ENUM Cards Configured= 2      Cards IS-NR= 2

  CARD   VERSION   PST           SST           AST           TPS
```

```

-----
1207 P 045-018-002 IS-NR      Active  -----  200
1105  045-018-008 IS-NR      Active  -----  100
-----

```

TOTAL SERVICE STATISTICS:

```

=====
SERVICE  SUCCESS  ERROR  TOTAL
ENUM:     300    185    485

```

TOTAL ERROR STATISTICS:

```

=====
SERVICE  RCODE1  RCODE2  RCODE3  RCODE4  RCODE5  TOTAL
ENUM:     50    60     45     10     20     185

```

Command Completed.

;

This example displays output when the LOC parameter is specified:

rept-stat-enum:loc=1207

tekelecstp 14-05-29 04:10:20 MST EST EAGLE 46.1.0

rept-stat-enum:loc=1207

Command entered at terminal #21.

;

Command Accepted - Processing

tekelecstp 14-05-29 04:10:20 MST EST EAGLE 46.1.0

```

CARD  VERSION  TYPE  PST  SST  AST
1207  045-018-002  DSM  IS-NR  Active  -----

```

CARD ALARM STATUS = No Alarms.

TPS STATISTICS:

```

=====
              TPS  PEAK-TPS.  PEAKTIMESTAMP
-----
              200  250      14-05-29 04:06:21

```

Command Completed.

;

This example displays output when the MODE parameter is specified:

rept-stat-enum:mode=perf

tekelecstp 14-05-29 04:16:20 MST EST EAGLE 46.1.0

rept-stat-enum:mode=perf

```

Command entered at terminal #21.
;

Command Accepted - Processing
tekelecstp 14-05-29 04:16:20 MST EST EAGLE 46.1.0
ENUM ALARM STATUS = No Alarms
ENUM Cards Configured= 2      Cards IS-NR= 2

TPS STATISTICS:

=====
===
CARD   TPS    PTPS    PTIMESTAMP
-----
1207 P 200    250    14-05-29 04:06:21
1105  100    105    14-05-29 03:39:21
-----

Command Completed.
;

```

Legend

This section defines the fields of the four `rept-stat-enum` reports:

- `rept-stat-enum`
- `rept-stat-enum:loc=1207`
- `rept-stat-enum:mode=perf`
- `rept-stat-enum:peakreset=yes:loc=1207`

A dash (-) in an output field indicates that the statistic does not apply.

- **CARD IS-NR**—Number of ENUM cards running the ENUMHC GPL that can be used by the system (status is In-Service Normal, IS-NR).
- **CARD**—Card location of the ENUM card running the ENUMHC GPL
- **P**—P indicates the primary Service Module card. The primary Service Module card provides the MPS status to the EAGLE. This indicator is displayed between the card location and the GPL version.
- **VERSION**—Version number of the ENUMHC GPL running on the ENUM card.
- **PST**—Primary state of the card. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the card. See [Possible Values for PST/SST/AST](#).
- **AST**—Associate state of the card. See [Possible Values for PST/SST/AST](#).
- **TPS**—TPS (Transactions per second) indicates the number of ENUM messages which are received on the ENUM card.
- **PTPS/PEAK-TPS**—This field indicates the maximum TPS occurred on the card
- **PTIMESTAMP/PEAKTIMESTAMP**—It is the time when the maximum TPS occurred on the card.
- **ENUM ALARM STATUS**—Displays ENUM system-related alarms. If there are no system alarms present, this field displays No Alarms.

- **CARD ALARM STATUS**—Displays ENUM card-specific alarms. If there are no card alarms present, this field displays No Alarms.
- **TOTAL SERVICE STATISTICS**—System-wide view of per-service statistics. The report tracks the following information:
 - **SERVICE**—The service running on the ENUM card. Currently only the ENUM service is supported for the ENUM card.
 - **SUCCESS**—Total number of messages successfully processed by the ENUM cards.
 - **ERRORS**—Total number of messages with errors which are received or sent by the ENUM cards.
 - **TOTAL**—Total messages received. It should be the sum of (Success + Errors) messages.
- **TOTAL ERROR STATISTICS**—System-wide view of error statistics. The report tracks the following information:
 - **SERVICE**—The service running on the ENUM card. Currently only the ENUM service is supported for the ENUM card.
 - **RCODE1**—Total number of messages responded by the ENUM card for format errors.
 - **RCODE2**—Total number of messages responded by the ENUM card for server failures.
 - **RCODE3**—Total number of messages responded by the ENUM card for invalid domains.
 - **RCODE4**—Total number of messages responded by the ENUM card for requested queries which are not supported in EAGLE.
 - **RCODE5**—Total number of messages responded by the ENUM card for query types and classes which are not supported in EAGLE.
- **PER CONNECTION STATISTICS**—System-wide view of per connection statistics. The report tracks the following information:
 - **CNAME**- Name of the IP connection provisioned on ENUM card specified in LOC parameter.
 - **STATUS**- Current status of IP connection.
 - **TPS**- TPS (Transactions per second) indicates the number of ENUM messages that are received on the IP connection on a given ENUM card.
 - **PTPS**- Maximum TPS occurred on an IP connection on a given ENUM card.
 - **PTIMESTAMP**- The time when the maximum TPS occurred on an IP connection on a given card.

4.1.409 rept-stat-gpl

Use this command to display the version of GPLs currently running for an application, plus the approved and trial versions of the GPL that will run if the card is restarted.

Parameters

display (optional)

Display mode. Specifies whether the report displays only application GPL data for all cards, or both IMT and application GPL data.

Range:

all

gp1 (optional)

Generic program load. The GPL for which to retrieve information.

Range:

xyyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters. Valid GPLs are:

atmhc—Used by E5-ATM-B cards to allow the card to support up to 3 signaling links

bldc32—Flash GPL containing a tar image with all code required on E5-MCAP cards to support VxWorks6.9 32-bit application, as in OAMHC69.

bldc64—Flash GPL containing a tar image with all code required on E5-SM8G-B cards for SCCP64, ENUM64, SIP64 and DEIR64 applications.

blmcap—Flash GPL containing a tar image with all code required on E5-MCAP, E5-E1T1-B, E5-MCPM-B, E5-ATM-B, E5-ENET-B, and E5-SM8G-B cards

blslc32—Flash GPL containing a tar image with all code required on SLIC cards for 32-bit application i.e. MCPHC, IPSHC etc.

blslc64—Flash GPL containing a tar image with all code required on SLIC cards for 64-bit application i.e. SCCP64, ENUM64, SIP64 and DEIR64.

blsl932—Flash GPL containing a tar image with all code required on SLIC cards for 32-bit application on VxWorks6.9, as in IPSHC69 and MCPHC69.

deirhc—Used by E5-SM8G-B cards to support the S13/S13' EIR feature

enumhc—Used by E5-SM8G-B cards to support the ENUM Mobile Number Portability and Tier One Address Resolution application

erthc—Used by E5-ENET-B cards for EAGLE 5 Integrated Monitoring Support functions

hipr2—Communication software used on the High Speed IMT Packet Router (HIPR2) card

ipsg—Used by E5-ENET-B cards to support the combined functionality of IPLIMx M2PA and IPGWx M3UA

ipsg32—Used by SLIC cards to support IPSPG application with 64-bit addressing either with GTT functionality or without it.

ipshc—Used by E5-ENET-B cards to support the IPS application

ipshc69—Used by E5-ENET-B and SLIC cards to support the IPS application when running on VxWorks69.

mcphc—Used by E5-MCPM-B cards for the Measurements Platform feature

mcphc69—Used by E5-MCPM-B and SLIC cards for the Measurements Platform feature when running on VxWorks69.

oamhc—Used by E5-MCAP cards for enhanced OAM functions

oamhc69—Used by E5-MCAP cards for enhanced OAM functions, when running on VxWorks 69.

sccphc—Used by E5-SM8G-B cards to support EPAP-based features and the LNP ELAP Configuration feature. If no EPAP-based or LNP ELAP Configuration

feature is turned on, and an E5-SM8G-B card is present, then the GPL processes normal GTT traffic.

sfapp—Used by SLIC cards to support the Stateful Firewall Application.

siphc— Used by E5-SM8G-B Cards to support the SIP application.

ss7hc—Application GPL used by E5-E1T1-B and SLIC cards to support **E1** and **T1** signaling links.

Default:

Display all

loc (optional)

Location. The target card address and versions of all GPLs running at the specified card location. For E5-ENET-B, or STC cards, this information includes all non-activated flash GPLs. For cards that are not STC, E5-ENET-B or E5-IPSM cards, there is no additional data: this parameter limits the report to the target card address.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118, 1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110, 1113, 1115

Example

```
rept-stat-gpl
rept-stat-gpl:display=all
rept-stat-gpl:loc=1201
rept-stat-gpl:gpl=hipr2
rept-stat-gpl:gpl=siphc
rept-stat-gpl:gpl=enumhc
rept-stat-gpl:gpl=ipsg32
rept-stat-gpl:gpl=sfapp
```

Dependencies

No other `rept-stat-xxxx` command can be in progress when this command is entered.

2412 E2412 Cmd Rej: Command already in progress

Only one of the `display=all`, `loc`, and `gpl` parameters can be specified in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The value specified for the `gpl` parameter must be supported.

2238 E2238 Cmd Rej: The GPL type entered is not currently supported

Notes

To check the version of the EPAP or ELAP application, use the `rept-stat-mps` command.

When this command is entered, information is displayed only for the cards that are IS-NR or IS-ANR.

Use the `chg-gpl` command to turn auditing on and off.

Use the `rtrv-gpl` command to display the audit state.

The approved GPL is the GPL that resides on the active fixed disk and was made the approved version by specifying the GPL version number while executing the `act-gpl` command.

The trial GPL is the version of the GPL that was downloaded from the removable drive, but not activated by the `act-gpl` command.

When the `act-gpl` command is executed, the version specified becomes the approved GPL and the previously approved GPL becomes the trial GPL.

If any card is not running the active MASP system release version of a GPL, "ALM" is displayed to indicate that the card is in GPL alarm condition.

If GPL auditing is on, a minor alarm is shown, and "ALM" is displayed for each APPROVED GPL (`rtrv-gpl`) and for each RUNNING GPL (`rept-stat-gpl`) that does not match the GPL in the RELEASE column of the `rtrv-gpl` command output. If GPL auditing is off, the minor alarm is not activated, but "ALM" is displayed for each GPL that does not match the GPL in the RELEASE column.

If no `gpl` parameter is specified, the approved and trial versions for all GPLs are displayed.

If a GPL is not found, a version of "-----" is displayed. This should happen only for the OAM GPL when the plug-in USB flash drive is not inserted.

If the removable drive is inserted, an "*" (asterisk) is displayed next to the OAM trial version. The asterisk serves as a reminder that the trial version of a GPL is loaded when the card that is running the OAM is restarted. All other cards load their approved versions of GPLs when they are restarted.

If a card is inhibited, "-----" is displayed for the running version.

When the `gpl` parameter is not specified, the default is to display all application GPLs that are running on provisioned cards. The flashable GPLs (those loaded on the card by using the `init-flash` command) are not displayed.

A plus (+) symbol in the output indicates that the flash GPL currently being run has not yet been activated on the card. See the `act-flash` or `init-flash` command for a list of flash GPLs.

When a GPL is specified in the `gpl` parameter, the specified GPL for each card connected to the IMT is displayed.

Output

The output of the `rept-stat-gpl` command is site- and configuration-specific. The output examples show typical output for the commands that are entered; the output that is shown can differ from output that appears for a particular system.

This example shows the output when no parameters are defined. All GPLs for the card are listed:

```
rept-stat-gpl
```

```
rlghncxa03w 14-05-14 07:01:08 EST EAGLE 46.1.0
GPL      CARD      RUNNING      APPROVED      TRIAL
ATMHC    1103    128-002-000    128-002-000    128-002-000
ATMHC    1107    128-002-000    128-002-000    128-002-000
OAMHC    1113    025-002-000    025-002-000    -----
OAMHC    1115    025-002-000    025-002-000    -----
SCCPHC   1103    026-001-000    026-001-000    026-001-000
ATMHC    1205    025-001-000    025-001-000    025-001-000
ATMHC    1211    025-001-000    025-001-000    025-001-000
SS7HC    1105    027-001-000    027-001-000    027-001-000
IPSG     1305    040-000-000    040-000-000    040-000-000
SIPHC    1101    134-035-000    134-035-000    134-035-000
ENUMHC   1111    135-020-000    135-020-000    135-020-000
Command Completed.
```

```
;
```

This example shows the output when the `display=all` parameter is specified. IMT and application GPL information is shown.

```
rept-stat-gpl:display=all
```

```
rlghncxa03w 14-05-14 10:23:93 EST EAGLE 46.1.0

GPL      CARD      RUNNING      APPROVED      TRIAL
ENUMHC   1111    135-020-000    135-020-000    135-020-000
          BLMCAP    135-020-000    135-020-000    135-020-003
SIPHC    1101    134-035-000    134-035-000    134-035-000
          BLMCAP    134-035-000    134-035-000    134-035-001
OAMHC    1113    027-002-000    027-002-000    -----
          BLMCAP    027-001-000    027-001-000    210-001-003
OAMHC    1115    027-002-000    027-002-000    -----
          BLMCAP    027-001-000    027-001-000    210-001-003
SCCPHC   1212    027-001-000    027-001-000    027-001-000
          BLMCAP    027-001-000    027-001-000    210-001-003
ATMHC    1203    027-001-000    027-001-000    027-001-000
          BLMCAP    027-001-000    027-001-000    210-001-003
HIPR2    1109    027-005-000    027-005-000    027-005-000
HIPR2    1110    027-005-000    027-005-000    027-005-000
HIPR2    1209    027-005-000    027-005-000    027-005-000
HIPR2    1210    027-005-000    027-005-000    027-005-000
```

```

HIPR2      1309      027-005-000      027-005-000      027-005-000
HIPR2      1310      027-005-000      027-005-000      027-005-000
Command Completed.

```

```
;
```

This example shows the output when the `loc` parameter is specified for other cards:

```
rept-stat-gpl:loc=1217
```

```

rlghncxa03w 07-02-01 10:23:93 EST  EAGLE 37.5.0
GPL Auditing  ON

```

```

GPL          CARD          RUNNING          APPROVED          TRIAL
ATMHC        1217          125-001-000      125-001-000      125-001-000
              BLMCAP          125-001-000      125-001-000      125-001-000
Command Completed.

```

```
;
```

This example includes IPSP cards. The example contains truncated output, indicated by 3 vertical dots.

```
rept-stat-gpl:display=all
```

```

tekelecstp 17-09-15 15:11:33 EST  EAGLE 46.5.0.0.0-71.11.0
GPL Auditing  ON

```

```

GPL          CARD          RUNNING          APPROVED          TRIAL
OAMHC        1113          133-051-000 ALM  028-051-000      028-051-000
*
              BLMCAP          133-051-000      133-051-000      133-051-000
OAMHC        1115          028-051-000      028-051-000      028-051-000
*
              BLMCAP          133-051-000      133-051-000      133-051-000
HIPR2        1109          133-051-000      133-051-000      133-051-000
HIPR2        1110          133-051-000      133-051-000      133-051-000
HIPR2        1209          133-051-000      133-051-000      133-051-000
HIPR2        6110          133-051-000      133-051-000      133-051-000
.
.
.
SCCPHC       3117          001-051-013      001-051-013      001-051-010
              BLMCAP          133-042-000      133-042-000      133-042-000
SCCPHC       3201          001-051-013      001-051-013      001-051-010
              BLMCAP          133-042-000      133-042-000      133-042-000
MCPHC        1108          133-051-000      133-051-000      133-051-000
              BLMCAP          133-042-000      133-042-000      133-042-000
MCPHC        5313          133-051-000      133-051-000      133-051-000
              BLMCAP          133-042-000      133-042-000      133-042-000
SS7HC        2201          133-051-000      133-051-000      133-051-000
              BLIXP          133-050-000      133-050-000      027-051-000
SS7HC        3307          133-051-000      133-051-000      133-051-000

```

```

          BLIXP          133-050-000          133-050-000          027-051-000
SIPHC    1101          134-035-000          134-035-000          134-035-000
          BLMCAP          134-035-000          134-035-000          134-035-001
ENUMHC   1111          135-020-000          135-020-000          135-020-000
          BLMCAP          135-020-000          135-020-000          135-020-003
.
.
.
IPSG     3116          133-051-000          133-051-000          133-051-000
          BLIXP          133-050-000          133-050-000          027-051-000
IPSG     4103          133-051-000          133-051-000          133-051-000
          BLIXP          133-050-000          133-050-000          027-051-000
Command Completed.
;

```

This example displays the output when E5-MCAP cards are used:

```

rept-stat-gpl

tekelecstp 17-09-15 15:12:33 EST EAGLE 46.5.0.0-71.11.0
  GPL      CARD      RUNNING      APPROVED      TRIAL
  SIPHC    1101      134-035-000  134-035-000  134-035-000
  ATMHC    1103      128-002-000  128-002-000  128-002-000
  ATMHC    1107      128-002-000  128-002-000  128-002-000
  ENUMHC   1111      135-020-000  135-020-000
135-020-000
  OAMHC    1113      030-013-000  030-013-000  030-013-000 *
  OAMHC    1115      030-013-000  030-013-000  030-013-000 *
  SCCPHC   1212      025-001-000  025-001-000  025-001-000
  ATMHC    1205      025-001-000  025-001-000  025-001-000
  ATMHC    1211      025-001-000  025-001-000  025-001-000
  SS7HC    1105      027-001-000  027-001-000  027-001-000
  IPSG     1305      040-000-000  040-000-000  040-000-000
Command Completed.
;

```

This example displays the output when an E5-SM8G-B card is running the SIP application:

```

rept-stat-gpl:gpl=siphc

tekelecstp 12-07-27 14:11:48 EST EAGLE 45.0.0
rept-stat-gpl:gpl=siphc
Command entered at terminal #4.
GPL Auditing ON

  GPL      CARD      RUNNING      APPROVED      TRIAL
  SIPHC    1101      134-035-000  134-035-000  134-035-000

Command completed.
;

```

This example displays the output when an E5-SM8G-B card is running the S13 EIR application:

```
rept-stat-gpl:gpl=deirhc
```

```
tekelecstp 13-03-15 14:11:48 EST EAGLE 45.1.0
rept-stat-gpl:gpl=deirhc
Command entered at terminal #4.
GPL Auditing ON
```

GPL	CARD	RUNNING	APPROVED	TRIAL
DEIRHC	1104	134-060-000	134-060-000	134-060-000

```
Command Completed.
```

```
;
```

This example displays the output when an E5-SM8G-B card is running the ENUM NP application:

```
rept-stat-gpl:gpl=enumhc
```

```
tekelecstp 14-05-14 14:11:48 EST EAGLE 46.1.0
rept-stat-gpl:gpl=enumhc
Command entered at terminal #4.
GPL Auditing ON
```

GPL	CARD	RUNNING	APPROVED	TRIAL
ENUMHC	1111	135-020-000	135-020-000	135-020-000

```
Command completed.
```

```
;
```

This example displays the output when the SLIC card is running the IPSG application with data=gtt/nosccp:

```
rept-stat-gpl:gpl=ipsg32
```

```
tekelecstp 16-08-25 14:11:48 EST EAGLE 46.5.0
rept-stat-gpl:gpl=ipsg32
Command entered at terminal #4.
GPL Auditing ON
```

GPL	CARD	RUNNING	APPROVED	TRIAL
IPSG32	1101	140-012-000	140-012-000	140-012-000

```
Command completed.
```

```
;
```

This example shows the output when the `display=all` parameter is specified. IMT and application GPL information is shown:

```

rept-stat-gpl:display=all

tekelecstp 18-01-18 21:30:11 EST EAGLE 46.5.1.5.0-73.10.0
  rept-stat-gpl:display=all
  Command entered at terminal #18.
;

Command Accepted - Processing
tekelecstp 18-01-18 21:30:11 EST EAGLE 46.5.1.5.0-73.10.0
  GPL Auditing ON

  GPL      CARD      RUNNING      APPROVED      TRIAL
OAMHC     1113      033-010-001  033-010-001  ----- *
          BLMCAP      033-010-001  033-010-001  033-010-001
OAMHC     1115      033-010-001  033-010-001  ----- *
          BLMCAP      033-010-001  033-010-001  033-010-001
HIPR2     1109      141-003-000 ALM  143-005-000  143-005-000
HIPR2     1110      141-003-000 ALM  143-005-000  143-005-000
SFAPP     1103      009-011-001  009-011-001  033-010-000
          BLDC64      143-006-000 ALM  000-000-000  033-010-001
SS7HC     1106      033-010-000  033-010-000  033-010-000
          BLMCAP      077-005-000 ALM  033-010-001  033-010-001
IPSHC     1112      033-010-000  033-010-000  033-010-000
          BLIXP      077-005-000 ALM  033-010-001  033-010-001
SCCP64    1107      033-010-000  033-010-000  033-010-000
          BLDC64      064-011-000 ALM  000-000-000  033-010-001

  Command Completed.
;
Command Executed

```

This example displays the output when a SLIC card is running SFAPP application:

```

rept-stat-gpl:gpl=sfapp

tekelecstp 17-11-22 07:09:00 EST EAGLE 46.5.1.5.0-73.2.0
  rept-stat-gpl:gpl=sfapp
  Command entered at terminal #17.
;

Command Accepted - Processing
tekelecstp 17-11-22 07:09:00 EST EAGLE 46.5.1.5.0-73.2.0
  GPL Auditing ON

  GPL      CARD      RUNNING      APPROVED      TRIAL
SFAPP     1108      037-002-000  037-002-000  037-002-000

  Command Completed.
;
Command Executed

```

Legend

- **GPL**—GPL associated with the cards in the display

- **CARD**—Card location
- **RUNNING**—GPL version the card is running. If the card is not running the active MASP system release GPL, ALM appears after the GPL version number in this column.
- **APPROVED**—GPL version that is the approved GPL
- **TRIAL**—GPL version that is the trial GPL
- **ACTIVE**—GPL version downloaded using the `init-flash` command and activated using the `act-flash` command
- **INACTIVE**—GPL version downloaded using the `init-flash` command but not activated
- -----(dashes)—GPL is not present at the specified location
- *—The trial version will run if the card boots (shown to the right of the TRIAL column)
- **ALM**—Alarm indicator showing the system has an approved GPL that is not the GPL required for this software release according to the active MASP system release table.
- †—Currently running flash GPL has not been activated (shown between the RUNNING and APPROVED columns)

Related Topics

- [act-gpl](#)
- [alw-card](#)
- [chg-gpl](#)
- [copy-gpl](#)
- [init-card](#)
- [init-sys](#)
- [rtrv-gpl](#)

4.1.410 rept-stat-imt

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to display the primary, secondary, and associated maintenance states of the IMT bus. The primary state indicates whether the bus is normal, abnormal, or OOS for maintenance activity. The secondary state indicates the active/inhibited status of a card for a particular IMT bus.

Parameters

mode (optional)

Use this parameter to provide additional output listing the cards that currently have IMT alarm conditions outstanding. The additional output is repeated for each IMT bus following the bus status information. If no alarms are active on a given bus, no additional output is generated.

Range:*full***Default:**

Do not display additional information.

Example

```
rept-stat-imt
rept-stat-imt:mode=full
```

DependenciesNo other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

Notes

The card locations are stored only by the active MASP. The information is lost if the system switches from the active to the standby MASP.

The trouble locations are displayed sorted by card location.

Output

```
rept-stat-imt

rlghncxa03w 10-12-17 11:58:39 EST  EAGLE 43.0.0

IMT SYSTEM
  ALARM STATUS      = No Alarms.

IMT  PST           SST      AST
A    IS-NR         Active    -----
  ALARM STATUS      = No Alarms.

IMT  PST           SST      AST
B    IS-NR         Active    -----
  ALARM STATUS      = No Alarms.

Command Completed.
;

rept-stat-imt:mode=full

rlghncxa03w 10-12-17 12:03:19 EST  EAGLE 43.0.0

IMT SYSTEM
  ALARM STATUS      = * 0110 Failure detected on one IMT bus

IMT  PST           SST      AST
A    IS-NR         Active    -----
  ALARM STATUS      = No Alarms.
```

```

IMT  PST           SST           AST
B    OOS-MT-DSBLD  Fault          -----
      ALARM STATUS  = ** 0108 Major IMT failure detected.

```

CARDS WITH ACTIVE IMT B ALARMS:

```

CARD  DATE      TIME
1102  04-02-23  11:59:23
1103  04-02-23  12:01:23
1204  04-02-23  23:14:07
1205  04-02-23  23:14:07
1206  04-02-23  23:14:07
Command Completed.

```

;

Legend

- **IMT SYSTEM**—Logical entity representing the combination of both A and B IMT busses
- **IMT**—IMT bus A or IMT bus B
- **PST**—Primary state of the subsystem. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the subsystem. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the subsystem. See [Possible Values for PST/SST/AST](#).
- **ALARM STATUS**—List of trouble text alarm messages that have been generated for the IMT System or specified IMT bus
 - *—Minor Alarm
 - **—Major Alarm
 - *C—Critical Alarm

The states of the IMT bus are combined from the PST, SST and AST states as shown in [IMT Bus States](#) .

Table 4-52 IMT Bus States

PST	SST	AST	Definition
IS-NR	Active	----	The IMT bus is operating normally.
IS-ANR	Fault	----	The IMT bus has had a failure on at least one but not all cards.
IS-ANR	Manual	----	The IMT bus is inhibited, but some cards have been connected to it.
OOS-MT	Fault	----	The IMT bus has a failure on all cards.
OOS-MT-DSBLD	Manual	----	The IMT bus is inhibited and no cards are connected to it.

Table 4-52 (Cont.) IMT Bus States

PST	SST	AST	Definition
OOS-MT-DSBLD	Test	FLT CHK	The IMT Bus is inhibited and undergoing Fault Isolation test.
OOS-MT-DSBLD	Test	EXT BERT	The IMT Bus is inhibited and undergoing Extended BERT.

Related Topics

- [clr-imt-stats](#)
- [conn-imt](#)
- [disc-imt](#)
- [rept-imt-lvl1](#)
- [rept-imt-lvl2](#)
- [rmv-imt](#)
- [rst-imt](#)

4.1.411 rept-stat-ipconn

Use this command to display the dynamic status of SIP transport/ENUM/SCCP/SFAPP/IPS with SFLOG.

Parameters

This command has no parameters.

Example

```
rept-stat-ipconn
```

Dependencies

The SIPNP Feature must be enabled before retrieving the dynamic status of SIP transport.

At least one ENUM card must be provisioned before retrieving the dynamic status of ENUM connections.

At least one IPS card with SFLOG=yes must be provisioned before entering any TCP connection information on IPS.

At least one SCCP/SFAPP card must be provisioned before entering any Visualization connection information.

3179 E3179 Cmd Rej: SIPNP Feat not enabled or required card not provisioned

A SIP/ENUM/IPS with SFLOG card running the SIPHC/ENUMHC/IPS card with SFLOG=yes application must be configured before this command can be entered.

3240 E3240 Cmd Rej: SIP or ENUM or SFLOG not configured

Notes

None

Output

```
rept-stat-ipconn
```

```
tekelecstp 12-06-25 16:14:24 EST EAGLE 45.0.0
rept-stat-ipconn
Command entered at terminal #4.
```

CNAME	STATUS
conn1	DOWN
conn2	UP
conn5	DOWN

```
Command Completed.
```

```
;
```

Related Topics

- [chg-ip-conn](#)
- [dlt-ip-conn](#)
- [ent-ip-conn](#)
- [rtrv-ip-conn](#)

4.1.412 rept-stat-iptps

Use this command to display current and peak IPTPS usage for each IPSPG / IPGWx linkset in the system or for each link in the IPSPG / IPGWx linkset.

Parameters

history

This parameter specifies whether to report the history of IP TPS usage data on IPSPG linksets for the last 60 seconds.

Range:

yes

no

Default:

no

link

The link on the card specified in the `loc` parameter.

Synonym:*port***Range:***a, a1-a63, b, b1-b63*

Not all card types support all link parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have assigned signaling link ports.**loc**

The IPSG card location for which IP TPS usage data is to be reported.

Range:*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118***lsn (optional)**

Linkset name. The name of the linkset for which the report information is to be displayed.

Range:*ayyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters

Default:

All linksets are displayed

peakreset (optional)

Reset peak values to the current TPS values.

Range:*yes**no***Default:***no***tpscost**

This parameter specifies whether to report IP TPS usage data for IPSG linksets relative to network conditions, including average MSU size, association RTT, number of links provisioned on the card, and the protocol used (M2PA or M3UA).

Range:*yes**no***Default:***no***Example**`rept-stat-iptps`

```
rept-stat-iptps:lsn=lsgw1101
rept-stat-iptps:peakreset=yes
rept-stat-iptps:lsn=lsm2pa1:tpscost=yes
rept-stat-iptps:loc=1305:tpscost=yes
rept-stat-iptps:loc=1305:history=yes
rept-stat-iptps:loc=1305:link=a3:history=yes
```

Dependencies

If the linksets are not IPGWx or IPSTG, then this command cannot be entered.

3695 E3695 Cmd Rej: Command supported only for IPGWx and IPSTG linksets

The specified linkset name must exist in the database.

2303 E2303 Cmd Rej: Unknown LSN

The `history`, `link`, `loc`, and `tpscost` parameters can be specified for only IPSTG cards.

2131 E2131 Cmd Rej: Parameters not valid for card type

If the `history` parameter is specified, then the `loc` parameter must be specified.

5389 E5389 Cmd Rej: LOC must be specified with HISTORY

If the `tpscost` parameter is specified, then the `loc` or `lsn` parameter must be specified.

5404 E5404 Cmd Rej: LSN or LOC must be specified with TPSCOST

If the `loc` parameter is specified, then the `tpscost`, `history`, or `peakreset` parameter must be specified.

5411 E5411 Cmd Rej: LOC is valid only with HISTORY, TPSCOST, or PEAKRESET

Only one of the `history`, `tpscost`, and `peakreset` parameters can be specified in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `loc` and `lsn` parameters cannot be specified together in the command.

2294 E2294 Cmd Rej: LSN and LOC parms are mutually exclusive

The specified linkset must be type IPSTG.

5410 E5410 Cmd Rej: Command supported only for IPSTG linksets

Notes

Traffic peak data are stored only in OAM memory and are not preserved when the card that is running the OAM boots, or in the case of an active/standby switchover.

IPSTG linksets have SLKTPS linksets configured rather than IPTPS. SLKTPS configures the transactions per second for each link assigned to the IPSTG linkset as opposed to IPTPS which configures the combined transactions per second for the entire IPGW linkset. For an IPSTG linkset, the calculated IP TPS value (shown under

the 'CONFIG' column in the report) is made up of the aggregate calculated SLKTPS of all of the provisioned links in the linkset. Non-IPSG hosted links are not counted in the calculation as they do not support SLKTPS.

If a linkset contains a mixture of IPLIMx M2PA and IPSG-M2PA links, then the command does not report any data below the TPS header or raise alarms.

For IPSG-M3UA and IPGWx-M3UA links, the `rept-stat-iptps` command also counts the received DAUD messages and transmitted SNMs in response to DAUD audits (along with the other transmitted SNMs).

The process of updating the IP TPS counts for DAUD and DAUD response SNMs is:

- Rcv IP TPS count is updated with the total number of valid DAUD messages that are successfully queued for response processing based on the combination of RCs (Routing Contexts) and APCs (Affected Point Codes) received in the M3UA DAUD message.
- In reply to DAUD, based on the response generated (DUNA or (DAVA/DRST + SCON)), Tx IP TPS counts are updated for each RC/APC combination (either the same as the Rcv counts or twice the Rcv counts respectively).
- If no RC is present, then the Tx/Rcv IP TPS is incremented for the associated link corresponding to the lowest PORT ID for IPSG-M3UA links for the same association.
- For IPGWx-M3UA links, Tx/Rcv IP TPS are always incremented on the default PORT Index (since only one link can be configured in IPGWx GPL).
- For IPGWx-M3UA links, Rcv IP TPS count are also updated with the number of valid and non discarded Deviated DAUD message received (since Deviated DAUD always contains single RC and APC combination).

All of the transmitted SNMs are pegged in IPTPS Tx counts and are considered in the TPS algorithms.

Output

The `rept-stat-iptps` command reports on IPSG and IPGWx linkset IP TPS. The report includes the following information for the system and for each IPSG or IPGWx linkset:

- Configured IP TPS alarm threshold
- Configured IP TPS
- Current IP TPS transmit and receive usage for 15 seconds
- Peak IP TPS transmit and receive usage and timestamp for all 15 second periods since last reset

As of Release 44.0, the `rept-stat-iptps` command is enhanced to report derived IP TPS usage for IPSG linksets.

- Current derived IP TPS transmit and receive usage over a window of 15 seconds
- Peak IP TPS transmit and receive usage and timestamp for all 15 second periods since last reset
- 60 seconds history of the IP TPS transmit and receive usage

The derived IP TPS is calculated by adding the costs for factors such as average MSU size, association round trip time, number of provisioned links on card and protocol used (M2PA or M3UA). The derived TPS has valid values if:

- The specified card location indicates an E5-ENET-B/SLIC IPSG card or the links in the specified linkset are hosted on E5-ENET-B or SLIC card,

- the E5-ENET-B IPSP High Throughput feature is turned ON,
- the actual traffic rate running on the IPSP card > 6500 TPS and
- the network configuration or traffic characteristics exceeds optimal configuration limits as shown in [Table 4-53](#).

Table 4-53 Baseline Configuration Changes for the E5-ENET-B Card

E5-ENET-B Card Baseline Configuration	E5-ENET-B IPSP High Throughput feature OFF	E5-ENET-B IPSP High Throughput feature ON
TPS	6500	9500
Max RTT (ms)	120	50
Avg. MSU size (bytes)	0-272	0-120
Number of associations/links	16	4
Protocol	M2PA and M3UA	M2PA

For all other conditions, including the use instead of an E5-ENET-B card, the derived IP TPS values is invalid and is denoted by dashes (--) in the *Derived TPS* and column.

The following table shows values for Max rsvdslktps and Max maxslktps:

Table 4-54 MaxTPS Per Card

E5-ENET-B IPSP High Throughput FAK	Max RSVDSLKTPS			Max MAXSLKTPS		
	E5-ENET-A	E5-ENET-B	SLIC	E5-ENET-A	E5-ENET-B	SLIC
FAK is OFF	5000	6500	10000	5000	6500	10000
FAK is ON.	5000	9500	10000	5000	9500	10000

If the linkset is specified, then the command reports the same information for the individual links in the linkset.

If the `peakreset=yes` parameter is specified, then the command resets all the stored peak values to the current actual usage for each link, and recalculates linkset and system peaks before reporting usage.

If the linkset is specified with the `peakreset=yes` parameter, then the command recalculates peaks for the specified linkset and resets all the stored peak values to the current actual usage for each link contained in the linkset before reporting usage.

The peaks for transmit and receive, and for link, and linkset IP TPS may all occur at different times.

The IP TPS value shown in the command may contain one extra MSU if the linkset is specified. Because the alarm calculations are implemented using integer math, rounding may occur at each entity (link, linkset) if the IP TPS value for the entity is not

evenly divisible by 15. This could occur when performing an IPTPS report for a linkset that has more than one link configured.

For mixed IPLIMx-M2PA and IPSG-M2PA linksets, the command does not report any data or raise alarms.

IPGW linksets display dashes in the *CONFIG/MAX* column.

Asterisk sign indicates that parameter (*CONFIG/RSVD* or *CONFIG/MAX*) is used to generate TPS alarm for IPSG links/linkset.

This example shows the output for an IPGW linkset:

```
rept-stat-iptps:lsn=ls1307a

eagle10212 10-04-03 09:38:48 EST EAGLE 42.0.0
IP TPS USAGE REPORT
          THRESH CONFIG/ CONFIG/          TPS  PEAK
PEAKTIMESTAMP          RSVD      MAX
-----
      LSN
      ls1307a      100%      10000      --- TX:  4800  5000  03-05-05
09:49:09
                                          RCV:  4850  5000  03-05-05
09:49:09
-----
      LOC  LINK
      1307  A      80%      2500      ---- TX:  2399  2500  03-05-05
09:49:09
                                          RCV:  2428  2500  03-05-05
09:49:09
```

This example shows the output when IPSG and IPGW linksets are included:

```
rept-stat-iptps

rlghncxa03w 11-03-13 16:20:46 EST EAGLE 44.0.0
IP TPS USAGE REPORT
          THRESH CONFIG/ CONFIG/          TPS  PEAK
PEAKTIMESTAMP          RSVD      MAX
-----
      LSN
      ls1303a      100%      500*      500 TX:    0    0  00-00-00
00:00:00
                                          RCV:    0    0  00-00-00
00:00:00
      ls1305a      100%      2500*     5000 TX:    0   10  11-02-29
12:46:37
                                          RCV:    0   10  11-02-29
```

```

12:57:52
   ls1305i      100%      0*      0 TX:      0      0 00-00-00
00:00:00
                                RCV:      0      0 00-00-00
00:00:00
   lsitunaa    100%      0*      0 TX:      0      0 00-00-00
00:00:00
                                RCV:      0      0 00-00-00
00:00:00
   lsitunbb    100%      0*      0 TX:      0      0 00-00-00
00:00:00
                                RCV:      0      0 00-00-00
00:00:00
   lsituis     100%      0*      0 TX:      0      0 00-00-00
00:00:00
                                RCV:      0      0 00-00-00
00:00:00
   lsituns     100%      0*      0 TX:      0      0 00-00-00
00:00:00
                                RCV:      0      0 00-00-00
00:00:00
   lsm2pa1     100%    2500*   6500 TX:      0     10 11-02-29
12:56:07
                                RCV:      0     10 11-02-29
12:58:07
   ls1307a     100%      100     --- TX:      0      0 00-00-00
00:00:00
                                RCV:      0      0 00-00-00
00:00:00
   ls1315a     100%     4000     --- TX:      0      0 00-00-00
00:00:00
                                RCV:      0      0 00-00-00
00:00:00
   ls1317i     100%     4000     --- TX:      0      0 00-00-00
00:00:00
                                RCV:      0      0 00-00-00
00:00:00
   lgipgw      100%     4000     --- TX:      0      0 00-00-00
00:00:00
                                RCV:      0      0 00-00-00
00:00:00
   lgipgw2     100%     4000     --- TX:      0      0 00-00-00
00:00:00
                                RCV:      0      0 00-00-00
00:00:00

```

```

-----
---
Command Completed.

```

This example shows the output for an IPSPG M3UA linkset:

```
rept-stat-iptps:lsn=ipsgm3ua
```

```

rlghncxa03w 10-04-03 16:20:46 EST EAGLE 42.0.0
IP TPS USAGE REPORT
          THRESH CONFIG/ CONFIG/          TPS      PEAK
PEAKTIMESTAMP
                RSVD      MAX
-----
      LSN
      IPSGM3UA      100%      4000      10000* TX:      3700      4000 03-05-05
09:49:19
                                          RCV:      3650      4000 03-05-05
09:49:19
-----
      LOC LINK
      1101      A      80%      2000      5000* TX:      1851      2000 03-05-05
09:49:19
                                          RCV:      1801      2000 03-05-05
09:49:19
      1201      A      80%      2000      5000* TX:      1849      2000 03-05-05
09:49:19
                                          RCV:      1799      2000 03-05-05
09:49:19
-----

```

This example shows the output for a mixed linkset when IP SG M2PA links are included:

```
rept-stat-iptps:lsn=ipsgm2pa
```

```

rlghncxa03w 10-04-03 16:20:46 EST EAGLE 42.0.0
IP TPS USAGE REPORT
          THRESH CONFIG/ CONFIG/          TPS      PEAK
PEAKTIMESTAMP
                RSVD      MAX
-----
      LSN
      IPSGM2PA      100%      10000*      20000 TX:      4800      5000 03-05-05
09:49:09
                                          RCV:      4850      5000 03-05-05
09:49:09
-----
      LOC LINK
      1105      A      80%      2500*      5000 TX:      2399      2500 03-05-05
09:49:09
                                          RCV:      2428      2500 03-05-05
09:49:09
      1205      A      80%      2500*      5000 TX:      2401      2500 03-05-05
09:49:09
-----

```

```

                                RCV:  2422    2500  03-05-05
09:49:09
  1305    A    80%    ----    ----    TX:  ----    ----
-----
                                RCV:  ----    ----
-----
  2105    A    80%    ----    ----    TX:  ----    ----
-----
                                RCV:  ----    ----
-----
-----
-----

```

This example shows the output for an E5-ENET-B IPSP card and displays TPS cost information for a specific location:

```
rept-stat-iptps:loc=1305:tpscost=yes
```

```
eagle10212 11-07-20 09:07:34 EST EAGLE 44.0.0
IP TPS USAGE REPORT
```

	Actual TPS	Derived TPS	Derived PEAK TPS	PEAKTIMESTAMP

LOC				
1305	Tx: 8000	8240	8500	11-08-03
10:00:25				
	Rcv:8000	8240	8600	11-08-03
10:10:25				

LSN				
LINK				
lsm2pa1 A	Tx: 4000	4120	4380	11-08-03
10:00:25				
	Rcv:4000	4120	4120	11-08-03
10:10:25				
lsm2pa2 B	Tx: 4000	4120	4120	11-08-03
10:00:25				
	Rcv:4000	4120	4480	11-08-03
10:10:25				

Command Completed.

This example shows the output for an E5-ENET-B IPSP card and displays TPS cost information for a linkset:

rept-stat-iptps:lsn=lsm2pa1:tpscost=yes

eagle10212 11-07-20 09:07:34 EST EAGLE 44.0.0
IP TPS USAGE REPORT

		Actual TPS	Derived TPS	Derived PEAK TPS	PEAKTIMESTAMP

LSN					
lsm2pa1		Tx: 13400	14430	14675	11-08-03 10:00:25
		Rcv:14200	15000	15320	11-08-03 10:10:25

LOC	LINK				
1305	A	Tx: 6800	7150	7250	11-08-03 10:00:25
		Rcv:7000	7340	7550	11-08-03 10:10:25
1306	B	Tx: 6600	7280	7425	11-08-03 10:00:25
		Rcv:7200	7660	7770	11-08-03 10:10:25

Command Completed.

This example shows the output for an E5-ENET-B IPSG card and displays history information:

rept-stat-iptps:loc=1111:history=yes

eagle10212 12-01-18 09:07:34 EST EAGLE5 44.0.0
IP TPS USAGE HISTORY REPORT for Card LOC=1111

SAMPLE#	SLK	ACTUAL		DERIVED		AVG RTT	AVG TX MSU SIZE	AVG RX MSU SIZE
		TX	RX	TX	RX			

1	A	1702	0	2331	---	7	292	0
	A1	3403	3403	4662	4662	14	292	292

.

SAMPLE#	SLK	ACTUAL		DERIVED		AVG	AVG TX	AVG RX
		TX	RX	TX	RX	RTT	MSU SIZE	MSU SIZE

60	A	1702	0	2331	---	7	292	0
	A1	3403	3403	4662	4662	14	292	292

Command Completed.The following example reports

This example shows the output for history information for link A of an E5-ENET-B IPSP card:

```
rept-stat-iptps:loc=1111:port=a:history=yes
```

```
eagle10212 12-01-18 09:07:34 EST EAGLE5 44.0.0
IP TPS USAGE HISTORY REPORT for Card LOC=1111 PORT=A
```

SAMPLE#	SLK	ACTUAL		DERIVED		AVG	AVG TX
		TX	RX	TX	RX		
AVG RX						RTT	MSU SIZE
MSU SIZE							

```
-----
---
1      A      3403      0      4662      ---      8
292    0
```

```
-----
---
.
.
.
```

SAMPLE#	SLK	ACTUAL		DERIVED		AVG	AVG TX
		TX	RX	TX	RX		
AVG RX						RTT	MSU SIZE
MSU SIZE							

```
-----
---
60     A      3403      0      4662      ---      9
292    0
```

```
-----
---
```

Command Completed.

Legend

- **LSN**—Linkset name
- **THRESH**—Threshold at which an alarm will be generated to indicate that the actual linkset TPS is approaching the configured linkset iptps value (Isusealm value as shown in `rtrv-ls` output).
- **CONFIG/RSVD**—Reserved TPS for the linkset
- **CONFIG/MAX**—Maximum TPS for the linkset
- **TPS**—Current transmit (TX) and receive (RCV) TPS for 15 seconds

- **PEAK**—Peak transmit (TX) and receive (RCV) TPS usage for all 15 second periods since the last peak reset
- **PEAKTIMESTAMP**—Date and time that the displayed transmit and receive TPS peaks occurred
- **LOC**—Location of the card that contains a displayed link in the linkset
- **PORT**—A signaling link in the linkset
- **THRESH**—The `slkusealm` value as shown in `rtrv-ls` output
- **CONFIG/RSVD**—Reserved TPS for each link in the linkset. (-----). There is no configurable TPS for links.
- **CONFIG/MAX**—Maximum TPS for each link in the linkset. (-----). There is no configurable TPS for links.
- **TPS**—Current transmit (TX) and receive (RCV) TPS for 15 seconds
- **PEAK**—Peak transmit (TX) and receive (RCV) TPS usage for all 15 second periods since the last peak reset
- **PEAKTIMESTAMP**—Date and time that the displayed transmit and receive TPS peaks occurred
- **Derived TPS**—Derived transmit (TX) and receive (RCV) TPS for 15 seconds
- **Derived Peak TPS**—Derived peak transmit (TX) and receive (RCV) TPS usage for all 15 second periods since the last peak reset
- **Actual Tx/Rx**—Actual transmit (TX) and receive (RCV) TPS for 60 seconds
- **Derived Tx/Rx**—Actual transmit (TX) and receive (RCV) TPS for 60 seconds
- **Avg TX MSU Size**—Average transmitted MSU size
- **Avg RTT**—Average round trip time
- **Avg RX MSU Size**—Average received MSU size

Related Topics

- [chg-ctrl-feat](#)
- [chg-ls](#)
- [chg-sg-opts](#)
- [enable-ctrl-feat](#)
- [ent-ls](#)
- [rtrv-ctrl-feat](#)
- [rtrv-ls](#)
- [rtrv-sg-opts](#)

4.1.413 rept-stat-j1

Use this command to display the J1 port status and signaling link status for cards with provisioned J1 ports.

Parameters

loc (optional)

Card address. The unique identifier of a specific LIMT1 card located in the STP.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

Default:

Information for all LIMT1 cards having J1 interfaces is reported.

j1port (optional)

J1 port number. This parameter displays information for a J1 port on the card in the specified card location.

Range:

1-8

Example

```
rept-stat-j1
rept-stat-j1:loc=1101
rept-stat-j1:loc=1101:j1port=1
```

Dependencies

No other rept-stat-xxx command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The loc parameter must be specified when the j1port parameter is specified.

2366 E2366 Cmd Rej: LOC must be specified

The OAM card location cannot be specified for the loc parameter.

2376 E2376 Cmd Rej: Specified LOC is invalid

MUX card locations (xy09 and xy10 where x is the frame and y is the shelf) cannot be specified for the loc parameter.

2016 E2016 Cmd Rej: Card Location is out of range - loc.

Card location 1118 cannot be specified.

2025 E2025 Cmd Rej: Invalid card location.

Notes

Specifying the command without any parameters displays J1 port status for all cards with provisioned J1 ports.

If the `loc` parameter is specified, status is displayed for all J1 ports provisioned on the card in the specified location.

If the `loc` and `j1port` parameters are specified, the J1 port status summary is displayed for all J1 ports provisioned on the card in the specified location, followed by the status of all signaling links assigned to the specified J1 port on the card.

Output

This example shows the output when no parameters are specified:

```
rept-stat-j1
```

```
tekelecstp 13-12-20 13:33:09 EST 46.0.0-65.3.0
LOC   J1PORT  PST           SST           AST
1203  1         IS-NR         Avail         LINE
1203  2         IS-NR         Avail         LINE
1203  3         IS-NR         Avail         -----
1203  7         OOS-MT        Unavail       -----
1207  1         IS-NR         Avail         -----
1207  2         IS-NR         Avail         -----
Command Completed.
```

```
;
```

This example shows the output when the `loc` parameter is specified:

```
rept-stat-j1:loc=1203
```

```
tekelecstp 13-12-20 13:33:09 EST 46.0.0-65.3.0
LOC   J1PORT  PST           SST           AST
1203  1         IS-NR         Avail         LINE
1203  2         IS-NR         Avail         LINE
1203  3         IS-NR         Avail         -----
1203  7         OOS-MT        Unavail       -----
Command Completed.
```

```
;
```

These examples show the output when the `loc` and `j1port` parameters are specified:

```
rept-stat-j1:loc=1203:j1port=1
```

```
tekelecstp 13-12-20 13:33:09 EST 46.0.0-65.3.0
LOC   J1PORT  PST           SST           AST
1203  1         IS-NR         Avail         LINE
ALARM STATUS           = No Alarms.
UNAVAIL REASON         = --
SLK   TS   PST           SST           AST
A     1   IS-NR         Avail         ---
A1    2   IS-NR         Avail         ---
Command Completed.
```

```
;
```

```
rept-stat-j1:loc=1203:j1port=2

tekelecstp 13-12-20 13:33:09 EST 46.0.0-65.3.0
LOC    J1PORT    PST          SST          AST
1203   2           IS-NR        Avail        LINE
ALARM STATUS      = No Alarms.
UNAVAIL REASON    = --
Command Completed.
;
```

Legend

- LOC-- Card location
- J1PORT--Number of the J1 port provisioned on the card in the specified location.
- ALARM STATUS--Either "No Alarms" or current alarm number and text.
- UNAVAIL REASON--Reason for the J1 port being unavailable
- SLK--Signaling link assigned to the J1 port
- TS-- Timeslot assigned to the signaling link

Related Topics

- [chg-j1](#)
- [dlt-j1](#)
- [ent-j1](#)
- [rtrv-j1](#)
- [tst-j1](#)

4.1.414 rept-stat-lfs

Use this command to generate a report of all the SS7 links that are under LFS test. Along with the link identification information, the command output lists the current LBP, the test pattern, the maximum bit-errors threshold, the bit-errors since the beginning of this test, the maximum test time, and the time elapsed since the beginning of the test.

Parameters

link (optional)

The signaling link port on the card specified in the `loc` parameter.

Synonym:

port

Range:

a, b, a1 - a31, b1 - b31

Not all card types support all `link` parameter values.

See [Table A-1](#) for valid `link` parameter range values for each type of card that can have assigned signaling link ports.

loc (optional)

This parameter is mandatory when the `link` parameter is specified.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1212, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
rept-stat-lfs
rept-stat-lfs:loc=1201
rept-stat-lfs:loc=1201:link=a1
```

Dependencies

The LFS feature must be turned on before this command can be entered.

2870 E2870 Cmd Rej: LFS feature must be ON

The card location specified in the `loc` parameter must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The signaling link that is specified in the `link` parameter must be assigned to the card in the `loc` parameter location.

2373 E2373 Cmd Rej: Link is unequipped in the database

Card locations 1113, 1114, 1115, 1116, 1117, 1118, and all `xy09` and `xy10` locations (`x` is the frame and `y` is the shelf) cannot be specified in the `loc` parameter.

2376 E2376 Cmd Rej: Specified LOC is invalid

The card location (`loc` parameter) must be an E5-E1T1-B card, provisioned with the LIMT1 card type, configured with either the SS7ANSI or CCS7ITU application.

2892 E2892 Cmd Rej: LOC is not LFS capable

If the `link` parameter is specified, the `loc` parameter must be specified.

2903 E2903 Cmd Rej: LOC and PORT parameter combination must be specified

This command cannot be entered during upgrade.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

Output

If no parameters are specified, all links that are in LFS test are displayed.

```
rept-stat-lfs
```

```

rlghncxa03w 04-02-27 16:50:24 EST EAGLE 31.3.0
SLK      LBP  PATTERN      MAX-ERRORS  BIT_ERRORS  MAX-TIME  TEST-
TIME
 1201,A   5  B0247           56           30  01:00:00  00:00:50
 1202,A   3  B511            56           27  01:00:00  00:01:05
 1203,A   1  OCTET           56           12  01:00:00  00:02:07
 1204,A   6  ALTERNATE       56           28  01:00:00
00:04:08
 1205,A   2  B0247           56           36  01:00:00
00:03:05
 1206,A   1  B0247           56           15  01:00:00
00:06:06
 1207,A   3  B0247           56           19  01:00:00
00:02:04
 1208,A   5  B0247           56           23  01:00:00
00:04:01
;
```

If only the `loc` parameter is specified, all links in LFS test on the specified card are displayed.

```
rept-stat-lfs:loc=1208
```

```

rlghncxa03w 04-02-27 16:50:24 EST EAGLE 31.3.0
SLK      LBP  PATTERN      MAX-ERRORS  BIT_ERRORS  MAX-TIME  TEST-
TIME
 1208,A   5  B0247           56           23  01:00:00
00:04:01
 1208,B1  4  B0247           56           23  01:00:00
00:08:01
;
```

If the `loc` and `link` parameters are specified, only the specified link on the specified card is displayed.

```
rept-stat-lfs:loc=1208:link=a
```

```

rlghncxa03w 04-02-27 16:50:24 EST EAGLE 31.3.0
SLK      LBP  PATTERN      MAX-ERRORS  BIT_ERRORS  MAX-TIME  TEST-
TIME
 1208,A   5  B0247           56           23  01:00:00
00:04:01
;
```

Legend

- **SLK**—Signaling link identifier; same as `loc` and `link` parameters of `act-lbp` command

- **LBP**—The loopback point of this test; same as `lbp` parameter of `act-lbp` command
- **PATTERN**—Test pattern; same as `pattern` parameter of `act-lbp` command
- **MAX-ERRORS**—Bit-error threshold allowed for this LFS test; same as `maxerr` parameter of `act-lbp` command
- **BIT_ERRORS**—Number of bit-errors since the beginning of this test
- **MAX-TIME**—Time window for testing each loop-back point; same as `time` parameter of `act-lbp` command
- **TEST-TIME**—Amount of time the test has run

Related Topics

- [rept-stat-slk](#)

4.1.415 rept-stat-lg

Use this command to display measurement and statistics of all the LG objects on Eagle node. The command class is `TKLC_INTERNAL` inheriting properties of `DEBUG` class. The Load Generator is supported on IPSTG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

display (optional)

Display mode of reporting the output.

Range:

brief

Displays the summary statistics information for LG object's and its child hierarchy i.e. brief of system level stats will show only brief level of system->group->card->engine statistics

all

Displays the detailed statistics information for LG object's and its child hierarchy i.e. system level stats will show its system->group->card->engine statistics

Default:

brief

engine (optional)

Range: ayyyyyyyyy

Up to 10 alphanumeric characters; the first character must be a letter.

grp (optional)

Range: ayyyyyyyyy

Up to 10 alphanumeric characters; the first character must be a letter

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
 6101 - 6108, 6111 - 6118

reset (optional)

This parameter clears the statistics by setting them to zero.

Range:**Rx**

Receive Direction

Tx

Transmit Direction

All

Both in Tx and rx directions

Example

```
rept-stat-lg
rept-stat-lg:display=all
rept-stat-lg:reset=tx
rept-stat-lg:reset=all
rept-stat-lg:grp=lgroup1
rept-stat-lg:grp=lgroup1:display=brief
rept-stat-lg:grp=lgroup1:reset=tx
rept-stat-lg:loc=1101
rept-stat-lg:loc=1101:display=all
rept-stat-lg:loc=1101:reset=all
rept-stat-lg:engine=txengine1
rept-stat-lg:engine=txengine1:display=brief
rept-stat-lg:engine=txengine1:reset=all
```

Dependencies

The `reset` and `display` parameters cannot be specified together.

The `grp`, `loc`, and `engine` parameters cannot be specified together

2155 E2155 Cmd Rej: Invalid parameter combination specified

The LG group with the specified group name must exist in the system.

5207 E5207 Cmd Rej: LG Group not defined

The card location must not be 1113-1118, orxy09 andxy10 wherexis the frame andyis the shelf.

2154 E2154 Cmd Rej: Card slot reserved by system

The value specified for the `engine` parameter must already exist in the LG Engine table.

5209 E5209 Cmd Rej: LG Engine not defined

The value of `reset` parameter must be all when the engine parameter is specified.

5232 E5232 Cmd Rej: Unsupported value of Reset with Engine parameter

The card location specified in the `loc` parameter must be of a provisioned LG card.

5239 E5239 Cmd Rej: LG card not defined

Output

This example shows the LG System level statistics in brief mode:

```
rept-stat-lg or rept-stat-lg:display=brief
```

```
tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
rept-stat-lg
Command entered at terminal #4.
LG System Statistics
LG System          TX: Active    RX: Active
LG Group   : lggroup1  TX: Active    RX: Active
  LG Card   : 1101     TX: Active    RX: Active
  LG Card   : 1102     TX: Active    RX: Active
LG Group   : lggroup2  TX: Active    RX: Active
  LG Card   : 1201     TX: Active    RX: Active
Command Completed.
;
```

This example displays the LG System level statistics in detailed mode:

```
rept-stat-lg:display=all
```

```
tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
rept-stat-lg:display=all
Command entered at terminal #4.
LG System Statistics
LG System          TX: Active    RX: Active
LG Group   : lggroup1  TX: Active    RX: Active
  LG Card   : 1101     TX: Active    RX: Active
  TX Engine(s)
ENGINE      STATE    EVENT        TPS   BYTES    MSUS
txengine1   Active   isuptx1      100   22222200  222222
txengine2   Active   isuptx2      200   22222200  222222
txengine3   Inactive isuptx3       0     0         0
  RX Engine(s)
ENGINE      STATE    EVENT        TPS   BYTES    MSUS
rxengine1   Active   isuprx1      200   22222200  222222
```

```

rxengine2  Active  isuprx2    200  22222200  2222222
DIR TPS    BYTES      MSUS
Tx  300    44444400  444444
Rx  400    44444400  444444

LG Card   : 1102  TX: Active  RX: Active
TX Engine(s)
ENGINE    STATE   EVENT      TPS    BYTES
MSUS
txengine4  Active  isuptx1    100  22222200
222222
txengine5  Active  isuptx2    200  22222200
222222
RX Engine(s)
ENGINE    STATE   EVENT      TPS    BYTES
MSUS
rxengine3  Active  isuprx1    200  22222200
2222222
rxengine4  Active  isuprx2    200  22222200  2222222
DIR TPS    BYTES      MSUS
Tx  300    44444400  444444
Rx  400    44444400  444444
LG Group  : lggroup2  TX: Active  RX: Active
LG Card   : 1201  TX: Active  RX: Active
TX Engine(s)
ENGINE    STATE   EVENT      TPS    BYTES
MSUS
txengine1  Active  isuptx1    100  22222200
222222
txengine2  Active  isuptx2    200  22222200
222222
txengine3  Inactive isuptx3    0    0          0
RX Engine(s)
ENGINE    STATE   EVENT      TPS    BYTES
MSUS
rxengine1  Active  isuprx1    200  22222200
2222222
rxengine2  Active  isuprx2    200  22222200  2222222
DIR TPS    BYTES      MSUS
Tx  300    44444400  444444
Rx  400    44444400  444444

```

Command Completed.

;

This example resets the LG System level statistics:

```
rept-stat-lg:reset=all
```

```

tekelecstp 09-04-29 18:15:20 EST  xx.x.x-xx.x.x
rept-stat-lg:reset=all
Command entered at terminal #4.

```


Command Completed.

;

This example displays the LG Group level statistics in brief mode:

```
rept-stat-lg:grp=lgroup1
```

```
tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
rept-stat-lg:grp=lgroup1
Command entered at terminal #4.
LG Group Statistics
LG System          TX: Active    RX: Active
LG Group : lgroup1 TX: Active    RX: Active
  LG Card   : 1101 TX: Active    RX: Active
  LG Card   : 1102 TX: Active    RX: Active
Command Completed.
```

;

This example shows the LG Group statistics in detailed mode:

```
rept-stat-lg:grp=lgroup1:display=all
```

```
tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
rept-stat-lg:grp=lgroup1:display=all
Command entered at terminal #4.
LG Group Statistics
LG System          TX: Active    RX: Active
LG Group : lgroup1 TX: Active    RX: Active
  LG Card   : 1101 TX: Active    RX: Active
  TX Engine(s)
  ENGINE     STATE   EVENT      TPS   BYTES    MSUS
  txengine1  Active  isuptx1    100   22222200 222222
  txengine2  Active  isuptx2    200   22222200 222222
  txengine3  Inactive isuptx3     0     0         0
  RX Engine(s)
  ENGINE     STATE   EVENT      TPS   BYTES    MSUS
  rxengine1  Active  isuprx1    200   22222200 222222
  rxengine2  Active  isuprx2    200   22222200 222222
  DIR TPS    BYTES    MSUS
  Tx  300    44444400 444444
  Rx  400    44444400 444444

  LG Card   : 1102 TX: Active    RX: Active
  TX Engine(s)
  ENGINE     STATE   EVENT      TPS   BYTES    MSUS
  txengine4  Active  isuptx1    100   22222200 222222
  txengine5  Active  isuptx2    200   22222200 222222
  RX Engine(s)
  ENGINE     STATE   EVENT      TPS   BYTES    MSUS
  rxengine3  Active  isuprx1    200   22222200 222222
  rxengine4  Active  isuprx2    200   22222200 222222
  DIR TPS    BYTES    MSUS
```

```

Tx 300 44444400 444444
Rx 400 44444400 444444
Command Completed.

```

;

This example resets LG Group statistics"

```
rept-stat-lg:grp=lgroup1:reset=all
```

```

tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
rept-stat-lg:grp=lgroup1:reset=all
Command entered at terminal #4.
Command Completed.

```

;

This example shows LG Card statistics in brief mode:

```
rept-stat-lg:loc=1101 or rept-stat-lg:loc=1101:display=brief
```

```

tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
rept-stat-lg:loc=1101
Command entered at terminal #4.
LG Card Statistics
LG System          TX: Active   RX: Active
LG Group   : lgroup1  TX: Active   RX: Active
LG Card    : 1101     TX: Active   RX: Active
DIR TPS   BYTES      MSUS        MISSEQ      CONGP      DISCARDS
RTT
Tx 300   44444400   444444      0           0           0           0
Rx 400   44444400   444444      -           -           -           -
Command Completed

```

;

This example displays the LG Card statistics in detailed mode:

```
rept-stat-lg:loc=1101:display=all
```

```

tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
rept-stat-lg:loc=1101:display=all
Command entered at terminal #4.
LG Card Statistics
LG System          TX: Active   RX: Active
LG Group   : lgroup1  TX: Active   RX: Active
LG Card    : 1101     TX: Active   RX: Active
TX Engine(s)
ENGINE   STATE   EVENT      TPS   BYTES      MSUS
MISSEQ  CONGP  DISCARDS  RTT
txengine1 Active  isuptx1   100   22222200   222222
0       0       0       0
txengine2 Active  isuptx2   200   22222200   222222
0       0       0       0

```

```

txengine3   Inactive isuptx3      0    0          0
           0          0          0          0
RX Engine(s)
ENGINE      STATE      EVENT      TPS    BYTES      MSUS
rxengine1   Active    isuprx1    200    22222200   2222222
rxengine2   Active    isuprx2    200    22222200   2222222
DIR TPS    BYTES      MSUS      MISSEQ    CONGP      DISCARDS  RTT
Tx  300    44444400   444444    0         0          0         0
Rx  400    44444400   444444    -         -          -         -

```

```
Command Completed
```

```
;
```

This example resets the LG Card statistics:

```
rept-stat-lg:loc=1101:reset=all
```

```

tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
rept-stat-lg:loc=1101:reset=all
Command entered at terminal #4.
Command Completed.

```

```
;
```

This example displays the LG Engine statistics (display level can be either brief or all output is the same:

```
rept-stat-lg:engine=txengine1 or rept-stat-
lg:engine=txengine1:display=brief or rept-stat-
lg:engine=txengine1:display=all
```

```

tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
rept-stat-lg:engine=txengine1
Command entered at terminal #4.

```

```

LG Engine Statistics
LG System           TX: Active    RX: Active
LG Group   : lgroup1  TX: Active    RX: Active
LG Card    : 1102     TX: Active    RX: Active
TX Engine(s)
ENGINE      STATE      EVENT      TPS    BYTES      MSUS
           MISSEQ    CONGP      DISCARDS  RTT
txengine1   Active    isuptx1    100    22222200   222222
           0          0          0         0
Command Completed

```

```
;
```

This example resets the LG Engine statistics:

```
rept-stat-lg:engine=txengine1:reset=all
```

```
tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
```

```
rept-stat-lg:engine=txengine1:reset=all
Command entered at terminal #4.
Command Completed.
```

;

4.1.416 rept-stat-lnp

Use this command to generate a report of the local number portability (LNP) status information.

When this command is entered with no parameters, a summary of the LNP status of all equipped SCCP cards is provided. This summary includes Global Title Translation (GTT) and LNP function status for every SCCP card, as well as LNPQS system information.

When the `loc` parameter is specified, a detailed status of LNP information for the specified SCCP card is provided. These detailed reports include information for each of the following functions: Global Title Translation (GTT), LNP Message Relay (LNPMR), LNP Query Service (LNPQS), Personal Communication Service LNP Query Service (PLNPQS) (if the PLNP feature is turned on), Wireless LNP Query Service (WNPQS) (if the WNP feature is turned on), Triggerless LNP (TLNP) (if the TLNP feature is turned on), LRNQT (if the ITU TCAP LRN Query feature is turned on), and Automatic Call Gap (ACG).

When the `card=sccp-all` parameter is specified, a detailed status of LNP information for all SCCP cards is provided.

Parameters

card (optional)

Specify `card=sccp-all` to display a report of the LNP status of all equipped SCCP cards.

Range:

sccp-all

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

Default:

A summary for all cards is displayed.

Example

```
rept-stat-lnp
rept-stat-lnp:card=sccp-all
```

```
rept-stat-lnp:loc=1106
```

Dependencies

The LNP feature must be turned on before this command can be entered.

3009 E3009 Cmd Rej: LNP feature must be ON

The `card` and `loc` parameters cannot be specified together in the command.

2609 E2609 Cmd Rej: Only one optional parameter may be specified

The only valid value for the `card` parameter is *sccp-all*.

2304 E2304 Cmd Rej: Invalid TYPE

No other `rept-stat-xxx` command can be in progress when this command is issued.

2368 E2368 Cmd Rej: System busy - try again later

At least one SCCP card must be configured in the system.

2374 E2374 Cmd Rej: SCCP not Configured

The value specified for the `loc` parameter must identify a Service Module card.

3014 E3014 Cmd Rej: Card location specified must be an SCCP card

Notes

The error information on this report is based on 30-second intervals. The values for number of errors and total messages are for the last 30-second period. The usage information is also updated once every 30 seconds.

When this command is entered with no parameters, a summary of the LNP subsystem status is reported, followed by a summary of the LNP status of all equipped SCCP cards. This summary includes global title translation (GTT) and LNP function status for every SCCP card, as well as LNPQS system information. The GTT status is either ACT (active) or SWDL (software loading). The LNP status is either ACT, OFFLINE, or SWDL. LNPQS system information is then provided in the following fields:

- The ALARM STATUS displays the current alarm on the LNP Subsystem.
- The SSN STATUS and MATE SSN STATUS fields show the state of the LNP subsystems: Prohibited, Restricted, or Allowed.
- The ACG OVERLOAD LEVEL field shows the ACG node overload control level used by the system.
- The system average MIC usage is expressed as a percentage of the number of MICs sent by all cards, divided by the number of responses sent by all cards.

The `rept-stat-lnp` command also provides a summary of the following system-wide LNP statistics.

- The average GTT usage is expressed as the average percentage of GTT usage per card.
- The average LNPMSR usage is expressed as the average percentage of LNPMSR usage per card.
- The average LNPQS usage is expressed as the average percentage of LNPQS usage per card.

- The average WNPQS usage is expressed as the average percentage of WNPQS usage per card. WNPQS information is displayed only if the WNP feature is turned on.
- The average PLNPQS usage is expressed as the average percentage of PLNPQS usage per card. PLNPQS information is displayed only if the PCS 1900 Number Portability feature (PLNP) is turned on.
- The average LRNQT usage is expressed as the average percentage of LRNQT usage per card. LRNQT information is displayed only if the LRNQT feature is turned on.
- The average CPU usage is expressed as the average percentage of CPU usage per card.
- The total number of GTT, LNPMR, LNPQS, WNPQS (if turned on), TLNP (if turned on), PLNPQS (if turned on), and LRNQT (if turned on) errors for corresponding messages received across all cards.

When the `rept-stat-lnp` command is entered for a specific card (for example, `rept-stat-lnp:loc=xxxx`), status information for the card at the specified location is provided, followed by the alarm status and detailed LNP status information and statistics for each LNP function.

- GTT STATUS, either ACT (active) or SWDL (software loading).
- GTT USAGE, expressed as a percentage of the amount of CPU used to process GTT messages during the last 30 seconds by the specified card.
- GTT ERRORS, the number of GTT errors detected for the total number of GTT messages received by the specified card.
- LNPMR STATUS, either ACT (active), OFFLINE, or SWDL (software loading).
- LNPMR USAGE, expressed as a percentage of the amount of CPU used to process LNP message relay messages during the last 30 seconds by the specified card.
- LNPMR ERRORS, the number of LNP message relay errors detected for the total number of LNP message relay messages received by the specified card.
- LNPQS STATUS, either ACT (active), OFFLINE, and SWDL (software loading).
- LNPQS USAGE, expressed as a percentage of the amount of CPU used to process LNP query messages during the last 30 seconds by the specified card.
- LNPQS ERRORS, the number of LNP query errors detected for the total number of LNP query messages received by the specified card.
- WNPQS STATUS, either ACT (active), OFFLINE, and SWDL (software loading).
- WNPQS USAGE, expressed as a percentage of the amount of CPU used to process WNP query messages during the last 30 seconds by the specified card.
- WNPQS ERRORS, the number of WNP query errors detected for the total number of WNP query messages received by the specified card.

 **Note:**

IS-41 LNP Queries with a TT associated with the LNPQS service are pegged as IS-41 LNP Queries with a TT associated with the WNP service under the WNPQS counter. The WNPQS STATUS, WNPQS USAGE, and WNPQS ERRORS fields are displayed only if the Wireless Number Portability feature is ON.

- PLNPQS STATUS, either ACT (active), OFFLINE, and SWDL (software loading).
- PLNPQS USAGE, expressed as the amount of CPU used to process PCS 1900 LNP Query messages over the last 30-second period by the specific card.
- PLNPQS ERRORS, the number of PCS query errors detected for the total number of PCS query messages received by the specified card.

 **Note:**

PCS 1900 LNP Queries with a TT associated with the LNPQS service are processed and pegged as IN LNP Queries under the LNPQS counter. The PLNPQS STATUS, PLNPQS USAGE, and PLNPQS ERRORS fields are displayed only if the PCS 1900 Number Portability (PLNP) feature is ON.

- TLNP STATUS, either ACT (active), OFFLINE, and SWDL (software loading).
- TLNP USAGE, expressed as a percentage of the amount of CPU used to process Triggerless LNP Encapsulated IAM messages over the last 30-second period by the specific card.
- TLNP ERRORS, the number of TLNP query errors detected for the total number of TLNP query messages received by the specified card.

 **Note:**

The TLNP STATUS, TLNP USAGE, and TLNP ERRORS fields are displayed only if the Triggerless LNP (TLNP) feature is ON.

- LRNQT STATUS, either ACT (active), OFFLINE, and SWDL (software loading).
- LRNQT USAGE, expressed as a percentage of the amount of CPU used to process LRNQT queries over the last 30-second period by the specific card.
- LRNQT ERRORS, the number of LRNQT query errors detected for the total number of LRNQT messages received by the specified card.

 **Note:**

The LRNQT STATUS, LRNQT USAGE, and LRNQT ERRORS fields are displayed only if the LRNQT feature is ON.

- ACG OVERLOAD LEVEL, the ACG node overload control level being used by the system.

- MIC USAGE, expressed as a percentage of the number of MICs sent by the specific card divided by the number of responses sent by the specified card during the last 30 seconds.
- CPU USAGE, expressed as a percentage of the amount of CPU used to process messages by the specified card during the last 30 seconds.

When the `card=sccp-all` parameter is specified, detailed information is provided about the status of all SCCP cards. The information displayed in the output is the same as that displayed for the `loc=xxxx` parameter.

Output

This example shows the output when the WNP, PLNP, TLNP, and LRNQT features are off:

```
rept-stat-lnp
```

```

rlghncxa03w 08-11-14 10:37:22 EST EAGLE 40.0.0
LNP SUBSYSTEM REPORT OOS-MT-DSBLD Active -----
ALARM STATUS = *C 0435 LNP Subsystem is disabled

LNP Cards Configured= 3
CARD PST SST GTT STATUS LNP STATUS CPU
USAGE
1106 IS-NR Active ACT OFFLINE
10%
1201 IS-NR Active ACT OFFLINE
12%
1310 OOS-MT-DSBLD Manual -----
0%

LNPQS:
SSN STATUS = Prohibited MATE SSN STATUS = Allowed
ACG: OVERLOAD LEVEL = 0 MIC UASGE = 0%

AVERAGE USAGE:
GTT = 13% LNPMT = 0% LNPQS = 0%
AVERAGE CPU USAGE = 11%
TOTAL ERRORS:
GTT: 0 out of 2000
LNPMT: 0 out of 0
LNPQS: 0 out of 0

PROVISIONED TABLE QTY:
TN: 10 of 24000000 ( 0%)
NPA: 1 of 150000 ( 0%)
LRN: 3 of 100000 ( 0%)

Command Completed
;
```

This example shows the output when the `card=` parameter is specified:

rept-stat-lnp:card=sccp-all

```
tklc1190601 06-04-05 13:45:02 EST EAGLE5 35.0.0
CARD   VERSION      PST           SST           AST
1205   038-003-013    IS-NR        Active        DB_DIFF
ALARM STATUS      = ** 0451 RTDB reload is required
GTT:  STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
LNPMR: STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
LNPQS: STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
WNPQS: STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
TLNP:  STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
PLNPQS:STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
ACG:   OVERLOAD LEVEL = 0  MIC USAGE = 0%
CPU USAGE = 5%
```

```
CARD   VERSION      PST           SST           AST
1317   038-003-013    IS-NR        Active        DB_DIFF
ALARM STATUS      = ** 0451 RTDB reload is required
GTT:  STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
LNPMR: STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
LNPQS: STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
WNPQS: STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
TLNP:  STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
PLNPQS:STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
ACG:   OVERLOAD LEVEL = 0  MIC USAGE = 0%
CPU USAGE = 5%
```

```
CARD   VERSION      PST           SST           AST
2213   038-003-013    IS-NR        Active        DB_DIFF
ALARM STATUS      = ** 0451 RTDB reload is required
GTT:  STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
LNPMR: STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
LNPQS: STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
WNPQS: STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
TLNP:  STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
PLNPQS:STATUS = ACT      USAGE = 0%  ERRORS: 0 of 0
ACG:   OVERLOAD LEVEL = 0  MIC USAGE = 0%
CPU USAGE = 5%
```

```
CARD   VERSION      PST           SST           AST
2215   -----        OOS-MT-DSBLD Manual        -----
ALARM STATUS      = No Alarms.
GTT:  STATUS = -----  USAGE = 0%  ERRORS: 0 of 0
LNPMR: STATUS = -----  USAGE = 0%  ERRORS: 0 of 0
LNPQS: STATUS = -----  USAGE = 0%  ERRORS: 0 of 0
WNPQS: STATUS = -----  USAGE = 0%  ERRORS: 0 of 0
TLNP:  STATUS = -----  USAGE = 0%  ERRORS: 0 of 0
PLNPQS:STATUS = -----  USAGE = 0%  ERRORS: 0 of 0
ACG:   OVERLOAD LEVEL = 0  MIC USAGE = 0%
CPU USAGE = 0%
```

```
CARD   VERSION      PST           SST           AST
2217   038-003-013    IS-NR        Active        DB_DIFF
ALARM STATUS      = ** 0451 RTDB reload is required
```

```
GTT:   STATUS = ACT      USAGE = 0%  ERRORS:   0 of   0
LNPMPR: STATUS = ACT      USAGE = 0%  ERRORS:   0 of   0
LNPQS:  STATUS = ACT      USAGE = 0%  ERRORS:   0 of   0
WNPQS:  STATUS = ACT      USAGE = 0%  ERRORS:   0 of   0
TLNP:   STATUS = ACT      USAGE = 0%  ERRORS:   0 of   0
PLNPQS: STATUS = ACT      USAGE = 0%  ERRORS:   0 of   0
ACG:   OVERLOAD LEVEL = 0  MIC USAGE = 0%
CPU USAGE = 5%
```

```
CARD  VERSION      PST          SST          AST
2317  -----      OOS-MT      Isolated     -----
ALARM STATUS      = ** 0013 Card is isolated from the system
GTT:   STATUS = -----  USAGE = 0%  ERRORS:   0 of   0
LNPMPR: STATUS = -----  USAGE = 0%  ERRORS:   0 of   0
LNPQS:  STATUS = -----  USAGE = 0%  ERRORS:   0 of   0
WNPQS:  STATUS = -----  USAGE = 0%  ERRORS:   0 of   0
TLNP:   STATUS = -----  USAGE = 0%  ERRORS:   0 of   0
PLNPQS: STATUS = -----  USAGE = 0%  ERRORS:   0 of   0
ACG:   OVERLOAD LEVEL = 0  MIC USAGE = 0%
CPU USAGE = 0%
```

```
CARD  VERSION      PST          SST          AST
1105  038-003-013  IS-NR      Active       DB_DIFF
ALARM STATUS      = ** 0451 RTDB reload is required
GTT:   STATUS = ACT      USAGE = 0%  ERRORS:   0 of   0
LNPMPR: STATUS = ACT      USAGE = 0%  ERRORS:   0 of   0
LNPQS:  STATUS = ACT      USAGE = 1%  ERRORS:   0 of 1003
WNPQS:  STATUS = ACT      USAGE = 0%  ERRORS:   0 of   0
TLNP:   STATUS = ACT      USAGE = 0%  ERRORS:   0 of   0
PLNPQS: STATUS = ACT      USAGE = 0%  ERRORS:   0 of   0
ACG:   OVERLOAD LEVEL = 0  MIC USAGE = 0%
CPU USAGE = 7%
```

Command Completed.

;

This example shows the output when an LNP feature (LNP ported TNs) quantity greater than 120 million numbers is enabled, the WNP, PLNP and TLNP features are on, and the LRNQT feature is off:

rept-stat-lnp

```
Integrat40 08-11-14 10:37:22 EST  EAGLE5 40.0.0
LNP SUBSYSTEM REPORT IS-ANR      Active     -----
ASSUMING MATE'S LOAD
ALARM STATUS      = No Alarms.

LNP Cards Configured= 5
CARD  PST          SST          GTT STATUS  LNP STATUS  CPU
USAGE
1106  IS-NR      Active      ACT         ACT
23%
1201  IS-ANR      Standby     SWDL        SWDL
0%
```

```

1205 OOS-MT-DSBLD Manual      -----
1302 OOS-MT          FLT       -----
1310 IS-ANR          Standby   ACT          SWDL          0%

```

LNPQS:

```

SSN STATUS = Allowed      MATE SSN STATUS = Prohibited
ACG: OVERLOAD LEVEL = 0   MIC USAGE = 100%

```

AVERAGE USAGE:

```

GTT   = 13% LNPMPR = 0%   LNPQS = 0%
WNPQS = 0%  TLNP   = 10%  PLNPQS = 0%
AVERAGE CPU USAGE = 23%

```

TOTAL ERRORS:

```

GTT:      1 out of 2000
LNPMPR:   0 out of   0
LNPQS:    0 out of   0
WNPQS:    0 out of   0
PLNPQS:   0 out of   0
TLNP:     1 out of 500

```

PROVISIONED TABLE QTY:

```

TN:      76800000 of 96000000 ( 80%)
NPA:     135000 of 150000 ( 90%)
LRN:     90000 of 100000 ( 90%)

```

Command Completed.

;

This example shows the output when the WNP, PLNP, TLNP, and LRNQT features are on:

rept-stat-lnp

```

rlghncxa03w 08-10-01 08:50:14 EST EAGLE 40.0.0
LNP SUBSYSTEM REPORT IS-ANR          Active      -----
ASSUMING MATE'S LOAD
LNP Cards Configured= 5
CARD  PST          SST          GTT STATUS  LNP STATUS  CPU USAGE
1106  IS-NR          Active      ACT          ACT          28%
1201  IS-ANR          Standby    SWDL         SWDL         0%
1205  OOS-MT-DSBLD   Manual     -----     -----     0%
1302  OOS-MT          Fault      -----     -----     0%
1310  IS-ANR          Standby    ACT          SWDL         0%

```

LNPQS:

```

SSN STATUS = Allowed      MATE SSN STATUS = Prohibited
ACG: OVERLOAD LEVEL = 0   MIC USAGE = 100%

```

AVERAGE USAGE:

```

GTT   = 13% LNPMPR = 0%   LNPQS = 0%
WNPQS = 0%  TLNP   = 10%  PLNPQS = 0%
LRNQT = 5%

```

AVERAGE CPU USAGE = 28%

TOTAL ERRORS:

```

GTT:      1 out of 2000
LNPMPR:   0 out of   0

```

```

LNPQS:      1 out of   500
WNPQS:      0 out of     0
PLNPQS:     0 out of     0
TLNP:       1 out of   500
LRNQT:      0 out of   700

```

Command Completed.

;

This example shows the output when the WNP, PLNP, TLNP, and LRNQT features are on:

```
rept-stat-lnp:loc=1106
```

```

rlghncxa03w 08-10-01 10:37:22 EST  EAGLE 40.0.0
CARD  VERSION      TYPE   PST           SST       AST
1106  021-101-000  TSM    IS-NR         Active    -----
ALARM STATUS      = No Alarms.
GTT:   STATUS = ACT      USAGE = 10%  ERRORS:   1 out of 1000
LNPMR: STATUS = ACT      USAGE = 13%  ERRORS:   0 out of 1300
LNPQS: STATUS = ACT      USAGE = 20%  ERRORS:   1 out of 2000
WNPQS: STATUS = ACT      USAGE =  0%  ERRORS:   0 out of   0
PLNPQS:STATUS = ACT      USAGE =  0%  ERRORS:   0 out of   0
TLNP:  STATUS = ACT      USAGE =  0%  ERRORS:   0 out of   0
LRNQT: STATUS = ACT      USAGE =  0%  ERRORS:   0 out of   0
ACG:   OVERLOAD LEVEL = 0  MIC USAGE = 100%
CPU USAGE = 43%

```

Command Completed.

;

Legend

- **CARD**—Locations of the SCCP cards
- **VERSION**—Version number of the GPL the cards are running
- **TYPE**—Type of SCCP card
- **PST**—Primary state of the card. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the card. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the card. See [Possible Values for PST/SST/AST](#).

Related Topics

- [chg-th-alm](#)
- [rept-stat-sccp](#)
- [rtrv-th-alm](#)

4.1.417 rept-stat-ls

Use this command to generate a report of the status of the MTP linksets. When a specific linkset is requested, the output displays a list of the links in the linkset and their secondary status. Output is generated for each of the 16 signaling link codes (SLC). If the Multiple Linksets to Single Adjacent Point Code (MLS) feature is turned

on, and an adjacent destination point code is requested, then the output displays a summary status, including the secondary point codes, of the linksets that use that adjacent point code.

Parameters

apc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

apc/apca/apci/apcn/apcn24/apcn16 (optional)

Adjacent point code.

apci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

apcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (*members*) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

apcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The prefix indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000—255

ssa—000—255

sp—000—255

apcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area (un-sna-mna)*. The prefix indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

lsn (optional)

Linkset name. The name of the linkset for which the report information is to be displayed.

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Default:

All linksets are displayed

stat (optional)

The primary state filter. The state of the linksets for which a report will be displayed.

Range:

all

All of the primary states

alminh

Alarms inhibited

anr
In-Service-Abnormal (IS-ANR)

dsbld
Out-of-Service-Maintenance-Disabled (OOS-MT-DSBLD)

mt
Out-of-Service-Maintenance (OOS-MT)

nr
In-Service-Normal (IS-NR)

Default:
all

Example

```
rept-stat-ls  
rept-stat-ls:lsn=lsnstpa
```

Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The linkset specified by the `lsn` parameter must be equipped in the database.

2384 E2384 Cmd Rej: Link set is not equipped

The `stat` and `lsn` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The Multiple Linksets to a Single Adjacent Point Code (MLS) feature must be turned on before the `apc` parameter can be specified.

4631 E4631 Cmd Rej: Multiple Linksets to Single Adjacent PC feature must be ON

The `lsn`, `stat`, and `apc` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

At least one linkset must be associated with the value of the `apc` parameter.

4637 E4637 Cmd Rej: APC has no assigned linksets

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

If no link is equipped for the SLC, the output is “___ UEQ.”

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

"ASP-STATE" is shown for only IPSPG-M3UA linksets.

Output

If the Proxy Point Code feature is enabled, then proxy point code information is displayed.

```
rept-stat-ls
```

```
eagle10207 08-02-23 10:09:59 EST EAGLE 38.0.0
LSN          APCA          PST          SST          AST
ls11234567   001-001-002   OOS-MT      Prohibit     GWS
ls11345678   001-001-003   OOS-MT      Prohibit     -----
ls11345679   001-001-004   OOS-MT      Idle         -----
ls1134567    001-001-005   OOS-MT      Prohibit     -----
ls113456     001-001-006   OOS-MT      Prohibit     -----
ls11345      001-001-007   OOS-MT      Prohibit     GWS
ls113467     001-001-008   OOS-MT      Prohibit     -----
ls1134       001-001-009   OOS-MT      Prohibit     -----
ls987        009-008-007   OOS-MT      Idle         -----
z            009-008-009   OOS-MT      Idle         -----
cap8        008-008-008   OOS-MT      Idle         -----

LSN          APCN          PST          SST          AST
lsnational   16383-aa      OOS-MT      Idle         -----

LSN          APCN24        PST          SST          AST

LSN          APCI          PST          SST          AST
Command Completed.
```

```
;
```

This example shows the output for a linkset when the MLS feature is not turned on or the linkset is not created with a secondary point code:

```
rept-stat-ls:lsn=lsnstpa
```

```
eagle10207 08-02-23 10:09:59 EST EAGLE 38.0.0

LSN          APCA          PST          SST          AST
lsnstpa      110-15-08     IS-NR        Allowed     -----
  SPCA = -----
  ALARM STATUS = No Alarms.
  SCRSET = ----
  GWSA = ----
  GWSM = ----
  GWSD = ----
SLC SLK      SST          SLC SLK      SST
0  1207,A Avail    8  -----,- UEQ
1  1203,A Avail    9  -----,- UEQ
2  1103,B LPBK    10 -----,- UEQ
3  -----,- UEQ   11 -----,- UEQ
4  -----,- UEQ   12 -----,- UEQ
5  -----,- UEQ   13 -----,- UEQ
```



```

6 ----,- UEQ          14 ----,- UEQ
7 ----,- UEQ          15 ----,- UEQ
Command Completed.

```

;

This example shows the output when some linksets contain spare and private adjacent point codes:

```
rept-stat-ls
```

```

tekelecstp 02-03-20 21:22:04 EST EAGLE 31.12.0
LSN          APCA          PST          SST          AST
ls11234567   001-001-002             OOS-MT       Prohibit     GWS
ls11345678   001-001-003             OOS-MT       Prohibit     -----
ls11345679   001-001-004             OOS-MT       Idle         -----
ls1134567    001-001-005             OOS-MT       Prohibit     -----
ls113456     001-001-006             OOS-MT       Prohibit     -----
ls11345      p-001-001-007           OOS-MT       Prohibit     GWS
ls113467     001-001-008             OOS-MT       Prohibit     -----
ls1134       p-001-001-009           OOS-MT       Prohibit     -----
ls987        009-008-007             OOS-MT       Idle         -----
z            009-008-009             OOS-MT       Idle         -----
cap8         008-008-008             OOS-MT       Idle         -----

```

```

LSN          APCN          PST          SST          AST
lsnational   s-09-14-05-3-ab         OOS-MT       Idle         -----

```

```

LSN          APCN24         PST          SST          AST

```

```

LSN          APCI          PST          SST          AST

```

```
Command Completed.
```

;

This example shows the output when the Multiple Linksets to a Single Adjacent Point Code (MLS) feature is turned on, and the linkset is created with a secondary point code:

```
rept-stat-ls:lsn=lsnstpa
```

```

eagle10207 08-02-23 10:09:59 EST EAGLE 38.0.0
LSN          APCA          PST          SST          AST
lsnstpa     110-15-08             IS-NR        Allowed     -----
  SPCA =    120-10-01
ALARM STATUS = No Alarms.
SCRSET = ----
GWSA  = ----
GWSM  = ----
GWSD  = ----
SLC SLK    SST          SLC SLK    SST
0  1207,A Avail          8  ----,- UEQ
1  1203,A Avail          9  ----,- UEQ
2  1103,B LPBK          10 ----,- UEQ
3  ----,- UEQ          11 ----,- UEQ

```

```

4 ----,- UEQ      12 ----,- UEQ
5 ----,- UEQ      13 ----,- UEQ
6 ----,- UEQ      14 ----,- UEQ
7 ----,- UEQ      15 ----,- UEQ
Command Completed.

```

;

This example shows the output for an adjacent point code when the MLS feature turned on:

```
rept-stat-ls:apc=1-1-2
```

```

eagle10207 07-07-23 10:09:59 EST EAGLE 37.5.0

APCA = 001-001-002
LSN          SPCA          PST          SST          AST
ls11234567   001-005-003   OOS-MT       Prohibit     GWS
ls11345678   004-008-002   OOS-MT       Prohibit     -----
ls113456     014-012-094   OOS-MT       Prohibit     -----
Command Completed.

```

;

This example shows the output when possible duplication of adjacent point code values occurs when the MLS feature is turned on:

```
rept-stat-ls
```

```

eagle10207 07-07-23 10:09:59 EST EAGLE 37.5.0

LSN          APCA          PST          SST          AST
ls11234567   001-001-002   OOS-MT       Prohibit     GWS
ls11345678   001-001-002   OOS-MT       Prohibit     -----
ls11345679   001-001-004   OOS-MT       Idle         -----
ls1134567    001-001-005   OOS-MT       Prohibit     -----
ls113456     001-001-002   OOS-MT       Prohibit     -----
ls11345     p-001-001-007 OOS-MT       Prohibit     GWS
ls113467     001-001-008   OOS-MT       Prohibit     -----
ls1134     p-001-001-009 OOS-MT       Prohibit     -----
ls987       009-008-007   OOS-MT       Idle         -----
z          009-008-009   OOS-MT       Idle         -----
cap8       008-008-008   OOS-MT       Idle         -----
LSN          APCN          PST          SST          AST
lsnational  s-09-14-05-3-ab OOS-MT       Idle
-----
LSN          APCN24       PST          SST          AST
LSN          APCI         PST          SST          AST

```

This example shows the output when the Proxy Point Code feature is enabled:

```
rept-stat-ls:lsn=lsnstpa
```

```
tekelecstp 08-02-29 11:05:47 EST EAGLE 38.0.0
LSN          APCA          PST          SST          AST
lsnstpa     110-15-08      IS-NR        Allowed      -----
  PPCA      =      100-12-04
  ALARM STATUS      = No Alarms.
  SCRSET      = -----
  GWSA        = -----
  GWSM        = -----
  GWSD        = -----
SLC SLK      SST          SLC SLK      SST
0  1207,A Avail      8  -----,- UEQ
1  1203,A Avail      9  -----,- UEQ
2  1103,B LPBK       10 -----,- UEQ
3  -----,- UEQ     11 -----,- UEQ
4  -----,- UEQ     12 -----,- UEQ
5  -----,- UEQ     13 -----,- UEQ
6  -----,- UEQ     14 -----,- UEQ
7  -----,- UEQ     15 -----,- UEQ
;
```

This example shows the output for proxy linksets using a specified adjacent point code. The MLS feature must be turned on to retrieve information for an adjacent point code.

```
rept-stat-ls:apc=1-1-2
```

```
tekelecstp 07-03-29 11:05:47 EST EAGLE 37.5.0

APCA      =      001-001-002
LSN          APCA          PST          SST          AST
ls11234567  001-005-003  OOS-MT        Prohibit     GWS
ls11345678  004-008-002  OOS-MT        Prohibit     -----
ls113456    014-012-094  OOS-MT        Prohibit     -----
;
```

This example shows the ASP state for IPSPG-M3UA linksets state when the linkset is specified:

```
rept-stat-ls:lsn=ls1305a
```

```
tekelecstp 08-01-29 18:15:20 EST EAGLE 38.0.0
LSN          APCA          PST          SST          AST
ls1305a     005-213-000  IS-NR        Allowed      -----
  SPCA      = -----
  ALARM STATUS      = No Alarms.
  SCRSET      = -----
  GWSA        = -----
  GWSM        = -----
  GWSD        = -----
SLC SLK      SST          ASP STATE    SLC SLK      SST          ASP STATE
```

```

      0  1305,A  Avail  ACTIVE  8  ----,--- UEQ
-----
      1  1305,A1 Unavail DOWN    9  ----,--- UEQ
-----
      2  ----,--- UEQ  ----- 10  ----,--- UEQ
-----
      3  ----,--- UEQ  ----- 11  ----,--- UEQ
-----
      4  ----,--- UEQ  ----- 12  ----,--- UEQ
-----
      5  ----,--- UEQ  ----- 13  ----,--- UEQ
-----
      6  ----,--- UEQ  ----- 14  ----,--- UEQ
-----
      7  ----,--- UEQ  ----- 15  ----,--- UEQ
-----

```

Command Completed.

;

This example shows the output when some linksets contain adjacent point codes if J7 support feature is enabled.

```
rept-stat-ls
```

```

tekelecstp 02-03-20 21:22:04 EST  EAGLE 31.12.0
LSN          APCA          PST          SST          AST

LSN          APCN          PST          SST          AST
lsnational  s-09-14-05-3-ab  OOS-MT      Idle         -----

LSN          APCN24         PST          SST          AST

LSN          APCI          PST          SST          AST

LSN          APCN16         PST          SST          AST
lsnational  121-003-015    OOS-MT      Idle         -----

```

Command Completed.

;

Legend

- **LSN**—Name of the linkset
- **APCA/APCI/APCN/APCN24/APCN16**—Adjacent point code of the linkset (ANSI, ITU-I, ITU-N, ITU-N 24-bit, ITU-N 16-bit)
- **SPCA/SPCI/SPCN/SPCN24**—Secondary point code of the linkset (ANSI, ITU-I, ITU-N, ITU-N 24-bit)
- **PST**—Primary state of the linkset. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the linkset. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the linkset. See [Possible Values for PST/SST/AST](#).

- **ALARM STATUS**—List of trouble text alarm messages that have been generated for the specified card
- **SCRN**—Name of the gateway screening screen set associated with the linkset
- **GWSA**—Shows whether gateway screening is used for the specified linkset
- **GWSM**—Shows whether gateway screening messaging is turned on for the specified linkset
- **GWSD**—Shows whether discarding of MSUs that bypass the gateway screening function due to loadshedding is turned on
- **SLC**—Signaling link codes associated with the links in the specified linkset
- **SLK**—Signaling links in the linkset, shown by the card location containing the signaling link and the port on the card containing the signaling link
- **PPCA/PPCI/PPCN/PPCN24/PPCN16**—Proxy point code of the linkset (ANSI, ITU-I, ITU-N, ITU-N 24-bit, ITU-N 16-bit)
- **ASP STATE**—State of AS associated with each signaling link of the IPSPG-M3UA linkset. The states displayed are: ACTIVE, INACTIVE, or DOWN.

Related Topics

- [chg-ls](#)
- [dlt-ls](#)
- [ent-ls](#)
- [rtrv-ls](#)

4.1.418 rept-stat-meas

Use this command to report the status of the Measurements Subsystem (Measurements Platform) or MASPs (Integrated Measurements), including card location and state, IP link status, alarm level, and subsystem state.

Note:

If the Integrated Measurements collection function is turned on, then the status reflects the state of the E5-OAM card(s). If the Measurements Platform collection function is turned on, then the status reflects the state of the MCPM cards.

Parameters

This command has no parameters.

Example

```
rept-stat-meas
```

Dependencies

At least one MCPM card must be configured in the system if the Measurements Platform feature is turned on.

2702 E2702 Cmd Rej: At least one MCPM card must be configured in system

No other `rept-stat-xxx` commands can be in progress when this command is issued.

2368 E2368 Cmd Rej: System busy - try again later

The Integrated Measurements or Measurements Platform feature must be turned on before this command can be entered.

5279 E5279 Cmd Rej: MEASPLAT or Integrated Measurements feature must be ON

The `platformenable=on` or `oamhcmeas=on` parameter must be specified (see the `chg-measopts` command) before this command can be entered.

3088 E3088 Cmd Rej: Platformenable or Oamhcmeas option must be on

This command cannot be entered when CAT2 IPSM to OAM syncing is in progress.

3652 E3652 Cmd Rej: IPSM to OAM SYNC in progress

Notes

The card status is independent of the IP Network Link status (Port A). The card can be IS-NR even if the network link has failed.

The version of the GPL is shown in the command output if the card is in the IS-NR or IS-ANR state. The `rept-stat-card` command does not show the GPL version if the card is IS-ANR.

Output



Note:

The E5-MCPM-B card is an MCPM card. The *Type* field displays MCPM.

Output example with an MCPM card isolated:

```
rept-stat-meas
```

```

MEAS SS          PST          SST          AST
IS-ANR          Active      -----
ALARM STATUS = * 0516 Degraded Mode - 1 card failed

CARD  VERSION    TYPE  PST          SST          AST
1107 P 134-000-000  MCPM  IS-NR       Active      -----
IP Link A          IS-NR       Active      -----
1109 -----      MCPM  OOS-MT      Isolated    -----
IP Link A          OOS-MT      Unavail    -----

```

```

CARD 1107 ALARM STATUS = No Alarms
CARD 1109 ALARM STATUS = Card is isolated from the system
Command Completed.

```

```
;
```

Output example when the Integrated Measurements collection function is turned on:

```
rept-stat-meas
```

```

                PST           SST           AST
MEAS SS         IS-NR         Active     -----
ALARM STATUS = No Alarms

```

```

CARD  VERSION      TYPE      GPL           PST           SST           AST
1113 P 132-049-000 E5MCAP   OAMHC         IS-NR         Active     -----
      IP Link A                    IS-NR         Active     -----
1115  132-049-000 E5MCAP   OAMHC         IS-NR         Active     -----
      IP Link A                    OOS-MT        Unavail    -----

```

```

CARD 1113 ALARM STATUS = No Alarms
CARD 1115 ALARM STATUS = No Alarms

```

```
Command Completed.
```

```
;
```

Output example with both MCPM cards IS-NR:

```
rept-stat-meas
```

```

tekelec 11-03-15 20:34:15 EST EAGLE5 44.0.0
                PST           SST           AST
MEAS SS         IS-NR         Active     -----
ALARM STATUS = No Alarms

```

```

CARD  VERSION      TYPE      PST           SST           AST
1106  134-000-000  MCPM     IS-NR         Active     -----
      IP Link A                    IS-NR         Active     -----
1108  134-000-000  MCPM     IS-NR         Active     -----
      IP Link A                    IS-NR         Active     -----

```

```

CARD 1106 ALARM STATUS = No Alarms
CARD 1108 ALARM STATUS = No Alarms

```

```
Command Completed.
```

```
;
```

Legend

- **VERSION**—Version number of the GPL running on the specified card. The version is shown if the card is in the IS-NR or IS-ANR state.
- **TYPE**—Type of card running the Measurements Subsystem application
- **PST**—Primary state of the Measurements Subsystem or card. See [Possible Values for PST/SST/AST](#) for more information.
- **SST**—Secondary state of the Measurements Subsystem or card. See [Possible Values for PST/SST/AST](#) for more information.
- **AST**—Associated state of the Measurements Subsystem or card. See [Possible Values for PST/SST/AST](#) for more information.

- **MEAS SS**—Measurements Subsystem application running on the card
- **ALARM STATUS**—List of trouble text alarm messages that have been generated for the card and the applications running on the card
- **CARD**—Location of the card. The card with the letter “P” to the right of its card location is the primary card. The primary card transfers scheduled measurements report files to the primary FTP server. When the primary state (PST) of the card is IS-NR, the secondary state (SST) indicates whether the card is active or standby, and the value of the associated state (AST) remains "-----".
- **CARD XXXX ALARM STATUS**—List of trouble text alarm messages that have been generated for the card

Related Topics

- [rept-stat-card](#)

4.1.419 rept-stat-mfc

Use this command to obtain the status of the Message Flow Control (MFC) services.

Parameters

mode (optional)

The amount and type of information displayed in the report.

Range:

full

display a full report for the specified MFC service

stats

display detailed statistics for the specified MFC service

act

display information about the status of MFC on individual Service cards

Default:

No change to the current value

reset (optional)

This parameter resets the statistics for all sample periods for the specified service.

Range:

yes

sample (optional)

The data sample to be used.

Range:

avg30s

30-second average value calculated over the previous 5 minutes

tot5m

total value summed over the previous 5 minutes

avg1h

1-hour average value calculated over the previous 24 hours

tot24h

total value summed over the previous 24 hours

service (optional)

The MFC service for which information is reported.

Range:**eroute**

EROUTE MFC service

inm

INM MFC service

mtp3

MTP3 MFC service

scpdn

SCCP DN MFC service

scpelap

SCCP ELAP MFC service

scpepap

SCCP EPAP MFC service

scpimsi

SCCP IMSI MFC service

sfapp

SFAPP MFC service

sflog

SFLOG MFC service

sfr

SFAPP response MFC service

snm

SNM MFC service

vsccp

VSCCP MFC service

Example

```
rept-stat-mfc
```

```
rept-stat-mfc:service=vsccp:mode=act
```

```
rept-stat-mfc:service=eroute
```

```
rept-stat-mfc:service=eroute:reset=yes
```

```
rept-stat-mfc:mode=stats:service=vsccp:sample=avg30s
rept-stat-mfc:mode=stats:service=scpimsi:sample=avg30s
rept-stat-mfc:service=scpepap
rept-stat-mfc:service=scpelap
rept-stat-mfc:service=sflog
rept-stat-mfc:service=sfapp
rept-stat-mfc:service=sfr
```

Dependencies

No other command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The `mode=stats` and `sample` parameters must be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `mode` or `reset` parameter is specified, then the `service` parameter must be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If a value of `mtp3`, `snm`, or `inm` is specified for the `appl` parameter, then the `mode=act` parameter cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The EPAP Data Split feature must be enabled before a value of `scpdn` or `scpimsi` can be specified for the `service` parameter.

5478 E5478 Cmd Rej: EPAP Data Split feature must be Enabled

The Dual ExAP Config feature must be enabled before a value of `scpepap` or `scpelap` can be specified for the `service` parameter.

2400 E2400 Cmd Rej: Dual ExAP Config feature must be enabled.

The Dual ExAP Config feature or EPAP Data Split feature must be enabled before a value of `scpepap` can be specified.

2434 E2434 Cmd Rej: Dual ExAP Config or EPAP Data Split must be ON

Notes

For the SFLOG MFC service, a maximum of two servers can be provisioned in the EAGLE, and only one can be active at a time. This command will provide the basic statistics (i.e., service denied, PDU discard, PDU sent) for the SFLOG MFC service.

Output

Abbreviated output is indicated by 3 vertical dots as shown:

```
.
.
```

If the card does not support thermal monitoring, and if an MFC service is hosted on that card, then *N/A* is shown in the *THERMAL* column for that card location in `rept-stat-mfc:mode=act` output.

The *UNAVL* state in the output of `rept-stat-mfc:mode=full` indicates the cards that are not in the IS-NR state.

This example shows an MFC report for all the services when EPAP Data Split feature is enabled:

```
rept-stat-mfc
```

```

epap240m 12-01-29 14:50:03 CST  EAGLE 46.3.0
Service  Type      Total
-----
SNM      SYSTEM    13
INM      SYSTEM    13
MTP3     SERVER    9
MTP3     CLIENT    13
EROUTE   SERVER    0
EROUTE   CLIENT    11
VSCCP    SERVER    4
VSCCP    CLIENT    9
SCPDN    SERVER    3
SCPDN    CLIENT    9
SCPIMSI  SERVER    3
SCPIMSI  CLIENT    9
SFLOG    SERVER    2
SFLOG    CLIENT    6
-----

```

```
Command Completed.
```

```
;
```

This example shows an MFC report for all the services when Dual ExAP Config feature is enabled:

```
rept-stat-mfc
```

```

epap240m 12-01-29 14:50:03 CST  EAGLE 46.3.0
Service  Type      Total
-----
SNM      SYSTEM    13
INM      SYSTEM    13
MTP3     SERVER    9
MTP3     CLIENT    13
EROUTE   SERVER    0
EROUTE   CLIENT    11
VSCCP    SERVER    4
VSCCP    CLIENT    9
SCPEPAP  SERVER    3
SCPEPAP  CLIENT    9
SCPELAP  SERVER    1
-----

```

```

SCPELAP  CLIENT      0
SFLOG    SERVER      2
SFLOG    CLIENT      6
SFAPP    SERVER      3
SFAPP    CLIENT      2
SFR      SERVER      3
SFR      CLIENT      2
-----

```

Command Completed.

;

This example shows a full report for the EROUTE MFC service:

```
rept-stat-mfc:service=eroute:mode=full
```

```

rlghncxa03w 11-03-04 13:46:07 EST  EAGLE 44.0.0
LOC    SERVICE  STATE  SERVER  CLIENT
-----
1101   EROUTE    IS-NR           X
1103   EROUTE    UNAVL           X
1105   EROUTE    UNAVL    X
1106   EROUTE    IS-NR    X
1113   EROUTE    IS-NR           X
1115   EROUTE    UNAVL           X
-----
Totals 6          2      4

```

Command Completed.

;

This example shows the EROUTE service 30 second average data calculated over the previous 5 minutes:

```
rept-stat-mfc:service=eroute:mode=stats:sample=avg30s
```

```

rlghncxa03w 11-03-04 14:36:07 EST  EAGLE 44.0.0
PER CARD EROUTE SERVER DATA, 30-SEC AVG VALUES CALCULATED OVER
PREV 5 MIN

```

```

                                SRVC_RQSTS_RCVD
NUM_APPL_ORIG
FC          MSEC  -----
EVENTS     IN FC   OUT_FC   IN_FC   DACT    DACTS
FC
-----
0          0       568     0       0       0       0
CARD LOC:  1217   LAST 5 CLIENTS:  1101,1308,1308,1102,1102
0          0       0       0       0       0       0
CARD LOC:  1218   LAST 5 CLIENTS:  0 ,0 ,0 ,0 ,0

```

```
-----
TOTAL SRVC RQSTS RCVD: 568
```

```
PER CARD EROUTE CLIENT DATA, 30-SEC AVG VALUES CALCULATED OVER PREV 5 MIN
```

SVC RQSTS	SVC DENIED	PDUS SENT	PDUS DSCRD	SRVR RESLCTD	ON_SHLF NOT_AVL
--------------	---------------	--------------	---------------	-----------------	--------------------

```
-----
95          0          195          0          0          0
CARD LOC:  1101  LAST 5 SERVERS: 1217,0 ,0 ,0 ,0
```

```
96          0          196          0          0          0
CARD LOC:  1102  LAST 5 SERVERS: 1217,0 ,0 ,0 ,0
```

```
96          0          96          0          0          0
CARD LOC:  1103  LAST 5 SERVERS: 1217,0 ,0 ,0 ,0
```

```
47          0          47          0          0          0
CARD LOC:  1308  LAST 5 SERVERS: 1217,0 ,0 ,0 ,0
```

```
-----
SYSTEM TOTALS: PDUs SENT = 1326690530, PDUs DSCRD = 94670548
```

```
Command Completed.
```

```
;
```

This example shows the MFC status of all the EROUTE Service Cards:

```
rept-stat-mfc:appl=eroute:mode=act
```

```
rlghncxa03w 11-03-04 15:26:07 EST EAGLE 44.0.0
```

```
PER CARD EROUTE SERVER ACTIVATION DATA
```

LOC	STATUS	THERMAL	IP LINK STATUS
-----	--------	---------	-------------------

```
-----
1201  ACT      OK      OK
1202  ACT      N/A     OK
1204  UNAVL    ---     ---
2215  DACT     BAD     OK
2216  DACT     N/A     BAD
4214  ACT      OK      OK
4215  DACT     OK      BAD
-----
```

```
Command Completed.
```

```
;
```

This example resets the MFC engine statistics at server side and resets application level statistics at client side, for the EROUTE service:

```
rept-stat-mfc:service=eroute:reset=yes

rlghncxa03w 11-03-06 13:36:07 EST  EAGLE 44.0.0

Command Completed.
;
```

This example shows the MFC report for the EROUTE service.

```
rept-stat-mfc:service=eroute

rlghncxa03w 11-03-04 13:37:27 EST  EAGLE 44.0.0
Service   Type      Total
-----
EROUTE    SERVER    2
EROUTE    CLIENT    4
-----

Command Completed.
;
```

This example shows the MFC status of all the VSCCP Service Cards. This example displays abbreviated output.

```
rept-stat-mfc:service=vsccp:mode=act

rlghncxa03w 11-03-04 13:36:57 EST  EAGLE 44.0.0
PER CARD VSCCP SERVER ACTIVATION DATA

LOC      STATUS    THERMAL
-----
1201     ACT       OK
1204     UNAVL     ---
1217     ACT       OK
2215     ACT       N/A
.
.
.
4214     ACT       OK
-----

Command Completed.
;
```

This example shows the MTP3 service 30 second average data calculated over the previous 5 minutes: The server stats will be shown as "-" for SCCP card location.

rept-stat-mfc:service=mtp3:mode=stats:sample=avg30s

rlghncxa03w 11-03-04 11:36:07 EST EAGLE 44.0.0
PER CARD MTP3 SYSTEM DATA, 30-SEC AVG VALUES CALCULATED OVER PREV 5 MIN

LOC	SERVER STATS			CLIENT STATS		
	FC EVENTS	MSEC IN FC	PDUS RCVD	PDUS SENT	PDUS DSCRD	SRV REQ DENIED
1101	0	0	0	0	0	0
1103	0	0	0	0	0	0
1107	0	0	0	0	0	0
1207	-	-	-	0	0	0
1208	0	0	0	0	0	0
1211	0	0	0	0	0	0
1212	0	0	0	0	0	0
1213	0	0	0	0	0	0
1214	0	0	0	0	0	0
1215	-	-	-	0	0	0
1216	-	-	-	0	0	0
1301	0	0	0	0	0	0
1305	0	0	0	0	0	0
1306	0	0	0	0	0	0
1307	0	0	0	0	0	0
1308	0	0	0	0	0	0
1311	0	0	0	0	0	0
1312	0	0	0	0	0	0
1313	0	0	0	0	0	0
1315	0	0	0	0	0	0

Command Completed.

;

This example shows a full MFC report for the SNM service:

rept-stat-mfc:service=snm:mode=full

rlghncxa03w 11-03-04 13:36:07 EST EAGLE 44.0.0

LOC	SERVICE	STATE	SYSTEM
1101	SNM	IS-NR	X
1103	SNM	UNAVL	X
1107	SNM	IS-NR	X
1111	SNM	UNAVL	X
Totals			4

Command Completed.

;

This example shows the SNM service 30 second average data calculated over the previous 5 minutes:

```
rept-stat-mfc:service=snm:mode=stats:sample=avg30s
```

```
rlghncxa03w 11-03-04 13:36:07 EST EAGLE 44.0.0
PER CARD SNM SYSTEM DATA, 30-SEC AVG VALUES CALCULATED OVER PREV 5
MIN
```

			SERVER STATS			CLIENT STATS	
-----			-----				
REQ	FC	MSEC	PDUS	PDUS	PDUS	SRV	
DENIED	EVENTS	IN FC	RCVD	SENT	DSCRD		

1101	0	0	0	0	0	0	
1103	0	0	0	0	0	0	
1107	0	0	0	0	0	0	
1207	0	0	0	0	0	0	
1208	0	0	0	0	0	0	
1211	0	0	0	0	0	0	
1212	0	0	0	0	0	0	
1213	0	0	0	0	0	0	
1214	0	0	0	0	0	0	
1215	0	0	0	0	0	0	
1216	0	0	0	0	0	0	
1301	0	0	0	0	0	0	
1305	0	0	0	0	0	0	
1306	0	0	0	0	0	0	
1307	0	0	0	0	0	0	
1308	0	0	0	0	0	0	
1311	0	0	0	0	0	0	
1312	0	0	0	0	0	0	
1313	0	0	0	0	0	0	
1315	0	0	0	0	0	0	

```
-----
----
Command Completed.
```

```
;
```

This example shows an MFC report for the MTP3 service:

```
rept-stat-mfc:service=mtp3:mode=full
```

```
rlghncxa03w 11-03-04 13:06:07 EST EAGLE 44.0.0
LOC SERVICE STATE SERVER CLIENT
-----
1101 MTP3 IS-NR X X
1103 MTP3 UNAVL X X
```



```

1107  MTP3      IS-NR          X
1111  MTP3      UNAVL         X
-----
Totals 6          2          4

```

Command Completed.

;

This example shows an MFC report for the SCPEPAP service when Dual ExAP Config feature is enabled.

rept-stat-mfc:service=scpelap:mode=full

```

rlghncxa03w 11-03-04 13:06:07 EST EAGLE 45.0.0
LOC  SERVICE  STATE  SERVER  CLIENT
-----
1105  SCPELAP  IS-NR      X
-----
Totals  1          1          0

```

Command Completed.

;

This example shows an MFC report for the SFLOG service:

rept-stat-mfc:service=sflog:mode=full

```

tekelecstp 15-03-04 13:06:07 EST EAGLE 46.3.0
LOC  SERVICE  STATE  SERVER  CLIENT
-----
1101  SFLOG     IS-NR          X
-----
Totals  1          0          1

```

Command Completed.

;

This example shows an MFC report for the SFAPP service:

rept-stat-mfc:service=sfapp:mode=full

```

tklcl1110801 18-09-25 17:06:13 EST EAGLE 46.7.0.0.0-75.14.0
rept-stat-mfc:service=sfapp:mode=full
Command entered at terminal #2.

```

;

```

tklcl1110801 18-09-25 17:06:13 EST EAGLE 46.7.0.0.0-75.14.0
LOC  SERVICE  STATE  SERVER  CLIENT
-----
1101  SFAPP     IS-NR      X
1102  SFAPP     IS-NR          X
1103  SFAPP     IS-NR      X
1105  SFAPP     IS-NR      X

```

```

1217  SFAPP      IS-NR              X
-----
Totals  5              3          2

```

Command Completed.

;

This example shows an MFC report for the SFR service:

```
rept-stat-mfc:service=sfr :mode=full
```

Command Accepted - Processing

```

tklcl1110801 18-09-25 17:07:45 EST  EAGLE 46.7.0.0.0-75.14.0
rept-stat-mfc:service=sfr :mode=full
Command entered at terminal #2.

```

;

```

tklcl1110801 18-09-25 17:07:45 EST  EAGLE 46.7.0.0.0-75.14.0
LOC      SERVICE  STATE  SERVER  CLIENT
-----
1101    SFR        IS-NR   X
1102    SFR        IS-NR           X
1103    SFR        IS-NR   X
1105    SFR        IS-NR   X
1217    SFR        IS-NR           X
-----
Totals  5              3          2

```

Command Completed.

;

Legend

The MFC Engine provides Server card statistics that are computed every hour (based on a Server card's timer); therefore they are typically posted an hour later. Client card statistics update continuously; current values will be observed at every invocation of the command.

4.1.420 rept-stat-mon

Use this command to display the status of the Fast Copy subsystem on FC-capable cards and the EROUTE subsystem on STC cards and E5-STC cards for the EAGLE 5 Integrated Monitoring Support (E5IS) feature.

Parameters

loc (optional)

Card location. The card location as stenciled on the shelf for an STC or E5-STC card or an FC-capable card in the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Default:

Status for all STC and FC-capable cards is reported.

mode (optional)

This parameter provides extended performance information, including message flow control (MFC) messaging rates.

If the `mode=perf` parameter is specified, then only subsystem performance information is displayed.

Range:

perf

type (optional)

Monitoring subsystem type. The type of the subsystem for which the monitoring statistics are displayed.

Range:

fcs

Display the statistics for the Fast Copy subsystem

eroute

Display the statistics for the EROUTE subsystem

Default:

Display the statistics for both the EROUTE and FC subsystems

Example

```
rept-stat-mon
rept-stat-mon:type=eroute
rept-stat-mon:type=fcs
rept-stat-mon:type=eroute:loc=1101
rept-stat-mon:type=fcs:loc=1104
rept-stat-mon:type=eroute:mode=perf
```

Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

At least one STC card must be configured before this command can be entered.

3093 E3093 Cmd Rej: EROUTE not Configured

At least one FC-capable card must be provisioned in the system before the `type=fcs` parameter can be specified.

4840 E4840 Cmd Rej: Fast Copy capable card is required

The `loc` and `mode` parameters cannot be specified together in the command.

5019 E5019 Cmd Rej: Either LOC or MODE can be specified

The `type=eroute` parameter must be specified before the `mode` parameter can be specified.

5018 E5018 Cmd Rej: MODE can be specified only when TYPE is eroute

If the `loc` or `mode` parameter is specified, then the `type` parameter must be specified.

5016 E5016 Cmd Rej: TYPE parameter is required

Either an STC card or an FC-capable card must be provisioned in the system.

5028 E5028 Cmd Rej: Eroute or Fast Copy card is required

An FC-capable card must be provisioned in the system before the `type=fcs` parameter can be specified. An STC card must be provisioned in the system before the `type=eroute` parameter can be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

Notes

Fast Copy Cards

E5-ENET-B cards running the IPSG or IPGHC GPL are considered to be *FC-capable*. A card running the IPGHC GPL must be in the IS-NR State before the card can be considered *FC-capable*. This restriction does not apply to cards running the IPSG GPL. An *FC-capable* card is considered *FC-enabled* when Fast Copy monitoring is enabled for the respective GPL.

For a card to be FC monitored, the following two conditions must be satisfied:

1. FCMODE = FCOPY for the GPL
2. The card must have at least one (1) link with an EMP session established.

When a card is not being FC-Monitored, no FC alarm will be present on the card/port. The card's FCS state remains OFFLINE and the state of FCS ports on the card is OOS-MA/UEQ irrespective of the Ethernet cable being connected on those ports or not.

Output

This example displays card- and system-level information for the Fast Copy and EROUTE subsystems:

```
rept-stat-mon
```

```
rlghncxa03w 11-02-04 16:35:57 IST  EAGLE 44.0.0
EROUTE SUBSYSTEM REPORT IS-NR      Active      -----
STC Cards Configured= 4  Cards IS-NR= 2
EISCOPY BIT = ON
```

```

System Threshold = 80% Total Capacity
System Peak EROUTE Load:          7080 Buffers/Sec
System Total EROUTE Capacity:     12000 Buffers/Sec

```

```
SYSTEM ALARM STATUS = No Alarms.
```

CARD	VERSION	PST	SST	AST	MESSAGE USAGE	CPU USAGE
1101	052-008-000	IS-NR	Active	-----	63%	28%
1103	052-008-001	IS-NR	Active	-----	55%	28%
1105	255-255-255	OOS-MT	Isolated	-----	0%	0%
1205	255-255-255	OOS-MT	Isolated	-----	0%	0%

```

EROUTE Service Average Messaging Capacity = 59%
Average CPU Capacity = 28%

```

```
CARDS DENIED EROUTE SERVICE:
```

```
=====
```

```

FAST COPY SUBSYSTEM REPORT IS-NR          Active    -----
FC Cards Configured= 3  Cards IS-NR= 3
SYSTEM ALARM STATUS = No Alarms.

```

```

GPL          FCMODE
-----
IPSG         FCOPY
IPGHC        FCOPY
-----

```

CARD	GPL	PST	SST	CPU	CARD FCS
1201	IPSG	IS-NR	Active	34%	ALLOWED
1202	IPSG	IS-NR	Active	55%	ALLOWED
1203	IPGHC	IS-NR	Active	10%	ALLOWED

```
Command Completed.
```

```
;
```

This example displays card- and system-level information for the EROUTE subsystem:

```
rept-stat-mon:type=eroute
```

```

rlghncxa03w 11-03-11 16:35:57 IST  EAGLE 44.0.0
EROUTE SUBSYSTEM REPORT IS-NR          Active    -----
STC Cards Configured= 4  Cards IS-NR= 2
EISCOPY BIT = ON
System Threshold = 80% Total Capacity
System Peak EROUTE Load:          7080 Buffers/Sec
System Total EROUTE Capacity:     12000 Buffers/Sec

SYSTEM ALARM STATUS = No Alarms.

```

```

      CARD   VERSION   PST           SST           AST           MESSAGE
CPU
      USAGE

```

```

-----
      1101   052-008-000 IS-NR           Active        -----        63%
28%
      1103   052-008-001 IS-NR           Active        -----        55%
28%
      1203   255-255-255 OOS-MT          Isolated      -----
0%
      1205   255-255-255 OOS-MT          Isolated      -----
0%

```

```

-----
EROUTE Service Average Messaging Capacity = 59%
Average CPU Capacity = 28%

```

CARDS DENIED EROUTE SERVICE:

Command Completed.

;

This example displays card- and system-level information for the Fast Copy subsystem:

```
rept-stat-mon:type=fcs
```

```

rlghncxa03w 10-02-02 16:35:57 IST EAGLE 42.0.0
FAST COPY SUBSYSTEM REPORT IS-NR           Active        -----
FC Cards Configured= 3 Cards IS-NR= 3
SYSTEM ALARM STATUS = No Alarms.

```

FAST COPY OPTIONS

```

-----
FCGPL = IPSG           FCMODE = FCOPY
FCGPL = IPGHC          FCMODE = FCOPY
-----

```

```

      CARD  GPL    PST           SST           CPU  CARD FCS
-----
      1201  IPSG   IS-NR           Active        34%  ALLOWED
      1202  IPSG   IS-NR           Active        55%  ALLOWED
      1203  IPGHC  IS-NR           Active        10%  ALLOWED
-----

```

Command Completed.

;

The following example shows status of FC ports on a FC capable card when the card is not being FC-Monitored:

```
rept-stat-mon:type=fcs:loc=1107
```

```
rlghncxa03w 10-01-09 16:35:57 IST EAGLE 42.0.0
CARD  GPL      PST      SST      CPU  CARD FCS
1107  IPGS    IS-NR      Active   21%  OFFLINE
ALARM STATUS = No Alarms.
```

```
FCS IP PORT A1:      OOS-MA      Ueq      -----
ALARM STATUS = No Alarms.
FCS IP PORT B1:      OOS-MA      Ueq      -----
ALARM STATUS = No Alarms.
```

```
IMF CONNECTION STATUS TABLE
```

```
-----
IPADDRESS          ALM ID  ASSOC NAME      PKT CNT      SERVICE MODE
-----
```

```
PORT ALARM STATUS
```

```
-----
PORT ID  ALARM ID  REASON
-----
```

```
Command Completed.
```

```
;
```

This example displays EROUTE subsystem information for the specified card:

```
rept-stat-mon:type=eroute:loc=1101
```

```
rlghncxa03w 10-01-09 16:35:57 IST EAGLE 42.0.0
CARD  VERSION      TYPE  PST      SST      AST
1101  052-008-000  STC   IS-NR      Active   -----
```

```
CARD ALARM STATUS = No Alarms.
```

```
TOTAL CPU USAGE = 28%
```

```
NTP broadcast = VALID
```

```
STC IP CONNECTION
```

```
PORT  PST      SST
A     OOS-MT    Unavail
B     OOS-MT    Unavail
```

```
Command Completed.
```

```
;
```

This example displays Fast Copy subsystem information for the specified card. (A) or (B) in the IMF CONNECTION STATUS TABLE indicates the Fast Copy A or Fast Copy B network, respectively.

```
rept-stat-mon:type=fcs:loc=1203
```

```
rlghncxa03w 10-02-02 16:35:57 IST EAGLE 42.0.0
CARD GPL PST SST CPU CARD FCS
1203 IPGHC IS-NR Active 10% ALLOWED
ALARM STATUS = No Alarms.
```

```
FCS IP PORT A1: IS-NR Active -----
ALARM STATUS = No Alarms.
FCS IP PORT B1: IS-NR Active -----
ALARM STATUS = No Alarms.
```

```
IMF CONNECTION STATUS TABLE
```

```
-----
----
IPADDRESS          ALM ID  ASSOC NAME      PKT CNT      SERVICE
MODE
-----
----
172.21.48.15      (A) 582    sg1203a21      100          Copy Rx
MSUs
172.22.48.15      (B) 582    sg1203a22      200          Copy Tx
MSUs
```

```
PORT ALARM STATUS
```

```
-----
----
PORT ID ALARM ID  REASON
-----
----
A          583      Mismatched Fast Copy Network Addresses
```

```
Command Completed.
```

```
;
```

This example displays EROUTE subsystem performance statistics:

```
rept-stat-mon:type=eroute:mode=perf
```

```
rlghncxa03w 11-03-11 16:35:57 IST EAGLE 44.0.0
EROUTE SUBSYSTEM REPORT IS-ANR Ovrflw=1 -----
STC Cards Configured= 2 Cards IS-NR= 2
EISCOPY BIT = ON
System Threshold = 80% Total Capacity
System Peak EROUTE Load: 12200 Buffers/Sec
System Total EROUTE Capacity: 12000 Buffers/Sec
```

```
SYSTEM ALARM STATUS = * 0482 Card(s) have been denied EROUTE
service
```



```

STATISTICS
=====
CARD      CPU USAGE  MESSAGE RATE
-----
1104      55%        6200
1112      50%        6000
-----
AVERAGE MESSAGING CAPACITY = 80%
AVERAGE CPU USAGE = 27%
TOTAL MESSAGING RATE = 12200

CARDS DENIED EROUTE SERVICE:  1302, 1305

Command Completed.
;

```

This example displays output when FC-capable cards are configured, and the Fast Copy mode is turned off:

```
rept-stat-mon:type=fcs
```

```

rlghncxa03w 10-02-02 16:35:57 IST  EAGLE 42.0.0
FAST COPY SUBSYSTEM REPORT OOS-MA      Ueq      -----
FC Cards Configured= 2  Cards IS-NR= 1
SYSTEM ALARM STATUS = No Alarms.

FAST COPY OPTIONS
-----
FCGPL = IPSG          FCMODE = OFF
FCGPL = IPGHC         FCMODE = OFF
-----

CARD  GPL    PST          SST          CPU  CARD FCS
-----
1105  IPSG    OOS-MT       Isolated     0%  OFFLINE
1106  IPGHC   IS-NR        Active       15% OFFLINE
-----

Command Completed.
;

```

This example displays card- and system-level information when the Fast Copy subsystem is in the OOS-MT/Uavail state:

```
rept-stat-mon:type=fcs
```

```

rlghncxa03w 10-02-02 16:35:57 IST  EAGLE 42.0.0
FAST COPY SUBSYSTEM REPORT OOS-MT      Unavail   -----
FC Cards Configured= 2  Cards IS-NR= 2
SYSTEM ALARM STATUS = * 0597 FC System is Deactivated

```

FAST COPY OPTIONS

```
-----
FCGPL = IPSP      FCMODE = FCOPY
FCGPL = IPGHC     FCMODE = FCOPY
-----
```

```
-----
CARD  GPL      PST          SST          CPU  CARD FCS
-----
1105  IPSP      IS-NR          Active       12%  DEACTIVATED
1106  IPGHC     IS-NR          Active       10%  DEACTIVATED
-----
```

Command Completed.

;

This example displays Fast Copy subsystem information for the specified card when the card is in a DEACTIVATED state:

```
rept-stat-mon:type=fcs:loc=1105
```

```
rlghncxa03w 10-02-02 16:35:57 IST EAGLE 42.0.0
CARD  GPL      PST          SST          CPU  CARD FCS      REASON
1105  IPSP      IS-NR          Active       12%  DEACTIVATED  CPU
Thrshld Exceeded
ALARM STATUS = ** 0590 Fast Copy Application De-activated

FCS IP PORT A1:          IS-ANR          Restrict  -----
ALARM STATUS = ** 0588 FC Port De-activated
FCS IP PORT B1:          IS-ANR          Restrict  -----
ALARM STATUS = ** 0588 FC Port De-activated
```

IMF CONNECTION STATUS TABLE

```
-----
-----
IPADDRESS          ALM ID  ASSOC NAME      PKT CNT      SERVICE
MODE
-----
-----
172.21.48.15      (A) 582      sg1203a21      100          Copy Rx
MSUs
172.22.48.15      (B) 582      sg1203a22      200          Copy Tx
MSUs
```

PORT ALARM STATUS

```
-----
-----
PORT ID  ALARM ID  REASON
-----
-----
```

Command Completed.
;

Legend

Information displayed in the EROUTE subsystem report:

- **STC Cards Configured**—Total number of STC cards and E5-STC cards configured in the system
- **Cards IS-NR**—Total number of STC cards and E5-STC cards in IS-NR state
- **EISCOPY BIT**—Indicates whether EIS copy function is turned On or Off
- **System Threshold**—% of system total capacity being used
- **System Peak EROUTE Load**—Current load in Buffers/Sec
- **System Total EROUTE Capacity**—Total capacity in Buffers/Sec
- **SYSTEM ALARM STATUS**—Either "No Alarms" or current alarm number and text
- **CARD**—Card location
- **VERSION**—Version number of the GPL loaded on the card. Dashes (- - - -) in the version column indicate one of the following conditions about the card:
 - The card does not run a GPL, such as TDM or MDAL cards.
 - The card is configured but is not physically present in the system.
 - The card is IS-ANR or is in the process of being loaded.
- **TYPE**—Card type entered in the database
- **PST**—Primary state of the card. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the card. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the card. See [Possible Values for PST/SST/AST](#).
- **EROUTE Service Average Messaging Capacity\AVERAGE MESSAGING CAPACITY**—Average MFC Capacity in percent
- **Average CPU Capacity\Average CPU Usage**—Average CPU capacity in percent
- **Message usage**—% of system current MFC rate based on the Max MFC capacity
- **TOTAL MESSAGING RATE**—Total MFC processing rate
- **CPU usage**—% of system current CPU usage
- **STC IP PORT**—Status of the STC IP ports A and B

Information displayed in the Fast Copy subsystem report:

- **FC Cards Configured**—Total number of FC-capable cards configured in the system
- **Cards IS-NR**—Total number of FC-capable cards in IS-NR state
- **FCMODE**—Monitoring mode
- **GPL**—Application loaded on the card
- **SYSTEM ALARM STATUS**—Either "No Alarms" or current alarm number and text
- **CARD**—Card location
- **PST**—Primary state of the card. See [Possible Values for PST/SST/AST](#).

- **SST**—Secondary state of the card. See [Possible Values for PST/SST/AST](#).
- **CPU**—% of system current CPU usage
- **CARD FCS**—Fast Copy status for the card
- **REASON**—Deactivation alarm reason on Card FCS. Possible values are "CPU Thrshld Exceeded" or "Auto-Neg Fails".
- **FCS IP PORT**—status of the FCS IP ports A1 and B1
- **IPADDRESS**—IP addresses of the IMF
- **ASSOC NAME**—Association name
- **PKT CNT**—Snapshot of packets received/sent per association
- **SERVICE MODE**—Type of service granted by the DAS to FC-enabled card

4.1.421 rept-stat-mps

Use this command to display the overall status of the application running on the MPS (multi-purpose server).

- If the LNP ELAP Configuration feature is turned on, the ELAP (EAGLE LNP Application Processor) subsystem status is displayed.
- If the INP/AINPQ feature is turned on, the EPAP (EAGLE Application Processor) subsystem status is displayed.
- If the G-Port (GSM mobile number portability), G-Flex (GSM flexible numbering), or PPSMS (Prepaid SMS Intercept Ph1) feature is turned on, then the GSM (Global System for Mobile Telecommunications) and EPAP status is displayed.
- If the EIR (Equipment Identity Register) feature is turned on, then the status of the EIR component on the card is displayed.
- If the V-Flex (Voice Mail Router) feature is turned on, then the status of the V-Flex component on the card is displayed.
- If the ATINP (ATI Number Portability Query) feature is enabled, then the status of the ATINPQ component on the card is displayed.

Parameters

loc (optional)

The card location of the VSCCP card to be reported on, as stenciled on the shelf of the EAGLE.

Range:

1101 - 1108, 1111 - 1117, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

Example

```
rept-stat-mps:loc=1106
```

Dependencies

The card location specified in the `loc` parameter must contain a Service Module card.

3014 E3014 Cmd Rej: Card location specified must be an SCCP card

One of the following features must be turned on, the ATINP feature must be enabled, or at least one ENUM card must be configured before this command can be entered:

- A-Port
- AINPQ
- DEIR
- G-Flex
- G-Port
- INP
- EIR
- LNP ELAP Configuration
- Prepaid SMS Intercept Ph1
- SIP NP
- V-Flex

4102 E4102 Cmd Rej: At least one MPS based feature must be enabled/ON

At least one Service Module card must be configured in the system before this command can be entered.

N/A N/A

The card location specified in the `loc` parameter must be provisioned as an SCCP card but cannot provide only GTT service.

3239 E3239 Cmd Rej: Card does not use MPS functionality

To specify the `rept-stat-mps` command, no other `rept-stat-xxxx` command can be in progress.

N/A N/A

The card location specified in the `loc` parameter must contain either an SCCP card, a SIP card, an ENUM card, or a DEIR card running the DEIRHC gpl.

2069 E2069 Cmd Rej: Card location specified must be an SM card

A Service Module card running the VSCCP/SIPHC/DEIRHC/ENUMHC application must be configured before this command can be entered.

2073 E2073 Cmd Rej: SCCP or SIP or DEIR or ENUM not Configured

Notes

When the MPS does not have an alarm on it, the `rept-stat-mps` report indicates in the SST field of the report which MPS is the active and which is the standby. When the MPS has an alarm on it, the SST field shows "Fault," and the Active/Standby information is displayed in

the AST field as long as there is an alarm. After the alarm clears, the Active/Standby information appears in the SST field as before.

Output



Note:

The status for a particular feature is shown only if that feature is enabled or turned on.

This example shows the possible system response if the LNP ELAP Configuration feature is turned on:

```
rept-stat-mps
```

```

rlghncxa03w 09-01-07 10:23:93 EST  EAGLE 40.0.0

                VERSION      PST           SST           AST
ELAP A          027-015-000   OOS-MT        Fault         Standby
CRITICAL PLATFORM ALARM DATA = No Alarms
MAJOR   PLATFORM ALARM DATA = h'0123456789ABCDEF
MINOR   PLATFORM ALARM DATA = h'0123456789ABCDEF
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR   APPLICATION ALARM DATA = h'0123456789ABCDEF
MINOR   APPLICATION ALARM DATA = No Alarms
        ALARM STATUS = ** 0371 Major Platform Failure(s)

                VERSION      PST           SST           AST
ELAP B          027-015-000   OOS-MT        Fault         Active
CRITICAL PLATFORM ALARM DATA = No Alarms
MAJOR   PLATFORM ALARM DATA = No Alarms
MINOR   PLATFORM ALARM DATA = No Alarms
CRITICAL APPLICATION ALARM DATA = h'0123456789ABCDEF
MAJOR   APPLICATION ALARM DATA = h'0123456789ABCDEF
MINOR   APPLICATION ALARM DATA = No Alarms
        ALARM STATUS = *C 0373 Critical Application Failure(s)

CARD  PST           SST           LNP STAT
1106 P IS-NR        Active        ACT
1201  IS-ANR        Active        SWDL
1205  OOS-MT-DSBLD Manual        -----
1302  OOS-MT        Isolated     -----
1310  IS-ANR        Standby      SWDL

CARD 1106 ALARM STATUS = No Alarms
      DSM PORT A:      ALARM STATUS      = No Alarms
      DSM PORT B:      ALARM STATUS      = No Alarms
CARD 1201 ALARM STATUS = No Alarms
      DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection
Unavailable
      DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection
Unavailable
CARD 1205 ALARM STATUS = No Alarms

```

```

        DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection
Unavailable
        DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection
Unavailable
        CARD 1302 ALARM STATUS = ** 0013 Card is isolated from the system
        DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection
Unavailable
        DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection
Unavailable
        CARD 1310 ALARM STATUS = No Alarms
        DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection
Unavailable
        DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection
Unavailable
        Command Completed.
;

```

Possible system response when a specific card is queried, and the INP or AINP feature is turned on:

```
rept-stat-mps:loc=1205
```

```

rlghncxa03w 04-01-07 10:23:93 EST  EAGLE 31.3.0
CARD  VERSION      TYPE    PST          SST          AST
1205  -----      DSM    OOS-MT-DSBLD Manual        -----
        DSM PORT A          OOS-MT        Unavail      -----
                ALARM STATUS      = ** 0084 IP Connection Unavailable
        DSM PORT B          OOS-MT        Unavail      -----
                ALARM STATUS      = ** 0084 IP Connection Unavailable
        INP STAT              = -----
        CARD ALARM STATUS = No Alarms.
        DSM MEMORY USAGE    = 0%
        Command Completed.
;

```

Possible system response when a specific card is queried, and the EIR feature and the G-Flex, G-Port, or PPSMS feature are turned on. The example also shows that DSM Port A has an IP Connection Unavailable alarm due to failed channels Dnld, TCP, and UDP. DSM Port B has an IP Connection Unavailable alarm due to failed channels Dnld and TCP.

```
rept-stat-mps:loc=1205
```

```

Integrat40 05-05-24 10:37:22 EST  EAGLE5 34.0.0
CARD  VERSION      TYPE    PST          SST          AST
1205  -----      DSM    OOS-MT-DSBLD Manual        -----
        DSM PORT A          OOS-MT        Unavail      -----
                ALARM STATUS      = ** 0084 IP Connection Unavailable
        DSM PORT B          OOS-MT        Unavail      -----
                ALARM STATUS      = ** 0084 IP Connection Unavailable
        GSM STAT              = -----
        EIR STAT              = -----
        CARD ALARM STATUS = No Alarms.

```

```

    DSM MEMORY USAGE    = 0%
    Command Completed.
;

```

Possible system response if a specific card is queried, and the G-Flex or G-Port feature and the V-Flex feature are turned on:

```
rept-stat-mps:loc=1205
```

```

Integrat40 08-05-07 11:37:24 EST  EAGLE5 39.0.0
CARD  VERSION          TYPE    PST           SST           AST
1205  -----          DSM    OOS-MT-DSBLD Manual        -----
      DSM PORT A                OOS-MT        Unavail       -----
            ALARM STATUS        = ** 0084 IP Connection Unavailable
      DSM PORT B                OOS-MT        Unavail       -----
            ALARM STATUS        = ** 0084 IP Connection Unavailable
      GSM STAT                = -----
      VFLEX STAT              = -----
      CARD ALARM STATUS        = No Alarms.
      DSM MEMORY USAGE        = 0%
    Command Completed.
;

```

Possible system response if the EIR, INP or AINPQ, V-Flex, and the G-Port, G-Flex, or PPSMS features are turned on, and the ATINP feature is enabled.

```
rept-stat-mps
```

```

rlghncxa03w 09-01-07 10:23:93 EST  EAGLE 40.0.0
                                VERSION    PST           SST           AST
EPAP A                027-015-000  IS-NR        Active        -----
CRITICAL PLATFORM    ALARM DATA = No Alarms
MAJOR   PLATFORM      ALARM DATA = No Alarms
MINOR   PLATFORM      ALARM DATA = No Alarms
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR   APPLICATION   ALARM DATA = No Alarms
MINOR   APPLICATION   ALARM DATA = No Alarms
            ALARM STATUS = No Alarms

                                VERSION    PST           SST           AST
EPAP B                027-015-000  OOS-MT        Fault         Standby
CRITICAL PLATFORM    ALARM DATA = No Alarms
MAJOR   PLATFORM      ALARM DATA = No Alarms
MINOR   PLATFORM      ALARM DATA = No Alarms
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR   APPLICATION   ALARM DATA = No Alarms
MINOR   APPLICATION   ALARM DATA = No Alarms
            ALARM STATUS = No Alarms

CARD  PST           SST           GSM STAT
1106 P IS-NR        Active        ACT
1201  IS-ANR        Active        SWDL

```



```

1205 OOS-MT-DSBLD Manual -----
1302 OOS-MT Isolated -----
1310 IS-ANR Standby SWDL
CARD PST SST INP STAT
1106 P IS-NR Active ACT
1201 IS-ANR Active SWDL
1205 OOS-MT-DSBLD Manual -----
1302 OOS-MT Isolated -----
1310 IS-ANR Standby SWDL
CARD PST SST EIR STAT
1106 P IS-NR Active ACT
1201 IS-ANR Active SWDL
1205 OOS-MT-DSBLD Manual -----
1302 OOS-MT Isolated -----
1310 IS-ANR Standby SWDL
CARD PST SST V-FLEX STAT
1106 P IS-NR Active ACT
1201 IS-ANR Active SWDL
1205 OOS-MT-DSBLD Manual -----
1302 OOS-MT Isolated -----
1310 IS-ANR Standby SWDL
CARD PST SST ATINPQ STAT
1106 P IS-NR Active ACT
1201 IS-ANR Active SWDL
1205 OOS-MT-DSBLD Manual -----
1302 OOS-MT Isolated -----
1310 IS-ANR Standby SWDL

```

```

CARD 1106 ALARM STATUS = No Alarms
  DSM PORT A: ALARM STATUS = No Alarms
  DSM PORT B: ALARM STATUS = No Alarms
CARD 1201 ALARM STATUS = No Alarms
  DSM PORT A: ALARM STATUS = No Alarms
  DSM PORT B: ALARM STATUS = No Alarms
CARD 1205 ALARM STATUS = No Alarms
  DSM PORT A: ALARM STATUS = No Alarms
  DSM PORT B: ALARM STATUS = No Alarms
CARD 1302 ALARM STATUS = No Alarms
  DSM PORT A: ALARM STATUS = No Alarms
  DSM PORT B: ALARM STATUS = No Alarms
CARD 1310 ALARM STATUS = No Alarms
  DSM PORT A: ALARM STATUS = No Alarms
  DSM PORT B: ALARM STATUS = No Alarms
Command Completed.

```

;

This example shows the possible system response if a SIP card is queried and the SIP NP feature is turned on:

```

rept-stat-mps:loc=1101

tekelecstp 12-07-26 14:41:09 EST EAGLE
45.0.0
rept-stat-
mps:loc=1101

```

```

Command entered at terminal #4.
;

tekelecstp 12-07-26 14:41:09 EST EAGLE 45.0.0
CARD      VERSION      TYPE  PST      SST
AST
1101      -----      DSM   OOST-MT-DSBLD  MEA
-----
          DSM PORT A          OOS-MT          Unavail
-----
          ALARM STATUS      = ** 0084 IP Connection
unavailable
                                Failed Channels: Prov Dnld UDP
CARD ALARM STATUS      = ** 0441 Incorrect MBD - CPU
DSM MEMORY USAGE      = ---%

Command Completed.
;
```

The following example is when Dual ExAP Config feature is enabled and both LNP and EPAP base features turned ON:

```

exap 12-07-02 15:42:53 MST EAGLE 45.0.0-64.34.0
rept-stat-mps
Command entered at terminal #3.
;

exap 12-07-02 15:42:53 MST EAGLE 45.0.0-64.34.0
          VERSION      PST      SST      AST
ELAP A    009-000-000  IS-ANR  Fault    Standby
CRITICAL PLATFORM  ALARM DATA = No Alarms
MAJOR     PLATFORM  ALARM DATA = H'3000000000e01001
MINOR     PLATFORM  ALARM DATA = H'5000000000000200
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR     APPLICATION ALARM DATA = No Alarms
MINOR     APPLICATION ALARM DATA = No Alarms
          ALARM STATUS      = ** 0372 Major Platform Failure(s)

          VERSION      PST      SST      AST
ELAP B    009-000-000  IS-ANR  Fault    Active
CRITICAL PLATFORM  ALARM DATA = No Alarms
MAJOR     PLATFORM  ALARM DATA = H'3000000028000900
MINOR     PLATFORM  ALARM DATA = H'5000000000000200
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR     APPLICATION ALARM DATA = No Alarms
MINOR     APPLICATION ALARM DATA = H'6000000000000200
          ALARM STATUS      = ** 0372 Major Platform Failure(s)
```

```
CARD  PST      SST      LNP STAT
1101 P IS-NR      Active  -----
```

CARD 1101 ALARM STATUS = No Alarms.

```
DSM PORT A:      ALARM STATUS      = No Alarms.
DSM PORT B:      ALARM STATUS      = No Alarms.
```

```

          VERSION      PST      SST      AST
EPAP A          013-000-000  IS-ANR      Fault      Standby
CRITICAL PLATFORM  ALARM DATA = No Alarms
MAJOR   PLATFORM  ALARM DATA = No Alarms
MINOR   PLATFORM  ALARM DATA = No Alarms
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR   APPLICATION ALARM DATA = No Alarms
MINOR   APPLICATION ALARM DATA = H'6000000000000008
          ALARM STATUS      = * 0375 Minor Application Failure(s)

```

```

          VERSION      PST      SST      AST
EPAP B          013-000-000  IS-ANR      Fault      Active
CRITICAL PLATFORM  ALARM DATA = No Alarms
MAJOR   PLATFORM  ALARM DATA = No Alarms
MINOR   PLATFORM  ALARM DATA = No Alarms
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR   APPLICATION ALARM DATA = No Alarms
MINOR   APPLICATION ALARM DATA = H'6000000000000008
          ALARM STATUS      = * 0375 Minor Application Failure(s)

```

```
CARD  PST      SST      GSM STAT
1111 P IS-NR      Active  ACT
```

```
CARD  PST      SST      EIR STAT
1111 P IS-NR      Active  -----
```

CARD 1111 ALARM STATUS = No Alarms.

```
DSM PORT A:      ALARM STATUS      = No Alarms.
DSM PORT B:      ALARM STATUS      = No Alarms.
```

Command Completed.

;

This example shows the possible system response if a DEIR card is queried and the S13/S13' EIR feature is turned ON:

```
rept-stat-mps:loc=1101
```

```
tekelecstp 13-03-14 14:41:09 EST EAGLE 45.1.0
rept-stat-mps:loc=1101
Command entered at terminal #4.
```

;

```
tekelecstp 13-03-14 14:41:09 EST EAGLE 45.1.0
```

```

CARD   VERSION      TYPE   PST           SST           AST
1101   -----      DSM   OOS-MT-DSBLD MEA           -----
      DSM PORT A           OOS-MT           Unavail       -----
              ALARM STATUS      = ** 0084 IP Connection Unavailable
              Failed Channels:  Prov Dnld UDP
CARD ALARM STATUS = ** 0441 Incorrect MBD - CPU
DSM MEMORY USAGE = ---%

```

Command Completed.

;

This example shows the possible system response if an ENUM card is queried:

```
rept-stat-mps:loc=1101
```

```

tekelecstp 14-05-14 14:41:09 EST EAGLE 46.1.0
rept-stat-mps:loc=1101
Command entered at terminal #4.

```

;

```

tekelecstp 14-05-14 14:41:09 EST EAGLE 46.1.0
CARD   VERSION      TYPE   PST           SST           AST
1101   -----      DSM   OOS-MT-DSBLD MEA           -----
      DSM PORT A           OOS-MT           Unavail       -----
              ALARM STATUS      = ** 0084 IP Connection Unavailable
              Failed Channels:  Prov Dnld UDP
CARD ALARM STATUS = ** 0441 Incorrect MBD - CPU
DSM MEMORY USAGE = ---%

```

Command Completed.

;

Legend

- **CARD**—Location of the Service Module card. The Service Module card with the designator “P” to the right of its card location is the primary Service Module card as selected by the active ELAP/EPAP. The primary Service Module card provides the ELAP/EPAP status to the OAM. When the primary state (PST) of the ELAP/EPAP is IS-NR, the secondary state (SST) indicates whether the ELAP/EPAP is active or standby.
- **VERSION**—Version number of the GPL that the specified ELAP/EPAP or card is running.
- **PST**—Primary state of the ELAP/EPAP or card. Possible values are described in [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the ELAP/EPAP or card. Possible values are described in [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the ELAP/EPAP or card. Possible values are described in [Possible Values for PST/SST/AST](#).
- **EPAP/ELAP A/B**—Application running on the MPS (multi-purpose server) platform. If the LNP ELAP Configuration feature is turned on, the output shows ELAP A/B. If INP, G-Flex, G-Port, or V-Flex is turned on, the output shows EPAP A/B.

- **ALARM STATUS**—List of trouble text alarm messages that have been generated for the MPS and the applications running on the MPS. Each alarm is listed as a 16-character hexadecimal string where each bit represents a unique platform or application alarm. To decode the string, use the procedure in the *EPAP Administration Guide* or the *ELAP Administration and LNP Feature Activation Guide*. There are 6 categories of MPS alarms:
 - Critical platform alarm data
 - Major platform alarm data
 - Minor platform alarm data
 - Critical application alarm data
 - Major application alarm data
 - Minor application alarm data
- **GSM STAT**—Possible states are ACT (active) or SWDL (the GSM component on that card is inactive until the software download completes). GSM STAT information is not displayed if the G-Port, G-Flex and Prepaid SMS Intercept Ph1 features are turned off.
- **INP STAT**—Possible states include ACT (active), OFFL (offline) and SWDL (the INP component on that card is inactive until the software download completes). INP STAT information is not displayed if the INP feature is turned off.
- **LNP STAT**—Possible states include ACT (active), OFFL (offline) and SWDL (the LNP component on that card is inactive until the software download completes). LNP STAT information is not displayed if the LNP ELAP Configuration feature is turned off.
- **EIR STAT**—Possible states include ACT (active), OFFL (offline), and SWDL (the EIR component on that card is inactive until software download completes). EIR STAT information is not displayed if the EIR feature is not enabled.
- **VFLEX STAT**—Possible states include ACT (active), OFFL (offline), and SWDL (the V-Flex component on that card is inactive until software download completes). V-Flex STAT information is not displayed if the V-Flex feature is not on.
- **ATINPQ STAT**—Possible states include ACT (active), OFFL (offline), and SWDL (the ATINPQ component on that card is inactive until software download completes). ATINPQ STAT information is not displayed if the ATINP feature is not enabled.
- **DSM MEMORY USAGE**—Percentage of Service Module memory used to store the ELAP/EPAP database.
For EPAP, the percentage of the card memory is displayed. For example, 50% of the memory on an E5-SM4G-B card means that 2GB are used.

For ELAP/LNP, the percentage that is displayed depends on the enabled or default feature access key (FAK) quantity for LNP ported TNs, LNP ported LRNs, and LNP ported NPANXXs in the system (see the `rtrv-ctrl-feat` command output). The percentage is the greatest of: 1) TNs provisioned divided by LNP ported TNs FAK quantity, 2) LRNs provisioned divided by LNP ported LRNs FAK quantity, or 3) NPANXXs provisioned divided by LNP ported NPANXXs FAK quantity.
- **CARD XXXX ALARM STATUS**—List of trouble text alarm messages that have been generated for the card
- **DSM Port A/B**—List of trouble text alarm messages that have been generated for the port on the Service Module card.
- **IP Connection Unavailable**—The failed channels on those ports with IP Connection Unavailable alarms. Possible channels reported are:
 - Prov—RTDB Provisioning Channel

- Dnld—RTDB Download Channel
- TCP—Transmission Control Protocol Channel
- UDP—User Datagram Protocol Channel

Related Topics

- [rept-stat-card](#)
- [rept-stat-sccp](#)

4.1.422 rept-stat-mux

Use this command to list all the MUX cards and the location and status of the cards.

Parameters

This command has no parameters.

Example

```
rept-stat-mux
```

Dependencies

None

N/A N/A

Notes

None

Output

```
rept-stat-mux
```

```

tekelecstp 10-02-21 11:19:03 EST EAGLE 42.0.0
CARD  TYPE      PST      SST      AST      BITRATE
BITRATE BERT
(ACT)  STATUS
-----
-----
      1109  HIPR2  IS-NR      Active  -----  HIGH
LOW    PASS
      1110  HIPR2  IS-NR      Active  -----  HIGH
LOW    UNKNOWN
      1209  HIPR2  IS-NR      Active  -----  HIGH
LOW    FAIL
      1210  HIPR2  IS-NR      Active  -----  HIGH
LOW    PASS
Command Completed.
;
```

Legend

- **CARD**—MUX card location
- **TYPE**—Type of card
- **PST**—Primary state of the card. Possible values are described in [Possible Values for PST/SST/AST](#) in Appendix A.
- **SST**—Secondary state of the card. Possible values are described in [Possible Values for PST/SST/AST](#) in Appendix A.
- **AST**—Associated state of the card. Possible values are described in [Possible Values for PST/SST/AST](#) in Appendix A.
- **BITRATE(OPER)**—Maximum operational bit rate that the Fibre-Channel ring is capable of. If the operational bit rate is HIGH, the Fibre-Channel ring can be switched between the HIGH rate and the LOW rate.
- **BITRATE(ACT)**—Bit rate currently used by the Fibre-Channel ring. This rate is determined by various parameters such as the operational bit rate of the other bus, availability of a High Rate Feature Access Key, etc.
- **BERT STATUS**—BERT (Bit Error Rate Test) status of the MUX card. BERT is a diagnostic test that is initiated by the MUX cards on the IMT Bus during Bus alignment. Possible values are:
 - **PASS**—BERT passed for the MUX card
 - **FAIL**—BERT failed for the MUX card
 - **UNKNOWN**— This value should not be seen. If it is observed, please contact My Oracle Support (MOS).

Related Topics

- [rept-stat-card](#)

4.1.423 rept-stat-rtd

Use this command to report Run Time Diagnostics (RTD) for EAGLE cards, including the status of internal integrity checks and the RTD subsystem alarm. This display can help determine the cause when an RTD subsystem alarm occurs, or when associated issues are reported.

This command is also used to reset MSU validation statistics and clear the RTD subsystem alarm.

Parameters

force (optional)

This parameter is used with the `reset=yes` parameter to clear statistics for a card when the RTD subsystem alarm is present.

Range:

`yes`

loc (optional)

Location. The card location as stenciled on the shelf of the system.

**Note:**

This parameter can be used to either retrieve or reset statistics for a card location. To reset the statistics, the `loc` and `reset` parameters must be specified together in the command.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

reset (optional)

This parameter clears the statistics by setting them to zero and resets the checksum card indicator error and RTD subsystem alarm.

Range: yes

Clears the statistics.

If this parameter is specified with the `loc` parameter, then statistics are cleared for the specified card. If this parameter is specified, and the `loc` parameter is not specified, then statistics are cleared for all cards in the system.

Example

```
rept-stat-rtd
rept-stat-rtd:loc=1107
rept-stat-rtd:reset=yes:force=yes
rept-stat-rtd:loc=1107:reset=yes
```

Dependencies

If the `reset=yes` parameter is specified, then the `force=yes` parameter must be specified to clear the statistics and checksum failure indicators.

3799 E3799 Cmd Rej: FORCE=YES must be specified

The card specified by the `loc` parameter must be an IPLIMx, IPGWx, IPSG, SCCP, Service Module E5-E1T1-B, E5-ATM-B card.

2212 E2212 Cmd Rej: Invalid card type for this command

The card in the location specified by the `loc` parameter must be in service.

2387 E2387 Cmd Rej: Card is not in service

The `reset=yes` parameter must be specified to clear the statistics.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

The `force=yes` parameter must be specified.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

The `loc` parameter cannot have a non-numeric value.

2051 E2051 Cmd Rej: Incorrect information unit, expecting number - <parm>

The following card locations are not valid for this command: 1114, 1116, 1117, 1118 (E5-TDM and E5-MDAL cards), and all `xy09` and `xy10` locations where `x` is the frame and `y` is the shelf (MUX cards).

2025 E2025 Cmd Rej: Invalid card location

The card slot must be equipped and in service.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

Notes

MSU Validation Statistics

The statistics from internal integrity checks are displayed for all in-service LIM and SCCP cards. The reported statistics are dynamic and are not maintained when a card is re-initialized.

The displayed reports contain message validation totals since the last time the diagnostic information for the cards was reset.

The individual statistics that are reported re-start at zero after the maximum values are reached and are cleared when reset by the `rept-stat-rtd` command.

Summary Report (`rept-stat-rtd`)

The report displayed shows the summary statistics or overall totals for MSU validation statistics for all LIM and SCCP cards in the system. It also includes the status for the RTD subsystem and the RTD subsystem alarm.

Card Summary Report (`rept-stat-rtd:loc=`)

When the `loc` parameter is specified in the `rept-stat-rtd` command, the report displayed shows the detailed MSU validation statistics report for the specified card. The report shows statistics from integrity checks performed by the specified card on MSUs transferred to and from LIM/SCCP cards and includes the timestamp when the card last detected an error during integrity checks. The statistics are only displayed for cards with non-zero totals.

The integrity checks are performed on a subset of the MSUs transferred between cards. When card(s) report errors during the integrity checks, the RTD subsystem alarm is activated. The error statistics reported should be used along with the UIMs or alarms to help identify the source of the problem.

RTD Subsystem Alarm

The RTD subsystem alarm is triggered when a card reports that a checksum error was detected during internal card integrity checks.

The RTD subsystem alarm remains active in the system until the statistics are reset using the `rept-stat-rtd` command, and no further indications of checksum errors are reported during internal card integrity checks.

Output

If the `rept-stat-rtd` command is entered with no parameters, then a summary status for the RTD subsystem and alarm and summary statistics for all of the LIM/SCCP cards in the system are displayed.

If the `loc` parameter is specified in the `rept-stat-rtd` command, then detailed statistics are displayed for the specified card location. Only cards with non-zero totals are reported in the location specific report.

This example displays a summary report on the status of the RTD subsystem and RTD subsystem alarm with MSU validation statistics for all LIM/SCCP cards in the system.

```
rept-stat-rtd
```

```
eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
Retrieving data from cards...
```

```
RTD SUBSYSTEM REPORT IS-NR           Active    -----
RTD ALARM STATUS = No Alarms
```

```

                MSU Validation Statistics
                =====
                Total Rx   Total Rx   Total
CARD   Error   Validated   Tx
1101           0         275     710
1102           0         200     200
1103           0         200    1000
1105           0        1360     275
1107           0         200     100
1108           0         100     100

```

```
-----
---
END OF REPORT
;
```

This example displays a detailed report for card 1101. The report indicates that the card received MSUs from several cards in the system.

```
rept-stat-rtd:loc=1101
```

```
eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
Retrieving data from card ...
CARD SUMMARY: 1101      Last Alarm Timestamp: -----
```

```

                MSU Validation
Statistics
                =====
                Total Rx   Total Rx   Total Tx
SRC/DEST      Error   Validated
CARD

```

```

1102                0          100         100
1103                0           0           0
1105                0           75          360
1107                0          100          200
1108                0           50           50

```

```

-----
;END OF REPORT
;

```

This example displays a summary report for cards 1101 - 1108. The report indicates that the cards received checksum errors in MSUs from other cards.

```
rept-stat-rtd
```

```

eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
Retrieving data from card...

```

```

RTD SUBSYSTEM REPORT IS-ANR          Active      -----
RTD ALARM STATUS = 541 MSU cksum error threshold exceeded

```

```

          MSU Validation Statistics
          =====
          Total Rx   Total Rx   Total
CARD      Error   Validated   Tx
1101         100       275       500
1102         25       200       300
1103          0       200       500
1105          0       600       125
1107         50       250       100
1108          0       100       100

```

```

-----
;END OF REPORT
;

```

This example displays a detailed report for card 1101. The report indicates that the card received MSUs with checksums from cards 1102, 1103, and 1105 and MSUs with checksum errors from card 1103.

```
rept-stat-rtd:loc=1101
```

```

eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
Retrieving data from card ...

```

```
CARD SUMMARY: 1101      Last Alarm Timestamp: mm-dd-yy hh:mm:ss
```

```

          MSU Validation Statistics
          =====
          Total Rx   Total Rx   Total Tx
SRC/DEST      Error   Validated
CARD

```

1102	0	75	100
1103	100	100	100
1105	0	100	100
1107	0	0	100
1108	0	0	100

This example displays the option for resetting MSU validation statistics of all cards in the system.

```
rept-stat-rtd:reset=yes
```

```
eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
Clear RTD Statistics command(s) issued...
Command Completed.
```

```
;
```

This example displays the option for resetting MSU validation statistics and checksum failure indicators for all cards in the system and clearing the RTD subsystem alarm.

```
rept-stat-card:reset=yes:force=yes
```

```
eagle10110 07-02-22 20:34:06 EST EAGLE 35.6
Clear RTD Statistics command(s) issued...
Command Completed.
```

```
eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
5501.0542 RTD SYSTEM MSU cksum error threshold
cleared
```

```
;
```

Legend

This section defines the fields of the `rept-stat-rtd` reports.

PST—Possible values are described in [Possible Values for PST/SST/AST](#). For this command, IS-NR specifically means no checksum errors were found during the last reporting period; IS-ANR specifically means that a card or cards reported checksum errors during MSU integrity checks when the RTD status was previously IS-NR, and the RTD System Alarm(s) was raised.

Total Rx Error (for a Summary Report)—Total MSUs received with checksum errors, including MSUs with checksum errors received from all cards in the system.

Total Rx Error (for a Location-Specified Report)—Total MSUs with checksum errors received at the card specified by the LOC parameter from SRC/DEST CARD.

Total Rx Validated (for a Summary Report)—Total MSUs with checksum received and validated from all cards in the system.

Total Rx Validated (for a Location-Specified Report)—Total MSUs with checksum received and validated at the card specified by the LOC parameter from SRC/DEST CARD.

Total Tx (for a Summary Report)—Total MSUs with checksum applied and transmitted to all cards in the system.

Total Tx (for a Location-Specified Report)—Total MSUs with checksums transmitted from the card specified in the LOC parameter to SRC/DEST CARD.

Last Alarm Timestamp—Timestamp for last reported checksum error for the card specified in the LOC parameter.

SRC/DEST CARD—Source card transmitting MSUs with checksums received by the card specified in the LOC parameter. Destination card receiving MSUs with checksums transmitted from card specified in LOC parameter.

RTD Subsystem—Indicates RTD Device Status (IS-NR, etc.).

RTD Alarm Status—Indicates whether an alarm is present for the RTD Device.

4.1.424 rept-stat-rte

Use this command to display the signaling route status for a particular destination.

Parameters

dpc (optional)

Range:

p-, 000-255, *, **, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk values *, **, and *** are not valid for the *ni* subfield.

If ** or *** is specified for the *nc* subfield, either *, **, or *** must be specified for the *ncm* subfield.

When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc=000* is not valid if *ni=001-005*.

When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006-255*.

When *chg-sid:pctype=ansi* is specified, *ni-*-** is valid if *ni= 006-255*.

The point code 000-000-000 is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code.

dpci (optional)

Range:

s-, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

dpcn (optional)**Range:**

s-, *p-*, *ps-*, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*, *p-*, *ps*

nnnnn—*0-16383*

gc—*aa-zz*

m1-m2-m3-m4—*0-14* for each member; values must sum to 14

dpcn24 (optional)**Range:**

p-, *000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—*000-255*

ssa—*000-255*

sp—*000-255*

dpcn16 (optional)**Range:**

p--, *000---127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix---**p*

*un---**000---127*

*sna---**000---15*

*mna---**000---31*

mode (optional)

This parameter specifies the type of display to produce.

Range:***full***

Comprehensive display of point code status, including *rtx*. If specified with a point code, then the status for that point code is displayed. If specified without a point code, then the status of all routes is displayed.

rtx

Displays exception route status, other than circular routing, if the Origin-based MTP Routing feature is on.

Default:

A summary report is displayed.

stat (optional)

The primary state filter.

Range:***all***

All of the primary states

alminh

Alarms inhibited

anr

In service abnormal (IS-ANR)

dsbld

Out of service maintenance disabled (OOS-MT-DSBLD)

mt

Out of service maintenance (OOS-MT)

nr

In service normal (IS-NR)

Default:

all

Example

```
rept-stat-rte
rept-stat-rte:dpc=5-25-0
rept-stat-rte:dpci=5-5-0:mode=full
rept-stat-rte:dpci=5-5-0:mode=rtx
rept-stat-rte:mode=rtx
rept-stat-rte:mode=full
rept-stat-rte:dpc=5-25-**
rept-stat-rte:dpcn16=1-2-3
```

Dependencies

An x-list DPC cannot be specified in the `dpc` parameter.

2147 E2147 Cmd Rej: X-LIST DPC is not allowed

If the `mode=full` parameter is specified, then the `dpc/dpca/dpcn/dpci/dpcn24` parameter must be specified.

2386 E2386 Cmd Rej: DPC parameter needed with MODE=FULL

If the `dpc` parameter specifies an `ni-nc-*` format, then the `mode` parameter cannot be specified.

2886 E2886 Cmd Rej: DSTN address must be a full, network or cluster PC

The `dpc` parameter must specify `anni-nc-*` format before the `stat` parameter can be specified with the `dpc` parameter.

2890 E2890 Cmd Rej: DPC must be specified as wildcard when used with STAT

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

If a `dpc` parameter is specified, then the value must be the true destination point code (not an alias) and the value must be defined in the database.

2388 E2388 Cmd Rej: Point code not equipped

The Origin-Based MTP Routing feature must be turned on before the `mode=rtx` parameter can be specified.

4584 E4584 Cmd Rej: MTP Origin Based Routing Feature must be ON

The destination address must be a full point code, a network destination, or a cluster point code.

2886 E2886 Cmd Rej: DSTN address must be a full, network or cluster PC

The `pst` and `mode` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

This command does not report the x-list point codes. Use the `rept-stat-cluster` command for a report of x-list point codes.

If the `mode=rtx` parameter is specified with a specific DPC, additional linkset, route and exception route information associated with the specified DPC is displayed.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

Summary of DPC parameter syntaxes

- `rept-stat-dstn:dpc=ni-nc-ncm` —Requests a report for fully provisioned destination `ni-nc-ncm`.
- `rept-stat-dstn:dpc= ni-**-*` —Requests a report for provisioned network destination with the specified network indicator. If `*` is specified in the `nc` field, `*` must be specified in the `ncm` field.
- `rept-stat-dstn:dpc= ni-***-*` —Requests a report for the full network cluster for the specified `ni`.
- `rept-stat-dstn:dpc= ni-***-` — Requests a report for the full network cluster and the network cluster address (if any) for the specified `ni`.

- `rept-stat-dstn:dpc= ni-nc-*` —Requests a report for provisioned cluster destination *ni-nc-**.
- `rept-stat-dstn:dpc= ni-nc-**` —Requests a report showing all destinations whose network (*ni*) and cluster (*nc*) components match those specified. Note, however, that the network cluster address on *ni-nc-** (if it exists) is not reported.
- `rept-stat-dstn:dpc= ni-nc-***` —Requests a report showing all destinations whose network (*ni*) and cluster (*nc*) components match those specified. The network cluster address (if it exists) is also reported.
- `rept-stat-dstn:dpcn24=msa-ssasp` —Requests a report for fully provisioned 24-bit destination point *main signaling area-sub signaling area signaling point*.

If the `mode=rtx` parameter is specified without a specific DPC, then status is provided for all exception route sets.

If the `mode=full` parameter is specified with a specific destination point code, then additional linkset, route, and exception route information associated with the specified destination is displayed, along with information that can be used to correct circular routing. If the `mode=full` parameter is specified without a specific destination point code, then status is provided for all regular and exception route sets.

Output

If the `dpc` parameter is not specified:

- If the `mode` parameter is not specified, then the command output lists the status of all provisioned destination point codes (DPCs) (routesets) in the system.
- If the `mode=rtx` parameter is specified, then the output lists the status of only those DPCs against which exception routes have been provisioned, and the status of the provisioned exception route sets associated with each DPCs.
- If the `mode=full` parameter is specified, then the command lists the status of all provisioned DPCs in the system, and the status of the provisioned exception route sets, if any, associated with each DPC.

If the `dpc` parameter is specified:

- If the `mode` parameter is not specified, then the output lists the status of all provisioned routes in the route set specified by that DPC.
- If the `mode=rtx` parameter is specified, then the output lists the status of all provisioned routes in the routeset specified by that DPC, and the status of all provisioned exception routesets associated with that DPC.
- If the `mode=full` parameter is specified, then the output lists the status of all provisioned routes in the routeset specified by that DPC, the status of all provisioned exception route sets associated with that DPC, any aliases associated with that DPC, and circular routing alarm information if any for that DPC.

This example shows how summary information for all provisioned cluster and noncluster DPCs is reported.

```
rept-stat-rte
```

```
tekelecstp 10-10-15 14:59:49 EST EAGLE 43.0.0
rept-stat-rte
Command entered at terminal #4.
```

Extended Processing Time may be Required

DPCA	PST	SST	AST
001-001-003	OOS-MT	Idle	INACCESS
001-001-004	OOS-MT	Idle	INACCESS
001-001-005	OOS-MT	Idle	INACCESS
001-001-006	OOS-MT	Idle	INACCESS
001-001-007	OOS-MT	Idle	INACCESS
001-001-008	OOS-MT	Idle	INACCESS
001-001-009	OOS-MT	Idle	INACCESS
001-001-010	OOS-MT	Idle	INACCESS
001-001-011	OOS-MT	Idle	INACCESS
001-001-012	OOS-MT	Idle	INACCESS
001-001-013	OOS-MT	Idle	INACCESS
001-001-014	OOS-MT	Idle	INACCESS
001-001-015	OOS-MT	Idle	INACCESS
001-001-016	OOS-MT	Idle	INACCESS
001-001-017	OOS-MT	Idle	INACCESS
001-001-018	OOS-MT	Idle	INACCESS
001-001-019	OOS-MT	Idle	INACCESS
001-001-020	OOS-MT	Idle	INACCESS
001-001-021	OOS-MT	Idle	INACCESS
001-001-022	OOS-MT	Idle	INACCESS
001-001-023	OOS-MT	Idle	INACCESS
001-001-024	OOS-MT	Idle	INACCESS
001-001-025	OOS-MT	Idle	INACCESS
001-002-003	OOS-MT	Idle	INACCESS

DPCN	PST	SST	AST

DPCN24	PST	SST	AST

DPCI	PST	SST	AST

Command Completed.

;

This example shows how specifying a cluster destination on the `dpc` parameter shows the cluster status and routeset information. Information on cluster members (both provisioned and x-list) is not shown. Use the `rept-stat-cluster` command to obtain this information.

`rept-stat-rte:dpc=9-3-*`

```
rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
DPCA          PST          SST          AST
009-003-*     IS-NR          Allowed     ACCESS
ALARM STATUS   = No Alarms.
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1*  10  lsnstpa  042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb  092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc  128-101-022  Allowed  Allowed  Allowed
4   --  -----  ***-***-***  -----  -----  -----
5   --  -----  ***-***-***  -----  -----  -----
```

```

6  --  -----  ***-***-***  -----  -----  -----
;

```

This example shows how specifying an FPC or cluster destination for which circular routing has been detected, along with the `mode=full` parameter, displays the name of the linkset on which the circular routing test message was transmitted. It also displays the linkset on which the circularly routed message was received.

```
rept-stat-rte:dpc=9-3-6:mode=full
```

```

rlghncxa03w 04-01-07 14:59:11 EST  EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-003-006   OOS-MT       Prohibit  INACCESS
ALARM STATUS    = = *C  xxxx Circular routing detected
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
  1   10  lsnstpa   042-036-123  Allowed  Allowed  Allowed
  2   20  lsnstpb   092-240-103  Allowed  Allowed  Allowed
  3   30  lsnstpc   128-101-022  Allowed  Allowed  Allowed
  4   --  -----   ***-***-***  -----  -----  -----
  5   --  -----   ***-***-***  -----  -----  -----
  6   --  -----   ***-***-***  -----  -----  -----
SSN  SUBSYSTEM STATUS

ALIASA          ALIASN          ALIASI
-----          -----          -----
CIRCULAR ROUTING
  XMIT LSN= lsnstpb
  RCV  LSN= lsn01a
MEMBER= ***-***-***
Command Completed.
;

```

This example shows a typical report when a cluster destination and `mode=full` is specified. The interpretation of the circular routing status for cluster destinations is slightly different from the status for full point code destinations.

```
rept-stat-rte:dpc=9-3-*:mode=full
```

```

rlghncxa03w 04-01-07 14:59:11 EST  EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-003-*     IS-NR       Allowed  ACCESS
ALARM STATUS    = *C  xxxx Circular routing detected
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
  1   10  lsnstpa   042-036-123  Allowed  Allowed  Allowed
  2   20  lsnstpb   092-240-103  Allowed  Allowed  Allowed
  3   30  lsnstpc   128-101-022  Allowed  Allowed  Allowed
  4   --  -----   ***-***-***  -----  -----  -----
  5   --  -----   ***-***-***  -----  -----  -----
  6   --  -----   ***-***-***  -----  -----  -----
SSN  SUBSYSTEM STATUS
ALIASA          ALIASN          ALIASI
-----          -----          -----

```

```

CIRCULAR ROUTING INFO:
XMIT LSN=lsnstpb RC=20
RCV LSN=lsn01a
MEMBER= 009-003-006
Command Completed.

```

;

This example shows how the circular routing alarm for a cluster destination is displayed. A circular routing alarm for a cluster destination indicates that circular routing was detected for a member of the cluster, but no x-list entry could be created for that cluster. Circular routing detected on a cluster destination does not automatically force the output to display the status of the cluster as “OOS-MT Prohibit INACCESS” as it does for a full point code destination.

```
rept-stat-rte:dpc=9-3-*
```

```

rlghncxa03w 04-01-07 14:59:11 EST EAGLE 31.3.0
DPCA          PST          SST          AST
009-003-*     IS-NR          Allowed     ACCESS
ALARM STATUS  = *C xxxx Circular routing detected
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1   10  lsnstpa  042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb  092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc  128-101-022  Allowed  Allowed  Allowed
4   --  -----  ***-***-***  -----  -----  -----
5   --  -----  ***-***-***  -----  -----  -----
6   --  -----  ***-***-***  -----  -----  -----

```

```
Command Completed.
```

;

This example shows how a subsystem information header is displayed without subsystem information, as when an FPC is specified without defining any subsystems. Because aliases cannot be defined for cluster destinations, this report shows only an empty header, as when an FPC is specified without defining aliases. The circular routing information portion of the report displays “-----” for the linkset names when no circular routing condition exists for the DPC.

```
rept-stat-rte:dpc=9-3-*:mode=full
```

```

rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
DPCA          PST          SST          AST
009-003-*     IS-NR          Allowed     ACCESS
ALARM STATUS  = No Alarms.
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1*  10  lsnstpa  042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb  092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc  128-101-022  Allowed  Allowed  Allowed
4   --  -----  ***-***-***  -----  -----  -----
5   --  -----  ***-***-***  -----  -----  -----
6   --  -----  ***-***-***  -----  -----  -----
SSN  SUBSYSTEM STATUS
ALIASA  ALIASN  ALIASI

```

```

-----
CIRCULAR ROUTING
  XMIT LSN= -----
  RCV  LSN= -----
  MEMBER= ***-***-***
Command Completed.
;

```

This example shows how specifying the `stat` parameter and the `ni-nc-*` or `ni-nc-***` DPC formats causes the output summary report to include only those destinations whose status matches the state specified.

```
rept-stat-rte:dpc=9-4-***:stat=alminh
```

```

rlghncxa03w 10-10-29 13:30:00 EST  EAGLE 43.0.0
rept-stat-rte:dpc=9-4-***:stat=alminh
Command entered at terminal #4.
Extended Processing Time may be Required

      DPCA          PST          SST          AST
      009-004-006    IS-NR          Allowed    ALMINH
      009-004-007    IS-NR          Allowed    ALMINH
      .
      .
      .
      009-004-056    IS-NR          Allowed    ALMINH
Command Completed.
;

```

This example shows a retrieval specifying an ITU national point code where the `chg-stpopts:npcfmti` parameter has been set to `1-1-1-11`:

```
rept-stat-rte:dpcn=1-1-1-1000
```

```

rlghncxa03w 04-02-31 13:30:00 EST  EAGLE 31.3.0
CAUTION : Node isolated...route status out of date!
      DPCN          PST          SST          AST
      1-1-1-1000    OOS-MT          Prohibit  INACCESS
ALARM STATUS      = *C 0313 DPC is prohibited
RTE COST  LSN      APCN          LS STAT  NON-ADJ  ROUTE STAT
1   10  lsitu      1-1-1-1000  Prohibit  Allowed  Prohibit
2   --  -----      ***-***-***  -----  -----  -----
3   --  -----      ***-***-***  -----  -----  -----
4   --  -----      ***-***-***  -----  -----  -----
5   --  -----      ***-***-***  -----  -----  -----
6   --  -----      ***-***-***  -----  -----  -----
Command Completed.
;

```

This example shows a private adjacent point code:

```
rept-stat-rte:mode=full:dpc=1-1-2
```

```

rlghncxa03w 05-01-07 13:30:00 EST  EAGLE 31.12.0
  DPCA          PST          SST          AST
  001-001-002  OOS-MT        Idle      INACCESS
ALARM STATUS   = No Alarms.
  RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE
STAT
  1  01  ls11234567  001-001-002  Prohibit  Allowed
Prohibit
  2  02  ls12345678  p-001-001-002  Prohibit  Allowed
Prohibit
  3  --  -----  ***-***-***  -----  -----
-----
  4  --  -----  ***-***-***  -----  -----
-----
  5  --  -----  ***-***-***  -----  -----
-----
  6  --  -----  ***-***-***  -----  -----
-----
SSN  SUBSYSTEM STATUS

  ALIASA      ALIASN      ALIASI
  000-000-001  -----  -----
CIRCULAR ROUTING INFO:
  XMIT LSN=-----  RC=--
  RCV  LSN=-----
  MEMBER =-----
Command Completed.
;

```

This example shows how the asterisks in the space after the route numbers in the following examples indicate which route (or combined route) is carrying traffic.

```
rept-stat-rte:dpc=1-1-1
```

```

tekelecstp 04-09-24 09:19:04 EST  EAGLE 31.9.0
  DPCA          PST          SST          AST
  001-001-001  IS-NR        Allowed  ACCESS
ALARM STATUS   = No Alarms.
  RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE
STAT
  1* 05  lse1e1  001-001-001  Allowed  Allowed
Allowed
  2* 05  lse1e2  001-002-001  Allowed  Allowed
Allowed
  3  10  lse1e3  001-003-001  Allowed  Allowed
Allowed
  4  --  -----  ***-***-***  -----  -----
-----
  5  --  -----  ***-***-***  -----  -----
-----
  6  --  -----  ***-***-***  -----  -----
-----

```

```
-----
Command Completed.
;
```

This example shows how no asterisk appears after the route number when no routes were carrying traffic.

```
rept-stat-rte:dpc=1-1-1
```

```
tekelecstp 06-05-24 09:19:04 EST EAGLE 35.0.0
DPCA          PST          SST          AST
001-001-001   OOS-MT          Prohibit    INACCESS
ALARM STATUS   = *C 0313 DPC is prohibited
RTE COST  LSN          APCA          LS STAT    NON-ADJ    ROUTE STAT
1   05   lse1e1   001-001-001   Prohibit   Allowed    Prohibit
2   05   lse1e2   001-002-001   Prohibit   Allowed    Prohibit
3   10   lse1e3   001-003-001   Prohibit   Allowed    Prohibit
4   --   -----   ***-***-***   -----   -----   -----
5   --   -----   ***-***-***   -----   -----   -----
6   --   -----   ***-***-***   -----   -----   -----
Command Completed.
;
```

This example shows the output when the primary route is not carrying traffic.

```
rept-stat-rte:dpc=1-1-1
```

```
tekelecstp 06-05-24 09:19:04 EST EAGLE 35.0.0
DPCA          PST          SST          AST
001-001-001   IS-ANR          Restrict    ACCESS
ALARM STATUS   = *C 0334 DPC Subsystem is Abnormal
RTE COST  LSN          APCA          LS STAT    NON-ADJ    ROUTE STAT
1   05   lse1e1   001-001-001   Prohibit   Allowed    Prohibit
2   05   lse1e2   001-002-001   Prohibit   Allowed    Prohibit
3*  10   lse1e3   001-003-001   Allowed    Allowed    Allowed
4   --   -----   ***-***-***   -----   -----   -----
5   --   -----   ***-***-***   -----   -----   -----
6   --   -----   ***-***-***   -----   -----   -----
Command Completed.
;
```

This example shows how the *rtx* mode displays all exception route sets provisioned against the specified DPC when the Origin-Based MTP Routing feature is enabled and on:

```
rept-stat-rte:dpc=9-3-*:mode=rtx
```

```
tekelecstp 09-05-01 16:21:39 EST EAGLE 41.0.0
DPCA          PST          SST          AST
009-003-*     IS-NR          Allowed    ACCESS
ALARM STATUS   = No Alarms.
RTE COST  LSN          APCA          LS STAT    NON ADJ    ROUTE STAT
```

```

1  10  lsnstpa  042-36-23  Allowed  Allowed  Allowed
2  20  lsnstpb  092-40-03  Allowed  Allowed  Allowed
3  30  lsnstpc  128-01-22  Prohibit Prohibit  Allowed
4  --  -----  ***-***-***  -----  -----  -----
5  --  -----  ***-***-***  -----  -----  -----
6  --  -----  ***-***-***  -----  -----  -----

```

Exception Routes:

```

          OPCA                PST                SST                AST
          001-001-001          IS-NR              Allowed            ACCESS
          ILSN                 PST                SST                AST
          lsnstpy              IS-NR              Allowed            ACCESS
Command Completed.

```

This example shows how all provisioned exception route sets are displayed in addition to the regular route sets when the Origin-Based MTP Routing feature is enabled and on and the *full* mode is specified.

rept-stat-rte:dpc=9-3-*:mode=full

```

tekelecstp 09-05-01 16:21:39 EST EAGLE 41.0.0
          DPCA                PST                SST                AST
          009-003-006          OOS-MT              Prohibit            INACCESS
ALARM STATUS = = *C 0319 REPT-MTPLP-DET: Circ rte
det (cong)
RTE COST  LSN          APCA                LS STAT  NON ADJ  ROUTE STAT
1   10   lsnstpa  042-036-123  Allowed  Allowed  Allowed
2   20   lsnstpb  092-240-103  Allowed  Allowed  Allowed
3   30   lsnstpc  128-101-022  Allowed  Allowed  Allowed
4   --   -----  ***-***-***  -----  -----  -----
5   --   -----  ***-***-***  -----  -----  -----
6   --   -----  ***-***-***  -----  -----  -----
SSN  SUBSYSTEM STATUS

          ALIASA                ALIASN                ALIASI
          -----  -----  -----
CIRCULAR ROUTING INFO:
XMIT LSN=lsnstpb  RC=20
RCV  LSN=lsn01a
MEMBER =-----

```

Exception Routes:

```

          OPCA                PST                SST                AST
          001-001-001          IS-NR              Allowed            ACCESS

          ILSN                 PST                SST                AST
          lsnstpy              IS-NR              Allowed            ACCESS

```

Command Completed.

;

This example shows how all provisioned exception route sets are displayed in addition to the regular route sets if the Origin-Based MTP Routing feature is enabled and on and the *full* mode is specified.

```
rept-stat-rte:mode=full
```

```
tekelecstp 10-10-01 14:06:10 EST EAGLE 43.0.0
rept-stat-rte:mode=full
Command entered at terminal #4.
Extended Processing Time may be Required
  DPCA          PST          SST          AST
  004-004-004   OOS-MT        Idle         INACCESS
                OPCA          PST          SST          AST
  001-001-001   IS-NR        Allowed     ACCESS
                ILSN          PST          SST          AST
  lsnstpy       IS-NR        Allowed     ACCESS
  DPCN          PST          SST          AST
  00001         IS-NR        Allowed     ACCESS
                SI          PST          SST          AST
  10            IS-NR        Allowed     ACCESS
  00002         IS-NR        Allowed     ACCESS
  00005         OOS-MT        Prohibit    INACCESS
  00004         OOS-MT        Prohibit    INACCESS
  DPCN24        PST          SST          AST
  DPCI          PST          SST          AST
Command Completed.
;
```

This example shows how all provisioned exception routes are displayed if the Origin-Based MTP Routing feature is enabled and on and the *rtx* mode is specified.

```
rept-stat-rte:mode=rtx
```

```
tekelecstp 10-10-29 14:06:10 EST EAGLE 43.0.0
rept-stat-dstn:mode=rtx
Command entered at terminal #4.
Extended Processing Time may be Required
  DPCA          PST          SST          AST
  004-004-004   OOS-MT        Idle         INACCESS
                OPCA          PST          SST          AST
  001-001-001   IS-NR        Allowed     ACCESS
                ILSN          PST          SST          AST
  lsnstpy       IS-NR        Allowed     ACCESS
```

```

DPCN          PST          SST          AST
00001         IS-NR        Allowed    ACCESS

          SI          PST          SST          AST
          10         IS-NR        Allowed    ACCESS
Command Completed.
;

```

This example shows the output of routes provisioned for ITU-N16.

```
rept-stat-rte:dpcn16=2-14-0
```

```

tekelecstp 02-05-08 03:18:02 EST UNKNOWN ???.?-64.71.1
CAUTION : Node isolated...route status out of date!
DPCN16          PST          SST          AST
002-14-00       OOS-MT        Prohibit  INACCESS
ALARM STATUS    = *C 0313 DPC is prohibited
RTE COST  LSN          APC          LS STAT  NON-ADJ  ROUTE
STAT
  1   10   ls1          002-14-00   Prohibit  Allowed
Prohibit
  2   --   -----  ----*-***-***-  -----  -----
-----
  3   --   -----  ----*-***-***-  -----  -----
-----
  4   --   -----  ----*-***-***-  -----  -----
-----
  5   --   -----  ----*-***-***-  -----  -----
-----
  6   --   -----  ----*-***-***-  -----  -----
-----

Command Completed.
;

```

Legend

- **DPC/DPCA**—ANSI destination point code of the route
- **DPCN**—ITU-TSS national destination point code of the route
- **DPCN24**—24-bit ITU national destination point code of the route
- **DPCN16**--- 16-bit ITU national destination point code of the route
- **DPCI**—ITU-TSS international destination point code of the route
- **OPC/OPCA**—ANSI origination point code as exception routing criterion of the exception route
- **OPCN**—ITU-TSS national origination point code as exception routing criterion of the exception route
- **OPCN24**—24-bit ITU national origination point code as exception routing criterion of the exception route
- **OPCI**—ITU-TSS international origination point code as exception routing criterion of the exception route

- **ILSN**—Originating linkset as exception routing criterion of the exception route
- **CIC**—Starting Circuit Identification Code used as the exception routing criterion for this exception route
- **ECIC**—Ending Circuit Identification Code together with CIC defines the CIC range that is used as exception routing criterion for this exception route.
- **PST**—Primary state of the subsystem. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the subsystem. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the subsystem. See [Possible Values for PST/SST/AST](#).

Related Topics

- [chg-dstn](#)
- [chg-rte](#)
- [dlt-dstn](#)
- [dlt-rte](#)
- [ent-dstn](#)
- [ent-rte](#)
- [rept-stat-dstn](#)
- [rtv-dstn](#)
- [rtv-rte](#)

4.1.425 rept-stat-rtkey

Use this command to generate a summary report of the status of the system routing keys.

Parameters

This command has no parameters.

Example

```
rept-stat-rtkey
```

Dependencies

None

N/A N/A

Notes

The report generated by this command contains the following information:

- The maximum of static entries (SRKQ) in the routing key table
- The current number of static routing key entries in the routing key table
- The percentage of the static routing key table entries that is provisioned

Output

```
rept-stat-rtkey
```

```
rlghncxa03w 10-10-27 14:59:11 EST EAGLE 43.0.0  
SRKQ = 250
```

```
Static Route Key table is (50 of 250) 20% full
```

```
Static Route Key Socket Association table is (80 of 4000) 2% full
```

```
;
```

Related Topics

- [chg-appl-rtkey](#)
- [dlt-appl-rtkey](#)
- [ent-appl-rtkey](#)
- [rtrv-appl-rtkey](#)

4.1.426 rept-stat-rtx

Use this command to display the signaling route status for one or more exception routes to a particular destination.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

cic (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the `ecic` parameter as exception routing criteria for the specified exception route.

Range:

0 - 16383

dpcc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

p-, 000-255, *, **, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk values *, **, and *** are not valid for the *ni* subfield.

If ** or *** is specified for the *nc* subfield, either *, **, or *** must be specified for the *ncm* subfield.

When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc=000* is not valid if *ni=001-005*.

When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006-255*.

When *chg-sid:pctype=ansi* is specified, *ni-*.** is valid if *ni= 006-255*.

The point code *000-000-000* is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p
msa—000–255
ssa—000–255
sp—000–255

dpcn16 (optional)

16-bit ITU national destination point code with subfields *unit number sub number area main number area (un-sna-mna)*. The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, *000---127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

ecic (optional)

Ending Circuit Identification Code. This parameter, together with the `cic` parameter, defines the CIC range that is used as exception routing criteria for the specified exception route.

Range:

0 - 16383

ilsn (optional)

Incoming Link Set Name. The name of the originating linkset. This value is used as part of the exception routing criteria for the specified exception route.

Range:

ayyyyyyyy
1 alphabetic character followed by up to 9 alphanumeric characters.

mode (optional)

The type of display to produce.

Range:

full

Displays routes from the associated routeset and exception route table for the specified destination point code per criteria.

opc (optional)

Origination point code. ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:*opca***Range:***000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

opc/opca/opci/opcn/opcn24/opcn16 (optional)

Origination point code.

opci (optional)

Origination Point Code. ITU international origination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:*s-, p-, ps-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

opcn (optional)

Origination Point Code. ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s-, p-, ps-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**opcn24 (optional)**

Origination Point Code. 24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range:*p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

```
prefix—p
msa—000–255
ssa—000–255
sp—000–255
```

opcn16 (optional)

Origination Point Code. 16-bit ITU national point code with subfields *unit number sub number area main number area (un-sna-mna)*. The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

```
p--, 000---127
```

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

```
prefix---p
un---000---127
sna---000---15
mna---000---31
```

si (optional)

Service Indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range:

```
0 - 15
```

Example

```
rept-stat-rtx
rept-stat-rtx:dpc=1-101-1
rept-stat-rtx:dpc=1-101-1:opc=1-2-1
rept-stat-rtx:dpc=100-100-1:opc=1-1-1:mode=full
rept-stat-rtx:dpcn16=001-1-2
```

Dependencies

If the `dpcn` parameter is specified, its format must match the format that was assigned with the `chg-stpopts:npcfmti` parameter.

2997 E2997 Cmd Rej: PC must match NPCFMTI set in CHG-STPOPTS

The `dpc` parameter and the class criteria parameters (`opc/ilsn/cic/si`) must be specified before the `mode` parameter can be specified.

4779 E4779 Cmd Rej: MODE allowed only with DPC and RTX Class

The `dpc` parameter must be specified before the class criteria parameters (`opc/ilsn/cic/si`) can be specified.

2379 E2379 Cmd Rej: Missing parameter

Notes

Each exception route set can have up to 6 associated routes.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

This command can be cancelled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

MTT 4732 and 4735 deleted by MB

Output

This example provides the status of all exception route sets provisioned in the system, sorted by DPC:

```
rept-stat-rtx
```

```
stdcfg2b 09-05-24 01:54:32 EST EAGLE 41.0.0
```

DPCA	PST	SST	AST
001-101-001	IS-NR	Allowed	ACCESS
OPCA	PST	SST	AST
001-002-001	IS-ANR	Restrict	ACCESS
SI	PST	SST	AST
10	OOS-MT	Prohibit	ACCESS
12	OOS-MT	Prohibit	ACCESS
DPCA	PST	SST	AST
004-101-001	IS-NR	Allowed	ACCESS
SI	PST	SST	AST
10	IS-NR	Allowed	ACCESS
DPCA	PST	SST	AST
007-101-001	OOS-MT	Prohibit	INACCESS
OPCA	PST	SST	AST
003-001-020	OOS-MT	Prohibit	INACCESS

Command Completed.

This example displays the status of exception route sets provisioned against a particular DPC:

```
rept-stat-rtx:dpc=1-101-1
```

```
stdcfg2b 09-03-24 01:54:32 EST EAGLE 41.0.0
```

```

DPCA          PST          SST          AST
001-101-001  IS-NR          Allowed     ACCESS

AST          OPCA          PST          SST
001-002-001  IS-ANR          Restrict   ACCESS

AST          SI          PST          SST
10           OOS-MT          Prohibit   ACCESS
12           OOS-MT          Prohibit   ACCESS

```

Command Completed.

This example displays detailed status and alarm information for a specific exception route set provisioned against a DPC:

```
rept-stat-rtx:dpc=1-101-1:opc=1-2-1
```

```
stdcfg2b 06-03-24 02:11:31 EST EAGLE 35.0.0
```

```

DPCA          OPCA          PST          SST          AST
001-101-001  001-002-001  IS-ANR          Restrict
ACCESS
ALARM STATUS = * 0533 RTX is restricted
RTE COST LSN          APCA          LS STAT  NON-ADJ  ROUTE
STAT
1  09  e2e7          007-001-000  Prohibit  Allowed
Prohibit
2* 10  e2e4          004-001-000  Allowed   Allowed
Allowed
3  --  -----  ----*-***-***-***  -----  -----
-----
4  --  -----  ----*-***-***-***  -----  -----
-----
5  --  -----  ----*-***-***-***  -----  -----
-----
6  --  -----  ----*-***-***-***  -----  -----
-----

```

Command Completed.

;

This example displays the status of exception route sets provisioned against a particular DPC:

```
rept-stat-rtx:dpcn16=001-02-03
```

```
stdcfg2b 09-03-24 01:54:32 EST EAGLE 45.0.0
```

```

DPCN16          PST          SST          AST

```

001-02-03	IS-NR	Allowed	ACCESS
OPCI	PST	SST	AST
001-002-001	IS-ANR	Restrict	ACCESS
SI	PST	SST	AST
10	OOS-MT	Prohibit	ACCESS
12	OOS-MT	Prohibit	ACCESS

Command Completed.

Legend

- **DPC/DPCA**—ANSI destination point code of the exception route
- **DPCN**—ITU-TSS national destination point code of the exception route
- **DPCN24**—24-bit ITU national destination point code of the exception route
- **DPCN16**—16-bit ITU national destination point code of the exception route
- **DPCI**—ITU-TSS international destination point code of the exception route
- **OPC/OPCA**—ANSI origination point code as exception routing criterion of the exception route
- **OPCN**—ITU-TSS national origination point code as exception routing criterion of the exception route
- **OPCN24**—24-bit ITU national origination point code as exception routing criterion of the exception route
- **OPCN16**—16-bit ITU national origination point code as exception routing criterion of the exception route
- **OPCI**—ITU-TSS international origination point code as exception routing criterion of the exception route
- **ILSN**—Originating linkset as exception routing criterion of the exception route
- **CIC**—Starting Circuit Identification Code used as the exception routing criterion for this exception route
- **ECIC**—Ending Circuit Identification Code together with CIC defines the CIC range that is used as exception routing criterion for this exception route.
- **SI**—Service Indicator used as the exception routing criterion for this exception route
- **PST**—Primary state of the subsystem. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the subsystem. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the subsystem. See [Possible Values for PST/SST/AST](#).

Related Topics

- [chg-rtx](#)
- [dlt-rtx](#)
- [ent-rtx](#)
- [rtrv-rtx](#)

4.1.427 rept-stat-sccp

Use this command to display the following types of reports:

- `rept-stat-sccp` (with no parameters)—displays the status of the Service Module cards and the services executing on those cards:
 - A-Port (IS41 Mobile Number Portability)
 - AIQ (IS41 Analyzed Information Query)
 - ATINPQ (ATI Number Portability Query)
 - EIR (Equipment Identity Register)
 - G-Flex (GSM Flexible Numbering)
 - G-Port (GSM Mobile Number Portability)
 - GTT (Global Title Translation)
 - IAR (Info Analyzed Relay)
 - IDP Relay (Prepaid IDP Query Relay)
 - IGM (IS41 GSM Migration)
 - INP (INAP-based Number Portability)
 - INPMR (INP Message Relay)
 - LNP (Local Number Portability)
 - LNPMR (LNP Message Relay)
 - LRNQT (ITU TCAP LRN Query)
 - MNPSMS (Portability Check for Mobile Originated SMS)
 - MO SMS B-Party Routing
 - MO SMS IS41-to-GSM Migration
 - MO-based GSM SMS NP
 - MO-based IS41 SMS NP
 - MTPRTD (MTP Routed messages serviced by the SCCP card)
 - PPSMS (Prepaid SMS Intercept)
 - TLNP (Triggerless LNP)
 - TTR (Triggerless TCAP Relay)
 - V-Flex (Voice Mail Router)
 - CAT2 (Category 2 Validation)

The command also displays any cards that are denied SCCP service.

- `rept-stat-sccp:mode=perf` —targets the general SCCP traffic performance for Service Module cards. The report supplies message rates for message flow control (MFC) performance.
- `rept-stat-sccp:loc=nnnn` —provides a detailed view of the status of SCCP services provided by a specific Service Module card

 **Note:**

The `rept-stat-sccp` and `rept-stat-sccp:mode=perf` reports include the status of the Service Module cards (E5-SM8G-B and SLIC cards) but do not differentiate between the card types.

 **Note:**

To retrieve traffic statistics for the LNP feature, the `rept-stat-lnp` command can also be used.

 **Note:**

Statistics are displayed for the supported features as follows:

- AIQ—AIQ Subsystem Report and Service Statistics
- APORT, GPORT, and IGM—MNP Service Statistics
- ATINPQ—ATINPQ Subsystem Report and Service Statistics
- EIR—EIR Subsystem Report and Service Statistics
- G-Flex—GFLEX Service Statistics
- GTT—GTT Service Statistics
- IAR—IAR Service Statistics
- IDP Relay—IDPR Service Statistics
- INPQ—INP Subsystem Report and Service Statistics (includes INPQ and INPMR - AINPQ is combined with INPQ)
- INPMR-INP Message Relay Service Statistics
- LNP—LNP Subsystem Report and Service Statistics (including LNPMR, LNPQS, WNPQS, TLNP, PLNPQS and LRNQT)
- LNPMR-LNP Message Relay Service Statistics
- LNPQS-LNP Query Service Statistics
- MO SMS IS41-to-GSM Migration, MO-based GSM SMS NP, MO-based IS41 SMS NP, PPSMS—SMSMR Service Statistics
- MTPRTD-MTP Routed (MTP routed messages serviced by the SCCP card) Statistics.
- TLNP-Triggerless LNP Service Statistics
- TTR-Triggerless TCAP Relay Service Statistics
- V-Flex—VFLEX Subsystem Report and Service Statistics
- WNPQS-Wireless LNP Query Service Statistics
- CAT2- Category 2 Validation Statistics

 **Note:**

If traffic is being generated while Service Module cards are loading, then superfluous counts may be displayed in Daily and Overall Peak SCCP Loads. To correct this occurrence, reset the Peak SCCP Loads using the `rept-stat-sccp:peakreset=yes` command.

 **Note:**

It will also include the statistics of GTT-enabled LIM cards. If the system has both SCCP and GTT-enabled LIM cards, then it shows the statistics for both cards.

Parameters**appl (optional)**

Used to display the statistics of either SCCP cards or GTT-enabled IPSP cards.


Range:

vscpp

Display the status of the SCCP SM card

ipsg

Display the status of the GTT-enabled IPSP card

 **Note:**

Using `data=gtt`, the user is able to see stats of all cards configured with `data=gtt`, as in all SM GTT cards, as well as GTT-enabled IPSP cards. With the `appl` parameter, the user can either see stats of SCCP cards with GTT data or stats of GTT-enabled IPSP cards.

data (optional)

The subsystem data type used in the report.

Range:

dn

report on the SCCP DN subsystem

imsi

report on the SCCP IMSI subsystem

epap

report on SCCP EPAP subsystem

elap

report on SCCP ELAP subsystem

gtt

report on SCCP GTT subsystem (on both SCCP and GTT-enabled IPSP cards)

card (optional)

Used to display statistics of either SCCP cards or GTT-enabled LIM cards.

Range:

sm

Display the status of SCCP SM card

lim

Display the status of GTT-enabled LIM card

all

Display the status of all cards

**Note:**

Using `data=gtt`, the stats of all cards configured with `data=gtt`, (SM GTT cards as well as GTT-enabled LIM cards) are displayed. With the `CARD` parameter, the stats of SCCP cards or stats of GTT-enabled LIM cards are displayed.

loc (optional)

The location of the Service Module card to be reported on.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Default:

Report a summary of all cards.

mode (optional)

Use this parameter to provide extended performance information, including output about message flow control (MFC) performance and message rates for direct assignments.

Range:

perf

Default:

No extended performance information is displayed.

peakreset (optional)

Reset all Peak values to zero.

Range:

yes

Example

```
rept-stat-sccp
rept-stat-sccp:mode=perf
rept-stat-sccp:loc=1106
rept-stat-sccp:data=epap
rept-stat-sccp:data=gtt:card=lim
```

Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

E2368 Cmd Rej: System busy - try again later

A Service Module card running the VSCCP application must be configured before this command can be entered.

2374 E2374 Cmd Rej: SCCP Subsystem not Configured

Only one optional parameter at a time can be specified in the command. The parameters DATA, LOC and CARD are mutually exclusive.

2609 E2609 Cmd Rej: Only one optional parameter may be specified

The value specified for the `loc` parameter must identify a configured Service Module card running the VSCCP application or a GTT-enabled IPSP card running the IPSP32 GPL.

E3014 Cmd Rej: Card location specified must be an SCCP card

The EPAP Data Split feature must be enabled before the `data` parameter can be specified.

5478 E5478 Cmd Rej: EPAP Data Split feature must be Enabled

The Dual ExAP Config feature must be enabled before specifying parameter DATA = ELAP/EPAP.

2400 E2400 Cmd Rej: Dual ExAP Config feature must be enabled.

The Dual ExAP Config feature or EPAP Data Split feature must be enabled before a value of DATA=EPAP can be specified.

2434 E2434 Cmd Rej: Dual ExAP Config or EPAP Data Split must be ON

Notes

In Release 46.5, with the introduction of GTT on LIM, the output format of the `rept-stat-sccp` command has been changed. The output has been divided into three parts: head, body and tail. The head of the output informs about the status report, primary state, secondary state, alarms, and other information.

The body of the output depends on whether or not an SM/GTT-enabled IPSP card is present in EAGLE. If there are only SM cards in the EAGLE, the body of the output will display only the SCCP Subsystem Report. This report will contain information including daily peak load, total system capacity, number of equipped SM cards,

number of in-service SM cards, and other information. It will also contain the card list of SM cards and MSU usage, as well as CPU usage of each individual card. If there are only GTT-enabled IPSG cards in the EAGLE, the body of the output will display only the GTT on LIM Report. This report will contain information including number of equipped and in-service GTT-enabled IPSG cards, total GTT on LIM capacity, and a card list of GTT-enabled IPSG cards and MSU/CPU usage of each individual card. If both SM and GTT-enabled IPSG cards are present, the output will be a combination of an SCCP Subsystem Report and GTT on LIM report.

The tail of the output informs about the Total Service Statistics of enabled services on the EAGLE. The GTT service statistics will be a combination of GTT statistics obtained from SM cards as well as from GTT-enabled IPSG cards.

Output

If the EIR, G-Port, INP, 1100 TPS/DSM for ITU NP, AINPQ, A-Port, IGM, Throughput Capacity, IAR, or V-Flex features are enabled, then the **ansigflex** system option is disabled.

Note:

Output for this command displays the status for services associated with features that are enabled and turned on. If a feature is not turned on, then the services for that feature are not displayed. The following examples display output when all possible features are turned on.

This example shows a summary report for all the features corresponding to EPAP-based services and subsystems:

```
rept-stat-sccp
```

```
tekelecstp 10-04-06 18:02:43 EST EAGLE5 42.0.0
SCCP SUBSYSTEM REPORT IS-ANR Active -----
      SCCP ALARM STATUS = *C 0453 Exceeded Service Error Threshold Lvl
2
GFLEX SERVICE REPORT IS-ANR Active -----
      GFLEX ALARM STATUS = * 0527 Service abnormal
MNP SERVICE REPORT IS-NR Active -----
      MNP ALARM STATUS = No Alarms
INPQ SUBSYSTEM REPORT OOS-MT Unavail -----
      INPQ: SSN STATUS = ----- MATE SSN STATUS = -----
      INP ALARM STATUS = *C 0395 INP Subsystem is not available
EIR SUBSYSTEM REPORT OOS-MT Unavail -----
      EIR: SSN STATUS = ----- MATE SSN STATUS = -----
      EIR ALARM STATUS = *C 0455 EIR Subsystem is not available
VFLEX SUBSYSTEM REPORT OOS-MT Unavail -----
      VFLEX: SSN STATUS = ----- MATE SSN STATUS = -----
      VFLEX ALARM STATUS = *C 0551 VFLEX Subsystem is not available
ATINPQ SUBSYSTEM REPORT OOS-MT Unavail -----
      ATINPQ: SSN STATUS = ----- MATE SSN STATUS = -----
      ATINPQ ALARM STATUS = *C 0565 ATINPQ Subsystem is not available
AIQ SUBSYSTEM REPORT IS-NR Active -----
      AIQ: SSN STATUS = Allowed MATE SSN STATUS = -----
      AIQ ALARM STATUS = No Alarms
```

```

SCCP Cards Configured= 1      Cards IS-NR= 1
System Daily Peak SCCP Load   8      TPS 10-01-06 18:00:03
System Overall Peak SCCP Load  8      TPS 00-00-00 00:00:00
System Total SCCP Capacity    2550   TPS (2550   max SCCP
Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold    2040   TPS ( 80% System   N SCCP
Capacity)

```

```

CARD   VERSION   PST           SST           AST           MSU   CPU
                USAGE        USAGE
-----
1101 P 007-013-002 IS-NR           Active        -----   45%   45%
-----
SCCP Service Average MSU Capacity = 45%   Average CPU Capacity
= 45%

```

```

AVERAGE CPU USAGE PER SERVICE:
GTT     = 15%  GFLEX = 5%  MNP     = 10%  SMSMR = 10%
IDPR    = 0%
IAR     = 0%  MTPRTD = 1%
INPMR   = 2%  INPQ   = 3%  EIR     = 0%  VFLEX  = 0%
ATINPQ  = 0%
AIQ     = 0%

```

```

TOTAL SERVICE STATISTICS:

```

	SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO
GTT	TOTAL					
-	GTT:	1995	5	0%	-	
	2000					
10	GFLEX:	500	1	0%	4	
	515					
3	MNP:	800	0	0%	2	
	805					
14	SMSMR:	67	23	25%	12	
	116					
0	IDPR:	0	0	0%	0	
	0					
0	IAR:	0	0	0%	0	
	0					
-	MTPRTD:	6	0	0%	-	
	6					
15	INPMR:	50	5	0%	0	
	70					
-	INPQ:	499	1	0%	0	
	500					
-	EIR:	0	0	0%	-	
	0					
-	VFLEX:	0	0	0%	-	
	0					
-	ATINPQ:	0	0	0%	-	
	0					
-	AIQ:	0	0	0%	-	

```

-          0

Command Completed.
;

```

This example shows the output for a card location for features corresponding to EPAP-based services and subsystems:

```
rept-stat-sccp:loc=1101
```

```

tekelecstp 10-04-06 19:41:33 EST  EAGLE5 42.0.0
CARD  VERSION      TYPE   PST           SST           AST
1101  127-038-000    DSM    IS-NR         Active        -----
CARD ALARM STATUS          = No Alarms
GTT:   STAT = ACT      CPU USAGE = 10%
GFLEX: STAT = ACT      CPU USAGE = 10%
MNP:   STAT = ACT      CPU USAGE = 10%
SMSMR: STAT = ACT      CPU USAGE = 20%
IDPR:  STAT = ----- CPU USAGE = 0%
IAR:   STAT = ----- CPU USAGE = 0%
MTPRTD: STAT = ACT     CPU USAGE = 10%
INPMR: STAT = ----- CPU USAGE = 0%
INPQ:  STAT = ----- CPU USAGE = 0%
EIR:   STAT = ----- CPU USAGE = 0%
VFLEX: STAT = ----- CPU USAGE = 0%
ATINPQ: STAT = ----- CPU USAGE = 0%
AIQ:   STAT = ----- CPU USAGE = 0%
-----
TOTAL      = 50%

```

```

CARD SERVICE STATISTICS
SERVICE      SUCCESS      ERRORS      WARNINGS      FORWARD TO GTT
TOTAL
GTT:          1995         5           -             -
2000
GFLEX:        500         1           4             10
515
MNP:          500         1           4             10
515
SMSMR:        50         2           3             15
70
IDPR:         0         0           0             0
0
IAR:          0         0           0             0
0
MTPRTD:       6         0           -             -
-
INPMR:        0         0           0             0
0
INPQ:         0         0           0             0
-
EIR:          0         0           -             -
-
VFLEX:        0         0           -             -

```

```

-          0
  ATINPQ:          0          0          -
-          0
  AIQ:            0          0          -
-          0

```

Command Completed.

;

This example shows a performance report for the EPAP-based services:

rept-stat-sccp:mode=perf

```

tekelecstp 11-03-06 17:32:58 EST  EAGLE5 44.0.0
SCCP SUBSYSTEM REPORT  IS-NR      Active  -----
  SCCP ALARM STATUS    = No Alarms
GFLEX SERVICE REPORT  IS-NR      Active  -----
  GFLEX ALARM STATUS   = No Alarms
MNP SERVICE REPORT    IS-NR      Active  -----
  MNP ALARM STATUS     = No Alarms

SCCP Cards Configured= 1      Cards IS-NR= 1
System Daily Peak SCCP Load    0      TPS 11-03-06 17:23:29
System Overall Peak SCCP Load  0      TPS 00-00-00 00:00:00
System Total SCCP Capacity     6800   TPS (6800   max SCCP
Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold     5440   TPS ( 80% System  N SCCP
Capacity)

TPS STATISTICS
=====
CARD   CPU      TOTAL      CLASS 0      CLASS 1
      USAGE  MSU RATE  MESSAGING RATE  MESSAGING RATE
-----
1205   5%        0          0              0
-----
AVERAGE MSU USAGE =  0%
AVERAGE CPU USAGE =  5%
TOTAL MSU RATE     =  0

STATISTICS FOR PAST 30 SECONDS
=====
TOTAL MSUS:        0
TOTAL ERRORS:      0

HIGHEST 01 OVERALL DAILY PEAKS          LAST 01 DAILY PEAK SCCP LOADS
=====
====
0      TPS 00-00-00 00:00:00          0      TPS 11-03-06 17:23:29

```

Command Completed.

;

This example shows a summary report for all of the features corresponding to ELAP-based subsystems:

rept-stat-sccp

```

tekelecstp 10-04-06 18:02:43 EST EAGLE5 42.0.0
SCCP SUBSYSTEM REPORT IS-ANR Active -----
      SCCP ALARM STATUS = *C 0453 Exceeded Service Error Threshold Lvl
2
LNP SUBSYSTEM REPORT OOS-MT Unavail -----
      LNP:  SSN STATUS = ----- MATE SSN STATUS = -----
      LNP ALARM STATUS = *C 0424 LNP Subsystem is not available
AIQ SUBSYSTEM REPORT IS-NR Active -----
      AIQ:  SSN STATUS = Allowed MATE SSN STATUS = -----
      AIQ ALARM STATUS = No Alarms

SCCP Cards Configured= 1 Cards IS-NR= 1
System Daily Peak SCCP Load 8 TPS 10-01-06 18:00:03
System Overall Peak SCCP Load 8 TPS 00-00-00 00:00:00
System Total SCCP Capacity 2550 TPS (2550 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 2040 TPS ( 80% System N SCCP
Capacity)

CARD VERSION PST SST AST MSU CPU
USAGE USAGE
-----
1101 P 007-013-002 IS-NR Active ----- 45% 45%
-----
SCCP Service Average MSU Capacity = 45% Average CPU Capacity = 45%

AVERAGE CPU USAGE PER SERVICE:
GTT = 0%
LNPMT = 20% LNPQS = 15% WNPQS = 12% TLNP = 14% PLNPQS =
19%
LRNQT = 23% AIQ = 1%

TOTAL SERVICE STATISTICS:

SERVICE SUCCESS ERRORS FAIL REROUTE\ FORWARD
RATIO WARNINGS TO GTT
TOTAL
GTT: 1995 5 0% - -
2000
LNPMT: 500 1 0% - -
515
LNPQS: 800 0 0% - -
805
WNPQS: 67 23 25% - -
116
TLNP: 0 0 0% - -
- 0

```

```

-     PLN PQS:          0          0          0%          -
-       0
-     LRN QT:          50          5          0%          -
-       70
-     AIQ:              0          0          0%          -
-       0

```

Command Completed.

;

This example shows the output for a card location for all of the features corresponding to ELAP-based subsystems:

```
rept-stat-sccp:loc=1101
```

```

tekelecstp 10-04-06 19:41:33 EST  EAGLE5 42.0.0
CARD  VERSION      TYPE   PST           SST           AST
1101  127-038-000  DSM   IS-NR        Active        -----
CARD ALARM STATUS          = No Alarms
  GTT:   STAT = ACT      CPU USAGE = 10%
  LNPMR: STAT = ACT      CPU USAGE = 10%
  LN PQS: STAT = ACT      CPU USAGE = 10%
  WNP QS: STAT = ----- CPU USAGE = 0%
  TLNP:  STAT = ----- CPU USAGE = 0%
  PLN PQS: STAT = ----- CPU USAGE = 0%
  LRN QT: STAT = ----- CPU USAGE = 0%
  AIQ:   STAT = ----- CPU USAGE = 0%
                                     -----
                                     TOTAL    = 30%

CARD SERVICE STATISTICS
SERVICE      SUCCESS     ERRORS      WARNINGS     FORWARD TO
GTT  TOTAL
  GTT:          1995         5           -
-    2000
  LNPMR:         500        15           -
-    515
  LN PQS:         500        15           -
-    515
  WNP QS:          0         0           -
-    0
  TLNP:           0         0           -
-    0
  PLN PQS:         0         0           -
-    0
  LRN QT:         0         0           -
-    0
  AIQ:           0         0           -
-    0

```

Command Completed.

;

This example shows a performance report for the ELAP-based subsystems:

```
rept-stat-sccp:mode=perf
```

```

tekelecstp 11-03-06 17:32:58 EST  EAGLE5 44.0.0
SCCP SUBSYSTEM REPORT  IS-NR          Active    -----
      SCCP ALARM STATUS  = No Alarms
LNP SUBSYSTEM REPORT   OOS-MT          Unavail   -----
      LNP:   SSN STATUS  = ----- MATE SSN STATUS = -----
      LNP ALARM STATUS   = *C 0424 LNP Subsystem is not available

SCCP Cards Configured= 1      Cards IS-NR= 1
System Daily Peak SCCP Load      0      TPS 11-03-06 17:23:29
System Overall Peak SCCP Load     0      TPS 00-00-00 00:00:00
System Total SCCP Capacity        6800   TPS (6800   max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold         5440   TPS ( 80% System  N SCCP
Capacity)

TPS STATISTICS
=====
CARD   CPU      TOTAL      CLASS 0      CLASS 1
      USAGE   MSU RATE   MESSAGING RATE  MESSAGING RATE
-----
1205   5%        0          0            0
-----
AVERAGE MSU USAGE = 0%
AVERAGE CPU USAGE  = 5%
TOTAL MSU RATE      = 0

STATISTICS FOR PAST 30 SECONDS
=====
TOTAL MSUS:          0
TOTAL ERRORS:        0

HIGHEST 01 OVERALL DAILY PEAKS          LAST 01 DAILY PEAK SCCP LOADS
=====
0      TPS 00-00-00 00:00:00          0      TPS 11-03-06 17:23:29

Command Completed.
;

```

This example shows a summary report of SCCP subsystem:

```
rept-stat-sccp
```

```

tekelecstp 10-08-17 13:35:38 EDT  EAGLE 42.0.0
SCCP SUBSYSTEM REPORT  IS-ANR          Active    -----
      SCCP ALARM STATUS  = ** 0262 GTT Duplicate Actn processing stopped

SCCP Cards Configured= 9      Cards IS-NR= 8
System Daily Peak SCCP Load      30147  TPS 10-08-17 13:33:36

```

```

System Overall Peak SCCP Load      30147 TPS 10-08-17 13:33:36
System Total SCCP Capacity         54400 TPS (54400 max SCCP
Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold         43520 TPS ( 80% System N SCCP
Capacity)

```

CARD	VERSION	PST	SST	AST	MSU USAGE	CPU USAGE
1201	036-027-001	IS-NR	Active	-----	0%	1%
1203	036-027-001	IS-NR	Active	-----	0%	3%
1205	036-027-001	IS-NR	Active	-----	0%	2%
1211	036-027-001	IS-NR	Active	-----	0%	3%
1213	036-027-001	IS-NR	Active	-----	74%	38%
1215	036-027-001	IS-NR	Active	-----	100%	42%
1217	036-027-001	IS-NR	Active	-----	100%	40%
1101	036-027-001	IS-NR	Active	-----	100%	42%
1107	-----	OOS-MT	Isolated	-----	0%	0%

```

SCCP Service Average MSU Capacity = 46% Average CPU Capacity =
21%

```

AVERAGE CPU USAGE PER SERVICE:

GTT = 10%

TOTAL SERVICE STATISTICS:

GTT	SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO
-	TOTAL	898797	0	0%	-	
-	GTT:	898797				

CARDS NOT PROCESSING GTT DUPLICATE ACTION:

1215, 1217, 1101

Command Completed.

;

This example shows the output for DN data when EPAP Data Split feature is Enabled:

```
rept-stat-sccp:data=dn:mode=perf
```

```

epap240m 12-01-29 15:25:01 CST Eagle 45.0.0
SCCP DN SUBSYSTEM REPORT IS-ANR Active -----
SCCP ALARM STATUS = No Alarms

```

```

SCCP Cards Configured= 3 Cards IS-NR= 1
System Daily Peak SCCP Load      0 TPS 12-01-29 14:44:31
System Overall Peak SCCP Load    0 TPS 00-00-00 00:00:00
System Total SCCP Capacity       850 TPS (850 max SCCP
Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold       680 TPS ( 80% System N SCCP
Capacity)

```



```

CARD   VERSION   PST           SST           AST           MSU   CPU   DATA
                USAGE   USAGE   TYPE
-----
1101 P 099-016-000 IS-NR           Active        -----   0%   1%   DN
1105 ----- OOS-MT-DSBLD MEA           -----   0%   0%   COMB
1107 099-016-000 IS-ANR           Standby       29%         0%   5%   COMB
-----

```

SCCP Service Average MSU Capacity = 0% Average CPU Capacity = 1%

HIGHEST 01 OVERALL DAILY PEAKS

```

=====
TPS    s%   d%   i%   DATE     TIME
-----

```

0 100/0 /0 00-00-00 00:00:00

LAST 01 DAILY PEAK SCCP LOADS

```

=====
TPS    s%   d%   i%   DATE     TIME
-----

```

0 100/0 /0 12-01-29 14:44:31

Command Completed.

;

This example shows the output when Dual ExAP Config feature is Enabled:

rept-stat-sccp:data=elap:mode=perf

epap240m 12-01-29 15:25:01 CST Eagle 45.0.0

SCCP ELAP SUBSYSTEM REPORT IS-ANR Active -----

SCCP ALARM STATUS = No Alarms

SCCP Cards Configured= 3 Cards IS-NR= 1

System Daily Peak SCCP Load 0 TPS 12-01-29 14:44:31

System Overall Peak SCCP Load 0 TPS 00-00-00 00:00:00

System Total SCCP Capacity 850 TPS (850 max SCCP Capacity)

System SCCP Capacity Calc. Method (N)

System TPS Alarm Threshold 4000 TPS (80% System N SCCP

Capacity)

```

CARD   VERSION   PST           SST           AST           MSU   CPU   DATA
                USAGE   USAGE   TYPE
-----

```

1101 P 099-016-000 IS-NR Active ----- 0% 1% ELAP

1105 ----- OOS-MT-DSBLD MEA ----- 0% 0% ELAP

1107 099-016-000 IS-ANR Standby 29% 0% 5% ELAP

SCCP Service Average MSU Capacity = 0% Average CPU Capacity = 1%

HIGHEST 01 OVERALL DAILY PEAKS

```

=====

```

```

TPS    sccp% epap% elap% DATE     TIME
-----

```

```

-----
0      100    0    0    00-00-00 00:00:00

LAST   01   DAILY   PEAK   SCCP   LOADS
=====
TPS    sccp%  epap%  elap%  DATE    TIME
-----
0      100    0    0    00-00-00 00:00:00

```

This example shows the output when both the Dual ExAP Config and the EPAP Data Split features are Enabled:

rept-stat-sccp:data=dn:mode=perf

```

epap240m 12-01-29 15:25:01 CST Eagle 45.0.0
SCCP DN SUBSYSTEM REPORT IS-ANR Active -----
      SCCP ALARM STATUS = No Alarms

SCCP Cards Configured= 3      Cards IS-NR= 1
System Daily Peak SCCP Load      0      TPS 12-01-29 14:44:31
System Overall Peak SCCP Load    0      TPS 00-00-00 00:00:00
System Total SCCP Capacity      850     TPS (850 max SCCP
Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold      5000   TPS ( 80% System N
SCCP Capacity)

CARD  VERSION      PST          SST          AST          MSU  CPU
DATA                                     USAGE USAGE
TYPE

-----
1101 P 099-016-000 IS-NR          Active      -----    0%   1%
DN
1105 -----      OOS-MT-DSBLD MEA          -----    0%   0%
EPAP
1107 099-016-000 IS-ANR          Standby     29%       0%   5%
EPAP

-----
SCCP Service Average MSU Capacity = 0% Average CPU Capacity
= 1%

HIGHEST 01 OVERALL DAILY PEAKS
=====
TPS    sccp%  dn%  imsi%  elap%  DATE    TIME
-----
0      100    0    0    0    00-00-00 00:00:00

LAST 01 DAILY PEAK SCCP LOADS
=====
TPS    sccp%  dn%  imsi%  elap%  DATE    TIME

```

```
-----
0      100    0    0    0    00-00-00 00:00:00
```

This example shows the output when both SM and GTT-enabled IPSG cards are present:

rept-stat-sccp

```
eagle10614 17-04-05 13:08:22 EST EAGLE 46.5.0.0-70.22.0
  SCCP STATUS REPORT   IS-NR      Active   -----
    SCCP ALARM STATUS   = No Alarms

  SCCP SUBSYSTEM REPORT:
MNP SERVICE REPORT     OOS-MA      Ueq      -----
  MNP ALARM STATUS     = No Alarms
INPQ SUBSYSTEM REPORT  OOS-MA      Ueq      -----
  INPQ:  SSN STATUS    = ----- MATE SSN STATUS = -----
  INP ALARM STATUS     = No Alarms
EIR SUBSYSTEM REPORT   OOS-MA      Ueq      -----
  EIR:  SSN STATUS    = ----- MATE SSN STATUS = -----
  EIR ALARM STATUS     = No Alarms
ATINPQ SUBSYSTEM REPORT OOS-MA      Ueq      -----
  ATINPQ: SSN STATUS  = ----- MATE SSN STATUS = -----
  ATINPQ ALARM STATUS  = No Alarms

  SCCP Cards Configured= 1      Cards IS-NR= 1
  System Daily Peak SCCP Load   0      TPS 17-04-05 12:48:05
  System Overall Peak SCCP Load  0      TPS 00-00-00 00:00:00
  System Total SCCP Capacity     5500   TPS (5500 max SCCP Capacity)
  System SCCP Capacity Calc. Method (N)
  System TPS Alarm Threshold     4400   TPS ( 80% System N SCCP
Capacity)
```

CARD	VERSION	PST	SST	AST	MSU USAGE	CPU USAGE	DATA TYPE
------	---------	-----	-----	-----	-----------	-----------	-----------

```
-----
1103  073-023-009  IS-NR      Active   -----      0%    1%  GTT
-----
SCCP Service Average MSU Capacity =  0%  Average CPU Capacity =  1%
```

```
AVERAGE CPU USAGE PER SERVICE:
  GTT   =  0%  MNP   =  0%
  INPMR =  0%  EIR   =  0%  ATINPQ =  0%
```

```
GTT on LIM REPORT:
GTT LIM Cards Configured= 1      Cards IS-NR= 1
System Total GTT on LIM Cap.     10000 TPS
```

CARD	VERSION	PST	SST	AST	MSU USAGE	CPU USAGE	DATA TYPE
------	---------	-----	-----	-----	-----------	-----------	-----------

```
-----
1101  073-025-017  IS-NR      Active   -----      13%   12%  GTT
-----
SCCP Service Average MSU Capacity =  13%  Average CPU Capacity =  12%
```

```
AVERAGE CPU USAGE PER SERVICE:
```

GTT = 2%

TOTAL SERVICE STATISTICS:

GTT	SERVICE TOTAL	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO
-	GTT:	40275	0	0%	-	
0	MNP:	0	0	0%	0	
0	INPMR:	0	0	0%	0	
-	INPQ:	0	0	0%	0	
-	EIR:	0	0	0%	-	

This example shows the output for DATA GTT when both SM and GTT-enabled IPSG cards are present:

rept-stat-sccp:data=gtt

```
eagle10614 17-04-05 13:08:47 EST EAGLE 46.5.0.0-70.22.0
  SCCP GTT STATUS REPORT   IS-NR           Active      -----
  SCCP ALARM STATUS       = No Alarms
```

SCCP GTT SUBSYSTEM REPORT:

```
SCCP Cards Configured= 1      Cards IS-NR= 1
System Daily Peak SCCP Load   0      TPS 17-04-05 12:48:05
System Overall Peak SCCP Load  0      TPS 00-00-00 00:00:00
System Total SCCP Capacity    5500   TPS (5500 max SCCP
Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold    4400   TPS ( 80% System N SCCP
Capacity)
```

CARD	VERSION	PST	SST	AST	MSU	CPU
DATA					USAGE	USAGE

1103	073-023-009	IS-NR	Active	-----	0%	1%

```
SCCP Service Average MSU Capacity = 0% Average CPU Capacity
= 1%
```

AVERAGE CPU USAGE PER SERVICE:

```
GTT = 0%
INPMR = 0% EIR = 0% ATINPQ = 0%
```

GTT on LIM REPORT:

GTT LIM Cards Configured= 1 Cards IS-NR= 1
System Total GTT on LIM Cap. 10000 TPS

CARD	VERSION	PST	SST	AST	MSU USAGE	CPU USAGE	DATA TYPE
------	---------	-----	-----	-----	--------------	--------------	--------------

1101	073-025-017	IS-NR	Active	-----	13%	12%	GTT
------	-------------	-------	--------	-------	-----	-----	-----

SCCP Service Average MSU Capacity = 13% Average CPU Capacity = 12%

AVERAGE CPU USAGE PER SERVICE:

GTT = 2%

TOTAL SERVICE STATISTICS:

SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT
TOTAL 40312	GTT: 40312	0	0%	-	-

This example shows the output for CARD SM when SM cards are present:

rept-stat-sccp:card=sm

eagle10614 17-04-05 13:08:54 EST EAGLE 46.5.0.0.0-70.22.0

rept-stat-sccp:card=sm

Command entered at terminal #23.

;

Command Accepted - Processing

eagle10614 17-04-05 13:08:55 EST EAGLE 46.5.0.0.0-70.22.0

SCCP STATUS REPORT IS-NR Active -----

SCCP ALARM STATUS = No Alarms

SCCP SUBSYSTEM REPORT:

SCCP Cards Configured= 1 Cards IS-NR= 1

System Daily Peak SCCP Load 0 TPS 17-04-05 12:48:05

System Overall Peak SCCP Load 0 TPS 00-00-00 00:00:00

System Total SCCP Capacity 5500 TPS (5500 max SCCP Capacity)

System SCCP Capacity Calc. Method (N)

System TPS Alarm Threshold 4400 TPS (80% System N SCCP

Capacity)

CARD	VERSION	PST	SST	AST	MSU USAGE	CPU USAGE	DATA TYPE
------	---------	-----	-----	-----	--------------	--------------	--------------

1103	073-023-009	IS-NR	Active	-----	0%	1%	GTT
------	-------------	-------	--------	-------	----	----	-----

SCCP Service Average MSU Capacity = 0% Average CPU Capacity = 1%

AVERAGE CPU USAGE PER SERVICE:

GTT = 0% MNP = 0%

INPMR = 0% EIR = 0% ATINPQ = 0%

```

TOTAL SERVICE STATISTICS:

      SERVICE      SUCCESS      ERRORS      FAIL      REROUTE\      FORWARD
      TOTAL              RATIO      WARNINGS      TO
GTT
-   GTT:              0          0          0%          -
  0   0
  0   MNP:              0          0          0%          0
  0   0
  0   INPMR:            0          0          0%          0
  0   0
  0   INPQ:              0          0          0%          0
  0   0
  0   EIR:              0          0          0%          -
  0   0

```

This example shows the output for CARD LIM when GTT-enabled IPSP cards are present:

```
rept-stat-sccp:card=lim
```

```
eagle10614 17-04-05 13:09:02 EST EAGLE 46.5.0.0.0-70.22.0
```

```
rept-stat-sccp:card=lim
```

```
Command entered at terminal #23.
```

```
;
```

```
Command Accepted - Processing
```

```
eagle10614 17-04-05 13:09:02 EST EAGLE 46.5.0.0.0-70.22.0
```

```
SCCP GTT STATUS REPORT IS-NR Active -----
```

```
SCCP ALARM STATUS = No Alarms
```

```
GTT on LIM REPORT:
```

```
GTT LIM Cards Configured= 1 Cards IS-NR= 1
```

```
System Total GTT on LIM Cap. 10000 TPS
```

```

CARD   VERSION      PST           SST           AST           MSU   CPU
DATA
                                           USAGE USAGE
TYPE
-----

```

```

1101   073-025-017   IS-NR         Active        -----        13%   12%
GTT
-----

```

```

SCCP Service Average MSU Capacity = 13% Average CPU Capacity =
12%

```

```
AVERAGE CPU USAGE PER SERVICE:
```

```
GTT = 2%
```

```
TOTAL SERVICE STATISTICS:
```

```

      SERVICE      SUCCESS      ERRORS      FAIL      REROUTE\      FORWARD
      TOTAL              RATIO      WARNINGS      TO
GTT

```

```

GTT:          40381          0          0%          -          -
40381

```

This example shows a performance report for SCCP and GTT on LIM Subsystem when both subsystems are present:

```
rept-stat-sccp:mode=perf
```

```

eagle10614 17-04-05 13:09:09 EST EAGLE 46.5.0.0.0-70.22.0
  rept-stat-sccp:mode=perf
  Command entered at terminal #23.
;

```

```
Command Accepted - Processing
```

```

eagle10614 17-04-05 13:09:09 EST EAGLE 46.5.0.0.0-70.22.0
SCCP STATUS REPORT  IS-NR          Active      -----
  SCCP ALARM STATUS  = No Alarms

```

```
SCCP SUBSYSTEM REPORT:
```

```

MNP SERVICE REPORT      OOS-MA          Ueq          -----
  MNP ALARM STATUS      = No Alarms

```

```

SCCP Cards Configured= 1      Cards IS-NR= 1
System Daily Peak SCCP Load   0      TPS 17-04-05 12:48:05
System Overall Peak SCCP Load 0      TPS 00-00-00 00:00:00
System Total SCCP Capacity    5500   TPS (5500 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold    4400   TPS ( 80% System N SCCP
Capacity)

```

```
TPS STATISTICS
```

```

=====
CARD   CPU      TOTAL      CLASS 0      CLASS 1      DATA
      USAGE  MSU RATE  MESSAGING RATE  MESSAGING RATE  TYPE
-----
1103   1%        0          0            0            0            GTT
-----
AVERAGE MSU USAGE = 0%
AVERAGE CPU USAGE = 1%
TOTAL MSU RATE     = 0

```

```
STATISTICS FOR PAST 30 SECONDS
```

```

=====
TOTAL MSUS:          0
TOTAL ERRORS:        0

```

```
HIGHEST 01 OVERALL DAILY PEAKS
```

```

=====
TPS   s%  d%  i%  DATE      TIME
-----
0     0  /0  /0  00-00-00 00:00:00

```

```
LAST 01 DAILY PEAK SCCP LOADS
```

```
=====
```

```

TPS    s%  d%  i%  DATE      TIME
-----
0      0  /0  /0   17-04-05 12:48:05

```

```

GTT on LIM REPORT:
GTT LIM Cards Configured= 1      Cards IS-NR= 1
System Total GTT on LIM Cap.      10000 TPS

```

IPSG GTT TPS STATISTICS

```

=====
=====

```

CARD	CPU USAGE	TOTAL MSU RATE	CLASS 0 MESSAGING RATE	CLASS 1 MESSAGING RATE	DATA TYPE
1101	12%	1315	1315	0	GTT

```

-----
AVERAGE MSU USAGE = 13%
AVERAGE CPU USAGE = 12%
TOTAL MSU RATE     = 1341

```

This example shows a performance report for GTT on LIM Subsystem when the subsystem is present:

```
rept-stat-sccp:mode=perf:card=lim
```

```

eagle10614 17-04-05 13:09:31 EST EAGLE 46.5.0.0.0-70.22.0
rept-stat-sccp:mode=perf:card=lim
Command entered at terminal #23.
;

```

Command Accepted - Processing

```

eagle10614 17-04-05 13:09:32 EST EAGLE 46.5.0.0.0-70.22.0
SCCP GTT STATUS REPORT IS-NR Active -----
SCCP ALARM STATUS = No Alarms

```

```

GTT on LIM REPORT:
GTT LIM Cards Configured= 1      Cards IS-NR= 1
System Total GTT on LIM Cap.      10000 TPS

```

IPSG GTT TPS STATISTICS

```

=====
=====

```

CARD	CPU USAGE	TOTAL MSU RATE	CLASS 0 MESSAGING RATE	CLASS 1 MESSAGING RATE	DATA TYPE
1101	12%	1335	1335	0	GTT

```

-----
AVERAGE MSU USAGE = 13%

```


AVERAGE CPU USAGE = 12%
TOTAL MSU RATE = 1335

This example shows a summary report of SCCP subsystem:

rept-stat-sccp

Command Accepted - Processing

stpd1091301 18-07-11 08:30:50 MST EAGLE 46.7.0.0.0-75.4.0
rept-stat-sccp
Command entered at terminal #7.

;

```
stpd1091301 18-07-11 08:30:50 MST EAGLE 46.7.0.0.0-75.4.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
  SCCP ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR Active -----
  GFLEX ALARM STATUS = No Alarms
MNP SERVICE REPORT IS-NR Active -----
  MNP ALARM STATUS = No Alarms
INPQ SUBSYSTEM REPORT IS-NR Active -----
  INPQ: SSN STATUS = Allowed MATE SSN STATUS = -----
  INP ALARM STATUS = No Alarms
ATINPQ SUBSYSTEM REPORT IS-NR Active -----
  ATINPQ: SSN STATUS = Allowed MATE SSN STATUS = -----
  ATINPQ ALARM STATUS = No Alarms
```

```
SCCP Cards Configured= 6 Cards IS-NR= 6
System Daily Peak SCCP Load 361 TPS 18-07-11 04:40:13
System Overall Peak SCCP Load 361 TPS 18-07-11 04:40:13
System Total SCCP Capacity 40800 TPS (40800 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 32640 TPS ( 80% System N SCCP
Capacity)
```

CARD	VERSION	PST	SST	AST	MSU USAGE	CPU USAGE
2113	145-004-000	IS-NR	Active	-----	0%	2%
2201	145-004-000	IS-NR	Active	-----	0%	3%
2213	145-004-000	IS-NR	Active	-----	0%	2%
2217	145-004-000	IS-NR	Active	-----	0%	2%
2317	145-004-000	IS-NR	Active	-----	0%	2%
1111 P	145-004-000	IS-NR	Active	-----	0%	2%

SCCP Service Average MSU Capacity = 0% Average CPU Capacity = 2%

AVERAGE CPU USAGE PER SERVICE:

GTT = 0% GFLEX = 0% MNP = 0% SMSMR = 0% IDPR =
0%
MTPRTD = 0%
INPMR = 0% ATINPQ = 0%

TOTAL SERVICE STATISTICS:

MATE	SERVICE TOTAL	SUCCESS	ERROR	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT	FORWARD TO
0	GTT:	0	0	0%	-	-	
0	GFLEX:	0	0	0%	0		
0	MNP:	0	0	0%	0		
0	SMSMR:	0	0	0%	0		
0	IDPR:	0	0	0%	0		
-	MTPRTD:	0	0	0%	-		
0	INPMR:	0	0	0%	0		
-	INPQ:	0	0	0%	0		
-	ATINPQ:	0	0	0%	-		

Command Completed.

;

This example shows a performance report for SCCP:

```
rept-stat-sccp:mode=perf
```

Command Accepted - Processing

```
tekelecstp 18-06-07 09:16:15 MST EAGLE 46.7.0.0-75.4.0
rept-stat-sccp:mode=perf
Command entered at terminal #1.
```

;

```
tekelecstp 18-06-07 09:16:15 MST EAGLE 46.7.0.0-75.4.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
SCCP ALARM STATUS = No Alarms
```

```
SCCP Cards Configured= 1 Cards IS-NR= 1
System Daily Peak SCCP Load 0 TPS 18-06-07 00:00:01
System Overall Peak SCCP Load 20 TPS 18-06-06 11:07:10
System Total SCCP Capacity 5500 TPS (5500 max SCCP
Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 4400 TPS ( 80% System N SCCP
Capacity)
```

TPS STATISTICS

```
=====
====
```

```

CARD      CPU      TOTAL      CLASS 0      CLASS 1
          USAGE    MSU RATE    MESSAGING RATE MESSAGING RATE
-----
1101      1%         0           0             0
-----

```

```

AVERAGE MSU USAGE = 0%
AVERAGE CPU USAGE = 1%
TOTAL MSU RATE     = 0

```

STATISTICS FOR PAST 30 SECONDS

```

=====
TOTAL MSUS:                0
TOTAL ERRORS:              0
TOTAL MSU SEND TO MATE:    0
      HIGHEST 02 OVERALL DAILY PEAKS          LAST 02 DAILY PEAK SCCP LOADS
=====

```

```

20      TPS 18-06-06 11:07:10          0      TPS 18-06-07 00:00:01
0       TPS 00-00-00 00:00:00          20     TPS 18-06-06 11:07:10

```

Command Completed.

;

This example shows a summary report of SCCP subsystem with CAT2:

```
> rept-stat-sccp
```

Command Accepted - Processing

```

tklcl1131102 20-07-18 13:54:48 EST EAGLE 46.9.0.0.0-76.23.0
rept-stat-sccp
Command entered at terminal #3.

```

;

```

tklcl1131102 20-07-18 13:54:49 EST EAGLE 46.9.0.0.0-76.23.0
SCCP SUBSYSTEM REPORT IS-NR          Active      -----
      SCCP ALARM STATUS   = No Alarms

```

```

SCCP Cards Configured= 2      Cards IS-NR= 1
System Daily Peak SCCP Load      0      TPS 20-07-18 00:00:00
System Overall Peak SCCP Load    3361   TPS 20-07-12 00:23:07
System Total SCCP Capacity        5500   TPS (5500 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold        4400   TPS ( 80% System N SCCP
Capacity)

```

```

CARD      VERSION      PST      SST      AST      MSU  CPU
          USAGE        USAGE
-----
1101      093-023-013  IS-NR          Active      -----      0%   2%
-----

```

```

SCCP Service Average MSU Capacity = 0% Average CPU Capacity = 2%

```

```

AVERAGE CPU USAGE PER SERVICE:
GTT      = 0%

```

```

TOTAL SERVICE STATISTICS:
SERVICE    SUCCESS  ERROR  FAIL  REROUTE\  FORWARD  FORWARD
MATE        TOTAL    RATIO  WARNINGS  TO GTT    TO
GTT:        0        0      0%     -         -
0
CAT2:       0        0      0%     0         -
0

```

Command Completed.

;

This example shows the output for CARD SM when SM cards are present with CAT2:

```
> rept-stat-sccp:card=sm
```

Command Accepted - Processing

```

tklcl1131102 20-07-18 13:57:46 EST EAGLE 46.9.0.0.0-76.23.0
rept-stat-sccp:card=sm
Command entered at terminal #3.

```

;

```

tklcl1131102 20-07-18 13:57:46 EST EAGLE 46.9.0.0.0-76.23.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
SCCP ALARM STATUS = No Alarms

```

```

SCCP Cards Configured= 2 Cards IS-NR= 1
System Daily Peak SCCP Load 0 TPS 20-07-18 00:00:00
System Overall Peak SCCP Load 3361 TPS 20-07-12 00:23:07
System Total SCCP Capacity 5500 TPS (5500 max SCCP
Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 4400 TPS ( 80% System N SCCP
Capacity)

```

```

CARD VERSION PST SST AST MSU CPU
USAGE USAGE

```

```

-----
1101 093-023-013 IS-NR Active ----- 0% 2%
1105 ----- OOS-MT-DSBLD MEA ----- 0% 0%
-----

```

```

SCCP Service Average MSU Capacity = 0% Average CPU Capacity
= 2%

```

AVERAGE CPU USAGE PER SERVICE:

GTT = 0%

TOTAL SERVICE STATISTICS:

```

SERVICE SUCCESS ERROR FAIL REROUTE\ FORWARD FORWARD
RATIO WARNINGS TO GTT TO

```

```

MATE      TOTAL
  GTT:      0      0      0%      -      -
0
  CAT2:      0      0      0%      0      -
0
  Command Completed.
;

```

This example shows the output for a card location with CAT2 of SCCP subsystem:

```
> rept-stat-sccp:loc=1101
```

```
Command Accepted - Processing
```

```

tklcl1131102 20-07-18 14:07:26 EST EAGLE 46.9.0.0.0-76.23.0
rept-stat-sccp:loc=1101
Command entered at terminal #3.
;

tklcl1131102 20-07-18 14:07:26 EST EAGLE 46.9.0.0.0-76.23.0
CARD  VERSION      TYPE  PST      SST      AST
1101  093-023-013  SLIC  IS-NR      Active  -----
CARD ALARM STATUS      = No Alarms.
  GTT:  STAT = ACT      CPU USAGE = 0%
                        -----
                        TOTAL      = 0%

CARD SERVICE STATISTICS

SERVICE  SUCCESS  ERRORS  WARNINGS  FORWARD  FORWARD
TOTAL    TO GTT   TO MATE
  GTT:      0      0      -      -
0
  CAT2:      0      0      0      -
-
  0

Command Completed.
;

```

Legend

This section defines the fields of the three `rept-stat-sccp` reports:

- `rept-stat-sccp` with no parameters
- `rept-stat-sccp:mode=perf`
- `rept-stat-sccp:loc=nnnn`

A dash (-) in an output field indicates that the statistic does not apply.

 **Note:**

The ERRORS and TOTAL ERRORS fields indicate that errors have occurred for Service Module cards in the system. Refer to UIMs generated by the system for the specific errors, and refer to the *Maintenance Guide* for error explanations and recovery procedures.

Report Type: `rept-stat-sccp` with no parameters

- **SCCP SUBSYSTEM REPORT, GTT ON LIM REPORT, GFLEX/MNP SERVICE REPORT** and **LNP/INPQ/EIR/VFLEX/ATINPQ/AIQ SUBSYSTEM REPORT**—Summary of the SCCP subsystem status, GTT on LIM subsystem status, GFLEX and MNP service status, LNP, INPQ (INP Query), EIR, VFLEX, ATINPQ and AIQ subsystem status
- **SCCP CARDS CONFIGURED**—Number of provisioned Service Module cards running the VSCCP application
- **GTT LIM CARDS CONFIGURED**—Number of provisioned GTT-enabled LIM cards running the IPSP32 GPL
- **CARD IS-NR**—Number of Service Module or GTT-enabled LIM cards that can be used by the system (status is In-Service Normal, IS-NR)
- **SYSTEM PEAK SCCP LOAD**—Highest SCCP transactions-per-second (TPS) processed by the EAGLE
- **SYSTEM TOTAL SCCP CAPACITY**—Sum of the maximum capacity of all active SCCP cards
- **SYSTEM TOTAL GTT ON LIM CAPACITY**—Sum of the maximum capacity of all active GTT-enabled LIM cards
- **SYSTEM TPS ALARM THRESHOLD**—Percentage of traffic that triggers an alarm to warn that the EAGLE is approaching the total system SCCP transactions-per-second (TPS) capacity. This value is set by the `chg-th-alm` command.
- **CARD**—Card location of the cards running the VSCCP/IPSP application
- **P**—When G-Flex, GPORT, INP, APORT, EIR, V-Flex, IAR, or IGM feature is turned on, a P indicates the primary Service Module card. The primary Service Module card provides the MPS status to the EAGLE. This indicator is displayed between the card location and the GPL version.
- **VERSION**—Version number of the GPL running on the Service Module card
- **PST**—Primary state of the card. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the card. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the card. See [Possible Values for PST/SST/AST](#).
- **MSU USAGE**—Percentage of the maximum number of MSUs received by each card during the last 30 seconds
- **CPU USAGE**—Percentage of the amount of CPU used by each card during the last 30 seconds to process messages and to handle other foreground and background tasks

- **SCCP SERVICE AVERAGE MSU CAPACITY**—Average MSU capacity used over the last 30-second interval. This field includes all services provided by the Service Module or GTT-enabled LIM cards.
- **AVERAGE CPU CAPACITY**—Average CPU capacity used over the last 30-second interval. This field includes all services provided by the Service Module or GTT-enabled LIM cards.
- **AVERAGE CPU USAGE PER SERVICE**—System-wide view of the service traffic composition.
- **TOTAL SERVICE STATISTICS**—System-wide view of per-service statistics for the last 30-second interval. An "A" in the field indicates that the statistic does not apply. The report tracks the following information:
 - **SERVICE**
 - **SUCCESS**—Total number of successful messages processed by the specified card for each service. Applies to all services.
 - **ERRORS**—Total number of messages with errors for each service. Applies to all services.
 - **WARNINGS**—Total number of messages that output UIM warnings and were forwarded to GTT by the specified card for G-Flex, MNP, SMSMR, IDPR, IAR, INPMR and INPQ services and total number of messages for which CAT2 validation has not been applied in case of CAT2.
 - **FORWARD TO GTT**—Total number of messages that could not find a match in the MPS database (did not produce any errors or warnings) and were successfully forwarded to GTT by the specified card for G-Flex, MNP, SMSMR, IDPR, IAR and INPMR services
 - **FORWARD TO MATE**— Total number of ACK messages on which GTT is performed and send to mate STP.

Report Type: `rept-stat-sccp:mode=perf`

This report includes the status of E5-SM8G-B and SLIC cards, but does not differentiate between these card types.

- **SCCP SUBSYSTEM REPORT, GTT ON LIM REPORT,LNP SUBSYSTEM REPORT and GFLEX/MNP SERVICE REPORT**—Summary status of the SCCP subsystem, GTT on LIM subsystem status, GFLEX and MNP services, LNP subsystem along with their corresponding Alarm Status
- **SCCP CARDS CONFIGURED**—Number of Service Module cards provisioned
- **GTT LIM CARDS CONFIGURED**—Number of provisioned GTT-enabled LIM cards running the IP32 GPL
- **CARD IS-NR**—Number of Service Module or GTT-enabled LIM cards that can be used by the system (status is in-service normal, IS-NR)
- **SYSTEM PEAK SCCP LOAD**—Highest SCCP TPS processed by the EAGLE
- **SYSTEM TOTAL SCCP CAPACITY**—Sum of the maximum capacity of all active Service Module cards
- **SYSTEM TOTAL GTT ON LIM CAPACITY**—Sum of the maximum capacity of all active GTT-enabled LIM cards
- **SYSTEM TPS ALARM THRESHOLD**—Percentage of traffic that triggers an alarm to warn that the EAGLE is approaching the total system SCCP TPS capacity. This value is set by the `chg-th-alm` command.

- **TPS STATISTICS**—Section of the report that provides TPS statistics on each Service Module or GTT-enabled LIM card
 - **CARD**—Card location of the cards running the VSCCP/IPSG application
 - **CPU USAGE**—Percentage of the amount of CPU used to process messages by each card during the last 30 seconds
 - **TOTAL MSU RATE**—Total number of messages processed per second. This and the other message rates are obtained from statistics maintained by the Service Module card for the last 30-second period.
 - **CLASS 0 and CLASS 1 MESSAGING RATE**—Number of messages received per second.

The next section of the `rept-stat-sccp:mode=perf` report provides system-wide SCCP traffic statistics.

AVERAGE MSU USAGE

Total of the MSU usage fields from each Service Module card divided by the number of active Service Module or GTT-enabled LIM cards

AVERAGE CPU USAGE

Total of the CPU usage fields from each Service Module card divided by the number of active Service Module or GTT-enabled LIM cards

TOTAL MSU RATE

Sum of all MSU rates processed by all active Service Module or GTT-enabled LIM cards

STATISTICS FOR PAST 30 SECONDS

Statistics that represent the last 30-second period

TOTAL MSUS

Sum of all transactions on all active Service Module or GTT-enabled LIM cards

TOTAL ERRORS

Sum of all errors on all active Service Module or GTT-enabled LIM cards

TOTAL MSU SEND TO MATE

Sum of all transactions that are sent to the mate STP

Report Type: `rept-stat-sccp:loc=nnnn`

- **CARD**—Card location of the card running the VSCCP/IPSG application
- **VERSION**—Version number of the GPL the card is running
- **TYPE**—Type of the card
- **PST**—Primary state of the card. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the card. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the card. See [Possible Values for PST/SST/AST](#).
- **CARD ALARM STATUS**—If there are no card alarms present, this field displays No Alarms.

The next section of the `rept-stat-sccp:loc=nnnn` report supplies the status of the individual services provided by the card and the associated CPU usage for the service.

GTT: STAT

Possible values are ACTIVE and SWDL (software loading)

SMSMR: STAT

Possible values are ACTIVE and SWDL (software loading)

IDPR: STAT

Possible values are ACTIVE and SWDL (software loading)

IAR: STAT

Possible values are ACTIVE and SWDL (software loading)

INPMR: STAT

Possible values are ACTIVE and SWDL (software loading)

MTPRTD: STAT

Possible values are ACTIVE and SWDL (software loading)

GFLEX: STAT

Possible values are ACTIVE, OFFLINE and SWDL (software loading)

MNP: STAT

Possible values are ACTIVE, OFFLINE, and SWDL (software loading)

INPQ: STAT

Possible values are ACTIVE, OFFLINE, and SWDL (software loading)

EIR: STAT

Possible values are ACTIVE, OFFLINE and SWDL (software loading)

VFLEX: STAT

Possible values are ACTIVE, OFFLINE and SWDL (software loading)

LNPMR: STAT

Possible values are ACTIVE, OFFLINE and SWDL (software loading)

LNPQS: STAT

Possible values are ACTIVE, OFFLINE and SWDL (software loading)

WNPQS: STAT

Possible values are ACTIVE, OFFLINE and SWDL (software loading)

TLNP: STAT

Possible values are ACTIVE, OFFLINE and SWDL (software loading)

PLNPQS: STAT

Possible values are ACTIVE, OFFLINE and SWDL (software loading)

LRNQT: STAT

Possible values are ACTIVE, OFFLINE and SWDL (software loading)

ATINPQ: STAT

Possible values are ACTIVE, OFFLINE and SWDL (software loading)

AIQ: STAT

Possible values are ACTIVE, OFFLINE and SWDL (software loading)

TOTAL

Sum of the CPU usage for the services running over the previous 30-second period

CARD SERVICE STATISTICS

Card service statistics over the previous 30-second period for the specified card. The report tracks the following:

SERVICE

Name of the individual service provided by the card

SUCCESS

Total number of successful messages processed by the specified card for each service. Applies to all services.

ERRORS

Total number of messages with errors for each service. Applies to all services.

WARNINGS

Total number of messages that output UIM warnings and were forwarded to GTT by the specified card for G-Flex, MNP, SMSMR, IDPR, IAR, INPMR and INPQ services and total number of messages for which CAT2 validation has not been applied in case of CAT2.

FORWARD TO GTT

Total number of messages that could not find a match in the MPS database (did not produce any errors or warnings) and were successfully forwarded to GTT by the specified card for G-Flex, MNP, SMSMR, IDPR, IAR, and INPMR services

FORWARD TO MATE

Total number of successful ACK messages that are send to mate STP by a specific card for GTT service only.

TOTAL

Total number of SUCCESS, ERRORS, WARNINGS, and FORWARD TO GTT messages

IMEI Challenge Legend

This section of the `rept-stat-sccp` report supplies the stats for the IMEI Challenge. The legends mean the following:

TOTAL REQUEST

All requests for PSI query

VALIDATION SUCCESS

When IMEI is received in the PSI ACK.

VALIDATION FAILURE

IMEI not received in PSI ACK and Purge MS is generated

ERROR1

Decode errors.

ERROR2

Encoding errors.

Related Topics

- [chg-th-alm](#)
- [rtrv-th-alm](#)

4.1.428 rept-stat-seas

Use this command to generate a summary report of the status of the SEAS subsystem on the EAGLE. This command reports the status of the CCS MR connections if the SEAS Over IP feature is turned on. See the *Maintenance Guide* for information about the SEAS alarms.

Parameters

This command has no parameters.

Example

```
rept-stat-seas
```

Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The SEASCFG Table must be accessible.

4613 E4613 Cmd Rej: Failed Reading SEASCFG Table

Notes

None

Output

This example shows output when the SEAS Over IP feature is turned on.

```
rept-stat-seas
```

```
tekelecstp 07-01-11 16:47:51 EST EAGLE 37.5.0
```

SEAS SYSTEM		PST	SST	AST	

ALARM STATUS = No Alarms		IS-NR	Avail	-----	
TERM	IPADDR	PORT	PST	SST	AST

18	120.30.10.11	15	IS-NR	Active	-----
ALARM STATUS = No Alarms					
40	128.30.15.12	16	IS-NR	Active	-----
ALARM STATUS = No Alarms					

Legend

- **PST**—Primary state of the subsystem. Possible values are described in [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the subsystem. Possible values are described in [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the subsystem. Possible values are described in [Possible Values for PST/SST/AST](#).
- **SEAS SYSTEM**—Overall SEAS component

Related Topics

- [alw-trm](#)
- [chg-trm](#)
- [inh-trm](#)
- [rept-stat-sys](#)
- [rept-stat-trbl](#)
- [rept-stat-trm](#)

4.1.429 rept-stat-seculog

Use this command to display the following information about the security log on the active and standby OAMs:

- The active or standby status of each log
- The number of new (that is, not uploaded) entries in each log
- The percentage of log space used by those new entries
- Whether overflow has occurred since the last upload
- Whether a recording failure has occurred since the last upload
- The date and time of the oldest and newest records in the log
- The date and time when the last successful upload of the log occurred

Parameters

This command has no parameters.

Example

```
rept-stat-seculog
```

Dependencies

No other security log command can be in progress when this command is entered.

```
3005 E3005 Cmd Rej: Security log command already in progress
```

Notes

The %FULL field displays the amount of space in the log taken up by new (not uploaded) entries. That number is obtained by dividing the number displayed in the

ENTRIES field by the overall storage capacity of the log (10,000 entries). Because the log stays full of entries at all times, new entries overwrite existing entries.

The percentage full computed is rounded up to the next integer with one exception: the value of 100 is not displayed until the log is truly 100% full.

The log capacity is 10,000 records. To determine how many more commands can be logged before an overflow condition occurs, subtract the value displayed in the ENTRIES field from 10,000.

The status of the active OAM's log is always reported first in the output report, followed by the status of the standby log; in other words, they are *not necessarily* displayed numerically by the location number.

The report displays dates in the format *yy-mm-dd*, where *yy* is the year, *mm* is the month, and *dd* is the date. The report displays times in the format of *hh:mm:ss*, where *hh* is hours, *mm* is minutes, and *ss* is seconds.

Output

This example shows the output in the normal security log state. All un-uploaded records appear in the log on the active OAM.

```
rept-stat-seculog
```

```

rlghncxa03w 05-07-29 16:40:40 EST EAGLE 28.1.0
-- SINCE LAST UPLOAD -- OLDEST NEWEST LAST
LOC ROLE ENTRIES %FULL OFLO FAIL RECORD RECORD UPLOAD
1114 Active 8312 84 No No 96-08-12 05-07-04 05-07-16
11:23:56 15:59:06 14:02:22

1116 Standby 0 0 No No 96-09-12 05-07-30 05-07-30
11:24:12 14:00:06 14:02:13
;

```

This example shows the output when the active security log is full and has overflowed.

```
rept-stat-seculog
```

```

rlghncxa03w 05-07-29 16:40:40 EST EAGLE 28.1.0
-- SINCE LAST UPLOAD -- OLDEST NEWEST LAST
LOC ROLE ENTRIES %FULL OFLO FAIL RECORD RECORD UPLOAD
1114 Active 10000 100 Yes No 96-08-12 05-07-04 05-07-16
11:23:56 15:59:06 14:02:22

1116 Standby 0 0 No No 96-09-12 05-07-30 05-07-30
11:24:12 14:00:06 14:02:13
;

```

This example shows the output when both logs contain un-uploaded entries. The standby log on 1116 should be uploaded.

rept-stat-seculog

```

rlghncxa03w 05-07-29 16:40:40 EST EAGLE 28.1.0
-- SINCE LAST UPLOAD -- OLDEST NEWEST LAST
LOC ROLE ENTRIES %FULL OFLO FAIL RECORD RECORD UPLOAD
1114 Active 8312 84 No No 96-08-12 05-07-04 05-07-16
11:23:56 15:59:06 14:02:22

1116 Standby 693 7 No No 96-09-12 05-07-30 05-07-30
11:24:12 14:00:06 14:02:13
;

```

This example shows the output if data cannot be retrieved from the standby OAM (for example, in simplex mode).

rept-stat-seculog

```

rlghncxa03w 05-07-29 16:40:40 EST EAGLE 28.1.0
-- SINCE LAST UPLOAD -- OLDEST NEWEST LAST
LOC ROLE ENTRIES %FULL OFLO FAIL RECORD RECORD UPLOAD
1114 Active 8312 83 No No 96-08-12 05-07-04 05-07-16
11:23:56 15:59:06 14:02:22

1116 Standby ----- --- --- --- -----
-----
;

```

Legend

- **LOC**—Address of the TDM card (with the hard disk on it) that contains the log. It is always the card at location 1114 or 1116.
- **ROLE**—Current role of the security log at that location. This value is always the same as the role of the OAM associated with the TDM card: *active* or *standby*.
- **-- SINCE LAST UPLOAD**—Applies to the four columns directly below the heading on the output. It indicates that the fields below display information obtained since the last upload.
 - **ENTRIES**—Shows how many un-uploaded commands are currently recorded in the log. This value resets to 0 (zero) when the log is uploaded using `copy-seculog`.
 - **%FULL**—Shows, as a percentage, how much space in the log the ENTRIES field value occupies
 - **OFLO**—Overflow indicator. Overflow occurs if the log is not uploaded periodically: new entries start overwriting un-uploaded entries. Displays *No* if no overflow has occurred and *Yes* if overflow has occurred
 - **FAIL**—Failed indicator. Displays *No* if no logging failure has occurred. Displays *Yes* to indicate that a logging failure has occurred that has prevented one or more entries from being recorded in the log successfully.

 **Note:**

Whether the system is able to set the logging failure flag in the security log header depends on the nature of the failure. If a `copy-disk` command is processing, the system sets the flag when the `copy-disk` command finishes processing. However, if the active fixed disk fails for some reason, or the security log happens to be in a bad sector that develops, the system is unable to set the logging failure flag.

- **OLDEST RECORD/NEWEST RECORD**—Date and time recorded in the oldest and newest record in the log. Allows the administrator to know the time period that the log covers. The log records all commands that were issued between 6/3/96 at 13:45:03 up to 8/5/96 at 06:58:55. The NEWEST RECORD for the active log is the current date, because the log will have recorded the `rept-stat-seculog` command that was just entered to produce the report.
- **LAST UPLOAD**—Date and time when the log was last uploaded successfully. That is, the `copy-seculog` command successfully copied the log to the FTA.

Related Topics

- [chg-attr-seculog](#)
- [rtrv-attr-seculog](#)

4.1.430 rept-stat-sfapp

Use this command to display the overall status of the SFAPP Card service in the EAGLE.

Parameters**loc (optional)**

SFAPP card location for which Card status, overall card TPS and total statistics of the card is to be reported.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Default:

Report a summary of all cards

peakreset (optional)

Reset peak values to zero.

Range:

yes

Example

```
rept-stat-sfapp
```

```
rept-stat-sfapp:peakreset=yes:loc=1101
```

rept-stat-sfapp:loc=1101

Dependencies

Location specified should be of the SFAPP card.

3548 E3548 Card location specified must be an SFAPP card

Output

This example shows a summary report for all the SFAPP cards:

```
rept-stat-sfapp

tklcl1110801 18-09-25 18:01:54 EST EAGLE 46.7.0.0-75.14.0
rept-stat-sfapp
Command entered at terminal #2.
;

tklcl1110801 18-09-25 18:01:54 EST EAGLE 46.7.0.0-75.14.0
SFAPP STATUS REPORT IS-NR Active -----
SFAPP ALARM STATUS = No Alarms

SFAPP Cards Configured= 3 Cards IS-NR= 3
System Daily Peak SFAPP Load 0 TPS 18-09-25 00:00:17
System Overall Peak SFAPP Load 54 TPS 18-09-24 14:50:40
System Total SFAPP Capacity 8000 TPS (8000 max SFAPP
Capacity)
SFAPP Capacity Calc. Method (N)
System TPS Alarm Threshold 6400 TPS ( 80% System N SFAPP
Capacity)

Dynamic Prof Tbl Db Level On SFAPP(P) 9
Dynamic Roam Tbl Db Level On SFAPP(P) 3
Last SYNC Between OAM and SFAPP(P) 18-09-25 17:58:26

CARD VERSION PST SST AST CPU MSU
TPS
USAGE USAGE
-----
--
1101 P 145-014-000 IS-NR Active ----- 2%
0% 0
1103 145-014-000 IS-NR Active ----- 3%
0% 0
1105 145-014-000 IS-NR Active ----- 3%
0% 0
-----
--
SFAPP Average MSU Capacity = 0% Average CPU Capacity = 2%

TOTAL SERVICE STATISTICS:
=====
```



```

====
CARD      TOTAL      VALIDATION  VALIDATION  ERROR1  ERROR2  FAIL
REQUEST  SUCCESS    FAILED
RATIO

=====
1101     0          0           0         0        0        0%
1103     0          0           0         0        0        0%
1105     0          0           0         0        0        0%

-----
Total    0          0           0         0        0        0%

```

HIGHEST 02 OVERALL DAILY PEAKS:

```

=====
TPS      GTT%   CAT3.1%  CAT3.2%  TPS      DATE      TIME
              SGEN%
=====
54        0%    0%       100%     0%      18-09-24 14:50:40
0         0%    0%       0%       0%      00-00-00 00:00:00
-----

```

LAST 02 DAILY PEAK SFAPP LOADS:

```

=====
TPS      GTT%   CAT3.1%  CAT3.2%  TPS      DATE      TIME
              SGEN%
=====
0         0%    0%       0%       0%      18-09-25 00:00:17
54        0%    0%       100%     0%      18-09-24 14:50:40
-----

```

Command Completed.

;

This example displays output for a card location:

```
rept-stat-sfapp:loc=1105
```

```

tklcl110801 18-09-25 18:03:03 EST EAGLE 46.7.0.0-75.14.0
rept-stat-sfapp:loc=1105
Command entered at terminal #21.

```

;

Command Accepted - Processing

```

tklcl110801 18-09-25 18:03:03 EST EAGLE 46.7.0.0-75.14.0
CARD  VERSION      TYPE   PST      SST      AST
1105  145-014-000  SLIC  IS-NR    Active   -----
CARD ALARM STATUS      = No Alarms.

```

TPS STATISTICS:

```

=====
TPS      PEAK-TPS  PEAKTIMESTAMP

```

```
=====
===
          0      18      18-09-24 14:50:40
```

```
-----
--
```

TOTAL SERVICE STATISTICS:

```
=====
====
```

SERVICE VALIDATION ERROR2	TOTAL REQUEST RATIO	VALIDATION SUCCESS	FAIL FAILED	ERROR1
---------------------------------	---------------------------	-----------------------	----------------	--------

```
=====
====
```

GTT:	0	0	0	0
0	0%			
CAT3.1:	0	0	0	0
0	0%			
CAT3.2:	0	0	0	0
0	0%			
IMEI_C:	0	0	0	0
0	0%			
IMEI_L:	0	0	0	0
0	0%			

```
-----
----
```

EEDB STATISTICS:

```
=====
====
```

SERVICE	QUERY	UPDATE	SUCCESSFUL RESPONSE	ERROR RESPONSE	RESPONSE TIMEOUT
---------	-------	--------	------------------------	-------------------	---------------------

```
=====
====
```

EEDB:	0	0	0	0	0
-------	---	---	---	---	---

```
-----
--
```

Command Completed.

;

Output for all cards with IMEI Challenge stats included:

rept-stat-sfapp

tekelecstp 18-04-03 05:08:37 EST EAGLE 46.6.0.0.0-73.14.0
rept-stat-sfapp
Command entered at terminal #17.

;

Command Accepted - Processing

tekelecstp 18-04-03 05:08:37 EST EAGLE 46.6.0.0.0-73.14.0
SFAPP STATUS REPORT IS-NR Active -----
SFAPP ALARM STATUS = No Alarms

SFAPP Cards Configured= 2 Cards IS-NR= 1
System Daily Peak SFAPP Load 0 TPS 18-04-03 05:02:06
System Overall Peak SFAPP Load 0 TPS 00-00-00 00:00:00
System Total SFAPP Capacity 0 TPS (0 max SFAPP Capacity)
SFAPP Capacity Calc. Method (N)
System TPS Alarm Threshold 0 TPS (80% System N SFAPP

Capacity)

CARD	VERSION	PST	SST	AST	CPU USAGE	MSU USAGE	TPS
1101	-----	OOS-MT	Isolated	-----	0%	0%	0
1107	015-014-001	IS-NR	Active	-----	2%	0%	0

SFAPP Average MSU Capacity = 0% Average CPU Capacity = 2%

TOTAL SERVICE STATISTICS:

CARD	TOTAL REQUEST	VALIDATION SUCCESS	VALIDATION FAILED	ERROR1	ERROR2	FAIL RATIO
1101	0	0	0	0	0	0%
1107	0	0	0	0	0	0%
Total	0	0	0	0	0	0%

HIGHEST 01 OVERALL DAILY PEAKS:

TPS	GTT%	CAT3.1%	CAT3.2%	IMEI_CH	DATE	TIME
0	0%	0%	0%	0%	00-00-00	00:00:00

LAST 01 DAILY PEAK SFAPP LOADS:

TPS	GTT%	CAT3.1%	CAT3.2%	IMEI_CH	DATE	TIME
0	0%	0%	0%	0%	18-04-03	05:02:06

```
Command Completed.
;
Command Executed
```

Output for a single card with IMEI Challenge stats included:

```
rept-stat-sfapp:loc=1107
```

```
tekelecstp 18-04-03 05:10:09 EST EAGLE 46.6.0.0-73.14.0
rept-stat-sfapp:loc=1107
Command entered at terminal #17.
;
```

```
Command Accepted - Processing
```

```
tekelecstp 18-04-03 05:10:10 EST EAGLE 46.6.0.0-73.14.0
CARD   VERSION   TYPE   PST           SST           AST
1107   015-014-001  SLIC  IS-NR         Active        -----
CARD ALARM STATUS      = No Alarms.
```

TPS STATISTICS:

```
=====
===
                TPS      PEAK-TPS    PEAKTIMESTAMP
=====
===
                0        0           00-00-00 00:00:00
-----
```

--

TOTAL SERVICE STATISTICS:

```
=====
=====
SERVICE  TOTAL      VALIDATION
VALIDATION REQUEST  SUCCESS    FAIL
ERROR2    RATIO      FAILED     ERROR1
=====
=====
GTT:      0          0          0          0
0          0%
CAT3.1:   0          0          0          0
0          0%
CAT3.2:   0          0          0          0
0          0%
IMEI_CH:  0          0          0          0
0          0%
-----
```

```
Command Completed.  
;  
Command Executed
```

**Note:**

The `REPT-STAT-SFAPP` command reports peak of average TPS of 30 seconds intervals instead of true peak TPS.

Related Topics

- [chg-th-alm](#)
- [rtrv-th-alm](#)

4.1.431 rept-stat-sflog

Use this command to display the overall status of the SS7 Firewall Logging subsystem on the EAGLE.

Parameters**loc (optional)**

SFLOG card location for which card status, card TPS usage, and last log file event data is to be reported.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

peakreset (optional)

Reset peak values to the current TPS values and last log event file for primary and secondary SFLOG card.

Range:

yes

Example

```
rept-stat-sflog  
rept-stat-sflog:loc=1101  
rept-stat-sflog:peakreset=yes
```

Dependencies

At least one SCCP/SFAPP and one SFLOG card running the SCCPHC/SFAPP and IPSHC application must be configured before this command can be entered.

3283 E3283 Cmd Rej: At least one SCCP/SFAPP and one SFLOG must be configured

The `peakreset` and `loc` parameters cannot be specified together.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The location specified with this command should be the location of an SCCP or SFLOG (logging enabled) card running the SCCPHC or IPSHC GPL respectively.

3496 E3496 Cmd Rej: Card location specified must be an SCCP or SFLOG card

The shelf and card must be equipped.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

Notes

The `peakreset` parameter will reset the statistics on the primary and secondary card.

Output

This example displays output when no parameter is specified:

```
rept-stat-sflog
```

```
Command Accepted - Processing
```

```
tekelecstp 16-02-17 10:57:44 MST EAGLE5 46.3.0.0.0-68.11.1
```

```
SFLOG ALARM STATUS = No Alarms
```

```
SFLOG Cards Configured= 2          Cards IS-NR= 2
```

CARD	VERSION	PST	SST	AST	TPS
1201	P 021-011-007	IS-NR	Active	-----	2
1101	021-011-007	IS-NR	Active	-----	0

```
TOTAL STATISTICS:
```

```
=====
===
SERVICE          SUCCESS    DISCARD
IPSM STATS       : 60      0
SCCP STATS       : 60      0
```

```
HIGHEST 01 OVERALL DAILY PEAKS
```

```
=====
TPS    DATE    TIME
-----
2      16-02-17 00:00:12
```

Command Completed.

;

This example displays output when the `loc` parameter specifies an IPS card:

```
rept-stat-sflog:loc=<IPS card>
```

Command Accepted - Processing

```
tekelecstp 15-04-22 12:28:49 MST EAGLE5 46.3.0-66.1.0.0
CARD   VERSION      TYPE    PST          SST          AST
1101   013-011-001    IPS     IS-NR        Active       -----
CARD ALARM STATUS      = No Alarms.
CPU USAGE = 1 %
```

TPS STATISTICS:

```
=====
                TPS      PEAK-TPS    PEAKTIMESTAMP
-----
                101      101         02-01-02 01:16:32
```

LAST LOG EVENT FILE GENERATED:

```
=====
                FILENAME                                SIZE
-----
                clli_fw_150423_123456                    200
                10.248.12.13
```

Command Completed.

;

This example displays output when the `loc` parameter specifies an SCCP card:

```
rept-stat-sflog:loc=<SCCP card>
```

Command Accepted - Processing

```
tekelecstp 15-04-22 12:28:49 MST EAGLE5 46.3.0-66.1.0
CARD   VERSION      TYPE    PST          SST          AST
1101   013-011-001    DSM     IS-NR        Active       -----
CARD ALARM STATUS      = No Alarms.
CPU USAGE = 1 %
```

SCCP STATISTICS

```
=====
SUCCESS    DISCARD
1000       0
```

Command Completed.

;

Legend

This section defines the fields of the three `rept-stat-sflog` reports:

- `rept-stat-sflog` with no parameters
- `rept-stat-sflog:loc=<IPS card location>`
- `rept-stat-sflog:loc=<SCCP card location>`

A dash (-) in an output field indicates that the statistic does not apply.

Report Type: `rept-stat-sflog` with no parameters

- **SFLOG ALARM STATUS**—Displays SFLOG system-related alarms. If there are no system alarms present, this field displays `No Alarms`.
- **SFLOG Cards Configured**—Number of cards running the IPSHC GPL that are configured for SS7 Firewall Logging.
- **CARDS IS-NR**—Number of SFLOG cards running the IPSHC GPL that can be used by the system (status is In-Service Normal, IS-NR).
- **CARD**—Card location of the SFLOG/SCCP/SFAPP card running the IPSHC/SCCPHC/SFAPP GPL respectively.
- **P**—P indicates the primary Service Module card. The primary Service Module card provides the MPS status to the EAGLE. This indicator is displayed between the card location and the GPL version.
- **VERSION**—Version number of the IPSHC/SCCPHC/SFAPP GPL running on the SFLOG/SCCP/SFAPP card.
- **PST**—Primary state of the card. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the card. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the card. See [Possible Values for PST/SST/AST](#).
- **TPS**—Transactions Per Second; indicates the number of logging events which are received on the SFLOG card.
- **CPU USAGE**—Percentage of the amount of CPU used to process messages by each card.
- **TOTAL STATISTICS**—System-wide view of per-service statistics. The report tracks the following information:
 - **SERVICE**—SFLOG (**IPSM STATS**), **SCCP STATS** and **SFAPP STATS** statistics are displayed.
 - **SUCCESS**—Total number of messages successfully processed by the SCCP, SFAPP and SFLOG cards.
 - **DISCARD**—Total number of messages discarded by the SCCP and SFLOG cards.

Report Type: `rept-stat-sflog:loc=<IPS card location>`

- **CARD**—Card location of the SFLOG card running the IPSHC GPL.
- **VERSION**—Version number of the IPSHC GPL running on the SFLOG card.
- **TYPE**—Type of the card.
- **PST**—Primary state of the card. See [Possible Values for PST/SST/AST](#).

- **SST**—Secondary state of the card. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the card. See [Possible Values for PST/SST/AST](#).
- **CARD ALARM STATUS**—Displays SFLOG card-specific alarms. If there are no card alarms present, this field displays `No Alarms`.
- **CPU USAGE**—Percentage of the amount of CPU used to process messages by the card.
- **TPS STATISTICS**—System-wide view of per-service statistics. The report tracks the following information:
 - **TPS**—Transactions Per Second; indicates the number of transactions that are received on the card.
 - **PEAK-TPS**—Indicates the maximum TPS that occurred on the card
 - **PEAKTIMESTAMP**—Indicates the time when the peak TPS occurred on the card.
- **LAST LOG EVENT FILE GENERATED**—Statistics of the last log file transfer to the SFTP server. The report tracks the following information:
 - **FILENAME**—Name of the file.
 - **SIZE**—Size of the file.
 - **SERVER**—IP address of the server to which the file is transferred.

Report Type: `rept-stat-sflog:loc=<SCCP card location>`

- **CARD**—Card location of the SCCP card running the SCCPHC GPL.
- **VERSION**—Version number of the SCCPHC GPL running on the SCCP card.
- **TYPE**—Type of the card.
- **PST**—Primary state of the card. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the card. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the card. See [Possible Values for PST/SST/AST](#).
- **CARD ALARM STATUS**—Displays SCCP card-specific alarms. If there are no card alarms present, this field displays `No Alarms`.
- **CPU USAGE**—Percentage of the amount of CPU used to process messages by the card.
- **SCCP STATISTICS**—Per-card logging statistics on SCCP. The report tracks the following information:
 - **SUCCESS**—Total number of messages successfully processed by the SCCP card.
 - **DISCARD**—Total number of messages discarded by the SCCP card.
 - **SERVER**—IP address of the server to which the file is transferred.

Report Type: `rept-stat-sflog:loc=<SFAPP card location>`

- **CARD**—Card location of the SFAPP card running the SFAPP GPL.
- **VERSION**—Version number of the SFAPP GPL running on the SFAPP card.
- **TYPE**—Type of the card.
- **PST**—Primary state of the card. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the card. See [Possible Values for PST/SST/AST](#).

- **AST**—Associated state of the card. See [Possible Values for PST/SST/AST](#).
- **CARD ALARM STATUS**—Displays SFAPP card-specific alarms. If there are no card alarms present, this field displays `No Alarms`.
- **CPU USAGE**—Percentage of the amount of CPU used to process messages by the card.
- **SFAPP STATISTICS**—Per-card logging statistics on SFAPP. The report tracks the following information:
 - **SUCCESS**—Total number of messages successfully processed by the SFAPP card.
 - **DISCARD**—Total number of messages discarded by the SFAPP card.

4.1.432 rept-stat-sfthrot

Use this command to display the overall status of the provisioned SS7 Firewall Throttling GTT Actions on the EAGLE.

Parameters

This command has no parameters.

Example

```
rept-stat-sfthrot
```

Dependencies

An SCCP card running the SCCPHC application must be configured before this command can be entered.

```
2374 E2374 Cmd Rej: SCCP not Configured
```

Output

Following is example output:

```
rept-stat-sfthrot
```

```
Command Executed
```

```
tekelecstp 16-02-17 15:45:15 MST EAGLE5 46.3.0.0.0-68.11.1
rept-stat-sfthrot
Command entered at terminal #21.
```

```
;
```

```
Command Accepted - Processing
```

```
tekelecstp 16-02-17 15:45:15 MST EAGLE5 46.3.0.0.0-68.11.1
```

```
SCCP Cards Configured= 2      Cards IS-NR= 1
```

```
Average CPU Usage = 5%
```

```
CARD   VERSION   PST           SST           AST           TPS
```

```
-----  
---
```

```
1203  -----  OOS-MT-DSBLD  Manual        -----  0
```

```
1107 004-011-004 IS-NR Active ----- 3
```

```
PER TA TPS STATISTICS:
```

TA	STATUS	CURRENT 30 SECS		PREVIOUS 30 SECS	
		SUCCESS	DISCARD	SUCCESS	DISCARD
throt1	ALLOWED	94	0	95	0
throt2	BLOCKED	101	25	100	29
throt3	ALLOWED	96	0	95	0

```
Command Completed.
```

```
;
```

Legend

This section defines the fields of the `rept-stat-sfthrot` reports:

A dash (-) in an output field indicates that the statistic does not apply.

- **SCCP Cards Configured**—Number of cards running the SCCPHC GPL that are configured for SS7 Firewall Throttling GTT Actions.
- **CARD IS-NR**—Number of SCCP cards running the SCCPHC GPL that can be used by the system (status is In-Service Normal, IS-NR).
- **Average CPU Usage**—Average percentage of the amount of CPU used to process SS7 Firewall Throttling GTT Actions by the cards.
- **CARD**—Card location of the SCCP card running the SCCPHC GPL.
- **P**—P indicates the primary Service Module card. The primary Service Module card provides the MPS status to the EAGLE. This indicator is displayed between the card location and the GPL version.
- **VERSION**—Version number of the SCCPHC GPL running on the SCCP card.
- **PST**—Primary state of the card. See [Possible Values for PST/SST/AST](#) .
- **SST**—Secondary state of the card. See [Possible Values for PST/SST/AST](#) .
- **AST**—Associated state of the card. See [Possible Values for PST/SST/AST](#) .
- **TPS**—Transactions per second; indicates the number of SUCCESS MSUs processed by an SCCP card for all Throttling Actions (average cumulative count) for the previous window.
- **PER TA TPS STATISTICS**—System-wide view of per-TA statistics. The report tracks the following information:
 - **TA**—Throttling Actions that are provisioned in the database.
 - **STATUS**—Current state (Allowed or Blocked) of the corresponding Throttling Action for the 30-second window.
 - **CURRENT 30 SECS:**
 - * **SUCCESS**—Number of success messages in the current 30-second window.
 - * **DISCARD**—Number of discarded messages in the current 30-second window.

- **PREVIOUS 30 SECS:**
 - * **SUCCESS**—Number of success messages in the previous 30-second window.
 - * **DISCARD**—Number of discarded messages in the previous 30-second window.

4.1.433 rept-stat-sip

Use this command to display the overall status of the SIP service on the EAGLE.

Parameters

loc (optional)

The SIP card location for which SIP TPS usage data is to be reported.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

peakreset (optional)

Reset peak values to the current TPS values.

Range:

yes

no

Default:

no

mode (optional)

Performance data of SIP cards and their connections.

Range:

perf

Default:

perf

Example

```
rept-stat-sip
rept-stat-sip:peakreset=yes:loc=1101
rept-stat-sip:loc=1101
rept-stat-sip:mode=perf
rept-stat-sip:mode=perf:loc=1101
```

Dependencies

The location specified with this command should be of a SIP card.

2067 E2067 Cmd Rej: Card location specified must be an SIP card

A SIP card running the SIPHC application must be configured before this command can be entered.

2688 E2688 Cmd Rej: SIP not Configured.

Parameter peakreset should be specified with loc parameter.

2366 E2366 Cmd Rej: LOC must be specified.

Notes

If optional parameters are specified, only the entries that match the entered parameters are displayed.

Output

This example displays output when no parameter is specified:

```
rept-stat-sip
```

```
tekelecstp 02-03-20 05:58:25 EST EAGLE 46.0.0
```

```
rept-stat-sip
```

```
SIP ALARM STATUS = No Alarms
```

```
SIP cards Configured= 2 Cards IS-NR= 2
```

CARD	VERSION	PST	SST	AST	TPS
1107	045-003-053	IS-ANR	Standby	100%+	0

```
TOTAL SERVICE STATISTICS:
```

SERVICE	SUCCESS	ERROR	WARNINGS	BYPASS	TOTAL
SIPNP:	5	2	1	2	10

```
Command Completed.
```

```
;
```

This example displays output when the LOC parameter is specified:

```
rept-stat-sip:loc=1107
```

```
Command Accepted - Processing
```

```
tekelecstp 02-03-20 06:00:17 EST EAGLE 46.0.0
rept-stat-sip:loc=1107
```

```

CARD   VERSION      TYPE   PST           SST           AST
1101   045-003-053   DSM    IS-NR         Active        -----
CARD ALARM STATUS = No Alarms

```

TPS STATISTICS

```
=====
====
                TPS   PEAK TPS.   PEAKTIMESTAMP
-----
                2503  2508         02-03-20 06:02:04

```

PER CONNECTION STATISTICS

```
=====
====
CNAME           STATUS TPS   INVITE  3XX   ERROR
-----
C1              DOWN   0     0     0     0
C2              DOWN   0     0     0     0
C3              UP     2503  75113  75113  0
UdpC4          UP     0     0     0     0
-----

```

Command Completed.

;

This example displays output when the MODE parameter is specified:

```
rept-stat-sip:mode=perf
```

Command Accepted - Processing

```
tekelecstp 02-03-20 06:05:55 EST EAGLE 46.0.0
rept-stat-sip:mode=perf
SIP ALARM STATUS = No Alarms
SIP Cards Configured= 2      Cards IS-NR= 2

```

TPS STATISTICS:

```
=====
===
CARD   TPS   PTPS   PTIMESTAMP
-----
1101 P 2507  2511   02-03-20 06:05:52
1107  0     0      00-00-00 00:00:00
-----

```

```
Command Completed.
;
```

This example displays output when both MODE and LOC parameters are specified:

```
rept-stat-sip:mode=perf:loc=1101
```

```
Command Accepted - Processing
```

```
tekelecstp 02-03-20 06:08:24 EST EAGLE 46.0.0
rept-stat-sip:mode=perf:loc=1101
```

```

CARD   VERSION      TYPE   PST           SST           AST
1101   045-003-053    DSM    IS-NR         Active        -----
CARD ALARM STATUS      = No Alarms

```

```
TPS STATISTICS:
```

```
=====
              TPS   PEAK TPS.   PEAKTIMESTAMP
-----
              2501  2517           02-03-20 06:06:21

```

```
PER CONNECTION STATISTICS:
```

```
=====
CNAME              TPS   PTPS   PTIMESTAMP
-----
C1                  0     0      00-00-00 00:00:00
C2                  0     0      00-00-00 00:00:00
C3                  2501  2517   02-03-20 06:06:21
udpC4               0     0      00-00-00 00:00:00

```

```
Command Completed.
;
```

4.1.434 rept-stat-slk

Use this command to generate a report of the MTP signaling links status. The secondary state (SST) indicates whether the link is available, unavailable, or manually removed from service.

Use this command to generate a separate report of status of the E1 associated with a signaling link. The status includes the location of the E1 card and the UAM text. If the E1 association is not provisioned, "E1 association unknown" is displayed. If the card is not type LIME1, no E1 output is generated.

Use this command to generate a separate report of status of the T1 associated with a signaling link. The status includes the location of the T1 card and the UAM text. If the card is not type LIMT1, no T1 output is generated.

Parameters

l2stats (optional)

Report L2 status

Range:

align

Display alignment data only

both

Display alignment and service data

brief

Display up to 10 alignment events only

no

Do not display level 2 status information

service

Display service data only

Default:

no

link (optional)

The signaling link on the card specified in the `loc` parameter. The links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all `link` parameter values.

See [Table A-1](#) for valid `link` parameter range values for each type of card that can have assigned signaling link ports.

Default:

Display all

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Default:

All cards containing signaling links are displayed.

stat (optional)

A report on cards whose status is the same as the state indicated by the parameter

Range:***all***

All of the primary states

alminh

Alarms inhibited

anr

In-Service-Abnormal (IS-ANR)

dsbld

Out-of-Service-Maintenance-Disabled (OOS-MT-DSBLD)

mt

Out-of-Service-Maintenance (OOS-MT)

nr

In-Service-Normal (IS-NR)

Default:

Display all

Example

```
rept-stat-slk
```

```
rept-stat-slk:loc=1201:link=a
```

```
rept-stat-slk:stat=alminh
```

```
rept-stat-slk:loc=1203:link=b:l2stats=both
```

```
rept-stat-slk:loc=1203:link=b:l2stats=brief
```

Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

If the `loc` or `link` parameter is specified, then the `stat` parameter cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

When the `loc` parameter is specified, the `link` parameter must be specified.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

The card must be equipped and must be one of the following cards:

- E5-E1T1-B card running the SS7ANSI or CCS7ITU application
- E5-ATM-B card running the ATMANSI or ATMITU application
- E5-ENET-B card running the IPLIMI, or IPSPG application
- SLIC card running the IPSPG application

2101 E2101 Cmd Rej: Card location is unequipped

The location specified by the `loc` parameter cannot be one of those reserved for non-LIM or non-DCM cards.

2376 E2376 Cmd Rej: Specified LOC is invalid

The signaling link must be an SS7 signaling link to display level 2 statistics (`l2stats`).

2918 E2918 Cmd Rej: Link must be SS7 to display Level 2 stats

On point-to-multipoint IP links (E5-ENET-B cards equipped as SS7IPGW or IPGW links), `l2stats` output is not available.

3835 E3835 Cmd Rej: L2STATS not valid for SS7IPGW

The specified signaling link must be provisioned in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

A card location that is valid and defined in the database must be specified.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The card in the location specified by the `loc` parameter must be in service.

2387 E2387 Cmd Rej: Card is not in service

The `link=b` parameter cannot be specified for SS7IPGW links.

3768 E3768 Cmd Rej: PORT B not supported for device

Neither the `stat` or `loc` and `port` parameters can be specified with this command.

2379 E2379 Cmd Rej: Missing parameter

An appropriate value must be specified for the `link` parameter when an ATM card is used:

- `a-a1, b`—E5-ATM-B card running the ATMANSI or ATMITU application

2972 E2972 Cmd Rej: Specified Link is not valid for Card and Appl Type

This command is not valid for IPSPG-M3UA signaling links.

4813 E4813 Cmd Rej: Command not valid for IPSPG-M3UA

Notes

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

The *Installation Guide* provides an illustration of card locations.

Output

```
rept-stat-slk
```

```
rlghncxa03w 04-02-27 17:00:36 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
```

```

1201,A lsnssp2 ----- IS-NR Avail ----
1201,B lsnstpi ----- IS-NR Avail ----
1202,A lsnstpn ----- IS-NR Avail ----
1202,B lsnstpi ----- IS-NR Avail ----
1203,A lsnstpa ----- IS-NR Avail ----
1203,B lsnscpa ----- IS-NR Avail ----
1205,A lsnscpi ----- IS-NR Avail ----
1205,B lsnsspi1 ----- IS-NR Avail ----
1207,A lsnstpa ----- IS-NR Avail ----
1207,B lsnsspa1 ----- IS-NR Avail ----
1211,A lsnstpn ----- IS-NR Avail ----
1211,B lsnssp1 ----- IS-NR Avail ----
Command Completed.

```

;

rept-stat-slk:loc=1201:link=a

```

rlghncxa03w 04-02-04 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   lsnssp2   -----   OOS-MT   Unavail   ----
ALARM STATUS      = *    0213 REPT-LKF: received SIOS
UNAVAIL REASON    = PE NA
Command Completed.

```

;

rept-stat-slk:stat=alminh

```

rlghncxa03w 04-02-23 12:57:50 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1205,A   lsnscpi   -----   IS-NR   Avail   ALMINH
1211,A   lsnstpn   -----   IS-NR   Avail   ALMINH
Command Completed.

```

;

rept-stat-slk:loc=1203:link=a:l2stats=both

```

rlghncxa03w 04-02-04 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1203,A   lsnssp2   -----   OOS-MT-DSBLD   Unavail   ----
ALARM STATUS      = **   0236 REPT-LKS:not aligned
UNAVAIL REASON    = NA
Event Type      Event                               Timestamp
SSCOP State     Idle                               04-02-04 10:04:23.000
SSCOP State     Outgoing Conn. Pending            04-02-04 10:04:23.000
SSCOP State     Incoming Conn. Pending            04-02-04 10:05:31.100
SSCOP State     Outgoing Disc. Pending            04-02-04 10:05:31.100
SSCOP State     Outgoing Resync Pending           04-02-04 10:05:31.105
SSCOP State     Incoming Resync Pending           04-02-04 10:05:31.105
SSCOP State     Outgoing Recovery Pending         04-02-04 10:05:46.425
SSCOP State     Recovery Response Pending         04-02-04 10:05:46.430

```

SSCOP State	Incoming Recovery Pending	04-02-04
10:05:46.430		
SSCOP State	Data Transfer Ready	04-02-04
10:06:02.110		
SSCF State	OOS Idle	04-02-04
10:06:02.120		
SSCF State	OOS ODP	04-02-04
10:06:02.885		
SSCF State	Alignment Idle	04-02-04
10:06:53.625		
SSCF State	Alignment OCP	04-02-04
10:07:14.000		
SSCF State	Alignment ODP	04-02-04
10:07:14.000		
SSCF State	In Service/Data Transfer Ready	04-02-04
10:08:01.760		
SSCF State	Proving Data Transfer Ready	04-02-04
10:08:01.760		
SSCF State	Aligned/Ready Data Transfer Ready	04-02-04
10:04:23.000		
MAAL State	OOS	04-02-04
10:04:23.000		
MAAL State	Alignment	04-02-04
10:05:31.100		
MAAL State	Proving	04-02-04
10:05:31.100		
MAAL State	Aligned/Ready	04-02-04
10:05:31.105		
MAAL State	In Service	04-02-04
10:05:31.105		
SSCOP Receive	BGN	04-02-04
10:05:46.425		
SSCOP Receive	BGAK	04-02-04
10:05:46.430		
SSCOP Receive	END	04-02-04
10:05:46.430		
SSCOP Receive	ENDAK	04-02-04
10:06:02.110		
SSCOP Receive	RS	04-02-04
10:06:02.120		
SSCOP Receive	RSAK	04-02-04
10:06:02.885		
SSCOP Receive	BGREJ	04-02-04
10:06:53.625		
SSCOP Receive	SD	04-02-04
10:07:14.000		
SSCOP Transmit	ER	04-02-04
10:07:14.000		
SSCOP Transmit	POLL	04-02-04
10:08:01.760		
SSCOP Transmit	STAT	04-02-04
10:08:01.760		
SSCOP Transmit	USTAT	04-02-04
10:04:23.000		
SSCOP Transmit	UD	04-02-04

```

10:04:23.000
SSCOP Transmit MD 04-02-04 10:05:31.100
SSCOP Transmit ERAK 04-02-04 10:05:31.100
SSCF Receive Out of Service 04-02-04 10:05:31.105
SSCF Receive Processor Outage 04-02-04 10:05:31.105
SSCF Receive In Service 04-02-04 10:05:46.425
SSCF Receive Normal 04-02-04 10:05:46.430
SSCF Receive Emergency 04-02-04 10:05:46.430
SSCF Transmit Alignment Not Successful 04-02-04 10:06:02.110
SSCF Transmit Mgmt Initiated 04-02-04 10:06:02.120
SSCF Transmit Protocol Error 04-02-04 10:06:02.885
SSCF Transmit Proving Not Successful 04-02-04 10:06:53.625
Special Event LCD 04-02-04 10:05:46.425
Special Event LCD Cleared 04-02-04 10:05:46.430
Special Event LOF 04-02-04 10:05:46.430
Special Event LOF Cleared 04-02-04 10:06:02.110
Special Event LOS 04-02-04 10:06:02.120
Special Event LOS Cleared 04-02-04 10:06:02.885
Special Event Too Many Interrupts 04-02-04 10:06:53.625

Service Event Timestamp
Timer_No_Credit expired 04-02-04 05:40:10.160
ERM link failure 04-02-04 10:02:02.125
Timer_No_Response expired 04-02-04 10:15:02.125
COO received 04-02-04 10:22:02.125
Stop Commanded 04-02-04 10:32:02.125
LPO 04-02-04 10:42:02.125
RPO 04-02-04 10:43:02.125
Remote OOS 04-02-04 10:44:02.125
Remote PE 04-02-04 10:45:02.125
Remote Mgmt Initiated 04-02-04 10:46:02.125
Failed SLT 04-02-04 10:47:02.125
LCD 04-02-04 10:48:02.125
LOS 04-02-04 10:49:02.125
LOF 04-02-04 10:52:02.125
Too many interrupts 04-02-04 10:53:02.125
In Service 04-02-04 10:54:01.760
Command Completed.

```

;

rept-stat-slk:loc=1203:link=b:l2stats=brief

```

rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1203,B   lsnssp2  -----  IS-NR    Avail    ----
        ALARM STATUS      = No Alarms
        UNAVAIL REASON   = --

```

```

Event Type      Event              Timestamp
Transmit        SIOS               97-10-31 10:04:23.000
State           Out of Service     97-10-31 10:04:23.000
State           Initial Align      97-10-31 10:05:31.100
State           Idle                97-10-31 10:05:31.100

```

```

Transmit      SIO                97-10-31 10:05:31.105
State        Not Aligned        97-10-31 10:05:31.105
State        T2 Expired          97-10-31 10:05:46.425
Command Completed.

```

;

This example shows the output for an E1 interface associated with a link:

```
rept-stat-slk:loc=1201:link=a
```

```

rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   e5m6s4   -----  OOS-MT   Unavail   -----
ALARM STATUS      = No Alarms
UNAVAIL REASON    = --
E1 STATUS         = 1201, REPT-E1F:FAC-E1 Port 1 LOS failure
Command Completed.

```

;

This example shows the output when the E1 interface is not associated with a link:

```
rept-stat-slk:loc=1201:link=a
```

```

rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   e5m6s4   -----  OOS-MT   Unavail   -----
ALARM STATUS      = No Alarms
UNAVAIL REASON    = --
E1 status         = E1 association unknown
Command Completed.

```

;

This example shows this output for a T1 interface associated with a link:

```
rept-stat-slk:loc=1201:link=a
```

```

rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   e5m6s4   -----  OOS-MT   Unavail   -----
ALARM STATUS      = No Alarms
UNAVAIL REASON    = --
T1 STATUS         = 1201, REPT-E1F:FAC-T1 Port 1 LOS failure
Command Completed.

```

;

Legend

- **SLK**—Card location and the signaling link
- **LSN**—Name of the linkset that contains the signaling link
- **CLLI**—CLLI code of the destination STP of the signaling link

- **PST**—Primary state of the signaling link. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the signaling link. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the signaling link. See [Possible Values for PST/SST/AST](#).
- **ALARM STATUS**—Trouble text alarm message generated for the specified signaling link.
- **UNAVAIL REASON**—Reason the signaling link is unavailable. More than one unavailable reason may be listed:
 - **BSNR**—The signaling link received 2 of 3 invalid BSNs.
 - **CNGT**—The signaling link has a remote congestion time-out.
 - **COO**—A changeover order was received.
 - **FC**—The signaling link is unavailable because of false congestion restart.
 - **FE**—The signaling link is in far end loopback mode.
 - **FIBR**—The signaling link received 2 of 3 invalid FIBs.
 - **INTR**—Too many link interrupts were received.
 - **LB**—The signaling link has been blocked locally.
 - **LD**—The signaling link received incomplete data.
 - **LI**—The signaling link has been inhibited locally.
 - **NA**—The signaling link is not aligned.
 - **PF**—The signaling link failed the proving period.
 - **RB**—The signaling link has been blocked remotely.
 - **RD(xx.xxx)**—The signaling link is unavailable because of a restart delay to prevent signaling link oscillation. The number in parentheses indicates the amount of time, in seconds, remaining in the restart delay period. The link is restarted automatically after this amount of time has elapsed.
 - **RL**—The signaling link is in remote near end loopback mode.
 - **RMI**—The signaling link has been inhibited remotely.
 - **SIE**—An unexpected SIE was received.
 - **SIN**—An unexpected SIN was received.
 - **SIO**—An unexpected SIO was received.
 - **SIOS**—An unexpected SIOS was received.
 - **SLTF**—Link test failed.
 - **T1NR**—The level-2 T1 (not ready) timer expired.
 - **T1R**—The level-2 T1 (ready) timer expired.
 - **T2**—The level-2 T2 timer expired.
 - **T3**—The level-2 T3 timer expired.
 - **XDA**—The signaling link did not receive an acknowledgment in time.
 - **XER**—The SUERM threshold was exceeded.—
 - **--**—The card is ISOLATED or the links are available.

The following are reasons that the ATM high-speed signaling link is unavailable:

- **TNC**—Timer No Credit expired - The remote node has held the node in a no-credit state for too long. The far end office should be contacted to determine the cause of the link congestion.
- **TNR**—Timer No Response expired - The far end is taking too long to acknowledge the messages sent to it by the near end. The far end office should be contacted to determine the cause for the excessive delay in acknowledging PDUs.
- **LPO**—Local Processor Outage - Indicates a spontaneous or management-initiated processor outage. The user needs to determine whether the outage was spontaneous or management-initiated on the near end.
- **RPO**—Remote Processor Outage - The far end has sent PDUs causing processor outage. The far end office should be contacted to determine the reason for the processor outage.
- **ROOS**—Remote Out of Service - The far end has sent PDUs causing a link to become out of service. The far end office should be contacted to determine the reason for taking the link out of service.
- **RPE**—Remote Protocol Error - The far end has sent PDUs declaring a protocol error. The far end office should be contacted to determine the details about the protocol error.
- **RMIR**—Remote Management Initiated Release - The far end has sent PDUs releasing the link. The far end office should be contacted to determine the reason for releasing the link.
- **LCD**—Level 1 facility outage: Loss of Cell Delineation
- **LOF**—Level 1 facility outage: Loss of Frame
- **LOS**—Level 1 facility outage: Loss of Signal

EVENT TYPE

The type of event being logged:

RECEIVE

When a signal unit is received.

TRANSMIT

When a signal unit is transmitted.

STATE

When an internal SS7 Level 2 state changes or a special event occurs that would either end alignment or cause the link to fail

EVENT

The specific event being logged: (1) if a signal unit is being received or transmitted, the specific signal unit is displayed; (2) if the event being logged is a state change, the new state is displayed; (3) If neither (1) nor (2) is displayed, the link or alignment failure reason is displayed.

SERVICE EVENT

The service activity of the link; for example, In Service. Anything other than In Service is a description of a link failure.

TIMESTAMP

The time event processed by the system as follows:

- **YY-MM-DD hh:mm:ss.ttt**, where
- **YY**—The last 2 digits of the year (range 00–99)
- **MM**—The month (range 01–12)
- **DD**—The day of month (range 00–31)
- **hh**—The hour of day (range 00–59)
- **mm**—The minute of the hour (range 00–59)
- **ss**—The seconds of the minute (range 00–59)
- **ttt**—Milliseconds of the second (range 000–995 in increments of 5)

E1 STATUS

The status of the E1 interface associated with the link; the status includes the card location and the UAM text. If the E1 association is not provisioned, “E1 association unknown” is displayed. If the card is not type LIME1, no E1 output is displayed.

T1 STATUS

The status of the T1 interface associated with the link; the status includes the card location and the UAM text. If the card is not type LIMT1, no T1 output is displayed.

Related Topics

- [act-slk](#)
- [blk-slk](#)
- [dact-slk](#)
- [dlt-slk](#)
- [ent-slk](#)
- [inh-slk](#)
- [rtrv-slk](#)
- [tst-slk](#)
- [ublk-slk](#)
- [unhb-slk](#)

4.1.435 rept-stat-sys

Use this command to display a summary report of the status of the main system entities. Use this display to determine where the troubles are in the system. The display shows the number of these items that are in service (IS-NR) and how many are in another state (IS-ANR, OOS-MT, OOS-MT-DSBLD).

Parameters

This command has no parameters.

Example

```
rept-stat-sys
```

Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

Notes

None

Output

The following example shows the output when no features are turned on in the system and only the cards in locations 1109-1110 and 1113-1118 are installed.

```
rept-stat-sys
```

```

tekelecstp 10-03-11 10:31:06 EST  EAGLE 42.0.0
MAINTENANCE STATUS REPORT
Maintenance Baseline established.
Routing Baseline established.
SCCP Baseline established.
ALARMS:      CRIT=    2    MAJR=    2    MINR=    0    INH=    0
OAM 1113     IS-NR      Active      INH=    0
OAM 1115     IS-NR      Standby    INH=    0
LIM   CARD IS-NR=    0    Other=    0    INH=    0
SCCP   CARD IS-NR=    0    Other=    0    INH=    0
GLS   CARD IS-NR=    0    Other=    0    INH=    0
SS7IPGW CARD IS-NR=    0    Other=    0    INH=    0
IPGWI  CARD IS-NR=    0    Other=    0    INH=    0
IPLIMI CARD IS-NR=    0    Other=    0    INH=    0
IPSG   CARD IS-NR=    0    Other=    0    INH=    0
MUX   CARD IS-NR=    2    Other=    0    INH=    0
MCPM   CARD IS-NR=    0    Other=    0    INH=    0
EROUTE CARD IS-NR=    0    Other=    0    INH=    0
CLOCK   IS-NR=    2    Other=    0    INH=    0
IMT     IS-NR=    2    Other=    0
SLK     IS-NR=    0    Other=    0    INH=    0
DLK     IS-NR=    0    Other=    0    INH=    0
LINK SET IS-NR=    0    Other=    0    INH=    0
DSM IP LK IS-NR=    0    Other=    0    INH=    0
MCPM IP LK IS-NR=    0    Other=    0    INH=    0
APPLSOCK IS-NR=    0    Other=    0    INH=    0
SCTP ASSOC IS-NR=    0    Other=    0    INH=    0
APPL SERVER IS-NR=    0    Other=    0    INH=    0
SS7 DPC   IS-NR=    0    Other=    0    INH=    0
CLUST DPC IS-NR=    0    Other=    0    INH=    0
RTX       IS-NR=    0    Other=    0    INH=    0
XLIST DPC IS-NR=    0    Other=    0
DPC SS    Actv =    0    Other=    0
SEAS SS   IS-NR=    0    Other=    2
TERMINAL  IS-NR=   16    Other=    0    INH=    0
MPS       IS-NR=    0    Other=    0

```

```

RTD SS          IS-NR= 1   Other=      0
;

```

The following example shows the output when various features are turned on in the system. (Your output will not show all of these entries; some features are mutually exclusive in the system.)

Some entries appear as follows:

- When the Measurements Platform feature is not turned on and no MCPM cards are in the IS-NR state in the system, the MCPM and MCPM IP LK values are zero and the MEAS SS entry does not appear.
- When one or more MCPM cards have been installed and allowed, the MCPM CARD entry shows the number of MCPM cards that are in each state.
- When the Measurements Platform feature is turned on and the Measurements Platform collection option is enabled, the MEAS SS entry appears.
- When the Measurements Platform collection function is enabled, the MCPM IP LK entry shows the number of links that are functioning for the MCPM cards, and the MEAS SS entry appears.
- When the Origin-Based MTP Routing (MOBR) feature is not turned on, and/or no exception routes have been provisioned, the RTX value is zero.
- When the OA&M IP Security Enhancement feature is turned on, the SECURITY SS entry appears.
- When the Equipment Identity Register (EIR) feature is turned on, the EIR SS entry appears.
- When the INAP Number Portability (INP) feature is turned on, the INP SS entry appears.
- When the ANSI41 Analyzed Information Query (ANSI41 AIQ) feature is enabled, the AIQ SS entry appears.
- When the FCMODE is FCOPY for an *FC-Capable* GPL, the FC IP LK and FCS entries appear. E5-ENET-B cards running the IPSPG or IPGHC GPL are considered to be *FC-capable*. A card running the IPGHC GPL must be in the IS-NR State before the card can be considered *FC-capable*. This requirement does not apply to cards running the IPSPG GPL.
- When the S13/S13' EIR feature is enabled and one or more DEIR cards have been provisioned and allowed, the DEIR CARD entry shows the number of DEIR cards that are in each state.
- When the SIP Number Portability feature is enabled and one or more SIP cards have been installed and allowed, the SIP CARD entry shows the number of SIP cards that are in each state.
- When one or more SFLOG cards have been installed and allowed, the SFLOG CARD entry shows the number of SFLOG cards that are in each state.

```
rept-stat-sys
```

```

tekelecstp 16-03-29 12:04:41 MST  EAGLE5 46.3.0.0.0
  MAINTENANCE STATUS REPORT
    Maintenance Baseline established.
    Routing Baseline being established.
    SCCP Baseline established.
    SIP Baseline being established.

```

```

DEIR Baseline being established.
ENUM Baseline being established.
SFLOG Baseline being established.
ALARMS:      CRIT=      8    MAJR=     12    MINR=     21
INH=         0
OAM 1113     OOS-MT           Isolated
INH=         0
OAM 1115     IS-NR           Active
INH=         0
LIM  CARD IS-NR= 1    Other=      0
INH=         0
SCCP  CARD IS-NR= 0    Other=      2
INH=         0
GLS  CARD IS-NR= 0    Other=      0
INH=         0
SS7IPGW CARD IS-NR= 0    Other=      0
INH=         0
IPGWI  CARD IS-NR= 0    Other=      0
INH=         0
IPLIMI CARD IS-NR= 0    Other=      0
INH=         0
IPSG  CARD IS-NR= 0    Other=      0
INH=         0
MUX  CARD IS-NR= 2    Other=      0
INH=         0
MCPM  CARD IS-NR= 0    Other=      1
INH=         0
EROUTE CARD IS-NR= 0    Other=      0
INH=         0
UTIL  CARD IS-NR= 0    Other=      0
INH=         0
SIP  CARD IS-NR= 0    Other=      0
INH=         0
DEIR  CARD IS-NR= 0    Other=      0
INH=         0
ENUM  CARD IS-NR= 0    Other=      0
INH=         0
SFLOG  CARD IS-NR= 1    Other=      0
INH=         1
CLOCK           IS-NR= 0    Other=      1
INH=         0
HS CLOCK       IS-NR= 0    Other=      1
INH=         0
IMT           IS-NR= 1    Other=      1
INH=         0
SLK           IS-NR= 0    Other=      1
INH=         0
DLK           IS-NR= 0    Other=      0
INH=         0
LINK SET      IS-NR= 0    Other=      1
INH=         0
DSM IP LK     IS-NR= 1    Other=      1
INH=         0
MCPM IP LK    IS-NR= 0    Other=      1
INH=         0
STC IP LK     IS-NR= 0    Other=      0

```

```

INH=      0
ENET IP LK  IS-NR=    2  Other=    2  INH=    0
APPLSOCK   IS-NR=    0  Other=    0  INH=    0
SCTP ASSOC IS-NR=    0  Other=    0  INH=    0
APPL SERVER IS-NR=    0  Other=    0  INH=    0
SS7 DPC    IS-NR=    0  Other=    2  INH=    0
CLUST DPC  IS-NR=    0  Other=    0  INH=    0
RTX        IS-NR=    0  Other=    0  INH=    0
XLIST DPC  IS-NR=    0  Other=    0
DPC SS     Actv =    0  Other=    0
LSMS SS    IS-NR=    0  Other=    0
LSMS Conn  IS-NR=    0  Other=    0  INH=    0
TERMINAL   IS-NR=    9  Other=   15  INH=    0
MPS        IS-NR=    0  Other=    2
MEAS SS    IS-NR=    0  Other=    1
E1PORT     IS-NR=    0  Other=    1  INH=    0
T1PORT     IS-NR=    0  Other=    0  INH=    0
J1PORT     IS-NR=    0  Other=    0  INH=    0
RTD SS     IS-NR=    1  Other=    0

```

Command Completed.

;

rept-stat-sys

tekelecstp 17-09-20 05:37:22 MST EAGLE5 46.6.0.0.0

MAINTENANCE STATUS REPORT

Maintenance Baseline established.
Routing Baseline being established.
SCCP Baseline established.
SIP Baseline being established.
DEIR Baseline being established.
ENUM Baseline being established.
SFLOG Baseline being established.

```

ALARMS:      CRIT=    8  MAJR=   12  MINR=   21  INH=    0
OAM 1113     OOS-MT           Isolated  INH=    0
OAM 1115     IS-NR           Active    INH=    0
LIM  CARD   IS-NR=    1  Other=    0  INH=    0
SCCP  CARD  IS-NR=    0  Other=    2  INH=    0
IPSG  CARD  IS-NR=    0  Other=    0  INH=    0
MUX   CARD  IS-NR=    2  Other=    0  INH=    0
MCPM  CARD  IS-NR=    0  Other=    1  INH=    0
EROUTE CARD  IS-NR=    0  Other=    0  INH=    0
UTIL  CARD  IS-NR=    0  Other=    0  INH=    0
SIP   CARD  IS-NR=    0  Other=    0  INH=    0
DEIR  CARD  IS-NR=    0  Other=    0  INH=    0
ENUM  CARD  IS-NR=    0  Other=    0  INH=    0
SFLOG  CARD  IS-NR=    1  Other=    0  INH=    1
CLOCK           IS-NR=    0  Other=    1  INH=    0
HS CLOCK       IS-NR=    0  Other=    1  INH=    0
IMT           IS-NR=    1  Other=    1
SLK           IS-NR=    0  Other=    1  INH=    0
DLK           IS-NR=    0  Other=    0  INH=    0
LINK SET      IS-NR=    0  Other=    1  INH=    0

```

	DSM IP LK	IS-NR=	1	Other=	1
INH=	0				
	MCPM IP LK	IS-NR=	0	Other=	1
INH=	0				
	STC IP LK	IS-NR=	0	Other=	0
INH=	0				
	ENET IP LK	IS-NR=	2	Other=	2
INH=	0				
	APPLSOCK	IS-NR=	0	Other=	0
INH=	0				
	SCTP ASSOC	IS-NR=	0	Other=	0
INH=	0				
	APPL SERVER	IS-NR=	0	Other=	0
INH=	0				
	SS7 DPC	IS-NR=	0	Other=	2
INH=	0				
	CLUST DPC	IS-NR=	0	Other=	0
INH=	0				
	RTX	IS-NR=	0	Other=	0
INH=	0				
	XLIST DPC	IS-NR=	0	Other=	0
	DPC SS	Actv =	0	Other=	0
	LSMS SS	IS-NR=	0	Other=	0
	LSMS Conn	IS-NR=	0	Other=	0
INH=	0				
	TERMINAL	IS-NR=	9	Other=	15
INH=	0				
	MPS	IS-NR=	0	Other=	2
	MEAS SS	IS-NR=	0	Other=	1
	E1PORT	IS-NR=	0	Other=	1
INH=	0				
	T1PORT	IS-NR=	0	Other=	0
INH=	0				
	J1PORT	IS-NR=	0	Other=	0
INH=	0				
	RTD SS	IS-NR=	1	Other=	0

Command Completed.

;

Legend

- **INH**—Number of devices within each device type that have their alarms inhibited
- **ALARMS**—Number of critical (**CRIT**), major (**MAJR**), and minor (**MINR**) alarms on the system when the command was executed and the count of alarm inhibited (**INH**) devices for cards, links, linksets, and terminals
- **OAM**—Status of each card that is running the OAM (1113 and 1115)
- **LIMCARD**—Status of the LIM cards
- **SCCP CARD**—Status of the SCCP subsystem cards
- **MUX CARD**—Combined status of the MUX cards
- **MCPM CARD**—Status of the MCPM cards

- **EROUTE CARD**—Status of the EROUTE cards
- **CLOCK**—Status of the system clocks
- **HS CLOCK**—Status of the high-speed clocks
- **IMT**—Status of the IMT system
- **SLK**—Status of the SS7 and IPGWI signaling links in the system
- **DLK**—Status of the TCP/IP data links in the system
- **LINK SET**—Status of the linksets in the system
- **DSM IP LK**—Status of the Service Module IP linksets
- **MCPM IP LK**—Status of the MCPM IP links
- **FC IP LK**—Status of the Fast Copy IP links
- **APPLSOCK**—Status of the application sockets
- **SCTP ASSOC**—Status of the SCTP associations
- **APPL SERVER**—Status of the Application Servers
- **SS7 DPC**—Summary information for provisioned DPCs that are not in clusters
- **CLUST DPC**—Summary information for provisioned cluster DPCs
- **RTX**—Summary information for provisioned exception routes only
- **XLIST DPC**—Summary information for X-LIST DPC entries only
- **DPC SS**—Summary information for the DPC subsystem
- **SCCP SS**—Status of the SCCP subsystem
- **SEAS SS**—Status of the SEAS subsystem
- **MEAS SS**—Status of the Measurements subsystem (for Measurements Platform)
- **MPS**—Summary information on the MPS
- **TERMINAL**—Status of the terminals
- **SECURITY SS**—Status of the EAGLE OA&M IP Security subsystem
- **EIR SS**—Status of the Equipment Identity Register subsystem
- **RTD**—Status of the Run Time Diagnostic subsystem
- **VFLEX SS**—Status of the V-Flex subsystem
- **ATINPQ SS**—Status of the ATI Number Portability Query subsystem
- **INP SS**—Status of the INAP Number Portability subsystem
- **LNP SS**—Status of the Local Number Portability subsystem
- **FCS**—Status of the Fast Copy subsystem
- **AIQ SS**—Status of the ANSI41 Analyzed Information Query subsystem
- **SIP CARD**— Status of the SIP cards
- **DEIR CARD**— Status of the DEIR cards running DEIRHC GPL
- **SFLOG CARD**— Status of the SFLOG cards

Related Topics

- [rept-stat-alm](#)

- [rept-stat-card](#)
- [rept-stat-clk](#)
- [rept-stat-cluster](#)
- [rept-stat-dstn](#)
- [rept-stat-imt](#)
- [rept-stat-ls](#)
- [rept-stat-meas](#)
- [rept-stat-mon](#)
- [rept-stat-mps](#)
- [rept-stat-seas](#)
- [rept-stat-slk](#)
- [rept-stat-trbl](#)
- [rept-stat-xlist](#)

4.1.436 rept-stat-t1

Use this command to display the T1 port status and signaling link status for cards with provisioned T1 ports.

Parameters

loc (optional)

Card address. The unique identifier of a specific LIMT1 card located in the STP.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Default:

Information for all LIMT1 cards is reported.

t1port (optional)

T1 port number. This parameter displays information for a T1 port on the card in the specified card location.

Range:

1 - 8 .

Example

```
rept-stat-t1
rept-stat-t1:loc=1203
rept-stat-t1:loc=1203:t1port=1
```


Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The `loc` parameter must be specified when the `t1port` parameter is specified.

2366 E2366 Cmd Rej: LOC must be specified

The active TDM location cannot be specified in the `loc` parameter.

3645 E3645 Cmd Rej: Cannot specify the ACTIVE TDM location

Card locations 1117 and 1118 and the MUX card locations (`xy09` and `xy10` where `x` is the frame and `y` is the shelf) cannot be specified in the `loc` parameter.

2376 E2376 Cmd Rej: Specified LOC is invalid

Notes

Specifying the command without any parameters displays T1 port status for all cards with provisioned T1 ports.

If the `loc` parameter is specified, status is displayed for all T1 ports provisioned on the card in the specified location.

If the `loc` and `t1port` parameters are specified, the T1 port status summary is displayed for all T1 ports provisioned on the card in the specified location, followed by the status of all signaling links assigned to the specified T1 port on the card.

Output

This example shows the output when no parameters are specified:

```
rept-stat-t1
```

```

rlghncxa03w 05-01-04 07:01:08 EST  EAGLE5 33.0.0
LOC   T1PORT  PST      SST      AST
1203  1         IS-NR    Avail    BRGD MSTR
1203  2         IS-NR    Avail    BRGD SLAV
1203  3         IS-NR    Avail    -----
1203  7         OOS-MT   Unavail  -----
1207  1         IS-NR    Avail    -----
1207  2         IS-NR    Avail    -----
Command Completed.

```

```
;
```

This example shows the output when the `loc` parameter is specified:

```
rept-stat-t1:loc=1203
```

```

rlghncxa03w 05-01-04 07:01:08 EST  EAGLE5 33.0.0
LOC   T1PORT  PST      SST      AST
1203  1         IS-NR    Avail    BRGD MSTR

```

```

1203  2      IS-NR      Avail      BRGD SLAV
1203  3      IS-NR      Avail      -----
1203  7      OOS-MT     Unavail    -----
Command Completed.

```

;

This example shows the output when the `loc` and `t1port` parameters are specified:

```
rept-stat-t1:loc=1203:t1port=1
```

```

rlghncxa03w 05-01-04 07:01:08 EST  EAGLE5 33.0.0
LOC   T1PORT  PST      SST      AST
1203  1      IS-NR      Avail    BRGD MSTR
ALARM STATUS      = No Alarms.
UNAVAIL REASON    = --
SLK   TS  PST      SST      AST
A     1  IS-NR      Avail    ---
A1    2  IS-NR      Avail    ---
Command Completed.

```

;

```
rept-stat-t1:loc=1203:t1port=2
```

```

rlghncxa03w 05-01-04 07:01:08 EST  EAGLE5 33.0.0
LOC   T1PORT  PST      SST      AST
1203  2      IS-NR      Avail    BRGD SLAV
ALARM STATUS      = No Alarms.
UNAVAIL REASON    = --
Command Completed.

```

;

Legend

- **LOC**—Card location
- **T1PORT**—Number of the T1 port provisioned on the card in the specified location.
- **PST**—Primary state of the card. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the card. See [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the card. See [Possible Values for PST/SST/AST](#). The values *PARENT* and *PAIRED* refer to odd and even adjacent ports on the card that are provisioned in channel bridging mode.
- **ALARM STATUS**—Either "No Alarms" or current alarm number and text
- **UNAVAIL REASON**—Reason for the T1 port being unavailable
- **SLK**—Signaling link assigned to the T1 port
- **TS**—Timeslot assigned to the signaling link
- **PST**—Primary state of the signaling link. See [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the signaling link. See [Possible Values for PST/SST/AST](#).

- **AST**—Associated state of the signaling link. See [Possible Values for PST/SST/AST](#).

4.1.437 rept-stat-trbl

Use this command to display a summary report of all the device trouble notifications that are logged currently in the OAM's RAM storage area.

Parameters

display (optional)

Display type of alarms to be reported.

Range:

act

Display only active alarms

all

Display all alarms with no timestamps

inhb

Display only inhibited alarms

timestamp

Display all alarms with the date and time when the alarm was logged. Timestamps appear in the output only when the `display=timestamp` parameter is specified.

Default:

all

level (optional)

The alarm level of the alarms to be displayed

Range:

crit

majr

minr

Default:

All alarms are displayed

Example

```
rept-stat-trbl
rept-stat-trbl:level=majr
rept-stat-trbl:display=inhb
```

Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

Notes

None

Output

This example lists all devices that could appear. This example is to be used as a sample only: all devices and alarms cannot coexist in the system.

rept-stat-trbl

```

tekelecstp 16-03-29 10:31:06 EST EAGLE 46.3.0.0
  SEQN UAM AL DEVICE ELEMENT TROUBLE TEXT
  0002.0143 * CARD 1113 OAM System release GPL(s) not
approved
  0011.0176 * SECULOG 1116 Stdby security log - upload
required
  0002.0143 * CARD 1113 OAM System release GPL(s) not
approved
  0011.0176 * SECULOG 1116 Stdby security log - upload
required
  2353.0022 * CARD 1107 MCP Clock B for card failed,
Clock A normal
  3587.0048 * TERMINAL 1 Terminal failed
  0007.0110 * IMT SYSTEM Failure detected on one IMT
bus
  2343.0002 * GPL SYSTEM BPDCM Card is not running approved
GPL
  4321.0321 * XLIST X-LIST occupancy threshold
exceeded
  0045.0348 * SEAS SYSTEM SEAS is at min service limit
  0011.0176 * SECULOG 1116 Stdby security log -- upload
required
  4121.0398 * INP SYSTEM Local Subsystem
normal, card(s) abnormal
  2354.0516 * MEAS SYSTEM Degraded Mode - 1 card failed
  0050 1114 * HS CLOCK SYSTEM Clock selection mismatch
  1088.0539 * DLK 1106,A1 Ethernet Interface Down
  1089.0579 * CARD 1106 FC Network Unavailable
  3700.0536 * IP7 assoc1234567890 IP Connection Excess
Retransmits
  0021.0318 ** LSN lsn1 REPT-LKSTO: link set
prohibited
  0022.0318 ** LSN lsn2 REPT-LKSTO: link set
prohibited
  0023.0318 ** LSN lsn3 REPT-LKSTO: link set
prohibited
  0024.0236 ** SLK 1315,A ls11234567 REPT-LKF: not aligned
  0025.0236 ** SLK 1316,A ls11345678 REPT-LKF: not aligned
  0010.0318 ** LSN lsn4 REPT-LKSTO: link set
prohibited
  0021.0318 ** LSN lsn1 REPT-LKSTO: link set
prohibited
  0022.0318 ** LSN lsn2 REPT-LKSTO: link set
prohibited

```

```
0023.0318 ** LSN lsn3 REPT-LKSTO: link set prohibited
0024.0236 ** SLK 1315,A ls11234567 REPT-LKF: not aligned
0025.0236 ** SLK 1316,A ls11345678 REPT-LKF: not aligned
3540.0203 ** SLK 1201,A lsn1 REPT-LKF: lost data
3541.0203 ** SLK 1201,B lsn4 REPT-LKF: lost data
3542.0203 ** SLK 1202,A lsn2 REPT-LKF: lost data
3543.0203 ** SLK 1202,B lsn4 REPT-LKF: lost data
3544.0202 ** SLK 1203,A lsn3 REPT-LKF: HWP - too many link
interrupts
3545.0202 ** SLK 1203,B lsn4 REPT-LKF: HWP - too many link
interrupts
3589.0013 ** CARD 1103 SS7ANSI Card is isolated from the system
2358.0013 ** CARD 1111 MCP Card is isolated from the system
3590.0013 ** CARD 1115 OAM Card is isolated from the system
3590.0514 ** CARD 1115 EOAM Standby MASP is inhibited
0006.0108 ** IMT BUS A Major IMT failure detected
Card 1105, 1113, 1115
0012.0390 ** CARD 1109 HMUX Illegal Address Error
3591.0208 ** SLK 1101,A ls1 REPT-LKF: APF - lvl-2 T2 expired
3592.0208 ** SLK 1101,B ls2 REPT-LKF: APF - lvl-2 T2 expired
3593.0202 ** SLK 1102,B2 lsname489+ REPT-LKF: HWP -too many link
interrupts
3594.0236 ** SLK 1103,A ls3 REPT-LKF: not aligned
3595.0236 ** SLK 1103,B ls4 REPT-LKF: not aligned
3596.0084 ** DLK 1111,A MCP IP Connection Unavailable
0024.0236 ** SLK 1315,A ls11234567 REPT-LKF: not aligned
0025.0236 ** SLK 1316,A ls11345678 REPT-LKF: not aligned
0943.0318 ** LSN ls1 REPT-LKSTO: link set prohibited
0945.0318 ** LSN ls2 REPT-LKSTO: link set prohibited
0948.0318 ** LSN ls4 REPT-LKSTO: link set prohibited
1234.0082 ** FUSE PANEL 11xx Alarm in Fuse Panel
0134.0084 ** IP7 LONGSOCKETNAME1 IP Connection Unavailable
3537.0084 ** DLK 1215,A MCP IP Connection Unavailable
3537.0084 ** DSM 1315,A IP Connection Unavailable
5648.0382 ** E1PORT 1201,2 REPT-E1F:FAC-E1 LOF failure
0047.0392 ** SECURITY SYSTEM 1211 OA&M IP Security feature status is
OFF
1235 0114 ** IP TPS SYSTEM System IP TPS threshold exceeded
3684.0013 ** CARD 1305 SS7IPGW Card is isolated from the system
3688.0236 ** SLK 1203,A lslg2 REPT-LKF: not aligned
3692.0318 ** LSN e5e6 REPT-LKSTO: link set prohibited
1090.0576 ** FCS ALL FC Network Unavailable
3697.0539 ** ENET 1305,A Ethernet Interface Down
3698.0539 ** ENET 1305,B Ethernet Interface Down
3699.0539 ** ENET 1307,B Ethernet Interface Down
0917.0537 ** ENET 1112,B Ethernet error threshold exceeded
0189.0084 ** DLK 1104,A EROUTE IP Connection Unavailable
0150.0491 ** DCONN con1 Connection TPS exceed
0003.0313 *C DPC s-010-010-003 DPC is prohibited
0004.0313 *C DPC 010-010-004 DPC is prohibited
0005.0313 *C DPC ps-010-010-005 DPC is prohibited
0006.0313 *C DPC s-252-010-003 DPC is prohibited
0008.0313 *C DPC 252-010-004 DPC is prohibited
0009.0313 *C DPC 252-011-* DPC is prohibited
0019.0236 *C T1PORT 1301,1 REPT-T1F:FAC-T1 LOS failure
```

```

0028.0313 *C DPC      252-010-001      DPC is prohibited
0029.0308 *C SYSTEM                                     Node isolated due to SLK
failures
0036.0455 *C EIR SYSTEM                       EIR Subsystem is not available
3102.0435 *C LNP SYSTEM                       LNP Subsystem is disabled
0003.0313 *C DPC      s-010-010-003        DPC is prohibited
0004.0313 *C DPC      010-010-004        DPC is prohibited
0005.0313 *C DPC      ps-010-010-005       DPC is prohibited
0006.0313 *C DPC      s-252-010-003       DPC is prohibited
0008.0313 *C DPC      252-010-004        DPC is prohibited
0009.0313 *C DPC      252-011-*          DPC is prohibited
0019.0236 *C T1PORT  1301,1              REPT-T1F:FAC-T1   LOS failure
0028.0313 *C DPC      252-010-001        DPC is prohibited
0029.0308 *C SYSTEM                                     Node isolated due to SLK
failures
0036.0455 *C EIR SYSTEM                       EIR Subsystem is not available
3102.0435 *C LNP SYSTEM                       LNP Subsystem is disabled
0003.0313 *C DPC      s-010-010-003        DPC is prohibited
0004.0313 *C DPC      010-010-004        DPC is prohibited
0005.0313 *C DPC      ps-010-010-005       DPC is prohibited
0028.0313 *C DPC      252-010-001        DPC is prohibited
0006.0313 *C DPC      s-252-010-003       DPC is prohibited
0008.0313 *C DPC      252-010-004        DPC is prohibited
0009.0313 *C DPC      252-011-*          DPC is prohibited
2120.0058 *C CDT      1                   Critical customer trouble
detected
0029.0308 *C SYSTEM                                     Node isolated due to SLK
failures
0040.0128 *C CLOCK SYSTEM                     All clocks have failed
2109.0331 *C SCCP SYSTEM                     SCCP is not available
2110.0292 *C GLS SYSTEM                      GLS is not available
0009.0041 *C LSMS Connection A1              LNP DB Maintenance Required
0056.0356 *C LSMS SYSTEM                     LSMS unavailable
0041.0197 *C CLOCK SYSTEM                     All High Speed Clocks have
failed
0056.0356 *C LSMS SYSTEM                     LSMS unavailable
0041.0197 *C CLOCK SYSTEM                     All High Speed Clocks have
failed
3102.0435 *C LNP SYSTEM                       LNP Subsystem is disabled
3539.0181 *C NDC SYSTEM                       NDC Subsystem is not available
0036.0455 *C EIR SYSTEM                       EIR Subsystem is not available
0019.0236 *C T1PORT  1301,1              REPT-T1F:FAC-T1   LOS failure
4521.0370 *C MPS A                           Critical Platform Failure(s)
0045.0469 *C EROUTE SYSTEM                   All STC cards Unavailable
0036.0455 *C EIR SYSTEM                       EIR Subsystem is not available
0915.0541 *C RTD SYSTEM                       MSU cksum error threshold
exceeded
0002.0520 *C                                  Frame power usage reached LVL3
0056.0528 *C GFLEX SERVICE                   Service is not available
0056.0528 *C GPORT SERVICE                   Service is not available
0056.0528 *C MNP SERVICE                     Service is not available
0044.0534 *C RTX      001-101-001          RTX is prohibited
0916.0565 *C ATINPQ SYSTEM                   ATINPQ Subsystem is not
available
0150.0483 *C DEIR SYSTEM                       DEIR System is not available

```

```
0160.0120 *C ENUM SYSTEM          ENUM System is not available
7470.0630 ** TA - throt2          Throttle Threshold - exceeded
```

```
Command Completed.
```

```
;

rept-stat-trbl:display=act:level=majr
```

```
rlghncxa03w 02-03-07 09:50:17 EST  EAGLE 30.0.0
Searching devices for alarms...
```

```
;

rlghncxa03w 02-03-07 09:50:17 EST  EAGLE 30.0.0
SEQN UAM  AL DEVICE      ELEMENT      TROUBLE TEXT
3540.0203 ** SLK 1201,A  lsn1        REPT-LKF: lost data
3541.0203 ** SLK 1201,B  lsn4        REPT-LKF: lost data
3542.0203 ** SLK 1202,A  lsn2        REPT-LKF: lost data
3543.0203 ** SLK 1202,B  lsn4        REPT-LKF: lost data
3544.0202 ** SLK 1203,A  lsn3        REPT-LKF: HWP -too many link
interrupts
3545.0202 ** SLK 1203,A1 lsn4        REPT-LKF: HWP -too many link
interrupts
3545.0202 ** SLK 1203,B2 lsn4+      REPT-LKF: HWP -too many link
interrupts
0022.0318 ** LSN lsn2          REPT-LKSTO: link set prohibited
0023.0318 ** LSN lsn3          REPT-LKSTO: link set prohibited
0010.0318 ** LSN lsn4          REPT-LKSTO: link set prohibited
Command Completed.
```

```
;

rept-stat-trbl:display=inhb:level=majr
```

```
rlghncxa03w 02-03-07 09:50:17 EST  EAGLE 30.0.0
Searching devices for alarms...
```

```
;

rlghncxa03w 02-03-07 09:50:17 EST  EAGLE 30.0.0
SEQN UAM  AL DEVICE      ELEMENT      TROUBLE TEXT
0021.0318I** LSN lsn1        REPT-LKSTO: link set prohibited
Command Completed.
```

This example shows output when the `display=timestamp` parameter is specified.

```
rept-stat-trbl:display=timestamp
```

```
rlghncxa03w 04-04-07 09:50:17 EST  EAGLE 31.6.0
Searching devices for alarms...
```

```
;

tekelecstp 04-04-07 09:50:17 EST  EAGLE 31.6.0
SEQN UAM  AL DEVICE      ELEMENT      TROUBLE TEXT
0003.0048 * TERMINAL    1          Terminal failed
```

```
04-1-27 15:19:25
0004.0048 * TERMINAL 2 Terminal failed
04-1-27 15:19:25
0005.0048 * TERMINAL 4 Terminal failed
04-1-27 15:19:25
0006.0002 * GPL SYSTEM EOAM Card is not running approved
GPL
04-1-27 15:19:25
0007.0176 * SECULOG 1116 Stdby security log -- upload
required
04-1-27 15:19:25
0008.0013 ** CARD 1103 VSCCP Card is isolated from the
system
04-15-27 15:19:25
0009.0438 *C SYSTEM Degraded Mode, Invalid OAM HW
config
04-1-27 15:19:27
0010.0331 *C SCCP SYSTEM SCCP is not available
04-1-27 15:19:25
Command Completed.
```

;

rept-stat-trbl

eagle2 16-03-03 14:17:40 EST EAGLE5 46.3.0.0.0

Searching devices for alarms...

;

```
eagle2 16-03-03 14:17:40 EST EAGLE5 46.3.0.0.0
SEQN UAM AL DEVICE ELEMENT TROUBLE TEXT
7374.0048 * TERMINAL 3 Terminal failed
7375.0048 * TERMINAL 4 Terminal failed
7376.0048 * TERMINAL 5 Terminal failed
7377.0048 * TERMINAL 6 Terminal failed
7378.0048 * TERMINAL 7 Terminal failed
7379.0048 * TERMINAL 8 Terminal failed
7380.0048 * TERMINAL 9 Terminal failed
7381.0048 * TERMINAL 10 Terminal failed
7382.0048 * TERMINAL 11 Terminal failed
7383.0048 * TERMINAL 12 Terminal failed
7384.0048 * TERMINAL 13 Terminal failed
7385.0048 * TERMINAL 15 Terminal failed
7386.0048 * TERMINAL 16 Terminal failed
5088.0176 * SECULOG 1114 Stdby security log -- upload
required
8546.0632 * TA - throt2 Alarm Threshold - exceeded
7387.0013 ** CARD 1215 IPSG Card is isolated from the
system
7388.0441 ** CARD 1105 SCCPHC Incorrect MBD - CPU
HW VERIFICATION CODE: 180
7389.0084 ** DLK 1105,A SCCP IP Connection Unavailable
7391.0084 ** DLK 1105,B SCCP IP Connection Unavailable
7392.0539 ** ENET 1215,A Ethernet Interface Down
7393.0539 ** ENET 1105,A Ethernet Interface Down
7394.0539 ** ENET 1105,B Ethernet Interface Down
```



```
7395.0313 *C DPC      11007      DPC is prohibited
7396.0529 *C GPORT SERVICE      Service is disabled
```

```
Command Completed.
```

```
;
```

Legend

In the AL column:

- *—Minor Alarm
- **—Major Alarm
- *C—Critical Alarm
- I—Inhibited Alarm

Related Topics

- [act-alm-trns](#)
- [dact-alm-trns](#)
- [rept-stat-alm](#)
- [rept-stat-clk](#)
- [rls-alm](#)
- [rtrv-obit](#)
- [rtrv-trbl](#)

4.1.438 rept-stat-trm

Use this command to display the status of the terminal ports. The device primary, secondary, and associated state information is displayed along with the terminal identification number.

Parameters

trm (optional)

The ID of the terminal port that is to be reported.

Range:

1 - 40

Default:

Display status of all terminal ports

Example

```
rept-stat-trm
```

```
rept-stat-trm:trm=5
```

```
rept-stat-trm:trm=17
```

Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

Notes

None

Output

This example shows output when the IP User Interface is not turned on:

```
rept-stat-trm
```

```
tekelecstp 03-03-31 13:02:16 EST EAGLE 30.0.0
TRM  PST          SST          AST
1    IS-NR         Active       -----
2    IS-NR         Active       -----
3    IS-NR         Active       -----
4    IS-NR         Active       -----
5    IS-NR         Active       -----
6    IS-NR         Active       -----
7    IS-NR         Active       -----
8    IS-NR         Active       -----
9    IS-NR         Active       -----
10   IS-NR         Active       -----
11   IS-NR         Active       -----
12   IS-NR         Active       -----
13   IS-NR         Active       -----
14   IS-NR         Active       -----
15   IS-NR         Active       -----
16   IS-NR         Active       -----
Command Completed.
```

```
;
```

This example shows output when the IP User Interface is turned on and 3 IPSM cards are in the system:

```
rept-stat-trm
```

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 31.3.0
TRM  PST          SST          AST
1    IS-NR         Active       -----
2    IS-NR         Active       -----
3    IS-NR         Active       ALMINH
4    IS-NR         Active       -----
5    OOS-MT-DSBLD Manual       -----
6    IS-NR         Active       -----
7    IS-NR         Active       -----
8    IS-NR         Active       -----
9    IS-NR         Active       -----
10   IS-NR         Active       -----
11   IS-NR         Active       ALMINH
12   IS-NR         Active       -----
13   IS-NR         Active       -----
14   OOS-MT         Fault        -----
```

```

15  IS-NR      Active      -----
16  IS-NR      Active      -----
17  IS-NR      Active      -----
18  IS-NR      Active      -----
19  IS-NR      Active      -----
20  OOS-MT-DSBLD Manual      -----
21  IS-NR      Idle        -----
22  IS-NR      Idle        -----
23  IS-NR      Idle        -----
24  IS-NR      Idle        -----
25  IS-NR      Active      -----
26  IS-NR      Active      -----
27  IS-NR      Active      -----
28  IS-NR      Active      -----
29  IS-NR      Active      -----
30  IS-NR      Active      -----
31  IS-NR      Active      -----
32  IS-NR      Active      -----
33  IS-NR      Active      -----
34  IS-NR      Active      -----
35  IS-NR      Active      -----
36  IS-NR      Active      -----
37  IS-NR      Active      -----
38  IS-NR      Active      -----
39  IS-NR      Active      -----
40  IS-NR      Active      -----

```

Command Completed.

;

```
rept-stat-trm:trm=5
```

```

rlghncxa03w 04-01-07 09:50:17 EST  EAGLE 31.3.0
TRM  PST          SST          AST
5    IS-NR      Active      -----

```

Command Completed.

;

Legend

- **TRM**—ID of the terminal port
- **PST**—Primary state of the terminal ports. Possible values are described in [Possible Values for PST/SST/AST](#).
- **SST**—Secondary state of the terminal ports. Possible values are described in [Possible Values for PST/SST/AST](#).
- **AST**—Associated state of the terminal ports. Possible values are described in [Possible Values for PST/SST/AST](#).

Related Topics

- [act-echo](#)
- [alw-trm](#)
- [chg-trm](#)

- [dact-echo](#)
- [inh-trm](#)
- [rmv-trm](#)
- [rst-trm](#)
- [rtrv-trm](#)

4.1.439 rept-stat-tstslk

Use this command to generate a report of the status of the MTP signaling links currently under test.

Parameters

link (optional)

SS7 signaling links. The SS7 signaling link that is being tested.

Synonym:

port

Range:

a, b, a1 - a3, b1 - b31

Not all card types support all `link` parameter values.

See [Table A-1](#) for valid `link` parameter range values for each type of card that can have assigned signaling links.

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

loopback (optional)

Loopback test type.

Range:

sltc

lxvr

oam

line

payload

Example

```
rept-stat-tstslk
```

```
rept-stat-tstslk:loc=1201
rept-stat-tstslk:loc=1203:link=a
rept-stat-tstslk:loopback=lxvr
```

Dependencies

The card location specified in the `loc` parameter must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The signaling link specified in the `link` parameter must be equipped.

2373 E2373 Cmd Rej: Link is unequipped in the database

If the `link` parameter is specified, the `loc` parameter must be specified.

2903 E2903 Cmd Rej: LOC and PORT parameter combination must be specified

The signaling link specified in the `link` parameter must be an SS7 signaling link.

2917 E2917 Cmd Rej: Link must be SS7 to execute command

This command cannot be entered for E5-ENET-B cards that are running the IPGHC or IPSP application, or that have IPGHC or IPSP-M3UA links.

3837 E3837 Cmd Rej: Command not valid for IPGHC

The card location specified in the `loc` parameter cannot be reserved by the system.

2376 E2376 Cmd Rej: Specified LOC is invalid

This command cannot be entered during upgrade.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

Notes

None

Output

If no parameters are specified, all links in test are displayed.

If only the `loc` parameter is specified, all links in test on the specified card are displayed.

If the `loc` and `link` parameters are specified, the specified link on the specified card is displayed.

If the `loopback` parameter is specified, all links in the specified type of loopback test are displayed.

```
rept-stat-tstslk
```

```
tekelecstp 04-01-07 10:05:28 EST EAGLE 31.3.0
SLK          LOOPBACK  MAX-TIME  TEST-TIME
1102,A1      SLTC       01:00:00  00:04:01
1201,A       OAM        02:00:00  01:04:11
1203,A       LXVR       00:50:00  00:22:21
1203,B       LXVR       24:00:00  20:04:01
```

```

1208,A      PAYLOAD  01:10:00  01:05:22
1211,A      LINE     21:30:00  00:14:01
;

```

Legend

- **SLK**—Card and signaling link that are being tested.
- **LOOPBACK**—Type of loopback test being run.
- **MAX-TIME**—Maximum length of time for the test to run, as specified in the `tst-slk` command `time` parameter.
- **TEST-TIME**—The length of time that the test has been running when this command was entered.

Related Topics

- [tst-slk](#)

4.1.440 rept-stat-user

Use this command to show which users are logged into the system. The command shows user names, terminal identification numbers, the time that the last valid command was issued, and the current state of the last command entered.

Parameters

This command has no parameters.

Example

```
rept-stat-user
```

Dependencies

None

N/A N/A

Notes

None

Output

```
rept-stat-user
```

```

e5oam 09-04-03 17:25:57 MST  EAGLE 41.0.0
REPT STAT USER COMPLD
USER ID          TERM #  IDLE SINCE      COMMAND
STATE
  eagle              3    02-01-03 17:19:04  rept-stat-applsock
IDLE
  eagle              6    02-01-03 17:25:57  rept-stat-user
PROCESSING
REPORT COMPLETED

```

Legend

- **USER ID**—The user ID of the users logged onto the system.
- **TERM #**—The terminal port to which the user's terminal is connected.
- **IDLE SINCE**—The date and time of day that the user last entered a command.
- **COMMAND**—The last command the user entered.
- **STATE**—The state of the command the user last entered.

Related Topics

- [act-user](#)
- [chg-pid](#)
- [chg-user](#)
- [dact-user](#)
- [dlt-user](#)
- [ent-user](#)
- [login](#)
- [logout](#)
- [rtrv-secu-user](#)
- [rtrv-user](#)

4.1.441 rept-stat-xlist

Use this command to report statistics related to the storage of x-list entries. X-list entries reside in the routing table and are dynamically created for individual members of clusters whenever one or more routes to that cluster member become more restrictive than the corresponding routes to the cluster.

The following information is reported:

- The number of routing table positions reserved for x-list entries
- The current number of x-list entries
- The percentage of space in the x-list reserved area currently in use
- The percentage of x-list space that must be in use before an alarm is issued

Parameters

This command has no parameters.

Example

```
rept-stat-xlist
```

Dependencies

The Cluster Routing and Management Diversity (CRMD) feature must be turned on before using this command.

2581 E2581 Cmd Rej: CRMD feature must be ON

Notes

The statistics reported by this command are those gathered during periodic polling by the maintenance subsystem. They might differ slightly from the instantaneous values at the time the command was issued.

The following rules are used to compute the *Current X-LIST occupancy* percentage value that is displayed in the output report:

- The percentage value that is displayed is computed as follows:
[(current x-list entries) / (allocated x-list space)] * 100
- Non-integer percentages will be rounded up to the next highest integer (for example, 23.5% becomes 24%), with the exception of the situation described in the next rule.
- 100% is not displayed until the current *X-LIST* entries value exactly equals the allocated X-LIST space (for example, 99.1% is not rounded up to 100%).

Output

```
rept-stat-xlist
```

```
rlghncxa03w 04-02-18 03:32:42 EST  EAGLE 31.3.0
Allocated X-LIST space      = 500
Current X-LIST entries     = 156
Current X-LIST occupancy   = 31 % (see "Notes")
X-LIST occupancy threshold = 80 %
;
```

Related Topics

- [chg-stpopts](#)
- [rept-stat-cluster](#)
- [rtv-stpopts](#)

4.1.442 rls-alm

Use this command to silence audible alarms. Entering this command also causes the alarm status on terminals to stop blinking (though they continue showing an alarm condition).

Parameters

lv1 (optional)

The alarm level.

Range:

crit

majr

minr**Default:**

All alarms are cleared

Example

```
rls-alm
rls-alm:lvl=crit
```

Dependencies

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

Notes

This command has no effect on visual alarm indicators on the fuse and alarm panel (FAP) or on the cabinet side panel.

Any alarms that occur after the execution of this command activate audible alarms again.

Output

```
rls-alm

rlghncxa03w 04-01-07 09:27:24 EST  EAGLE 31.3.0
rls-alm
Command entered at terminal #8.
;
```

Related Topics

- [act-alm-trns](#)
- [dact-alm-trns](#)
- [rept-stat-alm](#)
- [rept-stat-clk](#)
- [rept-stat-trbl](#)
- [rtrv-obit](#)
- [rtrv-trbl](#)

4.1.443 rmv-card

Use this command to change the state of the card to Out of Service - Maintenance Disabled (OOS-MT-DSBLD), enabling a technician to test a LIM or E5-TSM card or physically remove it from the shelf.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

Refer to *Installation Guide* for card location information.

force (optional)

This parameter is required if the card is the last GLS or SCCP card.

Range:

yes

no

Default:

no

Example

```
rmv-card:loc=1101
```

```
rmv-card:loc=1201:force=yes
```

Dependencies

The following card locations are not valid for this command: 1113, 1114, 1115, 1116, 1117, 1118, and all xy09 and xy10 locations (where x is the frame and y is the shelf).

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The shelf and card must be equipped.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

If the card is a LIM, all signaling links assigned to the card must be placed out of service before the command can be entered.

2631 E2631 Cmd Rej: Link must be cancelled before executing this command

The *force* parameter is required to force the last GLS (if the Integrated GLS feature is not turned ON) or SCCP card out of service.

2371 E2371 Cmd Rej: Force parameter required

If the card has active TCP/IP links, all TCP/IP data links assigned to it must be placed out of service.

2631 E2631 Cmd Rej: Link must be cancelled before executing this command

Notes

The function of this command is the same as the `inh-card` command.

When this command is executed, the card boots and enters the OOS-MT-DSBLD state. It has no affect if the card is already OOS-MT-DSBLD.

The command is rejected if you attempt to inhibit a LIM that has active signaling links. The links must be cancelled, using the `dact-slk` command, before the command is accepted.

Inhibiting a card running the VSCCP application affects GTT service. SCCP messages requiring global title translation are not routed, and an error message is returned to the originator.

Inhibiting an E5-TSM running the GLS application has no immediate affect on the system. These cards are used only when loading gateway screening to the LIMs.

The command is rejected if you attempt to inhibit a card that has active TCP/IP data links. The TCP/IP data links must be cancelled, using the `canc-dlk` command, before the command is accepted.

Output

```
rmv-card:loc=1101
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0  
Card has been inhibited.  
;
```

Related Topics

- [dlt-card](#)
- [ent-card](#)
- [init-card](#)
- [rept-stat-card](#)
- [rtv-card](#)

4.1.444 rmv-imt

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to remove the IMT bus from service.

Caution:

Use this command only when directed by the Customer Care Center.

Parameters

bus (mandatory)

The IMT bus to be inhibited.

Range:

a

b

Example

```
rmv-imt:bus=a
```

Dependencies

The alternate IMT bus must be in-service normal (IS-NR) in order for the specified bus to be inhibited.

2738 E2738 Cmd Rej: Can not inhibit IMT bus - alternate bus is in abnormal state

This command cannot be entered during an IMT Fault Isolation Test.

3043 E3043 Cmd Rej: IMT test in progress

Notes

Cards that are not connected to the other IMT bus will reinitialize.

All traffic is rerouted to the other IMT bus.

The function of this command is the same as the `inh-imt` command.

Output

```
rmv-imt:bus=a
```

```
rlghncxa03w 04-01-07 09:22:31 EST EAGLE 31.3.0
* 0014.0203 * SLK 1205,A nc00027 slk not aligned
```

```
rlghncxa03w 04-01-07 09:22:31 EST EAGLE 31.3.0
Inhibit IMT Bus A command issued
```

```
rlghncxa03w 04-01-07 09:22:31 EST EAGLE 31.3.0
* 00120.1203 * SLK 1205,B nc00027 slk not aligned
```

```
rlghncxa21w 04-01-07 09:22:31 EST EAGLE 31.3.0
0016.0096 CARD 1205 SS7ANSI card has been reloaded
```

```
rlghncxa21w 04-01-07 09:22:31 EST EAGLE 31.3.0
0017.0236 SLK 1205,A nc00027 slk is attempting to align
```

```
rlghncxa21w 04-01-07 09:22:31 EST EAGLE 31.3.0
0018.0236 SLK 1205,B nc00027 slk is attempting to align
```

```
rlghncxa21w 04-01-07 09:22:32 est EAGLE 31.3.0
```

```
0019.0098 imt bus a imt inhibited

rlghncxa21w 04-01-07 09:22:32 est EAGLE 31.3.0
* 0020.0107 * imt bus a minor imt failure detected

rlghncxa21w 04-01-07 09:22:32 EST EAGLE 31.3.0
** 0021.0108 ** IMT BUS A major imt failure detected

rlghncxa21w 04-01-07 09:22:33 EST EAGLE 31.3.0
0022.0026 CARD 1205 SS7ANSI clocks a and b for card normal
;
```

Related Topics

- [clr-imt-stats](#)
- [conn-imt](#)
- [disc-imt](#)
- [rept-imt-lvl1](#)
- [rept-imt-lvl2](#)
- [rept-stat-imt](#)
- [rst-imt](#)

4.1.445 rmv-trm

Use this command to set the primary state of a serial port to OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled), and to set the secondary state to MANUAL. The serial port is not available to perform service functions. There is no outgoing traffic from the serial port; all incoming traffic is ignored.

Parameters

trm (mandatory)

The ID of the serial port to be inhibited.

Range:

1 - 40

force (optional)

This parameter forces the removal of the terminal, even if it is the last in-service SEAS terminal available.

Range:

yes

no

Default:

no

Example

```
rmv-trm:port=5
```

```
rmv-trm:trm=1:force=yes
```

Dependencies

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The IP User Interface feature must be enabled before terminal ports 17 through 40 can be specified as values for the `trm` parameter.

2365 E2365 Cmd Rej: TELNET Feature must be activated first

The `force=yes` parameter must be specified to inhibit the last in-service SEAS terminal.

4478 E4478 Cmd Rej: Force must be specified to inhibit the last SEAS terminal

Notes

When removing a terminal that has already been removed, a warning message is echoed to the scroll area but no action is taken.

MTT 2731 was deleted for 42.0, PR 158511.

Output

```
rmv-trm
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0  
Inhibit message sent to terminal
```

```
;
```

```
rmv-trm:trm=17:force=yes
```

```
tekelecstp 07-01-11 13:42:16 EST EAGLE 37.5.0  
Inhibit message sent to terminal
```

```
;
```

Related Topics

- [act-echo](#)
- [alw-trm](#)
- [canc-echo](#)
- [chg-trm](#)
- [dact-echo](#)
- [inh-trm](#)
- [rept-stat-trm](#)
- [rst-trm](#)
- [rtrv-trm](#)

4.1.446 rst-dstn

Use this command to request that the circular routing status for the specified destination be reset (turned OFF). The destination that is specified can be a full point code (FPC), a cluster point code (for example, *ni-nc-**), or an x-list point code. The system clears the circular routing status for the specified destination and then clears any outstanding circular routing alarm for the destination.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

dpc (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

p-, *000-255*, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (mandatory)

dpci (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, *0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

dpcn (mandatory)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (*members*) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfnti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*, *p-*, *ps*

nnnnn—*0-16383*

gc—*aa-zz*

m1-m2-m3-m4—*0-14* for each member; values must sum to 14

dpcn24 (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, *000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—*000-255*

ssa—*000-255*

sp—*000-255*

dpcn16 (mandatory)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, *000---127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix---**p*

*un---**000---127*

*sna---**000---15*

*mna---**000---31*

force (optional)

This parameter specifies whether to reset all dynamic data for the specified route in the Route table to the initial values.

Range:

yes
reset the data

no
do not reset the data

Default:

no

Example

```
rst-dstn:dpc=1-2-*  
rst-dstn:dpc=20-2-5  
rst-dstn:dpc=p-20-2-5  
rst-dstn:dpc=20-2-5:force=yes  
rst-dstn:dpcn16=125-2-10
```

Dependencies

The specified DPC must be either provisioned or an x-list entry.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

The destination address must be a full point code or a cluster point code specified as *ni-nc-**. A DPC as *ni-nc-*** or *ni-nc-**** cannot be specified.

2886 E2886 Cmd Rej: DSTN address must be a full, network or cluster PC

Notes

None.

Output

```
rst-dstn:dpc=20-2-5:force=yes  
  
rlghncxa03w 09-03-29 16:40:40 EST  EAGLE 41.0.0  
Destination reset command sent to SNM (scroll area)  
  
rlghncxa03w 09-03-29 16:40:40 EST  EAGLE 41.0.0  
Command Completed.  
;  
  
rst-dstn:dpcn16=1-14-0  
  
tekelecstp 02-01-13 00:58:40 MST  UNKNOWN 45.1.0-64.69.1  
rst-dstn:dpcn16=1-14-0  
Command entered at terminal #17.  
;  
  
Command Accepted - Processing
```

```
tekelecstp 02-01-13 00:58:40 MST UNKNOWN 45.1.0-64.69.1
Info: DPC is not in circular routing state.
Reset destination command sent to all MTP cards.
;
tekelecstp 02-01-13 00:58:40 MST UNKNOWN 45.1.0-64.69.1
Command Completed.
;
Command Executed
```

Related Topics

- [chg-stpopts](#)
- [rept-stat-cluster](#)
- [rept-stat-dstn](#)
- [rtrv-stpopts](#)

4.1.447 rst-imt

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to change the state of the specified IMT bus from OOS-MT-DSBLD (out of service maintenance disabled) to IS-NR (in service normal), if the command is successful. If the command fails, the status is IS-ANR (in service abnormal).

Parameters

bus (mandatory)

The IMT bus to be returned to service.

Range:

a

b

Example

```
rst-imt:bus=a
```

Dependencies

None

N/A N/A

Notes

The function of this command is the same as the `alw-imt` command.

This command returns an inhibited IMT bus to service.

Output

```
rst-imt:bus=a
```

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0  
Allow IMT Bus A command issued.
```

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0  
0100.0097    IMT   BUS A          IMT allowed
```

```
;
```

Related Topics

- [clr-imt-stats](#)
- [conn-imt](#)
- [disc-imt](#)
- [rept-imt-lvl1](#)
- [rept-imt-lvl2](#)
- [rept-stat-imt](#)
- [rmv-imt](#)

4.1.448 rst-trm

Use this command to return the specified serial port to the state IS-NR (in-service-normal) from the state OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) if the command is successful. If the command is not successful, the terminal's state is OOS-MT (Out-of-Service-Maintenance).

Parameters

trm (mandatory)

ID of the serial port to be put into service.

Range:

1 - 40

Example

```
rst-trm:trm=5
```

Dependencies

No other action command can be in progress when this command is entered.

N/A N/A

The IP User Interface feature must be enabled before terminal ports 17 through 40 can be specified in the `trm` parameter.

N/A N/A

The terminal specified by the `trm` parameter must be equipped.

2372 E2372 Cmd Rej: Terminal is not equipped

Anyone logged in to the terminal specified by this command is logged off when this command is executed. For the user to continue working on the specified terminal, the user must log on to that terminal again.

N/A N/A

An IPSM card must be provisioned for the specified SEAS terminal before this command can be entered.

4472 E4472 Cmd Rej: The IP Addr of E5-IPSM corresponding to SEAS Trm must be set

The SEAS Over IP feature must be turned on before this command can be entered for a SEAS terminal.

4453 E4453 Cmd Rej: SOIP Feature must be ON

If the SEAS terminal is auto-inhibited, then this command cannot be entered.

4617 E4617 Cmd Rej: SEAS Terminal is Auto-Inhibited

The terminal specified by the `trm` parameter cannot be configured as `type=none` (see the `chg-trm` command).

2156 E2156 Cannot allow terminal configured as type=none

Notes

The function of this command is the same as the `alw-trm` command.

When you attempt to return to service a terminal already in service, a warning message is echoed to the scroll area but no action is taken.

Output

```
rst-trm:trm=12
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0  
Allow message sent to terminal
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0  
1062.0046      TERMINAL      12      Terminal Enabled
```

```
;
```

Related Topics

- [act-echo](#)
- [alw-trm](#)
- [canc-echo](#)
- [chg-trm](#)
- [dact-echo](#)
- [inh-trm](#)
- [rept-stat-trm](#)

- [rmv-trm](#)
- [rtrv-trm](#)

4.1.449 rtrv-acg-mic

Use this command to display the values of ACG controls assigned to certain queries. The control can apply to all queries or to specific query services and called party digits.

Parameters

dgts (optional)

Digits

Range:

3 digits, 6 - 10 digits

Valid values are 000-999, 000000-9999999999

serv (optional)

Query service

Range:

ain

in

type (optional)

Type of control

Range:

all

sd

Example

Display all MICs:

```
rtrv-acg-mic
```

Display the MIC(s) that apply to particular services and digits:

```
rtrv-acg-mic:type=sd
```

Display the MIC(s) that apply to AIN queries:

```
rtrv-acg-mic:serv=ain
```

Display the MIC(s) that apply to IN queries for 919-460-xxxx:

```
rtrv-acg-mic:serv=in:dgts=919460
```

Dependencies

If the `type=all` parameter is specified, then the `serv` and `dgts` parameters cannot be specified.

3057 E3057 Cmd Rej: Parameters SERV and DGTS are not allowed for TYPE = ALL

The `dgts` parameter value must be specified as 3 digits or 6-10 digits.

3064 E3064 Cmd Rej: DGTS parameter must be 3 or 6-10 digits

The LNP feature must be turned on before this command can be entered.

3009 E3009 Cmd Rej: LNP feature must be ON

Notes

None

Output

```
rtrv-acg-mic:type=sd

rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
TYPE=ALL
ND INTVL AINTVL DRTN
6 4 7 8
TYPE=SD
DGTS SERV INTVL AINTVL DRTN
704461 AIN - 8 7
919460 IN 6 - 7
9194602132 AIN - 7 8
9194602132 IN 4 - 8
919461 IN 6 - 7

ACG MIC table is (11 of 256) 4% full of type SD
RTRV-ACG-MIC: MASP A - COMPLTD
;
```

This example shows how the memory space accounting command completion response is used for `type=all`:

```
rtrv-acg-mic:type=all

rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
TYPE=ALL
ND INTVL AINTVL DRTN
6 4 7 8
TYPE=SD
DGTS SERV INTVL AINTVL DRTN
919460 IN 6 - 7
9194602132 IN 4 - 8

ACG MIC table is (5 of 256) 2% full of type SD
RTRV-ACG-MIC: MASP A - COMPLTD
;
```

Legend

- **AINTVL**—New AIN interval index
- **DGTS**—Digits
- **DRTN**—New duration index
- **INTVL**—New IN interval index
- **ND**—New number of digits
- **SERV**—Query service

Related Topics

- [chg-acg-mic](#)
- [dlt-acg-mic](#)
- [ent-acg-mic](#)
- [rept-stat-lnp](#)

4.1.450 rtrv-acg-noc

Use this command to display the definitions of node overload levels. The definition is comprised of the threshold LNP query rates for node overload levels and the values for the Automatic Call Gappings (ACG) to be sent when at the overload level.

Parameters**lvl (optional)**

Overload level

Range:

1 - 10

Example

```
rtrv-acg-noc
rtrv-acg-noc:lvl=3
```

Dependencies

The ACG NOC table must be accessible.

3053 E3053 Cmd Rej: Failed reading ACG NOC table

The LNP feature must be turned on before this command can be entered.

3009 E3009 Cmd Rej: LNP feature must be ON

Notes

None

Output

This example displays all defined overload levels:

```
rtrv-acg-noc
```

```
rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
LVL QR          AND  IND  INTVL  DRTN
3   600000      10  6   3     6
4   750000      6   6   5     7
10  2147483647  10  10  15    13
RTRV-ACG-NOC: MASP A - COMPLTD
```

```
;
```

This example displays overload level 3:

```
rtrv-acg-noc:lvl=3
```

```
rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
LVL QR          AND  IND  INTVL  DRTN
3   600000      10  10  3     6
RTRV-ACG-NOC: MASP A - COMPLTD
```

```
;
```

Legend

- **LVL**—Overload level
- **QR**—Query rate
- **AND**—AIN number of digits
- **IND**—IN number of digits
- **INTVL**—Interval index
- **DRTN**—Duration index

Related Topics

- [chg-acg-noc](#)
- [dlt-acg-noc](#)
- [ent-acg-noc](#)
- [rept-stat-lnp](#)

4.1.451 rtrv-ainpopts

Use this command to retrieve AINP-specific options.

Parameters

This command has no parameters.

Example

```
rtrv-ainpopts
```


Dependencies

The AINPOPTS table must be accessible.

N/A N/A

None.

N/A N/A

Output

If the RNAI or RNAIV option is not provisioned, then the RNAI mnemonic default value is displayed. If the RNAI or RNAIV option is provisioned, then the RNAI mnemonic string for the option is displayed.

If the RNP or RNPV option is not provisioned, then the RNP mnemonic default value is displayed. If the RNP or RNPV option is provisioned, and the RNPV option can be set using RNP, then the RNP mnemonic string for the option is displayed. If the RNPV option cannot be provisioned using RNP, then the RNPV numerical value is displayed.

Each DIALPFX and DIALNAI option is displayed with its associated DLTPFX and SNAI option, respectively.

If the NEC option is not provisioned, then the default is displayed.

If the LNPSNAI, LNPOGLRNNAI, LNPOGDNNAI, LNPSUBDIGLEN, LNPATLDIGLEN, LNPSPORT, or LNPENTPREF option is not provisioned, then the default value is displayed.

This example shows output with default AINP options.

```
rtrv-ainpopts
```

```
rlghncxa03w 15-07-28 15:35:05 EST EAGLE 46.3.0
AINP OPTIONS
-----
NEC          = NONE
RNAI         = FRMSG
RNP          = E164
RFMT         = RNDN
SPRESTYPE   = RRWODGTS
SPORTTYPE    = NONE
DEFRN       = NONE

LNPSNAI      = INC
LNPOGLRNNAI  = INC
LNPOGDNNAI   = INC
LNPSUBDIGLEN = 7
LNPATLDIGLEN = 10
LNPSPORT     = NONE
LNPENTPREF   = RN

DIALPFX      DLTPFX
-----
DIALNAI      SNAI
```

```

    ---          ----
;

```

This example shows output with some AINP options provisioned.

```
rtrv-ainpopts
```

```

rlghncxa03w 15-07-28 15:35:05 EST EAGLE 46.3.0
AINP OPTIONS
-----
NEC          = ABC1D
RNAI         = NATL
RNP          = E212
RFMT         = CCRNDN
SPRESTYPE   = RRWDGTS
SPORTTYPE   = IS41
DEFRN       = ABC1

LNPSNAI     = INC
LNPOGLRNNAI = INC
LNPOGDNNAI  = NATL
LNPSUBDIGLEN = 7
LNPATLDIGLEN = 10
LNPSPORT    = IS41
LNPENTPREF  = GRN

DIALPFX     DLTPFX
-----
DIALNAI     SNAI
---         ----
1           INTL
;

```

Legend

- **DEFRN**—Default Routing Number
- **DIALNAI**—Dialed Party Number Nature of Address Indicator
- **DIALPFX**—Dialed Party Number Prefix
- **DLTPFX**—Delete Prefix
- **NEC**—National Escape Code
- **RFMT**—Routing Address Format
- **RNAI**—Nature of Address Indicator for the Destination Routing Address
- **RNAIV**—Nature of Address Indicator Numeric Value for the Destination Routing Address
- **RNP**—Numbering Plan for the Destination Routing Address
- **RNPV**—Numbering Plan Numeric Value for the Destination Routing Address
- **SNAI**—Service Nature of Address Indicator

- **SPORTTYPE**—Service Portability Type
- **SPRESTYPE**—AINP option to send a "Return Results with digits" message or a "Return Results without digits" message when NPREQ messages are received for AINP services, the DN digits match, and the HLR ID is present
- **LNPSNAI**—LNP Service Nature of Address Indicator
- **LNPOGLRNNAI**—LNP Outgoing LRN Nature of Address Indicator
- **LNPOGDNNAI**—LNP Outgoing DN Nature of Address Indicator
- **LNPSUBDIGLEN**—LNP Subscriber Digit Length
- **LNPNATLDIGLEN**—LNP National Digit Length
- **LNPSPORT**—LNP Service Portability
- **LNPEPREF**—LNP Entity Preference

Related Topics

- [chg-ainpopts](#)

4.1.452 rtrv-aiqopts

Use this command to retrieve AIQ specific options.

Parameters

This command has no parameters.

Example

```
rtrv-aiqopts
```

Dependencies

The AIQOPTS table is corrupt or cannot be found.

```
5181 E5181 Cmd Rej: Unable to read AIQ Options Table
```

```
None
```

```
N/A N/A
```

Output

If the `pfx=none` parameter is specified, then the corresponding TriggerType value is not displayed in the output.

This example shows output with default AIQ options.

```
rtrv-aiqopts
```

```
tekelecstp 09-12-03 07:53:46 EST EAGLE 42.0.0
```

```
AIQ OPTIONS
```

```
-----
```

```
DIGMINLEN      = 1
```

```
DIGMAXLEN      = 32
```

```

RESPAR      = rtdigits
RESFMT      = pfxdn
TCAPERR     = 138 (UnrecognizedParameterValue)

TRIGTYPE    PFX
-----
;

```

This example shows output with some AIQ options provisioned.

```
rtrv-aiqopts
```

```

tekelecstp 09-12-03 11:53:46 EST EAGLE 42.0.0

AIQ OPTIONS
-----
DIGMINLEN   = 2
DIGMAXLEN   = 10
RESPAR      = digits
RESFMT      = pfx
TCAPERR     = 138 (UnrecognizedParameterValue)

TRIGTYPE    PFX
-----
3           12434
5           789
7           534553512456784686531
;

```

Legend

- **TRIGTYPE**—TriggerType Value
- **PFX**—Digit string associated with TriggerType
- **IGMINLEN**—Minimum Length of Digit String
- **DIGMAXLEN**—Maximum Length of Digit String
- **RESPAR**—Response Digits
- **RESFMT**—Response Format
- **TCAPERR**—TCAP Error Code.

4.1.453 rtrv-appl-rtkey

Use this command to retrieve information from the Routing Key table. A routing key entry associates a routing key with up to 16 socket names with a limit of 2500 routing keys per system (if E5-ENET-B cards exist).

- DPC, SI, SSN routing keys, which are used to route SCCP messages
- DPC, SI routing keys, which are used to route non-SCCP and non-ISUP messages
- DPC, SI, CIC routing keys, which are used to route ISUP messages

Parameters

 **Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

asname (optional)

Application Server (AS) name assigned to this routing key.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

cice (optional)

The end range of circuit identification codes assigned to the routing key.

Range:

0 - 4294967295

See [Table A-4](#) for valid CIC values for specified SI and MSU types.

cics (optional)

The start range of circuit identification codes assigned to the routing key.

Range:

0 - 4294967295

See [Table A-4](#) for valid CIC values for specified SI and MSU types.

display (optional)

The type of output to display.

 **Note:**

Output includes the type of card, the data collection being audited, and a message indicating the overall status. This parameter applies only to STP databases.

Range:

all

The KEY and the ATTRIBUTE sections of the routing key are displayed

brief

Only the KEY section of the routing key is displayed

Default:

brief

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:*dPCA***Range:**

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

dpc/dPCA/dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:*s-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**dpcn24 (optional)**

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255
 ssa—000–255
 sp—000–255

dpcn16 (optional)

16-bit ITU national destination point code with subfields *unit number sub number area main number area (un-sna-mna)*.

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

num (optional)

The number of entries to display.

Range:

1 - 10000

Default:

50

opc (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

opca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001–005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.

The point code `000-000-000` is not a valid point code.

opc/opca/opci/opcn/opcn24/opcn16 (optional)

Originating point code.

opci (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s
zone—0-7
area—000-255
id—0-7

The point code 0-000-0 is not a valid point code.

opc_n (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc,m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-
nnnnn—0-16383
gc—aa-zz
m1-m2-m3-m4—0-14 for each member; values must sum to 14

opc_{n24} (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255
ssa—000-255
sp—000-255

opc_{n16} (optional)

16-bit ITU national originating point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

rcontext (optional)

Routing Context. The routing key with the specified routing context.

Range:
0 - 4294967295

si (optional)
Service indicator.

Range:
0 - 15
The following equivalent text values can be specified:
Number = Text—Description

0=snm
Signaling network management messages

1=regtest
Signaling network testing and maintenance regular

2=spltest
Signaling network testing and maintenance special

3=sccp
SCCP

4=tup
Telephone user part

5=isup
ISDN user part

13=qbicc

ssn (optional)
Subsystem number.

Range:
0 - 255

type (optional)
The type of routing key.

Range:

all

full

partial

default

Default:
all

Example

```
rtrv-appl-rtkey  
rtrv-appl-rtkey:dpc=123-234-255:si=3
```

```
rtrv-appl-rtkey:dpc=123-234-255
rtrv-appl-rtkey:cics=1:cice=1000:num=3
rtrv-appl-rtkey:cice=19
rtrv-appl-rtkey:opc=122-124-125
rtrv-appl-rtkey:type=partial
rtrv-appl-rtkey:display=all
rtrv-appl-rtkey:rcontext=7
rtrv-appl-rtkey:dpcn16=121-10-15
```

Dependencies

The `ssn` parameter must be specified and is valid only when the `si=3` (*sccp*) parameter is specified.

3757 E3757 Cmd Rej: SSN is not allowed unless SI is 3

The value specified for the `cics` parameter must be less than or equal to the value specified for the `cice` parameter.

3783 E3783 Cmd Rej: CICS must be less than or equal CICE

A circuit identification code range (`cics` to `cice`) that overlaps an existing routing key cannot be specified.

3878 E3878 Cmd Rej: CIC outside of valid range for SI

The `ssn` parameter cannot be specified when `opc`, `cics`, and `cice` parameters are specified. See [Table 4-2](#) for valid parameter combinations.

3787 E3787 Cmd Rej: SSN not allowed with OPC, CICS and CICE

When the DPC is ANSI and the `si=4` parameter is specified, a DPC/SI routing key must be specified (TUP is used only in an ITU network).

3874 E3874 Cmd Rej: TUP must use DPC/SI route key if DPC is ANSI

The `opc`, `cics`, and `cice` parameters can be specified with the `si` parameter only if the `si` parameter has a value of 4, 5, or 13 (or *tup*, *isup*, or *qbicc*).

3789 E3789 Cmd Rej: OPC, CICS, CICE are not allowed unless SI is 4, 5 or 13

[Table A-4](#) shows valid CIC values for SI types 4, 5, and 13.

N/A N/A

The following types of partial routing keys are supported:

- The following types of partial routing keys are supported:
- DPC/SI/OPC (ignore CIC) can be used as a partial match key for CIC- based traffic.
- DPC/SI (ignore all other fields) can be used as a partial match key for CIC- based traffic or SCCP traffic.
- DPC only (ignore all other fields) can be used as a partial match for any type of traffic.

- SI only (ignore all other fields) can be used as a partial match for any type of traffic.

3955 E3955 Cmd Rej: Invalid combination of parameters for a partial routing key

If the `type=default` parameter is specified, then the `dpc`, `si`, `ssn`, `opc`, `cics`, and `cice` parameters cannot be specified.

3959 E3959 Cmd Rej: Invalid combination of parameters for a default routing key

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

Static routing keys are stored on disk and a copy of the table is loaded to each SS7IPGW card.

Group codes are required for ITU-N point codes (DPCN/OPCN) when the Duplicate Point Code feature is turned on.

The `display=all` parameter must be specified to display the assigned routing context value for the routing key.

In this command, the point codes support only the spare point code subtype prefix (S-).

Output

```
rtrv-appl-rtkey
```

```
rlghncxa03w 08-04-11 13:17:09 EST EAGLE 38.0.0
```

RCONTEXT	DPC	SI	ADPTR	ASNAME	TYPE
-----	008-008-008	*	M3UA	as5	PARTIAL
-----	002-002-002	10	M3UA	as2	FULL
-----	001-001-001	*	M3UA	as11	PARTIAL
-----	001-001-001	10	M3UA	as11	FULL
-----	001-001-001	3	M3UA	as12	FULL
-----	002-002-002	9	M3UA	as14	FULL
10	002-002-002	*	M3UA	as8	PARTIAL

RCONTEXT	DPCI	SI	ADPTR	ASNAME	TYPE
-----	7-007-7	*	M3UA	as14	PARTIAL
-----	7-007-7	4	M3UA	as15	FULL

RCONTEXT	DPC	SI	ADPTR	ASNAME	TYPE
-----	*****	**	M3UA	as1	DEFAULT
-----	*****	10	M3UA	as12	PARTIAL

Route Key table is (11 of 1000) 1% full

Route Key Socket Association table is (11 of 16000) 1% full

END OF LOG REPORT

```
;
```

```
rtrv-appl-rtkey:asname=as11
```

```
rlghncxa03w 08-04-11 14:05:46 EST EAGLE 38.0.0
```

RCONTEXT	DPC	SI	ADPTR	ASNAME	TYPE
-----	001-001-001	*	M3UA	as11	PARTIAL
-----	001-001-001	10	M3UA	as11	FULL

```
Route Key table is (10 of 1000) 1% full
```

```
Route Key Socket Association table is (10 of 16000) 1% full
```

```
END OF LOG REPORT
```

```
;
```

This example shows a routing key with routing context that is assigned to an SUA Application Server and a routing key with routing context that is assigned to an M3UA Application Server.

```
rtrv-appl-rtkey:display=all
```

```
rlghncxa03w 08-04-11 14:13:46 EST EAGLE 38.0.0
```

RCONTEXT	DPC	SI	SSN	OPC	CICS	CICE
-----	008-008-008	**	***	*****	*****	*****

```
*****
```

ADPTR	TYPE	ASNAME
M3UA	PARTIAL	as5

```
ANAMES  
assoc5
```

RCONTEXT	DPC	SI	SSN	OPC	CICS	CICE
20	002-002-002	3	***	-----	-----	-----

```
-----
```

ADPTR	TYPE	ASNAME
SUA	PARTIAL	as8

```
ANAMES  
assoc8
```

```
Route Key table is (2 of 1000) 1% full
```

```
Route Key Socket Association table is (2 of 16000) 1% full
```

```
END OF LOG REPORT
```

```
;
```

This example shows output when the 2500 Routing Keys feature is enabled. The maximum number of routing keys allowed in the system is 2500. The maximum number of entries in the Static Route Key Socket Association table is 40,000.

rtrv-appl-rtkey

rlghncxa03w 08-04-11 14:03:05 EST EAGLE 38.0.0

RCONTEXT	DPC	SI	ADPTR	ASNAME	TYPE
-----	008-008-008	*	M3UA	as5	PARTIAL
-----	002-002-002	10	M3UA	as2	FULL
-----	001-001-001	*	M3UA	as11	PARTIAL
-----	001-001-001	10	M3UA	as11	FULL
-----	001-001-001	3	M3UA	as12	FULL
-----	002-002-002	9	M3UA	as14	FULL

RCONTEXT	DPCI	SI	ADPTR	ASNAME	TYPE
-----	7-007-7	*	M3UA	as14	PARTIAL
-----	7-007-7	4	M3UA	as15	FULL

RCONTEXT	DPC	SI	ADPTR	ASNAME	TYPE
-----	*****	**	M3UA	as1	DEFAULT
-----	*****	10	M3UA	as12	PARTIAL

Route Key table is (10 of 2500) 1% full

Route Key Socket Association table is (10 of 40000) 1% full

END OF LOG REPORT

;

rtrv-appl-rtkey

rlghncxa03w 08-04-11 13:17:09 EST EAGLE 38.0.0

RCONTEXT	DPC	SI	ADPTR	ASNAME	TYPE
-----	008-008-008	*	M3UA	as5	PARTIAL
-----	002-002-002	10	M3UA	as2	FULL
-----	001-001-001	*	M3UA	as11	PARTIAL
-----	001-001-001	10	M3UA	as11	FULL
-----	001-001-001	3	M3UA	as12	FULL
-----	002-002-002	9	M3UA	as14	FULL
10	002-002-002	*	M3UA	as8	PARTIAL

RCONTEXT	DPCI	SI	ADPTR	ASNAME	TYPE
-----	7-007-7	*	M3UA	as14	PARTIAL
-----	7-007-7	4	M3UA	as15	FULL

RCONTEXT	DPC	SI	ADPTR	ASNAME	TYPE
-----	*****	**	M3UA	as1	DEFAULT
-----	*****	10	M3UA	as12	PARTIAL

RCONTEXT	DPCN16	SI	ADPTR	ASNAME	TYPE
-----	121-007-10	*	M3UA	as14	PARTIAL
-----	121-007-11	4	M3UA	as15	FULL

```
Route Key table is (11 of 1000) 1% full
Route Key Socket Association table is (11 of 16000) 1% full

END OF LOG REPORT
;
```

Related Topics

- [chg-appl-rtkey](#)
- [dlt-appl-rtkey](#)
- [ent-appl-rtkey](#)

4.1.454 rtrv-as

Use this command to retrieve the characteristics of one or all Application Servers from the AS table.

Parameters

aname (optional)

Name of the association.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

Default:

Retrieve all

asname (optional)

Name of the Application Server.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

Example

```
rtrv-as
```

```
rtrv-as:aname=as1
```

Dependencies

None

N/A N/A

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

Output

```

rtrv-as

      rlghncxa03w 05-06-05 08:40:18 EST  EAGLE5 34.0.0
AS Name           Mode           Tr ms   Association Names
m3ua_as1          LOADSHARE     2000    m3ua_assoc1
                 m3ua_assoc1
sua_as1           OVERRIDE      200     sua_assoc1
                 sua_assoc2

AS Table is (2 of 250) 1% full
;

```

Related Topics

- [chg-as](#)
- [dlt-as](#)
- [ent-as](#)
- [rept-stat-as](#)

4.1.455 rtrv-ASSOC

Use this command to retrieve the configuration data from the IP Socket/Association (IPAPSOCK) table.

Parameters**adapter (optional)**

The adapter layer for this association.

Range:

diam

m2pa

m3ua

sua

Default:

Retrieve all

alhost (optional)

Alternate local host name as defined in the IP Host table.

Range:

XX,

Any string of characters beginning with a letter and comprising up to 60 characters in length. Valid characters are a–z, A–Z, 0–9, - (dash), . (period)

Default:

Retrieve all

aname (optional)

Name assigned to this association (in IPAPSOCK table).

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

Default:

Retrieve all

display (optional)

An optional display parameter can be specified in order to display either all or brief reports for associations. The default mode is "brief" if this parameter is not entered at the command line.

Range:*brief**all***lhost (optional)**

The local host name as defined in the IP Host table.

Range:

XX,

Any string of characters beginning with a letter and comprising up to 60 characters in length. Valid characters are a–z, A–Z, 0–9, - (dash), . (period).

Default:

Retrieve all

link (optional)

The signaling link for this association.

Range:*a, b, a1-a63, b1-b63*Not all card types support all `link` parameter values.See [Table A-1](#) for valid `link` parameter range values for each type of card that can have assigned signaling links.**loc (optional)**

Card location that is stenciled on the shelf of the system.

Range:*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118*

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

The IPAPSOCK table is used to associate the Local Host/Local Port to a Remote Host/Remote Port.

When the command is entered with the `aname`, `lhost`, or `alhost` parameters, the output displays SCTP buffer usage information (used and total buffer space on the card).

Heartbeat timer value is in milliseconds.

Output

AS names are displayed for IPGWx-M3UA and SUA linksets.

LS names are displayed for IPSG linksets.

This example shows buffer usage (used and total buffer space) and card location information:

```
rtrv-assoc:aname=ipsgm3ua05

eagle10212 10-02-10 17:21:29 EST  EAGLE 46.0.0

ANAME ipsgm3ua05
  LOC      1305          IPLNK PORT A          LINK      A
  ADAPTER  M3UA          VER           M3UA RFC
  LHOST    e1021201.1305a
  ALHOST    ---
  RHOST    e1021301.1305a
  ARHOST    ---
  LPORT    2005          RPORT        2005
  ISTRMS   2            OSTRMS       2            BUFSIZE   200
  RMODE    LIN          RMIN         120          RMAX      800
  RTIMES   10          CWMIN        3000        UAPS      10
  OPEN     NO           ALW          NO           RTXTHR    0
  RHOSTVAL RELAXED     HBTIMER      500

  LSN
  ls1305a

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (320 KB of 3200 KB) on LOC = 1307

;
```

This example shows buffer usage (used and total buffer space) and card location information:

```
rtrv-assoc:lhost=e1021201.1311a
```

```
eagle10212 10-02-10 17:21:29 EST EAGLE 46.0.0
```

```

ANAME ip11311a
  LOC      1311          IPLNK PORT A          LINK      A
  ADAPTER  M2PA          VER           M2PA RFC
  LHOST    e1021201.1311a
  ALHOST   ---
  RHOST    e1021301.1311a
  ARHOST   ---
  LPORT    1311          RPORT      1311
  ISTRMS   2            OSTRMS     2          BUFSIZE   200
  RMODE    LIN          RMIN       120        RMAX      800
  RTIMES   10          CWMIN      3000       UAPS      1
  OPEN     YES          ALW        YES        RTXTHR    0
  RHOSTVAL RELAXED     HBTIMER    500        M2PATSET  1

```

```

IP Appl Sock/Assoc table is (10 of 4000) 1% full
Assoc Buffer Space Used (400 KB of 1600 KB) on LOC = 1311

```

```
;
```

```
rtrv-assoc:display=brief or rtrv-assoc
```

ANAME	CARD LOC	IPLNK PORT	LINK	ADAPTER	LPORT	RPORT	OPEN	ALW
a23456789012345	1305	A	A	M3UA	20000	30000	YES	YES
b23456789012345	1305	B	A	M3UA	20001	30001	NO	NO
c23456789012345	1307	A	A	SUA	20002	30002	YES	YES
d23456789012345	1307	B	A	M3UA	20003	30003	NO	NO
e23456789012345	1315	A	A	SUA	20004	30004	YES	YES
f23456789012345	1315	A,B	A	M3UA	20005	30005	YES	YES
g23456789012345	1317	B,A	A	SUA	20006	30006	YES	YES
m2pa1105b3	1105	A	B3	M2PA	31105	31105	YES	YES
m2pa1107a0	1107	A	--	M2PA	1107	1107	NO	NO
m2pa1107a1	1107	A	--	M2PA	11107	11107	NO	NO
m3ua1211a0	1211	A	A	M3UA	1211	1213	YES	YES
m3ua1211a1	1211	A	**	M3UA	11211	11213	YES	YES
m3ua1211a2	1211	A	B1	M3UA	21211	21213	YES	YES
m3ua1211a3	1211	A	A3	M3UA	31211	31213	YES	YES
m3ua1213a0	1213	A	A	M3UA	1213	1211	YES	YES
m3ua1213a1	1213	A	A1	M3UA	11213	11211	YES	YES
m3ua1213a2	1213	A	A2	M3UA	21213	21211	YES	YES
m3ua1213a3	1213	A	A3	M3UA	31213	31211	YES	YES
ipg1215a01	1215	A	**	M3UA	11215	1111	YES	YES
ipg1215a02	1215	A	**	M3UA	11215	1112	YES	YES
ipg1215a03	1215	A	--	M3UA	11215	1113	NO	NO
ipg1215a04	1215	A	--	M3UA	11215	1114	NO	NO
ipg1215a05	1215	A	--	M3UA	11215	1115	NO	NO
ipg1215a06	1215	A	--	M3UA	11215	1116	NO	NO

IP Appl Sock/Assoc table is (24 of 4000) 1% full

;

rtrv-assoc:adapter=m2pa

```
eagle10212 10-02-10 11:54:01 EST EAGLE 46.0.0
      CARD  IPLNK
ANAME      LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
ipl1301a   1301 A    A   M2PA   1301  1301  YES  YES
ipl1301b   1301 A    B   M2PA   1302  1302  YES  YES
sgm2pa1    1305 A   A15  M2PA   1305  1305  NO   NO
sgm2pa7    1303 A   A15  M2PA   1306  1306  YES  YES
ipl1311a   1311 A    A   M2PA   1311  1311  YES  YES
ipl1313a   1313 A    A   M2PA   1313  1313  YES  YES
```

IP Appl Sock/Assoc (11 of 4000) 1%

This example shows command output for all configured associations:

rtrv-assoc:display=all

```
eagle10212 10-02-02 17:00:42 EST EAGLE 46.0.0
ANAME ipl1301a
      LOC      1301          IPLNK PORT A          LINK      A
      ADAPTER  M2PA          VER          M2PA RFC
      LHOST    e1021201.1301a
      ALHOST    ---
      RHOST    e1021301.1301a
      ARHOST    ---
      LPORT    1301          RPORT      1301
      ISTRMS   2            OSTRMS     2            BUFSIZE   200
      RMODE    LIN          RMIN       120          RMAX      800
      RTIMES   10          CWMIN      3000        UAPS      10
      OPEN     YES          ALW        YES          RTXTHR    0
      RHOSTVAL RELAXED     HBTIMER    500          M2PATSET  1

ANAME ipl1301b
      LOC      1301          IPLNK PORT A          LINK      B
      ADAPTER  M2PA          VER          M2PA RFC
      LHOST    e1021201.1301a
      ALHOST    ---
      RHOST    e1021301.1301a
      ARHOST    ---
      LPORT    1302          RPORT      1302
      ISTRMS   2            OSTRMS     2            BUFSIZE   200
      RMODE    LIN          RMIN       120          RMAX      800
      RTIMES   10          CWMIN      3000        UAPS      10
      OPEN     YES          ALW        YES          RTXTHR    0
      RHOSTVAL RELAXED     HBTIMER    500          M2PATSET
```

1

```

ANAME sg1303a
LOC      1303          IPLNK PORT A          LINK      A
ADAPTER  M3UA          VER          M3UA RFC
LHOST    e1021201.1303a
ALHOST    ---
RHOST    e1021301.1303a
ARHOST    ---
LPORT    2003          RPORT      2003
ISTRMS   2            OSTRMS     2            BUFSIZE   200
RMODE    LIN          RMIN       120           RMAX      800
RTIMES   10           CWMIN      3000         UAPS      10
OPEN     YES          ALW        YES           RTXTHR    0
RHOSTVAL RELAXED     HBTIMER    500

ANAME sg1305a
LOC      1305          IPLNK PORT A          LINK      A
ADAPTER  M3UA          VER          M3UA RFC
LHOST    e1021201.1305a
ALHOST    ---
RHOST    e1021301.1305a
ARHOST    ---
LPORT    2005          RPORT      2005
ISTRMS   2            OSTRMS     2            BUFSIZE   200
RMODE    LIN          RMIN       120           RMAX      800
RTIMES   10           CWMIN      3000         UAPS      10
OPEN     YES          ALW        YES           RTXTHR    0
RHOSTVAL RELAXED     HBTIMER    500

ANAME sg1305i
LOC      1305          IPLNK PORT A          LINK      B
ADAPTER  M3UA          VER          M3UA RFC
LHOST    e1021201.1305a
ALHOST    ---
RHOST    e1021301.1305a
ARHOST    ---
LPORT    2006          RPORT      2006
ISTRMS   2            OSTRMS     2            BUFSIZE   200
RMODE    LIN          RMIN       120           RMAX      800
RTIMES   10           CWMIN      3000         UAPS      10
OPEN     NO           ALW        YES           RTXTHR    0
RHOSTVAL RELAXED     HBTIMER    500

ANAME ipg1307a1
LOC      1307          IPLNK PORT A          LINK      A
ADAPTER  M3UA          VER          M3UA RFC
LHOST    e1021201.1307a
ALHOST    ---
RHOST    e1021301.1307a
ARHOST    ---
LPORT    4001          RPORT      4001
ISTRMS   2            OSTRMS     2            BUFSIZE   16
RMODE    LIN          RMIN       120           RMAX      800
RTIMES   10           CWMIN      3000         UAPS      10
OPEN     YES          ALW        YES           RTXTHR    0
RHOSTVAL RELAXED     HBTIMER    500

```

```

ANAME ip11311a
LOC      1311          IPLNK PORT A          LINK      A
ADAPTER  M2PA          VER          M2PA RFC
LHOST    e1021201.1311a
ALHOST    ---
RHOST    e1021301.1311a
ARHOST    ---
LPORT    1311          RPORT      1311
ISTRMS   2            OSTRMS    2            BUFSIZE   200
RMODE    LIN          RMIN      120           RMAX      800
RTIMES   10          CWMIN     3000         UAPS      10
OPEN     NO           ALW       YES           RTXTHR    0
RHOSTVAL RELAXED     HBTIMER   500          M2PATSET  1

ANAME ip11313a
LOC      1313          IPLNK PORT A          LINK      A
ADAPTER  M2PA          VER          M2PA RFC
LHOST    e1021201.1313a
ALHOST    ---
RHOST    e1021301.1313a
ARHOST    ---
LPORT    1313          RPORT      1313
ISTRMS   2            OSTRMS    2            BUFSIZE   200
RMODE    LIN          RMIN      120           RMAX      800
RTIMES   10          CWMIN     3000         UAPS      3
OPEN     NO           ALW       YES           RTXTHR    0
RHOSTVAL RELAXED     HBTIMER   500          M2PATSET  1

ANAME ipg1315a1
LOC      1315          IPLNK PORT A          LINK      A
ADAPTER  M3UA          VER          M3UA RFC
LHOST    e1021201.1315a
ALHOST    ---
RHOST    e1021301.1315a
ARHOST    ---
LPORT    1315          RPORT      1315
ISTRMS   2            OSTRMS    2            BUFSIZE   16
RMODE    LIN          RMIN      120           RMAX      800
RTIMES   10          CWMIN     3000         UAPS      10
OPEN     NO           ALW       NO            RTXTHR    0
RHOSTVAL RELAXED     HBTIMER   500

ANAME ipg1317a1
LOC      1317          IPLNK PORT A          LINK      A
ADAPTER  M3UA          VER          M3UA RFC
LHOST    e1021201.1317a
ALHOST    ---
RHOST    e1021301.1317a
ARHOST    ---
LPORT    1317          RPORT      1317
ISTRMS   2            OSTRMS    2            BUFSIZE   200
RMODE    LIN          RMIN      120           RMAX      800
RTIMES   10          CWMIN     3000         UAPS      10
OPEN     YES          ALW       YES           RTXTHR    0

```

```

                RHOSTVAL RELAXED          HBTIMER      500

ANAME sg1305m
  LOC      1303          IPLNK PORT A          LINK      A1
  ADAPTER  M2PA          VER          M2PA RFC
  LHOST    e1021201.1303a
  ALHOST   ---
  RHOST    e1021301.1303a
  ARHOST   ---
  LPORT    1305          RPORT      1305
  ISTRMS   2            OSTRMS    2            BUFSIZE   200
  RMODE    LIN          RMIN      120          RMAX      800
  RTIMES   10          CWMIN    3000         UAPS      10
  OPEN     YES          ALW       YES          RTXTHR   0
  RHOSTVAL RELAXED          HBTIMER      500          M2PATSET  1

IP Appl Sock/Assoc table is (11 of 4000) 1% full
;

```

```
rtrv-assoc:aname=sg1305a
```

```
eagle10212 09-03-10 17:00:42 EST EAGLE 46.0.0
```

```

ANAME sg1305a
  LOC      1305          IPLNK PORT A          LINK      A
  ADAPTER  M3UA          VER          M3UA RFC
  LHOST    e1021201.1305a
  ALHOST   ---
  RHOST    e1021301.1305a
  ARHOST   ---
  LPORT    2005          RPORT      2005
  ISTRMS   2            OSTRMS    2            BUFSIZE   200
  RMODE    LIN          RMIN      120          RMAX      800
  RTIMES   10          CWMIN    3000         UAPS      10
  OPEN     YES          ALW       YES          RTXTHR   0
  RHOSTVAL RELAXED          HBTIMER      500

```

```
LSN;
```

```
ls1305a
```

```

IP Appl Sock/Assoc table is (13 of 4000) 1% full
Assoc Buffer Space Used (600 KB of 3200 KB) on LOC = 1305
;

```

This example shows all associations with both primary and alternate remote host values configured:

```
rtrv-assoc:rhosttype=alternate:display=all
```

```
ipsig 10-02-10 17:58:37 GMT EAGLE 46.0.0
```

```

ANAME assoc12
  LOC      1111          IPLNK PORT A,B          LINK      A
  ADAPTER  M2PA          VER           M2PA RFC
  LHOST    aricent11.com
  ALHOST   aricent12.com
  RHOST    tekelec11.com
  ARHOST   tekelec12.com
  LPORT    10003         RPORT      10001
  ISTRMS   2            OSTRMS     2            BUFSIZE   200
  RMODE    LIN          RMIN       120          RMAX      800
  RTIMES   10          CWMIN     3000        UAPS      10
  OPEN     NO           ALW         YES          RTXTHR    65535
  RHOSTVAL RELAXED     HBTIMER   500        M2PATSET  1

```

```

ANAME assoc22
  LOC      1201          IPLNK PORT A,B          LINK      A
  ADAPTER  M2PA          VER           M2PA RFC
  LHOST    aricent21.com
  ALHOST   aricent22.com
  RHOST    tekelec21.com
  ARHOST   tekelec22.com
  LPORT    10003         RPORT      10001
  ISTRMS   2            OSTRMS     2            BUFSIZE   200
  RMODE    LIN          RMIN       120          RMAX      800
  RTIMES   10          CWMIN     3000        UAPS      1
  OPEN     NO           ALW         YES          RTXTHR    65535
  RHOSTVAL RELAXED     HBTIMER   500        M2PATSET  1

```

IP Appl Sock/Assoc table is (4 of 4000) 1% full

;

This example shows the associations when a primary remote host is provisioned and an alternate remote host is not provisioned:

```
rtrv-assoc:rhosttype=primary
```

```

ipsig 10-02-10 17:37:49 GMT EAGLE 46.0.0
      CARD  IPLNK
ANAME      LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc5     1101 A    A   M2PA  10002 10001 NO  YES
assoc6     1102 A    A   M3UA  30002 30002 NO  NO
assoc7     1102 B    A   SUA   20001 29011 NO  NO

```

IP Appl Sock/Assoc table is (4 of 4000) 1% full

;

```
rtrv-assoc:aname=m2pa1
```

```

ANAME m2pa1
  LOC      1305          IPLNK PORT A          LINK      B1
  ADAPTER  M2PA          VER           M2PA RFC
  LHOST    e1011001.1305a

```



```

ALHOST ---
RHOST e1011501.1305a
ARHOST ---
LPORT 2005          RPORT 2005
ISTRMS 2           OSTRMS 2           BUFSIZE 200
RMODE LIN         RMIN 120          RMAX 800
RTIMES 10         CWMIN 3000       UAPS 7
OPEN NO           ALW YES          RTXTHR 0
RHOSTVAL RELAXED HBTIMER 500       M2PATSET 1

LSN
lsm2pa05s

```

```
rtrv-assoc
```

```

ipsig 16-11-18 17:37:49 GMT EAGLE 46.5.0
CARD IPLNK
ANAME LOC PORT LINK ADAPTER LPORT RPORT OPEN ALW BUFSIZE
assoc5 1101 A A40 M2PA 10002 10001 NO YES 200
assoc6 1102 A A50 M3UA 30002 30002 NO NO 50
assoc7 1102 B B60 M3UA 20001 29011 NO NO 50

```

```
IP Appl Sock/Assoc table is (4 of 4000) 1% full
```

```
;
```

Related Topics

- [chg-assoc](#)
- [dlt-assoc](#)
- [ent-assoc](#)
- [rept-stat-assoc](#)

4.1.456 rtrv-atinpqopts

Use this command to retrieve the data that is used for ATI number conditioning.

Parameters

This command has no parameters.

Example

```
rtrv-atinpqopts
```

Dependencies

The ATINP feature must be enabled before this command can be entered.

4816 E4816 Cmd Rej: ATINP feature must be enabled

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

Output

This example shows output with default ATINPQ options:

```
rtrv-atinpqopts
```

```
tekelecstp 12-01-04 07:53:46 EST EAGLE 45.0.0
```

```
ATINPQ OPTIONS
```

```
-----
ATIACKIMSI      = NONE
ATIACKMSISDN   = MSISDN
ATIACKRN       = RN
ATIDFLTRN      = NONE
ATIDLM         = NONE
ATINPTYPE      = ANY
ENTITYLEN      = NONE
SNAI          = INTL
SPORTTYPE     = GSM
ATISUPPLOCINFO = OFF
VLRNUMLEN     = 40
ATIACKVLRNUM   = RNSPMSISDN
```

```
;
```

This example shows output when the Location Information request is supported:

```
rtrv-atinpqopts
```

```
tekelecstp 12-01-25 12:22:38 EST EAGLE 45.0.0
```

```
ATINPQ OPTIONS
```

```
-----
ATIACKIMSI      = GRN
ATIACKMSISDN   = GRNDLMSISDN
ATIACKRN       = GRNDLMRNSP
ATIDFLTRN      = NONE
ATIDLM         = 454555817324228
ATINPTYPE      = ANY
ENTITYLEN      = NONE
SNAI          = NAI
SPORTTYPE     = NONE
ATISUPPLOCINFO = ON
VLRNUMLEN     = 40
ATIACKVLRNUM   = RNSPMSISDN
```

```
;
```

Legend

- **ATIACKIMSI**—IMSI parameter for ACK response message
- **ATIACKMSISDN**—MSISDN parameter for ACK response message

- **ATIACKRN**—Routing Number format
- **SNAI**—NAI of the incoming MSISDN digits
- **ATIDLM**—Outbound message delimiter
- **ATIDFLTRN**—Default Routing Number
- **ATINPTYPE**—Number Portability Type
- **SPORTTYPE**—Service Portability Type
- **GRN**—Generic Routing Number
- **ATISUPPLOCINFO**—Support ATINP query with LocationInformation request if ATINP feature is activated
- **VLRNUMLEN**—Maximum number of digits that could be encoded as VLR-number in ATI ACK response message
- **ATIACKVLRNUM**— VLR-number format

4.1.457 rtrv-atm-lps

Use this command to display the parameter values for the ATM link parameter sets in the database configured with the `chg-atm-lps` command, along with the non-configurable ATM parameters.

Parameters

lpset (optional)

The ATM link parameter set to be displayed.

Range:

1 - 30

Default:

All ATM link parameter sets are displayed

Example

```
rtrv-atm-lps:lpset=5
```

```
rtrv-atm-lps
```

Dependencies

None

N/A N/A

Notes

None

Output

**Note:**

Dashes (--) in the FC NR and FC BC fields indicate that this implementation is not supported on ATM high-speed signaling links.

```
rtrv-atm-lps:lpset=5
```

```
rlghncxa03w 04-01-04 08:40:18 EST EAGLE 31.3.0
ATM LINK PARAMETER SET TIMERS AND PARAMETERS (TIMERS IN SECONDS)
      SSCOP PARAMETERS
LPSET  MAXCC  MAXPD  MAXSTAT  TMR  TMR    TMR    TMR    TMR
      CC  KALIVE  NORSP  POLL  IDLE
5      4      500    67      0.2  0.125  1.5    0.150  0.125

      SSCF-NNI PARAMETERS
TMRT1  TMRT2  TMRT3  N1
05.0   120.0  0.000925  64552

      SAAL PARAMETERS
MAX  TMR  TNRNO  TMR  N  TMR
NRP  SREC  CRED  ERM  BLK  PROV
1    3600  1.5   0.125  3    0600.0

      NONCONFIGURABLE PARAMETERS
SDU  UU      FC  FC
SIZE SIZE  N  NR  BC  TSUP  TLOSS  ERMSM  THRES
272  4      9  --  --  120   1.3    0.1    0.244
```

```
;
```

```
rtrv-atm-lps
```

```
rlghncxa03w 04-01-04 08:40:18 EST EAGLE 31.3.0
      SSCOP PARAMETERS
LPSET  MAXCC  MAXPD  MAXSTAT  TMR  TMR    TMR    TMR    TMR
      CC  KALIVE  NORSP  POLL  IDLE
1      4      500    67      0.2  0.125  1.5    0.150  0.125
2      4      500    67      0.2  0.125  1.5    0.150  0.125
3      4      500    67      0.2  0.125  1.5    0.150  0.125
4      4      500    67      0.2  0.125  1.5    0.150  0.125
5      4      500    67      0.2  0.125  1.5    0.150  0.125
6      4      500    67      0.2  0.125  1.5    0.150  0.125
7      4      500    67      0.2  0.125  1.5    0.150  0.125
8      4      500    67      0.2  0.125  1.5    0.150  0.125
9      4      500    67      0.2  0.125  1.5    0.150  0.125
10     4      500    67      0.2  0.125  1.5    0.150  0.125
11     4      500    67      0.2  0.125  1.5    0.150  0.125
```

12	4	500	67	0.2	0.125	1.5	0.150	0.125
13	4	500	67	0.2	0.125	1.5	0.150	0.125
14	4	500	67	0.2	0.125	1.5	0.150	0.125
15	4	500	67	0.2	0.125	1.5	0.150	0.125
16	4	500	67	0.2	0.125	1.5	0.150	0.125
17	4	500	67	0.2	0.125	1.5	0.150	0.125
18	4	500	67	0.2	0.125	1.5	0.150	0.125
19	4	500	67	0.2	0.125	1.5	0.150	0.125
20	4	500	67	0.2	0.1	1.5	0.1	0.1

SSCF-NNI PARAMETERS

LPSET	TMRT1	TMRT2	TMRT3	N1
1	05.0	015.0	0.000925	64552
2	05.0	120.0	0.000925	64552
3	05.0	120.0	0.000925	64552
4	15.0	010.0	0.000925	64552
5	05.0	120.0	0.000925	500
6	05.0	015.0	0.000925	64552
7	05.0	120.0	0.000925	64552
8	05.0	120.0	0.000925	64552
9	15.0	010.0	0.000925	64552
10	05.0	015.0	0.000925	64552
11	05.0	120.0	0.000925	64552
12	05.0	120.0	0.000925	64552
13	15.0	010.0	0.000925	64552
14	05.0	015.0	0.000925	64552
15	05.0	120.0	0.000925	64552
16	05.0	120.0	0.000925	64552
17	15.0	010.0	0.000925	64552
18	05.0	015.0	0.000925	64552
19	05.0	120.0	0.000925	64552
20	05.0	120.0	0.000925	64552

SAAL PARAMETERS

LPSET	MAX NRP	TMR SREC	TNRNO CRED	TMR ERM	N BLK	TMR PROV
1	1	3600	1.5	0.125	3	1200.0
2	1	3600	1.5	0.125	3	1000.0
3	1	60	1.5	0.125	3	0600.0
4	1	3600	1.5	0.125	3	0600.0
5	1	3600	1.5	0.125	3	0600.0
6	1	3600	1.5	0.125	3	1200.0
7	1	3600	1.5	0.125	3	1000.0
8	1	60	1.5	0.125	3	0600.0
9	1	3600	1.5	0.125	3	0600.0
10	1	3600	1.5	0.125	3	0600.0
11	1	3600	1.5	0.125	3	1200.0
12	1	3600	1.5	0.125	3	1000.0
13	1	60	1.5	0.125	3	0600.0
14	1	3600	1.5	0.125	3	0600.0
15	1	3600	1.5	0.125	3	0600.0
16	1	3600	1.5	0.125	3	1200.0
17	1	3600	1.5	0.125	3	1000.0
18	1	60	1.5	0.125	3	0600.0
19	1	3600	1.5	0.125	3	0600.0

```
20 1 3600 1.5 0.125 3 0600.0
```

NONCONFIGURABLE PARAMETERS

```
SDU  UU      FC  FC
SIZE SIZE  N  NR  BC  TSUP  TLOSS  ERMSM  THRES
272  4      9  --  --  120   1.3    0.1    0.244
```

;

rtrv-atm-lps

tekelecstp 04-01-05 08:40:18 EST EAGLE 31.3.0

ATM LINK PARAMETER SET TIMERS AND PARAMETERS (TIMERS IN SECONDS)

SSCOP PARAMETERS

```
TMR  TMR      TMR      TMR      TMR
LPSET MAXCC  MAXPD  MAXSTAT  CC  KALIVE  NORSP  POLL  IDLE
1      4      500    67      0.2 0.125  1.5    0.150 0.125
```

.

```
20 4 500 67 0.2 0.1 1.5 0.1 0.1
21 4 500 67 0.2 0.1 1.5 0.1 0.1.
```

.

```
30 4 500 67 0.2 0.1 1.5 0.1 0.1
```

SSCF-NNI PARAMETERS

```
LPSET  TMRT1  TMRT2  TMRT3  N1
1      05.0   015.0  0.000925  64552
```

.

```
20 5 30 0.000925 64552
21 5 120 0.000925 1000
```

.

```
30 5 120 0.000925 64552
```

SAAL PARAMETERS

```
LPSET  MAX  TMR  TNRNO  TMR  N  TMR
NRP  SREC  CRED  ERM  BLK  PROV
1      1  3600  1.5  0.125  3  1200.0
```

.

```
20 1 3600 1.5 0.125 3 0600.0
21 0 3600 1.5 0.125 3 1200.0
```

.

```
30 0 3600 1.5 0.125 3 0600.0
```

NONCONFIGURABLE PARAMETERS

```
SDU  UU      FC  FC
SIZE SIZE  N  NR  BC  TSUP  TLOSS  ERMSM  THRES
272  4      9  --  --  120   1.3    0.1    0.244
```

;

Legend

- **LPSET**—Link parameter set being changed. The system default value for this parameter is 1 for ANSI and, 21 for ITU.
- **ACTION**—Copy a set of ATM signaling link parameters from one parameter set to another.
- **SCRLPSET**—ATM signaling link parameter set used as a source for the `action=copy` parameter.
- **MAXCC**—Maximum number of transmissions of a BGN, END, ER, or RS PDU
- **MAXPD**—Maximum number of SD PDUs that can be sent before a POLL is sent
- **MAXSTAT**—Maximum number of list elements in a STAT PDU
- **TMRCC**—Timer, in seconds, used during the connection phase to guard against unacknowledged BGN, END, ER or RS PDUs
- **TMRKALIVE**—Timer, in seconds, used during the transient phase when no SD PDUs are being sent to keep connection up
- **TMRNOSP**—Timer, in seconds, used to check that STAT PDUs are arriving often enough
- **TMRPOLL**—Timer, in seconds, used to guarantee that POLL PDUs are sent often enough
- **TMRIDLE**—Timer, in seconds, used during the idle phase when no SD PDUs are being sent to limit time in the idle phase
- **TMRT1**—Time, in seconds, between a link release action and the next link reestablish action during alignment
- **TMRT2**—Total time, in seconds, that SSCF will attempt alignment
- **TMRT3**—Time, in seconds, between proving PDUs
- **N1**—Number of PDUs sent during proving
- **MAXNRP**—Maximum number of retransmitted PDUs during proving
- **TMR SREC**—The timer, in seconds, used to prohibit closely spaced SSCOP recoveries from occurring.
- **TMR NOCRED**—The timer, in seconds, used when the no credit exists and PDUs are available to be sent.
- **TMRERM**—The error rate monitor interval, in seconds.
- **NBLK**—The number of monitoring intervals per block.
- **TMRPROV**—The timer, in seconds, used to monitor the status of a link after it is placed into service.
- **SDU SIZE**—The SSCOP SDU size (set to 272 octets).
- **UU SIZE**—The SCOP UU size (set to 4 octets).
- **N**—The monitoring intervals spanning a.4 second error event (set to 9).
- **FC NR**—The fixed credit increment value.
- **FC BC**—The fixed credit allocation frequency.
- **TSUP**—The superblock timer for layer management, in seconds.
- **TLOSS**—The loss timer for layer management, in seconds.

- **ERMSM**—The error rate monitor smoothing factor.
- **THRES**—The error rate monitor threshold.

Related Topics

- [chg-atm-lps](#)

4.1.458 rtrv-atm-prm

Use this command to display system-wide non-configurable ATM layer parameters for each ATM high-speed signaling link. The data displayed includes the ATM interface parameters and the ATM traffic descriptor values.

Parameters

This command has no parameters.

Example

```
rtrv-atm-prm
```

Dependencies

None

N/A N/A

Notes

None

Output

```
rtrv-atm-prm
```

```
tekelecstp 04-02-05 08:40:18 EST EAGLE 31.3.0
DS1 DS1 E1 E1 MAX MAX VCI VPI
PCR SCR PCR SCR BT CDVT QOS VPCs VCCs BITS BITS
3622 3622 4528 4528 210 100 3 0 1 16 12
;
```

Legend

The ATM traffic descriptors are displayed in the following fields:

- **BT**—Burst tolerance. The number of consecutive cells on the VCL permitted on the ATM interface by the enforcement process, given the PCR and the line speed.
- **CDVT**—The amount of cell delay variation for the VCL in the network ingress direction.
- **PCR**—The maximum or peak cell rate for the VCL (virtual channel link) T1 is for ANSI and E1 is for ITU.
- **QOS**—Quality of service. The performance objectives that must be met by the ATM VCL when it must discard cells during enforcement of the traffic parameters.

- **SCR**—The average or sustainable cell rate supported on the VCL. T1 is for ANSI and E1 is for ITU.
- The ATM interface parameters are displayed in the following fields:
- **MAX VCCs**—The maximum number of simultaneously active Virtual Circuit Connections (VCCs) supported.
- **MAX VPCs**—The maximum number of simultaneously active Virtual Path Connections (VPCs) supported (by the ATM interface).
- **VCI BITS**—The number of allocated VCI bits to be used in the VPIs in the ATM cells for the VCLs supported on the ATM interface.
- **VPI BITS**—The number of bits to be used in the VPIs in the ATM cells for the VPLs terminated on the ATM interface.

Related Topics

- [rtrv-atm-lps](#)

4.1.459 rtrv-attr-seculog

Use this command to display security log attributes that were configured using the `chg-attr-seculog` command.

Parameters

This command has no parameters.

Example

```
rtrv-attr-seculog
```

Dependencies

None

N/A N/A

Notes

None

Output

```
rtrv-attr-seculog

Command Accepted - Processing

stpc1081301 20-03-10 22:54:25 EST  EAGLE 46.9.0.0.0-76.9.0
rtrv-attr-seculog
Command entered at terminal #1.
;

stpc1081301 20-03-10 22:54:25 EST  EAGLE 46.9.0.0.0-76.9.0
Security log attributes
-----
UPLDALM      yes
```

```

UPSLG          80
PURGEPERIOD    10
;

```

Related Topics

- [chg-attr-seculog](#)

4.1.460 rtrv-bip

Use this command to show the board identification PROM (BIP) data for the main assembly at the specified card location.

The following information is displayed for the main assembly: board part number, board revision, serial number (7, 8, 11, 12, or 14 digits), manufacturing date, and the software match ID.

For main assemblies, the port A Ethernet address (if ENT01 record exists) and port B Ethernet address (if ENT02 record exists) are also displayed.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118, 1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110, 1113, 1115

Example

The following example displays the BIP data for the main assembly.

```
rtrv-bip:loc=1201
```

Dependencies

The card location must be valid for the command.

2242 E2242 Cmd Rej: Destination card invalid

Notes

The `tst-bip` command verifies that the PROM is good by writing to and reading from the PROM. The `rtrv-bip` command shows the level of the BIP, as well as the board part number, the revision number, and the serial number. If the `rtrv-bip` command fails, this indicates that communication to the card has failed, and you might need to replace the card. Contact My Oracle Support (MOS) to find out if the card can be reprogrammed.

Output

For main assemblies, the Max Power Rating is also displayed. If the Card Power value is not present in BIP data, then the Max Power Rating is displayed as *Undef*.

This example shows the 7-digit serial number of a main assembly card manufactured on the eleventh week of 1993):

```
rtrv-bip:loc=1201
```

```
tekelecstp 10-03-14 23:32:51 IST EAGLE 42.0.0
```

```
-----  
Location: 1201 MBD
```

```
Part Number: 850-0187-03  
Revision: G2 Week/Year: 11/1993  
Serial Number: 3110195
```

```
Software Match ID: EG - 001 Max Power Rating : Undef
```

```
-----  
END OF REPORT
```

```
;
```

This example shows the 14-digit serial number with Ethernet port A and B records, manufactured on the eleventh week of 2001:

```
rtrv-bip:loc=1201
```

```
tekelecstp 10-03-14 23:32:51 IST EAGLE 42.0.0
```

```
-----  
Location: 1201 - MBD
```

```
Part Number: 850-0187-03  
Revision: G2 Week/Year: 11/2001  
Serial Number: 102200111a0195
```

```
Software Match ID: EG - 001 Max Power Rating : Undef
```

```
Ethernet Port A Address: 00001704000C  
Ethernet Port B Address: 000017040
```

```
-----  
END OF REPORT
```

```
;
```

This example shows the BIP data for the main assembly when the Max Power Consumption value for the card is present:

```
rtrv-bip:loc=1103
```

```
tekelecstp 10-03-14 23:32:51 IST EAGLE 42.0.0
```

```
-----  
---  
Location: 1103 - MBD  
  
Part Number: 870-2212-02  
Revision: A Week/Year:  
26/2006  
Serial Number: 10206265084  
  
Software Match ID: EG - 001 Max Power Rating : 646  
mA  
-----
```

```
---  
END OF REPORT  
;
```

This example shows the BIP data for the MUX main assembly card:

```
rtrv-bip:loc=1109
```

```
tekelecstp 10-03-07 23:32:51 IST EAGLE 42.0.0
```

```
-----  
---  
Location: 1109 MBD  
Part Number: 870-2872-01  
Revision: A Week/Year:  
11/2003  
Serial Number: 10105365048  
  
Software Match ID: EG - 001 Max Power Rating : 646  
mA  
-----
```

```
---  
END OF REPORT  
;
```

Legend

- **Location**—Card location for the BIP information
- **Part Number**—Part number of the card in the specified card location
- **Revision**—Hardware version of the card
- **Serial Number**—Serial number of the card. Serial number formats are:

- 7-digit serial number—ywwxxxx
- 8-digit serial number—yywwxxxx
- 11-digit serial number—nnnywwxxxx
- 12-digit serial number—nnnyww*xxxx
- 14-digit serial number—nnnyyyww*xxxx
 - * y = year digit (0–9)
 - * w = week digit (0–9)
 - * n = product identifier digit (0–9)x = serial number digit (0–F hexadecimal)
 - * * = special character (0–9, a–z, or A–Z, alphanumeric characters)
- **Software Match ID**—Used to check hardware and board type for the BIP information.
- **Max Power Rating**—Maximum power rating of the card.
- **Week/Year**—Week (1–52) and year (4 digits) of the card. The serial number formats are:
 - 7-digit: ywwxxxx
 - 8-digit: yywwxxxx
 - 11-digit: nnnywwxxxx
 - 12-digit: nnnyww*xxxx
 - 14-digit: nnnyyyww*xxxx
 - where y=year, w=week, n=product identifier, x=serial number (0-F, hexadecimal), *=special character (0–9, a–z, or A–Z)

Related Topics

- [chg-bip-fld](#)
- [chg-bip-rec](#)
- [disp-bip](#)
- [tst-bip](#)

4.1.461 rtrv-card

Use this command to display the information about a card. The command displays the card type, the application the card is running, the linkset name, the signaling links, and the signaling link codes. If no parameter is specified, the command displays information for all cards defined by the `ent-card` command. If the `loc` parameter is specified, the command displays information for the specified card only.

Parameters

links (optional)

Links Provision Status. For the card in the location specified by the `loc` parameter, all links, only equipped links, or only unequipped links are displayed. If the parameter is not specified, only the equipped links are displayed.

Range:***all***

Display all possible links for the card.

equip

Display links that are equipped on the card.

unequip

Display links that are allowed but not equipped on the card.

ipsg

Display the SLKTPS and total card TPS used for a particular card or for all cards configured with the IP SG GPL.

Default:

equip

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118, 1113, 1115, 6201 - 6208, 6211 - 6218, 6301 - 6108,
6311 - 6118

Default:

Retrieve all

Example

```
rtrv-card
rtrv-card:loc=1205
rtrv-card:links=ipsg
rtrv-card:loc=1111:links=ipsg
rtrv-card:loc=6201
```

Dependencies

The card location slot must be between 1 and 18 and not 9 or 10.

2016 E2016 Cmd Rej: <parm_desc> is out of range - <parm>

The card location cannot be 1114, 1116, 1117, or 1118.

2153 E2153 Cmd Rej: Card slot location out of range

The shelf location must be 11xx, 12xx, 13xx, 21xx, 22xx, 23xx, 31xx, 32xx, 33xx, 41xx,
42xx, 43xx, 51xx, 52xx, 53xx, 61xx, 62xx, or 63xx.

2152 E2152 Cmd Rej: Shelf ID out of range

The specified card location must be equipped in the database.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

Notes

Rtrv-card for a card slot provisioned for SLIC and a SLIC card inserted will show the card type as SLIC and appl as IPSG. Rtrv-card for a card slot provisioned for SLIC and a SLIC card is not inserted will show the card type as SLIC and appl as IPSG.

Output

```
rtrv-card
```

```
rlghncxa03w 11-03-15 16:34:56 EST EAGLE 46.0.0
  CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
  1101   DSM         VSCCP      -----      A   --  -----      B   --
  1102   TSM         GLS        -----      A   --  -----      B   --
  1108   MCPM         MCP
  1113   E5-MCAP      OAM
  1114   TDM-A
  1115   E5-MCAP      OAM
  1116   TDM-B
  1117   MDAL
  1205   LIME1       CCS7ITU    ellim1        A   0   -----      B   --
  -----      A1  --  -----      B1  --
  -----      A2  --  -----      B2  --
  -----      A3  --  -----      B3  --
  1207   LIME1       SS7ANSI    ellsn1        A   0   e1jwk4        B   1
  ellsn2        A1  2   e1jwk3        B1  2
  ellsn3        A2  4   e1jwk2        B2  15
  -----      A3  --  e1jwk1        B3  16
  1211   LIMT1       SS7ANSI    t1lsn1        A   0   t1lsn1        B   1
  -----      A1  --  t1lsn1        B1  2
  t1lsn5        A2  0   t1lsn6        B2  6
  t1lsn7        A3  13  -----      B3  --
;

```

This example shows the output for an E5-SM4G or E5-SM8G-B card:

```
rtrv-card:loc=6111
```

```
tklc1110501 11-03-12 17:33:25 EST EAGLE5 44.0.0
  CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
  6111   DSM         VSCCP
;

```

This example lists unequipped links on the provisioned cards:

```
rtrv-card:links=unequip
```

```
stdcfg1a 07-05-24 14:04:54 EST EAGLE 46.0.0
```

CARD	TYPE	APPL	UNEQUIPPED LINKS					
1101	LIME1	SS7ANSI	A1	B1	B3			
1102	LIME1	SS7ANSI	A1	B1	A2	B2	A3	B3
1103	LIME1	SS7ANSI	A1	A2	A3			
1113	E5-MCAP	OAM						
1114	TDM-A							
1115	E5-MCAP	OAM						
1116	TDM-B							

1117 MDAL

;

rtrv-card:links=ipsg

```
e1001501 11-02-23 16:20:42 EST EAGLE 44.0.0
CARD  TYPE      APPL      LSET NAME  LINK SLC  SLKTPS
1105  ENET        IPSG      ele2sg1    A    0    410
      ele2sg1    B    4    410
      ele2sg1    A1   1    410
      ele2sg1    B1   5    410
      ele2sg1    A2   2    410
      ele2sg1    B2   6    410
      ele2sg1    A3   3    410
      ele2sg1    B3   7    410
      Total SLKTPS is (3280 of 5000) 66%
1211  ENET        IPSG      ls1211a    A    0    500
      ls1211b    A1   0    600
      ls1211b    B1   1    600
      ls1211c    A2   0    700
      lsm3ua1    A3   0    1600
      Total SLKTPS is (4000 of 5000) 80%
1213  ENET        IPSG      ls1213a    A    0    800
      ls1213b    A1   0    900
      ls1213c    A2   0    1000
      lsm3ua1    A3   1    1600
      Total SLKTPS is (4300 of 6500) 66%
1215  ENETB      IPSG      m3ua01     A    0    10
      m3ua02     B    0    10
      m3ua03     A1   0    10
      m3ua04     B1   0    10
      m3ua05     A2   0    10
      m3ua06     B2   0    10
      m3ua07     A3   0    10
      m3ua08     B3   0    10
      m3ua09     A4   0    10
      m3ua10     B4   0    10
      m3ua11     A5   0    10
      m3ua12     B5   0    10
      m3ua13     A6   0    10
      m3ua14     B6   0    10
      m3ua15     A7   0    10
      m3ua16     B7   0    10
      Total SLKTPS is (1600of 6500) 25%
```


;

rtrv-card:links=ipsg:loc=1105

```

e1001501 08-02-23 16:20:42 EST EAGLE 38.0.0
CARD   TYPE      APPL      LSET NAME   LINK SLC   SLKTPS
1105   ENET        IPSG      e1e2sg1     A     0       410
                e1e2sg1     B     4       410
                e1e2sg1     A1    1       410
                e1e2sg1     B1    5       410
                e1e2sg1     A2    2       410
                e1e2sg1     B2    6       410
                e1e2sg1     A3    3       410
                e1e2sg1     B3    7       410
Total SLKTPS is (3280 of 5000) 66%

```

;

This example includes IPSG cards:

rtrv-card

```

eagle10212 11-03-05 09:34:40 EST EAGLE 44.0.0
CARD   TYPE      APPL      LSET NAME   LINK SLC LSET NAME   LINK SLC
1303   ENET        IPSG      ls1303a     A     0     lsm2pa7     A15  0
1305   ENETB      IPSG      ls1305a     A     0     ls1305i     B    0
                ls1305a     A1    1     ls1305i     B1   1
                ls1305a     A2    2     ls1305i     B2   2
                ls1305a     A3    3     ls1305i     B3   3

```

This example shows the output when the EPAP Data Split feature is turned on:

rtrv-card

```

epap240m 12-01-05 15:48:30 CST EAGLE 45.0.0
CARD   TYPE      APPL      LSET NAME   LINK SLC LSET NAME   LINK SLC   DATA
1101   DSM          VSCCP                                DN
1103   DSM          VSCCP                                IMSI
1105   DSM          VSCCP                                COMB
1107   DSM          VSCCP                                COMB
1111   IPSM         IPS
1112   IPSM         IPS
SFLOG
1113   E5-MCAP     OAM
1114   TDM-A
1115   E5-MCAP     OAM
1116   TDM-B
1117   MDAL
1202   LIME1       CCS7ITU   lsi1        A     2
1203   LIMATM     ATMANSI   lsa1        A     3

```

1204	LIMT1	SS7ANSI	lsa1	A	4
1206	LIME1ATM	ATMITU	lsi1	A	6

This example shows the output when we have provisioned E5-APP-B cards:

```
rtrv-card
```

```
tekelecstp 12-07-12 17:06:11 EST 45.0.0-64.37.0
rtrv-card
Command entered at terminal #4.
CARD   TYPE      APPL      LSET NAME   LINK SLC  LSET NAME   LINK SLC
1101   E5-APP-B   EPAP
1103   E5-APP-B   EPAP
1107   E5-APP-B   ELAP
1111   E5-APP-B   ELAP
1113   E5-MCAP    OAM
1114   TDM-A
1115   E5-MCAP    OAM
1116   TDM-B
1117   MDAL
```

The following examples show the output when we retrieve the card information with specified location of E5-APP-B card:

```
rtrv-card:loc=1101
```

```
tekelecstp 12-07-13 10:13:48 EST 45.0.0-64.37.0
rtrv-card:loc=1101
Command entered at terminal #4.
CARD   TYPE      APPL      SRVNAME
1101   E5-APP-B   EPAP      tk1c1lepap
```

```
rtrv-card:loc=1107
```

```
tekelecstp 12-07-13 10:13:59 EST 45.0.0-64.37.0
rtrv-card:loc=1107
Command entered at terminal #4.
CARD   TYPE      APPL      SRVNAME
1107   E5-APP-B   ELAP      tk1c1elap
```

This example shows the output when we have provisioned Telco switches:

```
rtrv-card
```

```
tekelecstp 12-09-06 11:20:45 EST 45.0.0
rtrv-card
Command entered at terminal #4.
CARD   TYPE      APPL  LSET NAME  LINK SLC  LSET NAME  LINK SLC
1113   E5-MCAP    OAM
1114   TDM-A
```

```

1115  E5-MCAP  OAM
1116  TDM-B
1117  MDAL
6201  TELCO    SWITCH
6202  TELCO    SWITCH
6203  TELCO    SWITCH
6204  TELCO    SWITCH
6205  TELCO    SWITCH
6206  TELCO    SWITCH
;

```

The following example shows the output when we retrieve the card information with specified location of Telco Switch:

```

rtrv-card:loc=6201

tekelecstp 12-09-06 11:22:10 EST 45.0.0
rtrv-card:loc=6201
Command entered at terminal #4.
CARD  TYPE      APPL      SRVNAME
6201  TELCO      SWITCH    telcol
;

```

The following example shows the output when we retrieve the card information on Release 46.5.0 - 70.23.0:

```

rtrv-card:links=equip

tklcl061501 17-02-21 16:56:53 EST  EAGLE 46.5.0.0.0-70.23.0
rtrv-card:links=equip
Command entered at terminal #4.
CARD  TYPE      APPL      DATA  LSET NAME  LINK SLC  LSET NAME  LINK
SLC
0 1101  LIMT1      SS7ANSI      ls511101  A    0    ls511102  A1
0 1102  LIME1      CCS7ITU      ls711200  A    0    ls711204  B
0                                     ls711201  A1   0    ls711205  B1
0                                     ls711202  A2   0    ls711206  B2
0                                     ls711203  A3   0    ls711207  B3
0
1103  DSM        VSCCP      EPAP
1105  SLIC      IPSPG      GTT      lsi1105m2p  A    0    lsi1105m3u  B
0
1107  DSM        VSCCP      GTT
1111  IPSM      IPS
1113  E5-MCAP  OAM
1114  TDM-A
1115  E5-MCAP  OAM
1116  TDM-B
1117  MDAL
1208  DCM      IPGWI      lgipgwi  A    0

```

```

1211 DCM      IPGWI      gttlsn1b  A    0
1215 ENETB    IPSG      gttlsn0b  A    0
1316 SLIC     IPSG      NOSCCP    ls551   A    0
;

rtrv-card:links=unequip

tklcl061501 17-01-18 19:26:49 MST EAGLE 46.5.0.0.0-70.12.0
rtrv-card:links=unequip
Command entered at terminal #23.
;

Command Accepted - Processing
tklcl061501 17-01-18 19:26:49 MST EAGLE 46.5.0.0.0-70.12.0
CARD   TYPE     APPL      UNEQUIPPED LINKS
DATA
1101   LIMT1   SS7ANSI   B  B1 A2 B2 A3 B3 A4 B4 A5
        B5 A6 B6 A7 B7 A8 B8 A9 B9
        A10 B10 A11 B11 A12 B12 A13 B13 A14
        B14 A15 B15 A16 B16 A17 B17 A18 B18
        A19 B19 A20 B20 A21 B21 A22 B22 A23
        B23 A24 B24 A25 B25 A26 B26 A27 B27
        A28 B28 A29 B29 A30 B30 A31 B31
1102   LIME1   CCS7ITU   A4 B4 A5 B5 A6 B6 A7 B7 A8
        B8 A9 B9 A10 B10 A11 B11 A12 B12
        A13 B13 A14 B14 A15 B15 A16 B16 A17
        B17 A18 B18 A19 B19 A20 B20 A21 B21
        A22 B22 A23 B23 A24 B24 A25 B25 A26
        B26 A27 B27 A28 B28 A29 B29 A30 B30
        A31 B31
1105   SLIC     IPSG      A1 B1 A2 B2 A3 B3 A4 B4 A5
GTT
        B5 A6 B6 A7 B7 A8 B8 A9 B9
        A10 B10 A11 B11 A12 B12 A13 B13 A14
        B14 A15 B15
1107   DSM      VSCCP
ELAP
1113   E5-MCAP  OAM
1114   TDM-A
1115   E5-MCAP  OAM
1116   TDM-B
1117   MDAL
1208   DCM      IPGWI     B
1211   DCM      IPGWI     B
1215   ENET     IPSG      B  A1 B1 A2 B2 A3 B3 A4 B4
        A5 B5 A6 B6 A7 B7 A8 B8 A9
        B9 A10 B10 A11 B11 A12 B12 A13 B13
        A14 B14 A15 B15
1303   MCPM     MCP       A  B
1315   ENETB    IPSG      A  B  A1 B1 A2 B2 A3 B3 A4
        B4 A5 B5 A6 B6 A7 B7 A8 B8
        A9 B9 A10 B10 A11 B11 A12 B12 A13
        B13 A14 B14 A15 B15

```

```

1316  SLIC      IPSPG      B   A1  B1  A2  B2  A3  B3  A4  B4  NOSCCP
      A5  B5  A6  B6  A7  B7  A8  B8  A9
      B9  A10 B10 A11 B11 A12 B12 A13 B13
      A14 B14 A15 B15
1318  DCM      IPGWI      A   B

;
Command Executed

```

Legend

- **CARD**—Card location as stenciled on the shelf of the system
- **TYPE**—Type of card
- **APPL**—Application associated with each card
- **LSET NAME**—Linkset name associated with the cards
- **LINK**—Signaling link associated with the linkset.
- **SLC**—Signaling link code
- **UNEQUIPPED LINKS**—Signaling links that are unequipped on the provisioned card
- **SLKTPS**—Transactions Per Second configured for signaling links provisioned on the card
- **DATA**—Type of RTDB data loaded on the card. Displayed when the EPAP Data Split feature is turned on. When an SFLOG card is configured, the DATA parameter is used to display its status.
- **SRVNAME**- Server Name of the E5-APP-B Card or Telco Switch.

Related Topics

- [dlt-card](#)
- [ent-card](#)
- [init-card](#)
- [rept-stat-card](#)
- [rmv-card](#)

4.1.462 rtrv-cat2-gta

Use this command to display entries from CAT2 GTA table. CAT2 GTA Table shall store Sender TADIG code from RAEX IR.21 Information, TADIG code and MGT of E.214 from Section ID 4 of Operator IR.21 xml file. It shall store Sender TADIG code from RAEX IR.21 Information, TADIG code and GT Address/Address range for HLR Node type from Section ID 13 of Operator IR.21 xml file. The list can be filtered using an optional parameter. The report that is displayed contains two records (the percentage full and number-of-cells-used field) that give the total entries in the CAT2 GTA table without regard to the selector specified. This command obtains the Sender TADIG Code, TADIG Code, Node Type, Start Range, End Range (GT Addresses) for an entry from CAT2 GTA Table.

Parameters

enumber (optional)

End number. It defines the end number of CAT2 GTA entries to be displayed in the command output. These entries are of the specified `stadig`.

Range:

1 - 5,00,000

Default:

1000

snumber (optional)

Start number. It defines the start number of CAT2 GTA entries to be displayed in the command output. These entries are of the specified `stadig`.

Range:

1 - 5,00,000

Default:

1

stadig (mandatory)

Sender TADIG Code. It is TADIG code of the operator. The parameter can be used to filter entries on the basis of Sender TADIG Code.

Range:

ayyyy: 1 leading alphabetic and up to 4 following alphanumeric characters

Example

```
rtrv-cat2-gta:stadig=INDT0
```

```
rtrv-cat2-gta:stadig=INDT0:snumber=100:enumber=200
```

Dependencies

The `stadig` parameter is mandatory and must be specified.

E2011 Cmd Rej:Missing mandatory parameter-stadig

The `stadig` parameter must have some string value. It must have maximum length of 5.

2039 E2039 Cmd Rej: CliString too long, min 1, max 5 – stadig

`enumber` and `snumber` must be specified together. The entries to be displayed are of the specified mandatory `stadig` parameter.

3660 E3660 Cmd Rej: SNUMBER and ENUMBER must be specified together

End number must be greater than or equal to start number. The entries to be displayed are of the specified mandatory `stadig` parameter.

3665 E3665 Cmd Rej: ENUMBER must be greater than or equal to SNUMBER

The maximum number of entries to be displayed are 1000. The difference between enumber and snumber must be less than 1000. The entries to be displayed are of the specified mandatory stadiG parameter.

3666 E3666 Cmd Rej: ENUMBER and SNUMBER difference must be less than 1000

Notes

The percentage full and number of cells used report that is provided with the `rtrv-cat2-gta` command reflects the total entries in the GTA table without regard to the selector specified.

Total number of entries to be displayed for one Operator/STADIG cannot exceed 1000.

This command can be canceled using the F9 function key or the `canc-cmd` command. See `canc-cmd` for more information.

Output

This example retrieves all the entries of CAT2 GTA Table having Sender TADIG code = INDT0. By default 1000 is maximum limit for display.

```
rtrv-cat2-gta:stadiG=INDT0
```

```
tklc1131001 20-01-23 04:50:17 EST EAGLE 46.9
SentTADCode TADCode      NodeType  StartRange  EndRange
INDT0       INDTD        1         910000
INDT0       INDT0        0         91902805504 91902895504
```

```
CAT2-GTA table is (2 of 500000) 1% full.
```

```
;
```

This example retrieves entries from CAT2 GTA Table as specified in `snumber` and `enumber` parameters.

```
rtrv-cat2-gta:stadiG=indt0:snumber=1:enumber=20
```

```
tekelecstp 20-08-17 03:32:14 EST EAGLE 46.9.0.0.0-76.28.0
SentTADCode TADCode      NodeType  StartRange  EndRange
INDT0       INDTD        1         10000
INDT0       INDR        1         17737
INDT0       INDT4        1         18091
INDT0       INDT6        1         19028
INDT0       INDTM        1         19029
INDT0       INDT0        1         19030
INDT0       INDTB        1         19031
INDT0       INDTG        1         19033
INDT0       INDTH        1         19034
INDT0       INDT1        1         19036
INDT0       INDT3        1         19037
INDT0       INDTK        1         19038
INDT0       INDT5        1         19039
INDT0       INDT0        1         19040
INDT0       INDTP        1         19041
INDT0       INDT2        1         19043
```

INDT0	INDT7	1	19044	
INDT0	INDT8	1	19045	
INDT0	INDT9	1	19046	
INDT0	INDT0	0	1902805504	902895504

CAT2-GTA table is (152 of 500000) 1% full.

;

This example retrieves entries from CAT2 GTA Table containing specified sender TADigit Code. By default number of entries to be displayed is 1000.

Legend

- **SenTADCode:** It will be used to identify the operator. It consist of two fields, with a total length of five characters consisting of three-character country code and a two-character operator/company identifier.
- **TADCode:** It will be used to identify circle of the operator. It is Operator ID.
- **NodeType:** It will store value 0 for HLR and 1 for MGT.
- **StartRange/EndRange:** It is GT address/Address range.

4.1.463 rtrv-cat2-imsi

Use this command to display entries from CAT2 IMSI Table. CAT2 IMSI table will store MCC-MNC (E.212) along with TADIG code from section ID 4 of Routing Information data. It will also contain Sender TADIG code from RAEX IR.21 Information of IR.21 XMLs. The list can be filtered using an optional parameter. The report that is displayed contains two records (the percentage full and number-of-cells-used field) that give the total entries in the CAT2 IMSI table without regard to the selector specified. This command obtains the Sender TADIG Code, TADIG code and IMSI for an entry from CAT2 IMSI Table.

Parameters

num (optional)

Defines number of CAT2 IMSI entries to be displayed in command output.

Range:

1- 5,000

Default:

1000

stadig (optional)

Sender TADIG Code. It is TADIG code of the operator. Can be used to filter entries on the basis of Sender TADIG Code.

Range:**ayyyy: 1 leading alphabetic and up to 4 following alphanumeric character****Example**

```
rtrv-cat2-imsi
rtrv-cat2-imsi:num=100
rtrv-cat2-imsi:stadig=INDT0
```

Dependencies

The `num` parameter if specified, must have some integer value. It must have a value ranging from 1 to 5000.

2017 E2017 Cmd Rej: Integer is out of range, 1...5000 – num

The `stadig` parameter if specified, must have some string value. It must have maximum length of 5.

2039 E2039 Cmd Rej: CliString too long, min 1, max 5 – stadig

Notes

The percentage full and number of cells used report that is provided with the `rtrv-cat2-imsi` command reflects the total entries in the IMSI table without regard to the selector specified.

This command can be canceled using the F9 function key or the `canc-cmd` command. See `canc-cmd` for more information.

Output

This example retrieves all the entries from CAT2 IMSI Table. By default maximum entry to be displayed is 1000.

```
rtrv-cat2-imsi

tklc1131001 20-01-23 05:30:39 EST EAGLE 46.9

SenTADCode   TADCode   IMSI
INDT0        INDT0     405025
INDT0        INDTB     405027

CAT2-IMSI table is (2 of 5000) 1% full.
;
```

This example retrieves 2 entries from CAT2 IMSI Table as specified in `num` parameter.

```
rtrv-cat2-imsi:num=2

tklc1131001 20-01-23 05:40:27 EST EAGLE 46.9.0.0.0-76.8.0

SenTADCode   TADCode   IMSI
```

```

INDT0      INDT0      405025
INDT0      INDTB      405027

```

```

CAT2-IMSI table is (20 of 5000) 1% full.
;

```

This example retrieves entries from CAT2 IMSI Table containing specified sender TADigit Code. By default number of entries to be displayed is 1000.

```
rtrv-cat2-imsi:stadig=USACG
```

```
tklc1131001 20-01-23 05:43:42 EST EAGLE 46.9
```

```

SenTADCode  TADCode  IMSI
USACG       USACG    310410

```

```

CAT2-IMSI table is (20 of 5000) 1% full.
;

```

Legend

- **SenTADCode:** It will be used to identify the operator. It consist of two fields, with a total length of five characters consisting of three-character country code and a two-character operator/company identifier.
- **TADCode:** It will be used to identify circle of the operator. It is Operator ID.
- **IMSI:** It will store concatenation of MCC and MNC.

4.1.464 rtrv-clkopts

Use this command to retrieve the values of the clock parameters which are maintained in the STP's option table. All values are assigned initially to system defaults during STP installation, and can be updated using this command.

Parameters

This command has no parameters.

Example

```
rtrv-clkopts
```

Dependencies

None.

2014 E2014 Cmd Rej: Unrecognized parameter identifier

Notes

None

Output

```
rtrv-clkopts
```

```
e5oam 09-01-02 17:20:05 MST EAGLE 40.1.0
```

```
CLK OPTIONS
```

```
-----
```

```
PRIMARY
```

```
-----
```

```
HCLKSRC          rs422
```

```
HCLKLL           longhaul
```

```
SECONDARY
```

```
-----
```

```
HCLKSRC          rs422
```

```
HCLKLL           longhaul
```

```
;
```

```
rtrv-clkopts
```

```
e5oam 09-01-02 17:26:51 MST EAGLE 40.1.0
```

```
CLK OPTIONS
```

```
-----
```

```
PRIMARY
```

```
-----
```

```
HCLKSRC          rs422
```

```
HCLKLL           longhaul
```

```
SECONDARY
```

```
-----
```

```
HCLKSRC          rs422
```

```
HCLKLL           shorthaul
```

```
;
```

Related Topics

- [chg-clkopts](#)

4.1.465 rtrv-cmd

Use this command to retrieve the list of command classes to which a command is assigned. You can retrieve output for one command, commands in one command class, or all commands.

Parameters

class (optional)

The command class whose attributes are to be retrieved.

Range:*ayyyyy*

One alphabetic character followed by up to 5 additional alphanumeric characters.

cmd (optional)

The command whose attributes are to be retrieved.

Range:*ZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZ*

One alphabetic character followed by up to 19 additional alphanumeric characters, enclosed in double quotes.

Example

```
rtrv-cmd:cmd="ent-rte"
```

```
rtrv-cmd:class=dab
```

```
rtrv-cmd
```

Dependencies

The Command Class Management feature must be enabled before a configurable command class name can be specified in the `class` parameter.

2246 E2246 Cmd Rej: Command Class Management feature must be enabled

The value of the `cmd` parameter must be a valid system command.

2065 E2065 Cmd Rej: CMD parameter is not a valid Eagle command

The CCCNAMES table is corrupt or cannot be found.

2598 E2598 Cmd Rej: Cccnames table must be accessible

The CCMD table is corrupt or cannot be found.

2597 E2597 Cmd Rej: Cccmmd table must be accessible

The value of the `class` parameter must be a valid configurable or non-configurable command class name.

2316 E2316 Cmd Rej: Class name is not an existing command class name

The Command Class Management feature must be enabled before CHG-CMD or CHG-CMDCLASS command can be entered.

2246 E2246 Cmd Rej: Command Class Management feature must be enabled

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

Output

This example shows the command classes to which the `rept-stat-slk` command is assigned (non-configurable class `sys` and user-configured classes `u01`, `u02`, `krb`, and `u11`):

```
rtrv-cmd:cmd="rept-stat-slk"
```

```

eagle10404 04-01-22 16:30:56 EST EAGLE 31.3.0
cmd CLASS
rept-stat-slk sys, u01, u02, krb, u11
;

```

This example shows the commands assigned to user-configured command class *krb*:

```
rtrv-cmd:class=krb
```

```

eagle10404 04-01-22 16:30:56 EST EAGLE 31.3.0
CMD CLASS
rept-stat-slk sys, u01, u02, krb, u11
act-slk link, u09, krb
ent-user sa, krb, abc, u23
alw-card sys, u09 dab, krb
;

```

```
rtrv-cmd:class=link
```

```

eagle10404 10-03-06 16:30:56 EST EAGLE 42.0.0
CMD CLASS
alw-slk link, u11
unhb-slk link
inh-slk link, abc
rtrv-meas-sched link, abc, def
act-lbp link
act-dlk link
act-slk link
act-lpo link
blk-slk link, abc, u23, u31
dact-lbp link
canc-dlk link
canc-lpo link, u01, u02, u03, u04, u05, u06, u07, u08, u09,
u10,
u11, u12, u13
canc-slk link
ublk-slk link, u01, u02, u03, u04, u05, u06, u07, u08, u09,
u10,
u11, u12, u13, u14, u15, u16, u17, u18, u19, u20,
u21,
u22, u23, u24, u25, u26, u27, u28, u29, u30, u31, u32
rept-meas link
chg-meas link
tst-dlk link, krb
tst-slk link
;

```

```
rtrv-cmd
```

```

eagle10404 10-03-06 16:30:56 EST EAGLE 42.0.0
CMD CLASS
alw-slk link, u11
ent-user sa
unhb-slk link
rtrv-attr-seculog sa, u31
inh-slk link, abc
rtrv-meas-sched link, abc, def
act-lbp link
act-dlk link
act-slk link
rtrv-seculog sa, abc, def, ghi
act-lpo link
blk-slk link, abc, u23, u31
dact-lbp link
canc-dlk link
inh-card sys
canc-lpo link, u01, u02, u03, u04, u05, u06, u07, u08,
u09, u10,
                                u11, u12, u13
                                link
canc-slk link
ublk-slk link, u01, u02, u03, u04, u05, u06, u07, u08,
u09, u10,
                                u11, u12, u13, u14, u15, u16, u17, u18, u19,
u20, u21,
                                u22, u23, u24, u25, u26, u27, u28, u29, u30,
u31, u32
inh-trm sys, krb
rept-meas link
.
.
.
chg-meas link
tst-dlk link, krb
tst-slk link
;

```

Related Topics

- [chg-cmd](#)

4.1.466 rtrv-cmdclass

Use this command to retrieve the name and description of one command class or all command classes.

Parameters

class (optional)

The command class whose name and description are to be retrieved.

Range:

ayyyy

1 alphabetic character followed by up to 5 alphanumeric characters

Example

```
rtrv-cmdclass:class=krb
```

```
rtrv-cmdclass
```

Dependencies

The Command Class Management feature must be enabled and turned on before a configurable command class name can be specified in the `class` parameter.

2246 E2246 Cmd Rej: Command Class Management feature must be enabled

The CCCNAMES table is corrupt or cannot be found.

2598 E2598 Cmd Rej: Cccnames table must be accessible

The value of the `class` parameter must be a valid configurable or non-configurable command class name.

2316 E2316 Cmd Rej: Class name is not an existing command class name

Notes

The Command Class Management feature must be enabled and turned on before configurable command classes will appear in the command output.

Output

In the following examples, classes *u01*, *u03*, *u05*, and *u32* are default configurable command class names. Classes *krb* and *dab* are user-assigned configurable command class names. Default command class name *u02* was changed to *krb* and command class name *u04* was changed to *dab*. Descriptions of classes *krb* and *dab* were entered with the `descr` parameter when the class names were changed with the `chg-cmdclass` command.

```
rtrv-cmdclass:class=krb
```

```

eagle10404 04-01-22 16:30:56 EST  EAGLE 31.3.0
class          descr
krb            my command class description
;

```

```
rtrv-cmdclass
```

```

eagle10404 04-01-22 16:30:56 EST  EAGLE 31.3.0
class          descr
link          link maintenance commands
sa            security administration commands
sys          system maintenance commands
.
.

```

```

.
u01          configurable command class 1
krb          my command class description
u03          configurable command class 3
dab          your command class description
u05          configurable command class 5
.
.
.
u32          configurable command class 32
;

```

Related Topics

- [chg-cmdclass](#)

4.1.467 rtrv-csl

Use this command to retrieve all Common Screening List (CSL) entries for a specified feature, a list of screening entries for the specified feature and screening list name, or a specific DS or PC value for a particular feature and screening list name. The Common Screening List commands are used to tailor certain types of general screening information to specific features.

Parameters

ds (optional)

Digit string. A unique string of digits that is used by the specified screening feature.



Note:

The *ds* or *pc* parameter must be specified. Both parameters cannot be specified in the same command.

Range:

1 - 15 hexadecimal digits. Valid digits are 0-9, a-f, A-F.

- 1-6 digits—Prepaid IDP Query Relay *ccnc* list
- 1-15 digits—Prepaid IDP Query Relay *gt* list
- 1-10 digits—Prepaid IDP Query Relay *skbcsm* list
- 4 digits—IDP Screening for Prepaid *skts* list
- 1-15 digits—IDP Screening for Prepaid *insl* list
- 1-15 digits—VFLEX *vmprfx* list
- 1-6 digits—Info Analyzed Relay Base *ccnc* list
- 1-15 digits—Info Analyzed Relay Base *gt* list
- 2 digits—Info Analyzed Relay Base *trig* list

npbypass
SIP NPBYPASS List

skbcm
SK+BCSM List

skts
SK+TS List

trig
Trigger List

vmplx
Voice Mail Prefix List

opcdbc
OPC + DPC List

The following screening lists are valid for the indicated features:

ccnc, gt
Prepaid IDP Query Relay and Info Analyzed Relay Base

imsipfx
EIR

npbypass
SIP Number Portability

insl, skts
IDP Screening for Prepaid

skbcm
Prepaid IDP Query Relay and IDP Service Key Routing

trig
Info Analyzed Relay Base

vmplx
VFLEX

opcdbc
Prepaid IDP Query Relay

pc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

Synonym:

pca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001-005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006-255`.

The point code `000-000-000` is not a valid point code.

pc/pca/pci/pcn/pcn24 (optional)

Point code. The `ds` or a point code parameter must be specified.

pci (optional)

ITU international point code with subfields *zone-area-id*.

Range:

0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0-7*area*—000-255*id*—0-7

The point code `0-000-0` is not a valid point code.

pcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*).

Range:*s-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-**nnnnn*—0-16383*gc*—*aa-zz**m1-m2-m3-m4*—0-14 for each member; values must sum to 14**pcn24 (optional)**

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255*ssa*—000-255*sp*—000-255**pn (optional)**

Part Number. The 9-digit "893xxxxxx" part number of the feature for which the command is entered. The `rtrv-ctrl-feat` command description shows the part number in the command output example.

 **Note:**

The `pn` or `feature` parameter must be specified to identify the feature.

Range:

893000000 - 893999999

The first 3 digits are 893. Do not separate the digits with dashes or spaces. The following part numbers are valid for this command:

893012301

EIR

893015501

IDP Screening for Prepaid

893034201

Info Analyzed Relay Base

893016001

Prepaid IDP Query Relay

893016701

VFLEX

scpgta (optional)

Signaling Control Point (SCP) Global Title Address (GTA).

 **Note:**

The `scpgta` parameter is used only by the Prepaid IDP Query Relay feature.

Range:

1 - 21 digits, *none*

1 - 21 hexadecimal digits. Valid digits are 0-9, a-f, A-F

Example

```
rtrv-csl
rtrv-csl:feature="Prepaid IDP Query Relay":list=ccnc:ds=456789
rtrv-csl:feature="Prepaid IDP Query Relay":list=ccnc
rtrv-csl:feature="IDP Screening for
Prepaid":list=insl:ds=123456789abcdEF
rtrv-csl:scpgta=12345
rtrv-csl:feature="EIR":list=imsipfx:ds=401923423
rtrv-csl:pn=893016001:list=opcdpc
```

Dependencies

The value specified for the `feature` parameter must be a valid feature name for a feature that uses a Common Screening List. The feature must be specified as it appears in the `rtrv-ctrl-feat` command output. Enough of the name must be specified to make the name unique when two features begin with the same word or acronym. The specified feature name must be valid for a feature that uses a Common Screening List.

4339 E4339 Cmd Rej: Common screening list feature invalid

The following parameters are allowed with the indicated common screening list type:

- `list=ccnc—ds` parameter
- `list=gt—ds` parameter
- `list=imsipfx---ds` parameter
- `list=insl—ds` parameter
- `list=skbcm—ds` or `scpgta` parameter
- `list=skts—ds` parameter
- `list=trig—ds` parameter
- `list=vmpfx—ds` parameter

4464 E4464 Cmd Rej: Common screening list invalid parameter combination

The Common Screening List table is corrupt or cannot be found.

4467 E4467 Cmd Rej: Common screening list read fail

Only one of the `ds`, `pc`, and `scpgta` parameters can be specified in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `pn` or `feature` parameter must be specified before the `list` parameter can be specified.

4464 E4464 Cmd Rej: Common screening list invalid parameter combination

Notes

None

Output

This example retrieves the specified screening entry for the specified feature and screening list:

```
rtrv-csl:feature="Prepaid IDP Query Relay":list=ccnc:ds=456789
```

```
tekelecstp 05-07-12 08:45:21 EST EAGLE 34.1.0
Prepaid IDP Query Relay
CC+NC List
DS
-----
456789
```

```
CC+NC List table is (1 of 20) 5% full
;
```

This example retrieves all screening entries for the specified feature and screening list:

```
rtrv-csl:feature="Prepaid IDP Query Relay":list=ccnc
```

```
tekelecstp 05-07-12 08:44:50 EST EAGLE 35.0.0
Prepaid IDP Query Relay
CC+NC List
DS
-----
123
456789
754532
```

```
CC+NC List table is (3 of 20) 15% full
;
```

```
rtrv-csl:pn=893016701:list=vmpfx
```

```
tekelecstp 07-08-23 17:30:17 EST EAGLE 37.6.0
VFLEX
VM Prefix List
DS
-----
12
123
12345
123456789abcdef
```

```
VM Prefix List table is (4 of 100) 4% full
;
```

```
rtrv-csl:feature="Prepaid IDP Query Relay"
```

```
tekelecstp 10-10-29 12:49:31 EST EAGLE 43.0.0
Prepaid IDP Query Relay
CC+NC List
DS
-----
000015
000025
CC+NC List ( 2 of 20) 10%
Prepaid IDP Query Relay
GT List
DS          CDPN BCD
-----
```

1234567815 0

GT List (1 of 500) 1%

Prepaid IDP Query Relay

SK+BCSM List

DS	PT	IDPRCDPN	SCPGTA
----	----	----------	--------

0000000123	prepaidno	idprcdpn	0000000014
0000000143	prepaidno	idprcdpn	0000000014
1234567815	prepaidno	idprcdpn3	1234
123456782e	prepaidno	idprcdpn	NONE
1234567890	prepaidno	idprcdpn	NONE

SK+BCSM List (5 of 150) 3%

;

rtrv-csl

tekelecstp 10-10-29 12:55:34 EST EAGLE 43.0.0

Prepaid IDP Query Relay

CC+NC List

DS

000015

000025

CC+NC List (2 of 20) 10%

Prepaid IDP Query Relay

GT List

DS	CDPN BCD
----	----------

1234567815 0

GT List (1 of 500) 1%

Prepaid IDP Query Relay

SK+BCSM List

DS	PT	IDPRCDPN	SCPGTA
----	----	----------	--------

0000000123	prepaidno	idprcdpn	0000000014
0000000143	prepaidno	idprcdpn	0000000014
1234567815	prepaidno	idprcdpn3	1234
123456782e	prepaidno	idprcdpn	NONE
1234567890	prepaidno	idprcdpn	NONE

SK+BCSM List (5 of 150) 3%

IDP Screening for Prepaid

SK+TS List

DS

0025
0569
1529

SK+TS List (3 of 25) 12%

IDP Screening for Prepaid

INSL List

DS

0029
0048
0148

INSL List (3 of 50) 6%

SIP Number Portability

PFX List

DS

PFXSTRIP

2	NO
3	NO
02	NO
35	NO
002	NO
356	NO
0002	NO
3412	NO
00002	NO
11110	NO
12000012	NO
0000000012	NO

rtrv-csl:scpgta=0000000014

tekelecstp 10-10-29 12:57:35 EST EAGLE 43.0.0

Prepaid IDP Query Relay

SK+BCSM List

DS

PT

IDPRCDPN

SCPGTA

0000000123	prepaidno	idprcdpn	0000000014
0000000143	prepaidno	idprcdpn	0000000014

SK+BCSM List (2 of 150) 1%

;


```
rtrv-csl:feature="eir":ds=12313342
```

```
tekelecstp 13-10-03 11:38:55 EST 46.0.0-65.2.0
rtrv-csl:feature="eir":ds=12313342
```

```
EIR
PFX List
DS                TBS                RSP_LIST
-----
12313342          both                whitelist

PFX List ( 4 of 100000) 1%
```

```
;
```

```
rtrv-csl
```

```
tekelecstp 19-01-29 13:14:59 EST EAGLE 46.8.0.0-75.18.11
```

```
Prepaid IDP Query Relay
PC combination List
DPC                OPC                DOMAIN
-----
001-003-001        001-003-002        PCN24
001-001-005        -----            PCN24
1-001-1            -----            PCI
1-001-6            1-001-7            PCI
001-01-04          -----            PCN16
001-02-05          001-02-06          PCN16
00114              -----            PCN
00123              00124              PCN
-----            002-001-005        PCN24
-----            2-001-1            PCI
-----            002-01-04          PCN16
-----            00234              PCN
```

```
;
```

```
Rtrv-csl(when mergein is ON)
```

```
tklc1131103 21-10-20 14:06:57 EST EAGLE 47.0.0.0-78.25.0
```

```
Prepaid IDP Query Relay
GT List
DS                CDPN BCD                IDPRCDPN
-----
110011            0                        idprcdpn
123456789bcdec    0                        idprcdpn
123999948bcdec    0                        idprcdpn2
123999952bcdec    0                        idprcdpn2
123999972bcdec    0                        idprcdpn
12399998bcdec     0                        idprcdpn
```

```
GT List ( 6 of 500) 1%
```

Prepaid IDP Query Relay

Related Topics

- [chg-csl](#)
- [dlt-csl](#)
- [ent-csl](#)
- [rtrv-ctrl-feat](#)

4.1.468 rtrv-cspc

Use this command to show one or more lists of concerned signaling point codes that are to be notified when subsystem-prohibited or subsystem-allowed messages are received for an associated mate application.

Parameters

grp (optional)

Group name

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default:

Retrieve all.

Example

```
rtrv-cspc
```

```
rtrv-cspc:grp=grp01
```

Dependencies

If specified, the group name must exist in the database.

2411 E2411 Cmd Rej: CSPC group does not exist

Notes

If no group parameter is specified, a summary list of group names is displayed with an indication of network type and a percent full indication for each group.

Output

This example shows output when the ANSI/ITU SCCP Conversion feature is enabled:

```
rtrv-cspc
```

```
rlghncxa03w 04-01-07 11:43:02 EST EAGLE 31.3.0
CSPC GRP   NETWORK           PERCENT FULL
Grp01     ANSI                     2%
```

```

Grp02      ANSI, ITU, ITU-N24      3%
Grp03      ITU                      2%
;

```

This example shows output when the Spare Point Code Support feature is turned on, and the ANSI/ITU SCCP Conversion feature is enabled:

```
rtrv-cspc:grp=grp02
```

```

rlghncxa03w 05-01-07 11:43:02 EST  EAGLE 31.12.0
CSPC GRP      PC              Type
GRP02        001-012-123      A
              001-012-124      A
              7-089-0         I
              s-2-021-4       I
              s-00789         N
;

```

This example shows output when the Spare Point Code Support feature is turned on, and the ANSI/ITU SCCP Conversion feature is not enabled:

```
rtrv-cspc:grp=groupi
```

```

rlghncxa03w 05-01-07 11:43:02 EST  EAGLE 31.12.0
CSPC GRP      PCI
groupi        7-089-0
              s-2-021-4
;

```

This example shows output when the Spare Point Code Support feature is turned on, and the ANSI/ITU SCCP Conversion feature is not enabled:

```
rtrv-cspc:grp=grn16
```

```

tekelecstp 13-10-18 12:27:33 EST  45.1.0-64.77.0
CSPC GRP      PCN16
Grn16        001-02-03
;

```

Legend

- **CSPC PC TABLE IS 15% FULL**—Relative size of the CSPC point code tables
- **CSPC GRP**—Name of the CSPC broadcast group
- **NETWORK**—Network type or types associated with the point code or codes in the group. (When no parameters are specified in the command, only the groups are listed. The `grp` parameter must be specified to list the point codes in the specified group.)
- **PERCENT FULL**—Relative size of the CSPC broadcast group
- **PC**—Point codes that make up the CSPC broadcast group

- **Type**—Network type of the point code in the group. (The `grp` parameter is specified in the command to list the point codes in the specified group.)

Related Topics

- [dlt-cspc](#)
- [ent-cspc](#)

4.1.469 rtrv-ctrl-feat

Use this command to retrieve the status of feature access key controlled features that are enabled in the system.

Parameters

partnum (optional)

The Part Number to retrieve.

Range:

893000000 - 893999999

Do not include dashes in the 9-digit number.

Default:

Retrieve all controlled features

status (optional)

Retrieve features with the specified status (On or Off).

Range:

on

off

Default:

Retrieve features with On and Off status

Example

```
rtrv-ctrl-feat
rtrv-ctrl-feat:status=on
rtrv-ctrl-feat:partnum=893005911
```

Dependencies

None

Notes

None.

Output

The following output examples will differ from the output shown at your terminal and might include features that are not supported in your system. You must be entitled to use a feature before you can enable the feature and turn the feature on. If you are not

sure whether you are entitled to use a feature, contact your Oracle Sales Representative or Account Representative.

If a Part Number (partnum parameter) is entered that belongs to a feature associated with quantity, the output will show which quantity is currently enabled on the system, even if the specified Part Number is for a different quantity.

```
rtrv-ctrl-feat
```

```
rlghncxa03w 12-03-13 16:40:40 EST EAGLE 46.4.0
```

```
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
Command Class Management	893005801	on	----
LNP Short Message Service	893006601	on	----
Prepaid SMS Intercept Ph1	893006701	on	----
Intermed GTT Load Sharing	893006901	on	----
MNP Circ Route Prevent	893007001	on	----
XGTT Table Expansion	893006101	on	400000
XMAP Table Expansion	893007710	on	3000
Large System # Links	893005911	on	2800
Routesets	893006403	on	8000
EAGLE5 Product	893007101	on	----
Network Security Enhance	893009101	off	----
Telnet	893005701	on	----
Port Chk for MO SMS	893009301	on	----
SCCP Loop Detection	893016501	off	----
LNP ELAP Configuration	893010901	on	----
LNP ported TNs	893011036	on	384000000
LNP ported LRNs	893010501	on	200000
LNP ported NPANXXs	893009402	on	350000
15 Minute Measurements	893012101	off	----
EIR	893012301	on	----
EAGLE OA&M IP Security	893400001	off	----
SCCP Conversion	893012001	on	----
SE-HSL SLK Capacity	893013005	on	32
GSM Map Screening (GMS)	893013201	on	----
Enhanced GMS (EGMS)	893012401	on	----
MTP MAP Screening	893013501	on	----
Spare Point Code Support	893013601	on	----
GSM MAP SRI Redirect	893014001	on	----
ISUP NP with EPAP	893013801	on	----
Origin-Based MTP Routing	893014201	on	----
ITUN-ANSI SMS Conversion	893015301	on	----
Flexible GTT Load-Sharing	893015401	on	----
1100 TPS/DSM for ITU NP	893018001	off	----
IDP Screening for Prepaid	893015501	on	----
Prepaid IDP Query Relay	893016001	on	----
Origin Based SCCP Routing	893014301	on	----
GPort SRI Query for PP	893017701	off	----
Large MSU for IP Sig	893018401	off	----
Transaction Based GTT LS	893017101	on	----
Weighted GTT Loadsharing	893017001	off	----
Hex Digit Support for GTT	893018501	on	----
SEAS over IP	893018801	on	----

E5-SM4G Throughput Cap	893019102	on	6800
HIPR2 High Rate Mode	893020101	on	----
Circ Route Auto-Recovery	893017601	on	----
Enhanced Far-End Loopback	893018101	on	----
Multiple Linkset to APC	893019701	on	----
Proxy Point Code	893018710	on	100
GPORT	893017201	on	----
APOINT	893016601	on	----
IS41 GSM Migration	893017301	off	----
MTP Msgs for SCC Apps	893017401	off	----
INP	893017901	on	----
ANSI-41 INP Query	893017801	on	----
MO-based GSM SMS NP	893019401	on	----
MO-based IS41 SMS NP	893019501	on	----
MO SMS B-Party Routing	893024601	on	----
AMGTT	893021801	on	----
MT-Based GSM SMS NP	893020001	on	----
MT-Based GSM MMS NP	893024101	on	----
MT-Based IS41 SMS NP	893019901	on	----
G-Flex MAP Layer Routing	893021701	on	----
G-Flex	893021901	on	----
VFLEX	893016701	on	----
ST-HSL-A SLK Capacity	893027304	on	24
IDPR ASD	893025701	on	----
IDPR GRN	893025601	on	----
TIF ASD	893024501	on	----
TIF GRN	893025501	on	----
TIF Number Portability	893018901	on	----
TIF SCS Forwarding	893022201	on	----
TIF Simple Number Subst.	893024001	on	----
TCAP Opcode Based Routing	893027801	on	----
Flex Lset Optnl Based Rtg	893027701	on	----
MO SMS IS41-to-GSM Migr	893026201	on	----
ISLSBR	893026501	on	----
ITU TCAP LRN QUERY(LRNQT)	893026301	on	----
ATINP	893022101	off	----
IDP A-Party Blacklist	893033201	on	----
IDP A-Party Routing	893033301	on	----
IDP Service Key Routing	893033601	on	----
TIF Number Substitution	893022501	on	----
MO SMS ASD	893026701	on	----
MO SMS GRN	893026601	on	----
GTT LS ARI	893027401	off	----
GTT Action - DISCARD	893027501	on	----
GTT Action - DUPLICATE	893027601	on	----
GTT Action - FORWARD	893037501	on	----
INP Circ Route Prevention	893028501	off	----
TOBR Opcode Quantity	893027901	on	3
VGTT with 16 GTT lengths	893024801	on	----
6-Way LS on Routesets	893019801	on	----
ANSI41 AIQ	893034901	on	----
Info Analyzed Relay Base	893034201	off	----
Info Analyzed Relay NP	893026101	off	----
Info Analyzed Relay ASD	893035001	off	----
Info Analyzed Relay GRN	893035101	off	----

```

MTPRTD GWS Stop Action      893035601  on  ----
TIF Subscr CgPN Blacklist  893037601  on  ----
TIF Range CgPN Blacklist   893037701  on  ----
Service Portability        893034301  on  ----
S-Port Sub Dfrntiation     893037901  off  ----
LOCREQ Query Response      893038501  off  ----
Integrated Measurements    893037301  off  ----
PC & CIC Translation       893037201  on   1000
XUDT UDT Conversion        893035301  on  ----
Integrated GLS             893038901  on  ----
NPP Unlimited SDWC Chars   893039301  off  ----
EPAP Data Split           893039801  on  ----
E5-ENET-B IPSP High TPS   893039501  on  ----
S13/S13' Int for EIR      893042401  on  ----
Dual ExAP Config          893040501  on  ----
SIPNP                     893040601  on  ----
;

```

```
rtrv-ctrl-feat:partnum=893013201
```

```

rlghncxa03w 04-07-29 16:40:40 EST EAGLE 46.3.0
The following features have been permanently enabled:
Feature Name                Partnum      Status  Quantity
GSM Map Screening (GSM)     893013201   on      ----

```

If the part number specified in the `rtrv-ctrl-feat:partnum=` command is 893400001 for "EAGLE OA&M IP Security," an additional security warning section is displayed if any or all of the following conditions are met (and the output displays all applicable issues in a detailed warning section):

- The 893400001 FAK has Status=OFF, which suppresses non-secure protocol alarms
- The security default SSH option is set to "OFF"
- Any of the FTP servers have a Security setting of "OFF"

```
rtrv-ctrl-feat:partnum=893400001
```

```

rlghncxa03w 16-10-24 13:11:12 EST EAGLE 46.5.0.0.0-70.6.0
The following features have been enabled:

```

```

Feature Name                Partnum      Status  Quantity
EAGLE OA&M IP Security     893400001   off      ----

```

```

*****
*****      WARNING IP SECURITY ISSUE DETECTED      *****
*****
** EAGLE OA&M IP Security FAK is not enabled and ON      **
** The SECU_DFLT parameter SSH is set to OFF              **
** One or more of the FTP servers has SECURITY parameter to OFF **

```

```
*****
```

```
;
```

Related Topics

- [chg-ctrl-feat](#)
- [enable-ctrl-feat](#)

4.1.470 rtrv-data-rtdb

This command retrieves data from the RTDB on an active Service Module card. If the `loc` parameter is specified and the target card is an active Service Module card, the RTDB data is retrieved from that card. If the `loc` parameter is not specified, the data is retrieved on the active Service Module card that has the lowest IMT address. The RTDB status on the active Service Module card can be coherent or incoherent.

For LNP database items (TN) all Service Module cards are queried for the existence of the specified item. Either the Service Module card specified by the `loc` parameter or the Service Module card with the lowest IMT address returns full item information. Any remaining Service Module cards return either COHERENT or INCOHERENT if the item is found in the RTDB on the card.

Parameters

dn (optional)

Dialed Number.

Range:

5 - 15 digits

entity (optional)

Network Entity.

Range:

1 - 15 digits

entitytype (optional)

Entity Type.

Range:

sp

Service Provider: Any 10-digit TN

rn

Routing Number: Any 10-digit TN

vmsid

Voice Mail Server ID: Any 1-15 digit hexadecimal number

grn

Generic Routing Number: Any 1-15 digit hexadecimal number

imei (optional)

International Mobile Equipment Identity.

Range:

14 digits

imsi (optional)

International Mobile Subscriber Identity.

Range:

5 - 15 digits

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1117, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

lrn (optional)

Location Routing Number.

Range:

10 digits

npanxx (optional)

Numbering Plan Area.

Range:

6 digits

tn (optional)

Telephone Number.

Range:

10 digits

Example

```
rtrv-data-rtdb:tn=9194663133
```

```
rtrv-data-rtdb:npanxx=919466
```

```
rtrv-data-lrn=9194460000
```

```
rtrv-data-rtdb:imsi=12345
```

```
rtrv-data-rtdb:dn=12345
```

```
rtrv-data-rtdb:entity=abcdefabcdefabc
```

Retrieve DN information from a specific Service Module card.

```
rtrv-data-rtdb:dn=19195554444:loc=1107
```

Retrieve entity data from a specific Service Module card.

```
rtrv-data-rtdb:entity=12345:loc=1107
```

Dependencies

The specified card location must be equipped in the database.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

At least one of the `imsi`, `dn`, `entity`, `imei`, `entitytype`, `npanxx`, `lrn`, or `tn` parameters must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

Only one of the `tn`, `lrn`, or `npanxx` parameters can be specified in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `npanxx`, `lrn`, or `tn` parameter is specified, the LNP ELAP Configuration feature must be on.

3456 E3456 Cmd Rej: LNP ELAP Configuration feature must be ON

If the AINPQ, EIR, G-Flex, G-Port, INP, Prepaid IDP Relay Query, Prepaid SMS Intercept Ph1 (PPSMS), or V-Flex feature is turned on, or the ATINP feature is enabled, then the `imsi`, `dn`, `entity`, `imei`, or `entitytype` parameter must be specified.

4239 E4239 Cmd Rej: At least one other optional parameter is required

If the `imsi` parameter is specified, then the G-Flex, EIR, or S13 feature must be turned on.

2804 E2804 Cmd Rej: GFLEX or EIR or S13 feature must be ON

The G-Flex, G-Port, or V-Flex feature must be turned on, or the ATINP feature must be enabled before the `entity` parameter can be specified.

4240 E4240 Cmd Rej:GFLEX, GPORT or VFLEX feat must be on or ATINP enabled

If the `entitytype` parameter is specified, the `entity` parameter must be specified.

4257 E4257 Cmd Rej: Entity must be specified when Entity type is specified

If the `imei` parameter is specified, the EIR or S13 feature must be turned on.

2803 E2803 Cmd Rej: EIR or S13 feature must be ON

The destination specified by the `loc` parameter must correspond to a Service Module card running the VSCCP application.

4258 E4258 Cmd Rej: Target card is not a DSM card with VSCCP appl

The destination specified by the `loc` parameter must correspond to a Service Module card that is IS-NR.

4259 E4259 Cmd Rej: Target card is not in Active state

A primary Service Module card must be provisioned.

2025 E2025 Cmd Rej: Invalid card location

An EPAP-related feature must be turned on before the `entity`, `entitytype`, or `dn` parameter can be specified.

4815 E4815 Cmd Rej: At least one EPAP related feature must be ON

The value specified by the `loc` parameter must indicate a DN or IMSI card before the `dn` or `imsi` parameter can be specified, respectively.

5474 E5474 Cmd Rej: Card does not support specified data type

Notes

For DN and DN Block entries, whichever entity is provisioned in the order of SP/RN, VMSID, GRN, will become EntIdx1.

MTT 2376 DELETED. M Buckland

Output



Note:

A value of "---" in the TT column indicates that the service does not have a translation type defined in the EAGLE and that call processing will ignore the override data displayed.

This example retrieves LRN Data:

```
rtrv-data-rtdb:lrn=1111111111
```

```
tekelecstp 09-08-30 15:23:45 EST EAGLE 41.1.0
Card Loc      : 1103   Status:Coherent
Card Loc: 1103
LRN           SP
1111111111   tklc

SERV  TT  XLAT  RI  PCA          SSN  NGT  RGTA
CLASS 10  DPCSSN GT   002-002-002  2   ---  yes
WSMSC 11  DPCSSN SSN   010-010-010 10   ---  no
```

```
;
```

This example retrieves NPANXX Data:

```
rtrv-data-rtdb:npanxx=919225
```

```
tekelecstp 09-08-30 15:37:36 EST EAGLE 41.1.0

Card Loc      : 1103   Status:Coherent
Card Loc: 1103
  NPANXX MR  LRN
  919225 yes yes LA  LI
SERV  TT  XLAT  RI  PCA          SSN  NGT  RGTA
AIN   --- DPC   GT   -----  ---  ---  no
IN    --- DPC   GT   -----  ---  ---  no
CLASS 10  DPCSSN SSN   007-007-007  7   ---  no
```

;

This example retrieves TN Data:

```
rtrv-data-rtdb:tn=9192252645
```

```
tekelecstp 09-08-30 15:38:56 EST EAGLE 41.1.0
```

```
Card Loc      : 1103   Status:Coherent
```

```
Card Loc: 1103
```

```
TN           SP      LRN           PTYPE  
9192252645  tklc   1111111111  none  LA LI
```

```
SERV  TT  XLAT  RI  PCA           SSN  NGT  RGTA  
LIDB  --- DPCSSN SSN   003-003-003  3  ---  no  
ISVM  --- DPCSSN SSN   004-004-004  4  ---  no
```

;

This example retrieves IMSI Data:

```
rtrv-data-rtdb:imsi=12345
```

```
tekelecstp 08-05-11 07:55:28 EST EAGLE5 39.0.0
```

```
Card Loc      : 1105   Status : Coherent
```

```
IMSI           EntIdx           IMEI Index  
12345          H'00000002       H'00000006
```

```
Entity Address Type PC(NATL-gg) RI  SSN TT  NP NAI DA  
abcdef123456abc SP  02000          SSN 122 000 00 000 prefix
```

```
SRFIMSI           NSSN  CCGT  NTT  NNP  NNAI  
1234567890abcde yes  no   no  no  no
```

```
IMEI           VERSION  BLACK  GRAY  WHITE  
12345678901234  0     yes   yes   yes
```

;

This example retrieves Entity data:

```
rtrv-data-rtdb:entity=abcdef123456abc
```

```
tekelecstp 09-08-30 07:53:00 EST EAGLE5 41.1.0
```

```
INFO: Default value of Entity Type is : SP
```

;

```
tekelecstp 06-03-30 07:53:00 EST EAGLE5 35.0.0
```

```
Card Loc      : 1105   Status : Coherent
```

```

Entity Address Type PC(NATL-gg) RI SSN TT NP NAI DA SRFIMSI
abcdef123456abc SP 02000 SSN 122 000 00 000 prefix
1234567890abcde

```

```

NSSN CCGT NTT NNP NNAI
yes no no no no

```

;

This example retrieves IMEI data:

```
rtrv-data-rtdb:imei=12345678abcdef
```

```
tekelecstp 06-03-30 07:54:55 EST EAGLE5 35.0.0
```

```
Card Loc : 1105 Status : Coherent
```

```

IMEI VERSION BLACK GRAY WHITE
12345678abcdef 0 yes no yes

```

;

This example retrieves data for a DN associated with two NEs:

```
rtrv-data-rtdb:dn=1111111111111111
```

```
tekelecstp 08-08-11 07:56:48 EST EAGLE5 39.1.0
```

```

Card Loc : 1103 Status:Coherent
DN Portability Type (255)
1111111111111111 No portability type

```

```

EntIdx1 EntIdx2
H'00000007 H'00000005

```

```

Entity Address Type PC(INTL ) RI SSN TT NP NAI DA
bcda4321 RN 5-005-5 GT 000 000 00 000 none

```

```

SRFIMSI NSSN CCGT NTT NNP NNAI
no no no no no

```

```

Entity Address Type PC(ANSI ) RI SSN TT NP NAI DA
abcd1234 VMSID ----- GT 000 000 00 000 none

```

```

SRFIMSI NSSN CCGT NTT NNP NNAI
no no no no no

```

```
ASD Address: 1234567890
```

;

This example retrieves DN data from a specific Service Module card:

```
rtrv-data-rtdb:dn=19195554444:loc=1107
```

```
tekelecstp 08-08-26 14:03:15 EST EAGLE5 39.1.0
```

```
Card Loc      : 1107   Status:Coherent
  DN          :      Portability Type ( 1)   Entity Index
  19195554444   Own Number ported out      H'0000513d

Entity Address Type   PC(ANSI  ) RI  SSN TT  NP NAI DA
1234           RN   -----  GT  000 000 00 000 none

SRFIMSI       NSSN  CCGT  NTT  NNP  NNAI
              no   no   no   no   no
```

```
ASD Address: 1234567890
```

```
;
```

This example retrieves DN data associated with one NE:

```
rtrv-data-rtdb:dn=12345
```

```
tekelecstp 08-08-18 07:56:48 EST EAGLE5 39.1.0
```

```
Card Loc      : 1101   Status:Coherent
  DN          :      Portability Type (255)
  12345       :      No portability type
```

```
EntIdx1      EntIdx2
-----      -----
```

```
ASD Address: 1234567890
```

```
;
```

This example retrieves DN data when the data is non-ported:

```
rtrv-data-rtdb:dn=d1000
```

```
tklcl090203 08-10-20 10:57:33 EST EAGLE 40.0.0
```

```
Card Loc      : 1215   Status:Coherent
  DN          :      Portability Type ( 36)
  d1000       :      Not Identified to be ported
```

```
EntIdx1      EntIdx2
-----      -----
```

```
ASD Address: abcd0
```

```
;
```

This example retrieves data for a DN associated with one NE, one ASD and one NS:

```
rtrv-data-rtdb:dn=2324567893
```

```
tekelecstp 09-04-11 07:56:48 EST EAGLE5 41.0.0

Card Loc      : 1103   Status:Coherent
DN            : 2324567893   Portability Type (255)   Category
                No portability type   Private

EntIdx
H'00000007

Entity Address Type      PC(INTL  ) RI  SSN TT  NP NAI DA
bcda4321      RN        5-005-5   GT  000 000 00 000 none

SRFIMSI      NSSN  CCGT  NTT  NNP  NNAI
                no   no   no   no   no

ASD Address: 1234567890

NS Address      NS Category
2312457895      Public

;
```

This example retrieves data for a non-ported DN associated with one ASD and one NS:

```
rtrv-data-rtdb:dn=1347823456
```

```
tekelecstp 09-04-11 07:56:48 EST EAGLE5 41.0.0

Card Loc      : 1105   Status:Coherent
DN            : 1347823456   Portability Type ( 36)   Category
                Not Identified to be ported   Public

EntIdx
-----

ASD Address: 1234545367

NS Address      NS Category
1345692324      Private

;
```

This example retrieves data for a DN located in a non-ranged entry and listed as an A-Party Blacklisted private number:

```
rtrv-data-rtdb:dn=123456
```

```
tekelecstp 09-06-18 07:56:48 EST EAGLE5 41.1.0
```

```

Card Loc      : 1101   Status:Coherent
  DN
  123456      Portability Type (255)      Category
                                     Private
                                     A-Pty Blk

```

This example retrieves data for a DN located in a ranged entry and listed as an A-Party Blacklisted public number:

```
rtrv-data-rtdb:dn=123456
```

```
tekelecstp 09-06-18 07:56:48 EST EAGLE5 41.1.0
```

```

Card Loc      : 1101   Status:Coherent
  BEG DNBLK   END DNBLK   Portability Type (255)
Category
  112233      4455667     No portability type
Public
Pty Blk

```

A-

This example retrieves NPANXX split data:

```
rtrv-data-rtdb:npanxx=919111
```

```
tekelecstp 09-08-30 15:37:36 EST EAGLE 41.1.0
```

```

Card Loc      : 1103   Status:Coherent
Card Loc: 1103
  NPANXX MR   LRN
OLD 919111 yes no  LA  LI
NEW 918111 yes yes LA  LI

```

```

Default Data
SERV  TT  XLAT  RI  PCA  SSN  NGT  RGTA
LIDB  --- DPC  GT   001-001-001  --- --- no

```

```
;
```

Legend

- **Card Loc**—Location of the card that contains the retrieved information
- **Status**—RTDB database status; Coherent or Incoherent
- **IMSI**—International Mobile Subscriber Identity
- **EntIdx, EntIdx1, EntIdx2**—Hexadecimal index where the Network Entity data is stored in the Entity Bucket on the Service Module card
- **IMEI Index**—Hexadecimal index at which the IMEI data is stored in the IMEI Bucket on the Service Module card or S13 card running DEIRHC GPL.
- **Entity Address**—Hexadecimal Network Entity address

- Type—Network Entity type; Service Provider (SP), Routing Number (RN), Voice Mail Server ID (VMSID) or Generic Routing Number (GRN)
- **PC** (*type of PC*)—Point code and type of point code (ANSI; NATL - ITU National with or without group code (-gg))
- **RI**—Routing Indicator
- **SSN**—Subsystem Number
- **TT**—Translation Type
- **NP**—Numbering Plan
- **DA**—Digits action (Prefix, Suffix, or none)
- **SRFIMSI**—Signaling Relay Function IMSI
- **IMSI**—International Mobile Subscriber Identity.
- **NSSN**—New Subsystem Number (yes or no)
- **CCGT**—Cancel GT (yes or no)
- **NTT**—New Translation Type
- **NNP**—New Numbering Plan
- **NNAI**—New Nature of Address Indicator.
- **IMEI**—International Mobile Equipment Identity
- **VERSION**—IMEI data version
- **BLACK, WHITE, GRAY**—Equipment Identity Register search lists
- **DN**—Dialed Number
- **ASD Address**—Additional Subscriber Data address
- **Portability Type** (*number*)—
 - 0—Not known to be ported
 - 1—Own number ported out
 - 2—Foreign number ported to Foreign network
 - 3—Prepaid Short Message Service (PPSMS) subscriber on server #1
 - 4—PPSMS subscriber on server #2
 - 5—IS41 to GSM migrated subscriber with only GSM handset active
 - 6—PPSMS subscriber on server #3
 - 7—PPSMS subscriber on server #4
 - 8—PPSMS subscriber on server #5
 - 9—PPSMS subscriber on server #6
 - 10—PPSMS subscriber on server #7
 - 11—PPSMS subscriber on server #8
 - 12—PPSMS subscriber on server #9
 - 13—PPSMS subscriber on server #10
 - 14—PPSMS subscriber on server #11
 - 15—PPSMS subscriber on server #12

- 16—PPSMS subscriber on server #13
 - 17—PPSMS subscriber on server #14
 - 18—PPSMSsubscriber on server #15
 - 19—PPSMS subscriber on server #16
 - 20—PPSMS subscriber on server #17
 - 21—PPSMS subscriber on server #18
 - 22—PPSMS subscriber on server #19
 - 23—PPSMS subscriber on server #20
 - 24—PPSMS subscriber on server #21
 - 25—PPSMS subscriber on server #22
 - 26—PPSMS subscriber on server #23
 - 27—PPSMS subscriber on server #24
 - 28—PPSMS subscriber on server #25
 - 29—PPSMS subscriber on server #26
 - 30—PPSMS subscriber on server #27
 - 31—PPSMS subscriber on server #28
 - 32—PPSMS subscriber on server #29
 - 33—PPSMS subscriber on server #30
 - 34—PPSMS subscriber on server #31
 - 35—PPSMS subscriber on server #32
 - 36—Not Identified to be ported
 - 255—No portability type
- **NS Address**—Address of the associated DN, used for Number Substitution
 - **NS Category**—Category of the associated DN, used for Number Substitution
 - **NPA**—Number Planning Area (Area Code)
 - **NXX**—Exchange Code

4.1.471 rtrv-dconn

Use this command to retrieve Diameter connection entries. The DCONN table supports the provisioning information related to the diameter connections.

Parameters

aname (optional)

Association name configured in the association table and linked with a diameter connection.

Range:

ayyyyyyyyyyyyyyy

A string of alphanumeric characters, beginning with a letter and up to 15 characters in length. Valid values are a..z, A..Z, 0..9.

Default:

No change to the current value

System Default:

null

dcname (optional)

Diameter connection name. This parameter specifies the unique logical name assigned to each diameter connection.

Range:

aaaaaaaaaaaaaaaa

A string of alphanumeric characters, beginning with a letter and up to 15 characters in length. Valid values are a..z, A..Z, 0..9.

Default:

No change to the current value

System Default:

null

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
rtrv-dconn
rtrv-dconn:dcname=connection1
rtrv-dconn:aname=assoc12d
rtrv-dconn:loc=1103
```

Dependencies

The S13/S13' EIR feature must be enabled before retrieving any diameter connection entry.

2724 E2724 Cmd Rej: S13 Feature Must Be Enabled

The DCONN table should be accessible.

2735 E2735 Cmd Rej: Failed reading DCONN table

The specified card location must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

A DEIR card must be present at the specified location.

2074 E2074 Cmd Rej: Card location specified must be an DEIR card.

DCNAME must be present in DCONN table.

2783 E2783 Cmd Rej: DCNAME not present in DCONN table

The value specified for the ANAME parameter must be present in the IPAPSOCK table and referred by a diameter connection.

4099 E4099 Cmd Rej: Association name not found

Multiple combinations of optional parameters are not allowed.

3047 E3047 Cmd Rej: Parameter combination invalid

Notes

Multiple combinations of optional parameters are not allowed.

If optional parameters are specified, only the entries that match the entered parameters are displayed.

Output

This example displays output when no parameter is specified:

```
rtrv-dconn
```

```
tekelecstp 14-03-21 02:59:22 EAGLE 46.0.0 65.11.0
rtrv-dconn
Command entered at terminal #19.
```

```
;
```

```
Command Accepted - Processing
```

```
tekelecstp 14-03-21 02:59:22 MST EAGLE 46.0.0 65.11.0
```

```
DCNAME          ANAME          LOC   RSVDTPS  MAXTPS  Tw(s)
Td(s)
```

```
-----
```

d1	a1	1101	250	8000	6	3
d2	a2	1101	250	8000	6	3
d31	a31	1101	250	8000	6	3
d41	a41	1101	250	8000	6	3
d3	a3	1101	250	8000	6	3
d4	a4	1101	250	8000	6	3
dd10	aa10	1101	250	8000	6	3
b1	b1	1103	250	8000	6	3
b2	b2	1103	250	8000	6	3
b31	b31	1103	250	8000	6	3
b41	b41	1103	250	8000	6	3
b3	b3	1103	250	8000	6	3
b4	b4	1103	1500	8000	7	5
b10	b10	1103	250	8000	6	3
aasw234edf56tgr	x1	1105	250	8000	6	

```
3
```

```

DCONN table is (15 of 512) 3% full.
;

```

This example displays output when the DCNAME parameter is specified:

```
rtrv-dconn:dcname=d1
```

```

tekelecstp 14-03-21 03:01:22 MST EAGLE 46.0.0 65.11.0
rtrv-dconn:dcname=d1
Command entered at terminal #19.
;

```

```
Command Accepted - Processing
```

```
tekelecstp 14-03-21 03:01:22 MST EAGLE 46.0.0 65.11.0
```

DCNAME	ANAME	LOC	RSVDTPS	MAXTPS	Tw(s)	Td(s)
d1	a1	1101	250	8000	6	3

```
;

```

This example displays output when the ANAME parameter is specified:

```
rtrv-dconn:aname=a1
```

```

tekelecstp 14-03-21 03:03:24 MST EAGLE 46.0.0 65.11.0
rtrv-dconn:aname=a1
Command entered at terminal #19.
;

```

```
Command Accepted - Processing
```

```
tekelecstp 14-03-21 03:03:24 MST EAGLE 46.0.0 65.11.0
```

DCNAME	ANAME	LOC	RSVDTPS	MAXTPS	Tw(s)	Td(s)
d1	a1	1101	250	8000	6	3

This example displays output when the LOC parameter is specified:

```
rtrv-dconn:loc=1101
```

```

tekelecstp 14-03-21 03:06:01 MST EAGLE 46.0.0-65.11.0
rtrv-dconn:loc=1101
Command entered at terminal #19.
;

```

```
Command Accepted - Processing
```

```
tekelecstp 14-03-21 03:06:01 MST EAGLE 46.0.0-65.11.0
```

DCNAME	ANAME	LOC	RSVDTPS	MAXTPS	Tw (s)	Td (s)
d1	a1	1101	250	8000	6	3
d2	a2	1101	250	8000	6	3
d31	a31	1101	250	8000	6	3
d41	a41	1101	250	8000	6	3
d3	a3	1101	250	8000	6	3
d4	a4	1101	250	8000	6	3
dd10	aa10	1101	250	8000	6	3

```
DCONN table is (15 of 512) 3% full.
```

```
;
```

Legend

This section defines the fields used in the `rtrv-dconn` command output:

- **DCNAME** --- Diameter connection name.
- **ANAME** --- Association name configured in IPAPSOCK table which is associated with the diameter connection.
- **LOC** --- Specifies the DEIR card location on which the particular diameter connection is configured.
- **RSVDTPS** --- This (Reserved TPS) is the guaranteed TPS for a diameter connection.
- **MAXTPS** --- This is the maximum TPS for a diameter connection.
- **Tw** --- This (Diameter Watchdog Timer) timer is used to control how long the S13 process will wait for a DWA (Diameter Watchdog Answer) response before sending a DWR (Diameter Watchdog Request).
- **Td** --- This (Diameter Peer Disconnect Timer) is used to control how long the S13 process will wait for a DPA (Disconnect Peer Answer) response before sending a DPR (Disconnect Peer Request).

Related Topics

- [chg-dconn](#)
- [dlt-dconn](#)
- [ent-dconn](#)

4.1.472 rtrv-deiropts

Use this command to retrieve S13/S13' diameter EIR configuration options.

Parameters

This command has no input parameters.

Example

```
rtrv-deiropts
```

Dependencies

The S13/S13' EIR Feature must be enabled before retrieving Diameter EIR configuration options.

2724 E2724 Cmd Rej: S13 Feature Must Be Enabled

The DEIROPTS table should be accessible.

4820 E4820 Cmd Rej: Failure accessing EGLEOPTS table

Output

This example shows output with default DEIR options.

```
rtrv-deiropts

tekelecstp 13-03-16 11:43:52 EST EAGLE 45.1
rtrv-deiropts
Command entered at terminal #4.
  DEIRGRSP           = off                DEIRRSPTYPE         = type1
  DEIRIMSICLK        = off                CONGERR             = 3004
  VENDID             = 0                  APPLID              = 16777252
  PRODUCT            = none               DPR Cause           = Do not want to
talk(2)
  DEIRIMSISCRN       = off                DEIRLOGWL           = off
  DEIRDFLTIMSISCRN   = off                DEIRDFLTIMSILKUP    = range
  DEIRDFLTIMSIRESP   = whitelist
```

This example shows output with provisioned DEIR options.

```
rtrv-deiropts

tekelecstp 13-03-16 11:43:52 EST EAGLE 45.1
rtrv-deiropts
Command entered at terminal #4.
  DEIRGRSP           = off                DEIRRSPTYPE         = type1
  DEIRIMSICLK        = off                CONGERR             = 3004
  VENDID             = 4004               APPLID              = 16777252
  PRODUCT            = abc                DPR Cause           = Busy(1)
  DEIRIMSISCRN       = off                DEIRLOGWL           = off
  DEIRDFLTIMSISCRN   = off                DEIRDFLTIMSILKUP    = both
  DEIRDFLTIMSIRESP   = blacklist
```

Legend

- **DEIRGRSP** -- S13/S13' EIR Global Response Type. The Global Response Type is used to override the response that is sent back to the MME.

- **DEIRRSPTYPE** -- S13/S13' EIR Response Type. The Response Type is used to determine how the lists are to be searched.
- **DEIRIMSICHK** -- Indicates whether IMSI will be used when determining if an IMEI is to be "black" listed or not.
- **CONGERR** -- It displays the diameter response to be sent by DEIRHC card at the time of card congestion.
- **VENDID** -- S13 local Vendor ID. All the outgoing messages that require Vendor ID in Vendor-Specific-Application-ID AVP will use this configured value.
- **APPLID** -- Authentication Application ID. The application ID configured should match with the Auth-Application-Id (AVP Code 258) value in Vendor-Specific-Application-ID AVP. This application ID is fixed and cannot be changed.
- **PRODUCT** -- It contains the vendor-assigned name for the product. All the outgoing messages that require Product name AVP will use this configured value.
- **DPR Cause** -- It is a Disconnect Cause in DPR (Disconnect Peer Request) message sent by the DEIRHC card.
- **DEIRIMSISCRN** -- Indicates whether the IMSI Screening for Diameter Equipment Identity Register (EIR) will be done before the IMEI check.
- **DEIRLOGWL** -- Indicates whether the white list logging for Diameter Equipment Identity Register (EIR) will be on.
- **DEIRDFLTIMSISCRN** -- Indicates whether the default IMSI Screening for Diameter Equipment Identity Register (EIR) will be on.
- **DEIRDFLTIMSILKUP** -- Indicates the order of IMEI table lookup for default IMSI screening.
- **DEIRDFLTIMSIRESP** -- Indicates the default IMEI status for default IMSI screening.

Related Topics

- [chg-deiropts](#)

4.1.473 rtrv-dlk

Use this command to show the parameters of a TCP/IP data link.

Parameters

ipaddr (optional)

The TCP/IP data link's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number.

Range:

1-223, 0-255

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

Default:
Display all.

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Default:

All TCP/IP data links are shown.

Example

```
rtrv-dlk
rtrv-dlk:loc=1201
rtrv-dlk:ipaddr=193.4.201.34
```

Dependencies

The `loc` and `ipaddr` parameters cannot be specified in the same command.

2609 E2609 Cmd Rej: Only one optional parameter may be specified

The shelf and card must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The specified card must have a TCP/IP data link assigned to it.

2604 E2604 Cmd Rej: Card location not assigned a TCP/IP link

Notes

None

Output

For these cards, the value of the `auto` parameter is defaulted to `no`, and the value of the `duplex` parameter is defaulted to `half`.

For these cards, if the `auto=yes` parameter is specified, then the values of `speed` and `duplex` parameters are not shown.

```
rtrv-dlk

tekelecstp 07-02-06 11:12:47 EST EAGLE 37.0.0
LOC  IPADDR          LINK SPEED  DUPLEX  AUTO
1101 192.168.63.34     100Mbit  FULL    NO
1103 192.168.63.11     10Mbit   HALF    NO
1107 192.168.63.12     -----  ----    YES
1201 192.168.63.13     10Mbit   HALF    NO
```

```
    1203 192.168.63.14    10Mbit    HALF    NO
;

rtrv-dlk:loc=1101

    tekelecstp 07-02-01 14:09:13 EST  EAGLE 37.0.0
    LOC  IPADDR          LINK SPEED  DUPLEX  AUTO
    1101 192.168.63.34    100Mbit   FULL    NO
;

rtrv-dlk:ipaddr=192.168.63.11
```

```
    tekelecstp 07-02-01 14:19:14 EST  EAGLE 37.0.0
    LOC  IPADDR          LINK SPEED  DUPLEX  AUTO
    1103 192.168.63.11    10Mbit    HALF    NO
;
```

This example shows the output when the specified IP address is not assigned to a TCP/IP data link:

```
rtrv-dlk:ipaddr=193.4.201.28

    tekelecstp 07-02-01 14:19:14 EST  EAGLE 37.0.0
    LOC  IPADDR          LINK SPEED  DUPLEX  AUTO
    IPADDR not assigned to a TCP/IP Link.
;
```

This example shows the output when there are no TCP/IP data links in the database.

```
rtrv-dlk

    tekelecstp 07-02-02 14:19:14 EST  EAGLE 37.0.0
    LOC  IPADDR          LINK SPEED  DUPLEX  AUTO
    No TCP/IP Links are defined in the database.
;
```

This example shows the output when the specified IP address is assigned to a TCP/IP node instead of a TCP/IP data link:

```
rtrv-dlk:ipaddr=193.4.201.63

    tekelecstp 07-02-01 12:12:10 EST  EAGLE 37.0.0
    LOC  IPADDR          LINK SPEED  DUPLEX  AUTO
    IPADDR assigned to a TCP/IP Node.
;
```

Legend

- **IPADDR**—IP address associated with the interface on the data link
- **LOC**—Card location containing the data link
- **LINK SPEED**—Bandwidth for the interface in megabits per second, **10** or **100**
- **AUTO**—Whether or not to automatically determine duplex and speed. If the value is *yes*, then duplex and speed are automatically determined. If the value is *no*, then duplex and speed are not automatically determined.
- **DUPLEX**—Mode of operation of the interface

Related Topics

- [act-dlk](#)
- [canc-dlk](#)
- [dlt-dlk](#)
- [ent-dlk](#)
- [rept-stat-dlk](#)
- [tst-dlk](#)

4.1.474 rtrv-dstn

Use this command to show the destination point code entries in the Destination point code table.

Parameters**Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

aliasa (optional)

ANSI alias point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Range:

0-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When `chg-sid:pctype=ansi` is specified, *ni=000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni=001–005*.

When `chg-sid:pctype=ansi` is specified, *nc=000* is valid if *ni=006–255*.

When `chg-sid:pctype=ansi` is specified, *ni-*-** is valid if *ni =006–255*.

The point code *000-000-000* is not a valid point code.

aliasa/aliasi/aliasn/aliasn24/aliasn16 (optional)

Alias point code.

aliasi (optional)

ITU international alias point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*). If this parameter is specified with an ITU international destination (*dpci*) point code, the prefix subfields cannot be the same, i.e., both spare or both non-spare.

If an ITU international destination (*dpci*) point code is entered, then the *dpci* and *aliasi prefix* subfields cannot be the same (both spare or both non-spare). Up to 2 comma-delimited entries can be entered in the point code list.

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

aliasn (optional)

ITU national alias point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*). If this parameter is specified with an ITU national destination (*dpcn*) point code, the prefix subfields cannot be the same, i.e., both spare or both non-spare.

If an ITU national destination (*dpcn*) point code is entered, then the *dpcn* and *aliasn prefix* subfields cannot be the same (both spare or both non-spare). Up to 2 comma-delimited entries can be entered in the point code list.

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

aliasn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

aliasn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

clli (optional)

Common Language Location Identifier. The Common Language Location Identifier assigned to the link.

Range:

ayyyyyyyyyy

1 alphabetic character followed by 10 alphanumeric characters

Default:

none

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

p-, 000-255, *, **, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk values *, **, and *** are not valid for the *ni* subfield.

If ** or *** is specified for the *nc* subfield, either *, **, or *** must be specified for the *ncm* subfield.

When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc=000* is not valid if *ni=001-005*.

When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006-255*.

When *chg-sid:pctype=ansi* is specified, *ni-*-** is valid if *ni= 006-255*.

The point code *000-000-000* is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:*s-, p-, ps-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**zone—0-7**area—000-255**id—0-7*The point code *0-000-0* is not a valid point code.**dpcn (optional)**

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmt1` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s-, p-, ps, 0-16383, aa-zz, **

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

An asterisk (*) can be specified for the node (*nnnnn* or every member of a flexible point code) or for the group code (*gc*) only when group codes are present in the point codes.

An asterisk (*) can be specified either for the node or for the group code, but not both.

*prefix—s-, p-, ps-**nnnnn—0-16383, ***gc—aa-zz, ***m1-m2-m3-m4—0-14* for each member; values must sum to 14; or **-*-** when the point code includes a group code.**dpcn24 (optional)**

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:*p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p**msa—000-255**ssa—000-255**sp—000-255***dpcn16 (optional)**

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:*p--, 000---127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

homescp (optional)

This parameter displays all destination point codes (DPCs) that have the internal Home SCP flag set to the specified value.

Range:

yes

the DPC is considered a Home SCP for messages with no Global Title Address Digits

no

the DPC is not considered a Home SCP for messages with no Global Title Address Digits

homesmsc (optional)

This parameter displays all destination point codes (DPCs) that have the internal Home SMSC flag set to the specified value.

Range:

yes

the DPC is considered a Home SMSC for messages with no Global Title Address Digits

no

the DPC is not considered a Home SMSC for messages with no Global Title Address Digits

msar (optional)

Memory space accounting report. When the NRT feature or the CRMD feature, or both, is turned on, this parameter specifies whether summary or detail destination table memory space accounting information is displayed. The *summary* or *detail* report appears following the destination information that is requested by entering the command with or without other parameters. The *only* parameter value displays a detail destination table memory space accounting report without any other destination information. If neither feature is on, only the summary report information is displayed; the detail report information cannot be displayed.

Range:

detail

only

summary

Default:**detail**

if `rtrv-dstn` is entered with no parameters

summary

if `rtrv-dstn` is entered with parameters

ncai (optional)

Nested cluster allowed indicator. This parameter specifies whether the route to the cluster point code can be different for provisioned members of the cluster and whether clusters with nested cluster point codes, or clusters that do not allow nested cluster point codes are displayed.

Range:**yes**

Display clusters with NCAI set to *yes*

no

Display clusters with the NCAI set to *no*

nprst (optional)

NM bits reset. This parameter displays all entries with the specified value of the `nprst` option.

Range:**off**

Display entries with an NPRST value of *off*

on

Display entries with an NPRST value of *on*

pcst (optional)

Point code subtype. This parameter displays point codes with the specified subtype.

Range:**none**

Display only point codes without subtype prefixes

p

Display only private point codes

ps

Display only private and spare point codes

s

Display only spare point codes

pctype (optional)

Point code domain. This parameter displays point codes of the specified domain type.

Range:***ansi***

Display only ANSI point codes

itui

Display only ITU International point codes

itun

Display only ITU National point codes

itun24

Display only 24-bit ITU National point codes

itun16

Display only 16-bit ITU National point codes

ppc (optional)ANSI proxy point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

The proxy point code must be a full point code.

Range:*000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.The point code *000-000-000* is not a valid point code.**ppc/ppca/ppci/ppcn/ppcn24/ppcn16 (optional)**

Proxy Point Code.

The proxy point code must be a full point code.

ppci (optional)ITU international proxy point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).**Range:***s-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*The point code *0-000-0* is not a valid point code.**ppcn (optional)**ITU national proxy point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (*members*) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The prefix subfield indicates

a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

ppcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

ppcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

prx (optional)

Proxy point code indicator.

Range:

yes

Will be used as a proxy point code

no

Will not be used a proxy point code.

sccpmsgcnv (optional)

SCCP UDT(S)/XUDT(S) Message Conversion Indicator. The type of conversion performed on messages for the specified destination.

Range:***none***

conversion is not required on messages for the destination

udt2xudt

convert all UDT(S) messages for the destination to XUDT(S) messages

xudt2udt

convert all non-segmented XUDT(S) messages for the destination to UDT(S) messages

sxudt2udt

convert all segmented and non-segmented XUDT(S) messages for the destination to UDT(S) messages

spc (optional)

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

spca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

spc/spca/spci/spcn/spcn24/spcn16 (optional)

Secondary point code.

spci (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

spcn (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the

ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

spcn24 (optional)

24-bit ITU national secondary point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000–255

ssa—000–255

sp—000–255

spcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*. The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

splitiam (optional)

IAM/SAM split. This parameter displays all entries with the specified `splitiam` parameter value.

Range:

15 - 31, none

Example

This example displays all encountered destination point codes that are members of network cluster 20-2 as well as the cluster address:

```
rtrv-dstn:dpca=20-2-***
```

This example displays the destination with an ANSI alias of 222-200-200:

```
rtrv-dstn:aliasa=222-200-200
```

This example displays all encountered ANSI alias destination point codes that have a network indicator of 222 and a network cluster of 200:

```
rtrv-dstn:aliasa=222-200-**
```

This example displays the destination with a CLLI of rlghncbb001:

```
rtrv-dstn:clli=rlghncbb001
```

This example displays the secondary point code 6:

```
rtrv-dstn:spc=6-6-6
```

This example displays a single cluster (the NRT feature must be turned on):

```
rtrv-dstn:dpc=010-**-*
```

This example displays a single ITU national destination (the ITUDUPPC feature must be turned on):

```
rtrv-dstn:dpcn=3-15-15-15-fr:spc=1-15-15-15-fr
```

This example displays all ITU national group codes by duplicate point code:

```
rtrv-dstn:dpcn=2050-*
```

This example displays all ITU national point codes within a group code:

```
rtrv-dstn:dpcn=*-fr
```

This example displays 24-bit ITU national point code 15-100-10:

```
rtrv-dstn:dpcn24=15-100-10
```

This example displays 24-bit ITU national alias point code 4:

```
rtrv-dstn:aliasn24=4-4-4
```

This example displays a private point code:

```
rtrv-dstn:dpca=p-12-12-12
```

This example displays a private and spare point code:

```
rtrv-dstn:dpci=ps-1-234-1
```

This example displays all ANSI private point codes:

```
rtrv-dstn:pctype=ansi:pcst=p
```

This example displays all ITU national private and spare point codes:

```
rtrv-dstn:pctype=itun:pcst=ps
```

This example displays all ANSI point codes that do not have point code subtype prefixes:

```
rtrv-dstn:pctype=ansi
```

This example displays all point codes that do not have point code subtype prefixes:

```
rtrv-dstn:pcst=none
```

This example displays all private point codes:

```
rtrv-dstn:pcst=p
```

This example displays all spare point codes:

```
rtrv-dstn:pcst=s
```

This example displays all proxy destinations:

```
rtrv-dstn:prx=yes
```

This example displays all destinations using a specified proxy point code:

```
rtrv-dstn:ppc=1-1-1
```

This example displays full DPCs when the `homescp=yes` parameter is specified:

```
rtrv-dstn:homescp=yes
```

This example displays all point codes where the `sccpmsgcnv=udt2xudt` parameter is specified:

```
rtrv-dstn:sccpmsgcnv=udt2xudt
```

This example displays 16-bit ITU national point code 125-2-25:

```
rtrv-dstn:dpcn16=125-2-25
```

This example displays a 16-bit ITU national alias point code:

```
rtrv-dstn:aliasn16=2-3-4
```

Dependencies



Note:

A full point code contains numerical values for all three segments of the point code.

Only one destination point code parameter, or one alias point code parameter, or one CLLI parameter can be specified in the command; these parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `dpcn` or `aliasn` parameter is specified, the format must match the format that was assigned with the `chg-stpopts:npcfmti` parameter.

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

If specified (except when `spc=none`), the secondary point code must be a full point code.

3822 E3822 Cmd Rej: SPC must be a full point code

Cluster destinations are allowed only if the Cluster Routing Management and Diversity (CRMD) feature is turned on.

2855 E2855 Cmd Rej: Cluster DPCs are only valid if the CRMD feature is ON

Alias point codes must be specified as full point codes.

2863 E2863 Cmd Rej: Destination's alias PCs must be full PCs

When the `msar=only` parameter is specified, no other parameters can be specified in the command.

2882 E2882 Cmd Rej: MSAR=ONLY must be specified exclusively

Network routing is valid only if the Network Routing (NRT) feature is turned on.

2955 E2955 Cmd Rej: Network Routing is only valid if the NRT feature is ON

The `pcst` parameter value `s` or `ps` cannot be specified when the `pctype` value `ansi` or `itun24` or `itun16` is specified.

4165 E4165 Cmd Rej: Point Code Subtype Prefix not supported

The `pctype` and `pcst` parameters cannot be specified in the same command with the destination point code, alias point code, secondary point code, `clli`, `msar=only`, and `ncai` parameters.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `clli=none` parameter cannot be specified.

3040 E3040 Cmd Rej: <string> cannot be used in this command

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The site identification table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The Proxy Point Code feature must be enabled before the `prx` parameter can be specified.

4677 E4677 Cmd Rej: PRX allowed only if PPC feature is enabled

The Proxy Point Code feature must be enabled before the `ppc` parameter can be specified.

4678 E4678 Cmd Rej: PPC allowed only if PPC feature is enabled

The `prx` parameter can be specified with only the `pctype`, `pcst`, or `msar` parameter.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `ppc` parameter can be specified with only the `msar` parameter.

2155 E2155 Cmd Rej: Invalid parameter combination specified

A valid value must be specified for the `prx` parameter.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

The point code specified by the `ppc` parameter must be a full point code.

2864 E2864 Cmd Rej: Address (PCx) of primary subsystem must be a full PC

Proxy point codes, as specified by the `ppc` parameter, cannot be private.

4722 E4722 Cmd Rej: PPC not supported for Private PC

PRX point codes cannot be private.

4723 E4723 Cmd Rej: PRX=YES not supported for Private PC

The XUDT UDT Conversion feature must be turned on before the `sccpmsgcnv` parameter can be specified.

5384 E5384 Cmd Rej: XUDT UDT Conversion feature must be activated

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

In this command, only ITU-international and ITU national point codes and aliases support the spare point code subtype prefix (s-). Only ITU-international and ITU national point codes support the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-). Aliases do not support the private (internal) point code prefix.

Summary description of the reports that are produced by the various DPC parameter syntaxes is shown:

- `rtrv-dstn:dpc=ni-nc-ncm` —Report for fully provisioned destination *ni-nc-ncm*
- `rtrv-dstn:dpc=ni-**-*` —Report for provisioned network destination with the specified network indicator. If * is specified in the *nc* field, * must be specified in the *ncm* field.
- `rtrv-dstn:dpc=ni-***-*` —Report for the full network cluster for the specified *ni*
- `rtrv-dstn:dpc=ni-***-*` —Report for the full network cluster and the network cluster address (if any) for the specified *ni*
- `rtrv-dstn:dpc=ni-nc-*` —Report for provisioned cluster destination *ni-nc-**
- `rtrv-dstn:dpc=ni-nc-**` —Report showing all destinations whose network (*ni*) and cluster (*nc*) components match those specified. The network cluster address *ni-nc-** (if it exists) is not reported.
- `rtrv-dstn:dpc=ni-nc-***` —Report showing all destinations whose network (*ni*) and cluster (*nc*) components match those specified. The network cluster address *ni-nc-** (if it exists) is also reported.
- `rtrv-dstn:dpcn24=msa-ssa-sp` —Report for fully provisioned 24-bit destination *main signaling area-sub signaling area-signaling point*

Asterisks in ANSI Point Codes

Two asterisks in the *ncm* subfield of a cluster point code produces a summary report that shows all point code destinations residing in the given cluster (for example, *20-2-***). This does not include the specified cluster point code (for example, *20-2-**).

Three asterisks in the *ncm* subfield of a cluster point code (for example, *20-2-****) produces a summary report that shows all point code destinations residing in the given network cluster. The specified cluster point code is also displayed if it exists.

If the linkset name is specified (`lsn` parameter) and the `dpc/dpca` parameter's *ncm* subfield is specified with asterisks, all route entries are displayed that have the specified linkset and that match the specified `dpc/dpca` parameter's subfield values.

Asterisks in ITU-N Duplicate Point Codes and Flexible Format Point Codes

When the ITU Duplicate Point Code (ITUDUPPC) feature is on,

- An asterisk (*) can be specified for the group code of an ITU-N duplicate point code to display all ITU-N point codes that have the specified node value (for example, *10101-**).

- An asterisk (*) can be specified for the node of an ITU-N duplicate point code to display all ITU-N point codes that have the specified group code value (for example, *-ab).

When the ITUDUPPC feature is on and the STP flexible point code option (`npccfmti`) is used to change the ITU-N point format to four members (`m1-m2-m3-m4-gc`)

- An asterisk (*) can be specified for the group code of an ITU-N flexible point code to display all ITU-N point codes that have the specified point code value (for example, 15)
- An asterisk (*) can be specified for every member of the ITU-N flexible point code to display all ITU-N flexible point codes that have the same group code (for example, *, *-15-*-*-*ab is not valid).

If the Proxy Point Code feature is enabled, then the values specified for the `ppc` and `dpc` parameters must be full point codes. Cluster point codes and private point codes are not supported.

Output

Destination Table Memory Space Accounting Information

Each output example for this command shows the display of destination table memory space accounting information. The `msar` parameter value and the NCR, NRT, CRMD, and Origin-based MTP Routing feature settings determine whether a summary report or a detail report is displayed.

Summary Report

When the NCR, NRT, CRMD, and Origin-based MTP Routing features are off, the summary report is displayed when the command is entered with and without parameters specified and for all of the `msar` parameter values. The detail report cannot be displayed. The summary information appears at the end of the requested destination information, or appears without any other destination information when the `msar=only` parameter is specified.

When one or more of the NCR, NRT, CRMD, and Origin-based MTP Routing features are on, the summary report is displayed:

- When the command is entered with one or more parameters to select the specific destination information to be displayed. The summary information appears at the end of the requested destination information. (The `msar=summary` parameter is the default in this case.)
- When the command is entered with only the `msar=summary` parameter specified. The summary information appears at the end of the destination information.

The maximum number of destinations that can be provisioned depends on the Routes and Routesets quantity features that are on in the system (see the `rtrv-feat dstn5000` entry and the `rtrv-ctrl-feat Routesets` entry). The `chg-stpopts` command's `mtpdpcq` parameter must be set to the value of the Routes or Routesets quantity feature to allow the maximum number of destinations to be provisioned.

The number currently provisioned is the value *x*, the allowed maximum is the value *y*, and the table percent full is the value *z* shown in the following first line of the summary report:

```
Destination table is (x of y) z% full
```

- When no Routes or Routesets quantity features are on in the system, a maximum of 2000 destinations can be provisioned.

- When the DSTN5000 (5000 Routes) feature bit is on, a maximum of 5000 destinations can be provisioned.
- When the 6000, 7000, 8000, or 10,000 Routesets quantity feature is enabled, a maximum of the corresponding number of destinations can be provisioned.

The maximum number of aliases that can be provisioned depends on the quantity features that are on in the system (see the `rtrv-feat dstn5000` entry and the `rtrv-ctrl-feat Routesets` entry). The number currently provisioned is the *x* value, the allowed maximum is the *y* value, and the table percent full is the *z* value shown in the following second line of the summary report:

```
Alias table is (x of y) z% full
```

- When no Routes or Routesets quantity features are on in the system, a maximum of 12000 aliases can be provisioned.
- When the DSTN5000 feature bit is on, a maximum of 12000 aliases can be provisioned.
- When the 6000 Routesets feature quantity is enabled, a maximum of 12000 aliases can be provisioned.
- When the 7000 or 8000 Routesets quantity feature is enabled, a maximum of 8000 aliases can be provisioned.
- When the 10000 Routesets quantity feature is enabled, a maximum of 10000 aliases can be provisioned.

Detail Report

When the NCR, NRT, CRMD, and Origin-based MTP Routing features are off, the detail report cannot be displayed.

When one or more of the NCR, NRT, CRMD, or Origin-based MTP Routing features are on, the detail report is displayed:

- When the command is entered with no parameters. The detail report appears at the end of the destination information. (The `msar=detail` parameter value is the default in this case.)
- When the `msar=detail` parameter is specified with one or more other parameters to select the specific destination information to be displayed. The detail report appears at the end of the requested destination information.
- When the `msar=only` parameter is specified. The detail report appears with no other destination information.

The maximum number of destinations that can be provisioned depends on the Routes and Routesets quantity features that are on in the system (see the `rtrv-feat dstn5000` entry and the `rtrv-ctrl-feat Routesets` entry). The `chg-stpopts` command's `mtpdpcq` parameter must be set to the value of the quantity feature to allow the maximum number of destinations to be provisioned. The possible maximum numbers of destinations are described in the *Summary Report* section.

In the example of the detail report, the allowed maximum number of destinations is the DESTINATION ENTRIES ALLOCATED value. The list of values under the allocated value includes the TOTAL DPCs currently provisioned and the Destination table CAPACITY (% FULL).

The allowed maximum number of aliases is the ALIASES ALLOCATED value. The list of values under the allocated value include the current number of ALIASES USED and the Aliases table CAPACITY (% FULL). The possible maximum numbers of aliases are described in the *Summary Report* section.

The output for the `rtrv-dstn` command does not change when the Proxy Point Code feature is on.

Abbreviated output is indicated by 3 vertical dots as shown:

```
.
.
.
```

This example shows destination table memory space accounting information contained in a summary report. In the example, the NCR, NRT, CRMD, and Origin-based MTP Routing features are all off. The Summary Report information appears without any other destination information.

```
rtrv-dstn:msar=only

rlghncxa03w 06-06-01 16:02:05 EST EAGLE 35.0.0
Destination table is (0 of 2000) 0% full
Alias table is (0 of 12000) 0% full
RTRV-DSTN: MASP A - COMPLTD
;
```

This example shows the output for a detail report. One or more of the NCR, NRT, CRMD or Origin-based MTP Routing features are on. The Detail Report information appears without any other destination information.

```
rtrv-dstn:msar=only

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
DESTINATION ENTRIES ALLOCATED: 2000
  FULL DPC(s): 178
  EXCEPTION DPC(s): 17
  NETWORK DPC(s): 0
  CLUSTER DPC(s): 4
  TOTAL DPC(s): 199
  CAPACITY (% FULL): 10%
ALIASES ALLOCATED: 12000
  ALIASES USED: 206
  CAPACITY (% FULL): 2%
X-LIST ENTRIES ALLOCATED: 500
;
```

This example shows the output when the NCR, NRT, and CRMD features are off, and no Routes or Routesets quantity features are on:

```
rtrv-dstn
```

```
tekelecstp 08-01-21 10:31:06 EST EAGLE 38.0.0
```

```
No destinations meeting the requested criteria were found
```

```
Destination table is (0 of 2000) 0% full
```

```
Alias table is (0 of 12000) 0% full
```

```
;
```

This example shows the output when one or more of the NCR, NRT, or CRMD features are on and no Routes or Routesets features are on:

```
rtrv-dstn
```

```
tekelecstp 08-01-21 10:31:06 EST EAGLE 38.0.0
```

```
No destinations meeting the requested criteria were found
```

```
DESTINATION ENTRIES ALLOCATED: 2000
  FULL DPC(s): 0
  NETWORK DPC(s): 0
  CLUSTER DPC(s): 0
  TOTAL DPC(s): 0
  CAPACITY (% FULL): 0%
ALIASES ALLOCATED: 12000
  ALIASES USED: 0
  CAPACITY (% FULL): 0%
X-LIST ENTRIES ALLOCATED: 500
```

```
;
```

This example shows all provisioned destinations. The example contains abbreviated output.

```
rtrv-dstn
```

```
tekelecstp 10-10-15 14:46:12 EST EAGLE 43.0.0
```

```
rtrv-dstn
```

```
Command entered at terminal #4.
```

```
Extended Processing Time may be Required
```

ALIASN/N24	DMN	DPCA	CLLI	BEI	ELEI	ALIASI
001-001-000	stp1			no	---	-----
-----	SS7					
003-001-000	mstp			no	---	-----
-----	SS7					
004-001-000	stp4			no	---	-----
-----	SS7					
.						
.						
.						

SS7	200-200-*	cluster2	yes	no	-----	-----
SS7	005-006-001	-----	no	---	-----	005-006-001
SS7	001-001-001	dstn01	no	---	-----	-----
SS7	p-001-001-001	dstn01p	no	---	-----	-----
SS7	001-001-002	dstn02	no	---	1-001-2	-----
SS7	p-001-001-002	dstn02p	no	---	1-011-2	-----
SS7	001-001-003	dstn03	no	---	s-1-001-3	-----
SS7	p-001-001-003	dstn03p	no	---	s-1-011-3	-----
SS7	001-001-004	dstn04	no	---	-----	02060
SS7	p-001-001-004	dstn04p	no	---	-----	01060
SS7	001-070-001	tgtansi001	no	---	-----	-----
SS7	001-001-005	dstn05	no	---	-----	s-02061
SS7	p-001-001-005	dstn05p	no	---	-----	s-01061
SS7	.					
SS7	.					
SS7	.					
DMN	DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24
SS7	s-4-002-0	-----	no	---	010-001-001	s-08228
SS7	2-010-0	dstn13	no	---	-----	-----
SS7	p-2-010-0	dstn13p	no	---	-----	-----
SS7	2-010-1	dstn14	no	---	002-010-001	-----
SS7	p-2-010-1	dstn14p	no	---	002-100-001	-----
SS7	2-010-2	dstn15	no	---	-----	04178
SS7	p-2-010-2	dstn15p	no	---	-----	08178
SS7	2-010-3	dstn16	no	---	-----	s-04179
SS7	p-2-010-3	dstn16p	no	---	-----	s-08179
SS7	.					
SS7	.					
SS7	.					
SS7	s-2-020-0	dstn21	no	---	-----	-----

```

ps-2-020-0      dstn21p      no --- -----
-----          SS7
s-2-020-1      dstn22      no --- 002-020-001
-----          SS7
ps-2-020-1      dstn22p     no --- 002-200-001
-----          SS7
s-2-020-2      dstn23      no --- -----
04258          SS7
ps-2-020-2      dstn23p     no --- -----
08258          SS7
s-2-020-3      dstn24      no --- -----
s-04259        SS7
ps-2-020-3      dstn24p     no --- -----
s-08259        SS7
s-2-070-3      tgtitui003 no --- -----
-----          SS7
.
.
.
s-2-029-6      rtxroute002 no --- 002-029-006
s-04269        SS7
DPCI          CLI          BEI  ELEI  ALIASI
ALIASN/N24    DMN
3-030-0      dstn29      no --- s-3-030-0
-----          SS7
p-3-030-0      dstn29p     no --- s-3-031-0
-----          SS7
3-030-1      dstn30      no --- s-3-030-1
06385        SS7
p-3-030-1      dstn30p     no --- s-3-031-1
07385        SS7
.
.
.
DPCI          CLI          BEI  ELEI  ALIASN
ALIASN        DMN
3-030-4      dstn33      no --- s-06388
06388        SS7
p-3-030-4      dstn33p     no --- s-07388
07388        SS7
3-030-5      dstn34      no --- 06389
s-06389        SS7
p-3-030-5      dstn34p     no --- 07389
s-07389        SS7
s-3-040-6      dstn39      no --- s-06471
06471        SS7
ps-3-040-6      dstn39p     no --- s-07471
07471        SS7
s-3-040-7      dstn40      no --- 06472
s-06472        SS7
ps-3-040-7      dstn40p     no --- 07472
s-07472        SS7
DPCN          CLI          BEI  ELEI  ALIASA

```

ALIASI	DMN					
SS7	06157	-----	no	---	020-005-002	-----
SS7	08192	dstn41	no	---	-----	-----
SS7	p-08192	dstn41p	no	---	-----	-----
SS7	08193	dstn42	no	---	004-000-001	-----
SS7	p-08193	dstn42p	no	---	004-200-001	-----
SS7	08194	dstn43	no	---	-----	4-000-2
SS7	p-08194	dstn43p	no	---	-----	4-040-2
SS7	08195	dstn44	no	---	-----	s-4-000-3
SS7	p-08195	dstn44p	no	---	-----	s-4-040-3
SS7	08753	tgtitun001	no	---	-----	-----
.						
.						
.						
DMN	DPCN	CLLI	BEI	ELEI	ALIASI	ALIASI
SS7	08198	dstn47	no	---	s-4-000-6	4-000-6
SS7	p-08198	dstn47p	no	---	s-4-040-6	4-040-6
SS7	08199	dstn48	no	---	4-000-7	s-4-000-7
SS7	p-08199	dstn48p	no	---	4-040-7	s-4-040-7
SS7	s-08278	dstn55	no	---	s-4-010-6	4-010-6
SS7	ps-08278	dstn55p	no	---	s-4-050-6	4-050-6
SS7	s-08279	dstn56	no	---	4-010-7	s-4-010-7
SS7	ps-08279	dstn56p	no	---	4-050-7	s-4-050-7
SS7	s-08379	rtxroute003	no	---	s-4-058-7	4-058-7
DMN	DPCN	CLLI	BEI	ELEI	ALIASN	ALIASI
SS7	12688	dstn57	no	---	s-12688	-----
SS7	p-12688	dstn57p	no	---	s-13688	-----
SS7	12689	dstn58	no	---	s-12689	6-050-1
SS7	p-12689	dstn58p	no	---	s-13689	6-060-1

```

SS7
    12690          dstn59      no --- s-12690
s-6-050-2        SS7
    p-12690       dstn59p     no --- s-13690
s-6-060-2        SS7
    s-12691       dstn60      no --- 12691
----- SS7
    ps-12691      dstn60p     no --- 13691
----- SS7
    s-12692       dstn61      no --- 12692
6-050-4          SS7
    ps-12692      dstn61p     no --- 13692
6-060-4          SS7
    s-12693       dstn62      no --- 12693
s-6-050-5        SS7
    ps-12693      dstn62p     no --- 13693
s-6-060-5        SS7

          DPCN24      CLLI      BEI ELEI  ALIASA
ALIASI          DMN
    003-003-004  ----- no --- 003-003-003
3-003-4          SS7
    006-005-001  dstn63      no --- -----
----- SS7
    p-006-005-001 dstn63p     no --- -----
----- SS7
    006-005-002  dstn64      no --- 006-005-002
----- SS7
    p-006-005-002 dstn64p     no --- 006-005-020
----- SS7
    006-005-003  dstn65      no --- -----
6-005-3          SS7
    p-006-005-003 dstn65p     no --- -----
6-050-3          SS7
    006-070-001  tgtitun24a no --- -----
----- SS7
    006-005-004  dstn66      no --- -----
s-6-005-4        SS7
    p-006-005-004 dstn66p     no --- -----
s-6-050-4        SS7
    006-005-005  dstn67      no --- 006-005-005
6-005-5          SS7
    p-006-005-005 dstn67p     no --- 006-005-050
6-050-5          SS7
    006-070-002  tgtitun24b no --- -----
----- SS7

```

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s) : 178
EXCEPTION DPC(s) : 17
NETWORK DPC(s) : 0
CLUSTER DPC(s) : 4
TOTAL DPC(s) : 199
CAPACITY (% FULL) : 10%
ALIASES ALLOCATED: 12000

```



```

ALIASES USED:                206
CAPACITY (% FULL):          2%
X-LIST ENTRIES ALLOCATED:   500

```

;

This example shows the 24-bit ITUN Destination Point Code(s) assigned to a specified 24-bit ITUN Secondary Point Code:

```
rtrv-dstn:spcn24=6-5-0
```

```

eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
rtrv-dstn:spcn24=6-5-0
Command entered at terminal #4.
Extended Processing Time may be Required

```

```
SPCN24= 006-005-000
```

	DPCN24	CLLI	BEI	ELEI	ALIASA	ALIASI
DMN	003-003-004	-----	no	---	003-003-003	3-003-4
SS7	006-005-001	dstn63	no	---	-----	-----
SS7	p-006-005-001	dstn63p	no	---	-----	-----
SS7	006-005-002	dstn64	no	---	006-005-002	-----
SS7	p-006-005-002	dstn64p	no	---	006-005-020	-----
SS7	006-005-003	dstn65	no	---	-----	6-005-3
SS7	p-006-005-003	dstn65p	no	---	-----	6-050-3
SS7	006-070-001	tgtitun24a	no	---	-----	-----
SS7	006-005-004	dstn66	no	---	-----	s-6-005-4
SS7	p-006-005-004	dstn66p	no	---	-----	s-6-050-4
SS7	006-005-005	dstn67	no	---	006-005-005	6-005-5
SS7	p-006-005-005	dstn67p	no	---	006-005-050	6-050-5
SS7	006-070-002	tgtitun24b	no	---	-----	-----

```

Destination table is (199 of 2000) 10% full
Alias table is (206 of 12000) 2% full

```

;

This example shows the output when the `ncai=yes` parameter is specified:

```
rtrv-dstn:ncai=yes
```

```
eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
```

```
rtrv-dstn:ncai=yes
```

```
Command entered at terminal #4.
```

```
Extended Processing Time may be Required
```

```
NCAI= yes
```

DPCA	CLLI	BEI	ELEI	ALIASI
ALIASN/N24 DMN				
100-100-*	cluster1	no	no	-----
----- SS7				
200-200-*	cluster2	yes	no	-----
----- SS7				

```
Destination table is (199 of 2000) 10% full
```

```
Alias table is (206 of 12000) 2% full
```

```
;
```

This example shows the retrieval of a single cluster:

```
rtrv-dstn:dpc=200-200-*
```

```
eagle10115 10-08-12 10:00:37 EST EAGLE 43.0.0
```

DPCA	CLLI	BEI	ELEI	ALIASI		
ALIASN/N24 DMN						
200-200-*	cluster2	yes	no	-----		
----- SS7						
SPCA	NCAI	RCAUSE	NPRST	SPLITIAM	HMSMSC	HMSCP
SCCPMSGCNV						
-----	yes	none	off	none	no	no
none						

```
Destination table is (197 of 2000) 10% full
```

```
Alias table is (206 of 12000) 2% full
```

```
;
```

This example shows when the ncai=no parameter is specified:

```
rtrv-dstn:ncai=no
```

```
eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
```

```
rtrv-dstn:ncai=no
```

```
Command entered at terminal #4.
```

```
Extended Processing Time may be Required
```

```
NCAI= no
```

```

          DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24
DMN
          040-001-*      myncaibeno no no -----
SS7
          040-010-*      myncaibeno2 no no -----
SS7

```

```

Destination table is (199 of 2000) 10% full
Alias table is (206 of 12000) 2% full

```

```
;
```

This example shows a single cluster with the NRT feature turned on:

```
rtrv-dstn:dpc=010-*-*
```

```
eagle10115 10-08-12 10:00:37 EST EAGLE 43.0.0
```

```

          DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24
DMN
          010-*-*      -----
SS7

```

```

          SPCA          NCAI          RCAUSE NPRST SPLITIAM HMSMSC HMSCP
SCCPMSGCNV
          -----
          none off none no no none

```

```

Destination table is (200 of 2000) 10% full
Alias table is (206 of 12000) 2% full

```

```
;
```

This example shows a single ITU national destination with the ITUDUPPC (ITU Duplicate Point Code) feature turned on:

```
rtrv-dstn:dpcn=08199-tk
```

```
eagle10115 10-08-12 10:00:37 EST EAGLE 43.0.0
```

```

          DPCN          CLLI          BEI ELEI  ALIASA          ALIASI
DMN
          08199-tk      dstn48dupTk no --- -----
SS7
          4-006-2

```

```

          SPCN          NCAI          RCAUSE NPRST SPLITIAM HMSMSC HMSCP
SCCPMSGCNV
          -----
          none off none no no none

```

```

Destination table is (207 of 2000) 10% full
Alias table is (215 of 12000) 2% full

```

```
;
```

This example shows all ITU national group codes by duplicate point code:

```
rtrv-dstn:dpcn=8198-*
```

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

      DPCN          CLLI          BEI ELEI  ALIASA
ALIASI          DMN
      08198-nz      dstn47dupnz no  --- -----
-----          SS7

      DPCN          CLLI          BEI ELEI  ALIASI
ALIASI          DMN
      08198-aa      dstn47          no  --- s-4-000-6
4-000-6          SS7
      08198-fr      dstn47dupfr no  --- s-4-005-7
4-005-7          SS7
      08198-tk      dstn47dupTk no  --- 4-006-0
s-4-006-0        SS7
```

```
Destination table is (207 of 2000) 10% full
```

```
Alias table is (215 of 12000) 2% full
```

```
;
```

This example shows a single cluster when the NRT and DSTN5000 features are turned on:

```
rtrv-dstn:dpc=010-*-*
```

```
eagle10115 10-08-12 10:00:37 EST EAGLE 43.0.0

      DPCI          CLLI          BEI ELEI  ALIASA
ALIASN/N24      DMN
      010-*-*      ----- no  no  -----
-----          SS7

      SPCI          NCAI          RCAUSE NPRST SPLITIAM HMSMSC HMSCP
SCCPMSGCNV
      -----      ----          none  off  none  no  no
udt2xudt
```

```
Destination table is (3 of 6000) 1% full
```

```
Alias table is (4 of 12000) 1% full
```

```
;
```

This example shows the output when the 6000 Routesets and CRMD features are turned on:

```
rtrv-dstn
```

```
tekelecstp 10-10-15 14:46:12 EST EAGLE 43.0.0
rtrv-dstn
```

Command entered at terminal #4.
Extended Processing Time may be Required

	DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24
DMN	003-003-003	-----	no	---	-----	-----
SS7	004-004-004	-----	no	---	-----	-----
SS7	005-005-005	-----	no	---	-----	-----
SS7	008-001-*	-----	no	no	-----	-----

DESTINATION ENTRIES ALLOCATED: 6000
 FULL DPC(s): 3
 NETWORK DPC(s): 0
 CLUSTER DPC(s): 1
 TOTAL DPC(s): 4
 CAPACITY (% FULL): 1%
 ALIASES ALLOCATED: 12000
 ALIASES USED: 0
 CAPACITY (% FULL): 0%
 X-LIST ENTRIES ALLOCATED: 500

;

This example shows the output for a specific DPC when the 6000 Routesets and the CRMD features are on:

rtrv-dstn:dpc=8-1-*

eagle10115 10-08-12 10:00:37 EST EAGLE 43.0.0

	DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24
DMN	008-001-*	-----	no	no	-----	-----
SS7						

	SPCA	NCAI	RCAUSE	NPRST	SPLITIAM	HMSMSC	HMSCP
SCCPMSGCNV	-----	no	none	off	none	no	no none

Destination table is (4 of 6000) 1% full
 Alias table is (0 of 12000) 0% full

;

This example shows the output for a 24-bit ITU-N destination point code with an assigned 24-bit ITU-N secondary point code:

```
rtrv-dstn:dpcn24=6-5-2
```

```

eagle10115 10-08-12 10:00:37 EST EAGLE 43.0.0
      DPCN24          CLLI          BEI ELEI  ALIASA
ALIASI          DMN
      006-005-002    dstn64        no ---    006-005-002
-----          SS7

      SPCN24          NCAI          RCAUSE NPRST SPLITIAM HMSMSC HMSCP
SCCPMSGCNV
      -----          ----          none  off  none    no    no
none

```

```

Destination table is (208 of 2000) 10% full
Alias table is (216 of 12000) 2% full

```

```
;
```

This example shows a specific 24-bit ITU-N alias point code:

```
rtrv-dstn:aliasn24=3-41-5
```

```

eagle10115 10-08-12 10:00:37 EST EAGLE 43.0.0
      DPCI          CLLI          BEI ELEI  ALIASI
ALIASN/N24      DMN
      ps-3-040-5    dstn38p        no ---    3-041-5
003-041-005    SS7

      SPCI          NCAI          RCAUSE NPRST SPLITIAM HMSMSC HMSCP
SCCPMSGCNV
      -----          ----          none  off  none    no    no
none

```

```

Destination table is (208 of 2000) 10% full
Alias table is (216 of 12000) 2% full

```

```
;
```

This example shows the output for a linkset that contains a private point code:

```
rtrv-dstn:dpci=ps-3-40-3
```

```

eagle10115 10-08-12 10:00:37 EST EAGLE 43.0.0
      DPCI          CLLI          BEI ELEI  ALIASI
ALIASN/N24      DMN
      ps-3-040-3    dstn36p        no ---    3-041-3          07467-
aa          SS7

      SPCI          NCAI          RCAUSE NPRST SPLITIAM HMSMSC HMSCP

```

```

SCCPMSGCNV
----- ---- none off none no no none

Destination table is (208 of 2000) 10% full
Alias table is (216 of 12000) 2% full

;

```

This example shows ANSI point codes with the private point code subtype prefix (p-):

```
rtrv-dstn:pctype=ansi:pcst=p
```

```

eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
rtrv-dstn:pctype=ansi:pcst=p
Command entered at terminal #4.
Extended Processing Time may be Required

      DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24
DMN
p-001-001-001  dstn01p  no --- -----
SS7
p-001-001-002  dstn02p  no --- 1-011-2 -----
SS7
p-001-001-003  dstn03p  no --- s-1-011-3 -----
SS7
p-001-001-004  dstn04p  no --- ----- 01060-aa
SS7
p-001-001-005  dstn05p  no --- ----- s-01061-aa
SS7
p-001-001-006  dstn06p  no --- ----- 001-011-006
SS7
p-001-001-007  dstn07p  no --- 1-011-7 01063-aa
SS7
p-001-002-000  dstn08p  no --- 1-012-0 s-01064-aa
SS7
p-001-002-001  dstn09p  no --- s-1-012-1 01065-aa
SS7
p-001-002-002  dstn10p  no --- s-1-012-2 s-01066-aa
SS7
p-001-002-003  dstn11p  no --- 1-012-3 001-012-003
SS7
p-001-002-004  dstn12p  no --- s-1-012-4 001-012-004
SS7

Destination table is (208 of 2000) 10% full
Alias table is (216 of 12000) 2% full

;

```

This example shows ITU-I point codes with the spare point code subtype prefix (s-):

rtrv-dstn:pctype=itui:pcst=s

eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0

rtrv-dstn:pctype=itui:pcst=s

Command entered at terminal #4.

Extended Processing Time may be Required

DPCI	CLLI	BEI	ELEI	ALIASA	
ALIASN/N24 DMN					
s-4-002-0	-----	no	---	010-001-001	s-08228-
aa SS7					
s-2-020-0	dstn21	no	---	-----	
-----	SS7				
s-2-020-1	dstn22	no	---	002-020-001	
-----	SS7				
s-2-020-2	dstn23	no	---	-----	04258-
aa SS7					
s-2-020-3	dstn24	no	---	-----	s-04259-
aa SS7					
s-2-070-3	tgtitui003	no	---	-----	
-----	SS7				
s-2-020-4	dstn25	no	---	-----	
002-020-004 SS7					
s-2-020-5	dstn26	no	---	002-020-005	04261-
aa SS7					
s-2-020-6	dstn27	no	---	002-020-006	s-04262-
aa SS7					
s-2-020-7	dstn28	no	---	002-020-007	
002-020-007 SS7					
s-2-070-4	tgtitui004	no	---	-----	
-----	SS7				
s-3-070-3	tgtitui007	no	---	-----	
-----	SS7				
s-3-070-4	tgtitui008	no	---	-----	
-----	SS7				
s-2-029-6	rtxroute002	no	---	002-029-006	s-04269-
aa SS7					
DPCI	CLLI	BEI	ELEI	ALIASI	
ALIASN/N24 DMN					
s-3-040-2	dstn35	no	---	3-040-2	
-----	SS7				
s-3-040-3	dstn36	no	---	3-040-3	06467-
aa SS7					
s-3-040-4	dstn37	no	---	3-040-4	s-06468-
aa SS7					
s-3-040-5	dstn38	no	---	3-040-5	
003-040-005 SS7					
DPCI	CLLI	BEI	ELEI	ALIASN	
ALIASN DMN					
s-3-040-6	dstn39	no	---	s-06471-aa	06471-
aa SS7					
s-3-040-7	dstn40	no	---	06472-aa	s-06472-


```
aa      SS7
```

```
Destination table is (208 of 2000) 10% full
Alias table is (216 of 12000) 2% full
```

```
;
```

This example shows ITU-N point codes with the private point code subtype prefix (p-):

```
rtrv-dstn:pctype=itun:pcst=p
```

```
eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
rtrv-dstn:pctype=itun:pcst=p
Command entered at terminal #4.
Extended Processing Time may be Required
```

	DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI
DMN	p-08192-aa	dstn41p	no	---	-----	-----
SS7	p-08193-aa	dstn42p	no	---	004-200-001	-----
SS7	p-08194-aa	dstn43p	no	---	-----	4-040-2
SS7	p-08195-aa	dstn44p	no	---	-----	s-4-040-3
SS7	p-08196-aa	dstn45p	no	---	004-200-004	4-040-4
SS7	p-08197-aa	dstn46p	no	---	004-200-005	s-4-040-5
DMN	p-08198-aa	dstn47p	no	---	s-4-040-6	4-040-6
SS7	p-08199-aa	dstn48p	no	---	4-040-7	s-4-040-7
DMN	p-12688-aa	dstn57p	no	---	s-13688-aa	-----
SS7	p-12689-aa	dstn58p	no	---	s-13689-aa	6-060-1
SS7	p-12690-aa	dstn59p	no	---	s-13690-aa	s-6-060-2

```
Destination table is (208 of 2000) 10% full
Alias table is (216 of 12000) 2% full
```

```
;
```

This example shows ITU-N point codes with the private and spare point code subtype prefix (ps-):

```
rtrv-dstn:pctype=itun:pcst=ps
```

```
eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
```

```
rtrv-dstn:pctype=itun:pcst=ps
```

```
Command entered at terminal #4.
```

```
Extended Processing Time may be Required
```

ALIASI	DPCN	DMN	CLLI	BEI	ELEI	ALIASA
	ps-08272-aa		dstn49p	no	---	-----
	-----	SS7				
	ps-08273-aa		dstn50p	no	---	004-200-010
	-----	SS7				
	ps-08274-aa		dstn51p	no	---	-----
4-050-2		SS7				
	ps-08275-aa		dstn52p	no	---	-----
s-4-050-3		SS7				
	ps-08276-aa		dstn53p	no	---	004-200-040
4-050-4		SS7				
	ps-08277-aa		dstn54p	no	---	004-200-050
s-4-050-5		SS7				

ALIASI	DPCN	DMN	CLLI	BEI	ELEI	ALIASI
	ps-08278-aa		dstn55p	no	---	s-4-050-6
4-050-6		SS7				
	ps-08279-aa		dstn56p	no	---	4-050-7
s-4-050-7		SS7				

ALIASI	DPCN	DMN	CLLI	BEI	ELEI	ALIASN
	ps-12691-aa		dstn60p	no	---	13691-aa
	-----	SS7				
	ps-12692-aa		dstn61p	no	---	13692-aa
6-060-4		SS7				
	ps-12693-aa		dstn62p	no	---	13693-aa
s-6-060-5		SS7				

```
Destination table is (208 of 2000) 10% full
```

```
Alias table is (216 of 12000) 2% full
```

```
;
```

This example displays ANSI point codes. The example displays abbreviated output.

```
rtrv-dstn:pctype=ansi
```

```
eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
```

```
rtrv-dstn:pctype=ansi
```

```
Command entered at terminal #4.
```

```
Extended Processing Time may be Required
```

DPCA	CLLI	BEI	ELEI	ALIASI
------	------	-----	------	--------

ALIASN/N24	DMN					
SS7	001-001-000	stp1	no	---	-----	-----
SS7	003-001-000	mstp	no	---	-----	-----
.						
.						
SS7	100-100-*	cluster1	no	no	-----	-----
SS7	100-100-001	-----	no	---	-----	-----
SS7	200-200-*	cluster2	yes	no	-----	-----
SS7	005-006-001	-----	no	---	-----	005-006-001
SS7	001-001-001	dstn01	no	---	-----	-----
SS7	p-001-001-001	dstn01p	no	---	-----	-----
SS7	001-001-002	dstn02	no	---	1-001-2	-----
SS7	p-001-001-002	dstn02p	no	---	1-011-2	-----
SS7	001-001-003	dstn03	no	---	s-1-001-3	-----
SS7	p-001-001-003	dstn03p	no	---	s-1-011-3	-----
SS7	001-001-004	dstn04	no	---	-----	02060-aa
SS7	p-001-001-004	dstn04p	no	---	-----	01060-aa
SS7	001-070-001	tgtansi001	no	---	-----	-----
SS7	001-001-005	dstn05	no	---	-----	s-02061-aa
SS7	p-001-001-005	dstn05p	no	---	-----	s-01061-aa
SS7	001-001-006	dstn06	no	---	-----	001-001-006
SS7	p-001-001-006	dstn06p	no	---	-----	001-011-006
SS7	001-001-007	dstn07	no	---	1-001-7	02063-aa
SS7	p-001-001-007	dstn07p	no	---	1-011-7	01063-aa
SS7	001-002-000	dstn08	no	---	1-002-0	s-02064-aa
SS7	p-001-002-000	dstn08p	no	---	1-012-0	s-01064-aa
SS7	001-070-002	tgtansi002	no	---	-----	-----
SS7	001-002-001	dstn09	no	---	s-1-002-1	02065-aa
SS7	p-001-002-001	dstn09p	no	---	s-1-012-1	01065-aa

```

SS7
    001-002-002  dstn10    no --- s-1-002-2    s-02066-
aa   SS7
    p-001-002-002  dstn10p  no --- s-1-012-2    s-01066-
aa   SS7
    001-002-003  dstn11    no --- 1-002-3
001-002-003  SS7
    p-001-002-003  dstn11p  no --- 1-012-3
001-012-003  SS7
    001-002-004  dstn12    no --- s-1-002-4
001-002-004  SS7
    p-001-002-004  dstn12p  no --- s-1-012-4
001-012-004  SS7
    001-070-003  tgtansi003 no --- -----
----- SS7
    200-002-001  rtxroute001 no --- -----
----- SS7
    040-001-*    myncaibeno no no -----
----- SS7
    040-010-*    myncaibeno2 no no -----
----- SS7
    010-*-*      ----- --- -----
----- SS7

```

```

Destination table is (208 of 2000) 10% full
Alias table is (216 of 12000) 2% full

```

```
;
```

This example shows ITU-I point codes:

```
rtrv-dstn:pctype=itui
```

```

eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
rtrv-dstn:pctype=itui
Command entered at terminal #4.
Extended Processing Time may be Required

```

```

          DPCI          CLLI          BEI ELEI  ALIASA
ALIASN/N24  DMN
    s-4-002-0          ----- no --- 010-001-001    s-08228-
aa   SS7
    2-010-0          dstn13    no --- -----
----- SS7
    p-2-010-0          dstn13p  no --- -----
----- SS7
    2-010-1          dstn14    no --- 002-010-001
----- SS7
    p-2-010-1          dstn14p  no --- 002-100-001
----- SS7
    2-010-2          dstn15    no --- -----          04178-
aa   SS7
    p-2-010-2          dstn15p  no --- -----          08178-
aa   SS7
    2-010-3          dstn16    no --- -----          s-04179-

```

aa	SS7					
	p-2-010-3	dstn16p	no	---	-----	s-08179-aa
SS7						
	2-070-1	tgtitui001	no	---	-----	-----
SS7						
	2-010-4	dstn17	no	---	-----	002-010-004
SS7						
	p-2-010-4	dstn17p	no	---	-----	002-100-004
SS7						
	2-010-5	dstn18	no	---	002-010-005	04181-aa
SS7						
	p-2-010-5	dstn18p	no	---	002-100-005	08181-aa
SS7						
	2-010-6	dstn19	no	---	002-010-006	s-04182-aa
SS7						
	p-2-010-6	dstn19p	no	---	002-100-006	s-08182-aa
SS7						
	2-010-7	dstn20	no	---	002-010-007	002-010-007
SS7						
	p-2-010-7	dstn20p	no	---	002-100-007	002-100-007
SS7						
	2-070-2	tgtitui002	no	---	-----	-----
SS7						
	s-2-020-0	dstn21	no	---	-----	-----
SS7						
	ps-2-020-0	dstn21p	no	---	-----	-----
SS7						
	s-2-020-1	dstn22	no	---	002-020-001	-----
SS7						
	ps-2-020-1	dstn22p	no	---	002-200-001	-----
SS7						
	s-2-020-2	dstn23	no	---	-----	04258-aa
SS7						
	ps-2-020-2	dstn23p	no	---	-----	08258-aa
SS7						
	s-2-020-3	dstn24	no	---	-----	s-04259-aa
SS7						
	ps-2-020-3	dstn24p	no	---	-----	s-08259-aa
SS7						
	s-2-070-3	tgtitui003	no	---	-----	-----
SS7						
	s-2-020-4	dstn25	no	---	-----	002-020-004
SS7						
	ps-2-020-4	dstn25p	no	---	-----	002-200-004
SS7						
	s-2-020-5	dstn26	no	---	002-020-005	04261-aa
SS7						
	ps-2-020-5	dstn26p	no	---	-----	-----
SS7						
	s-2-020-6	dstn27	no	---	002-020-006	s-04262-aa
SS7						
	ps-2-020-6	dstn27p	no	---	002-200-005	08261-aa
SS7						
	s-2-020-7	dstn28	no	---	002-020-007	002-020-007
SS7						

```

ps-2-020-7      dstn28p      no --- 002-200-007
002-200-007  SS7
s-2-070-4      tgtitui004  no --- -----
----- SS7
s-3-070-3      tgtitui007  no --- -----
----- SS7
s-3-070-4      tgtitui008  no --- -----
----- SS7
s-2-029-6      rtxroute002 no --- 002-029-006 s-04269-
aa SS7

DPCI          CLLI          BEI ELEI  ALIASI
ALIASN/N24    DMN
3-030-0      dstn29        no --- s-3-030-0
----- SS7
p-3-030-0    dstn29p       no --- s-3-031-0
----- SS7
3-030-1      dstn30        no --- s-3-030-1      06385-
aa SS7
p-3-030-1    dstn30p       no --- s-3-031-1      07385-
aa SS7
3-030-2      dstn31        no --- s-3-030-2      s-06386-
aa SS7
p-3-030-2    dstn31p       no --- s-3-031-2      s-07386-
aa SS7
3-070-1      tgtitui005    no --- s-3-070-1
----- SS7
3-030-3      dstn32        no --- s-3-030-3
003-030-003  SS7
p-3-030-3    dstn32p       no --- s-3-031-3
003-031-003  SS7
3-070-2      tgtitui006    no --- s-3-070-2
----- SS7
s-3-040-2    dstn35        no --- 3-040-2
----- SS7
ps-3-040-2    dstn35p       no --- 3-041-2
----- SS7
s-3-040-3    dstn36        no --- 3-040-3      06467-
aa SS7
ps-3-040-3    dstn36p       no --- 3-041-3      07467-
aa SS7
s-3-040-4    dstn37        no --- 3-040-4      s-06468-
aa SS7
ps-3-040-4    dstn37p       no --- 3-041-4      s-07468-
aa SS7
s-3-040-5    dstn38        no --- 3-040-5
003-040-005  SS7
ps-3-040-5    dstn38p       no --- 3-041-5
003-041-005  SS7

DPCI          CLLI          BEI ELEI  ALIASN
ALIASN          DMN
3-030-4      dstn33        no --- s-06388-aa      06388-
aa SS7
p-3-030-4    dstn33p       no --- s-07388-aa      07388-

```

```

aa      SS7
        3-030-5      dstn34      no --- 06389-aa      s-06389-aa
SS7
        p-3-030-5      dstn34p     no --- 07389-aa      s-07389-aa
SS7
        s-3-040-6      dstn39      no --- s-06471-aa      06471-aa
SS7
        ps-3-040-6      dstn39p     no --- s-07471-aa      07471-aa
SS7
        s-3-040-7      dstn40      no --- 06472-aa      s-06472-aa
SS7
        ps-3-040-7      dstn40p     no --- 07472-aa      s-07472-aa
SS7

```

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

This example shows ITU-N point codes:

```
rtrv-dstn:pctype=itun
```

```
eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
```

```
rtrv-dstn:pctype=itun
```

```
Command entered at terminal #4.
```

```
Extended Processing Time may be Required
```

	DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI
DMN	06157-aa	-----	no	---	020-005-002	-----
SS7	08192-aa	dstn41	no	---	-----	-----
SS7	p-08192-aa	dstn41p	no	---	-----	-----
SS7	08193-aa	dstn42	no	---	004-000-001	-----
SS7	p-08193-aa	dstn42p	no	---	004-200-001	-----
SS7	08194-aa	dstn43	no	---	-----	4-000-2
SS7	p-08194-aa	dstn43p	no	---	-----	4-040-2
SS7	08195-aa	dstn44	no	---	-----	s-4-000-3
SS7	p-08195-aa	dstn44p	no	---	-----	s-4-040-3
SS7	08753-aa	tgtitun001	no	---	-----	-----
SS7	08196-aa	dstn45	no	---	004-000-004	4-000-4
SS7	p-08196-aa	dstn45p	no	---	004-200-004	4-040-4
SS7	08197-aa	dstn46	no	---	004-000-005	s-4-000-5

```

SS7
  p-08197-aa      dstn46p      no --- 004-200-005
s-4-040-5        SS7
  08754-aa        tgtitun002   no --- -----
-----          SS7
  s-08272-aa      dstn49        no --- -----
-----          SS7
  ps-08272-aa     dstn49p       no --- -----
-----          SS7
  s-08273-aa      dstn50        no --- 004-010-001
-----          SS7
  ps-08273-aa     dstn50p       no --- 004-200-010
-----          SS7
  s-08274-aa      dstn51        no --- -----
4-010-2          SS7
  ps-08274-aa     dstn51p       no --- -----
4-050-2          SS7
  s-08275-aa      dstn52        no --- -----
s-4-010-3        SS7
  ps-08275-aa     dstn52p       no --- -----
s-4-050-3        SS7
  s-08755-aa      tgtitun003   no --- -----
-----          SS7
  s-08276-aa      dstn53        no --- 004-010-004
4-010-4          SS7
  ps-08276-aa     dstn53p       no --- 004-200-040
4-050-4          SS7
  s-08277-aa      dstn54        no --- 004-010-005
s-4-010-5        SS7
  ps-08277-aa     dstn54p       no --- 004-200-050
s-4-050-5        SS7
  s-08756-aa      tgtitun004   no --- -----
-----          SS7
  08757-aa        tgtitun005   no --- -----
-----          SS7
  s-08758-aa      tgtitun006   no --- -----
-----          SS7
  08199-fr        dstn48dupfr  no --- -----
s-4-006-1        SS7
  08199-tk        dstn48dupTk  no --- -----
4-006-2          SS7
  08198-nz        dstn47dupnz  no --- -----
-----          SS7
  s-08273-fr      dstn50dupfr  no --- -----
4-006-3          SS7

      DPCN          CLLI          BEI ELEI  ALIASI
ALIASI          DMN
  08198-aa      dstn47        no --- s-4-000-6
4-000-6          SS7
  p-08198-aa     dstn47p       no --- s-4-040-6
4-040-6          SS7
  08199-aa      dstn48        no --- 4-000-7
s-4-000-7        SS7
  p-08199-aa     dstn48p       no --- 4-040-7

```



```

s-4-040-7      SS7
  s-08278-aa   dstn55      no --- s-4-010-6      4-010-6
SS7
ps-08278-aa   dstn55p     no --- s-4-050-6      4-050-6
SS7
  s-08279-aa   dstn56      no --- 4-010-7      s-4-010-7
SS7
ps-08279-aa   dstn56p     no --- 4-050-7      s-4-050-7
SS7
  s-08379-aa   rtxroute003 no --- s-4-058-7      4-058-7
SS7
  08198-fr     dstn47dupfr no --- s-4-005-7      4-005-7
SS7
  08198-tk     dstn47dupTk no --- 4-006-0      s-4-006-0
SS7

      DPCN          CLLI          BEI ELEI    ALIASN          ALIASI
DMN
  12688-aa     dstn57      no --- s-12688-aa     -----
SS7
  p-12688-aa   dstn57p     no --- s-13688-aa     -----
SS7
  12689-aa     dstn58      no --- s-12689-aa     6-050-1
SS7
  p-12689-aa   dstn58p     no --- s-13689-aa     6-060-1
SS7
  12690-aa     dstn59      no --- s-12690-aa     s-6-050-2
SS7
  p-12690-aa   dstn59p     no --- s-13690-aa     s-6-060-2
SS7
  s-12691-aa   dstn60      no --- 12691-aa     -----
SS7
ps-12691-aa   dstn60p     no --- 13691-aa     -----
SS7
  s-12692-aa   dstn61      no --- 12692-aa     6-050-4
SS7
ps-12692-aa   dstn61p     no --- 13692-aa     6-060-4
SS7
  s-12693-aa   dstn62      no --- 12693-aa     s-6-050-5
SS7
ps-12693-aa   dstn62p     no --- 13693-aa     s-6-060-5
SS7
  s-08272-fr   dstn49dupfr no --- 08300-fr     -----
SS7
  s-08272-tk   dstn49dupTk no --- 08300-tk     4-006-7
SS7

```

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

This example shows point codes that have no point code subtype prefix. The example contains abbreviated output.

rtrv-dstn:pcst=none

eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0

rtrv-dstn:pcst=none

Command entered at terminal #4.

Extended Processing Time may be Required

ALIASN/N24	DPCA	DMN	CLLI	BEI	ELEI	ALIASI	
	001-001-000		stp1	no	---	-----	
			SS7				
	003-001-000		mstp	no	---	-----	
			SS7				
.							
.							
.							
	200-200-*		cluster2	yes	no	-----	
			SS7				
	005-006-001		-----	no	---	-----	
005-006-001			SS7				
	001-001-001		dstn01	no	---	-----	
			SS7				
	001-001-002		dstn02	no	---	1-001-2	
			SS7				
	001-001-003		dstn03	no	---	s-1-001-3	
			SS7				
aa	001-001-004		dstn04	no	---	-----	02060-
			SS7				
	001-070-001		tgtansi001	no	---	-----	
			SS7				
aa	001-001-005		dstn05	no	---	-----	s-02061-
			SS7				
001-001-006	001-001-006		dstn06	no	---	-----	
			SS7				
aa	001-001-007		dstn07	no	---	1-001-7	02063-
			SS7				
aa	001-002-000		dstn08	no	---	1-002-0	s-02064-
			SS7				
	001-070-002		tgtansi002	no	---	-----	
			SS7				
aa	001-002-001		dstn09	no	---	s-1-002-1	02065-
			SS7				
aa	001-002-002		dstn10	no	---	s-1-002-2	s-02066-
			SS7				
001-002-003	001-002-003		dstn11	no	---	1-002-3	
			SS7				
001-002-004	001-002-004		dstn12	no	---	s-1-002-4	
			SS7				
	001-070-003		tgtansi003	no	---	-----	
			SS7				
	200-002-001		rtxroute001	no	---	-----	
			SS7				
	040-001-*		myncaibeno	no	no	-----	
			SS7				

SS7	040-010-*	myncaibeno2	no	no	-----	-----
SS7	010-*-*	-----	---	---	-----	-----
DMN	DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24
SS7	2-010-0	dstn13	no	---	-----	-----
SS7	2-010-1	dstn14	no	---	002-010-001	-----
SS7	2-010-2	dstn15	no	---	-----	04178-aa
SS7	2-010-3	dstn16	no	---	-----	s-04179-aa
SS7	2-070-1	tgtitui001	no	---	-----	-----
SS7	2-010-4	dstn17	no	---	-----	002-010-004
SS7	2-010-5	dstn18	no	---	002-010-005	04181-aa
SS7	2-010-6	dstn19	no	---	002-010-006	s-04182-aa
SS7	2-010-7	dstn20	no	---	002-010-007	002-010-007
SS7	2-070-2	tgtitui002	no	---	-----	-----
DMN	DPCI	CLLI	BEI	ELEI	ALIASI	ALIASN/N24
SS7	3-030-0	dstn29	no	---	s-3-030-0	-----
SS7	3-030-1	dstn30	no	---	s-3-030-1	06385-aa
SS7	3-030-2	dstn31	no	---	s-3-030-2	s-06386-aa
SS7	3-070-1	tgtitui005	no	---	s-3-070-1	-----
SS7	3-030-3	dstn32	no	---	s-3-030-3	003-030-003
SS7	3-070-2	tgtitui006	no	---	s-3-070-2	-----
DMN	DPCI	CLLI	BEI	ELEI	ALIASN	ALIASN
SS7	3-030-4	dstn33	no	---	s-06388-aa	06388-aa
SS7	3-030-5	dstn34	no	---	06389-aa	s-06389-aa
DMN	DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI
SS7	06157-aa	-----	no	---	020-005-002	-----
SS7	08192-aa	dstn41	no	---	-----	-----

```

SS7
      08193-aa      dstn42      no ---      004-000-001
-----          SS7
      08194-aa      dstn43      no --- -----
4-000-2          SS7
      08195-aa      dstn44      no --- -----
s-4-000-3        SS7
      08753-aa      tgttitun001 no --- -----
-----          SS7
      08196-aa      dstn45      no ---      004-000-004
4-000-4          SS7
      08197-aa      dstn46      no ---      004-000-005
s-4-000-5        SS7
      08754-aa      tgttitun002 no --- -----
-----          SS7
      08757-aa      tgttitun005 no --- -----
-----          SS7
      08199-fr      dstn48dupfr no --- -----
s-4-006-1        SS7
      08199-tk      dstn48dupTk no --- -----
4-006-2          SS7
      08198-nz      dstn47dupnz no --- -----
-----          SS7

      DPCN          CLLI          BEI ELEI  ALIASI
ALIASI          DMN
      08198-aa      dstn47      no ---      s-4-000-6
4-000-6          SS7
      08199-aa      dstn48      no ---      4-000-7
s-4-000-7        SS7
      08198-fr      dstn47dupfr no ---      s-4-005-7
4-005-7          SS7
      08198-tk      dstn47dupTk no ---      4-006-0
s-4-006-0        SS7

      DPCN          CLLI          BEI ELEI  ALIASN
ALIASI          DMN
      12688-aa      dstn57      no ---      s-12688-aa
-----          SS7
      12689-aa      dstn58      no ---      s-12689-aa
6-050-1          SS7
      12690-aa      dstn59      no ---      s-12690-aa
s-6-050-2        SS7

      DPCN24        CLLI          BEI ELEI  ALIASA
ALIASI          DMN
      003-003-004 ----- no ---      003-003-003
3-003-4          SS7
      006-005-001 dstn63      no --- -----
-----          SS7
      006-005-002 dstn64      no ---      006-005-002
-----          SS7
      006-005-003 dstn65      no --- -----
6-005-3          SS7
      006-070-001 tgttitun24a no --- -----

```

```

----- SS7
006-005-004 dstn66 no --- ----- s-6-005-4
SS7
006-005-005 dstn67 no --- 006-005-005 6-005-5
SS7
006-070-002 tgtitun24b no --- ----- -----
SS7

Destination table is (208 of 2000) 10% full
Alias table is (216 of 12000) 2% full
;

```

This example shows point codes with the spare point code subtype prefix (s-):

```
rtrv-dstn:pcst=s
```

```

eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
rtrv-dstn:pcst=s
Command entered at terminal #4.
Extended Processing Time may be Required

      DPCI          CLLI          BEI ELEI  ALIASA          ALIASN/N24
DMN
s-4-002-0          ----- no --- 010-001-001    s-08228-aa
SS7
s-2-020-0          dstn21          no --- ----- -----
SS7
s-2-020-1          dstn22          no --- 002-020-001  -----
SS7
s-2-020-2          dstn23          no --- ----- 04258-aa
SS7
s-2-020-3          dstn24          no --- ----- s-04259-aa
SS7
s-2-070-3          tgtitui003     no --- ----- -----
SS7
s-2-020-4          dstn25          no --- ----- 002-020-004
SS7
s-2-020-5          dstn26          no --- 002-020-005 04261-aa
SS7
s-2-020-6          dstn27          no --- 002-020-006 s-04262-aa
SS7
s-2-020-7          dstn28          no --- 002-020-007 002-020-007
SS7
s-2-070-4          tgtitui004     no --- ----- -----
SS7
s-3-070-3          tgtitui007     no --- ----- -----
SS7
s-3-070-4          tgtitui008     no --- ----- -----
SS7
s-2-029-6          rtxroute002    no --- 002-029-006 s-04269-aa
SS7

      DPCI          CLLI          BEI ELEI  ALIASI          ALIASN/N24
DMN

```

	s-3-040-2	dstn35	no	---	3-040-2	
-----		SS7				
aa	s-3-040-3	dstn36	no	---	3-040-3	06467-
	SS7					
aa	s-3-040-4	dstn37	no	---	3-040-4	s-06468-
	SS7					
003-040-005	s-3-040-5	dstn38	no	---	3-040-5	
	SS7					
	DPCI	CLLI	BEI	ELEI	ALIASN	
ALIASN	DMN					
aa	s-3-040-6	dstn39	no	---	s-06471-aa	06471-
	SS7					
aa	s-3-040-7	dstn40	no	---	06472-aa	s-06472-
	SS7					
	DPCN	CLLI	BEI	ELEI	ALIASA	
ALIASI	DMN					
	s-08272-aa	dstn49	no	---	-----	
-----		SS7				
	s-08273-aa	dstn50	no	---	004-010-001	
-----		SS7				
4-010-2	s-08274-aa	dstn51	no	---	-----	
	SS7					
s-4-010-3	s-08275-aa	dstn52	no	---	-----	
	SS7					
	s-08755-aa	tgtitun003	no	---	-----	
-----		SS7				
4-010-4	s-08276-aa	dstn53	no	---	004-010-004	
	SS7					
s-4-010-5	s-08277-aa	dstn54	no	---	004-010-005	
	SS7					
	s-08756-aa	tgtitun004	no	---	-----	
-----		SS7				
	s-08758-aa	tgtitun006	no	---	-----	
-----		SS7				
4-006-3	s-08273-fr	dstn50dupfr	no	---	-----	
	SS7					
	DPCN	CLLI	BEI	ELEI	ALIASI	
ALIASI	DMN					
4-010-6	s-08278-aa	dstn55	no	---	s-4-010-6	
	SS7					
s-4-010-7	s-08279-aa	dstn56	no	---	4-010-7	
	SS7					
4-058-7	s-08379-aa	rtxroute003	no	---	s-4-058-7	
	SS7					
	DPCN	CLLI	BEI	ELEI	ALIASN	
ALIASI	DMN					
	s-12691-aa	dstn60	no	---	12691-aa	
-----		SS7				
6-050-4	s-12692-aa	dstn61	no	---	12692-aa	
	SS7					
	s-12693-aa	dstn62	no	---	12693-aa	

```

s-6-050-5      SS7
  s-08272-fr    dstn49dupfr no --- 08300-fr    -----
SS7
  s-08272-tk    dstn49dupTk no --- 08300-tk    4-006-7
SS7

Destination table is (208 of 2000) 10% full
Alias table is (216 of 12000) 2% full
;

```

This example shows point codes with the private point code subtype prefix (p-):

```
rtrv-dstn:pcst=p
```

```

eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
rtrv-dstn:pcst=p
Command entered at terminal #4.
Extended Processing Time may be Required

      DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24
DMN
p-001-001-001  dstn01p    no --- -----
SS7
p-001-001-002  dstn02p    no --- 1-011-2      -----
SS7
p-001-001-003  dstn03p    no --- s-1-011-3     -----
SS7
p-001-001-004  dstn04p    no --- ----- 01060-aa
SS7
p-001-001-005  dstn05p    no --- ----- s-01061-aa
SS7
p-001-001-006  dstn06p    no --- ----- 001-011-006
SS7
p-001-001-007  dstn07p    no --- 1-011-7      01063-aa
SS7
p-001-002-000  dstn08p    no --- 1-012-0      s-01064-aa
SS7
p-001-002-001  dstn09p    no --- s-1-012-1     01065-aa
SS7
p-001-002-002  dstn10p    no --- s-1-012-2     s-01066-aa
SS7
p-001-002-003  dstn11p    no --- 1-012-3      001-012-003
SS7
p-001-002-004  dstn12p    no --- s-1-012-4     001-012-004
SS7

      DPCI          CLLI          BEI ELEI  ALIASA          ALIASN/N24
DMN
p-2-010-0      dstn13p    no --- -----
SS7
p-2-010-1      dstn14p    no --- 002-100-001  -----
SS7
p-2-010-2      dstn15p    no --- ----- 08178-aa
SS7

```

```

    p-2-010-3      dstn16p    no --- -----      s-08179-
aa      SS7
    p-2-010-4      dstn17p    no --- -----
002-100-004  SS7
    p-2-010-5      dstn18p    no --- 002-100-005    08181-
aa      SS7
    p-2-010-6      dstn19p    no --- 002-100-006    s-08182-
aa      SS7
    p-2-010-7      dstn20p    no --- 002-100-007
002-100-007  SS7

          DPCI          CLLI      BEI ELEI  ALIASI
ALIASN/N24  DMN
    p-3-030-0      dstn29p    no --- s-3-031-0
-----          SS7
    p-3-030-1      dstn30p    no --- s-3-031-1          07385-
aa      SS7
    p-3-030-2      dstn31p    no --- s-3-031-2          s-07386-
aa      SS7
    p-3-030-3      dstn32p    no --- s-3-031-3
003-031-003  SS7

          DPCI          CLLI      BEI ELEI  ALIASN
ALIASN      DMN
    p-3-030-4      dstn33p    no --- s-07388-aa        07388-
aa      SS7
    p-3-030-5      dstn34p    no --- 07389-aa        s-07389-
aa      SS7

          DPCN          CLLI      BEI ELEI  ALIASA
ALIASI      DMN
    p-08192-aa      dstn41p    no --- -----
-----          SS7
    p-08193-aa      dstn42p    no --- 004-200-001
-----          SS7
    p-08194-aa      dstn43p    no --- -----
4-040-2      SS7
    p-08195-aa      dstn44p    no --- -----
s-4-040-3      SS7
    p-08196-aa      dstn45p    no --- 004-200-004
4-040-4      SS7
    p-08197-aa      dstn46p    no --- 004-200-005
s-4-040-5      SS7

          DPCN          CLLI      BEI ELEI  ALIASI
ALIASI      DMN
    p-08198-aa      dstn47p    no --- s-4-040-6
4-040-6      SS7
    p-08199-aa      dstn48p    no --- 4-040-7
s-4-040-7      SS7

          DPCN          CLLI      BEI ELEI  ALIASN
ALIASI      DMN
    p-12688-aa      dstn57p    no --- s-13688-aa
-----          SS7

```



```

          p-12689-aa      dstn58p      no --- s-13689-aa      6-060-1
SS7
          p-12690-aa      dstn59p      no --- s-13690-aa      s-6-060-2
SS7

          DPCN24         CLLI         BEI ELEI   ALIASA         ALIASI
DMN
          p-006-005-001   dstn63p      no --- -----
SS7
          p-006-005-002   dstn64p      no --- 006-005-020 -----
SS7
          p-006-005-003   dstn65p      no --- ----- 6-050-3
SS7
          p-006-005-004   dstn66p      no --- ----- s-6-050-4
SS7
          p-006-005-005   dstn67p      no --- 006-005-050 6-050-5
SS7

```

```

Destination table is (208 of 2000) 10% full
Alias table is (216 of 12000) 2% full

```

```
;
```

This example shows point codes with the private and spare point code subtype prefix (ps-):

```
rtrv-dstn:pcst=ps
```

```

eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
rtrv-dstn:pcst=ps
Command entered at terminal #4.
Extended Processing Time may be Required

```

```

          DPCI          CLLI          BEI ELEI   ALIASA         ALIASN/N24
DMN
          ps-2-020-0      dstn21p      no --- -----
SS7
          ps-2-020-1      dstn22p      no --- 002-200-001 -----
SS7
          ps-2-020-2      dstn23p      no --- ----- 08258-aa
SS7
          ps-2-020-3      dstn24p      no --- ----- s-08259-aa
SS7
          ps-2-020-4      dstn25p      no --- ----- 002-200-004
SS7
          ps-2-020-5      dstn26p      no --- -----
SS7
          ps-2-020-6      dstn27p      no --- 002-200-005 08261-aa
SS7
          ps-2-020-7      dstn28p      no --- 002-200-007 002-200-007
SS7

          DPCI          CLLI          BEI ELEI   ALIASI         ALIASN/N24
DMN
          ps-3-040-2      dstn35p      no --- 3-041-2 -----
SS7

```

```

        ps-3-040-3      dstn36p    no --- 3-041-3      07467-
aa      SS7
        ps-3-040-4      dstn37p    no --- 3-041-4      s-07468-
aa      SS7
        ps-3-040-5      dstn38p    no --- 3-041-5
003-041-005  SS7

        DPCI           CLLI       BEI ELEI  ALIASN
ALIASN      DMN
        ps-3-040-6      dstn39p    no --- s-07471-aa  07471-
aa      SS7
        ps-3-040-7      dstn40p    no --- 07472-aa    s-07472-
aa      SS7

        DPCN           CLLI       BEI ELEI  ALIASA
ALIASI      DMN
        ps-08272-aa     dstn49p    no --- -----
-----      SS7
        ps-08273-aa     dstn50p    no --- 004-200-010
-----      SS7
        ps-08274-aa     dstn51p    no --- -----
4-050-2      SS7
        ps-08275-aa     dstn52p    no --- -----
s-4-050-3      SS7
        ps-08276-aa     dstn53p    no --- 004-200-040
4-050-4      SS7
        ps-08277-aa     dstn54p    no --- 004-200-050
s-4-050-5      SS7

        DPCN           CLLI       BEI ELEI  ALIASI
ALIASI      DMN
        ps-08278-aa     dstn55p    no --- s-4-050-6
4-050-6      SS7
        ps-08279-aa     dstn56p    no --- 4-050-7
s-4-050-7      SS7

        DPCN           CLLI       BEI ELEI  ALIASN
ALIASI      DMN
        ps-12691-aa     dstn60p    no --- 13691-aa
-----      SS7
        ps-12692-aa     dstn61p    no --- 13692-aa
6-060-4      SS7
        ps-12693-aa     dstn62p    no --- 13693-aa
s-6-060-5      SS7

```

```

Destination table is (208 of 2000) 10% full
Alias table is (216 of 12000) 2% full

```

```
;
```

This example shows the output for an ANSI destination point code with a single SPC:

```
rtrv-dstn:dpca=1-56-5
```

```

eagle10115 10-08-12 10:00:37 EST EAGLE 43.0.0
      DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24
DMN
      001-056-005  ----- no   ---   1-056-2          16000
SS7
      SPC          NCAI          RCAUSE NPRST SPLITIAM HMSMSC HMSCP
SCCPMSGCNV
      ----- no          none   off   none    no    no    sxudt2udt

Destination table is (12 of 2000) 1% full
Alias table is (4 of 12000) 1% full

```

```
;
```

This example shows the 24-bit ITU-N destination point code(s) assigned to the 24-bit ITU-N secondary point code:

```
rtrv-dstn:spcn24=6-5-0
```

```

eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
rtrv-dstn:spcn24=6-5-0
Command entered at terminal #4.
Extended Processing Time may be Required

SPCN24=    006-005-000

      DPCN24          CLLI          BEI ELEI  ALIASA          ALIASI
DMN
      003-003-004  ----- no   ---   003-003-003      3-003-4
SS7
      006-005-001  dstn63      no   --- -----
SS7
      p-006-005-001 dstn63p     no   --- -----
SS7
      006-005-002  dstn64      no   ---   006-005-002      -----
SS7
      p-006-005-002 dstn64p     no   ---   006-005-020      -----
SS7
      006-005-003  dstn65      no   --- -----          6-005-3
SS7
      p-006-005-003 dstn65p     no   --- -----          6-050-3
SS7
      006-070-001  tgtitun24a no   --- -----
SS7
      006-005-004  dstn66      no   --- -----          s-6-005-4
SS7
      p-006-005-004 dstn66p     no   --- -----          s-6-050-4
SS7
      006-005-005  dstn67      no   ---   006-005-005      6-005-5
SS7
      p-006-005-005 dstn67p     no   ---   006-005-050      6-050-5
SS7

```

```

006-070-002 tgtitun24b no --- -----
----- SS7

```

```

Destination table is (208 of 2000) 10% full
Alias table is (216 of 12000) 2% full

```

```
;
```

This example shows a summary report for all point code destinations that are members of the given network. This does not include the specified network routing point code 40-*-*.

```
rtrv-dstn:dpc=40-*-*
```

```
eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
```

```
rtrv-dstn:dpc=40-*-*
```

```
Command entered at terminal #4.
```

```
Extended Processing Time may be Required
```

DPCN	CLLI	BEI	ELEI	ALIASI
ALIASN/N24 DMN				
040-001-*	myncaibeno	no	no	-----
----- SS7				
040-010-*	myncaibeno2	no	no	-----
----- SS7				
040-001-001	noncluster1	no	---	-----
----- SS7				
040-001-002	noncluster2	no	---	-----
----- SS7				

```
Destination table is (211 of 2000) 11% full
```

```
Alias table is (216 of 12000) 2% full
```

```
;
```

This example shows summary output when proxy point code destinations are present:

```
rtrv-dstn
```

```
tekelecstp 10-10-15 14:46:12 EST EAGLE 43.0.0
```

```
rtrv-dstn
```

```
Command entered at terminal #4.
```

```
Extended Processing Time may be Required
```

DPCN	CLLI	BEI	ELEI	ALIASI
ALIASN/N24 DMN				
002-002-002	-----	no	---	-----
----- SS7				
001-001-001	-----	no	---	-----
----- SS7				
001-001-002	-----	no	---	-----
----- SS7				
001-001-003	-----	no	---	-----
----- SS7				

```

001-001-004 ----- no --- -----
SS7
001-001-005 ----- no --- -----
SS7
001-001-006 ----- no --- -----
SS7
001-001-007 ----- no --- -----
SS7
001-001-008 ----- no --- -----
SS7
001-001-009 ----- no --- -----
SS7
001-001-010 ----- no --- -----
SS7

```

```

Destination table is (11 of 2000) 1% full
Alias table is (0 of 12000) 0% full
PPC table is (1 of 10) 10% full

```

```
;
```

This example shows the output for a destination that references a proxy point code:

```
rtrv-dstn:dpc=1-1-1
```

```

eagle10115 10-08-12 10:00:37 EST EAGLE 43.0.0
  DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24
DMN
001-001-001 ----- no --- -----
SS7

  PPCA          NCAI PRX      RCAUSE NPRST SPLITIAM HMSMSC HMSCP
SCCPMSGCNV
002-002-002 ---- no          none  off  none    no    no    none

```

```

Destination table is (30 of 2000) 2% full
Alias table is (0 of 12000) 0% full
PPC table is (1 of 100) 10% full

```

```
;
```

This example shows summary information for all destinations using a specified proxy point code:

```
rtrv-dstn:ppc=2-2-2
```

```

eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-dstn:ppc=2-2-2
Command entered at terminal #4.
Extended Processing Time may be Required

PPCA=    002-002-002

```

DPCA ALIASN/N24	DMN	CLLI	BEI	ELEI	ALIASI
001-001-001		-----	no	---	-----
	SS7				
001-001-002		-----	no	---	-----
	SS7				
001-001-003		-----	no	---	-----
	SS7				
001-001-004		-----	no	---	-----
	SS7				
001-001-005		-----	no	---	-----
	SS7				
001-001-006		-----	no	---	-----
	SS7				
001-001-007		-----	no	---	-----
	SS7				
001-001-008		-----	no	---	-----
	SS7				
001-001-009		-----	no	---	-----
	SS7				
001-001-010		-----	no	---	-----
	SS7				

Destination table is (11 of 2000) 1% full
Alias table is (0 of 12000) 0% full
PPC table is (1 of 10) 10% full

;

This example shows summary information for all proxy destinations:

rtrv-dstn:prx=yes

eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-dstn:prx=yes
Command entered at terminal #4.
Extended Processing Time may be Required

PRX= yes

DPCA ALIASN/N24	DMN	CLLI	BEI	ELEI	ALIASI
001-001-001		-----	no	---	-----
	SS7				
001-001-002		-----	no	---	-----
	SS7				
001-001-003		-----	no	---	-----
	SS7				
001-001-004		-----	no	---	-----
	SS7				

Destination table is (17 of 2000) 1% full
Alias table is (0 of 12000) 0% full

```

    PPC table is (4 of 10) 40% full
;

```

This example shows the output for a specific destination point code when the Proxy Point Code feature is turned on and the DPC refers to a secondary point code. The *homesmsc* and *homescp* flags are provisioned.

```
rtrv-dstn:dpc=3-3-3
```

```

    eagle10115 10-08-12 10:00:37 EST  EAGLE 43.0.0
      DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24
DMN
    003-003-003  ----- no  --- -----
SS7
      SPCA          NCAI PRX      RCAUSE NPRST SPLITIAM HMSMSC HMSCP
SCCPMSGCNV
    009-009-009  ---- no      none  off  none      yes  yes  none
Destination table is (4 of 2000) 1% full
Alias table is (0 of 12000) 0% full
PPC table is (2 of 10) 20% full
;

```

This example shows the ITUN destination point code(s) within a spare group code when the ITUDUPPC feature is on and the STP flexible point code option (*npcfmt1*) is set to the 4-member ITUN point format to (*m1-m2-m3-m4-gc*):

```
rtrv-dstn:dpcn=s-*-**-*-fr
```

```

    eagle10115 10-10-09 10:00:37 EST  EAGLE 43.0.0
    rtrv-dstn:dpcn=s-*-**-*-fr
    Command entered at terminal #4.
    Extended Processing Time may be Required
      DPCN          CLLI          BEI ELEI  ALIASA          ALIASI
DMN
    s-1034-0-0-1-fr dstn50dupfr no  --- -----          4-006-3
SS7
      DPCN          CLLI          BEI ELEI  ALIASN          ALIASI
DMN
    s-1034-0-0-0-fr dstn49dupfr no  ---  1037-1-0-0-fr -----
SS7
Destination table is (208 of 2000) 10% full
Alias table is (216 of 12000) 2% full
;

```

This example shows the output when the *rcause* and *nprst* parameters are provisioned:

```
rtrv-dstn:dpci=1-1-1
```

```
eagle10115 10-08-12 10:00:37 EST EAGLE 43.0.0

      DPCI          CLLI          BEI ELEI  ALIASA
ALIASN/N24  DMN
      1-001-1      ----- no  ---  001-001-001
16000          SS7

      SPCI          NCAI          RCAUSE NPRST SPLITIAM HMSMSC HMSCP
SCCPMSGCNV
      ----- no          5      on  none  no  no
none

Destination table is (12 of 2000) 1% full
Alias table is (4 of 12000) 1% full
;
```

This example shows the output when IAM/SAM splitting is provisioned:

```
rtrv-dstn:splitiam=20
```

```
tklc1191001 10-10-28 07:25:13 EST EAGLE5 43.0.0
rtrv-dstn:splitiam=20
Command entered at terminal #4.
Extended Processing Time may be Required

      DPCA          CLLI          BEI ELEI  ALIASI
ALIASN/N24  DMN

      DPCI          CLLI          BEI ELEI  ALIASA
ALIASN/N24  DMN
      1-001-1      ----- no  ---  001-001-001
----- SS7

      DPCN          CLLI          BEI ELEI  ALIASA
ALIASI      DMN
      DPCN24        CLLI          BEI ELEI  ALIASA
ALIASI      DMN

DESTINATION ENTRIES ALLOCATED:  8000
FULL DPC(s):                    864
EXCEPTION DPC(s):               5184
NETWORK DPC(s):                  0
CLUSTER DPC(s):                  0
TOTAL DPC(s):                    6048
CAPACITY (% FULL):               76%
ALIASES ALLOCATED:               8000
ALIASES USED:                    1511
CAPACITY (% FULL):               19%
X-LIST ENTRIES ALLOCATED:        500
;
```


This example shows summary information for all the destinations with
sccpmsgcnv=udt2xudt:

```
rtrv-dstn:sccpmsgcnv=udt2xudt
```

```

eagle10115 10-11-22 10:00:36 EST EAGLE 43.0.0

      DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24
DMN
      009-009-009  ----- no  --- -----
SS7

      DPCI          CLLI          BEI ELEI  ALIASA          ALIASN/N24
DMN

      DPCN          CLLI          BEI ELEI  ALIASA          ALIASI
DMN
      01234          ----- no  --- -----
SS7

      DPCN24        CLLI          BEI ELEI  ALIASA          ALIASI
DMN

Destination table is (5 of 2000) 1% full
Alias table is (0 of 12000) 0% full

```

```
;
```

This example shows the output when the NCR, NRT, and CRMD features are
on, and the 10,000 Routesets feature is enabled:

```
rtrv-dstn
```

```

rlghncxa03w 10-08-17 08:29:15 EST EAGLE 43.0.0

      DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24
DMN
      003-003-003  ----- no  --- -----
SS7
      004-004-004  ----- no  --- -----
SS7
      005-005-005  ----- no  --- -----
SS7
      008-001-*    ----- no  no  -----
SS7

DESTINATION ENTRIES ALLOCATED: 10000
      FULL DPC(s) : 9
      NETWORK DPC(s) : 0
      CLUSTER DPC(s) : 1
      TOTAL DPC(s) : 10
      CAPACITY (% FULL) : 1%
ALIASES ALLOCATED: 10000
      ALIASES USED: 0

```

```

          CAPACITY (% FULL):                0%
X-LIST ENTRIES ALLOCATED:                  500
;

```

This example shows the output when the CRMD, NCR, NRT features are off and the 10,000 Routesets feature is enabled. If the route table is not empty, the provisioned DSTP is also displayed:

```

rtrv-dstn

rlghncxa03w 10-08-17 08:29:15 EST  EAGLE 43.0.0
Destination table is (10 of 10000) 1% full
Alias table is (8 of 10000) 1% full
RTRV-DSTN: MASP A - COMPLTD
;

```

This example shows the output when the J7 Support feature is enabled:

```

rtrv-dstn:pctype=itun16

tekelecstp 13-02-27 15:13:41 EST  45.0.0-64.56.0
rtrv-dstn:pctype=ansi
Command entered at terminal #4.
Extended Processing Time may be Required

          DPCN16          CLLI          BEI  ELEI  ALIASI
ALIASN          DMN
          001-002-006  -----  no  ---  001-002-005
-----          SS7

Destination table is (2 of 2000) 1% full
Alias table is (2 of 12000) 1% full
;

```

Legend

- **DPC/DPCA/DPCI/DPCN/DPCN24**—Destination point code
- **CLLI**—Command Language Location Indicator
- **BEI**—Broadcast Exception Indicator
- **ELEI**—Cluster Exception-List Exclusion Indicator
- **NCAI**—Nested Cluster Allowed Indicator
- **ALIASA/ALIASI/ALIASN/ALIASN24**—Alias point code
- **SPC**—Secondary point code
- **DMN**—Destination Entity Domain
- **PPC**—Proxy Point Code
- **PRX**—Proxy Point Code Indicator

- **RCAUSE**—Release Cause
- **NPRST**—NM Bits Reset
- **SPLITIAM**—IAM/SAM Split
- **HOMESMSC**—Home SMSC
- **HOMESCP**—Home SCP
- **SCCPMSGCNV**—SCCP Message Conversion Indicator

Related Topics

- [chg-dstn](#)
- [chg-rte](#)
- [dlt-dstn](#)
- [dlt-rte](#)
- [ent-dstn](#)
- [ent-rte](#)
- [rept-stat-dstn](#)
- [rept-stat-rte](#)
- [rtrv-rte](#)

4.1.475 rtrv-e1

Use this command to retrieve information for a specified E1 interface or for all E1 interfaces that have been defined by the `ent-e1` command for an E5-E1T1-B card used as an E1 or SE-HSL card.

Parameters

e1port (optional)

E1 port number

The value must be an E1 port that has already been configured with an E1 interface on the specified E1 card (`loc` parameter).

Range:

1 - 8

Default:

If not specified, all E1 ports are listed.

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Default:

If not specified, all E1 card locations are listed.

Example

```
rtrv-e1  
rtrv-e1:loc=1307:elport=2  
rtrv-e1:loc=1311:elport=1
```

Dependencies

The `loc` and `elport` parameters must be specified together in the command.

4214 E4214 Cmd Rej: LOC and E1PORT parameter combination must be specified

The E1 interface of the E1 card specified by the `loc` parameter must already be defined (see the `ent-e1` command) before this command can be entered.

4076 E4076 Cmd Rej: E1 card location is unequipped

The card specified by the `loc` parameter must be a LIME1 card type.

2212 E2212 Cmd Rej: Invalid card type for this command

The Card (IMT) table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

The E1/T1 table must be accessible.

4059 E4059 Cmd Rej: Failed reading the E1/T1 table

An E1 interface must already be defined on the port specified by the `elport` parameter before this command can be entered.

4055 E4055 Cmd Rej: The E1PORT at the specified location is not equipped

The following card locations (`loc` parameter) are not valid for this command: 1113 through 1118 and all `xy09` and `xy10` locations (where `x` is the frame and `y` is the shelf).

2154 E2154 Cmd Rej: Card slot reserved by system

Notes

None.

Output**Legend**

- **LOC**—E1 card location
- **E1PORT**—E1 port number on an E1 card
- **CRC4**—CRC4 indicator
- **ENCODE**—Indicator for use of HDB3 or AMI encoding/decoding
- **SI**—Value of two Spare International bits of NFAS data
- **SN**—Value of five Spare National bits of NFAS data

- **MINSURATE**—Minimum number of signaling units present on a link uniformly distributed. A value appears in this field only when the LINKCLASS field value is UNCHAN.
- **TSx**—Timeslot

Related Topics

- [chg-e1](#)
- [dlt-e1](#)
- [ent-e1](#)
- [tst-e1](#)

4.1.476 rtrv-eisopts

Use this command to retrieve the status of the copy functions for the EAGLE 5 Integrated Monitoring Support (E5IS) feature.

Parameters

This command has no parameters.

Example

```
rtrv-eisopts
```

Dependencies

The NETOPTS table must be accessible.

3979 E3979 Cmd Rej: Read NETOPTS table failed

The EAGLE 5 Integrated Monitoring Support (E5IS) feature must be turned on before this command can be entered.

3967 E3967 Cmd Rej: E5IS must be ON

Notes

None

Output

```
rtrv-eisopts
```

```
rlghncxa03w 17-08-21 11:12:15 EST  EAGLE 46.6.0
  EIS OPTIONS
  -----
  EISCOPY = ON

  FAST COPY OPTIONS
  -----
  FCGPL = IPSG      FCMODE = FCOPY
  -----
;
```

Related Topics

- [chg-eisopts](#)

4.1.477 rtrv-enum-acl

Use this command to retrieve an entry from the ENUM Access Control List (ACL) Table. The ENUM ACL Table supports the provisioning information related to the allowed IP addresses for the ENUM application.

Parameters**ipaddr (optional)**

This is a TCP/IP address expressed in standard dot notation. It specifies allowed IP addresses for the ENUM application.

Range:

Four numbers separated by dots, with each number in the range of 0-255, *.

**Note:**

It also supports wildcard characters as follows:

xxx.xxx.xxx.*

xxx.xxx.*.*

xxx.*.*.*

where xxx can be any number in range of 0-255.

System Default:

0.0.0.0

Example

```
rtrv-enum-acl
rtrv-enum-acl:ipaddr=10.248.13.9
rtrv-enum-acl:ipaddr=10.248.13.*
rtrv-enum-acl:ipaddr=10.248.*.*
rtrv-enum-acl:ipaddr=10.*.*.*
```

Dependencies

The ENUM ACL Table should be accessible.

3182 E3182 Cmd Rej: Failure accessing ENUMACL table

The IP address specified by the IPADDR parameter should be provisioned in the ENUM ACL Table.

3739 E3739 Cmd Rej: No Entry found

The IP address specified by the IPADDR parameter must be a valid IP address.

2704 E2704 Cmd Rej: Invalid IPADDR

Notes

Wildcard IP addresses are allowed to support the ranges of IP addresses.

Output

This example displays output when the IPADDR parameter is not specified:

```
rtrv-enum-acl

tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
  rtrv-enum-acl
  Command entered at terminal #4.
  RTRV-ENUM-ACL: MASP A - COMPLTD
;
  IP Address
  -----
  10.248.13.4
  10.245.13.*
  12.*.*.*
```

```
rtrv-enum-acl:ipaddr=10.248.13.9

tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
  rtrv-enum-acl:ipaddr=10.248.13.9
  Command entered at terminal #4.
  RTRV-ENUM-ACL: MASP A - COMPLTD
;
  IP Address
  -----
  10.248.13.9
```

Related Topics

- [dlt-enum-acl](#)
- [ent-enum-acl](#)

4.1.478 rtrv-enumopts

Use this command to retrieve the parameters from the ENUMOPTS table.

Parameters

This command has no input parameters.

Example

```
rtrv-enumopts
```

Dependencies

The ENUMOPTS table should be accessible.

4820 E4820 Cmd Rej: Failure accessing EGLEOPTS table

Output

This example shows output with default ENUM options in EAGLE Release 46.1.0.

```
rtrv-enumopts

tekelecstp 14-06-02 11:43:52 EST EAGLE 46.1.0
rtrv-enumopts
Command entered at terminal #4.

MAXDNDIGS = 10
CONGLVL1  = 40
CONGLVL2  = 80
CNGNTFY   = no
CNGRCODE  = ENUM QRY REFUSED(5)
```

;

This example shows output with default ENUM options in EAGLE Release 46.5.0.

```
rtrv-enumopts

Command Accepted - Processing

tekelecstp 17-03-16 13:44:43 EST EAGLE 46.5.0.0.0-70.22.0
rtrv-enumopts
Command entered at terminal #2.
```

ENUM OPTIONS TABLE

```
MAXDNDIGS = 15
CONGLVL1  = 40
CONGLVL2  = 80
CNGNTFY   = no
CNGRCODE  = ENUM QRY REFUSED(5)
EXCLUDESP = no
RNCONTEXT = no
```

;

This example shows output with default ENUM options in EAGLE Release 46.8.0.

```
rtrv-enumopts

Command Accepted - Processing
tekelecstp 19-05-03 16:59:46 MST EAGLE 46.8.0.0.0-75.18.14
rtrv-enumopts
Command entered at terminal #3.
```



```

tekelecstp 19-05-03 16:59:46 MST EAGLE 46.8.0.0-75.18.14
ENUM OPTIONS TABLE
-----
MAXDNDIGS    = 15
CONGLVL1     = 40
CONGLVL2     = 80
CNGNTFY      = no
CNGRCODE     = ENUM QRY REFUSED(5)
EXCLUDESP    = no
RNCONTEXT    = no
INCPREFIX    = no
;

```

Related Topics

- [chg-enumopts](#)

4.1.479 rtrv-enum-prof

Use this command to retrieve the existing profile entry which has data to generate the ENUM response for three supported resource record formats such as NAPTR, NS and CNAME. The ENUM Profile Table stores the profile entry.

Parameters

prn (optional)

Profile name. This parameter specifies the unique logical name assigned to the profile entry used to generate the ENUM response.

Range:

ZZZZZZZZZZ

A string of alphanumeric characters, beginning with a letter and up to 10 characters in length. Valid values are a..z, A..Z, 0..9.

rtrype (optional)

Response type. This parameter specifies the response type for the profile. It identifies the profile used to generate the ENUM response for each resource record type.

Range:

naptr

cname

ns

Default:

No change to the current value

System Default:

naptr

sparm (optional)

Service parameter. This parameter specifies the supported ENUM services. The ENUM application shall only support two ENUM Services.

Range:*pstntel**pstnsip**sip***Default:**

No change to the current value

System Default:*pstntel***prefix (optional)**

This parameter specifies the prefix digits to be appended as routed number (RN) in NAPTR regex response. This parameter is only valid for NAPTR response type.

Range:*0 - ffff*

Upto 5 hexa-decimal digits allowed.

*sip***Default:**

No change to the current value

System Default:*None***Example**

```
rtrv-enum-prof:prn=pr1
rtrv-enum-prof:sparm=pstntel
rtrv-enum-prof:rtype=ns
rtrv-enum-prof:rtype=naptr:sparm=sip
rtrv-enum-prof:rtype=naptr:sparm=pstnsip
rtrv-enum-prof:prefix=1234
```

Dependencies

The ENUM Profile Table should be accessible.

3184 E3184 Cmd Rej: Failure accessing ENUMPROF table

The Profile name parameter cannot be specified with any other parameter.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The Profile name must be present in the ENUM Profile Table.

3739 E3739 Cmd Rej: No Entry found

Either provide the SPARM parameter alone or with the RTYPE=NAPTR parameter.

3205 E3205 Cmd Rej: SPARM must be specified alone or with rtype=NAPTR

Notes

The requirement of using PREFIX in the regular expression is only for PSTN-SIP (NAPTR query). As such, PREFIX will not be applied for PSTN-TEL and SIP (NAPTR queries).

PREFIX can be configured for PSTN-TEL and SIP profiles, but it will not be used.

Output

The example shows the output of a profile having RTYPE = NAPTR.

```
> rtrv-enum-prof:prn=pr1

tekelecstp 18-05-29 04:55:20 MST EST EAGLE 46.1.0
rtrv-enum-prof:prn=pr1

PROFILE NAME: pr1
  RTYPE      : naptr      SPARM      : sip
  PREF       : yes       RRDOMAIN   : abc.oracle.com
  RPDOMAIN   : ---
;
```

The example shows the output of a profile having RTYPE = NS.

```
> rtrv-enum-prof:prn=pr2

tekelecstp 18-05-29 04:57:20 MST EST EAGLE 46.1.0
rtrv-enum-prof:prn=pr2

PROFILE NAME: ns
  RTYPE      : ns          SPARM      : ---          PREF      : ---
  RRDOMAIN   : ---
  RPDOMAIN   : def.oracle.com
;
```

The example shows the output of a NAPTR type profile in which replacement domain name is not provisioned.

```
> rtrv-enum-prof:prn=pr3

tekelecstp 18-05-29 04:58:20 MST EST EAGLE 46.1.0
rtrv-enum-prof:prn=pr3

PROFILE NAME: pr3
  RTYPE      : naptr      SPARM      : pstnsip
  PREF       : yes       RRDOMAIN   : abc1.oracle.com
  RPDOMAIN   : ---
;
```

The example shows the output of `rtrv-enum-prof` without any parameter.

```
rtrv-enum-prof

tekelecstp 18-05-29 04:59:20 MST EST EAGLE 46.1.0
rtrv-enum-prof

PROFILE NAME: default
  RTYPE      : ns           SPARM   : ---       PREF   : ---
  RRDOMAIN   : ---
  RPDOMAIN   : abc.com

PROFILE NAME: ns
  RTYPE      : ns           SPARM   : ---       PREF   : ---
  RRDOMAIN   : ---
  RPDOMAIN   : def.oracle.com

PROFILE NAME: cname
  RTYPE      : cname       SPARM   : ---       PREF   : ---
  RRDOMAIN   : ---
  RPDOMAIN   : def.oracle.com

PROFILE NAME: nap_prof
  RTYPE      : naptr       SPARM   : pstntel   PREF   : no
  RRDOMAIN   : ---
  RPDOMAIN   : ---

ENUMPROF table is (4 of 1024) 1% full.

;
```

The example shows the output of `rtrv-enum-prof` with prefix parameter:

```
rtrv-enum-prof

>

tekelecstp 19-02-01 14:33:21 EST EAGLE 46.8.0.0.0-75.18.11
rtrv-enum-prof:prefix=1234
Command entered at terminal #2.

;

tekelecstp 19-02-01 14:33:21 EST EAGLE 46.8.0.0.0-75.18.11

PROFILE NAME: pr1
  RTYPE      : naptr       SPARM   : sip       PREF   : yes
  RRDOMAIN   : abc.oracle.com
  RPDOMAIN   : ---
  PREFIX     : 1234

PROFILE NAME: pr4
```

```
RTYPE      : naptr          SPARM   : pstnsip      PREF   : no
RRDOMAIN   : abc2.oracle.com
RPDOMAIN   : ---
PREFIX     : 1234
```

```
ENUMPROF table is (6 of 2048) 1% full.
```

```
;
```

Related Topics

- [chg-enum-prof](#)
- [dlt-enum-prof](#)
- [ent-enum-prof](#)

4.1.480 rtrv-enum-profsel

Use this command to retrieve an entry from the ENUM Profile Selection Table or the ENUM DN Block Table. The ENUM Profile Selection Table supports the provisioning information related to mapping the Entity Id to the Profile Selection Id. The ENUM DN Block table supports the provisioning information related to mapping the DN Block to the Profile Selection Id.

Parameters

edn (optional)

End Dialed Number

Range:

5-15 digits

entityid (optional)

Network Entity

Range:

1-15 digits

sdn (optional)

Start Dialed Number

Range:

5-15 digits

Example

```
rtrv-enum-profsel:entityid=12345
```

```
rtrv-enum-profsel:sdn=11223344
```

```
rtrv-enum-profsel:edn=1324566
```

```
rtrv-enum-profsel
```

Dependencies

The value specified for the EntityId, SDN, or EDN parameters must already exist in the ENUM Profile Selection Table or the ENUM DN Block Table respectively.

3739 E3739 Cmd Rej: No Entry found

The ENUM Profile Selection Table should be accessible.

3183 E3183 Cmd Rej: Failure accessing ENUMPRID table

The ENUM DN Block Table should be accessible.

3185 E3185 Cmd Rej: Failure accessing ENUM DNBLK table

Entity Id cannot be specified with SDN or EDN.

2155 E2155 Cmd Rej: Invalid parameter combination specified

Notes

None

Output

This example displays output when entity Id is specified:

```
rtrv-enum-profsel:entityid=1234
```

```
tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
rtrv-enum-profsel:entityid=1234
Command entered at terminal #4.
RTRV-ENUM-PROFSEL: MASP A - COMPLTD
;
```

Entity ID	PRN1	PRN2	PRN3	PRN4
1234	---	cname	---	naptr

This example displays output when SDN is specified:

```
rtrv-enum-profsel:sdn=1234567
```

```
tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
rtrv-enum-profsel:sdn=1234567
Command entered at terminal #4.
RTRV-ENUM-PROFSEL: MASP A - COMPLTD
;
```

SDN	EDN	PRN1	PRN2	PRN3	PRN4
-----	-----	------	------	------	------

```
-----
1234567      1235555          prof1      prof2      Prof3      Prof4
```

This example displays output when EDN is specified:

```
rtrv-enum-profsel:edn=1235555
```

```
tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
rtrv-enum-profsel:edn=1235555
Command entered at terminal #4.
RTRV-ENUM-PROFSEL: MASP A - COMPLTD
```

```
;
```

```
SDN          EDN          PRN1      PRN2      PRN3      PRN4
-----
1234567      1235555          prof1      prof2      Prof3      Prof4
```

This example displays output of `rtrv-enum-profsel` without any parameters specified:

```
rtrv-enum-profsel
```

```
tekelecstp 14-05-28 15:04:28 EST EAGLE 46.1.0
rtrv-enum-profsel
Command entered at terminal #4.
RTRV-ENUM-PROFSEL: MASP A - COMPLTD
```

```
;
```

```
Entity ID      PRN1      PRN2      PRN3      PRN4
-----
1234           ---      cname     ---      naptr
12345         ns1       ---      naptr     ---
12346         ---      ---      ---      naptr
```

```
SDN          EDN          PRN1      PRN2      PRN3      PRN4
-----
1234567      1235555          prof1      prof2      Prof3      Prof4
```

```
ENUMPRID table is (3 of 1024) 1% full.
```

```
ENUMDNBK table is (1 of 1024) 1% full.
```

Related Topics

- [chg-enum-profsel](#)
- [dlt-enum-profsel](#)
- [ent-enum-profsel](#)

4.1.481 rtrv-feat

Use this command to show the status of optional features in the system that are controlled with the `chg-feat` command.

Parameters

This command has no parameters.

Example

```
rtrv-feat
```

Dependencies

The MAS configuration table must be accessible.

2145 E2145 Cmd Rej: Failed reading MAS configuration table

The database cannot be accessed. There is a severe database failure.

2416 E2416 Cmd Rej: Unable to access database. Severe database failure

None

N/A N/A

Notes

This command is not allowed in upgrade mode.

Output

Caution:

The following output example may differ from the output shown at your terminal and may include unsupported features. Some optional features must be purchased before you turn the feature on. If you are not sure whether you are entitled to turn a feature on, contact your Oracle Sales Representative or Account Representative. After you turn on a feature with the `chg-feat` command, you cannot turn it off.

```
rtrv-feat
```

```
tekelecstp 10-03-10 16:50:04 EST  EAGLE 42.0.0
EAGLE FEATURE LIST
GTT      = off   GWS      = off   NRT      = off
LAN      = off   CRMD     = off   SEAS     = off
LFS      = off   MTPRS   = off   FAN      = off
DSTN5000 = off   WNP     = off   CNCF     = off
TLNP     = off   SCCPCNV = off   TCAPCNV = off
IPISUP   = off   PLNP    = off   NCR      = off
ITUMTPRS = off   SLSOCB = off   EGGT     = off
```



```

VGTT      = off      MPC      = off      ITUDUPPC = off
MEASPLAT = off      TSCSYNC = off      E5IS     = off
;

```

Legend

- **GTT**—Global Title Translation feature
- **GWS**—Gateway Screening feature
- **NRT**—Network Routing feature
- **CRMD**—Cluster Routing and Management Diversity feature
- **LFS**—Link Fault Sectionalization feature
- **MTPRS**—ANSI MTP Restart feature
- **FAN**—Cooling Fan feature
- **DSTN5000**—DSTN5000 (5000 Routes) feature
- **WNP**—Wireless Number Portability feature
- **CNCF**—Calling Name Conversion Facility with Redirect Capability feature
- **TLNP**—Triggerless Local Number Portability feature
- **IPISUP**—ISUP Routing over IP feature
- **SEAS**—SEAS feature
- **SCCPCNV**—SCCP Conversion feature
- **TCAPCNV**—TCAP Conversion feature
- **PLNP**—PCS 1900 Number Portability feature
- **NCR**—Nested Cluster Routing feature
- **ITUMTPRS**—ITU MTP Restart feature
- **SLSOCB**—Other CIC Bit Used feature
- **EGTT**—Enhanced Global Title Translation feature
- **VGTT**—Variable Length GTT feature
- **MPC**—Multiple Point Code feature
- **ITUDUPPC**—ITU National Duplicate Point Code feature
- **TSCSYNC**—Time Slot Counter Synchronization (TSC) feature
- **E5IS**—EAGLE 5 Integrated Monitoring Support feature
- **MEASPLAT**—Measurements Platform feature

Related Topics

- [chg-feat](#)

4.1.482 rtrv-frm-pwr

Use this command to retrieve a list of entries for all provisioned frames or the entry for the specified frame from the Frame Power Threshold (FPT) table. The command displays only provisioned entries for provisioned frames.

Parameters

frm (optional)

Frame ID. This parameter displays the FPT table entry for the specified provisioned frame.

Range:

cf00

Control frame

ef00

First extension frame

ef01

Second extension frame

ef02

Third extension frame

ef03

Fourth extension frame

ef04

Fifth extension frame

Example

Retrieve all provisioned Frame Power Threshold table entries.

```
rtrv-frm-pwr
```

Retrieve Frame Power Threshold table entries for the control frame (`frm=cf00`).

```
rtrv-frm-pwr:frm=cf00
```

Dependencies

The following values are valid for the `frm` parameter: *CF00*, *EF00*, *EF01*, *EF02*, *EF03*, *EF04*.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

The `frm` parameter value must specify a provisioned frame.

4541 E4541 Cmd Rej: Entered Frame must be a provisioned frame

The Frame Power Threshold (FPT) table must be accessible.

4539 E4539 Cmd Rej: Failed reading FPT table

The `frm` parameter value must specify a frame that has a Frame Power Threshold entry provisioned in the FPT table.

4538 E4538 Cmd Rej: Power Threshold entry does not exist in FPT table

Notes

If no parameter is specified in the command, all provisioned FPT table entries are displayed.

If the frm parameter is specified, the FPT entry corresponding to the specified frame is displayed.

Output

This example retrieves all Frame Power Threshold table entries:

```
rtrv-frm-pwr
```

```
tekelecstp 06-04-11 12:38:01 EST EAGLE 35.0.0
```

Frame	Power Threshold (Amps)
cf00	56
ef00	36
ef01	40

```
FRAME POWER THRESHOLD table is (3 of 10) 30% full;  
RTRV-FRM-PWR: MASP A - COMPLTD
```

```
;
```

This example Retrieve the Frame Power Threshold table entry for the control shelf:

```
rtrv-frm-pwr:frm=cf00
```

```
tekelecstp 06-04-11 12:38:01 EST EAGLE 35.0.0
```

Frame	Power Threshold (Amps)
cf00	56

```
FRAME POWER THRESHOLD table is (3 of 10) 30% full;  
RTRV-FRM-PWR: MASP A - COMPLTD
```

```
;
```

Related Topics

- [chg-frm-pwr](#)
- [dlt-frm-pwr](#)
- [ent-frm-pwr](#)
- [rtrv-stp](#)

4.1.483 rtrv-ftp-serv

Use this command to retrieve an entry for an FTP server from the FTP Server table or all entries in the FTP Server table.

Parameters

app (optional)

Application. This parameter specifies the FTP Client application that interfaces with the FTP Server.

Range:

db

Database Backup\Restore application

dist

EAGLE Software Release Distribution application

meas

Measurements Platform application

sflog

SS7 Firewall Logging application

user

FTP-based Table Retrieve Application (FTRA)

ipaddr (optional)

IP Address of the FTP Server.

Range:

4 numbers separated by dots, with each number in the range of 0-255.

mode (optional)

Full or brief report indicator.

Range:

full

brief

Default:

brief

Example

```
rtrv-ftp-serv
```

```
rtrv-ftp-serv:app=meas:ipaddr=1.255.0.100
```

```
rtrv-ftp-serv:mode=brief
```

```
rtrv-ftp-serv:app=meas
```

```
rtrv-ftp-serv:ipaddr=1.255.0.100
```

```
rtrv-ftp-serv:mode=full
```

```
rtrv-ftp-serv:app=sflog
```

Dependencies

The `app` parameter must specify an application that uses the FTP Support feature.

N/A N/A

The `ipaddr` parameter must specify a valid IP address for the FTP server.

N/A N/A

The `mode` parameter allows you to display either the full 100 characters of the path string for each entry (`mode=full`), or the first 29 characters of the path string for each entry (`mode=brief`).

N/A N/A

Notes

The LOGIN and PATH are displayed in mixed case.

Output

```
rtrv-ftp-serv
```

```
tekelecstp 12-09-19 15:15:04 EST 45.0.0-64.42.0
rtrv-ftp-serv
Command entered at terminal #4.
```

APP	IPADDR	LOGIN	SECU	PRIO	PATH
-----	-----	-----	----	----	----
meas	10.248.13.9	root	ON	8	/root
db	10.248.13.10	root	OFF	4	/root
user	10.248.13.100	root	ON	4	/root

```
FTP SERV table is (3 of 10) 30% full
```

```
;
```

```
rtrv-ftp-serv:app=sflog
```

```
tekelecstp 15-05-27 15:55:00 EST Eagle 46.3.0
rtrv-ftp-serv:app=sflog
Command entered at terminal #4.
```

APP	IPADDR	LOGIN	SECU	PRIO	PATH
-----	-----	-----	----	----	----
sflog	10.248.13.9	root	ON	1	data

```
FTP SERV table is (1 of 10) 10% full
```

```
;
```

Related Topics

- [chg-ftp-serv](#)
- [dlt-ftp-serv](#)

- [ent-ftp-serv](#)

4.1.484 rtrv-gen-name

Use this command to retrieve the generic name, which is already provisioned into the database.

Parameters

gname (optional)

Generic name. Each Generic name must be unique in the system. Maximum 15 characters can be provisioned. Valid values are (0-9, A-Z), *, SPACE, all special characters.

Range:

ZZZZZZZZZZZZZZZZ

ZZZZZZ

ZZZ*

****ZZZ***

ZZ*ZZ

****ZZ****

settype (optional)

Set Type. Set to which generic name belong

Range:

SetA

SetB

Both

None

Example

Retrieve generic name POLICE:

```
rtrv-gen-name:gname="POLICE"
```

Retrieve all generic name, which are configured in the generic name table:

```
rtrv-gen-name
```

Dependencies

Generic name entered is invalid i.e. Generic name in following format is restricted:

- Name with more than two ASTERIK(*) i.e. *zz*zz*zz*zz*
- Two consecutive ASTERIK(*) i.e. *zzz**zz*
- Two ASTERICK(*) if they are not at extermes i.e. *zz*zz**

3642 E3642 Cmd Rej: Invalid Generic Name

Unable to read generic name table

3645 E3645 Cmd Rej: Unable to read Generic name table

The generic name and settype combination cannot be specified together.

3647 E3047 Cmd Rej: Parameter combination invalid

Notes

The generic name supports wildcarding using ASTERIK (*)

If gname="*" is provisioned as first entry than no more generic name can be configured. Also gname="*" cannot be configured, if atleast one entry is already provisioned.

Output

Retrieve generic name with gname specified

```
rtrv-gen-name:gname="*ice"
```

```
tekelecstp 19-10-04 03:39:45 EST EAGLE 46.9.0.0.0-76.4.0
rtrv-gen-name:gname="*ice"
Command entered at terminal #4.
GENERIC NAME      SETTYPE
-----
*ice              SetB
GENERIC-NAME table is (27 of 5000) 1% full.
;
```

Retrieve generic name with gname specified

```
rtrv-gen-name:settype=setb
```

```
tekelecstp 19-10-04 03:42:11 EST EAGLE 46.9.0.0.0-76.4.0
rtrv-gen-name:settype=setb
Command entered at terminal #4.
GENERIC NAME      SETTYPE
-----
police            SetB
plot*             SetB
1234*             SetB
what*123          SetB
GENERIC-NAME table is (27 of 5000) 1% full.
;
```

Retrieve all generic names

```
rtrv-gen-name
```

```
tekelecstp 19-10-04 03:43:52 EST EAGLE 46.9.0.0.0-76.4.0
rtrv-gen-name
```

```

Command entered at terminal #4.
GENERIC NAME      SETTYPE
-----
*work             Both
police australi   SetB
qwe*plot          Both
abcs*123          Both
1234*             SetB
what*123          SetB
*rk               Both
zzzzz            SetA
zzzzz            SetA
rotten*egg        Both
*ice              SetB
sbh94             SetB
*bh95*           SetB
GENERIC-NAME table is (13 of 5000) 1% full.
;

```

Retrieve all generic names with settype as NONE

```

rtrv-gen-name:settype=none

tekelecstp 21-11-24 22:58:44 MST EAGLE 47.0
rtrv-gen-name:settype=none
Command entered at terminal #1.
GENERIC NAME      SETTYPE
-----
eos canada        None

GENERIC-NAME table is (3 of 5000) 1% full.

;

```

Related Topics

- [ent-gen-name](#)
- [chg-gen-name](#)
- [dlt-gen-name](#)

4.1.485 rtrv-gpl

Use this command to show the version numbers of the GPLs stored on each fixed disk or drive and the system release table stored on each fixed disk.

Parameters

gp1 (optional)

Generic program load. The GPL for which to retrieve information.

Range:

xyyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters. Valid GPLs are:

atmhc—Used by E5-ATM-B cards to allow the card to support up to 3 signaling links*bldc32*—Flash GPL containing a tar image with all code required on E5-MCAP cards to support VxWorks6.9 32-bit application, as in OAMHC69.*bldc64*—Flash GPL containing a tar image with all code required on E5-SM8G-B cards for SCCP64, ENUM64, SIP64 and DEIR64 applications.*blmcap*—Flash GPL containing a tar image with all code required on E5-MCAP, E5-E1T1-B, E5-MCPM-B, E5-ATM-B, E5-ENET-B, and E5-SM8G-B cards*bslc32*—Flash GPL containing a tar image with all code required on SLIC cards for 32-bit application i.e. MCPHC, IPSHC etc.*bslc64*—Flash GPL containing a tar image with all code required on SLIC cards for 64-bit application i.e. SCCP64, ENUM64, SIP64 and DEIR64.*bsl932*—Flash GPL containing a tar image with all code required on SLIC cards for 32-bit application on VxWorks6.9, as in IPSHC69 and MCPHC69.*deirhc*—Used by E5-SM8G-B cards to support the S13/S13' EIR feature*enumhc*—Used by E5-SM8G-B cards to support the ENUM Mobile Number Portability and Tier One Address Resolution application*erthc*—Used by E5-ENET-B cards for EAGLE 5 Integrated Monitoring Support functions*hipr2*—Communication software used on the High Speed IMT Packet Router (HIPR2) card*ipsg*—Used by E5-ENET-B cards to support the combined functionality of IPLIMx M2PA and IPGWx M3UA*ipsg32*—Used by SLIC cards to support IPSEG application with 64-bit addressing either with GTT functionality or without it.*ipshc*—Used by E5-ENET-B cards to support the IPS application*ipshc69*—Used by E5-ENET-B and SLIC cards to support the IPS application when running on VxWorks69.*mcphc*—Used by E5-MCPM-B cards for the Measurements Platform feature*mcphc69*—Used by E5-MCPM-B and SLIC cards for the Measurements Platform feature when running on VxWorks69.*oamhc*—Used by E5-MCAP cards for enhanced OAM functions*oamhc69*—Used by E5-MCAP cards for enhanced OAM functions, when running on VxWorks 69.*sccphc*—Used by E5-SM8G-B cards to support EPAP-based features and the LNP ELAP Configuration feature. If no EPAP-based or LNP ELAP Configuration feature is turned on, and an E5-SM8G-B card is present, then the GPL processes normal GTT traffic.*sfapp*—Used by SLIC cards to support the Stateful Firewall Application.*siphc*—Used by E5-SM8G-B Cards to support the SIP application.*ss7hc*—Application GPL used by E5-E1T1-B and SLIC cards to support **E1** and **T1** signaling links.**Default:**

Display all

Example

rtrv-gpl

rtrv-gpl:gpl=hipr2

Dependencies

No other activate, change, copy, or retrieve GPL command can be in progress when this command is entered.

2412 E2412 Cmd Rej: Command already in progress

The value specified for the `gpl` parameter must be supported.

2238 E2238 Cmd Rej: The GPL type entered is not currently supported

Notes

To check the version of the EPAP or ELAP application, use the `rept-stat-mps` command.

If no application is specified, the approved and trial versions for all GPLs are shown, as well as the release table and removable GPL.

The approved GPL is the GPL that resides on the fixed disk and was made the approved version by specifying the GPL version number while executing the `act-gpl` command.

The trial GPL is the version of the GPL that was downloaded from the removable drive, but not activated by the `act-gpl` command.

When the `act-gpl` command is executed, the version specified in the command becomes the approved GPL and the previously approved GPL becomes the trial GPL.

If a GPL is not found, a version of "-----" is shown. This should happen only for the OAM GPL trial version on the fixed disk and for all GPLs on the plug-in USB flash drive when the drive is not inserted.

If the approved GPL version does not match the GPL version shown in the ACTIVE MASP RELEASE column, an alarm is activated.

A minor alarm is shown, and ALM is displayed for each APPROVED GPL (`rtrv-gpl`) and for each RUNNING GPL (`rept-stat-gpl`) that does not match the GPL in the RELEASE column of the `rtrv-gpl` output. The minor alarm is not activated, but ALM is displayed for each GPL that does not match the GPL in the RELEASE column.

ALM is always displayed when the approved version does not match the release version. You cannot turn off *fixed disk auditing*. The auditing state shown here is for the `rept-stat-gpl` command. You can turn on and off *running version auditing*.

A GPL audit cannot be in progress when this command is entered.

Output

This example lists all possible GPLs that can be shown in the output when no GPL is specified. All of these GPLs will not appear in the output for your system, because all GPLs are not valid in the same system.

```
rtrv-gpl

tekelecstp 18-01-18 21:23:11 EST  EAGLE 46.5.1.5.0-73.10.0
  rtrv-gpl
  Command entered at terminal #18.
;
```

Command Accepted - Processing

tekelecstp 18-01-18 21:23:11 EST EAGLE 46.5.1.5.0-73.10.0

GPL Auditing ON

GPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL
OAMHC	1114	143-010-000	143-010-000	ALM	-----
OAMHC	1116	143-010-000	143-010-000	ALM	-----
OAMHC	1115	-----	-----	-----	-----
OAMHC69	1114	143-010-000	143-010-000	ALM	-----
OAMHC69	1116	143-010-000	143-010-000	ALM	-----
OAMHC69	1115	-----	-----	-----	-----
IPSG32	1114	143-010-000	143-010-000		143-010-000
IPSG32	1116	143-010-000	143-010-000		143-010-000
IPSG32	1115	-----	-----		-----
BLMCAP	1114	143-010-000	143-010-000		143-010-000
BLMCAP	1116	143-010-000	143-010-000		143-010-000
BLMCAP	1115	-----	-----		-----
HIPR2	1114	143-010-000	143-010-000		143-010-000
HIPR2	1116	143-010-000	143-010-000		143-010-000
HIPR2	1115	-----	-----		-----
SFAPP	1114	143-010-000	143-010-000	ALM	143-010-000
SFAPP	1116	143-010-000	143-010-000	ALM	143-010-000
SFAPP	1115	-----	-----		-----
SS7HC	1114	143-010-000	143-010-000		143-010-000
SS7HC	1116	143-010-000	143-010-000		143-010-000
SS7HC	1115	-----	-----		-----
SCCPHC	1114	143-010-000	143-010-000		143-010-000
SCCPHC	1116	143-010-000	143-010-000		143-010-000
SCCPHC	1115	-----	-----		-----
ERTHC	1114	143-010-000	143-010-000		143-010-000
ERTHC	1116	143-010-000	143-010-000		143-010-000
ERTHC	1115	-----	-----		-----
IPSHC	1114	143-010-000	143-010-000		143-010-000
IPSHC	1116	143-010-000	143-010-000		143-010-000
IPSHC	1115	-----	-----		-----
ATMHC	1114	143-010-000	143-010-000		143-010-000
ATMHC	1116	143-010-000	143-010-000		143-010-000
ATMHC	1115	-----	-----		-----
IPSG	1114	143-010-000	143-010-000		143-010-000
IPSG	1116	143-010-000	143-010-000		143-010-000
IPSG	1115	-----	-----		-----
PKTGHC	1114	143-010-000	143-010-000		-----
PKTGHC	1116	143-010-000	143-010-000		-----
PKTGHC	1115	-----	-----		-----
BLIXP	1114	143-010-000	143-010-000		143-010-000
BLIXP	1116	143-010-000	143-010-000		143-010-000
BLIXP	1115	-----	-----		-----
MCPHC	1114	143-010-000	143-010-000		143-010-000
MCPHC	1116	143-010-000	143-010-000		143-010-000
MCPHC	1115	-----	-----		-----
SIPHC	1114	143-010-000	143-010-000		143-010-000
SIPHC	1116	143-010-000	143-010-000		143-010-000
SIPHC	1115	-----	-----		-----
DEIRHC	1114	143-010-000	143-010-000		143-010-000

DEIRHC	1116	143-010-000	143-010-000	143-010-000

DEIRHC	1115	-----	-----	-----

ENUMHC	1114	143-010-000	143-010-000	143-010-000

ENUMHC	1116	143-010-000	143-010-000	143-010-000

ENUMHC	1115	-----	-----	-----

PKTG64	1114	143-010-000	143-010-000	-----

PKTG64	1116	143-010-000	143-010-000	-----

PKTG64	1115	-----	-----	-----

BLDC64	1114	143-010-000	-----	143-010-000

BLDC64	1116	143-010-000	000-000-000 ALM	143-010-000

BLDC64	1115	-----	-----	-----

SCCP64	1114	143-010-000	143-010-000	143-010-000

SCCP64	1116	143-010-000	143-010-000	143-010-000

SCCP64	1115	-----	-----	-----

BLSLC32	1114	143-010-000	143-010-000	143-010-000

BLSLC32	1116	143-010-000	143-010-000	143-010-000

BLSLC32	1115	-----	-----	-----

BLSLC64	1114	143-010-000	143-010-000	143-010-000

BLSLC64	1116	143-010-000	143-010-000	143-010-000

BLSLC64	1115	-----	-----	-----

SIP64	1114	143-010-000	143-010-000	143-010-000

SIP64	1116	143-010-000	143-010-000	143-010-000

SIP64	1115	-----	-----	-----

DEIR64	1114	143-010-000	143-010-000	143-010-000

DEIR64	1116	143-010-000	143-010-000	143-010-000

DEIR64	1115	-----	-----	-----

ENUM64	1114	143-010-000	143-010-000	143-010-000

ENUM64	1116	143-010-000	143-010-000	143-010-000

```

-----
ENUM64      1115 -----
BLDC32      1114 143-010-000 ----- 143-010-000 -----
BLDC32      1116 143-010-000 ----- 143-010-000 -----
BLDC32      1115 -----
MCPHC69     1114 143-010-000 143-010-000 143-010-000 -----
MCPHC69     1116 143-010-000 143-010-000 143-010-000 -----
MCPHC69     1115 -----
IPSHC69     1114 143-010-000 143-010-000 143-010-000 -----
IPSHC69     1116 143-010-000 143-010-000 143-010-000 -----
IPSHC69     1115 -----
BLSL932     1114 143-010-000 143-010-000 143-010-000 -----
BLSL932     1116 143-010-000 143-010-000 143-010-000 -----
BLSL932     1115 -----

;
Command Executed

```

This example shows the output with the E5-based control cards feature. A removable drive is in the latched USB port and a plug-in flash drive is in the flush-mounted USB port of the active OAM. A removable drive is not present in the latched USB port of the standby OAM.

```
rtrv-gpl:gpl=oamhc
```

```

tekelecstp 18-01-19 15:49:30 EST EAGLE 46.5.1.5.0-73.10.0
  rtrv-gpl:gpl=oamhc
  Command entered at terminal #17.
;

```

```

Command Accepted - Processing
tekelecstp 18-01-19 15:49:30 EST EAGLE 46.5.1.5.0-73.10.0
  GPL Auditing ON

```

GPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL
OAMHC	1114	143-010-000	143-010-000 ALM	-----	-----
OAMHC	1116	033-010-000	143-010-000 ALM	-----	-----
OAMHC	1115	-----	-----	-----	-----

```

;
Command Executed

```

This example shows the output for E5-based control cards. Version information is displayed for three removable drives that are inserted, including the removable drive in the latched USB port of the active OAM, the plug-in flash drive in the flush-mounted USB port of the active OAM, and the removable drive in the latched USB port of the standby OAM.

```
rtrv-gpl
```

```

tekelecstp 18-01-18 22:23:11 EST EAGLE 46.5.1.5.0-73.10.0
  rtrv-gpl
  Command entered at terminal #18.
;

```

Command Accepted - Processing
 tekelecstp 18-01-18 21:23:11 EST EAGLE 46.5.1.5.0-73.10.0
 GPL Auditing ON

GPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE
TRIAL					
OAMHC	1114	143-010-000	143-010-000	ALM	-----
143-010-000					
OAMHC	1116	143-010-000	143-010-000	ALM	-----
143-010-000					
OAMHC	1115	-----	-----		-----

OAMHC69	1114	143-010-000	143-010-000	ALM	-----
143-010-000					
OAMHC69	1116	143-010-000	143-010-000	ALM	-----
143-010-000					
OAMHC69	1115	-----	-----		-----

IPSG32	1114	143-010-000	143-010-000		143-010-000
143-010-000					
IPSG32	1116	143-010-000	143-010-000		143-010-000
143-010-000					
IPSG32	1115	-----	-----		-----

BLMCAP	1114	143-010-000	143-010-000		143-010-000
143-010-000					
BLMCAP	1116	143-010-000	143-010-000		143-010-000
143-010-000					
BLMCAP	1115	-----	-----		-----

HIPR2	1114	143-010-000	143-010-000		143-010-000
143-010-000					
HIPR2	1116	143-010-000	143-010-000		143-010-000
143-010-000					
HIPR2	1115	-----	-----		-----

SFAPP	1114	143-010-000	143-010-000	ALM	143-010-000
143-010-000					
SFAPP	1116	143-010-000	143-010-000	ALM	143-010-000
143-010-000					
SFAPP	1115	-----	-----		-----

SS7HC	1114	143-010-000	143-010-000		143-010-000
143-010-000					
SS7HC	1116	143-010-000	143-010-000		143-010-000
143-010-000					
SS7HC	1115	-----	-----		-----

SCCPHC	1114	143-010-000	143-010-000		143-010-000
143-010-000					
SCCPHC	1116	143-010-000	143-010-000		143-010-000
143-010-000					
SCCPHC	1115	-----	-----		-----

ERTHC	1114	143-010-000	143-010-000	143-010-000	143-010-000
ERTHC	1116	143-010-000	143-010-000	143-010-000	143-010-000
ERTHC	1115	-----	-----	-----	-----
IPSHC	1114	143-010-000	143-010-000	143-010-000	143-010-000
IPSHC	1116	143-010-000	143-010-000	143-010-000	143-010-000
IPSHC	1115	-----	-----	-----	-----
ATMHC	1114	143-010-000	143-010-000	143-010-000	143-010-000
ATMHC	1116	143-010-000	143-010-000	143-010-000	143-010-000
ATMHC	1115	-----	-----	-----	-----
IPSG	1114	143-010-000	143-010-000	143-010-000	143-010-000
IPSG	1116	143-010-000	143-010-000	143-010-000	143-010-000
IPSG	1115	-----	-----	-----	-----
PKTGHC	1114	143-010-000	143-010-000	-----	-----
PKTGHC	1116	143-010-000	143-010-000	-----	-----
PKTGHC	1115	-----	-----	-----	-----
BLIXP	1114	143-010-000	143-010-000	143-010-000	143-010-000
BLIXP	1116	143-010-000	143-010-000	143-010-000	143-010-000
BLIXP	1115	-----	-----	-----	-----
MCPHC	1114	143-010-000	143-010-000	143-010-000	143-010-000
MCPHC	1116	143-010-000	143-010-000	143-010-000	143-010-000
MCPHC	1115	-----	-----	-----	-----
SIPHC	1114	143-010-000	143-010-000	143-010-000	143-010-000
SIPHC	1116	143-010-000	143-010-000	143-010-000	143-010-000
SIPHC	1115	-----	-----	-----	-----
DEIRHC	1114	143-010-000	143-010-000	143-010-000	143-010-000
DEIRHC	1116	143-010-000	143-010-000	143-010-000	143-010-000
DEIRHC	1115	-----	-----	-----	-----
ENUMHC	1114	143-010-000	143-010-000	143-010-000	143-010-000
ENUMHC	1116	143-010-000	143-010-000	143-010-000	143-010-000
ENUMHC	1115	-----	-----	-----	-----
PKTG64	1114	143-010-000	143-010-000	-----	-----
PKTG64	1116	143-010-000	143-010-000	-----	-----
PKTG64	1115	-----	-----	-----	-----
BLDC64	1114	143-010-000	-----	143-010-000	143-010-000
BLDC64	1116	143-010-000	000-000-000 ALM	143-010-000	143-010-000
BLDC64	1115	-----	-----	-----	-----
SCCP64	1114	143-010-000	143-010-000	143-010-000	143-010-000
SCCP64	1116	143-010-000	143-010-000	143-010-000	143-010-000
SCCP64	1115	-----	-----	-----	-----
BLSLC32	1114	143-010-000	143-010-000	143-010-000	143-010-000
BLSLC32	1116	143-010-000	143-010-000	143-010-000	143-010-000
BLSLC32	1115	-----	-----	-----	-----
BLSLC64	1114	143-010-000	143-010-000	143-010-000	143-010-000
BLSLC64	1116	143-010-000	143-010-000	143-010-000	143-010-000
BLSLC64	1115	-----	-----	-----	-----
SIP64	1114	143-010-000	143-010-000	143-010-000	143-010-000
SIP64	1116	143-010-000	143-010-000	143-010-000	143-010-000
SIP64	1115	-----	-----	-----	-----
DEIR64	1114	143-010-000	143-010-000	143-010-000	143-010-000
DEIR64	1116	143-010-000	143-010-000	143-010-000	143-010-000
DEIR64	1115	-----	-----	-----	-----
ENUM64	1114	143-010-000	143-010-000	143-010-000	143-010-000
ENUM64	1116	143-010-000	143-010-000	143-010-000	143-010-000
ENUM64	1115	-----	-----	-----	-----
BLDC32	1114	143-010-000	-----	143-010-000	143-010-000

```

      BLDC32      1116  143-010-000  -----      143-010-000
143-010-000
      BLDC32      1115  -----      -----      -----
-----
      MCPHC69     1114  143-010-000  143-010-000  143-010-000
143-010-000
      MCPHC69     1116  143-010-000  143-010-000  143-010-000
143-010-000
      MCPHC69     1115  -----      -----      -----
-----
      IPSHC69     1114  143-010-000  143-010-000  143-010-000
143-010-000
      IPSHC69     1116  143-010-000  143-010-000  143-010-000
143-010-000
      IPSHC69     1115  -----      -----      -----
-----
      BLSL932     1114  143-010-000  143-010-000  143-010-000
143-010-000
      BLSL932     1116  143-010-000  143-010-000  143-010-000
143-010-000
      BLSL932     1115  -----      -----      -----
-----

```

```

;
Command Executed

```

```
rtrv-gpl
```

```

tekelecstp 17-09-15 15:10:33 EST  EAGLE 46.5.0.0.0-71.11.0
  GPL Auditing ON
  GPL      CARD  RELEASE      APPROVED      TRIAL      REMOVE
TRIAL
  EOAM     1114  134-000-000  134-000-000  134-000-000
134-000-000
  EOAM     1116  134-000-000  134-000-000  134-000-000
134-000-000
  EOAM     1113  -----      -----      -----
-----
  CDU      1114  134-000-000  134-000-000  134-000-000
134-000-000
  CDU      1116  134-000-000  134-000-000  134-000-000
134-000-000
  CDU      1113  -----      -----      -----
-----
  IMT      1114  134-000-000  134-000-000  134-000-000
134-000-000
  IMT      1116  134-000-000  134-000-000  134-000-000
134-000-000
  IMT      1113  -----      -----      -----
-----
  ATMANSI  1114  134-000-000  134-000-000  134-000-000
134-000-000
  ATMANSI  1116  134-000-000  134-000-000  134-000-000

```



```
134-000-000
ATMANSI 1113 -----
BPHCAP 1114 134-000-000 134-000-000 134-000-000 134-000-000
BPHCAP 1116 134-000-000 134-000-000 134-000-000 134-000-000
BPHCAP 1113 -----
BPDCM 1114 134-000-000 134-000-000 134-000-000 134-000-000
BPDCM 1116 134-000-000 134-000-000 134-000-000 134-000-000
BPDCM 1113 -----
BLMCAP 1114 134-000-000 134-000-000 134-000-000 134-000-000
BLMCAP 1116 134-000-000 134-000-000 134-000-000 134-000-000
BLMCAP 1113 -----
OAMHC 1114 134-000-000 134-000-000 134-000-000 134-000-000
OAMHC 1116 134-000-000 134-000-000 134-000-000 134-000-000
OAMHC 1113 -----
HIPR2 1114 134-000-000 134-000-000 134-000-000 134-000-000
HIPR2 1116 134-000-000 134-000-000 134-000-000 134-000-000
HIPR2 1113 -----
VSCCP 1114 134-000-000 134-000-000 134-000-000 134-000-000
VSCCP 1116 134-000-000 134-000-000 134-000-000 134-000-000
VSCCP 1113 -----
ATMITU 1114 134-000-000 134-000-000 134-000-000 134-000-000
ATMITU 1116 134-000-000 134-000-000 134-000-000 134-000-000
ATMITU 1113 -----
VCDU 1114 134-000-000 134-000-000 134-000-000 134-000-000
VCDU 1116 134-000-000 134-000-000 134-000-000 134-000-000
VCDU 1113 -----
BPMPPL 1114 134-000-000 134-000-000 134-000-000 134-000-000
BPMPPL 1116 134-000-000 134-000-000 134-000-000 134-000-000
BPMPPL 1113 -----
SS7ML 1114 134-000-000 134-000-000 134-000-000 134-000-000
SS7ML 1116 134-000-000 134-000-000 134-000-000 134-000-000
SS7ML 1113 -----
BPHMUX 1114 134-000-000 134-000-000 134-000-000 134-000-000
BPHMUX 1116 134-000-000 134-000-000 134-000-000 134-000-000
BPHMUX 1113 -----
BPDCM2 1114 134-000-000 134-000-000 134-000-000 134-000-000
BPDCM2 1116 134-000-000 134-000-000 134-000-000 134-000-000
BPDCM2 1113 -----
EROUTE 1114 134-000-000 134-000-000 134-000-000 134-000-000
EROUTE 1116 134-000-000 134-000-000 134-000-000 134-000-000
EROUTE 1113 -----
BPMPLT 1114 134-000-000 134-000-000 134-000-000 134-000-000
BPMPLT 1116 134-000-000 134-000-000 134-000-000 134-000-000
BPMPLT 1113 -----
MCP 1114 134-000-000 134-000-000 134-000-000 134-000-000
MCP 1116 134-000-000 134-000-000 134-000-000 134-000-000
MCP 1113 -----
BPHCAPT 1114 134-000-000 134-000-000 134-000-000 134-000-000
BPHCAPT 1116 134-000-000 134-000-000 134-000-000 134-000-000
BPHCAPT 1113 -----
MPLG 1114 134-000-000 134-000-000 134-000-000 134-000-000
MPLG 1116 134-000-000 134-000-000 134-000-000 134-000-000
MPLG 1113 -----
SS7HC 1114 134-000-000 134-000-000 134-000-000 134-000-000
SS7HC 1116 134-000-000 134-000-000 134-000-000 134-000-000
```

SS7HC	1113	-----	-----	-----

BLBIOS	1114	134-000-000	134-000-000	134-000-000
134-000-000				
BLBIOS	1116	134-000-000	134-000-000	134-000-000
134-000-000				
BLBIOS	1113	-----	-----	-----

BLCPLD	1114	134-000-000	134-000-000	134-000-000
134-000-000				
BLCPLD	1116	134-000-000	134-000-000	134-000-000
134-000-000				
BLCPLD	1113	-----	-----	-----

BLDIAG	1114	131-002-000	131-002-000	131-002-000
131-002-000				
BLDIAG	1116	131-002-000	131-002-000	131-002-000
131-002-000				
BLDIAG	1113	-----	-----	-----

IMTPCI	1114	134-000-000	134-000-000	134-000-000
134-000-000				
IMTPCI	1116	134-000-000	134-000-000	134-000-000
134-000-000				
IMTPCI	1113	-----	-----	-----

BLVXW	1114	131-006-000	131-006-000	131-006-000
131-006-000				
BLVXW	1116	131-006-000	131-006-000	131-006-000
131-006-000				
BLVXW	1113	-----	-----	-----

PLDPMC1	1114	134-000-000	134-000-000	134-000-000
134-000-000				
PLDPMC1	1116	134-000-000	134-000-000	134-000-000
134-000-000				
PLDPMC1	1113	-----	-----	-----

SS7EPM	1114	130-029-000	130-029-000	130-029-000
130-029-000				
SS7EPM	1116	130-029-000	130-029-000	130-029-000
130-029-000				
SS7EPM	1113	-----	-----	-----

BLBEPM	1114	134-000-000	134-000-000	134-000-000
134-000-000				
BLBEPM	1116	134-000-000	134-000-000	134-000-000
134-000-000				
BLBEPM	1113	-----	-----	-----

BLVXW6	1114	134-000-000	134-000-000	134-000-000
134-000-000				
BLVXW6	1116	134-000-000	134-000-000	134-000-000
134-000-000				
BLVXW6	1113	-----	-----	-----

```

-----
BLDIAG6 1114 134-000-000 134-000-000 134-000-000 134-000-000
BLDIAG6 1116 134-000-000 134-000-000 134-000-000 134-000-000
BLDIAG6 1113 -----
PKTGEN 1114 134-000-000 134-000-000 134-000-000 134-000-000
PKTGEN 1116 134-000-000 134-000-000 134-000-000 134-000-000
PKTGEN 1113 -----
SCCPHC 1114 134-000-000 134-000-000 134-000-000 134-000-000
SCCPHC 1116 134-000-000 134-000-000 134-000-000 134-000-000
SCCPHC 1113 -----
BLBSMG 1114 134-000-000 134-000-000 134-000-000 134-000-000
BLBSMG 1116 134-000-000 134-000-000 134-000-000 134-000-000
BLBSMG 1113 -----
ERTHC 1114 134-000-000 134-000-000 134-000-000 134-000-000
ERTHC 1116 134-000-000 134-000-000 134-000-000 134-000-000
ERTHC 1113 -----
IPSHC 1114 134-000-000 134-000-000 134-000-000 134-000-000
IPSHC 1116 134-000-000 134-000-000 134-000-000 134-000-000
IPSHC 1113 -----
ATMHC 1114 134-000-000 134-000-000 134-000-000 134-000-000
ATMHC 1116 134-000-000 134-000-000 134-000-000 134-000-000
ATMHC 1113 -----
IPSG 1114 134-000-000 134-000-000 134-000-000 134-000-000
IPSG 1116 134-000-000 134-000-000 134-000-000 134-000-000
IPSG 1113 -----
BLROM1 1114 134-000-000 134-000-000 134-000-000 134-000-000
BLROM1 1116 134-000-000 134-000-000 134-000-000 134-000-000
BLROM1 1113 -----
PKTGHC 1114 134-000-000 134-000-000 134-000-000 134-000-000
PKTGHC 1116 134-000-000 134-000-000 134-000-000 134-000-000
PKTGHC 1113 -----
BLIXP 1114 134-000-000 134-000-000 134-000-000 134-000-000
BLIXP 1116 134-000-000 134-000-000 134-000-000 134-000-000
BLIXP 1113 -----
MCPHC 1114 134-000-000 134-000-000 134-000-000 134-000-000
MCPHC 1116 134-000-000 134-000-000 134-000-000 134-000-000
MCPHC 1113 -----
SIPHC 1114 134-000-000 134-000-000 134-000-000 134-000-000
SIPHC 1116 134-000-000 134-000-000 134-000-000 134-000-000
SIPHC 1113 -----
DEIRHC 1114 134-000-000 134-000-000 134-000-000 134-000-000
DEIRHC 1116 134-000-000 134-000-000 134-000-000 134-000-000
DEIRHC 1113 -----
ENUMHC 1114 135-000-000 135-000-000 135-000-000 135-000-000
ENUMHC 1116 135-000-000 135-000-000 135-000-000 135-000-000
ENUMHC 1113 -----
IPSG32 1114 140-000-000 140-000-000 140-000-000 -----
IPSG32 1116 140-000-000 140-000-000 140-000-000
-----

```

;

This example shows the output for SFAPP cards. Version information is displayed for three removable drives that are inserted, including the removable drive in the latched USB port of

the active OAM, the plug-in flash drive in the flush-mounted USB port of the active OAM, and the removable drive in the latched USB port of the standby OAM:

```
rtrv-gpl:gpl=sfapp

tekelecstp 17-11-22 06:57:22 EST  EAGLE 46.5.1.5.0-73.2.0
  rtrv-gpl:gpl=sfapp
  Command entered at terminal #17.
;

Command Accepted - Processing
  tekelecstp 17-11-22 06:57:23 EST  EAGLE 46.5.1.5.0-73.2.0
  GPL Auditing  ON
```

GPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE
TRIAL					
SFAPP	1114	037-002-000	037-002-000	037-002-000	

SFAPP	1116	037-002-000	037-002-000	037-002-000	

SFAPP	1115	-----	-----	-----	

```
;
Command Executed
```

Legend

- **GPL**—GPL associated with each card in the display
- **APPROVED**—GPL version that is the approved GPL.
- **CARD**—Card location.
- **RELEASE**—Version number of each GPL that is required to be installed and approved for a specific release of software for the system.
- **REMOVE TRIAL**—GPL version that is on the removable drive.
- **TRIAL**—GPL version that is the trial GPL.
- **-----**—GPL is not present at the specified location.
- **ALM**—Alarm indicator showing that the system has an approved GPL that is not the GPL required for this software release according to the active MASP system release table.
- **CORRUPTED**—Data audit has determined that the GPL is corrupted.

Related Topics

- [act-gpl](#)
- [chg-gpl](#)
- [copy-gpl](#)
- [rept-stat-gpl](#)

4.1.486 rtrv-gserv-data

Use this command to display all values in the GSERV table or to display specific translation type, originating point code, or global title address data. These values are used to determine whether a Send Routing Information (SRI) request should receive G-Port SRI Query for Prepaid service or normal G-Port service.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

display (optional)

Use this parameter to display a specified category of entries in the GSERV table.

Range:

all

Display all entries in the GSERV table.

gta

Display all calling party (CgPA) global title addresses in the GSERV table.

opc

Display all message transfer part (MTP) originating point codes in the GSERV table.

tt

Display all called party (CdPA) translation types in the GSERV table.

gta (optional)

Global title address. Use this parameter to specify a CgPA global title address.

Range:

1 - 21 digits

opc (optional)

ANSI originating point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

opca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006-255`.
The point code `000-000-000` is not a valid point code.

opc/opca/opci/opcn/opcn24 (optional)

Originating point code. Use these parameters to specify MTP originating point codes.

opci (optional)

ITU international originating point code with subfields *zone-area-id*.

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code `0-000-0` is not a valid point code.

opcn (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

opcn24 (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000-255

ssa—000-255

sp—000-255

tt (optional)

Translation type. Use this parameter to specify a CdPA translation type.

Range: 0 - 255

Example

```
rtrv-gserv-data:display=all
```

```
rtrv-gserv-data:tt=26
```

```
rtrv-gserv-data:display=opc
```

Dependencies

The system is busy, or the GSERV table is corrupted.

3215 E3215 Cmd Rej: Cannot access GSERV table

The G-Port SRI Query for Prepaid feature must be enabled before this command can be entered.

3216 E3216 Cmd Rej: G-Port SRI Query for Prepaid feature is not enabled

The G-Port feature must be on before this command can be entered.

3991 E3991 Cmd Rej: GPORT feature must be ON

The `gta`, `opc/opca/opci/opcn/opcn24`, `tt`, or `display` parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `display`, `tt`, `opc`, and `gta` parameters cannot be specified together in the command.

2609 E2609 Cmd Rej: Only one optional parameter may be specified

Output

```
rtrv-gserv-data:display=all
```

```
mystp 06-07-27 20:32:46 EST EAGLE 35.2.0
TT      OPC                      GTA
=====
0
25
26
TT      OPC                      GTA
=====
                02057          (ITUN)
                002-002-002    (ANSI)
                5-005-5        (ITUI)
                001-001-001    (ANSI)
                006-000-001    (ANSI)
TT      OPC                      GTA
=====
                                9194605500
```

```
num of tt entries is (3 of 256)
```

```
num of opc entries is (5 of 50)
```

```
num of gta entries is (1 of 50)
```

```
GSERV table is (9 of 356) 3% full
```

```
;
```

```
rtrv-gserv-data:tt=26
```

```
mystp 06-07-27 20:35:57 EST EAGLE 35.2.0
TT      OPC                      GTA
=====
26
```

```
;
```

```
rtrv-gserv-data:display=opc
```

```
mystp 06-07-27 20:32:46 EST EAGLE 35.2.0
TT      OPC                      GTA
=====
          02057          (ITUN)
          002-002-002    (ANSI)
          5-005-5        (ITUI)
          001-001-001    (ANSI)
          006-000-001    (ANSI)
```

```
GSERV table is (5 of 50) 10% full
```

```
;
```

Related Topics

- [dlt-gserv-data](#)
- [ent-gserv-data](#)

4.1.487 rtrv-gsm-msg

Use this command to display the configured GSM test message parameter values.

Parameters

msgn (mandatory)

Message number. The test message number that is retrieved.

Range:

1 - 10

Example

```
rtrv-gsm-msg:msgn=5
```

Dependencies

The TSTMSG table is corrupt or cannot be found.

4819 E4819 Cmd Rej: Failure reading TSTMSG Table

None

Output

```
rtrv-gsm-msg:msgn=1
```

```
tekelecstp 08-12-02 10:46:51 EST EAGLE 40.1.0
```

```
MSG = 1 ACTIVE = YES
```

```
CGPA_GT = 2
```

```
CGPA_GT_NAI = 4 CGPA = 919818000001
```

```
CDPA_GT = 2
```

```
CDPA_GT_NAI = 4 CDPA = 919818000002
```

```
CGPN_NAI = 1
```

```
CGPN_NP = 2 CGPN = 919818000007
```

```
CDPN_NAI = 1
```

```
CDPN_NP = 2 CDPN = 919818000008
```

```
rtrv-gsm-msg:msgn=2
```

```
tekelecstp 11-10-05 11:33:46 EST EAGLE 44.0.0
```

```
MSG = 2 ACTIVE = YES
```

```
CGPA_GT = 4
```

```
CGPA_GT_NAI = 4 CGPA = 919818000009
```

```
CDPA_GT = 4
```

```
CDPA_GT_NAI = 4 CDPA = 919818000008
```

```
CGPN_NAI = 4
```

```
CGPN_NP = 1 CGPN = none
```

```
CDPN_NAI = 4
```

```
CDPN_NP = 1 CDPN = 919876543201
```

Related Topics

- [chg-gsm-msg](#)
- [tst-msg](#)

4.1.488 rtrv-gsmmap-scrn

Use this command to retrieve the GSM (Global System for Mobile Telecommunication) MAP (Mobile Application Part) Screening CgPA and CdPA entries and their attributes from the active system database.

Parameters

opname (mandatory)

User-defined name for the operation code. This value references the operation code defined with the `ent-gsms-opcode` command.

Range:

ayyyyyyy

Up to 8 alphanumeric characters

action (optional)

Screening action to take if a message is forbidden as defined by the *forbid* parameter.

Range:

pass

Route the message as normal to the destination.

discard

Discard the MSU.

atierr

Generate an ATI reject message. This option is only valid for ATI MAP operation codes.

route

Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

forward

Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

duplicate

Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

dupdisc

Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is routed to the original node.

Default:

Display all screening actions

cdsr (optional)

CdPA Screening Reference.

Range:

ayyy

1 alphabetic character followed by up to 3 optional alphanumeric characters

cgsr (optional)

CgPA Screening Reference.

Range:

ayyy

1 alphabetic character followed by up to 3 optional alphanumeric characters

eaddr (optional)

Ending origination address, in association with `npv` and `naiv` for the CGPA address to be screened.

Range:

1–15 hexadecimal digits. Valid digits are *0–9, a-f, A-F*

forbid (optional)

Forbidden parameter value. Indicates a forbidden parameter for the entered address. If a forbidden parameter is detected the message is rejected by the action defined by the `action` parameter.

Range:***all***

All parameters are forbidden. Take the specified screening action defined by the `action` parameter for messages arriving at the system.

location

Take the specified screening action defined by the `action` parameter for messages arriving at the system that contain `location` as the forbidden parameter value for the entered address/operation code combination. This value is valid only for GSM ATI messages.

none

None of the parameters are forbidden. Route the message to its destination.

state

Take the specified screening action defined by the `action` parameter for messages arriving at the system that contain `state` as the forbidden parameter value for the entered address/operation code combination. This value is valid only for GSM ATI messages.

Default:

Display all forbidden parameter values

mapset (optional)

MAP set ID.

Range:

1 - 36000, dflt

dflt —Default MAP set

naiv (optional)

Nature of Address value for the address or range of CgPA and CdPA addresses.

Range:

*0 - 127, **

npv (optional)

Numbering Plan value for the address or range of CgPA and CdPA addresses.

Range:

0 - 15, *

ri (optional)

Routing indicator. This parameter specifies whether a subsequent global title translation is required.

Range:

gt

ssn

saddr (optional)

Starting origination address in association with `npv` and `naiv` for the single entry or range of entries of the CGPA address to be screened.

Range:

1 - 15 digits, *

1–15 hexadecimal digits. Valid digits are 0–9, a-f, A-F

Default:

*

tt (optional)

Translation type. This parameter specifies the value that the CdPA translation type is set to as the result of Enhanced GSM Map Screening.

Range:

0 - 255, none

Default:

Display all translation types

Example

The following example retrieves all CgPA entries for the specified OPNAME:

```
rtrv-gsmmap-scrn:opname=e
```

The following example retrieves the specified CgPA range entry for the specified OPNAME:

```
rtrv-gsmmap-  
scrn:opname=ati:saddr=919462000000000:eaddr=919463000000000
```

The following example retrieves all CdPA entries for the specified CGSR:

```
rtrv-gsmmap-scrn:opname=xyz:cgsr=fela
```

The following example retrieves the specified CDSR entry for the specified CGSR:

```
rtrv-gsmmap-scrn:opname=xyz:cgsr=fela:cdsr=cal4
```

The following examples retrieves the specified RI for the specified OPNAME:

```
rtrv-gsmmap-scrn:opname=e:ri=ssn
rtrv-gsmmap-scrn:opname=e:mapset=dflt:ri=gt
rtrv-gsmmap-scrn:opname=rr:cgsr=au:cdsr=aj
rtrv-gsmmap-scrn:opname=test4:tt=12
```

Dependencies

The GSM Map Screening feature must be enabled before this command can be entered.

3900 E3900 Cmd Rej: GSM Map Screening feature must be enabled

The Enhanced GSM Map Screening (EGMS) feature must be enabled before:

- The `cgsr` parameter can be specified.
- The `cdsr` parameter can be specified.
- The `saddr=*` parameter can be specified.
- The `saddr` and `eaddr` parameters can contain hexadecimal digits.

4291 E4291 Cmd Rej: Enhanced GSM Map Screening feature must be enabled

The specified `opname` parameter value must exist in the GSM Map Op-Code table.

3892 E3892 Cmd Rej: OPNAME does not exist in the database

If the `eaddr` parameter is specified, its value must contain the same number of digits as the `saddr` parameter value.

3894 E3894 Cmd Rej: SADDR and EADDR must have the same number of digits

If the `eaddr` parameter is specified, its value must be greater than the `saddr` parameter value.

3895 E3895 Cmd Rej: EADDR must be greater than SADDR

If the `eaddr` parameter is specified, the `saddr` parameter must be specified.

3898 E3898 Cmd Rej: EADDR can not be specified without SADDR

If the `saddr=*` parameter is specified, then the `eaddr` parameter cannot be specified.

4286 E4286 Cmd Rej: EADDR shouldn't be specified when SADDR = *

If the `saddr` parameter is specified, the `cgsr` and `cdsr` parameters cannot be specified.

4015 E4015 Cmd Rej: CGSR or CDSR shouldn't be specified when SADDR is specified

The `saddr`, `npv`, and `naiv` parameters must be specified together in the command.

4016 E4016 Cmd Rej: SADDR, NPV and NAIV must be specified together

If any of the `saddr/eaddr/npv/naiv` and `cdsr` parameters are specified, then the `forbid` and `action` parameters cannot be specified.

4017 E4017 Cmd Rej: ACTION or FORBID parameter shouldn't be specified

A value of *state* or *location* cannot be specified for the `forbid` parameter unless the operation code referenced by the `opname` parameter is 71. The `forbid` option is only valid

for ATI MAP operation codes, and the `opcode=71` parameter signifies an ATI MAP operation code.

3902 E3902 Cmd Rej: FORBID can not be STATE or LOCATION for the given OPNAME

The `action=atierr` parameter cannot be specified unless the operation code referenced by the `opname` parameter is 71. The `atierr` option is only valid for ATI MAP operation codes, and the `opcode=71` parameter signifies an ATI MAP operation code.

3903 E3903 Cmd Rej: Screening action can not be ATIERR for the given OPNAME

The GSM Map Op-Code table must be accessible.

3890 E3890 Cmd Rej: Failure reading the GSM MAP SCRN Table

The GSM Map Screening table must be accessible.

3890 E3890 Cmd Rej: Failure reading the GSM MAP SCRN Table

If the `cdsr` parameter is specified, then the `cgsr` parameter must be specified.

4014 E4014 Cmd Rej: CGSR must be specified when CDSR is specified

The specified `cgsr` parameter value must exist in the database.

3905 E3905 Cmd Rej: CGSR doesn't exist for specified OPNAME

The specified `cdsr` parameter value must exist in the database.

4287 E4287 Cmd Rej: CDSR doesn't exist for specified OPNAME and CGSR

The `opname` parameter must consist of alphanumeric characters.

2040 E2040 Cmd Rej: String pattern nonconformance, alphanumeric - <parm>

The `opname` parameter must be entered.

2011 E2011 Cmd Rej: Missing mandatory parameter - <parm>

The `cgsr` and `cdsr` parameters must each begin with an alphabetic character.

2041 E2041 Cmd Rej: String pattern nonconformance, alphabetic - <parm>

The `cgsr` and `cdsr` parameters must each consist of 1-4 alphanumeric characters.

2039 E2039 Cmd Rej: <parm_desc> too long, min <min>, max <max> - <parm>

The Flexible GTT Load Sharing feature must be enabled before the `mapset` parameter can be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The specified MAP set must exist.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

Notes

None

Output

GSM MAP Screening single entries and range entries shown in separate sections of the output. All single entries are shown first in a summary report; all range entries follow.

```
rtrv-gsmmap-scrn:opname=e
```

```
tekelecstp 08-08-22 00:33:10 EST EAGLE 39.2.0
```

```
Single CgPA Entries for OPNAME: e
```

```
-----
```

SADDR	NP	NAI	FORBD	ACT	PCA	SSN	CGSR	RI	TT
1111	2	3	all	fwd	001-001-002	12	ad	gt	11
SADDR	NP	NAI	FORBD	ACT	PCI	SSN	CGSR	RI	TT
SADDR	NP	NAI	FORBD	ACT	PCN	SSN	CGSR	RI	TT
SADDR	NP	NAI	FORBD	ACT	PCN24	SSN	CGSR	RI	TT
SADDR	NP	NAI	FORBD	ACT	CGSR				

```
Range CgPA Entries for OPNAME: e
```

```
-----
```

SADDR	EADDR	NP	NAI	FORBD	ACT	PCA	SSN
CGSR 1234	3452	*	*	all	fwd	001-001-002	12
as RI=gt	TT=11						
SADDR	EADDR	NP	NAI	FORBD	ACT	PCI	SSN
CGSR							
SADDR	EADDR	NP	NAI	FORBD	ACT	PCN	SSN
CGSR							
SADDR	EADDR	NP	NAI	FORBD	ACT	PCN24	SSN
CGSR							
SADDR	EADDR	NP	NAI	FORBD	ACT	CGSR	

```
GSM MAP Screening Table (8 of 4000) is 1% full
```

```
;
```

The following example shows the output when the Flexible GTT Load Sharing feature is on.

```
rtrv-gsmmap-scrn:opname=dd
```

```
tekelecstp 08-08-22 00:45:11 EST EAGLE 39.2.0
```

Single CgPA Entries for OPNAME: dd

```

-----
SADDR          NP NAI FORBD ACT      PCA          SSN CGSR
MAPSET  RI

SADDR          NP NAI FORBD ACT      PCI          SSN CGSR
MAPSET  RI
*              * *    all   fwd      1-221-2      13   ab
DFLT      gt
TT=11

SADDR          NP NAI FORBD ACT      PCN          SSN CGSR
MAPSET  RI

SADDR          NP NAI FORBD ACT      PCN24        SSN CGSR
MAPSET  RI

SADDR          NP NAI FORBD ACT  CGSR

```

Range CgPA Entries for OPNAME: dd

```

-----
SADDR          EADDR          NP NAI FORBD ACT
PCA          SSN CGSR

SADDR          EADDR          NP NAI FORBD ACT
PCI          SSN CGSR
1234          3452          * *    all   fwd
1-221-2      13   ak
MAPSET=DFLT RI=gt TT=11

SADDR          EADDR          NP NAI FORBD ACT
PCN          SSN CGSR

SADDR          EADDR          NP NAI FORBD ACT
PCN24        SSN CGSR

SADDR          EADDR          NP NAI FORBD ACT  CGSR

```

GSM MAP Screening Table (14 of 4000) is 1% full

;

This example shows the output for a specific MAP set. The Flexible GTT Load Sharing feature is on.

rtrv-gsmmap-scrn:opname=rr:mapset=1

tekelecstp 08-01-22 00:59:18 EST EAGLE 38.0.0

Single CgPA Entries for OPNAME: rr

```

-----
SADDR          NP NAI FORBD ACT      PCA          SSN CGSR

```



```

MAPSET  RI

      SADDR          NP NAI FORBD ACT      PCI          SSN CGSR  MAPSET
RI
      SADDR          NP NAI FORBD ACT      PCN          SSN CGSR  MAPSET
RI
      SADDR          NP NAI FORBD ACT      PCN24        SSN CGSR  MAPSET
RI

```

Range CgPA Entries for OPNAME: rr

```

-----
      SADDR          EADDR          NP NAI FORBD ACT      PCA          SSN
CGSR
1234          3452          * * all fwd      001-001-002  12
au
MAPSET=1 RI=gt TT=11

      SADDR          EADDR          NP NAI FORBD ACT      PCI          SSN
CGSR

      SADDR          EADDR          NP NAI FORBD ACT      PCN          SSN
CGSR

      SADDR          EADDR          NP NAI FORBD ACT      PCN24        SSN
CGSR

```

GSM MAP Screening Table (26 of 4000) is 1% full

;

This example shows the output for the subsystem number routing indicator.

rtrv-gsmmap-scrn:opname=e:ri=ssn

tekelecstp 08-08-21 15:40:00 EST EAGLE 39.2.0

Single CgPA Entries for OPNAME: e

```

-----
      SADDR          NP NAI FORBD ACT      PCA          SSN CGSR  RI  TT
*          * * all fwd      001-001-002  12 ad  ssn  11

      SADDR          NP NAI FORBD ACT      PCI          SSN CGSR  RI  TT

      SADDR          NP NAI FORBD ACT      PCN          SSN CGSR  RI  TT

      SADDR          NP NAI FORBD ACT      PCN24        SSN CGSR  RI  TT

```

Range CgPA Entries for OPNAME: e

```

-----
      SADDR          EADDR          NP NAI FORBD ACT      PCA          SSN

```

```

CGSR
* * * * *
001-001-002 12 d
RI=ssn TT=11

SADDR          EADDR          NP NAI FORBD ACT
PCI            SSN CGSR

SADDR          EADDR          NP NAI FORBD ACT
PCN            SSN CGSR

SADDR          EADDR          NP NAI FORBD ACT
PCN24         SSN CGSR

SADDR          EADDR          NP NAI FORBD ACT  CGSR

GSM MAP Screening Table (4 of 4000) is 1% full
;

```

This example shows the output for the global translation routing indicator and a specified mapset:

```
rtrv-gsmmap-scrn:opname=e:mapset=dflt:ri=gt
```

```
tekelecstp 08-08-22 00:57:57 EST EAGLE 39.2.0
```

```
Single CgPA Entries for OPNAME: e
```

```

-----
SADDR          NP NAI FORBD ACT    PCA          SSN CGSR
MAPSET  RI
1111          2 3  all  fwd    001-001-002 12 ad
DFLT    gt
TT=11

SADDR          NP NAI FORBD ACT    PCI          SSN CGSR
MAPSET  RI

SADDR          NP NAI FORBD ACT    PCN          SSN CGSR
MAPSET  RI

SADDR          NP NAI FORBD ACT    PCN24        SSN CGSR
MAPSET  RI

```

```
Range CgPA Entries for OPNAME: e
```

```

-----
SADDR          EADDR          NP NAI FORBD ACT
PCA            SSN CGSR
1234          3452          * *  all  fwd
001-001-002 12 as
MAPSET=DFLT RI=gt TT=11

SADDR          EADDR          NP NAI FORBD ACT

```

```

PCI                SSN CGSR

      SADDR          EADDR          NP NAI FORBD ACT      PCN          SSN
CGSR

      SADDR          EADDR          NP NAI FORBD ACT      PCN24        SSN
CGSR

      GSM MAP Screening Table (26 of 4000) is 1% full
;

```

This example shows the output for called and calling party screening references:

```
rtrv-gsmmap-scrn:opname=rr:cgsr=au:cdsr=aj
```

```

tekelecstp 08-08-22 00:58:55 EST EAGLE 39.2.0
      SADDR          EADDR          NP NAI FORBD ACT      PCA          SSN
CDSR
      1234           3452           * * all fwd          001-001-002  12
aj
      MAPSET=1 RI=gt TT=11
      GSM MAP Screening Table (26 of 4000) is 1% full
;

```

This example shows the output for a calling party screening reference.

```
rtrv-gsmmap-scrn:opname=dd:cgsr=ak
```

```

tekelecstp 08-08-22 00:44:34 EST EAGLE 39.2.0

Single CdPA Entries for OPNAME: dd and CGSR: ak
-----

      SADDR          NP NAI FORBD ACT      PCA          SSN CDSR RI      TT
      SADDR          NP NAI FORBD ACT      PCI          SSN CDSR RI      TT
      3476           * * all fwd          1-221-2      13 gu gt         11
      SADDR          NP NAI FORBD ACT      PCN          SSN CDSR RI      TT
      SADDR          NP NAI FORBD ACT      PCN24        SSN CDSR RI      TT
      SADDR          NP NAI FORBD ACT      CDSR

Range CdPA Entries for OPNAME: dd and CGSR: ak
-----

      SADDR          EADDR          NP NAI FORBD ACT      PCA          SSN
CDSR

      SADDR          EADDR          NP NAI FORBD ACT      PCI          SSN
CDSR

```

```

1234          3452          * * all fwd
1-221-2      13 gh
  RI=gt TT=11

  SADDR          EADDR          NP NAI FORBD ACT
PCN          SSN CDSR

  SADDR          EADDR          NP NAI FORBD ACT
PCN24        SSN CDSR

  SADDR          EADDR          NP NAI FORBD ACT CDSR

GSM MAP Screening Table (14 of 4000) is 1% full
;

```

This example shows the output for a specified translation type.

rtrv-gsmmap-scrn:opname=test4:tt=12

```

tekelecstp 08-08-18 17:26:42 EST EAGLE 39.2.0

Single CgPA Entries for OPNAME: test4
-----
SADDR          NP NAI FORBD ACT      PCA          SSN CGSR
RI    TT
*              * * all fwd      001-001-002  12 ad
ssn  12

SADDR          NP NAI FORBD ACT      PCI          SSN CGSR
RI    TT

SADDR          NP NAI FORBD ACT      PCN          SSN CGSR
RI    TT

SADDR          NP NAI FORBD ACT      PCN24        SSN CGSR
RI    TT

SADDR          NP NAI FORBD ACT      CGSR

Range CgPA Entries for OPNAME: test4
-----

SADDR          EADDR          NP NAI FORBD ACT
PCA          SSN CGSR
*              *              * * all fwd
001-001-002  - d
  RI=ssn TT=12

SADDR          EADDR          NP NAI FORBD ACT
PCI          SSN CGSR

SADDR          EADDR          NP NAI FORBD ACT
PCN          SSN CGSR

```

```

SADDR          EADDR          NP NAI FORBD ACT      PCN24          SSN
CSGR

SADDR          EADDR          NP NAI FORBD ACT      CGSR

GSM MAP Screening Table (4 of 4000) is 1% full
;

```

This example shows the output for a specified translation type and a specified mapset.

```
rtrv-gsmmap-scrn:opname=e:mapset=dflt:tt=12
```

```

tekelecstp 08-01-22 00:57:57 EST EAGLE 39.2.0

Single CgPA Entries for OPNAME: e
-----

SADDR          NP NAI FORBD ACT      PCA          SSN CGSR      MAPSET
RI
1111          2 3  all  fwd      001-001-002  12 ad          DFLT
ssn
TT=12

SADDR          NP NAI FORBD ACT      PCI          SSN CGSR      MAPSET
RI

SADDR          NP NAI FORBD ACT      PCN          SSN CGSR      MAPSET
RI

SADDR          NP NAI FORBD ACT      PCN24         SSN CGSR      MAPSET
RI

Range CgPA Entries for OPNAME: e
-----

SADDR          EADDR          NP NAI FORBD ACT      PCA          SSN
CSGR
1234          3452          * *  all  fwd      001-001-002  12
as
MAPSET=DFLT RI=ssn TT=12

SADDR          EADDR          NP NAI FORBD ACT      PCI          SSN
CSGR

SADDR          EADDR          NP NAI FORBD ACT      PCN          SSN
CSGR

SADDR          EADDR          NP NAI FORBD ACT      PCN24         SSN
CSGR

GSM MAP Screening Table (26 of 4000) is 1% full
;

```

Legend

- **Single Entries/Range Entries**—GSM MAP screening single entries and range entries are output in separate sections of the retrieval report. All single entries are output first during a summary report and then all range entries follow.
- **CgPA**—Calling Party Address entry
- **CdPA**—Called Party Address entry
- **OPNAME**—User-defined MAP operation code name.
- **SADDR**—Start origination address.
- **EADDR**—End origination address. This column is displayed for range entries only.
- **NPV**—Numbering plan value.
- **NAIV**—Nature of address indicator value.
- **FORBID** or **FORBD**—Indicates a forbidden parameter for the entered address. If a forbidden parameter is detected the message is rejected by the action defined by the *action* parameter. (Some values are abbreviated; for example, *locat* means *location* .)
- **ACTION** or **ACT**—Screening action, if forbidden. Possible actions are pass, discard (disc), atterr, route, forward, duplicate (dupl), and dupdisc.
- **PC** or **PCA**—ANSI Point Code
- **PCI**—ITU International Point Code
- **PCN**—ITU National Point Code
- **PCN24**—24-bit ITU National Point Code
- **SSN**—Subsystem Number
- **CGSR**—CgPA Screening Reference
- **CDSR**—CdPA Screening Reference
- **MAPSET**—MAP set
- **RI**—Routing Indicator
- **TT**—Translation Type

Related Topics

- [chg-gsmmap-scrn](#)
- [dlt-gsmmap-scrn](#)
- [ent-gsmmap-scrn](#)

4.1.489 rtrv-gsmopts

Use this command to display all GSM (Global System for Mobile Telecommunication) system options from the database.

Parameters

This command has no parameters.

Example

rtrv-gsmopts

Dependencies

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

None

N/A N/A

Notes

None

Output

rtrv-gsmopts

```

tekelecstp 14-05-30 16:51:49 EST  EAGLE 46.1.0
GSM OPTIONS
-----
MULTCC          = NONE          MULTCC          = NONE
MULTCC          = NONE          MULTCC          = NONE
MULTCC          = NONE          MULTCC          = NONE
MULTCC          = NONE          MULTCC          = NONE
MULTCC          = NONE          MULTCC          = NONE
DEFMAPVR        = 1

DEFMCC          = NONE          DEFMNC          = NONE
CCNC            = NONE          MCCMNC          = NONE
CCNC            = NONE          MCCMNC          = NONE
CCNC            = NONE          MCCMNC          = NONE
CCNC            = NONE          MCCMNC          = NONE
CCNC            = NONE          MCCMNC          = NONE
CCNC            = NONE          MCCMNC          = NONE
CCNC            = NONE          MCCMNC          = NONE
CCNC            = NONE          MCCMNC          = NONE
CCNC            = NONE          MCCMNC          = NONE
CCNC            = NONE          MCCMNC          = NONE
CCNC            = NONE          MCCMNC          = NONE
CCNC            = NONE          MCCMNC          = NONE
CCNC            = NONE          MCCMNC          = NONE
CCNC            = NONE          MCCMNC          = NONE

SRIDN           = TCAP          SRIDNNOTFOUND  = GTT
CRPTT           = NONE          SRISMGTTRTG    = OFF
MSRNDIG         = RN           MSRNNAI         = 0
MSRNNP          = 0           MSISDNTRUNC    = 0
SRFADDR         = NONE          SRFNAI         = 0
SRFNP           = 0           MSRNLEN        = 30

SERVERPFX       = NONE          GSM2IS41       = NONE
MIGRPFX         = SINGLE        IS412GSM       = NONE

SPORTTYPE       = NONE          DFLTRN        = NONE

```

```

EIRGRSP           = OFF           EIRRSPTYPE        = TYPE1
EIRIMSICLK        = OFF           EIRIMSISCRN       = OFF
EIRLOGWL          = OFF           EIRDFLTIMSISCRN  = OFF
EIRDFLTIMSILKUP   = RANGE        EIRDFLTIMSIRESP   = WHITELIST

ENCODECUG         = OFF           ENCODENPS         = ON
ENCDNPSPTNONE     = OFF           ENCDNPSDNNOTFOUND= OFF

SRIRDCTENT        = GRN

OWNNETWORKSETNAME= NONE

G-Flex MLR OPTIONS :
  GFLEXMAPLAYERRTG = NONE

  REGSS           = OFF  ACTSS           = OFF  DACTSS           = OFF
  INTSS           = OFF  AUTHFAILRPT     = OFF  RSTDATA          = OFF
  PROCUNSTRQT     = OFF  RDYFORSM        = OFF  PURGMOBSS        = OFF
  SRILOC          = OFF

;

```

Related Topics

- [chg-gsmopts](#)
- [chg-gsmsmsopts](#)
- [rtrv-gsmsmsopts](#)

4.1.490 rtrv-gsms-opcode

Use this command to retrieve the concerned GSM (Global System for Mobile Telecommunication) MAP (Mobile Application Part) screening operation codes and the default screening action for the operation code. This command allows the craftsperson to verify a list of all operation codes or a single operation code that the system uses in performing GSM Map Screening.

Parameters**mapset (optional)**

MAP set ID.

Range:

1 - 36000, *dflt*
dflt —Default MAP set

opcode (optional)

MAP operation code.

Range:

0 - 255, *

Default:
Display all MAP operation codes

opname (optional)
User-defined name for the operation code. This value is defined with the `ent-gsms-opcode` command.

Range:
ayyyyyyy
Up to 8 alphanumeric characters

Default:
Display all operation code names

ri (optional)
Routing indicator. This parameter specifies whether a subsequent global title translation is required.

Range:

gt

ssn

tt (optional)
Translation type. The value the CdPA TT is set to as the result of Enhanced GSM Map Screening.

Range:
0 - 255

Default:
Display all translation types

Example

```
rtrv-gsms-opcode
rtrv-gsms-opcode:opname=ati
rtrv-gsms-opcode:ri=gt
rtrv-gsms-opcode:tt=11
```

Dependencies

The GSM Map Screening feature must be enabled before this command can be entered.

3900 E3900 Cmd Rej: GSM Map Screening feature must be enabled

The EGMS feature must be enabled and turned on before:

- The `opcode=*` parameter can be specified.
- An `opname` parameter can be specified that refers to an `opcode=*` parameter.

4291 E4291 Cmd Rej: Enhanced GSM Map Screening feature must be enabled

The GSM Map Op-Code table must be accessible.

3889 E3889 Cmd Rej: Failure reading the GSM OP CODE Table

The `opcode` and `opname` parameters cannot be specified together in the command.

4019 E4019 Cmd Rej: OPCODE and OPNAME shouldn't be specified together

The value of the `opcode` parameter must be between 0 - 255 or * .

2018 E2018 Cmd Rej: <parm_desc> is out of range, <min>.<max>,'<char>' - <parm>

The specified `opname` parameter must exist in the GSM MAP Op-Code table.

3892 E3892 Cmd Rej: OPNAME does not exist in the database

If the `opname` parameter is specified, then it must be alphanumeric.

2040 E2040 Cmd Rej: String pattern nonconformance, alphanumeric - <parm>

The `opname` parameter must be no more than 8 characters in length.

2039 E2039 Cmd Rej: <parm_desc> too long, min <min>, max <max> - <parm>

The Flexible GTT Load Sharing feature must be enabled before the `mapset` parameter can be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The specified MAP set must exist.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

Notes

None

Output

```
rtrv-gsms-opcode
```

```
tekelecstp 08-08-22 00:32:17 EST EAGLE 39.2.0
```

OPCODE	OPNAME	DFLTACT	PCA	SSN	RI	TT
15	d	fwd	001-001-002	12	ssn	11
16	e	fwd	001-001-002	12	gt	21
19	f	fwd	001-001-002	12	gt	14
20	h	fwd	001-001-002	-	gt	11

OPCODE	OPNAME	DFLTACT	PCI	SSN	RI	TT
17	dd	fwd	1-221-2	13	gt	244

OPCODE	OPNAME	DFLTACT	PCN	SSN	RI	TT

OPCODE	OPNAME	DFLTACT	PCN24	SSN	RI	TT

OPCODE	OPNAME	DFLTACT
12	a	disc
13	b	disc

```
GSMMS OPCODE Table (9 of 257) is 4% full
```

```
;
```

```
rtrv-gsms-opcode:opname=e
```

```
tekelecstp 08-08-22 00:32:45 EST EAGLE 39.2.0
```

OPCODE	OPNAME	DFLTACT	PCA	SSN	RI	TT
16	e	fwd	001-001-002	12	gt	21

```
GSMMS OPCODE Table (9 of 257) is 4% full
```

```
;
```

This example includes a spare point code:

```
rtrv-gsms-opcode
```

```
tekelecstp 08-08-22 00:54:42 EST EAGLE 39.2.0
```

OPCODE	OPNAME	DFLTACT	PCA	SSN	RI	TT
15	d	fwd	001-001-002	12	ssn	11
16	e	fwd	001-001-002	12	gt	21
19	f	fwd	001-001-002	12	gt	14
20	h	fwd	001-001-002	-	gt	11
21	k	fwd	001-001-002	12	gt	11
22	t	fwd	001-001-002	-	gt	128
23	u	fwd	001-001-002	12	ssn	11
39	rr	fwd	001-001-002	12	ssn	11

OPCODE	OPNAME	DFLTACT	PCI	SSN	RI	TT
17	dd	fwd	1-221-2	13	gt	244
31	kk	fwd	1-221-2	13	ssn	11
44	rf	fwd	1-221-2	13	gt	11

OPCODE	OPNAME	DFLTACT	PCN	SSN	RI	TT

OPCODE	OPNAME	DFLTACT	PCN24	SSN	RI	TT

OPCODE	OPNAME	DFLTACT
12	a	disc
13	b	disc

```
GSMMS OPCODE Table (13 of 257) is 5% full
```

```
;
```

This example shows output when the Flexible GTT Load Sharing feature is on.

```
rtrv-gsms-opcode
```

```
tekelecstp 08-08-22 00:54:42 EST EAGLE 39.2.0
```

OPCODE	OPNAME	DFLTACT	PCA	SSN	MAPSET	RI	TT
15	d	fwd	001-001-002	12	DFLT	ssn	11
16	e	fwd	001-001-002	12	DFLT	gt	21

```

      19      f      fwd      001-001-002      12      DFLT
gt      14
      20      h      fwd      001-001-002      -      DFLT
gt      11
      21      k      fwd      001-001-002      12      DFLT
gt      11
      22      t      fwd      001-001-002      -      DFLT
gt      128
      23      u      fwd      001-001-002      12      DFLT
ssn     11
      39      rr     fwd      001-001-002      12      1
ssn     11

      OPCODE  OPNAME  DFLTACT  PCI          SSN  MAPSET
RI      TT
      17      dd      fwd      1-221-2     13  DFLT
gt      244
      31      kk      fwd      1-221-2     13  DFLT
ssn     11
      44      rf      fwd      1-221-2     13  2
gt      11

      OPCODE  OPNAME  DFLTACT  PCN          SSN  MAPSET
RI      TT

      OPCODE  OPNAME  DFLTACT  PCN24        SSN  MAPSET
RI      TT

      OPCODE  OPNAME  DFLTACT
      12      a      disc
      13      b      disc

```

GSMSMMS OPCODE Table (13 of 257) is 5% full

;

This example shows output for a specific MAP set. The Flexible GTT Load Sharing feature is on.

```
rtrv-gsms-opcode:mapset=2
```

```
tekelecstp 08-08-22 00:56:01 EST EAGLE 39.2.0
```

```

      OPCODE  OPNAME  DFLTACT  PCA          SSN  MAPSET
RI      TT

      OPCODE  OPNAME  DFLTACT  PCI          SSN  MAPSET
RI      TT
      44      rf      fwd      1-221-2     13  2
gt      11

      OPCODE  OPNAME  DFLTACT  PCN          SSN  MAPSET
RI      TT

      OPCODE  OPNAME  DFLTACT  PCN24        SSN  MAPSET

```

```
RI      TT
```

```
GSMMS OPCODE Table (13 of 257) is 5% full
```

```
;
```

This example shows the output for the global translation routing indicator.

```
rtrv-gsms-opcode:ri=gt
```

```
tekelecstp 08-08-22 00:54:53 EST EAGLE 39.2.0
```

OPCODE	OPNAME	DFLTACT	PCA	SSN	RI	TT
16	e	fwd	001-001-002	12	gt	21
19	f	fwd	001-001-002	12	gt	14
20	h	fwd	001-001-002	-	gt	11
21	k	fwd	001-001-002	12	gt	11
22	t	fwd	001-001-002	-	gt	128

OPCODE	OPNAME	DFLTACT	PCI	SSN	RI	TT
17	dd	fwd	1-221-2	13	gt	244
44	rf	fwd	1-221-2	13	gt	11

OPCODE	OPNAME	DFLTACT	PCN	SSN	RI	TT

OPCODE	OPNAME	DFLTACT	PCN24	SSN	RI	TT

```
GSMMS OPCODE Table (13 of 257) is 5% full
```

```
;
```

This example shows the output for the subsystem number routing indicator. The FGTTLS feature is enabled.

```
rtrv-gsms-opcode:ri=ssn
```

```
tekelecstp 08-08-22 00:55:03 EST EAGLE 39.2.0
```

OPCODE	OPNAME	DFLTACT	PCA	SSN	MAPSET	RI	TT
15	d	fwd	001-001-002	12	DFLT	ssn	11
23	u	fwd	001-001-002	12	DFLT	ssn	11
39	rr	fwd	001-001-002	12	1	ssn	11

OPCODE	OPNAME	DFLTACT	PCI	SSN	MAPSET	RI	TT
31	kk	fwd	1-221-2	13	DFLT	ssn	11

OPCODE	OPNAME	DFLTACT	PCN	SSN	MAPSET	RI	TT

OPCODE	OPNAME	DFLTACT	PCN24	SSN	MAPSET	RI	TT

```
GSMMS OPCODE Table (13 of 257) is 5% full
```

```
;
```

This example shows the output for a specified translation type.

```
rtrv-gsms-opcode:tt=11
```

```
tekelecstp 08-08-22 00:54:53 EST EAGLE 39.2.0
```

OPCODE	OPNAME	DFLTACT	PCA	SSN	RI	TT
15	d	fwd	001-001-002	12	ssn	11
20	h	fwd	001-001-002	-	gt	11
21	k	fwd	001-001-002	12	gt	11
22	t	fwd	001-001-002	-	gt	11
23	u	fwd	001-001-002	12	ssn	11
39	rr	fwd	001-001-002	12	ssn	11

OPCODE	OPNAME	DFLTACT	PCI	SSN	RI	TT
31	kk	fwd	1-221-2	13	ssn	11
44	rf	fwd	1-221-2	13	gt	11

OPCODE	OPNAME	DFLTACT	PCN	SSN	RI	TT
--------	--------	---------	-----	-----	----	----

OPCODE	OPNAME	DFLTACT	PCN24	SSN	RI	TT
--------	--------	---------	-------	-----	----	----

```
GSMSMS OPCODE Table (13 of 257) is 5% full
```

```
;
```

Legend

- **OPCODE**—MAP operation code
- **OPNAME**—User-defined name of operation code
- **DFLTACT**—Default screening action
- **PCA**—ANSI Point Code
- **PCI**—ITU International Point Code
- **PCN**—ITU National Point Code
- **PCN24**—24-bit ITU National Point Code
- **SSN**—Subsystem Number
- **MAPSET**—MAP set
- **RI**—Routing Indicator
- **TT**—Translation Type

Related Topics

- [chg-gsms-opcode](#)
- [dlt-gsms-opcode](#)
- [ent-gsms-opcode](#)

4.1.491 rtrv-gsmsmsopts

Use this command to display all GSM SMS options from the database.

Parameters

This command has no parameters.

Example

```
rtrv-gsmsmsopts
```

Dependencies

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

None.

N/A N/A

Notes

None

Output

```
rtrv-gsmsmsopts
```

```
tekelecstp 10-09-23 11:27:38 EST EAGLE5 43.0.0
GSM SMS OPTIONS
-----
BPARTYGTTSN = NONE           MOSMSGTTDIG = SCCPCDPA
MOSMSTYPE   = SPRN           MOSMSNAI    = INTL
MOSMSSA     = NO             MOSMSFWD    = NO
MOSMSACLEN  = 0              MOSMSGTA    = NONE
MOSMSTCAPSEG = OFF           MOSMSDIGMAT = EXACT
SPORTTYPE   = NONE           SPFILL      = OFF
DEFRN       = NONE

MTSMSIMSI   = MCCRNDN        MTSMSNNI    = RN
MTSMSTYPE   = RN             MTSMSACKN   = ACK
MTSMSDLTR   = NO             MTSMSDLTRV  = NONE
MTSMSNAKERR = 1              MTSMSCHKSRC = NO
MTMMSTYPE   = RN             SRISMDN     = SCCP

MTMMSGTA    = NONE
MTMMSACKN   = ACK            MTMMSENTYLEN = NONE
MTMMSLEN    = NONE

IGSMSRELAY  = NO             DEFIS41SMSC = NONE
IS41SMSCGTTSN= NONE
```

Related Topics

- [chg-gsmopts](#)
- [chg-gsmsmsopts](#)
- [rtrv-gsmopts](#)

4.1.492 rtrv-gsmssn-scrn

Use this command to retrieve all or single subsystem numbers in the GSM SSN screening table.

Parameters

ssn (optional)

Subsystem number.

Range:

000 - 255

Default:

Display all

type (optional)

Subsystem type.

Range:

orig

Origination SSN

dest

Destination SSN

Default:

Display all

Example

```
rtrv-gsmssn-scrn
```

```
rtrv-gsmssn-scrn:ssn=0:type=dest
```

Dependencies

The GSM Map Screening feature must be enabled before this command can be entered.

3900 E3900 Cmd Rej: GSM Map Screening feature must be enabled

The SSN Map Screening table is corrupt or cannot be found.

3885 E3885 Cmd Rej: Failure reading the GSM SSN Screening Table

A valid value must be specified for the `ssn` parameter.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

A valid value must be specified for the `type` parameter.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

Notes

If specified, the `ssn/type` parameter combination must exist in the GSM SSN screening table. If the value does not exist, the following message is displayed:

```
SSN ORIG DEST
```

No matching entries with the specified criteria found.

Output

```
rtrv-gsmssn-scrn:ssn=10:type=orig
```

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
SSN ORIG DEST
010 Yes Yes
GSMMS SSN table is (256 of 512) 50% full
RTRV-GSMSSN-SCRN: MASP A - COMPLTD
```

```
;
```

```
rtrv-gsmssn-scrn
```

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
SSN ORIG DEST
002 Yes No
010 Yes Yes
GSMMS SSN table is (2 of 512) 1% full
RTRV-GSMSSN-SCRN: MASP A - COMPLTD
```

```
;
```

Legend

- **SSN**—Subsystem number
- **ORIG**—Specifies whether the subsystem type is origination
- **DEST**—Specifies whether the subsystem type is destination

Related Topics

- [dlt-gsmssn-scrn](#)
- [ent-gsmssn-scrn](#)

4.1.493 rtrv-gta

Use this command to display a list of the GTA (global title address) information applicable to the specified GTT set. This list can be filtered using a number of parameters. The report that is displayed contains two records (the percentage full and number-of-cells-used field) that give the total entries in the GTT table without regard to the selector specified.

This command obtains the routing object (destination address and subsystem number), relative cost, and routing indicator assigned to that object for specified GTAs (global title addresses) or ranges of GTAs with a given GTT set.

 **Note:**

If the EGTT feature is turned on, then the GTT Selector (`ent/chg/dlt/rtrvgttset`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrvgta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. It is not recommended to run `ent/dlt/rtrv-tt & ent/chg/dlt/rtrv-gtt` commands as it may cause the advance GTA fields of GTT entry to be reset to the default values.

Parameters

 **Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

gttsn (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters

acn (optional)

Application context name. The ITU TCAP *acn* field in the incoming MSU.

Range:

*0 - 255, *, none*

The *acn* field supports up to 7 subfields separated by a dash (e.g., *1-202-33-104-54-26-007*).

*—any valid value in the ITU TCAP *acn* field in the incoming MSU

none—there is no ITU TCAP *acn* field in the incoming MSU

actsn (optional)

GTT Action Set Name.

Range:

ayyyyyyy, none

1 leading alphabetic character and up to 8 following alphanumeric characters

cdssn (optional)

Starting CdPA subsystem number.

Range:

0 - 255

cggtmod (optional)

Calling party global title modification indicator. This parameter displays all translation entries that have the specified value of the calling party GT modification indicator.

Range:

yes

no

cgpc (optional)

ANSI CgPA point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

cgpca

Range:

0-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni=001-005*.

When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006-255*.

When *chg-sid:pctype=ansi* is specified, *ni-*.** is valid if *ni =006-255*.

The point code *000-000-000* is not a valid point code.

cgpci (optional)

ITU international CgPA point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

cgpcn (optional)

ITU national CgPA point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**cgpcn24 (optional)**24-bit ITU national CgPA point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.**Range:**

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*msa—000–255**ssa—000–255**sp—000–255***cgpcn16 (optional)**16-bit ITU national CgPA point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.**Range:**

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*un---000---127**sna---000---15**mna---000---31***cgpcaction (optional)**

This parameter is used to provide the required abilities, indicating what any particular translation needs to do with CgPA PC.

Range:*dflt*

protocol will be allowed to perform all the required processing/conversion with CGPC.

ignore

CGPC will be left as it was in incoming MSU.

remove

CGPC will be removed from outgoing MSU.

Default:*dflt***cgssn (optional)**

Starting CgPA subsystem number.

Range: 0 - 255**defmapvr (optional)**

Default MAP version for MBR opcodes. This parameter is used to provide the default MAP version for supported MBR opcodes if the Application Context Name (ACN) is not present in an incoming MAP message.

Range:*v1**v2**v3***dpc (optional)**ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.**Synonym:***dPCA***Range:***0-255, **

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni=001-005*.When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006-255*.When *chg-sid:pctype=ansi* is specified, *ni-*.** is valid if *ni =006-255*.The point code *000-000-000* is not a valid point code.**dpc/dPCA/dpci/dpcn/dpcn24/dpcn16 (optional)**

Point Code.

dpci (optional)ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).**Range:***s-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

dpcn16 (optional)

16-bit ITU national destination point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

eaddr (optional)

End Address (Similar to EGTA). This parameter specifies the end of a range of MAP digits (IMEI/MSI/MSISDN/VLRNB/SMRPOA/SMRPDA).

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, *a-f*, *A-F*.

Default:

Same as the specified SADDR value.

ecdssn (optional)

Ending CdPA subsystem number.

Range:

0 - 255

ecgssn (optional)

Ending CgPA subsystem number.

Range:

0 - 255

egta (optional)

End global title address. The end of a range of global title digits.

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

Default:

The first *gta* entry for the given GTT selector

family (optional)

The ANSI TCAP *family* field in the incoming MSU.

Range:

0 - 255, *, *none*

*

any valid value in the ANSI TCAP *family* field in the incoming MSU

none

there is no value in the ANSI TCAP *family* field in the incoming MSU

force (optional)

Display more than 1000 entries.

Range:

yes

no

Default:

no

gta (optional)

Global title address. The beginning of a range of global title digits.

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

Default:

The first `gta` entry for the given GTT selector

gtmodid (optional)

Global title modification identifier.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

Default:

displays all GT Modification Indicators for the GTA

loopset (optional)

SCCP loopset name. This parameter retrieves translation entries associated with the specified loopset.

Range:

ayyyyyyy, none

1 alphabetic character followed by up to 7 alphanumeric characters.

none —Translation entries with no association to any loopset.

mapset (optional)

MAP set ID. This parameter retrieves GTA information for a specified Mated Application set.

Range:

1 - 36000, dflt

dflt —Default MAP set

Default:

Retrieves GTA information for the default MAP set.

mrnset (optional)

MRN set ID. This parameter retrieves GTA information for a specified Mated Relay Node set.

Range:

1 - 3000, dflt, none

dflt —Default MRN set

none —The GTA translation does not participate in any loadsharing.

num (optional)

Number of entries to display.

Range:

1 - 1000000

Default:

1 —if *gta* is specified
20 —if *gta* is not specified

opc (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

opca

Range:

0-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni=001–005*.

When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006–255*.

When *chg-sid:pctype=ansi* is specified, *ni-*.** is valid if *ni =006–255*.

The point code *000-000-000* is not a valid point code.

opci (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

opcni (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

opc24 (optional)

24-bit ITU originating point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

opc16 (optional)

16-bit ITU originating point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

opcode (optional)

The TCAP *opcode* field in the incoming MSU.

Range:

0 - 255, *, *none*

*—any valid value in the TCAP *opcode* field in the incoming MSU

none—there is no value in the TCAP *opcode* field in the incoming MSU

opcodetag (optional)

The ITU TCAP *opcodetag* field in the incoming MSU.

Range:

none, local, global, any

none—there is no value in the ITU TCAP *opcodetag* field in the incoming MSU

local—The *opcodetag* is local in the ITU TCAP *opcodetag* field in the incoming MSU

global—The *opcodetag* is global in the ITU TCAP *opcodetag* field in the incoming MSU

any—any valid value in the ITU TCAP *opcodetag* field in the incoming MSU

Default:

any

pc (optional)

ANSI point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

pca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pci (optional)

ITU international point code in the form of *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p
msa—000–255
ssa—000–255
sp—000–255

pcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*. The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, *000---127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p
un---000---127
sna---000---15
mna---000---31

pctype (optional)

Point code type. This parameter retrieves a single type of point code among mixed types of point code provisioned for a Translation Type.

Range:

ansi
itui
itun
itun16
itun24
ituis
ituns

Default:

Display all point code types

pkgtype (optional)

Package type. The ANSI TCAP and ITU TCAP package type.

Range:

ansiuni
ANSI unidirectional

qwp
Query with Permission

qwop
Query with out Permission

resp
Response

cwp
Conversation with Permission

cwop
Conversation with out Permission

ansiabort
ANSI abort

any
Wildcard value

bgn
Begin

end
End

cnt
Continue

ituabort
ITU abort

ituuni
ITU unidirectional

ANSI TCAP PKGTYPE
ansiuni, qwp, qwop, resp, cwp, cwop, ansiabort, any

ITU TCAP PKGTYPE
bgn, ituabort, ituuni, any, end, cnt

ppmeasreqd (optional)
Per Path Measurement required.

Range:

yes

no

refgttsn (optional)
Referred GTT set name. The GTT Set Name referred in the GT Translation Entry by the *optsn*, *opcsn*, and *cgcnsn* parameters.

Range:*ayyyyyyy*

1 leading alphabetic and up to 8 following alphanumeric characters

saddr (optional)

Start Address (Similar to GTA). This parameter specifies the beginning of a range of MAP digits (IMEI/MSI/MSISDN/VLRNB/SMRPOA/SMRPDA).

Range:

1 - 21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

ssn (optional)

Subsystem number.

Range:*002 - 255***Default:**

Display all

testmode (optional)Test mode. This parameter displays all translation entries that have a specified value of the `testmode` parameter.**Range:***on**off***Default:***off***xlat (optional)**

Translate indicator. This parameter specifies translation actions and routing actions.

Range:*dpc**dpcngt**dpcssn**none***Example**

```
rtrv-gta:gttsn=t800:num=65535:force=yes
```

```
rtrv-gta:gttsn=t800:pc=8-1-1:ssn=222:gta=9195551212
```

```
rtrv-
```

```
gta:gttsn=t800:ssn=222:gta=9000000000:egta=9762429999:num=65535  
:force=yes
```

```
rtrv-gta:gttsn=ntoa23:pctype=ansi
rtrv-gta:gttsn=setnat003:pcn=s-129-aa
rtrv-gta:gttsn=setnat003:gta=987658321198765432101:pcn=s-128-aa
rtrv-gta:gttsn=tbla
rtrv-gta:gttsn=tbla:pc=1-1-1
rtrv-gta:gttsn=setssn:mapset=6
rtrv-gta:gttsn=setans006:mrnset=1
rtrv-gta:gttsn=setans004:actsn=asetudts1
rtrv-gta:gttsn=setcdgta:testmode=on
rtrv-gta:gttsn=setcdssn:cdssn=15:ecdssn=25
rtrv-gta:gttsn=setcdgta:xlat=none
rtrv-gta:gttsn=setdpc:dpci=1-101-1
rtrv-gta:gttsn=setcdgta:xlat=dpcssn:ssn=10
rtrv-gta:gtmodid=set1
rtrv-gta:gttsn=setcggta:refgttsn=setcgpc
rtrv-gta:gttsn=setcdgta:ppmeasreqd=yes
rtrv-gta:gttsn=setcdgta:xlat=none:mrnset=1:mapset=6
rtrv-gta:gttsn=gtt1:cgpcaction=df1t
rtrv-gta:gttsn=setimsil:saddr=123456789
rtrv-gta:gttsn=setimsil:defmapvr=v2
rtrv-gta:gttsn=opc:opcode=57
rtrv-gta:gttsn=opcodesn:opcodetag=local
rtrv-gta:gttsn=opcset1:opcode=57:pkgtype=bgn
rtrv-gta:gttsn=opcset1:pkgtype=end
rtrv-gta:gttsn=opc:opcode=57:acn=4-0-0-1-0-1-2
rtrv-gta:gttsn=opc:pkgtype=bgn:acn=none
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

The ANSI/ITU SCCP Conversion feature must be enabled before the `pctype` parameter can be specified.

4171 E4171 Cmd Rej: SCCP Conversion feature must be enabled

The `gttsn` parameter must be specified, cannot have a value of *none*, and must match an existing `gttsn`.

3561 E3561 Cmd Rej: GTT Set specified by GTT Set Name/index does not exist

The `pc/pca/pci/pcn/pcn24/pcn16`, `cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16`, `opc/opca/opci/opcn/opcn24/opcn16`, and `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameters must have valid values within the range for each subfield.

2169 E2169 Cmd Rej: Point code out of range

The ANSI/ITU SCCP Conversion feature must be enabled before a translated point code that is of a different domain than the GTT set specified by the `gttsn` parameter can be specified.

3570 E3570 Cmd Rej: Point Code type does not match GTT Set network domain

If the `egta/eaddr` parameter is specified, the `gta/saddr` parameter must be specified. The `gta/saddr` and `egta/eaddr` parameters must be the same length, and the value for the `egta/eaddr` parameter must be greater than the value for the `gta/saddr` parameter.

2403 E2403 Cmd Rej: Length of EGTA/EADDR must be equal to length of GTA/SADDR

If the specified `num` parameter value is greater than 1000, the `force=yes` parameter must be specified.

2423 E2423 Cmd Rej: FORCE=YES must be specified for NUM greater than 1000

The number of digits in the specified `gta/saddr` parameter must be at least the number of digits provisioned for the GTT set specified by the `gttsn` parameter. If the VGTT feature is turned on, then up to 10 GTA/SADDR lengths can exist per GTT set. If the Support for 16 GTT Lengths in VGTT feature is turned on, then up to 16 GTA/SADDR lengths can exist per GTT set.

2405 E2405 Cmd Rej: GTA/SADDR does not exist in any range

If the Flexible GTT Load Sharing feature is not enabled, then the `mapset` parameter cannot be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

If `ansi pkgtype` is specified in `pkgtype` parameter, then `opcodetag` parameter cannot be specified.

E3703 Cmd Rej: OPCODETAG parameter is allowed with ITU TCAP PKGTYPE

At least one entry must be provisioned in the specified MAP set in the MAP table.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

If the `ecgssn/ecdssn` parameter is specified, the `cgssn/cdssn` parameter must be specified.

3331 E3331 Cmd Rej: ECGSSN/ECDSSN cannot be specified without CGSSN/CDSSN

If the `ecgssn/ecdssn` parameter is specified, the `cgssn/cdssn` parameter must be specified, and the `ecgssn/ecdssn` parameter must be greater than the `cgssn/cdssn` parameter.

4404 E4404 Cmd Rej: End value must be greater than or equal to a starting value

The OBSR feature must be enabled before the `cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16`, `opc/opca/opci/opcn/opcn24/opcn16`, `cgssn`, or `ecgssn` parameter can be specified.

4393 E4393 Cmd Rej: Origin Based SCCP Routing feature must be enabled

The range specified by the `cgssn/ecgssn` or the `cdssn/ecdssn` parameters must exist for the specified GTT set.

4415 E4415 Cmd Rej: CGSSN/CDSSN range does not exist

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the `gta/saddr` and `egta/eaddr` parameters.

3006 E3006 Cmd Rej: Hex Digit Support for GTT feature must be ON

The SCCP Loop Detection feature must be enabled before the `loopset` parameter can be specified.

4565 E4565 Cmd Rej: SCCP Loop Detection Feature is not enabled

The value of the `loopset` parameter must already exist in the database.

4568 E4568 Cmd Rej: Loop Set entry does not exist

The Loopset table is corrupt or cannot be found.

4567 E4567 Cmd Rej: Cannot access LoopSet table

At least one entry must be provisioned in the MRN table for the MRN set that is specified by the `mrnset` parameter.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

The Flexible GTT Load Sharing feature must be enabled before the `mrnset` parameter can be specified.

4479 E4479 Cmd Rej: MRNSET must be specified (only) if FGTTLS feature is enabled

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the `cggmod` parameter can be specified.

4789 E4789 Cmd Rej: Either AMGTT or AMGTT CgPA Upgrade feature must be ON

The `xlat=none` parameter must be specified before the `mapset` and `mrnset` parameters can be specified together in the command.

4837 E4837 Cmd Rej: MAPSET and MRNSET cannot be specified together

A TOBR quantity feature must be turned on before the `opcode`, `pkgtype`, `acn`, `family`, `saddr`, `eaddr`, or `defmapvr` parameter can be specified.

5105 E5105 Cmd Rej: One of the TOBR quantity feature must be ON

The `opcode`, `pkgtype`, and `family` parameters must be specified together for ANSI TCAP translations. The `opcode`, `pkgtype`, and `acn` parameters must be specified together for ITU TCAP translations.

5106 E5106 Cmd Rej: OPCODE,PKGTYPE,ACN/FAMILY must be specified together

The `acn` and `family` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `family` parameter is specified, then a value of `ansiuni`, `qwp`, `qwop`, `resp`, `cwp`, `cwop`, `ansiabort`, or `any` must be specified for the `pkgtype` parameter.

5140 E5140 Cmd Rej: FAMILY parameter is allowed with ANSI TCAP PKGTYPE

If the `acn` parameter is specified, then a value of `bgn`, `ituabort`, `ituuni`, `any`, `end`, or `cnt` must be specified for the `pkgtype` parameter.

5141 E5141 Cmd Rej: ACN parameter is allowed with ITU TCAP PKGTYPE

If the `pkgtype=ituabort` parameter is specified, then a value of `none` must be specified for the `acn`, `opcode` and `opcodetag` parameters.

If the `pkgtype=ansiabort` parameter is specified, then a value of `none` must be specified for the `family` and `opcode` parameters.

E5144 Cmd Rej: PKGTYPE abort requires ACN/FAMILY/OPCODE/OPTAG value none

The `cgpc`, `cgssn`, `gta`, `opc`, `cdssn`, `opcode/acn`, `pkgtype/family/opcodetag`, and `saddr` parameters cannot be specified together in the command.

If the `cgssn` and `cdssn` parameters are both specified in the same command (in any order), then only the value for the last of the two parameters specified is used during processing.

3332 E3332 Cmd Rej: GTA/CGPC/OPC/CG-CDSSN/OPCODE/DPC/ADDR are mutually xclusve

Failure while reading the GTT Action Set table.

5197 E5197 Cmd Rej: Unable to access GTT Action Set table

The value specified by the `actsn` parameter must already exist in the database.

5196 E5196 Cmd Rej: GTT Action Set does not exist

The FLOBR feature must be turned on before the `dpc`, `cdssn`, or `ecdssn` parameter can be specified.

5060 E5060 Cmd Rej: Flexible Linkset Optional Based Routing must be ON

The specified point code must be a full point code.

2859 E2859 Cmd Rej: Destination address must be a full point code

The value specified for the `gtmodid` parameter must already exist in the GTMOD table.

5285 E5285 Cmd Rej: GTMODID does not exist

The GTMOD table is corrupt or cannot be found.

5284 E5284 Cmd Rej: Failed reading GTMOD table

A value of `none` cannot be specified for the `gttsn` and `refgttsn` parameters.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

If the `xlat=none` parameter is specified, then the `pc/pca/pci/pcn/pcn24/pcn16`, `force`, `ssn`, and `ccgt` parameters cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The specified GTT set must have a set type of `opcode` (see the `ent-gttset` command) before the `opcode/acn/pkgtype` or `opcode/family/pkgtype/family` parameters can be specified. The specified GTT set must have a set type of `cdssn`, `cgssn`, `cdgta/cgta`, `opc`, or `cgpc` before the `cdssn`, `cgssn`, `gta`, `opc`, or `cgpc` parameter, respectively, can be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `cgssn` parameter is specified, then the `ecdssn` parameter cannot be specified. If the `cdssn` parameter is specified, then the `ecgssn` parameter cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `opc` or `dpc` parameter is specified, then the `(e)gta`, `(e)cgssn`, `(e)cdssn`, `acn`, `pkgtype`, `family`, and `opcode` parameters cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The specified GTT set must have a set type of `opcode` (see the `ent-gttset` command) before the `defmapvr` parameter can be specified.

3458 E3458 Cmd Rej: DEFMAPVR can be specified with OPCODE SETTYPES only

The `SADDR` parameter must be specified if the `EADDR` parameter is specified in the command.

3461 E3461 Cmd Rej: EADDR cannot be specified without SADDR

Notes

The percentage full and number of cells used report that is provided with the `rtrv-gta` command reflects the total entries in the GTA table without regard to the selector specified.

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

If the `rtrv-gta` command is entered with only the `gta` parameter, a match would be an entry containing the same number of digits, or more digits, for the GTT set. For example, if `gta=8005556666` is specified, the six-digit GTT set `800555` would be a match. If the VGTT feature is turned on and the `egta` parameter is specified, all matching entries regardless of length are displayed.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

The point code domain translation types for EGTT are handled by the EAGLE protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

When the Origin-based SCCP Routing feature is enabled, its parameters are displayed. If no data is provisioned for these parameters, they are displayed as dashes.

Output

 Note:

The Start GTA (gta) and End GTA (egta) fields are sized according to the ndgt parameter value. Because all GTAs for a GTT Set are the same size, this helps the appearance of the display. If all 21 digits are used, an entry will not fit on a single line. If two lines per entry are used, the size of the report would double, being inefficient for large reports. It is not anticipated that more than 15 digits will be used in the immediate future, but displaying GTAs longer than 19 digits will cause the line to wrap around to the next line.

This example retrieves all GTAs for the specified GTT Set:

```
rtrv-gta:gttsn=t800:num=65535:force=yes
```

```
tekelecstp 10-02-04 08:31:05 EST EAGLE 42.0.0
```

```
GTTSN      NETDOM  NDGT
t800      ansi    10
```

```
GTA table is (17 of 269999) 1% full.
```

```
;
```

```
tekelecstp 10-02-04 08:31:06 EST EAGLE 42.0.0
```

```
START GTA  END GTA   XLAT  RI    PCA
8005550000 8005551999 DPCSSN SSN    001-254-255
          SSN=255 CCGT=no
          GTMODID=----- TESTMODE=off
          ACTSN=----- PPMEASREQD= NO
8005552000 8005553999 DPC    GT    001-254-255
          SSN=255 CCGT=no
          GTMODID=gtmodset1 TESTMODE=off
          ACTSN=----- PPMEASREQD= NO
8005554000 8005555999 DPCNGT GT    001-254-255
          SSN=255 CCGT=no
          GTMODID=gtmodset2 TESTMODE=off
          ACTSN=----- PPMEASREQD= NO
8005556000 8005557999 DPCSSN SSN    001-254-255
          SSN=255 CCGT=no
          GTMODID=----- TESTMODE=off
          ACTSN=----- PPMEASREQD= NO
8005558000 8005559999 DPCSSN SSN    001-254-255
          SSN=255 CCGT=yes
          GTMODID=----- TESTMODE=off
          ACTSN=----- PPMEASREQD= NO
9195551212 9195551212 DPCSSN SSN    008-001-001
          SSN=222 CCGT=no
          GTMODID=----- TESTMODE=off
          ACTSN=----- PPMEASREQD= NO
```

```

9762428487 9762428487 DPCSSN SSN    001-254-255
      SSN=222 CCGT=no
      GTMODID=----- TESTMODE=off
      ACTSN=----- PPMEASREQD= NO
9766423277 9766423277 DPCSSN SSN    001-254-255
      SSN=222 CCGT=no
      GTMODID=----- TESTMODE=off
      ACTSN=----- PPMEASREQD= NO
9769388928 9769388928 DPCSSN SSN    001-254-255
      SSN=222 CCGT=no
      GTMODID=gtmodset3 TESTMODE=off
      ACTSN=----- PPMEASREQD= NO

```

Command Retrieved 9 Entries

;

This example retrieves the specific GTAs containing the specified PC/SSN/GTA combination for the specified GTT Set:

```
rtrv-gta:gttsn=t800:pc=8-1-1:ssn=222:gta=9195551212
```

```
tekelecstp 10-02-24 08:29:15 EST EAGLE 42.0.0
```

```
GTTSN      NETDOM  NDGT
t800      ansi     10
```

GTA table is (17 of 269999) 1% full.

;

```
tekelecstp 10-02-24 08:29:16 EST EAGLE 42.0.0
```

```

START GTA  END GTA   XLAT  RI    PCA
9195551212 9195551212 DPCSSN SSN    008-001-001
      SSN=222 CCGT=no
      GTMODID=----- TESTMODE=off
      ACTSN=----- PPMEASREQD= NO

```

Command Retrieved 1 Entries

;

This example retrieves all GTAs containing the specified SSN and within the specified GTA range for the specified GTT Set:

```
rtrv-
gta:gttsn=t800:ssn=222:gta=9000000000:egta=9762429999:num=65535:force=yes
```

```
tekelecstp 10-02-24 08:29:15 EST EAGLE 42.0.0
```

```
GTTSN      NETDOM  NDGT
t800      ansi     10
```

GTA table is (17 of 269999) 1% full.

;

```

tekelecstp 10-02-24 08:29:16 EST EAGLE 42.0.0

START GTA  END GTA  XLAT  RI  PCA
9195551212 9195551212 DPCSSN SSN 008-001-001
SSN=222 CCGT=no
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
9762428487 9762428487 DPCSSN SSN 001-254-255
SSN=222 CCGT=no
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO

```

Command Retrieved 2 Entries

;

This example retrieves all GTAs for the specified GTT Set when the VGTT feature is turned on:

```
rtrv-gta:gttsn=t800:num=65535:force=yes
```

```
tekelecstp 10-02-04 08:31:05 EST EAGLE 42.0.0
```

```

GTTSN  NETDOM  NDGT
t800   ansi    10
GTA table is (17 of 269999) 1% full.

```

;

```
tekelecstp 10-02-04 08:31:06 EST EAGLE 42.0.0
```

```

START GTA  END GTA  XLAT  RI  PCA
8005550000 8005551999 DPCSSN SSN 001-254-255
SSN=255 CCGT=no
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
8005552000 8005553999 DPC  GT  001-254-255
SSN=255 CCGT=no
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
8005554000 8005555999 DPCNGT GT 001-254-255
SSN=255 CCGT=no
GTMODID=gtmodset3 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
8005556000 8005557999 DPCSSN SSN 001-254-255
SSN=255 CCGT=no
GTMODID=gtmodset1 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
8005558000 8005559999 DPCSSN SSN 001-254-255
SSN=255 CCGT=yes
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
9195551212 9195551212 DPCSSN SSN 008-001-001
SSN=222 CCGT=no
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
9762428487 9195551212 DPCSSN SSN 001-254-255

```

```

SSN=222 CCGT=no
GTMODID=gtmodset4 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
9766423277 9195551212 DPCSSN SSN    001-254-255
SSN=222 CCGT=no
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
9769388928 9195551212 DPCSSN SSN    001-254-255
SSN=222 CCGT=no
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO

```

Command Retrieved 9 Entries

;

This example shows output containing GTMODID values:

```
rtrv-gta:gttsn=ansi:gtmodid=aset32
```

```

tekelecstp 10-02-04 08:29:15 EST EAGLE 42.0.0
GTTSN      NETDOM  NDGT
ansi      ansi    10

```

GTA table is (17 of 1000000) 1% full.

;

```

tekelecstp 10-02-04 08:29:16 EST EAGLE 42.0.0

START GTA  END GTA   XLAT  RI    PCA
8005550000 8005551999 DPCSSN SSN    001-254-255
SSN=255 CCGT=no
GTMODID=aset32 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
8005552000 8005553999 DPCNGT GT     001-254-255
SSN=255 CCGT=no
GTMODID=aset32 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
8005554000 8005555999 DPCNGT GT     001-254-255
SSN=255 CCGT=no
GTMODID=aset32 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
8005558000 8005559999 DPCSSN SSN    001-254-255
SSN=255 CCGT=yes
GTMODID=aset32 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
9195551212 9195551212 DPCSSN SSN    008-001-001
SSN=222 CCGT=no
GTMODID=aset32 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
9762428487 9762428487 DPCNGT GT     001-254-255
SSN=222 CCGT=no
GTMODID=aset32 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
9766423277 9766423277 DPCSSN SSN    001-254-255

```

```
SSN=222 CCGT=no
GTMODID=aset32 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
```

Command Retrieved 7 Entries

;

This example shows output when the GTT table can contain up to 1,000,000 entries:

```
rtrv-gta:gttsn=ansi
```

```
tekelecstp 10-02-04 08:29:15 EST EAGLE 42.0.0
GTTSN NETDOM NDGT
ansi ansi 10
```

GTA table is (17 of 1000000) 1% full.

;

```
tekelecstp 10-02-04 08:29:16 EST EAGLE 42.0.0

START GTA END GTA XLAT RI PCA
8005550000 8005551999 DPCSSN SSN 001-254-255
SSN=255 CCGT=no
GTMODID=gtmodset9 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
8005552000 8005553999 DPCNGT GT 001-254-255
SSN=255 CCGT=no
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
8005554000 8005555999 DPCNGT GT 001-254-255
SSN=255 CCGT=no
GTMODID=gtmodset6 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
8005558000 8005559999 DPCSSN SSN 001-254-255
SSN=255 CCGT=yes
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
9195551212 9195551212 DPCSSN SSN 008-001-001
SSN=222 CCGT=no
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
9762428487 9762428487 DPCNGT GT 001-254-255
SSN=222 CCGT=no
GTMODID=gtmodset4 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
9766423277 9766423277 DPCSSN SSN 001-254-255
SSN=222 CCGT=no
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
```

Command Retrieved 7 Entries

;

This example shows output when the ANSI/ITU SCCP Conversion feature is enabled and the PCTYPE parameter has a value of ANSI:

```
rtrv-gta:gttsn=ntoa23:pctype=ansi

tekelecstp 10-02-24 08:29:15 EST EAGLE 42.0.0

GTTSN      NETDOM  NDGT
ntoa23     itu      4

GTA table is (36 of 269999) 1% full.
;
tekelecstp 10-02-24 08:29:16 EST EAGLE 42.0.0
START GTA END GTA XLAT  RI    PC
1899      1899    DPCNGT GT    010-002-002
          SSN=--- CCGT=no
          GTMODID=gmansiset TESTMODE=off
          ACTSN=----- PPMEASREQD= NO

Command Retrieved 1 Entries
;
```

This example shows output when the ANSI/ITU SCCP Conversion feature is enabled and the PCTYPE parameter has a value of ITUI:

```
rtrv-gta:gttsn=atoi22:pctype=itui

tekelecstp 10-02-24 08:29:15 EST EAGLE 42.0.0

GTTSN      NETDOM  NDGT
atoi22     ansi     9

GTA table is (36 of 269999) 1% full.
;
tekelecstp 10-02-24 08:29:16 EST EAGLE 42.0.0

START GTA END GTA  XLAT  RI    ITUI PC
991001200 991001300 DPCNGT GT    7-001-4
          SSN=--- CCGT=no
          GTMODID=asetitu2 TESTMODE=off
          ACTSN=----- PPMEASREQD= NO

Command Retrieved 1 Entries
;
```

This example shows output when the ANSI/ITU SCCP Conversion feature is enabled and the PCTYPE parameter has a value of ITUN:

```
rtrv-gta:gttsn=aton21:pctype=itun

tekelecstp 10-02-24 08:29:15 EST EAGLE 42.0.0
```

```

GTTSN      NETDOM  NDGT
aton21     ansi    2

GTA table is (36 of 269999) 1% full.
;
tekelecstp 10-02-24 08:29:16 EST  EAGLE 42.0.0

START GTA  END GTA  XLAT  RI      ITUN PC
80         89      DPCSSN SSN    15441
          SSN=45  CCGT=no
          GTMODID=-----  TESTMODE=off
          ACTSN=-----  PPMEASREQD= NO

Command Retrieved 1 Entries
;

```

This example shows output when the ANSI/ITU SCCP Conversion feature is enabled and the PCTYPE parameter has a value of ITUN24:

```
rtrv-gta:gttsn=ntin24:pctype=itun24
```

```

tekelecstp 10-02-24 08:30:15 EST  EAGLE 42.0.0

GTTSN      NETDOM  NDGT
ntin24     itu     10

GTA table is (36 of 269999) 1% full.
;
tekelecstp 10-02-24 08:30:16 EST  EAGLE 42.0.0

START GTA  END GTA  XLAT  RI      ITUN24 PC
8006550000 8006551999 DPCSSN SSN    100-120-003
          SSN=255 CCGT=no
          GTMODID=asetitu24  TESTMODE=off
          ACTSN=-----  PPMEASREQD= NO

Command Retrieved 1 Entries
;

```

```
rtrv-gta:gttsn=setnat003
```

```

tekelecstp 10-02-24 08:29:15 EST  EAGLE 42.0.0

GTTSN      NETDOM  NDGT
setnat003  itu     6,11,21

GTA table is (10 of 269999) 1% full.
;
tekelecstp 10-02-24 08:29:16 EST  EAGLE 42.0.0

START GTA          END GTA          XLAT  RI      PC
123456            123456            DPCSSN GT  s-00128-aa

```

```

SSN=10 CCGT=no
GTMODID=asetnat6 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
234567          234567          DPCNGT GT   s-00124-aa
SSN=--- CCGT=no
GTMODID=asetnat3 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
234568          234568          DPC      GT   s-00124-aa
SSN=--- CCGT=no
GTMODID=asetnat7 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
234569          234569          DPC      GT   s-00124-aa
SSN=--- CCGT=no
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
12345678901     23456789012         DPCSSN SSN s-00124-aa
SSN=10 CCGT=no
GTMODID=asetnat4 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
334569467213456789012 334569478932012345678 DPC      GT   s-00124-aa
SSN=--- CCGT=no
GTMODID=asetnat4 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
987656789012345678901 987657321098765432101 DPCNGT GT   s-00124-aa
SSN=--- CCGT=no
GTMODID=asetnat9 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
987658321198765432101 987658321198765432101 DPCNGT GT   s-00128-aa
SSN=--- CCGT=no
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
987658321198765432102 990123456789012345678 DPCNGT GT   s-00124-aa
SSN=--- CCGT=no
GTMODID=asetnat1 TESTMODE=off
ACTSN=----- PPMEASREQD= NO

```

Command Retrieved 9 Entries

;

rtrv-gta:gttsn=setnat003:pcn=s-129-aa:gtmodid=id5

tekelecstp 10-02-24 08:29:15 EST EAGLE 42.0.0

```

GTTSN      NETDOM  NDGT
setnat003  itu      6,11,21

```

GTA table is (11 of 269999) 1% full.

;

tekelecstp 10-02-24 08:29:16 EST EAGLE 42.0.0

```

START GTA          END GTA          XLAT  RI      PC
987658321198765432102 987658321198765432102 DPCNGT GT   s-00129-aa

```

```
SSN=--- CCGT=no
GTMODID=setntt21 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
```

Command Retrieved 1 Entries

;

```
rtrv-gta:gttsn=setnat003:ssn=10
```

```
tekelecstp 10-02-24 08:29:15 EST EAGLE 42.0.0
```

```
GTTSN      NETDOM  NDGT
setnat003  itu      6,11,21
```

GTA table is (11 of 269999) 1% full.

;

```
tekelecstp 10-02-24 08:29:16 EST EAGLE 42.0.0
```

START GTA	END GTA	XLAT	RI	PC
123456	123456	DPCSSN	GT	s-00128-aa
SSN=10	CCGT=no			
GTMODID=gtmod21	TESTMODE=off			
ACTSN=-----	PPMEASREQD= NO			
12345678901	23456789012	DPCSSN	SSN	s-00124-aa
SSN=10	CCGT=no			
GTMODID=-----	TESTMODE=off			
ACTSN=-----	PPMEASREQD= NO			

Command Retrieved 2 Entries

;

```
rtrv-gta:gttsn=setnat003:gta=987658321198765432101:pcn=s-128-aa
```

```
tekelecstp 10-02-24 08:29:15 EST EAGLE 42.0.0
```

```
GTTSN      NETDOM  NDGT
setnat003  itu      6,11,21
```

GTA table is (11 of 269999) 1% full.

;

```
tekelecstp 10-02-24 08:29:16 EST EAGLE 42.0.0
```

START GTA	END GTA	XLAT	RI	PC
987658321198765432101	987658321198765432101	DPCNGT	GT	s-00128-aa
SSN=---	CCGT=no			
GTMODID=asetnat3	TESTMODE=off			
ACTSN=-----	PPMEASREQD= NO			

Command Retrieved 1 Entries

;

This example shows an MRN set. The Flexible GTT Load-Sharing and Intermediate GTT Load Sharing features are on and the GTT Action - Discard feature or GTT Action - Duplicate feature is enabled.

```
rtrv-gta:gttsn=setssnn

tekelecstp 10-02-104 09:49:42 EST EAGLE 42.0.0

GTTSN      NETDOM  NDGT
setssnn    ansi    10

GTA table is (1 of 269999) 1% full.
;
tekelecstp 10-02-104 09:49:43 EST EAGLE 42.0.0

START GTA  END GTA   XLAT   RI     PCA
111111111 111111111 DPC    GT     001-001-003
      MRNSET=1      SSN=---- CCGT=no
      GTMODID=asetans1  TESTMODE=off
      ACTSN=----- PPMEASREQD= NO

Command Retrieved 1 Entries
;
```

This example shows a MAP set. The Flexible GTT Load Sharing feature is enabled.

```
rtrv-gta:gttsn=tbla

tekelecstp 10-02-04 14:51:59 EST EAGLE 42.0.0

GTTSN      NETDOM  NDGT
tbla       ansi    6,10

GTA table is (3 of 269999) 1% full.
;
tekelecstp 10-02-04 14:52:00 EST EAGLE 42.0.0

START GTA  END GTA   XLAT   RI     PCA
234567     234567     DPCSSN GT     001-001-001
      MRNSET=DFLT  SSN=10   CCGT=no
      GTMODID=----- TESTMODE=off
      ACTSN=----- PPMEASREQD= NO
9810012345 9850012345 DPCSSN SSN    001-001-001
      MAPSET=DFLT  SSN=10   CCGT=no
      GTMODID=----- TESTMODE=off
      ACTSN=----- PPMEASREQD= NO

Command Retrieved 2 Entries
;
```

This example retrieves a CdPA GTA entry and an Advanced CdPA GTA entry when the OBSR feature is enabled.

```
rtrv-gta:gttsn=setcdpa

tekelecstp 10-03-10 09:49:42 EST EAGLE 42.0.0

GTTSN      NETDOM  SETTYPE  NDGT
setcdpa    itu     CDGTA    6
GTA table is (15 of 269999) 1% full.
;
tekelecstp 10-02-04 09:49:42 EST EAGLE 42.0.0

START GTA END GTA XLAT   RI      PC
106399   106489 DPCNGT  GT     1-200-1
        SSN=--- CCGT=no
        GTMODID=modset1  TESTMODE=off
        OPTSN=SETCG1    CGSELID=----- OPCSN=-----
        ACTSN=----- PPMEASREQD= NO
306399   306489 DPCNGT  GT     1-200-1
        SSN=--- CCGT=no
        GTMODID=modset3  TESTMODE=off
        OPTSN=CGPCSET01 CGSELID=----- OPCSN=OPCSET001
        ACTSN=----- PPMEASREQD= NO
400000   406489 NONE
        GTMODID=----- TESTMODE=off
        OPTSN=----- CGSELID=----- OPCSN=-----
        ACTSN=asetudts PPMEASREQD= NO
500000   506489 NONE
        GTMODID=----- TESTMODE=off
        OPTSN=----- CGSELID=----- OPCSN=-----
        ACTSN=asetdisc PPMEASREQD= NO
600001   600009 DPCSSN  SSN    -----
        SSN=125 CCGT=no
        GTMODID=modset5  TESTMODE=off
        OPTSN=----- CGSELID=65500 OPCSN=OPCSET001
        ACTSN=----- PPMEASREQD= NO

Command Retrieved 5 Entries
;
```

This example retrieves a CgPA GTA entry when the OBSR feature is enabled.

```
rtrv-gta:gttsn=setcgpa

tekelecstp 10-03-10 09:49:42 EST EAGLE 42.0.0

GTTSN      NETDOM  SETTYPE  NDGT
setcgpa    itu     CGGTA    6
GTA table is (15 of 269999) 1% full.
;
tekelecstp 10-02-04 09:49:43 EST EAGLE 42.0.0
```

```

START GTA END GTA XLAT RI PC
406399 406489 DPCNGT GT 1-200-1
SSN=--- CCGT=no
GTMODID=acdset3 TESTMODE=off
OPTSN=setcgssn1 CGSELID=-----
ACTSN=----- PPMEASREQD= NO
906399 906489 NONE
GTMODID=----- TESTMODE=off
OPTSN=----- CGSELID=-----
ACTSN=asetdisc PPMEASREQD= NO

```

Command Retrieved 2 Entries

;

This example retrieves a CgPA PC entry when the Origin Based SCCP Routing feature is enabled:

```
rtrv-gta:gttsn=setcgpc
```

```
tekelecstp 10-03-10 09:49:42 EST EAGLE 42.0.0
```

```

GTTSN NETDOM SETTYPE NDGT
setcgpc ansi CGPC -
GTA table is (5 of 269999) 1% full.

```

;

```
tekelecstp 10-02-24 09:49:42 EST EAGLE 42.0.0
```

```

CgPA PC XLAT RI PC
001-012-255 DPCNGT GT 1-200-1
SSN=--- CCGT=no
GTMODID=acgset3 TESTMODE=off
OPTSN=setcgssn2 CGSELID=-----
ACTSN=----- PPMEASREQD= NO
101-*-* DPCNGT GT 1-200-1
SSN=--- CCGT=no
GTMODID=acgset3 TESTMODE=off
OPTSN=setcgssn2 CGSELID=-----
ACTSN=----- PPMEASREQD= NO

```

Command Retrieved 2 Entries

;

This example retrieves an OPC entry when the OBSR feature is enabled:

```
rtrv-gta:gttsn=setopc
```

```
eagle1 10-05-10 11:14:52 EST EAGLE 42.0.0
```

```

GTTSN NETDOM SETTYPE NDGT
setopc ansi OPC -

```

GTA table is (3 of 269999) 1% full.

```

OPCA                XLAT  RI    PCA
001-001-001        DPC   GT    001-001-001
  SSN=--- CCGT=no
  GTMODID=set1      TESTMODE=off
  OPTSN=----- CGSELID=-----
  ACTSN=----- PPMEASREQD= NO

```

Command Retrieved 1 Entries

;

This example retrieves a CgPA SSN entry when the OBSR feature is enabled and an ITU Point Code is used:

```
rtrv-gta:gttsn=setssnn
```

eagle1 10-05-10 12:01:08 EST EAGLE 42.0.0

```

GTTSN      NETDOM  SETTYPE  NDGT
setcgssn2  itu     CGSSN    -

```

GTA table is (5 of 269999) 1% full.

```

START SSN          END SSN          XLAT  RI    ITU PC
9                9                DPCNGT GT    2-002-2
  SSN=--- CCGT=no
  GTMODID=----- TESTMODE=off
  OPTSN=----- CGSELID=-----
  ACTSN=----- PPMEASREQD= NO

```

Command Retrieved 1 Entries

;

This example shows output when the network domain is set to *cross*:

```
rtrv-gta:gttsn=ansiset1
```

tekelecstp 10-02-04 15:22:08 EST EAGLE 42.0.0

```

GTTSN      NETDOM  NDGT
ansiset1   cross   6

```

GTA table is (1 of 269999) 1% full.

;

tekelecstp 10-02-04 15:22:09 EST EAGLE 42.0.0

```

START GTA END GTA  XLAT  RI    PC
123456   123456  DPCSSN SSN    001-001-002
  SSN=110 CCGT=no
  GTMODID=----- TESTMODE=off

```



```
ACTSN=----- PPMEASREQD= NO
```

```
Command Retrieved 1 Entries
```

```
;
```

This example shows output when the Flexible GTT Load Sharing feature is enabled:

```
rtrv-gta:gttsn=tblb
```

```
tekelecstp 10-02-04 15:22:08 EST EAGLE 42.0.0
```

```
GTTSN      NETDOM  NDGT
tblb      ansi    6
```

```
GTA table is (6 of 269999) 1% full.
```

```
;
```

```
tekelecstp 10-02-04 15:22:09 EST EAGLE 42.0.0
```

```
START GTA END GTA  XLAT  RI    PCA
123456   123456   DPC   GT    003-003-003
          MRNSET=DFLT  SSN=--- CCGT=no
          GTMODID=gtmodset1  TESTMODE=off
          ACTSN=----- PPMEASREQD= NO
123457   123457   DPCSSN SSN    003-003-003
          MAPSET=DFLT  SSN=2   CCGT=no
          GTMODID=----- TESTMODE=off
          ACTSN=----- PPMEASREQD= NO
```

```
Command Retrieved 2 Entries
```

```
;
```

This example shows output when the Hex Digit Support for GTT feature is turned on and hexadecimal digits are provisioned in GTA values:

```
rtrv-gta:gttsn=setnat201
```

```
tekelecstp 10-02-24 13:39:28 EST EAGLE 42.0.0
```

```
GTTSN      NETDOM  NDGT
setnat201  itu     6,21
```

```
GTA table is (5 of 269999) 1% full.
```

```
;
```

```
tekelecstp 10-02-24 13:39:29 EST EAGLE 42.0.0
```

```
START GTA          END GTA          XLAT  RI    PC
100000             10000d          DPC   GT    00101
          SSN=--- CCGT=no
          GTMODID=anatset2  TESTMODE=off
          ACTSN=----- PPMEASREQD= NO
10000e             10000f          DPC   GT    00101
          SSN=--- CCGT=no
```

```

          GTMODID=----- TESTMODE=off
          ACTSN=----- PPMEASREQD= NO
100010          200000          DPC   GT   00101
          SSN=--- CCGT=no
          GTMODID=anatset4 TESTMODE=off
          ACTSN=----- PPMEASREQD= NO
abcdef0123456789abcdf fabcde01234567890afff DPCSSN SSN  00103
          SSN=10 CCGT=no
          GTMODID=----- TESTMODE=off
          ACTSN=----- PPMEASREQD= NO
fbcdef0123456789abcdf ffbfde01234567890aaff DPCSSN SSN  00103
          SSN=10 CCGT=no
          GTMODID=anatset5 TESTMODE=off
          ACTSN=----- PPMEASREQD= NO

```

Command Retrieved 5 Entries

;

This example shows output when the SCCP Loop Detection feature is enabled and an associated loopset exists:

```
rtrv-gta:gttsn=setssn:mapset=6
```

```
tekelecstp 10-02-04 09:50:42 EST EAGLE 42.0.0
```

```
GTTSN      NETDOM  NDGT
setssnn   ansi    10
```

GTA table is (42 of 269999) 1% full.

;

```
tekelecstp 10-02-04 09:50:42 EST EAGLE 42.0.0
```

```
START GTA  END GTA   XLAT  RI   PCA
111111111 1111111122 DPCSSN SSN   001-001-003
      MAPSET=6   SSN=2   CCGT=no
      GTMODID=----- TESTMODE=off
      LOOPSET = loop1
      ACTSN=----- PPMEASREQD= NO
```

Command Retrieved 1 Entries

;

This example shows output for a specified MRN set when the Flexible GTT Load Sharing feature is enabled:

```
rtrv-gta:gttsn=setans006:mrnset=1
```

```
tekelecstp 10-02-04 13:03:16 EST EAGLE 42.0.0
```

```
GTTSN      NETDOM  NDGT
```

```
setans006 ansi 10

GTA table is (8 of 269999) 1% full.
;
tekelecstp 10-02-04 13:03:16 EST EAGLE 42.0.0

START GTA END GTA XLAT RI PCA
1818510090 1918511241 DPC GT 001-001-003
MRNSET=1 SSN=--- CCGT=no
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO

Command Retrieved 1 Entries
;
```

This example shows output when calling party GT modification is requested for a GTT set:

```
rtrv-gta:gttsn=setans004:cggmod=yes
```

```
tekelecstp 10-02-24 16:57:00 EST EAGLE 42.0.0

GTTSN NETDOM NDGT
setans004 ansi 6

GTA table is (1 of 269999) 1% full.
;
tekelecstp 10-02-24 16:57:01 EST EAGLE 42.0.0

START GTA END GTA XLAT RI PC
981234 981234 DPCNGT GT 001-001-001
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=yes
GTMODID=aansset4 TESTMODE=off
ACTSN=----- PPMEASREQD= NO

Command Retrieved 1 Entries
;

rtrv-gta:gttsn=setans001
```

```
rtrv-gta:gttsn=setans001
e1040501 10-02-24 14:25:15 EST EAGLE 42.0.0

GTTSN NETDOM SETTYPE NDGT
setans001 ansi CDGTA 3,6

GTA table is (61 of 269999) 1% full.
;
e1040501 10-02-04 14:25:16 EST EAGLE 39.2.0

START GTA END GTA XLAT RI PCA
100 100 DPCSSN SSN 001-001-002
```

```
MAPSET=DFLT SSN=10 CCGT=no CGGTMOD=NO
GTMODID=gtmodset3 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
101 101 DPCSSN SSN 001-001-003
MAPSET=DFLT SSN=10 CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
104 104 DPCSSN SSN 001-001-003
MAPSET=DFLT SSN=10 CCGT=no CGGTMOD=NO
GTMODID=gtmodset1 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
105 105 DPCSSN SSN 001-001-003
MAPSET=1 SSN=14 CCGT=no CGGTMOD=NO
GTMODID=gtmodsetn TESTMODE=off
ACTSN=----- PPMEASREQD= NO
115 115 DPCSSN SSN 001-001-002
MAPSET=2 SSN=15 CCGT=no CGGTMOD=NO
GTMODID=gtmodset2 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
11111 11111 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
11112 11112 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=gtmodseti TESTMODE=off
ACTSN=----- PPMEASREQD= NO
11113 11113 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
11114 11114 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=gtmodset4 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
11115 11115 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
11116 11116 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
11117 11117 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
11118 11118 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=gtmodseti TESTMODE=off
ACTSN=----- PPMEASREQD= NO
11119 11119 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
```

```
111120 111120 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
111121 111121 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
111122 111122 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
111123 111123 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
111124 111124 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
111125 111125 DPC GT 001-001-002
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
```

Command Retrieved 20 Entries

;

rtrv-gta:gttsn=setans001:pc=1-1-3

e1040501 10-02-04 14:25:57 EST EAGLE 42.0.0

```
GTTSN NETDOM SETTYPE NDGT
setans001 ansi CDGTA 3,6
```

GTA table is (61 of 269999) 1% full.

;

e1040501 10-02-04 14:25:58 EST EAGLE 42.0.0

```
START GTA END GTA XLAT RI PCA
101 101 DPCSSN SSN 001-001-003
MAPSET=DFLT SSN=10 CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
104 104 DPCSSN SSN 001-001-003
MAPSET=DFLT SSN=10 CCGT=no CGGTMOD=NO
GTMODID=gtmodset5 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
105 105 DPCSSN SSN 001-001-003
MAPSET=1 SSN=14 CCGT=no CGGTMOD=NO
GTMODID=gtmodset4 TESTMODE=off
```

```
ACTSN=----- PPMEASREQD= NO
111260 111260 DPCSSN SSN 001-001-003
MAPSET=DFLT SSN=12 CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
111261 111261 DPCSSN SSN 001-001-003
MAPSET=DFLT SSN=12 CCGT=no CGGTMOD=NO
GTMODID=gtmodset4 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
111262 111262 DPCSSN SSN 001-001-003
MAPSET=DFLT SSN=12 CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
111263 111263 DPCSSN SSN 001-001-003
MAPSET=DFLT SSN=12 CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
111264 111264 DPCSSN SSN 001-001-003
MAPSET=DFLT SSN=12 CCGT=no CGGTMOD=NO
GTMODID=gtmodset7 TESTMODE=off
ACTSN=----- PPMEASREQD= NO
111265 111265 DPCNGT GT 001-001-003
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
111266 111266 DPCNGT GT 001-001-003
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
111267 111267 DPCNGT GT 001-001-003
MRNSET=DFLT SSN=--- CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=----- PPMEASREQD= NO
```

Command Retrieved 11 Entries

;

rtrv-gta:gttsn=setans002:ssn=10

e1040501 10-02-04 14:25:57 EST EAGLE 42.0.0

```
GTTSN      NETDOM  SETTYPE  NDGT
setans002  ansi     CDGTA    6
```

GTA table is (61 of 269999) 1% full.

;

e1040501 10-02-04 14:25:58 EST EAGLE 42.0.0

```
START GTA END GTA  XLAT  RI    PCA
222222  222229  DPCSSN SSN  001-001-002
MAPSET=DFLT SSN=10 CCGT=no CGGTMOD=NO
```

```

GTMODID=----- TESTMODE=off
OPTSN=----- CGSELID=----- CDSELID=-----
ACTSN=----- PPMEASREQD= NO
222232 222239 DPCSSN SSN 001-001-002
MAPSET=DFLT SSN=10 CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
OPTSN=----- CGSELID=----- CDSELID=-----
ACTSN=----- PPMEASREQD= NO
222242 222249 DPCSSN SSN 001-001-002
MAPSET=DFLT SSN=10 CCGT=no CGGTMOD=NO
GTMODID=----- TESTMODE=off
OPTSN=----- CGSELID=----- CDSELID=-----
ACTSN=----- PPMEASREQD= NO

```

Command Retrieved 3 Entries

;

rtrv-gta:gttsn=cgssnset1

e1040501 10-02-04 14:10:41 EST EAGLE 42.0.0

```

GTTSN      NETDOM  SETTYPE  NDGT
cgssnset1 ansi    CGSSN    -

```

GTA table is (50 of 269999) 1% full.

;

e1040501 10-02-04 14:10:42 EST EAGLE 42.0.0

START SSN	END SSN	XLAT	RI	PCA
1	1	DPC	SSN	001-001-002
MAPSET=2 SSN=0 CCGT=no CGGTMOD=NO				
GTMODID=----- TESTMODE=off				
ACTSN=----- PPMEASREQD= NO				
34	34	DPC	SSN	001-001-002
MAPSET=2 SSN=0 CCGT=no CGGTMOD=NO				
GTMODID=----- TESTMODE=off				
ACTSN=----- PPMEASREQD= NO				
100	100	DPC	SSN	001-001-002
MAPSET=2 SSN=0 CCGT=no CGGTMOD=NO				
GTMODID=----- TESTMODE=off				
ACTSN=----- PPMEASREQD= NO				
101	101	DPC	SSN	001-001-002
MAPSET=2 SSN=0 CCGT=no CGGTMOD=NO				
ACTSN=----- PPMEASREQD= NO				
GTMODID=----- TESTMODE=off				
102	102	DPC	SSN	001-001-002
MAPSET=2 SSN=0 CCGT=no CGGTMOD=NO				
GTMODID=----- TESTMODE=off				
ACTSN=----- PPMEASREQD= NO				
103	103	NONE		

```
MAPSET=2      MRNSET=DFLT
CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=actudts1  PPMEASREQD= YES
104           104           NONE
MAPSET=2      MRNSET=DFLT
CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=actdisc1 PPMEASREQD= NO
```

Command Retrieved 7 Entries

;

```
rtrv-gta:gttsn=cgssnset2:actsn=asetdisc1
```

```
e1040501 10-02-04 14:11:37 EST EAGLE 42.0.0
```

```
GTTSN      NETDOM  SETTYPE  NDGT
cgssnset2  ansi    CGSSN    -
```

GTA table is (51 of 269999) 1% full.

;

```
e1040501 10-02-04 14:11:38 EST EAGLE 42.0.0
```

```
START SSN      END SSN      XLAT  RI    PCA
105            105         NONE
MAPSET=2      MRNSET=DFLT
CGGTMOD=NO
GTMODID=----- TESTMODE=off
ACTSN=actdisc1 PPMEASREQD= NO
```

Command Retrieved 1 Entries

;

```
rtrv-gta:gttsn=cgssnset3
```

```
e1040501 10-02-04 14:25:57 EST EAGLE 42.0.0
```

```
GTTSN      NETDOM  SETTYPE  NDGT
cgssnset3  ansi    CGSSN    -
```

GTA table is (51 of 269999) 1% full.

;

```
e1040501 10-02-04 14:25:57 EST EAGLE 42.0.0
```

```
START SSN      END SSN      XLAT  RI    PCA
```


Command Retrieved no Entries

;

This example shows output when the OBSR feature is enabled and the FLOBR feature is turned on:

rtrv-gta:gttsn=setans006

tekelecstp 10-02-04 16:20:44 EST EAGLE 42.0.0

GTTSN	NETDOM	SETTYPE	NDGT
setans006	ansi	CDGTA	6

GTT TABLE IS 1 % FULL (3 of 269999)

;

tekelecstp 10-02-04 16:20:45 EST EAGLE 42.0.0

START GTA	END GTA	XLAT	RI	PCA
123456	123456	DPC	GT	001-001-002

MRNSET=NONE SSN=--- CCGT=no CCGTMOD=NO
 GTMODID=gtmod3 TESTMODE=on
 LOOPSET = none FALLBACK=Yes
 OPTSN=----- CGSELID=456 CDSELID=----- OPCS=setopc001
 ACTSN=----- PPMEASREQD= NO

;

This example retrieves a CdPA SSN entry when the FLOBR feature is enabled:

rtrv-gta:gttsn=setcdssn

tekelecstp 10-03-10 09:49:42 EST EAGLE 42.0.0

GTTSN	NETDOM	SETTYPE	NDGT
setcdssn	itu	CDSSN	-

GTT TABLE IS 1 % FULL (5 of 269999)

;

tekelecstp 10-03-10 09:49:42 EST EAGLE 42.0.0

START SSN	END SSN	XLAT	RI	PC
100	200	DPCNGT	GT	1-200-1

SSN=0 CCGT=no
 GTMODID=gtmod3 TESTMODE=on
 FALLBACK=sysdflt CGCNVSN=-----
 OPTSN=----- CGSELID=----- CDSELID=-----
 ACTSN=----- PPMEASREQD= NO

Command Retrieved 1 Entries

;

This example retrieves an OPCODE entry when the TOBR feature is turned on:

```
rtrv-gta:gttsn=opcode2
```

```
tekelecstp 16-11-07 14:13:13 MST EAGLE 46.5.0.0.0-70.5.0
```

```
GTTSN      NETDOM  SETTYPE  NPSN    CHECKMULCOMP  NDGT
opcode2    itu      OPCODE   -----      YES            -
```

GTA table is (3 of 269999) 1% full.

```
FAMILY      OPCODE      PKGTYPE      XLAT  RI  PC
ACN          OPCODE      PKGTYPE      XLAT  RI  PC
1-2-3        5            cnt           DPC   GT  3-003-3
SSN=0      CCGT=no
GTMODID=----- TESTMODE=off
FALLBACK=sysdflt CGCNVSN=-----
OPTSN=----- CGSELID=----- CDSELID=----- OPCSN=-----
ACTSN=----- PPMEASREQD= NO
CGPCACTION=dfmt
DEFMAPVR=v3
PRIO=1024
OPCODETAG=local
```

Command Retrieved 1 Entries

```
;
```

This example retrieves an OPCODE entry when the TOBR feature is turned on:

```
rtrv-gta:gttsn=opcode1
```

```
tekelecstp 16-11-07 14:13:13 MST EAGLE 46.5.0.0.0-70.5.0
```

```
GTTSN      NETDOM  SETTYPE  NPSN    CHECKMULCOMP  NDGT
opcode1    ansi    OPCODE   -----      YES            -
```

GTA table is (2 of 269999) 1% full.

```
FAMILY      OPCODE      PKGTYPE      XLAT  RI  PC
7            4            qwp           DPC   GT
002-002-002
SSN=0      CCGT=no
GTMODID=----- TESTMODE=off
FALLBACK=sysdflt
OPTSN=----- CGSELID=----- CDSELID=----- OPCSN=-----
ACTSN=----- PPMEASREQD= NO
CGPCACTION=dfmt
DEFMAPVR=v3
PRIO=1024
ACN          OPCODE      PKGTYPE      XLAT  RI  PC
```

```
Command Retrieved 1 Entries
;
```

This example retrieves a DPC entry when the FLOBR feature is turned on:

```
rtrv-gta:gttsn=setdpc1
```

```
tekelecstp 10-03-08 11:23:49 EST EAGLE 42.0.0
```

```
GTTSN      NETDOM  SETTYPE  NDGT
setdpc1    ansi    DPC      -
```

```
GTA table is (2 of 269999) 1% full.
```

```
DPCA          XLAT  RI      PCA
001-001-001   DPC   GT      001-001-001
SSN=--- CCGT=no
GTMODID=----- TESTMODE=off
FALLBACK=sysdflt
OPTSN=----- CGSELID=----- CDSELID=-----
ACTSN=----- PPMEASREQD= NO
```

```
Command Retrieved 1 Entries
;

rtrv-gta:gttsn=setcdgta:xlat=none:gtmodid=gttid1
```

```
e1040501 10-02-04 14:25:57 EST EAGLE 42.0.0
```

```
GTTSN      NETDOM  NDGT
setcdgta   ansi    6
```

```
GTA table is (1 of 269999) 1% full.
```

```
;

e1040501 10-02-04 14:25:57 EST EAGLE 42.0.0
```

```
START GTA END GTA  XLAT  RI      PC
981234   981234  NONE
CGGTMOD=YES
GTMODID=gttid1    TESTMODE=off
LOOPSET = none
ACTSN=actudts1   PPMEASREQD= YES
```

```
Command Retrieved 1 Entries

rtrv-gta:gttsn=setcdgta:mapset=1:mrnset=2:xlat=none
```

```
tekelecstp 10-05-04 14:25:57 EST EAGLE 42.0.0
```

```

GTTSN      NETDOM  NDGT
setcdgta   ansi    6
GTA table is (1 of 269999) 1% full.
;
tekelecstp 10-05-04 14:25:57 EST  EAGLE 42.0.0

START GTA END GTA  XLAT  RI    PC
981234    981234    NONE
      MAPSET=1    MRNSET=2
      CGGTMOD=NO
      GTMODID=gttid1    TESTMODE=off
      LOOPSET = none
      ACTSN=actudts1  PPMEASREQD= YES

Command Retrieved 1 Entries

```

This entry retrieves the 16 bit PC entries and `cgpcaction` parameter added.

```
rtrv-gta:gttsn=abc:cgpcaction=dflt
```

```

tekelecstp 13-07-02 13:10:20 EST  45.0.0-64.69.0
rtrv-gta:gttsn=abc:cgpcaction=dflt
Command entered at terminal #4.

```

```

GTTSN      NETDOM  SETTYPE  NDGT
abc        itu     CGPC      -

```

```
GTA table is (1 of 269999) 1% full.
```

```

CGPC (ITU)          XLAT  RI    ITU PC
001-01-01          dpc   ssn   001-02-03
      MAPSET=dflt  SSN=--- CCGT=no
      GTMODID=----- TESTMODE=off
      OPTSN=----- CGSELID=-----
      ACTSN=----- PPMEASREQD= no
      CGPCACTION=dflt
Command Retrieved 1 Entries

```

```
;
```

The following output shows a GTA entry for a SETTYPE of IMSI:

```
rtrv-gta:gttsn=setimsi
```

```

tekelecstp 15-11-06 17:51:27 EST  EAGLE5 46.3.0.0.0-66.14.0
rtrv-gta:gttsn=setimsi
Command entered at terminal #17.

```

```
;
```

```
Command Accepted - Processing
```

```

tekelecstp 15-11-06 17:51:27 EST EAGLE5 46.3.0.0.0-66.14.0

GTTSN      NETDOM  SETTYPE  NPSN      NDGT
setimsi    itu      IMSI     - - - - - 6

GTA table is (17 of 269999) 1% full.

;
tekelecstp 15-11-06 17:51:27 EST EAGLE5 46.3.0.0.0-66.14.0

SADDR      EADDR      XLAT      RI         ITU PC
123456     123456     dpc       gt         1-001-6
          SSN=--- CCGT=no
          GTMODID=----- TESTMODE=off
          FALLBACK=sysdflt
          OPTSN=setop      CGSELID=----- CDSELID=-----
          ACTSN=----- PPMEASREQD= no
          CGPCACTION=dflt

Command Retrieved 1 Entries

;

```

The following output shows a GTA entry for a SETTYPE of VLRNB:

```
rtrv-gta:gttsn=setvlr
```

```

tekelecstp 15-11-06 18:01:48 EST EAGLE5 46.3.0.0.0-66.14.0
rtrv-gta:gttsn=setvlr
Command entered at terminal #17.

;

Command Accepted - Processing
tekelecstp 15-11-06 18:01:48 EST EAGLE5 46.3.0.0.0-66.14.0

GTTSN      NETDOM  SETTYPE  NPSN      NDGT
setvlr     itu      VLRNB   - - - - - 6

GTA table is (17 of 269999) 1% full.

;
tekelecstp 15-11-06 18:01:48 EST EAGLE5 46.3.0.0.0-66.14.0

SADDR      EADDR      XLAT      RI         ITU PC
987654     987654     dpc       gt         1-001-7
          SSN=--- CCGT=no
          GTMODID=----- TESTMODE=off
          FALLBACK=sysdflt
          OPTSN=setcgssn CGSELID=----- CDSELID=-----
          ACTSN=----- PPMEASREQD= no
          CGPCACTION=dflt

Command Retrieved 1 Entries

```

;

The following output shows a GTA entry for a SETTYPE of SMRPOA:

```
rtrv-gta:gttsn=setsmrpo
```

```
tekelecstp 15-11-06 18:02:58 EST EAGLE5 46.3.0.0.0-66.14.0
rtrv-gta:gttsn=setsmrpo
Command entered at terminal #17.
```

;

```
Command Accepted - Processing
```

```
tekelecstp 15-11-06 18:02:58 EST EAGLE5 46.3.0.0.0-66.14.0
```

GTTSN	NETDOM	SETTYPE	NPSN	NDGT
setsmrpo	itu	SMRPOA	-----	6

```
GTA table is (17 of 269999) 1% full.
```

;

```
tekelecstp 15-11-06 18:02:58 EST EAGLE5 46.3.0.0.0-66.14.0
```

SADDR	EADDR	XLAT	RI	ITU PC
132456	132456	dpc	gt	1-001-6

```
SSN=--- CCGT=no
GTMODID=----- TESTMODE=off
FALLBACK=sysdflt
OPTSN=----- CGSELID=----- CDSELID=-----
ACTSN=----- PPMEASREQD= no
CGPCACTION=dflt
```

```
Command Retrieved 1 Entries
```

;

The following output shows a GTA entry for a SETTYPE of IMEI:

```
rtrv-gta:gttsn=imeil
```

```
tekelecstp 17-06-21 11:21:24 MST EAGLE 46.6
rtrv-gta:gttsn=imeil
Command entered at terminal #17.
```

GTTSN	NETDOM	SETTYPE	NPSN	CHECKMUL COMP	SETIDX	GTTSET MEASRQD
SXUDT NDGT imeil	itu	IMEI	-----	---	1	no
-	6					

```
GTA table is (4 of 269999) 1% full.
```

;

tekelecstp 17-06-21 11:21:24 MST EAGLE 46.6

```
SADDR      EADDR      XLAT  RI      ITU PC
123456     123456     dpcssn gt      5-005-1
          SSN=5    CCGT=no
          GTMODID=----- TESTMODE=off
          FALLBACK=sysdflt
          OPTSN=----- CGSELID=----- CDSELID=-----
          ACTSN=----- PPMEASREQD=no TRANSMEASRQD=no
          CGPCACTION=dflt
```

Command Retrieved 1 Entries

;

This example shows different combination of PKGTYPE, ACN, FAMILY AND OPCODE:

r trv-gta:gttsn=opc:pkgtype=bgn

tekelecstp 17-05-09 05:01:25 EST EAGLE 46.6

```
rtrv-gta:gttsn=opc:pkgtype=bgn
Command entered at terminal #4.
```

```
                                CHECKMUL      GTTSET
GTTSN      NETDOM  SETTYPE  NPSN      COMP      SETIDX  MEASRQD  SXUDT  NDGT
opc        ansi   OPCODE   -----  off       15     trans   yes   -
```

GTA table is (3 of 269999) 1% full.

```
FAMILY                                OPCODE  PKGTYPE  XLAT  RI      PCA
ACN                                OPCODE  PKGTYPE  XLAT  RI      PCA
4-0-0-1-0-1-2                      57      bgn      none
          GTMODID=----- TESTMODE=off
          FALLBACK=sysdflt
          OPTSN=----- CGSELID=----- CDSELID=----- OPCSN=-----
          ACTSN=----- PPMEASREQD= no TRANSMEASRQD=no
          CGPCACTION=dflt
          DEFMAPVR=v3
          PRIO = 1024
          OPCODETAG=any

4-0-0-1-0-1-3                      2       bgn      none
          GTMODID=----- TESTMODE=off
          FALLBACK=sysdflt
          OPTSN=----- CGSELID=----- CDSELID=----- OPCSN=-----
          ACTSN=----- PPMEASREQD= no TRANSMEASRQD=yes
          CGPCACTION=dflt
          DEFMAPVR=v3
          PRIO = 1024
          OPCODETAG=any

Any                                45      bgn      none
          GTMODID=----- TESTMODE=off
```

```
FALLBACK=sysdflt
OPTSN=----- CGSELID=----- CDSELID=----- OPCSN=-----
ACTSN=----- PPMEASREQD= no TRANSMEASRQD=no
CGPCACTION=dflt
DEFMAPVR=v3
PRIO = 2
OPCODETAG=any
```

Command Retrieved 3 Entries

;

rtrv-gta:gttsn=opc:opcode=57

tekelecstp 17-05-09 05:02:07 EST EAGLE 46.6

rtrv-gta:gttsn=opc:opcode=57

Command entered at terminal #4.

GTTSN	NETDOM	SETTYPE	NPSN	CHECKMUL COMP	GTTSET SETIDX	MEASRQD
opc	itu	OPCODE	-----	off	2	yes
no	-					

GTA table is (3 of 269999) 1% full.

FAMILY	OPCODE	PKGTYPE	XLAT	RI	PCI
5	57	any	none		

```
GTMODID=----- TESTMODE=off
FALLBACK=sysdflt
OPTSN=----- CGSELID=----- CDSELID=----- OPCSN=-----
ACTSN=----- PPMEASREQD= no TRANSMEASRQD=yes
CGPCACTION=dflt
DEFMAPVR=v3
PRIO = 1024
```

ACN	OPCODE	PKGTYPE	XLAT	RI	PCI
any	57	none	none		

```
GTMODID=----- TESTMODE=off
FALLBACK=sysdflt
OPTSN=----- CGSELID=----- CDSELID=----- OPCSN=-----
ACTSN=----- PPMEASREQD= no TRANSMEASRQD=yes
CGPCACTION=dflt
DEFMAPVR=v3
PRIO = 5
OPCODETAG=any
```

4-9	57	end	dpc	GT
2-1-1				

```
GTMODID=----- TESTMODE=off
FALLBACK=sysdflt
OPTSN=----- CGSELID=----- CDSELID=----- OPCSN=-----
ACTSN=----- PPMEASREQD= no TRANSMEASRQD=no
```



```

CGPCACTION=dfлт
DEFMAPVR=v3
PRIO = 1024
OPCODETAG=any

any          57          cnt          none
GTMODID=----- TESTMODE=off
FALLBACK=sysdfлт
OPTSN=----- CGSELID=----- CDSELID=----- OPCSН=-----
ACTSN=----- PPMEASREQD= no TRANSMEASRQD=yes
CGPCACTION=dfлт
DEFMAPVR=v3
PRIO = 5
OPCODETAG=any

```

Command Retrieved 4 Entries

;

rtrv-gta:gttsn=opc:acn=*:opcode=57

tekelecstp 17-05-09 05:02:39 EST EAGLE 46.6

rtrv-gta:gttsn=opc:acn=*:opcode=57

Command entered at terminal #4.

GTTSN	NETDOM	SETTYPE	NPSN	CHECKMUL	SETIDX	GTTSET	MEASRQD	SXUDT	NDGT
opc	itu	OPCODE	-----	off	3	yes	yes		-

GTA table is (3 of 269999) 1% full.

FAMILY	ACN	OPCODE	PKGTYPE	XLAT	RI	PCA
	any	57	none	none		

```

GTMODID=----- TESTMODE=off
FALLBACK=sysdfлт
OPTSN=----- CGSELID=----- CDSELID=----- OPCSН=-----
ACTSN=----- PPMEASREQD= no TRANSMEASRQD=yes
CGPCACTION=dfлт
DEFMAPVR=v3
PRIO = 5
OPCODETAG=any

```

```

any          57          cnt          none
GTMODID=----- TESTMODE=off
FALLBACK=sysdfлт
OPTSN=----- CGSELID=----- CDSELID=----- OPCSН=-----
ACTSN=----- PPMEASREQD= no TRANSMEASRQD=yes
CGPCACTION=dfлт
DEFMAPVR=v3
PRIO = 5
OPCODETAG=any

```

Command Retrieved 2 Entries

```
;
rtrv-gta:gttsn=opcode2:opcodetag=local
tekelecstp 16-11-07 14:13:13 MST EAGLE 46.5.0.0-70.5.0
```

GTTSN	NETDOM	SETTYPE	NPSN	CHECKMULCOMP	NDGT
opcode2	itu	OPCODE	-----	YES	-

GTA table is (3 of 269999) 1% full.

FAMILY	OPCODE	PKGTYPE	XLAT	RI	PC
ACN	OPCODE	PKGTYPE	XLAT	RI	PC
1-2-3	5	cnt	DPC	GT	3-003-3

```
SSN=0 CCGT=no
GTMODID=----- TESTMODE=off
FALLBACK=sysdflt CGCNVSN=-----
OPTSN=----- CGSELID=----- CDSELID=----- OPCS=-----
ACTSN=----- PPMEASREQD= NO
CGPCACTION=dflt
DEFMAPVR=v3
PRIO=1024
OPCODETAG=local
```

Command Retrieved 1 Entries

```
;
```

Legend

- **GTTSN**—GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.
- **NETDOM**—The network domain.
- **NDGT**—The number of digits required for GTAs associated with this set.
- **START GTA**—The start global title address.
- **END GTA**—The end global title address.
- **XLAT**—The translate indicator.
- **RI**—The routing indicator.
- **PC, PCA, ITU PC, ITUI PC, ITUN PC, ITUN24, ITUN16 PC**—Translated point code.
- **SSN**—The translated subsystem number.
- **CCGT**—The cancel called global title indicator.
- **MRN**—Mated Relay Node
- **MRNSET**—MRN set ID
- **MAPSET**—MAP set ID
- **CGGTMOD**—Calling Party Global Title Modification Indicator

- **ACTSN**—GTT Action Set Name
- **GTMODID**—Global Title Modification Identifier
- **PPMEASREQD**—Per Path Measurement Required
- **OPCODE**—TCAP opcode field
- **OPCODETAG** – ITU TCAP Operation Code Tag field.
- **ACN**—Application context name. ITU TCAP *acn* field.
- **PKGTYPE**—TCAP package type
- **FAMILY**—ANSI TCAP *family* field
- **TESTMODE**—Invokes a Test Tool to debug the FLOBR/TOBR rules
- **DPC**—Destination point code
- **CGPC**—CgPa point code
- **OPC**—Originating point code
- **NPSN**—Not present set name
- **SADDR**—Start of MAP digits (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA)
- **EADDR**—End of MAP digits (IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA)
- **DEFMAPVR**—Default MAP version
- **PRIO**—Priority of each translation of the type OPCODE GTTSET
- **TRANSMEASRQD**—Per GTT Translation Measurement Required

Related Topics

- [chg-gta](#)
- [dlt-gta](#)
- [ent-gta](#)

4.1.494 rtrv-gtcnv

Use this command to display entries in the Default Global Title Conversion table.

Parameters

dir (optional)

Direction of conversion.

Range:

atoi

ANSI to ITU conversion

itoa

ITU to ANSI conversion

both

Conversion in both directions

gtixlat (optional)

Global title indicator conversion. This parameter is expressed in the form of the ANSI GTI and the ITU GTI.

Range:**22**

Converts an incoming ANSI GTI 2 to an outgoing ITU GTI 2 or an incoming ITU GTI 2 to an outgoing ANSI GTI 2

24

Converts an incoming ANSI GTI 2 to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI 2

nai (optional)

Nature of address indicator.

Range:

0 - 63, *

np (optional)

Numbering plan.

Range:

0 - 15, *

tta (optional)

ANSI translation type.

Range:

0 - 255, *

tti (optional)

ITU translation type.

Range:

0 - 255, *

Example

```
rtrv-gtcnv
```

Dependencies

The ANSI/ITU SCCP Conversion feature must be enabled before the command can be entered.

4171 E4171 Cmd Rej: SCCP Conversion feature must be enabled

Notes

None

Output

This example displays output containing decimal global title digits:

```
rtrv-gtcnv
```

```
tekelecstp 06-11-07 13:44:12 EST EAGLE 35.3.0
```

```
DIR  GTIXLAT  TTA  TTI  NP  NAI  DEL  POS  ADD
atoi  22    10  5   --- ---  10  pfx  123
```

```
GTCNV  table is (1 of 1000) 1% full.
```

```
;
```

This example shows output containing hexadecimal global title digits:

```
rtrv-gtcnv
```

```
tekelecstp 06-11-07 11:52:58 EST EAGLE 35.3.0
```

```
DIR  GTIXLAT  TTA  TTI  NP  NAI  DEL  POS  ADD
atoi  22    1  3   --- ---  ---  pfx  abcdef0123456789abcdef
itoa  24    5  6   2  1   ---  sfx  abcdef0123456789abcef
```

```
GTCNV  table is (2 of 1000) 1% full.
```

```
;
```

Legend

- **DIR**—Direction of the translation: ANSI to ITU or ITU to ANSI
- **GTIXLAT**—GTI translation
- **TTA**—ANSI translation type
- **TTI**—ITU translation type
- **NP**—Numbering plan
- **NAI**—Nature of address indicator
- **DEL**—Deletion status, listing the number of incoming MSUs that will be deleted prior to translation
- **POS**—Prefix or Suffix
- **ADD**—Global title address

Related Topics

- [chg-gtcnv](#)
- [dlt-gtcnv](#)
- [ent-gtcnv](#)

4.1.495 rtrv-gtmod

Use this command to display entries from the GTMOD table. A GTMOD entry consists of a GTMOD ID and GTMOD specific data.

Parameters

 **Note:**

Definitions for the feature options specified by the `on` and `off` parameters are located in the Notes section.

cgpasnn (optional)

Calling Party Subsystem number. The calling party subsystem address that receives the message.

Range:

002 - 255

gtmodid (optional)

GT Modification Identifier.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

ngti (optional)

New Global Title Indicator. This parameter specifies whether a new GTI translation format is type 2 or type 4.

Range:

2

4

none

nnaai (optional)

New nature of address indicator. The value used to replace the received NNAI.

Range:

0 - 127, *none*

nnp (optional)

New numbering plan. The value used to replace the received numbering plan.

Range:

0 - 15, *none*

npdd (optional)

Number of prefix digits to be deleted. The number of digits to be deleted from the prefix of the received GT address.

Range:

1 - 21, *none*

npds (optional)

New prefix digits string. The digits to be prefixed to the received GT address.

Range:

1 - 21 digits, *none*

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9 .

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F .

Default:

Display all

nsdd (optional)

Number of suffix digits to be deleted. The number of digits to be deleted from the suffix of the received GT address.

Range:

1 - 21, *none*

nsds (optional)

New suffix digits string. The digits to be suffixed to the received GT address.

Range:

1-21 digits, *none*

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9 .

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F .

ntt (optional)

New Translation Type. The value that is used to replace the received Translation Type.

Range:

0 - 255, *none*

off (optional)

Disables or turns off the specified feature options. A comma-separated list of feature options that are requested to be turned off. Up to 8 feature options can be specified in the list.

Range:

gt0fill

on (optional)

Enables or turns on the specified feature options. A comma-separated list of feature options that are requested to be turned on. Up to 8 feature options can be specified in the list.

Range:

gt0fill

refcnt

precd (optional)

Precedence. This parameter specifies whether the prefix or suffix takes precedence when modifying the received GT address

Range:

pfx

sfx

Example

```
rtrv-gtmod:gtmodid=id2
rtrv-gtmod:npdd=5:on=refcnt
rtrv-gtmod:nsdd=10:precd=sfx:nnai=2:nnp=5
rtrv-gtmod:ngti=4:on=gt0fill:cgpasnn=12
```

Dependencies

The GTMOD table is corrupt or cannot be found.

5284 E5284 Cmd Rej: Failed reading GTMOD table

The Hex Digit Support for GTT feature must be turned on before hexadecimal digits can be specified for the *npds* and *nsds* parameters.

3006 E3006 Cmd Rej: Hex Digit Support for GTT feature must be ON

The *gtmodid=none* parameter cannot be specified.

5292 E5292 Cmd Rej: GTMODID must not be specified as NONE

If the *gtmodid* parameter is specified, then the *on=refcnt* parameter is the only other parameter that can be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The value specified for the *gtmodid* parameter must already exist in the GTMOD table.

5285 E5285 Cmd Rej: GTMODID does not exist

The same value cannot be specified for the *on* and *off* parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

Notes**on/off options**

- *gt0fill* —GT zero fill. Specifies whether the last 0 of the GTA is treated as a valid digit (OFF) or as filler (ON) during GT Modification for the *gti(x)=2* to *gti(x)=4* scenario.
- *refcnt* —Reference count. Specifies the number of entries in the GTT Table that references the GTMOD entry. This option is ON only.

Output

rtrv-gtmod

tekelecstp 10-02-10 14:43:31 EST EAGLE 42.0.0

GTMODID	NTT	NGTI	GT0FILL	NNP	NNAI	NPDD	NSDD	PRECD	CGPASSN
set1	--	--	OFF	0	--	--	--	PFX	254
	NPDS=		NSDS=						
set2	--	4	ON	12	3	3	11	SFX	--
	NPDS=01234567890			NSDS=0987654321					

GTMOD table is (2 of 100000) 1% full.

;

rtrv-gtmod:on=refcnt

tekelecstp 10-02-10 14:43:31 EST EAGLE 42.0.0

GTMODID	NTT	NGTI	GT0FILL	NNP	NNAI	NPDD	NSDD	PRECD	CGPASSN
set1	5	4	OFF	0	--	--	--	PFX	
254	5		NPDS=						
	NPDS=		NSDS=						
set2	--	4	ON	12	3	3	11		
SFX	0		NPDS=01234567890						
	NPDS=01234567890			NSDS=0987654321					

GTMOD table is (2 of 100000) 1% full.

;

rtrv-gtmod:on=gt0fill,refcnt

tekelecstp 10-02-18 14:43:31 EST 42.0.0

GTMODID	NTT	NGTI	GT0FILL	NNP	NNAI	NPDD	NSDD	PRECD	CGPASSN
id1	--	--	ON	0	--	--	--		
PFX	0		NPDS=						
	NPDS=		NSDS=						

GTMOD TABLE IS (1 of 100000) 1 % FULL

;

Legend**AMGTT**—Advanced GT Modification**GT0FILL**—Indicates whether a trailing 0 in the GTA is considered as a valid digit or a filler**NGTI**—New Global Title Indicator**NNP**—New Numbering Plan

NNAI—New Nature of Address Indicator

NPDD—New Prefix Digits to be Deleted

NPDS—New Prefix Digits String

NSDD—New Suffix Digits to be Deleted

NSDS—New Suffix Digits String

PC—Point Code

Related Topics

- [chg-gtmod](#)
- [dlt-gtmod](#)
- [ent-gtmod](#)

4.1.496 rtrv-gtt

Use this command to show one or more entries from the GTT Data and the Translation Type tables. The report contains two records (the percentage full and number-of-cells-used field) that give the total entries in the GTT table without regard to the *type* parameter specified.

Note:

If the EGTT feature is turned on, then the GTT Selector (`ent/chg/dlt/rtrvgtttsel`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrvgta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. It is not recommended to run `ent/dlt/rtrv-tt & ent/chg/dlt/rtrv-gtt` commands as it may cause the advance GTA fields of GTT entry to be reset to the default values.

Parameters

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

cggtmod (optional)

Calling party global title modification indicator. This parameter displays all translation entries that have the specified value of the calling party GT modification indicator.

Range:

yes

no

egta (optional)

End global title address. This parameter specifies the end of a range of global title digits.

Range:

1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

Default:

If the `gta` parameter is specified, the `egta` parameter default value is the specified `gta` parameter value.

force (optional)

This parameter allows the user to display more than 1000 entries. This parameter is used to prevent inadvertent displays of extremely large amounts of information, which could take many hours.

Range:

yes

no

Default:

no

gta (optional)

Global title start address. The beginning of a range of global title digits.

Range:

1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

Default:

The first GTT entry for the given translation type.

gtmodid (optional)

Global Title Modification Identifier.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

loopset (optional)

SCCP loopset name. This parameter retrieves translation entries that are associated with the specified loopset.

Range:*ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters.

none —Translation entries with no association to any loopset.**mapset (optional)**

MAP set ID.

Range:*1 - 36000, dflt**dflt* —Default MAP set**mrnset (optional)**

MRN set ID. This parameter retrieves GTT information for a specified Mated Relay Node set.

Range:*1 - 3000, dflt, none**dflt* —Default MRN set*none* —The GTA translation does not participate in any loadsharing.**num (optional)**

The number of entries to be shown.

Range:*1 - 1000000**1-1000* —if *force=yes* is not specified*1-1000000* —if *force=yes* is specified**Default:***1* —if *gta* is specified*20* —if *gta* is not specified**pc (optional)**ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).**Synonym:***pca***Range:***p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix-p-*When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.The point code *000-000-000* is not a valid point code.**Default:**

Display all

pc/pca/pci/pcn/pcn24 (optional)

Point code.

pci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

Default:

Display all

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:

s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Default:

Display all

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000-255

ssa—000-255

sp—000-255

Default:

Display all

pctype (optional)

Point code type. This parameter retrieves a single type of point code among mixed types of point code provisioned for a Translation Type.

Range:

ansi

itui

itun

itun24

ituis

ituns

Default:

Display all

ssn (optional)

Subsystem number. The subsystem address that is to receive the message.

Range:

002 - 255

Default:

Display all

ttn (optional)

Translation name.

Range:

ayyyyyyy

1 alphabetic character followed by up to 8 alphanumeric characters

Default:

None given

type/typeea/typei/typen/typen24/typeis/typens (optional)

Translation type identifies the translation type and network type. This parameter is the decimal representation of the 1-byte field used in SS7.

The *type* and *typea* parameters specify an ANSI network.

The *typei* parameter specifies an ITU-international network.

The *typen* parameter specifies an ITU-national network.

The *typen24* parameter specifies a 24-bit ITU-national network.

The *typeis* parameter specifies an ITU-international spare network.

The *typens* parameter specifies an ITU-national spare network.

A translation type numeric value may be entered as ANSI type (*type* or *typea*) and as an ITU type (*typei/typen/typen24/typeis/typens*). However, they are separate entities.

The point code domain translation types for GTT are handled by the EAGLE protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I spare, ITU-N, ITU-N spare, and ITU-N24.

Range:

0 - 255

Default:

None given

Example

```

rtrv-gtt:type=5:ttn=lidb1:gta=919555
rtrv-gtt:type=5:gta=919555
rtrv-gtt:type=5:gta=919555:num=2500:force=yes
rtrv-gtt:typen24=0
rtrv-gtt:typei=7:pctype=ansi
rtrv-gtt:typen=106:pctype=itui
rtrv-gtt:type=55:pctype=itun
rtrv-gtt:type=9:pctype=itun24
rtrv-gtt:typei=4:pci=s-1-24-1
rtrv-gtt:typen=3:pcn=s-124
rtrv-gtt:ttn=tbla
rtrv-gtt:ttn=tbla:mapset=1
rtrv-gtt:type=4:cggmod=yes
rtrv-gtt:ttn=ituset:gtmodid=set1
rtrv-gtt:typens=5:gta=123456
rtrv-gtt:typeis=5:gta=123456

```

Dependencies

The ANSI/ITU SCCP Conversion feature must be enabled before the `pctype` parameter can be specified.

4171 E4171 Cmd Rej: SCCP Conversion feature must be enabled

If the `pcn` parameter is specified, its format must match the format that was assigned with the `chg-stpopts:npcfmti` parameter.

2997 E2997 Cmd Rej: PC must match NPCFMTI set in CHG-STPOPTS

The first character of the translation name must be a letter.

2041 E2041 Cmd Rej: String pattern nonconformance, alphabetic - <parm>

The value of the `tt` parameter must exist in the Translation Type table.

2466 E2466 Cmd Rej: Translation Type specified does not exist

The value specified for the `tt` parameter must correspond to a value of the `type/typea/typei/typen/typen24/typeis/typens` parameter (see the `ent/chg-gtt` command).

2473 E2473 Cmd Rej: TTN and TYPE do not correspond to each other

If the value of the `num` parameter exceeds 1000, then the `force=yes` parameter must be specified.

2423 E2423 Cmd Rej: FORCE=YES must be specified for NUM greater than 1000

The `type` or `ttn` parameter must be specified.

2475 E2475 Cmd Rej: Either TYPE or TTN must be specified

The value of the `pc/pca/pci/pcn/pcn24` parameter must be a full point code.

2859 E2859 Cmd Rej: Destination address must be a full point code

If the `egta` parameter is specified, the `gta` parameter must be specified.

2409 E2409 Cmd Rej: EGTA cannot be specified without GTA

If the system is defined as an ANSI system, the `pc/pca` parameter must be specified as a valid ANSI point code.

2169 E2169 Cmd Rej: Point code out of range

The ANSI/ITU SCCP Conversion feature must be enabled before a translated point code and a translation type in different network types can be specified.

2470 E2470 Cmd Rej: Point Code network type does not match TT network type

The number of digits in the specified `gta` parameter must be at least the number of digits provisioned for the given translation type. If the VGTT (variable length GTT) feature is turned on, there can be up to 10 GTA lengths per translation type. When the `ent-gtt` command is entered to create entries, the software keeps track of the lengths and allows only ten different lengths.

2404 E2404 Cmd Rej: GTA does not match translation type's number of digits

The value of the `tt` parameter must not be defined as an alias.

2465 E2465 Cmd Rej: Translation TYPE defined as an alias

The Flexible GTT Load Sharing feature must be enabled before the `mapset` parameter can be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The specified MAP set must exist in the database.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the `gta` and `egta` parameters.

3006 E3006 Cmd Rej: Hex Digit Support for GTT feature must be ON

The value of the `num` parameter must not exceed the maximum table size.

2447 E2447 Cmd Rej: NUM exceeds maximum table size

The length of the `egta` parameter must equal the length of the `gta` parameter.

2403 E2403 Cmd Rej: Length of EGTA must be equal to length of GTA

The value of the `egta` parameter must be greater than the value of the `gta` parameter.

2420 E2420 Cmd Rej: EGTA must be greater than or equal to GTA

If the `tt` parameter is not specified, then the value of the `ttn` parameter must match the value of a `tt` parameter in the STP database.

2468 E2468 Cmd Rej: TTN specified does not exist

The value of the `gta` parameter must exist.

2405 E2405 Cmd Rej: GTA does not exist in any range

The SCCP Loop Detection feature must be enabled before the `loopset` parameter can be specified.

4565 E4565 Cmd Rej: SCCP Loop Detection Feature is not enabled

The value of the `loopset` parameter must already exist in the database.

4568 E4568 Cmd Rej: Loop Set entry does not exist

The Loopset table is corrupt or cannot be found.

4567 E4567 Cmd Rej: Cannot access LoopSet table

The Flexible GTT Load Sharing feature must be enabled before the `mrnset` parameter can be specified.

4479 E4479 Cmd Rej: MRNSET must be specified (only) if FGTTLS feature is enabled

At least one entry must be provisioned in the MRN table for the MRN set that is specified by the `mrnset` parameter.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the `cggmod` parameter can be specified.

4789 E4789 Cmd Rej: Either AMGTT or AMGTT CgPA Upgrade feature must be ON

The `mapset` and `mrnset` parameters cannot be specified together in the command.

4837 E4837 Cmd Rej: MAPSET and MRNSET cannot be specified together

The GTT set associated with the translation type specified by the `ttn` parameter must have a set type of `cdgta` (see the `ent-gttset` command).

4997 E4997 Cmd Rej: SETTYPE of specified GTTSET must be CdGTA

The value specified for the `gtmodid` parameter must already exist in the GTMOD table.

5285 E5285 Cmd Rej: GTMODID does not exist

The GTMOD table is corrupt or cannot be found.

5284 E5284 Cmd Rej: Failed reading GTMOD table

The `ttn=none` parameter cannot be specified.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

The network domain of the translation type specified by the `ttn` parameter cannot be CROSS (see the `ent-gttset` command).

5371 E5371 Cmd Rej: Network domain of corresponding ttn must not be CROSS

Notes

If the `rtrv-gtt` command is entered with only the `gta` parameter, a match would be an entry containing the same number of digits, or more digits, for the translation type. For example, if `gta=8005556666` is specified, the six-digit translation type `800555` would be a match. If the VGTT feature is turned on and the `egta` parameter is specified, all matching entries regardless of length are displayed.

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

If you do not know either the translation type or the translation type name, use the `rtrv-tt` command to obtain type and name.

Due to the size of these tables (up to 270,000 possible entries), a limit (65,535) is placed on the number of entries that can be printed at one time.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

The number of entries to be shown (the `num` parameter) can be specified for any valid combination of parameters.

If the `gta` parameter is not specified, then the first entry in the global title translation table that corresponds to the translation type is the first entry shown.

If the `num` and `gta` parameters are not specified, then up to 20 entries are shown.

If the `gta` parameter is specified, but the `num` parameter is not specified, then only one entry is shown.

If the `num` parameter is specified, then the number of entries shown is the lesser of the number of entries in the table from the defined starting point to the end, or the value of the `num` parameter.

If the `gta` and `egta` parameters are specified, then the entry that matches the `gta` parameter, or is the nearest entry below the `gta` parameter, is the first entry shown for the specified range.

The `rtrv-gtt` command can retrieve only CdGTA entries that were provisioned through GTA commands when the OBSR or FLOBR feature is turned on.

Output

```
rtrv-gtt:type=10:num=65535:force=yes
```

```
tekelecstp 10-02-04 11:43:04 EST EAGLE 42.0.0
TYPEA      TTN      NDGT
   3      c800      10
```

```
GTT table is (9 of 269999) 1% full.
```

```
START GTA                END GTA                XLAT  RI
```

```

PCA
9195551212          9195551212          DPCSSN SSN    008-001-001
      SSN=222  GTMODID=setntt1
8005550000          8005551999          DPCSSN SSN    001-254-255
      SSN=255  GTMODID=-----
8005552000          8005553999          DPC      GT    001-254-255
      SSN=255  GTMODID=setntt2
8005554000          8005555999          DPCNGT  GT    001-254-255
      SSN=255  GTMODID=-----
8005556000          8005557999          DPCSSN SSN    001-254-255
      SSN=255  GTMODID=-----
8005558000          8005559999          DPCSSN SSN    001-254-255
      SSN=255  GTMODID=-----
9762428487          9762428487          DPCSSN SSN    001-254-255
      SSN=222  GTMODID=-----
9766423277          9766423277          DPCSSN SSN    001-254-255
      SSN=222  GTMODID=-----
9769388928          9769388928          DPCSSN SSN    001-254-255
      SSN=222  GTMODID=-----

```

Command Retrieved 9 Entries

;

```
rtrv-gtt:type=10:dpc=8-1-1:ssn=222:gta=9195551212
```

```

tekelecstp 10-02-24 11:43:04 EST  EAGLE 42.0.0
TYPEA      TTN          NDGT
3          c800          10

```

GTT table is (9 of 269999) 1% full.

```

START GTA          END GTA          XLAT  RI      PCA
9195551212        9195551212        DPCSSN SSN    008-001-001
      SSN=222  GTMODID=-----

```

Command Retrieved 1 Entries

;

```
rtrv-gtt:typen=10
```

```

tekelecstp 10-02-24 11:44:04 EST  EAGLE 42.0.0
TYPEN      TTN          NDGT
10         -----          6

```

GTT table is (9 of 269999) 1% full.

```

START GTA          END GTA          XLAT  RI      ITU PC
123456          123456          DPC      GT    0500-1-0-1
      SSN=----  GTMODID=-----

```

Command Retrieved 1 Entries

;

This example shows a retrieval of all GTTs for a specified translation when the VGTT feature is turned on:

```
rtrv-gtt:type=10:num=65535:force=yes
```

```
tekelecstp 10-02-24 11:44:04 EST EAGLE 42.0.0
```

```
TYPEA   TTN      NDGT
  10     c800    6, 8, 10
```

```
GTT table is (17 of 269999) 1% full.
```

START GTA	END GTA	XLAT	RI
PCA			
976242	976242	DPCSSN	SSN
001-254-255			
SSN=222	GTMODID=-----		
976642	976642	DPCSSN	SSN
001-254-255			
SSN=222	GTMODID=-----		
976938	976938	DPCSSN	SSN
001-254-255			
SSN=222	GTMODID=-----		
80055500	80055519	DPCSSN	SSN
001-254-255			
SSN=255	GTMODID=-----		
80055520	80055539	DPC	GT
001-254-255			
SSN=255	GTMODID=-----		
80055540	80055559	DPCNGT	GT
001-254-255			
SSN=255	GTMODID=-----		
80055560	80055579	DPCSSN	SSN
001-254-255			
SSN=255	GTMODID=-----		
80055580	80055599	DPCSSN	SSN
001-254-255			
SSN=255	GTMODID=-----		
9195551212	9195551212	DPCSSN	SSN
008-001-001			
SSN=222	GTMODID=-----		
8005550000	8005551999	DPCSSN	SSN
001-254-255			
SSN=255	GTMODID=-----		
8005552000	8005553999	DPC	GT
001-254-255			
SSN=255	GTMODID=-----		
8005554000	8005555999	DPCNGT	GT
001-254-255			
SSN=255	GTMODID=-----		
8005556000	8005557999	DPCSSN	SSN

```

001-254-255
      SSN=255 GTMODID=-----
8005558000      8005559999      DPCSSN SSN      001-254-255
      SSN=255 GTMODID=-----
9762428487      9762428487      DPCSSN SSN      001-254-255
      SSN=222 GTMODID=-----
9766423277      9766423277      DPCSSN SSN      001-254-255
      SSN=222 GTMODID=-----
9769388928      9769388928      DPCSSN SSN      001-254-255
      SSN=222 GTMODID=-----

```

Command Retrieved 17 Entries

;

```
rtrv-gtt:type=7:gtmodid=asetansi5
```

```

tekelecstp 10-02-24 11:43:04 EST EAGLE 42.0.0
TYPEA      TTN      NDGT
 7         isvm      3,6,7,10

```

GTT table is (17 of 269999) 1% full.

```

START GTA      END GTA      XLAT  RI      PCA
564            564            DPCSSN SSN
248-006-015
      SSN=245 GTMODID=asetansi5
641            641            DPCSSN SSN      248-006-015
      SSN=245 GTMODID=asetansi5
589234         598744         DPCSSN SSN      248-006-015
      SSN=245 GTMODID=asetansi5
648392         659832         DPCSSN SSN      248-006-015
      SSN=245 GTMODID=asetansi5

```

Command Retrieved 4 Entries

;

This example shows output when the GTT table can contain up to 1,000,000 entries:

```
rtrv-gtt:type=7
```

```

tekelecstp 10-02-04 11:43:04 EST EAGLE 42.0.0
TYPEA      TTN      NDGT
 7         isvm      3,6,7,10
GTT table is (17 of 1000000) 1% full.

```

```

START GTA      END GTA      XLAT  RI      PCA
564            564            DPCNGT GT      248-006-015
      SSN=245 GTMODID=asetansi4
641            641            DPCNGT GT      248-006-015
      SSN=245 GTMODID=-----
589234         598744         DPCNGT GT      248-006-015

```

```

          SSN=245 GTMODID=asetansi4
        648392          659832          DPCSSN SSN
248-006-015
          SSN=245 GTMODID=-----

Command Retrieved 4 Entries
;

```

This example shows output for a 24-bit ITU-N point code translation type of 4:

```
rtrv-gtt:typen24=4
```

```

tekelecstp 10-02-24 11:43:04 EST EAGLE 42.0.0
TYPEN24  TTN          NDGT
  4      -----    6

GTT table is (1 of 269999) 1% full.

START GTA          END GTA          XLAT  RI      ITU
PC
  919833          919833          DPCSSN SSN
008-008-008
          SSN=20  GTMODID=-----

Command Retrieved 1 Entries
;

```

This example shows output when the ANSI/ITU SCCP Conversion feature is enabled and the `pctype=ansi` parameter is specified:

```
rtrv-gtt:typei=7:pctype=ansi
```

```

tekelecstp 10-02-04 11:43:04 EST EAGLE 42.0.0

TYPEI  TTN          NDGT
  7      isvm        3,6,7,10

GTT table is (17 of 1000000) 1% full.

START GTA          END GTA          XLAT  RI      PCA
  564          564          DPCNGT GT
002-136-005
          SSN=245 GTMODID=aseti43    CGGTMOD = NO
  648392          659832          DPCSSN SSN
007-006-005
          SSN=245 GTMODID=-----    CGGTMOD = NO

Command Retrieved 2 Entries
;

```

This example shows output when the ANSI/ITU SCCP Conversion feature is enabled and the `pctype=itui` parameter is specified:

```
rtrv-gtt:typen=106:pctype=itui:gtmodid=id12
```

```
tekelecstp 10-02-24 11:43:04 EST EAGLE 42.0.0
TYPEN      TTN      NDGT
106      ntoi43      6
```

```
GTT table is (17 of 1000000) 1% full.
```

```
START GTA          END GTA          XLAT  RI      ITUI PC
300006            300006          DPCNGT GT      6-002-3
      SSN=---  GTMODID=id12
```

```
Command Retrieved 1 Entries
```

```
;
```

This example shows output when the ANSI/ITU SCCP Conversion feature is enabled and the `pctype=itun` parameter is specified:

```
rtrv-gtt:type=55:pctype=itun
```

```
tekelecstp 10-02-24 11:43:04 EST EAGLE 42.0.0
TYPEA      TTN      NDGT
55      aton44      7
```

```
GTT table is (17 of 1000000) 1% full.
```

```
START GTA          END GTA          XLAT  RI      ITUN PC
6543210            6543210          DPCNGT GT      12341
      SSN=---  GTMODID=amseta4
```

```
Command Retrieved 1 Entries
```

```
;
```

This example shows output when the ANSI/ITU SCCP Conversion feature is enabled and the `pctype=itun24` parameter is specified:

```
rtrv-gtt:type=9:pctype=itun24
```

```
tekelecstp 10-02-04 11:43:04 EST EAGLE 42.0.0
TYPE      TTN      NDGT
7      isvm      3,6,7,10
```

```
GTT table is (17 of 1000000) 1% full.
```

```
START GTA          END GTA          XLAT  RI      ITUN24 PC
764            864          DPCNGT GT      002-136-005
```

```

          SSN=245 GTMODID=amitu43      CGGTMOD = NO
        668392          689832          DPCSSN SSN
007-006-005
          SSN=245 GTMODID=-----      CGGTMOD = NO

```

Command Retrieved 2 Entries

;

rtrv-gtt:typen=3

```

tekelecstp 10-02-24 11:43:04 EST EAGLE 42.0.0
TYPEN      TTN      NDGT
  3         -        6,21

```

GTT table is (6 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	ITU PC
123456	123456	DPCSSN	GT	s-00124-aa
SSN=10	GTMODID=amnat34			
234567	234567	DPCNGT	GT	s-00124-aa
SSN=---	GTMODID=-----			
234568	234568	DPC	GT	s-00124-aa
SSN=---	GTMODID=-----			
234569	234569	DPC	GT	s-00124-aa
SSN=---	GTMODID=amnat22			
334569467213456789012	334569478932012345678	DPC	GT	s-00124-aa
SSN=---	GTMODID=amnat10			

Command Retrieved 5 Entries

;

rtrv-gtt:typen=3:pcn=s-124-aa

```

tekelecstp 10-02-24 11:43:04 EST EAGLE 42.0.0
TYPEN      TTN      NDGT
  3         -        6,21

```

GTT table is (6 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	ITU PC
123456	123456	DPCSSN	GT	s-00124-aa
SSN=10	GTMODID=amsetnat1	CGGTMOD = YES		
234567	234567	DPCNGT	GT	s-00124-aa
SSN=---	GTMODID=-----	CGGTMOD = NO		
234568	234568	DPC	GT	s-00124-aa
SSN=---	GTMODID=-----	CGGTMOD = NO		
234569	234569	DPC	GT	s-00124-aa
SSN=---	GTMODID=amsetnat2	CGGTMOD = YES		
334569467213456789012	334569478932012345678	DPC	GT	s-00124-aa
SSN=---	GTMODID=amsetnat3	CGGTMOD = NO		

Command Retrieved 5 Entries

```
;  
  
rtrv-gtt:typen=3:ssn=104
```

```
tekelecstp 10-02-24 11:43:04 EST EAGLE 42.0.0  
TYPEN      TTN      NDGT  
3          - - - - - 6
```

GTT table is (5 of 269999) 1% full.

```
START GTA          END GTA          XLAT  RI      ITU PC  
123456            123456          DPCSSN GT  s-00124-aa  
          SSN=10  GTMODID=asetnal3
```

Command Retrieved 1 Entries

```
;  
  
This example shows output when the Flexible GTT Load Sharing feature is not on:
```

```
rtrv-gtt:ttn=tbla
```

```
tekelecstp 10-02-24 15:50:49 EST EAGLE 42.0.0  
TYPEA      TTN      NDGT  
10         tbla      6
```

GTT table is (2 of 269999) 1% full.

```
START GTA          END GTA          XLAT  RI      PCA  
123456            123456          DPC   GT    001-001-001  
          SSN=---  GTMODID=-----  
234567            234567          DPCSSN SSN  001-001-001  
          SSN=2    GTMODID=-----
```

Command Retrieved 2 Entries

```
;  
  
This example shows an MRN set value of NONE. The Flexible GTT Load-Sharing feature  
and the Intermediate GTT Load Sharing feature are on.
```

```
rtrv-gtt:ttn=tbl1
```

```
tekelecstp 10-02-24 13:54:32 EST EAGLE 42.0.0  
TYPEA      TTN      NDGT  
1          tbl1      10
```

GTT table is (1 of 269999) 1% full.

```

START GTA          END GTA          XLAT  RI    PCA
1234567890        1234567890        DPC   GT
001-001-002
      MRNSET=NONE  SSN=----  GTMODID=mod3

```

Command Retrieved 1 Entries

;

This example shows output when the Flexible GTT Load Sharing feature and the Origin-based SCCP feature are on:

```
rtrv-gtt:ttn=tbla
```

```

tekelecstp 10-02-24 14:51:59 EST  EAGLE 42.0.0
TYPEA      TTN          NDGT
  6         tbla        6,10

```

```

GTA table is (61 of 269999) 1% full
e1040501 10-02-24 13:33:10 EST  EAGLE 42.0.0

```

```

START GTA          END GTA          XLAT  RI    ITU PC
123456            123456          DPC   GT    1-101-1
      MRNSET=DFLT  SSN=----  GTMODID=-----  CGGMOD = NO

```

Command Retrieved 1 Entries

;

This example shows output when the Hex Digit Support for GTT feature is turned on and hexadecimal digits are included in GTA values:

```
rtrv-gtt:typen=201
```

```

tekelecstp 10-02-24 13:36:23 EST  EAGLE 42.0.0
TYPEN      TTN          NDGT
  201      ------  6,21

```

```
GTT table is (5 of 269999) 1% full.
```

```

START GTA          END GTA          XLAT  RI    PC
100000            10000d          DPC   GT    00101
      SSN=----  GTMODID=-----
10000e            10000f          DPC   GT    00101
      SSN=----  GTMODID=-----
100010            200000          DPC   GT    00101
      SSN=----  GTMODID=-----
abcdef0123456789abcdef fabcde01234567890afff DPCSSN SSN  00103
      SSN=10   GTMODID=-----
fbcdef0123456789abcdef fbfde01234567890aaff DPCSSN SSN  00103
      SSN=10   GTMODID=asetnal33

```

Command Retrieved 5 Entries

;

This example shows output when the SCCP Loop Detection feature is enabled and an associated loopset entry exists:

```
rtrv-gtt:ttn=setssn:mapset=6
```

```
tekelecstp 10-02-24 12:41:25 EST EAGLE 42.0.0
```

```
TYPEA   TTN       NDGT
  2      setssn   10
```

GTT table is (4 of 269999) 1% full.

```
START GTA           END GTA           XLAT  RI    PCA
2133              2133              DPC   GT    001-001-003
      MAPSET=6      SSN=----  GTMODID=asetans  CGGTMOD = NO
```

Command Retrieved 1 Entries

;

This example shows output for a specified MRN set when the Flexible GTT Load Sharing feature is enabled:

```
rtrv-gtt:ttn=tbla:mrnset=1
```

```
tekelecstp 10-02-24 12:41:25 EST EAGLE 42.0.0
```

```
TYPEA   TTN       NDGT
  2      tbla     4
```

GTT table is (4 of 269999) 1% full.

```
START GTA           END GTA           XLAT  RI    PCA
2133              2133              DPC   GT    001-001-003
      MRNSET=1      SSN=----  GTMODID=asetans  CGGTMOD = NO
```

Command Retrieved 1 Entries

;

This example retrieves all examples of translation type 4 where calling party global title modification is requested:

```
rtrv-gtt:type=4:cggmod=yes
```

```
tekelecstp 10-02-24 16:21:15 EST EAGLE 42.0.0
```

```
TYPEA   TTN       NDGT
  4      -----   6
```

GTT table is (1 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA
981234	981234	DPC	GT	

001-001-001
MRNSET=DFLT SSN=---- GTMODID=asetans CGGTMOD = YES
LOOPSET = none

Command Retrieved 1 Entries

;

rtrv-gtt:type=1:num=22

e1040501 10-02-24 13:14:49 EST EAGLE 42.0.0

TYPEA	TTN	NDGT
1	-----	6

GTT table is (22 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA
111111	111111	DPC	GT	

001-001-002
SSN=---- GTMODID=-----
111112 111112 DPC GT

001-001-002
SSN=---- GTMODID=gtmo10
111113 111113 DPC GT

001-001-002
SSN=---- GTMODID=-----
111114 111114 DPC GT

001-001-002
SSN=---- GTMODID=gtmo12
111115 111115 DPC GT

001-001-002
SSN=---- GTMODID=-----
111116 111116 DPC GT

001-001-002
SSN=---- GTMODID=-----
111117 111117 DPC GT

001-001-002
SSN=---- GTMODID=-----
111118 111118 DPC GT

001-001-002
SSN=---- GTMODID=-----
111119 111119 DPC GT

001-001-002
SSN=---- GTMODID=-----
111120 111120 DPC GT

001-001-002
SSN=---- GTMODID=gtmo11
111121 111121 DPC GT

```
001-001-002
  SSN=--- GTMODID=gtmo122
111122      111122      DPC  GT  001-001-002
  SSN=--- GTMODID=-----
111123      111123      DPC  GT  001-001-002
  SSN=--- GTMODID=-----
111124      111124      DPC  GT  001-001-002
  SSN=--- GTMODID=-----
111125      111125      DPC  GT  001-001-002
  SSN=--- GTMODID=-----
111126      111126      DPC  GT  001-001-002
  SSN=--- GTMODID=-----
111127      111127      DPC  GT  001-001-002
  SSN=--- GTMODID=gtmo121
111128      111128      DPC  GT  001-001-002
  SSN=--- GTMODID=-----
111129      111129      DPC  GT  001-001-002
  SSN=--- GTMODID=-----
111130      111130      DPC  GT  001-001-002
  SSN=--- GTMODID=-----
111131      111131      DPC  GT  001-001-002
  SSN=--- GTMODID=gtmo34
```

Command Retrieved 21 Entries

;

```
rtrv-gtt:type=2
```

```
e1040501 10-02-24 13:15:11 EST EAGLE 42.0.0
TYPEA   TTN       NDGT
  2      ------   6
```

GTT table is (22 of 269999) 1% full.

```
START GTA          END GTA          XLAT  RI      PCA
222222            222229          DPCSSN SSN      001-001-002
  SSN=10   GTMODID=-----
```

Command Retrieved 1 Entries

;

```
rtrv-gtt:type=1:gta=111268:egta=222259
```

```
tekelecstp 10-02-24 13:31:05 EST EAGLE 42.0.0
TYPEA   TTN       NDGT
  1      ------   6
```

GTT table is (37 of 269999) 1% full.

```
START GTA          END GTA          XLAT  RI      PCA
```

```
111268          111268          DPCNGT GT
001-001-002
      SSN=--- GTMODID=----- CGGTMOD = NO
111269          111269          DPCNGT GT
001-001-002
      SSN=--- GTMODID=asetans3 CGGTMOD = YES
111270          111270          DPCNGT GT
001-001-002
      SSN=--- GTMODID=asetans4 CGGTMOD = NO
222252          222259          DPCSSN SSN
001-001-002
      SSN=12  GTMODID=----- CGGTMOD = YES
```

Command Retrieved 4 Entries

;

```
rtrv-gtt:type=1:mapset=1
```

```
e1040501 10-02-24 13:38:25 EST EAGLE 42.0.0
TYPEA   TTN       NDGT
  1     - - - - -  3,6
```

GTT table is (41 of 269999) 1% full.

```
START GTA          END GTA          XLAT  RI      PCA
  105             105             DPCSSN SSN
001-001-003
      MAPSET=1      SSN=14      GTMODID=----- CGGTMOD = NO
```

Command Retrieved 1 Entries

;

```
rtrv-gtt:type=1:ssn=10
```

```
e1040501 10-02-24 13:33:10 EST EAGLE 42.0.0
TYPEA   TTN       NDGT
  1     - - - - -  3,6
```

GTT table is (40 of 269999) 1% full.

```
START GTA          END GTA          XLAT  RI      PCA
  100             100             DPCSSN SSN
001-001-002
      SSN=10      GTMODID=----- CGGTMOD = NO
  101             101             DPCSSN SSN
001-001-003
      SSN=10      GTMODID=mod3      CGGTMOD = NO
  104             104             DPCSSN SSN
001-001-003
      SSN=10      GTMODID=----- CGGTMOD = NO
```

Command Retrieved 3 Entries

;

This example retrieves all CdGTA translations which have been provisioned by GTA commands:

```
rtrv-gtt:type=3
```

```
tekelecstp 10-03-02 13:15:11 EST EAGLE 42.0.0
```

```
TYPEA   TTN       NDGT  
3       setans003  6
```

```
GTT table is (6 of 269999) 1% full.
```

;

```
tekelecstp 10-03-02 13:15:11 EST EAGLE 42.0.0
```

```
START GTA           END GTA           XLAT  RI    PCA  
345678             345680           DPC   GT    001-001-002  
      SSN=---- NGT=----
```

Command Retrieved 1 Entries

```
rtrv-gtt:typeis=5
```

```
tekelecstp 10-05-01 04:39:18 EST EAGLE 42.0.0
```

```
TYPEIS  TTN       NDGT  
5       -----   6
```

```
GTT table is (12 of 269999) 1% full.
```

;

```
tekelecstp 10-05-01 04:39:18 EST EAGLE 42.0.0
```

```
START GTA           END GTA           XLAT  RI    ITU PC  
123456             123456           DPC   GT    s-1-001-4  
      SSN=---- NGT=----
```

Command Retrieved 1 Entries

;

```
rtrv-gtt:typens=5
```

```
tekelecstp 10-05-01 04:40:38 EST EAGLE 42.0.0
```

```
TYPENS  TTN       NDGT
```

```

5          -----      6

GTT table is (20 of 269999) 1% full.

;

tekelecstp 10-05-01 04:40:38 EST  EAGLE 42.0.0

START GTA          END GTA          XLAT  RI      ITU PC
123456             123456          DPC   GT     s-00111
      SSN=--- NGT=---

Command Retrieved 1 Entries

;

```

Legend

- **type/typea/typeei/typen/typeen24/typeeis/typens**—Translation type
- **TTN**—Translation name
- **NDGT**—Number of digits
- **GTT TABLE IS 10% FULL**—Relative size of the GTT table
- **x of y**—Number of entries in the table (x) and the maximum number of entries configured for the table (y)
- **START GTA**—Global title start address
- **END GTA**—Global title end address
- **XLAT**—Translate indicator
- **RI**—Route indicator
- **PC, PCA, ITU PC, ITUI PC, ITUN PC, ITUN24 PC**—Point code
- **SSN**—Subsystem number
- **MRN**—Mated Relay Node
- **MRNSET**—MRN set ID
- **MAPSET**—MAP set ID
- **CGGTMOD**—Calling Party GT Modification Indicator
- **GTMODID**—Global Title Modification Identifier

Related Topics

- [chg-gtt](#)
- [dlt-gtt](#)
- [ent-gtt](#)

4.1.497 rtrv-gttact

Use this command to display entries from the Global Title Translations (GTT) Action table.

Parameters



Note:

Definitions for the feature options specified by the `on` and `off` parameters are located in the Notes section.

act (optional)

Action. The action applied to the message.

Range:

disc

discard message with no return error

dup

route a copy of the message to a specified duplicate node

fwd

route the original message to a specified forward node instead of the destination indicated by the GTT/ DB data

scpval

perform the SCCP MAP validation on MO/MT-FSM messages

sflog

send a copy of the original message to the SFLOG card

sfthrot

discard message if threshold exceeded

srvc

apply service (GPORT/GFLEX/SMSMR) on the message.

tcaperr

discard message that has a specified TCAP error

udts

discard message and send udts/xudts

sfapp

route message to SFAPP card

actid (optional)

GTT Action Id.

Range:

ayyyyyyy

1 leading alphabetic followed by up to 8 alphanumeric characters

atcaperr (optional)

ANSI TCAP Error Cause. The reason for discarding the message containing the ANSI TCAP portion that is associated with the TCAPERR GTT Action.

Range:

0 - 255

atirescgmodid (optional)

Calling party global title modification identifier for ATI. The GTMOD ID to be associated with the calling party of a SFAPP GTT Action entry.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

Default:

None

cdgtmodid (optional)

Called party global title modification identifier.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

cggtmodid (optional)

Calling party global title modification identifier.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

cgpc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

cgpca

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

cgpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps*
zone—0-7
area—000-255
id—0-7

The point code 0-000-0 is not a valid point code.

cgpcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p*-, *ps*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps*

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

cgpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—000-255

ssa—000-255

sp—000-255

cgpcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---*p*

un---000---127

sna---000---15

mna---000---31

cgpcogmsg (optional)

The data that is used as the Calling Party Point Code in the outgoing message.

Range:**cgpcicmsg**

CgPA PC data from the incoming MSU

dflt

Default. The standard Global Title Translation process provides the CgPA PC.

opcicmsg

OPC data from the incoming MSU

provcgpc

provisioned CGPC/CGPCA/CGPCI/CGPCN/CGPCN24 data in the GTT Action

remove

CGPC will be removed from the outgoing MSU

defactid (optional)

Default Action ID. The Action ID associated with the Forward/SCPVAL/SFTHROT action.

Range:**disc**

GTT Action ID of type *disc*

udts

GTT Action ID of type *udts*

tcaperr

GTT Action ID of type *tcaperr*

fallback

The MSU is routed using routing data in the incoming MSU when action is *fwd*. When action is set to *scpvall/sfthrot*, the MSU is discarded.

failactid (optional)

Fail Action ID. The default action that is performed to route the message when the VLR Validation fails on Stateful App.

Range:

ayyyyyyy

1 leading alphabetic character followed by 8 alphanumeric characters

The *failactid* parameter can take one of the following values:

- GTT Action ID with a GTT Action of *disc*, *udts* or *tcaperr* (see the *act* parameter). This value must already be defined in the GTT Action table.
- *fallback* -The MSU is discarded.

Default:

fallback

fdggtt (optional)

Forward GTT. The forward GTT Action ID that is to be used to route the MSU.

Range:

ayyyyyyy

hlraddr (optional)

It is used to address the HLR for the ATI message.

Range:

USECDPA --- Use the CDPA GTA from the query message

TCAPPARM --- GTT translation shall be performed on MAP Parameter. MAP parameter will be used in SCCP CDPA for GTT translation

FWDACT --- Route the message to a specified forward node indicated in FWD GTT Action ID

Default:

USECDPA

itcaperr (optional)

ITU TCAP Error Cause. The reason for discarding the message containing the ITU TCAP portion that is associated with the TCAPERR GTT Action.

Range:

0 - 255

loopset (optional)

SCCP loopset name. This parameter retrieves action entries that are associated with the specified loopset.

Range:

ayyyyyyy

One alphabetic character followed by up to 7 alphanumeric characters.

none —Action entries with no association to any loopset.

mapset (optional)

MAP Set ID. The Mated Application Set ID.

Range:

1 - 36000, dflt

dflt —Default MAP set

mrnset (optional)

MRN Set ID. The Mated Relay Node Set ID.

Range:

1 - 3000, dflt

dflt

Default MRN Set ID

none

The GTT Action table entry with no association to any mrnset.

off (optional)

Disables or turns off the specified feature options. A comma-separated list of feature options that are requested to be turned off. Up to 8 feature options can be specified in the list.

Range:*uimreqd**useicmsg**handlresp***on (optional)**

Enables or turns on the specified feature options. A comma-separated list of feature options that are requested to be turned on. Up to 8 feature options can be specified in the list.

Range:*refcnt**uimreqd**useicmsg**handlresp***pc (optional)**

ANSI point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The value "none" indicates that the Origin Point Code (OPC) field in the message will be used in place of CGPC.

Synonym:*pca***Range:***p-*, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:*s-*, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps*
zone—0-7
area—000-255
id—0-7

The point code 0-000-0 is not a valid point code.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p*-, *ps*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps*

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---*p*

un---000---127

sna---000---15

mna---000---31

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—000–255

ssa—000–255

sp—000–255

psirescgmodid (optional)

Calling party global title modification identifier for PSI. The GTMOD ID to be associated with the calling party of a SFAPP GTT Action entry.

Range:

ayyyyyyy

1 leading alphabetic character followed by up to 8 alphanumeric characters

Default:

None

ri (optional)

Routing indicator.

Range:

gt

ssn

snai (optional)

The service nature of address indicator.

Range:

ccrndn

Country code, routing number, and national directory number

intl

International number

Natl

National significant number

rnidn

Routing number prefix and international dialed/directory number

rnndn

Routing number prefix and national dialed/directory number

rnsdn

Routing number prefix and subscriber dialed/directory number

Sub

Subscriber number

snp (optional)

The service numbering plan.

Range:

e164

E.164 numbering plan

e212

E.212 numbering plan

e214

E.214 numbering plan

sprm (optional)

SCCP Parameter. This parameter is used to decide whether the SCCP GTA, NP, and NAI (if GTI=4 and NP/NAI are present) will be picked up from CDPA or CGPA for comparison.

Range:**CDPA**

SCCP CDPA GTA, NP, and NAI (if GTI=4 and NP/NAI are present) will be used for comparison

CGPA

SCCP CGPA GTA, NP, and NAI (if GTI=4 and NP/NAI are present) will be used for comparison

svccerr (optional)

The action to be taken when the Service triggered by the GTT Action Service fails. The MSU can be processed by either applying the results of the pre-Service GTT, or continuing with the specific Service error processing.

Range:**SRVC**

Continue with specific service error

GTT

Apply the result of pre-GTT service

Default:

SRVC

svcname (optional)

Service to be applied on the MSU when `act` is set to `svrc`.

Range:

GFLEX, GPORT, SMSMR

ssn (optional)

Subsystem number.

Range:

2 - 255, none

tpm (optional)

TCAP Parameter. This parameter is used to decide whether the MAP digits, NP, and NON (if NP and NON are present) will be picked up from SMRPDA or SMRPOA for comparison.

Range:**SMRPDA**

MAP digits, NP, and NON (if NP and NON are present) from SMRPDA will be used for comparison

SMRPOA

MAP digits, NP, and NON (if NP and NON are present) from SMRPOA will be used for comparison

udtserr (optional)

UDTS error cause. This parameter specifies the reason for discarding the message that is associated with UDTs GTT Action.

Range:

0 - 255

valtype (optional)

Validation Type. This parameter is used to decide whether SCCP/TCAP parameter should be used for the validation of the MSU or IR21.xml file data should be used for the validation of the MSU. This parameter can only be set for act=scpval.

Range:

sccptotcap

ir21totcap

Example

```
rtrv-gttact:actid=discl
rtrv-gttact:cggtmodid=idda1
rtrv-gttact:cggtmodid=cggt1:cdgtmodid=cdgt2
rtrv-gttact:defactid=fallback
rtrv-gttact:pcn16=1-14-0
rtrv-gttact:act=srvc
rtrv-gttact:svcname=gflex
rtrv-gttact:tprm=smrpd
rtrv-gttact:haddr=usecdpa:failactid=sfapp8
rtrv-gttact:haddr=fwdact
rtrv-gttact:haddr=tcapparm
rtrv-gttact:atirescgmodid=set1
rtrv-gttact:psirescgmodid=set5
rtrv-gttact:valtype=sccptotcap
```

Dependencies

The GTT Action table is corrupt or cannot be found.

5067 E5067 Cmd Rej: Unable to access GTT Action table

The specified GTT Action entry must already exist in the database.

5071 E5071 Cmd Rej: GTT Action Id does not exist

If the Flexible GTT Load Sharing feature is not enabled, then the `mapset` parameter cannot be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The value specified for the `pc/pca/pci/pcn/pcn24/pcn16` and `cgpc/cgpcac/cgpci/cgpcn/cgpcn24/cgpcn16` parameters must be a full point code and must have a valid value within the range for each subfield.

2169 E2169 Cmd Rej: Point code out of range

The Flexible GTT Load Sharing feature must be enabled before the `mrnset` parameter can be specified.

4479 E4479 Cmd Rej: MRNSET must be specified (only) if FGTTLS feature is enabled

The `mapset` and `mrnset` parameters cannot be specified together in the command.

4837 E4837 Cmd Rej: MAPSET and MRNSET cannot be specified together

A value of *none* or *fallback* cannot be specified for the `actid` parameter.

5069 E5069 Cmd Rej: (New) GTT Action Id must not be NONE/FALLBACK

A value of *disc*, *udts*, *tcaperr*, *scpval*, or *sfapp* must be specified for the `act` parameter before a value of *uimreqd* can be specified for the `on` or `off` parameter.

5068 E5068 Cmd Rej: Uimreqd only valid for DISC/UDTS/TCAPERR/SCPVAL/SFAPP

A value of *dup* or *fwd* must be specified for the `act` parameter before the `pc`, `ssn`, `ri`, `mrnset`, `mapset`, `loopset`, `cgpc`, `cgpcogmsg`, `cggtmodid` or `cdgtmodid` parameters can be specified.

A value of *dup*, *fwd*, *scpval*, or *sfthrot* must be specified for the `act` parameter before a value of *useicmsg* can be specified for the `on` or `off` parameter.

The `act=fwd/scpval/sfthrot` parameter must be specified before the `defactid` parameter can be specified.

The `pc`, `ssn`, `ri`, `mrnset`, `mapset`, `loopset`, `cgpc`, `cgpcogmsg`, `defactid`, `tprm`, and `sprm` parameters cannot be specified in the same command as the `atcaperr`, `itcaperr`, or `udtserr` parameters.

Values of *useicmsg* and *uimreqd* cannot be specified for the `on` or `off` parameters in the same command.

If the `actid` parameter is specified, then the `ri`, `pc`, `ssn`, `mrnset`, `mapset`, `loopset`, `on`, `off`, `atcaperr`, `itcaperr`, `udtserr`, `act`, `cgpc`, `cgpcogmsg`, `defactid`, `cggtmodid`, `cdgtmodid`, `snp snai`, `svcerr`, `svcname`, `sprm`, and `tprm` parameters cannot be specified.

The `act=tcaperr` parameter must be specified before the `atcaperr` or `itcaperr` parameter can be specified.

The `act=udts` parameter must be specified before the `udtserr` parameter can be specified.

The `udtserr` and `svcerr` parameters cannot be specified in the same command.

The `atcaperr` and `itcaperr` parameters cannot be specified in the same command.

The `pc`, `ri`, `ssn`, `mrnset`, `mapset`, `loopset`, `cdgtmodid`, `defactid`, `cgpc`, `cgpcogmsg`, and `cggtmodid` parameters cannot be specified in the same command with the `atcaperr`, `itcaperr`, and `udtserr` parameters.

The `svcname`, `snp`, `snai` and `svccerr` parameters can only be specified when `act` is set to `svc`.

The `sprm` and `tprm` parameters can be specified only when `act` is set to `scpval`.

The `scfaddr`, `hlraddr`, `tt`, `failactid` and `fwdgtt` parameters can only be specified if action type is `sfapp`.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The point code specified for the `pc/pci/pcn/pcn24/pcn16` and `cgpc/cgpci/cgpcn/cgpcn24/cgpcn16` parameters must be a full point code.

3090 E3090 Cmd Rej: Full Point Code must be specified

The SCCP Loop Detection feature must be enabled before the `loopset` parameter can be specified.

4565 E4565 Cmd Rej: SCCP Loop Detection Feature is not enabled

The value specified for the `loopset` parameter must already exist in the database.

4568 E4568 Cmd Rej: Loop Set entry does not exist

The Loopset table is corrupt or cannot be found.

4567 E4567 Cmd Rej: Cannot access LoopSet table

The value specified for the `cdgtmodid` or `cggtmodid` parameter must already exist in the GTMOD table.

5291 E5291 Cmd Rej: CGGTMODID/CDGTMODID does not exist

The GTMOD table is corrupt or cannot be found.

5284 E5284 Cmd Rej: Failed reading GTMOD table

The `defactid=none` or `failactid=none` parameter cannot be specified.

5298 E5298 Cmd Rej: Default ACTID must not be specified as NONE

The value specified for the `pc/pca/pci/pcn/pcn24/pcn16` and `cgpc/cgpca/cgpci/cgpcn/cgpcn24/cgpcn16` parameters must have the same domain.

5299 E5299 Cmd Rej: PC and CGPC must be of same domain

The same value cannot be specified for the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

The specified MAP set must already exist in the MAP table.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

The specified MRN set must already exist in the MRN table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

A value of `fwd`, `dup`, or `scpval` must be specified for the `act` parameter before a value of `useicmsg` can be specified for the `on` or `off` parameter.

3465 E3465 Cmd Rej: USEICMSG only valid for FWD/DUP/SCPVAL

The value specified for the `atirescgmodid` and `psirescgmodid` parameters must already exist in the GTMOD table.

5285 E5285 CmdRej: GTMODID does not exist.

Notes

on/off options

- `uimreqd` —UIM required. Specifies whether a UIM should be generated.
- `useicmsg` —Use Incoming Message. Specifies whether to apply GTT Action data to the message as the message was received (OFF) or after any EPAP or GTT translation/modification data has been applied (ON).
- `handlresp` —Specifies whether the ATI/PSI response will be sent to the SFAPP card or not.

Output

```
rtrv-gttact:on=refcnt
```

```
tekelecstp 15-05-29 18:21:01 EST EAGLE 46.3.0
```

ACTID	ACTION	ATCAPERR	ITCAPERR	UDTSERR	UIMREQD	REFCNT
act2	disc	---	---	---	off	0
none1	disc	---	---	---	off	0

ACTID	ACTION	PCA	RI	SSN	MRNSET	MAPSET	REFCNT
-------	--------	-----	----	-----	--------	--------	--------

```
-----
actdup1  dup      001-001-001  gt  ---  DFLT  -----  2
          CDGTMODID = -----  CGGTMODID = -----
          LOOPSET = None
          USEICMSG = off      CGPCOGMSG = dflt      CGPCA = ---
actfwd1  fwd      001-001-001  gt  ---  DFLT  -----  2
          CDGTMODID = -----  CGGTMODID = -----
          LOOPSET = None      DEFACTID = Fallback
          USEICMSG = off      CGPCOGMSG = dflt      CGPCA = ---
```

ACTID	ACTION	PCI	RI	SSN	MRNSET	MAPSET	REFCNT
-------	--------	-----	----	-----	--------	--------	--------

ACTID	ACTION	PCN	RI	SSN	MRNSET	MAPSET	REFCNT
-------	--------	-----	----	-----	--------	--------	--------

ACTID	ACTION	PCN24	RI	SSN	MRNSET	MAPSET	REFCNT
-------	--------	-------	----	-----	--------	--------	--------

ACTID	ACTION	VALTYPE	NDGT	UIMREQD	USEICMSG	DEFACTID
-------	--------	---------	------	---------	----------	----------

REFCNT

scpval1	scpval	ir21totcap	ALL	off	off
---------	--------	------------	-----	-----	-----

DISCARD 0

scpval2	scpval	sccptotcap	15	off	off
---------	--------	------------	----	-----	-----

DISCARD 0

TPRM = smrpda SPRM = cdpa

GTT-ACT table is (2 of 2000) 1% full.

;

rtrv-gttact:cggmodid=set1

tekelecstp 10-02-04 18:21:01 EST EAGLE 42.0.0

ACTID	ACTION	PCI	RI	SSN	MRNSET	MAPSET
-------	--------	-----	----	-----	--------	--------

actdup2	DUP	002-002-002	GT	---	2000	-----
---------	-----	-------------	----	-----	------	-------

CDGTMODID = set2 CGGTMODID = set1

ACTID	ACTION	PCN24	RI	SSN	MRNSET	MAPSET
-------	--------	-------	----	-----	--------	--------

actdup6	DUP	111-222-333	SSN	100	----	3000
---------	-----	-------------	-----	-----	------	------

CDGTMODID = id9 CGGTMODID = set1

GTT Action table is (8 of 2000) 1% full

;

rtrv-gttact:pcn16=1-2-3

tekelecstp 13-07-02 15:04:36 EST 45.0.0-64.69.0

rtrv-gttact:pcn16=1-2-3

Command entered at terminal #4.

ACTID	ACTION	PCN16	RI	SSN	MRNSET	MAPSET
-------	--------	-------	----	-----	--------	--------

actfwd5	fwd	001-02-03	gt	---	DFLT	-----
---------	-----	-----------	----	-----	------	-------

CDGTMODID = ----- CGGTMODID = -----
DEFACTID = Fallback
USEICMSG = off CGPCOGMSG = dflt CGPCN16 = ---

GTT-ACT table is (1 of 2000) 1% full.

;

rtrv-gttact:svrname=smsmr:act=svrc

eagle1 13-10-27 18:10:25 EST EAGLE 46.0.0

ACTID	ACTION	SRVCNAME	SRVCERR	SNP	SNAI
actsrvcl	svrc	GFLEX	SRVC	E212	SUB
actsrvcl4	svrc	GPORT	SRVC	E164	INTL
actsrvcl5	svrc	GPORT	GTT	E164	RNNDN
actsrvcl6	svrc	SMSMR	SRVC	E164	INTL
actsrvcl7	svrc	SMSMR	GTT	E164	RNNDN

;

rtrv-gttact:act=scpval

tekelecstp 15-05-29 18:21:01 EST EAGLE 46.9.0

ACTID	ACTION	VALTYPE	NDGT	UIMREQD	USEICMSG
DEFACID					
scpval1	scpval	ir21totcap	ALL	off	off DISCARD
scpval2	scpval	sccptotcap	15	off	off DISCARD

TPRM = smrpda SPRM = cdpa

GTT-ACT table is (2 of 2000) 1% full.

;

rtrv-gttact:act=sfthrot

tekelecstp 15-05-29 18:21:01 EST EAGLE 46.3.0

ACTID	ACTION	THRESHOLD	BURSTS	DEFACTID
act1	sfthrot	1	0	disc1
act2	sfthrot	1	2	disc2
act3	sfthrot	1	1	disc3
act4	sfthrot	20	0	disc4

GTT-ACT table is (4 of 2000) 1% full.

```

;

rtrv-gttact:hlraddr=usecdpa

tekelecstp 17-11-22 14:55:02 EST EAGLE 46.5.1.5.0-73.2.0
  rtrv-gttact:hlraddr=usecdpa
  Command entered at terminal #17.
;
Command Accepted - Processing
  tekelecstp 17-11-22 14:55:02 EST EAGLE 46.5.1.5.0-73.2.0

ACTID      ACTION    DEFACTID  USEICMSG  NDGT      UIMREQD
-----
sfapp1     sfapp    FALLBACK  off        ALL       off
           SCFADDR = 18
           HLRADDR = USECDPA
           FAILACTID = DISCARD
sfapp8     sfapp    FALLBACK  off        ALL       off
           SCFADDR = 19
           HLRADDR = USECDPA
           FAILACTID = DISCARD
sfapp9     sfapp    FALLBACK  off        ALL       off
           SCFADDR = 19
           HLRADDR = USECDPA
           FAILACTID = DISCARD
sfapp10    sfapp    FALLBACK  off        ALL       off
           SCFADDR = 19
           HLRADDR = USECDPA
           FAILACTID = DISCARD
sfapp13    sfapp    FALLBACK  off        ALL       off
           SCFADDR = 16
           HLRADDR = USECDPA
           FAILACTID = DISCARD

GTT-ACT table is (11 of 2000) 1% full.
;
Command Executed

```

```

rtrv-gttact:failactid=fallback

tekelecstp 17-11-22 14:56:30 EST EAGLE 46.5.1.5.0-73.2.0
  rtrv-gttact:failactid=fallback
  Command entered at terminal #17.
;
Command Accepted - Processing
  tekelecstp 17-11-22 14:56:30 EST EAGLE 46.5.1.5.0-73.2.0

ACTID      ACTION    DEFACTID  USEICMSG  NDGT      UIMREQD
-----
sfapp1     sfapp    FALLBACK  off        ALL       off
           SCFADDR = 18
           HLRADDR = USECDPA
           FAILACTID = DISCARD
sfapp8     sfapp    FALLBACK  off        ALL       off
           SCFADDR = 19
           HLRADDR = USECDPA
           FAILACTID = DISCARD
sfapp9     sfapp    FALLBACK  off        ALL       off
           SCFADDR = 19
           HLRADDR = USECDPA
           FAILACTID = DISCARD

```



```

sfapp10  sfapp  FALLBACK  off      ALL  off
          SCFADDR = 19          FAILACTID = DISCARD
          HLRADDR = USECDPA
sfapp13  sfapp  FALLBACK  off      ALL  off
          SCFADDR = 16          FAILACTID = DISCARD
          HLRADDR = USECDPA

```

GTT-ACT table is (11 of 2000) 1% full.

```

;
Command Executed

```

```
rtrv-gttact:atirescgmodid=set1
```

```

tekelecstp 18-05-07 10:48:35 EST  EAGLE 46.7.0.0.0-74.5.0
rtrv-gttact:atirescgmodid=set1
Command entered at terminal #4.

```

ACTID	ACTION	DEFACTID	NDGT	UIMREQD
sfapp10	sfapp	FALLBACK	ALL	off
	SCFADDR = 19		FAILACTID = DISCARD	
	HLRADDR = USECDPA			
	ATIRESCGMODID = set1		PSIRESCGMODID = -----	
	HANDLRESP = ON			

GTT-ACT table is (3 of 2000) 1% full.

```

;
rtrv-gttact:psirescgmodid=set5

```

```

tekelecstp 18-05-07 10:48:35 EST  EAGLE 46.7.0.0.0-74.5.0
rtrv-gttact:atirescgmodid=set5
Command entered at terminal #4.

```

ACTID	ACTION	DEFACTID	NDGT	UIMREQD
sfapp10	sfapp	FALLBACK	ALL	off
	SCFADDR = 19		FAILACTID = DISCARD	
	HLRADDR = USECDPA			
	ATIRESCGMODID = -----		PSIRESCGMODID = set5	
	HANDLRESP = ON			

GTT-ACT table is (3 of 2000) 1% full.

```

;

```

```

rtrv-gttact:valtype=ir21totcap

          tklc1131001 20-01-29 02:18:02 HST  EAGLE 46.9

          ACTID      ACTION  VALTYPE      NDGT      UIMREQD      USEICMSG
DEFACTID
-----
          scpval1    scpval   ir21totcap  ALL        off           off
DISCARD

          GTT-ACT  table is (2 of 2000) 1% full.
;

```

Related Topics

- [chg-gttact](#)
- [dlt-gttact](#)
- [ent-gttact](#)

4.1.498 rtrv-gttapath

Use this command to retrieve a GTT Action path entry. A GTT Action path consists of pairs of "setname + value" for Opcode/CgGTA/CdGTA. Each "setname + value" pair must already be defined in the GTT translation table.

Parameters**acn (optional)**

Application context name. The ITU TCAP *acn* field in the incoming MSU.

Range:

0 - 255, none

none—there is no ITU TCAP *acn* field in the incoming MSU

cdgta (optional)

Called Party Global Title Address.

Range:

1-21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

cdgttsn (optional)

GTT set name (CDPA type).

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters

cggtta (optional)

Calling Party Global Title Address.

Range:

1-21 digits

If the Hex Digit Support for GTT feature is not enabled, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

cggttsn (optional)

GTT set name (CGPA type).

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

family (optional)

The ANSI TCAP *family* field in the incoming MSU.

Range:

0 - 255, *, none

none —there is no value in the ANSI TCAP *family* field in the incoming MSU

gttprn (optional)

GTT Path name.

Range:

ayyyy

1 leading alphabetic character and up to 4 following alphanumeric characters.

opcode (optional)

The TCAP *opcode* field in the incoming MSU.

Range:

0 - 255, *, none

none —there is no value in the TCAP *opcode* field in the incoming MSU

opgttsn (optional)

GTT set name (Opcode type).

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

pkgtype (optional)

The ANSI and ITU TCAP package type.

Range:

ituuni

ITU unidirectional

qwp

Query with Permission

qwop
Query without Permission

resp
Response

cwp
Conversation with Permission

cwop
Conversation without Permission

any
Wildcard value

bgn
Begin

end
End

cnt
Continue

ituabort
ITU abort

ansiabort
ANSI abort

ansiuni
ANSI unidirectional

ANSI TCAP Package Types—*ansiuni, qwp, qwop, resp, cwp, cwop, ansiabort, any*

ITU TCAP Package Types—*bgn, ituabort, ituuni, any, end, cnt*

Example

```
rtrv-  
gttapath:opgttsn=opsn2:pkgtype=ansiuni:opcode=124:family=2:cggt  
tsn=cgsn3:cggt=987654:cdgttsn=cdsn1:cdgta=123456  
  
rtrv-gttapath:opgttsn=opsn2:pkgtype=ansiuni:opcode=124:family=2  
  
rtrv-gttapath
```

Dependencies

The `acn` and `family` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The GTA table is corrupt or cannot be found.

3119 E3119 Cmd Rej: Failed Reading GTT TRANS table

The GTT DBMM table is corrupt or cannot be found.

3120 E3120 Cmd Rej: Failed Reading GTT DBMM table

The GTT Action - DISCARD, GTT Action - FORWARD, or GTT Action - DUPLICATE feature must be enabled before this command can be entered.

3451 E3451 Cmd Rej: Controlled Feature is not enabled

The GTT Set table must be accessible.

3544 E3544 Cmd Rej: Failed reading GTT Set Table

A value of *none* cannot be specified for the `opgttsn`, `cggttsn`, and `cdgttsn` parameter(s).

3565 E3565 Cmd Rej: Set name must not be specified as NONE

The `opcode`, `pkgtype`, and `family` parameters must be specified together for ANSI TCAP translations. The `opcode`, `pkgtype`, and `acn` parameters must be specified together for ITU TCAP translations.

5106 E5106 Cmd Rej: OPCODE,PKGTYPE,ACN/FAMILY must be specified together

If the `family` parameter is specified, then a value of *ansiuni*, *qwp*, *qwop*, *resp*, *cwp*, *cwop*, *ansiabort*, or *any* must be specified for the `pkgtype` parameter.

5140 E5140 Cmd Rej: FAMILY parameter is allowed with ANSI TCAP PKGTYPE

If the `acn` parameter is specified, then a value of *bgn*, *ituabort*, *ituuni*, *any*, *end*, or *cnt* must be specified for the `pkgtype` parameter.

5141 E5141 Cmd Rej: ACN parameter is allowed with ITU TCAP PKGTYPE

If the `pkgtype=ituabort`, then a value of *none* must be specified for the `acn` and `opcode` parameters.

If the `pkgtype=ansiabort` is specified then a value of *none* must be specified for the `family` and `opcode` parameters.

5144 E5144 Cmd Rej: PKGTYPE abort requires ACN/FAMILY/OPCODE value none

If the `family` and `opcode` parameters are specified in the command, then either both parameters must have a value of *none* or neither parameter can have a value of *none*.

5148 E5148 Cmd Rej: Both FAMILY and OPCODE must be NONE if either is NONE

The GTT Action Path table is corrupt or cannot be found.

5186 E5186 Cmd Rej: Unable to access GTT Action Path table

At least one GTT set-value combination must be specified.

5319 E5319 Cmd Rej: At least one set-value combination must be specified

The value specified for the `gttpn` parameter must already exist in the database.

5378 E5378 Cmd Rej: Specified path name doesn't exist

Both Path name and set-value combination(s) cannot be specified together.

5377 E5377 Cmd Rej: Path name and GTT set-value can't be specified together

The value specified for the `gttpn` parameter cannot be a reserved word.

3040 E3040 Cmd Rej: <string> cannot be used in this command

Output

```
rtrv-gttapath:gttpn=path3
```

```
tekelecstp 10-02-04 18:29:41 EST EAGLE 42.0.0
```

```
GTPPN   OPGTTSN           CGGTTSN           CDGTTSN
-----
path3   opsn2             cgsn3             cdsn1
        OPCODE = 124   PKGTYPE = ansiuni  FAMILY = 2
        CGGTA = 987654   ECGGTA = 999999
        CDGTA = 123456   ECDGTA = 234567
```

```
GTT Action Path table is (3 of 10000) 1% full
```

```
Command Completed.
```

```
;
```

```
rtrv-gttapath:opgttsn=opsn2:pkgtype=ansiuni:opcode=124:family=2
```

```
tekelecstp 10-02-04 18:29:41 EST EAGLE 42.0.0
```

```
GTPPN   OPGTTSN           CGGTTSN           CDGTTSN
-----
path2   opsn2             cgsn2             -----
        OPCODE = 124   PKGTYPE = ansiuni  FAMILY = 2
        CGGTA = 45673   ECGGTA = 45673

path3   opsn2             cgsn3             cdsn1
        OPCODE = 124   PKGTYPE = ansiuni  FAMILY = 2
        CGGTA = 987654   ECGGTA = 999999
        CDGTA = 123456   ECDGTA = 234567
```

```
GTT Action Path table is (3 of 10000) 1% full
```

```
Command Completed.
```

```
;
```

```
rtrv-gttapath
```

```
tekelecstp 10-02-04 18:29:41 EST EAGLE 42.0.0
```

```
GTPPN   OPGTTSN           CGGTTSN           CDGTTSN
-----
path1   opsn1             -----           cdsn1
        OPCODE = 123   PKGTYPE = ituuni   ACN =
111-111-111-111-111-111
        CGGTA = 7654   ECGGTA = 7654

path2   opsn2             cgsn2             -----
```

```

          OPCode = 124      PKGTYPE = ansiuni      FAMILY = 2
          Cggta = 45673                                ECGGTA = 45673

path3   opsn2           cgsn3           cdsn1
          OPCode = 124      PKGTYPE = ansiuni      FAMILY = 2
          Cggta = 987654                                ECGGTA = 999999
          CDGTA = 123456                                ECDGTA = 234567

GTT Action Path table is (3 of 10000) 1% full

Command Completed.
;

```

Related Topics

- [chg-gttapath](#)
- [dlt-gttapath](#)
- [ent-gttapath](#)

4.1.499 rtrv-gttaset

Use this command to display entries from the Global Title Translations (GTT) Action Set table.

Parameters**Note:**

Definitions for the feature options specified by the `on` and `off` parameters are located in the Notes section.

actid1 (optional)

GTT Action ID 1. This parameter specifies the first action ID associated with the GTT action set.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

actid2 (optional)

GTT Action ID 2. This parameter specifies the second action ID associated with the GTT action set.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters

actid3 (optional)

GTT Action ID 3. This parameter specifies the third action ID associated with the GTT action set.

Range:*ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters

actid4 (optional)

GTT Action ID 4. This parameter specifies the fourth action ID associated with the GTT action set.

Range:*ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters

actid5 (optional)

GTT Action ID 5. This parameter specifies the fifth action ID associated with the GTT action set.

Range:*ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters

actid6 (optional)

GTT Action ID 6. This parameter specifies the sixth action ID associated with the GTT action set.

Range:*ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters

actsn (optional)

GTT Action Set Name.

Range:*ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters

off (optional)

Disables or turns off the specified feature options. This parameter specifies a comma-separated list of feature options that are requested to be turned off. Up to 8 feature options can be specified in the list.

Range:*testmode***on (optional)**

Enables or turns on the specified feature options. This parameter specifies a comma-separated list of feature options that are requested to be turned on. Up to 8 feature options can be specified in the list.

Range:*testmode**refcnt***Example**

```
rtrv-gttaset:actid1=disc1
```



```
rtrv-gttaset:actsn=asetdiscl:on=refcnt
```

```
rtrv-gttaset:on=testmode
```

Dependencies

The GTT Action Set table is corrupt or cannot be found.

5197 E5197 Cmd Rej: Unable to access GTT Action Set table

The specified GTT Action Set must already exist in the database.

5196 E5196 Cmd Rej: GTT Action Set does not exist

The `actsn=none` parameter cannot be specified.

5113 E5113 Cmd Rej: (New) GTT Action Set name must not be none.

If the `actsn` parameter is specified, then the `on=refcnt` parameter is the only other parameter that can be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

A value of *fallback* or *none* cannot be specified for the `actid1/actid2/actid3/actid4/actid5/actid6` parameters.

5069 E5069 Cmd Rej: (New) GTT Action Id must not be NONE/FALLBACK

The EGTT feature must be on before this command can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

The action ID specified by the `actid1/actid2/actid3/actid4/actid5/actid6` parameter(s) must already exist in the GTT Action table.

5071 E5071 Cmd Rej: GTT Action Id does not exist

The `actid1/actid2/actid3/actid4/actid5/actid6` parameters must each specify a unique GTT Action ID in the command.

5236 E5236 Cmd Rej: GTT Action Ids should be unique in a GTT Action Set

Only one Action ID with an action of *disc*, *udts*, *tcaperr* or *svrc* can be specified.

If an Action ID with an act of *fwd* is specified, then no other Action ID in the Action Set with an act of *disc*, *udts*, *tcaperr*, *fwd* or *svrc* can be specified.

If an Action ID associated with an action of *svrc* is specified, then no other Action ID in the same Action Set can be associated with an act of *fwd*, *disc*, *udts*, *tcaperr*, or *svrc*.

If 5 Action IDs with an act of *dup* are specified then the remaining Action ID with an act of *dup* cannot be specified.

5172 E5172 Cmd Rej: Invalid action type

The same value cannot be specified for the `on` and `off` parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

Notes

When only the `actidX` (where X=1, 2, 3, 4, 5, 6) parameter is specified, and its value matches any action set, then all such matches will be displayed.

on/off options

- *testmode* —Invokes a field-safe Test Tool in order to debug the GTT Action Set rules.
- *refcnt* —Reference Count. Displays the number of GTTs that reference the GTT Action Set. This feature option is ON only.

Output

```
rtrv-gttaset
```

```

tekelecstp 10-02-04 18:21:01 EST  EAGLE 42.0.0
ACTSN      REFCNT  TEST  ActIds
          MODE
-----
aset1      1       on   dup1    (DUP),dup2
(DUP),dup3 (DUP),
          disc1    (DISC),-----,-----
aset2      5       off  dup2    (DUP),dup1    (DUP),-----,
-----,-----,-----
aset3      10      on   fwd1    FWD),dup4    (DUP),-----,
-----,-----,-----
aset4      0       off  udts1   (UDTS),-----,-----,
-----,-----,-----
aset5      0       off  -----,tcaperr1 (TCAPERR),-----,
-----,-----,-----

GTT Action Set table is (5 of 20000) 1% full

;

rtrv-gttaset:actid2=disc2

```

```

tekelecstp 14-03-13 10:53:02 EST  EAGLE 46.0.0
ACTSN      TEST  ActIds
          MODE
-----
aset3      off   -----,disc2    (DISC),-----,
-----,-----,-----
aset4      off   disc2    (DISC),-----,-----,
-----,-----,-----
aset6      off   -----,-----,-----,
-----,-----,disc2    (DISC)

GTT-ASET table is (3 of 20000) 1% full.

```

```

;

rtrv-gttset

tekelecstp 13-10-28 17:34:05 EST 46.0.0
ACTSN  REFCNT  TEST  ActIds
          MODE
-----
actn1   2      off  srvc1   (SRVC),-----,-----,
          -----,-----,-----,

GTT-ASET table is (1 of 20000) 1% full.

;

```

Related Topics

- [chg-gttset](#)
- [dlt-gttset](#)
- [ent-gttset](#)

4.1.500 rtrv-gttset

Use this command to display a list of administered global title selector combinations required for a global title entry. The list can be filtered by using various parameter combinations.

Note:

If the EGTT feature is turned on, then the GTT Selector (`ent/chg/dlt/rtrvgttset`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrvgta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. It is not recommended to run `ent/dlt/rtrv-tt & ent/chg/dlt/rtrv-gtt` commands as it may cause the advance GTA fields of GTT entry to be reset to the default values.

Parameters**Note:**

The nature of address indicator parameters (`naiv` or `nai`) can be specified using a mnemonic or an explicit value. Either value can be specified; however, both values cannot be specified at the same time for the same parameter. [Table 58: NAIV/NAI Mapping](#) shows the mapping between the `naiv` and the `nai` parameter values.

 **Note:**

The numbering plan parameters (`npv` or `np`) can be specified using a mnemonic or an explicit value. Either value can be specified: however, both values cannot be specified at the same time for the same parameter. [Table 59: NPV/NP Mapping](#) shows the mapping between the `npv` and `np` parameter values.

cdgtasn (optional)

CdPA GTA GTT set name.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters.

cdgttsn (optional)

CdPA GTT set.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

cggtasn (optional)

CgPA GTA GTT set name.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters.

cggttsn (optional)

CgPA GTT set.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

cgpcsn (optional)

CgPA PC GTT set name.

Range:

ayyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters.

cgssn (optional)

CgPA subsystem number.

Range:

0 - 255

eag1egen (optional)

This parameter specifies whether the selector is used by EAGLE generated messages.

Range:**yes**

The selector is used by EAGLE generated messages

gti/gtia/gtii/gtin/gtin24/gtiis/gtins/gtin16 (optional)

Global title indicator.

For all EGTT selector commands, the domain is defined as GTI and GTIA (ANSI), GTII (ITU international), GTIN (ITU national), GTIN24 (24-bit ITU national), GTIIS (ITU international spare), and GTINS (ITU national spare) and GTIN16 (16-bit ITU National).

For the selector commands, GTI and GTIA are equivalent. GTT selectors can be provisioned for the same translation type (TT) with different ITU domains. For example, if an entry with `gtii=2` and `tt=4` already exists, an entry with `gtin=2` and `tt=4` can be specified.**Range:**

0, 2, 4

Supported value for ANSI: `gti=0, 2` and `gtia=0, 2`Supported values for ITU: `gtii/gtin/gtin24/gtiis/gtins/gtin16=0, 2, 4`**Default:**display all `gti(x)` parameter values**gttsn (optional)**

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

Default:

Display all

lsn (optional)

Linkset name.

Range:

ayyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

msgtype (optional)

SCCP message type.

Allow one or more SCCP message types (UDT/UDTS/XUDT/XUDTS) for every GTT Selector entry. This will help in screening different message types differently.

Range:**sub****u****us****x**

xs

all

Default

all

nai (optional)

Nature of Address indicator.

Range:

sub

rsvd

natl

intl

dflt

Default:

Display all

naiv (optional)

Nature of Address indicator value.

Range:

0 - 127

Default:

Display all

np (optional)

Numbering Plan.

Range:

e164

generic

x121

f69

e210

e212

e214

private

dflt

Default:
Display all

npv (optional)
Numbering Plan value.

Range:
0 - 15

Default:
Display all

ovrlapd (optional)
Overlapped GTT Selectors.

Range:

yes

Default:
no

selid (optional)
Selector ID.

Range:
0 - 65534, *none*

tt (optional)
Translation type.

Range:
0 - 255

Default:
Display all

Example

```
rtrv-gtttsel
rtrv-gtttsel:gtii=2
rtrv-gtttsel:tt=0:np=e164
rtrv-gtttsel:gti=2:tt=10
rtrv-gtttsel:gttsn=setint000

rtrv-
gttsel:gtia=2:tt=21:cggtsn=setcgpccdgtsn=setcdgta:cgssn=20:selid=
1:lsn=ls10

rtrv-gtttsel:gtia=2:tt=2:lsn=ls1010
rtrv-gtttsel:gtia=2:eaglegen=yes
rtrv-gtttsel:cdgtsn=setdpc
rtrv-gtttsel:ovrlapd=yes
```

```
rtrv-gtttsel:gtin16=2  
rtrv-gtttsel:msgtype=u  
rtrv-gtttsel:msgtype=u,us
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

Only entries that exactly match all specified parameters will be displayed. If no match is found, the following message is displayed in the Scroll Area of the terminal: "No GTT Selectors matching the specified criteria were found."

N/A N/A

The `np` and `npv` parameters cannot be specified together in the same command.

3551 E3551 Cmd Rej: NP and NPV must not be specified together

The `nai` and `naiv` parameters cannot be specified together in the same command.

3552 E3552 Cmd Rej: NAI and NAIV must not be specified together

The `gti/gtia=4`, `gti(x)=1`, and `gti(x)=3` parameters cannot be specified.

3553 E3553 Cmd Rej: GTI(A)=4, and GTI(x)=1 and 3 are not supported

If the `gti/gtia/gtii/gtin/gtin24/gtiis/gtins/gtin16=2` parameter is specified, then the `np/npv` and `nai/naiv` parameters cannot be specified.

3554 E3554 Cmd Rej: NP(V) and NAI(V) must not be specified for given GTI value

If a full GTT selector key is specified by the `gti(x)`, `tt`, `np/npv`, `nai/naiv`, `cgssn`, `selid`, and `lsn` parameters, then the GTT set specified by the `cgpcsn`, `cggtasn`, or `cggtsn` parameters cannot be specified.

4516 E4516 Cmd Rej: CgPA GTT set must not be specified

The OBSR feature must be enabled before the `cggtasn`, `cgpcsn`, `cgssn`, or `cdgtasn` parameters can be specified.

4393 E4393 Cmd Rej: Origin Based SCCP Routing feature must be enabled

The GTT set specified by the `cggtasn` or `cgpcsn` parameter must exist in the database before it is assigned to a GTT selector.

4486 E4486 Cmd Rej: CgPA GTT Set does not exist

The set type of the `cggtasn` or `cgpcsn` parameter must match the set type of the corresponding entry in the GTT set table. For example, the `cggtasn` parameter should have a set type of `cggtas`, and the `cgpcsn` parameter should have a set type of `cgpc`.

4488 E4488 Cmd Rej: CGGTASN/CGPCSN set type doesn't match

The SSNSELID table must be accessible.

4469 E4469 Cmd Rej: Failed reading SSNSELID table

The FLOBR feature must be turned on before the `lsn`, `eaglelegn`, `cdgttsn`, or `cggtsn` parameter can be specified.

5060 E5060 Cmd Rej: Flexible Linkset Optional Based Routing must be ON

If the `eaglelegn=yes` parameter is specified, then the `msgtype`, `lsn`, `selid`, `gttsn`, `cdgtasn`, `cgssn`, `cggtsn`, `cggtasn`, and `cgpcsn` parameters cannot be specified.

5061 E5061 Cmd Rej: Cannot use `msgtype/lsn/selid/gttsn/cg*` field if `eaglelegn=yes`

The value specified for the `cdgtasn` or `gttsn` parameter must match the name of an existing GTT set.

4511 E4511 Cmd Rej: CdPA GTT Set does not exist

The GTT set specified by the `cdgtasn` or `gttsn` parameter must have a set type of `cdgta` (see the `ent-gttset` command).

4519 E4519 Cmd Rej: CdPA GTT Set type must be `cdgta`

If the OBSR feature is enabled or the FLOBR feature is turned on, then the `gttsn` parameter cannot be specified.

2083 E2083 Cmd Rej: GTTSN parameter mustn't be specified

The GTT Set table is corrupt or cannot be found.

3544 E3544 Cmd Rej: Failed reading GTT Set Table

The GTT Selector table is corrupt or cannot be found.

3543 E3543 Cmd Rej: Failed reading GTT Selector Table

The GTTDBMM table is corrupt or cannot be found.

3120 E3120 Cmd Rej: Failed Reading GTT DBMM table

The linkset specified by the `lsn` parameter must already exist in the Linkset table.

2346 E2346 Cmd Rej: Linkset not defined

The CdPA GTT Set specified by the `gttsn`, `cdgtasn`, or `cdgttsn` parameter must already exist in the GTT Set table.

4511 E4511 Cmd Rej: CdPA GTT Set does not exist

A value of `dflt` must be specified for the `np` and `nai` parameters, or neither value can be `dflt`.

3578 E3578 Cmd Rej: NP and NAI must be specified as DFLT together

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

If a full GTT selector key is specified by the `gti(x)`, `tt`, `np/npv`, `nai/naiv`, `selid`, and `lsn` parameters, then the GTT set specified by the `gttsn`, `cdgtasn`, or `cdgttsn` parameters cannot be specified.

4517 E4517 Cmd Rej: CdPA GTT set must not be specified

If the `lsn` parameter is specified, then the `cdgttsn` or `cggtsn` parameter must be specified.

5062 E5062 Cmd Rej: CDGTASN and/or CGGTASN must be specified with LSN

The `cggtasn`, `cgpcsn`, and `cggttsn` parameters cannot be specified together in the command.

5128 E5128 Cmd Rej: CGGTASN, CGPCSN and CGGTASN are mutually exclusive

The `gttsn`, `cdgtasn`, and `cdgttsn` parameters cannot be specified together in the command.

5129 E5129 Cmd Rej: GTTSN, CDGTASN and CDGTASN are mutually exclusive

If the `gttsn`, `cdgttsn`, or `cdgtasn` parameter is specified, then the `cgssn` parameter cannot be specified.

5130 E5130 Cmd Rej: CGSSN must not be specified with GTTSN, CDGTASN or CDGTASN

If the `eaglegen=yes` parameter is specified, then the `lsn`, `selid`, `gttsn`, `cdgtasn`, `cgssn`, `cggttsn`, `cggtasn`, or `cgpcsn` parameters cannot be specified.

5061 E5061 Cmd Rej: Cannot enter lsn, selid, gttsn or cg* fields if eaglegen=yes

If the FLOBR feature is turned on, then the `cdgtasn`, `cggtasn`, and `cgpcsn` parameters cannot be specified.

5064 E5064 Cmd Rej: CDGTASN/CGGTASN/CGPCSN are not valid when FLOBR ON

If a value of `dflt` is specified for the `np` and `nai` parameters, then the `cggtasn`, `cgpcsn`, `cgssn`, `selid`, `lsn`, `cggttsn`, and `eaglegen` parameters cannot be specified.

5132 E5132 Cmd Rej: Invalid parameter(s) specified with NP=DFLT and NAI=DFLT

A value of `none` cannot be specified for the `gttsn`, `cdgtasn`, `cdgttsn`, `cggttsn`, `cggtasn`, and `cgpcsn` parameters.

4514 E4514 Cmd Rej: CdPA and/or CgPA GTT Set can't be specified as NONE

If the `gti(x)=0` parameter is specified, then the `eaglegen`, `tt`, `np/npv`, and `nai/naiv` parameters cannot be specified.

3507 E3507 Cmd Rej: EAGLEGEN,TT,NP(V),NAI(V) parameters mustn't be specified

Notes

There is no J7 FAK dependency on the GTIA/GTIN16/GTIN24 parameters. The command can be entered successfully whether the J7 FAK is enabled or not enabled.

GTT Selector entries configured using GTIN24/GTIN16 parameters shall be treated as ITU-N24 entries if the J7 FAK is disabled and shall be treated as ITU-N16 entries if the J7 FAK is enabled.

Also, if the J7 Support feature is enabled, the `rtrv-gttset` output displays the GTIN16 header and if the J7 feature is not enabled, the `rtrv-gttset` output displays the GTIN24 header.

When `msgtype` is specified in the `rtrv-gttset` command, the best match for the specified `msgtype` is shown in the output. For example, say there are two GTT

Selector entries provisioned with `msgtype=u,us` and `msgtype=us` for different GTI(x), TT, NP and NAI combination. The command `rtrv-gttset:msgtype=us` will display both selectors in the output.

Output

This example retrieves all GTT selectors when EGTT is ON:

```
rtrv-gttset
```

```
tekelecstp 10-04-15 13:54:13 EST EAGLE 42.0.0
GTIA  TT  NP  NAI  SELID  GTTSN
2     2   --  ---  none   setans002
2     5   --  ---  none   setans005

GTII  TT  NP  NAI  SELID  GTTSN
2     4   --  ---  none   setint004
4     4   dflt dflt  none   setint004

GTIN  TT  NP  NAI  SELID  GTTSN
2     6   --  ---  none   setnat006
4     6   dflt dflt  none   setnat006

GTIN24 TT  NP  NAI  SELID  GTTSN

GTIIS TT  NP  NAI  SELID  GTTSN
2     10  --  ---  none   setins010
4     10  dflt dflt  none   setins010

GTINS TT  NP  NAI  SELID  GTTSN
;
```

This example retrieves all GTT Selectors when the OBSR feature is enabled or the FLOBR feature is turned on:

```
rtrv-gttset
```

```
sccprte 10-04-15 14:31:52 EST EAGLE 42.0.0
GTI      CG      CDPA      CGPA
ANSI TT  NP  NAI  SSN  SELID  LSN      GTTSET      GTTSET
2     5   --  ---  any  none  lsa03    opc1      (opc ) cgssn2
(cgssn)
2     5   --  ---  202 1234  any      -----  (--- ) cggtal1
(cggtal)
2     5   --  ---  any  none  any      cdgtal1  (cdgta) cggtal1
(cggtal)
2     15  --  ---  ---  none  Eagle-Gen cdgta2  (cdgta) -----
(--- )
2     15  --  ---  202 1234  lsa02    -----  (--- ) cgssn1
(cgssn)
2     101 --  ---  ---  none  any      setans101(cdgta) -----
(--- )
2     102 --  ---  ---  none  any      a102     (cdgta) -----
```

```

(--- )
  2  202 --    --- --- none any      a102    (cdgta)
----- (--- )

      GTI                CG                CDDPA                CGPA
      INTL TT NP        NAI  SSN SELID LSN        GTTSET                GTTSET
  2  17  --    --- --- none Eagle-Gen  icdgta1 (cdgta)
----- (--- )
  2  101 --    --- --- none any      setint101(cdgta)
----- (--- )
  2  102 --    --- --- none any      int102   (cdgta)
----- (--- )
  2  222 --    --- --- none any      int102   (cdgta)
----- (--- )
  4  101 dflt  dflt --- none any      setint101(cdgta)
----- (--- )
  4  102 dflt  dflt --- none any      int102   (cdgta)
----- (--- )
  4  222 dflt  dflt --- none any      int102   (cdgta)
----- (--- )
  4  253 11    126 102 5678 any      ----- (--- )
icgpc2 (cgpc )
  4  253 11    15  any 5678 lsint02   icgssn2  (cgssn)
iopc2  (opc )

      GTI                CG                CDDPA                CGPA
      NATL TT NP        NAI  SSN SELID LSN        GTTSET                GTTSET
  2  103 --    --- --- none any      setnat103(cdgta)
----- (--- )
  2  104 --    --- --- none any      n104     (cdgta)
----- (--- )
  2  204 --    --- --- none any      n104     (cdgta)
----- (--- )
  4  18  f69   5  --- none Eagle-Gen  icdgta1 (cdgta)
----- (--- )
  4  103 dflt  dflt --- none any      setnat103(cdgta)
----- (--- )
  4  104 dflt  dflt --- none any      n104     (cdgta)
----- (--- )
  4  204 dflt  dflt --- none any      n104     (cdgta)
----- (--- )

      GTI                CG                CDDPA                CGPA
      N24  TT NP        NAI  SSN SELID LSN        GTTSET                GTTSET
  2  2  --    --- --- none any      n24      (cdgta)
----- (--- )
  2  124 --    --- --- none any      n24      (cdgta)
----- (--- )
  2  224 --    --- --- none any      set24n224(cdgta)
----- (--- )
  4  2  dflt  dflt --- none any      n24      (cdgta)
----- (--- )
  4  19  f69   5  --- none Eagle-Gen  icdgta1 (cdgta)
----- (--- )
  4  124 dflt  dflt --- none any      n24      (cdgta)

```

```

----- (--- )
  4 224 dflt dflt --- none any set24n224(cdgta) -----
(--- )

      GTI                      CG                      CDPA                      CGPA
      INTS TT NP              NAI SSN SELID LSN          GTTSET                      GTTSET
      2 5 --                --- --- none any          setins005(cdgta) -----
(--- )
      2 7 --                --- --- none any          ituis7 (cdgta) -----
(--- )
      4 5 dflt              dflt --- none any          setins005(cdgta) -----
(--- )
      4 7 dflt              dflt --- none any          ituis7 (cdgta) -----
(--- )

      GTI                      CG                      CDPA                      CGPA
      NATS TT NP              NAI SSN SELID LSN          GTTSET                      GTTSET
      2 5 --                --- --- none any          setnas005(cdgta) -----
(--- )
      2 7 --                --- --- none any          ituns7 (cdgta) -----
(--- )
      4 5 dflt              dflt --- none any          setnas005(cdgta) -----
(--- )
      4 7 dflt              dflt --- none any          ituns7 (cdgta) -----
(--- )
;

```

The following example illustrates rtrv-gttset output after introduction of MSGTYPE as a GTT Selector key:

```
rtrv-gttset
```

```

tekelecstp 17-04-15 14:31:52 EST EAGLE 46.6.0
      GTI                      CG                      CDPA                      CGPA
MSGTYPE ANSI TT NP              NAI SSN SELID LSN          GTTSET                      GTTSET
xs      2 17 --                --- --- none any          acdgta1 -----
      (cdgta)                      (--- )

      GTI                      CG                      CDPA                      CGPA
MSGTYPE INTL TT NP              NAI SSN SELID LSN          GTTSET                      GTTSET
u,us   2 17 --                --- --- none any          icdgta1 -----
      (cdgta)                      (--- )
xs      2 17 --                --- --- none any          setint101 -----
      (cdgta)                      (--- )
us,x   2 21 --                --- --- 15 any          setint104 -----
      (cdgta)                      (--- )
u,us,x 2 23 --                --- --- 15 any          setint109 -----
      (cdgta)                      (--- )
us      2 102 --              --- --- none any          setint102 -----
      (cdgta)                      (--- )
all     2 103 --              --- --- 15 any          setint103 -----
      (cdgta)                      (--- )

      GTI                      CG                      CDPA                      CGPA
MSGTYPE NATL TT NP              NAI SSN SELID LSN          GTTSET                      GTTSET

```

```

          GTI                      CG                      CDPA
CGPA
  MSGTYPE N24 TT NP      NAI SSN SELID LSN      GTTSET
GTTSET

          GTI                      CG                      CDPA
CGPA
  MSGTYPE INTS TT NP     NAI SSN SELID LSN      GTTSET
GTTSET

          GTI                      CG                      CDPA
CGPA
  MSGTYPE NATS TT NP     NAI SSN SELID LSN      GTTSET
GTTSET

```

The following example illustrates `rtrv-gttset` output when a single `msgtype` value is mentioned in the `msgtype` parameter.

```

rtrv-gttset:msgtype=us

tekelecstp 17-04-15 14:31:53 EST EAGLE 46.6.0
          GTI                      CG                      CDPA
CGPA
  MSGTYPE ANSI TT NP      NAI SSN SELID LSN      GTTSET
GTTSET

          GTI                      CG                      CDPA
CGPA
  MSGTYPE INTL TT NP      NAI SSN SELID LSN      GTTSET
GTTSET
  u,us    2    17  --      ---  --- none  any      icdgta1
-----
                                     (cdgta)
(--- )
  us,x    2    21  --      ---  --- 15   any      setint104
-----
                                     (cdgta)
(--- )
  u,us,x  2    23  --      ---  --- 15   any      setint109
-----
                                     (cdgta)
(--- )
  us      2    102 --      ---  --- none  any      setint102
-----
                                     (cdgta)
(--- )
  all     2    103 --      ---  --- 15   any      setint103
-----
                                     (cdgta)
(--- )

          GTI                      CG                      CDPA
CGPA

```

```

MSGTYPE NATL TT NP      NAI  SSN SELID LSN      GTTSET      GTTSET
      GTI
MSGTYPE N24  TT NP      NAI  SSN SELID LSN      GTTSET      GTTSET
      GTI
MSGTYPE INTS TT NP      NAI  SSN SELID LSN      GTTSET      GTTSET
      GTI
MSGTYPE NATS TT NP      NAI  SSN SELID LSN      GTTSET      GTTSET

```

The following example illustrates `rtrv-gttset` output when a `msgtype=all` is provided in command.

```
rtrv-gttset:msgtype=all
```

```

tekelecstp 17-04-15 14:31:53 EST  EAGLE 46.6.0
      GTI
MSGTYPE ANSI TT NP      NAI  SSN SELID LSN      GTTSET      GTTSET
      GTI
MSGTYPE INTL TT NP      NAI  SSN SELID LSN      GTTSET      GTTSET
all      2      103  --      ---  ---  15      any      setint103
                                         (cdgta)      (--- )
      GTI
MSGTYPE NATL TT NP      NAI  SSN SELID LSN      GTTSET      GTTSET
      GTI
MSGTYPE N24  TT NP      NAI  SSN SELID LSN      GTTSET      GTTSET
      GTI
MSGTYPE INTS TT NP      NAI  SSN SELID LSN      GTTSET      GTTSET
      GTI
MSGTYPE NATS TT NP      NAI  SSN SELID LSN      GTTSET      GTTSET

```

The following example illustrates `rtrv-gttset` output when two `msgtype` values are mentioned in the `msgtype` parameter:

```
rtrv-gttset:msgtype=u, x
```

```

tekelecstp 17-04-15 14:31:52 EST  EAGLE 46.6.0
      GTI
MSGTYPE ANSI TT NP      NAI  SSN SELID LSN      GTTSET      GTTSET
      GTI
MSGTYPE INTL TT NP      NAI  SSN SELID LSN      GTTSET      GTTSET
u,us     2      17  --      ---  ---  none  any      icdgtal
                                         (cdgta)      (--- )
us,x     2      21  --      ---  ---  15      any      setint104
                                         (cdgta)      (--- )

```

```

      u,us,x  2   23  --   ---  ---  15   any   setint109
-----
                                     (cdgta)
(--- )
      all    2   103 --   ---  ---  15   any   setint103
-----
                                     (cdgta)
(--- )

      GTI                      CG                      CDPA
CGPA
      MSGTYPE NATL TT  NP      NAI  SSN  SELID  LSN      GTTSET
GTTSET

      GTI                      CG                      CDPA
CGPA
      MSGTYPE N24  TT  NP      NAI  SSN  SELID  LSN      GTTSET
GTTSET

      GTI                      CG                      CDPA
CGPA
      MSGTYPE INTS TT  NP      NAI  SSN  SELID  LSN      GTTSET
GTTSET

      GTI                      CG                      CDPA
CGPA
      MSGTYPE NATS TT  NP      NAI  SSN  SELID  LSN      GTTSET
GTTSET

```

The below example illustrates `rtrv-gttset` output when three `msgtype` values are mentioned in the `msgtype` parameter. No more than three `msgtype` values can be mentioned in `msgtype` parameter.

```
rtrv-gttset:msgtype=u,x,xs
```

```

tekelecstp 17-04-15 14:31:52 EST  EAGLE 46.6.0
      GTI                      CG                      CDPA
CGPA
      MSGTYPE ANSI TT  NP      NAI  SSN  SELID  LSN      GTTSET
GTTSET
      xs    2   17  --   ---  ---  none  any   acdgtal
-----
                                     (cdgta)
(--- )

      GTI                      CG                      CDPA
CGPA
      MSGTYPE INTL TT  NP      NAI  SSN  SELID  LSN      GTTSET
GTTSET
      u,us  2   17  --   ---  ---  none  any   icdgtal
-----
                                     (cdgta)
(--- )

```



```

xs      2    17  --    ---  --- none  any    setint101  ----
      (cdgta)  (--- )
us,x    2    21  --    ---  --- 15   any    setint104  ----
      (cdgta)  (--- )
u,us,x  2    23  --    ---  --- 15   any    setint109  ----
      (cdgta)  (--- )
all     2   103  --    ---  --- 15   any    setint103  ----
      (cdgta)  (--- )

      GTI          CG          CDPA          CGPA
MSGTYPE NATL TT NP    NAI  SSN  SELID  LSN    GTTSET      GTTSET

      GTI          CG          CDPA          CGPA
MSGTYPE N24 TT NP    NAI  SSN  SELID  LSN    GTTSET      GTTSET

      GTI          CG          CDPA          CGPA
MSGTYPE INTS TT NP  NAI  SSN  SELID  LSN    GTTSET      GTTSET

      GTI          CG          CDPA          CGPA
MSGTYPE NATS TT NP  NAI  SSN  SELID  LSN    GTTSET      GTTSET
GTTSET

```

The below example illustrates `rtrv-gttset` output when the `msgtype` parameter is mentioned with the `tt` parameter. No more than three `msgtype` values can be mentioned in the `msgtype` parameter

```
rtrv-gttset:msgtype=xs:tt=17
```

```

tekelecstp 17-04-15 14:31:52 EST  EAGLE 46.6.0
      GTI          CG          CDPA          CGPA
MSGTYPE ANSI TT NP    NAI  SSN  SELID  LSN    GTTSET      GTTSET
xs      2    17  --    ---  --- none  any    acdgtal    ----
      (cdgta)  (--- )

      GTI          CG          CDPA          CGPA
MSGTYPE INTL TT NP    NAI  SSN  SELID  LSN    GTTSET      GTTSET
xs      2    17  --    ---  --- none  any    setint101  ----
      (cdgta)  (--- )

      GTI          CG          CDPA          CGPA
MSGTYPE NATL TT NP    NAI  SSN  SELID  LSN    GTTSET      GTTSET

      GTI          CG          CDPA          CGPA
MSGTYPE N24 TT NP    NAI  SSN  SELID  LSN    GTTSET      GTTSET

      GTI          CG          CDPA          CGPA
MSGTYPE INTS TT NP  NAI  SSN  SELID  LSN    GTTSET      GTTSET

      GTI          CG          CDPA          CGPA
MSGTYPE NATS TT NP  NAI  SSN  SELID  LSN    GTTSET      GTTSET

```

Legend

- **GTI/GTIA/GTII/GTIN/GTIN24/GTIN16**—Global title indicator
- **TT**—Translation type
- **NP**—Number plan
- **NAI**—Nature of address indicator
- **GTTSN**—GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.
- **MSGTYPE**—SCCP message type

Related Topics

- [chg-gttset](#)
- [dlt-gttset](#)
- [ent-gttset](#)

4.1.501 rtrv-gttset

Use this command to display a list of administered GTT sets. This list can be filtered by using the parameters shown.



Note:

If the EGTT feature is turned on, then the GTT Selector (`ent/chg/dlt/rtrvgttset`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrvgta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. It is not recommended to run `ent/dlt/rtrv-tt & ent/chg/dlt/rtrv-gtt` commands as it may cause the advance GTA fields of GTT entry to be reset to the default values.

Parameters

actsn (optional)

GTT Action Set Name.

Range:

`ayyyyyyy`

1 leading alphabetic and up to 8 following alphanumeric characters.

gtmodid (optional)

Global title modification identifier.

Range:

`ayyyyyyy`

Default:

Display all

gttsn (optional)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

netdom (optional)

Network domain. This command does not distinguish between ITU National or ITU International because the Enhanced Global Title Translation feature does not discriminate between the ITU-I and ITU-N translations.

Range:

ansi

itu

cross

Default:

Display all

npsn (optional)

GTT set name (Not Present Set Name). This parameter can have the IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA GTT set types.

Range:

ayyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

refcnt (optional)

GTT set reference count. The count of GTT set being referred in GTT Selectors, GTA Translations, BPARTYGTTSN and IS41SMSCGTTSN options in GSMSMSOPTS table and BPARTYGTTSN option in IS41SMSOPTS table.

Range:

yes

setidx (optional)

GTT set index.

**Note:**

A comma-separated setidx list that allow GTT set information to be retrieved based on the GTT index number. Up to 7 setidx can be specified in the list.

Range:

0 - 9999

settype (optional)

GTT set type.

Range:*cdgta**cdssn**cggta**cgpc**cgssn**dpc**imei**imsi**msisdn**opc**opcode**smrpda**smrpoa**vlrnb***Default:**

Display all

sxudt (optional)

Segmented XUDT. This parameter specifies whether TOBR will support the processing of segmented XUDT message.

Range:*yes*

perform decoding of segmented XUDT message

no

do not perform decoding of segmented XUDT message

Default:*no***Example**

```
rtrv-gttset
```

```
rtrv-gttset:netdom=ansi
```

```
rtrv-gttset:gttsn=t800
```

```
rtrv-gttset:netdom=ansi:settype=cdssn
```

```
rtrv-gttset:settype=opcode
```

```
rtrv-gttset:setidx=1
rtrv-gttset:actsn=actdisc1
rtrv-gttset:refcnt=yes
rtrv-gttset:gtmodid=set1
rtrv-gttset:npsn=imsi1
rtrv-gttset:setidx=3,7,65,22
rtrv-gttset:sxudt=yes
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

3557 E3557 Cmd Rej: EGTT must be ON

If the `gttsn` parameter is specified, it cannot have a value of *none*, and must match an existing `gttsn`.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

If the `netdom` parameter is specified, at least one entry must exist that exactly matches the specified value. Otherwise, the following error message appears in the scroll area:

```
No GTT Sets matching the specified criteria were found.
N/A N/A
```

The `netdom=cross` parameter is valid if the `settype=cdgta/imei/imsi/msisdn/vlrnb/smrpoa/smrpda` parameter is specified.

4402 E4402 Cmd Rej: SETTYPE must be CDGTA/MBR Type when NETDOM=CROSS

If the `gttsn` parameter is specified then the `settype`, `netdom`, `actsn`, and `gtmodid` parameters cannot be specified.

3047 E3047 Cmd Rej: Parameter combination invalid

The Origin-based SCCP Routing feature must be enabled if the value of the `settype` parameter is *cggt*, *cgssn*, *opc*, or *cgpc*.

4393 E4393 Cmd Rej: Origin Based SCCP Routing feature must be enabled

The ANSI/ITU SCCP Conversion feature must be enabled before the `netdom=cross` parameter can be specified.

4171 E4171 Cmd Rej: SCCP Conversion feature must be enabled

The TOBR feature must be turned on before the `opcode=settype` parameter can be specified.

5099 E5099 Cmd Rej: TCAP Opcode Based Routing feature must be turned ON

If the `setidx` parameter is specified, then no other parameter can be specified in the command.

3047 E3047 Cmd Rej: Parameter combination invalid

The FLOBR feature must be turned on before a value of *cdssn* or *dpc* can be specified for the `settype` parameter.

5060 E5060 Cmd Rej: Flexible Linkset Optional Based Routing must be ON

The value specified for the `gtmodid` parameter must already exist in the GTMOD table.

5285 E5285 Cmd Rej: GTMODID does not exist

The value specified for the `npsn` parameter must match the name of an existing GTT Set of IMEI/IMSI/MSISDN/VLRNB/SMRPOA/SMRPDA type.

3400 E3400 Cmd Rej: NPSN not configured under GTTSET

The SXUDT parameter must be specified with the OPCODE GTT set type only.

3458 E3458 Cmd Rej: DEFMAPVR/SXUDT can be specified with OPCODE SETTYPES only.

Duplicate values cannot be specified for the SETIDX parameter.

2067 E2067 Cmd Rej: Duplicate items not supported in list - setidx

Notes

When the Origin-based SCCP Routing feature is turned on, the `settype` parameter is displayed regardless of feature key status. If the feature key is not enabled, the `settype=cdgta` parameter (default value) is displayed.

Only entries that match the `setidx` values specified in the command will be displayed. If no GTTSet is found for a particular `setidx`, the following message is displayed in the Scroll Area of the terminal: "No Entry found." along with the `setidx` for which GTTSet was not found.

Output

This example retrieves all GTT sets:

```
rtrv-gttset
```

```
tekelecstp 10-05-04 12:57:51 EST EAGLE 42.0.0
GTTSN      NETDOM      NDGT
lidx      ansi         10
t800      ansi         6
s_i000    itu          15
imsi      itu          15
abcd1234  itu          12
setins005 itu          6
ituis7    itu          6
setnas005 itu          6
ituns7    itu          6
```

```
GTT-SET table is (5 of 2000) 1% full.
```

```
;
```

This example retrieves a specific GTT set:

```
rtrv-gttset:gttsn=t800

tekelecstp 09-08-14 13:46:14 EST EAGLE 41.1.0
GTTSN      NETDOM   NDGT
t800      ansi      6

GTT-SET table is (3 of 2000) 1% full.
;
```

This example retrieves all GTT sets when the VGTT feature is turned on:

```
rtrv-gttset

tekelecstp 09-08-14 13:46:56 EST EAGLE 41.1.0
GTTSN      NETDOM   NDGT
lidx      ansi      3,7,10
t800      ansi      4,6
s_i000    itu       10,15
imsi      itu       10,15
abcd1234  itu       12

GTT-SET table is (5 of 2000) 1% full.
;
```

This example retrieves GTT sets for a specified GTT set type when the Origin-based SCCP Routing feature is turned on:

```
rtrv-gttset:settype=cgpc

tekelecstp 09-08-14 12:59:19 EST EAGLE 41.1.0
GTTSN      NETDOM   SETTYPE  NDGT
pc00      ansi      CGPC      -
pc01      ansi      CGPC      -
pc02      itu       CGPC      -
pc03      ansi      CGPC      -
pc04      ansi      CGPC      -
pc05      ansi      CGPC      -

GTT-SET table is (8 of 2000) 1% full.
;
```

This example retrieves all GTT sets when the Origin-based SCCP Routing feature is turned on.

```
rtrv-gttset

rlghncxa03w 09-08-14 08:10:20 EST EAGLE 41.1.0
GTTSN      NETDOM   SETTYPE  NDGT
Pc10      cross   CDGTA    6,8,10,17
Pc11      ansi    CGGTA    10
```

```
Pc12      itu      CGPC      -
Pc13      itu      CGSSN     -
Pc14      ansi     OPC       -
Pc15      ansi     CGPC      -
```

GTT-SET table is (6 of 2000) 1% full.

;

Retrieve all GTT sets when the ANSI/ITU SCCP Conversion feature is enabled:

```
rtrv-gttset
```

```
rlghncxa03w 09-08-13 08:29:15 EST  EAGLE 41.1.0
GTTSN      NETDOM  NDGT
lidx       ansi    10
t800       ansi    6
s_i000     itu     15
imsi       itu     15
abcd1234   cross   12
```

GTT-SET table is (5 of 2000) 1% full.

;

This example retrieves all GTT sets when the Support for 16 GTT Lengths in VGTT feature is turned on:

```
rtrv-gttset
```

```
rlghncxa03w 09-08-13 08:16:15 EST  EAGLE 41.1.0
GTTSN      NETDOM  NDGT
lidx       ansi    1,3,5,6,7,8,9,10,11,12,13,14,18,21
t800       ansi    4,6
s_i000     itu     10,15
```

GTT-SET table is (3 of 2000) 1% full.

;

This example retrieves all GTT sets when the TOBR feature is turned on:

```
rtrv-gttset
```

```
tekelecstp 16-10-10 13:54:11 MST  EAGLE 46.5.0.0.0-70.5.0
GTTSN      NETDOM  SETTYPE  NPSN    CHECKMULCOMP  NDGT
Pc10       cross   CDGTA    -----  -----  6,8,10,17
Pc11       ansi    CGGTA    -----  -----  10
Pc12       itu     CGPC     -----  -----  -
Pc13       itu     CGSSN    -----  -----  -
Pc14       ansi    OPC      -----  -----  -
Pc15       ansi    CGPC     -----  -----  -
Pc16       itu     CDSSN    -----  -----  -
Pc17       -       OPCODE   -----  YES      -
```



```
GTT-SET table is (8 of 2000) 1% full.  
;
```

This example retrieves the GTT set entry on the basis of set index:

```
rtrv-gttset:setidx=1
```

```
tekelecstp 09-08-13 10:57:14 EST EAGLE 41.1.0  
Command entered at terminal #4.
```

GTTSN	NETDOM	SETTYPE	NDGT
setcggta	ansi	CGGTA	0

```
GTT-SET table is (3 of 2000) 1% full.  
;
```

This example retrieves GTT sets for DPC set type when the FLOBR feature is turned on:

```
rtrv-gttset:settype=dpc
```

```
tekelecstp 10-03-14 08:10:20 EST EAGLE 42.0.0  
GTTSN NETDOM SETTYPE NDGT
```

Setdpc	ansi	DPC	-
Setdpc1	ansi	DPC	-

```
GTT-SET table is (8 of 2000) 1% full.  
;
```

This example retrieves GTT set entries and the corresponding reference counts:

```
rtrv-gttset:refcnt=yes
```

```
tekelecstp 10-05-04 12:11:59 EST Eagle 42.0.0  
GTTSN NETDOM REFCNT NDGT
```

lidx	ansi	0	10
t800	ansi	2	6
s_i000	itu	1	15
imsi	itu	1	15
abcd1234	itu	0	12

```
GTT-SET table is (5 of 2000) 1% full.  
;
```

```
rtrv-gttset:gtmodid=set1

tekelecstp 10-01-10 12:13:21 EST EAGLE 42.0.0

GTTSN      NETDOM  NDGT
abc        ansi    6

GTT-SET table is (1 of 2000) 1% full.

;
```

This example retrieves GTT set entries after the NPSN parameter is added:

```
rtrv-gttset:settype=msisdn

tekelecstp 15-05-24 08:10:20 EST EAGLE 46.3.0
GTTSN      NETDOM  SETTYPE  NPSN      NDGT
Imsi1     ansi    MSISDN  imsi2     10
Msisdn3   itu     MSISDN  imsi3     -

GTT-SET table is (10 of 2000) 1% full.

;
```

```
rtrv-gttset

tekelecstp 15-05-24 08:10:20 EST EAGLE 46.3.0
GTTSN      NETDOM  SETTYPE  NPSN      NDGT
Pc10      cross  CDGTA   --        6,8,10,17 --
Pc11      ansi   CGGTA   --        10
Imsi1     ansi   MSISDN  imsi2     10
Imsi2     itu    IMSI    msisdn3   -
Msisdn3   itu    MSISDN  imsi3     -
Imsi3     ansi   IMSI    -         -

GTT-SET table is (6 of 2000) 1% full.

;
```

This example retrieves all GTT sets with new column SETIDX:

```
rtrv-gttset

tekelecstp 17-06-07 09:38:07 MST EAGLE 46.6

      GTTSN      NETDOM  SETTYPE  NPSN      CHECKMUL      GTTSET
      SXUDT NDGT  COMP      SETIDX MEASRQD
yes  op1        itu     OPCODE   -----   ---         0      no
      8
-    cdset2     itu     CDGTA   -----   ---         1      yes
      6
-    cdset3     itu     CDGTA   -----   ---         2      no
      8
```

```

resdata   itu   OPCODE  -----   off   3   trans  no   -
imsi1     itu   IMSI     -----   ---   4   yes    -   6
vlrnb1    itu   VLRNB   imsi1     ---   5   no     -   6

```

GTT-SET table is (6 of 10000) 1% full.;

This example retrieves the GTT set entry on the basis comma separated set index:

```
rtrv-gttset:setidx=3,44,2,90,106
```

```
tekelecstp 17-06-21 12:20:26 MST EAGLE 46.6
```

				CHECKMUL	GTTSET			
GTTSN	NETDOM	SETTYPE	NPSN	COMP	SETIDX	MEASRQD	SXUDT	NDGT
resdata	itu	OPCODE	-----	off	3	trans	no	-
No Entry found					44			
cdset3	itu	CDGTA	-----	---	2	no	-	8
No Entry found					90			
No Entry found					106			

GTT-SET table is (6 of 10000) 1% full.

This example retrieves GTT set entries on the basis of sxudt:

```
rtrv-gttset:sxudt=yes
```

```
tekelecstp 17-07-15 15:22:26 MST EAGLE 46.6
```

				CHECKMUL	GTTSET			
GTTSN	NETDOM	SETTYPE	NPSN	COMP	SETIDX	MEASRQD	SXUDT	NDGT
op1	itu	OPCODE	-----	off	3	no	yes	-
op2	itu	OPCODE	-----	---	2	yes	yes	8

GTT-SET table is (6 of 10000) 1% full.

Legend

- **GTTSN**—GTT set name
- **NETDOM**—Network domain
- **SETTYPE**—GTT set type
- **REFCNT**—Reference count
- **NDGT**—Number of digits required for GTAs associated with this set
- **NPSN**—Not present GTT set name
- **CHECKMULCOMP**—Decode multiple components of a TCAP Message
- **GTTSETMEASRQD**—Per GTTSET Measurement Required
- **SETIDX**—GTT set index
- **SXUDT**—Segmented XUDT

Related Topics

- [chg-gttset](#)

- [dlt-gttset](#)
- [ent-gttset](#)

4.1.502 rtrv-gtw-stp

Use this command to display the level 3 ANSI transfer control status (TFCSTAT) parameter. This value is the level 3 control status used on a TFC message received from an ITU node destined for an ANSI node.

Parameters

This command has no parameters.

Example

```
rtrv-gtw-stp
```

Dependencies

None

N/A N/A

Notes

None

Output

```
rtrv-gtw-stp
```

```
rlghncxa03w 03-03-11 11:34:04 EST EAGLE 31.3.0
TFCSTAT
1
;
```

Related Topics

- [chg-gtw-stp](#)

4.1.503 rtrv-gtwy-acthresh

Use this command to display the current values for the SS7 message rejection thresholds occurring because of the gateway screening process.

Parameters

lsn (optional)

Linkset name.

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Default:
Display all

Example

```
rtrv-gtwy-acthresh:lsn=wy644368
```

```
rtrv-gtwy-acthresh
```

Dependencies

The Extended Linkset table must be accessible.

2942 E2942 Cmd Rej: Failed reading/writing Extended Linkset Table

The specified linkset must exist in the gateway linkset entity set of the requesting system.

2928 E2928 Cmd Rej: The linkset specified is not a Gateway Linkset

The Linkset table must be accessible.

2122 E2122 Cmd Rej: Failed reading linkset table

The linkset specified must exist in the active database.

2346 E2346 Cmd Rej: Linkset not defined

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

Notes

None

Output

This example shows the thresholds of all linksets:

```
rtrv-gtwy-acthresh
```

```
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
LSN      REJ      RECV      INTRVL
WY644368 10       1000      10
WY234456 25       2000      20
LN123445 -        -         -
LN123556 25       2500      30
OP239900 -        5         5
```

```
;
```

This example shows linkset WY644368 rejection thresholds:

```
rtrv-gtwy-acthresh:lsn=wy644368
```

```
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
LSN      REJ      RECV      INTRVL
```

```

      wy644368 10      1000  10
:

```

Legend

- **LSN**—Linkset name
- **REJ**—Reject threshold
- **RECV**—Received message threshold
- **INTRVL**—Monitor interval

Related Topics

- [set-gtwy-acthresh](#)

4.1.504 rtrv-gtwy-prmtrs

Use this command to display the STP values that limit the display of certain notification messages that could become excessive. Only the values set by the `set-scrrej-prmtrs` command are displayed.

Parameters

This command has no parameters.

Example

```
rtrv-gtwy-prmtrs
```

Dependencies

The Extended STP Options table must be accessible.

2943 E2943 Cmd Rej: Failed reading/writing Extended STP Options Table

None

N/A N/A

Notes

None

Output

```
rtrv-gtwy-prmtrs
```

```

      rlghncxa03w 04-02-18 08:50:12 EST  EAGLE 31.3.0
      LIMIT INTRVL
      1000 15
;

```

Legend

- **LIMIT**—The threshold not to be exceeded.

- **INTRVL**—Monitor interval. The examination period, in minutes, during which the gateway screening activity thresholds are to be tested.

Related Topics

- [set-scrrej-prmtrs](#)

4.1.505 rtrv-gws-actset

Use this command to display the values defined for gateway screening stop actions.

Parameters

actid (optional)

The identification number of the gateway screening stop action.

Range:

4 - 16

Default:

Display all

actname (optional)

The name of the gateway screening stop action set.

Range:

ayyyy

One alphabetic character followed by up to five alphanumeric characters.

Default:

Display all

Example

```
rtrv-gws-actset
rtrv-gws-actset:actname=cr
rtrv-gws-actset:actid=6
```

Dependencies

Either `actname` or `actid` can be specified, but not both.

3678 E3678 Cmd Rej: ACTNAME and ACTID can not both be specified

Notes

If neither `actname` nor `actid` are specified, all gateway screening stop actions are displayed.

Output

```
rtrv-gws-actset:actname=cr

tekelecstp 13-10-24 12:05:05 EST 46.0.0-65.3.0
rtrv-gws-actset:actname=cr
```

```

Command entered at terminal #4.
ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT
ACT
10 ID NAME 1 2 3 4 5 6 7 8 9
---
-----
3 cr copy rdct -----
-----

```

GWS action set table is (6 of 16) 38% full

;

rtrv-gws-actset

```

tekelecstp 13-10-24 11:56:11 EST 46.0.0-65.3.0
rtrv-gws-actset
Command entered at terminal #4.
ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT
ACT
10 ID NAME 1 2 3 4 5 6 7 8 9
---
-----
1 copy copy -----
-----
2 rdct rdct -----
-----
3 cr copy rdct -----
-----
4 dup1 dup rdct -----
-----
5 dup2 copy dup -----
-----
6 strip strip -----
-----

```

GWS action set table is (6 of 16) 38% full

;

rtrv-gws-actset:actname=dup1

```

tekelecstp 13-10-24 12:04:21 EST 46.0.0-65.3.0
rtrv-gws-actset:actname=dup1
Command entered at terminal #4.
ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT ACT
ACT
10 ID NAME 1 2 3 4 5 6 7 8 9
---
-----

```



```

-----
      4  dupl  dup  ----- rdct  ----- ----- ----- -----
      GWS action set table is (6 of 16) 38% full

;

```

Related Topics

- [chg-gws-actset](#)

4.1.506 rtrv-gws-redirect

Use this command to display the provisioning data for the redirect function. The parameters and values that are retrieved using this command are stored in the Redirect table, and they are used to set the variable fields of the MSUs being redirected.

Parameters

This command has no parameters.

Example

```
rtrv-gws-redirect
```

Dependencies

None

NA

Notes

None

Output

The second column in the output displays the type of point code used:

- ANSI—DPCA
- International—DPCI
- ITU National—DPCN
- ITU National 24—DPCN24
- ITU National 16---DPCN16

```

rtrv-gws-redirect

rlghncxa03w 09-04-10 11:43:04 EST EAGLE 41.0.0
ENABLED      DPCA          RI  SSN  TT   GTA
off          003-033-003      GT  0   0   1
;

```

This example shows output when the gateway screening redirect function is not enabled:

```
rtrv-gws-redirect

rlghncxa03w 09-04-10 11:43:04 EST EAGLE 41.0.0
ENABLED   DPCA           RI   SSN  TT   GTA
Redirect function data is not provisioned
;

rtrv-gws-redirect

tekelecstp 13-07-02 15:48:55 EST 45.0.0-64.69.0
rtrv-gws-redirect
Command entered at terminal #4.
ENABLED   DPCN16         RI   SSN  TT   GTA
on        001-02-03      GT   10   100  5
;
```

Related Topics

- [chg-gws-actset](#)

4.1.507 rtrv-home-smsc

Use this command to retrieve HOME SMSC specific addresses currently used to identify Short Message Service Centers in the database. This command reads the HOME SMSCADDR table.

Parameters

force (optional)

Display more than 50 entries.

Range:

yes

no

Default:

no

num (optional)

Number of entries to display. The **force** parameter must also be specified to display more than 50 entries.

Range:

1 - 500

Default:

50

smsc (optional)

Short Message Service Center address.

Range:
1-21 hexadecimal digits

Example

```
rtrv-home-smsc  
rtrv-home-smsc:smsc=552611646  
rtrv-home-smsc:num=100:force=yes
```

Dependencies

One of the following features must be enabled

- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- MT-Based GSM SMS NP
- MT-Based IS41 SMS NP
- Portability Check for Mobile Originated SMS

4703 E4703 Cmd Rej: MNP SMS, MO/MT SMS NP or MO SMS IS412GSM Migr must be enbl

When the specified `num` parameter value is greater than 50, the `force=yes` parameter must also be specified.

3177 E3177 Cmd Rej: FORCE=YES/ON must be specified if NUM is greater than 50

The HOME SMSCADDR table must be accessible.

3475 E3475 Cmd Rej: Failure reading HOME SMSC Address entries

The GSM DBMM table must be accessible.

3546 E3546 Cmd Rej: Failed reading GSM DBMM Table

Notes

None

Output

```
rtrv-home-smsc  
  
rlghncxa03w 03-03-28 08:50:12 EST EAGLE 31.3.0  
SMSC ADDRESS  
  
13214564894498  
55231465465434  
5465455655656456  
  
HOME SMSC ADDRESS TABLE IS 1 % FULL (3 of 500)  
  
;
```

Related Topics

- [dlt-home-smisc](#)
- [ent-home-smisc](#)

4.1.508 rtrv-homern

Use this command to retrieve a list of routing number prefixes that belong to the operating network.

Parameters

This command has no parameters.

Example

```
rtrv-homern
```

Dependencies

The HOMERN table must be accessible.

```
3926 E3926 Cmd Rej: Failed reading HOMERN table
```

Notes

None

Output

```
rtrv-homern
```

```
rlghncxa03w 03-03-28 08:50:12 EST EAGLE 31.3.0  
RN
```

```
-----  
216780909087654  
76345098  
abc  
abc1234  
c10234567  
cabade
```

```
HOMERN table is (6 of 100) 6% full
```

```
;
```

Legend

- **RN**—Routing Number

Related Topics

- [dlt-homern](#)
- [ent-homern](#)

4.1.509 rtrv-inpopts

Use this command to retrieve INP-specific options.

Parameters

This command has no parameters.

Example

```
rtrv-inpopts
```

Dependencies

None.

The INPOPTS table must be accessible.

N/A N/A

Notes

If no DRANAI value or DRANAIV value has been provisioned, the command output displays the DRANAIV default value of 126.

If either the DRANAI value or DRANAIV value has been provisioned, the DRANAI mnemonic string for the provisioned value is displayed.

If no DRANP value or DRANPV value has been provisioned, the command output displays the DRANP default mnemonic value of E164.

If either the DRANP value or DRANPV value has been provisioned, the DRANP mnemonic string for the provisioned value is displayed.

The command output displays each CDPNPFx value with its associated DLTPFX setting.

The command output displays each CDPNNAI value with its associated SNAI value.

If no NEC value has been provisioned, a value of *none* is displayed.

If a RELCAUSE value was not provisioned, then the default value of 31 is displayed.

Output

This example shows output with default INP options:

```
rtrv-inpopts
```

```
rlghncxa03w 10-03-17 15:35:05 EST  EAGLE 42.0.0
INP OPTIONS
-----
NEC          = NONE
DRANAIV     = 126
DRANP       = E164
DRA         = RNDN
SPRESTYPE   = CONTINUE
RELCAUSE    = 31
```

```

SPORTTYPE = NONE
DEFRN     = NONE
CUTNPASTE = OFF

CDPNPFX           DLTPFX
-----          ----

CDPNNAI           SNAI
---              ----

```

;

This example shows output with some INP options provisioned.

```
rtrv-inpopts
```

```

rlghncxa03w 10-03-17 15:35:05 EST EAGLE 42.0.0
INP OPTIONS
-----
NEC          = abc1d
DRANAIV     = 126
DRANP       = E164
DRA         = CCRNDN
SPRESTYPE   = CONTINUE
RELCAUSE    = 30
SPORTTYPE   = ALL
DEFRN       = 99887
CUTNPASTE   = ON

CDPNPFX           DLTPFX
-----          ----

CDPNNAI           SNAI
---              ----
127               unknown

```

;

Legend

- **ASD**—Additional Subscriber Data
- **CDPNNAI**—Called Party Number Nature of Address Indicator
- **CDPNPFX**—Called Party Number Prefix
- **DLTPFX**—Delete Prefix
- **DRA**—Destination Routing Address.
- **DRANAI**—Nature of Address Indicator for the Destination Routing Address
- **DRANPV**—Numbering Plan Value for the Destination Routing Address
- **GRN**—Generic Routing Number.
- **NEC**—National Escape Code

- **SNAI**—Service Nature of Address Indicator
- **SPRESTYPE**—INP option to send a "Connect" message or a "Continue" message when IDP messages are received for INP services, the DN digits match, and the HLR ID is present
- **SPORTTYPE**—Service Portability Type
- **DEFNRN**—Default Routing Number
- **RELCAUSE**—INP CRP option, specifying the reason for releasing the call when an INP Circular Route is detected
- **CUTNPASTE**—Specifies whether the CutAndPaste parameter is included in an INP CONNECT response message

Related Topics

- [chg-inpopts](#)

4.1.510 rtrv-ip-card

Use this command to retrieve IP networking parameters for a given card.

Parameters

loc (optional)

Card location. The unique identifier of a specific application subsystem located in the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118, 1113, 1115

Example

```
rtrv-ip-card:loc=1211
```

```
rtrv-ip-card
```

Dependencies

The value specified for the `loc` parameter must correspond to the location of a card that can run an IP application (other than the EROUTE application, which is not supported by this command).

2212 E2212 Cmd Rej: Invalid card type for this command

Notes

None

Output

```
rtrv-ip-card:loc=1211
```

```
rlghncxa03w 13-09-24 15:35:05 EST EAGLE 46.0.0
```

```
LOC 1211
SRCHORDR LOCAL
DNSA      150.123.123.123
DNSB      -----
DEFROUTER -----
DOMAIN    NC.TEKELEC.COM
SCTPCSUM  adler32
DSCP      4
```

```
;
```

```
rtrv-ip-card
```

```
rlghncxa03w 13-09-24 15:35:05 EST EAGLE 46.0.0
```

```
LOC 1211
SRCHORDR LOCAL
DNSA      150.1.1.1
DNSB      -----
DEFROUTER -----
DOMAIN    NC.TEKELEC.COM
SCTPCSUM  adler32
DSCP      9
```

```
LOC 1213
SRCHORDR LOCAL
DNSA      150.1.1.1
DNSB      -----
DEFROUTER 150.1.1.25
DOMAIN    NC.TEKELEC.COM
SCTPCSUM  adler32
DSCP      15
```

```
LOC 1301
SRCHORDR SRVONLY
DNSA      150.1.1.10
DNSB      150.1.1.28
DEFROUTER -----
DOMAIN    NC.TEKELEC.COM
SCTPCSUM  adler32
DSCP      20
```

```
;
```

This example displays the output when an E5-SM4G or E5-SM8G-B card is used:


```
rtrv-ip-card

rlghncxa03w 13-09-24 22:12:42 EST EAGLE 46.0.0
  LOC 1105
    SRCHORDR LOCAL
    DNSA -----
    DNSB -----
    DEFROUTER -----
    DOMAIN -----
    SCTPCSUM crc32c
    BPIPADDR 192.168.124.2
    BPSUBMASK 255.255.255.0
    DSCP      9

  LOC 1107
    SRCHORDR LOCAL
    DNSA -----
    DNSB -----
    DEFROUTER -----
    DOMAIN -----
    SCTPCSUM crc32c
    BPIPADDR 192.168.124.4
    BPSUBMASK 255.255.255.0
    DSCP      8

  LOC 1111
    SRCHORDR LOCAL
    DNSA -----
    DNSB -----
    DEFROUTER -----
    DOMAIN -----
    SCTPCSUM crc32c
    BPIPADDR 192.168.124.3
    BPSUBMASK 255.255.255.0
    DSCP      15
```

Legend

- **LOC**—Card location
- **SRCHORDR**—Host table search order. LOCAL indicates that the Local Host table is searched first. SRVR indicates that the Domain server is searched first. SRVONLY indicates that only the Domain server is searched.
- **DNSA**—IP address of Domain Server A
- **DNSB**—IP address of Domain Server B
- **DEFROUTER**—IP address for the default router
- **DOMAIN**—TDomain name of the Domain server
- **SCTPCSUM**—SCTP checksum algorithm type
- **BPADDR**—Bonded port IPv6 address

Range:

yes

SIP/ENUM/SCCP/SFAPP/IPS with SFLOG connection is allowed to receive SIP/ENUM/SCCP/SFAPP/IPS with SFLOG traffic.

no

SIP/ENUM/SCCP/SFAPP/IPS with SFLOG connection is not allowed to receive SIP/ENUM/SCCP/SFAPP/IPS with SFLOG traffic.

prot (optional)

Underlying SIP/ENUM/SCCP/SFAPP/IPS with SFLOG connection protocol.

Range:

tcp

Transmission Control Protocol.

udp

User Datagram Protocol.

 **Note:**

For ENUMHC, only *udp* is supported.

For IPS with SFLOG, only *tcp* is supported.

Example

```
rtrv-ip-conn
rtrv-ip-conn:cname=conn1101a
rtrv-ip-conn:loc=1101
rtrv-ip-conn:prot=tcp
rtrv-ip-conn:lhost=lss1
rtrv-ip-conn:open=yes
```

Dependencies

SIPNP Feature must be enabled before retrieving any SIP connection entry.

At least one ENUM card must be provisioned before entering any ENUM connection information.

At least one IPS card with SFLOG=yes must be provisioned before entering any TCP connection information on IPS.

At least one SCCP/SFAPP card must be provisioned before entering any Visualization connection information.

3179 E3179 Cmd Rej: SIPNP Feat not enabled or required card not provisioned

IPCONN table should be accessible.

2668 E2668 Cmd Rej: Failure accessing IPCONN table

The value specified for the HOST parameter must begin with an alphabetic character and can contain a..z, A..Z, 0..9, - (hyphen), or . (period).

3731 E3731 Cmd Rej: Invalid Hostname

The specified card location must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The location specified with this command should be of a SIP/ENUM/IPS with SFLOG card.

3181 E3181 Cmd Rej: Card location specified must be an SIP/ENUM/SFLOG card

Notes

If optional parameters are specified, only the entries that match the entered parameters are displayed.

If the host name contains a hyphen, then the host name must be enclosed within quotation marks.

Output

This example displays output when no parameter is specified:

```
rtrv-ip-conn

tekelecstp 16-10-28 01:15:18 EST  EAGLE 46.4.0.0.0-69.15.0
rtrv-ip-conn
Command entered at terminal #4.
```

CNAME	PROT	LPORT	RPORT	OPEN
connection1	TCP	1555	1555	No
connection2	TCP	1234	1234	Yes
connection3	TCP	1202	----	No
connection4	TCP	1203	1203	No
connection5	TCP	1569	----	No
sipudpipv4	UDP	4900	----	No
sipudpipv4c	UDP	4800	----	No

;

This example displays the output when CNAME parameter is specified:

```
rtrv-ip-conn:cname=sipudpipv4

tekelecstp 16-10-28 01:17:26 EST  EAGLE 46.4.0.0.0-69.15.0
rtrv-ip-conn:cname=sipudpipv4
Command entered at terminal #4.

CNAME  sipudpipv4
```

```

          PROT    UDP
          LHOST   sipb1103
          RHOST   ----
          LPORT   4900          RPORT   ----
          OPEN    No
;

rtrv-ip-conn:cname=connection3

tekelecstp 16-10-28 01:17:26 EST  EAGLE 46.4.0.0-69.15.0
rtrv-ip-conn:cname=connection3
Command entered at terminal #4.

CNAME    connection3
PROT     TCP
LHOST    hss3
RHOST    ----
LPORT    1202          RPORT    ----
OPEN     No
;

```

This example displays the output when PROT parameter is specified:

```

rtrv-ip-conn:prot=udp

tekelecstp 16-10-28 01:18:56 EST  EAGLE 46.4.0.0-69.15.0
rtrv-ip-conn:prot=udp
Command entered at terminal #4.
CNAME          PROT    LPORT    RPORT    OPEN
-----
sipudpipv4     UDP     4900     ----     No
sipudpipv4c    UDP     4800     ----
No
;

rtrv-ip-conn:prot=tcp

tekelecstp 12-09-24 17:24:32 EST  EAGLE 45.0.0
rtrv-ip-conn:prot=tcp
Command entered at terminal #4.

CNAME          PROT    LPORT    RPORT    OPEN
-----
conn7          TCP     2022     2023     No
conn5          TCP     2021     2021     No
;

```

This example displays the output when LOC parameter is specified:

```

rtrv-ip-conn:loc=1101

tekelecstp 12-09-24 17:25:14 EST  EAGLE 45.0.0
rtrv-ip-conn:loc=1101

```

Command entered at terminal #4.

CNAME	PROT	LPORT	RPORT	OPEN
conn7	TCP	2022	2023	No
conn5	TCP	2021	2021	No
conn1	TCP	1555	----	No
conn2	TCP	1555	1567	No
conn3	TCP	1107	----	No

;

This example displays the output when LHOST parameter is specified:

```
rtrv-ip-conn:lhost=lss1
```

```
tekelecstp 12-09-24 17:26:00 EST EAGLE 45.0.0
rtrv-ip-conn:lhost=lss1
Command entered at terminal #4.
```

CNAME	PROT	LPORT	RPORT	OPEN
conn7	TCP	2022	2023	No
conn5	TCP	2021	2021	No
conn1	TCP	1555	----	No
conn2	TCP	1555	1567	No
conn3	TCP	1107	----	No

;

This example displays the output when OPEN parameter is specified:

```
rtrv-ip-conn:open=no
```

```
tekelecstp 16-10-28 01:18:56 EST EAGLE 46.4.0.0-69.15.0
rtrv-ip-conn:open=no
Command entered at terminal #4.
```

CNAME	PROT	LPORT	RPORT	OPEN
conn7	TCP	2022	2023	No
conn5	TCP	2021	2021	No
conn1	TCP	1555	----	No
conn2	TCP	1555	1567	No
conn3	TCP	1107	----	No
sipudpipv4	UDP	4900	----	No
sipudpipv4c	UDP	4800	----	No

;

Related Topics

- [dlt-ip-conn](#)
- [ent-ip-conn](#)
- [chg-ip-conn](#)

4.1.512 rtrv-ip-host

Use this command to retrieve the IP Host table. The IP Host table defines local host names for IP addresses.

Parameters**display (optional)**

This parameter displays the provisioned local or remote IP Host entries.

Range:***all***

displays all provisioned local and remote IP Host entries.

detail

displays the IP host and realm of all the provisioned local and remote IP Host entries.

host (optional)

Host name. The logical name of the device associated with the indicated IP address.

Range:

////////////////////////////////////

Any string of characters beginning with a letter and comprising up to 60 characters in length. Valid characters are a–z, A–Z, 0–9, - (dash), . (period)

ipaddr (optional)

The IP address associated with the hostname. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is *192.126.100.5*, where *192.126.100* is the network number and *5* is the machine's host number.

Range:

4 numbers separated by dots, with each number in the range of 0-255.

num (optional)

The number of IP Host entries displayed in the command output.

Range:

1 - 4096

System Default:

50

realm (optional)

Domain name from which the message can be sent or received for a particular IP Host.

Output

If this command is entered without any parameters, then the command displays up to a maximum of 50 entries. The `display=all` parameter must be specified to display all entries in the IP Host table.

This example displays output when no other parameter is specified:

```
rtrv-ip-host
```

```
tekelecstp 12-07-24 10:22:08 EST EAGLE 45.0.0
LOCAL IPADDR      LOCAL HOST
192.168.63.51     tekelecdmz11.com
192.168.63.115   tekelecdmz5.com
192.168.73.116   tekelecdmz7.com
192.168.63.52    tekelecdmz13.com
192.168.63.54    tekelecdmz14.com
192.168.63.55    hss4

REMOTE IPADDR     REMOTE HOST
192.168.63.235   tekelecdmz21.com
127.1.1.1        tekelec0.com
192.168.63.245   client
192.168.63.57    tekelec1.com
192.168.63.58    tekelec2.com
192.168.63.59    tekelec3.com
192.168.63.60    tekelec4.com
192.168.63.61    tekelec5.com
192.168.63.62    tekelec6.com
192.168.63.63    tekelec7.com
192.168.63.64    tekelec8.com
192.168.63.65    tekelec9.com
192.168.63.66    tekelec10.com
192.168.63.67    tekelec11.com
192.168.63.68    tekelec12.com
192.168.63.69    tekelec13.com
192.168.63.70    tekelec14.com
192.168.63.71    tekelec15.com
192.168.63.72    tekelec16.com
192.168.63.73    tekelec17.com
192.168.63.74    tekelec18.com
192.168.63.75    tekelec19.com
192.168.63.76    tekelec20.com
192.168.63.77    tekelec21.com
192.168.63.78    tekelec22.com
192.168.63.79    tekelec23.com
192.168.63.80    tekelec24.com
192.168.63.81    tekelec25.com
192.168.63.82    tekelec26.com
192.168.63.83    tekelec27.com
192.168.63.84    tekelec28.com
192.168.63.85    tekelec29.com
192.168.63.86    tekelec30.com
192.168.63.87    tekelec31.com
192.168.63.88    tekelec32.com
```

```
192.168.63.89 tekelec33.com
192.168.63.90 tekelec34.com
192.168.63.91 tekelec35.com
192.168.63.92 tekelec36.com
192.168.63.93 tekelec37.com
192.168.63.94 tekelec38.com
192.168.63.95 tekelec39.com
192.168.63.96 tekelec40.com
192.168.63.97 tekelec41.com
```

```
IP-HOST table is (68 of 4096) 2% full.
```

```
;
```

This example displays the output when the output is filtered:

```
rtrv-ip-host:type=local:num=3
```

```
tekelecstp 12-07-24 10:22:09 EST EAGLE 45.0.0
LOCAL IPADDR LOCAL HOST
192.168.63.51 tekelecdmz11.com
192.168.63.115 tekelecdmz5.com
192.168.73.116 tekelecdmz7.com
```

```
IP-HOST table is (68 of 4096) 2% full.
```

```
;
```

This example displays the output when all entries are requested:

```
rtrv-ip-host:display=all
```

```
tekelecstp 12-07-24 10:22:09 EST EAGLE 45.0.0
LOCAL IPADDR LOCAL HOST
192.168.63.51 tekelecdmz11.com
192.168.63.115 tekelecdmz5.com
192.168.73.116 tekelecdmz7.com
192.168.63.52 tekelecdmz13.com
192.168.63.54 tekelecdmz14.com
192.168.63.55 hss4

REMOTE IPADDR REMOTE HOST
192.168.63.235 tekelecdmz21.com
127.1.1.1 tekelec0.com
192.168.63.245 client
192.168.63.57 tekelec1.com
192.168.63.58 tekelec2.com
192.168.63.59 tekelec3.com
192.168.63.60 tekelec4.com
192.168.63.61 tekelec5.com
192.168.63.62 tekelec6.com
```

```
192.168.63.63 tekelec7.com
192.168.63.64 tekelec8.com
192.168.63.65 tekelec9.com
192.168.63.66 tekelec10.com
192.168.63.67 tekelec11.com
192.168.63.68 tekelec12.com
192.168.63.69 tekelec13.com
192.168.63.70 tekelec14.com
192.168.63.71 tekelec15.com
192.168.63.72 tekelec16.com
192.168.63.73 tekelec17.com
192.168.63.74 tekelec18.com
192.168.63.75 tekelec19.com
192.168.63.76 tekelec20.com
192.168.63.77 tekelec21.com
192.168.63.78 tekelec22.com
192.168.63.79 tekelec23.com
192.168.63.80 tekelec24.com
192.168.63.81 tekelec25.com
192.168.63.82 tekelec26.com
192.168.63.83 tekelec27.com
192.168.63.84 tekelec28.com
192.168.63.85 tekelec29.com
192.168.63.86 tekelec30.com
192.168.63.87 tekelec31.com
192.168.63.88 tekelec32.com
192.168.63.89 tekelec33.com
192.168.63.90 tekelec34.com
192.168.63.91 tekelec35.com
192.168.63.92 tekelec36.com
192.168.63.93 tekelec37.com
192.168.63.94 tekelec38.com
192.168.63.95 tekelec39.com
192.168.63.96 tekelec40.com
192.168.63.97 tekelec41.com
192.168.63.98 tekelec42.com
192.168.63.99 tekelec43.com
192.168.63.20 tekelec44.com
192.168.63.21 tekelec45.com
192.168.63.22 tekelec46.com
192.168.63.23 tekelec47.com
192.168.63.24 tekelec48.com
192.168.63.25 tekelec49.com
192.168.63.26 tekelec50.com
192.168.63.27 tekelec51.com
192.168.63.28 tekelec52.com
192.168.63.29 tekelec53.com
192.168.63.30 tekelec54.com
192.168.63.31 tekelec55.com
192.168.63.32 tekelec56.com
192.168.63.33 tekelec57.com
192.168.63.34 tekelec58.com
192.168.63.35 tekelec59.com
```

IP-HOST table is (68 of 4096) 2% full.

```
;
```

This example displays the output when the `display=detail` parameter is specified:

```
rtrv-ip-host:display=detail

tekelecstp 13-03-12 10:22:09 EST  EAGLE 45.1

REMOTE IPADDR      REMOTE HOST
                   REALM
1.1.1.13           a13
                   abc.com

1.1.1.12           a12

1.1.1.14           a14
                   abc.com

LOCAL IPADDR       LOCAL HOST
                   REALM
10.248.141.165    local11
                   xyz.com

IP-HOST table is (68 of 2048) 3% full.

;
```

This example displays the output when the `realm` parameter is specified:

```
rtrv-ip-host:realm=abc.com

tekelecstp 13-03-12 10:22:09 EST  EAGLE 45.1

REMOTE IPADDR      REMOTE HOST
1.1.1.13           a13
1.1.1.14           a14

IP-HOST table is (68 of 2048) 3% full.

;
```

This example displays the output when the `ipaddr` parameter is specified:

```
rtrv-ip-host:ipaddr=1.1.1.13

tekelecstp 13-03-12 10:22:09 EST  EAGLE 45.1

REMOTE IPADDR      REMOTE HOST
                   REALM
1.1.1.13           a13
```

```
abc.com  
  
IP-HOST table is (68 of 2048) 3% full.  
;
```

This example displays the output when the `host` parameter is specified:

```
rtrv-ip-host:host=a13  
  
tekelecstp 13-03-12 10:22:09 EST EAGLE 45.1  
  
REMOTE IPADDR    REMOTE HOST  
                REALM  
1.1.1.13         a13  
                abc.aricent.com  
  
IP-HOST  table is (68 of 2048) 3% full.  
;
```

This example displays the output when the output is filtered:

```
rtrv-ip-host:type=local:num=3  
  
tekelecstp 13-03-25 10:22:09 EST EAGLE 45.1.0  
LOCAL IPADDR    LOCAL HOST  
                REALM  
192.168.63.51   tekelecdmz11.com  
  
192.168.63.115  tekelecdmz5.com  
                test.com  
  
192.168.73.116  tekelecdmz7.com  
  
IP-HOST  table is (68 of 2048) 3% full.  
;
```

Related Topics

- [dlt-ip-host](#)
- [ent-ip-host](#)

4.1.513 rtrv-ip-lnk

Use this command to retrieve the IP link table.

Parameters

loc (optional)

Card location. The unique identifier of a specific application subsystem located in the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118, 1113, 1115

Default:

All card location link data are displayed.

port (optional)

Ethernet interface port ID.

Range:

a, b, c, d

Default:

All IP link port data associated with all ports on the card are displayed.

Example

```
rtrv-ip-lnk:loc=1211:port=a
```

```
rtrv-ip-lnk:loc=1211
```

```
rtrv-ip-lnk
```

```
rtrv-ip-lnk:loc=1211:port=c
```

Dependencies

The value specified for the `loc` parameter must correspond to the location of a card that can run an IP application (other than the EROUTE application, which is not supported by this command).

2212 E2212 Cmd Rej: Invalid card type for this command

The card in the location specified by the `loc` parameter must support the port specified by the `port` parameter.

2975 E2975 Cmd Rej: Specified Port is not supported

Notes

Interface A/D is used for ExAP connectivity, and interface B/C is used for signaling network on SLIC cards running the DEIR/SIP/ENUM applications.

Output

rtrv-ip-lnk

```

tekelecstp 14-06-05 11:18:06 MST EAGLE5 46.0.0-65.20.0
  LOC  PORT IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO
MCAST
  1102  A    10.255.1.2      255.255.255.0   ----   ---   DIX      YES
NO
  1102  B    -----        -----        FULL   100   DIX      NO
NO
  1103  A    192.168.53.52  255.255.255.0   ----   ---   DIX      YES
NO
  1103  B    -----        -----        FULL   100   DIX      NO
NO
  1106  A    192.168.53.50  255.255.255.0   FULL   100   DIX      NO
YES
  1106  B    -----        -----        HALF   10    DIX      NO
NO
  1107  A    192.168.120.2  255.255.255.0   HALF   100   DIX      NO
YES
  1107  B    192.168.121.2  255.255.255.0   HALF   10    DIX      NO
YES
  1111  A    192.168.120.1  255.255.255.0   HALF   100   DIX      NO
YES
  1111  B    192.168.121.1  255.255.255.0   HALF   10    DIX      NO
YES
  1113  A    192.168.53.92  255.255.255.0   ----   ---   DIX      YES
NO
  1115  A    192.168.53.93  255.255.255.0   ----   ---   DIX      YES
NO

IP-LNK table is (12 of 512) 2% full.

```

;

rtrv-ip-lnk:loc=1211

```

rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
  LOC  PORT IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO
MCAST
  1211  A    150.123.123.123 255.255.255.0   HALF   10    DIX      NO  NO
  1211  B    150.123.123.124 255.255.255.0   HALF   10    DIX      NO  NO

```

;

rtrv-ip-lnk:loc=1211:port=a

```

rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
  LOC  PORT IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO
MCAST

```

```

    1211 A    150.123.123.123  255.255.255.0    HALF    10    DIX
NO    NO
;

```

```
rtrv-ip-lnk:loc=1113
```

```

rlghncxa03w 10-04-01 21:20:37 GMT EAGLE5 42.0.0
  LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE
AUTO MCAST
  1113 A    150.1.1.1            255.255.255.0    FULL    100   DIX
NO    YES
  1113 B    -----              -----          FULL    10    DIX
NO    NO
;

```

```
rtrv-ip-lnk:loc=1115
```

```

rlghncxa03w 10-04-01 21:20:37 GMT EAGLE5 42.0.0
  LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE
AUTO MCAST
  1115 A    150.1.2.2            255.255.255.0    FULL    100   DIX
NO    YES
  1115 B    -----              -----          FULL    10    DIX
NO    NO
;.0-69.1.0

```

```
rtrv-ip-lnk:loc=1106
```

```
Command entered at terminal #4.
```

```

  LOC  PORT
    1106 A  DUPLEX = FULL  SPEED = 100  MACTYPE = DIX  AUTO = NO  MCAST
= NO
          IPADDR = 1.2.3.4          SUBMASK = 255.255.255.0

```

Legend

- **LOC**—Card location
- **PORT**—Ethernet interface port ID
- **IPADDR**—IPv4 address for the specified port
- **SUBMASK**—Subnet mask of the IPv4 interface
- **DUPLEX**—Mode of operation of the interface
- **SPEED**—Bandwidth for the interface in megabits per second
- **MACTYPE**—Media Access Control Type of the interface. 802.3 indicates the IEEE standard number 802.3 for Ethernet 1, and DIX indicates the Digital/Inter/Xerox de facto standard for Ethernet 2.

- **AUTO**—Whether to automatically determine duplex and speed. If YES, duplex and speed are automatically determined. If NO, duplex and speed are not automatically determined.
- **MCAST**—Multicast Control. Enables or disables multicast support for the interface. This parameter is necessary for INP, G-Port, and G-Flex to establish the connection from the Service Module card to the MPS system.

Related Topics

- [chg-ip-lnk](#)

4.1.514 rtrv-ip-node

Use this command to display one or more nodes that are directly connected to a IP data link. This command can display a connection, an application on a node, or an entire node. No parameters are required to display an entire node. An application can be specified by giving either the application name or its IP port on the node.

Parameters

ipaddr (optional)

Remote host IP address. This address is expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where *192.126.100* is the network number and *5* is the machine's host number.

Range:

1-223, 0-255

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

Default:

Display all

ipapp1 (optional)

IP application supported by the node.

ipport (optional)

Logical IP port that addresses the application on the node.

Range: *1024 - 5000*

Default:

Display all

iprte (optional)

Default router IP address. This address is expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where *192.126.100* is the network number and *5* is the machine's host number.

Range:

1-223, 0-255

4 numbers, separated by dots
1-223-first number
0-255-the other three numbers

Default:
Display all

loc (optional)

The card location as stenciled on the shelf of the system that contains the link that will be directly connected to the node.

Range:
1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

Default:
Display all

Example

```
rtrv-ip-node
rtrv-ip-node:ipaddr=193.4.201.50
rtrv-ip-node:ipaddr=193.4.201.50:ipport=1024
rtrv-ip-node:loc=1201
```

Dependencies

Only one of the `ipappl`, `ipport`, or `loc` parameters can be specified in the command.

2628 E2628 Cmd Rej: Only one of IPADDR, IPAPPL, IPRTE, or LOC can be specified

The `ipaddr` parameter must be specified before the `ipport` parameter can be specified.

2613 E2613 Cmd Rej: IPPORT can only be specified if IPADDR is specified

The shelf and card must be equipped.

N/A N/A

If the `loc` parameter is specified, the card location must be equipped with an IP data link.

2622 E2622 Cmd Rej: IPADDR not assigned to specified LOC

If the `iprte` parameter is not specified, then all IP nodes meeting the display criteria are displayed. If the IP node has no IP router assigned to it, dashes are displayed in the IPRTE field.

N/A N/A

Notes

None

Output

```
rtrv-ip-node:ipaddr=193.4.201.50:ipport=1022
```

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR          IPPORT  IPAPPL  LOC   CAP  IPRTE
IPPORT on Node not connected to any TCP/IP link.
```

;

```
rtrv-ip-node:ipaddr=193.4.111.55
```

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR          IPPORT  IPAPPL  LOC   CAP  IPRTE
IPADDR not connected to any TCP/IP Link.
```

;

Legend

- **IPADDR**—Remote host's IP address
- **IPPORT**—Logical IP port to address the application on the node
- **IPAPPL**—IP application supported by the node
- **LOC**—Card location as stenciled on the shelf of the system that contains the TCP/IP link that will be directly connected to the node
- **CAP**—Maximum percentage of ethernet capacity for this node connection
- **IPRTE**—Default router's IP address

Related Topics

- [dlt-ip-node](#)
- [ent-ip-node](#)

4.1.515 rtrv-ip-rte

Use this command to display all static IP route entries in the Static IP Route table, entries for a specific card, entries for a specific destination IP address, or entries for a specific gateway IP address.

Parameters**dest (optional)**

Destination IP Address. The IP Address of a remote destination host or network.

gtwy (optional)

Gateway IP Address. The IP address assigned to the gateway router that will properly forward IP datagrams with the destination IP address (*dest*) to the next-hop gateway router or final destination host.

Range:

4 numbers separated by dots, with each number in the range of 0-255.

The IP address 0.0.0.0 is not valid.

loc (optional)

Card location. The unique identifier of a specific IP card in the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

num (optional)

Number of IP route entries to be retrieved.

Range:

1 - 2048

Default:

2048

Example

```
rtrv-ip-rte
rtrv-ip-rte:loc=1301
rtrv-ip-rte:dest=128.252.10.5
rtrv-ip-rte:gtwy=140.190.15.3
```

Dependencies

Only one of the *dest*, *gtwy*, or *loc* optional parameters can be specified in a single command.

2609 E2609 Cmd Rej: Only one optional parameter may be specified

The value specified for the *loc* parameter must not correspond to an E5 TDM-A or TDM-B

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The specified destination IP address (*dest* parameter):

- Must not be the default route (0.0.0.0)
- Must not correspond to any loopback address (i.e. 127.X.X.X)

The specified gateway IP address (*gtwy* parameter):

- Must not be the default route (0.0.0.0)

- Must not correspond to any loopback address (i.e. 127.X.X.X)

Notes

None

Output

```
rtrv-ip-rte
```

```
rlghncxa03w 12-07-23 09:50:17 EST EAGLE 45.0.0
LOC  DEST          SUBMASK          GTWY
1301 128.252.10.5    255.255.255.255 140.188.13.33
1301 128.252.0.0      255.255.0.0      140.188.13.34
1301 150.10.1.1       255.255.255.255 140.190.15.3
1303 192.168.10.1     255.255.255.255 150.190.15.23
1303 192.168.0.0      255.255.0.0      150.190.15.24
```

```
IP Rte (5 of 2048) 1%
```

```
;
```

```
rtrv-ip-rte:loc=1301
```

```
rlghncxa03w 12-07-23 09:50:17 EST EAGLE 45.0.0
LOC  DEST          SUBMASK          GTWY
1301 128.252.10.5    255.255.255.255 140.188.13.33
1301 128.252.0.0      255.255.0.0      140.188.13.34
1301 150.10.1.1       255.255.255.255 140.190.15.3
```

```
IP Rte (5 of 2048) 1%
```

```
;
```

```
Command Executed
```

Notes**Legend**

- **LOC**—Card location
- **DEST**—Destination IP Address. Can be either IPv4 or IPv6 address
- **GTWY**—Gateway IP Address. Can be either IPv4 or IPv6 address
- **SUBMASK**—Subnet mask of the IP interface.

Related Topics

- [ent-ip-rte](#)

4.1.516 rtrv-is41-msg

Use this command to display the configured IS41 test message parameter values.

Parameters

msgn (mandatory)

Message number. The test message number that is retrieved.

Range:

1 - 10

Example

```
rtrv-is41-msg:msgn=5
```

Dependencies

The TSTMSG table is corrupt or cannot be found.

4819 E4819 Cmd Rej: Failure reading TSTMSG Table

None.

Output

```
rtrv-is41-msg:msgn=1
```

```
tekelecstp 08-12-02 10:47:51 EST EAGLE 40.1.0  
MSG = 1 ACTIVE = YES
```

```
CGPA_GT = 2  
CGPA_GT_NAI = 4 CGPA = 919818000001
```

```
CDPA_GT = 2  
CDPA_GT_NAI = 4 CDPA = 919818000002
```

```
CGPN_NAI = 1 CGPN_NP = 2  
CGPN_ES = 1 CGPN = 919818000007
```

```
CDPN_NAI = 1 CDPN_NP = 2  
CDPN_ES = 1 CDPN = 919818000008
```

```
rtrv-is41-msg:msgn=2
```

```
tekelecstp 11-10-05 11:48:46 EST EAGLE 44.0.0  
MSG = 2 ACTIVE = YES
```

```
CGPA_GT = 4  
CGPA_GT_NAI = 4 CGPA = 919818000009
```

```
CDPA_GT = 4  
CDPA_GT_NAI = 4 CDPA = 919818000005
```

```
CGPN_NAI = 1 CGPN_NP = 2  
CGPN_ES = 1 CGPN = none
```

```
CDPN_NAI = 1      CDPN_NP = 2
CDPN_ES = 1      CDPN = 919818000003
```

Related Topics

- [chg-is41-msg](#)
- [tst-msg](#)

4.1.517 rtrv-is41opts

Use this command to retrieve the IS41 option indicators maintained in the IS41OPTS table.

Parameters

This command has no parameters.

Example

```
rtrv-is41opts
```

Dependencies

The APORT or IGM feature must be enabled before this command can be entered.

3631 E3631 Cmd Rej: Incompatible Feature/Option status

Output

```
rtrv-is41opts
```

```
tekelecstp 10-03-15 12:49:20 EST EAGLE 42.0.0
```

```
IS41 OPTIONS
```

```
-----
SMSREQBYPASS      = NO
LOCREQDN          = SCCP
IEC               = NONE
NEC               = NONE
RSPCGPARI         = FRMSG
RSPCGPAPCP        = FRMSG
RSPCDPARI         = FRMSG
RSPCDPAPCP        = OFF
RSPCGPANAI        = NONE
RSPCGPANP         = NONE
RSPCGPATT         = NONE
MTPLOCREQNAI      = FRMSG
RSPPARM           = TLIST
RSPDIG            = RNDN
RSPNON            = NONE
RSPNP             = 2
RSPMIN            = HOMERN
MSCMKTID          = 0
MSCSWITCH         = 0
ESNMFG            = 0
```

```

ESNSN           = 0
RSPDIGTYPE     = 6
LOCREQRMHRN    = NO
TCAPSNAI       = FRMSG
MTPLOCREQLEN   = 15
SPORTTYPE      = IS41
DFLTRN         = 3
LOCREQRSPND    = OFF

```

```
;
```

Related Topics

- [chg-is41opts](#)
- [chg-is41smsopts](#)
- [rtrv-is41smsopts](#)

4.1.518 rtrv-is41smsopts

Use this command to display all IS41 SMS options from the database.

Parameters

This command has no parameters.

Example

```
rtrv-is41smsopts
```

Dependencies

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

None.

N/A N/A

Notes

None

Output

```
rtrv-is41smsopts
```

```

tekelecstp 09-06-20 11:49:00 EST  EAGLE 41.1.0
IS41 SMS OPTIONS
-----
BPARTYGTTSN   = NONE           MODAPARAM      = DA
MOIGMPFX      = IS412GSM       MOSMSACLEN     = 0
MOSMSDIGMAT   = EXACT         MOSMSNAI       = NAT
MOSMSGTTDIG   = SCCPCDPA     MOSMSTYPE      = ALL
SPORTTYPE     = GSM           SPFILL         = ON

```



```

DEFRN          = abcdef123456789

MTSMSACKN     = ACK           MTSMSCHKSRC    = NO
MTSMSDNFMT    = RN           MTSMSDLTR     = NO
MTSMSDLTRV    = NONE        MTMSMDIGTYPE  = 6
MTSMSNAKERR   = 5           MTSMSPARM    = DIGIT
MTSMSESN      = NO          MTSMSSSN     = 6
MTSMSTYPE     = RN

```

```
;
```

Related Topics

- [chg-is41opts](#)
- [chg-is41smsopts](#)
- [rtrv-is41opts](#)

4.1.519 rtrv-isup-msg

Use this command to display one ISUP test message or all ISUP test messages from the TESTMSG table. The TIF Test Tool processes ISUP test messages to verify the TIF and NPP provisioned configuration in the system.

Parameters

msgn (optional)

ISUP Test Message number. The ISUP test message number for which parameter values are displayed.

Range:

1 - 10

Dependencies

None.

N/A N/A

Example

```
rtrv-isup-msg
```

Output

```
rtrv-isup-msg
```

```

tekelecstp 08-10-30 14:55:45 EST  EAGLE 40.0.0
MSG = 1          ACTIVE = NO
  CGPN_NAI = 4          CGPN = 01234567890abcdef
  CDPN_NAI = 4          CDPN = 01234567890abcdef

  CGPN_CAT = 0

  NMBITS = 0

```

```
MSG = 2          ACTIVE = YES
  CGPN_NAI = 4      CGPN = 01234567890abcdef
  CDPN_NAI = 4      CDPN = 01234567890abcdef

  CGPN_CAT = 0

  NMBITS = 0
MSG = 3          ACTIVE = NO
  CGPN_NAI = 4      CGPN = 01234567890abcdef
  CDPN_NAI = 4      CDPN = 01234567890abcdef
  CGPN_CAT = 0
  NMBITS = 0
MSG = 4          ACTIVE = NO
  CGPN_NAI = 4      CGPN = 01234567890abcdef
  CDPN_NAI = 4      CDPN = 01234567890abcdef

  CGPN_CAT = 0

  NMBITS = 0
MSG = 5          ACTIVE = NO
  CGPN_NAI = 4      CGPN = 01234567890abcdef
  CDPN_NAI = 4      CDPN = 01234567890abcdef

  CGPN_CAT = 0

  NMBITS = 0
MSG = 6          ACTIVE = NO
  CGPN_NAI = 4      CGPN = 01234567890abcdef
  CDPN_NAI = 4      CDPN = 01234567890abcdef

  CGPN_CAT = 0

  NMBITS = 0
MSG = 7          ACTIVE = NO
  CGPN_NAI = 4      CGPN = 01234567890abcdef
  CDPN_NAI = 4      CDPN = 01234567890abcdef

  CGPN_CAT = 0

  NMBITS = 0
MSG = 8          ACTIVE = NO
  CGPN_NAI = 4      CGPN = 01234567890abcdef
  CDPN_NAI = 4      CDPN = 01234567890abcdef

  CGPN_CAT = 0

  NMBITS = 0
MSG = 9          ACTIVE = NO
  CGPN_NAI = 4      CGPN = 01234567890abcdef
  CDPN_NAI = 4      CDPN = 01234567890abcdef

  CGPN_CAT = 0

  NMBITS = 0
MSG = 10         ACTIVE = NO
```

```
CGPN_NAI = 4          CGPN = 01234567890abcdef
CDPN_NAI = 4          CDPN = 01234567890abcdef

CGPN_CAT = 0

NMBITS = 0
;
```

```
rtrv-isup-msg:msgn=10
```

```
tekelecstp 08-10-30 14:57:07 EST EAGLE 40.0.0
MSG = 10          ACTIVE = NO
CGPN_NAI = 4          CGPN = 01234567890abcdef
CDPN_NAI = 4          CDPN = 01234567890abcdef

CGPN_CAT = 0

NMBITS = 0
;
```

```
rtrv-isup-msg:msgn=1
```

```
tekelecstp 20-09-21 13:54:10 EST EAGLE 46.9.1.0.0
MSG = 1          ACTIVE = NO
CGPN_NAI = 4          CGPN = 01234567890abcdef
CDPN_NAI = 4          CDPN = 01234567890abcdef

CGPN_CAT = 0

NMBITS = 0

RDN = 11223344

CGPNBLSET = 10

GNAME = anamoly

SETTYPE = Both
;
```

```
rtrv-isup-msg:msgn=2
```

```
tekelecstp 21-11-25 01:37:44 MST EAGLE 47.0
MSG = 2          ACTIVE = YES
CGPN_NAI = 3          CGPN = 01234567890abcdef
CDPN_NAI = 3          CDPN = 01234567890abcdef

CGPN_CAT = 0

NMBITS = 0
```

```
RDN = 01234567890abcdef

CGPNBLSET = 0

GNAME = hello world

SETTYPE = None

;
```

Legend

MSG—ISUP Test Message number

ACTIVE—Indicates whether the ISUP test message will be sent to the network card in the test (0=NO, 1=YES)

CGPN_NAI—Calling Party Number Nature of Address Indicator

CGPN_CAT—CgPN Category

CGPN—Calling Party Number Digits

CDPN_NAI—Called Party Number Nature of Address Indicator

CDPN—Called Party Number Digits

NMBITS—Nm Bits that indicate whether a number portability lookup has already been performed in the network

RDN—Redirecting Number digits. The value for the RDN digits in the specified ISUP test message

SETTYPE— Set Type. Set to which generic name belongs in the incoming linkset

GNAME—Generic name in the specified ISUP test message

CGPNBLSET—Calling party blacklist set in the incoming linkset

Related Topics

- [chg-isup-msg](#)
- [tst-msg](#)

4.1.520 rtrv-j1

Use this command to retrieve information for a specified J1 interface or for all J1 interfaces that have been defined by the ent-j1 command.

Parameters

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,

3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Default:

All T1 card locations having J1 interfaces configured are listed.

j1port (optional)

J1 port number. The value must be a J1 port that has already been configured with a J1 interface on the specified J1 card having application as CCS7ITU.

Range:

1-8

Default:

If not specified, all T1 card locations having J1 interfaces configured are listed.

Example

```
rtrv-j1  
rtrv-j1:loc=1101:j1port=1
```

Dependencies

The `loc` and `j1port` parameters must be specified together, if any parameters are specified for the command.

3138 E3138 Cmd Rej: LOC and J1PORT parameter combination must be specified

The J1 interface of the J1 card specified by the `loc` parameter must already be defined before this command can be entered.

3136 E3136 Cmd Rej: J1 card location is unequipped

The card specified by the `loc` parameter must be a LIMT1 card type and the application must be CCS7ITU.

2212 E2212 Cmd Rej: Invalid card type for this command

The Card (IMT) table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

The J1 table must be accessible.

3164 E3164 Cmd Rej: Failed reading the J1 table

The port specified by the `j1port` parameter on the card specified by the `loc` parameter must already be equipped with a J1 interface.

3128 E3128 Cmd Rej: The J1PORT at the specified location is not equipped

The following card locations (`loc` parameter) are not valid for this command: 1113 - 1118 and all `xy09` and `xy10` locations (where `x` is the frame and `y` is the shelf).

2154 E2154 Cmd Rej: Card slot reserved by system

The `j1port` parameter must be in the range from 1 to 8.

2017 E2017 Cmd Rej: Integer is out of range, 1..8 - j1port

Notes

None.

Output

rtrv-j1

```
tekelecstp 13-12-20 13:16:13 EST 46.0.0-65.3.0
```

```
rtrv-j1
```

```
  J1
```

LOC	PORT	ENCODE	J1TSEL	LL
1101	3	B8ZS	LINE	133
1102	1	B8ZS	LINE	133
1102	2	B8ZS	LINE	133
1102	3	B8ZS	LINE	133

```
;
```

rtrv-j1:loc=1101:j1port=1

```
tekelecstp 13-12-20 13:16:13 EST 46.0.0-65.3.0
```

```
rtrv-j1
```

```
  J1
```

LOC	PORT	ENCODE	J1TSEL	LL
1101	3	B8ZS	LINE	133

TS1	1101,A	TS9	1101,B	TS17	-----
TS2	1101,A1	TS10	-----	TS18	-----
TS3	1101,B1	TS11	-----	TS19	-----
TS4	1101,B3	TS12	1102,B3	TS20	-----
TS5	1102,A	TS13	-----	TS21	-----
TS6	-----	TS14	-----	TS22	-----
TS7	1103.A	TS15	-----	TS23	-----
TS8	1104.A	TS16	-----	TS24	-----

```
;
```

Legend

- LOC-- J1 card location in the shelf.
- J1PORT--Number of the J1 port provisioned on the card in the specified location.
- ENCODE--Indicator for use of B8ZS or AMI encoding/decoding.
- J1TSEL-- J1 timing source indicator (external = master timing source, line= slave timing source).

Related Topics

- [chg-j1](#)
- [dlt-j1](#)

- ent-j1
- tst-j1

4.1.521 rtrv-l2t

Use this command to display the values of the SS7 MTP Level 2 timers. The timers are organized in 40 timer sets of 10 timer values each. The timer sets are grouped and system default values are initialized by specification (ANSI, ITU, High Speed for China, High Speed for Q.703 Annex A, JT Q703, and High Speed for Unchannelized T1). Each timer set is administered individually by the `chg-l2t` command. The `ent-slk` command is used to assign an SS7 signaling link to any of the timer sets. Each assigned link is associated with a timer set.

Parameters

l2tset (optional)

Level 2 timer set identifier, or timer set number. Up to 40 different SS7 MTP Level 2 timer sets can be defined.

Range:

1 - 40

Default:

Displays all timer sets

Example

```
rtrv-l2t
rtrv-l2t:l2tset=36
```

Dependencies

The Level 2 Timer Set table is corrupt or cannot be found.

2171 E2171 Cmd Rej: Failed reading level 2 timer set table

None.

N/A N/A

Notes

The timer values are shown in the output for this command in seconds, even though they were specified in milliseconds in the `chg-l2t` command.

Output

The timer values are shown in the output for this command in seconds.

```
rtrv-l2t
```

```
tekelecstp 02-01-02 18:39:27 MST EAGLE 46.0.0-65.9.0
rtrv-l2t
```

Command entered at terminal #3.

;

tekelecstp 02-01-02 18:39:27 MST EAGLE 46.0.0-65.9.0

LEVEL 2 TIMERS (IN SECONDS)

L2TSET	T1	T2	T3	T4NPP	T4EPP	T5	T6	T7	NODATA	TE
1	9.0	9.0	9.0	2.3	0.60	0.09	4.0	0.3	0.10	--
2	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5	0.10	--
3	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5	0.10	--
4	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5	0.10	--
5	9.0	9.0	9.0	2.3	0.60	0.10	4.0	0.3	0.10	--
6	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5	0.10	--
7	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5	0.10	--
8	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5	0.10	--
9	9.0	9.0	9.0	2.3	0.60	0.10	4.0	0.3	0.10	--
10	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5	0.10	--
11	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5	0.10	--
12	49.0	49.0	2.0	8.2	0.50	0.10	4.0	2.0	0.10	--
13	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5	0.10	--
14	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5	0.10	--
15	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5	0.10	--
16	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5	0.10	--
17	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5	0.10	--
18	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5	0.10	--
19	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5	0.10	--
20	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5	0.10	--
21	150.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8	0.10	--
22	90.0	90.0	2.0	30.0	0.50	0.10	5.0	2.0	0.10	--
23	150.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8	0.10	--
24	150.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8	0.10	--
25	150.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8	0.10	--
26	300.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8	0.10	--
27	300.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8	0.10	--
28	300.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8	0.10	--
29	300.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8	0.10	--
30	300.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8	0.10	--
31	151.0	14.0	14.0	30.0	3.00	0.08	3.0	0.5	0.10	--
32	151.0	14.0	14.0	30.0	3.00	0.08	3.0	0.5	0.10	--
33	151.0	14.0	14.0	30.0	3.00	0.08	3.0	0.5	0.10	--
34	151.0	14.0	14.0	30.0	3.00	0.08	3.0	0.5	0.10	--
35	70.0	7.0	7.0	30.0	3.00	0.12	3.0	2.0	0.10	--
36	15.0	5.0	3.0	--	3.00	0.20	5.0	2.0	0.10	--
0.024										
37	15.0	5.0	3.0	--	3.00	0.20	5.0	2.0	0.10	--
0.024										
38	15.0	5.0	3.0	--	3.00	0.20	5.0	2.0	0.10	--
0.024										
39	15.0	5.0	3.0	--	3.00	0.20	5.0	2.0	0.10	--
0.024										
40	15.0	5.0	3.0	--	3.00	0.20	5.0	3.0	0.10	--
0.024										

;

This example displays timer values for a specified timer set:

```
rtrv-l2t:l2tset=36
```

```
tekelecstp 02-01-02 18:42:26 MST EAGLE 46.0.0-65.9.0
LEVEL 2 TIMERS (IN SECONDS)
L2TSET T1 T2 T3 T4NPP T4EPP T5 T6 T7 NODATA TE
36 15.0 5.0 3.0 -- 3.00 0.20 5.0 2.0 0.10 0.024
```

Legend

- **L2TSET**—SS7 MTP Level 2 timer set identifier or number
- **T1**—Aligned ready
- **T2**—Not aligned
- **T3**—Aligned
- **T4NPP**—Proving period normal
- **T4EPP**—Proving period Emergency
- **T5**—Sending SIB
- **T6**—Remote congestion
- **T7**—Excessive delay of acknowledgment
- **NODATA**—Amount of time with no data
- **TE**— Error rate monitoring

Related Topics

- [chg-l2t](#)
- [ent-slk](#)
- [rtrv-slk](#)

4.1.522 rtrv-l3t

Use this command to show values of the SS7 level 3 timers. The timers are grouped into sets that are assigned to linksets.

Parameters

l3tset (optional)

Level 3 timer set table. Only one level 3 timer set table can be defined. The timer set can then be assigned to a linkset using the `ent-ls` or `chg-l3t` command.

Range:

1

Default:

Display table

Example

```
rtrv-l3t:l3tset=1
```

Dependencies

Only one timer set is supported in this release.

N/A N/A

Notes

The timer output for this command is in seconds, even though it could have been entered in milliseconds in the `chg-l3t` command.

Output

```
rtrv-l3t:l3tset=1
```

```

rlghncxa03w 04-02-17 16:03:12 EST EAGLE 31.3.0
LEVEL 3 TIMERS (IN SECONDS)
  L3TSET   T1      T2      T3      T4      T5      T6      T7
          1      0.8    1.4    0.8    0.8    0.8    0.8    1.0
          T8      T9      T10     T11     T12     T13     T14
          0.8    --     30.0   30.0   0.8    0.8    2.0
          T15     T16     T17     T18     IT18    T19     IT19
          3.0    1.4    0.8    10.0   19.0   480.0  67.0
          T20/IT22 IT20    T21/IT23 IT21     T22     T23     T24
          90.0   59.0   90.0   63.0   10.0   10.0   10.0
          T25     T26     T27     T28     T29     T30     T31
          30.0   12.0   --     3.0    60.0   30.0   60.0
          T32
          60.0
;

```

Legend

- **L3TSET**—Level 3 timer set table.
- **T1**—Delay, in seconds, to avoid message missequencing on changeover. Also used as the ITU MTP restart isolation timer.
- **T2**—Amount of time, in seconds, to wait for changeover acknowledgment
- **T3**—Time controlled diversion – the delay, in seconds, to avoid missequencing on changeback
- **T4**—Amount of time, in seconds, to wait for changeback acknowledgment, first attempt
- **T5**—Amount of time, in seconds, to wait for changeback acknowledgment, second attempt
- **T6**—Delay, in seconds, to avoid message missequencing on controlled rerouting
- **T7**—Amount of time, in seconds, to wait for signaling data link connection acknowledgment

- **T8**—Transfer-prohibited inhibited timer (transient solution)
- **T10**—Amount of time, in seconds, to wait before repeating the signaling-route-set-test message
- **T11**—Transfer-restricted timer
- **T12**—Amount of time, in seconds, to wait for uninhibit acknowledgment
- **T13**—Amount of time, in seconds, to wait for force uninhibit
- **T14**—The amount of time, in seconds, to wait for inhibition acknowledgment
- **T15**—Amount of time, in seconds, to wait before repeating the signaling-route-set-congestion test
- **T16**—Amount of time, in seconds, to wait for route-set-congestion status update
- **T17**—Delay, in seconds, to avoid oscillation of initial alignment failure and link restart
- **T18**—Repeat TFR once by response method timers
- **IT18**—Timer within an STP whose MTP restarts to supervise the receipt of routing information and the activation of the link and link set. The amount of time, in seconds, to wait for links to align and to receive TRAs from all adjacent nodes.
- **T19**—Failed link craft referral timer
- **IT19**—Amount of time, in seconds, for the supervision timer to wait during MTP restart to avoid ping-pong of TFP, TFR1, and TRA messages
- **T20/IT22**—Amount of time, in seconds, to wait before repeating the local inhibit test
- **IT20**—Amount of time, in seconds, to wait overall for the MTP restart at the signaling point whose MTP restarts
- **T21/IT23**—Amount of time, in seconds, to wait before repeating the remote inhibit test
- **IT21**—Overall MTP restart timer at a signaling point adjacent to one whose MTP restarts
- **T22**—Timer at the restarting STP. The amount of time, in seconds, to wait for signaling links to become available
- **T23**—Timer at the restarting STP. Starting after T22, the amount of time, in seconds, to wait to receive all TRA messages.
- **T24**—Timer at the restarting STP with transfer function. Starting after T23, the amount of time, in seconds, to wait to broadcast all TRA messages.
- **T25**—Timer at the adjacent and restarting STPs. The amount of time, in seconds, to wait for a TRA message (may be started at level 2).
- **T26**—Timer at the restarting STP. The amount of time, in seconds, to wait to repeat a TRW message.
- **T28**—Timer at the STP adjacent to the restarting STP. The amount of time, in seconds, to wait for a TRW message.
- **T29**—Timer started when a TRA message is sent in response to an unexpected TRA or TRW. Also, the timer started when traffic is resumed without receipt of a TRA message.
- **T30**—Timer used to limit the sending of TFPs/TFRs in response to an unexpected TRA or TRW message
- **T31**—False link congestion detection timer
- **T32**—Link oscillation timer—Procedure A

Related Topics

- [chg-l2t](#)
- [chg-l3t](#)
- [ent-ls](#)
- [rtrv-l2t](#)
- [rtrv-ls](#)

4.1.523 rtrv-lbp

Use this command to retrieve the current value of a far-end loopback point maintained in the link fault sectionalization table.

Parameters**lbp (optional)**

Loopback point ID. A far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to and including the target device).

Range:

1 - 32

Default:

Display all

link (optional)

SS7 signaling link. The SS7 signaling link that is to be tested.

Synonym:

port

Range:

a, b, a1 - a31, b1 - b31

Not all card types support all link parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have assigned signaling links.

Default:

Display all

loc (optional)

Card location. The unique identifier of a specific application subsystem located in the STP.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 531, 6101 - 6108, 6111 - 6118

Default:
All card locations.

Example

```
rtrv-lbp
rtrv-lbp:loc=1202
rtrv-lbp:loc=1202:link=a
rtrv-lbp:loc=1202:link=a:lbp=3
```

Dependencies

The Link Fault Sectionalization (LFS) feature must be on before this command can be entered.

2870 E2870 Cmd Rej: LFS feature must be ON

The card location specified in the `loc` parameter cannot be reserved by the system.

2376 E2376 Cmd Rej: Specified LOC is invalid

If the `link` parameter is specified, the `loc` parameter must be specified. If the `lbp` parameter is specified, the `loc` and `link` parameters must be specified.

2903 E2903 Cmd Rej: LOC and PORT parameter combination must be specified

The card location (`loc` parameter) must identify a provisioned E5-E1T1-B card, provisioned with the LIMT1 card type, configured with either the SS7ANSI or CCS7ITU application.

2892 E2892 Cmd Rej: LOC is not LFS capable

The card location specified in the `loc` parameter must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The Link Fault Sectionalization table containing the Loopback Point (LBP) database must be accessible.

2891 E2891 Cmd Rej: Failed reading Link Fault Sectionalization table

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

Output

This example displays the attributes for the loopback points for SS7 links assigned to the STP:

```
rtrv-lbp

rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0
LOC  PORTLINK  LBP  RLE  REP  CLLI  LFST
1101  A        1   DS0  0   -----  LLT
      7   OCU  0   -----  NLT
      9   NEI  0   -----  LLT
```

```

1102  A      2   DS0  0  ----- LLT
          3   DS0  4  ----- LLT
          4   NEI  0  ----- LLT

1102  B      1   DS0  0  ----- LLT
          6   NEI  0  ----- LLT

1215  A      1   DS0  0  ----- LLT
          3   DS0  4  ----- LLT
          5   DS0  5  ----- LLT
          7   DS0  8  ----- LLT
          9   NEI  0  ----- LLT
;

```

This example displays the attributes for the loopback points for the SS7 links A and B of the LIM card residing in the first frame, first shelf, and second slot of the STP:

```
rtrv-lbp:loc=1102
```

```

rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0
LOC  LINK  LBP  RLE  REP  CLLI  LFST
1102  A      2   DS0  0  ----- LLT
          3   DS0  4  ----- LLT
          4   NEI  0  ----- LLT

1102  B      1   DS0  0  ----- LLT
          6   NEI  0  ----- LLT
;

```

This example displays the attributes for the loopback points for the SS7 link A of the LIM card residing in the first frame, first shelf, and second slot of the STP:

```
rtrv-lbp:loc=1102:link=a
```

```

rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0
LOC  LINK  LBP  RLE  REP  CLLI  LFST
1102  A      2   DS0  0  ----- LLT
          3   DS0  4  ----- LLT
          4   NEI  0  ----- LLT
;

```

This example displays the attributes for loopback point 3 for the SS7 link A of the LIM card residing in the first frame, first shelf, and second slot of the STP:

```
rtrv-lbp:loc=1102:link=a:lbp=3
```

```

rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0
LOC  LINK  LBP  RLE  REP  CLLI  LFST
1102  A      3   DS0  4  ----- LLT
;

```

This example displays the attributes for the loopback points for the SS7 link A of the LIM card residing in the first frame, first shelf, and second slot of the STP. No loopback points have been provisioned.

```
rtrv-lbp:loc=1102:link=a
```

```
rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0
LOC LINK LBP RLE REP CLLI LFST
```

```
No loopback points meeting the requested criteria were found
;
```

Related Topics

- [act-lbp](#)
- [chg-lbp](#)
- [dact-lbp](#)
- [dlt-lbp](#)
- [ent-lbp](#)

4.1.524 rtrv-lg-card

Use this command to retrieve and display LG card provisioning.

The command class is TKLC_INTERNAL inheriting properties of DEBUG class.

The Load Generator is supported on IPSG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
rtrv-lg-card:loc=1302
```

Dependencies

The card location must not be 1113-1118, or xy09 and xy10 where x is the frame and y is the shelf.

2154 E2154 Cmd Rej: Card slot reserved by system

The LG Card table is corrupt or cannot be found.

5222 E5222 Cmd Rej: Unable to read LG Card table

Loc is mandatory

2379 E2379 Cmd Rej: Missing parameter

The card location specified in the `loc` parameter must be of a provisioned LG card.

5239 E5239 Cmd Rej: LG card not defined

Output

```
rtrv-lg-card:loc=1302
```

```
tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
LG Card Configuration
LG Card Loc: 1302    LG Group: lggroup1
5 of 64 Engines (TX - 3, RX - 2), TX - 300 MSUs/sec
```

TX Engine(s)

		ENGINE				EVENT	
ENGINE	EVENT	PORT	RATE	ACTION	RXENGINE	DIR	TYPE
CLASS							
txengine1	isuptx1	A	100	NONE	-	TX	MSU INT
txengine2	isuptx1	A1	100	NONE	-	TX	MSU INT
txengine3	isuptx1	A2	100	NONE	-	TX	MSU INT

RX Engine(s)

		ENGINE				EVENT	
ENGINE	EVENT	PORT	RATE	ACTION	RXENGINE	DIR	TYPE
CLASS							
rxengine1	isuprx1	---	---	SNK	-	RX	MSU ---
rxengine2	isuprx2	---	---	SNK	-	RX	MSU ---

LG Card table is (1 of 250) 1% full

Command Completed.

;

Related Topics

- [act-lg-card](#)
- [chg-lg-card](#)
- [dact-lg-card](#)
- [dlt-lg-card](#)
- [ent-lg-card](#)
- [rept-stat-lg](#)

4.1.525 rtrv-lg-engine

Use this command to retrieve and display LG engine provisioning, as well as the total number of engines configured. The command class is `TKLC_INTERNAL` inheriting properties of `DEBUG` class. The Load Generator is supported on `IPSG`, `IPLHC`, `IPGHC` and `SS7HC` GPLs.

Parameters

engine (optional)

LG Engine name

Range:

ayyyyyyyyy

Up to 10 alphanumeric characters; the first character must be a letter.

Example

```
rtrv-lg-engine
```

```
rtrv-lg-engine:engine=rxengine1
```

Dependencies

The value specified for the `engine` parameter must already exist in the LG Engine table.

5209 E5209 Cmd Rej: LG Engine not defined

The LG Engine table is corrupt or cannot be found.

5212 E5212 Cmd Rej: Unable to read LG Engine table

Output

```
rtrv-lg-engine
```

```

tekelecstp 09-04-29 18:15:20 EST  xx.x.x-xx.x.x
LG Engine Configuration
TX Engine(s)

ENGINE          LOC  EVENT          ENGINE          EVENT
ENGINE  LOC  EVENT          PORT RATE ACTION RXENGINE  DIR TYPE CLASS
txengine1 1302 isuptx1     A    100  NONE   -          TX  MSU  INT
rxengine1 1302 isuprx1     -    -    SNK    -          RX  MSU  -
RX Engine(s)

ENGINE          LOC  EVENT          ENGINE          EVENT
ENGINE  LOC  EVENT          PORT RATE ACTION RXENGINE  DIR TYPE CLASS
rxengine2 1304 isuprx2     -    -    SNK    -          RX  MSU  -
rxengine3 1305 isuprx2     -    -    SNK    -          RX  MSU  -
LG Engine table is (4 of 2048) 1% full
Command Completed.
;

```

This example displays the output for a specified LG Engine.

```
rtrv-lg-engine:engine=rxengine1
```

```

tekelecstp 09-04-29 18:15:20 EST  xx.x.x-xx.x.x
LG Engine Configuration

ENGINE          LOC  EVENT          ENGINE          EVENT
ENGINE  LOC  EVENT          PORT RATE ACTION RXENGINE  DIR TYPE CLASS
rxengine1 1302 isuprx1     -    -    SNK    -          RX  MSU  -

```

```
LG Engine table is (4 of 2048) 1% full  
Command Completed  
;
```

Related Topics

- [act-lg-engine](#)
- [chg-lg-engine](#)
- [dact-lg-engine](#)
- [dlt-lg-engine](#)
- [ent-lg-engine](#)
- [rept-stat-lg](#)

4.1.526 rtrv-lg-event

Use this command to display an LG event provisioning. The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

dir (optional)

Direction of Event generation or reception.

Range:

Tx
Transmit Event

Rx
Receive Event

event (optional)

The name of the LG event.

Range:

ayyyyyyyy

Up to 10 alphanumeric characters; the first character must be a letter

Example

```
rtrv-lg-event  
rtrv-lg-event:event=txisup1  
rtrv-lg-event:event=txsnml  
rtrv-lg-event:dir=rx
```

Dependencies

When failed to read LG Event table.

5223 E5223 Cmd Rej: Unable to read LG Event table

The value specified for the `event` parameter must already exist in the table.

5227 E5227 Cmd Rej: LG Event not defined

The `dir` or `event` parameter must be specified.

2609 E2609 Cmd Rej: Only one optional parameter may be specified

The value specified for the `event` parameter cannot be an Eagle reserved name

3040 E3040 Cmd Rej: <string> cannot be used in this command

Output

```
rtrv-lg-event
```

```
tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
LG Event Configuration
```

```
TX Event(s)
```

EVENT	DIR	TYPE	CLASS	CARD	ENGINE	PORT	RATE	ACTN	RXENGINE
txisup1	TX	MSU	INT	1302	txengine1	A	100	NONE	-
				1304	txengine10	A1	10	NONE	-
txisup2	TX	MSU	INT	1302	txengine2	B	20	NONE	-
				1304	txengine20	B1	50	NONE	-
txsccp1	TX	MSU	INT	1305	txengine2	B	20	NONE	-
				1306	txengine20	B1	50	NONE	-
txisup3	TX	MSU	INT	----	-----	---	-----	-	-
txsnml	TX	MSU	INT	1305	txsnmevent1	A	10	NONE	-
txsccp	TX	MSU	INT	1304	txengine5	---	-----	-	-
txtest	TX	MSU	INT	1304	txengine15	A	0	NONE	-

```
RX Event(s)
```

EVENT	DIR	TYPE	CLASS	CARD	ENGINE	PORT	RATE	ACTN	RXENGINE
rxisup1	RX	MSU	-	1302	rxengine1	---	-----	SNK	-

```
LG Event table is (8 of 256) 3% full
```

```
Command Completed.
```

```
;
```

```
rtrv-lg-event:event=txisup1
```

```
tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
LG Event Configuration
```

EVENT	DIR	TYPE	CLASS	CARD	ENGINE	PORT	RATE	ACTION	RXENGINE
txisup1	TX	MSU	INT	1302	txengine1	A	100	NONE	-
				1304	txengine10	A1	10	NONE	-

```
SIF
```

```
MINISIZE:          MAXSIZE:
```

```
MTP LAYER
```

```
SI: 5          DPC :    1-1-1
```

```
OPC :    2-2-2
```

```
PRIORITY: 0     MINSL: 0
```

```
MAXSLS: 255
```

```
ISUP LAYER
```

```
MINCIC: 0
```

```
MAXCIC: 4294967295
```

```
LG Event table is (8 of 256) 3% full
```

```

Command Completed.
;

rtrv-lg-event:event=txsnm1

tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
LG Event Configuration
EVENT          DIR TYPE CLASS CARD ENGINE          PORT RATE ACTION
RXENGINE
txsnm1         TX  MSU  INT   1305 txsnmevent1 A    10  NONE  -
SIF
  MINSIZE:          MAXSIZE:
MTP LAYER
  SI: 0            DPC   :    1-1-1            OPC   :    2-2-2
SNM Information
  MINSLS: 0        MAXSLS: 255                CPC   :    -
  CNGLVL: 0        CAUSE: 0    USRID: 0    HOH1: TFA
LG Event table is (8 of 256) 3% full
Command Completed.
;

rtrv-lg-event:dir=rx

tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
LG Event Configuration
EVENT          DIR TYPE CLASS CARD ENGINE          PORT RATE ACTION
RXENGINE
rxisup1        RX  MSU  -    1302 rxengine1  -    -    SNK   -
LG Event table is (8 of 256) 3% full
Command Completed.
;

rtrv-lg-event:event=txsccp

tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
LG Event Configuration
EVENT          DIR TYPE CLASS CARD ENGINE          PORT RATE ACTN
RXENGINE
txsccp         TX  MSU  INT   1304 txengine5  ---  ----- -    -
SIF
  MINSIZE: 60      MAXSIZE: 60
MTP LAYER
  SI: 3            DPC   :    001-001-001    OPC   :    001-001-002
  PRIORITY: 0      MINSLS: 0                MAXSLS: 255
SCCP LAYER
  CLASS: 15        RI: SSN    TT: 100        SSN: 10
  START GTA: -    END GTA: -
LG Event table is (8 of 256) 3% full.
;

```

```
rtrv-lg-event:event=txttest
```

```
tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
LG Event Configuration
EVENT      DIR TYPE CLASS CARD ENGINE      PORT RATE  ACTN RXENGINE
txttest    TX  MSU  INT   1304 txengine15  A    0    NONE -
SIF
      MINSIZE: 40    MAXSIZE: 40
MTP LAYER
      SI: 2      DPC :    001-004-007    OPC :    001-001-003
      PRIORITY: 0    MINSLS: 0    MAXSLS: 255
LG Event table is (8 of 256) 3% full.
;
```

Related Topics

- [chg-lg-event](#)
- [dlt-lg-event](#)
- [ent-lg-event](#)
- [rept-stat-lg](#)

4.1.527 rtrv-lg-grp

Use this command to retrieve and display LG card groups. The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSP, IPLHC, IPGHC and SS7HC GPLs.

Parameters

grp (optional)

LG group name

Range:

ayyyyyyyy

Up to 10 alphanumeric characters; the first character must be a letter

Example

```
rtrv-lg-grp
rtrv-lg-grp:grp=lgroup1
```

Dependencies

The value specified for the `grp` parameter must already exist in the LG Group table.

5207 E5207 Cmd Rej: LG Group not defined

The LG Group table is corrupt or cannot be found.

5221 E5221 Cmd Rej: Unable to read LG Group table

Output

```
rtrv-lg-grp
```

```
tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
rtrv-lg-grp
Command entered at terminal #4.
LG Group Configuration
Group Name      NUM  LOC
lggroup1        12   1301, 1302, 1304, 1305, 1306, 1307, 1308,
1311,
                1312, 1313, 1314, 1315
lggroup2         1   1304
lggroup3         0   ----
LG Group table is (3 of 16) 19% full
Command Completed.
;
```

```
rtrv-lg-grp:grp=lggroup2
```

```
tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
rtrv-lg-group:grp=lggroup2
Command entered at terminal #4.
LG Group Configuration
Group Name      NUM  LOC
lggroup2         1   1304
LG Group table is (3 of 16) 19% full
Command Completed.
;
```

Related Topics

- [act-lg-grp](#)
- [dact-lg-grp](#)
- [dlt-lg-grp](#)
- [ent-lg-grp](#)
- [rept-stat-lg](#)

4.1.528 rtrv-lg-sys

Use this command to display and retrieve all LG groups, cards, engines and events provisioning in the system.

The command class is TKLC_INTERNAL inheriting properties of DEBUG class. The Load Generator is supported on IPSG, IPLHC, IPGHC and SS7HC GPLs.

Parameters

No Parameters

Example

```
rtrv-lg-sys
```

Dependencies

The LG System table is corrupt or cannot be found.

5220 E5220 Cmd Rej: Unable to read LG System table

The LG Engine table is corrupt or cannot be found.

5212 E5212 Cmd Rej: Unable to read LG Engine table

The LG Group table is corrupt or cannot be found.

5221 E5221 Cmd Rej: Unable to read LG Group table

The LG Card table is corrupt or cannot be found.

5222 E5222 Cmd Rej: Unable to read LG Card table

When failed to read LG Event table.

5223 E5223 Cmd Rej: Unable to read LG Event table

Output

```
rtrv-lg-sys
```

```
tekelecstp 09-04-29 18:15:20 EST xx.x.x-xx.x.x
rtrv-lg-sys
Command entered at terminal #4.
LG System Configuration
DIR      GROUPS   CARDS    ENGINES  EVENTS
TX       -        -        20       30
RX       -        -        10       20
Total    5        10       30       50
Command Completed.
```

```
;
```

Related Topics

- [act-lg-sys](#)
- [dact-lg-sys](#)
- [rept-stat-lg](#)

4.1.529 rtrv-lnp-serv

Use this command to retrieve all LNP services. This command displays the assigned translation type, translation type name, service type, LNP digit validity indication, and TT aliases.

Parameters

This command has no parameters.

Example

```
rtrv-lnp-serv
```

Dependencies

The LNP TT SERV table is corrupt or cannot be found.

3123 E3123 Cmd Rej: Failed Reading LNP TT SERV table

The LNP feature must be turned on before this command can be entered.

3009 E3009 Cmd Rej: LNP feature must be ON

The LNP database is corrupt or cannot be found.

2601 E2601 Cmd Rej: Command aborted due to system error

The GTT Action table is corrupt or cannot be found.

5067 E5067 Cmd Rej: Unable to access GTT Action table

Notes

None

Output

This example shows output when EGTT is ON.

```
rtrv-lnp-serv
```

```
rlghncxa03w 10-11-11 13:45:15 EST EAGLE 43.0.0
SERV  TT  TTN      DV  ALIAS  GTTRQD  SELID  DFLTACT
CNAM  1    cnam1    SCCP ---    On     10     fallback
      8      On     20     discact
LIDB  2    lidb1    SCCP ---    Off    None   discact
      19     On     None   falltogtt
AIN   3    ain      TCAP ---    Off    None   fallback
UDF1  22   udf1     TCAP ---    ---    ---    ---
```

```
LNP-SERV TABLE IS 2% FULL (6 of 256)
```

```
;
```

```
rtrv-lnp-serv
```

```
rlghncxa03w 10-11-11 14:42:38 EST EAGLE 43.0.0
SERV  TT  TTN      DV  ALIAS  GTTRQD  SELID  DFLTACT
AIN   15  AINGTE   TCAP ---    On     None   discact
LIDB  20  LIDB     SCCP ---    Off    None   fallback
      5      On     10     discact
WNP   22  WNP      TCAP ---    Off    20     fallback
LNPQS 11  LNPQS    TCAP ---    On     None   fallback
PCS   12  PCS      TCAP ---    On     54     discact
CLASS 25  CLASSGTE SCCP ---    Off    88     falltogtt
```



```

UDF1  201  UDF1      SCCP  ---  ---  ---  ---

LNP-SERV TABLE IS 3% FULL (8 of 256)
;

```

This example shows output when the LNP SMS feature is turned on and provisioned:

```
rtrv-lnp-serv
```

```

rlghncxa03w 10-11-11 14:42:38 EST EAGLE 43.0.0
SERV  TT  TTN      DV  ALIAS  GTTRQD  SELID  DFLTACT
AIN   15  AINGTE   TCAP ---    On     None   fallback
      236  Off     None   discudts
LIDB  20  LIDB     SCCP ---    On     10    discact
WNP   22  WNP      TCAP ---    On     87    fallback
LNPQS 11  LNPQS    TCAP ---    On     100   fallback
PCS   12  PCS      TCAP ---    Off   None   discudts
CLASS 25  CLASSGTE SCCP ---    On     34    falltogtt
WSMSC 55  WSMSC    SCCP ---    On     52    discudts
UDF1  201  UDF1     SCCP ---    ---   ---   ---

LNP-SERV TABLE IS 3% FULL (9 of 256)
;

```

This example shows output when the LNP SMS feature is not turned on but is provisioned:

```
rtrv-lnp-serv
```

```

rlghncxa03w 10-11-11 14:42:38 EST EAGLE 43.0.0
SERV  TT  TTN      DV  ALIAS  GTTRQD  SELID  DFLTACT
AIN   15  AINGTE   TCAP ---    Off   None   discudts
      236  On     None   fallback
LIDB  20  LIDB     SCCP ---    On     10    discact
WNP   22  WNP      TCAP ---    Off   105   fallback
LNPQS 11  LNPQS    TCAP ---    On     None   discact
CLASS 25  CLASSGTE SCCP ---    On     30    discudts
WSMSC* 55  WSMSC    SCCP ---    Off   None   fallback
UDF1  201  UDF1     SCCP ---    ---   ---   ---
      235  ---   ---   ---

LNP-SERV TABLE IS 3% FULL (9 of 256)
;

```

This example shows output when an entry is provisioned for the LRNQT feature.

```
rtrv-lnp-serv
```

```

rlghncxa03w 10-11-11 14:42:38 EST EAGLE 43.0.0
SERV  TT  TTN      DV  ALIAS  GTTRQD  SELID  DFLTACT
LNPQS 11  LNPQS    TCAP ---    Off   None   falltogtt
PCS   12  PCS      TCAP ---    On     33    discact
AIN   15  AINGTE   TCAP ---    On     None   fallback

```

```

                236    Off    39    discact
LIDB  20  LIDB    SCCP  ---    On    20    falltogtt
WNP   22  WNP    TCAP  ---    Off   None  fallback
CLASS 25  CLASSGTE SCCP  ---    On    50    discact
UDF1  201 UDF1    SCCP  ---    ---   ---   ---
LRNQT 239 LRNQT   TCAP  ---    On    None  fallback

```

```
LNP-SERV TABLE IS 3% FULL (9 of 256)
```

```
;
```

This example shows output when Dual ExAP Config is enabled.

```

exap 12-07-10 18:33:00 MST EAGLE 45.0.0-64.37.0
SERV TT TTN DV ALIAS RQDTBLNOP GTTRQD SELID DFLTACT
LIDB 1 lidb SCCP ----- DISC
                        4 UDTS
                        225 DISC

```

```
LNP-SERV table is 1% full (3 of 256)
```

```
;
```

Legend

- **SERV**—Reserved service type name
- **TT**—Translation type
- **TTN**—Translation type name
- **DV**—Digits valid
- **ALIAS**—Alias translation type
- **SELID**—GTT Selector ID
- **GTTRQD**—GTT Required
- **DFLTACT**—Default GTT Action ID

Related Topics

- [chg-lnp-serv](#)
- [dlt-lnp-serv](#)
- [ent-lnp-serv](#)

4.1.530 rtrv-lnpopts

Use this command to display all the LNP-specific system options from the database.

Parameters

This command has no parameters.

Example

```
rtrv-lnpopts
```

Dependencies

The LNP feature or AINPQ feature must be turned on before this command can be entered.

2986 E2986 Cmd Rej: LNP or AINPQ feature must be ON

The LNP Options table must be accessible.

3198 E3198 Cmd Rej: Failed reading LNP Options table

The LNP database must be accessible.

2416 E2416 Cmd Rej: Unable to access database. Severe database failure

Notes

None

Output

The JIPPROV and JIPDIGITS fields appear in the output only when the Triggerless LNP feature is turned on.

```
rtrv-lnpopts
```

```
AMASLPID      = 123456789
INCSLP        = yes
AMACTYPE      = 003
AMAFEATID     = 010
CIC           = 1369
AUD           = on
SP            = a123
ADMHIPRI      = yes
GTWYSTP       = yes
JIPPROV       = yes
JIPDIGITS     = 919460
CCP           = no
SERVPORT      = no
WQREDRCT      = off
WSMSC10DIG    = yes
```

```
;
```

Legend

- **AMASLPID**—AMA slip ID
- **INCSLP**—Whether the AMA slip ID included in the response
- **AMACTYPE**—AMA call type
- **AMAFEATID**—AMA feature ID
- **CIC**—Carrier identification code
- **AUD**—Audit indicator
- **SP**—Service provider ID
- **FRCSMPLX**—Allow simplex database updates indicator

- **ADMHIPRI**—LNP database administration has the highest priority of all administration
- **GTWYSTP**—LNP system is configured as a Gateway STP
- **JIPPROV**—Add a Jurisdictional Information Parameter value to the IAM
- **JIPDIGITS**—Jurisdictional Information Parameter value
- **CCP**—Copy Charge Parameters
- **SERVPORT**—Service Portability
- **WQREDRCT**—Wireless queries directed to default GTT
- **WSMS10DIG**—SCCP GTA length indicator for 10 or 11 digitis

Related Topics

- [chg-lnpopts](#)

4.1.531 rtrv-log

Use this command to retrieve records from the active or standby Alarm and UIM logs generated by the Maintenance system. This command selects these records based on a span of time or a specific log file index.

Parameters

dir (optional)

Direction in which to obtain entries from within the log (forward or backward) for displaying. See the Dependencies and Notes sections for usage information.

Range:

fwd

Display entries from nearer the beginning of the log toward entries at the end of the log

bkwd

Display entries from nearer the end of the log toward entries at the beginning of the log

Default:

fwd

edate (optional)

End date. Report only log entries that were created on or before the specified date (*dir=fwd*), or only log entries that were created on or after the specified date (*dir=bkwd*). See the Notes section for usage information.

Range:

000101 - 991231

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

Default:

Report log entries regardless of their creation date

enum (optional)

Ending Message Reference Number (MRN) for which to display entries. The ending Alarm or UIM number if specifying a range.

Range:

1 - 1999

1-999 —Alarms (UAMs)

1000-1999 —UIMs

Default:

If `enum` is not specified and:

If `snum` is specified, the default `enum` value is the same as the specified `snum` value.

If `snum` is not specified and `type` is *alarm* or not specified, the default `enum` value is 999.

If `snum` is not specified and `type` is *all* or *uim*, the default `enum` value is 1999.

etime (optional)

End time. Report only log entries that were created on or before the specified time (`dir=fwd`), or only log entries that were created on or after the specified time (`dir=bkwd`). See the Notes section for usage information.

Range:

000000 - 235959

(in the form *hhmmss*, where *hh*=hours (00-23), *mm*=minutes (00-59), *ss*=seconds (00-59)) y)

The time must be specified with 6 digits in a 24-hour format. For example, enter 1:05:03 P.M. as 130503.

Default:

Report log entries regardless of their creation time

mode (optional)

Log display mode; display all information or just summary information from each log entry.

**Note:**

If the entry is only one line, the same information (one line) is displayed in brief and full mode for that entry.

Range:***brief***

Display only the first “Summary” line of the log entry

full

Display all information available in the log entry

Default:

full

next (optional)

Number of additional records to display using the same direction (*dir*) and filtering criteria of *outgrp*, *type*, *slog*, and *mode* that were used for the previous successful *rtrv-log* command at the same terminal.

Range:

1 - 65500

num (optional)

Number of records that can be displayed before the report is stopped.

Range:

1 - 65500

Default:

15

outgrp (optional)

Output Group to sort or filter the Alarms (UAMs) and/or UIMs on.

Range:***all***

Retrieve information for all Output Groups

appserv

Application Server

appss

Application Subsystem

card

Card

clk

Clock

db

Database

dbg

Debug

gtt

GTT Maintenance

gws

GWS Maintenance

link

Link Maintenance

meas

Measurements Maintenance

mon
Monitoring (Sentinel or IMF) Maintenance

mps
MPS Maintenance

pu
Program Update

sa
System Administration

seas
SEAS (Sentinel or IMF)

sys
System Maintenance

traf
Traffic

Default:

If the `next` parameter is not specified, the default is *all*.

If the `next` parameter is specified, the output is the same as the immediately previous successful `rtrv-log` command that was entered at the same terminal (and no `rtrv-log` command was entered at another terminal).

sdate (optional)

Start date. Report only log entries that were created on or after the specified date (`dir=fwd`), or only log entries that were created on or before the specified date (`dir=bkwd`). See the Notes section for usage information.

Range:

000101 - 991231

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

Default:

Report log entries regardless of their creation date

slog (optional)

Source of log. The OAM Maintenance log to access.

Range:

act
Active OAM

stb
Standby OAM

Default:

act

snum (optional)

A single Alarm or UIM Message Reference Number (MRN), or the starting Alarm or UIM MRN if specifying a range. This parameter cannot be specified when the `outgrp` parameter is specified.

Range:

1 - 1999

1-999 —Alarms (UAMs)

1000-1999 —UIMs

Default:

All entries for the specified `type` are displayed.

If `type=all`, `alarm`, or not specified, the default value is *1*.

If `type=uim`, the default value is *1000*.

stime (optional)

Start time. Report only log entries that were created on or after the specified time (`dir=fwd`), or only log entries that were created on or before the specified time (`dir=bkwd`). See the Notes section for usage information.

Range:

000000 - 235959

(in the form *hhmmss*, where *hh*=hours (00-23), *mm*=minutes (00-59), *ss*=seconds (00-59))

The time must be specified with 6 digits in a 24-hour format. For example, enter 1:05:03 P.M. as *130503*.

Default:

Report log entries regardless of their creation time

type (optional)

Type of Maintenance log to access for the report.

Range:

all

UAMs and UIMs

alarm

UAMs

uim

UIMs

Default:

alarm

Example

```
rtrv-log:sdate=960715:stime=220000:num=50
```

```
rtrv-log:sdate=960715:stime=220000:num=50:snum=106
```

```
rtrv-log:sdate=960715:stime=220000:num=50:snum=106:enum=350
```

```
rtrv-log:next=100
```


Dependencies

No other `rtrv-log` command can already be in progress on the same OAM.

2938 E2938 Cmd Rej: RTRV-LOG command already in progress

The initialization of the ELOG and UIM logs must be complete in the system before the `rtrv-log` command can be entered.

4212 E4212 Cmd Rej: Cannot execute command until table initialization complete

If the `sdate` and `edate` parameters are specified:

- In the forward direction, the `sdate` value must be less than or equal to the `edate` value.
- In the backward direction, the `sdate` value must be greater than or equal to the `edate` value.

3001 E3001 Cmd Rej: SDATE must be earlier or equal to EDATE

The month component of the `sdate` and `edate` parameters must be in the range 1–12.

2255 E2255 Cmd Rej: Month out of range

The day component of the `sdate` and `edate` parameters must be in the range 1–31 and must accurately reflect the number of days in the month and year indicated (see Notes section).

2252 E2252 Cmd Rej: Day out of range

The seconds component of the `stime` and `etime` parameters must be in the range 00–59.

2273 E2273 Cmd Rej: Seconds out of range

The minutes component of the `stime` and `etime` parameters must be in the range 00–59.

2254 E2254 Cmd Rej: Minutes out of range

If the `sdate` parameter value is equal to the `edate` parameter value,

- In the forward direction, the `stime` value must be less than or equal to the `etime` value.
- In the backward direction, the `stime` value must be greater than or equal to the `etime` value.

2935 E2935 Cmd Rej: If SDATE=EDATE, then ETIME after or same as STIME

The `sdate` parameter value plus the `stime` parameter value must be less than the current time and date combination.

2936 E2936 Cmd Rej: SDATE+STIME must be before current date-time

If `dir=bkwd` is specified with a date and time range, `sdate/stime` must be greater than `edate/etime`.

4211 E4211 Cmd Rej: If DIR=BKWD, SDATE/STIME must be > EDATE/ETIME.

When the `enum` parameter is specified, the `snum` parameter must be specified with a value less than or equal to the specified `enum` value.

4204 E4204 Cmd Rej: ENUM must be greater or equal to mate parameter SNUM.

The specified `enum` parameter value and the specified `snum` value must be within the same range: 1-999 for Alarms (UAMs) and 1000-1999 for UIMs.

4205 E4205 Cmd Rej: ENUM range does not match SNUM: 1-999 or 1000-1999.

The `type` parameter and the `snum/enum` parameters cannot be specified together in the command.

4210 E4210 Cmd Rej: TYPE and SNUM/ENUM combination invalid.

The `rtrv-log:next=` command must be entered on the same terminal where the previous successful `rtrv-log` command was entered in the system. No other parameters can be entered with the `next` parameter in the command.

4206 E4206 Cmd Rej: NEXT requires this term issued last valid RTRV-LOG command.

The `rtrv-log:next=` command cannot be entered following a `rtrv-log` command that contained the `type=all` parameter. A `rtrv-log` command without the `type=all` parameter must be entered before the `rtrv-log::next=` command can be entered.

4200 E4200 Cmd Rej: Cannot use NEXT if preceding RTRV-LOG command used TYPE=ALL

Because entries can be overwritten between the entry of a `rtrv-log` command without the `next` parameter and the entry of a `rtrv-log:next=` command, the `rtrv-log:next:` command might not execute successfully. Another `rtrv-log` command without the `next` parameter must be entered before the `rtrv-log:next:` command can be entered again,

4213 E4213 Cmd Rej: Current set of next elog entries have been overwritten

The values specified for the `edate` with the `stime` parameter combination must be valid.

2941 E2941 Cmd Rej: Invalid combination - EDATE with STIME

The values specified for the `edate` with `stime` and `etime` parameter combination must be valid.

2941 E2941 Cmd Rej: Invalid combination - EDATE with STIME

When an `enum` parameter is specified, it requires an `snum` as its mated parameter.

4203 E4203 Cmd Rej: ENUM requires an SNUM as its mate parameter.

No other parameters can be entered with the `next` parameter in the command.

4208 E4208 Cmd Rej: No other parameters are permitted with the NEXT parameter.

The selected log must be accessible and free of errors.

2939 E2939 Cmd Rej: Unable to read the selected log

The standby OAM is corrupt or cannot be found.

2940 E2940 Cmd Rej: Standby MASP is not available

When the `snum` parameter is specified, it must be within the valid range: 1-999 for Alarms (UAMs) and 1000-1999 for UIMs.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

When the `enum` parameter is specified, it must be within the valid range: 1-999 for Alarms (UAMs) and 1000-1999 for UIMs.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

To accommodate the year 2000 and beyond, the two-digit year portion of dates is interpreted to be in the indicated century as follows:

- years 95–99 = 1995 through 1999
- years 00–94 = 2000 through 2094

This means that date 000101 (Jan. 1, 2000) is greater than 991231 (Dec. 31, 1999).

The day portion of any `sdate/edate` value entered must be in agreement with the month and year. The system issues error message E2252 if the day is found to be not valid (for example, 960631 is not a valid date). The system software and date/time hardware properly handle leap years and leap centuries. The year 2000 is a leap year.

When no date or time parameters are specified, the log display depends on the specified or default values of the `num` and `dir` parameters. The `num` parameter determines the maximum number of entries to display, and the `dir` parameter determines whether entries are displayed from the oldest end (`dir=fwd` or not specified) or the newest end (`dir=bkwd`).

When `sdate` is specified and `edate` is not specified in the forward direction, `edate` is defaulted to be the end of the log.

When `edate` is specified and `sdate` is not specified in the forward direction, `sdate` is defaulted to be the beginning of the log.

When `sdate` is specified and `edate` is not specified in the backward direction, `edate` is defaulted to be the beginning of the log.

When `edate` is specified and `sdate` is not specified in the backward direction, `sdate` is defaulted to be the end of the log.

When `stime` is specified and `etime` is not specified in the forward direction, `etime` is defaulted to 235959.

When `etime` is specified and `stime` is not specified in the forward direction, `stime` is defaulted to 000000.

When `stime` is specified and `etime` is not specified in the backward direction, `etime` is defaulted to 000000.

When `etime` is specified and `stime` is not specified in the backward direction, `stime` is defaulted to 235959.

When `stime` or `etime` is specified but neither the `sdate` or `edate` parameters are specified, `sdate` and `edate` are each defaulted to the value *today*.

The `num` parameter is used to control the maximum number of entries to be displayed by one command.

The `dir` parameter is used to control whether preceding (older) or following (newer) records are displayed. In either output format, records are displayed in time order regardless of the retrieval control of the `dir` parameter.

Because logging does not stop while records are displaying, old records that were displayed can be overwritten before they are accessed again.

After the date or time is changed in the system, output records can show anomalies in the date-time stamp. An example of this occurs when the time is changed back—in this case records may show that an earlier time follows a later time in the log.

When no Output Group (`outgrp`) is specified, no sorting based on Output Groups and no additional Alarm/UIM breakdown into Output Group categories is done for the report. The log entries will be shown only in the forward or reverse chronological ordering of the logs.

When a unique Output Group is specified, the report is separated into Alarm and UIM categories, and the entries for the specified Output Group are shown in each category.

When `outgrp=all` is specified, the report is separated into Alarm and UIM categories, and the available entries in each category are listed by Output Group.

The `next` parameter is used to display a specified number of additional log records after the previous `rtrv-log` entry at the terminal. New records that are logged after the previous `rtrv-log` command was entered will not be displayed when the `rtrv-log:next=` command is entered. The `next` parameter is valid only under the following conditions:

- The `rtrv-log:next=` command is entered at the same terminal from which the previous `rtrv-log` command was entered. The previous `rtrv-log` command must not include the `type=all` parameter.
- No other terminal has issued a `rtrv-log` command after the `rtrv-log` command entered at the terminal from which the `rtrv-log:next=` command is entered.
- The `next` parameter is the only parameter specified in the `rtrv-log` command.
- There are still logs present that match the conditions (except `time/date/num`) specified in the previous `rtrv-log` command.

When either a single `snum` or range of `snum/enum` is specified, only those Alarms or UIMs within the specified range are displayed.

When `snum` is specified and `enum` is not specified, the `enum` value defaults to the specified `snum` value.

When `enum` is specified, an `snum` value must be specified that is less than or equal to the specified `enum` value.

If an `snum` is specified within the range 1-999, its corresponding `enum` must be greater than or equal to the `snum` and also within the range of 1-999.

If an `snum` is specified within the range 1000-1999, its corresponding `enum` must be greater than or equal to the `snum` and also within the range of 1000-1999.

When `enum` is not specified and the specified `snum` Alarm or UIM does not exist (is not currently used in the system), a scroll area message indicates that the `snum` value is out of range.

If `snum` and `enum` are specified and one or both specified Alarms and/or UIMs do not exist (are not currently used in the system), the report lists all existing Alarms and/or UIMs that exist within the specified range.

The Alarm log only stores minimal information about each alarm. Only a few alarms support multiple-line formats that would be displayed when `mode=full` is used. The majority of alarms display the same information when either `mode=full` or `mode=brief` is used.

Output

In this example, the sequence numbers that are replaced by the dashes (- - -) represent the UIMs that were discarded due to the UIM thresholding feature:

```
rtrv-log:type=uim:sdate=960715:stime=220000:num=50
```

```
rlghncxa03w 04-02-16 10:15:29 EST EAGLE 31.3.0
Card 1113; SYS REL= Rel 31.3.0; STP CLLI= ncralstp0001; Timezone= EST

**** Logged 99-07-16 01:03:09****
0001.1005 CARD 1105,B INFO GWS rcvd OPC that is not allowed
          SIO=01 OPC=001-001-001 DPC=002-002-002
          H0H1=000 AFTPC=003-003-003
          TEST MODE
          SR=scrib LSN=A1234567
          Report Date: 99-07-16 Time: 01:00:01
**** Logged 99-07-16 01:03:34****
----.1004 CARD 1205,B INFO MTP rcvd unknown DPC
          SIO=07 OPC=001-001-001 DPC=002-002-002
          LSN=A1234567
          Report Date: 99-07-16 Time: 01:01:00
**** Logged 99-07-16 01:03:55****
0014.1019 CARD 1103 INFO SCCP rcvd invalid UDTS msg
          SIO=03 OPC=001-001-001 DPC=002-002-002
          CDPA: SSN=005 TT=250
          CGPA: SSN=000 TT=000
          RETURN CAUSE=001
          DATA=26 80 03 09 0e 06 09 00 fe 08 50 55
                43 00
          LSN=A1234567
          Report Date: 99-07-16 Time: 01:00:05
```

```
;
```

This example shows the records in the log created after 15 July 2003 at 10 PM up to a maximum of 50 records:

```
rtrv-log:sdate=030715:stime=220000:num=50
```

```
ncralstp00001 10-03-16 10:15:29 EST EAGLE 42.0.0
Card 1113; SYS REL= 31.3.0; STP CLLI= ncralstp00001; Timezone= EST

****03-07-15 22:03:09****
3159.0013 ** CARD 1207 CCS7ITU Card is isolated from the system
****03-07-15 22:03:11****
```

```

3160.0046   TERMINAL 10           Terminal enabled
****03-07-16 00:23:55****
3161.0200   SLK 1103,B               RCVRY-LKF: link available
****03-07-16 01:43:51****
3163.0317   LSET A123456789             RCVRY-LKSTO: linkset allowed
****03-07-16 02:35:16****
3164.0082   * FUSE PANEL 11xx         Alarm in fuse panel
****03-07-16 03:00:23****
3165.0108   ** IMT BUS A                Major IMT fault detected
****03-07-16 03:37:59****
3166.0292   *C GLS SYSTEM              GLS is not available
****03-07-16 07:22:06****
3167.0313   *C DPC 021-005-000         DPC is prohibited
****03-07-16 09:33:17****
3168.0348   * SEAS SYSTEM              SEAS is at minimum service
****03-07-16 09:34:01****
3169.0112   * IMT SYSTEM              Major Failures detected on both
****03-07-16 09:35:07****
3170.0160   * CLOCK SYSTEM            1116-S clock failed
****03-07-16 09:36:34****
3171.0160   * CARD 1116 OAM           1116-S clock failed
****03-07-16 09:37:23****
3172.0065   * CLOCK                   Minor holdover clock trouble
detected
****03-07-16 09:38:12****
3173.0308   *C SYSTEM                 Node isolated due to SLK
failure
****03-07-16 09:39:56****
3174.0331   *C SCCP SYSTEM            SCCP is not available
****03-07-16 09:40:15****
3175.0002   * GPL SYSTEM OAM         Card is not running approved GP
****03-07-16 09:42:45****
3177.0060   * CDT 9                   Minor customer trouble
detected
****03-07-16 09:45:29****
3180.0321   * XLIST                   X-LIST occupancy threshold
Exceeded
****03-07-16 09:48:48****
3181.0175   * SECURITY 1114          LOGBUFROVL-SECULOG - upload
required
****03-07-16 10:23:47****
0259.0084   ** DSM 1101,B             IP Connection Unavailable
Failed Channels: Prov Dnld TCP UDP
****03-07-16 10:25:41****
0069.0084   ** STC 1105,B            IP Connection Unavailable
ERROR STATUS: DHCP Lease. Physical Link.
;

UAM Report terminated - end of log reached.
END OF ALARM LOG REPORT.
;

```

This example shows the records in the log created after 15 July 2003 at 10 PM for Alarm (UAM) 160:

```
rtrv-log:sdate=030715:stime=220000:num=50:snum=160
```

```
ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0  
Card 1113; SYS REL= 31.3.0; STP CLLI= ncralstp00001; Timezone= EST
```

```
****03-07-16 09:35:07****  
3170.0160 * CLOCK SYSTEM 1116-S clock failed  
****03-07-16 09:36:34****  
3171.0160 * CARD 1116 OAM 1116-S clock failed
```

```
;
```

```
UAM Report terminated - end of log reached.  
END OF LOG REPORT.
```

```
;
```

This example shows the records in the log created after 15 July 2003 at 10 PM that include Alarms (UAMs) 106 - 350:

```
rtrv-log:sdate=030715:stime=220000:num=50:snum=106:enum=350
```

```
ncralstp00001 10-03-16 10:15:29 EST EAGLE 42.0.0  
Card 1113; SYS REL= 31.3.0; STP CLLI= ncralstp00001; Timezone= EST
```

```
****03-07-16 00:23:55****  
3161.0200 SLK 1103,B RCVRY-LKF: link available  
****03-07-16 01:43:51****  
3163.0317 LSET A123456789 RCVRY-LKSTO: linkset allowed  
****03-07-16 03:00:23****  
3165.0108 ** IMT BUS A Major IMT fault detected  
****03-07-16 03:37:59****  
3166.0292 *C GLS SYSTEM GLS is not available  
****03-07-16 07:22:06****  
3167.0313 *C DPC 021-005-000 DPC is prohibited  
****03-07-16 09:33:17****  
3168.0348 * SEAS SYSTEM SEAS is at minimum service  
****03-07-16 09:34:01****  
3169.0112 * IMT SYSTEM Major Failures detected on both  
****03-07-16 09:35:07****  
3170.0160 * CLOCK SYSTEM 1116-S clock failed  
****03-07-16 09:36:34****  
3171.0160 * CARD 1116 OAM 1116-S clock failed  
****03-07-16 09:38:12****  
3173.0308 *C SYSTEM Node isolated due to SLK failure  
****03-07-16 09:39:56****  
3174.0331 *C SCCP SYSTEM SCCP is not  
available  
****03-07-16 09:45:29****  
3180.0321 * XLIST X-LIST occupancy threshold Exceeded  
****03-07-16 09:48:48****  
3181.0175 * SECURITY 1114 LOGBUFROVL-SECULOG - upload required
```

```
;
```

```
UAM Report terminated - end of log reached.
```

END OF LOG REPORT.

;

This example shows the records in the log in the backward direction that were created between 12 June 2003 at 4:48:27 PM and 11 June 2003 at 10:00:45 PM for Alarms (UAMs):

```
rtrv-
log:dir=bkwd:stime=044827:sdate=030612:etime=100045:edate=03061
1
```

```
tekelecstp 03-06-23 04:10:12 EST EAGLE 31.3.0
Card 1115; SYS REL= 31.3.0. STP CLLI= tekelecstp; Timezone= EST
```

Report Initiated - extended processing time required

```
****03-06-12 04:48:27****
5001.0009 CARD 1115 EOAM MASP became active
****03-06-11 13:38:55****
5003.0002 * GPL SYSTEM BPHMUX Card is not running approved
GPL
****03-06-11 13:38:55****
5002.0002 * GPL SYSTEM BPDCM Card is not running approved
GPL
****03-06-11 13:36:04****
5001.0009 CARD 1115 EOAM MASP became active
****03-06-11 12:15:29****
5001.0009 CARD 1115 EOAM MASP became active
****03-06-11 11:19:51****
5001.0009 CARD 1115 EOAM MASP became active
****03-06-11 10:00:46****
5019.0109 IMT SYSTEM All IMT System level alarms
cleared
****03-06-11 10:00:45****
5018.0106 IMT BUS B IMT Bus alarm cleared
****03-06-11 10:00:45****
5017.0106 IMT BUS A IMT Bus alarm cleared
****03-06-11 10:00:45****
5016.0014 CARD 1107 SS7ANSI Card is present
ASSY SN: 10200301518
****03-06-11 10:00:45****
5015.0111 ** IMT SYSTEM Failure on both IMT A and IMT
B
UAM Report terminated - 11 records displayed
END OF LOG REPORT.
```

;

This example shows all the records in the log in the backward direction (UAMs and UIMs):


```
rtrv-log:type=all
```

```
tekelecstp 06-01-06 09:16:20 EST EAGLE 35.0.0
Card 1113; SYS REL= 35.0.0; STP CLLI= tekelecstp; Timezone= ****

****06-01-06 09:06:49****
0002.0009 CARD 1113 EOAM MASP became active
****06-01-06 09:11:16****
0004.0143 * CARD 1113 EOAM System release GPL(s) not approved
****06-01-06 09:13:54****
0005.0048 * TERMINAL 4 Terminal failed
****06-01-06 09:13:59****
0006.0046 TERMINAL 2 Terminal enabled
UAM Report terminated - end of log reached
```

```
;
```

```
tekelecstp 06-01-06 09:16:22 **** EST EAGLE 35.0.0
Card 1113; SYS REL= 35.0.0; STP CLLI= tekelecstp; Timezone= ****

****Logged 06-01-06 09:10:43****
0003.1083 SYSTEM INFO REPT COND: system alive
Report Date:06-01-06 Time:09:10:43
****Logged 06-01-06 09:15:43****
0007.1083 SYSTEM INFO REPT COND: system alive
Report Date:06-01-06 Time:09:15:43
UIM Report terminated - end of log reached
END OF LOG REPORT.
```

```
;
```

This example shows the log records in the backward direction that include Alarms (UAMs) 937 and 938 for the RTD System:

```
rtrv-log:dir=bkwd:num=10
```

```
stdcfg1b 13-06-23 00:05:42 WET EAGLE 35.6.0
Card 1113; SYS REL= 35.6.0; STP CLLI= stdcfg1b; Timezone= WET

****13-06-23 00:03:42****
0936.0542 RTD SYSTEM MSU cksum error threshold cleared
****13-06-22 23:15:12****
0915.0541 *C RTD SYSTEM MSU cksum error threshold exceeded
****13-06-21 21:50:24****
0144.0542 RTD SYSTEM MSU cksum error threshold cleared
****13-06-21 21:48:47****
0142.0541 *C RTD SYSTEM MSU cksum error threshold exceeded
****13-06-21 21:32:03****
0138.0096 CARD 1101 SS7ML Card has been reloaded
****13-06-21 21:31:40****
0137.0002 * GPL SYSTEM SS7ML Card is not running approved GPL
****13-06-21 21:31:28****
0136.0109 IMT SYSTEM All IMT System level alarms cleared
Outstanding IMT BUS A failure for card 1111, 1113
****13-06-21 21:31:28****
```

```
0135.0106    IMT BUS B                IMT Bus alarm cleared
UAM Report terminated - max. or num= count reached
END OF LOG REPORT.
;
```

4.1.532 rtrv-loopset

Use this command to retrieve loopset data from the database.

Parameters

disp (optional)

Display method. The manner in which the retrieved data is displayed.

Range:

detail

Provides detailed information for a loopset entry.

list

Provides a list of loopset entries.

Default:

detail

force (optional)

Range:

yes

mode (optional)

Mode of operation. Retrieves loopset entries that have been assigned the specified mode.

Range:

notify

Generates a UIM without discarding the message.

discard

Generates a UIM and discards the message.

name (optional)

Loopset name.

Range:

ayyyyyyy

1 alphabetic and up to 7 alphanumeric characters.

num (optional)

The number of entries to be retrieved.

Range:

1 - 1000

Default:
50

Example

This example provides detailed information for the first 50 valid loopset entries in the loopset table.

```
rtrv-loopset
```

This example provides detailed information for the loopset entry RTP1.

```
rtrv-loopset:name=rtp1
```

This example provides detailed information for the first 100 valid loopset entries in the loopset table.

```
rtrv-loopset:num=100:force=yes
```

This example provides a list of the first 100 valid loopset entries in the loopset table.

```
rtrv-loopset:force=yes:num=100:disp=list
```

This example provides detailed information for the first 100 valid loopset entries set to *discard* mode in the loopset table.

```
rtrv-loopset:force=yes:num=100:mode=discard
```

This example provides a list of the first 100 valid loopset entries set to *notify* mode in the loopset table.

```
rtrv-loopset:force=yes:num=100:mode=notify:disp=list
```

Dependencies

If the value of the `num` parameter is greater than 50, then the `force=yes` parameter must be specified.

3177 E3177 Cmd Rej: FORCE=YES/ON must be specified if NUM is greater than 50

The value of the `name` parameter must already exist in the database.

4568 E4568 Cmd Rej: Loop Set entry does not exist

The SCCP Loop Detection feature must be enabled before this command can be entered.

4565 E4565 Cmd Rej: SCCP Loop Detection Feature is not enabled

The GTT feature must be turned on before this command can be entered.

2584 E2584 Cmd Rej: GTT feature must be ON

The Loopset table must be accessible.

4567 E4567 Cmd Rej: Cannot access LoopSet table

The `name=none` parameter cannot be specified.

4628 E4628 Cmd Rej: NONE is an invalid name for a loopset entry

If the `name` parameter is specified, then the `disp=list` parameter cannot be specified.

4605 E4605 Cmd Rej: Loopset Name and display type list are mutually exclusive

Output

This example displays loopset entry details for loopset RTP1:

```
rtrv-loopset:name=rtp1
```

```
rlghncxa03w 07-02-10 08:52:38 EST EAGLE Rel 35.6.0
```

```
LoopSet   Mode      Point Codes
```

```
=====
```

```
=
```

```
RTP1      Discard  005-005-005      007-007-007      (ANSI)
              003-007-003      005-007-005
              005-004-005
```

```
;
```

This example displays details for up to 100 loopset entries:

```
rtrv-loopset:num=100:force=yes
```

```
rlghncxa03w 07-02-10 08:59:18 EST EAGLE Rel 35.6.0
```

```
LoopSet   Mode      Point Codes
```

```
=====
```

```
=
```

```
Cary2     Notify   005-015-005      007-007-007      (ANSI)
              033-007-003      005-027-005
```

```
Cary4     Notify   005-012-005      007-026-007      (ANSI)
              033-002-003      005-008-055
```

```
Apex3     Discard  005-017-008      007-017-009      (ANSI)
              005-014-005      005-017-005
              033-002-043      005-038-005
              033-003-043      005-012-005
```

```
Apex4     Discard  005-007-008      027-007-009      (ANSI)
              005-004-055      027-001-007
              033-007-003      005-003-055
```

```
RAL5      Notify   005-005-005      007-007-007      (ANSI)
              003-001-003      005-007-005
              003-002-003      005-008-005
              003-003-003      005-002-005
```

```
RAL6      Notify   005-007-008      007-007-009      (ANSI)
              003-007-003
```

```
DUNN1     Discard  005-002-055      007-051-007      (ANSI)
```

```
RTP9      Discard  005-002-005      007-001-007      (ANSI)
              003-007-003      005-003-005
              005-004-005
```

```
RTP5      Discard  005-007-008      007-007-009      (ANSI)
```

```

RTP1      Discard  005-005-005      007-007-007      (ANSI)
003-007-003      005-007-005
005-004-005

RTP2      Notify   005-007-008      007-007-009      (ANSI)
;

```

This example displays the names and modes of up to 100 loopset entries:

```
rtrv-loopset:force=yes:num=100:disp=list
```

```

rlghncxa03w 07-02-10 09:03:27 EST  EAGLE Rel 35.6.0

LoopSet  Mode      || LoopSet  Mode      || LoopSet  Mode
=====
Cary2    Notify   || Cary4    Notify   || Apex3    Discard
Apex4    Discard  || RAL5     Notify   || RAL6     Notify
DUNN1    Discard  || RTP9     Discard  || RTP5     Discard
RTP1     Discard  || RTP2     Notify
;

```

This example displays a list of up to 100 loopset entries that contain the `mode=notify` parameter:

```
rtrv-loopset:force=yes:num=100:mode=notify:disp=list
```

```

rlghncxa03w 07-02-10 09:10:07 EST  EAGLE Rel 35.6.0

LoopSet  Mode      || LoopSet  Mode      || LoopSet  Mode
=====
Cary2    Notify   || Cary4    Notify   || RAL5     Notify
RAL6     Notify   || RTP2     Notify
;

```

Related Topics

- [chg-loopset](#)
- [dlt-loopset](#)
- [ent-loopset](#)

4.1.533 rtrv-ls

Use this command to show the linkset information.

Parameters

apc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The prefix subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range:*p-*, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—p-*When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001-005*.When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006-255*.The point code *000-000-000* is not a valid point code.**apc/apca/apci/apcn/apcn24/apcn16 (optional)**

Adjacent point code.

apci (optional)ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).**Range:***s-*, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps**zone—0-7**area—000-255**id—0-7*The point code *0-000-0* is not a valid point code.**apcn (optional)**ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (*members*) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).**Range:***s-*, *p-*, *ps-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**apcn24 (optional)**24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).**Range:***p-*, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p
msa—000–255
ssa—000–255
sp—000–255

apcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*). The *prefix* indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, *000---127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

cggtmod (optional)

Calling party GT modification indicator. This parameter displays the linksets that have the specified value of the calling party GT modification indicator.

Range:

yes

no

islsrsb (optional)

Incoming rotated signaling link selection (SLS) bit. This parameter displays the linksets with the specified rotated bit.

Range:

1 - 8

ITU linksets— *1-4*

ANSI linksets— *1-8*

Default:

Display all link sets

itutfr (optional)

ITU TFR (Transfer Restricted) procedure indicator. This parameter displays the linksets that have the specified value of the *itutfr* parameter.

This parameter is valid for ITU national linksets only.

Range:

on

off

Default:
Display all link sets

lsn (optional)
Linkset name

Range:
ayyyyyyyy
1 alphabetic character followed by up to 9 alphanumeric characters

Default:
Display all link sets

lst (optional)
Linkset type. This parameter specifies whether to display proxy links.
This parameter can be specified only when the Proxy Point Code feature is enabled.

Range:

prx
Display proxy links.

mtprse (optional)
ANSI or ITU MTP Restart equipped. This parameter specifies whether the node adjacent to the linkset is equipped with MTP Restart.

Range:

yes
equipped

no
not equipped

Default:
Display all link sets

pct (optional)
This parameter displays the linksets where the Point Code and CIC Translation has the specified status.

Range:

on

off

ppc (optional)
ANSI proxy point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.
The proxy point code must be a full point code.

Synonym:
ppca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001-005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006-255`.

The point code `000-000-000` is not a valid point code.

ppc/ppca/ppci/ppcn/ppcn24/ppcn16 (optional)

Proxy Point Code.

The proxy point code must be a full point code.

ppci (optional)

ITU international proxy point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s*zone*—0-7*area*—000-255*id*—0-7

The point code `0-000-0` is not a valid point code.

ppcn (optional)

ITU national proxy point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-*nnnnn*—0-16383*gc*—aa-zz*m1-m2-m3-m4*—0-14 for each member; values must sum to 14**ppcn24 (optional)**

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255*ssa*—000-255*sp*—000-255

ppcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

randsls (optional)

Random SLS (signaling link selection). This parameter displays linksets that have the specified value of the `randsls` parameter.

Range:***off***

Displays all linksets where random SLS is disabled.

class0

Displays linksets where random SLS generation for Class0 SCCP traffic is enabled.

all

Displays ITU linksets where random SLS generation for Class0 and Class1 SCCP traffic is enabled and ANSI linksets where random SLS generation for Class0 and ISUP traffic is enabled.

Default:

off

slsocbit (optional)

Other CIC (Circuit Identification Code) Bit. This parameter displays the linksets that have the `slsocbit` parameter set to a value from 5 - 16.

Range:*

*

Specifies all possible values (5-16)

Default:

Display all link sets

slsrsb (optional)

Rotated SLS (Signaling Link Selection) Bit. This parameter displays the linksets with the specified rotated bit.

Range:

1 - 4

Default:

Display all link sets

spc (optional)

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001–005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

spc/spca/spci/spcn/spcn24/spcn16 (optional)

Secondary point code.

spci (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

spcn (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

spcn24 (optional)

24-bit ITU national secondary point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000—255

ssa—000—255

sp—000—255

spcn16 (optional)16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).**Range:**

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

ExampleDisplay all linksets having the parameter `pct=on`:

```
rtrv-ls:pct=on
```

Display the attributes of all link sets:

```
rtrv-ls
```

Retrieve linkset LS1:

```
rtrv-ls:lsn=ls1
```

Retrieve all link sets with the `mtprse=yes` parameter:

```
rtrv-ls:mtprse=yes
```

Retrieve all link sets that use the `slsocbit` parameter with a value from 5 - 16:

```
rtrv-ls:slsocbit=*
```

Display an ITU linkset to view the settings for the `slsrsb` or `slsocbit` parameters:

```
rtrv-ls:lsn=lsitu
```

Retrieve all ITU national linksets that have the `itutfr` parameter set to *on*:

```
rtrv-ls:itutfr=on
```

Retrieve the specified ITU national linkset and display its setting for the `itutfr` parameter:

```
rtrv-ls:lsn=lsitun
```

Retrieve all linksets where random SLS generation is enabled for SCCP ITU traffic and Class0 ANSI traffic:

```
rtrv-ls:randsls=class0
```

Display all proxy linksets:

```
rtrv-ls:lst=prx
```

Display all linksets using a specified proxy point code:

```
rtrv-ls:ppc=11-11-11
```

Display all linksets using a specified secondary point code:

```
rtrv-ls:spc=2-2-2
```

Display all linksets using a specified adjacent point code:

```
rtrv-ls:apc=1-1-2
```

Retrieves all linksets where calling party global title modification is requested:

```
rtrv-ls:cggmod=yes
```

Retrieves all link sets with the ISLSRSB value 6:

```
rtrv-ls:islsrsb=6
```

Display all linksets using a specified adjacent point code:

```
rtrv-ls:apcn16=121-10-15
```

Dependencies

A PCT quantity feature must be enabled before the `pct` parameter can be specified.

5391 E5391 Cmd Rej: PCT feature must be enabled

The specified linkset must be in the database.

2346 E2346 Cmd Rej: Linkset not defined

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

All optional parameters, except for the combination of the `slsocbit` and `slsrsb` parameters, can only be used individually. Any combination of 2 or more of the optional parameters, other than the specified exception, is invalid.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `apcn` parameter is specified as the Adjacent Point Code, then the format of the `apcn` parameter must match the format dictated by the `chg-stpopts:npcfmti` parameter.

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

The SLSOCB feature must be enabled before the `slsocbit` parameter can be specified.

3863 E3863 Cmd Rej: SLSOCBIT parameter not permitted if SLSOCB Feature is OFF

The Multiple Linksets to Single Adjacent PC (MLS) feature must be turned on before the `apc` and `spc` parameters can be specified.

4631 E4631 Cmd Rej: Multiple Linksets to Single Adjacent PC feature must be ON

A NULL pointer was sent into a function. An ATH will also be issued.

2601 E2601 Cmd Rej: Command aborted due to system error

The Signaling Link table is corrupt or cannot be found.

2103 E2103 Cmd Rej: Failed reading the link table

The extended link table is corrupt or cannot be found.

2599 E2599 Cmd Rej: Failed reading the extended link table

The STPOPTS table is corrupt or cannot be found.

2852 E2852 Cmd Rej: Failed reading STP Options table

At least one linkset must be associated with the value of the `apc` parameter.

4637 E4637 Cmd Rej: APC has no assigned linksets

The Proxy Point Code feature must be enabled before the `lst=prx` parameter can be specified.

4695 E4695 Cmd Rej: LST=PRX is valid only if PPC feature is enabled

The Proxy Point Code feature must be enabled before the `ppc` parameter can be specified.

4678 E4678 Cmd Rej: PPC allowed only if PPC feature is enabled

The value specified for the `ppc` parameter must be a full point code.

4696 E4696 Cmd Rej: PPC must be a full point code

The value specified for the `ppc` parameter must already exist in the Destination table, and the `prx=yes` parameter must have been specified.

4724 E4724 Cmd Rej: Proxy PC not defined in route(dstn) table

The value specified for the `apc` parameter must be a full point code.

2859 E2859 Cmd Rej: Destination address must be a full point code

The value specified for the `spc` parameter must be a full point code.

3822 E3822 Cmd Rej: SPC must be a full point code

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the `cggtmod` parameter can be specified.

4789 E4789 Cmd Rej: Either AMGTT or AMGTT CgPA Upgrade feature must be ON

The ISLSRSB feature must be enabled before the `islsbr` parameter can be specified.

5025 E5025 Cmd Rej: islsrsb is valid only if ISLSBR Feature is enabled

The PPC specified must not be a private point code.

4722 E4722 Cmd Rej: PPC not supported for Private PC

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

The CLLI, TFATCABMLQ, MTPRSE, and ASL8 fields are displayed only when a specific linkset is specified. The SLSOCBIT and SLSRSB fields are displayed only when a specific linkset is specified, and the linkset must be an ITU linkset.

If the `tfatcabmlq` parameter database value is 0 for a linkset, then the value displayed is one-half (rounded-up) of the number of links assigned to the given linkset (or 1 if there are 2 or fewer links in the linkset).

If the `tfatcabmlq` parameter database value is 0, then the TFA/TCA broadcast minimum link quantity is calculated by the EAGLE to be a minimum of 1 for linksets containing 2 or fewer links, or half (rounded-up) of the number of links configured in the linkset for linksets containing more than 2 links. The calculated value is displayed in the `rtrv-ls` command output.

If the `tfatcabmlq` parameter value is set to a specific value greater than 0, then the EAGLE does not calculate a TFA/TCA broadcast minimum link quantity. The provisioned value is displayed in the `rtrv-ls` command output.

The EAGLE `ent-ls` command allows 10-character linkset names, but entering a linkset name through SEAS is still restricted to 8 characters. In SEAS, a specific linkset with a name greater than 8 characters (entered using the EAGLE command) cannot be retrieved by name. If an asterisk is used for the linkset name in the SEAS `vfy-ls` command, all linksets will be shown; however, the linkset names that are more than 8 characters will have only the first 8 characters shown. Therefore it may appear that there are duplicate linkset names in SEAS `vfy-ls` output, but all linkset names are actually unique.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

The value specified for the `ppc` parameter must be a full point code. Cluster point codes and private point codes are not supported.

The ICNIMAP and OGNIMAP fields are displayed only if the linkset name is specified in the command, the ITU Spare Point Code feature is enabled, and an ITUN or ITUI point code is associated with the linkset.

IPSG linksets have SLKTPS configured. SLKTPS configures the transactions per second for each link assigned to the IPSG linkset. For an IPSG linkset, the calculated IP TPS value (shown under the 'CONFIG' column in the report) is made up of the aggregate calculated SLKTPS of all of the provisioned links in the linkset. Non-IPSG hosted links are not counted in the calculation as they do not support SLKTPS.

If a linkset contains a mixture of IPLIMx M2PA and IPSG-M2PA links, then the command does not report any data below the TPS header or raise alarms.

Output

The Multiple Linksets to Single Adjacent PC (MLS) feature must be turned on before information can be retrieved for an adjacent point code or a secondary point code.

The Proxy Point Code feature must be enabled before information can be retrieved by proxy point code or proxy linkset.

If information is requested for a linkset, then the secondary point code field is displayed in the output. If the MLS feature is not enabled, or if the linkset was not created with a secondary point code, the field contains dashes.

Headings for unequipped cards are not displayed.

This example shows all linksets where random SLS generation is enabled for Class0 and Class1 SCCP traffic for ITU linksets and Class0 and ISUP traffic for ANSI linksets:

```
rtrv-ls:randsls=all
```

```
tekelecstp 10-03-06 19:36:00 EST EAGLE 42.0.0
```

```

          L3T SLT          GWS GWS GWS
LSN      APCA  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
  lsa111  001-001-001  none 1  1  no  B  0  off off off
no      off

```

```

          L3T SLT          GWS GWS GWS
LSN      APCI  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
  lsi111  1-001-1      none 1  2  no  B  0  off off off
no      off

```

```
Link set table is (2 of 1024) 1% full.
```

```
;
```

This example shows detailed linkset configuration for linkset LS1111. Random SLS generation is enabled for Class0 and Class1 SCCP traffic:

```
rtrv-ls:lsn=lsi111
```

```
tekelecstp 18-01-22 05:29:51 EST EAGLE 46.6.0.0.0-71.21.0
```

```

          L3T SLT          GWS GWS GWS
LSN      APCI  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
  lsi111  1-000-1      none 1  2  no  A  0  off off off
no      off

```

```

          SPCI          CLLI          TFATCABMLQ MTPRSE ASL8
-----
          1          ---  ---

```

```

SLRSRB RANDSLS ITUTFR
1      all      off

```

```

IPSG GTTMODE          CGGTMOD
no   CdPA          no

```

```
Link set table is (1 of 1024) 1% full.
```

```
;
```

This example shows detailed linkset configuration for linkset LS4. Random SLS generation is enabled for SCCP Class0 traffic, and the SLSOCB and the ITUDUPPC features are turned on:


```
rtrv-ls:lsn=ls4
```

```
tekelecstp 18-01-22 05:30:11 EST EAGLE 46.6.0.0.0-71.21.0

      L3T SLT          GWS GWS GWS
LSN      APCI  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS
ls4      1-007-4      none  1  2  no  A  4   off off off ---
off

      SPCA          CLLI          TFATCABMLQ MTPRSE ASL8 GSMSCRN
-----
                2          ---    ---  off

SLSOCBIT SLSRSB RANDSL S MULTGC ITUTFR
none     1      class0 no     off

IPSG  GTTMODE          CGGTMOD
no    CdPA            no

      L2T          PCR PCR  E1  E1
LOC  LINK SLC TYPE  SET  BPS   ECM  N1  N2  LOC  PORT
TS
1202 B    0  LIME1  11  56000 BASIC ---  ----- 1202 1   5
1202 B1   1  LIME1  11  56000 BASIC ---  ----- 1202 1   6
1202 B2   2  LIME1  11  56000 BASIC ---  ----- 1202 1   7
1202 B3   3  LIME1  11  56000 BASIC ---  ----- 1202 1   8

Link set table is (167 of 1024) 16% full.
```

```
;
```

This example displays the attributes of all linksets.

 **Note:**

If the `mtpmse` or `slsocibit` parameters are specified, then the output appears the same as the `rtrv-ls` command's output. The command filters the output to display only the linksets that have the specified value of the parameter.

```
rtrv-ls
```

```
tekelecstp 08-02-26 20:11:43 EST EAGLE 38.0.0

      L3T SLT          GWS GWS GWS
LSN      APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS
lsa1111  011-001-001 none  1  1  no  A  1   off off off no
off
lsa1112  011-001-002 none  1  1  no  A  1   off off off no
off
```

```

    lsa1121      011-002-001  none 1  1  no  A  1  off off off
no   off
    lsa1122      011-002-002  none 1  1  no  A  1  off off off
no   off
    lsa111111    011-011-011  none 1  1  no  A  1  off off off
no   off

```

```

                                L3T SLT                                GWS GWS GWS
LSN      APCI   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
    lsi311      3-001-1      none 1  2  no  A  0  off off off
---  off

```

```

                                L3T SLT                                GWS GWS GWS
LSN      APCN24 (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
    lsn24       024-024-024  none 1  2  no  A  0  off off off
---  off

```

Link set table is (7 of 1024) 1% full.

;

In this example:

- The TFATCABMLQ and MTPRSE fields are displayed only when a linkset is specified. The FE-PC of this link set has no CLLI; therefore the CLLI is shown as "-----".
- The SLSOCBIT and SLSRSB fields are not displayed for ANSI linksets.
- RANDSLS information is displayed for an ANSI linkset.

rtrv-ls:lsn=ls1

```

tekelecstp 18-01-22 05:31:51 EST  EAGLE 46.6.0.0.0-71.21.0

                                L3T SLT                                GWS GWS GWS
LSN      APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
    ls1     003-003-003  gws1 1  1  no  A  15  on  on  on
yes  off

                                SPCA                                CLLI                                TFATCABMLQ MTPRSE ASL8
-----
                                7                                no  no

RANDSLS
off

IPSG GTTMODE                                CGGTMOD
no   CdPA                                no

                                LP                                ATM
LOC LINK SLC TYPE                                SET BPS                                TSEL                                VCI VPI LL
1102 A 2 LIMATM                                1 1.544M                                EXTERNAL 5 0 0

```

```

          LOC LINK SLC TYPE      IPLIML2
          L2T                    PCR PCR  E1  E1
          LOC LINK SLC TYPE      SET BPS  ECM  N1  N2  LOC  PORT
TS
1
1205 A    6    LIME1    1    56000  BASIC ---  ----- 1205 1

          L2T                    PCR PCR  T1  T1
          LOC LINK SLC TYPE      SET BPS  ECM  N1  N2  LOC  PORT
TS
1
1206 A   10    LIMT1    1    56000  BASIC ---  ----- 1206 1

```

Link set table is (7 of 1024) 1% full.

;

This example shows output that includes an E1 card.

```
rtrv-ls:lsn=ls1
```

```

tekelecstp 18-01-22 05:33:55 EST  EAGLE 46.6.0.0.0-71.21.0

          L3T SLT                    GWS GWS GWS
          LSN      APCA (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS
ls1      003-003-003  none  1  1  no  A  14  off off off no
off

          SPCA      CLLI      TFATCABMLQ MTPRSE ASL8
          -----  -----  1          no    no

RANDSLS
off

IPSG  GTTMODE      CGGTMOD
no    CdPA          no

          LP      ATM
          LOC LINK SLC TYPE      SET BPS  TSEL  VCI  VPI  LL
1103 A    3    LIMATM    1  1.544M  EXTERNAL 5    0    0

          LOC LINK SLC TYPE      IPLIML2
          L2T                    PCR PCR  E1  E1
          LOC LINK SLC TYPE      SET BPS  ECM  N1  N2  LOC  PORT  TS
1205 A1   7    LIME1    1    56000  BASIC ---  ----- 1205 1  2

```

Link set table is (7 of 1024) 1% full.

;

This example includes an IPLIMx to 8 Points card. The PCT feature is turned on.

```
rtrv-ls:lsn=ls1
```

```
tekelecstp 18-01-22 05:38:00 EST EAGLE 46.6.0.0-71.21.0

          L3T SLT                      GWS GWS GWS
LSN      APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
ls1      003-003-003  gws1  1  1  no  A  15  on  on  on
yes  off

          SPCA          CLLI          TFATCABMLQ MTPRSE ASL8
-----
RANDSLS
off

IPSG  GTTMODE          CGGTMOD  PCT
no    CdPA              no        off

          LP          ATM
LOC  PORT SLC TYPE    SET BPS  TSEL  VCI  VPI  LL
1102 A    2  LIMATM   1  1.544M LINE  5    0    0

LOC  PORT SLC TYPE    IPLIML2

          L2T                      PCR  PCR
E1  E1
LOC  PORT TS
1205 1    1
1205 1    1

          L2T                      PCR  PCR
T1  T1
LOC  PORT TS
1206 1    1
1206 1    1

Link set table is (7 of 1024) 1% full.
```

```
;
```

This example includes adjacent spare point codes (s-), adjacent private point codes (p-), and adjacent private and spare point codes (ps-):

```
rtrv-ls
```

```
tekelecstp 08-03-05 10:12:31 EST EAGLE 38.0.0
```

```
L3T SLT                      GWS GWS GWS
```

```

      LSN          APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS
lsa1             001-001-002    none 1  1  no  A  0   off off off no
off
lsa2             p-001-002-004  none 1  1  no  A  0   off off off no
off
lsa3             p-001-002-005  none 1  1  no  A  0   off off off no
off

```

```

      LSN          APCI   (SS7)  SCRN L3T SLT BEI LST LNKS GWS GWS GWS
NIS                                ACT MES DIS SLSCI
lsa1             s-1-002-3      none 1  2  no  A  1   off off off ---
off
lsa2             s-2-002-2      none 1  2  no  A  1   off off off ---
off
lsa3             s-2-100-1      none 1  2  no  A  1   off off off ---
off
lsa4             s-2-012-1      none 1  2  no  A  1   off off off ---
off
lsa5             2-100-1        none 1  2  no  A  1   off off off ---
off
lsa6             s-3-134-1      none 1  2  no  A  1   off off off ---
off

```

```

      LSN          APCN   (SS7)  SCRN L3T SLT BEI LST LNKS GWS GWS GWS
NIS                                ACT MES DIS SLSCI
lsa410234       ps-1-1-1-2047-aa none 1  2  no  B  0   off off off ---
off
lsa410235       p-1-1-1-0059-aa none 1  2  no  B  0   off off off ---
off
lsa4102356     ps-1-1-1-0234-aa none 1  2  no  B  0   off off off ---
off

```

Link set table is (12 of 1024) 1% full.

;

This example displays linksets using a specified adjacent point code. The MLS feature must be turned on before information can be retrieved for an adjacent point code:

```
rtrv-ls:apc=1-1-2
```

```
tekelecstp 07-07-26 12:49:06 EST EAGLE 37.5.0
```

```
APCA = 001-001-002
```

```

      LSN          SPCA          SCRN L3T SLT BEI LST LNKS GWS GWS GWS
NIS                                ACT MES DIS SLSCI
lsa1             002-002-002    none 1  1  no  A  0   off off off no
off
rtp4             001-002-005    none 1  1  no  A  0   off off off no
off

```

```

    dur16          002-007-042  none 1  1  no  A  0  off off off
no   off
    morv12        012-009-005  none 1  1  no  A  0  off off off
no   off
    lsa22         004-002-022  none 1  1  no  A  0  off off off
no   off

```

Link set table is (12 of 1024) 1% full.

This example displays all linksets when the MLS feature is turned on. The MLS feature allows multiple linksets to have the same adjacent point code.

rtrv-ls

```

                                L3T SLT
LSN          APCA  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
    lsa1          001-001-002  none 1  1  no  A  0  off off off
no   off
    lsa2          p-001-002-004  none 1  1  no  A  0  off off off
no   off
    lsa3          p-001-002-005  none 1  1  no  A  0  off off off
no   off
    rtp4          001-001-002  none 1  1  no  A  0  off off off
no   off
    dur16         001-001-002  none 1  1  no  A  0  off off off
no   off
    morv12        001-001-002  none 1  1  no  A  0  off off off
no   off
    lsa22         001-001-002  none 1  1  no  A  0  off off off
no   off

```

```

                                L3T SLT
LSN          APCI  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
    lsn1          s-1-002-3      none 1  2  no  A  1  off off off
---  off
    lsn2          2-100-1        none 1  2  no  A  1  off off off
---  off
    lsn3          s-3-134-1      none 1  2  no  A  1  off off off
---  off

```

```

                                L3T SLT
LSN          APCN  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
    lsn410234    ps-1-1-1-2047-aa none 1  2  no  B  0  off off off
---  off
    lsn410235    p-1-1-1-0059-aa none 1  2  no  B  0  off off off
---  off

```

Link set table is (12 of 1024) 1% full.

This example displays all linksets when the Proxy Point Code feature is enabled. Proxy point codes used by the linksets are displayed:

```
rtrv-ls

homenetwork 08-03-19 17:03:37 EST EAGLE 38.0.0

      L3T SLT          GWS GWS GWS
      LSN      APCA  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS
  x1          001-001-001  none 1  1  no  PRX 0   off off off no
off
  x2          001-001-002  none 1  1  no  PRX 0   off off off no
off
  x3          001-001-003  none 1  1  no  PRX 0   off off off no
off
  x4          001-001-004  none 1  1  no  PRX 0   off off off no
off
  x5          001-001-005  none 1  1  no  PRX 0   off off off no
off
  x6          001-001-006  none 1  1  no  PRX 0   off off off no
off
  x7          001-001-007  none 1  1  no  PRX 0   off off off no
off
  x8          001-001-008  none 1  1  no  PRX 0   off off off no
off
  x9          001-001-009  none 1  1  no  PRX 0   off off off no
off
  x10         001-001-010  none 1  1  no  PRX 0   off off off no
off
  y           002-002-002  none 1  1  no  A   0   off off off no
off

Link set table is (11 of 1024) 1% full.
;
```

This example displays linksets using a specified proxy point code:

```
rtrv-ls:ppc=2-2-2

homenetwork 07-05-19 17:05:04 EST EAGLE 37.5.0

PPCA = 002-002-002

      L3T SLT          GWS GWS GWS
      LSN      APCA  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS
  x1          001-001-001  none 1  1  no  PRX 0   off off off no
off
  x2          001-001-002  none 1  1  no  PRX 0   off off off no
off
  x3          001-001-003  none 1  1  no  PRX 0   off off off no
off
```

```

    x4          001-001-004  none 1  1  no  PRX 0   off off off
no   off
    x5          001-001-005  none 1  1  no  PRX 0   off off off
no   off
    x6          001-001-006  none 1  1  no  PRX 0   off off off
no   off
    x7          001-001-007  none 1  1  no  PRX 0   off off off
no   off
    x8          001-001-008  none 1  1  no  PRX 0   off off off
no   off
    x9          001-001-009  none 1  1  no  PRX 0   off off off
no   off
    x10         001-001-010  none 1  1  no  PRX 0   off off off
no   off

```

Link set table is (11 of 1024) 1% full.

;

The following example displays all proxy linksets.

```
rtrv-ls:lst=prx
```

```
homenetwork 08-03-19 17:05:40 EST EAGLE 38.0.0
```

```

                L3T SLT                GWS GWS GWS
LSN           APCA  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
    x1          001-001-001  none 1  1  no  PRX 0   off off off
no   off
    x2          001-001-002  none 1  1  no  PRX 0   off off off
no   off
    x3          001-001-003  none 1  1  no  PRX 0   off off off
no   off
    x4          001-001-004  none 1  1  no  PRX 0   off off off
no   off
    x5          001-001-005  none 1  1  no  PRX 0   off off off
no   off
    x6          001-001-006  none 1  1  no  PRX 0   off off off
no   off
    x7          001-001-007  none 1  1  no  PRX 0   off off off
no   off
    x8          001-001-008  none 1  1  no  PRX 0   off off off
no   off
    x9          001-001-009  none 1  1  no  PRX 0   off off off
no   off
    x10         001-001-010  none 1  1  no  PRX 0   off off off
no   off

```

Link set table is (11 of 1024) 1% full.

;

This example displays information for a specified linkset when the Proxy Point Code feature is enabled:


```
rtrv-ls:lsn=x1
```

```
tekelecstp 18-01-22 05:39:15 EST EAGLE 46.6.0.0-71.21.0

      L3T SLT                      GWS GWS GWS
LSN      APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS      x1      001-001-001  none  1  1  no  PRX  0    on  on  on  yes
off

      PPCA                      CLLI          TFATCABMLQ MTPRSE ASL8
      002-002-002  -----  7              ---  no

RANDSLS
off

MATELSN      LSUSEALM  SLKUSEALM  GTTMODE
-----  ---  ---  CdPA
```

```
Link set table is (11 of 1024) 1% full.
```

```
;
```

This example displays proxy linksets using a specified adjacent point code when the MLS feature is turned on and the Proxy Point Code feature is enabled:

```
rtrv-ls:apc=1-1-1
```

```
tekelecstp 07-03-05 17:32:59 EST EAGLE 37.5.0

APCA  =  001-001-001

      L3T SLT                      GWS GWS GWS
LSN      PPCA                      SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS      x1      002-002-002  none  1  1  no  PRX  0  off off off no
off
```

```
Link set table is (11 of 1024) 1% full.
```

```
;
```

This example displays linksets using a specified secondary point code when the MLS feature is turned on:

```
rtrv-ls:spc=2-2-2
```

```
homenetwork 07-05-19 17:05:04 EST EAGLE 37.5.0

SPCA  =  002-002-002

      L3T SLT                      GWS GWS GWS
```

```

LSN          APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
lsa1         001-001-002  none 1  1  no  A  0  off off off
no  off
lsa2         p-001-002-004 none 1  1  no  A  0  off off off
no  off

```

Link set table is (12 of 1024) 1% full.

;

This example displays information for a specific linkset when the MLS feature is turned on:

```
rtrv-ls:lsn=lsa1
```

```
tekelecstp 18-01-22 05:40:51 EST EAGLE 46.6.0.0-71.21.0
```

```

LSN          APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
lsa1         001-001-002  gws1 1  1  no  A  4  on  on  on
yes  off

          SPCA          CLLI          TFATCABMLQ MTPRSE ASL8

          002-002-002  -----  2          ---  no
RANDSLS
off

IPSG  GTTMODE          CGGTMOD
no    CdPA              no

          LP          ATM
LOC  LINK SLC TYPE    SET BPS    TSEL    VCI    VPI  LL
1102 A  2  LIMATM    1  1.544M  EXTERNAL 5    0    0

          LOC  LINK SLC TYPE    IPLIML2

          L2T          PCR  PCR
E1  E1
          LOC  LINK SLC TYPE    SET BPS    ECM  N1  N2
LOC  PORT TS
1205 1  1    1205 A  6  LIME1    1  56000  BASIC ---- -
          L2T          PCR  PCR
T1  T1
          LOC  LINK SLC TYPE    SET BPS    ECM  N1  N2
LOC  PORT TS
1206 1  1    1206 A  10 LIMT1    1  56000  BASIC --- -

```

Link set table is (1 of 1024) 1% full.

;

This example displays output for a specified linkset when calling party GT modification is requested:

rtrv-ls:lsn=ls3

```
tekelecstp 18-01-22 05:41:01 EST EAGLE 46.6.0.0-71.21.0

      L3T SLT          GWS GWS GWS
LSN   APCA  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS
ls3   002-002-003  none 1  1  no  A  0  off off off no
off

      SPCA          CLLI          TFATCABMLQ MTPRSE ASL8 GSMSCRN
-----
                                1          ---  no  off

RANDSLS
off

IPSG  GTTMODE          CGGTMOD
no    AdvCdPA,CdPA,CgPA yes
```

Link set table is (1 of 1024) 1% full.

;

This example displays all of the linksets where calling party global title modification is requested.

rtrv-ls:cggmod=yes

```
tekelecstp 08-02-27 11:56:50 EST EAGLE 38.0.0

      L3T SLT          GWS GWS GWS
LSN   APCA  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS
abc14368 330-020-000 SEAS 1  1  yes a  2  off off off no
off
abc34589 330-030-000 scr1 1  2  no  c  3  on  on  on  yes

      L3T SLT          GWS GWS GWS
LSN   APCA  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS
abc32261 330-044-000 scr1 1  1  yes a  1  off off off ---
off

      L3T SLT          GWS GWS GWS
LSN   APCA  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS
```

```

          L3T SLT                GWS GWS GWS
LSN      APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS

```

```

Link set table is (114 of 1024) 12% full
;

```

This example displays output for an IPSG-M2PA linkset:

```
rtrv-ls:lsn=m2pa12132
```

```
tekelecstp 18-01-22 05:42:02 EST EAGLE 46.6.0.0-71.21.0
```

```

          L3T SLT                GWS GWS GWS
LSN      APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
m2pa12132  001-213-002  none 1  1  no  A  1  off off off
no off

```

```

          SPCA          CLLI          TFATCABMLQ MTPRSE ASL8
-----
RANDSLS
off

```

```

IPSG      GTTMODE          CGGTMOD
yes      CdPA              no

```

```

ADAPTER    RSVDSLKTPS  MAXSLKTPS
m2pa      1000        5000

```

```

TPSALM    LSUSEALM    SLKUSEALM
maxslktps 100%       80%

```

```

LOC  LINK SLC TYPE  ANAME
1303 A  0  IPSG  m2pa1303a

```

```
Link set table is (20 of 1024) 2% full.
```

```
;
```

This example displays the output for an IPSG-M3UA linkset. If value of the `numslk` threshold parameter is provisioned to 0, and the value is recalculated as per the provisioned links within the linkset, then an indication marker “*” is printed as a superscript to the value of the corresponding parameter.

```
rtrv-ls:lsn=ipsgm3ua
```

```
tekelecstp 18-01-22 05:43:50 EST EAGLE 46.6.0.0-71.21.00
```

```

          L3T SLT                GWS GWS GWS
LSN      APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS

```

```

SLSCI NIS
  ipsgm3ua      008-008-004  none 1  1  no  A  3  off off off no
off

          SPCA          CLLI          TFATCABMLQ MTPRSE ASL8
          -----          -----          ---          ---          ---
          no

RANDSLS
off

IPSG  GTTMODE          CGGTMOD
yes   CdPA             no

ADAPTER  RSVDSLKTPS  MAXSLKTPS
m3ua     100          100

TPSALM   LSUSEALM    SLKUSEALM
rsvdslktps 80%      80%

RCONTEXT ASNOTIF      NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
1234567890 yes      2*         1            1

LOC  LINK  SLC  TYPE  ANAME
1102 A2   0   IPSP  ipsgm3ua1102
1202 A3   1   IPSP  ipsgm3ua1202
1302 A4   2   IPSP  ipsgm3ua1302

```

Link set table is (1 of 1024) 1% full.

;

This example displays linkset information when the ITU National and International Spare Point Code Support feature is enabled:

```
rtrv-ls:lsn=lsnp1
```

```
tekelecstp 18-01-22 05:44:16 EST EAGLE 46.6.0.0-71.21.0
```

```

LSN          APCI  (SS7)  SCRN  SET  SET  BEI  LST  LNKS  ACT  MES  DIS  SLSCI
NIS
  lsnp1      1-002-1      none 1  2  no  A  3  off off off no
off

          SPCI          CLLI          TFATCABMLQ MTPRSE ASL8
          -----          -----          ---          ---          ---
          2

SLRSRB RANDSLS ITUTFR ICNIMAP          OGNIMAP
1       off     off     itui2ituis  ituis2itui

IPSG  GTTMODE          CGGTMOD
no    CdPA             no

          LP          ATM          E1ATM

```

```

          LOC LINK SLC TYPE      SET BPS      TSEL      VCI  VPI
CRC4 SI SN
1104 A    0    LIME1ATM 21  2.048M LINE      5    0
ON  3  0
1105 A    1    LIME1ATM 21  2.048M LINE      5    0
ON  3  0
1106 A    2    LIME1ATM 21  2.048M LINE      5    0
ON  3  0

```

Link set table is (1 of 1024) 1% full.

;

This example displays output for an IPGWx linkset.

```
rtrv-ls:lsn=ls1315a
```

```

tekelecstp 18-01-22 05:46:00 EST  EAGLE 46.6.0.0.0-71.21.0

          L3T SLT              GWS GWS GWS
LSN      APCA  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
ls1315a  000-015-000  none 1  1  no  A  1  off off off
no      off

          SPCA              CLLI              TFATCABMLQ MTPRSE ASL8
-----
1              no      no

RANDSLS
off

IPSG      GTTMODE          CGGTMOD
no        CdPA            no

MATELSN   LSUSEALM  SLKUSEALM
-----  100%      80%

LOC LINK SLC TYPE
1315 A    0    SS7IPGW

```

Link set table is (18 of 1024) 2% full.

;

This example displays linkset information for an ANSI linkset when the Incoming SLS Bit Rotation feature is enabled:

```
rtrv-ls:lsn=ls6
```

```

tekelecstp 18-01-22 05:47:41 EST  EAGLE 46.6.0.0.0-71.21.0

          L3T SLT              GWS GWS GWS

```

```

LSN          APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ls06         002-007-008  scr4 1  4  no  a  0   on  off off no   on

          SPCA          CLLI          TFATCABMLQ MTPRSE ASL8
-----
          ls06clli          1           no     no

RANDSLS
off

ISLSRSB RLS8
1       no

IPSG GTTMODE          CGGTMOD
no    CdPA          no

Link set table is ( 20 of 1024) 2% full

```

;

This example displays linkset information for an ITU linkset when the Incoming SLS Bit Rotation feature is enabled:

```
rtrv-ls:lsn=lsi111
```

```

tekelecstp 18-01-22 05:48:03 EST  EAGLE 46.6.0.0-71.21.0

          L3T SLT          GWS GWS GWS
LSN          APCI   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS
lsi111       1-001-1          none 1  2  no  A  0   off off off no
off

          SPCI          CLLI          TFATCABMLQ MTPRSE ASL8
-----
          1           ---     ---

SLSOCSBIT SLSRSB RANDSLS ITUTFR
none      1      off     off

ISLSRSB
1

IPSG GTTMODE          CGGTMOD
no    CdPA          no

Link set table is (1 of 1024) 1% full.

```

This example displays the output when information for linksets with a specified ISLSRSB filter is requested:

```
rtrv-ls:islsrsb=4
```

```
tekelecstp 08-10-21 09:46:52 EST  EAGLE 40.0.0
```

```

                L3T SLT                GWS GWS GWS
LSN            APCI  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
  lsi616       6-001-6      none 1  2  no  B  0   off off off
no  off
  lsi747       7-014-7      none 1  2  no  A  0   off off off
no  off

```

Link set table is (16 of 1024) 2% full.

;

This example displays linkset information for a specific linkset when the Flexible Linkset Optional Based Routing feature is turned on:

```
rtrv-ls:lsn=ls8
```

```

tekelecstp 18-01-22 05:49:51 EST  EAGLE 46.6.0.0.0-71.21.0

                L3T SLT                GWS GWS GWS
LSN            APCA  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
  ls8          001-001-001  none 1  1  no  A  0   off off off
no  off

```

```

                SPCA          CLLI          TFATCABMLQ MTPRSE ASL8
-----
1

```

```

RANDSLS
off

```

```

IPSG  GTTMODE          CGGTMOD  PCT
no    FLCdPA,FLCgPA    no        off

```

Link set table is (2 of 1024) 1% full.

;

This example displays linkset information for an ANSI linkset when the Incoming SLS Bit Rotation feature is enabled and the `islsrsb=6` parameter was specified:

```
rtrv-ls:lsn=lsa
```

```

tekelecstp 18-01-22 05:49:51 EST  EAGLE 46.6.0.0.0-71.21.0

                L3T SLT                GWS GWS GWS
LSN            APCA  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
  lsa          001-001-001  none 1  1  no  A  0   off off off
no  off

```



```

          SPCA          CLLI          TFATCABMLQ MTPRSE ASL8
-----
          1          ---          no

RANDSLS
off

ISLSRSB RLSL8
6          yes

IPSG GTTMODE          CGGTMOD
no CdPA          no

```

Link set table is (1 of 1024) 1% full.

This example displays linkset information for an ITU link set, when the MPC, ITUDUPPC, Spare Point Code, SLSOCB and ISLSBR features are enabled:

```
rtrv-ls:lsn=lsi
```

```
tekelecstp 18-01-22 05:50:11 EST EAGLE 46.6.0.0-71.21.0
```

```

          L3T SLT          GWS GWS GWS
LSN          APCN (SS7) SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS
lsi          01001-aa          none 1 2 no A 0 off off off no
off

```

```

          SPCN          CLLI          TFATCABMLQ MTPRSE ASL8
-----
          1          ---          ---
SLSOCBIT SLSRSB RANDSLS MULTGC ITUTFR ICNIMAP          OGNIMAP
none 1 off no off none          none

ISLSRSB
1

IPSG GTTMODE          CGGTMOD
no CdPA          no

```

Link set table is (4 of 1024) 1% full.

```
;
```

This example displays linkset information when all linksets are in SLT Reflect mode:

```
rtrv-ls
```

```
tekelecstp 11-10-13 15:55:42 EST EAGLE 44.0.0
```

```

          L3T SLT          GWS GWS GWS
LSN          APCA (SS7) SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI
NIS
ls1          001-001-001 none 1 RFT no A 0 off off off no

```

```

off
ls2          002-002-002  none 1  RFT no  A  0  off off off
no  off
ls3          003-003-003  none 1  RFT no  A  0  off off off
no  off

```

Link set table is (3 of 1024) 1% full.

This example displays linkset information for a specified linkset in SLT Reflect mode:

```
rtrv-ls:lsn=ls1
```

```
tekelecstp 18-01-22 05:51:51 EST  EAGLE 46.6.0.0.0-71.21.0
```

```

LSN          APCA  (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
ls1          001-001-001  none 1  RFT no  A  0  off off off
no  off

```

```

          SPCA          CLLI          TFATCABMLQ MTPRSE ASL8
-----
          1          ---  no

```

```

RANDSLS
off

```

```

IPSG  GTTMODE          CGGTMOD  PCT
no    CdPA          no          off

```

Link set table is (3 of 1024) 1% full.

Example with J1 links.

```
rtrv-ls:lsn=ls2
```

```
tekelecstp 18-01-22 05:52:51 EST  EAGLE 46.6.0.0.0-71.21.0
```

```
rtrv-ls:lsn=ls2
```

```
Command entered at terminal #4.
```

```

LSN          APCN16 (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS
SLSCI NIS
ls2          001-02-03      none 1  RFT no  A  3  off off off
no  off

```

```

          SPCN16          CLLI          TFATCABMLQ MTPRSE ASL8
-----
          2          ---  ---

```

```

SLSRSB RANDSLS ITUTFR
1      off      off

```

```

IPSG GTTMODE          CGGTMOD  PCT
no   SysDflt         no         off

                                L2T          PCR PCR  J1
LOC  LINK SLC TYPE    SET  BPS    ECM  N1  N2  PORT TS
1102 A   11  LIMT1    11  64000  BASIC ---- - 1  11
1102 A1  10  LIMT1    11  64000  BASIC ---- - 1  11
1102 A2  5   LIMT1    11  64000  BASIC ---- - 1  20

```

Link set table is (2 of 1024) 1% full.

;

This example displays a linkset entry with the CHGMTP3OPC parameter.

```
rtrv-ls:lsn=ls112
```

```

tekelecstp 18-01-22 05:55:54 EST  EAGLE 46.6.0.0.0-71.21.0
rtrv-ls:lsn=ls112
Command entered at terminal #4.

```

```

LSN          APCI  (SS7)  SCRN  L3T SLT          GWS GWS GWS
NIS          1-001-2    none  1   2   no  A   0   off off off no
off

```

```

          SPCI          CLLI          TFATCABMLQ MTPRSE ASL8
-----

```

```

SLRSRB RANDSLS ITUTFR
1      off      off

```

```

IPSG GTTMODE          CGGTMOD  PCT  CHGMTP3OPC
yes  SysDflt         no         off  on

```

```

ADAPTER  RSVDSLKTPS  MAXSLKTPS
m3ua     1000        1000

```

```

TPSALM  LSUSEALM  SLKUSEALM
rsvdslktps 100%    80%

```

```

RCONTEXT  ASNOTIF  NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
none      yes      1          1          1

```

Link set table is (1 of 1024) 1% full.

;

Command Executed

This example displays a linkset entry with the GNAMESET and CGPNBLSET parameter.

```
rtrv-ls:lsn=ls1104
```

```
Searching link set table on disk - please wait...
```

```
Command Accepted - Processing
```

```
tekelecstp 19-11-12 23:28:53 EST EAGLE 46.9.0.0.0-76.1.0
```

```
rtrv-ls:lsn=ls1104
```

```
Command entered at terminal #1.
```

```
;
```

```
tekelecstp 19-11-12 23:28:53 EST EAGLE 46.9.0.0.0-76.1.0
```

```

                                     L3T SLT                               GWS GWS
GWS
      LSN          APCA  (SS7)  SCRN SET SET BEI LST LNKS ACT
MES DIS SLSCI NIS
      ls1104          001-001-004  scr1 1  1  no  A  1  on
on on no  off
                                     SPCA          CLLI          TFATCABMLQ MTPRSE ASL8
-----
                                     RANDSLK
                                     off
                                     IPSG GTTMODE          CGGTMOD  PCT  CHGMTP3OPC
GNAMESET
      yes  SysDflt          no  off on
SetA
                                     ADAPTER  RSVDSLKTPS  MAXSLKTPS  CGPNBLSET
      m3ua          5000          5000          2
                                     TPSALM  LSUSEALM  SLKUSEALM
      rsvdslktps 100%          80%
                                     RCONTEXT  ASNOTIF  NUMSLKALW  NUMSLKRSTR
NUMSLKPROH
      10          yes          1          1          1
                                     LOC  LINK SLC TYPE  ANAME
      1104 A  0  IPSG  assoc1104

```

```
Link set table is (1 of 1024) 1% full.
```

```
;
```

Legend

- **LSN**—Name of the linkset. When CHINA appears after the LSN heading, each linkset that is listed under the heading was defined with the `apcntype=itunchina` parameter specified.
- **APC/APCI/APCN/APCN24/APCN16**—Adjacent DPC of the linkset
- **SPC/SPCI/SPCN/SPCN24/SPCN16**—Secondary PC of the linkset
- **SCRN**—Screen set assigned to the linkset

- **L3TSET**—Level 3 timer set value assigned to the linkset
- **SLTSET**—SLTM record associated with the linkset
- **BEI**—Broadcast exception indicator. Indicates whether TFP (transfer prohibited) messages can be broadcast on the linkset.
- **LST**—Type of links in the linkset (access links, bridge links, etc.)
- **LNKS**—Number of links in the linkset
- **GWSA**—Shows whether gateway screening is used on the specified linkset
- **GWSM**—Shows whether the display of messages generated for each screened message is turned on or off
- **GWSD**—Shows whether the gateway screening message discard function is turned on or off
- **SLSCI**—Shows whether the 5-to-8-bit SLS conversion feature is to be used to select links for outgoing messages directed to the given linkset
- **NIS**—Shows whether the Network Indicator Spare option is on or off for the specified linkset
- **CLLI**—The far end Common Language Location Identifier (CLLI)
- **TFATCABMLQ**—the minimum number of links in the given linkset (or in the combined linkset in which it resides) that must be available to user-part messages traffic in order for the STP to consider the first-choice ordered routes using that linkset as allowed rather than restricted
- **MTPRSE**—Shows whether the adjacent node is equipped with MTP restart
- **ASL8**—Shows whether the adjacent node is sending MSUs with 8-bit SLSs
- **MULTGC**—Shows whether multiple group codes are allowed
- **MATELSN**—Name of the mate IP Gateway linkset
- **LSUSEALM**—Percent of the linkset TPS (IPTPS) at which an alarm is generated to indicate that the actual linkset TPS is approaching the configured IPTPS value for the linkset
- **SLKUSEALM**—Percent of the link "fair share" TPS at which an alarm is generated to indicate that the actual link TPS is approaching the link's "fair share" of its linkset's configured IPTPS. The "fair share" of the linkset TPS for a link is the configured linkset TPS divided by the number of in-service links in the linkset.
- **LOC**—Location of the card containing the signaling links that make up the linkset
- **PORT**—Port on the card containing the signaling link
- **SLSOCBIT**—Setting of the Other CIC (Circuit Identification Code) Bit
- **SLRSB**—Setting of the Rotated SLS (Signaling Link Selection) Bit
- **ISLRSB**—setting of the Incoming Rotated SLS (Signaling Link Selection) Bit
- **GSMSCRN**—Shows whether the GSM MAP screening indicator is turned on or off
- **ITUTFR**—Shows whether the ITU TFR procedure indicator is turned on or off
- **L2TSET**—Level 2 timer set value associated with the signaling link
- **SLC**—Signaling link code of the signaling link
- **TYPE**—Type of card

- **BPS**—Transmission rate for the link in bits per second
- **E1PORT**—E1 port with the E1 interface that services the link
- **E1LOC**—Card location of the E1 card with the E1 interface that services the link
- **T1PORT**—T1 port with the T1 interface that services the link
- **T1LOC**—Card location of the T1 card with the T1 interface that services the link
- **TS**—Timeslot assigned to the link that is serviced by the E1 or T1 interface
- **E1ATMCRC4**—Indicator of whether CRC4 multi-frame structure is enabled or disabled
- **E1ATMSI**—Value of two Spare International bits of NFAS data
- **E1ATMSN**—Value of five Spare National bits of NFAS data
- **RANDSLS**—The setting of linkset for Random SLS generation
- **ADAPTER**—Shows whether the linkset is IPSP M2PA or IPSP M3UA linkset
- **RSVDSLKTPS**—Guaranteed SLKTPS for an IPSP linkset
- **MAXSLKTPS**—Maximum SLKTPS for an IPSP linkset
- **RCONTEXT**—Routing context ID of IPSP M3UA linkset
- **ASNOTIF**—Shows whether AS notifications will be generated for IPSP M3UA linkset
- **ANAME**—Association name configured for signaling link of IPSP linkset
- **SLKTPS**—Provisioned TPS for concerned signaling link of the specified IPSP linkset
- **CGGTMOD**—Shows whether calling party global title modification indicator is yes or no for the linkset
- **PPC/PPCI/PPCN/PPCN24/PPCN16**—The proxy point code of the linkset
- **NUMSLKALW**—Threshold value for IPSP M3UA linkset used to transition to Allowed state from Restricted or Prohibited state
- **NUMSLKRSTR**—Threshold value for IPSP M3UA linkset used to transition to Restricted state from Allowed state
- **NUMSLKPROH**—Threshold value for IPSP M3UA linkset used to transition to Prohibited state from Restricted or Allowed state
- **ICNIMAP**—Incoming NI Map
- **OGNIMAP**—Outgoing NI Map
- **RSL8**—Shows whether the incoming SLS is rotated by 8 bits
- **PCT**—Shows whether the Point Code & CIC Translation (PCT) feature is applied to messages coming in or going out on links of a particular link set
- **RFT**—Shows whether the linkset is in SLT Reflect mode
- **J1PORT**—J1 port with the J1 interface that services the link
- **CHGMT3OPC**—Shows whether OPC is going to be replaced by SPC.
- **GNAMESET**—Shows the Generic name Set.
- **CGPNBLSET**—Shows the Calling Party Blacklist Set.
- **VISUALIZEDATA**—Linkset based visualization options.

Related Topics

- [chg-ls](#)
- [chg-lsopts](#)
- [dlt-ls](#)
- [ent-ls](#)
- [rept-stat-ls](#)

4.1.534 rtrv-m2pa-tset

Use this command to retrieve either one M2PA timer set or all M2PA timer sets.

Parameters**tset (optional)**

The name of the M2PA timer set to be retrieved.

Range:

1 - 20

ver (optional)

The M2PA version supported by the association.

Range:

d6

rfc

Example

```
rtrv-m2pa-tset
rtrv-m2pa-tset:tset=1
```

Dependencies

None

N/A N/A

Notes

If a timer set is not specified in the command, all timer sets are retrieved.

Output

```
rtrv-m2pa-tset:tset=1:ver=d6
```

```
rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA Draft 6 Timers (in msec, T16 in microsec)
```

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000

;

rtrv-m2pa-tset:tset=1:ver=rfc

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA RFC Timers (in msec, T16 in microsec)

	TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17
T18	1	300000	20000	2000	30000	500	100	3000	1200	200000	250
1000											

;

rtrv-m2pa-tset:tset=1

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA Draft 6 Timers (in msec, T16 in microsec)

	TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17
T18	1	10000	-----	10000	10000	500	1000	3000	1200	200000	250
1000											

M2PA RFC Timers (in msec, T16 in microsec)

	TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17
T18	1	300000	20000	2000	30000	500	100	3000	1200	200000	250
1000											

;

rtrv-m2pa-tset:ver=d6

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA Draft 6 Timers (in msec, T16 in microsec)

	TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17
T18	1	10000	-----	10000	10000	500	1000	3000	1200	200000	250
1000											
1000	2	10000	-----	10000	10000	500	1000	3000	1200	200000	250
1000											
1000	3	10000	-----	10000	10000	500	1000	3000	1200	200000	250
1000											
1000	4	10000	-----	10000	10000	500	1000	3000	1200	200000	250
1000											
1000	5	10000	-----	10000	10000	500	1000	3000	1200	200000	250


```

1000
 6  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000
 7  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000
 8  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000
 9  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000
10  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000
11  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000
12  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000
13  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000
14  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000
15  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000
16  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000
17  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000
18  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000
19  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000
20  10000  ----- 10000 10000 500  1000  3000 1200  200000 250  1000

```

```
;
```

```
rtrv-m2pa-tset:ver=rfc
```

```

rlghncxa03w 06-01-18 08:16:14 EST  EAGLE 34.3.0
M2PA RFC Timers (in msec, T16 in microsec)

```

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
2	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
3	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
4	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
5	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
6	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
7	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
8	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
9	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
10	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
11	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
12	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
13	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
14	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
15	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
16	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
17	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
18	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
19	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
20	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000

```
;
```

```
rtrv-m2pa-tset
```

```

rlghncxa03w 06-01-18 08:16:14 EST  EAGLE 34.3.0
M2PA Draft 6 Timers (in msec)

```

	TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17
T18											
1	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
2	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
3	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
4	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
5	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
6	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
7	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
8	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
9	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
10	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
11	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
12	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
13	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
14	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
15	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
16	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
17	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
18	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
19	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											
20	10000	-----	10000	10000	500	1000	3000	1200	200000	250	
1000											

M2PA RFC Timers (in msec, T16 in microsec)

	TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17
T18											
1	300000	20000	2000	30000	500	100	3000	1200	200000	250	
1000											
2	300000	20000	2000	30000	500	100	3000	1200	200000	250	
1000											
3	300000	20000	2000	30000	500	100	3000	1200	200000	250	
1000											
4	300000	20000	2000	30000	500	100	3000	1200	200000	250	

```

1000
 5  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
 6  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
 7  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
 8  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
 9  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
10  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
11  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
12  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
13  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
14  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
15  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
16  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
17  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
18  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
19  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
20  300000 20000 2000 30000 500 100 3000 1200 200000 250 1000

```

```
;
```

Related Topics

- [chg-m2pa-tset](#)

4.1.535 rtrv-map

Use this command to show the mated application relationship information and Alternate RI Mate information maintained by the system. The GTT Load Sharing with Alternate Routing Indicator (GTT LS ARI) feature must be enabled to view Alternate RI Mate information. This information is used to support the routing of SCCP management SSP/SSA messages.

Parameters

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

Note:

Definitions for the feature options specified by the on parameter are located in the Notes section.

mapset (optional)

MAP set ID.

Range:

1 - 36000, *dflt*

dflt —Default MAP set

Default:*dfit*

The default value is *dfit* only when the Flexible GTT Load Sharing feature is not enabled.

on (optional)

Enables or turns on the specified options. A comma-separated list of options that are requested to be turned on. Up to 8 options can be specified in the list.

Range:*refcnt***pc (optional)**

ANSI point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:*pca***Range:***000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24/pcn16 (optional)

Point code.

pci (optional)

ITU international point code in the form of *zone-area-id*.

Range:*s-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfnti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:*s-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**pcn24 (optional)**24-bit ITU national point code in the form of *main signaling area-sub signaling area-signaling point*.**Range:**

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*msa—000–255**ssa—000–255**sp—000–255***pcn16 (optional)**16-bit ITU national point code in the form of *unit number-sub number area-main number area (un-sna-mna)*.**Range:**

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*un---000---127**sna---000---15**mna---000---31***ssn (optional)**

Subsystem number

Range:

2 - 255

Default:

All subsystem numbers and their mates are shown for the given point code.

Example

rtrv-map

rtrv-map:pc=2-2-2

rtrv-map:pca=1-1-4:ssn=15

rtrv-map:mapset=2

rtrv-map:mapset=df1t:pcn=s-10155-ab

```
rtrv-map:pcn=1001:on=refcnt
```

```
rtrv-map:pcn16=1-2-3
```

Dependencies

The value of the `pc/pca/pci/pcn/pcn24/pcn16` parameter must already exist in the MAP entity set. All subsystem numbers for the specified PC and mate are displayed.

2452 E2452 Cmd Rej: Remote point code does not exist in MAP table

The remote PC must be specified as a full PC.

2864 E2864 Cmd Rej: Address (PCx) of primary subsystem must be a full PC

Asterisk entries are not allowed.

2169 E2169 Cmd Rej: Point code out of range

If an SSN is specified, the PC/SSN pair must exist in the MAP table. The PC/SSN entry and its mate are shown.

2456 E2456 Cmd Rej: SSN does not exist for given remote point code

The DPC of the primary subsystem must be a full PC.

2169 E2169 Cmd Rej: Point code out of range

If the SSN is specified, then the remote PC must be specified.

2458 E2458 Cmd Rej: SSN cannot be specified without a point code

The Site Identification table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The Flexible GTT Load Sharing feature must be enabled before the `mapset` parameter can be specified.

4523 E4523 Cmd Rej: MAPSET must be specified (only) if FGTTLS feature is enabled

The specified MAP set must exist in the database.

4527 E4527 Cmd Rej: Specified MAPSET does not exist

If the PC and MAP set are specified, and the SSN is not specified, then at least one entry for that PC/MAP set must exist in the MAP table.

4543 E4543 Cmd Rej: PC/MAPSET does not exist in MAP table

If the PC, SSN, and MAP set are specified, then they must already be provisioned in the MAP table.

4528 E4528 Cmd Rej: PC/SSN doesn't exist in MAPSET

The MAP table is corrupt or cannot be found.

4524 E4524 Cmd Rej: Failed Reading MAP table

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See the `canc-cmd` command for more information.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (*s-*).

If the Flexible GTT Load Sharing feature is enabled, then the retrieved MAP examples contain the MAPSET ID for each MAP set. MAP sets that were configured before the Flexible GTT Load Sharing feature was enabled are shown as MAPSET ID=DFLT after the Flexible GTT Load Sharing feature is enabled.

The `pc/pca/pci/pcn/pcn24/pcn16`, `ssn`, and `mapset` parameters can be used to screen the output of all MAP sets. These parameters allow retrieval of only those MAP sets that contain the desired parameters.

A MAP set can contain one primary entry and up to 31 mated entries.

If no parameters are entered, all defined mated point codes (up to 36,000) are shown.

If the Flexible Final GTT Loadsharing feature is not enabled, then the number of entries in the MAP table is based on unique point codes. Point codes that are duplicated in MRN sets using different SSNs are counted only once in the number of entries.

If the Flexible Final GTT Loadsharing feature is enabled, then the number of entries in the MAP table is based on unique point code and SSN combinations. Point codes that are duplicated in MRN sets are counted in the number of entries).

When the GTT LS ARI feature is enabled, the Alternate RI Mate, identified by the MRNSET and MRNPC fields, is displayed for all MAP Sets. When the GTT LS ARI feature is not enabled, the Alternate RI Mate is not displayed, and the display is unchanged.

on option

refcnt—displays the MAPSET, MAPSET/PC, and MAPSET/PC/SSN reference counts

Output

All subsystem numbers for the specified point code and its mates are shown.

The NET column is shown only when a MAP set contains mixed network point code types. Addition of the NET column realigns all remaining columns in the output. The re-alignment is constant even if the NET column is not shown.

If an MRC value is preceded with an "*", then the MRC value is not applicable for the current multiplicity mode (MULT field). The MRC value is only valid when MULT is *DOM*.

If an SRM value is preceded with an "*", then the SRM value is not applicable for the current multiplicity mode (MULT field). The SRM value is only valid when MULT is *DOM* or *COM*.

If an SSN REFCNT value is preceded with an "*", then the entry can be deleted if any other entry with the same point code exists in that MAP set.

This example retrieves an ANSI MAP set for a specified point code:

```
rtrv-map:pc=2-2-2
```

```
flexgtoff 09-08-09 12:05:28 EST EAGLE 41.1.0
```

```

PCA           Mate PCA       SSN RC MULT SRM MRC GRP NAME SSO
002-002-002           10 10 SHR *Y *Y ----- OFF
                   002-002-003 20 10 SHR *Y *Y ----- OFF

```

MAP table is (8 of 1024) 1% full.

This example includes MAP sets with a Concerned Signaling Point Code group name and spare point codes, (s-). The ITUDUPPC (ITU National Duplicate Point Code) feature is on, and the Flexible ITU National Point Code STP option is set to 4.

rtrv-map

```

spareduppc 09-08-09 12:05:28 EST EAGLE 41.1.0
PCA           Mate PCA       SSN RC MULT SRM MRC GRP NAME SSO
002-002-002           10 10 SHR *Y *Y ----- OFF
                   002-002-003 20 10 SHR *Y *Y ----- OFF

PCA           Mate PCA       SSN RC MULT SRM MRC GRP NAME SSO
003-101-001           10 30 DOM YES YES abcdefg OFF
                   003-001-000 10 40 DOM YES YES abcdefg OFF

PCI           NET  Mate PC       SSN RC MULT SRM MRC GRP NAME SSO
1-109-0           I      1-110-0       90 20 COM NO *N ----- OFF
                   N      00-01-7-3-aa  90 20 COM NO *N ----- OFF
                   N      01-03-2-2-aa  90 30 COM NO *N ----- OFF

PCN           Mate PCN       SSN RC MULT SRM MRC GRP NAME SSO
03-00-1-2-aa           55 10 DOM NO NO ----- OFF
s-09-14-5-3-ab       45 99 DOM NO NO ----- OFF

PCN           Mate PCN       SSN RC MULT SRM MRC GRP NAME SSO
12-00-7-1-aa           5 10 DOM NO NO ----- OFF
                   12-00-7-3-aa  5 20 DOM NO NO ----- OFF

PCI           Mate PCI       SSN RC MULT SRM MRC GRP NAME SSO
s-1-128-6           55 10 SOL *N *N ----- OFF

```

MAP table is (13 of 1024) 1% full.

This example includes a Flexible ITU National Point Code STP option of 3-8-3-0:

rtrv-map

```

spareduppc 09-08-09 12:05:28 EST EAGLE 41.1.0
PCA           Mate PCA       SSN RC MULT SRM MRC GRP NAME SSO
001-001-001           10 25 SHR *Y *Y ----- OFF
                   001-001-004 20 25 SHR *Y *Y ----- OFF

PCA           Mate PCA       SSN RC MULT SRM MRC GRP NAME SSO
001-001-002           55 5  DOM YES YES ----- OFF
                   001-001-002 15 15 DOM YES YES ----- ON

```


		001-001-003	25	20	DOM	YES	YES	-----	ON
		001-001-002	40	35	DOM	YES	YES	-----	OFF
PCA	Mate PCA		SSN	RC	MULT	SRM	MRC	GRP NAME	SSO
001-001-003			30	10	COM	NO	*N	-----	OFF
		001-010-010	30	30	COM	NO	*N	-----	OFF
		001-001-004	15	30	COM	YES	*Y	-----	OFF
PCA	Mate PCA		SSN	RC	MULT	SRM	MRC	GRP NAME	SSO
001-001-004			5	25	SHR	*Y	*Y	-----	OFF
		001-001-001	50	25	SHR	*Y	*Y	-----	OFF
PCA	Mate PCA		SSN	RC	MULT	SRM	MRC	GRP NAME	SSO
001-001-004			25	10	DOM	YES	YES	-----	OFF
		001-001-004	10	15	DOM	YES	YES	-----	OFF
PCA	Mate PCA		SSN	RC	MULT	SRM	MRC	GRP NAME	SSO
001-102-001			110	5	SHR	*Y	*Y	-----	OFF
		002-001-000	110	5	SHR	*Y	*Y	-----	OFF
		003-001-000	110	5	SHR	*Y	*Y	-----	OFF
PCA	Mate PCA		SSN	RC	MULT	SRM	MRC	GRP NAME	SSO
002-001-000			10	20	SOL	*Y	*Y	-----	OFF
PCA	Mate PCA		SSN	RC	MULT	SRM	MRC	GRP NAME	SSO
002-002-002			10	10	SHR	*Y	*Y	-----	OFF
		002-002-003	20	10	SHR	*Y	*Y	-----	OFF
PCA	Mate PCA		SSN	RC	MULT	SRM	MRC	GRP NAME	SSO
003-101-001			10	30	DOM	YES	YES	abcdefg	OFF
		003-001-000	10	40	DOM	YES	YES	abcdefg	OFF
PCA	Mate PCA		SSN	RC	MULT	SRM	MRC	GRP NAME	SSO
007-101-001			254	10	SOL	*Y	*Y	-----	OFF
PCA	Mate PCA		SSN	RC	MULT	SRM	MRC	GRP NAME	SSO
007-101-001			255	10	COM	YES	*Y	-----	OFF
		007-001-000	251	10	COM	YES	*Y	-----	OFF
		007-001-000	249	10	COM	YES	*Y	-----	OFF
		007-001-000	253	15	COM	YES	*Y	-----	OFF
PCI	Mate PCI		SSN	RC	MULT	SRM	MRC	GRP NAME	SSO
1-101-0			10	10	SHR	*N	*N	-----	OFF
		1-102-0	10	10	SHR	*N	*N	-----	OFF
		1-103-0	30	10	SHR	*N	*N	-----	OFF
		1-104-0	40	10	SHR	*N	*N	-----	OFF
		1-105-0	50	10	SHR	*N	*N	-----	OFF
		1-106-0	60	10	SHR	*N	*N	-----	OFF
		1-107-0	70	10	SHR	*N	*N	-----	OFF
		1-108-0	80	10	SHR	*N	*N	-----	OFF
PCI	NET	Mate PC	SSN	RC	MULT	SRM	MRC	GRP NAME	SSO
1-109-0			90	10	COM	NO	*N	-----	OFF
	I	1-110-0	90	20	COM	NO	*N	-----	OFF
	N	0-015-3-aa	90	20	COM	NO	*N	-----	OFF

```

          N      0-154-2-aa      90 30  COM NO  *N  ----- OFF
PCN          Mate PCN          SSN RC MULT SRM MRC GRP NAME SSO
1-129-2-aa          55 10  DOM NO  NO  ----- OFF
          s-4-245-3-ab          45 99  DOM NO  NO  ----- OFF
PCN          Mate PCN          SSN RC MULT SRM MRC GRP NAME SSO
6-007-1-aa          5 10  DOM NO  NO  ----- OFF
          6-007-3-aa          5 20  DOM NO  NO  ----- OFF
PCI          Mate PCI          SSN RC MULT SRM MRC GRP NAME SSO
s-1-128-6          55 10  SOL *N  *N  ----- OFF

```

MAP table is (30 of 1024) 3% full.

This example retrieves all MAP sets containing a specified ANSI point code:

```
rtrv-map:pca=1-1-4
```

```

spareduppc 09-08-09 12:05:28 EST  EAGLE 41.1.0
PCA          Mate PCA          SSN RC MULT SRM MRC GRP NAME SSO
001-001-004          5 25  SHR *Y  *Y  ----- OFF
          001-001-001          50 25  SHR *Y  *Y  ----- OFF
PCA          Mate PCA          SSN RC MULT SRM MRC GRP NAME SSO
001-001-004          10 15  DOM YES YES ----- OFF
          25 10  DOM YES YES ----- OFF
PCA          Mate PCA          SSN RC MULT SRM MRC GRP NAME SSO
001-001-003          15 30  COM YES *Y ----- OFF
          30 10  COM NO  *N ----- OFF
          001-010-010          30 30  COM NO  *N ----- OFF
PCA          Mate PCA          SSN RC MULT SRM MRC GRP NAME SSO
001-001-001          20 25  SHR *Y  *Y ----- OFF
          10 25  SHR *Y  *Y ----- OFF
PCA          Mate PCA          SSN RC MULT SRM MRC GRP NAME SSO
001-001-004          25 10  DOM YES YES ----- OFF
          001-001-004          10 15  DOM YES YES ----- OFF

```

MAP table is (30 of 1024) 3% full.

This example retrieves a unique ANSI point code and SSN combination:

```
rtrv-map:pca=1-1-4:ssn=15
```

```

spareduppc 09-08-09 12:05:28 EST  EAGLE 41.1.0
PCA          Mate PCA          SSN RC MULT SRM MRC GRP NAME SSO
          001-001-004          15 30  COM YES *Y ----- OFF
001-001-003          30 10  COM NO  *N ----- OFF
          001-010-010          30 30  COM NO  *N ----- OFF

```

MAP table is (30 of 1024) 3% full.

This example shows output when the Flexible Final GTT Loadsharing feature is enabled:

rtrv-map:mapset=2

flexgtton 08-12-09 12:05:28 EST EAGLE 40.1.0

```

MAPSET ID=2
PCA           Mate PCA           SSN RC MULT SRM MRC GRP NAME SSO
001-001-002           50  5  DOM YES YES ----- OFF
                   001-001-002       10 15  DOM YES YES ----- ON
                   001-001-003       20 20  DOM YES YES ----- ON
                   001-001-002       40 35  DOM YES YES ----- OFF

```

MAP table is (49 of 36000) 1% full.

rtrv-map:mapset=dfmt:pcn=s-10155-ab

flexgtton 08-12-10 12:01:04 EST EAGLE 40.1.0

```

MAPSET ID=DFLT
PCN           Mate PCN           SSN RC MULT SRM MRC GRP NAME SSO
03082-aa           55 10  DOM NO  NO  ----- OFF
                   s-10155-ab       45 99  DOM NO  NO  ----- OFF

```

MAP table is (49 of 36000) 1% full.

This example shows output when the Weighted GTT Loadsharing feature is enabled, and the Flexible Final GTT Loadsharing feature is not enabled:

rtrv-map:pci=1-110-0

```

wgtonflxoff 09-08-10 12:03:44 EST EAGLE 41.1.0
PCI          NET Mate PC          SSN RC MULT SRM MRC GRP NAME SSO WT %WT
THR
1-110-0           90 20  COM NO  *N  ----- OFF 10  20
60
                   I    1-109-0       90 20  COM NO  *N  ----- OFF 20  40
60
                   N    00123         90 20  COM NO  *N  ----- OFF 20  40
60
                   N    01234         90 30  COM NO  *N  ----- OFF 30 100
60

```

MAP table is (14 of 1024) 1% full.

This example shows a Flexible ITU National Point Code STP option of 3-8-3-0. The Weighted GTT Loadsharing and Flexible Final GTT Loadsharing features are enabled:

```
rtrv-map:pcn=6-7-1
```

```
npcfmti3830 08-12-10 12:03:44 EST EAGLE 40.1.0
```

```

MAPSET ID=DFLT
PCN           Mate PCN           SSN RC MULT SRM MRC GRP NAME SSO
WT %WT THR
  6-007-1           5 10  DOM NO  NO  ----- OFF
-- --- ---
                6-007-3           5 20  DOM NO  NO  ----- OFF
-- --- ---

```

```
MAP table is (19 of 36000) 1% full.
```

This example shows a PCN24 point code. The Weighted GTT Loadsharing and Flexible Final GTT Loadsharing features are not enabled.

```
rtrv-map
```

```
wgttgflxoff 09-08-10 15:00:37 EST EAGLE 41.1.0
```

```

PCA           Mate PCA           SSN RC MULT SRM MRC GRP NAME SSO
001-001-001           10 10  SHR *Y  *Y  ----- ON
                001-001-002           20 10  SHR *Y  *Y  ----- OFF

PCI           Mate PCI           SSN RC MULT SRM MRC GRP NAME SSO
1-101-0           10 10  SHR *N  *N  ----- OFF
                1-102-0           10 10  SHR *N  *N  ----- OFF

PCN24         Mate PCN24           SSN RC MULT SRM MRC GRP NAME SSO
000-000-001           5 30  SHR *N  *N  ----- OFF
                000-001-002           5 30  SHR *N  *N  ----- OFF

```

```
MAP table is (6 of 1024) 1% full.
```

This example shows weighted MAP sets:

```
rtrv-map
```

```
wgtonflxoff 09-08-08 15:00:37 EST EAGLE 41.1.0
```

```

PCA           Mate PCA           SSN RC MULT SRM MRC GRP NAME SSO
WT %WT THR
  001-001-001           10 10  SHR *Y  *Y  ----- ON
20 67 50
                001-001-002           20 10  SHR *Y  *Y  ----- OFF
10 33 50
PCI           Mate PCI           SSN RC MULT SRM MRC GRP NAME SSO
WT %WT THR
  1-101-0           10 10  SHR *N  *N  ----- OFF
10 33 1
                1-102-0           10 10  SHR *N  *N  ----- OFF

```

```

20 67 1
    PCN24          Mate PCN24    SSN RC MULT SRM MRC GRP NAME SSO WT %WT
THR
    000-000-001          5 30  SHR *N  *N  ----- OFF 50  91
80
    000-001-002          5 30  SHR *N  *N  ----- OFF  5   9
80

```

MAP table is (6 of 1024) 1% full.

This example shows output when the Flexible Final GTT Loadsharing feature is enabled:

```
rtrv-map:pcn24=0-1-2
```

```
wgtonflxoff 09-08-10 15:00:37 EST EAGLE 41.1.0
```

```

MAPSET ID=DFLT
PCN24          Mate PCN24    SSN RC MULT SRM MRC GRP NAME SSO WT %WT
THR
    000-000-001          5 30  SHR *N  *N  ----- OFF 50  91
80
    000-001-002          5 30  SHR *N  *N  ----- OFF  5   9
80

```

MAP table is (6 of 36000) 1% full.

This example shows output when the Flexible GTT Load Sharing and GTT LS ARI features are enabled and the Weighted GTT Load Sharing feature is turned off:

```
rtrv-map
```

```

tekelecstp 09-08-22 13:36:31 EST EAGLE 41.1.0
MAPSET ID=DFLT MRNSET ID=---- MRNPC=-----
PCI          Mate PCI          SSN RC MULT SRM MRC GRP NAME SSO
1-101-1          11 10  SHR *N  *N  itugrp  OFF
    1-101-2          12 10  SHR *N  *N  itugrp  OFF

MAPSET ID=1    MRNSET ID=---- MRNPC=-----
PCN          Mate PCN          SSN RC MULT SRM MRC GRP NAME SSO
s-02001          21 10  SHR *N  *N  ----- OFF
    s-02002          22 10  SHR *N  *N  ----- OFF

```

MAP table is (4 of 36000) 1% full.

```
;
```

This example shows output when the Flexible GTT Load Sharing and GTT LS ARI features are enabled, ARI Mates are provisioned, and the Weighted GTT Load Sharing feature is turned off:

rtrv-map

```

tekelecstp 09-08-22 13:36:31 EST  EAGLE 41.1.0
  MAPSET ID=DFLT  MRNSET ID=DFLT  MRNPC=  001-001-004
  PCA           Mate PCA           SSN RC MULT SRM MRC GRP NAME SSO
  001-001-001           001-001-002  11 10 SHR *Y *Y ----- OFF
                                     12 10 SHR *Y *Y ----- OFF

  MAPSET ID=2      MRNSET ID=DFLT  MRNPC=  001-001-003
  PCA           Mate PCA           SSN RC MULT SRM MRC GRP NAME SSO
  001-001-005           001-001-006  11 20 SHR *Y *Y ----- OFF
                                     10 20 SHR *Y *Y ----- OFF

  MAPSET ID=DFLT  MRNSET ID=-----  MRNPC=-----
  PCI           Mate PCI           SSN RC MULT SRM MRC GRP NAME SSO
  1-101-1           1-101-2        11 10 SHR *N *N itugrp  OFF
                                     12 10 SHR *N *N itugrp  OFF

  MAPSET ID=5      MRNSET ID=DFLT  MRNPC=  1-101-3
  PCI           NET  Mate PC           SSN RC MULT SRM MRC GRP NAME SSO
  1-101-1           I  s-2-202-1      11 10 SHR *N *N itugrp  OFF
                                     N  01002          12 10 SHR *N *N ----- OFF
                                     N  01002          12 10 SHR *N *N ----- OFF

  MAPSET ID=3      MRNSET ID=1      MRNPC=  01003
  PCN           Mate PCN           SSN RC MULT SRM MRC GRP NAME SSO
  01001           01002          11 10 SHR *N *N ----- OFF
                                     12 10 SHR *N *N ----- OFF

  MAPSET ID=4      MRNSET ID=2      MRNPC=  s-2-202-3
  PCI           Mate PCI           SSN RC MULT SRM MRC GRP NAME SSO
  s-2-202-1           s-2-202-2      21 10 SHR *N *N ----- OFF
                                     22 10 SHR *N *N ----- OFF

  MAPSET ID=1      MRNSET ID=-----  MRNPC=-----
  PCN           Mate PCN           SSN RC MULT SRM MRC GRP NAME SSO
  s-02001           s-02002          21 10 SHR *N *N ----- OFF
                                     22 10 SHR *N *N ----- OFF

```

MAP table is (15 of 36000) 1% full.

;

This example shows output for a specific point code. The Flexible GTT Load Sharing and GTT LS ARI features are enabled, and the Weighted GTT Load Sharing feature is turned off.

rtrv-map:pcn=1001

```

eaglestp 09-08-22 18:41:14 EST  EAGLE 41.1.0

  MAPSET ID=3      MRNSET ID=1      MRNPC=  01003
  PCN           Mate PCN           SSN RC MULT SRM MRC GRP NAME SSO
  01001           11 10 SHR *N *N ----- OFF

```

```
01002          12 10 SHR *N *N ----- OFF
```

```
MAP table is (15 of 36000) 1% full.
```

```
;
```

This example shows output for a specific point code and subsystem number. The Flexible GTT Load Sharing and GTT LS ARI features are enabled. The Weighted GTT Load Sharing feature is turned off.

```
rtrv-map:pcn=1002:ssn=12
```

```
eaglestp 09-08-12 18:41:20 EST EAGLE 41.1.0
```

```
MAPSET ID=3      MRNSET ID=1      MRNPC= 01003
PCN              Mate PCN        SSN RC MULT SRM MRC GRP NAME SSO
01001           01002           11 10 SHR *N *N ----- OFF
                   01002           12 10 SHR *N *N ----- OFF
```

```
MAPSET ID=5      MRNSET ID=DFLT  MRNPC= 1-101-3
PCN      NET  Mate PC      SSN RC MULT SRM MRC GRP NAME SSO
1-101-1  I    s-2-202-1      11 10 SHR *N *N itugrp  OFF
                   N    01002           12 10 SHR *N *N ----- OFF
                   N    01002           12 10 SHR *N *N ----- OFF
```

```
MAP table is (15 of 36000) 1% full.
```

```
;
```

This example shows output when the Flexible GTT Load Sharing and GTT LS ARI features are enabled, and the Weighted GTT Load Sharing feature is turned on:

```
rtrv-map
```

```
eaglestp 09-08-12 18:43:29 EST EAGLE 41.1.0
```

```
MAPSET ID=DFLT  MRNSET ID=DFLT  MRNPC= 001-001-004
PCA            Mate PCA        SSN RC MULT SRM MRC GRP NAME SSO WT %WT
THR
001-001-001           11 10 SHR *Y *Y ----- OFF -- ---
---
001-001-002           12 10 SHR *Y *Y ----- OFF -- ---
---
```

```
MAPSET ID=2      MRNSET ID=DFLT  MRNPC= 001-001-003
PCA            Mate PCA        SSN RC MULT SRM MRC GRP NAME SSO WT %WT
THR
001-001-005           11 20 SHR *Y *Y ----- OFF 20 67
50
001-001-006           10 20 SHR *Y *Y ----- OFF 10 33
50
```

```
MAPSET ID=DFLT  MRNSET ID=-----  MRNPC=-----
PCI            Mate PCI        SSN RC MULT SRM MRC GRP NAME SSO WT %WT
THR
```

```

          1-101-1                11 10  SHR *N *N  itugrp  OFF
-- --- ---
                                1-101-2                12 10  SHR *N *N  itugrp  OFF
-- --- ---

          MAPSET ID=5      MRNSET ID=DFLT  MRNPC=  1-101-3
          PCI      NET  Mate PC      SSN RC MULT SRM MRC GRP NAME SSO
WT %WT THR
          1-101-1                11 10  SHR *N *N  itugrp  OFF
30 33  1
          I  s-2-202-1            12 10  SHR *N *N  ----- OFF
30 33  1
          N    01002              12 10  SHR *N *N  ----- OFF
30 33  1

          MAPSET ID=3      MRNSET ID=1      MRNPC=  01003
          PCN      Mate PCN      SSN RC MULT SRM MRC GRP NAME SSO
WT %WT THR
          01001                11 10  SHR *N *N  ----- OFF
40 67  1
          01002                12 10  SHR *N *N  ----- OFF
20 33  1

          MAPSET ID=4      MRNSET ID=2      MRNPC=  s-2-202-3
          PCI      Mate PCI      SSN RC MULT SRM MRC GRP NAME SSO
WT %WT THR
          s-2-202-1            21 10  SHR *N *N  ----- OFF
-- --- ---
          s-2-202-2            22 10  SHR *N *N  ----- OFF
-- --- ---

          MAPSET ID=1      MRNSET ID=-----  MRNPC=-----
          PCN      Mate PCN      SSN RC MULT SRM MRC GRP NAME SSO
WT %WT THR
          s-02001                21 10  SHR *N *N  ----- OFF
-- --- ---
          s-02002                22 10  SHR *N *N  ----- OFF
-- --- ---

```

MAP table is (15 of 36000) 1% full.

;

This example shows output for a specific point code. The Flexible GTT Load Sharing and GTT LS ARI features are enabled, and the Weighted GTT Load Sharing feature is turned on.

```
rtrv-map:pcn=1001
```

```

eaglestp 09-08-12 18:43:34 EST  EAGLE 41.1.0
          MAPSET ID=3      MRNSET ID=1      MRNPC=  01003
          PCN      Mate PCN      SSN RC MULT SRM MRC GRP NAME SSO
WT %WT THR
          01001                11 10  SHR *N *N  ----- OFF
40 67  1

```



```

                                01002                12 10  SHR *N *N  ----- OFF 20
33  1

MAP table is (15 of 36000) 1% full.
;

```

This example shows output for a specific point code and subsystem number. The Flexible GTT Load Sharing and GTT LS ARI features are enabled, and the Weighted GTT Load Sharing feature is turned on.

```
rtrv-map:pcn=1002:ssn=12
```

```

eaglestp 09-08-12 18:43:39 EST  EAGLE 41.1.0
MAPSET ID=3      MRNSET ID=1      MRNPC=  01003
PCN              Mate PCN        SSN RC MULT SRM MRC GRP NAME SSO WT %WT
THR
01001                11 10  SHR *N *N  ----- OFF 40
67  1
                                01002                12 10  SHR *N *N  ----- OFF 20
33  1

MAPSET ID=5      MRNSET ID=DFLT  MRNPC=  1-101-3
PCN      NET  Mate PC        SSN RC MULT SRM MRC GRP NAME SSO WT %WT
THR
1-101-1                11 10  SHR *N *N  itugrp  OFF 30
33  1
          I  s-2-202-1        12 10  SHR *N *N  ----- OFF 30
33  1
          N   01002          12 10  SHR *N *N  ----- OFF 30
33  1

MAP table is (15 of 36000) 1% full.
;

```

This example shows output for a specific point code. The GTT LS ARI feature is enabled, the Weighted GTT Load Sharing feature is turned on, and `on=refcnt` is specified.

```
rtrv-map:pcn=1001:on=refcnt
```

```

eaglestp 11-03-17 16:23:34 EST  EAGLE 44.0.0
MAPSET ID=3      MRNSET ID=1      MRNPC=  01003
MAPSET REFCNT=1
PCN              Mate PCN        SSN RC MULT SRM MRC GRP NAME SSO WT %WT
THR
01001                11 10  SHR *N *N  ----- OFF 40
67  1
MAPSETPCSSN REFCNT=2      MAPSETPC REFCNT=1
                                01002          12 10  SHR *N *N  ----- OFF 20
33  1
MAPSETPCSSN REFCNT=0      MAPSETPC REFCNT=*1

MAP table is (15 of 36000) 1% full.

```

;

Output for 16 bit PC map entry.

rtrv-map:pcn16=1-2-3

tekelecstp 13-07-02 16:13:30 EST 45.0.0-64.69.0

rtrv-map:pcn16=1-2-3

Command entered at terminal #4.

```

MAPSET ID=DFLT
PCN16          Mate PCN16      SSN RC MULT SRM MRC GRP NAME SSO
WT %WT THR
001-02-03          10 10  SOL *N *N  ----- OFF
-- --- ---

```

MAP table is (2 of 36000) 1% full.

;

Legend

- **MAPSET ID**—MAP set number or DFLT when numbered MAP sets are allowed
- **PCA/PCI/PCN/PCN24/PCN16**—Point code of the SCP where the primary application resides
- **NET**—Mate network type of the point code when an ITU MAP set contains both ITU-I and ITU-N point codes. The field can show I if the MATE PC is an ITU-I point code or N if the MATE PC is an ITU-N point code.
- **MATE PC/PCA/PCI/PCN/PCN24/PCN16**—Point code of the SCP where the mate application resides
- **SSN**—Applications subsystem number
- **RC**—Relative cost of the point code/subsystem
- **MULT**—Multiplicity mode SOL (Solitary), DOM (Dominant), SHR (Shared), or COM (Combined - Shared and Dominant) Load sharing. See the "Notes" section in the `ent-map` command description for an explanation of multiplicity modes.
- **SRM**—Specifies whether subsystem routing messages are transmitted is on (YES), off (NO), not applicable (*Y) but would be YES if applicable, or not applicable (*N) but would be NO if applicable. See the "Notes" section in the command description for SRM non applicable Load sharing modes.
- **MRC**—Specifies whether message routing under congestion is on (YES), off (NO), not applicable (*Y) but would be YES if applicable, or not applicable (*N) but would be NO if applicable. See the "Notes" section in the `rtrv-map` command for MRC non applicable Load sharing modes.
- **GRP NAME**—Name of a group of point codes (broadcast list group name) to be notified of the subsystem status
- **SSO**—Subsystem Status Option. Subsystem status (ON=prohibited or OFF=allowed) for PC/SSN MAP entries.

- **WT**—Weight assigned to the PC
- **%WT**—Relative percentage, according to weight, of an in-service PC within an RC group
- **THR**—Service threshold. If the relative percentage, according to weight, of in-service PCs within an RC group falls below the in-service threshold, that RC group is considered out-of-service and traffic is routed to the next lowest RC group.
- **MRNSET**—Alternate RI Mate MRN Set ID
- **MRNPC**—Alternate RI Mate point code
- **MAPSET REFCNT**—Count of GTT Translation table entries with XLAT=NONE that refer to the corresponding MAP set
- **MAPSETPCSSN REFCNT**—Count of entries from MRN, GSM MAP Screening, GSM MAP Opcode, GTT Translation and GTT Action tables that refer a MAP entry with a MAPSET/PC/SSN combination
- **MAPSETPC REFCNT**—Count of entries from MRN, GTT Translation, GSM MAP Screening, GSM MAP Opcode and Prepaid SMS Options tables that refer a MAP entry with a MAPSET/PC combination

Related Topics

- [chg-map](#)
- [dlt-map](#)
- [ent-map](#)

4.1.536 rtrv-mate-stp

Use this command to see point codes configured in mate stp table.

Parameters

This command has no parameters

Example

```
rtrv-mate-stp
```

Dependencies

This command cannot be entered while in upgrade mode.

```
3276 E3276 Cmd Rej: Command not allowed while in upgrade mode
```

Output

```
rtrv-mate-stp
```

```
Command Accepted - Processing
```

```
tekelecstp 18-05-29 11:19:05 MST EAGLE 46.6.2.0.0-73.19.0
```

```
  rtrv-mate-stp
```

```
  Command entered at terminal #2.
```

```
tekelecstp 18-05-29 11:19:05 MST EAGLE 46.6.2.0.0-73.19.0
```

```
STP POINT CODE (PCI)
-----
      1-001-1
      3-003-1
Mate Stp table is (2 of 16) 13% full.
;
```

Related Topics

- [ent-mate-stp](#)
- [dlt-mate-stp](#)

4.1.537 rtrv-meas-sched

Use this command to retrieve the list of measurement reports currently scheduled to be dumped to the UI, and the collection settings for OAM based measurements.

This command provides no information on Measurements Platform (MCP) scheduled FTP reports or on the status of MCP measurements (see [rtrv-measopts](#)).

Refer to the *Measurements Manual* for specific details on measurement reports.

Parameters

This command has no parameters.

Example

```
rtrv-meas-sched
```

Dependencies

None

N/A N/A

Notes

None

Output

Output with measurement collection on.

```
rtrv-meas-sched

rlghncxa03w 04-02-27 07:19:51 EST  EAGLE 31.3.0
COLLECT      = on
GTWYLSFLTR   = both
-----
SYSTOT-STP   = on
SYSTOT-TT    = off
COMP-LNKSET  = on
COMP-LINK    = on
```

```

GTWY-STP          = on
GTWY-LNKSET      = on
MTC D-STP        = on
MTC D-LINK       = on
MTC D-LNKSET     = on
;

```

Output with measurement collection off. The parentheses () indicate that a setting is not in effect because collection is turned off.

```
rtrv-meas-sched
```

```

rlghncxa03w 04-02-27 07:19:51 EST EAGLE 31.3.0
COLLECT          = off
GTWYLSFLTR      = (both)
-----
SYSTOT-STP      = (off)
SYSTOT-TT       = (off)
COMP-LNKSET     = (off)
COMP-LINK       = (off)
GTWY-STP        = (off)
GTWY-LNKSET     = (off)
MTC D-STP       = (on)
MTC D-LINK      = (on)
MTC D-LNKSET    = (on)
;

```

Legend

- **COLLECT**—Shows whether measurement collection is on or off.
- **GTWYLSFLTR**—Shows the setting that filters the linksets included in the GTWY report. The settings are as follows:
 - *both*—Only gateway linksets are included in the report to the terminal and SEAS.
 - *stp*—Only gateway linksets are included in the report to the terminal. All defined linksets are included in the report to SEAS.
 - *seas*—All defined linksets are included in the report to the terminal. Only gateway linksets are included in the report to SEAS.
 - *none*—All defined linksets are included in the report to the terminal and SEAS.
- **SYSTOT-STP**—System total–STP measurement collection is on or off.
- **SYSTOT-TT**—System total–translation type measurement collection is on or off.
- **COMP-LNKSET**—Component–linkset measurement collection is on or off.
- **COMP-LINK**—Component–link measurement collection is on or off.
- **GTWY-STP**—Gateway administration–STP measurement report is on or off.
- **GTWY-LNKSET**—Gateway administration–LNKSET measurement report is on or off.
- **MTC D-STP**—Maintenance daily–STP measurement collection is on or off.
- **MTC D-LINK**—Maintenance daily–link measurement collection is on or off.

- **MTCD-LNKSET**—Maintenance daily—LNKSET measurement report is on or off.

Related Topics

- [chg-meas](#)
- [rept-meas](#)
- [rtrv-measopts](#)

4.1.538 rtrv-measopts

Use this command show the status of:

- All FTP scheduled measurements reports
- the Measurements Platform collection function (PLATFORMENABLE setting)
- the 15 Minute Measurements collection function (COLLECT15MIN setting)
- the CLI-based report file name option (CLLIBASEDNAME setting)
- the Integrated Measurements collection function (OAMHCMEAS setting)
- the unchannelized link label function (UNCHLINKLABEL setting)

Parameters

This command has no parameters.

Example

```
rtrv-measopts
```

Dependencies

This command cannot be entered while in upgrade mode.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

Notes

None

Output

```
rtrv-measopts
```

```
e1061001 12-01-13 00:03:37 EST EAGLE5 45.0.0
PLATFORMENABLE = off
COLLECT15MIN = off
CLLIBASEDNAME = off
OAMHCMEAS = on
UNCHLINKLABEL = on
-----
SYSTOTSTP = off
SYSTOTTT = off
SYSTOTIDPR = off
SYSTOTSIP = off
SYSTOTSFTHROT = off
COMPLINK = off
```

```

COMPLNKSET      = on
COMPSCPASOC     = off
COMPSCPACARD    = off
COMPUA          = off
GTWYSTP         = off
GTWYLNKSET      = off
GTWYORIGNI      = off
GTWYORIGNINC    = off
GTWYLSORIGNI    = off
GTWYLSDESTNI    = off
GTWYLSONISMT    = off
NMSTP           = off
NMLINK          = off
NMLNKSET        = on
AVLLINK         = off
AVLDLINK        = off

```

```
;
```

Legend

- **PLATFORMENABLE**—status of the Measurements Collection function
- **COLLECT15MIN**—status of the 15 Minute Measurements collection function
- **OAMHCMEAS**—Indicates the status of the Integrated Measurements collection function on an E5-OAM card
- **UNCHLINKLABEL**—status of the unchannelized link label for high-speed MTP2 links
- **CLLIBASEDNAME**—indicates whether the CLLI-based file name option is turned on or off
- **SYSTOTSTP**—System Total measurements report for the entire STP
- **SYSTOTTT**—System Total report for Translation Type measurements
- **SYSTOTIDPR**—System Total measurements report for the entire IDPR Measurements
- **SYSTOTSIP**—System Total measurements report for the entire SIP Measurements
- **SYSTOTSFTHROT**—System Total measurements report for SFTHROT GTT Action Measurements
- **COMPLINK**—Component measurements report for links
- **COMPLNKSET**—Component measurements report for link sets
- **COMPSCPASOC**—Component measurements report for SCTP associations
- **COMPSCPACARD**—Component measurements report for SCTP cards
- **COMPUA**—Component measurements report for M3UA and SUA application server/ association pairs
- **GTWYORIGNI**—Gateway Administration measurements report per originating network (large network uniquely identified by NI only)
- **GTWYORIGNINC**—Gateway Administration measurements report per originating network (small network identified by NI-NC)
- **GTWYLSORIGNI**—Gateway Administration measurements report per link set and originating network

- **GTWYLSDESTNI**—Gateway Administration measurements report per link set and destination network
- **GTWYLSONISMT**—Gateway Administration measurements report per link set, per originating network, per ISUP message type
- **NMLINK**—Network Management measurements report for links
- **NMLNKSET**—Network Management measurements report for link sets
- **NMSTP**—Network Management measurements report for the entire STP
- **AVLINK**—Hourly Availability report for links
- **AVLDLINK**—Daily Availability report for links

Related Topics

- [chg-measopts](#)
- [chg-mtc-measopts](#)
- [rtrv-mtc-measopts](#)

4.1.539 rtrv-mrn

Use this command to display the Mated Relay Node application relationship information maintained by the EAGLE. This information is used to support the routing of SCCP management SSP/SSA messages.

If the Intermediate GTT Load-Sharing feature is on and the Flexible GTT Load-Sharing feature is enabled, then use this command to retrieve MRN set information.

If the GTT Load Sharing with Alternate Routing Indicator (GTT LS ARI) feature is enabled, then use this command to display Alternate RI Mate information.

Parameters

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

Note:

Definitions for the feature options specified by the `on` parameter are located in the Notes section.

mrnset (optional)

MRN set ID.

Range:

1 - 3000, dflt

dflt —Default MRN set

on (optional)

Enables or turns on the specified options. A comma-separated list of options that are requested to be turned on. Up to 8 options can be specified in the list.

Range:

refcnt

pc (optional)

ANSI point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

pca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

pc/pca/pci/pcn/pcn24/pcn16 (optional)

Post-GTT-translated point code.

pci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

pcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383
gc—aa-zz
m1-m2-m3-m4—0-14 for each member; values must sum to 14

pcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

pcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

Example

```
rtrv-mrn
```

```
rtrv-mrn:pc=1-1-2
```

```
rtrv-mrn:pcn=s-1-1-1-123-aa
```

```
rtrv-mrn:pci=1-55-1:mrnset=2
```

```
rtrv-mrn:pcn=1001:mrnset=df1t:on=refcnt
```

```
rtrv-mrn:pcn16=1-2-3:mrnset=df1t
```

Dependencies

A point code that is specified in the command must already exist in the MRN table.

2849 E2849 Cmd Rej: PC must already exist in the MRN table

The `mrnset` parameter can only be specified when the Flexible GTT Load-Sharing feature is enabled.

4479 E4479 Cmd Rej: MRNSET must be specified (only) if FGTTLS feature is enabled

If the Flexible GTT Load Sharing feature is ON, then the PC and MRN set must be specified together.

4485 E4485 Cmd Rej: PC & MRNSET must be specified together

The specified MRN set must already exist in the MRN table.

4480 E4480 Cmd Rej: Specified MRNSET does not exist

If the Flexible GTT Load Sharing feature is enabled, then the specified PC must already exist in the specified MRN set.

4483 E4483 Cmd Rej: PC does not exist in specified MRNSET

The Intermediate Global Title Translation Load Sharing (IGTTLS) feature must be turned on before this command can be entered.

2996 E2996 Cmd Rej: Intermed GTT Load Sharing feature must be ON

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

If any entries are provisioned in the SCCP-SERV table, then the maximum number of entries shown for the MRN table are reduced by that amount.

When the GTT LS ARI feature is enabled, the Alternate RI Mate, identified by the MAPSET, MAPPC, and MAPSSN fields, is displayed for all MRN Sets. When the GTT LS ARI feature is not enabled, the Alternate RI Mate is not displayed, and the display is unchanged.

on options

refcnt —displays the MRNSET and MRNSET/PC reference counts

Output

The NET column is shown only when an MRN set contains mixed network point code types. Addition of the NET column realigns all remaining columns in the output. The re-alignment is constant even if the NET column is not shown.

```
rtrv-mrn
```

```
spareduppc 08-12-13 11:35:12 EST EAGLE 40.1.0
```

PC	RC
001-001-000	5
001-001-001	10
001-001-002	20
001-001-003	30
001-001-004	40
PC	RC
001-002-001	20
001-001-007	25
001-001-008	30
001-003-002	30

```
      PCI          RC
s-2-100-1        10
s-2-002-1        10
s-2-002-2        10
```

```
      PCN          RC
s-1-1-1-0123-aa  1
s-1-1-1-0235-aa  2
s-1-1-1-0555-aa  3
```

MRN table is (15 of 3000) 1% full.

```
rtrv-mrn:pc=1-1-2
```

```
spareduppc 08-12-13 11:35:12 EST EAGLE 40.1.0
```

```
      PC          RC
001-001-000      5
001-001-001      10
001-001-002      20
001-001-003      30
001-001-004      40
```

MRN table is (15 of 3000) 1% full.

```
rtrv-mrn:pci=s-2-2-1
```

```
spareduppc 08-12-13 11:35:12 EST EAGLE 40.1.0
```

```
      PCI          RC
s-2-100-1        10
s-2-002-1        10
s-2-002-2        10
```

MRN table is (15 of 3000) 1% full.

```
rtrv-mrn:pcn=s-1-1-1-123-aa
```

```
spareduppc 08-12-13 11:35:12 EST EAGLE 40.1.0
```

```
      PCN          RC
s-1-1-1-0123-aa  1
s-1-1-1-0235-aa  2
s-1-1-1-0555-aa  3
```

MRN table is (15 of 3000) 1% full.

This example shows output when the Weighted GTT Load Sharing feature is on, and weights are added to an existing MRN set:

```
rtrv-mrn:pci=s-2-2-2
```

```
weighton 08-12-13 11:35:12 EST EAGLE 40.1.0
```

PCI	RC	WT	%WT	THR
s-2-002-1	10	5	17	50
s-2-002-2	10	10	33	50
s-2-100-1	10	15	50	50

```
MRN table is (15 of 3000) 1% full.
```

This example shows output when the Flexible Final GTT Load Sharing feature is enabled, and the first new ANSI MRN set is added:

```
rtrv-mrn
```

```
gflexon 08-12-13 11:35:12 EST EAGLE 40.1.0
```

MRNSET	PC	RC	WT	%WT	THR
DFLT	001-001-000	5	--	----	----
	001-001-001	10	--	----	----
	001-001-002	20	--	----	----
	001-001-003	30	--	----	----
	001-001-004	40	--	----	----

MRNSET	PC	RC	WT	%WT	THR
DFLT	001-002-001	20	--	----	----
	001-001-007	25	--	----	----
	001-001-008	30	--	----	----
	001-003-002	30	--	----	----

MRNSET	PCI	RC	WT	%WT	THR
DFLT	s-2-100-1	10	15	50	50
	s-2-002-1	10	5	17	50
	s-2-002-2	10	10	33	50

MRNSET	PCN	RC	WT	%WT	THR
DFLT	s-1-1-1-0123-aa	1	--	----	----
	s-1-1-1-0235-aa	2	--	----	----
	s-1-1-1-0555-aa	3	--	----	----

MRNSET	PC	RC	WT	%WT	THR
1	001-003-001	10	--	----	----
	001-003-002	10	--	----	----
	001-003-003	30	--	----	----
	001-003-004	30	--	----	----
	001-003-006	60	--	----	----
	001-003-007	60	--	----	----
	001-003-008	80	--	----	----
	001-003-009	80	--	----	----

```
MRN table is (23 of 6000) 1% full.
```

This example shows output when a mixed ITU network weighted MRN set is used:

```
rtrv-mrn:pci=1-55-1:mrnset=2
```

```
gflexon 08-12-13 11:35:12 EST EAGLE 40.1.0
```

MRNSET	NET	PC	RC	WT	%WT	THR
2	N	s-1-1-1-0235-aa	30	20	20	1
	I	1-055-1	30	20	20	1
	I	s-2-002-1	30	20	20	1
	I	s-2-002-2	30	20	20	1
	N	1-1-1-0444-bb	30	20	20	1

```
MRN table is (28 of 6000) 1% full.
```

This example shows output when the Flexible GTT Loadsharing and GTT LS ARI features are enabled, and the Weighted GTT Loadsharing feature is not turned on:

```
rtrv-mrn
```

```
eaglestp 08-12-22 19:03:49 EST EAGLE 40.1.0
```

MRNSET	MAPSET	MAPPEN	MAPSSN	PCN	RC
DFLT	DFLT	01003	10	01002	10
				01001	10

MRNSET	MAPSET	MAPPEN	MAPSSN	PC	RC
1	-----	-----	---	001-001-002	10
				001-001-001	10

MRNSET	MAPSET	MAPPEN	MAPSSN	PCI	RC
2	1	1-101-3	10	1-101-2	10
				1-101-1	10

MRNSET	MAPSET	MAPPEN	MAPSSN	PCI	RC
3	2	s-2-202-3	*	s-2-202-2	10
				s-2-202-1	10

MRNSET	MAPSET	MAPPEN	MAPSSN	PCN	RC
4	DFLT	s-02003	*	s-02002	20
				s-02001	20

MRNSET	MAPSET	MAPPEN	MAPSSN	NET	PC	RC
5	DFLT	01004	20	I	1-101-1	10
				N	01001	10
				I	s-2-202-1	30

```
MRN table is (13 of 6000) 1% full.
```

```
;
```

This example shows output when the Flexible GTT Loadsharing and GTT LS ARI features are enabled, and the Weighted GTT LS feature is turned on:

rtrv-mrn

```

eaglestp 08-12-22 19:04:42 EST EAGLE 40.1.0
MRNSET MAPSET MAPPCN MAPSSN PCN RC WT %WT THR
DFLT DFLT 01003 10 01002 10 5 50 1
01001 10 5 50 1

MRNSET MAPSET MAPPC MAPSSN PC RC WT %WT THR
1 -----
001-001-002 10 20 67 20
001-001-001 10 10 33 20

MRNSET MAPSET MAPPCI MAPSSN PCI RC WT %WT THR
2 1 1-101-3 10 1-101-2 10 40 57 1
1-101-1 10 30 43 1

MRNSET MAPSET MAPPCI MAPSSN PCI RC WT %WT THR
3 2 s-2-202-3 * s-2-202-2 10 50 50 1
s-2-202-1 10 50 50 1

MRNSET MAPSET MAPPCN MAPSSN PCN RC WT %WT THR
4 DFLT s-02003 * s-02002 20 -- --- ---
s-02001 20 -- --- ---

MRNSET MAPSET MAPPCN MAPSSN NET PC RC WT %WT THR
5 DFLT 01004 20 I 1-101-1 10 20 50 1
N 01001 10 20 50 1
I s-2-202-1 30 20 100 1

```

MRN table is (13 of 6000) 1% full.

;

This example shows output for a specific point code and MRN Set. The Flexible GTT Loadsharing and GTT LS ARI features are enabled, and the Weighted GTT Loadsharing feature is turned off.

rtrv-mrn:pcn=1001:mrnset=dflt

```

eaglestp 08-12-22 19:03:53 EST EAGLE 40.1.0
MRNSET MAPSET MAPPCN MAPSSN PCN RC
DFLT DFLT 01003 10 01002 10
01001 10

```

MRN table is (13 of 6000) 1% full.

;

This example shows output for a specific point code and MRN Set. The Flexible GTT Loadsharing and GTT LS ARI features are enabled, and the Weighted GTT Loadsharing feature is turned on.

```
rtrv-mrn:pcn=1001:mrnset=dflt
```

```
eaglestp 08-12-22 19:04:47 EST EAGLE 40.1.0
```

	MRNSET	MAPSET	MAPPCN	MAPSSN	PCN	RC	WT
%WT	THR						
50	1	DFLT	DFLT	01003	10	01002	10 5
50	1				01001		10 5

```
MRN table is (13 of 6000) 1% full.
```

```
;
```

This example shows output for a specific point code and MRN set. The GTT LS ARI feature is enabled, the Weighted GTT Loadsharing feature is turned on, and on=refcnt is specified.

```
rtrv-mrn:pcn=1001:mrnset=dflt:on=refcnt
```

```
eaglestp 11-03-17 14:24:37 EST EAGLE 44.0.0
```

	MRNSET	REFCNT=1	MRNSET	MAPSET	MAPPCN	MAPSSN	PCN	RC	WT
%WT	THR								
50	1	DFLT	DFLT	01003	10	01002		10	5
50	1	MRNSETPC	REFCNT=2				01001		10 5
		MRNSETPC	REFCNT=1						

```
MRN table is (13 of 6000) 1% full.
```

```
;
```

16 bit PC MRN entry output.

```
rtrv-mrn:pcn16=1-2-3:mrnset=dflt
```

```
tekelecstp 13-07-02 16:18:09 EST 45.0.0-64.69.0
```

```
rtrv-mrn:pcn16=1-2-3:mrnset=dflt
```

```
Command entered at terminal #4.
```

MRNSET	PCN16	RC	WT	%WT	THR
DFLT	002-02-02	10	10	25	1
	001-02-03	10	30	75	1

```
MRN table is (2 of 6000) 1% full.
```

Legend

- **MRNSET**—MRN set ID

- **NET**—Mated network type of the point code when an ITU MRN set contains both ITU-I and ITU-N point codes. The field can show I if the PC is an ITU-I point code or N if the PC is an ITU-N point code.
- **PC/PCI/PCN/PCN24/PCN16**—Point Code
- **RC**—Relative Cost
- **WT**—PC Weight
- **%WT**—Relative percentage, according to weight, of an in-service PC within an RC group
- **THR**—Service threshold. If the relative percentage, according to weight, of in-service PCs within a RC group falls below the in-service threshold, that RC group is considered out-of-service, and traffic is routed to the next lowest RC group.
- **MAPSET**—Secondary mate MAP Set
- **MAPPCN**—Alternate RI Mate point code
- **MAPSSN**—Alternate RI Mate subsystem number
- **MRNSET REFCNT**—Count of GTA table entries with XLAT=NONE that refer to the corresponding MRN set
- **MRNSETPC REFCNT**—Count of entries from the MAP, GTT Translation, GTT Action, and Prepaid SMS Options tables that refer to the corresponding MRN entry with an MRNSET/PC combination

Related Topics

- [chg-mrn](#)
- [dlt-mrn](#)
- [ent-mrn](#)

4.1.540 rtrv-mtc-measopts

Use this command to show the enabled/disabled status of all hourly and daily scheduled maintenance measurements reports.

Parameters

This command has no parameters.

Example

```
rtrv-mtc-measopts
```

Dependencies

This command cannot be entered while in upgrade mode.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

Notes

None

Output

rtrv-mtc-measopts

tekelecstp 17-05-13 16:31:40 EST EAGLE 45.1.0

```

MTCHLNP           = off
MTCHNP           = off
MTCHMAP          = off
MTCHEIR          = off
MTCHENUM         = on
MTCHVFLEX        = on
MTCHATINPQ       = off
MTCHGTTAPATH     = off
                  MTCHGTTSET       = off
MTCHAIQ          = off
MTCNSTP          = off
MTCNLINK         = off
MTCNLINKSET      = off
MTCNLNPN         = off
MTCNPN           = off
MTCNMAP          = off
MTCNDEIR         = off
MTCNENUM         = on
MTCNDFLEX        = on
MTCNATINPQ       = off
MTCNSCTPASOC     = off
MTCNSCTPCARD     = off
MTCNDUA          = off
MTCNDGTTAPATH    = off
                  MTCNDGTTSET      = off
MTCNDAIQ         = off
MTCNSFTHROT      = off
MTCNSIP          = off
MTCNDEIR         = off
MTCNDEIR         = off

```

;

Legend

- **MTCHEIR**—Maintenance Hourly (marginal) measurements report for Equipment Identity Register
- **MTCHENUM**—Maintenance Hourly measurements report for ENUM Mobile Number Portability and Tier One Address Resolution
- **MTCHVFLEX**—Maintenance Hourly (marginal) measurements report for V-Flex (Voice Mail Router)
- **MTCHATINPQ**—Maintenance Hourly (marginal) measurements report for ATINP Query

- **MTCHNP**—Maintenance Hourly (marginal) measurements report for INP, INP CRP, and G-Port
- **MTCHLNP**—Maintenance Hourly (marginal) measurements report for LNP
- **MTCHAIQ**—Maintenance Hourly (marginal) measurements report for ANSI41 AIQ
- **MTCHMAP**—Maintenance Hourly (marginal) measurements report for GSM Map Screening
- **MTCHGTTAPATH**—Maintenance Hourly (marginal) measurements report for GTT Action Per-Path.
- **MTCHGTTSET**—Maintenance Hourly measurements report per GTTSET
- **MTCDEIR**—Maintenance Daily measurements report for Equipment Identity Register
- **MTCDENUM**—Maintenance Daily measurements report for ENUM Mobile Number Portability and Tier One Address Resolution
- **MTCDVFLEX**—Maintenance Daily measurements report for V-Flex (Voice Mail Router)
- **MTCDSTP**—Maintenance Daily measurements report for STP
- **MTCDLNK**—Maintenance Daily measurements report for links
- **MTCDLNKSET**—Maintenance Daily measurements report for linksets
- **MTCDLNP**—Maintenance Daily measurements report for LNP
- **MTCDNP**—Maintenance Daily measurements report for INP/AINPQ, INP CRP, and G-Port
- **MTCDMAP**—Maintenance Daily measurements report for GSM Map Screening
- **MTCDSCTPASOC**—Maintenance Daily measurements report for SCTP associations
- **MTCDSCTPCARD**—Maintenance Daily measurements report for SCTP cards
- **MTCDUA**—Maintenance Daily measurements report for UA associations
- **MTCDGTTAPATH**—Maintenance Daily measurements report for GTT Action Per-Path.
- **MTCDGTTSET**—Maintenance Daily measurements report per GTTSET
- **MTCDAIQ**—Maintenance Daily measurements report for ANSI41 AIQ
- **MTCDSFTHROT**—Maintenance Daily measurement report for SFTHROT GTT Actions.
- **MTCD SIP**— Maintenance Daily measurement report for SIP
- **MTCHDEIR**— Maintenance Hourly measurements report for S13/S13' Diameter Equipment Identity Register
- **MTCDDEIR**—Maintenance Daily measurements report for S13/S13' Diameter Equipment Identity Register

Related Topics

- [chg-measopts](#)
- [chg-mtc-measopts](#)
- [chg-netopts](#)
- [rtrv-measopts](#)
- [rtrv-netopts](#)

4.1.541 rtrv-na

Use this command to display the configured network appearances.

Parameters

This command has no parameters.

Example

```
rtrv-na
```

Dependencies

None

N/A N/A

Notes

None

Output

```
rtrv-na

rlghncxa03w 05-01-20 09:07:58 EST  EAGLE 31.12.0
TYPE      GC          NA
ANSI      --           0
ITUI      --           1
ITUN      aa          2
ITUN24    --           3
ITUIS     --           4
ITUNS     bb          5
;
```

Related Topics

- [dlt-na](#)
- [ent-na](#)

4.1.542 rtrv-netopts

Use this command to retrieve the user-specified options for the IP and Fast Copy (FC) networks used by the EAGLE. This command displays the PVN IP address, PVN subnet mask, and FC Network parameters.

Parameters

This command has no parameters.

Example

```
rtrv-netopts
```

Dependencies

The NETOPTS table must be accessible.

3979 E3979 Cmd Rej: Read NETOPTS table failed

The EAGLE 5 Integrated Monitoring Support (E5IS) feature must be turned on before this command can be entered.

3967 E3967 Cmd Rej: E5IS must be ON

Notes

None

Output

rtrv-netopts

```
rlghncxa03w 08-12-11 16:35:57 IST EAGLE 40.1.0
NETWORK OPTIONS
-----
PVN          = 170.120.50.1
PVNMASK      = 255.255.252.0
FCNA         = 170.21.96.0
FCNAMASK     = 255.255.254.0
FCNB         = 170.22.96.0
FCNBMASK     = 255.255.254.0
```

;

Related Topics

- [chg-netopts](#)

4.1.543 rtrv-npp-as

Use this command to display a Numbering Plan Processor (NPP) Action Set (AS) entry.

Parameters

asn (optional)

Action set name. The name of the AS.

Range:

aaaaaaaa

1 alphabetic character followed by up to 9 alphanumeric characters

mode (optional)

This parameter allows the command to display Service Action optional numerical and digit string data values.

Range:

full

Example

```
rtrv-npp-as
rtrv-npp-as:asn=asn6
rtrv-npp-as:mode=full
```

Dependencies

None

N/A N/A

Output**Note:**

The `asn` or `mode=full` parameter must be specified before FA list information is displayed in the `rtrv-npp-as` output.

This example displays all AS entries:

```
rtrv-npp-as

tekelecstp 11-03-05 15:37:41 EMS EAGLE 44.0.0

ASN          CA          SA          FA          OFNAI  REFS
-----
asn1         znx         asdlkup     asd         inc     0
asn2         znx         grnlkup     grn         inc     0
asn3         znx         cgpnasdrqd zn          inc     0
              nprls
asn4         znx         cgpnasdrqd grn         inc     0
              cgpngrrqd
              nprelay
asn5         ac8         rtdbtrn     sn          inc     0
              sn8         rtdbtsp     ac
              cc3         rtdbtrnsp   cc
              cdial
asn6         cc3         nscdpn     cc          intl    0
              ac8         nscgpn     ac
              sn8         sn

NPP-AS table is (6 of 1024) 1% full.

;
```

This example displays a specific AS entry that contains TIF Number Substitution Service Actions:

```
rtrv-npp-as:asn=asn6
```

```
tekelecstp 12-02-05 15:37:41 EMS EAGLE 45.0.0
```

ASN	CA	SA	FA	OFNAI	REFS
asn6	cc3	nscdpn	cc	intl	0
	ac8	nscgpn	ac		
	sn8		sn		
FANE	: none				
FANF	: none				
FARN	: none				
FASP	: none				
FASCRCD	: none				
FASCRCG	: none				

```
NPP-AS table is (6 of 1024) 1% full.
```

```
;
```

```
rtrv-npp-as:mode=full
```

```
tekelecstp 12-02-05 15:37:41 EMS EAGLE 45.0.0
```

ASN	CA	SA	SA DATA	FA	OFNAI	REFS
asn6	cc3	nscdpn		cc	intl	1
	ac8	nscgpn		ac		
	sn8			sn		
FANE	: none					
FANF	: none					
FARN	: none					
FASP	: none					
FASCRCD	: none					
FASCRCG	: none					
tifcgpn1	cc2	blrls	val1 =12	cc	intl	1
	dnx		val2 =45	dn		
		blnfndrls	val1 =56			
			val2 =78			
		grnlkup				
FANE	: none					
FANF	: none					
FARN	: none					
FASP	: none					
FASCRCD	: none					
FASCRCG	: none					
tifcgpn2	cc2	asdlkup		cc	intl	1

```

                                dnx                                dn
FANE      : none
FANF      : none
FARN      : none
FASP      : none
FASCRCDC  : none
FASCRCG   : none

    tif1    znx          selscr                                dlma
intl 1
                                zn

FANE      : none
FANF      : none
FARN      : none
FASP      : none
FASCRCDC  : cc, ac, rn, sn
FASCRCG   : dlmd

NPP-AS    table is (3 of 1024) 1% full.

;

```

This example displays full information for a specific AS entry.

```

rtrv-npp-as:mode=full:asn=idpin1

tekelecstp 12-02-11 15:37:41 EMS EAGLE 45.0.0

ASN      CA      SA      SA DATA      FA
OFNAI    REFS
-----  -
----    -
    idpin1    cc3      inprtg      cc
intl      1
          ac4      cdpnp      ac
          sn8      asdlkup   sn
          grnlkup

FANE      : cc, ac, grn, sn
FANF      : dlma, cc, ac, sn
FARN      : cc, ac, rn, sn
FASP      : none
FASCRCDC  : none
FASCRCG   : none

NPP-AS    table is (1 of 1024) 1% full.

;

```

Legend

- **ASN**—Action Set Name
- **CA**—Conditioning Action
- **SA**—Service Action

- **SA DATA**—Service Action Data
- **FA**—Formatting Action
- **OFNAI**—Outgoing Filter Nature of Address Indicator
- **REFS**—NPP Rule References
- **FANE**—Formatting Action List when the SP and RN entities are not associated with the DN in the RTDB
- **FANF**—Formatting Action when the DN is not present in the RTDB
- **FARN**—Formatting Action List when the RN network entity is associated with the DN in the RTDB
- **FASP**—Formatting Action List when the SP network entity is associated with the DN in the RTDB
- **FASCRCD**— Formatting Action List to format ISUP CdPN digits when CdPN is Screened and SA(X)VAL is none.
- **FASCRCG**— Formatting Action List to format ISUP CgPN digits when CdPN is Screened and SA(X)VAL is none.

Related Topics

- [chg-npp-as](#)
- [ent-npp-as](#)

4.1.544 rtrv-npp-serv

Use this command to display a Numbering Plan Processor (NPP) Service Data entry.

Parameters

mode (optional)

This parameter allows the command to display NAI and delimiter values.

Range:

full

srvn (optional)

Service name. The name of the NPP Service.

Range:

nppt

NPP Test Service

idprcdpn

IDPRCDPN Service

idprcgpn

IDPRCGPN Service

tif

TIF Service

tif2

TIF2 Service

tif3

TIF3 Service

mosmsicgpn

MOSMSICGPN service

mosmsicdpn

MOSMSICDPN Service

mosmsgcgpn

MOSMSGCGPN Service

mosmsgcdpn

MOSMSGCDPN Service

iarcdpn

IARCDPN Service

iarcgpn

IARCGN Service

idprcdpn2

IDPRCDPN2 Service

idprcdpn3

IDPRCDPN3 Service

idprcdpn4

IDPRCDPN4 Service

tifcgpn

TIFCGPN Service

tifcgpn2

TIFCGPN2 Service

tifcgpn3

TIFCGPN3 Service

Example

```
rtrv-npp-serv:svn=tif:mode=full
```

```
rtrv-npp-serv:svn=tif
```

Dependencies

None

N/A N/A

Output

This example displays all NPP Service table entries:

rtrv-npp-serv

tekelecstp 12-07-05 19:09:11 EST EAGLE 45.0.0

SERVICE	STATUS	SA	PRECEDENCE
nppt	off	rtdbtrnsp	100
		rtdbtrn	50
		rtdbtsp	50
		cdial	10

SERVICE	STATUS	SA	PRECEDENCE
tif	off	cdial	10
		fwdscls	5
		crp	92
		npnrls	91
		nprelay	80
		npnrls	80
		snsccpn	75
		cgpnsvcrcq	80
		asdlkup	90
		grnlkup	90
		cgpnasdrq	90
		cgpngrnrq	90
		nscdpn	80
		nscgpn	75
		nocgpnrls	80
		fpfxrls	92
		blrls	91
		blnfndrls	91
		selscr	91

SERVICE	STATUS	SA	PRECEDENCE
tif2	off	cdial	10
		fwdscls	5
		crp	92
		npnrls	91
		nprelay	80
		npnrls	80
		snsccpn	75
		cgpnsvcrcq	80
		asdlkup	90
		grnlkup	90
		cgpnasdrq	90
		cgpngrnrq	90
		nscdpn	80
		nscgpn	75
		nocgpnrls	80
		fpfxrls	92
		blrls	91
		blnfndrls	91
		selscr	91

SERVICE	STATUS	SA	PRECEDENCE
tif3	off	cdial	10
		fwdscs	5
		crp	92
		npnrls	91
		nprelay	80
		nprls	80
		snsccpn	75
		cgpnsvcrqd	80
		asdlkup	90
		grnlkup	90
		cgpnasdrqd	90
		cgpngrnrqd	90
		nscdpn	80
		nscgpn	75
		nocgpnrls	80
		fpfxrls	92
		blrls	91
		blnfndrls	91
		selscr	91

SERVICE	STATUS	SA	PRECEDENCE
idprcdpn	off	cdial	10
		ccncchk	100
		cdpnp	80
		lacck	60
		cgpnsvcrqd	60
		asdlkup	50
		grnlkup	50
		cgpnasdrqd	50
		cgpngrnrqd	50
		inprtq	95
		skgtartq	50

SERVICE	STATUS	SA	PRECEDENCE
idprcgn	off	cdial	10
		cgpnp	80
		asdlkup	50
		grnlkup	50
		blklstqry	90
		blklstrly	90
		cgpnrqt	70
		inprtq	95

SERVICE	STATUS	SA	PRECEDENCE
mosmsicdpn	off	cdial	10
		cdpnp	60
		asdlkup	50
		grnlkup	50
		cgpnasdrqd	50
		cgpngrnrqd	50

migrate 70

SERVICE	STATUS	SA	PRECEDENCE
mosmsicgpn	off	cdial	10
		asdlkup	50
		grnlkup	50

SERVICE	STATUS	SA	PRECEDENCE
mosmsgcdpn	off	cdial	10
		cdpnp	60
		asdlkup	50
		grnlkup	50
		cgpnasdrqd	50
		cgpngrnrqd	50
		pprelay	80

SERVICE	STATUS	SA	PRECEDENCE
mosmsgcgp	off	cdial	10
		asdlkup	50
		grnlkup	50
		pprelay	80
		fraudchk	90

SERVICE	STATUS	SA	PRECEDENCE
iarcdpn	off	cdial	10
		ccncchk	100
		cdpnp	80
		cgpnsvcrqd	60
		asdlkup	50
		grnlkup	50
		cgpnasdrqd	50
		cgpngrnrqd	50

SERVICE	STATUS	SA	PRECEDENCE
iarcgp	off	cdial	10
		cgpnp	80
		asdlkup	50
		grnlkup	50

SERVICE	STATUS	SA	PRECEDENCE
idprcdpn2	off	cdial	10
		ccncchk	100
		cdpnp	80
		lacck	60
		cgpnsvcrqd	60
		asdlkup	50
		grnlkup	50
		cgpnasdrqd	50
		cgpngrnrqd	50

```

      inprtg      95
      skgtartg    50

```

```

SERVICE      STATUS  SA          PRECEDENCE
-----
idprcdpn3    off    cdial      10
             ccncchk   100
             cdpnp     80
             lacck   60
             cgpnsvrqd 60
             asdlkup  50
             grnlkup  50
             cgpnasdrqd 50
             cgpngrnrqd 50
             inprtg   95
             skgtartg  50

```

```

SERVICE      STATUS  SA          PRECEDENCE
-----
idprcdpn4    off    cdial      10
             ccncchk   100
             cdpnp     80
             lacck   60
             cgpnsvrqd 60
             asdlkup  50
             grnlkup  50
             cgpnasdrqd 50
             cgpngrnrqd 50
             inprtg   95
             skgtartg  50

```

```

SERVICE      STATUS  SA          PRECEDENCE
-----
tifcgpn      off    cdial      10
             snscgpn   75
             cgpnp     80
             asdlkup  90
             grnlkup  90
             nscgpn   75
             fpxrls   92
             blrls    91
             blnfndrls 91

```

```

SERVICE      STATUS  SA          PRECEDENCE
-----
tifcgpn2     off    cdial      10
             snscgpn   75
             cgpnp     80
             asdlkup  90
             grnlkup  90
             nscgpn   75
             fpxrls   92
             blrls    91
             blnfndrls 91

```

```

SERVICE      STATUS  SA          PRECEDENCE
-----
tifcgpn3     off    cdial       10
              snscgpn    75
              cgpnp      80
              asdlkup    90
              grnlkup    90
              nscgpn     75
              fpxrls     92
              blrls      91
              blnfndrls  91

```

;

This example displays NPP Service table data for a specific Service:

```
rtrv-npp-serv:svrn=tif
```

```
tekelecstp 12-07-05 19:09:11 EST EAGLE 45.0.0
```

```

SERVICE      STATUS  SA          PRECEDENCE
-----
tif           off    crp         92
              npnrls     91
              nprelay    90
              nprls      90
              cgpnsvcrqd 90
              snscgpn    80
              cdial      10
              fwdscs     5
              nprelay    80
              nprls      80
              snscgpn    75
              cgpnpnrqd  80
              asdlkup    90
              grnlkup    90
              cgpnasdrqd 90
              cgpngrnrqd 90
              nscdpn    80
              nscgpn     75
              nocgpnrls 80
              fpxrls     92
              blrls      91
              blnfndrls 91
              selscr   91

```

;

This example displays all NPP Service data for a specified Service when `mode=full` is specified:

```
rtrv-npp-serv:svrn=tif:mode=full
```

```
tekelecstp 11-02-02 08:46:52 EST EAGLE 44.0.0
```

SERVICE	STATUS	SA	PRECEDENCE	FNAI	NAI
tif	off	cdial	10	unkn	0
		fwdscs	5	intl	4
		crp	92	natl	3
		npnrls	91	nai1	none
		nprelay	90	nai2	none
		npnrls	90	nai3	none
		snsccpn	80		
		cgpnprqd	80		
		asdlkup	90		
		grnlkup	90		
		cgpnasdrqd	90		
		cgpngrnrqd	90		
		nscdpn	80		
		nscgpn	75		
		nocgpnrls	80		
		fpfxrls	92		
		blrls	91		
		blnfndrls	91		
		selscr	91		

DELIMITERS

```

dlma=1234567890abcdef dlmb=aaaaabbbbcccccd
dlmc=1020304050607080
dlmd=d0d0 dlme=e0e0 dlmf=f0f0
dlmg=9010 dlmh=9020 dlmi=9030
dlmj=9040 dlmk=9050 dlml=9050
dlmm=9060 dlmn=9070 dlmo=9080
dlmp=9090

```

```
;
```

Related Topics

- [chg-npp-serv](#)
- [chg-npp-srs](#)
- [dlt-npp-srs](#)
- [ent-npp-srs](#)

4.1.545 rtrv-npp-srs

Use this command to display a Numbering Plan Processor (NPP) Service Rule Set entry.

Parameters

asn (optional)

Action set name.

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

fd1 (optional)

Filter digit length. The number of digits on the incoming digit string that is filtered by the NPP.

Range:

*1 - 32, **

*—multiple lengths of digit strings can be filtered

fnai (optional)

Filter nature of address indicator. This parameter specifies the filter Nature of Address Indicator (NAI) class.

Range:

intl, natl, nai1, nai2, nai3, unkn

intl—filter messages with NAI=INTL

natl—filter messages with NAI=NATL

nai1—filter messages with NAI=NAI1

nai2—filter messages with NAI=NAI2

nai3—filter messages with NAI=NAI3

unkn—filter messages with NAI=UNKN

The `chg-npp-serv` command is used to assign values to the various FNAI classes.

fpfx (optional)

Filter prefix. The prefix used to filter incoming digit strings.

Range:

1 - 16 hexadecimal digits inclusive of single digit wildcard (?); or wildcard (*) matching the entire digit string; Valid digits are ?, *, 0-9, a-f, A-F.

srvn (optional)

Service name.

Range:

nppt

NPP Test Service

idprcdpn

IDPRCDPN Service

idprcgpn

IDPRCGPN Service

tif

TIF Service

tif2

TIF2 Service

tif3

TIF3 Service

mosmsicgpn

MOSMSICGPN Service

mosmsicdpn

MOSMSICDPN Service

mosmsgcgpn

MOSMSGCGPN Service

mosmsgcdpn

MOSMSGCDPN Service

iarcdpn

IARCDPN Service

iarcgpn

IARCGPN Service

idprcdpn2

IDPRCDPN2 Service

idprcdpn3

IDPRCDPN3 Service

idprcdpn4

IDPRCDPN4 Service

tifcgpn

TIFCGPN Service

tifcgpn2

TIFCGPN2 Service

tifcgpn3

TIFCGPN3 Service

Example

Display all NPP Service Rule Set table entries for a given service.

```
rtrv-npp-srs
```

Display NPP Service Rule Set table entries for a specified digit length.

```
rtrv-npp-srs:fdl=*
```

Display NPP Service Rule Set table entries for a specified filter prefix and filter digit length.

```
rtrv-npp-srs:fpfx=91:fdl=16
```

Dependencies

The value specified for the `fpfx` parameter cannot have a `?` as the final character.

4945 E4945 Cmd Rej: FPFX value cannot end with a '?'

Output

rtrv-npp-srs

tekelecstp 11-02-28 16:41:44 EST EAGLE 44.0.0

SRVN	FPFX	FDL	FNAI	ASN	INVKSERV
nppt	a	10	intl	asn2	none
nppt	a	16	intl	asn3	none
tif2	b	12	natl	asn5	tifcgp2
idprcdpn	91	12	intl	cdset1	none
idprcdpn2	91	10	natl	cdset2	none
idprcdpn3	*	*	intl	cdset3	none
idprcdpn4	98	9	intl	cdset2	none

NPP-SRS table is (7 of 8192) 1% full.

;

Legend

- **SRVN**—Service Name
- **FPFX**—Filter Prefix
- **FDL**—Filter Digit Length
- **FNAI**—Filter Nature of Address Indicator
- **ASN**—Action Set Name
- **INVKSERV**—Invoke Service Name

Related Topics

- [chg-npp-serv](#)
- [chg-npp-srs](#)
- [dlt-npp-srs](#)
- [ent-npp-srs](#)

4.1.546 rtrv-obit

Use this command to show the obituaries that were most recently logged in the system. The report shows the obituaries from either the active or standby OAM, and the report indicates which card and processor generated the obituary.

An obituary is a set of data that describes the status of the system just before a processor restarted due to a fault in hardware or software. The data includes a register and stack dump of the processor, card location, reporting module number, software code location, and class of the fault detected.

Parameters

loc (mandatory)

The address of the card that is running the OAM from which the obituary information is to be retrieved.

Range:

1113, 1115

mode (optional)

Display mode

Range:

c

Continuous mode; shows obituaries already logged and new obituaries as they occur.

m

Manual mode; shows obituaries on demand only, when this command is entered.

Default:

c

num (optional)

The number of obituaries to display.

Range:

1 - 512

Default:

150

Example

```
rtrv-obit:loc=1115:num=2
```

Dependencies

The obituary log on the specified OAM must contain at least one obituary; otherwise, the command is rejected.

2390 E2390 Cmd Rej: No obits to display

If the `mode` parameter is specified without the `num` parameter, the entire log is displayed.

2392 E2392 Cmd Rej: Received wrong display mode

Only one `rtrv-obit` or `rtrv-trbl` command at a time can be in progress throughout the entire system.

2368 E2368 Cmd Rej: System busy - try again later

The card location specified by the `loc` parameter must be either 1113 or 1115.

2376 E2376 Cmd Rej: Specified LOC is invalid

If the `loc` parameter specifies the card that is running the standby OAM, that card must be available.

2398 E2398 Cmd Rej: Standby MASP is unavailable

The `num` parameter value must be between 1 - 512.

2394 E2394 Cmd Rej: Number out of range

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command when the command is entered for the active OAM. See `canc-cmd` for more information.

In most situations, obituary reports are generated automatically when a card is reset. Automatic report generation can be turned off by selecting the `mode=m` parameter for manual mode.

The obituary from a 186 processor displays the register dump and a 16-word stack dump.

The obituary from a 486 processor is different from 186 because the register set is larger. Also, only 12 words of the stack are dumped for the 486.

The obituary from an IXP-based processor card (which includes MUX card) contains significantly more information than an obituary from an X86-based processor card. The data in an IXP obituary is spread over multiple system buffers, where each buffer is logged and printed as an independent obituary. Sequence numbers are displayed in the output so that it is clear which buffers comprise a given obituary. There is an overall sequence number, and a sequence number within each class (such as IXP register set or user data) of information.

Output

This example shows output for two obituaries from an x86-based card:

```
rtrv-obit:loc=1115:num=2
```

```
rlghncxa03w 03-03-30 08:43:14 EST EAGLE 31.3.0
-----
STH: Received a BOOT 286-obituary reply for 1 restart(s)
Primary: Card 1203 Module 4608 Mod_loc 1 Class 0080
Register Dump :
    FL=338e    CS=4a9c    IP=01c0
    AX=0000    CX=0100    DX=21c1    BX=078a
    SP=01a6    BP=01a6    SI=0fe4    DI=3ece
    DS=dce8    ES=21c1    SS=336b
Stack Dump :
[SP+1E]=3ece    [SP+16]=46cc    [SP+0E]=0001    [SP+06]=0246
[SP+1C]=078a    [SP+14]=dce8    [SP+0C]=4608    [SP+04]=338e
[SP+1A]=078a    [SP+12]=078a    [SP+0A]=0001    [SP+02]=4a9c
[SP+18]=0100    [SP+10]=336b    [SP+08]=0080    [SP+00]=01c0

STH: Received a BOOT 486-obituary reply for 1 restart(s)
Primary: Card 1213 Module 0047 Mod_loc 5 Class 0241
Register Dump :
    EFL=00000000    CS =0208    EIP=0003e75f    SS =0060
    EAX=0009a90b    ECX=0009a915    EDX=00000000    EBX=00000000
    ESP=000ddaf2    EBP=000ddb6c    ESI=00090241    EDI=00141df8
```

```

                DS =0060          ES =0060          FS =0060          GS =0060
Stack Dump :
  [ESP+2E]=0009   [ESP+28]=1df8   [ESP+22]=0000
[ESP+1C]=a915
  [ESP+2C]=a90b   [ESP+26]=0009   [ESP+20]=0000
[ESP+1A]=0009
  [ESP+2A]=0014   [ESP+24]=a8c0   [ESP+1E]=0009
[ESP+18]=a90b
User Data Dump :
  0a 06 00 00 46 01 08 04 00 00
00          ....F.....
Report Date:03-03-04  Time:09:19:59
-----
;

```

This example shows output for six obituaries from an IXP-based card:

```
rtrv-obit:loc=1113:num=6
```

```

rlghncxa03w 03-01-23 08:43:14 EST  EAGLE 30.0.0
-----
-
  STH: Received a BOOT IMT-obituary reply for 1 restart(s)
        Card 1209  Module TKS_SBFR.C  Line 728  Class 01cc
        StrongARM Core Register Dump (1 of 1):  [Overall: 1 of 6]
          r0 =00008b22   r1 =00004e72   r2 =0003e75f   r3
=0060024a
          r4 =0004a92b   r5 =000019c5   r6 =0000a57c   r7
=00005521
          r8 =0000b1f7   r9 =0000836c   r10=0000e251
r11=00141d42
          r12=006055a3   sp =0000727c   lr =0000003f   pc
=00006429
        Report Date:03-01-23  Time:12:20:45
-----
rlghncxa03w 03-01-23 08:43:14 EST  EAGLE 30.0.0
-----
-
  STH: Received a BOOT IMT-obituary reply for 1 restart(s)
        Card 1209  Module TKS_SBFR.C  Line 728  Class 01cc
        StrongARM Core Stack Dump (1 of 1):  [Overall: 2 of 6]
        System Mode Stack:
          0000  15a3a816  0012be0a  06000046
01080400          .....
          0010  00a2342c  07f7b83a  15729dd2
05580601          .....
          0020  1a22a616  7072b91a  46304a44
06887400          .....
          0030  25a33b12  01a4ba22  17e03026
11483402          .....

```

```

0040 00130811 0033a30a 14008149 0cab6130 ..
.....
0050 00000000 00000000 00000000 00000000 ..
.....
0060 15a3a816 0012be0a 06000046 01080400 ..
.....
0070 00a2342c 07f7b83a 15729dd2 05580601 ..
.....
0080 1a22a616 7072b91a 46304a44 06887400 ..
.....
Abort Mode Stack:
0000 25a33b12 01a4ba22 17e03026 11483402 ..
.....
0010 00130811 0033a30a 14008149 0cab6130 ..
.....
0020 1a22a616 7072b91a 46304a44 06887400 ..
.....
0030 25a33b12 01a4ba22 17e03026 11483402 ..
.....
0040 00130811 0033a30a 14008149 0cab6130 ..
.....
0050 00000000 00000000 00000000 00000000 ..
.....
0060 15a3a816 0012be0a 06000046 01080400 ..
.....

```

Report Date:03-01-23 Time:12:20:45

rlghncxa03w 03-01-23 08:43:14 EST EAGLE 30.0.0

STH: Received a BOOT IMT-obituary reply for 1 restart(s)

Card 1209 Module TKS_SBFRC Line 728 Class 01cc

IXP Register Dump (1 of 2): [Overall: 3 of 6]

***** FBI Registers: *****

```

IREG =00000000          SOP_SEQ1=00000000
SOP_SEQ2=0003e75f      ENQUEUE_SEQ1=0060024a
ENQUEUE_SEQ2=0060024a  THREAD_DONE_REG0=00600231
THREAD_DONE_REG1=00600231  RCV_RDY_CNT=000012d4
RCV_RDY_HI =0009a90b    RCV_RDY_LO=00000000
RCV_RDY_CTL=0009a915    RCV_CNTL=00000000
REC_FASTPORT_CTL =000ddaf2  FLOWCTL_MASK =000ddb6c
RDYBUS_SYN_CNT_DEF=00090241  SELF_DESTRUCT=00141df8
HASH_MULTIPLIER_64_HI=006011a3  HASH_MULTIPLIER_64_LO=00000000
HASH_MULTIPLIER_48_HI=006011a3  HASH_MULTIPLIER_48_LO=00000000
GET_CMD=00000000        XMIT_RDY_LO=00000000
XMIT_RDY_HI=00000000    XMIT_RDY_CTL=00000000
XMIT_PTR =0003e75f

```

***** SDRAM Registers: *****

```

SDRAM_CSR=0060024a      SDRAM_MEMCTL0=0060024a
SDRAM_MEMCTL1=00600231  DRAM_MEMINIT=00600231

```

***** StrongARM System Registers: *****

```

PLL_CFG=0060024a      GPIO_EN=0060024a
GPIO_DATA=00600231    RTC_DIV=00600231

```

```
RTC_INIT=000012d4          RTC_TVAL=0009a90b
RTC_CNTR=00000000         RTC_ALM=0009a915
UART_SR=0009a915         UART_CR=00000000
UART_DR=00090241         TIMER_1_LOAD=000ddb6c
TIMER_2_LOAD=00090241    TIMER_3_LOAD=00141df8
TIMER_4_LOAD=00000000    TIMER_1_VALUE=00000000
TIMER_2_VALUE=006011a3   TIMER_3_VALUE=00000000
TIMER_4_VALUE=00090241   TIMER_1_CONTROL=00141df8
TIMER_2_CONTROL=00000000 TIMER_3_CONTROL=00000000
TIMER_4_CONTROL=006011a3 FIQ=00000000
IRQ=00000000
***** PCI Configuration Space Registers: *****
PCI_VEN_DEV_ID=0060024a   PCI_CMD_STAT=0060024a
PCI_REV_CLASS=00600231
PCI_CACHE_LAT_HDR_BIST=00600231
PCI_MEM_BAR=000012d4     PCI_IO_BAR=0009a90b
PCI_DRAM_BAR=00000000    PCI_SUBSYS=0009a915
PCI_INT_LAT=0009a915
***** PCI Shared Control Registers: *****
CAP_PTR_EXT=00090241     PWR_MGMT=000ddb6c
IXP1200_RESET=00090241  PCI_OUT_INT_MASK=00141df8
I20_INB_FIFO=00000000   I20_OUTB_FIFO=00000000
MAILBOX_0=006011a3      MAILBOX_1=00000000
MAILBOX_2=006011a3      MAILBOX_3=00000000
DOORBELL=006011a3      DOORBELL_SETUP=00000000
***** PCI Control Registers: *****
CHAN_1_BYTE_COUNT=0060024a
CHAN_2_BYTE_COUNT=0060024a
CHAN_1_PCI_BAR=00600231  CHAN_2_PCI_BAR=00600231
CHAN_1_DRAM_ADDR=000012d4
CHAN_2_DRAM_ADDR=0009a90b
CHAN_1_DESC_PTR=00000000
CHAN_2_DESC_PTR=0009a915
CHAN_1_CONTROL=0009a915  CHAN_2_CONTROL=00000000
DMA_INF_MODE=00090241
CSR_BASE_ADDR_MASK=000ddb6c
DRAM_BASE_ADDR_MASK=000ac14c
I20_INB_FLIST_HPTR=00141df8
I20_INB_PLIST_TPTR=006011a3  I20_OUTB_PLIST_HPTR
=00000000
I20_OUTB_PLIST_TPTR =00000000
I20_INB_FLIST_CNT=00000000
I20_OUTB_PLIST_CNT =006011a3  I20_INB_PLIST_CNT
=00000000
SA_CONTROL=00090241      PCI_ADDR_EXT=000ddb6c
DBELL_PCI_MASK=00090241  DBELL_SA_MASK=00141df8
IRQ_STATUS=00000000     FIQ_STATUS=00000000
IRQ_RAW_STATUS=006011a3  FIQ_RAW_STATUS=00000000
IRQ_ENABLE=006011a3     FIQ_ENABLE=00000000
***** Coprocessor 15 Registers: *****
ID_CHIP=0060024a        CONTROL_CP15=0060024a
TRANSLATION_TAB_BASE=00600231
DOMAIN_ACCESS_CONTROL=00600231
FAULT_STATUS=000012d4    FAULT_ADDRESS=0009a90b
CACHE_CONTROL_OPER=00000000
```



```
READ_BUFFER_OPER=0009a915
      PROC_ID_VIRT_ADDR_MAP=00000000
DATA_BREAKPT_CONTROL_REG=0009a915
      Report Date:03-01-23   Time:12:20:45
```

```
-----
rlghncxa03w 03-01-23 08:43:14 EST  EAGLE 30.0.0
-----
```

```
STH: Received a BOOT IMT-obituary reply for 1 restart(s)
```

```
Card 1209  Module TKS_SBFRC  Line 728  Class 01cc
```

```
IXP Register Dump (2 of 2): [Overall: 4 of 6]
```

```
***** SRAM Registers: *****
```

```
SRAM_CSR=0060024a          SRAM_AUTO_BASE=0060024a
SRAM_AUTO_PTR=00600231     SRAM_AUTO_END=00600231
SRAM_TEST_MOD=000012d4     SRAM_SLOW_CONFIG=0009a90b
SRAM_BOOT_CONFIG=00000000  SRAM_SLOWPORT_CONFIG=0009a915
```

```
***** Microengine 0 Registers: *****
```

```
USTORE_DATA=0060024a      ALU_OUTPUT=0060024a
CTX_ENABLES=000012d4      CC_ENABLE=0009a90b
CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
CTX_0_WAKEUP_EVENTS=00000000  CTX_1_WAKEUP_EVENTS=00000000
CTX_2_WAKEUP_EVENTS=006011a3  CTX_3_WAKEUP_EVENTS=00000000
CTX_ARB_CNTL=00600231
```

```
ACTIVE_CTX_STS:  SEG=1  ACNO=1  AB=0  ACTXPC: 38
CTX_0_STS:       SEG=1  ACNO=2  RR=0  CTX_PC:
```

245

```
CTX_1_STS:       SEG=0  ACNO=1  RR=1  CTX_PC:
```

15

```
CTX_2_STS:       SEG=0  ACNO=0  RR=0  CTX_PC:
```

75

```
CTX_3_STS:       SEG=1  ACNO=3  RR=1  CTX_PC:
```

132

```
***** Microengine 1 Registers: *****
```

```
USTORE_DATA=0060024a      ALU_OUTPUT=0060024a
CTX_ENABLES=000012d4      CC_ENABLE=0009a90b
CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
CTX_0_WAKEUP_EVENTS=00000000  CTX_1_WAKEUP_EVENTS=00000000
CTX_2_WAKEUP_EVENTS=006011a3  CTX_3_WAKEUP_EVENTS=00000000
CTX_ARB_CNTL=00600231
```

```
ACTIVE_CTX_STS:  SEG=1  ACNO=1  AB=0  ACTXPC: 38
CTX_0_STS:       SEG=1  ACNO=2  RR=0  CTX_PC:
```

245

```
CTX_1_STS:       SEG=0  ACNO=1  RR=1  CTX_PC:
```

15

```
CTX_2_STS:       SEG=0  ACNO=0  RR=0  CTX_PC:
```

128

```
CTX_3_STS:       SEG=1  ACNO=3  RR=1  CTX_PC:
```

72

```
***** Microengine 2 Registers: *****
```

```
USTORE_DATA=0060024a      ALU_OUTPUT=0060024a
CTX_ENABLES=000012d4      CC_ENABLE=0009a90b
CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
```

```

                CTX_0_WAKEUP_EVENTS=00000000
CTX_1_WAKEUP_EVENTS=00000000
                CTX_2_WAKEUP_EVENTS=006011a3
CTX_3_WAKEUP_EVENTS=00000000
                CTX_ARB_CNTL=00600231
                ACTIVE_CTX_STS:  SEG=1    ACNO=1    AB=0    ACTXPC: 38
                CTX_0_STS:      SEG=1    ACNO=2    RR=0    CTX_PC:
245
                CTX_1_STS:      SEG=0    ACNO=1    RR=1    CTX_PC:
125
                CTX_2_STS:      SEG=0    ACNO=0    RR=0    CTX_PC:
75
                CTX_3_STS:      SEG=1    ACNO=3    RR=1    CTX_PC:
62
                ***** Microengine 3 Registers: *****
                USTORE_DATA=0060024a          ALU_OUTPUT=0060024a
                CTX_ENABLES=000012d4         CC_ENABLE=0009a90b
                CTX_0_SIG_EVENTS=00090241
CTX_1_SIG_EVENTS=000ddb6c
                CTX_2_SIG_EVENTS=00090241
CTX_3_SIG_EVENTS=00141df8
                CTX_0_WAKEUP_EVENTS=00000000
CTX_1_WAKEUP_EVENTS=00000000
                CTX_2_WAKEUP_EVENTS=006011a3
CTX_3_WAKEUP_EVENTS=00000000
                CTX_ARB_CNTL=00600231
                ACTIVE_CTX_STS:  SEG=1    ACNO=1    AB=0    ACTXPC: 38
                CTX_0_STS:      SEG=1    ACNO=2    RR=0    CTX_PC:
245
                CTX_1_STS:      SEG=0    ACNO=1    RR=1    CTX_PC:
125
                CTX_2_STS:      SEG=0    ACNO=0    RR=0    CTX_PC:
75
                CTX_3_STS:      SEG=1    ACNO=3    RR=1    CTX_PC:
62
                ***** Microengine 4 Registers: *****
                USTORE_DATA=0060024a          ALU_OUTPUT=0060024a
                CTX_ENABLES=000012d4         CC_ENABLE=0009a90b
                CTX_0_SIG_EVENTS=00090241
CTX_1_SIG_EVENTS=000ddb6c
                CTX_2_SIG_EVENTS=00090241
CTX_3_SIG_EVENTS=00141df8
                CTX_0_WAKEUP_EVENTS=00000000
CTX_1_WAKEUP_EVENTS=00000000
                CTX_2_WAKEUP_EVENTS=006011a3
CTX_3_WAKEUP_EVENTS=00000000
                CTX_ARB_CNTL=00600231
                ACTIVE_CTX_STS:  SEG=1    ACNO=1    AB=0    ACTXPC: 38
                CTX_0_STS:      SEG=1    ACNO=2    RR=0    CTX_PC:
245
                CTX_1_STS:      SEG=0    ACNO=1    RR=1    CTX_PC:
15
                CTX_2_STS:      SEG=0    ACNO=0    RR=0    CTX_PC:
75
                CTX_3_STS:      SEG=1    ACNO=3    RR=1    CTX_PC:

```

132

```

***** Microengine 5 Registers: *****
USTORE_DATA=0060024a          ALU_OUTPUT=0060024a
CTX_ENABLES=000012d4         CC_ENABLE=0009a90b
CTX_0_SIG_EVENTS=00090241    CTX_1_SIG_EVENTS=000ddb6c
CTX_2_SIG_EVENTS=00090241    CTX_3_SIG_EVENTS=00141df8
CTX_0_WAKEUP_EVENTS=00000000 CTX_1_WAKEUP_EVENTS=00000000
CTX_2_WAKEUP_EVENTS=006011a3 CTX_3_WAKEUP_EVENTS=00000000
CTX_ARB_CNTL=00600231
ACTIVE_CTX_STS:  SEG=1      ACNO=1      AB=0      ACTXPC: 38
CTX_0_STS:       SEG=1      ACNO=2      RR=0      CTX_PC:
245
      CTX_1_STS:       SEG=0      ACNO=1      RR=1      CTX_PC:
15
      CTX_2_STS:       SEG=0      ACNO=0      RR=0      CTX_PC:
75
      CTX_3_STS:       SEG=1      ACNO=3      RR=1      CTX_PC:

```

132

Report Date:03-01-23 Time:12:20:45

rlghncxa03w 03-01-23 08:43:14 EST EAGLE 30.0.0

STH: Received a BOOT IMT-obituary reply for 1 restart(s)

Card 1209 Module TKS_SBFR.C Line 728 Class 01cc

User Data Dump (1 of 2): [Overall: 5 of 6]

```

0000 15a3a816 0012be0a 06000046 01080400 ..
.....
0010 00a2342c 07f7b83a 15729dd2 05580601 ..
.....
0020 1a22a616 7072b91a 46304a44 06887400 ..
.....
0030 25a33b12 01a4ba22 17e03026 11483402 ..
.....
0040 00130811 0033a30a 14008149 0cab6130 ..
.....
0050 00000000 00000000 00000000 00000000 ..
.....
0060 15a3a816 0012be0a 06000046 01080400 ..
.....
0070 00a2342c 07f7b83a 15729dd2 05580601 ..
.....
0080 1a22a616 7072b91a 46304a44 06887400 ..
.....
0090 25a33b12 01a4ba22 17e03026 11483402 ..
.....
00a0 00130811 0033a30a 14008149 0cab6130 ..
.....
00b0 1a22a616 7072b91a 46304a44 06887400 ..
.....
00c0 25a33b12 01a4ba22 17e03026 11483402 ..
.....
00d0 00130811 0033a30a 14008149 0cab6130 ..
.....
00e0 00000000 00000000 00000000 00000000 ..

```

```

.....
00f0 15a3a816 0012be0a 06000046
01080400 .....
0100 00a2342c 07f7b83a 15729dd2
05580601 .....
0110 1a22a616 7072b91a 46304a44
06887400 .....
0120 25a33b12 01a4ba22 17e03026
11483402 .....
0130 25a33b12 01a4ba22 17e03026
11483402 .....
0140 00130811 0033a30a 14008149
0cab6130 .....
0150 00000000 00000000 00000000
00000000 .....
0160 15a3a816 0012be0a 06000046
01080400 .....
0170 00a2342c 07f7b83a 15729dd2
05580601 .....
0180 1a22a616 7072b91a 46304a44
06887400 .....
0190 25a33b12 01a4ba22 17e03026
11483402 .....
01a0 00130811 0033a30a 14008149
0cab6130 .....
01b0 1a22a616 7072b91a 46304a44
06887400 .....
01c0 25a33b12 01a4ba22 17e03026
11483402 .....

```

Report Date:03-01-23 Time:12:20:45

rlghncxa03w 03-01-23 08:43:14 EST EAGLE 30.0.0

-
STH: Received a BOOT IMT-obituary reply for 1 restart(s)
Card 1209 Module TKS_SBFR.C Line 728 Class 01cc
User Data Dump (2 of 2): [Overall: 6 of 6]

```

0000 15a3a816 0012be0a 06000046
01080400 .....
0010 00a2342c 07f7b83a 15729dd2
05580601 .....
0020 1a22a616 7072b91a 46304a44
06887400 .....
0030 25a33b12 01a4ba22 17e03026
11483402 .....
0040 00130811 0033a30a 14008149
0cab6130 .....
0050 00000000 00000000 00000000
00000000 .....
0060 15a3a816 0012be0a 06000046
01080400 .....
0070 00a2342c 07f7b83a 15729dd2
05580601 .....

```

```
0080 1a22a616 7072b91a 46304a44 06887400 ..
.....
0090 25a33b12 01a4ba22 17e03026 11483402 ..
.....
00a0 00130811 0033a30a 14008149 0cab6130 ..
.....
00b0 1a22a616 7072b91a 46304a44 06887400 ..
.....
00c0 25a33b12 01a4ba22 17e03026 11483402 ..
.....
00d0 00130811 0033a30a 14008149 0cab6130 ..
.....
00e0 00000000 00000000 00000000 00000000 ..
.....
00f0 15a3a816 0012be0a 06000046 01080400 ..
.....
0100 00a2342c 07f7b83a 15729dd2 05580601 ..
.....
0110 1a22a616 7072b91a 46304a44 06887400 ..
.....
0120 25a33b12 01a4ba22 17e03026 11483402 ..
.....
Report Date:03-01-23 Time:12:20:45
-----
```

;

rtrv-obit:loc=1115

Command Accepted - Processing

stdcfg1b 05-06-13 16:32:30 EST EAGLE 34.0.0
NOTICE: Only 7 obit(s) to retrieve in the log.

;

stdcfg1b 05-06-13 16:32:30 EST EAGLE 34.0.0

STH: Received a BOOT IMT-Obituary reply for restart
Card 1103 Module ATH_386A.ASM Line 988 Class 0400

Register Dump :

EFL=00000246	CS =0058	EIP=0041cf03	SS =0060
EAX=00000046	ECX=00000000	EDX=005245d9	EBX=00000001
ESP=00483f80	EBP=00483f88	ESI=00000000	EDI=00000000
DS =0060	ES =0060	FS =0060	GS =0060

Stack Dump :

[SP+1E]=0048	[SP+16]=0000	[SP+0E]=0041	[SP+06]=0000
[SP+1C]=3fd0	[SP+14]=0001	[SP+0C]=cecc	[SP+04]=0000
[SP+1A]=0048	[SP+12]=0000	[SP+0A]=0048	[SP+02]=0041
[SP+18]=3fbc	[SP+10]=0a0a	[SP+08]=3f9c	[SP+00]=e600

Report Date:05-06-10 Time:19:20:55

;

stdcfg1b 05-06-13 16:32:31 EST EAGLE 34.0.0

-

STH: Received a BOOT IMT-Obituary reply for restart
Card 1209 Module sds_arm_send Line 356 Class 0001
StrongARM Core Register Dump (1 of 1): [Overall: 1 of 6]

SYSTEM MODE REGISTERS:
r0 = 00116bd4 r1 = 00000164 r2 = 00000001 r3 =
00000003
r4 = 00f5f3f0 r5 = 00000000 r6 = 0000001f r7 =
001251a0
r8 = 00177be0 r9 = 10ffbfcc r10= 00118b74 r11=
00000000
r12= 642b0002 sp = 000cffa8 lr = 00116b88 pc =
00102424
cpsr=400000df

Register Dump 2 is empty

Report Date:05-06-13 Time:16:30:42

-
;

stdcfg1b 05-06-13 16:32:33 EST EAGLE 34.0.0

-

STH: Received a BOOT IMT-Obituary reply for restart
Card 1209 Module sds_arm_send Line 356 Class 0001
StrongARM Core Stack Dump (1 of 1): [Overall: 2 of 6]

SYSTEM MODE STACK (Length=192):
0000 00e00000 00000007 00e00000 00102ab0*..
0010 00178698 00000000 000000f8 000cff08
0020 00000001 00116bd4 00000164 00000001k..d.....
0030 000cff68 00000000 00000000 0000001f h.....
0040 001251a0 00177be0 10ffbfcc 00118b74 .Q...{.....t...
0050 00000000 00102468 00000000 00000000h\$.....
0060 000cffa8 00116bd4 00000164 00000001k..d.....
0070 00000003 00f5f3f0 00000000 0000001f
0080 001251a0 00177be0 10ffbfcc 00118b74 .Q...{.....t...
0090 00000000 642b0002 00116b88 00102424+d.k..\$\$..
00a0 00000000 00000000 0000001f 00115e10^..
00b0 00177c4c 00177bf0 0000001f 00125268 L|...{.....hR..

;

stdcfg1b 05-06-13 16:32:34 EST EAGLE 34.0.0

Stack Dump 2 is empty

Report Date:05-06-13 Time:16:30:42

```
-----  
;  
  
stdcfg1b 05-06-13 16:32:35 EST EAGLE 34.0.0  
-----  
STH: Received a BOOT IMT-Obituary reply for restart  
Card 1209 Module sds_arm_send Line 356 Class 0001  
User Data Dump (1 of 1): [Overall: 3 of 6]  
  
User Data is empty  
  
Report Date:05-06-13 Time:16:30:42  
-----  
;  
  
stdcfg1b 05-06-13 16:32:36 EST EAGLE 34.0.0  
-----  
STH: Received a BOOT IMT-Obituary reply for restart  
Card 1209 Module sds_arm_send Line 356 Class 0001  
EP9312 Register Dump (1 of 2): [Overall: 4 of 6]  
  
***** DMA Registers *****  
DMA_CTRL_M2M0= 0608d40c DMA_INTR_STAT_M2M0= 00000000  
DMA_STAT_M2M0= 00000000 DMA_BCR0_M2M0= 0608d40c  
DMA_BASE_SRC0_M2M0= 00000000 DMA_CRNT_SRC0_M2M0= 00000000  
DMA_BASE_DSTN0_M2M0= 00000000 DMA_CRNT_DSTN0_M2M0= 00000000  
DMA_BCR1_M2M0= 000001fc DMA_BASE_SRC1_M2M0= 00000000  
DMA_CRNT_SRC1_M2M0= 00000000 DMA_BASE_DSTN1_M2M0= 00000000  
DMA_CRNT_DSTN1_M2M0= 00000000  
DMA_CTRL_M2M1= 0608d40c DMA_INTR_STAT_M2M1= 00000000  
DMA_STAT_M2M1= 00000000 DMA_BCR0_M2M1= 00000000  
DMA_BASE_SRC0_M2M1= 00000000 DMA_CRNT_SRC0_M2M1= 00000000  
DMA_BASE_DSTN0_M2M1= 00000000 DMA_CRNT_DSTN0_M2M1= 00000000  
DMA_BCR1_M2M1= 00000000 DMA_BASE_SRC1_M2M1= 00000000  
DMA_CRNT_SRC1_M2M1= 00000000 DMA_BASE_DSTN1_M2M1= 00000000  
DMA_CRNT_DSTN1_M2M1= 00000000  
DMA_ACTIVE_INTR= 00000000  
  
***** TIMER Registers *****  
TMR1_CURR_VALUE= 00000000 TMR1_CTRL_REG= 00000000  
TMR1_LOAD_REG= 00000000 TMR2_CURR_VALUE= 00000000  
TMR2_CTRL_REG= 00000000 TMR2_LOAD_REG= 00000000  
TMR3_CURR_VALUE= 00000001 TMR3_CTRL_REG= 000000d5  
TMR3_LOAD_REG= 00000001 TMR4_VALUE_LOW= 413c60f3  
TMR4_VALUE_HI= 0000015f  
  
***** SYSCON Registers *****  
PWRSTS= 4320ace3 PWRCNT= 0c000000  
CLKSET1= 00a5a127 CLKSET2= 0003c317  
SCRATCH0= 00000040 SCRATCH1= 00000000  
DEVCFG= 6902090e CHIP_ID= 34009213  
SYSCFG= 340000d6 APB_WAIT= 00000001  
ARB_REG= 00000000 VID_REG= 00000000  
MIR_REG= 00000000 I2S_REG= 00000000  
TCH_REG= 00000000
```

```

***** GPIO Registers *****
PADR=          0000007f    PBDR=
000000e9
PCDR=          000000c0    PDDR=
000000c4
PEDR=          00000000    PFDR=
000000ff
PGDR=          00000002    PHDR=
0000007f
PADDR=         00000000    PBDDR=
00000009
PCDDR=         000000fb    PDDDR=
000000fb
PEDDR=         00000003    PFDDR=
00000000
PGDDR=         0000000c    PHDDR=
00000007
PA_TYPE1=      00000000    PB_TYPE1=
00000080
PF_TYPE1=      00000000    PA_TYPE2=
00000000
PB_TYPE2=      00000000    PF_TYPE2=
00000000
PA_INT_EN=     00000000    PB_INT_EN=
00000080
PF_INT_EN=     00000000    PA_RAW_STAT=
00000080
PB_RAW_STAT=   0000001f    PF_RAW_STAT=
00000000
PA_INT_STAT=   00000000    PB_INT_STAT=
00000000
PF_INT_STAT=   00000000    PA_DB=
00000000
PB_DB=         00000000    PF_DB=
00000000
EE_REG=        00000000

***** Coprocessor 15 Registers *
ID_CODE_CP15_0= 41129200    CACHE_CODE_CP15_0=
0d172172
CONTROL_CP15_1= c000107d
TRANS_BASE_TBL_CP15_2=10ffc000
DOMAIN_ACCESS_CP15_3= ffffffff    FAULT_STATUS_CP15_5=
0000000d
FAULT_PREFETCH_CP15_5=000000fa    FAULT_ADDR_CP15_6=
d3b765e8
CACHE_OPER_CP15_7= 00000000    TLB_OPER_CP15_8=
00000000
DCACHE_LOCKDN_CP15_9= 00000000    ICACHE_LOCKDN_CP15_9=
00000000
D_TLB_LOCKDN_CP15_10= 00b00000    I_TLB_LOCKDN_CP15_10=
00200000
FCSE_PID_CP15_13= 00000000

```


Report Date:05-06-13 Time:16:30:42

;

stdcfg1b 05-06-13 16:32:40 EST EAGLE 34.0.0

STH: Received a BOOT IMT-Obituary reply for restart
Card 1209 Module sds_arm_send Line 356 Class 0001
EP9312 Register Dump (2 of 2): [Overall: 5 of 6]

***** VIC Registers *****

VIC_1_IRQ_STATUS=	00000000	VIC_1_FIQ_STATUS=	00000000
VIC_1_RAW_INTR=	25000008	VIC_1_INT_SELECT=	00000000
VIC_1_INT_ENABLE=	00060000	VIC_1_SOFT_INT=	00000000
VIC_1_SOFT_INT_CLEAR=	00000000		
VIC_2_IRQ_STATUS=	00000000	VIC_2_FIQ_STATUS=	00000000
VIC_2_RAW_INTR=	0000021b	VIC_2_INT_SELECT=	00080000
VIC_2_INT_ENABLE=	08080004	VIC_2_SOFT_INT=	00000000
VIC_2_SOFT_INT_CLEAR=	00000000		

***** SMC Registers *****

BANK_CONFIG0=	70001c80	BANK_CONFIG1=	70001420
BANK_CONFIG2=	40001480	BANK_CONFIG3=	70000400
BANK_CONFIG6=	70001440	BANK_CONFIG7=	70001440

***** UART3 Registers *****

LINE_CTRL_LOW=	00000003	LINE_CTRL_MID=	00000000
LINE_CTRL_HIGH=	00000074	CTRL_REG=	00000001
STATUS_REG=	00000000	FLAGS_REG=	00000090
DATA_REG=	00000020		

***** Watchdog Registers *****

WDOG_REG=	00806c69
-----------	----------

Report Date:05-06-13 Time:16:30:42

;

stdcfg1b 05-06-13 16:32:42 EST EAGLE 34.0.0

STH: Received a BOOT IMT-Obituary reply for restart
Card 1209 Module sds_arm_send Line 356 Class 0001
SIFB Register Dump (1 of 1): [Overall: 6 of 6]

***** BCM5630 Switch0 Registers *****

Switch0 Port0 Status=	00c06c00	Switch0 Port1 Status=	00c06c00
Switch0 Port2 Status=	00806c00	Switch0 Port3 Status=	00806c00
Switch0 Port4 Status=	00806c00	Switch0 Port5 Status=	00806c00
Switch0 Port6 Status=	00806c00	Switch0 Port7 Status=	00800000
Switch0 Port12 Status=	00806c00		

***** BCM5630 Switch1 Registers *****

Switch1 Port0 Status=	00806c00	Switch1 Port1 Status=	00806c00
Switch1 Port2 Status=	00806c00	Switch1 Port3 Status=	00806c00
Switch1 Port4 Status=	00806c00	Switch1 Port5 Status=	00806c00

```

Switch1 Port6 Status= 00806c00   Switch1 Port7 Status=
00806c00
Switch1 Port8 Status= 00806c00   Switch1 Port9 Status=
00806c00
Switch1 Port10 Status=00806c00   Switch1 Port11
Status=00800000
Switch1 Port12 Status=aaaaaa00

```

```
Report Date:05-06-13  Time:16:30:43
```

```
-----
-
;
```

This example shows output for seven obituaries from an IXP2350-based card:

```
rtrv-obit:loc=1113
```

```
tekelecstp 09-06-12 08:40:04 GMT  EAGLE 41.1.0
```

```
-----
-
```

```
STH: Received a BOOT IXP2350-Obituary reply for restart
Card 1109  Module hiprop_init.  Line 489  Class 0001
StrongARM Core Register Dump (1 of 1):  [Overall: 1 of 7]
```

```

SYSTEM MODE REGISTERS:
r0= 00607964   r1= 000001e9   r2= 00000001   r3=
00000003
r4= 003dffec   r5= 00000000   r6= 42000360   r7=
0002c498
r8= 0000006f   r9= 90003c00   r10= 00606e54   r11=
00000000
r12= 00000000   sp= 003dff78   lr= 006079f4   pc=
00601ae4
cpsr=400000df

```

```
Register Dump 2 is empty
```

```
Report Date:09-06-12  Time:08:40:04
```

```
-----
-
;
```

```
tekelecstp 09-06-12 08:40:05 GMT  EAGLE 41.1.0
0007.0106   IMT BUS A           IMT Bus alarm cleared
```

```
;
```

```
tekelecstp 09-06-12 08:40:07 GMT  EAGLE 41.1.0
```

```
-----
-
STH: Received a BOOT IXP2350-Obituary reply for restart
```

Card 1109 Module hiprop_init. Line 489 Class 0001
StrongARM Core Stack Dump (1 of 1): [Overall: 2 of 7]

SYSTEM MODE STACK (Length=132):

```
0000 00000000 00000000 00000001 003d0000 .....=.
0010 003dffec 00615b98 00000001 00606f00 ..=..[a.....o`.
0020 00000000 00000000 00000000 00000000 .....
0030 00000000 00000000 00000000 00000000 .....
0040 00000000 00000000 00000000 00000000 .....
0050 00000000 00000000 00000000 00000000 .....
0060 00000000 00000000 00000000 00000000 .....
0070 00000000 00000001 00000001 00000000 .....
0080 00000000 .....
;
```

tekelecstp 09-06-12 08:40:09 GMT EAGLE 41.1.0
Stack Dump 2 is empty

Report Date:09-06-12 Time:08:40:04

tekelecstp 09-06-12 08:40:10 GMT EAGLE 41.1.0

STH: Received a BOOT IXP2350-Obituary reply for restart
Card 1109 Module hiprop_init. Line 489 Class 0001
User Data Dump (1 of 1): [Overall: 3 of 7]

User Data is empty

Report Date:09-06-12 Time:08:40:04

tekelecstp 09-06-12 08:40:12 GMT EAGLE 41.1.0

STH: Received a BOOT IXP2350-Obituary reply for restart
Card 1109 Module hiprop_init. Line 489 Class 0001
IXP Register Dump (1 of 3): [Overall: 4 of 7]

***** XSI SDRAM Registers *****

SDIR=	00730000	SDCR=	06553100
ESDCR=	93005001	SDBR=	008000b6
SBR0=	02000000	SBR1=	02000000
ECC=	0f000000	ELOC0=	00000000
ELOC1=	00000000	ECAR_0=	00000000
ECAR_1=	00000000	ECTST=	00000000
MCISR=	00000000	MPTCR=	1c000000
MPCR=	00000000	RFR=	8a000000
SDPR0=	01008002	SDPR1=	00000070
SDPR2=	0000ffa0	SDPR3=	0000fff8
SDPR4=	000000b0	SDPR5=	00000000
SDPR6=	00000000	SDPR7=	00000000
DDR_RCOMP_SETUP_CTRL=	60000000	PMOS_RCOMP_MEAS=	8f000000
NMOS_RCOMP_MEAS=	8f000005	PMOS_RCOMP_OVRD_REG_1=	00000016

```

        NMOS_RCOMP_OVRD_REG_1=      00000000
PMOS_NMOS_SCOMP_OVRD_REG_1=002d0000
        SLEW_RATE_INDEX_SEL=      39009b00 CTL_PMOS_PULL_UP_OFST=
0100005b
        CTL_PMOS_PULL_DW_OFST=    01000000 CKE_PMOS_PULL_UP_OFST=
01000000
        CKE_PMOS_PULL_DW_OFST=    01000000 CK_PMOS_PULL_UP_OFST=
01000000
        CK_PMOS_PULL_DW_OFST=    01000000 DQ_PMOS_PULL_UP_OFST=
01000000
        DQ_PMOS_PULL_DW_OFST=    01000000
PMOS_NMOS_RCOMP_OVRD_REG_1=00000000
        PMOS_RCOMP_OVRD_REG_2=    00000000 NMOS_RCOMP_OVRD_REG_2=
00000000
        PMOS_RCOMP_OVRD_REG_3=    00000000 NMOS_RCOMP_OVRD_REG_3=
00000000
        PMOS_RCOMP_OVRD_REG_4=    00000000 NMOS_RCOMP_OVRD_REG_4=
00000000
        PMOS_NMOS_SCOMP_OVRD_2=   00000000 CS_PMOS_PULL_UP_OFST=
01000000
        CS_NMOS_PULL_DW_OFST=    01000000 RCVEN_PMOS_PULL_UP_OFST=
01000000
        RCVEN_NMOS_PULL_DW_OFST=  01000000 GMII_PMOS_PULL_UP_OFST=
00000000
        GMII_NMOS_PULL_DW_OFST=   00000000 SLEW_RATE_IDX_SEL_REG_2=
06000000
        SETUP_AND_CTRL_REG=      00000000 DDR_ACIO_RX_DDL_SETTINGS=
13000000
        DDR_RX_DESKEW=           13000013 DDR_RDDLysel_RECVEN=
13000000

```

***** MSG SDRAM Registers *****

```

SRAM_CONTROL=      00000000 SRAM_PARITY_STATUS_1=
00000028
SRAM_PARITY_STATUS_2= 00001f00 MSG_STAT=
00000000
MSG_RET_STAT=      00000000 MSG_OVFL_INT_ENB=
00000000

```

***** COPROCESSOR Registers *****

```

ID_CHIP=           05040500 CONTROL_CP15=
fd030066
TRANSLATION_TBL_BASE= 00ffff10 DOMAIN_ACCESS_CONTROL=
fd00ff80
FAULT_STATUS=      066000ff FAULT_ADDRESS=
c7000e04
PROC_ID_VIRTUAL_ADDR_MAPPING=000000eb

```

Report Date:09-06-12 Time:08:40:04

-
;

tekelecstp 09-06-12 08:40:19 GMT EAGLE 41.1.0

STH: Received a BOOT IXP2350-Obituary reply for restart
Card 1109 Module hiprop_init. Line 489 Class 0001
IXP Register Dump (2 of 3): [Overall: 5 of 7]

***** Microengine 0 Registers *****

```
USTORE_ERROR_STATUS=      02020202 ALU_OUTPUT=      02020202
CTX_ARB_CNTL=             02020202 CTX_ENABLES=      02020202
CC_ENABLE=                02020202
INDIRECT_CTX_STS0:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS1:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS2:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS3:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS4:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS5:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS6:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS7:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
ACTIVE_CTX_STS: SEG=0 ACNO=02 AB=0 ACTXPC=0064
INDIRECT_CTX_0_SIG_EVNT=  02020202 INDIRECT_CTX_1_SIG_EVNT=  02020202
INDIRECT_CTX_2_SIG_EVNT=  02020202 INDIRECT_CTX_3_SIG_EVNT=  02020202
INDIRECT_CTX_4_SIG_EVNT=  02020202 INDIRECT_CTX_5_SIG_EVNT=  02020202
INDIRECT_CTX_6_SIG_EVNT=  02020202 INDIRECT_CTX_7_SIG_EVNT=  02020202
ACTIVE_CTX_SIG_EVNT=      02020202 INDIRECT_CTX_0_WAKEUP_EVNT=02020202
INDIRECT_CTX_1_WAKEUP_EVNT= 02020202 INDIRECT_CTX_2_WAKEUP_EVNT=02020202
INDIRECT_CTX_3_WAKEUP_EVNT=02020202 INDIRECT_CTX_4_WAKEUP_EVNT=02020202
INDIRECT_CTX_5_WAKEUP_EVNT=02020202 INDIRECT_CTX_6_WAKEUP_EVNT=02020202
INDIRECT_CTX_7_WAKEUP_EVNT=02020202 ACTIVE_CTX_WAKEUP_EVNT=  02020202
```

***** Microengine 1 Registers *****

```
USTORE_ERROR_STATUS=      02020202 ALU_OUTPUT=      02020202
CTX_ARB_CNTL=             02020202 CTX_ENABLES=      02020202
CC_ENABLE=                02020202
INDIRECT_CTX_STS0:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS1:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS2:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS3:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS4:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS5:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS6:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS7:        SEG=0 ACNO=02 RR=0 CTX_PC=0064
ACTIVE_CTX_STS: SEG=0 ACNO=02 AB=0 ACTXPC=0064
INDIRECT_CTX_0_SIG_EVNT=  02020202 INDIRECT_CTX_1_SIG_EVNT=  02020202
INDIRECT_CTX_2_SIG_EVNT=  02020202 INDIRECT_CTX_3_SIG_EVNT=  02020202
INDIRECT_CTX_4_SIG_EVNT=  02020202 INDIRECT_CTX_5_SIG_EVNT=  02020202
INDIRECT_CTX_6_SIG_EVNT=  02020202 INDIRECT_CTX_7_SIG_EVNT=  02020202
ACTIVE_CTX_SIG_EVNT=      02020202 INDIRECT_CTX_0_WAKEUP_EVNT=02020202
INDIRECT_CTX_1_WAKEUP_EVNT= 02020202 INDIRECT_CTX_2_WAKEUP_EVNT=02020202
INDIRECT_CTX_3_WAKEUP_EVNT=02020202 INDIRECT_CTX_4_WAKEUP_EVNT=02020202
INDIRECT_CTX_5_WAKEUP_EVNT=02020202 INDIRECT_CTX_6_WAKEUP_EVNT=02020202
INDIRECT_CTX_7_WAKEUP_EVNT=02020202 ACTIVE_CTX_WAKEUP_EVNT=  02020202
```

***** Microengine 2 Registers *****

```
USTORE_ERROR_STATUS=      02020202 ALU_OUTPUT=      02020202
CTX_ARB_CNTL=             02020202 CTX_ENABLES=      02020202
CC_ENABLE=                02020202
```

```

INDIRECT_CTX_STS0:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS1:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS2:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS3:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS4:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS5:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS6:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS7:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
ACTIVE_CTX_STS: SEG=0 ACNO=02 AB=0 ACTXPC=0064
INDIRECT_CTX_0_SIG_EVNT= 02020202 INDIRECT_CTX_1_SIG_EVNT=
02020202
INDIRECT_CTX_2_SIG_EVNT= 02020202 INDIRECT_CTX_3_SIG_EVNT=
02020202
INDIRECT_CTX_4_SIG_EVNT= 02020202 INDIRECT_CTX_5_SIG_EVNT=
02020202
INDIRECT_CTX_6_SIG_EVNT= 02020202 INDIRECT_CTX_7_SIG_EVNT=
02020202
ACTIVE_CTX_SIG_EVNT=      02020202
INDIRECT_CTX_0_WAKEUP_EVNT=02020202
INDIRECT_CTX_1_WAKEUP_EVNT= 02020202
INDIRECT_CTX_2_WAKEUP_EVNT=02020202
INDIRECT_CTX_3_WAKEUP_EVNT=02020202
INDIRECT_CTX_4_WAKEUP_EVNT=02020202
INDIRECT_CTX_5_WAKEUP_EVNT=02020202
INDIRECT_CTX_6_WAKEUP_EVNT=cc000002
INDIRECT_CTX_7_WAKEUP_EVNT=cc0000cc ACTIVE_CTX_WAKEUP_EVNT=
cc0001cc
IXP Register Dump (2 of 2):      [Overall: 2 of 2]

```

Report Date:09-06-12 Time:08:40:04

```

-----
-
;

tekelecstp 09-06-12 08:40:31 GMT EAGLE 41.1.0

```

```

-----
-
STH: Received a BOOT IXP2350-Obituary reply for restart
Card 1109 Module hiprop_init. Line 489 Class 0001
IXP Register Dump (3 of 3):      [Overall: 6 of 7]

***** Microengine 3 Registers *****
USTORE_ERROR_STATUS=      02020202 ALU_OUTPUT=
02020202
CTX_ARB_CNTL=              02020202 CTX_ENABLES=
02020202
CC_ENABLE=                  02020202
INDIRECT_CTX_STS0:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS1:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS2:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS3:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS4:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS5:      SEG=0 ACNO=02 RR=0 CTX_PC=0064

```

```

INDIRECT_CTX_STS6:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
INDIRECT_CTX_STS7:      SEG=0 ACNO=02 RR=0 CTX_PC=0064
ACTIVE_CTX_STS:  SEG=0 ACNO=02 AB=0 ACTXPC=0064
INDIRECT_CTX_0_SIG_EVNT= 02020202 INDIRECT_CTX_1_SIG_EVNT= 02020202
INDIRECT_CTX_2_SIG_EVNT= 02020202 INDIRECT_CTX_3_SIG_EVNT= 02020202
INDIRECT_CTX_4_SIG_EVNT= 02020202 INDIRECT_CTX_5_SIG_EVNT= 02020202
INDIRECT_CTX_6_SIG_EVNT= 02020202 INDIRECT_CTX_7_SIG_EVNT= 02020202
ACTIVE_CTX_SIG_EVNT=    02020202 INDIRECT_CTX_0_WAKEUP_EVNT=02020202
INDIRECT_CTX_1_WKEUP_EVNT= 02020202 INDIRECT_CTX_2_WAKEUP_EVNT=02020202
INDIRECT_CTX_3_WAKEUP_EVNT=02020202 INDIRECT_CTX_4_WAKEUP_EVNT=02020202
INDIRECT_CTX_5_WAKEUP_EVNT=02020202 INDIRECT_CTX_6_WAKEUP_EVNT=02020202
INDIRECT_CTX_7_WAKEUP_EVNT=02020202 ACTIVE_CTX_WAKEUP_EVNT= 02020202

```

***** DDR SDRAM Registers *****

```

DU_CONTROL=             04031000 DU_ERROR_STATUS_1=         20018544
DU_ERROR_STATUS_2=      a3003426 DU_ECC_TEST=                00000000
DU_INIT=                 00000100 DU_CNTR_2=                 38000000
DDR_RCOMP_CSR=          60000000 PMOS_RCOMP_MEAS=            8f000000
NMOS_RCOMP_MEAS=        9f000005 PMOS_RCOMP_OVRD_REG_1=      00000016
NMOS_RCOMP_OVRD_REG_1= 00000000 PMOS_NMOS_SCOMP_OVRD_1=      002d0000
SLEW_RATE_IDX_SEL_REG_1= 39009c00 CTL_PMOS_PULL_UP_OFST=      010000db
CTL_PMOS_PULL_DW_OFST= 01000000 CKE_PMOS_PULL_UP_OFST=      01000000
CKE_NMOS_PULL_DW_OFST= 01000000 CK_PMOS_PULL_UP_OFST=        01000000
CK_NMOS_PULL_DW_OFST= 01000000 DQ_PMOS_PULL_UP_OFST=        01000000
DQ_NMOS_PULL_DW_OFST= 01000000 PMOS_NMOS_RCOMP_OVRD=        00000000
PMOS_RCOMP_OVRD_REG_2= 00000000 NMOS_RCOMP_OVRD_REG_2=      00000000
PMOS_RCOMP_OVRD_REG_3= 00000000 NMOS_RCOMP_OVRD_REG_3=      00000000
PMOS_RCOMP_OVRD_REG_4= 00000000 NMOS_RCOMP_OVRD_REG_4=      00000000
PMOS_NMOS_SCOMP_OVRD_2= 00000000 RCVEN_PMOS_PULL_UP_OFST=    01000000
RCVEN_NMOS_PULL_DW_OFST= 01000000 GMII_PMOS_PULL_UP_OFST=    01000000
GMII_NMOS_PULL_DW_OFST= 01000000 SLEW_RATE_IDX_SEL_REG_2=    06000000
SETUP_AND_CTRL_REG=     00000000 DDR_ACIO_RX_DDL_SETTINGS= 13000000
DDR_RX_DESKEW=          13000013 DDR_RDDLSELE_RECVEN=        13000000

```

Report Date:09-06-12 Time:08:40:04

;

tekelecstp 09-06-12 08:40:31 GMT EAGLE 41.1.0

STH: Received a BOOT IXP2350-Obituary reply for restart
Card 1109 Module hiprop_init. Line 489 Class 0001
Instruction Trace Dump (1 of 1): [Overall: 7 of 7]

Length: 415

```

0000 02 02 02 02 02 02 02 02 02 02 02 02 02 02 02 .....
0010 02 02 02 02 02 02 02 02 02 02 02 02 02 02 .....
0020 02 02 02 02 02 02 02 02 02 02 02 02 02 02 .....
0030 02 02 02 02 02 02 02 02 02 02 02 02 02 02 .....
0040 02 02 02 02 02 02 02 02 02 02 02 02 02 02 .....
0050 02 02 02 02 02 02 02 02 02 02 02 02 02 02 .....
0060 02 02 02 02 02 02 02 02 02 02 02 02 02 02 .....
0070 02 02 02 02 02 02 02 02 02 02 02 02 02 02 .....
0080 02 02 02 02 02 02 02 02 02 02 02 02 02 02 .....
0090 02 02 02 02 02 02 02 02 02 02 02 02 02 02 .....

```

```

00a0 02 02 02 02 02 02 02 02 02 02 02 02 02 02 02
02 .....
00b0 02 02 02 02 02 02 02 02 02 02 02 02 02 02
02 .....
00c0 02 02 02 02 02 02 02 02 02 02 02 02 02 02
02 .....
00d0 02 02 02 02 02 02 02 02 02 02 02 02 02 02
02 .....
00e0 02 02 02 02 02 02 02 02 02 02 02 02 02 02
02 .....
00f0 02 02 02 02 02 02 02 02 02 02 02 02 02 02
02 .....
0100 02 02 02 02 02 02 02 02 02 02 02 02 02 02
02 .....
0110 02 02 02 02 02 02 02 02 02 02 02 02 02 02
02 .....
0120 02 02 02 02 02 02 02 02 02 02 02 02 02 02
02 .....
0130 02 02 02 02 02 02 02 02 02 02 02 02 02 02
02 .....
0140 02 02 02 02 02 02 02 02 02 02 02 02 02 02
02 .....
0150 02 02 02 02 02 02 02 02 02 02 02 02 02 02
02 .....
0160 02 02 02 02 02 02 02 02 02 02 02 02 02 02
02 .....
0170 02 00 00 cc cc 00 00 cc cc 01 00 cc cc 00 00
cc .....
0180 cc 00 00 cc cc 58 fa 12 00 0a b8 6d 00 6c fd
12 .....X.....m.l..
0190 00 fa 00 00 00 00 70 fd 7f cc cc cc cc cc
cc .....p.....

```

Report Date:09-06-12 Time:08:40:04

-
;

Related Topics

- [act-alm-trns](#)
- [dact-alm-trns](#)
- [rept-stat-clk](#)
- [rept-stat-trbl](#)
- [rls-alm](#)
- [rtrv-trbl](#)

4.1.547 rtrv-pct

Use this command to display Point Code and CIC Translations.

Parameters

ecice (optional)

The end of the Emulated Circuit Identification Code range.

Range:

0 - 4294967295, *

- 0-4095 —ITU TUP/ISUP
- 0-16383 —ANSI ISUP
- 0-4294967295 —ANSI Q.BICC

Default:

*

ecics (optional)

The start of the Emulated Circuit Identification Code range.

Range:

0 - 4294967295, *

- 0-4095 —ITU TUP/ISUP
- 0-16383 —ANSI ISUP
- 0-4294967295 —ANSI Q.BICC

Default:

*

epc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

epca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

epci (optional)

ITU international destination point code with subfields *zone-area-id*.

Range:

0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0–7

area—000–255

id—0-7

The point code *0-000-0* is not a valid point code.

epcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range:

0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

filtpc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

filtpca

Range:

*0-255, **

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When `chg-sid:pctype=ansi` is specified, *ni=000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni=001–005*.

When `chg-sid:pctype=ansi` is specified, *nc=000* is valid if *ni=006–255*.

When `chg-sid:pctype=ansi` is specified, *ni-*.** is valid if *ni =006–255*.

The point code *000-000-000* is not a valid point code.

filtpci (optional)

ITU international destination point code with subfields *zone-area-id*.

Range:

*0-255, **

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

filtpcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range:

16363, aa-zz, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

rcice (optional)

The end of the Real Circuit Identification Code range.

Range:

0 - 4294967295, *

- 0-4095 —ITU TUP/ISUP
- 0-16383 —ANSI ISUP
- 0-4294967295 —ANSI Q.BICC

Default:

*

rcics (optional)

The start of the Real Circuit Identification Code range.

Range:

0 - 4294967295, *

- 0-4095 —ITU TUP/ISUP
- 0-16383 —ANSI ISUP
- 0-4294967295 —ANSI Q.BICC

Default:

*

realpc (optional)ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.**Range:**

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001-005`.When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006-255`.The point code `000-000-000` is not a valid point code.**Range:****realpci (optional)**ITU international destination point code with subfields *zone-area-id*.**Range:**

0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

realpcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range:

0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

relcause (optional)

Release Cause

Range:

0 - 127

Default:

0

si (optional)

Service Indicator

Range:

0

NM

3

SCCP

5

ISUP

4

TUP

13

ANSI Q. BICC

Default:

ssn (optional)

SCCP Subsystem number

Range:

0 - 255, *

Default:

*

Example

```
rtrv-pct:epc=1-1-1
```

```
rtrv-pct:realpc=2-2-2
```

Dependencies

If the `ssn` or `ecics` parameter is specified, then the `si` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

A full point code must be specified as the value for the `realpc/realpca/realpci/realpcn` and `epc/epca/epci/epcn` parameters.

3090 E3090 Cmd Rej: Full Point Code must be specified

The value specified for the `ecice/rcice` parameter must be equal to or greater than the value specified for the `ecics/rcics` parameter, respectively.

4404 E4404 Cmd Rej: End value must be greater than or equal to a starting value

The values specified for the `epc/epca/epci/epcn`, `filtpc/filtpca/filtpci/filtpcn`, and `realpc/realpca/realpci/realpcn` parameters must have the same domain.

4606 E4606 Cmd Rej: Point code type mismatch

The PCT table is corrupt or cannot be found.

5392 E5392 Cmd Rej: The PCT table is corrupt or cannot be found

The values specified for the `realpc/realpca/realpci/realpcn` and `filtpc/filtpca/filtpci/filtpcn` parameters must have at least one route for each value defined in the Route table.

2642 E2642 Cmd Rej: DPC must have at least one route defined

If a groupcode is specified then the values specified for the `realpc`, `filtpc`, and `epc` parameters must have the same group code.

5394 E5394 Cmd Rej: Group Code of EPC, RealPC and FiltPC must match

A spare point code cannot be specified as a value for the `epci/epcn`, `filtpci/filtpcn`, and `realpci/realpcn` parameters.

5400 E5400 Cmd Rej: Spare point code is not allowed

The `ecics` or `rcics` parameter must be specified before the `relcause` parameter can be specified.

2379 E2379 Cmd Rej: Missing parameter

The `si=3` parameter must be specified before the `ssn` parameter can be specified.

5424 E5424 Cmd Rej: Invalid SI value specified

If the `ecice` or `rcice` parameter is specified, then the `ecics` or `rcics` parameter must be specified, respectively.

4580 E4580 Cmd Rej: CIC must be specified if ECIC is specified

If the `ecics`, `ecice`, and `rcics` parameters are specified, then the `rcice` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

A value of 4, 5, or 13 must be specified for the `si` parameter before the `ecice/ecics` and `rcice/rcics` parameters can be specified.

5424 E5424 Cmd Rej: Invalid SI value specified

The values specified for the `epc/epca/epci/epcn`, `filtpc/filtpca/filtpci/filtpcn`, and `realpc/realpca/realpci/realpcn` parameters cannot be same as the STP point code.

2168 E2168 Cmd Rej: Point code matches a STP point code

The values specified for the `epc/epca/epci/epcn`, `filtpc/filtpca/filtpci/filtpcn`, and `realpc/realpca/realpci/realpcn` parameters cannot be same as the STP capability point code.

2167 E2167 Cmd Rej: Point code matches a STP capability point code

The `epc/epca/epci/epcn` or `realpc/realpca/realpci/realpcn` parameter must be specified if any other optional parameter is specified.

2379 E2379 Cmd Rej: Missing parameter

The values specified for the `ecics/ecice` and `rcics/rcice` parameters must be within the range specified by the parameter definition.

3878 E3878 Cmd Rej: CIC outside of valid range for SI

The difference between the values specified for the `ecice` and `ecics` parameters must be equal to the difference between the values specified for the `rcice` and `rcics` parameters.

5426 E5426 Cmd Rej: ECICS/ECICE and RCICS/RCICE should be in same range

A value of 5 or 13 must be specified for the `si` parameter before the `relcause` parameters can be specified.

5424 E5424 Cmd Rej: Invalid SI value specified

The values specified for the `realpc/realpca/realpci/realpcn` and `filtpc/filtpca/filtpci/filtpcn` parameters must already exist in the Route table.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

The `ssn` and `cic` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `ecics`, `rcics`, and `rcice` parameters are specified, then the `ecice` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

If the same value is specified for the `epc` and `realpc` parameters, then the values specified for the `ecics/ecice` and `rcics/rcice` parameters cannot indicate the same range.

5433 E5433 Cmd Rej: ECIC/Real CIC range can't be same if EPC is same as Real PC

Only one of the `filtpc/filtpca/filtpci/filtpcn` parameters can be specified in the command.

5440 E5440 Cmd Rej: Only one of FILTPC/A, FILTPCI, or FILTPCN may be specified

The value specified for the `epc/epci/epcn` parameter cannot be the same as a secondary point code.

4238 E4238 Cmd Rej: Point code matches a STP secondary point code.

Output

rtrv-pct

```
tekelecstp 10-08-26 11:31:14 EST EAGLE 43.0.0

      EPCA          FILTPCA          REALPCA      SI  SSN  RELCAUSE
      001-001-001      *              002-002-002    4   ---   10

      ECICS = 10          ECICE = 20
      RCICS = 30          RCICE = 40

      EPCI          FILTPCI          REALPCI      SI  SSN  RELCAUSE
      1-001-2        2-002-2          2-002-2      3   10   ---

      ECICS = -----   ECICE = -----
      RCICS = -----   RCICE = -----

      EPCN          FILTPCN          REALPCN      SI  SSN  RELCAUSE
      00300          *              00200        *   ---   ---

      ECICS = -----   ECICE = -----
      RCICS = -----   RCICE = -----

Unique EPC      is 3 of 250
Unique RealPC is 3 of 250

PCT table is (3 of 1000) 1% full.
```

;

Related Topics

- [dlt-pct](#)
- [ent-pct](#)

4.1.548 rtrv-ppsopts

Use this command to display Prepaid Short Message Service options from the PPSOPTS table.

Parameters

ppt (optional)

Prepaid portability type. An IN platform.

Range:

1 - 32

Example

```
rtrv-ppsopts
rtrv-ppsopts:ppt=2
```

Dependencies

The Prepaid SMS Intercept Ph1, IDP A-Party Routing, or IDP Service Key Routing feature must be enabled and turned on before this command can be entered.

3505 E3505 Cmd Rej: Prepaid SMS, A-Party RTG or SK RTG feature must be ON

The Prepaid SMS Options Table must be available.

3351 E3351 Cmd Rej: Failed reading Prepaid SMS Options Table

Output

Set ID values are displayed only if the Flexible GTT Load Sharing (FGTTLS) feature is enabled.

This example displays Prepaid SMS options for a specific Prepaid Type:

```
rtrv-ppsopts:ppt=1

tekelecstp 08-12-17 15:07:01 EST EAGLE 40.1.0

Prepaid SMS Options
-----
BPARTYCHK      = OFF
PPT            PCA/PCI/PCN          SSN    RI
---            -
1              PCI: 1-001-1          1      GT
;

```

This example displays Prepaid SMS options for all Prepaid Types:

rtrv-ppsopts

tekelecstp 08-12-17 15:11:22 EST EAGLE 40.1.0

Prepaid SMS Options

```

-----
BPARTYCHK          = OFF
PPT          PCA/PCI/PCN          SSN          RI
---          -
1             PCI:    1-001-1          1           GT
2             PCI:    1-001-2          1           SSN
3             -----          NONE          GT
4             -----          NONE          GT
5             -----          NONE          GT
6             -----          NONE          GT
7             -----          NONE          GT
8             -----          NONE          GT
9             -----          NONE          GT
10            -----          NONE          GT
11            -----          NONE          GT
12            -----          NONE          GT
13            -----          NONE          GT
14            -----          NONE          GT
15            -----          NONE          GT
16            -----          NONE          GT
17            -----          NONE          GT
18            -----          NONE          GT
19            -----          NONE          GT
20            -----          NONE          GT
21            -----          NONE          GT
22            -----          NONE          GT
23            -----          NONE          GT
24            -----          NONE          GT
25            -----          NONE          GT
26            -----          NONE          GT
27            -----          NONE          GT
28            -----          NONE          GT
29            -----          NONE          GT
30            -----          NONE          GT
31            -----          NONE          GT
32            -----          NONE          GT

```

```

GTA
---
1110
1111
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE

```

```
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE  
NONE
```

```
;
```

This example displays Prepaid SMS options for a specific Prepaid Type when the FGTTLS feature is enabled:

```
rtrv-ppsopts:ppt=2
```

```
tekelecstp 08-12-17 15:07:01 EST EAGLE 40.1.0
```

```
Prepaid SMS Options  
-----
```

```
BPARTYCHK      = OFF  
PPT      PCA/PCI/PCN      SSN      RI      Set ID  
---      -----      ---      ---      -----  
2      PCI: 1-001-1      1      SSN      DFLT
```

```
;
```

This example displays Prepaid SMS options for all Prepaid Type when the FGTTLS feature is enabled:

```
rtrv-ppsopts
```

```
tekelecstp 08-12-17 15:26:17 EST EAGLE 40.1.0
```

```
Prepaid SMS Options  
-----
```

```
BPARTYCHK      = OFF  
PPT      PCI/PCN      SSN      RI      Set ID
```

```

-----
1      PCI:      1-001-1      1      SSN      DFLT
2      -----      NONE      GT      DFLT
3      -----      NONE      GT      DFLT
4      -----      NONE      GT      DFLT
5      -----      NONE      GT      DFLT
6      -----      NONE      GT      DFLT
7      -----      NONE      GT      DFLT
8      -----      NONE      GT      DFLT
9      -----      NONE      GT      DFLT
10     -----      NONE      GT      DFLT
11     -----      NONE      GT      DFLT
12     -----      NONE      GT      DFLT
13     -----      NONE      GT      DFLT
14     -----      NONE      GT      DFLT
15     -----      NONE      GT      DFLT
16     -----      NONE      GT      DFLT
17     -----      NONE      GT      DFLT
18     -----      NONE      GT      DFLT
19     -----      NONE      GT      DFLT
20     -----      NONE      GT      DFLT
21     -----      NONE      GT      DFLT
22     -----      NONE      GT      DFLT
23     -----      NONE      GT      DFLT
24     -----      NONE      GT      DFLT
25     -----      NONE      GT      DFLT
26     -----      NONE      GT      DFLT
27     -----      NONE      GT      DFLT
28     -----      NONE      GT      DFLT
29     -----      NONE      GT      DFLT
30     -----      NONE      GT      DFLT
31     -----      NONE      GT      DFLT
32     -----      NONE      GT      DFLT

```

```

GTA
---
1122
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE
NONE

```


enough of the name to uniquely identify the feature. For example, there are two feature names that begin with “GSM MAP.” Enough additional characters to identify which GSM MAP feature is being entered (at least “GSM MAP SR” to identify the “GSM MAP SRI Redirect” feature). This command supports the following controlled features:

- GSM MAP SRI Redirect
- ISUP NP for EPAP

Example

Retrieve provisioned prefix information for all supported features.

```
rtrv-prefix
```

Retrieve prefix information for the GSM MAP SRI Redirect feature.

```
rtrv-prefix:feature="GSM MAP SRI Redirect"
```

Dependencies

The feature name must be the name of an enabled controlled feature as it is displayed in the `rtrv-ctrl-feat` command output. The following controlled features are supported by this command:

- GSM MAP SRI Redirect
- ISUP NP for EPAP

4347 E4347 Cmd Rej: Feature Name is not valid

The FEATPFX table is corrupt or cannot be found by the system.

4364 E4364 Cmd Rej: Failed reading FEATPFX table

Notes

None

Output

This example retrieves the provisioned prefix information for all features. Additional information is displayed in the function column for prefix numbers 6 and 7 of the “ISUP NP with EPAP” feature.

```
rtrv-prefix
```

```
rlghncxa03w 14-09-20 09:04:14 EST EAGLE 46.1.0
```

Feature	NUM	Prefix	Function
GSM MAP SRI Redirect	1	1a1a	
GSM MAP SRI Redirect	2	ffff	
GSM MAP SRI Redirect	3	1234	
GSM MAP SRI Redirect	26	1224	
ISUP NP with EPAP	1	3b4c	
ISUP NP with EPAP	6	886	Insertion Country Code
ISUP NP with EPAP	7	0	Deletion Condition

```
FEATPFX table is (7 of 256) 2% full
```

;

This example retrieves provisioned prefix information for the “GSM MAP SRI Redirect” feature. The table capacity for the total number of entries in use is reported, not just the number of entries displayed. No additional information is displayed in the Function column for this feature.

```
rtrv-prefix:feature="GSM MAP SRI Redirect"
```

```
rlghncxa03w 14-09-20 09:04:14 EST EAGLE 46.1.0
```

Feature	NUM	Prefix	Function
---------	-----	--------	----------

GSM MAP SRI Redirect	1	1a1a	
GSM MAP SRI Redirect	2	ffff	
GSM MAP SRI Redirect	3	1234	
GSM MAP SRI Redirect	26	1224	
GSM MAP SRI Redirect	32	1204	

```
FEATPFX table is (6 of 256) 2% full
```

;

Related Topics

- [chg-prefix](#)
- [dlt-prefix](#)
- [rtrv-ctrl-feat](#)

4.1.550 rtrv-rmt-appl

Use this command to retrieve a list of remote application assignments.

Parameters

This command has no parameters.

Example

```
rtrv-rmt-appl
```

Dependencies

None

N/A N/A

Notes

None

Output

```
rtrv-rmt-appl
```

```
rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
```

```
  IPCA          SI SSN  
  003-003-003   3 100, 110-119, 200  
                 5
```

```
  IPCI          SI SSN  
  3-003-3       3 5, 50-100, 250  
                 5
```

```
  IPCN          SI SSN  
  16380         3 250  
                 5
```

```
  IPCN24        SI SSN  
  100-200-100   5
```

```
;
```

```
rtrv-rmt-appl
```

```
rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
```

```
  IPCA          SI SSN  
  p-001-001-001 3 5-102
```

```
  IPCI          SI SSN  
  ps-2-002-2    5
```

```
  IPCN          SI SSN  
  s-16380       3 250
```

```
  IPCN24        SI SSN
```

```
;
```

```
rtrv-rmt-appl
```

```
tekelecstp 13-07-02 15:53:27 EST 45.0.0-64.69.0
```

```
rtrv-rmt-appl
```

```
Command entered at terminal #4.
```

```
  IPCA          SI SSN
```

```
  IPCI          SI SSN
```

```
  IPCN          SI SSN
```

```
  IPCN24        SI SSN
```

```

IPCN16      SI SSN
001-02-03   5

```

```
;
```

Legend

- **IPC/IPCA/IPCII/PCN/PCN24/PCN16**—End node's internal point code.
- **SI**—Service indicator value that designates which user part is assigned to the IPC.
- **SSN**—SCCP subsystem number.
- Point code subtype prefixes—
 - *s*- Spare point code
 - *p*- Private point code
 - *ps*- Private and spare point code

Related Topics

- [dlt-rmt-appl](#)
- [ent-rmt-appl](#)

4.1.551 rtrv-rte

This command is used to display the parameter information for the route entries in the database.

Asterisks can be specified to select and display only point codes that have the same point code subfields. See the "Notes" section for this command for details.

Parameters

Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

c11i (optional)

Common Language Location Identifier. This parameter specifies the Common Language Location Identifier assigned to the link.

Range:

ayyyyyyyyyyy

1 alphabetic character followed by 10 alphanumeric characters

Default:

No value given

dpc (optional)

ANSI destination point code with subfields network indicator-network cluster-network cluster member (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

p-, 000-255, *, **, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk values *, **, and *** are not valid for the *ni* subfield.

If ** or *** is specified for the *nc* subfield, either *, **, or *** must be specified for the *ncm* subfield.

When *chg-sid:pctype=ansi* is specified, *ni=000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc=000* is not valid if *ni=001-005*.

When *chg-sid:pctype=ansi* is specified, *nc=000* is valid if *ni=006-255*.

When *chg-sid:pctype=ansi* is specified, *ni-*-** is valid if *ni= 006-255*.

The point code 000-000-000 is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code.

dpci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p-*, *ps*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

dpcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps*, 0-16383, *aa-zz*, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

An asterisk (*) can be specified for the node (*nnnnn* or every member of a flexible point code) or for the group code (*gc*) only when group codes are present in the point codes.

An asterisk (*) can be specified either for the node or for the group code, but not both.

prefix—s-, *p-*, *ps-*

nnnnn—0-16383, *
gc—aa-zz, *
m1-m2-m3-m4—0-14 for each member; values must sum to 14; or *-*-*-* when the point code includes a group code.

dpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—000–255

ssa—000–255

sp—000–255

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area (un-sna-mna)*. The *prefix* indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---*p*

un---000---127

sna---000---15

mna---000---31

lsn (optional)

Linkset name

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Default:

Display all

mode (optional)

The method used to display the output report.

Range:

full

pcst (optional)

Point code subtype. If selected, this parameter causes the command to display only the point codes that have no subtype prefix, or display only the point codes that have the specified subtype prefix.

Range:***none***

Display all point codes that do not have subtype prefixes

s

Display only spare point codes

p

Display only private point codes

ps

Display only private and spare point codes

pctype (optional)

Point code domain. This parameter displays the point codes of the specified domain type.

Range:***ansi******itui******itun******itun24*****Example**

```
rtrv-rte
rtrv-rte:dpc=240-012-004:lsn=1s000001
rtrv-rte:clli=dp1:lsn=1s000001
rtrv-rte:dpc=140-012-008
rtrv-rte:clli=dp1rtrv-rte
rtrv-rte:dpcn=3-15-15-15-fr
rtrv-rte:lsn=e1m3itun
rtrv-rte:dpcn24=10-100-14
rtrv-rte:pcst=s
rtrv-rte:pcst=none
rtrv-rte:pctype=ansi
rtrv-rte:pctype=itun24:pcst=none
rtrv-rte:dpc=1-1-***
rtrv-rte:dpc=1-1-***
```

```

rtrv-rte:dpc=1-***-*
rtrv-rte:dpc=1-***-*
rtrv-rte:dpc=1-***-*:lsn=ab64
rtrv-rte:dpc=1-***-*:lsn=xx64
rtrv-rte:dpcn=1000-*
rtrv-rte:dpcn=1000-*:lsn=dpcn64
rtrv-rte:dpcn=p-*aa
rtrv-rte:dpcn=s-9000-*
rtrv-rte:pctype=itun16:pcst=none

```

Dependencies

The value of the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter must exist in the Destination Point Code table.

2657 E2657 Cmd Rej: Point code not defined

The value specified for the `lsn` parameter must exist in the routeset of the destination if the `dpc` parameter is specified.

2351 E2351 Cmd Rej: Linkset not assigned in route table

If the `dpcn` parameter is specified, its format must match the format that was assigned with the `chg-stpopts` command `npcfmt1` parameter.

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

If the `pctype` parameter has a value of `ansi` or `itun24`, then the `pcst` parameter cannot have a value of `s` or `ps`.

4165 E4165 Cmd Rej: Point Code Subtype Prefix not supported

The `pctype` and `pcst` parameters cannot be specified in the same command with the destination point code, alias point code, secondary point code, `clli`, `msar=only`, and `ncai` parameters.

2155 E2155 Cmd Rej: Invalid parameter combination specified

When using network routing, if the destination point code has a value of `*` in the `nc` field, the `ncm` field must also be `*` (for example, `dpc=21-**-*`).

2956 E2956 Cmd Rej: NCM must be * when using Network Routing

The value of the `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter must be a valid point code.

2340 E2340 Cmd Rej: Invalid point code

If the `clli` parameter is specified, then the value must exist in the Route table.

2328 E2328 Cmd Rej: CLLI not defined in route table

All link sets currently assigned to a route set must still be equipped.

2357 E2357 Cmd Rej: Linkset is unequipped

All link sets must be defined in the route set.

2346 E2346 Cmd Rej: Linkset not defined

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The Site ID table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The database must be consistent.

2111 E2111 Cmd Rej: Database consistency violation - maintenance required

The value specified for the `lsn` parameter must already be assigned to the specified routeset.

4734 E4734 Cmd Rej: IDP A-Party Routing feature must be enabled

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

Asterisks in ANSI Point Codes

Two asterisks in the `ncm` subfield of a cluster point code produces a summary report that shows all point code destinations residing in the given cluster (for example, 20-2-**). This does not include the specified cluster point code (for example, 20-2-*).

Three asterisks in the `ncm` subfield of a cluster point code (for example, 20-2-***) produces a summary report that shows all point code destinations residing in the given network cluster. The specified cluster point code is also displayed if it exists.

If the linkset name is specified and the `dpc/dpca` parameter `ncm` subfield is specified with asterisks, all route entries are displayed that have the specified linkset and that match the specified `dpc/dpca` parameter subfield values.

Asterisks in ITU-N Duplicate Point Codes and Flexible Format Point Codes

When the ITU Duplicate Point Code (ITUDUPPC) feature is on,

- An asterisk (*) can be specified for the group code of an ITU-N duplicate point code to display all ITU-N point codes that have the specified node value (for example, 10101-*).
- An asterisk (*) can be specified for the node of an ITU-N duplicate point code to display all ITU-N point codes that have the specified group code value (for example, *-ab).

When the ITUDUPPC feature is on and the STP flexible point code option (`npcfmt1`) is used to change the ITU-N point format to four members (`m1-m2-m3-m4-gc`),

- An asterisk (*) can be specified for the group code of an ITU-N flexible point code to display all ITU-N point codes that have the specified point code value (for example, 15)

- An asterisk (*) can be specified for every member of the ITU-N flexible point code to display all ITU-N flexible point codes that have the same group code (for example, *, *-15-*-*-ab is not valid).

Output

In these command output examples, the point code prefixes *s*-, *p*-, and *ps*- indicate that the point code is a spare point code, a private point code, or a private and spare point, respectively.

Abbreviated output is indicated by 3 vertical dots as shown:

```
.
.
.
```

This example displays output when the Route table is provisioned. The example displays abbreviated output.

```
rtrv-rte
```

```
tekelecstp 10-10-15 14:52:32 EST EAGLE 43.0.0
rtrv-rte
Command entered at terminal #4.
Extended Processing Time may be Required
```

DPCA	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCA
001-001-000	-----	----- e2e1	No 10	stp1
001-001-000	-----	----- e2e3	No 10	mstp
003-001-000	-----	----- e2e4	No 10	stp4
004-001-000	-----	----- e2e7	No 10	stp7
007-001-000	-----	----- e2m1s1	No 10	ssp201
002-101-001	-----	e2e3	20	
003-001-000	-----	----- e2m1s2	No 10	ssp202
002-102-001	-----	e2e3	20	
003-001-000	-----	----- e2e1	No 10	ssp101
001-001-000	-----	e2e4	20	

004-001-000		e2e3	30	003-001-000
.				
.				
.				
200-200-*	-----	-----	No	cluster2
005-006-001	-----	005-006-001	No	-----
001-001-001	-----	-----	No	dstn01
		lsn01	10	001-001-001
p-001-001-001	-----	-----	No	dstn01p
001-001-002	1-001-2	-----	No	dstn02
		lsn02	10	001-001-002
p-001-001-002	1-011-2	-----	No	dstn02p
001-001-003	s-1-001-3	-----	No	dstn03
		lsn03	10	001-001-003
p-001-001-003	s-1-011-3	-----	No	dstn03p
001-001-004	-----	02060-aa	No	dstn04
		lsn04	10	001-001-004
p-001-001-004	-----	01060-aa	No	dstn04p
001-070-001	-----	-----	No	tgtansi001
		lsn01	10	001-001-001
		lsn02	20	001-001-002
		lsn03	30	001-001-003
		lsn04	40	001-001-004
.				
.				
.				
200-002-001	-----	-----	Yes	rtxroute001
		lsn12	10	001-002-004
040-001-*	-----	-----	No	myncaibeno
040-010-*	-----	-----	No	myncaibeno2
010-*-*	-----	-----	No	-----
040-*-*	-----	-----	No	-----
040-001-001	-----	-----	No	noncluster1
040-001-002	-----	-----	No	noncluster2
DPCI	ALIASA	ALIASN/N24	RTX	CLLI
		LSN	RC	APCI
s-4-002-0	010-001-001	s-08228-aa	No	-----
2-010-0	-----	-----	No	dstn13
		lsn13	10	2-010-0
p-2-010-0	-----	-----	No	dstn13p
2-010-1	002-010-001	-----	No	dstn14
		lsn14	10	2-010-1
p-2-010-1	002-100-001	-----	No	dstn14p
2-010-2	-----	04178-aa	No	dstn15
		lsn15	10	2-010-2
p-2-010-2	-----	08178-aa	No	dstn15p
2-010-3	-----	s-04179-aa	No	dstn16
		lsn16	10	2-010-3
p-2-010-3	-----	s-08179-aa	No	dstn16p
2-070-1	-----	-----	No	tgtitui001
		lsn13	10	2-010-0
		lsn14	20	2-010-1
		lsn15	30	2-010-2

		lsn16	40	2-010-3
2-010-4	-----	002-010-004	No	dstn17
		lsn17	10	2-010-4
p-2-010-4	-----	002-100-004	No	dstn17p
.				
.				
s-2-020-0	-----	-----	No	dstn21
		lsn21	10	s-2-020-0
ps-2-020-0	-----	-----	No	dstn21p
s-2-020-1	002-020-001	-----	No	dstn22
		lsn22	10	s-2-020-1
ps-2-020-1	002-200-001	-----	No	dstn22p
s-2-020-2	-----	04258-aa	No	dstn23
		lsn23	10	s-2-020-2
ps-2-020-2	-----	08258-aa	No	dstn23p
s-2-020-3	-----	s-04259-aa	No	dstn24
		lsn24	10	s-2-020-3
ps-2-020-3	-----	s-08259-aa	No	dstn24p
s-2-070-3	-----	-----	No	tgtitui003
		lsn21	10	s-2-020-0
		lsn22	20	s-2-020-1
		lsn23	30	s-2-020-2
		lsn24	40	s-2-020-3
.				
.				
.				
DPCI	ALIASI	ALIASN/N24	RTX	CLLI
		LSN	RC	APCI
3-030-0	s-3-030-0	-----	No	dstn29
		lsn29	10	3-030-0
p-3-030-0	s-3-031-0	-----	No	dstn29p
3-030-1	s-3-030-1	06385-aa	No	dstn30
		lsn30	10	3-030-1
p-3-030-1	s-3-031-1	07385-aa	No	dstn30p
3-030-2	s-3-030-2	s-06386-aa	No	dstn31
		lsn31	10	3-030-2
p-3-030-2	s-3-031-2	s-07386-aa	No	dstn31p
3-070-1	s-3-070-1	-----	No	tgtitui005
		lsn29	10	3-030-0
		lsn30	20	3-030-1
		lsn31	30	3-030-2
3-030-3	s-3-030-3	003-030-003	No	dstn32
		lsn32	10	3-030-3
p-3-030-3	s-3-031-3	003-031-003	No	dstn32p
3-070-2	s-3-070-2	-----	No	tgtitui006
		lsn32	10	3-030-3
		lsn33	20	3-030-4
		lsn34	30	3-030-5
s-3-040-2	3-040-2	-----	No	dstn35
		lsn35	10	s-3-040-2
ps-3-040-2	3-041-2	-----	No	dstn35p
s-3-040-3	3-040-3	06467-aa	No	dstn36
		lsn36	10	s-3-040-3

ps-3-040-3	3-041-3	07467-aa	No	dstn36p
s-3-040-4	3-040-4	s-06468-aa	No	dstn37
		lsn37	10	s-3-040-4
ps-3-040-4	3-041-4	s-07468-aa	No	dstn37p
s-3-040-5	3-040-5	003-040-005	No	dstn38
		lsn38	10	s-3-040-5
ps-3-040-5	3-041-5	003-041-005	No	dstn38p
DPCI	ALIASN	ALIASN	RTX	CLLI
		LSN	RC	APCI
3-030-4	s-06388-aa	06388-aa	No	dstn33
		lsn33	10	3-030-4
p-3-030-4	s-07388-aa	07388-aa	No	dstn33p
3-030-5	06389-aa	s-06389-aa	No	dstn34
		lsn34	10	3-030-5
p-3-030-5	07389-aa	s-07389-aa	No	dstn34p
s-3-040-6	s-06471-aa	06471-aa	No	dstn39
		lsn39	10	s-3-040-6
ps-3-040-6	s-07471-aa	07471-aa	No	dstn39p
s-3-040-7	06472-aa	s-06472-aa	No	dstn40
		lsn40	10	s-3-040-7
ps-3-040-7	07472-aa	s-07472-aa	No	dstn40p
DPCN	ALIASA	ALIASI	RTX	CLLI
		LSN	RC	APCN
06157-aa	020-005-002	-----	No	-----
08192-aa	-----	-----	No	dstn41
		lsn41	10	08192-aa
p-08192-aa	-----	-----	No	dstn41p
08193-aa	004-000-001	-----	No	dstn42
		lsn42	10	08193-aa
p-08193-aa	004-200-001	-----	No	dstn42p
08194-aa	-----	4-000-2	No	dstn43
		lsn43	10	08194-aa
p-08194-aa	-----	4-040-2	No	dstn43p
08195-aa	-----	s-4-000-3	No	dstn44
		lsn44	10	08195-aa
p-08195-aa	-----	s-4-040-3	No	dstn44p
08753-aa	-----	-----	No	tgtitun001
		lsn41	10	08192-aa
		lsn42	20	08193-aa
		lsn43	30	08194-aa
		lsn44	30	08195-aa
08196-aa	004-000-004	4-000-4	No	dstn45
		lsn45	10	08196-aa
p-08196-aa	004-200-004	4-040-4	No	dstn45p
08197-aa	004-000-005	s-4-000-5	No	dstn46
		lsn46	10	08197-aa
p-08197-aa	004-200-005	s-4-040-5	No	dstn46p
08754-aa	-----	-----	No	tgtitun002
		lsn45	10	08196-aa
		lsn46	20	08197-aa
		lsn47	30	08198-aa
		lsn48	30	08199-aa
s-08272-aa	-----	-----	No	dstn49

```

                                lsn49          10 s-08272-aa
ps-08272-aa ----- ----- No dstn49p
s-08273-aa      004-010-001 ----- ----- No dstn50
                                lsn50          10 s-08273-aa
ps-08273-aa      004-200-010 ----- ----- No dstn50p
s-08274-aa ----- ----- No dstn51
                                lsn51          10 s-08274-aa
ps-08274-aa ----- ----- No dstn51p
s-08275-aa ----- ----- No dstn52
                                lsn52          10 s-08275-aa
ps-08275-aa ----- ----- No dstn52p
.
.
.
DPCN          ALIASI          ALIASI          RTX  CLI
08198-aa      s-4-000-6          4-000-6          RC   APCN
                                lsn47          10   dstn47
p-08198-aa    s-4-040-6          4-040-6          No   dstn47p
08199-aa      4-000-7          s-4-000-7          No   dstn48
                                lsn48          10   08199-aa
p-08199-aa    4-040-7          s-4-040-7          No   dstn48p
s-08278-aa    s-4-010-6          4-010-6          No   dstn55
                                lsn55          10   s-08278-aa
ps-08278-aa    s-4-050-6          4-050-6          No   dstn55p
s-08279-aa    4-010-7          s-4-010-7          No   dstn56
                                lsn56          10   s-08279-aa
ps-08279-aa    4-050-7          s-4-050-7          No   dstn56p
s-08379-aa    s-4-058-7          4-058-7          Yes
rtxroute003
                                lsn55          80   s-08278-aa
08198-fr      s-4-005-7          4-005-7          No
dstn47dupfr
08198-tk      4-006-0          s-4-006-0          No
dstn47dupTk

DPCN          ALIASN          ALIASI          RTX  CLI
12688-aa      s-12688-aa ----- ----- No dstn57
                                lsn57          10   12688-aa
p-12688-aa    s-13688-aa ----- ----- No dstn57p
12689-aa      s-12689-aa ----- ----- No dstn58
                                lsn58          10   12689-aa
p-12689-aa    s-13689-aa ----- ----- No dstn58p
12690-aa      s-12690-aa ----- ----- No dstn59
                                lsn59          10   12690-aa
p-12690-aa    s-13690-aa ----- ----- No dstn59p
s-12691-aa    12691-aa ----- ----- No dstn60
                                lsn60          10   s-12691-aa
ps-12691-aa    13691-aa ----- ----- No dstn60p
s-12692-aa    12692-aa ----- ----- No dstn61
                                lsn61          10   s-12692-aa
ps-12692-aa    13692-aa ----- ----- No dstn61p
s-12693-aa    12693-aa ----- ----- No dstn62

```

```

                                lsn62          10 s-12693-aa
ps-12693-aa          13693-aa          s-6-060-5          No  dstn62p
s-08272-fr          08300-fr          -----          No  dstn49dupfr
s-08272-tk          08300-tk          4-006-7          No  dstn49dupTk
DPCN24              ALIASA              ALIASI           RTX  CLLI
                                LSN              RC              APCN24
003-003-004        003-003-003        3-003-4          No  -----
006-005-001        -----          -----          No  dstn63
                                lsn63           10          006-005-001
p-006-005-001      -----          -----          No  dstn63p
006-005-002        006-005-002        -----          No  dstn64
                                lsn64           10          006-005-002
p-006-005-002      006-005-020        -----          No  dstn64p
006-005-003        -----          6-005-3          No  dstn65
                                lsn65           10          006-005-003
p-006-005-003      -----          6-050-3          No  dstn65p
006-070-001        -----          -----          No  tgtitun24a
                                lsn63           10          006-005-001
                                lsn64           20          006-005-002
                                lsn65           30          006-005-003
006-005-004        -----          s-6-005-4          No  dstn66
                                lsn66           10          006-005-004
p-006-005-004      -----          s-6-050-4          No  dstn66p
006-005-005        006-005-005        6-005-5          No  dstn67
                                lsn67           10          006-005-005
p-006-005-005      006-005-050        6-050-5          No  dstn67p
006-070-002        -----          -----          No  tgtitun24b
                                lsn66           10          006-005-004
                                lsn67           20          006-005-005

```

;

This example displays the output when the Route table is empty:

```
rtrv-rte
```

```
tekelecstp 08-01-01 12:31:35 EST EAGLE 38.0.0
rtrv-rte
Command entered at terminal #4.
```

```
No routes meeting the requested criteria were found
```

;

This example retrieves a route by linkset name:

```
rtrv-rte:lsn=e2e1
```

```
eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-rte:lsn=e2e1
Command entered at terminal #4.
Extended Processing Time may be Required
```

```

LSN          DPCA          RC
e2e1         001-001-000  10
              001-101-001  10
              004-101-001  20
              100-100-*    10
              100-100-001  10

```

```
;
```

This example retrieves a route by linkset name and destination point code:

```
rtrv-rte:dpc=4-101-1:lsn=e2e1
```

```

eagle10115 08-12-09 10:00:37 EST  EAGLE 40.1.0
LSN          DPCA          RC
e2e1         004-101-001  20

```

```
;
```

In this example, the `chg-stpopts:npcfmti` value is set to 7-4-3:

```
rtrv-rte:dpcn=127-15-7
```

```

eagle10115 08-12-09 10:00:37 EST  EAGLE 40.1.0
          DPCN          ALIASA          ALIASI          LSN          RC
APCN
      127-15-7  -----
100-10-2
                                     RTX: No  CLLI:
-----

```

```
;
```

In this example, the `chg-stpopts:npcfmti` value is set to 11-1-1-1 and the ITUDUPPC feature is on:

```
rtrv-rte:lsn=ls3
```

```

eagle10115 10-10-09 10:00:37 EST  EAGLE 43.0.0
rtrv-rte:lsn=ls3
Command entered at terminal #4.
Extended Processing Time may be Required

LSN          DPCN          RC
lsn47        1024-1-1-0-aa 10
              1094-0-1-0-aa 30

```

```
;
```

In this example, the `chg-stpopts:npcfmti` value is set to 2-4-4-4 and the ITUDUPPC feature is on:

```
rtrv-rte:dpcn=s-2-00-05-00-tk
```

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

      DPCN          ALIASN          ALIASI          RTX  CLLI
      s-2-00-05-00-tk  2-00-06-12-tk  4-006-7        No   dstn49dupTk
```

```
;
```

In this example, the `chg-stpopts:npcfmti` value is set to 11-1-1-1 and the ITUDUPPC feature is on:

```
rtrv-rte:lsn=elm3itun
```

```
eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-rte:lsn=elm3itun
Command entered at terminal #4.
Extended Processing Time may be Required
```

```
LSN          DPCN          RC
elm3itun     2047-1-1-1-pe 10
```

```
;
```

This example contains a route with 24-bit ITU-N point codes:

```
rtrv-rte:lsn=lsn66
```

```
eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-rte:lsn=lsn66
Command entered at terminal #4.
Extended Processing Time may be Required
```

```
LSN          DPCN24        RC
lsn66        006-005-004  10
              006-070-002  10
```

```
;
```

This example displays ANSI point codes:

```
rtrv-rte:pctype=ansi
```

```
eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
rtrv-rte:pctype=ansi
Command entered at terminal #4.
```

Extended Processing Time may be Required

DPCA	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCA
001-001-000	-----	----- e2e1	No 10	stp1
001-001-000				
003-001-000	-----	----- e2e3	No 10	mstp
003-001-000				
004-001-000	-----	----- e2e4	No 10	stp4
004-001-000				
007-001-000	-----	----- e2e7	No 10	stp7
007-001-000				
002-101-001	-----	----- e2m1s1	No 10	ssp201
002-101-001		e2e3	20	
003-001-000				
002-102-001	-----	----- e2m1s2	No 10	ssp202
002-102-001		e2e3	20	
003-001-000				
001-101-001	-----	----- e2e1	No 10	ssp101
001-001-000		e2e4	20	
004-001-000		e2e3	30	
003-001-000				
003-101-001	-----	----- e2m1s3	No 10	ssp301
003-101-001		e2e3	20	
003-001-000				
004-101-001	-----	----- e2e4	No 10	ssp401
004-001-000		e2e1	20	
001-001-000				
007-101-001	-----	----- e2e7	No 10	ssp701
007-001-000				
100-100-*	-----	----- e2e1	No 10	cluster1
001-001-000		e2e3	20	
003-001-000				
100-100-001	-----	-----	No	
-----		e2e1	10	
001-001-000				

200-200-*	-----	-----	No	cluster2
005-006-001	-----	005-006-001	No	-----
001-001-001	-----	-----	No	dstn01
		lsn01	10	001-001-001
p-001-001-001	-----	-----	No	dstn01p
001-001-002	1-001-2	-----	No	dstn02
		lsn02	10	001-001-002
p-001-001-002	1-011-2	-----	No	dstn02p
001-001-003	s-1-001-3	-----	No	dstn03
		lsn03	10	001-001-003
p-001-001-003	s-1-011-3	-----	No	dstn03p
001-001-004	-----	0257-1-0-0-aa	No	dstn04
		lsn04	10	001-001-004
p-001-001-004	-----	0132-1-0-0-aa	No	dstn04p
001-070-001	-----	-----	No	tgtansi001
		lsn01	10	001-001-001
		lsn02	20	001-001-002
		lsn03	30	001-001-003
		lsn04	40	001-001-004
001-001-005	-----	s-0257-1-0-1-aa	No	dstn05
		lsn05	10	001-001-005
p-001-001-005	-----	s-0132-1-0-1-aa	No	dstn05p
001-001-006	-----	001-001-006	No	dstn06
		lsn06	10	001-001-006
p-001-001-006	-----	001-011-006	No	dstn06p
001-001-007	1-001-7	0257-1-1-1-aa	No	dstn07
		lsn07	10	001-001-007
p-001-001-007	1-011-7	0132-1-1-1-aa	No	dstn07p
001-002-000	1-002-0	s-0258-0-0-0-aa	No	dstn08
		lsn08	10	001-002-000
p-001-002-000	1-012-0	s-0133-0-0-0-aa	No	dstn08p
001-070-002	-----	-----	No	tgtansi002
		lsn05	10	001-001-005
		lsn06	20	001-001-006
		lsn07	30	001-001-007
		lsn08	40	001-002-000
001-002-001	s-1-002-1	0258-0-0-1-aa	No	dstn09
		lsn09	10	001-002-001
p-001-002-001	s-1-012-1	0133-0-0-1-aa	No	dstn09p
001-002-002	s-1-002-2	s-0258-0-1-0-aa	No	dstn10
		lsn10	10	001-002-002
p-001-002-002	s-1-012-2	s-0133-0-1-0-aa	No	dstn10p
001-002-003	1-002-3	001-002-003	No	dstn11
		lsn11	10	001-002-003
p-001-002-003	1-012-3	001-012-003	No	dstn11p
001-002-004	s-1-002-4	001-002-004	No	dstn12
		lsn12	10	001-002-004
p-001-002-004	s-1-012-4	001-012-004	No	dstn12p
001-070-003	-----	-----	No	tgtansi003
		lsn09	10	001-002-001
		lsn10	20	001-002-002
		lsn11	30	001-002-003
		lsn12	40	001-002-004
200-002-001	-----	-----	Yes	rtxroute001
040-001-*	-----	-----	No	myncaibeno

```

040-010-* ----- No
myancaibeno2
010-*-* ----- No
-----
040-*-* ----- No
-----
040-001-001 ----- No
noncluster1
040-001-002 ----- No
noncluster2

;

```

This example displays ITU-I point codes:

```
rtrv-rte:pctype=itui
```

```

eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
rtrv-rte:pctype=itui
Command entered at terminal #4.
Extended Processing Time may be Required

```

DPCI	ALIASA	ALIASN/N24 LSN	RTX RC	CLLI APCI
s-4-002-0	010-001-001	s-1028-1-0-0-aa	No	

2-010-0	-----	-----	No	dstn13
		lsn13	10	2-010-0
p-2-010-0	-----	-----	No	dstn13p
2-010-1	002-010-001	-----	No	dstn14
		lsn14	10	2-010-1
p-2-010-1	002-100-001	-----	No	dstn14p
2-010-2	-----	0522-0-1-0-aa	No	dstn15
		lsn15	10	2-010-2
p-2-010-2	-----	1022-0-1-0-aa	No	dstn15p
2-010-3	-----	s-0522-0-1-1-aa	No	dstn16
		lsn16	10	2-010-3
p-2-010-3	-----	s-1022-0-1-1-aa	No	dstn16p
2-070-1	-----	-----	No	tgtitui001
		lsn13	10	2-010-0
		lsn14	20	2-010-1
		lsn15	30	2-010-2
		lsn16	40	2-010-3
2-010-4	-----	002-010-004	No	dstn17
		lsn17	10	2-010-4
p-2-010-4	-----	002-100-004	No	dstn17p
2-010-5	002-010-005	0522-1-0-1-aa	No	dstn18
		lsn18	10	2-010-5
p-2-010-5	002-100-005	1022-1-0-1-aa	No	dstn18p
2-010-6	002-010-006	s-0522-1-1-0-aa	No	dstn19
		lsn19	10	2-010-6
p-2-010-6	002-100-006	s-1022-1-1-0-aa	No	dstn19p
2-010-7	002-010-007	002-010-007	No	dstn20
		lsn20	10	2-010-7

p-2-010-7	002-100-007	002-100-007	No	dstn20p
2-070-2	-----	-----	No	tgtitui002
		lsn17	10	2-010-4
		lsn18	20	2-010-5
		lsn19	30	2-010-6
		lsn20	40	2-010-7
s-2-020-0	-----	-----	No	dstn21
		lsn21	10	s-2-020-0
ps-2-020-0	-----	-----	No	dstn21p
s-2-020-1	002-020-001	-----	No	dstn22
		lsn22	10	s-2-020-1
ps-2-020-1	002-200-001	-----	No	dstn22p
s-2-020-2	-----	0532-0-1-0-aa	No	dstn23
		lsn23	10	s-2-020-2
ps-2-020-2	-----	1032-0-1-0-aa	No	dstn23p
s-2-020-3	-----	s-0532-0-1-1-aa	No	dstn24
		lsn24	10	s-2-020-3
ps-2-020-3	-----	s-1032-0-1-1-aa	No	dstn24p
s-2-070-3	-----	-----	No	tgtitui003
		lsn21	10	s-2-020-0
		lsn22	20	s-2-020-1
		lsn23	30	s-2-020-2
		lsn24	40	s-2-020-3
s-2-020-4	-----	002-020-004	No	dstn25
		lsn25	10	s-2-020-4
ps-2-020-4	-----	002-200-004	No	dstn25p
s-2-020-5	002-020-005	0532-1-0-1-aa	No	dstn26
		lsn26	10	s-2-020-5
ps-2-020-5	-----	-----	No	dstn26p
s-2-020-6	002-020-006	s-0532-1-1-0-aa	No	dstn27
		lsn27	10	s-2-020-6
ps-2-020-6	002-200-005	1032-1-0-1-aa	No	dstn27p
s-2-020-7	002-020-007	002-020-007	No	dstn28
		lsn28	10	s-2-020-7
ps-2-020-7	002-200-007	002-200-007	No	dstn28p
s-2-070-4	-----	-----	No	tgtitui004
		lsn25	10	s-2-020-4
		lsn26	20	s-2-020-5
		lsn27	30	s-2-020-6
		lsn28	40	s-2-020-7
s-3-070-3	-----	-----	No	tgtitui007
		lsn35	10	s-3-040-2
		lsn36	20	s-3-040-3
		lsn37	30	s-3-040-4
s-3-070-4	-----	-----	No	tgtitui008
		lsn38	10	s-3-040-5
		lsn39	20	s-3-040-6
		lsn40	30	s-3-040-7
s-2-029-6	002-029-006	s-0533-1-0-1-aa	Yes	rtxroute002
		lsn26	5	s-2-020-5
DPCI	ALIASI	ALIASN/N24	RTX	CLLI
		LSN	RC	APCI
3-030-0	s-3-030-0	-----	No	dstn29
		lsn29	10	3-030-0

```

p-3-030-0      s-3-031-0      ----- No      dstn29p
  3-030-1      s-3-030-1      0798-0-0-1-aa No      dstn30
                                     lsn30      10      3-030-1
p-3-030-1      s-3-031-1      0923-0-0-1-aa No      dstn30p
  3-030-2      s-3-030-2      s-0798-0-1-0-aa No      dstn31
                                     lsn31      10      3-030-2
p-3-030-2      s-3-031-2      s-0923-0-1-0-aa No      dstn31p
  3-070-1      s-3-070-1      ----- No      tgtitui005
                                     lsn29      10      3-030-0
                                     lsn30      20      3-030-1
                                     lsn31      30      3-030-2
  3-030-3      s-3-030-3      003-030-003 No      dstn32
                                     lsn32      10      3-030-3
p-3-030-3      s-3-031-3      003-031-003 No      dstn32p
  3-070-2      s-3-070-2      ----- No      tgtitui006
                                     lsn32      10      3-030-3
                                     lsn33      20      3-030-4
                                     lsn34      30      3-030-5
s-3-040-2      3-040-2      ----- No      dstn35
                                     lsn35      10      s-3-040-2
ps-3-040-2     3-041-2      ----- No      dstn35p
s-3-040-3     3-040-3      0808-0-1-1-aa No      dstn36
                                     lsn36      10      s-3-040-3
ps-3-040-3     3-041-3      0933-0-1-1-aa No      dstn36p
s-3-040-4     3-040-4      s-0808-1-0-0-aa No      dstn37
                                     lsn37      10      s-3-040-4
ps-3-040-4     3-041-4      s-0933-1-0-0-aa No      dstn37p
s-3-040-5     3-040-5      003-040-005 No      dstn38
                                     lsn38      10      s-3-040-5
ps-3-040-5     3-041-5      003-041-005 No      dstn38p

DPCI          ALIASN          ALIASN          RTX          CLLI
              LSN          RC          APCI
  3-030-4     s-0798-1-0-0-aa 0798-1-0-0-aa No      dstn33
                                     lsn33      10      3-030-4
p-3-030-4     s-0923-1-0-0-aa 0923-1-0-0-aa No      dstn33p
  3-030-5     0798-1-0-1-aa s-0798-1-0-1-aa No      dstn34
                                     lsn34      10      3-030-5
p-3-030-5     0923-1-0-1-aa s-0923-1-0-1-aa No      dstn34p
s-3-040-6     s-0808-1-1-1-aa 0808-1-1-1-aa No      dstn39
                                     lsn39      10      s-3-040-6
ps-3-040-6     s-0933-1-1-1-aa 0933-1-1-1-aa No      dstn39p
s-3-040-7     0809-0-0-0-aa s-0809-0-0-0-aa No      dstn40
                                     lsn40      10      s-3-040-7
ps-3-040-7     0934-0-0-0-aa s-0934-0-0-0-aa No      dstn40p

```

;

This example displays ITU-N point codes:

```
rtrv-rte:pctype=itun
```

```

eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
rtrv-rte:pctype=itun

```

Command entered at terminal #4.
Extended Processing Time may be Required

DPCN	ALIASA	ALIASI LSN	RTX RC	CLLI APCN
06157-aa	020-005-002	-----	No	-----
08192-aa	-----	-----	No	dstn41
		lsn41	10	08192-aa
p-08192-aa	-----	-----	No	dstn41p
08193-aa	004-000-001	-----	No	dstn42
		lsn42	10	08193-aa
p-08193-aa	004-200-001	-----	No	dstn42p
08194-aa	-----	4-000-2	No	dstn43
		lsn43	10	08194-aa
p-08194-aa	-----	4-040-2	No	dstn43p
08195-aa	-----	s-4-000-3	No	dstn44
		lsn44	10	08195-aa
p-08195-aa	-----	s-4-040-3	No	dstn44p
08753-aa	-----	-----	No	tgtitun001
		lsn41	10	08192-aa
		lsn42	20	08193-aa
		lsn43	30	08194-aa
		lsn44	30	08195-aa
08196-aa	004-000-004	4-000-4	No	dstn45
		lsn45	10	08196-aa
p-08196-aa	004-200-004	4-040-4	No	dstn45p
08197-aa	004-000-005	s-4-000-5	No	dstn46
		lsn46	10	08197-aa
p-08197-aa	004-200-005	s-4-040-5	No	dstn46p
08754-aa	-----	-----	No	tgtitun002
		lsn45	10	08196-aa
		lsn46	20	08197-aa
		lsn47	30	08198-aa
		lsn48	30	08199-aa
s-08272-aa	-----	-----	No	dstn49
		lsn49	10	s-08272-aa
ps-08272-aa	-----	-----	No	dstn49p
s-08273-aa	004-010-001	-----	No	dstn50
		lsn50	10	s-08273-aa
ps-08273-aa	004-200-010	-----	No	dstn50p
s-08274-aa	-----	4-010-2	No	dstn51
		lsn51	10	s-08274-aa
ps-08274-aa	-----	4-050-2	No	dstn51p
s-08275-aa	-----	s-4-010-3	No	dstn52
		lsn52	10	s-08275-aa
ps-08275-aa	-----	s-4-050-3	No	dstn52p
s-08755-aa	-----	-----	No	tgtitun003
		lsn49	10	s-08272-aa
		lsn50	20	s-08273-aa
		lsn51	30	s-08274-aa
		lsn52	30	s-08275-aa
s-08276-aa	004-010-004	4-010-4	No	dstn53
		lsn53	10	s-08276-aa
ps-08276-aa	004-200-040	4-050-4	No	dstn53p
s-08277-aa	004-010-005	s-4-010-5	No	dstn54

ps-08277-aa	004-200-050	lsn54	10	s-08277-aa
s-08756-aa	-----	s-4-050-5	No	dstn54p
		-----	No	tgtitun004
		lsn53	10	s-08276-aa
		lsn54	20	s-08277-aa
		lsn55	30	s-08278-aa
		lsn56	30	s-08279-aa
08757-aa	-----	-----	No	tgtitun005
		lsn57	10	12688-aa
		lsn58	20	12689-aa
		lsn59	30	12690-aa
s-08758-aa	-----	-----	No	tgtitun006
		lsn60	10	s-12691-aa
		lsn61	20	s-12692-aa
		lsn62	30	s-12693-aa
08199-fr	-----	s-4-006-1	No	
dstn48dupfr				
08199-tk	-----	4-006-2	No	
dstn48dupTk				
08198-nz	-----	-----	No	
dstn47dupnz				
s-08273-fr	-----	4-006-3	No	
dstn50dupfr				
DPCN	ALIASI	ALIASI	RTX	CLLI
		LSN	RC	APCN
08198-aa	s-4-000-6	4-000-6	No	dstn47
		lsn47	10	08198-aa
p-08198-aa	s-4-040-6	4-040-6	No	dstn47p
08199-aa	4-000-7	s-4-000-7	No	dstn48
		lsn48	10	08199-aa
p-08199-aa	4-040-7	s-4-040-7	No	dstn48p
s-08278-aa	s-4-010-6	4-010-6	No	dstn55
		lsn55	10	s-08278-aa
ps-08278-aa	s-4-050-6	4-050-6	No	dstn55p
s-08279-aa	4-010-7	s-4-010-7	No	dstn56
		lsn56	10	s-08279-aa
ps-08279-aa	4-050-7	s-4-050-7	No	dstn56p
s-08379-aa	s-4-058-7	4-058-7	Yes	
rtxroute003				
		lsn55	80	s-08278-aa
08198-fr	s-4-005-7	4-005-7	No	
dstn47dupfr				
08198-tk	4-006-0	s-4-006-0	No	
dstn47dupTk				
DPCN	ALIASN	ALIASI	RTX	CLLI
		LSN	RC	APCN
12688-aa	s-12688-aa	-----	No	dstn57
		lsn57	10	12688-aa
p-12688-aa	s-13688-aa	-----	No	dstn57p
12689-aa	s-12689-aa	6-050-1	No	dstn58
		lsn58	10	12689-aa
p-12689-aa	s-13689-aa	6-060-1	No	dstn58p
12690-aa	s-12690-aa	s-6-050-2	No	dstn59

```

                lsn59          10    12690-aa
p-12690-aa      s-13690-aa      s-6-060-2      No    dstn59p
s-12691-aa      12691-aa      -----        No    dstn60
                lsn60          10    s-12691-aa
ps-12691-aa     13691-aa     -----        No    dstn60p
s-12692-aa      12692-aa      6-050-4        No    dstn61
                lsn61          10    s-12692-aa
ps-12692-aa     13692-aa     6-060-4        No    dstn61p
s-12693-aa      12693-aa     s-6-050-5      No    dstn62
                lsn62          10    s-12693-aa
ps-12693-aa     13693-aa     s-6-060-5      No    dstn62p
s-08272-fr      08300-fr     -----        No    dstn49dupfr
s-08272-tk      08300-tk      4-006-7        No    dstn49dupTk
;

```

This example displays ANSI point codes that have the private point code subtype prefix (p-):

```
rtrv-rte:pctype=ansi:pcst=p
```

```

eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-rte:pctype=ansi:pcst=p
Command entered at terminal #4.
Extended Processing Time may be Required

```

```

          DPCA          ALIASI          ALIASN/N24      RTX  CLLI
                   -----          -----          RC  APCA
p-001-001-001      -----          -----          No  dstn01p
p-001-001-002          1-011-2          -----          No  dstn02p
p-001-001-003      s-1-011-3          -----          No  dstn03p
p-001-001-004      -----          01060-aa          No  dstn04p
p-001-001-005      -----          s-01061-aa        No  dstn05p
p-001-001-006      -----          001-011-006       No  dstn06p
p-001-001-007          1-011-7          01063-aa          No  dstn07p
p-001-002-000          1-012-0          s-01064-aa        No  dstn08p
p-001-002-001      s-1-012-1          01065-aa          No  dstn09p
p-001-002-002      s-1-012-2          s-01066-aa        No  dstn10p
p-001-002-003          1-012-3          001-012-003       No  dstn11p
p-001-002-004      s-1-012-4          001-012-004       No  dstn12p
;

```

This example displays ITU-I point codes that have the private and spare point code subtype prefix (ps-):

```
rtrv-rte:pctype=itui:pcst=ps
```

```

eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-rte:pctype=itui:pcst=ps
Command entered at terminal #4.
Extended Processing Time may be Required

```

```

          DPCI          ALIASA          ALIASN/N24      RTX  CLLI

```

		LSN	RC	APCI
ps-2-020-0	-----	-----	No	dstn21p
ps-2-020-1	002-200-001	-----	No	dstn22p
ps-2-020-2	-----	08258-aa	No	dstn23p
ps-2-020-3	-----	s-08259-aa	No	dstn24p
ps-2-020-4	-----	002-200-004	No	dstn25p
ps-2-020-5	-----	-----	No	dstn26p
ps-2-020-6	002-200-005	08261-aa	No	dstn27p
ps-2-020-7	002-200-007	002-200-007	No	dstn28p

DPCI	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCI
ps-3-040-2	3-041-2	-----	No	dstn35p
ps-3-040-3	3-041-3	07467-aa	No	dstn36p
ps-3-040-4	3-041-4	s-07468-aa	No	dstn37p
ps-3-040-5	3-041-5	003-041-005	No	dstn38p

DPCI	ALIASN	ALIASN LSN	RTX RC	CLLI APCI
ps-3-040-6	s-07471-aa	07471-aa	No	dstn39p
ps-3-040-7	07472-aa	s-07472-aa	No	dstn40p

;

This example displays ITU-N point codes that have the spare point code subtype prefix (s-):

rtrv-rte:pctype=itun:pcst=s

```
eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-rte:pctype=itun:pcst=s
Command entered at terminal #4.
Extended Processing Time may be Required
```

DPCN	ALIASA	ALIASI LSN	RTX RC	CLLI APCN
s-08272-aa	-----	-----	No	dstn49
		lsn49	10	s-08272-aa
s-08273-aa	004-010-001	-----	No	dstn50
		lsn50	10	s-08273-aa
s-08274-aa	-----	4-010-2	No	dstn51
		lsn51	10	s-08274-aa
s-08275-aa	-----	s-4-010-3	No	dstn52
		lsn52	10	s-08275-aa
s-08755-aa	-----	-----	No	tgtitun003
		lsn49	10	s-08272-aa
		lsn50	20	s-08273-aa
		lsn51	30	s-08274-aa
		lsn52	30	s-08275-aa
s-08276-aa	004-010-004	4-010-4	No	dstn53
		lsn53	10	s-08276-aa
s-08277-aa	004-010-005	s-4-010-5	No	dstn54
		lsn54	10	s-08277-aa
s-08756-aa	-----	-----	No	tgtitun004

```

                lsn53          10 s-08276-aa
                lsn54          20 s-08277-aa
                lsn55          30 s-08278-aa
                lsn56          30 s-08279-aa
s-08758-aa      -----
                -----      No   tgtitun006
                lsn60          10 s-12691-aa
                lsn61          20 s-12692-aa
                lsn62          30 s-12693-aa
s-08273-fr      -----
                4-006-3       No   dstn50dupfr

DPCN           ALIASI        ALIASI        RTX   CLLI
                LSN
s-08278-aa     s-4-010-6                4-010-6       No   dstn55
                lsn55          10 s-08278-aa
s-08279-aa     4-010-7                s-4-010-7     No   dstn56
                lsn56          10 s-08279-aa
s-08379-aa     s-4-058-7                4-058-7       Yes  rtxroute003
                lsn55          80 s-08278-aa

DPCN           ALIASN        ALIASI        RTX   CLLI
                LSN
s-12691-aa     12691-aa                -----
                lsn60          10 s-12691-aa
s-12692-aa     12692-aa                6-050-4       No   dstn61
                lsn61          10 s-12692-aa
s-12693-aa     12693-aa                s-6-050-5     No   dstn62
                lsn62          10 s-12693-aa
s-08272-fr     08300-fr                -----
s-08272-tk     08300-tk                4-006-7       No   dstn49dupfr
                -----
;

```

This example displays point codes that have no point code subtype prefix. This example displays abbreviated output.

```
rtrv-rte:pcst=none
```

```

eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-rte:pcst=none
Command entered at terminal #4.
Extended Processing Time may be Required

```

```

DPCA           ALIASI        ALIASN/N24    RTX   CLLI
                LSN
001-001-000   -----
                -----      No   stp1
                e2e1          10   001-001-000
003-001-000   -----
                -----      No   mstp
                e2e3          10   003-001-000
004-001-000   -----
                -----      No   stp4
                e2e4          10   004-001-000
007-001-000   -----
                -----      No   stp7
                e2e7          10   007-001-000
002-101-001   -----
                -----      No   ssp201
                e2m1s1        10   002-101-001
                e2e3          20   003-001-000

```

```

.
.
.
200-200-* -----
005-006-001 ----- 005-006-001 No cluster2
-----
001-001-001 -----
lsn01 10 dstn01
001-001-001
001-001-002 1-001-2 ----- No dstn02
lsn02 10
001-001-002
001-001-003 s-1-001-3 ----- No dstn03
lsn03 10
001-001-003
001-001-004 ----- 02060 No dstn04
lsn04 10
001-001-004
001-070-001 ----- No tgtansi001
lsn01 10
001-001-001
lsn02 20
001-001-002
lsn03 30
001-001-003
lsn04 40
001-001-004
001-001-005 ----- s-02061 No dstn05
lsn05 10
001-001-005
.
.
.
010-*-* ----- No
dstnrtison

DPCI ALIASA ALIASN/N24 RTX CLLI
LSN RC APCI
2-010-0 ----- No dstn13
lsn13 10 2-010-0
2-010-1 002-010-001 ----- No dstn14
lsn14 10 2-010-1
2-010-2 ----- 04178 No dstn15
lsn15 10 2-010-2
2-010-3 ----- s-04179 No dstn16
lsn16 10 2-010-3
2-070-1 ----- No tgtitui001
lsn13 10 2-010-0
lsn14 20 2-010-1
lsn15 30 2-010-2
lsn16 40 2-010-3
2-010-4 ----- 002-010-004 No dstn17
lsn17 10 2-010-4
.
.

```



```

.
DPCI          ALIASI          ALIASN/N24    RTX    CLLI
              LSN
3-030-0      s-3-030-0      -----
              lsn29          No      dstn29
              lsn29          10     3-030-0
3-030-1      s-3-030-1      06385      No      dstn30
              lsn30          10     3-030-1
3-030-2      s-3-030-2      s-06386    No      dstn31
              lsn31          10     3-030-2
3-070-1      s-3-070-1      -----
              lsn29          10     3-030-0
              lsn30          20     3-030-1
              lsn31          30     3-030-2
3-030-3      s-3-030-3      003-030-003 No      dstn32
              lsn32          10     3-030-3
3-070-2      s-3-070-2      -----
              lsn32          10     3-030-3
              lsn33          20     3-030-4
              lsn34          30     3-030-5

DPCI          ALIASN          ALIASN        RTX    CLLI
              LSN
3-030-4      s-06388        06388        No      dstn33
              lsn33          10     3-030-4
3-030-5      06389         s-06389      No      dstn34
              lsn34          10     3-030-5

DPCN          ALIASA          ALIASI        RTX    CLLI
              LSN
06157        020-005-002   -----
08192        -----
              lsn41          10     dstn41
              lsn41          10     08192
08193        004-000-001   -----
              lsn42          10     dstn42
              lsn42          10     08193
08194        -----
              4-000-2      No      dstn43
              lsn43          10     08194
08195        -----
              s-4-000-3    No      dstn44
              lsn44          10     08195
08753        -----
              lsn41          10     tgtitun001
              lsn41          10     08192
              lsn42          20     08193
              lsn43          30     08194
              lsn44          30     08195

.
.
.

DPCN          ALIASI          ALIASI        RTX    CLLI
              LSN
08198        s-4-000-6      4-000-6      No      dstn47
              lsn47          10     08198
08199        4-000-7        s-4-000-7    No      dstn48
              lsn48          10     08199
DPCN          ALIASN          ALIASI        RTX    CLLI

```

```

                LSN          RC    APCN
12688          s-12688      ----- No    dstn57
                lsn57          10    12688
12689          s-12689      6-050-1 No    dstn58
                lsn58          10    12689
12690          s-12690      s-6-050-2 No    dstn59
                lsn59          10    12690

DPCN24        ALIASA        ALIASI        RTX    CLLI
                LSN          RC    APCN24
003-003-004   003-003-003   3-003-4      No
-----
006-005-001   -----      ----- No    dstn63
                lsn63          10
006-005-001
006-005-002   006-005-002   ----- No    dstn64
                lsn64          10
006-005-002
006-005-003   -----      6-005-3      No    dstn65
                lsn65          10
006-005-003
006-070-001   -----      ----- No    tgtitun24a
                lsn63          10
006-005-001
                lsn64          20
006-005-002
                lsn65          30
006-005-003
006-005-004   -----      s-6-005-4      No    dstn66
                lsn66          10
006-005-004
006-005-005   006-005-005   6-005-5      No    dstn67
                lsn67          10
006-005-005
006-070-002   -----      ----- No    tgtitun24b
                lsn66          10
006-005-004
                lsn67          20
006-005-005

;

```

This example displays point codes that have the private point code subtype prefix (p-):

```
rtrv-rte:pcst=p
```

```

eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-rte:pcst=p
Command entered at terminal #4.
Extended Processing Time may be Required

```

```

DPCA          ALIASI        ALIASN/N24    RTX    CLLI
                LSN          RC    APCA
p-001-001-001 -----      ----- No    dstn01p

```

p-001-001-002	1-011-2	-----	No	dstn02p
p-001-001-003	s-1-011-3	-----	No	dstn03p
p-001-001-004	-----	01060-aa	No	dstn04p
p-001-001-005	-----	s-01061-aa	No	dstn05p
p-001-001-006	-----	001-011-006	No	dstn06p
p-001-001-007	1-011-7	01063-aa	No	dstn07p
p-001-002-000	1-012-0	s-01064-aa	No	dstn08p
p-001-002-001	s-1-012-1	01065-aa	No	dstn09p
p-001-002-002	s-1-012-2	s-01066-aa	No	dstn10p
p-001-002-003	1-012-3	001-012-003	No	dstn11p
p-001-002-004	s-1-012-4	001-012-004	No	dstn12p

DPCI	ALIASA	ALIASN/N24 LSN	RTX RC	CLLI APCI
p-2-010-0	-----	-----	No	dstn13p
p-2-010-1	002-100-001	-----	No	dstn14p
p-2-010-2	-----	08178-aa	No	dstn15p
p-2-010-3	-----	s-08179-aa	No	dstn16p
p-2-010-4	-----	002-100-004	No	dstn17p
p-2-010-5	002-100-005	08181-aa	No	dstn18p
p-2-010-6	002-100-006	s-08182-aa	No	dstn19p
p-2-010-7	002-100-007	002-100-007	No	dstn20p

DPCI	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCI
p-3-030-0	s-3-031-0	-----	No	dstn29p
p-3-030-1	s-3-031-1	07385-aa	No	dstn30p
p-3-030-2	s-3-031-2	s-07386-aa	No	dstn31p
p-3-030-3	s-3-031-3	003-031-003	No	dstn32p

DPCI	ALIASN	ALIASN LSN	RTX RC	CLLI APCI
p-3-030-4	s-07388-aa	07388-aa	No	dstn33p
p-3-030-5	07389-aa	s-07389-aa	No	dstn34p

DPCN	ALIASA	ALIASI LSN	RTX RC	CLLI APCN
p-08192-aa	-----	-----	No	dstn41p
p-08193-aa	004-200-001	-----	No	dstn42p
p-08194-aa	-----	4-040-2	No	dstn43p
p-08195-aa	-----	s-4-040-3	No	dstn44p
p-08196-aa	004-200-004	4-040-4	No	dstn45p
p-08197-aa	004-200-005	s-4-040-5	No	dstn46p

DPCN	ALIASI	ALIASI LSN	RTX RC	CLLI APCN
p-08198-aa	s-4-040-6	4-040-6	No	dstn47p
p-08199-aa	4-040-7	s-4-040-7	No	dstn48p

DPCN	ALIASN	ALIASI LSN	RTX RC	CLLI APCN
p-12688-aa	s-13688-aa	-----	No	dstn57p
p-12689-aa	s-13689-aa	6-060-1	No	dstn58p
p-12690-aa	s-13690-aa	s-6-060-2	No	dstn59p

DPCN24	ALIASA	ALIASI LSN	RTX RC	CLLI APCN24
p-006-005-001	-----	-----	No	dstn63p
p-006-005-002	006-005-020	-----	No	dstn64p
p-006-005-003	-----	6-050-3	No	dstn65p
p-006-005-004	-----	s-6-050-4	No	dstn66p
p-006-005-005	006-005-050	6-050-5	No	dstn67p

;

This example displays point codes that have the spare point code subtype prefix (s-):

rtrv-rte:pcst=s

```
eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-rte:pcst=s
Command entered at terminal #4.
Extended Processing Time may be Required
```

DPCI	ALIASA	ALIASN/N24 LSN	RTX RC	CLLI APCI
s-4-002-0	010-001-001	s-08228-aa	No	

s-2-020-0	-----	-----	No	dstn21
		lsn21	10	s-2-020-0
s-2-020-1	002-020-001	-----	No	dstn22
		lsn22	10	s-2-020-1
s-2-020-2	-----	04258-aa	No	dstn23
		lsn23	10	s-2-020-2
s-2-020-3	-----	s-04259-aa	No	dstn24
		lsn24	10	s-2-020-3
s-2-070-3	-----	-----	No	tgtitui003
		lsn21	10	s-2-020-0
		lsn22	20	s-2-020-1
		lsn23	30	s-2-020-2
		lsn24	40	s-2-020-3
s-2-020-4	-----	002-020-004	No	dstn25
		lsn25	10	s-2-020-4
s-2-020-5	002-020-005	04261-aa	No	dstn26
		lsn26	10	s-2-020-5
s-2-020-6	002-020-006	s-04262-aa	No	dstn27
		lsn27	10	s-2-020-6
s-2-020-7	002-020-007	002-020-007	No	dstn28
		lsn28	10	s-2-020-7
s-2-070-4	-----	-----	No	tgtitui004
		lsn25	10	s-2-020-4
		lsn26	20	s-2-020-5
		lsn27	30	s-2-020-6
		lsn28	40	s-2-020-7
s-3-070-3	-----	-----	No	tgtitui007
		lsn35	10	s-3-040-2
		lsn36	20	s-3-040-3
		lsn37	30	s-3-040-4
s-3-070-4	-----	-----	No	tgtitui008

		lsn38	10	s-3-040-5
		lsn39	20	s-3-040-6
		lsn40	30	s-3-040-7
s-2-029-6	002-029-006	s-04269-aa	Yes	rtxrout002
		lsn26	5	s-2-020-5
DPCI	ALIASI	ALIASN/N24	RTX	CLLI
		LSN	RC	APCI
s-3-040-2	3-040-2	-----	No	dstn35
		lsn35	10	s-3-040-2
s-3-040-3	3-040-3	06467-aa	No	dstn36
		lsn36	10	s-3-040-3
s-3-040-4	3-040-4	s-06468-aa	No	dstn37
		lsn37	10	s-3-040-4
s-3-040-5	3-040-5	003-040-005	No	dstn38
		lsn38	10	s-3-040-5
DPCI	ALIASN	ALIASN	RTX	CLLI
		LSN	RC	APCI
s-3-040-6	s-06471-aa	06471-aa	No	dstn39
		lsn39	10	s-3-040-6
s-3-040-7	06472-aa	s-06472-aa	No	dstn40
		lsn40	10	s-3-040-7
DPCN	ALIASA	ALIASI	RTX	CLLI
		LSN	RC	APCN
s-08272-aa	-----	-----	No	dstn49
		lsn49	10	s-08272-aa
s-08273-aa	004-010-001	-----	No	dstn50
		lsn50	10	s-08273-aa
s-08274-aa	-----	4-010-2	No	dstn51
		lsn51	10	s-08274-aa
s-08275-aa	-----	s-4-010-3	No	dstn52
		lsn52	10	s-08275-aa
s-08755-aa	-----	-----	No	tgtitun003
		lsn49	10	s-08272-aa
		lsn50	20	s-08273-aa
		lsn51	30	s-08274-aa
		lsn52	30	s-08275-aa
s-08276-aa	004-010-004	4-010-4	No	dstn53
		lsn53	10	s-08276-aa
s-08277-aa	004-010-005	s-4-010-5	No	dstn54
		lsn54	10	s-08277-aa
s-08756-aa	-----	-----	No	tgtitun004
		lsn53	10	s-08276-aa
		lsn54	20	s-08277-aa
		lsn55	30	s-08278-aa
		lsn56	30	s-08279-aa
s-08758-aa	-----	-----	No	tgtitun006
		lsn60	10	s-12691-aa
		lsn61	20	s-12692-aa
		lsn62	30	s-12693-aa
s-08273-fr	-----	4-006-3	No	dstn50dupfr
DPCN	ALIASI	ALIASI	RTX	CLLI

```

                LSN          RC    APCN
s-08278-aa      s-4-010-6          4-010-6    No    dstn55
                lsn55          10    s-08278-aa
s-08279-aa      4-010-7          s-4-010-7    No    dstn56
                lsn56          10    s-08279-aa
s-08379-aa      s-4-058-7          4-058-7    Yes
rtxroute003
                lsn55          80    s-08278-aa

DPCN           ALIASN          ALIASI          RTX    CLLI
                LSN
s-12691-aa      12691-aa          -----          No    dstn60
                lsn60          10    s-12691-aa
s-12692-aa      12692-aa          6-050-4          No    dstn61
                lsn61          10    s-12692-aa
s-12693-aa      12693-aa          s-6-050-5          No    dstn62
                lsn62          10    s-12693-aa
s-08272-fr      08300-fr          -----          No
dstn49dupfr
s-08272-tk      08300-tk          4-006-7          No
dstn49dupTk
;

```

This example displays point codes that have the private and spare point code subtype prefix (ps-):

```
rtrv-rte:pcst=ps
```

```

eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-rte:pcst=ps
Command entered at terminal #4.
Extended Processing Time may be Required

```

```

DPCI           ALIASA          ALIASN/N24      RTX    CLLI
                LSN
ps-2-020-0      -----          -----          No    dstn21p
ps-2-020-1      002-200-001          -----          No    dstn22p
ps-2-020-2      -----          08258-aa          No    dstn23p
ps-2-020-3      -----          s-08259-aa          No    dstn24p
ps-2-020-4      -----          002-200-004          No    dstn25p
ps-2-020-5      -----          -----          No    dstn26p
ps-2-020-6      002-200-005          08261-aa          No    dstn27p
ps-2-020-7      002-200-007          002-200-007          No    dstn28p

DPCI           ALIASI          ALIASN/N24      RTX    CLLI
                LSN
ps-3-040-2      3-041-2          -----          No    dstn35p
ps-3-040-3      3-041-3          07467-aa          No    dstn36p
ps-3-040-4      3-041-4          s-07468-aa          No    dstn37p
ps-3-040-5      3-041-5          003-041-005          No    dstn38p

DPCI           ALIASN          ALIASN          RTX    CLLI
                LSN
ps-3-040-6      s-07471-aa          07471-aa          No    dstn39p

```

```

ps-3-040-7          07472-aa          s-07472-aa          No          dstn40p

      DPCN          ALIASA          ALIASI          RTX          CLLI
                        LSN
ps-08272-aa          -----          -----          No          dstn49p
ps-08273-aa          004-200-010          -----          No          dstn50p
ps-08274-aa          -----          4-050-2          No          dstn51p
ps-08275-aa          -----          s-4-050-3          No          dstn52p
ps-08276-aa          004-200-040          4-050-4          No          dstn53p
ps-08277-aa          004-200-050          s-4-050-5          No          dstn54p

```

```

      DPCN          ALIASI          ALIASI          RTX          CLLI
                        LSN
ps-08278-aa          s-4-050-6          4-050-6          No          dstn55p
ps-08279-aa          4-050-7          s-4-050-7          No          dstn56p

```

```

      DPCN          ALIASN          ALIASI          RTX          CLLI
                        LSN
ps-12691-aa          13691-aa          -----          No          dstn60p
ps-12692-aa          13692-aa          6-060-4          No          dstn61p
ps-12693-aa          13693-aa          s-6-060-5          No          dstn62p

```

;

rtrv-rte:dpc=40-1-***

```

eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-rte:dpc=40-1-***
Command entered at terminal #4.
Extended Processing Time may be Required

```

```

      DPCA          ALIASI          ALIASN/N24          RTX          CLLI
                        LSN
040-001-*          -----          -----          No          myncaibeno
                        lsn01          10          001-001-001
040-001-001          -----          -----          No          noncluster1
                        lsn01          10          001-001-001
040-001-002          -----          -----          No          noncluster2
                        lsn01          10          001-001-001

```

;

rtrv-rte:dpc=40-***-*:lsn=lsn01

```

eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-rte:dpc=40-***-*:lsn=lsn01
Command entered at terminal #4.
Extended Processing Time may be Required

```

```

LSN          DPCA          RC
lsn01          040-001-*          10
                040-001-001          10

```

040-001-002 10

;

rtrv-rte:dpcn=8199-*

eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0

rtrv-rte:dpcn=8199-*

Command entered at terminal #4.

Extended Processing Time may be Required

DPCN	ALIASA	ALIASI LSN	RTX RC	CLLI APCN
08199-fr dstn48dupfr	-----	s-4-006-1	No	
08199-tk dstn48dupTk	-----	4-006-2	No	
DPCN	ALIASI	ALIASI LSN	RTX RC	CLLI APCN
08199-aa	4-000-7	s-4-000-7 lsn48	No 10	dstn48 08199-aa

;

rtrv-rte:dpcn=8199-*:lsn=lsn48

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

LSN	DPCN	RC
lsn48	08199-aa	10

;

rtrv-rte:dpcn=p-*-aa

eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0

rtrv-rte:dpcn=p-*-aa

Command entered at terminal #4.

Extended Processing Time may be Required

DPCN	ALIASA	ALIASI LSN	RTX RC	CLLI APCN
p-08192-aa	-----	-----	No	dstn41p
p-08193-aa	004-200-001	-----	No	dstn42p
p-08194-aa	-----	4-040-2	No	dstn43p
p-08195-aa	-----	s-4-040-3	No	dstn44p
p-08196-aa	004-200-004	4-040-4	No	dstn45p
p-08197-aa	004-200-005	s-4-040-5	No	dstn46p

DPCN	ALIASI	ALIASI LSN	RTX RC	CLLI APCN
p-08198-aa	s-4-040-6	4-040-6	No	dstn47p
p-08199-aa	4-040-7	s-4-040-7	No	dstn48p

DPCN	ALIASN	ALIASI LSN	RTX RC	CLLI APCN
p-12688-aa	s-13688-aa	-----	No	dstn57p
p-12689-aa	s-13689-aa	6-060-1	No	dstn58p
p-12690-aa	s-13690-aa	s-6-060-2	No	dstn59p

;

rtrv-rte:dpcn=s-9000-*

```
eagle10115 10-10-09 10:00:37 EST EAGLE 43.0.0
rtrv-rte:dpcn=s-9000-*
Command entered at terminal #4.
Extended Processing Time may be Required
```

DPCN	ALIASA	ALIASI LSN	RTX RC	CLLI APCN
09000-fr	-----	s-4-007-1	No	dstn9xfr
09000-tk	-----	4-007-2	No	dstn9xtk

DPCN	ALIASI	ALIASI LSN	RTX RC	CLLI APCN
09000-aa	4-001-7	s-4-000-7 lsn9x	No 10	dstn9x 09000-aa

;

This example displays output when the *full* mode is requested. This example displays abbreviated output.

rtrv-rte:mode=full

```
eagle10115 10-10-29 10:00:37 EST EAGLE 43.0.0
rtrv-rte:mode=full
Command entered at terminal #4.
Extended Processing Time may be Required
```

DPCA	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCA
001-001-000	-----	----- e2e1	No 10	stp1 001-001-000
003-001-000	-----	----- e2e3	No 10	mstp 003-001-000
004-001-000	-----	----- e2e4	No 10	stp4 004-001-000
007-001-000	-----	----- e2e7	No 10	stp7 007-001-000

002-101-001	-----	-----	No	ssp201
		e2m1s1	10	
002-101-001				
		e2e3	20	
003-001-000				
.				
.				
200-200-*	-----	-----	No	cluster2
005-006-001	-----	005-006-001	No	

001-001-001	-----	-----	No	dstn01
		lsn01	10	
001-001-001				
p-001-001-001	-----	-----	No	dstn01p
001-001-002	1-001-2	-----	No	dstn02
		lsn02	10	
001-001-002				
p-001-001-002	1-011-2	-----	No	dstn02p
001-001-003	s-1-001-3	-----	No	dstn03
		lsn03	10	
001-001-003				
p-001-001-003	s-1-011-3	-----	No	dstn03p
001-001-004	-----	02060-aa	No	dstn04
		lsn04	10	
001-001-004				
p-001-001-004	-----	01060-aa	No	dstn04p
001-070-001	-----	-----	No	tgtansi001
		lsn01	10	
001-001-001				
		lsn02	20	
001-001-002				
		lsn03	30	
001-001-003				
		lsn04	40	
001-001-004				
001-001-005	-----	s-02061-aa	No	dstn05
		lsn05	10	
001-001-005				
p-001-001-005	-----	s-01061-aa	No	dstn05p
001-001-006	-----	001-001-006	No	dstn06
		lsn06	10	
001-001-006				
.				
.				
.				
200-002-001	-----	-----	Yes	
rtxroute001				
		lsn12	10	
001-002-004				
	OPCA			
	001-001-001	lsn11	15	
001-002-003				
	001-002-001	lsn10	99	
001-002-002				

```

CIC - ECIC
0      9      lsn10      1      001-002-002
10     16383  lsn10      2      001-002-002
SI
3      lsn12      1      001-002-004
9      lsn12      21     001-002-004
11     lsn12      9      001-002-004

```

.
.

.

```

DPCI      ALIASA      ALIASN/N24      RTX      CLLI
          LSN      RC      APCI
s-4-002-0      010-001-001      s-08228-aa      No      -----
  2-010-0      -----      -----      No      dstn13
          lsn13      10      2-010-0
p-2-010-0      -----      -----      No      dstn13p
  2-010-1      002-010-001      -----      No      dstn14
          lsn14      10      2-010-1
p-2-010-1      002-100-001      -----      No      dstn14p
  2-010-2      -----      04178-aa      No      dstn15
          lsn15      10      2-010-2
p-2-010-2      -----      08178-aa      No      dstn15p
  2-010-3      -----      s-04179-aa      No      dstn16
          lsn16      10      2-010-3
p-2-010-3      -----      s-08179-aa      No      dstn16p
  2-070-1      -----      -----      No      tgtitui001
          lsn13      10      2-010-0
          lsn14      20      2-010-1
          lsn15      30      2-010-2
          lsn16      40      2-010-3
  2-010-4      -----      002-010-004      No      dstn17
          lsn17      10      2-010-4

```

.
.

.

```

s-2-020-0      -----      -----      No      dstn21
          lsn21      10      s-2-020-0
ps-2-020-0      -----      -----      No      dstn21p
s-2-020-1      002-020-001      -----      No      dstn22
          lsn22      10      s-2-020-1
ps-2-020-1      002-200-001      -----      No      dstn22p
s-2-020-2      -----      04258-aa      No      dstn23
          lsn23      10      s-2-020-2
ps-2-020-2      -----      08258-aa      No      dstn23p
s-2-020-3      -----      s-04259-aa      No      dstn24
          lsn24      10      s-2-020-3
ps-2-020-3      -----      s-08259-aa      No      dstn24p
s-2-070-3      -----      -----      No      tgtitui003
          lsn21      10      s-2-020-0
          lsn22      20      s-2-020-1
          lsn23      30      s-2-020-2
          lsn24      40      s-2-020-3

```

.
.

s-2-029-6 rtrxroute002	002-029-006	s-04269-aa	Yes	
		lsn26	5	s-2-020-5
	OPCI			
	3-030-0	lsn27	28	s-2-020-6
	CIC - ECIC			
	34 44	lsn27	6	s-2-020-6
	45 55	lsn27	16	s-2-020-6
	SI			
	3	lsn27	7	s-2-020-6
	15	lsn27	14	s-2-020-6
DPCI	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCI
3-030-0	s-3-030-0	----- lsn29	No 10	dstn29 3-030-0
p-3-030-0	s-3-031-0	-----	No	dstn29p
3-030-1	s-3-030-1	06385-aa lsn30	No 10	dstn30 3-030-1
p-3-030-1	s-3-031-1	07385-aa	No	dstn30p
3-030-2	s-3-030-2	s-06386-aa lsn31	No 10	dstn31 3-030-2
p-3-030-2	s-3-031-2	s-07386-aa	No	dstn31p
3-070-1	s-3-070-1	----- lsn29	No 10	tgtitui005 3-030-0
		lsn30	20	3-030-1
		lsn31	30	3-030-2
3-030-3	s-3-030-3	003-030-003 lsn32	No 10	dstn32 3-030-3
p-3-030-3	s-3-031-3	003-031-003	No	dstn32p
3-070-2	s-3-070-2	----- lsn32	No 10	tgtitui006 3-030-3
		lsn33	20	3-030-4
		lsn34	30	3-030-5
s-3-040-2	3-040-2	----- lsn35	No 10	dstn35 s-3-040-2
ps-3-040-2	3-041-2	-----	No	dstn35p
s-3-040-3	3-040-3	06467-aa lsn36	No 10	dstn36 s-3-040-3
ps-3-040-3	3-041-3	07467-aa	No	dstn36p
s-3-040-4	3-040-4	s-06468-aa lsn37	No 10	dstn37 s-3-040-4
ps-3-040-4	3-041-4	s-07468-aa	No	dstn37p
s-3-040-5	3-040-5	003-040-005 lsn38	No 10	dstn38 s-3-040-5
ps-3-040-5	3-041-5	003-041-005	No	dstn38p
DPCI	ALIASN	ALIASN LSN	RTX RC	CLLI APCI
3-030-4	s-06388-aa	06388-aa lsn33	No 10	dstn33 3-030-4
p-3-030-4	s-07388-aa	07388-aa	No	dstn33p
3-030-5	06389-aa	s-06389-aa lsn34	No 10	dstn34 3-030-5

p-3-030-5	07389-aa	s-07389-aa	No	dstn34p
s-3-040-6	s-06471-aa	06471-aa	No	dstn39
		lsn39	10	s-3-040-6
ps-3-040-6	s-07471-aa	07471-aa	No	dstn39p
s-3-040-7	06472-aa	s-06472-aa	No	dstn40
		lsn40	10	s-3-040-7
ps-3-040-7	07472-aa	s-07472-aa	No	dstn40p
DPCN	ALIASA	ALIASI	RTX	CLLI
		LSN	RC	APCN
06157-aa	020-005-002	-----	No	-----
08192-aa	-----	-----	No	dstn41
		lsn41	10	08192-aa
p-08192-aa	-----	-----	No	dstn41p
08193-aa	004-000-001	-----	No	dstn42
		lsn42	10	08193-aa
p-08193-aa	004-200-001	-----	No	dstn42p
08194-aa	-----	4-000-2	No	dstn43
		lsn43	10	08194-aa
p-08194-aa	-----	4-040-2	No	dstn43p
08195-aa	-----	s-4-000-3	No	dstn44
		lsn44	10	08195-aa
p-08195-aa	-----	s-4-040-3	No	dstn44p
08753-aa	-----	-----	No	tgtitun001
		lsn41	10	08192-aa
		lsn42	20	08193-aa
		lsn43	30	08194-aa
		lsn44	30	08195-aa
08196-aa	004-000-004	4-000-4	No	dstn45
		lsn45	10	08196-aa
p-08196-aa	004-200-004	4-040-4	No	dstn45p
08197-aa	004-000-005	s-4-000-5	No	dstn46
		lsn46	10	08197-aa
p-08197-aa	004-200-005	s-4-040-5	No	dstn46p
08754-aa	-----	-----	No	tgtitun002
		lsn45	10	08196-aa
		lsn46	20	08197-aa
		lsn47	30	08198-aa
		lsn48	30	08199-aa
s-08272-aa	-----	-----	No	dstn49
		lsn49	10	s-08272-aa
ps-08272-aa	-----	-----	No	dstn49p
s-08273-aa	004-010-001	-----	No	dstn50
		lsn50	10	s-08273-aa
ps-08273-aa	004-200-010	-----	No	dstn50p
s-08274-aa	-----	4-010-2	No	dstn51
		lsn51	10	s-08274-aa
ps-08274-aa	-----	4-050-2	No	dstn51p
s-08275-aa	-----	s-4-010-3	No	dstn52
		lsn52	10	s-08275-aa
ps-08275-aa	-----	s-4-050-3	No	dstn52p
s-08755-aa	-----	-----	No	tgtitun003
		lsn49	10	s-08272-aa
		lsn50	20	s-08273-aa
		lsn51	30	s-08274-aa

```

lsn52          30 s-08275-aa
.
.
.
DPCN          ALIASI          ALIASI          RTX  CLI
              LSN              RC              APCN
08198-aa      s-4-000-6          4-000-6          No  dstn47
              lsn47              10              08198-aa
p-08198-aa    s-4-040-6          4-040-6          No  dstn47p
08199-aa      4-000-7          s-4-000-7          No  dstn48
              lsn48              10              08199-aa
p-08199-aa    4-040-7          s-4-040-7          No  dstn48p
s-08278-aa    s-4-010-6          4-010-6          No  dstn55
              lsn55              10  s-08278-aa
ps-08278-aa   s-4-050-6          4-050-6          No  dstn55p
s-08279-aa    4-010-7          s-4-010-7          No  dstn56
              lsn56              10  s-08279-aa
ps-08279-aa   4-050-7          s-4-050-7          No  dstn56p
s-08379-aa    s-4-058-7          4-058-7          Yes
rtxroute003
              lsn55          80  s-08278-aa
              OPCN
              s-08278-aa      lsn62          8  s-12693-aa
              CIC - ECIC
              99  100          lsn62          9  s-12693-aa
              999  1989        lsn62          99 s-12693-aa
              SI
              4              lsn56          29 s-08279-aa
              14             lsn56          44 s-08279-aa
08198-fr      s-4-005-7          4-005-7          No
dstn47dupfr
08198-tk      4-006-0          s-4-006-0          No
dstn47dupTk
DPCN          ALIASN          ALIASI          RTX  CLI
              LSN              RC              APCN
12688-aa      s-12688-aa        -----          No  dstn57
              lsn57              10              12688-aa
p-12688-aa    s-13688-aa        -----          No  dstn57p
.
.
.
DPCN24        ALIASA          ALIASI          RTX  CLI
              LSN              RC              APCN24
003-003-004   003-003-003      3-003-4          No
-----
006-005-001   -----          -----          No  dstn63
              lsn63              10
006-005-001
p-006-005-001 -----          -----          No  dstn63p
.
.
.
;
```

This example contains a route with 16-bit ITU-N point codes:

```
rtrv-rte:lsn=lsn66

tekelecstp 10-10-09 10:00:37 EST EAGLE 45.1.0
rtrv-rte:lsn=lsn66
Command entered at terminal #4.
Extended Processing Time may be Required

LSN          DPCN16      RC
lsn66        006-005-004 10
              006-004-002 10

;
```

Legend

- **DPC, DPCA, DPCI, DPCN, DPCN24, DPCN16**—Destination point code to be reached through this route
- **ALIAS, ALIASA, ALIASI, ALIASN/N24, ALIASN16**—Alias associated with the route
- **CLLI**—CLLI associated with the route
- **LSN**—Name of the linkset assigned to this route
- **RC**—Relative cost (priority) assigned to the route
- **APC, APCA, APCI, APCN, APCN24, APCN16**—Point code of the STP or SSP that is directly adjacent to the linkset. The point code may or may not be the same as the destination point code assigned to this route.

Related Topics

- [chg-dstn](#)
- [chg-rte](#)
- [dlt-dstn](#)
- [dlt-rte](#)
- [ent-dstn](#)
- [ent-rte](#)
- [rept-stat-dstn](#)
- [rept-stat-rte](#)
- [rtrv-dstn](#)

4.1.552 rtrv-rtx

Use this command to retrieve one or more exception route entries. Because all parameters are optional, the retrieve examines the entire Route table to find all entries that match the specified parameters. Entries with CIC-ECIC range values that fall in the range specified by the `cic` and `ecic` parameters are displayed.

Parameters

cic (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the `ecic` parameter as exception routing criteria for the specified exception route.

Range:

0 - 16383

class (optional)

Exception routing class. This parameter displays all exception route sets provisioned for the specified class.

Range:

opc

ilsn

cic

si

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

dpca

Range:

p-, 000-255, *, **, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk values *, **, and *** are not valid for the *ni* subfield.

If ** or *** is specified for the *nc* subfield, either *, **, or *** must be specified for the *ncm* subfield.

When `chg-sid:pctype=ansi` is specified, *ni=000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc=000* is not valid if *ni=001-005*.

When `chg-sid:pctype=ansi` is specified, *nc=000* is valid if *ni=006-255*.

When `chg-sid:pctype=ansi` is specified, *ni-*-** is valid if *ni= 006-255*.

The point code 000-000-000 is not a valid point code.

dpci (optional)

Destination Point Code. ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps
zone—0-7
area—000-255
id—0-7

The point code 0-000-0 is not a valid point code.

dpcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmt1` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps*, 0-16383, *aa-zz*, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

An asterisk (*) can be specified for the node (*nnnnn* or every member of a flexible point code) or for the group code (*gc*) only when group codes are present in the point codes.

An asterisk (*) can be specified either for the node or for the group code, but not both.

prefix—s-, p-, ps-
nnnnn—0-16383, *
gc—aa-zz, *

m1-m2-m3-m4—0-14 for each member; values must sum to 14; or *-*-*-* when the point code includes a group code.

dpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p
msa—000-255
ssa—000-255
sp—000-255

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

ecic (optional)

Ending Circuit Identification Code. This parameter, together with the `cic` parameter, defines the CIC range that is used as exception routing criteria for the specified exception route.

Range:

0 - 16383

ilsn (optional)

Incoming Link Set Name. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters.

lsn (optional)

Link Set Name. The linkset associated with the specified exception route.

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters.

opc (optional)

ANSI origination point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range:

*p-, 000-255, *, **, ****

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk values ***, ****, and ***** are not valid for the *ni* subfield.

If **** or ***** is specified for the *nc* subfield, either ***, ****, or ***** must be specified for the *ncm* subfield.

When `chg-sid:pctype=ansi` is specified, *ni=000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc=000* is not valid if *ni=001-005*.

When `chg-sid:pctype=ansi` is specified, *nc=000* is valid if *ni=006-255*.

When `chg-sid:pctype=ansi` is specified, *ni-*.** is valid if *ni= 006-255*.

The point code *000-000-000* is not a valid point code.

opci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-, *p*-, *ps*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

opc_n (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p*-, *ps*, 0-16383, *aa-zz*, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

An asterisk (*) can be specified for the node (*nnnnn* or every member of a flexible point code) or for the group code (*gc*) only when group codes are present in the point codes.

An asterisk (*) can be specified either for the node or for the group code, but not both.

prefix—*s*-, *p*-, *ps*-

nnnnn—0-16383, *

gc—*aa-zz*, *

m1-m2-m3-m4—0-14 for each member; values must sum to 14; or **-*-** when the point code includes a group code.

opc_n24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—000-255

ssa—000-255

sp—000-255

opc_n16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---*p*

un---000---127

sna---000---15

mna---000---31

si (optional)

Service Indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range:

3 - 15

Example

```
rtrv-rtx:dpca=1-1-1
```

```
rtrv-rtx:opca=6-**-*
```

```
rtrv-rtx:ilsn=lset4
```

```
rtrv-rtx:si=5
```

```
rtrv-rtx:cic=0:ecic=16383
```

```
rtrv-rtx:dpcn16=121-10-25
```

Dependencies

Only one of the `opc`, `ilsn`, `cic`, `si`, or `class` parameters can be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `ecic` parameter is specified, the `cic` parameter must also be specified.

4580 E4580 Cmd Rej: CIC must be specified if ECIC is specified

The `ecic` parameter value cannot be less than the `cic` parameter value.

4404 E4404 Cmd Rej: End value must be greater than or equal to a starting value

The Origin-Based MTP Routing feature must be enabled and turned on before this command can be entered.

4584 E4584 Cmd Rej: MTP Origin Based Routing Feature must be ON

The linkset name, as defined by the `ilsn` or `lsn` parameter, must exist.

2346 E2346 Cmd Rej: Linkset not defined

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The Route table is corrupt or cannot be found.

2648 E2648 Cmd Rej: Failed reading the route table

The Route Exception table is corrupt or cannot be found.

4379 E4379 Cmd Rej: Failed to access Route Exception Table

The value specified for the destination point code must be a full point code and not a cluster or network point code.

2859 E2859 Cmd Rej: Destination address must be a full point code

Notes

** can be used in the network cluster member (*ncm*) subfield of *dpc/dpca* and *opc/opca* parameters to retrieve all point codes residing in (members of) a given network cluster (*ni-nc*).

** can be used in the network cluster (*nc*) subfield of *dpc/dpca* and *opc/opca* parameters to retrieve all point codes residing in (members of) a given network (*ni*).

*** can be used in the network cluster member (*ncm*) subfield of *dpc/dpca/opc/opca* parameters to retrieve all point codes residing in (members of) a given network cluster (*ni-nc*), and the network cluster address (if any).

*** can be used in the network cluster (*nc*) subfield of *dpc/dpca* and *opc/opca* parameters to retrieve all point codes residing in (members of) a given network (*ni*), and the network address (if any).

* is allowed only for retrieves (for example, `rtrv-rtx:dpcn=-aa` or `rtrv-rtx:opc=-xy`) on ITU-N DPCs and ITU-N OPCs if the ITUDUPPC feature is on. ** and *** are not allowed for ITU-N DPCs and OPCs (for example, `dpcn=-xy` is rejected). The node and group code cannot both be * (`dpcn=-*` is rejected).

Output

This example retrieves all provisioned exception routes:

```
rtrv-rtx
```

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCA	RTX-CRITERIA	LSN	RC	APC
200-002-001	OPCA			
	001-001-001	lsn11	15	001-002-003
	001-002-001	lsn10	99	001-002-002
	CIC - ECIC			
	0 9	lsn10	1	001-002-002
	10 16383	lsn10	2	001-002-002
	SI			
	3	lsn12	1	001-002-004
	9	lsn12	21	001-002-004
	11	lsn12	9	001-002-004
DPCI	RTX-CRITERIA	LSN	RC	APC
s-2-029-6	OPCI			
	3-030-0	lsn27	28	s-2-020-6
	CIC - ECIC			

	34	44	lsn27	6	s-2-020-6
	45	55	lsn27	16	s-2-020-6
	SI				
	3		lsn27	7	s-2-020-6
	15		lsn27	14	s-2-020-6
DPCN	RTX-CRITERIA		LSN	RC	APC
s-08379-aa	OPCN				
	s-08278-aa		lsn62	8	s-12693-aa
	CIC - ECIC				
	99	100	lsn62	9	s-12693-aa
	999	1989	lsn62	99	s-12693-aa
	SI				
	4		lsn56	29	s-08279-aa
	14		lsn56	44	s-08279-aa
DESTINATION ENTRIES ALLOCATED:			2000		
FULL DPC(s) :			188		
EXCEPTION DPC(s) :			17		
NETWORK DPC(s) :			2		
CLUSTER DPC(s) :			4		
TOTAL DPC(s) :			211		
CAPACITY (% FULL) :			11%		
ALIASES ALLOCATED:			12000		
ALIASES USED:			216		
CAPACITY (% FULL) :			2%		
X-LIST ENTRIES ALLOCATED:			500		

;

This example retrieves all exception routes provisioned for a specific DPC:

```
rtrv-rtx:dpcn=s-08379-aa
```

eagle10115	08-12-09	10:00:37	EST	EAGLE	40.1.0
DPCN	RTX-CRITERIA		LSN	RC	APC
s-08379-aa	OPCN				
	s-08278-aa		lsn62	8	s-12693-aa
	CIC - ECIC				
	99	100	lsn62	9	s-12693-aa
	999	1989	lsn62	99	s-12693-aa
	SI				
	4		lsn56	29	s-08279-aa
	14		lsn56	44	s-08279-aa
DESTINATION ENTRIES ALLOCATED:			2000		
FULL DPC(s) :			188		
EXCEPTION DPC(s) :			17		

```

NETWORK DPC(s) :                2
CLUSTER DPC(s) :                4
TOTAL DPC(s) :                  211
CAPACITY (% FULL) :             11%
ALIASES ALLOCATED:              12000
ALIASES USED:                   216
CAPACITY (% FULL) :             2%
X-LIST ENTRIES ALLOCATED:      500

```

;

This example retrieves all provisioned exception routes for a specific exception criteria:

```
rtrv-rtx:dpcn=s-08379-aa:opcn=s-08278-aa
```

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCN	RTX-CRITERIA	LSN	RC	APC
s-08379-aa	OPCN s-08278-aa	lsn62	8	s-12693-aa

```

DESTINATION ENTRIES ALLOCATED:  2000
FULL DPC(s) :                   188
EXCEPTION DPC(s) :              17
NETWORK DPC(s) :                2
CLUSTER DPC(s) :                4
TOTAL DPC(s) :                  211
CAPACITY (% FULL) :             11%
ALIASES ALLOCATED:              12000
ALIASES USED:                   216
CAPACITY (% FULL) :             2%
X-LIST ENTRIES ALLOCATED:      500

```

;

This example retrieves all provisioned exception routes for a specific exception criteria:

```
rtrv-rtx:dpci=s-2-029-6:cic=45:ecic=55
```

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCI	RTX-CRITERIA	LSN	RC	APC
s-2-029-6	CIC - ECIC 45 55	lsn27	16	s-2-020-6

```

DESTINATION ENTRIES ALLOCATED:  2000
FULL DPC(s) :                   188
EXCEPTION DPC(s) :              17
NETWORK DPC(s) :                2
CLUSTER DPC(s) :                4

```

```

TOTAL DPC(s) :                211
CAPACITY (% FULL) :           11%
ALIASES ALLOCATED:            12000
ALIASES USED:                  216
CAPACITY (% FULL) :           2%
X-LIST ENTRIES ALLOCATED:     500

```

;

This example retrieves exception routes for a specific class:

```
rtrv-rtx:opc=1-1-1
```

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCA	RTX-CRITERIA	LSN	RC	APC
200-002-001	OPCA			
	001-001-001	lsn11	15	
001-002-003				

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s) :                  188
EXCEPTION DPC(s) :             17
NETWORK DPC(s) :                2
CLUSTER DPC(s) :               4
TOTAL DPC(s) :                  211
CAPACITY (% FULL) :            11%
ALIASES ALLOCATED:            12000
ALIASES USED:                  216
CAPACITY (% FULL) :           2%
X-LIST ENTRIES ALLOCATED:     500

```

;

This example retrieves exception routes for a specific linkset:

```
rtrv-rtx:lsn=lsn27
```

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCI	RTX-CRITERIA	LSN	RC	APC
s-2-029-6	OPCI			
	3-030-0	lsn27	28	s-2-020-6
	CIC - ECIC			
	34 44	lsn27	6	s-2-020-6
	45 55	lsn27	16	s-2-020-6
	SI			
	3	lsn27	7	s-2-020-6
	15	lsn27	14	s-2-020-6


```

DESTINATION ENTRIES ALLOCATED: 2000
  FULL DPC(s) : 188
  EXCEPTION DPC(s) : 17
  NETWORK DPC(s) : 2
  CLUSTER DPC(s) : 4
  TOTAL DPC(s) : 211
  CAPACITY (% FULL) : 11%
ALIASES ALLOCATED: 12000
  ALIASES USED: 216
  CAPACITY (% FULL) : 2%
X-LIST ENTRIES ALLOCATED: 500

```

;

This example retrieves exception routes for the network cluster members of an OPC:

```
rtrv-rtx:opc=40-***-*
```

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCA	RTX-CRITERIA	LSN	RC	APC
002-002-003	OPCA			
	040-001-001	bd1	10	002-002-002
	040-001-002	bd1	15	002-002-002
	040-001-*	bd1	5	002-002-002

```

DESTINATION ENTRIES ALLOCATED: 2000
  FULL DPC(s) : 190
  EXCEPTION DPC(s) : 21
  NETWORK DPC(s) : 2
  CLUSTER DPC(s) : 4
  TOTAL DPC(s) : 217
  CAPACITY (% FULL) : 11%
ALIASES ALLOCATED: 12000
  ALIASES USED: 216
  CAPACITY (% FULL) : 2%
X-LIST ENTRIES ALLOCATED: 500

```

;

This example retrieves exception routes for all cluster member plus itself of an OPC:

```
rtrv-rtx:opc=40-****-*
```

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCA	RTX-CRITERIA	LSN	RC	APC
002-002-003	OPCA			
	040-001-001	bd1	10	002-002-002
	040-001-002	bd1	15	002-002-002

```

002-002-002          040-*-*          bd1          0
002-002-002          040-001-*       bd1          5

```

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s) :                  190
EXCEPTION DPC(s) :             21
NETWORK DPC(s) :                2
CLUSTER DPC(s) :               4
TOTAL DPC(s) :                 217
CAPACITY (% FULL) :            11%
ALIASES ALLOCATED:             12000
ALIASES USED:                  216
CAPACITY (% FULL) :            2%
X-LIST ENTRIES ALLOCATED:      500

```

```
;
```

This example retrieves route exceptions by criteria class:

```
rtrv-rtx:class=cic
```

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

```

DPCA          RTX-CRITERIA  LSN          RC    APC
200-002-001   CIC - ECIC
0      9      lsn10          1
001-002-002
10     16383  lsn10          2
001-002-002

DPCI          RTX-CRITERIA  LSN          RC    APC
s-2-029-6    CIC - ECIC
34     44     lsn27          6    s-2-020-6
45     55     lsn27          16   s-2-020-6

DPCN          RTX-CRITERIA  LSN          RC    APC
s-08379-aa   CIC - ECIC
99     100    lsn62          9    s-12693-aa
999    1989    lsn62          99   s-12693-aa

```

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s) :                  188
EXCEPTION DPC(s) :             17
NETWORK DPC(s) :                2
CLUSTER DPC(s) :               4
TOTAL DPC(s) :                 211
CAPACITY (% FULL) :            11%
ALIASES ALLOCATED:             12000
ALIASES USED:                  216
CAPACITY (% FULL) :            2%

```

```

X-LIST ENTRIES ALLOCATED:          500

;

This example retrieves exception routes for a specific class:

rtrv-rtx:opc16=121-10-15

eagle10115 08-12-13 10:00:37 EST  EAGLE 45.1.0

DPCN16          RTX-CRITERIA      LSN          RC      APC
200-002-001     OPCN16                          15      001-002-003
                121-010-015      lsn11

DESTINATION ENTRIES ALLOCATED:    2000
FULL DPC(s) :                      188
EXCEPTION DPC(s) :                  17
NETWORK DPC(s) :                     2
CLUSTER DPC(s) :                     4
TOTAL DPC(s) :                       211
CAPACITY (% FULL) :                  11%
ALIASES ALLOCATED:                  12000
ALIASES USED:                        216
CAPACITY (% FULL) :                   2%
X-LIST ENTRIES ALLOCATED:          500

;

```

Related Topics

- [chg-rtx](#)
- [dlt-rtx](#)
- [ent-rtx](#)
- [rept-stat-rtx](#)

4.1.553 rtrv-sccp-msg

Use this command to display the configured SCCP message parameter values.

Parameters**msgn (optional)**

Message number. The number of the SCCP message.

Range:

1 - 10

Example

```
rtrv-sccp-msg:msgn=1
```

Dependencies

The TSTMSG table is corrupt or could not be found.

4819 E4819 Cmd Rej: Failure reading TSTMSG Table

The GTT feature must be turned on before this command can be entered.

2584 E2584 Cmd Rej: GTT feature must be ON

Notes

None

Output

```
rtrv-sccp-msg:msgn=1
```

```
tekelecstp 16-10-03 14:18:10 MST EAGLE 46.5.0.0.0
MSG = 1
ACTIVE = YES
OPC = 010-010-010
DPC = 010-010-001
SELID = 6

CDPA_GTI = 2
CDPA_TT = 0
CDPA_SSN = 6
CDPC = 010-010-010
CDPA_NP = 1 ( e164 )
CDPA_NAI = 1 ( sub )
CDPA_GTA = 1234567890

CGPA_GTI = 2
CGPA_TT = 0
CGPA_SSN = 8
CGPC = 020-020-020
CGPA_NP = 1 ( e164 )
CGPA_NAI = 1 ( sub )
CGPA_GTA = 1234567890

LSN = 1s111
EAGLEGEN = NO

TCAP_FAMILY = 67

TCAP_FAMILY2 = 44

TCAP_FAMILY3 = 32

TCAP_OPCODE = 32

TCAP_OPCODE2 = 35

TCAP_OPCODE3 = 100
```

```
TCAP_OPCODETAG = LOCAL
TCAP_OPCODETAG2 = GLOBAL
TCAP_OPCODETAG3 = GLOBAL
TCAP_PACKAGE = bgn (0x62)
TCAP_ACN = 6-7-8-9-3
MAP Parameters Present in Test Message:
  --Imsi
  --Smrpoa
  --Smrpda
IMSI DGTS = 12345
MSISDN NP = 1 ( e164 )
MSISDN DGTS = 1234567890
VLR NP = 15 ( unknown )
VLR DGTS = 1234567890
SMRPOA NP = 1 ( e164 )
SMRPOA DGTS = 1234567890
SMRPDA NP = 15 ( unknown )
SMRPDA DGTS = 987654321
;
```

Related Topics

- [chg-sccp-msg](#)
- [tst-msg](#)

4.1.554 rtrv-sccp-serv

Use this command to display the SCCP Service application relationship information maintained by the EAGLE.

Parameters

serv (optional)

Name of the service to be retrieved.

Range:

gflex

G-Flex (GSM Flexible Numbering)

gport

G-Port (GSM Mobile Number Portability)

mn Mobile Number Portability

Dependencies

The A-Port or IGM feature must be enabled before the `serv=mn` parameter can be specified.

The G-Flex feature must be enabled before the `serv=gflex` parameter can be specified.

The G-Port feature must be enabled before the `serv=gport` parameter can be specified.

4594 E4594 Cmd Rej: Feature associated with SERV must be ON or enabled

Failed reading the MRN table.

2999 E2999 Cmd Rej: Failed reading the MRN table

Failed reading the SCCP Service table.

4585 E4585 Cmd Rej: Failed reading SCCP service table

Notes

The `rtrv-sccp-serv` command is cancelable using the **F9** key or the `canc-cmd` command. Please refer to [8] for details and an example of a command abort in KSR mode. The `canc-cmd` command and F9 are not applicable for pure SEAS commands.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Point codes are grouped by service in the output.

Output

The number of entries reported in use for the SCCPSRV table includes an entry for each point code network type. This entry is not displayed with the point code entries in the output. For example, if 3 ANSI point codes are used, the reported number of ANSI entries is 4.

This example displays output when no supporting features are turned on, and the SCCP Service table is empty:

```
rtrv-sccp-serv
```

```
tekelecstp 06-10-30 09:26:14 EST EAGLE 36.0.0  
No Entries Found.
```

```
;
```

This example displays output when the G-Port feature is turned on, and the SCCP Service table is empty:

```
rtrv-sccp-serv

tekelecstp 06-10-30 09:26:14 EST  EAGLE 36.0.0

-----
Service      : GPORT
State       : Offline
GTT Option  : Yes
-----

SCCPSRV table is (0 of 384) 0% full.

;
```

This example displays output when the G-Port and G-Flex features are turned on, and the SCCP Service table is empty:

```
rtrv-sccp-serv

tekelecstp 06-10-30 09:26:47 EST  EAGLE 36.0.0

-----
Service      : GFLEX
State       : Offline
GTT Option  : Yes
-----

-----
Service      : GPORT
State       : Offline
GTT Option  : Yes
-----

SCCPSRV table is (0 of 384) 0% full.

;
```

This example displays output when the G-Port and G-Flex features are turned on, and the service set contains ANSI point codes:

```
rtrv-sccp-serv

tekelecstp 06-10-30 09:30:02 EST  EAGLE 36.0.0

-----
Service      : GFLEX
State       : Offline
GTT Option  : Yes
-----

-----
Service      : GPORT
State       : Offline
-----
```

```
GTT Option : Yes
```

```
-----  
ANSI PC      RC  
001-001-001 01  
001-001-002 01  
001-001-003 01
```

```
SCCPSRV table is (4 of 384) 1% full.
```

```
;
```

This example displays output when the G-Port and G-Flex services are turned on, and the service set contains ANSI and ITU-I point codes:

```
rtrv-sccp-serv
```

```
tekelecstp 06-10-30 09:32:30 EST EAGLE 36.0.0
```

```
-----  
Service      : GFLEX  
State        : Offline  
GTT Option   : Yes  
-----
```

```
-----  
Service      : GPORT  
State        : Offline  
GTT Option   : Yes  
-----
```

```
ANSI PC      RC  
001-001-001 01  
001-001-002 01  
001-001-003 01
```

```
ITUI PC      RC  
2-001-1      02  
2-001-2      02  
2-001-3      02
```

```
SCCPSRV table is (8 of 384) 2% full.
```

```
;
```

This example displays output when the GPORT and GFLEX services are ONLINE, and the service set contains ANSI, ITU, and ITU-N point codes:

```
rtrv-sccp-serv
```

```
tekelecstp 06-10-30 09:37:03 EST EAGLE 36.0.0
```

```
-----  
Service      : GFLEX  
State        : Online
```



```
GTT Option   : Yes
-----
```

```
ITUN PC      RC
00001        02
```

```
-----
Service      : GPORT
State        : Online
GTT Option   : Yes
-----
```

```
ANSI PC      RC
001-001-001  01
001-001-002  01
001-001-003  01
```

```
ITUI PC      RC
2-001-1      02
2-001-2      02
2-001-3      02
```

SCCPSRV table is (10 of 384) 3% full.

;

This example displays output when the A-Port or IGM feature is enabled, and the MNP and GFLEX services are ONLINE. This example also displays spare point codes:

```
rtrv-sccp-serv
```

```
tekelecstp 06-10-30 09:37:03 EST EAGLE 36.0.0
```

```
-----
Service      : GFLEX
State        : Online
GTT Option   : Yes
-----
```

```
ITUN PC      RC
00001        02
```

```
-----
Service      : MNP
State        : Online
GTT Option   : Yes
-----
```

```
ANSI PC      RC
001-001-001  01
001-001-002  01
001-001-003  01
```

```
ITUI PC      RC
```

```
2-001-1      02
2-001-2      02
2-01-3       02
```

```
ITUI SPARE   RC
s-4-201-0    10
s-4-201-1    10
```

```
ITUN SPARE   RC
s-2-102-0-aa 10
s-2-102-1-aa 10
```

```
SCCPSRV table is (16 of 384) 4% full.
```

```
;
```

Related Topics

- [chg-sccp-serv](#)
- [dlt-sccp-serv](#)

4.1.555 rtrv-sccpopts

Use this command to display the current value of one or more of the SCCP option indicators maintained in the STP options table.

Parameters

This command has no parameters.

Example

```
rtrv-sccpopts
```

Dependencies

The STP Options table is corrupt or cannot be found.

2852 E2852 Cmd Rej: Failed reading STP Options table

The GTTSET table is corrupt or cannot be found.

3544 E3544 Cmd Rej: Failed reading GTT Set Table

None.

N/A N/A

Notes

None.

Output

This example displays output when the Origin-based MTP Routing feature is turned on.
rtrv-sccpopts

```
tekelecstp 10-02-15 14:07:11 EST  EAGLE 42.0.0

SCCP                OPTIONS
-----
CLASS1SEQ           off
CCLLEN              1
ACLEN               3
INTLUNKNNAI        no
SUBDFRN            off
MOBRSCCPOPC        MTP
DFLTGTTMODE        CdPA

;
```

The example displays output when the Transaction-based GTT Loadsharing feature is enabled. rtrv-sccpopts

```
tekelecstp 10-02-15 14:07:11 EST  EAGLE 42.0.0

SCCP                OPTIONS
-----
CLASS1SEQ           on
CCLLEN              1
ACLEN               3
INTLUNKNNAI        no
SUBDFRN            off
TGTT0              NONE
TGTT1              NONE
TGTTUDTKEY         MTP
TGTTXUDTKEY        MTP

;
```

This example displays output when the GSM MAP Screening feature is turned on, and GSM MAP Screening is enabled for TCAP_Continue and TCAP_End messages.

rtrv-sccpopts

```
tekelecstp 10-02-15 14:07:11 EST  EAGLE 42.0.0

SCCP                OPTIONS
-----
CLASS1SEQ           off
CCLLEN              1
ACLEN               3
INTLUNKNNAI        yes
```

```

SUBDFRN                off
DFLTGTTMODE            CdPA
GMSTCAPCE              on

```

```
;
```

This example displays output when the ANSI/ITU SCCP Conversion feature is enabled. `rtrv-sccpopts`

```
tekelecstp 09-06-15 14:07:11 EST EAGLE 41.1.0
```

```

SCCP                OPTIONS
-----
CLASS1SEQ           on
CCLLEN              1
ACLEN               3
INTLUNKNNAI        no
SUBDFRN             off
DFLTGTTMODE         CdPA
CNVAINAT            1
TGTT0               NONE
TGTT1               UDT,XUDT
TGTTUDTKEY          MTP
TGTTXUDTKEY         MTP

```

```
;
```

This example displays output when the FLOBR feature is turned on.

```
rtrv-sccpopts
```

```
tekelecstp 10-04-04 05:46:41 EST EAGLE 41.0.0
```

```

SCCP                OPTIONS
-----
CLASS1SEQ           off
DFLTGTTMODE         FLOBRCdPA,FLOBRCgPA
DFLTFALLBACK        yes

```

```
;
```

```
rtrv-sccpopts
```

```
tekelecstp 10-04-06 15:11:29 EST Eagle 42.0.0
```

```

SCCP                OPTIONS
-----
CLASS1SEQ           off
CCLLEN              0
ACLEN               0
INTLUNKNNAI        no
DFLTGTTMODE         CdPA
MTPRGTT             off

```

```

MTPRGTTFALLBK      mtproute
UNQGTTSEL          bestmatch

```

```
;
```

This example displays output when the ANSI/ITU SCCP Conversion feature is turned ON.

```
rtrv-sccpopts
```

```
tekelecstp 12-05-18 14:26:24 EST EAGLE 45.0.0
```

```

SCCP                OPTIONS
-----
CLASS1SEQ           off
CCLEN               0
ACLEN               0
INTLUNKNNAI        no
SUBDFRN             off
DFLTGTTMODE        CdPA
CNVAINAT            1
MTPRGTT             off
MTPRGTTFALLBK      mtproute
UNQGTTSEL           bestmatch
DELCCPREFIX         pfxwcc
CNVCLGITU           off

```

```
;
```

This example displays output when EPAP Data Split feature enabled.

```
rtrv-sccpopts
```

```
tekelecstp 12-07-11 14:51:24 EST EAGLE 45.0.0
```

```
rtrv-sccpopts
```

```
Command entered at terminal #4.
```

```

SCCP                OPTIONS
-----
CLASS1SEQ           off
CCLEN               0
ACLEN               0
INTLUNKNNAI        no
SUBDFRN             off
DFLTGTTMODE        CdPA
CNVAINAT            1
MOBRSCCPOPC        MTP
TGTT0               NONE
TGTT1               NONE
TGTTUDTKEY          MTP
TGTTXUDTKEY         MTP
GMSTCAPCE           off
DFLTFALLBACK        no
MTPRGTT             off
MTPRGTTFALLBK      mtproute

```

```

UNQTTSEL          bestmatch
DELCCPREFIX      pfxwcc
GTTDIST          dn

```

```
;
```

This example displays output when Dual ExAP Config feature enabled.

rtrv-sccpopts

```

tekelecstp 12-07-11 14:52:24 EST  EAGLE 45.0.0
rtrv-sccpopts
Command entered at terminal #4.

```

```

SCCP              OPTIONS
-----
CLASS1SEQ         off
CCLEN             0
ACLEN             0
INTLUNKNNAI      no
SUBDFRN          off
DFLTGTTMODE      CdPA
CNVAINAT         1
MOBRSCCPOPC      MTP
TGTT0            NONE
TGTT1            NONE
TGTTUDTKEY       MTP
TGTTXUDTKEY      MTP
GMSTCAPCE        off
DFLTFALLBACK     no
MTPRGTT          off
MTPRGTTFALLBK   mtproute
UNQTTSEL         bestmatch
DELCCPREFIX      pfxwcc
GTTDIST          elap

```

```
;
```

Related Topics

- [chg-sccpopts](#)

4.1.556 rtrv-scr-aftpc

Use this command to show the allowed affected point code (AFTPC) screening references in the AFTPC entity set.

Parameters

actname (optional)

The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:*ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

none —Display gateway screening rules that do not have an assigned gateway screening stop action set**a11 (optional)**

Displays all AFTPC screening references.

Range:*yes**no***Default:***no***area (optional)**ITU international area. The *area* in the point code represented by *zone-area-id*.**Range:***000 - 255, **

*the full range of values from 000–255

id (optional)ITU international ID. The ID in the point code represented by *zone-area-id*.**Range:***0 - 7, **

* —the full range of values from 0–7

mna (optional)16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.**Range:***0 -- 31, **

* —the full range of values from 0–31

msa (optional)24-bit ITU national main signaling area. The main signaling area in the point code represented by *msa-ssa-sp*.**Range:***000 - 255, **

* —the full range of values from 000-255

nc (optional)Network cluster identifier value. This parameter displays entries containing the specific cluster of the point code represented by *ni-nc-ncm*.**Range:***0 - 255, **

* —the full range of values from 000-255

Default:
Display all

ncm (optional)

Network cluster member identifier value. This parameter displays entries containing this specific cluster member of the point code represented by *ni-nc-ncm*.

Range:
0 - 255, *
*—the full range of values from 000-255

Default:
Display all

ni (optional)

Network identifier value. This parameter displays entries containing this specific network of the point code represented by *ni-nc-ncm*.

Range:
0 - 255, *
*—the full range of values from 000-255

Default:
Display all

npc (optional)

ITU national point code.



Note:

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A.

Range:
00000 - 16383, *
*—the full range of values from 00000–16383

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:
stop—The gateway screening process ends and the message proceeds through normal routing.

Default:
Display all

nsr (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:*ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:*none**s***Default:***none***sna (optional)**16-bit ITU national main number area. The *sna* in the point code represented by *un-sna-mna*.**Range:***0 -- 15, **

* —the full range of values from 0–15

sp (optional)24-bit ITU national signaling point. The signaling point in the point code represented by *msa-ssa-sp*.**Range:***000 - 255, **

* —the full range of values from 000-255

sr (optional)

The AFTPC screening reference name

Range:*ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all

ssa (optional)24-bit ITU national sub signaling area. The *ssa* specified in the point code represented by *msa-ssa-sp*.**Range:***0 - 255, **

* —the full range of values from 000-255

ssn (optional)

Subsystem number.

Range:

0 - 255, *

* —the full range of values from 0–255

Default:

Display all.

un (optional)16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.**Range:**

0 -- 127, *

* —the full range of values from 0–127

zone (optional)ITU international zone. The zone in the point code represented by *zone-area-id*.**Range:**

0 - 7, *

* —the full range of values from 0–7

Example

```

rtrv-scr-aftpc
rtrv-scr-aftpc:sr=iec:ni=240:nc=001:ncm=010&&014:ssn=012
rtrv-scr-aftpc:sr=iec
rtrv-scr-aftpc:all=yes
rtrv-scr-
aftpc:sr=iec:ni=240:nc=001:ncm=010:ssn=012:actname=copy
rtrv-scr-aftpc:sr=aft1
rtrv-scr-
aftpc:sr=aft1:zone=1:area=2:id=3:nsfi=stop:ssn=1:pcst=s
rtrv-scr-aftpc:sr=aft2:un=1:sna=2:mna=3

```

DependenciesIf the *nsfi* parameter is specified, the parameter value must be *stop*.

3271 E3271 Cmd Rej: NSFI is invalid

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If *nc=* is specified, ncm=* must be specified.*If *ni=* is specified, nc=* and ncm=* must be specified.*If *zone=* is specified, area=* and id=* must be specified.*If *area=* is specified, id=* must be specified.*

If `msa=*` is specified, `ssa=*` and `sp=*` must be specified.

If `ssa=*` is specified, `sp=*` must be specified.

If `un=*` is specified, `sna=*` and `mna=*` must be specified.

If `sna=*` is specified, `mna=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

The character `c` is not a valid value for the `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `msa`, `ssa`, `sp`, `un`, `sna`, `mna`, and `npc` parameters.

2527 E2527 Cmd Rej: C value not allowed

The `nsr` parameter cannot be specified if the `actname` parameter is specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

The `nsr` parameter cannot be specified if the `nsfi=stop` parameter is specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

The value of the `actname` parameter must be defined in the gateway screening stop action table with the `chg-gws-actset` command. These values are shown in the ACT NAME field of the `rtrv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `actname` parameter is specified with the `sr` parameter, the specified value for the `actname` parameter must be assigned to that screening reference name.

3680 E3680 Cmd Rej: No match on ACTNAME parameter during retrieve

If specified, the `sr` parameter value must exist in the AFTPC screen entity set.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N16, and ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

Any specified `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `msa`, `ssa`, `sp`, `un`, `sna`, `mna`, `npc`, `nsfi`, and `nsr` parameters must already exist in the AFTPC entity for the screening reference.

N/A N/A

If the `pcst` parameter is specified, point codes with the specified subtype prefix (no prefix or s-) must exist in the database.

N/A N/A

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range 000 – 255.

2511 E2511 Cmd Rej: NC is invalid

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is defined by separating the values that define the range by two ampersands (&&) for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

If no parameters are specified, a list of allowed AFTPC references is produced indicating whether they are referenced or not.

If only the `all=yes` parameter is specified, detailed information for every rule in every allowed AFTPC screening table is displayed.

If the `all` parameter is specified and other parameters are also specified, the `all` parameter is ignored.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
rtrv-scr-aftpc
```

```
rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = ALLOWED AFTPC
SR    REF  RULES
IEC   YES   2
WRD2  YES   1
WRD3  NO    4
WRD4  YES   9
;
```

```
rtrv-scr-
aftpc:sr=iec:ni=240:nc=001:ncm=010&&014:ssn=012:actname=copy
```

```
rlghncxa03w 03-03-14 15:23:18 EST EAGLE 31.3.0
SCREEN = ALLOWED AFTPC
SR    NI      NC      NCM      SSN      NSFI      NSR/ACT
IEC   240     001     010&&012 012     STOP     COPY
```

```
;
```

```
rtrv-scr-aftpc:sr=aft1:zone=1:area=2:id=3:nsfi=stop:ssn=1:pcst=s
```

```
tekelecstp 05-01-05 10:19:51 EST EAGLE 31.12.0
SCREEN = ALLOWED AFTPC
SR      ZONE  AREA  ID      SSN      NSFI      NSR/ACT
aft1   s-1    002   3       1       STOP     -----
```

```
;
```

```
rtrv-scr-aftpc:sr=aft1
```

```
tekelecstp 05-01-05 10:19:51 EST EAGLE 31.12.0
SCREEN = ALLOWED AFTPC
SR      ZONE  AREA  ID      SSN      NSFI      NSR/ACT
aft1   s-2    002   3       1       STOP     -----
```

```
SR      NPC
aft1   s-00128          1       STOP     -----
```

```
;
```

```
rtrv-scr-aftpc:sr=aft2
```

```
eaglestp 28-02-13 10:19:51 EST EAGLE 45.1.0
SCREEN = ALLOWED AFTPC
SR      UN      SNA    MNA      SSN      NSFI      NSR/ACT
aft2   001     02     01       1       STOP     -----
```

```
;
```

Legend

For a summary report:

- **REF**—Indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the `rtrv-scr-blkdpc:all=yes` command, or specify the specific screening reference.
- **RULES**—Number of screening rules in that screening table

For a detailed report:

- **SCREEN = ALLOWED AFTPC**—Screen type

- **SR**—Identifies the various screen sets being used. It can be up to four characters in length
- **NI-NC-NCM**—Point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA - SSA - SP. For 16-bit ITU national point codes, these columns are UN - SNA - MNA. For national point codes, these columns become the single column NPC.
- **SSN**—Subsystem number associated with the point code identified by *ni-nc-ncm*
- **NSFI**—Next screening category to be used
- **NSR/ACT**—Name of the next screening reference (NSR –up to four characters) or action to be taken (ACT –up to six characters), if the message passes this screen

Related Topics

- [chg-scr-aftpc](#)
- [dlt-scr-aftpc](#)
- [ent-scr-aftpc](#)

4.1.557 rtrv-scr-blkdpc

Use this command to show the blocked destination point code (BLKDPC) screening references in the BLKDPC entity set.

Parameters

actname (optional)

The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —Display gateway screening rules that do not have an assigned gateway screening stop action set

a11 (optional)

Displays all blocked DPC screening references.

Range:

yes

no

Default:

no

area (optional)

ITU international area. The area in the point code specified by *zone-area-id*.

Range:

000 - 255, *

* —the full range of values from 000–255

id (optional)ITU international ID. The ID in the point code represented by *zone-area-id*.**Range:**

0 - 7, *

* —the full range of values from 0–7

mna (optional)16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.**Range:**

0 -- 31, *

* —the full range of values from 0–31

msa (optional)24-bit ITU national main signaling area. The main signaling area in the point code represented by *msa-ssa-sp*.**Range:**

000 - 255, *

* —the full range of values from 000-255

nc (optional)Network cluster identifier value. This parameter displays entries containing the specific cluster of the point code represented by *ni-nc-ncm*.**Range:**

0 - 255, *

* —the full range of values from 0–255

Default:

Display all

ncm (optional)Network cluster member identifier value. This parameter displays entries containing the specific cluster member of the point code represented by *ni-nc-ncm*.**Range:**

0 - 255, *

* —the full range of values from 0–255

Default:

Display all

ni (optional)Network identifier value. This parameter displays entries containing the specific network of the point code represented by *ni-nc-ncm*.**Range:**

0 - 255, *

* —the full range of values from 0–255.

Default:
Display all

npc (optional)
ITU national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A.

Range:
00000 - 16383, *
* —the full range of values from 00000–16383

nsfi (optional)
This parameter specifies the next screening category used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

cgpa
Allowed calling party address is the next screening category

destfld
Allowed destination field (DESTFLD) is the next screening category

fail
The received message should be discarded.

isup
ISUP message type (ISUP) is the next screening category

stop
The gateway screening process ends and the message proceeds through normal routing

Default:
Display all

nsr (optional)
The next screening reference parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process. This parameter is mandatory if *nsfi* is other than *stop* or *fail* and cannot be entered if *nsfi* is *stop* or *fail*, or the *copy=yes* parameter is specified.

Range:
ayyy 1 alphabetic character followed by up to 3 alphanumeric characters

Default:
Display all

pcst (optional)

Point code subtype. This parameter specifies whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

sna (optional)

16-bit ITU national main number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

*0 -- 15, **

* —the full range of values from 0–15

sp (optional)

24-bit ITU national signaling point. This parameter specifies the signaling point in the point code represented by *msa-ssa-sp*.

Range:

*000 - 255, **

* —the full range of values from 000-255

sr (optional)

The BLKDPC screening reference name

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all.

ssa (optional)

24-bit ITU national sub signaling area. The sub signaling area specified in the point code represented by *msa-ssa-sp*.

Range:

*0 - 255, **

* —the full range of values from 000-255

un (optional)

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:

*0 -- 127, **

* —the full range of values from 0–127

zone (optional)

ITU international zone. The zone in the point code represented by *zone-area-id*.

Range:

0 - 7, *

* —the full range of values from 0–7

Example

rtrv-scr-blkdpc

rtrv-scr-

blkdpc:sr=iec:ni=240:nc=001:ncm=010&&018:nsfi=stop:actname=rdct

rtrv-scr-blkdpc:sr=iec

rtrv-scr-blkdpc:all=yes

rtrv-scr-blkdpc:sr=bdp1:npc=128:nsfi=fail:pcst=s

rtrv-scr-blkdpc:sr=bl01:un=1:sna=2:mna=3

Dependencies

A complete point code must be specified, and must be one and only one of the five point code parameter combinations: `ni-nc-ncm`, `zone-area-id`, `msa-ssa-sp`, `un-sna-mna`, or `npc`, except in the special case of entering `c` for "continue."

N/A N/A

If the `ni=c` parameter is specified, then the `nc` and the `ncm` parameters must have a value of `c` or must not be specified. If the `ni=c` parameter is specified, and the `nc` and the `ncm` parameters are not specified, then the `nc` and `ncm` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `zone=c` parameter is specified, then the `area` and `id` parameters must have a value of `c` or must not be specified. If the `zone=c` parameter is specified, and the `area` and the `id` parameters are not specified, then the `area` and `id` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `msa=c` parameter is specified, then the `ssa` and `sp` parameters must have a value of `c` or must not be specified. If the `msa=c` parameter is specified, and the `ssa` and the `sp` parameters are not specified, then the `ssa` and `sp` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

If the `un=c` parameter is specified, then the `sna` and `mna` parameters must have a value of `c` or must not be specified. If the `un=c` parameter is specified, and the `sna` and the `mna` parameters are not specified, then the `sna` and `mna` parameters default to a value of `c`.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If the `area=*` parameter is specified, then the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the value of the `nsfi` parameter is `stop` or `fail`, then the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

If the `actname` parameter is specified, the `nsr` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

If the `actname` parameter is specified, then the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the `actname` parameter is specified with the `sr` parameter, the specified value for the `actname` parameter must be assigned to that screening reference name.

3680 E3680 Cmd Rej: No match on ACTNAME parameter during retrieve

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command. These values are shown in the ACT NAME field of the `rtrv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `ni` parameter is specified as an asterisk (`ni=*`) or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range 000 – 255.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range 000 – 255.

2511 E2511 Cmd Rej: NC is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 000 – 255, the `ni` and the `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

The value of the `sr` parameter must already exist in the BLKDPC entity set.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

Any specified `id`, `mna` or `sp` parameter must already exist in the database.

2532 E2532 Cmd Rej: No match on ID or SP parameter during retrieve

If the `pcst` parameter is specified, point codes with the specified subtype prefix (no prefix or s-) must exist in the database.

N/A N/A

Any specified `nc` parameter must already exist in the database

2533 E2533 Cmd Rej: No match on NC parameter during retrieve

Any specified `ncm` parameter must already exist in the database

2534 E2534 Cmd Rej: No match on NCM parameter during retrieve

Any specified `zone`, `un` or `msa` parameter must already exist in the database.

2545 E2545 Cmd Rej: No match on ZONE or MSA parameter during retrieve

Any specified `ni` parameter must already exist in the database

2535 E2535 Cmd Rej: No match on NI parameter during retrieve

Any specified `nsr` parameter must already exist in the database

2539 E2539 Cmd Rej: No match on NSR parameter during retrieve

Any specified `nsfi` parameter must already exist in the database

2538 E2538 Cmd Rej: No match on NSFI parameter during retrieve

Any specified `npc` parameter must already exist in the database

2537 E2537 Cmd Rej: No match on NPC parameter during retrieve

Any specified `area`, `sna`, or `ssa` parameter must already exist in the database.

2528 E2528 Cmd Rej: No match on AREA or SSA parameter during retrieve

Any specified `pcst` parameter must already exist in the database

4269 E4269 Cmd Rej: No match on PCST parameter during retrieve

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

If the `zone=*` parameter is specified, then the `area=*` and `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, then the `ssa=*` and the `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `ssa=*` parameter is specified, then the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and the `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

If no parameters are specified, a list of blocked DPC screening references is displayed indicating whether they are referenced or not.

If only the `all=yes` parameter is specified, detailed information for every rule in every blocked DPC screening table is output.

If the `all` parameter is specified and other parameters are also specified, the `all` parameter is ignored.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

The character `c` is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues. There must be an entry in the blocked DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, `nsfi`, and `nsr`. The point code has the value `c`.

If the character `c` is specified for any subfield of a three-subfield point code, all three subfields must have the value `c`. No other values can be used. For example, a point code `c` is not allowed. The point code must be `c`. The asterisk (*) value cannot be used with the character `c` (for example, a point code `c` is not allowed).

In all cases, if `c` for "continue" is entered for the first subfield in the point code, the other subfields default to `c` in the database.

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code `c`. The `nsfi` and `nsr` in this entry are examined to determine the next step in the screening process.

The spare point code subtype prefix `s-` is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
rtrv-scr-blkdpc
```

```
rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = BLOCKED DPC
SR    REF  RULES
IEC   YES   2
WRD2  YES   1
WRD3  NO    4
WRD4  YES   9
```

```
;
```

```
rtrv-scr-blkdpc:sr=iec:ni=240:nc=001:ncm=010&&018
```

```
rlghncxa03w 03-03-13 13:13:21 EST EAGLE 31.3.0
SCREEN = BLOCKED DPC
SR    NI      NC      NCM      NSFI     NSR/ACT
IEC   240     001     010&&020 STOP     -----
```

```
;
```

```
rtrv-scr-blkdpc:actname=rdct
```

```
rlghncxa03w 03-03-13 13:13:21 EST EAGLE 31.3.0
SCREEN = BLOCKED DPC
SR    NI      NC      NCM      NSFI     NSR/ACT
IEC   C       C       C       STOP     RDCT
```

```
;
```

```
rtrv-scr-blkdpc:nsr=is02
```

```
tekelecstp 02-08-30 09:25:54 EST EAGLE 30.0.0
rtrv-scr-blkdpc:nsr=is02
Command entered at terminal #4.
SCREEN = BLOCKED DPC
SR    NI      NC      NCM      NSFI     NSR/ACT
bdp3  C       C       C       ISUP     is02
```

```
;
```

```
rtrv-scr-blkdpc:sr=bdp1:npc=128:nsfi=fail
```

```
tekelecstp 05-01-25 15:57:51 EST EAGLE 31.12.0
SCREEN = BLOCKED DPC
SR    NPC      NSFI     NSR/ACT
bdp1  s-00128   FAIL     -----
```

```
;
```

```

rtrv-scr-blkdpc:sr=b101

tekelecstp 13-07-05 16:48:31 EST 45.0.0-64.69.0
rtrv-scr-blkdpc:sr=b101
Command entered at terminal #4.
SCREEN = BLOCKED DPC
SR      UN      SNA      MNA      NSFI      NSR/ACT
b101    004      05      06      FAIL      -----
b101    C        C        C        STOP     -----
;

```

Legend

For a summary report:

- **REF**—Indicates whether a screen is referenced by another screen. If NO, the screen is not used. For more detailed output, use the `rtrv-scr-blkdpc:all=yes` command, or specify the specific screening reference.
- **RULES**—Number of screening rules in that screening table

For a detailed report:

- **SCREEN = BLOCKED DPC**—Screen type
- **SR**—Identifies the screen sets being used. It can be up to four characters in length.
- **NI - NC - NCM**—Point code referenced within the screen. For international point codes, columns are ZONE - AREA - ID. For 24-bit ITU national point codes, columns are MSA-SSA-SP. For 16-bit ITU national point codes, columns are UN-SNA-MNA. For national point codes, columns become the single column NPC.
- **NSFI**—Next screening category to be used
- **NSR/ACT**—Name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

Related Topics

- [chg-scr-blkdpc](#)
- [dlt-scr-blkdpc](#)
- [ent-scr-blkdpc](#)

4.1.558 rtrv-scr-blkopc

Use this command to show the blocked originating point code (BLKOPC) screening references in the BLKOPC entity set.

Parameters

actname (optional)

The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display gateway screening rules that do not have an assigned gateway screening stop action set

a11 (optional)

Displays all blocked OPC screening references.

Range:

yes

no

Default:

no

area (optional)

ITU international area. The area in the point code represented by *zone-area-id*.

Range:

*000 - 255, **

*—the full range of values from 000–255

id (optional)

ITU international ID. The ID in the point code represented by *zone-area-id*.

Range:

*0 - 7, **

*—the full range of values from 0–7

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

*0 -- 31, **

*—the full range of values from 0–31

msa (optional)

24-bit ITU national main signaling area. The main signaling area in the point code represented by *msa-ssa-sp*.

Range:

*000 - 255, **

*—the full range of values from 000-255

nc (optional)

Network cluster identifier value. This parameter displays entries containing this specific cluster of the point code represented by *ni-nc-ncm*.

Range:

0 - 255

*—the full range of values from 0–255

Default:
Display all

ncm (optional)

Network cluster member identifier value. This parameter displays entries containing this specific cluster member of the point code represented by *ni-nc-ncm*.

Range:
0 - 255, *
* —the full range of values from 0–255

Default:
Display all

ni (optional)

Network identifier value. This parameter displays entries containing this specific network of the point code represented by *ni-nc-ncm*.

Range:
0 - 255, *
* —the full range of values from 0–255

Default:
Display all

npc (optional)

ITU national point code.



Note:

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A.

Range:
00000 - 16383, *
* —the full range of values from 00000–16383

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

cgpa

Allowed calling party address is the next screening category

stop

The gateway screening process ends and the message proceeds through normal routing.

fail

The received message should be discarded.

sio

Allowed SIO is the next screening category.

dpc

Allowed DPC is the next screening category.

blkdpc

Blocked DPC is the next screening category.

Default:

Display all

nsr (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process. This parameter is mandatory if *nsfi* is other than *stop* or *fail*. The *nsr* parameter cannot be entered if *nsfi* is *stop* or *fail*, or the *copy=yes* parameter is specified.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (S-).

Range:

none

s

Default:

none

sna (optional)

16-bit ITU national main number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

*0 -- 15, **

* —the full range of values from 0–15

sp (optional)

24-bit ITU national signaling point. The signaling point in the point code represented by *msa-ssa-sp*.

Range:

*000 - 255, **

* —the full range of values from 000-255

sr (optional)

The BLKOPC screening reference name

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all.

ssa (optional)

24-bit ITU national sub signaling area. The sub signaling area is specified in the point code represented by *msa-ssa-sp*.

Range:

*0 - 255, **

*—the full range of values from 000-255

un (optional)

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:

*0 -- 127, **

*—the full range of values from 0–127

zone (optional)

ITU international zone. The zone in the point code represented by *zone-area-id*.

Range:

*0 - 7, **

*—the full range of values from 0–7

Example

```
rtrv-scr-blkopc
rtrv-scr-blkopc:sr=iec:ni=240:nc=001:ncm=010&&018:actname=copy
rtrv-scr-blkopc:sr=iec
rtrv-scr-blkopc:all=yes
rtrv-scr-blkopc:sr=bop1:npc=128:nsfi=fail
rtrv-scr-blkopc:sr=bop1:zone=2:area=2:id=3:nsfi=fail:pcst=s
rtrv-scr-blkopc:sr=bop1:un=121:sna=10:mna=17:nsfi=fail:pcst=s
```

Dependencies

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

Any specified *ni*, *nc*, *ncm*, *zone*, *area*, *id*, *msa*, *ssa*, *sp*, *ncp*, *nsfi*, *un*, *sna*, *mna*, and *nsr* parameters must already exist in the database.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

If the `pcst` parameter is specified, point codes with the specified subtype prefix (no prefix or `s-`) must exist in the database.

N/A N/A

If the `area=*` parameter is specified, then the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `nsr` parameter is specified, then the `actname` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

If the value of the `nsfi` parameter is `stop` or `fail`, then the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

If the `actname` parameter is specified, the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the value `c` is specified for any subfield of a three-subfield point code, then all three subfields must have a value of `c` (`c-c-c`). No other values, including asterisks can be used.

If the value of the first subfield is `c`, then the other subfields default to `c` in the database.

2485 E2485 Cmd Rej: All entered point code elements must be C if any are C

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command. These values are shown in the ACT NAME field of the `rtrv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `actname` parameter is specified with the screening reference name parameter, the specified value for the `actname` parameter must be assigned to that screening reference name.

3680 E3680 Cmd Rej: No match on ACTNAME parameter during retrieve

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (`s-`) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `nc=*` parameter is specified, then the `ncm=*` parameter must be specified.

2512 E2512 Cmd Rej: NCM is invalid

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

If the `ni=*` parameter is specified, then the `nc=*` and `ncm=*` parameters must be specified.

2511 E2511 Cmd Rej: NC is invalid

If the `zone=*` parameter is specified, then the `area=*` and `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, then the `ssa=*` and `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `ssa=*` parameter is specified, then the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

If no parameters are specified, a list of blocked OPC references is displayed indicating whether they are referenced or not.

If only the `all=yes` parameter is specified, detailed information for every rule in every blocked OPC screening table is displayed.

If the `all` parameter is specified and other parameters are also specified, the `all` parameter is ignored.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

For point codes with three subfields, the value `c` (continue) is used as a place holder. If the point code is not found in this screen set, the continue value points to the `nsfi` and `nsr` to be applied next.

The character `c` is used in the blocked OPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked OPC screens. When screening for a blocked OPC and the point code being screened does not match any of the point codes in the blocked OPC screens, the message is not rejected and the screening process continues. There must be an entry in the blocked OPC screens to

allow the screening process to continue. This entry consists of a screening reference, point code, `nsfi`, and `nsr`. The point code `c`.

When the point code does not match any entries in the blocked OPC screens, the screening process is directed to the screening reference with the point code `c`. The `nsfi` and `nsr` in this entry are examined to determine the next step in the screening process.

The spare point code subtype prefix `s-` is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
rtrv-scr-blkopc
```

```
rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = BLOCKED OPC
SR   REF  RULES
IEC  YES   2
WRD2 YES   1
WRD3 NO    4
WRD4 YES   9
```

```
;
```

```
rtrv-scr-blkopc:sr=iec:ni=240:nc=001:ncm=010&&018
```

```
rlghncxa03w 03-03-13 13:13:21 EST EAGLE 31.3.0
SCREEN = BLOCKED OPC
SR  NI      NC      NCM      NSFI     NSR/ACT
IEC 240     001     010&&020 FAIL     -----
```

```
;
```

```
rtrv-scr-blkopc:actname=cncf
```

```
rlghncxa03w 03-03-13 10:34:07 EST EAGLE 31.3.0
SCREEN = BLOCKED OPC
SR  NI      NC      NCM      NSFI     NSR/ACT
IEC C       C       C       STOP     CNCF
```

```
;
```

```
rtrv-scr-blkopc:all=yes
```

```
rlghncxa03w 03-03-13 10:34:07 EST EAGLE 31.3.0
SCREEN = BLOCKED OPC
SR  NI      NC      NCM      NSFI     NSR/ACT
IEC 240     001     010     FAIL     -----
IEC 241     010     *       FAIL     -----

SR  ZONE    AREA    ID      NSFI     NSR/ACT
```

```

IEC  1      003      4      FAIL  -----
IEC  1      003      5      FAIL  -----

SR   NI      NC      NCM     NSF1    NSR/ACT
IEC  C      C      C      STOP   CRNCF

SR   NI      NC      NCM     NSF1    NSR/ACT
WRD2 243     015     001     FAIL   -----
WRD2 243     105     002     FAIL   -----
WRD2 C      C      C      STOP   CNCF
;

rtrv-scr-blkopc:sr=bo01:nsfi=sio:nsr=si01:msa=c:ssa=c:sp=c

```

```

tekelecstp 03-03-25 15:57:07 EST  EAGLE 31.0.0
SCREEN = BLOCKED OPC
SR   MSA      SSA      SP      NSF1    NSR/ACT
bo01 C      C      C      SIO     si01
;

```

```
rtrv-scr-blkopc:sr=bop1
```

```

tekelecstp 05-01-25 15:57:07 EST  EAGLE 31.12.0
SCREEN = BLOCKED OPC
SR      ZONE  AREA  ID      NSF1    NSR/ACT
bop1  s-2     002   3      FAIL   -----

SR      NPC
bop1  s-00128
      FAIL   -----

SR      ZONE  AREA  ID      NSF1    NSR/ACT
bop1  C      C      C      STOP   -----
;

```

```
rtrv-scr-blkopc:sr=iec:un=120:sna=10:mna=15
```

```

rlghncxa03w 03-03-13 13:13:21 EST  EAGLE 45.0.0
SCREEN = BLOCKED OPC
SR   UN      SNA      MNA     NSF1    NSR/ACT
IEC  120     10      15      FAIL   -----
;

```

Legend

For a summary report:

- **REF**—Indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the `rtrv-scr-blkopc:all=yes` command, or specify the specific screening reference.
- **RULES**—Number of screening rules in that screening table.

For a detailed report:

- **SCREEN = BLOCKED OPC**—Screen type
- **SR**—Identifies the various screen sets being used. It can be up to four characters in length.
- **NI - NC - NCM**—Point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For the 16-bit ITU national point codes, these columns are UN-SNA-MNA. For national point codes, these columns become the single column NPC .
- **NSFI**—Next screening category to be used
- **NSR/ACT**—Name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen

Related Topics

- [chg-scr-blkopc](#)
- [dlt-scr-blkopc](#)
- [ent-scr-blkopc](#)

4.1.559 rtrv-scr-cdpa

Use this command to show the allowed called party address (CDPA) screening references in the CDPA entity set.

Parameters

actname (optional)

The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display gateway screening rules that do not have an assigned gateway screening stop action set

a11 (optional)

Displays all allowed CDPA screening references.

Range:

yes

no

Default:

no

area (optional)

ITU international area. The area in the point code represented by *zone-area-id*.

Range:

000 - 255, *

*—the full range of values from 000–255

id (optional)ITU international ID. The ID in the point code represented by *zone-area-id*.**Range:**

0 - 7, *

*—the full range of values from 0–7

mna (optional)16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.**Range:**

0 -- 31, *

*—the full range of values from 0–31

msa (optional)24-bit ITU national main signaling area. The main signaling area specified in the point code represented by *msa-ssa-sp*.**Range:**

000 - 255, *

* — the full range of values from 000-255

nc (optional)Network cluster identifier value. This parameter displays entries containing this specific cluster of the point code represented by *ni-nc-ncm*.**Range:**

0 - 255, *

*—the full range of values from 0–255

Default:

Display all

ncm (optional)Network cluster member identifier value. This parameter displays entries containing this specific cluster member of the point code represented by *ni-nc-ncm*.**Range:**

0 - 255, *

*—the full range of values from 0–255

Default:

Display all

ni (optional)Network identifier value. This parameter displays entries containing this specific network of the point code represented by *ni-nc-ncm*.**Range:**

0 - 255, *

*—the full range of values from 0–255

Default:
Display all

npc (optional)
ITU national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A.

Range:
00000 - 16383, *
* —the full range of values from 00000–16383

nsfi (optional)
This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

aftp

Allowed affected point code is the next screening category

stop

The gateway screening process ends and the message proceeds through normal routing

Default:
Display all

nsr (optional)
The next screening reference parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process. This parameter is mandatory if *nsfi* is other than *stop* or *fail*. This parameter cannot be entered if *nsfi* is *stop* or *fail*, or the *copy=yes* parameter is specified.

Range:
ayyy
1 alphabetic character followed by up to 3 alphanumeric characters

Default:
Display all

pcst (optional)
Point code subtype indicator. This parameter indicates whether the ITU international or ITU national point codes to be displayed must have the spare point code prefix (s-).

Range:**none**

No spare point code prefix required

s

Spare point code prefix required

Default:

none

scmgfid (optional)

SCCP management (SCMG) format ID, which consists of a 1-octet field and uniquely defines the function and format of each SCMG message. The following SCCP message types are screened against the Allowed CDPA table and all others are passed: UDT, UDTS, XUDT, XUDTS

Range:

1 - 255, *

*—the full range of values from 1-255

Default:

All SCMG format IDs are shown.

sna (optional)

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

0 -- 15, *

* —the full range of values from 0–15

sp (optional)

24-bit ITU national signaling point. The signaling point in the point code represented by *msa-ssa-sp*.

Range:

000 - 255, *

* —the full range of values from 000-255

sr (optional)

Displays all allowed CDPA screening references.

Range:*ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all.

ssa (optional)

24-bit ITU national sub signaling area. The sub signaling area specified in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

* —the full range of values from 000-255

ssn (optional)

Subsystem number.

Range:

0 - 255, *

* — the full range of values from 0–255

Default:

Display all.

un (optional)16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.**Range:**

0 -- 127, *

* —the full range of values from 0–127

zone (optional)ITU international zone. The zone in the point code represented by *zone-area-id*.**Range:**

0 - 7, *

* —the full range of values from 0–7

Example

rtrv-scr-cdpa

rtrv-scr-cdpa:sr=iec:ni=240:nc=001:ncm=010:ssn=001

rtrv-scr-cdpa:sr=iec:ni=240:nc=001:ssn=002&&005

rtrv-scr-cdpa:sr=iec

rtrv-scr-cdpa:sr=iec:actname=copy

rtrv-scr-

cdpa:sr=cdp1:zone=1:area=2:id=3:ssn=1:nsfi=stop:scmgfid=1:pcst=s

rtrv-scr-cdpa:sr=cdp1

rtrv-scr-cdpa:sr=cdp2:un=1:sna=2:mna=3

DependenciesIf the *actname* parameter is specified, the *nsr* parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

If the *actname* parameter is specified, the *nsfi=stop* parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

The *nsr* parameter cannot be specified when *nsfi=stop* .

2550 E2550 Cmd Rej: NSFI / NSR cannot be specified

If *zone=** is specified, *area=** and *id=** must be specified.If *area* is specified or respecified as an asterisk, *id* must also be an asterisk.

If `msa=*` is specified, `ssa=*` and `sp=*` must be specified.

If `ssa=*` is specified, `sp=*` must be specified.

If `un=*` is specified, `sna=*` and `mna=*` must be specified.

If `sna=*` is specified, `mna=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range 000 – 255.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range 000 – 255.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range 000 – 255.

2511 E2511 Cmd Rej: NC is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 000 – 255, the `ni` and the `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If the `actname` parameter is specified with the screening reference name parameter, the specified value for the `actname` parameter must be assigned to that screening reference name.

3680 E3680 Cmd Rej: No match on ACTNAME parameter during retrieve

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command. These values are shown in the ACT NAME field of the `rtv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

Any specified `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `msa`, `ssa`, `sp`, `un`, `sna`, `mna`, `npc`, `nsfi`, `ri`, `ssn`, and `nsr` parameters must already exist in the CGPA entity for the screening reference.

N/A N/A

If the `pcst` parameter is specified, point codes with the specified subtype prefix (no prefix or `s-`) must exist in the database.

N/A N/A

The specified screening function identifier (`nsfi`) must be in the allowed CDPA entity set.

3271 E3271 Cmd Rej: NSFI is invalid

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

If specified, the `sr` parameter value must exist in the AFTPC screen entity set.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination.

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

If no parameters are specified, the system displays a summary output.

If only the `all=yes` parameter is specified, the system displays a detailed output.

If the `all` parameter and any point code parameter are specified, the `all` parameter is ignored.

The REF column of the output of this command displays *YES* when the screen is referenced by another screen; otherwise, it displays *NO*.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (`&&`); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

The spare point code subtype prefix (`s-`) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
rtrv-scr-cdpa:sr=iec:ni=240:nc=001:ncm=010:ssn=001
```

```
rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED CDPA
SR   NI      NC      NCM      SSN      SCMGFID  NSFI  NSR/ACT
IEC  240     001     010     001     002&&003 STOP  -----
```

```
;
```

```
rtrv-scr-cdpa:sr=iec:ni=240:nc=001:ssn=002&&005
```

```
rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED CDPA
SR   NI      NC      NCM      SSN      SCMGFID  NSFI  NSR/ACT
IEC  240     001     010     002     ----- STOP  -----
IEC  240     001     011     002&&003 ----- STOP  -----
```

```
;
```

```
rtrv-scr-cdpa:sr=iec
```

```
rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED CDPA
SR   NI      NC      NCM      SSN      SCMGFID  NSFI  NSR/ACT
IEC  240     001     010     12     ----- STOP  -----
IEC  241     010     *      *      ----- AFTPC IAFT
```

```
;
```

```
rtrv-scr-cdpa
```

```
rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED CDPA
SR   REF  RULES
IEC  YES   2
WRD2 YES   1
WRD4 YES   4
```

```
;
```

```
rtrv-scr-cdpa:sr=iec:actname=copy
```

```
rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED CDPA
SR   NI      NC      NCM      SSN      SCMGFID  NSFI  NSR/ACT
IEC  245     001     010     001     002&&003 STOP  COPY
IEC  246     001     010     001     002&&003 STOP  COPY
```

```

U0 - CNCF
;

rtrv-scr-
cdpa:sr=cdp1:zone=1:area=2:id=3:ssn=1:nsfi=stop:scmgfid=1:pcst=
s

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
SCREEN = ALLOWED CDPA
SR      ZONE  AREA   ID      SSN      SCMGFID  NSFI    NSR/ACT
cdp1   s-1    002    3       1        1        STOP    -----
;

rtrv-scr-cdpa:sr=cdp1

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
SCREEN = ALLOWED CDPA
SR      ZONE  AREA   ID      SSN      SCMGFID  NSFI    NSR/ACT
cdp1   s-2    002    3       1        1        STOP    -----

SR      NPC
cdp1   s-00128          1        1        STOP    -----
;

rtrv-scr-cdpa:sr=cdp2:

eaglestp 28-02-13 12:05:33 EST EAGLE 45.1.0
SCREEN = ALLOWED CDPA
SR      UN   SNA   MNA     SSN      SCMGFID  NSFI    NSR/ACT
cdp2   001  02   01     1        1        STOP    -----
;

```

Legend

For a summary report:

- **REF**—Indicates whether a screen is referenced by another screen. If NO, the screen is not used. For more detailed output, use the `rtrv-scr-cdpa:all=yes` command, or specify the specific screening reference.
- **RULES**—Number of screening rules in that screening table

For a detailed report:

- **SCREEN = ALLOWED CDPA**—Screen type
- **SR**—Screen sets being used. It can be up to four characters in length.
- **NI - NC - NCM**—Point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID . For 24-bit national point codes, these columns are MSA - SSA - SP. For 16-bit ITU national point codes, these

columns are UN - SNA - MNA. For national point codes, these columns become the single column NPC.

- **SSN**—Subsystem number associated with the point code identified by the *ni-nc-ncm*.
- **SCMGFID**—SCMGFID format ID
- **NSFI**—Next screening category to be used
- **NSR/ACT**—Name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

Related Topics

- [chg-scr-cdpa](#)
- [dlt-scr-cdpa](#)
- [ent-scr-cdpa](#)

4.1.560 rtrv-scr-cgpa

Use this command to show the allowed calling party address (CGPA) screening references in the CGPA entity set.

Parameters



Note:

The *nc*, *ncm*, and *ni* parameters can be specified as a single value, range of values, or an asterisk (*). An * value indicates the full range of values. The *area*, *id*, *msa*, *ni*, *nsr*, *ri*, *sp*, *ssa*, *ssn*, *un*, *sna*, *mna*, and *zone* parameters can be specified as a single value or as an *.

actname (optional)

The name of the gateway screening stop action set. Stop actions must be administered using this parameter in conjunction with the gateway screening stop action table (see *chg-gws-actset* and *rtrv-gws-actset*).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —Display gateway screening rules that do not have an assigned gateway screening stop action set

a11 (optional)

Displays all allowed CGPA screening references.

Range:

yes

no

Default:

no

area (optional)

ITU international area. The area in the point code represented by *zone-area-id*.

Range:

000 - 255, *

* —the full range of values from 000–255

id (optional)

ITU international ID. The ID in the point code represented by *zone-area-id*.

Range:

0 - 7, *

* —the full range of values from 0–7

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

0 -- 31, *

* —the full range of values from 0–31

msa (optional)

24-bit ITU national main signaling area. The main signaling area specified in the point code represented by *msa-ssa-sp*.

Range:

000 - 255, *

* —the full range of values from 000-255

nc (optional)

Network cluster identifier value. This parameter displays entries containing this specific cluster of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* — the full range of values from 0–255

Default:

Display all

ncm (optional)

Network cluster member identifier value. This parameter display entries containing this specific cluster member of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* —the full range of values from 0–255

Default:

Display all

ni (optional)

Network identifier value. This parameter displays entries containing this specific network of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* — the full range of values from 0–255

Default:

Display all

npc (optional)

ITU national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A.

Range:

00000 - 16383, *

* —the full range of values from 00000–16383

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: *cdpa*, *stop*, *tt**cdpa* —Allowed called party address point code is the next screening category.*stop* —The gateway screening process ends and the message proceeds through normal routing.*tt* —Allowed translation type point code is the next screening category.**Default:**

Display all

nsr (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process. This parameter is mandatory if *nsfi* is other than *stop* or *fail*. This parameter cannot be entered if *nsfi* is *stop* or *fail*, or the *copy=yes* parameter is specified.

Range:*ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all

pcst (optional)

Point code subtype indicator. This parameter indicates whether the ITU international or ITU national point codes to be displayed must have the spare point code prefix (s-).

Range:

none

No spare point code prefix required.

s

Spare point code prefix required.

Default:

none

ri (optional)

Routing indicator. Routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range:

gt

Allow a called party address with a routing indicator value of "global title."

dpc

Allow a called party address with a routing indicator value of "DPC/SSN."

Allow both routing indicator values.

Default:

Display all

sccpmt (optional)

SCCP message type.

Range:

9

UDT

10

UDTS

17

XUDT

18

XUDTS

All possible allowed values (9, 10, 17, 18)

Default:

Display all SCCP message types

sna (optional)

16-bit ITU national main number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

0 -- 15, *

* —the full range of values from 0–15

sp (optional)

24-bit ITU national signaling point. The signaling point in the point code represented by *msa-ssa-sp*.

Range:

000 - 255, *

* —the full range of values from 000-255

sr (optional)

The CGPA screening reference name

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all.

ssa (optional)

24-bit ITU national sub signaling area. The sub signaling area specified in the point code. represented by *msa-ssa-sp*.

Range:

0 - 255, *

* — the full range of values from 000-255

ssn (optional)

Subsystem number.

Range:

0 - 255, *

* — the full range of values from 0–255

Default:

Display all.

un (optional)

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:

0 -- 127, *

* —the full range of values from 0–127

zone (optional)

ITU international zone. The zone in the point code represented by *zone-area-id*.

Range:

0 - 7, *

* — the full range of values from 0–7

Example

```
rtrv-scr-cgpa:sr=iec:ni=240:nc=001:ncm=010:ssn=012
```

```

rtrv-scr-cgpa:sr=iec:ni=240:nc=001:ncm=010:actname=copy
rtrv-scr-cgpa:sr=cgpl

rtrv-scr-
cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:nsfi=stop:p
cst=s

rtrv-scr-
cgpa:sr=cgpl:un=1:sna=2:mna=1:ssn=1:sccpmt=9:nsfi=stop:ri=*

```

Dependencies

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range 000 – 255.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range 000 – 255.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range 000 – 255.

2511 E2511 Cmd Rej: NC is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 000 – 255, the `ni` and the `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `actname` parameter is specified, the `nsr` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

If the `actname` parameter is specified, the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the `actname` parameter is specified with the screening reference name parameter, the specified value for the `actname` parameter must be assigned to that screening reference name.

3680 E3680 Cmd Rej: No match on ACTNAME parameter during retrieve

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If `zone=*` is specified, `area=*` and `id=*` must be specified.

If `area=*` is specified, `id=*` must be specified.

If `msa=*` is specified, `ssa=*` and `sp=*` must be specified.

If `ssa=*` is specified or re-specified, `sp=*` must also be specified.

If `un=*` is specified, `sna=*` and `mna=*` must be specified.

If `sna=*` is specified, `mna=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

Any specified `ni`, `nc`, `ncm`, `zone`, `area`, `id`, `msa`, `ssa`, `sp`, `un`, `sna`, `mna`, `npc`, `nsfi`, `ri`, `ssn`, and `nsr` parameters must already exist in the CGPA entity for the screening reference.

N/A N/A

If the `pcst` parameter is specified, point codes with the specified subtype prefix (no prefix or s-) must exist in the database.

N/A N/A

The specified screening reference (`sr`) must be in the allowed CGPA entity set.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

If the `nsfi=stop` parameter is specified, the `nsr` parameter cannot be specified.

2550 E2550 Cmd Rej: NSFI / NSR cannot be specified

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` and `npcst` parameters cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command. These values are shown in the `ACT NAME` field of the `rtrv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

If no parameters are specified, the system displays a summary output.

If only the `all=yes` parameter is specified, the system displays a detailed output.

If the `all` parameter and any point code parameter are specified, the `all` parameter is ignored.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (`&&`); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

The spare point code subtype prefix `s-` is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
rtrv-scr-cgpa:sr=iec:ni=240:nc=001:ncm=010:ssn=012
```

```
rlghncxa03w 03-03-14 15:58:16 EST EAGLE 31.3.0
SCREEN = ALLOWED CGPA
SR      NI      NC      NCM      SSN      RI      SCCPMT  NSFI
NSR/ACT
IEC    240      001      010      012      DPC    009&&010 STOP
-----
;
```

```
rtrv-scr-cgpa:sr=iec:ni=240:nc=001-004:ri=dpc:sccpmt=000&&010
```

```
rlghncxa03w 03-03-14 15:58:16 EST EAGLE 31.3.0
SCREEN = ALLOWED CGPA
SR      NI      NC      NCM      SSN      RI      SCCPMT  NSFI
NSR/ACT
IEC    240      001      010      012      DPC    017&&018 STOP
-----
IEC    240      002&&003 *      004      DPC    009      STOP
-----
;
```

```
rtrv-scr-cgpa:actname=none
```

```
rlghncxa03w 03-03-14 15:58:16 EST EAGLE 31.3.0
SCREEN = ALLOWED CGPA
SR      NI      NC      NCM      SSN      RI      SCCPMT  NSFI
NSR/ACT
IEC    240      001      010      012      DPC    017      STOP
-----
IEC    240      001      010      014      GT     *      STOP
-----
IEC    241      002      011      014      GT     *      CDPA    CDP1
-----
;
```



```
rtrv-scr-
cgpa:sr=cg01:nsfi=tt:nsr=tt01:ri=gt:ssn=1:sccpmt=9:msa=255:ssa=255:s
p=255
```

```
tekelecstp 03-03-05 14:41:37 EST EAGLE 31.0.0
SCREEN = ALLOWED CGPA
SR      MSA      SSA      SP      NSFI      NSR/ACT
cg01   255      255      255      1         GT    9         TT      tt01
```

```
;
```

```
rtrv-scr-
cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:nsfi=stop:pcst=s
```

```
tekelecstp 05-01-05 14:41:37 EST EAGLE 31.12.0
SCREEN = ALLOWED CGPA
SR      ZONE     AREA     ID      SSN      RI      SCCPMT  NSFI     NSR/ACT
cgpa   s-1       002      3       1        *      9       STOP    -----
```

```
;
```

```
rtrv-scr-cgpa:sr=cgp1
```

```
tekelecstp 05-01-05 14:41:37 EST EAGLE 31.12.0
SCREEN = ALLOWED CGPA
SR      ZONE     AREA     ID      SSN      RI      SCCPMT  NSFI     NSR/ACT
cgp1   s-2       002      3       1        *      *       STOP    -----

SR      NPC
cgp1   s-00128          SSN      RI      SCCPMT  NSFI     NSR/ACT
                1        *      *       STOP    -----
```

```
;
```

```
rtrv-scr-cgpa:sr=cgp1:
```

```
eaglestp 28-02-13 14:41:37 EST EAGLE 45.1.0
SCREEN = ALLOWED CGPA
SR      UN      SNA      MNA      SSN      RI      SCCPMT  NSFI     NSR/ACT
cgp1   001    02      01      1        *      9       STOP    -----
```

```
;
```

Legend

For a summary report:

- **REF**—Indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the `rtrv-scr-cgpa:all=yes` command, or specify the specific screening reference.
- **RULES**—The number of screening rules in that screening table.

For a detailed report:

- **SCREEN = ALLOWED CGPA**—Screen type
- **SR** —Identifies the screen sets being used. It can be up to four characters in length.
- **NI - NC - NCM**—Point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For 16-bit ITU national point codes, these columns are UN - SNA - MNA. For national point codes, these columns become the single column NPC.
- **SSN**—Subsystem number associated with the point code identified by the *ni-nc-ncm*
- **RI**—Routing indicator in the called party address
- **SCCPMT**—SCCP message type
- **NSFI**—Next screening category to be used
- **NSR/ACT**—Name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

Related Topics

- [chg-scr-cgpa](#)
- [dlt-scr-cgpa](#)
- [ent-scr-cgpa](#)

4.1.561 rtrv-scr-destfld

Use this command to show the attributes of one or more allowed affected destination field (DESTFLD) screening references and associated attributes (destination point code, next screening function identifier, next screening function reference) that are allowed to receive SS7 messages from another network.

Parameters

actname (optional)

The name of the gateway screening stop action set. Stop actions must be administered using this parameter with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display gateway screening rules that do not have an assigned gateway screening stop action set

a11 (optional)

Displays all allowed DPC screening references.

Range:

yes

no

Default:*no***area (optional)**

ITU international area. The area in the point code represented by *zone-area-id*.

Range:*000 - 255, **

* —the full range of values from 000–255

Default:

Display all

id (optional)

ITU international ID. The ID in the point code represented by *zone-area-id*.

Range:*0 - 7, **

* —the full range of values from 0–7

Default:

Display all

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:*0 -- 31, **

* —the full range of values from 0–31

msa (optional)

24-bit ITU national main signaling area. The main signaling area in the point code represented by *msa-ssa-sp*.

Range:*000 - 255, **

* —the full range of values from 000-255

nc (optional)

Network cluster identifier value. This parameter displays entries containing the specific cluster of the point code represented by *ni-nc-ncm*.

Range:*0 - 255, **

* —the full range of values from 0–255

Default:

Display all

ncm (optional)

Network cluster member identifier value. This parameter displays entries containing the specific cluster member of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* — the full range of values from 0–255

Default:

Display all

ni (optional)

Network identifier value. This parameter displays entries containing the specific network of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* —the full range of values from 0–255

Default:

Display all

npc (optional)

ITU national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A.

Range:

00000 - 16383

* —the full range of values from 00000–16383

nsfi (optional)

This parameter indicates that the gateway screening process should stop.

Range:**stop**

the gateway screening process ends and the message proceeds through normal routing

Default:

Display all screening references

nsr (optional)

Next screening reference. This parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range:

none

s

Default:

none

sna (optional)

16-bit ITU national main number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

*0 -- 15, **

* —the full range of values from 0–15

sp (optional)

24-bit ITU national signaling point. The signaling point in the point code represented by *msa-ssa-sp*.

Range:

*000 - 255, **

* —the full range of values from 000-255

sr (optional)

The name of the individual DESTFLD screen to be displayed.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all.

ssa (optional)

24-bit ITU national sub signaling area. The sub signaling area in the point code represented by *msa-ssa-sp*.

Range:

*0 - 255, **

* —the full range of values from 000-255.

un (optional)

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:

*0 -- 127, **

* —the full range of values from 0–127

zone (optional)

ITU international zone. The zone in the point code represented by *zone-area-id*.

Range: 0 - 7, *

0 - 255, *

* — the full range of values from 0–7

Example

```
rtrv-scr-destfld
rtrv-scr-destfld:sr=iec:ni=240:nc=001:ncm=010&&018
rtrv-scr-destfld:sr=iec:id=4:actname=cncf
rtrv-scr-destfld:all=yes
rtrv-scr-destfld:sr=dst1:zone=1:area=2:id=3:nsfi=stop:pcst=s
rtrv-scr-destfld:sr=dst1
rtrv-scr-destfld:sr=iec:un=125:sna=1:mna=10
```

Dependencies

If the `actname` parameter is specified, the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

The `nsfi=stop` parameter must be specified.

3271 E3271 Cmd Rej: NSFI is invalid

The `nsr` parameter cannot be specified in the command if the `nsfi` parameter has a value of *stop* or *fail*.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

If the `actname` parameter is specified, the `nsr` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command. These values are shown in the ACT NAME field of the `rtrv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `actname` parameter is specified with the screening reference name parameter, the specified value for the `actname` parameter must be assigned to that screening reference name.

3680 E3680 Cmd Rej: No match on ACTNAME parameter during retrieve

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range 000 – 255.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range 000 – 255.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range 000 – 255.

2511 E2511 Cmd Rej: NC is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 000 – 255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If the `zone=*` parameter is specified, then the `area=*` and the `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `area=*` parameter is specified, then the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, then the `ssa=*` and the `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and the `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `ssa=*` parameter is specified, then the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

The specified screening reference (`sr`) must be in the allowed DESTFLD entity set.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) or for 16-bit ITU national point codes (parameters `na`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `pcst` parameter is specified, point codes with the specified subtype prefix (no prefix or s-) must exist in the database.

N/A N/A

Any specified `area`, `sna` or `ssa` parameter must already exist in the database.

2528 E2528 Cmd Rej: No match on AREA or SSA parameter during retrieve

Any specified `id`, `sp` or `mna` parameter must already exist in the database.

2532 E2532 Cmd Rej: No match on ID or SP parameter during retrieve

Any specified `zone`, `un` or `msa` parameter must already exist in the database.

2545 E2545 Cmd Rej: No match on ZONE or MSA parameter during retrieve

Any specified `nc` parameter must already exist in the database.

2533 E2533 Cmd Rej: No match on NC parameter during retrieve

Any specified `ncm` parameter must already exist in the database.

2534 E2534 Cmd Rej: No match on NCM parameter during retrieve

Any specified `ni` parameter must already exist in the database.

2535 E2535 Cmd Rej: No match on NI parameter during retrieve

Any specified `npc` parameter must already exist in the database.

2537 E2537 Cmd Rej: No match on NPC parameter during retrieve

Any specified `nsfi` parameter must already exist in the database.

2538 E2538 Cmd Rej: No match on NSFI parameter during retrieve

Any specified `nsr` parameter must already exist in the database.

2539 E2539 Cmd Rej: No match on NSR parameter during retrieve

Any specified `pcst` parameter must already exist in the database.

4269 E4269 Cmd Rej: No match on PCST parameter during retrieve

If the `nsfi=fail` parameter is specified, then the `nni`, `nc`, `ncm`, `narea`, `nzone`, `nid`, `nmsa`, `nssa`, `nsp`, `nun`, `nsna`, `nmna`, and `npc` parameters cannot have a value of `c`.

2527 E2527 Cmd Rej: C value not allowed

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

If no parameters are specified, the system displays a summary output.

If only the `all=yes` parameter is specified, the system displays a detailed output.

If the `all` parameter and any point code parameter are specified, the `all` parameter is ignored.

The REF column of the output of this command displays YES when the screen is referenced by another screen; otherwise, it displays NO.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
rtrv-scr-destfld
```

```
rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = ALLOWED DESTFLD
SR   REF  RULES
IEC  YES   2
WRD2 YES   1
WRD3 NO    4
WRD4 YES   9
```

```
;
```

```
rtrv-scr-destfld:sr=iec:ni=240:nc=001:ncm=010&&018
```

```
rlghncxa03w 03-03-13 13:13:21 EST EAGLE 31.3.0
SCREEN = ALLOWED DESTFLD
SR   NI      NC      NCM      NSFI  NSR/ACT
IEC  240      001      010&&020 STOP  -----
```

```
;
```

```
rtrv-scr-destfld:sr=iec:id=4:actname=cncf
```

```
rlghncxa03w 03-03-13 13:13:56 EST EAGLE 31.3.0
SCREEN = ALLOWED DESTFLD
SR   ZONE   AREA   ID      NSFI  NSR/ACT
IEC  1       003    4       STOP  CNCF
```

```
;
```

```
rtrv-scr-destfld:all=yes
```

```
rlghncxa03w 03-03-13 13:14:18 EST EAGLE 31.3.0
SCREEN = ALLOWED DESTFLD
SR   NI      NC      NCM      NSFI     NSR/ACT
IEC  240     001     010     STOP    CNCF
IEC  241     010     *       STOP    -----

SR   ZONE    AREA    ID      NSFI     NSR/ACT
IEC  1       003     4       STOP    -----
IEC  1       003     5       STOP    CR

SR   NPC
IEC  00235
IEC  00240
NSFI     NSR/ACT
STOP    CNCF
STOP    -----
```

```
;
```

```
rtrv-scr-destfld:sr=dst1:zone=1:area=2:id=3:nsfi=stop:pcst=s
```

```
tekelecstp 05-01-06 11:40:26 EST EAGLE 31.12.0
SCREEN = ALLOWED DESTFLD
SR      ZONE  AREA  ID      NSFI     NSR/ACT
dst1  s-1    002   3       STOP    -----
```

```
;
```

```
rtrv-scr-destfld:sr=dst1
```

```
tekelecstp 05-01-06 11:40:26 EST EAGLE 31.12.0
SCREEN = ALLOWED DESTFLD
SR      ZONE  AREA  ID      NSFI     NSR/ACT
dst1  s-1    002   3       STOP    -----

SR      NPC
dst1  s-00128
NSFI     NSR/ACT
STOP    -----
```

```
;
```

```
rtrv-scr-destfld:sr=ds01
```

```
tekelecstp 13-07-05 16:27:55 EST 45.0.0-64.69.0
rtrv-scr-destfld:sr=ds01
Command entered at terminal #4.
SCREEN = ALLOWED DESTFLD
SR      UN      SNA    MNA     NSFI     NSR/ACT
ds01   001     14     01     STOP    -----
```

```
;
```

Legend

For a summary report:

- **REF**—Indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the `rtrv-scr-destfld:all=yes` command, or specify the specific screening reference.
- **RULES**—Number of screening rules in that screening table.

For a detailed report:

- **SCREEN = ALLOWED DESTFLD**—Screen type
- **SR**—Identifies the various screen sets being used. It can be up to four characters in length.
- **NI - NC - NCM**—Point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For 16-bit ITU national point codes, these columns are UN-SNA-MNA. For national point codes, these columns become the single column NPC.
- **NSFI**—Next screening category to be used
- **NSR/ACT**—Name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

Related Topics

- [chg-gws-actset](#)
- [chg-scr-destfld](#)
- [dlt-scr-destfld](#)
- [ent-scr-destfld](#)
- [rtrv-gws-actset](#)

4.1.562 rtrv-scr-dpc

Use this command to show the attributes of one or more allowed DPC screening references and associated attributes (destination point code, next screening function identifier, next screening function reference) that are allowed to receive SS7 messages from another network.

Parameters

actname (optional)

The name of the gateway screening stop action set. Stop actions must be administered using this parameter with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —Display gateway screening rules that do not have an assigned gateway screening stop action set

a11 (optional)

Displays all allowed DPC screening references.

Range:

yes

no

Default:

no

area (optional)

ITU international area. The area in the point code represented by *zone-area-id*.

Range:

*000 - 255, **

*—the full range of values from 000–255

id (optional)

ITU international ID. The ID in the point code represented by *zone-area-id*.

Range:

*0 - 7, **

*—the full range of values from 0–7

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

*0 -- 31, **

*—the full range of values from 0–31

msa (optional)

24-bit ITU national main signaling area. The main signaling area specified in the point code represented by *msa-ssa-sp*.

Range:

000 - 255

* — the full range of values from 000-255

nc (optional)

Network cluster identifier value. This parameter displays entries containing the specific cluster of the point code represented by *ni-nc-ncm*.

Range:

*0 - 255, **

*—the full range of values from 0–255

Default:

Display all

ncm (optional)

Network cluster member identifier value. This parameter displays entries containing this specific cluster member of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* —the full range of values from 0–255

Default:

Display all

ni (optional)

Network identifier value. This parameter displays entries containing this specific network of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

* —the full range of values from 0–255

Default:

Display all

npc (optional)

ITU national point code.

 **Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. For multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#).

Range:

00000 - 16383, *

* —the full range of values from 00000–16383

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:***blkdpc***

Blocked DPC is the next screening category

cgpa

Allowed calling party address is the next screening category.

destfld

Allowed destination field (DESTFLD) is the next screening category.

isup

ISUP message type (ISUP) is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

Default:

Display all screening references

nsr (optional)

Next screening reference parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process. This parameter is mandatory if *nsfi* is other than *stop* or *fail*. The *nsr* parameter cannot be entered if *nsfi* is *stop* or *fail*, or the *copy=yes* parameter is specified.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all

pcst (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (S-).

Range:

none

s

Default:

none

sna (optional)

16-bit ITU national main number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

*0 -- 15, **

* —the full range of values from 0–15

sp (optional)

24-bit ITU national signaling point. The signaling point in the point code represented by *msa-ssa-sp*.

Range:

*000 - 255, **

* —the full range of values from 000-255

sr (optional)

The allowed DPC screening reference name

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all.

ssa (optional)

24-bit ITU national sub signaling area. The sub signaling area in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

* — the full range of values from 000-255

un (optional)

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:

0 -- 127, *

* —the full range of values from 0–127

zone (optional)

ITU international zone. The zone in the point code represented by *zone-area-id*.

Range:

0 - 7, *

* — the full range of values from 0–7

Example

```
rtrv-scr-dpc
```

```
rtrv-scr-dpc:sr=iec:ni=240:nc=001:ncm=010&&018
```

```
rtrv-scr-dpc:sr=iec:id=4
```

```
rtrv-scr-dpc:all=yes
```

```
rtrv-scr-dpc:all=yes:actname=cncf
```

```
rtrv-scr-dpc:sr=dpc1:npc=128:nsfi=stop:pcst=s
```

```
rtrv-scr-dpc:sr=dpc2:un=1:sna=2:mna=3
```

Dependencies

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

The specified screening reference (*sr*) must be in the allowed DPC entity set.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

Any specified *ni* parameter must already exist in the allowed DPC entity for the screening reference.

2535 E2535 Cmd Rej: No match on NI parameter during retrieve

The Spare Point Code Support feature must be enabled before the *pcst* parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters *ni*, *nc*, *ncm*) or for 24-bit ITU national point codes (parameters *msa*, *ssa*, *sp*) or for 16-bit

ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `pcst` parameter is specified, point codes with the specified subtype prefix (no prefix or `s-`) must exist in the database.

N/A N/A

If the `ni=*` parameter is specified, then the `nc=*` and `ncm=*` parameters must be specified.

N/A N/A

If the `nc=*` parameter is specified, then the `ncm=*` parameter must be specified.

N/A N/A

If the `zone=*` parameter is specified, then the `area=*` and the `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `area=*` parameter is specified, then the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, then the `ssa=*` and the `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and the `mna=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `ssa=*` parameter is specified, then the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the value of the `nsfi=stop` parameter is specified, then the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

If the `nsr` parameter is specified, then the `actname` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

If the `actname` parameter is specified, then the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command. These values are shown in the ACT NAME field of the `rtrv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `actname` parameter is specified with the screening reference name parameter, the specified value for the `actname` parameter must be assigned to that screening reference name.

3680 E3680 Cmd Rej: No match on ACTNAME parameter during retrieve

Any specified `npc` parameter must already exist in the allowed DPC entity for the screening reference.

2537 E2537 Cmd Rej: No match on NPC parameter during retrieve

Any specified `ncm` parameter must already exist in the allowed DPC entity for the screening reference.

2534 E2534 Cmd Rej: No match on NCM parameter during retrieve

Any specified `nc` parameter must already exist in the allowed DPC entity for the screening reference.

2533 E2533 Cmd Rej: No match on NC parameter during retrieve

Any specified `nsfi` parameter must already exist in the allowed DPC entity for the screening reference.

2538 E2538 Cmd Rej: No match on NSFI parameter during retrieve

Any specified `nsr` parameter must already exist in the allowed DPC entity for the screening reference.

2539 E2539 Cmd Rej: No match on NSR parameter during retrieve

Any specified `pcst` parameter must already exist in the allowed DPC entity for the screening reference.

4269 E4269 Cmd Rej: No match on PCST parameter during retrieve

Any specified `area`, `sna` or `ssa` parameter must already exist in the allowed DPC entity for the screening reference.

2528 E2528 Cmd Rej: No match on AREA or SSA parameter during retrieve

Any specified `id`, `mna` or `sp` parameter must already exist in the allowed DPC entity for the screening reference.

2532 E2532 Cmd Rej: No match on ID or SP parameter during retrieve

Any specified `zone`, `un` or `msa` parameter must already exist in the allowed DPC entity for the screening reference.

2545 E2545 Cmd Rej: No match on ZONE or MSA parameter during retrieve

If the `nsfi=fail` parameter is specified, then the `ni`, `nc`, `ncm`, `area`, `zone`, `nid`, `msa`, `ssa`, `sp`, `un`, `sna`, `mna`, and `npc` parameters cannot have a value of `c`.

2527 E2527 Cmd Rej: C value not allowed

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

If no parameters are specified, a list of allowed DPC references is displayed indicating whether they are referenced or not.

If a single allowed DPC screening reference is specified, the specified entity set requested is shown.

If `all=yes` and no other parameter is specified, detailed information for all of the screening reference entities in the allowed DPC entity set are shown.

If the `all` parameter is specified and other parameters are also specified, the `all` parameter is ignored.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100 .

The spare point code subtype prefix (s-) is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
rtrv-scr-dpc
```

```
rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR   REF  RULES
IEC  YES   2
WRD2 YES   1
WRD3 NO    4
WRD4 YES   9
```

```
;
```

```
rtrv-scr-dpc:sr=iec:ni=240:nc=001:ncm=010&&018
```

```
rlghncxa03w 03-03-13 13:13:21 EST EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR   NI      NC      NCM      NSF1    NSR/ACT
IEC  240      001      010&&020 STOP    -----
```

```
;
```

```
rtrv-scr-dpc:sr=iec:id=4
```

```
rlghncxa03w 03-03-13 13:13:56 EST EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR      ZONE      AREA      ID          NSFI      NSR/ACT
IEC    1          003      4           BLKOPC   blk1
```

```
;
```

```
rtrv-scr-dpc:all=yes
```

```
rlghncxa03w 03-03-13 13:14:18 EST EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR      NI        NC         NCM         NSFI      NSR/ACT
IEC    240        001       010        STOP     -----
IEC    241        010       *          CGPA     cg04
```

```
SR      ZONE      AREA      ID          NSFI      NSR/ACT
IEC    1          003      4           BLKDPC   blk1
IEC    1          003      5           STOP     -----
```

```
SR      NPC                NSFI      NSR/ACT
IEC    00235              CGPA     cg04
IEC    00240              CGPA     cg01
```

```
;
```

```
rtrv-scr-dpc:sr=dpc1:actname=copy
```

```
rlghncxa03w 03-03-13 13:16:13 EST EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR      NI        NC         NCM         NSFI      NSR/ACT
dpc1   010        010       010        STOP     COPY
dpc1   010        010       012        STOP     COPY
```

```
;
```

```
rtrv-scr-dpc:sr=dpc1:npc=128:pcst=s
```

```
tekelecstp 05-01-06 11:29:11 EST EAGLE 31.12.0
SCREEN = ALLOWED DPC
SR      NPC                NSFI      NSR/ACT
dpc1   s-00128            STOP     -----
```

```
;
```

```
rtrv-scr-dpc:sr=dpc1
```

```
tekelecstp 05-01-06 11:29:11 EST EAGLE 31.12.0
SCREEN = ALLOWED DPC
SR      ZONE      AREA      ID          NSFI      NSR/ACT
```

```

dpc1 s-1      002      3          STOP      -----
SR      NPC
dpc1 s-00128          NSFI      NSR/ACT
STOP      -----
;

```

```
dlt-scr-dpc:sr=dpc2:
```

```

eaglestp 28-02-13 13:13:56 EST  EAGLE 45.1.0
SCREEN = ALLOWED DPC
SR      UN      SNA      MNA          NSFI      NSR/ACT
dpc2  001      02      01          STOP      -----
;

```

Legend

For a summary report:

- **REF**—Indicates whether a screen is referenced by another screen. If NO, the screen is not used. For more detailed output, use the `rtrv-scr-dpc:all=yes` command, or specify the specific screening reference.
- **RULES**—Number of screening rules in that screening table

For a detailed report:

- **SCREEN = ALLOWED DPC**—Screen type
- **SR**—Identifies the screen sets being used. It can be up to four characters in length.
- **NI-NC-NCM**—Point code referenced within the screen. For international point codes, these columns are ZONE-AREA-ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For 16-bit ITU national point codes, these columns are UN-SNA-MNA. For national point codes, these columns become the single column NPC.
- **NSFI**—Next screening category to be used
- **NSR/ACT**—Name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

Related Topics

- [chg-scr-dpc](#)
- [chg-gws-actset](#)
- [dlt-scr-dpc](#)
- [ent-scr-dpc](#)
- [rtrv-gws-actset](#)

4.1.563 rtrv-scr-isup

Use this command to display one allowed ISUP screening reference or all allowed ISUP screening references in the Allowed ISUP entity set.

Parameters

actname (optional)

The name of the gateway screening stop action set. Stop actions must be administered using this parameter with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

a11 (optional)

This parameter displays all allowed ISUP screening references in the Allowed ISUP entity set.

Range:

yes

no

Default:

no

isupmt/tupmt (optional)

ISUP message type or TUP message type in the specified entry. The `tupmt` parameter is not valid for SEAS. A single value or range of values can be entered.

Range:

*000 - 255, **

*—the entire range of 0-255

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process.

Range: stop ,

stop —The gateway screening process ends and the message proceeds through normal routing.

nsr (optional)

Next screening reference.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

No value given

sr (optional)

The individual ISUP screen to be displayed.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Example

```
rtrv-scr-isup:sr=iec:isupmt=1:nisupmt=1&&2
```

```
rtrv-scr-isup:sr=tu01:tupmt=0&&255
```

Dependencies

If the `nsfi` parameter is specified, the value must be `stop`.

N/A N/A

The `nsr` parameter cannot be specified if the `actname` parameter is specified.

N/A N/A

The `nsr` parameter cannot be specified if the `nsfi=stop` parameter is specified.

N/A N/A

If `sr` is specified, the value must exist in the database.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The value of the `actname` parameter must be defined in the gateway screening stop action table with the `chg-gws-actset` command. These values are shown in the ACT NAME field of the `rtrv-gws-actset` command output.

N/A N/A

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

A range of values for the `isupmt` or `tupmt` parameter can be specified by separating the values that define the range by two ampersands (`&&`); for example, `isupmt=025&&100` specifies all ISUP message types from 25 - 100. The value to the left of the `&&` must be less than the value to the right of the `&&` in the range.

An asterisk can be used for a parameter value in the `chg/dlt/rtrv-scr-isup` commands only if that parameter value was specified as an asterisk in the `ent-scr-isup` command to define the parameter value.

If no parameters are specified, a list of allowed ISUP references is produced indicating whether they are referenced or not.

Output

```
rtrv-scr-isup
```

```
tekelecstp 02-09-02 11:10:38 EST EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR   REF  RULES
iall NO    1
ibig NO    1
iec  NO    2
is01 YES   1
is02 YES   1
isu  NO    1
isu1 NO    1
isu2 NO    1
isw1 NO    1
```

```
;
```

```
rtrv-scr-isup:sr=iall
```

```
tekelecstp 02-09-02 11:13:25 EST EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR   ISUPMT  NSFI  NSR/ACT
iall *        STOP  -----
```

```
;
```

```
rtrv-scr-isup:sr=iec:isupmt=1&&9
```

```
tekelecstp 02-09-02 11:13:25 EST EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR   ISUPMT  NSFI  NSR/ACT
iec  001&&002 STOP  -----
iec  009      STOP  -----
```

```
;
```

```
rtrv-scr-isup:isupmt=*
```

```
tekelecstp 02-09-02 11:13:25 EST EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR   ISUPMT  NSFI  NSR/ACT
iall *        STOP  -----
isu2 *        STOP  -----
isw1 *        STOP  -----
```

```
;
```

```
rtrv-scr-isup:sr=tu01:tupmt=0&&255
```

```
tekelecstp 03-11-13 13:10:02 EST EAGLE 31.4.0
SCREEN = ALLOWED ISUP
SR  ISUPMT  NSFI  NSR/ACT
    TUPMT/
tu01 002      STOP  -----
```

```
;
```

```
rtrv-scr-isup:all=yes
```

```
tekelecstp 02-09-13 13:10:02 EST EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR  ISUPMT  NSFI  NSR/ACT
is01 001      STOP  -----
is02 001&&010 STOP  -----
is03 *        STOP  -----
```

```
;
```

Legend

- **REF**—Indicates whether a screen is referenced by another screen. If NO, the screen is not used. For more detailed output, use the `rtrv-scr-isup:all=yes` command, or specify the specific screening reference.
- **RULES**—Number of screening rules in that screening table

For a detailed report:

- **SCREEN = ALLOWED ISUP**—Screen type
- **SR**—Identifies the various screen sets being used. It can be up to four characters in length.
- **ISUPMT/TUPMT**—ISUP or TUP Message type in the entry
- **NSFI**—Next screening category to be used
- **NSR/ACT**—Name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

Related Topics

- [chg-scr-isup](#)
- [dlt-scr-isup](#)
- [ent-scr-isup](#)

4.1.564 rtrv-scr-opc

Use this command to show an allowed OPC screening reference and associated attributes (originating point code, next screening function identifier, next screening function reference).

Parameters

actname (optional)

Name of the gateway screening stop action set. Stop actions must be administered using this parameter with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —Display gateway screening rules that do not have an assigned gateway screening stop action set

a11 (optional)

Displays all allowed OPC screening references.

Range:

yes

no

Default:

Display all

area (optional)

ITU international area. The area in the point code represented by *zone-area-id*.

Range:

*000 - 255, **

* —the full range of values from 000–255

id (optional)

ITU international ID. The ID in the point code represented by *zone-area-id*.

Range:

*0 - 7, **

* —the full range of values from 0–7

mna (optional)

16-bit ITU national main number area. The *mna* in the point code represented by *un-sna-mna*.

Range:

*0 -- 31, **

* —the full range of values from 0–31

msa (optional)

24-bit ITU national main signaling area. The main signaling area in the point code represented by *msa-ssa-sp*.

Range:

*000 - 255, **

* —the full range of values from 000-255

nc (optional)

Network cluster identifier value. This parameter displays entries containing this specific cluster of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

Display all

ncm (optional)

Network cluster member identifier value. This parameter displays entries containing this specific cluster member of the point code represented by *ni-nc-ncm*.

Range:

0 - 255, *

*—the full range of values from 0–255

Default:

Display all

ni (optional)

Network identifier value. This parameter displays entries containing this specific network of the point code represented by *ni-nc-ncm*.

Range:

0 - 255

*—the full range of values from 0–255

Default:

Display all

npc (optional)

ITU national point code.

**Note:**

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see [Converting ITU National Point Code Formats](#) in Appendix A.

Range:

00000 - 16383, *

*—the full range of values from 00000–16383

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:***blkopc***

Blocked OPC is the next screening category.

sio

Allowed SIO is the next screening category

dpc

Allowed DPC is the next screening category.

blkdpc

Blocked DPC is the next screening category

cgpa

Allowed calling party address is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

Default:

Display all screening references

***nsr* (optional)**

Next Screening Reference. This parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process. This parameter is mandatory if *nsfi* is other than *stop* or *fail*. This parameter cannot be specified if *nsfi* is *stop* or *fail*, or the *copy=yes* parameter is specified.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all

***pcst* (optional)**

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (S-).

Range:

none

s

Default:

none

***sna* (optional)**

16-bit ITU national sub number area. The *sna* in the point code represented by *un-sna-mna*.

Range:

0 -- 15, *

* —the full range of values from 0–15

sp (optional)

24-bit ITU national signaling point. The signaling point in the point code represented by *msa-ssa-sp*.

Range:

000 - 255, *

* —the full range of values from 000-255

sr (optional)

The allowed OPC screening reference name

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all.

ssa (optional)

24-bit ITU national sub signaling area. The sub signaling area *i* in the point code represented by *msa-ssa-sp*.

Range:

0 - 255, *

* — the full range of values from 000-255

un (optional)

16-bit ITU-national unit number. The *un* of the point code represented by *un-sna-mna*.

Range:

0 -- 127, *

* —the full range of values from 0–127

zone (optional)

ITU international zone. The zone in the point code represented by *zone-area-id*.

Range:

0 - 7, *

* —the full range of values from 0–7

Example

```
rtrv-scr-opc
```

```
rtrv-scr-opc:sr=iec:ni=240:nc=001:ncm=010&&018
```

```
rtrv-scr-opc:sr=iec:id=4
```

```
rtrv-scr-opc:all=yes
```

```
rtrv-scr-opc:sr=opc1:actname=cr
```

```
rtrv-scr-opc:sr=opc1:npc=128:nsfi=fail:pcst=s
```

```
rtrv-scr-opc:sr=opc2:un=1:sna=2:mna=3
```

Dependencies

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

2564 E2564 Cmd Rej: Point code out of range

If the `ni=*` parameter is specified, the `nc=*` and `ncm=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `nc=*` parameter is specified, then the `ncm=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `zone=*` parameter is specified, then the `area=*` and `id=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `area=*` parameter is specified, then the `id=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `msa=*` parameter is specified, then the `ssa=*` and `sp=*` parameters must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `ssa=*` parameter is specified, then the `sp=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `un=*` parameter is specified, then the `sna=*` and the `mna=*` must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `sna=*` parameter is specified, then the `mna=*` parameter must be specified.

2495 E2495 Cmd Rej: Point codes contain invalid wild card combinations

If the `ni` parameter is specified as an asterisk or as a range, the `nc` and `ncm` parameters must be specified as an asterisk or as the full range 000 – 255.

2511 E2511 Cmd Rej: NC is invalid

If the `nc` parameter is specified as an asterisk, the `ncm` parameter must be specified as an asterisk or as the full range 000 – 255.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a single value or a range, a single value must be specified for the `ni` parameter.

2512 E2512 Cmd Rej: NCM is invalid

If the `nc` parameter is specified as a range, the `ncm` parameter must be specified as an asterisk or as the full range 000 – 255.

2512 E2512 Cmd Rej: NCM is invalid

If the `ncm` parameter is specified as a single value, or a range other than the full range of 000 – 255, the `ni` and `nc` parameters must be specified with a single value.

2512 E2512 Cmd Rej: NCM is invalid

If the `nsr` parameter is specified, then the `actname` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

If the `actname` parameter is specified, the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the `nsfi=stop` parameter is specified, then the `nsr` parameter cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

The value of the `actname` parameter must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command. These values are shown in the ACT NAME field of the `rtrv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `actname` parameter is specified with the screening reference name parameter, the specified value for the `actname` parameter must be assigned to that screening reference name.

3680 E3680 Cmd Rej: No match on ACTNAME parameter during retrieve

The specified screening reference must be in the allowed OPC entity set.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Spare Point Code Support feature must be enabled before the `pcst` parameter can be specified.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters `ni`, `nc`, `ncm`) or for 24-bit ITU national point codes (parameters `msa`, `ssa`, `sp`) for 16-bit ITU national point codes (parameters `un`, `sna`, `mna`). The `pcst` parameter cannot be specified for ANSI, ITU-N16 or ITU-N24 point codes.

4264 E4264 Cmd Rej: Parameter PCST / NPCST is not allowed with C for blocked SR

If the `pcst` parameter is specified, point codes with the specified subtype prefix (no prefix or s-) must exist in the database.

N/A N/A

Any specified `ni` parameter must already exist in the allowed OPC entity for the screening reference.

2535 E2535 Cmd Rej: No match on NI parameter during retrieve

Any specified `nc` parameter must already exist in the allowed OPC entity for the screening reference.

2533 E2533 Cmd Rej: No match on NC parameter during retrieve

Any specified `ncm` parameter must already exist in the allowed OPC entity for the screening reference.

2534 E2534 Cmd Rej: No match on NCM parameter during retrieve

Any specified `npc` parameter must already exist in the allowed OPC entity for the screening reference.

2537 E2537 Cmd Rej: No match on NPC parameter during retrieve

Any specified `nsfi` parameter must already exist in the allowed OPC entity for the screening reference.

2538 E2538 Cmd Rej: No match on NSFI parameter during retrieve

Any specified `nsr` parameter must already exist in the allowed OPC entity for the screening reference.

2539 E2539 Cmd Rej: No match on NSR parameter during retrieve

Any specified `pcst` parameter must already exist in the allowed OPC entity for the screening reference.

4269 E4269 Cmd Rej: No match on PCST parameter during retrieve

Any specified `area`, `sna` or `ssa` parameter must already exist in the allowed OPC entity for the screening reference.

2528 E2528 Cmd Rej: No match on AREA or SSA parameter during retrieve

Any specified `id`, `mna` or `sp` parameter must already exist in the allowed OPC entity for the screening reference.

2532 E2532 Cmd Rej: No match on ID or SP parameter during retrieve

Any specified `zone`, `un` or `msa` parameter must already exist in the allowed OPC entity for the screening reference.

2545 E2545 Cmd Rej: No match on ZONE or MSA parameter during retrieve

If the `nsfi=fail` parameter is specified, then the `ni`, `nc`, `ncm`, `area`, `zone`, `id`, `msa`, `ssa`, `sp`, `un`, `sna`, `mna`, and `npc` parameters cannot have a value of `c`.

2527 E2527 Cmd Rej: C value not allowed

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

If no parameters are specified, a list of allowed OPC references is produced indicating whether they are referenced or not.

If a single allowed OPC screening reference is specified, the specified entity set requested is shown.

If `all=yes` and no other parameter is specified, detailed information for all of the screening reference entities in the allowed OPC entity set are shown.

If `all` is specified and other parameters are also specified, the `all` parameter is ignored.

An asterisk specified as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (`&&`); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

The spare point code subtype prefix `s-` is supported only for ITU international and ITU national point codes. The `pcst` parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
rtrv-scr-opc
```

```
rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
SR   REF  RULES
IEC  YES   2
WRD2 YES   1
WRD3 NO    4
WRD4 YES   9
```

```
;
```

```
rtrv-scr-opc:sr=iec:ni=240:nc=001:ncm=010&&018
```

```
rlghncxa03w 03-03-13 13:13:21 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
SR   NI      NC      NCM      NSFI      NSR/ACT
IEC  240     001     010&&020 STOP     -----
```

```
;
```

```
rtrv-scr-opc:sr=iec:id=4
```

```
rlghncxa03w 03-03-13 13:13:56 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
SR   ZONE   AREA   ID      NSFI      NSR/ACT
IEC  1       003    4       BLKOPC   blk1
```

```
;
```

```
rtrv-scr-opc:all=yes
```

```
rlghncxa03w 03-03-13 13:14:18 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
SR   NI      NC      NCM      NSFI      NSR/ACT
IEC  240     001     010     STOP     -----
IEC  241     010     *       CGPA     cg04
```



```
SR      ZONE      AREA      ID      NSFI      NSR/ACT
IEC     1          003      4       BLKOPC    blk1
IEC     1          003      5       STOP      -----

SR      NPC
IEC     00235
IEC     00240
NSFI    NSR/ACT
CGPA    cg04
CGPA    cg01

SR      NI          NC          NCM         NSFI        NSR/ACT
WRD2   243          015         001         STOP        -----
WRD3   243          105         002         CGPA        WRD4
;
```

```
rtrv-scr-opc:sr=opc1:actname=cr
```

```
rlghncxa03w 03-03-13 13:16:13 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
SR      NI          NC          NCM         NSFI        NSR/ACT
opc1   010          010         010         STOP        CR
opc1   010          010         012         STOP        CR
;
```

```
rtrv-scr-opc:sr=op55
```

```
tekelecstp 03-03-06 11:30:42 EST EAGLE 31.0.0
SR      MSA          SSA          SP          NSFI        NSR/ACT
op55   007          077          007         BLKOPC     bo55
;
```

```
rtrv-scr-opc:sr=opc1:npc=128:nsfi=fail
```

```
tekelecstp 05-01-06 11:30:42 EST EAGLE 31.12.0
SR      NPC
opc1   s-00128
NSFI    NSR/ACT
FAIL    -----
;
```

```
rtrv-scr-opc:sr=opc2:
```

```
eaglestp 28-02-13 13:13:56 EST EAGLE 45.1.0
SCREEN = ALLOWED OPC
SR      UN          SNA          MNA         NSFI        NSR/ACT
opc2   001          02           01          STOP        -----
;
```

Legend

For a summary report:

- **REF**—Indicates whether a screen is referenced by another screen. If NO, the screen is not used. For more detailed output, use the `rtrv-scr-opc:all=yes` command, or specify the specific screening reference.
- **RULES**—Number of screening rules in that screening table

For a detailed report:

- **SCREEN = ALLOWED OPC**—Screen type
- **SR**—Identifies the various screen sets being used. It can be up to four characters in length
- **NI - NC - NCM**—Point code referenced within the screen. For international point codes, these columns are ZONE-AREA-ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For 16-bit ITU national point codes, these columns are UN-SNA-MNA. For national point codes, these columns become the single column NPC.
- **NSFI**—Next screening category to be used
- **NSR/ACT**—Name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

Related Topics

- [chg-scr-opc](#)
- [chg-gws-actset](#)
- [dlt-scr-opc](#)
- [ent-scr-opc](#)
- [rtrv-gws-actset](#)

4.1.565 rtrv-scr-sio

Use this command to show the attributes of one or more `nic/si/h0/h1` combinations that are allowed for SS7 messages from another network.

Parameters

actname (optional)

Name of the gateway screening stop action set. Stop actions must be administered using this parameter with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

`ayyyy`

1 alphabetic character followed by up to 5 alphanumeric characters.

`none` —Display gateway screening rules that do not have an assigned gateway screening stop action set

a11 (optional)

Displays all allowed SIO screening references.

Range:

yes

no

Default:

no

h0 (optional)

H0 heading code. A single value or a range of values can be specified.

Range:

*0 - 15, **

* — all possible values from 0–15

Default:

Display all

h1 (optional)

H1 heading code. A single value or a range of values can be specified.

Range:

*0 - 15, **

* —all possible values from 0–15

Default:

Display all

nic (optional)

Network indicator code.

Range:

*0 - 3, **

* — all possible values from 0–3

Default:

Display all

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range:

blkdpc

Blocked DPC is the next screening category.

cgpa

Allowed calling party address is the next screening category.

cdpa

Allowed called party address is the next screening category.

destfld

Allowed destination field (DESTFLD) is the next screening category.

dpc

Allowed DPC is the next screening category.

isup

ISUP message type (ISUP) is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

Default:

Display all screening references

nsr (optional)

Next screening reference. This parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process. This parameter is mandatory if *nsfi* is other than *stop*; cannot be entered if *nsfi=stop*.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all

pri (optional)

Message priority. A single value or a range of values can be specified.

Range:

0 - 3

*—all possible values from 0–3

Default:

Display all

si (optional)

Service indicator.

Range:

*0 - 15, **

*—all possible values from 0–15

Default:

Display all

sr (optional)

Allowed SIO screening reference name

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all

Example

```

rtrv-scr-sio
rtrv-scr-sio:sr=iec:nic=1:si=3:pri=2&&3
rtrv-scr-sio:sr=sio1:nic=1:si=1
rtrv-scr-sio:sr=sio1:nic=1:si=1:h0=1:h1=*
rtrv-scr-sio:sr=sio1:si=1:h0=1:h1=1
rtrv-scr-sio:all=yes
rtrv-scr-sio:sr=iec:nic=1:si=1:actname=crncf

```

Dependencies

If the `si` parameter is not equal to 00, 01, or 02, the `h0` and `h1` parameters cannot be specified.

N/A N/A

If the `nic`, `si`, and `h0/h1` parameters are specified, the SIO screening reference must be in the allowed SIO entity set.

N/A N/A

The `nic` parameter must be specified if the `si` parameter is specified.

2521 E2521 Cmd Rej: NIC must be specified for given SI

The `nic` and `si` parameters must be specified if the `h0` and `h1` parameters are specified.

N/A N/A

If an asterisk value is specified for the `h0` parameter, the `h1` parameter cannot be specified.

N/A N/A

If the `nsfi=stop` parameter is specified, then the `nsr` parameter cannot be specified.

2550 E2550 Cmd Rej: NSFI / NSR cannot be specified

If the `actname` parameter is specified, then the `nsfi=stop` parameter must be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

If the `nsr` parameter is specified, then the `actname` parameter cannot be specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

If the `actname` parameter is specified with the screening reference name parameter, the specified value for the `actname` parameter must be assigned to that screening reference name.

3680 E3680 Cmd Rej: No match on ACTNAME parameter during retrieve

The value of the `actname` parameter must be defined in the gateway screening stop action table with the `chg-gws-actset` command. These values are shown in the ACT NAME field of the `rtrv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

If the `sr` parameters are specified, the SIO screening reference must be in the allowed SIO entity set.

2573 E2573 Cmd Rej: SR or NSR does not reference an existing SR

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

Valid `nsfi` parameter combinations must be specified.

3271 E3271 Cmd Rej: NSFI is invalid

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

For SEAS commands, the `pri` parameter specified must be in the range 0-3, *.

2562 E2562 Cmd Rej: A specific PRI must be specified in the range (0-3, *)

For SEAS commands, the `h0` parameter specified must be in the range 0-15, *.

2563 E2563 Cmd Rej: A specific H0 must be specified in the range (0-15, *)

For SEAS commands, the `h1` parameter specified must be in the range 0-15, *.

2566 E2566 Cmd Rej: A specific H1 must be specified in the range (0-15, *)

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

If no parameters are specified, a list of allowed SIO references is output indicating whether they are referenced or not.

If only the `all=yes` parameter is specified, detailed information for every rule in every allowed SIO screening table is displayed.

If the `all` parameter is specified and other parameters are also specified, the `all` parameter is ignored.

Output

```
rtrv-scr-sio
```

```
SCREEN = ALLOWED SIO
SR      REF  RULES
s       NO   1
s999   NO   1
si      NO   1
si01   NO   1
si1    NO   1
sio1   NO   3
```

```
swl1 NO 1
swl2 NO 1
;

rtrv-scr-sio:sr=iec:nic=1:si=3:pri=2&&3

rlghncxa03w 03-03-15 08:36:43 EST EAGLE 31.3.0
SCREEN = ALLOWED SIO
SR NIC PRI SI H0 H1 NSFI NSR/ACT
IEC 1 0&&2 3 -- -- BLKDPC WDB2
IEC 1 3 3 -- -- DPC ABC2
;

rtrv-scr-
sio:sr=sio1:nic=1:si=1:h1=1:pri=1:h0=15:nsfi=blkdpc:nsr=bdp1

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED SIO
SR NIC PRI SI H0 H1 NSFI NSR/ACT
sio1 1 1 1 15 01 BLKDPC bdp1
;

rtrv-scr-sio:sr=sio1:h0=1:h1=1

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED SIO
SR NIC PRI SI H0 H1 NSFI NSR/ACT
sio1 1 1 1 01 * STOP -----
sio1 2 1 1 01 * STOP -----
;

rtrv-scr-sio:sr=sio1:nic=1:si=1

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED SIO
SR NIC PRI SI H0 H1 NSFI NSR/ACT
sio1 1 1 1 01 * STOP -----
sio1 1 1 1 02 01 STOP -----
;

rtrv-scr-sio:sr=sio1:nic=1:si=1:h0=1:h1=*

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED SIO
SR NIC PRI SI H0 H1 NSFI NSR/ACT
```

```

sio1 1 1 1 01 * STOP -----
;

```

```
rtrv-scr-sio:sr=iec:nic=1:si=1:actname=crncf
```

```

rlghncxa03w 03-03-19 21:16:37 EST EAGLE 31.3.0
SCREEN = ALLOWED SIO
SR   NIC  PRI  SI  H0    H1    NSFI  NSR/ACT
iec  1    1    1  15    01    STOP  CRNCF
;

```

```
rtrv-scr-sio:si=5
```

```

tekelecstp 02-08-28 16:47:06 EST EAGLE 30.0.0
SCREEN = ALLOWED SIO
SR   NIC  PRI  SI  H0    H1    NSFI  NSR/ACT
si01 1    1    5  --    --    STOP  -----
si02 1    1    5  --    --    ISUP  is01
;

```

Legend

For a summary report:

- **SR**—The screen sets being used
- **REF**—Indicates whether a screen is referenced by another screen. If NO, the screen is not used. For more detailed output, use the `rtrv-scr-sio:all=yes` command, or specify the specific screening reference.
- **RULES**—Number of screening rules in that screening table

For a detailed report:

- **SCREEN = ALLOWED SIO**—Screen type
- **SR**—The screen sets being used
- **NIC**—Network indicator code in the service information octet
- **PRI**—Priority of a single message or the beginning message priority in a range of priorities in the service information octet
- **SI**—Service indicator for the service information octet, which are the last two bits of the subservice field
- **H0**—H0 heading code
- **H1**—H1 heading code
- **NSFI**—Next screening category to be used
- **NSR/ACT**—Name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

Related Topics

- [chg-scr-sio](#)

- [dlt-scr-sio](#)
- [ent-scr-sio](#)

4.1.566 rtrv-scr-tt

Use this command to show the allowed translation type (TT) screening reference in the TT entity set.

Parameters

actname (optional)

Name of the gateway screening stop action set. Stop actions must be administered using this parameter with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

Range:

ayyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —Display gateway screening rules that do not have an assigned gateway screening stop action set

all (optional)

Displays all allowed TT screening references.

Range:

yes

no

Default:

no

nsfi (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: *cdpa, stop*

cdpa

Allowed called party address is the next screening category.

stop

The gateway screening process ends and the message proceeds through normal routing.

Default:

Display all screening references

nsr (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (*nsfi*) is to be used in the screening process. This parameter is mandatory if *nsfi* is other than *stop*. The *nsr* parameter cannot be entered if *nsfi* is *stop*, or the `copy=yes` parameter is specified.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all

sr (optional)

The TT screening reference name

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all

type (optional)

Translation type. The global title translation type value in the called party address. This value is the decimal representation of the 1-byte field used in SS7.

Range:

0 - 255, *

* —the full range of values from 0–255

Default:

Display all.

Example

```
rtrv-scr-tt
rtrv-scr-tt:sr=iee
rtrv-scr-tt:all=yes
```

DependenciesIf the `nsr` parameter is specified, `nsfi=stop` cannot be specified.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

If the `actname` parameter is specified, the value specified for `nsfi` must be `stop`.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

The value of the `actname` parameter must be defined in the gateway screening stop action table with the `chg-gws-actset` command. These values are shown in the ACT NAME field of the `rtrv-gws-actset` command output.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The `nsr` parameter cannot be specified if the `actname` parameter is specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

If the `actname` parameter is specified with the screening reference name parameter, the specified value for the `actname` parameter must be assigned to that screening reference name.

3680 E3680 Cmd Rej: No match on ACTNAME parameter during retrieve

Stop actions must be administered using the `actname` parameter in conjunction with the gateway screening stop action table (see `chg-gws-actset` and `rtrv-gws-actset`).

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

The specified value for the `nsfi` parameter is not valid for TT screen.

3271 E3271 Cmd Rej: NSFI is invalid

The `actname` parameter value must already be defined in the Gateway Screening Stop Action table with the `chg-gws-actset` command. These values are shown in the ACT NAME field of the `rtrv-gws-actset` command output.

3656 E3656 Cmd Rej: ACTNAME specified must exist in GWS Stop Action Set table

The Gateway Screening Stop Action table must be accessible.

3655 E3655 Cmd Rej: Failed Reading the GWS Stop Action Set table

The screening reference and translation type for which the attributes are to be retrieved must exist.

2502 E2502 Cmd Rej: NSR cannot be specified if COPY or REDIRECT are specified

The value specified for the `type` parameter must be within the allowed range.

2524 E2524 Cmd Rej: A specific TT must be specified in the range (1-255,*)

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

If no parameters are specified, a list of allowed TT references is produced indicating whether they are referenced or not.

If only the `all=yes` parameter is specified, detailed information for every rule in every allowed TT screening table is displayed.

If the `all` parameter is specified and other parameters are also specified, the `all` parameter is ignored.

Output

```
rtrv-scr-tt
```

```
rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED TT
SR   REF  RULES
IEC  YES   2
WRD2 YES   1
```

```

        WRD4  YES      4
;

rtrv-scr-tt:sr=iec

        rlghncxa03w 03-03-07 12:05:33 EST  EAGLE 31.3.0
SCREEN = ALLOWED TT
SR      TYPE      NSFI      NSR/ACT
IEC     005&&010  STOP      -----
IEC     012        STOP      -----
IEC     016        CDPA      IEC
;

rtrv-scr-tt:all=yes

        rlghncxa03w 03-03-07 12:05:33 EST  EAGLE 31.3.0
SCREEN = ALLOWED TT
SR      TYPE      NSFI      NSR/ACT
IEC     005&&010  STOP      -----
IEC     012        STOP      -----
IEC     016        CDPA      IEC
WRD2    243        STOP      -----
WRD4    *          STOP      -----
;

rtrv-scr-tt:sr=iec:type=1&&15:actname=copy

        rlghncxa03w 03-03-15 08:54:35 EST  EAGLE 31.3.0
SCREEN = ALLOWED TT
SR      TYPE      NSFI      NSR/ACT
IEC     005&&010  STOP      COPY
IEC     012        STOP      COPY
;

```

Legend

- **SCREEN = ALLOWED TT**—Screen type
- **SR**—Identifies the screen sets being used. It can be up to four characters in length.
- **REF**—Indicates whether a screen is referenced by another screen. If NO, the screen is not used. for a more detailed output, used the the `rtrv-scr-tt:all=yes` command, or specify the specific screening reference.
- **TYPE**—Translation type that is allowed for global title translation
- **NSFI**—Next screening category to be used
- **NSR/ACT**—Name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

Related Topics

- [chg-scr-tt](#)
- [dlt-scr-tt](#)
- [ent-scr-tt](#)

4.1.567 rtrv-scrset

Use this command to show the attributes of one or more screen sets in the screen set entity set.

Parameters**actname (optional)**

Name of the gateway screening stop action set. Stop actions must be administered using this parameter with the gateway screening stop action table (see [chg-gws-actset](#) and [rtrv-gws-actset](#)).

Range:

ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none —Display gateway screening rules that do not have an assigned gateway screening stop action set

a11 (optional)

Displays all screen sets (except “placeholder” screen sets that contain only one rule with *nsfi=stop* specified in the rule).

Range:

yes

no

Default:

no

destfld (optional)

This parameter displays the indicator that specifies whether to apply the automatic allowed affected destination screening for network management messages against the routing table, self point codes, and capability point codes. When this parameter is on in the screen set rule, the automatic screening is applied at the end of the provisioned screen set.

Range:

yes

no

Default:

Display all

nsfi (optional)

This parameter indicates the next screening category that is used in the gateway screening process, or that the gateway screening process should stop. In this command, information is

displayed for one or more screen sets containing rules with the specified `nsfi` parameter value.

 **Note:**

When `nsfi=stop` is specified, the command displays only the “placeholder” screen sets that have only one rule, with `nsfi=stop` specified in the rule. This is a way to locate those “placeholder” screen sets, so that you can add or change the rules to accomplish appropriate screening.

Range:***opc***

Display rules with Allowed OPC as the next screening category.

blkopc

Display rules with Blocked OPC as the next screening category.

sio

Display rules with Allowed SIO as the next screening category.

dpc

Display rules with Allowed DPC as the next screening category.

blkdpc

Display rules with Blocked DPC as the next screening category.

stop

Display only “placeholder” screen sets that have only one rule in the screen set, with `nsfi=stop` specified as the next screening category.

Default:

Display all

***nsr* (optional)**

Next screening reference. This parameter indicates which screening reference in the specified screening category (`nsfi`) is to be used in the screening process. This parameter is used to display information for one or more screen sets with rules that have the specified `nsr` parameter value.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:

Display all

***scrn* (optional)**

Screen set name.

Range:

ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default:
Display all

Example

```
rtrv-scrset  
rtrv-scrset:scrn=scr1  
rtrv-scrset:nsr=opc4  
rtrv-scrset:nsfi=dpc  
rtrv-scrset:actname=copy
```

Dependencies

The screen set name must already exist.

2361 E2361 Cmd Rej: Screen set name not defined

The `nsfi=stop` parameter must be specified before the `actname` parameter can be specified.

3658 E3658 Cmd Rej: NSFI must be STOP if ACTNAME is specified

The `nsr` parameter cannot be specified if the `actname` parameter is specified.

3657 E3657 Cmd Rej: NSR cannot be specified if ACTNAME is specified

If the `actname` parameter is specified with the screen set name parameter, the specified value for the `actname` parameter must be assigned to that screen set name.

3680 E3680 Cmd Rej: No match on ACTNAME parameter during retrieve

The `nsfi` parameter must be valid for the SCRSET entity.

3271 E3271 Cmd Rej: NSFI is invalid

If the `nsfi=stop` parameter is not specified, then the `nsr` parameter must be specified.

2553 E2553 Cmd Rej: NSR must be specified for given NSFI

The `nsr` parameter cannot be entered if the `nsfi` parameter value equals `stop`.

2554 E2554 Cmd Rej: NSR cannot be specified when NSFI is STOP or FAIL

The GWSOA parameter combination should be known and valid.

2483 E2483 Cmd Rej: Unknown / Invalid GWSOA parameter combination

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

If no parameters are specified for the `rtrv-scrset` command, the output shows all the screen sets, the screening function identifier of the root screening table, the screening reference of the root screening table, the memory usage (percentage), the number of entries in the screen set and the overall gateway screening statistics, followed by a summary of statistics for each screen set.

For the `rtrv-scrset:all=yes` command, the output consists of every screen set and every screening reference in each screen set (except “placeholder” screen sets that have only one rule with `nsfi=stop` specified in the rule). The `all=yes` and `nsfi=stop` parameters cannot be specified in the same command.

If the `scrn`, `nsfi`, or `nsr` parameter is entered, summary information for all screens that match the specified parameters is shown.

When the % FULL is over 100%, the screen is inaccessible. A screenset over 100% capacity size will not bind correctly. A screenset can become provisioned over capacity when linking one screen reference to another causes the size to become too large. To reduce a screenset that is over 100% capacity, screen rules must be deleted (see the `dlt-scr-xxx` commands)

Output

```
rtrv-scrset:nsfi=opc
```

```
rlghncxa03w 03-03-14 16:37:54 EST EAGLE 31.3.0
SCRN  NSFI    NSR/ACT  RULES  DESTFLD
att1  OPC     att1     111    Y
atx1  OPC     atx1     2      Y
bam1  OPC     bam1     3      Y
ctt1  OPC     ctt1     1      Y
ctw1  OPC     ctw      39     Y
mci1  OPC     mci1     3      Y
wtl1  OPC     wtl1    339    Y
```

```
;
```

```
rtrv-scrset:nsr=dpc3
```

```
rlghncxa03w 03-03-14 16:38:28 EST EAGLE 31.3.0
SCRN  NSFI    NSR/ACT  RULES
ss01  DPC     dpc3     3
ss02  DPC     dpc3     3
ss03  DPC     dpc3     3
ss04  DPC     dpc3     3
ss05  DPC     dpc3     3
```

```
;
```

```
rtrv-scrset:scrn=ss53
```

```
rlghncxa03w 03-03-14 16:39:04 EST EAGLE 31.3.0
SCRN  NSFI    NSR/ACT  RULES  DESTFLD
ss53  BLKDPC bkd2     2      Y
      CGPA   cgp1     3
      TT    tt1      3
      TT    tt2      3
      TT    tt3      4
      CDPA  cdp1     3
      CDPA  cdp2     3
```



```

          CDPA    cdp3          4
          AFTPC   end1          9
;

rtrv-scrset:scrn=gws1

e1070402 02-07-22 10:06:09 EST  EAGLE 30.0.0
rtrv-scrset:scrn=gws1
Command entered at terminal #4.
SCRN  NSFI    NSR/ACT  RULES  DESTFLD
gws1  OPC     opc1     17     Y
      BLKOPC  bop1     1812
      SIO     sio1     80
      DPC     dpc1     17
      BLKDPC  bdp1     1812
      CGPA    cga1     34
      TT      tt01     256
      CDPA    cda1     17
      CDPA    cdb1     6
      AFTPC   apc1     17
      ISUP    isu1     17
;

```

The number of screen sets has increased from 255 to 1023. In the following example, the % full is over 100% and the screen is inaccessible.

```

rtrv-scrset

tekelecstp 02-01-04 23:34:41 MST  UNKNOWN 46.1.0-65.14.0
ENTIRE GWS DATABASE IS 1% FULL
CDPA + AFTPC TABLES ARE 0% FULL
SCREEN SET TABLE IS (4 OF 1023) 1% FULL
THERE ARE 0 SEAS SCREEN SETS USED (prefix 00nn)
THERE ARE 4 EAGLE SCREEN SETS USED

THE FOLLOWING ARE OVER 80% FULL:
SCRN  NSFI    NSR/ACT  FULL  RULES  TABLES  DESTFLD
s1    OPC     op1      101%  8192   3         Y
set1  OPC     op10     97%   7894   6         Y

SCRN  NSFI    NSR/ACT  FULL  RULES  TABLES  DESTFLD
a600  SIO     sil      1%    16     1         Y
a610  SIO     sil      1%    16     1         Y
s1    OPC     op1      101%  8192   3         Y
set1  OPC     op10     97%   7894   6         Y

```

Legend

- **SCRN**—Name of the screen set
- **NSFI**—Next screening category to be used
- **NSR/ACT**—Name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen

- **FULL**—Capacity of allowed memory a given screen set occupies, expressed as a percentage
- **RULES**—Number of entries in the screen set
- **TABLES**—Number of tables in the screen set
- **DESTFLD**—Displays whether to apply the automatic allowed affected destination screening for network management messages against the routing table, self point codes, and capability point codes. When this parameter is on, the automatic screening is applied at the end of the provisioned screen set.

Related Topics

- [chg-scrset](#)
- [dlt-scrset](#)
- [ent-scrset](#)

4.1.568 rtrv-seas-config

Use this command to retrieve configuration information for the CCS Message Router (CCS MR) and the name of the EAGLE source node for the SEAS Over IP interface.

Parameters

This command has no parameters.

Example

```
rtrv-seas-config
```

Dependencies

The SEAS Over IP feature must be enabled before this command can be entered.

4614 E4614 Cmd Rej: SOIP Feature must be Enabled

The SEASCFG Table must be accessible.

4613 E4613 Cmd Rej: Failed Reading SEASCFG Table

Output

```
rtrv-seas-config
```

```
tekelecstp 07-01-23 18:46:01 EST  EAGLE 37.5.0
SEASCLLI      AUTHMODE
-----
DEVEAGLE001  Password

CONN      TERM  IPADDR      PORT  LOGIN
HNAME
-----
-
IPMR1     25    128.96.75.45  4010  ccscor
```

```
tcpipmr1
  IPMR2      33  128.96.75.46    4011  ccscoor      tcpipmr2
```

Related Topics

- [chg-seas-config](#)

4.1.569 rtrv-secu-dflt

Use this command to display the current values of the various security-related parameters that have been configured with the `chg-secu-dflt` command.

Parameters

msg (optional)

Use this parameter to specify whether the text of the login warning message is to be displayed also.

Range:

yes

no

Default:

no

Example

```
rtrv-secu-dflt
rtrv-secu-dflt:msg=yes
```

Dependencies

None

N/A N/A

Notes

None

Output

```
rtrv-secu-dflt:msg=yes

rlghncxa03w 13-06-16 21:49:14 EDT  EAGLE 45.0.0
SECURITY DEFAULTS
-----
PAGE           60
UOUT           90
MULTLOG        NO
MINLEN         8
ALPHA          1
```

```

NUM          1
PUNC         1
MININTRVL   1
PNOTIFY     7
PGRACE      3
PREUSE      5
PCHREUSE    4
SSH         ON

```

```

rlghncxa03w 13-06-16 21:49:14 EDT  EAGLE 45.0.0
WARNING MESSAGE
-----

```

```

1:"*****"
2:"*  NOTICE: This is a private computer system.      *"
3:"*  Unauthorized Access or use may lead to          *"
4:"*  prosecution.                                     *"
5:"*  13-06-01 Notice!!! Eagle will be upgraded between *"
6:"*                                     the hours of 2am-3am on 13-07-15.  *"
7:"*                                                                 *"
8:"*  Today's happy message: Go with Tekelec!!        *"
9:"*****"
10:" "
11:""
12:""
13:""
14:""
15:""
16:""
17:""
18:""
19:""
20:""

```

;

rtrv-secu-dflt

```

tekelecstp 12-09-18 10:07:57 EST 45.0.0-64.42.0

```

rtrv-secu-dflt

Command entered at terminal #4.

SECURITY DEFAULTS

```

-----
PAGE          90
UOUT          90
MULTLOG       NO
MINLEN        8
ALPHA         1
NUM           1
PUNC          1
MININTRVL    1
PNOTIFY      7
PGRACE       3
PREUSE       5
PCHREUSE     4

```

```
SSH          ON  
;
```

Legend

- **PAGE**—Default password aging interval for newly created user IDs
- **UOUT**—number of successive days a user ID can go unused (no successful login) before the system denies login
- **MULTLOG**—Indicates whether users can be logged on to multiple terminals at the same time
- **MINLEN**—Minimum password length
- **ALPHA**—Minimum number of alphabetic characters (a–z) required in a new password
- **NUM**—Minimum number of numeric characters (0–9) required in a new password
- **PUNC**—Minimum number of punctuation characters required in a new password. A punctuation character is any character that is not an alphabetic or numeric character.
- **MININTRVL**—Minimum number of days before a password can be changed again
- **PNOTIFY**—Number of days prior to password expiration in which the user will be notified about upcoming expiration
- **PGRACE**—Number of days after password expiration in which the user is allowed to login without requiring a password change
- **PREUSE**—Number of passwords in the password history that must be unique
- **PCHREUSE**—Number of characters that cannot be reused from the existing password when setting a new password
- **WARNING MESSAGE**—Message displayed when a user has successfully logged in
- **SSH**— Together with OAM IP security feature it indicates whether the telnet connections are secure or not

Related Topics

- [chg-pid](#)
- [chg-secu-dflt](#)

4.1.570 rtrv-secu-trm

Use this command to display the access rights for a terminal. Only a user with system security administration authority can change a terminal's access rights. Access rights determine whether a terminal or port has command access to the system.

Parameters

trm (optional)

Specifies the port about which information will be displayed.

Range:

1 - 16

Default:
Display all

Example

```
rtrv-secu-trm
rtrv-secu-trm:trm=9
```

Dependencies

The CCCNAMES table is corrupt or cannot be found.

2598 E2598 Cmd Rej: Cccnames table must be accessible

The Terminal table is corrupt or cannot be found.

2138 E2138 Cmd Rej: Failed reading terminal table

None

N/A N/A

Notes

None

Output

This example shows attributes of all terminals when the Command Class Management feature is off:

```
rtrv-secu-trm

e5oam 08-12-01 23:40:14 EST EAGLE 40.1.0
TRM   LINK SA  SYS  PU   DB   DBG
1     YES  *** YES  YES  YES  YES
2     YES  *** YES  YES  YES  YES
3     YES  YES  YES  YES  YES  YES
4     YES  YES  YES  YES  YES  YES
5     YES  YES  YES  YES  YES  YES
6     YES  YES  YES  YES  YES  YES
7     NO   *** NO   NO   NO   NO
8     YES  *** YES  YES  YES  YES
9     YES  *** YES  YES  YES  YES
10    YES  *** YES  YES  YES  YES
11    YES  *** YES  YES  YES  YES
12    NO   *** NO   NO   NO   NO
13    NO   *** NO   NO   NO   NO
14    NO   *** NO   NO   NO   NO
15    NO   YES  NO   NO   NO   NO
16    NO   *** NO   NO   NO   NO
;
```

This example shows attributes of all terminals when the Command Class Management feature is on:

rtrv-secu-trm

rlghncxa03w 08-12-01 12:30:07 EST EAGLE 40.1.0

trm link sa sys pu db dbg

1 NO NO YES NO YES NO

2 NO YES NO NO NO NO

3 YES *** YES YES YES YES

4 NO NO NO NO NO NO

5 YES *** YES NO YES YES

6 NO NO NO NO NO NO

.

.

.

16 NO YES NO NO YES YES YES

trm U01 U02 U03 U04 U05 U06 U07 U08 U09 U10 U11 U12 U13 U14 U15 U16

1 NO NO YES NO YES NO YES YES NO YES NO NO NO YES NO

2 NO YES NO NO NO NO YES NO NO NO YES NO YES NO YES NO

3 YES NO YES YES YES YES YES NO NO YES NO NO NO YES NO YES

4 NO NO NO NO NO NO YES NO YES NO YES NO YES NO YES NO

5 YES YES YES NO YES YES YES YES YES YES NO NO NO YES NO YES

6 NO NO NO NO NO NO YES YES YES NO YES NO YES NO YES NO

.

.

.

16 NO YES NO NO YES YES YES YES YES YES YES YES NO YES NO YES

trm U17 U18 U19 U20 U21 U22 U23 U24 U25 U26 U27 U28 U29 U30 U31 U32

1 NO NO YES NO YES NO YES YES NO YES NO NO NO YES NO YES

2 NO NO NO NO NO NO YES NO YES NO YES NO YES NO YES NO

3 YES YES YES NO YES YES YES YES YES YES NO NO NO YES NO YES

4 NO NO NO NO NO NO YES YES YES NO YES NO YES NO YES NO

5 NO NO YES NO YES NO YES YES NO YES NO NO NO YES NO

6 NO YES NO NO NO NO YES NO NO NO YES NO YES NO YES NO

.

.

.

16 NO YES NO NO YES YES YES YES NO YES NO YES NO YES NO YES

;

This example shows attributes of terminal 9 when the Command Class Management feature is off:

rtrv-secu-trm:trm=9

rlghncxa03w 08-12-01 12:30:07 EST EAGLE 40.1.0

TRM LINK SA SYS PU DB DBG

9 NO NO YES NO YES NO

;

This example shows attributes of terminal 9 when the Command Class Management feature is on:

```
rtrv-secu-trm:trm=9
```

```
rlghncxa03w 08-12-01 12:30:07 EST EAGLE 40.1.0

TRM   LINK SA  SYS  PU   DB   DBG
9     NO  NO  YES  NO   YES  NO

trm   U01 U02 U03 U04 U05 U06 U07 U08 U09 U10 U11 U12 U13 U14 U15
U16
9     NO  NO  YES NO   YES NO   YES YES YES YES NO  YES NO  YES NO
YES

trm   U17 U18 U19 U20 U21 U22 U23 U24 U25 U26 U27 U28 U29 U30 U31
U32
9     NO  NO  YES YES YES YES YES YES YES YES YES YES NO  YES NO
NO
;
```

Legend

- **TRM**—ID number of the terminal whose characteristics are to be changed
- **LINK**—Shows whether the Link Maintenance class of commands is allowed for this terminal
- **SA**—Shows whether the Security Administration class of commands is allowed for this terminal
- **SYS**—Shows whether the System Maintenance class of commands is allowed for this terminal
- **PU**—Shows whether the Program Update class of commands is allowed for this terminal
- **DB**—Shows whether the Database class of commands is allowed for this terminal
- **DBG**—Shows whether the Debug class of commands is allowed for this terminal
- *******—Denotes a Security Administration port whose port type has been configured with a value of *none* or *printer*. These terminal types do not allow you to enter commands.
- **U01 - U32**—Configurable command class default names. (If configured with a user-specified name, that name appears.)

Related Topics

- [chg-secu-trm](#)

4.1.571 rtrv-secu-user

Use this command to show the security information for all users in the system.

Parameters**uid (optional)**

User ID

Range:

azzzzzzzzzzzzzzzzz

1 alphabetic character followed by up to 15 alphanumeric characters

Default:

Display all

Example

```
rtrv-secu-user:uid=rogers
```

Dependencies

The CCCNAMES table is corrupt or cannot be found.

N/A N/A

If a user ID is specified, the user ID must exist in the UserID table.

N/A N/A

Notes

Only the system administrator should have access to this command.

Passwords cannot be shown.

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.**Output**

This example shows a display when the Command Class Management feature is not enabled:

```
rtrv-secu-user
```

```
rlghncxa03w 08-12-01 09:50:17 EST EAGLE 40.1.0
```

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg
eagle1longname16	750	0	0	NO	YES	YES	YES	YES	YES	YES

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg
manny	36	60	60	NO	YES	YES	YES	YES	YES	YES

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg
moe	100	30	60	YES	YES	YES	YES	YES	YES	YES

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg
jack	10	30	30	NO	YES	YES	YES	YES	YES	YES

;

This example shows a display when the Command Class Management feature is enabled:

rtrv-secu-user

rlghncxa03w 08-12-01 09:50:17 EST EAGLE 40.1.0

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg			
eaglellongname16	750	0	0	NO	YES	YES	YES	YES	YES	YES			
	u01	u02	u03	u04	u05	u06	u07	u08	u09	u10	u11	u12	u13
u14	u15	u16											
	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
YES	YES	NO											

	u17	u18	u19	u20	u21	u22	u23	u24	u25	u26	u27	u28	u29
u30	u31	u32											
	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
NO	NO	YES											

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg			
manny	36	60	60	NO	YES	YES	YES	YES	YES	YES			
	u01	u02	u03	u04	u05	u06	u07	u08	u09	u10	u11	u12	u13
u14	u15	u16											
	NO	NO	NO	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES
YES	YES	YES											

	u17	u18	u19	u20	u21	u22	u23	u24	u25	u26	u27	u28	u29
u30	u31	u32											
	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
NO	NO	YES											

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg			
moe	100	30	60	YES	YES	YES	YES	YES	YES	YES			
	u01	u02	u03	u04	u05	u06	u07	u08	u09	u10	u11	u12	u13
u14	u15	u16											
	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
YES	YES	NO											

	u17	u18	u19	u20	u21	u22	u23	u24	u25	u26	u27	u28	u29
u30	u31	u32											
	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
NO	NO	NO											

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg			
jack	10	30	30	NO	YES	YES	YES	YES	YES	YES			
	u01	u02	u03	u04	u05	u06	u07	u08	u09	u10	u11	u12	u13
u14	u15	u16											
	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
YES	YES	YES											

```

u17 u18 u19 u20 u21 u22 u23 u24 u25 u26 u27 u28 u29 u30 u31
u32
YES YES YES YES YES YES NO NO NO NO YES YES YES YES YES
NO
;

```

Legend

- **USER-ID**—Name of the user
- **AGE**—Current age, in days, of the password associated with this user ID. If the password age is greater than 999 days, the value 999 is displayed.
- **PAGE**—Maximum password age established for the user ID. When AGE becomes greater than PAGE, the system forces the user to change the password at the next login. An asterisk (*) displayed after the value indicates that the system-wide default page parameter value, as configured on the `chg-secu-dflt` command, is in effect for the user ID.
- **UOUT**—User ID aging interval, in days. If the user ID is not used (that is, no successful login) for longer than this interval, the system does not allow a login. An asterisk (*) displayed after the value indicates that the system-wide default, `uout` parameter value, as configured on the `chg-secu-dflt` command, is in effect for the user ID.
- **REV**—Shows whether the user ID is denied login (revoked). YES indicates that the user ID is revoked, NO indicates that the user ID is not revoked.
- **LINK**—Shows whether the user has access to all commands in the Link Maintenance command class
- **SA**—Shows whether the user has access to all commands in the Security Administration command class
- **SYS**—Shows whether the user has access to all commands in the System Maintenance command class
- **PU**—Shows whether the user has access to all commands in the Program Update command class
- **DB**—Shows whether the user has access to all commands in the Database Administration command class
- **DBG**—Shows whether the user has access to all commands in the Debug command class

If the Command Class Management feature is enabled, the following fields appear:

- **U01 - U32**—Default configurable command class names. If user-defined names have been provisioned, they will appear instead of the default names.

Related Topics

- [act-user](#)
- [chg-pid](#)
- [chg-user](#)
- [dact-user](#)
- [dlt-user](#)
- [ent-user](#)

- [login](#)
- [logout](#)
- [rept-stat-user](#)
- [rtrv-user](#)

4.1.572 rtrv-seculog

Use this command to retrieve the contents of a security log and display it to the user in the scroll area. Various reports can be produced by varying the values of the command parameters. By default, the report is generated from the log on the active fixed disk, although the `slog` parameter can be used to generate the report from the log on the standby fixed disk.

Parameters

edate (optional)

End date. This parameter displays log entries that were created on or before the specified date. If the `sdate` parameter is specified, log entries created for the period specified by the `sdate` and `edate` combination are displayed.

Range:

000101 - 991231

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

The date must be specified with 6 digits. For example, enter 1/1/96 as 960101.

Default:

Report log entries regardless of their creation date

etime (optional)

End time. This parameter displays log entries created between midnight (00:00:00) and the time specified by this parameter. If the `stime` parameter is specified, log entries created in the time period specified by the `stime` and `etime` combination are displayed.

Range:

000000 - 235959

(in the form *hhmmss*, where *hh*=hours (00-23), *mm*=minutes (00-59), *ss*=seconds (00-59))

The time must be specified with 6 digits in a 24-hour format. For example, enter 1:05:03 P.M. as *130503*.

Default:

Report log entries regardless of their creation time

mode (optional)

Use this parameter to produce a either full log report or an abbreviated log report.

Range:

brief

Causes only one line of output to be generated for each log entry reported. Some information in each reported log entry is not shown.

full

Produces a report showing multiple lines of output for each log record that is reported. This report displays more information from each log record (including the entire command) than the `mode=brief` report.

Default:

brief

num (optional)

Number of records to be displayed before the report is terminated.

Range:

1 - 50000

Default:

500 —if `mode=brief` is specified

250 —if `mode=full` is not specified

rectype (optional)

This parameter specifies whether to consider all records in the log for reporting or only new (un-uploaded) records.

Range: new, both**new**

The report generator scans un-uploaded records when generating the report. Old records are not considered for reporting, even if they match the reporting criteria.

both

All records in the log are considered for reporting.

Default:

new

sdate (optional)

Start date. This parameter displays log entries created on or after the specified date. If the `edate` parameter is also specified, log entries created for the period specified by the `sdate/edate` combination are displayed.

Range:

000101 - 991231

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

The date must be specified with 6 digits. For example, enter 1/1/96 as 960101.

Default:

Report log entries regardless of their creation date

slog (optional)

Source log indicator. The log to be copied to the FTA.

Range:**act**

produces the report from the log on the active MASP

stb

produces the report from the log on the standby MASP

Default:

act

stime (optional)

Start time. This parameter displays log entries created between the time specified by this parameter and the end of the day (23:59:59) inclusive. If the *etime* parameter is specified, log entries created in the time period specified by the *stime/etime* combination are displayed.

Range:

000000 - 235959

(in the form *hhmmss*, where *hh*=hours (00-23), *mm*=minutes (00-59), *ss*=seconds (00-59))

The time must be specified with 6 digits in a 24-hour format (*hhmmss*). For example, enter 1:05:03 p.m. as *130503*.

Default:

Report log entries regardless of their creation time

trm (optional)

Terminal ID. Use this parameter to report only those log entries created by the specified terminal.

Range:

1 - 16

Default:

Report log entries regardless of the associated terminal

uid (optional)

User ID. This parameter displays log entries created by the specified user ID. Specify *uid=seas* to display commands received on a SEAS terminal. Specify *uid=none* to display commands not associated with a user ID (for example, commands issued prior to login).

Range:

azzzzzzzzzzzzzzzzz

1 alphabetic character followed by up to 15 alphanumeric characters

Default:

Display all

Example

```
rtrv-seculog:sdate=960214:edate=960215:num=7
```

```
rtrv-  
seculog:mode=full:sdate=960214:edate=960214:stime=062900:etime=  
063200
```

Dependencies

If the *sdate* and *edate* parameters are specified, the date specified for the *sdate* parameter must be earlier than or equal to the date specified for the *edate* parameter.

3001 E3001 Cmd Rej: SDATE must be earlier or equal to EDATE

If the `stime` and `etime` parameters are specified, the time specified for the `stime` parameter must be earlier than or equal to the time specified for the `etime` parameter.

3002 E3002 Cmd Rej: STIME must be earlier or equal to ETIME

The month component of the `sdate` and `edate` parameter combination must be specified in the range 1–12.

2255 E2255 Cmd Rej: Month out of range

The day component of `sdate` and `edate` parameter combination must be specified in the range 1–31. This value must accurately reflect the number of days in the month and year indicated. For example, `sdate=960631` is not a valid parameter value because June has only 30 days.

2252 E2252 Cmd Rej: Day out of range

The second component of the `stime` and `etime` parameter combination must be specified in the range 00–59.

2273 E2273 Cmd Rej: Seconds out of range

The minute component of the `stime` and `etime` parameter combination must be specified in the range 00–59.

2254 E2254 Cmd Rej: Minutes out of range

No other security log command can be in progress when this command is entered.

3005 E3005 Cmd Rej: Security log command already in progress

This command cannot be entered at a telnet terminal (terminal ID 17-40).

4283 E4283 Cmd Rej: Command cannot be executed on a Telnet terminal

Notes

To accommodate the year 2000 and beyond, the two-digit year portion of dates is interpreted to be in the indicated century as follows:

- years 95–99 = 1995 through 1999
- years 00–36 = 2000 through 2036

A consequence of this is that date 000101 (Jan 1, 2000) is greater than 991231 (December 31, 1999).

If the `mode=brief` parameter is specified and the output report has a plus (+) symbol appearing at the end of the command, the plus symbol indicates that more command characters are available to be displayed. Specify the `mode=full` parameter to see these additional characters.

In the `mode=full` output report, a plus (+) symbol appearing at the end of the command indicates the command is longer than 150 characters. Note that even in the uploaded log, each record in the log has room to record only 150 characters of the entered command. If the command is longer than 150 characters, then only the first 149 characters of the command and the plus symbol (to indicate that truncation has occurred) are recorded.

Security log size is limited to 50,000 records. Data from a query that exceeds the size limit of the security log cannot be displayed.

The system checks to ensure that the day portion of any `sdate/edate` value entered is in agreement with the month and year. It issues error message E2252 if the day is found to be invalid (for example, 960631 is not a valid date). The system software and date/time hardware properly handle leap years and leap centuries.

The system uses the `sdate/edate` and `stime/etime` parameters to select log records for reporting as follows:

- If the date on which the log record was created is not in the date range specified by the `sdate/edate` parameters, the record is not reported. The default `sdate` is the date of the oldest record in the log, and the default `edate` is the current date.
- If the time of day at which the log record was created is not in the time range specified by the `stime/etime` parameters, the record is not reported. The default `stime` is 00:00:00 (midnight), and the default `etime` is 23:59:59.
- Otherwise, the log record is reported, unless it is disqualified by other parameters such as `uid` or `trm`.

As an example, if the following command is entered, records are displayed for October 10, 1996 from 2:00 p.m. until 4:00 p.m., for October 11, 1996, from 2:00 p.m. until 4:00 p.m., and for October 12, 1996, from 2:00 p.m. until 4:00 p.m.

```
rtrv-  
seculog:sdate=961010:edate=961012:stime=140000:etime=160000
```

It takes the system approximately one minute to display 500 lines of data in the scroll area. To output a complete `mode=full` report (150,000 lines maximum) takes approximately 300 minutes. For this reason, the `num` parameter defaults to 125 (`mode=full`) or 500 (`mode=brief`) to prevent an excessively long process time, unless you deliberately choose a longer report.

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

The following message appears in the scroll area if the `slog=stb` parameter is specified (either explicitly or by default) and the standby fixed disk is not available (for example, simplex mode).

```
Command Failed - unable to read security log
```

When the `rtrv-seculog` command is entered, one of the first things that the reporting function does is to examine the log overflow and logging failure flags in the header of the specified log. Depending on the nature of the information found, one of the following notices is displayed in the output:

```
Notice: Log overflow has occurred -- report may be incomplete.
```

```
Notice: Logging failure -- report may be incomplete.
```


Output

This example shows output for records in the log created between 2/14/96 and 2/15/96 are displayed, up to a maximum of 9 records:

```
rtrv-seculog:sdate=960214:edate=960215:num=9
```

```
rlghncxa03w 96-02-14 06:32:20 EST EAGLE Release 34.0
Notice: Log overflow has occurred -- report may be incomplete.
Reporting parameters:
  sdate   = 960214
  edate   = 960215
  num     = 9

uid          trm date   time    st cmd
-----
NONE         03  960214  063000 OK login:uid=johnlamb
SEAS         15  960214  063010 OK CHG-SLK::LSN123-03:123456:50,RCH::S+
johnlamb     03  960214  063021 OK rept-stat-trbl
SEAS         15  960214  063032 OK CHG-RTE::LSNABC-001001001:123456:55+
johnlamb     05  960215  064524 RJ ent-card:loc=1201:type=lime1:appl+=
johnlamb     05  960215  064528 OK ent-card:loc=1201:type=lime1:appl+=
johnlamb     03  960215  063030 AB rept-stat-card
johnlamb     03  960215  063031 OK canc-cmd
johnlamb     05  960215  064533 OK logout

Report terminated -- output length limitation (NUM=) reached.
9 records reported of 5613 records scanned.
END OF SECURITY LOG REPORT.
;
```

This example shows all records in the log created on 2/14/96 between the hours of 06:29:00 and 06:32:00:

```
rtrv-
seculog:mode=full:sdate=960214:edate=960214:stime=062900:etime=063200
```

```
rlghncxa03w 96-02-14 06:32:20 EST EAGLE Release 34.0
Reporting parameters:
  sdate   = 960214
  edate   = 960214
  stime   = 062900
  etime   = 063200

uid          trm date   time    result
-----
NONE         05  960214  062912 E1234
Cmd: login:uid=eagle
johnlamb     03  960214  063000 OK
Cmd: rept-stat-card
SEAS         16  960214  063123 OK
```

```

Cmd:CHG-
SLK::LSN12345-12:123456:50,RCH::OOS:::::D,PRV123456-106-12,96-02-14-06-3
1-22;
  Johnlamb          03 960214 063128 OK
  Cmd:chg-lnp-lrn:lrn=1234567890:nmrgt1=255-255-255-255-dpcssn-
ssn-255-   yes:nmrgt2=255-255-255-255-dpcssn-ssn-255-
yes:mrrgt3=255-255-255-255-255-   dpcssn+

  3 records reported of 50000 records scanned.
  END OF SECURITY LOG REPORT.
;

```

This example displays a maximum of 10 records (SEAS commands) in the log when the SEAS Over IP feature is turned on and SEAS commands are issued through the SEAS terminals:

```
rtrv-seculog:uid=seas:num=10
```

```

tekelecstp 07-03-09 11:57:50 IST EAGLE 37.5.0
Reporting parameters:
  uid      = seas
  num      = 10

  uid          trm date   time    st cmd
  -----
  SEAS          17 070902 124846 RJ ASGN-
SLK::LS111-00:AJP6OD:50,SOM::1+
  SEAS          17 070902 124856 OK ASGN-
SLK::LS111-02:AJP6OD:50,SOM::1+
  SEAS          17 070902 124944 OK ASGN-
SLK::LS111-03:AJP6OD:50,SOM::1+
  SEAS          17 070902 125238 OK ASGN-
SLK::LS111-11:AJP6OD:50,SOM::1+
  SEAS          17 070902 125245 OK ASGN-
SLK::LS111-05:AJP6OD:50,SOM::1+
  SEAS          17 070902 125257 OK ASGN-
SLK::LS111-13:AJP6OD:50,SOM::1+
  SEAS          17 070902 130331 OK ASGN-
SLK::LS111-02:AJP6OD:50,SOM::1+
  SEAS          17 070902 130539 OK ASGN-
SLK::LS111-02:AJP6OD:50,SOM::1+
  SEAS          25 070902 131327 OK ASGN-
SLK::LS111-03:AJP6OD:50,SOM::1+
  SEAS          25 070902 184758 OK ASGN-
SLK::LS111-02:AJP6OD:50,SOM::1+

Report terminated -- output length limitation (NUM=) reached

10 records reported of 240 records scanned.
END OF SECURITY LOG REPORT.

```

Legend

- **uid**—User ID that issued the command. The value SEAS appears if the command was received on a SEAS port. The value NONE appears if no user ID was associated with the port at the time the command was logged.
- **trm**—Terminal ID of the terminal where the command was received
- **date**—Date the log entry was made; that is, the date on which the command was received for execution
- **time**—Time the log entry was made; that is, the time the command was received for execution. A 24-hour time format is used (for example, 1:00 p.m. = 130000).
- **st**—Two-letter shorthand notation of the command's status. The complete status can be obtained by re-entering the `rtrv-seculog` command and specifying the `mode=full` parameter. The status abbreviations are:
 - **AB**—Command aborted. Displayed when the `canc-cmd:trm` command is issued to abort the following commands: `rept-stat-card`, `rept-stat-dstn`, `rept-stat-ls`, `rept-stat-slk`, `rtrv-dstn`, `rtrv-gta`, `rtrv-gtt`, `rtrv-ls`, `rtrv-map`, `rtrv-rte`, `rtrv-seculog`, and `rtrv-slk`. An AB status indicates that processing and output of the command have been halted. This status is also displayed for SEAS flow-thru commands that are canceled with the `canc-cmd` (without the `trm` parameter).
 - **RJ**—Command rejected. Displayed whenever the results value that would be displayed in the `mode=full` report would be one of the following:
 - * Edddd
 - * FAILED
 - * rrrrrr/mmmm
 - **RL**—Retry later. The system is busy.
 - **IP**—In Progress
 - **OK**—Command successfully executed
 - **TO**—Timed out.
- **cmd**—Command that was recorded. In the `mode=brief` report, if the length of the recorded command is greater than or equal to 35 characters (as this much as can be displayed on a single line of the output report), then only the first 34 characters of the command are displayed, and the 35th character is displayed as a plus symbol (+) to indicate that more information is available in the log. Re-enter the `rtrv-seculog` command with the `mode=full` parameter to see the additional information. In the `mode=full` report, a plus symbol at the end of a command indicates that the command is longer than 150 characters.

4.1.573 rtrv-serial-num

Use this command to retrieve the NT serial number for the system.

Parameters

This command has no parameters.

Example

```
rtrv-serial-num
```

Dependencies

None

N/A N/A

Notes

None

Output

Dashes appear if the serial number has not yet been entered into the database.

```
rtrv-serial-num
```

```
rlghncxa03w 03-03-29 16:40:40 EST EAGLE 31.3.0  
System serial number = nt00001231
```

```
System serial number is locked.
```

```
rlghncxa03w 03-03-29 16:40:40 EST EAGLE 31.3.0  
Command Completed
```

```
;
```

Related Topics

- [ent-serial-num](#)

4.1.574 rtrv-sfappopts

Use this command to retrieve the parameters from the SFAPPOPTS table.

Parameters

This command has no input parameters.

Example

```
rtrv-sfappopts
```

Dependencies

The SFAPP table should be accessible.

4820 E4820 Cmd Rej: Failure accessing SFAPP table

Output

This example shows output with default SFAPP options in Eagle Rel 46.7.0:

```

rtrv-sfappopts

      tekelecstp 18-09-13 01:26:30 EST  EAGLE 46.7.0.0-75.10.0
rtrv-sfappopts
Command entered at terminal #17.
;

```

```

Command Accepted - Processing
      tekelecstp 18-09-13 01:26:30 EST  EAGLE 46.7.0.0-75.10.0
SFAPP OPTIONS TABLE
-----
VLRIMEICHALLENGE = no
MODE              = active
SUCCTH           = none
FAILTH          = none
VELTH           = none
AGETIME         = none

```

Legend

- **VLRIMEICHALLENGE** - Enables/Disables the VLR IMEI challenge for CAT3.2 messages
- **MODE**- Provides option to turn off dynamic learning, test the learning algorithm, and move the system in operation using various modes
 - *OFF*- Turn off the dynamic learning. Delete all the dynamic entries
 - *LEARN* - Only learn about new VLRs, no challenges are performed (newly learned VLRs are considered as Whitelisted). Delete dynamic entries without parent in static when switch from ACTIVE or TEST mode
 - *ACTIVE* - Challenges are performed. Status of dynamically learned VLRs are changed to Whitelisted or Blacklisted if they meet criteria
 - *TEST* - Challenges are performed. However, learned VLRs remain Grey listed
- **SUCCTH** If system-wide success threshold is 0 i.e., None, then do not transition any VLR to whitelist
- **VELTH** - In case VELTH is set to None, all dynamic VLR roaming entries will always be in LEARNING phase and will never be used for VLR validation
- **AGETIME** - In case agetime is set to None, ageing will not perform

4.1.575 rtrv-sg-opts

Use this command to retrieve information about the currently chosen IP⁷ Secure Gateway protocol options.

Parameters

This command has no parameters.

Example

```
rtrv-sg-opts
```

Dependencies

None

N/A N/A

Notes

None

Output

```
rtrv-sg-opts
```

```
rlghncxa03w 13-09-24 09:50:17 EST EAGLE 46.0.0
SRKQ:                250
SNMPCONT:            john doe 555-123-4567
GETCOMM:             public
SETCOMM:             private
TRAPCOMM:            public
SCTPCSUM:            adler32
IPGWABATE:           NO
UAMEASUSEDFTAS:     YES
DSCP                  20
```

```
;
```

Legend

- **SRKQ**—Static routing key quantity. Maximum number of routing key entries in the Static Routing Key table.
- **SNMPCONT**—System contact information for each E5-ENET-B SNMP agent
- **GETCOMM**—Community name used for messages sent by SS7IPGW cards (SNMP Get and GetNext request validations)
- **SETCOMM**—Community name used for SNMP set request validation. This value applies for each E5-ENET-B SNMP agent in the system.
- **TRAPCOMM**—Community name used when SNMP traps are generated. This value applies for each E5-ENET-B SNMP agent in the system.
- **SCTPCSUM**—SCTP checksum algorithm type
- **IPGWABATE**—IPGWx SS7 congestion abatement procedures
- **UAMEASUSEDFTAS**—UA measurements are generated
- **DSCP**--- Subfield in IP header. Applicable to SIGTRAN based cards only.

Related Topics

- [chg-sg-opts](#)
- [rtrv-appl-rtkey](#)

4.1.576 rtrv-shlf

Use this command to display the frames and shelves that are currently provisioned in the system. The type of shelf is also shown.

Parameters

loc (optional)

The shelf location.

Range:

1100, 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100, 6200, 6300

Default:

Display all configured locations

Example

```
rtrv-shlf
rtrv-shlf:loc=1300
rtrv-shlf:loc=6200
```

Dependencies

The frame and shelf values of the shelf location parameter (`loc`) must be within the valid range (`xyzz`, where `x`=frame and `y`=shelf; `zz` is always 00 for this command).

2152 E2152 Cmd Rej: Shelf ID out of range

The Shelf table is corrupt or cannot be found by the system.

2104 E2104 Cmd Rej: Failed reading the shelf table

Notes

None

Output

This example displays all configured STP equipment shelves:

```
rtrv-shlf

tekelecstp 09-03-12 12:24:48 EST 45.0.0
SHELF DISPLAY
FRAME SHELF      TYPE
   1     1      CONTROL
   1     2      EXTENSION
   6     1      EXTENSION
   6     2       FPB
;
```

This example displays a specific STP equipment shelf:

```
rtrv-shlf:loc=1300
```

```
rlghncxa03w 12-05-07 09:50:17 EST EAGLE 45.0.0
SHELF DISPLAY LOCATION=1300 FRMID: CF00
FRAME SHELF      TYPE
   1      3      EXTENSION
CARD  TYPE      APPL      LSET NAME    PORT SLC LSET NAME    PORT SLC
1301  LIME1     SS7ANSI  -----    --  --  -----    --  --
1302  LIME1     SS7ANSI  -----    --  --  -----    --  --
1303  LIME1     SS7ANSI  -----    --  --  -----    --  --
1304  LIME1     SS7ANSI  -----    --  --  -----    --  --
1305  LIME1     SS7ANSI  -----    --  --  -----    --  --
;
```

This example displays a specific STP equipment shelf that is not configured (unequipped):

```
rtrv-shlf:loc=2100
```

```
rlghncxa03w 12-05-07 09:50:17 EST EAGLE 45.0.0
SHELF DISPLAY LOCATION=2100 FRMID: EF00
FRAME SHELF      TYPE

This shelf is UNEQUIPPED in the database.
;
```

This example displays a specific FPB shelf.

```
rtrv-shlf:loc=6300
```

```
tekelecstp 12-09-05 11:03:45 EST 45.0.0
rtrv-shlf:loc=6300
Command entered at terminal #4.
SHELF DISPLAY LOCATION=6300
FRAME      SHELF      TYPE      FAN
   6      3      FPB      OFF
CARD      TYPE      APPL      SRVNAME
6301     TELCO     SWITCH    telco1
6302     TELCO     SWITCH    telco2
;
```

Legend

- **FRAME ID**—Frame power designation identifier
- **FRAME**—Frame location of the shelf
- **SHELF**—Location of the shelf within the frame
- **TYPE**—Type of shelf
- **CARD**—Card location in the specified shelf

- **TYPE**—Card type
- **APPL**—Application running on the card
- **LSET NAME**—Linkset name for the port on the card
- **PORT**—Port used by the linkset defined on the card
- **SLC**—Signaling link code for the linkset
- **FPB** - Frame Power Budget
- **SRVNAME**- Server Name

Related Topics

- [dlt-shlf](#)
- [ent-shlf](#)

4.1.577 rtrv-sid

Use this command to retrieve site identification characteristics of the system. It shows the point code assigned to this system, the CLLI code of the system, the capability code of the STP, and the type of point codes supported by the system.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

cpc (optional)

ANSI capability point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

cpca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001–005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

Default:

Display all

cpc/cpca/cpci/cpcn/cpcn24/cpcn16 (optional)

Capability point code. The code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network to which the STP belongs.

cpci (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

Default:

Display all

cpcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Default:

Display all

cpcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Default:

Display all

cpcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area* (*un-sna-mna*).

Range:*000---127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*un---000---127**sna---000---15**mna---000---31***Default:**

Display all

cpctype (optional)

Capability point code type. This parameter displays the CPCs that are provisioned for the specified service.

Range:*stp**lnp**inp**eir**gport**gflex**mnp**atinpq**vflex**aiq***Default:***stp***Example**

```
rtrv-sid
```

```
rtrv-sid:cpc=3-3-3
```

```
rtrv-sid:cyctype=inp
```

```
rtrv-sid:cpcn=s-00456
```

```
rtrv-sid:cpcn16=1-2-3
```

Dependencies

The STP destination point codes and capability point codes can be specified only as full point codes.

2861 E2861 Cmd Rej: Site PC, CPCs and NCPCs must be full point codes

The ANSI point code 0-0-0 and the ITU-I point code 0-000-0 are invalid for STP capability point codes.

2340 E2340 Cmd Rej: Invalid point code

The LNP feature must be turned on before the `cpctype=lnp` parameter can be specified.

3009 E3009 Cmd Rej: LNP feature must be ON

The INP feature must be turned on before the `cpctype=inp` parameter can be specified.

3524 E3524 Cmd Rej: INP/AINPQ feature must be ON

The EIR feature must be turned on before the `cpctype=eir` parameter can be specified.

4185 E4185 Cmd Rej: EIR feature must be enabled

The Spare Point Code Support feature must be enabled before an ITU-I or ITU-N spare point code can be retrieved.

4193 E4193 Cmd Rej: Spare Point Code Feature must be enabled

The STP MAS Configuration table is corrupt or cannot be found.

2145 E2145 Cmd Rej: Failed reading MAS configuration table

If the `cpcon` parameter is specified, the format of the specified point code must match the format that was assigned with the `chg-stpopts:npcfmit` command.

2055 E2055 Cmd Rej: Incorrect information unit, expecting point code- <parm>

The STP Site Identification table is corrupt or cannot be found.

2874 E2874 Cmd Rej: Failed reading site identification table

The ATINP feature must be enabled before the `cpctype=atinpq` parameter can be specified.

4816 E4816 Cmd Rej: ATINP feature must be enabled

The V-Flex feature must be turned on before the `cpctype=vflex` parameter can be specified.

4142 E4142 Cmd Rej: VFLEX feature must be ON

The A-Port or the IS41 GSM Migration (IGM) feature must be enabled, before the `cpctype=mnq` parameter can be specified.

3330 3330 E3330 Cmd Rej: APORT or IGM must be enabled

The ANSI41 AIQ feature must be enabled before the `cpctype=aiq` parameter can be specified.

5158 E5158 Cmd Rej: ANSI41 AIQ feature must be enabled

Notes

If the `cpc/cpca/cpci/cpcn/cpcn24/cpcn16` parameter is not specified, all site identification characteristics are displayed.

If the STP capability point code is specified and not provisioned, the report contains only the PCA, PCI, PCN, PCN16, PCN24, CLLI, and PCTYPE fields, with the message:

```
Capability Point Code specified is not provisioned.
```

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

The `rtrv-sid` command CPC output is sorted using three sort keys.

- The first sort key is by the `cpctype` service, ordered by: `aiq`, `eir`, `gflex`, `inp`, `stp` (own STP, unlabeled), and `gport` or `mnp` depending on whether A-Port, ATINP, G-Port or V-Flex is enabled.
- The second sort key is by network type, ordered by: ANSI, ITU-I, ITU-N, then ITU-N24.
- The third sort key is by point code value, ordered low to high.

In the following output examples:

- When a 24-bit ITU-N site identification STP point code is configured, the PCN header is changed to PCN24.
- The s- point code prefix indicates an ITU national or international spare point code or spare capability point code.
- ANSI41 AIQ, EIR, G-Flex, G-Port, INP, LNP and V-Flex capability point codes are indicated in parentheses after the capability point code header.
- STP capability point codes have no parentheses after the header.

This example shows all site identification characteristics provisioned in the system at the time the command was entered. The output includes spare point codes.

```
rtrv-sid

      tekelecstp 04-06-14 15:18:11 EST  EAGLE 31.12.0
      PCA          PCI          PCN          CLLI
PCTYPE
      005-067-000    1-023-4    01234          tekelecstp    ANSI
                   s-1-023-4    s-01234

      CPCI
      s-4-056-0

      CPCN
      s-00456

;
```

This example shows an STP capability point code:

```
rtrv-sid:cpc=5-5-4
```

```

      rlghncxa03w 03-03-18 09:33:58 EST  EAGLE 31.3.0
      PCA          PCI          PCN          CLLI
PCTYPE
      008-013-008  -----          -----          tklcstn14
OTHER
      CPCA
      005-005-004

```

```
;
```

This example shows an LNP capability point code:

```
rtrv-sid:cpc=3-3-3
```

```

      rlghncxa03w 03-03-10 09:33:58 EST  EAGLE 31.3.0
      PCA          PCI          PCN          CLLI
PCTYPE
      008-013-008  -----          -----          tklcstn14
OTHER
      CPCA (LNP)
      003-003-003

```

```
;
```

This example shows output when no match for the specified capability point code is found in the Site ID table:

```
rtrv-sid:cpc=100-100-100
```

```

      rlghncxa03w 03-03-18 09:33:58 EST  EAGLE 31.3.0
      PCA          PCI          PCN          CLLI
PCTYPE
      008-013-008  -----          -----          tklcstn14
OTHER

```

```
      Capability Point Code specified is not provisioned.
```

```
;
```

This example shows a display of a site identification STP point code with a group code (the ITUDUPPC feature must be on):

```
rtrv-sid
```

```
      rlghncxa03w 03-03-18 09:33:58 EST  EAGLE 31.3.0
```

```

PCA          PCI          PCN          CLLI          PCTYPE
008-013-008  -----  128-15-1-1-si tklcstn14    OTHER
;

```

This example shows all provisioned INP capability point codes:

```
rtrv-sid:cpctype=inp
```

```

rlghncxa03w 03-03-18 09:33:58 EST  EAGLE 31.3.0
PCA          PCI          PCN          CLLI          PCTYPE
-----      2-150-4      12345        tklcstn14    OTHER

CPCN (INP)
1234 34567

CPCI (INP)
3-050-2      4-100-3
;

```

This example shows a specific 24-bit ITU-N capability point code:

```
rtrv-sid:cpcn24=33-33-33
```

```

rlghncxa03w 02-03-18 09:33:58 EST  EAGLE 31.0.0
PCA          PCI          PCN24        CLLI          PCTYPE
001-001-001  -----  011-011-011 tekelecstp   ANSI

CPCN24
033-033-033
;

```

This example contains capability point codes provisioned with cpctype=gflex, cpctype=gport, and cpctype=aiq:

```
rtrv-sid
```

```

tekelecstp 09-12-09 15:46:50 EST  EAGLE 42.0.0
PCA          PCI          PCN          CLLI
PCTYPE
001-001-001  2-002-2      00333        tekelecstp   ANSI

CPCI (GFLEX)
2-002-3      2-002-4

CPCA (AIQ)
001-002-003  001-002-004

CPCA (GPORT)
001-001-002  001-001-003
;

```

```

rtrv-sid

      tekelecstp 04-06-14 15:18:11 EST  EAGLE 31.12.0
        PCA              PCI              PCN              CLLI
PCTYPE
008-013-008      -----              -----              tklcstn14
OTHER

      CPCA
      005-005-002      005-005-004      005-005-005

      CPCA (LNP)
      005-005-002      005-005-004      005-005-005
;

```

This example retrieves a specific spare ITU-N capability point code:

```
rtrv-sid:cpcn=s-00456
```

```

      rlghncxa03w 05-01-07-18 09:33:58 EST  EAGLE 31.12.0
        PCA              PCI              PCN
CLLI              PCTYPE
      005-067-000      1-023-4      01234
tekelecstp      ANSI
                  s-1-023-4      s-01234

      CPCN
      s-00456

      CPCN (EIR)
      s-123
;

```

This example shows all site identification characteristics provisioned in the system at the time the command was entered when the J7 feature is enabled. The output includes spare point codes.

```

rtrv-sid

      tekelecstp 13-08-13 15:36:39 EST  EAGLE 45.1.0-64.71.0
rtrv-sid
Command entered at terminal #4.
      PCN16              PCI              PCN
CLLI              PCTYPE
      001-01-01      2-002-2      12345
tekelecstp      ANSI
                  s-2-003-1      s-12341

      CPCI
      3-004-5

```



```

CPCN
03203

CPCN16
003-04-01      003-04-03

```

;

Legend

- **PCA**—ANSI point code of the STP.
- **PCI**—ITU-TSS international point code of the STP.
- **PCN**—ITU-TSS national point code of the STP.
- **PCN16**—16-bit ITU national point code of the STP.
- **PCN24**—24-bit ITU national point code of the STP.
- **CPCA**—ANSI capability point code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network
- **CPCN**—ITU-TSS national capability point code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network.
- **CPCI**—ITU-TSS international capability point code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network.
- **CPCN24**—ITU-TSS 24-bit national capability point code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network.
- **CPCN16**—ITU-TSS 16-bit national capability point code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network.
- **(EIR)**—Equipment Identity Register (EIR) point code.
- **(INP)**—INAP Number Portability (INP) point code.
- **(LNP)**—Local number portability (LNP) point code.
- **(GFLEX)**—G-Flex (GFLEX) point code.
- **(GPORT)**—G-Port (GPORT) point code.
- **(MNP)**—MNP point code.
- **(VFLEX)**—V-Flex (VFLEX) point code.
- **(ATINP)**—ATINP feature (ATINPQ) point code.
- **(AIQ)**—ANSI41 AIQ feature (AIQ) point code.
- **CLLI**—Common language location identifier of the STP
- **PCTYPE**—Type of point code used by the STP. There are two types of point codes that the EAGLE STP can use, ANSI and OTHER. The value ANSI means the EAGLE STP supports point codes that meet the ANSI standard. The value OTHER means that the EAGLE STP supports point codes that do not meet the ANSI standard.

Related Topics

- [chg-sid](#)
- [ent-sid](#)

2656 E2656 Cmd Rej: SIP Phone Context entry does not exist

SIP Phone context must be specified when the SIP Prefix is specified.

2659 E2659 Cmd Rej: SIP Phone Context must be specified

Notes

If optional parameters are specified, only the entries that match the entered parameters are displayed.

Output

This example displays output when no other parameter is specified:

```
rtrv-sip-npp

tekelecstp 12-07-09 19:08:19 EST EAGLE 45.0.0
rtrv-sip-npp
Command entered at terminal #4.
PHONE-CTXT          PFX          NPDD          NPDS
-----
xyz.com
                    121          0             NONE
abc.com
                    12           0             NONE
mart.com
                    43321       0
NONE
                    233          0
NONE
                    232          0
NONE
                    231          0
NONE
                    11           0
NONE
                    1            0             NONE

PHCTXTID table is (3 of 101) 3% full.

;
```

The below two examples display the output when PHCTXT parameter is specified:

```
rtrv-sip-npp:phctxt=abc.com

tekelecstp 12-07-09 19:09:08 EST EAGLE 45.0.0
rtrv-sip-npp:phctxt=abc.com
Command entered at terminal #4.
PHONE-CTXT          PFX          NPDD          NPDS
-----
-----
abc.com
                    12           0             NONE
```

```
PHCTXTID table is (3 of 101) 3% full.
```

```
;
```

```
rtrv-sip-npp:phctxt=dfmt
```

```
tekelecstp 12-07-09 19:09:08 EST EAGLE 45.0.0
```

```
rtrv-sip-npp:phctxt=dfmt
```

```
Command entered at terminal #4.
```

PHONE-CTXT	PFX	NPDD	NPDS
dfmt	15	0	NONE

```
PHCTXTID table is (4 of 101) 4% full.
```

```
;
```

This example displays the output when PFX parameter is specified:

```
rtrv-sip-npp:phctxt=user@mart.com:pfm=91+
```

```
tekelecstp 12-07-09 19:09:08 EST EAGLE 45.0.0
```

```
rtrv-sip-npp:phctxt=user@mart.com:pfm=91+
```

```
Command entered at terminal #4.
```

PHONE-CTXT	PFX	NPDD	NPDS
user@mart.com	91+	0	NONE

```
PHCTXTID table is (3 of 101) 3% full.
```

```
;
```

Related Topics

- [dlt-sip-npp](#)
- [ent-sip-npp](#)
- [chg-sip-npp](#)

4.1.579 rtrv-sipopts

Use this command to retrieve SIP-configuration options.

Parameters

This command has no input parameters.

Example

```
rtrv-sipopts
```

Dependencies

SIPNP Feature must be enabled before retrieving SIP configuration-options.

2590 E2590 Cmd Rej: SIPNP Feature must be enabled

SIPOPTS table should be accessible.

4820 E4820 Cmd Rej: Failure accessing EGLEOPTS table

Output

This example shows output with default SIP options.

```
rtrv-sipopts
```

```
tekelecstp 12-06-25 11:43:52 EST EAGLE 45.0.0
rtrv-sipopts
Command entered at terminal #4.
NPRSPFMT      = RNDN
INCLUDENPDI   = on
INCLUDERN     = on
RNFMT         = RN
NPLKUPFAIL    = 404
RNCONTEXT     = null
```

```
;
```

This example shows output with SIP options provisioned.

```
rtrv-sipopts
```

```
tekelecstp 12-06-25 11:54:02 EST EAGLE 45.0.0
rtrv-sipopts
Command entered at terminal #4.
NPRSPFMT      = RN
INCLUDENPDI   = off
INCLUDERN     = off
RNFMT         = RNASD
NPLKUPFAIL    = 302
RNCONTEXT     = xyz
```

```
;
```

Legend

- NPRSPFMT— Defines format of URI in Contact header, when INCLUDERN is OFF.
- INCLUDENPDI— Indicates whether to include "npdi" parameter in the response in cases where the RTDB dip is successfully performed.

- INCLUDERN— Indicates whether to include "rn" parameter in the response in cases where the RTDB dip is successfully performed.
- RNFMT— Defines format of Routing Number in the 302 response.
- NPLKUPFAIL— Indicates whether 302 or 404 response is sent, when DN is not found in RTDB lookup.
- RNCONTEXT— Describes how the "rn" parameter value should be interpreted (global or local).

Related Topics

- [chg-sipopts](#)

4.1.580 rtrv-slk

Use this command to show the parameters for low-speed signaling links, ATM high-speed signaling links, or both.

Parameters

aname (optional)

Association name. The name of the association assigned to the links to be displayed.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

link (optional)

The signaling link on the card specified in the `loc` parameter. The links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all link parameter values.

See [Table A-1](#) for valid `link` parameter range values for each type of card that can have assigned signaling links.

Default:

Display all

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Default:

All signaling links are shown.

type (optional)

Link type. This parameter specifies to display a sub-set of links.

Range:**e1**

Display signaling links for E1 cards. Includes low speed E1 and SE-HSL links.

ipgw

Display signaling links configured for IPGW linksets

ipsg

Display signaling links configured for IPSP linksets

j1

Display signaling links for J1 cards. Includes low speed J1 links.

mtp2

Display low-speed signaling links

saal

Display ATM high-speed signaling links

t1

Display signaling links for T1 cards. Includes low speed T1 and ST-HSL-A links.

Default:

Display all signaling links

Example

```
rtrv-slk:loc=1302:link=a
rtrv-slk:loc=1302:link=b2
rtrv-slk:loc=1303:link=a31
rtrv-slk:aname=asocm2pa
rtrv-slk:loc=1305
rtrv-slk:type=j1
```

Dependencies

If the `link` parameter is specified, the `loc` parameter must be specified. The `loc` parameter can be specified without the `link` parameter.

2296 E2296 Cmd Rej: Both LOC and LINK must be specified

The `loc` parameter or the `class` parameter, but not both, can be specified in the command.

3415 E3415 Cmd Rej: LOC and CLASS cannot be specified together

The slot portion of the specified `loc` parameter must be 01 - 18, except 09 and 10 cannot be specified (`loc=xyss`, where `x` is the frame, `y` is the shelf, and `ss` is the slot).

2016 E2016 Cmd Rej: Card Location is out of range - loc

Card locations 1113 - 1118 cannot be specified for the `loc` parameter.

2154 E2154 Cmd Rej: Card slot reserved by system

2152 E2152 Cmd Rej: Shelf ID out of range

The LIMATM, LIME1ATM, LIME1, LIMT1, DCM, and ENET/ENETB card types are the only valid card types for this command.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

The card must be an E5-ATM-B, E5-E1T1-B, E5-ENET-B.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

The specified card location must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The IMT (Card) table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

The Link table must be accessible.

2103 E2103 Cmd Rej: Failed reading the link table

The Linkset table must be accessible.

2122 E2122 Cmd Rej: Failed reading linkset table

If an E5-ATM-B card is used, then a value of A, B, or A1 must be specified for the `link` parameter. A 3 Links per Card feature quantity must be enabled before the `link=a1` parameter can be specified.

4768 E4768 Cmd Rej: Invalid link for hardware type E5ATM

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

The *Installation Guide* provides an illustration of the card locations.

Output

```
rtrv-slk
```

```
tekelecstp 09-12-17 13:54:32 EST EAGLE 42.0.0
rtrv-slk
Command entered at terminal #4.
```

LOC	LINK	LSN	SLC	TYPE	LP	ATM	VCI	VPI	LL
					SET	BPS	TSEL		
1208	A	e3e4	4	LIMATM	1	1.544M	LINE	5	0 0
1218	A	e3e4	5	LIMATM	1	1.544M	LINE	5	0 0

LOC	LINK	LSN	SLC	TYPE	ANAME	SLKTPS
1303	A	m2pa12132	0	IPSG	m2pa1303a	1000
1303	B	m3ua333a	0	IPSG	m3ua1303b	500
1303	A1	m3ua323a	0	IPSG	m3ua1303a	1000
1303	B1	m3ua333i	0	IPSG	m3ua1303b	500
1303	B2	m3ua333n	0	IPSG	m3ua1303b	500
1305	A	ls1305a	0	IPSG	sg1305a	1000
1305	B	ls1305i	0	IPSG	sg1305i	500
1305	A1	ls1305a	1	IPSG	a1	1000
1305	B1	ls1305i	1	IPSG	a1	500
1305	B14	lsitunbb	0	IPSG	a1	1000
1305	B15	lsitunaa	0	IPSG	a1	1000

LOC	LINK	LSN	SLC	TYPE
1313	A	e3e4i	0	IPLIMI

LOC	LINK	LSN	SLC	TYPE
1307	A	ls1307a	0	SS7IPGW
1315	A	ls1315a	0	SS7IPGW
1317	A	ls1317i	0	IPGWI

SLK table is (20 of 1200) 2% full.

;

This example shows the link information for an LIMATM card:

rtrv-slk:loc=1304:link=a

```
tekelecstp 09-12-14 12:17:00 EST EAGLE 42.0.0
LP          ATM
LOC LINK LSN      SLC TYPE      SET BPS      TSEL      VCI  VPI  LL
1304 A  ls1        3 LIMATM     1  1.544M LINE  5      0    0
```

This example shows the link information for an IPSG card:

rtrv-slk:loc=1301

```
e1001501 10-04-03 16:20:45 EST EAGLE 42.0.0
LOC LINK LSN      SLC TYPE      ANAME      SLKTPS/
MAXSLKTPS
RSVDSLKTPS
1301 A  SCS1        0  IPSG      sg1301a      500          5000
1301 B  SCS2        0  IPSG      sg1301b      1000         5000
1301 A1 MGC1        0  ISPG      sg1301a1     700          5000
1301 B1 MGC2        0  IPSG      sg1301b1    1200         5000
```

IPTPS for LOC = 1301 is (3400 of 5000) 68%

;

This example shows link information for signaling links configured for a specified association:

```
rtrv-slk:aname=m3ua1211a1
```

```
e1001501 10-04-03 16:20:45 EST EAGLE 42.0.0

LOC LINK LSN          SLC TYPE      ANAME          SLKTPS/
MAXSLKTPS
                                RSVDSLKTPS
1211 A1   ls1211b      0   IP   IP   m3ua1211a1    600
5000
1211 A2   ls1211c      0   IP   IP   m3ua1211a1    700
5000
;
```

This example shows the link information for an E5-ATM-B card:

```
rtrv-slk:loc=1305
```

```
tekelecstp 11-03-14 12:17:00 EST EAGLE 44.0.0
                                LP          ATM
LOC LINK LSN          SLC TYPE      SET BPS      TSEL      VCI  VPI  LL
1305 A   ls1           0   LIMATM      1   1.544M LINE  5    0    0
1305 B   ls1           1   LIMATM      1   1.544M LINE  5    0    0
```

This example shows the link B information for an E5-ATM-B card:

```
rtrv-slk:loc=1305:link=b
```

```
tekelecstp 11-03-14 12:17:00 EST EAGLE 44.0.0
                                LP          ATM
LOC LINK LSN          SLC TYPE      SET BPS      TSEL      VCI  VPI  LL
1305 B   ls1           1   LIMATM      1   1.544M LINE  5    0    0
```

This example shows ATM (ANSI & ITU) and E1/T1 (HSL & LSL) links:

```
rtrv-slk
```

```
tekelecstp 09-12-17 17:09:54 EST 42.0.0
                                LP          ATM
LOC LINK LSN          SLC TYPE      SET BPS      TSEL      VCI  VPI  LL
1101 A   ls333         0   LIMATM      1   1.544M LINE  5    0    0

                                LP
ATM                                E1ATM
LOC LINK LSN          SLC TYPE      SET BPS      TSEL      VCI  VPI
CRC4 SI SN
1201 A   lsi333       1   LIME1ATM    21  2.048M EXTERNAL 5    0
ON 3 0

                                L2T                                PCR PCR
E1 E1
```

```

      LOC LINK LSN      SLC TYPE      SET BPS      ECM  N1  N2  LOC
PORT TS
1204 A   lsi111      0  LIME1      26  1.984M BASIC ---- - 1204
5  1
1205 A1  lsi222      0  LIME1      11  56000  BASIC ---- - 1205
1  3
                                     L2T                PCR PCR  T1  T1

```

```

      LOC LINK LSN      SLC TYPE      SET BPS      ECM  N1  N2  LOC
PORT TS
1104 A   ls111       0  LIMT1      31  1.536M BASIC ---- - 1104
5  1
1105 A1  ls222       0  LIMT1       1  56000  BASIC ---- - 1105
1  2

```

SLK table is (6 of 1200) 1% full.

;

This example shows link A1 information for an E5-ATM-B card:

```
rtrv-slk:loc=1306:link=a1
```

```

tekelecstp 11-03-18 12:17:00 EST EAGLE 44.0.0
                                     LP      ATM
LOC LINK LSN      SLC TYPE      SET BPS      TSEL  VCI  VPI  LL
1306 A1  ls1       1  LIMATM      1  1.544M LINE    5    0    0

```

This example shows link information for an E5-ENET-B card:

```
rtrv-slk:loc=1301
```

```

tekelecstp 11-03-14 16:22:25 EST EAGLE5 44.0.0
LOC LINK LSN      SLC TYPE      ANAME      SLKTPS/
MAXSLKTPS
                                     RSVDSLKTPS
1301 A   SCS1       0  IPSPG      sg1301a     500      6500
1301 B   SCS2       0  IPSPG      sg1301b     1000     6500
1301 A1  MGC1       0  ISPG       sg1301a1    700      6500
1301 B1  MGC2       0  IPSPG      sg1301b1   1200     6500

```

RSVDSLKTPS for LOC = 1301 is (3400 of 6500) 52%.

SLK table is (4 of 1200) 1% full.

This example shows link information for a J1 link:

```
rtrv-slk:type=j1
```

```

tekelecstp 13-12-19 19:02:51 EST 46.0.0-65.3.0
rtrv-slk:type=j1

```

Command entered at terminal #4.

PORT	TS	LOC	LINK	LSN	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	J1
1	11	1102	A	1s2	11	LIMT1	11	64000	BASIC	----	-----	
1	11	1102	A1	1s2	10	LIMT1	11	64000	BASIC	----	-----	
1	25	1102	A2	1s2	5	LIMT1	11	64000	BASIC	----	-----	

SLK table is (7 of 1200) 1% full.

;

This example shows the link information for a SLIC card running the IPSG application:

rtrv-slk:loc=1301

e1001501 16-05-27 16:20:45 EST EAGLE 46.4.0

LOC	LINK	LSN	SLC	TYPE	ANAME	SLKTPS/ MAXSLKTPS	RSVDSLKTPS
1301	A30	SCS1	0	IPSG	sg1301a	500	9500
1301	B35	SCS2	0	IPSG	sg1301b	1000	9500
1301	A50	MGC1	0	IPSG	sg1301a1	700	9500
1301	B55	MGC2	0	IPSG	sg1301b1	1200	9500

IPTPS for LOC = 1301 is (3400 of 9500) 35%

;

Legend

- **LOC**—Location of the card containing the signaling link
- **LINK**—Signaling link assigned to the card
- **LSN**—Name of the linkset containing the signaling link
- **SLC**—Signaling link code of the signaling link
- **TYPE**—Type of card
- **ANAME**—Association name
- **SLKTPS/RSVDSLKTPS**—SLKTPS guaranteed for an IPSG link
- **MAXSLKTPS**—Maximum SLKTPS allowed for an IPSG link
- **L2TSET**—Number of the level 2 timer set associated with the signaling link
- **BPS**—Transmission rate of the signaling link in bits per second
- **ECM**—Basic of PC for transmission

- **PCRN1**—MSU number
- **PCRN2**—Octet number
- **LPSET**—ATM link parameter set identifier
- **ATMTSEL**—ATM timing selector. Possible values are as follows:
 - **Internal**—Derived from an internal clock source operating at 1.544 MHz \pm 200 Hz (ANSI) or 2.048 MHz \pm 103 Hz (ITU).
 - **External**—Derived from the High-Speed Master Clock (T1 or E1)
 - **Line**—Derived from its received data stream, if present
- **VCI**—ATM virtual channel identifier
- **VPI**—ATM virtual path identifier
- **LL**—ATM line length
- **E1PORT**—E1 card port that has an E1 interface assigned to it.
- **T1PORT**—T1 card port that has a T1 interface assigned to it
- **TS**—Timeslot associated with the signaling link that is serviced by the E1 or T1 interface
- **E1ATMCRC4**—E1 ATM card CRC4 multi-frame structure enable/disable indicator
- **E1ATMSI**—Value of two Spare International bits of NFAS data for the E1 ATM card
- **E1ATMSN**—Value of five Spare National bits of NFAS data for the E1 ATM card
- **J1PORT**— J1 card port that has a J1 interface assigned to it.

Related Topics

- [act-slk](#)
- [blk-slk](#)
- [dact-slk](#)
- [dlt-slk](#)
- [ent-slk](#)
- [inh-slk](#)
- [rept-stat-slk](#)
- [tst-slk](#)
- [ublk-slk](#)
- [unhb-slk](#)

4.1.581 rtrv-slt

Use this command to display the fields of an SLTM (signaling link test message) record in the SLTM table.

Parameters

enabled (optional)

Displays the SLTM records that are either enabled or disabled (*off*).

Range:

on
display enabled records

off
display disabled records

Default:

All SLTM records with the specified value for the enabled parameter are shown.

sltset (optional)

The signaling link test message (SLTM) record number in the SLTM table.

Range:

1 - 20

Default:

Display all

Example

```
rtrv-slt
rtrv-slt:sltset=1
rtrv-slt:enabled=off
```

Dependencies

None

N/A N/A

Notes

None

Output

```
rtrv-slt

rlghncxa03w 03-03-07 00:21:24 EST EAGLE 31.3.0
SLTM PARAMETERS
SLTSET  T1   T2   MODE   ENABLED  PATTERN
1       9.0  60.0 SPECIAL ON      AA2233445566778899AABCCDDEEFF
2       12.0 30.0 SPECIAL OFF     F01234BCDE
3       4.0   50.0 REGULAR ON      CC2233445566778899AABCCDDEEFF
4       6.0   90.0 SPECIAL OFF     BB23446789BCABEFG
5       6.0   90.0 SPECIAL OFF     BB23446789BCABEFG
6       6.0   90.0 SPECIAL OFF     BB23446789BCABEFG
7       6.0   90.0 SPECIAL OFF     BB23446789BCABEFG
8       6.0   90.0 SPECIAL OFF     BB23446789BCABEFG
9       6.0   90.0 REGULAR OFF     BB23446789BCABEFG
10      6.0   90.0 REGULAR OFF     BB23446789BCABEFG
11      6.0   90.0 REGULAR OFF     BB23446789BCABEFG
12      4.0   50.0 SPECIAL ON      FFEEDDCCBAA998877665544332211
```

```

13      4.0  50.0  SPECIAL  ON      EE22334455
14      6.0  90.0  SPECIAL  ON      AABBCDD
15      6.0  90.0  REGULAR  ON      AABBCDD
16      6.0  90.0  REGULAR  ON      AABBCDD
17      6.0  90.0  REGULAR  ON      AABBCDD
18      6.0  90.0  SPECIAL  ON      AABBCDD
19      6.0  90.0  SPECIAL  ON      AABBCDD
20      6.0  90.0  SPECIAL  ON      AABBCDD
;

rtrv-slt:sltset=1

rlghncxa03w 03-03-07 00:21:24 EST  EAGLE 31.3.0
SLTM PARAMETERS
SLTSET  T1   T2   MODE    ENABLED  PATTERN
1       9.0  60.0  SPECIAL  ON      112233445566778899AABBCDDDEEFF
;

rtrv-slt:enabled=off

rlghncxa03w 03-03-07 00:21:24 EST  EAGLE 31.3.0
SLTM PARAMETERS
SLTSET  T1   T2   MODE    ENABLED  PATTERN
2       12.0 30.0  SPECIAL  OFF     F01234BCDE
4       6.0  90.0  SPECIAL  OFF     0123446789BCABEFG
5       6.0  90.0  SPECIAL  OFF     0123446789BCABEFG
6       6.0  90.0  SPECIAL  OFF     0123446789BCABEFG
7       6.0  90.0  SPECIAL  OFF     0123446789BCABEFG
8       6.0  90.0  SPECIAL  OFF     0123446789BCABEFG
9       6.0  90.0  REGULAR  OFF     0123446789BCABEFG
10      6.0  90.0  REGULAR  OFF     0123446789BCABEFG
11      6.0  90.0  REGULAR  OFF     0123446789BCABEFG
;

```

Legend

- **SLTSET**—Signaling link test message record number in the SLTM table
- **T1**—T1 timer value for the SLTM record. The amount of time, in seconds, to wait before running the SLTM test again after an SLTM test fails.
- **T2**—T2 timer value for the SLTM record. The amount of time, in seconds, to wait between running SLTM tests for a normally functioning signaling link.
- **MODE**—SLTM mode to be used when sending test messages
- **ENABLED**—Indicates whether the signaling link test message is enabled.
- **PATTERN**—Test pattern to be sent with a signaling link test message

Related Topics

- [chg-l3t](#)
- [chg-slt](#)

- [ent-ls](#)
- [rtrv-ls](#)

4.1.582 rtrv-snmp-host

Use this command to show the configuration parameters of the provisioned SNMP hosts.

Parameters

This command has no parameters.

Example

```
rtrv-snmp-host
```

Dependencies

This command cannot be entered while in upgrade mode.

```
3276 E3276 Cmd Rej: Command not allowed while in upgrade mode
```

Notes

None

Output

```
rtrv-snmp-host

tekelecstp 12-06-13 14:37:55 EST 45.0.0-64.66.0
rtrv-snmp-host
Command entered at terminal #4.
IPADDR      192.168.54.100
HOST        snmphost1
CMDPORT     161
TRAPPORT    162
HB          60
TRAPCOMM    public
SNMP HOST table is (1 of 2) 50% full
;
```

Legend

- IPADDR - IP address of the SNMP Manager device
- HOST - Host name of the Manager device
- CMDPORT - SNMP command interface port ID
- TRAPPORT - SNMP trap interface port ID
- HB - Heartbeat notification interval
- TRAPCOMM - Trap community string

Related Topics

- [ent-snmp-host](#)

- [chg-snmpt-host](#)
- [dlt-snmpt-host](#)

4.1.583 rtrv-snmptpts

Use this command to display the system-wide SNMP Options

Parameters

This command has no parameters.

Example

```
rtrv-snmptpts
```

Dependencies

This command cannot be entered while in upgrade mode.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

Notes

None.

Output

```
rtrv-snmptpts
```

```
tekelecstp 13-06-13 15:27:39 EST 45.0.0-64.66.0
```

```
rtrv-snmptpts
```

```
Command entered at terminal #4.
```

```
SNMP      OPTIONS
```

```
-----
```

```
SNMPUIM   on
```

```
GETCOMM   my.getcomm.str
```

```
SETCOMM   setcomm-pwd
```

```
;
```

Legend

- SNMPUIM - UIM trap enable/disable
- GETCOMM - Get community string
- SETCOMM - Trap community string

Related Topics

- [chg-snmptpts](#)

4.1.584 rtrv-spc

Use this command to retrieve an SPC (secondary point code) from the active database.

Parameters



Note:

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

spc (optional)

ANSI point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

spca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

spc/spca/spci/spcn/spcn24/spcn16 (optional)

The secondary point code.

spci (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

spcn (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

spcn24 (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

spcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area (un-sna-mna)*.

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

Example

```
rtrv-spc
```

```
rtrv-spc:spc=5-3-3
```

```
rtrv-spc:spcn24=98-98-98
```

```
rtrv-spc:spcn=s-00345
```

```
rtrv-spc:spcn16:121-10-30
```

Dependencies

The MPC feature must be turned on before this command can be entered.

3867 E3867 Cmd Rej: MPC feature must be enabled

The SPC table must be accessible.

3807 E3807 Cmd Rej: Failed reading Secondary Point Code (SPC) table

The value of the `spc` parameter must be a full point code.

3822 E3822 Cmd Rej: SPC must be a full point code

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

This example shows output for all provisioned secondary point codes. SPC-N is a flexible point code format as defined with the `chg-stpopts:npcfmti` parameter.

```
rtrv-spc
```

```
rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.0.0
SPC (Secondary Point Codes)

SPCA
  001-010-010
  002-010-010
  003-010-010

SPC-I
  01-253-05
  02-254-06
  03-255-07

SPC-N
  120-01-0-1
  100-02-1-0

SPC-N24
  099-099-099

Secondary Point Code table is (9 of 40) 25% full

;
```

This example shows output for all provisioned secondary point codes. Spare point codes are included.

```
rtrv-spc
```

```
rlghncxa03w 05-01-18 08:50:12 EST EAGLE 31.12.0
SPC (Secondary Point Codes)

SPCA
  001-001-001
  001-123-003

SPC-I
  1-001-1
  s-1-001-1
  2-003-4
```

```
          s-4-003-4

SPC-N
          00234
          s-00345

SPC-N24
          011-011-011

Secondary Point Code table is (9 of 40) 22% full.

;
```

This example shows the only provisioned secondary point code:

```
rtrv-spc

rlghncxa03w 05-03-18 08:50:12 EST  EAGLE 31.0.0
SPC (Secondary Point Codes)

SPCA
none

SPC-I
none

SPC-N
none

SPC-N24
          099-099-099

Secondary Point Code table is (1 of 40) 2% full.

;
```

This example shows output for a specific ANSI secondary point code:

```
rtrv-spc:spc=5-3-3

rlghncxa03w 03-03-18 08:50:12 EST  EAGLE 31.3.0
SPC (Secondary Point Codes)
          005-003-003

Secondary Point Code table is (8 of 40) 25% full.

;
```

This example shows output when the specified secondary point code is not provisioned:

```
rtrv-spc:spc=5-3-1
```

```
rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.3.0  
SPC (Secondary Point Codes)
```

```
Secondary Point Code specified is not provisioned
```

```
Secondary Point Code table is (3 of 40) 8% full.
```

```
;
```

This example shows information for a specific ITU-N secondary spare point code:

```
rtrv-spc:spcn=s-00345
```

```
rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.12.0  
SPC (Secondary Point Codes)  
s-00345
```

```
Secondary Point Code table is (2 of 40) 5% full.
```

```
;
```

This example shows output for a specific 24-bit ITU-N secondary point code:

```
rtrv-spc:spcn24=98-98-98
```

```
rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.0.0  
SPC (Secondary Point Codes)  
098-098-098
```

```
Secondary Point Code table is (2 of 40) 5% full.
```

```
;
```

This example shows output for a specific 16-bit ITU-N point code:

```
rtrv-spc:spcn16=121-10-15
```

```
rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.0.0  
SPC (Secondary Point Codes)  
098-098-098
```

```
Secondary Point Code table is (2 of 40) 5% full.
```

```
;
```

Legend

- **SPC**—Secondary point code
- **SPCA**—ANSI secondary point code
- **SPC-I**—ITU international secondary point code
- **SPC-N**—ITU national secondary point code
- **SPC-N24**—24-bit ITU national secondary point code
- **SPC-N16**—16-bit ITU national secondary point code

Related Topics

- [dlt-spc](#)
- [ent-spc](#)

4.1.585 rtrv-srvsel

Use this command to display a list of administered service selector combinations. The list can be filtered using various parameter combinations.

**Note:**

The `rtrv-srvsel` operation may be lengthy because the service selector table can contain over 1,000 entries.

Parameters**Note:**

Definitions for the feature options specified by the `on` and `off` parameters are located in the Notes section.

df1tact (optional)

The default action ID associated with the service selector entry.

Range:

ayyyyyyy

1 alphabetic character followed by up to 8 alphanumeric characters

This parameter can take one of the following values:

- a valid GTT Action ID of type **disc/udts/tcaperr** that must already exist in the GTT Action table
- *fallback* —Fallback to the Relay data. The Relayed MSU is routed as per routing data provided by the service.

- *falltogtt* —Fallback to GTT. If the *gttselid* parameter has a value other than *none*, and the GTT selector search fails, then the GTT selector search is performed again using *gttselid=none*.

force (optional)

The *force=yes* parameter must be specified when a *num* parameter value greater than 50 is specified to display more than 50 entries.

Range:

yes

no

Default:

no

gti/gtia/gtii/gtin/gtin24 (optional)

Global title indicator. For all service selector commands, the domain is defined as GTI and GTIA (ANSI), GTII (ITU international), GTIN (ITU national) and GTIN24 (24-bit ITU national). For the service selector commands, GTI and GTIA are equivalent.

Range:

Supported value for ANSI: *gti/gtia=2*

Supported values for ITU: *gtii/gtin/gtin24=0, 2, 4*

Default:

Display all

nai (optional)

Nature of Address indicator.

Range:

sub

rsvd

natl

intl

Default:

Display all

nai v (optional)

Nature of Address indicator value.

Range:

0 - 127

Default:

Display all

np (optional)

Numbering Plan.

Range:*e164**generic**x121**f69**e210**e212**e214**private***Default:**

Display all

npv (optional)

Numbering Plan value.

Range:

0 - 15

Default:

Display all

num (optional)Number of entries to display. The `force=yes` parameter is required when this parameter value is specified greater than 50 entries.**Range:**

1 - 20992

Default:

50

off (optional)

Disables or turns off the specified feature options. A comma-separated list of feature options that are requested to be turned off. Up to 10 feature options can be specified in the list.

Range:*gttrqd**force***on (optional)**

Enables or turns on the specified feature options. A comma-separated list of feature options that are requested to be turned on. Up to 10 feature options can be specified in the list.

Range:*gttrqd*

force

serv (optional)

The Service Module card service.

Range:

eir

Equipment Identity Register

gflex

GSM flexible numbering

gport

GSM number portability

inpq

INP query

inpmr

INP message relay

smsmr

Prepaid SMS Intercept Phase 1, Portability Check for Mobile Originated SMS, MO SMS GSM NP, MO SMS IS41 NP, MO SMS IS41-to-GSM Migration, MO SMS ASD, MO SMS GRN, MO SMS B-Party routing.

idps

IDP Screening for Prepaid

idpr

Prepaid IDP Query Relay

mnp

mobile number portability

vflex

Voice Mail Router

atinp

ATI Number Portability Query (ATINP)

ttr

Triggerless TCAP Relay

aiq

ANSI41 Analyzed Information Query

Default:

Display all

snai (optional)

Service nature of address indicator.

Range:

sub

Subscriber number

natl

National significant number

intl

International number

rnidn

Routing number prefix and international dialed/directory number

rnndn

Routing number prefix and national dialed/directory number

rnsdn

Routing number prefix and subscriber dialed/directory number

ccrndn

Country code, routing number, and national directory number

Default:

Display all

snp (optional)

Service numbering plan.

Range:

e164

E.164 numbering plan

e212

E.212 numbering plan

e214

E.214 numbering plan

Default:

Display all

ssn (optional)

Subsystem number.

Range:

0 - 255, *

tt (optional)

Translation type.

Range:

0 - 255

Default:

Display all

Example

```
rtrv-srvsel
rtrv-srvsel:gtii=2
rtrv-srvsel:tt=0:np=e164
rtrv-srvsel:serv=vflex
rtrv-srvsel:serv=aiq
rtrv-srvsel:on=gttrqd
rtrv-srvsel:gtii=0:serv=idpr
```

Dependencies

The INP or AINPQ feature must be turned on before the `serv=inp` or `serv=inpq` parameter can be specified.

3524 E3524 Cmd Rej: INP/AINPQ feature must be ON

The G-Flex feature must be turned on before the `serv=gflex` parameter can be specified.

3500 E3500 Cmd Rej: GFLEX feature must be ON

The G-Port feature must be turned on before the `serv=gport` parameter can be specified.

3989 E3989 Cmd Rej: GPORT feature must be ON when (N)SERV=GPORT

The `np` and `npv` parameters cannot be specified together in the command.

3551 E3551 Cmd Rej: NP and NPV must not be specified together

The `nai` and `nai` parameters cannot be specified together in the command.

3552 E3552 Cmd Rej: NAI and NAIV must not be specified together

The values 1 and 3 are not valid for the `gti/gtia/gtii/gtin/gtin24` parameters.

3553 E3553 Cmd Rej: GTI(A)=4, and GTI(x)=1 and 3 are not supported

The value 0, 4 is not valid for the `gti/gtia` parameters.

3553 E3553 Cmd Rej: GTI(A)=4, and GTI(x)=1 and 3 are not supported

If the `gti/gtia/gtii/gtin/gtin24=0, 2` parameter is specified, then no `np(v)` and `nai(v)` parameter combinations can be specified.

3554 E3554 Cmd Rej: NP(V) and NAI(V) must not be specified for given GTI value

If the `serv` parameter has a value of `inp`, `inpq`, `gport`, or `eir`, then the `gtia` and `gti` parameters cannot be specified.

3942 E3942 Cmd Rej: GTI/GTIA is invalid for specified (N)SERV

If the `serv=inp` parameter is specified, then the value of the `snp` parameter must be `e164` if specified.

3939 E3939 Cmd Rej: (N)SNP must be E164 when (N)SERV=INPMR

If the value specified for the `sna` parameter is `rnidn`, `rnndn`, or `rnsdn`, then the value of the `serv` parameter must be `inpmr`, `gport`, or `smsmr` if it is specified.

3940 E3940 Cmd Rej: (N)SERV value is invalid for the specified (N)SNAI

If the `serv=inpq` parameter is specified, then the `gtii` parameter cannot be specified.

3941 E3941 Cmd Rej: GTII must not be specified when (N)SERV = INPQ

If the value specified for the `sna` parameter is `rnidn`, `rnndn`, or `rnsdn`, then the `serv=gflex` parameter cannot be specified.

3945 E3945 Cmd Rej: SERV must not be GFLEX when SNAI = RNIDN/RNNDN/RNSDN

If a value of `aiq`, `eir`, `inpq`, or `vflex` is specified for the `serv` parameter then the `snp` and `sna` parameters cannot be specified.

3943 E3943 Cmd Rej: SNP/SNAI mustn't be specified for requested service

If the `sna=ccrndn` parameter is specified, then the value specified for the `serv` parameter must be `gport` or `smsmr`.

3994 E3994 Cmd Rej: (N)SERV must be GPORT/SMSMR when (N)SNAI=CCRNDN

If the value specified for the `num` parameter is greater than 50, then the `force=yes` parameter must be specified.

3177 E3177 Cmd Rej: FORCE=YES/ON must be specified if NUM is greater than 50

The Prepaid IDP Query Relay feature must be turned on or the IAR Base feature must be enabled before the `serv=ttr` parameter can be specified.

4500 E4500 Cmd Rej: IDPR must be ON or IAR Base must be enabled when SERV=TTR

If a value of `idpr` or `ttr` is specified for the `serv` parameter, then the parameters `NAIV`, `NPV`, `SNP`, or `SNAI` must not be specified.

4505 E4505 Cmd Rej: Service parameters not supported when SERV=IDPR or TTR

The IDP Screening for Prepaid feature must be turned on before the `serv=idps` parameter can be specified.

4544 E4544 Cmd Rej: The IDPS Feature must be enabled

The V-flex feature must be turned on before the `serv=vflex` parameter can be specified.

4142 E4142 Cmd Rej: VFLEX feature must be ON

The Portability Check for Mobile Originated SMS or the PPSMS feature must be turned on, or the MO SMS ASD, MO SMS B-Party Routing, MO SMS GRN, MO SMS IS41-to-GSM Migration, MO-based GSM SMS NP, or MO-based IS41 SMS NP feature must be enabled before the `serv=smsmr` parameter can be specified.

3631 E3631 Cmd Rej: Incompatible Feature/Option status

The ATINP feature must be enabled before the `serv=atinp` parameter can be specified.

4816 E4816 Cmd Rej: ATINP feature must be enabled

If a value of *aiq*, *atinp*, or *eir* is specified for the *serv* parameter, then the *gtin24* parameter cannot be specified.

4838 E4838 Cmd Rej: GTIN24 must not be specified when (N)SERV = ATINP/AIQ/EIR

The Prepaid IDP Query Relay feature must be turned on before the *serv=idpr* parameter can be specified.

5024 E5024 Cmd Rej: Prepaid IDP Query Relay feature must be activated

The ANSI41 AIQ feature must be enabled before the *serv=aiq* parameter can be specified.

5158 E5158 Cmd Rej: ANSI41 AIQ feature must be enabled

If a DSM4G card is active in the system, then the *on=gttrqd* parameter cannot be specified.

5059 E5059 Cmd Rej: Configuration requires E5-SM4G card or better

The GTT Action table is corrupt or cannot be found.

5067 E5067 Cmd Rej: Unable to access GTT Action table

If a GTT Action ID is specified as the value for the *dfltact* parameter, then the Action ID must already exist in the GTT Action table.

5071 E5071 Cmd Rej: GTT Action Id does not exist

The same values cannot be specified for the *on* and *off* parameters.

4732 E4732 Cmd Rej: Same option in ON & OFF params cannot be specified

The *dfltact=none* parameter cannot be specified.

5298 E5298 Cmd Rej: Default ACTID must not be specified as NONE

The EGTT feature must be turned on before the *dfltact* parameter can be specified.

3557 E3557 Cmd Rej: EGTT must be ON

The GSM DBMM table must be accessible.

3546 E3546 Cmd Rej: Failed reading GSM DBMM Table

The *defactid=none* parameter cannot be specified.

5298 E5298 Cmd Rej: Default/Fail ACTID must not be specified as NONE

Only for IDP Relay feature, *gtii/gtin/gtin24=0* can be specified.

Notes

on/off options

- *gttrqd* —GTT required. Specifies whether GTT is required after service execution is complete and the message is relayed by the service. This option is supported for the IDPR, MNP, TTR, GPORT, SMSMR, GFLEX, and INPMR services.
- *force* —Must be specified to display more than 50 entries

Output

This example shows all service selectors containing the specified GTI value:

```
rtrv-srvsel:gtii=2
```

```
rlghncxa03w 10-03-29 16:40:40 EST EAGLE 42.0.0
GTII TT NP NAI SSN SNP SNAI SERV GTTRQD
2 0 -- --- 7 e164 intl gflex on
DFLTACT=act123456 GTTSELID=20
2 18 -- --- 7 e164 rnidn inpmr off
DFLTACT=act1 GTTSELID=2
;
```

This example includes a GTIN24 entry:

```
rtrv-srvsel
```

```
rlghncxa03w 10-03-09 16:40:40 EST EAGLE 42.0.0
GTIN TT NP NAI SSN SNP SNAI SERV GTTRQD
4 4 e164 intl 8 e164 intl gport off
DFLTACT=fallback GTTSELID=none

GTIN24 TT NP NAI SSN SNP SNAI SERV GTTRQD
4 4 e164 intl 2 e164 intl gport off
DFLTACT=act123456 GTTSELID=2

SRV SELECTOR table is (2 of 20992) 1 % full
;
```

```
rtrv-srvsel:ssn=3
```

```
tekelecstp 10-03-08 15:43:22 EST EAGLE5 42.0.0
GTII TT NP NAI SSN SNP SNAI SERV GTTRQD
4 1 e214 intl 3 --- --- eir ---
DFLTACT=----- GTTSELID=-----

SRV SELECTOR table is (4 of 20992) 1 % full
;
```

This example shows all provisioned service selectors:

```
rtrv-srvsel
```

```
tekelecstp 10-03-16 17:09:08 EST EAGLE 42.0.0
GTIA TT NP NAI SSN SNP SNAI SERV GTTRQD
2 9 -- --- * e212 intl gflex off
DFLTACT=act123 GTTSELID=9
2 10 -- --- 3 e164 intl gflex off
```

```

DFLTACT=act123456 GTTSELID=75
2    253  --      ---  4    e214  natl  gflex  off
DFLTACT=actt1      GTTSELID=80

GTII  TT  NP      NAI  SSN  SNP  SNAI  SERV  GTTRQD
2    0   --      ---  2    e164  intl  gflex  off
DFLTACT=act12345  GTTSELID=56
2    18  --      ---  *    e164  rnsdn inpmr  on
DFLTACT=act123    GTTSELID=80
4    0   e214    sub  *    e214  sub  gflex  off
DFLTACT=act123456 GTTSELID=98

GTIN  TT  NP      NAI  SSN  SNP  SNAI  SERV  GTTRQD
2    2   --      ---  3    e164  intl  gflex  off
DFLTACT=act1234   GTTSELID=8
2    9   --      --   *    ---   ---  inpq   ---
DFLTACT=-----  GTTSELID=-----
4    2   e164    natl *    e164  rnndn inpmr  on
DFLTACT=act1234   GTTSELID=432
4    9   ---     ---  4    ---   ---  inpq   ---
DFLTACT=-----  GTTSELID=-----
;

```

```
rtrv-srvsel:serv=vflex
```

```

tekelecstp 10-03-08 16:35:22 EST  EAGLE 42.0.0
GTII  TT  NP      NAI  SSN  SNP  SNAI  SERV  GTTRQD
4    1   e164    intl  3    ---   ---  vflex  ---
DFLTACT=-----  GTTSELID=-----
4    2   e164    intl  *    ---   ---  vflex  ---
DFLTACT=-----  GTTSELID=-----

GTIN  TT  NP      NAI  SSN  SNP  SNAI  SERV  GTTRQD
4    4   e164    natl  4    ---   ---  vflex  ---
DFLTACT=-----  GTTSELID=-----

SRV SELECTOR table is (3 of 20992)  1 % full
;

```

This example shows the output when no service selectors are provisioned:

```
rtrv-srvsel
```

```

tekelecstp 10-03-04 13:28:13 EST  EAGLE 42.0.0

GTIA  TT  NP      NAI  SSN  SNP  SNAI  SERV  GTTRQD
No SRV Selector found in range
;

```



```
rtrv-srvsel:serv=aiq
```

```
tekelecstp 09-12-03 15:43:22 EST EAGLE5 42.0.0
GTII TT NP NAI SSN SNP SNAI SERV
4 0 e214 intl 10 --- --- aiq
```

```
SRV SELECTOR table is (4 of 20992) 1 % full
```

```
;
```

This example shows all service selectors for the GPORT service:

```
rtrv-srvsel:serv=gport
```

```
tekelecstp 10-03-04 13:28:13 EST EAGLE 42.0.0
```

```
GTII TT NP NAI SSN SNP SNAI SERV GTTRQD
2 4 -- ---- 12 e164 sub gport on
DFLTACT=act123456 GTTSELID=20
2 6 -- ---- 15 e164 sub gport on
DFLTACT=fallback GTTSELID=246
```

```
;
```

This example shows the output when the EPAP Data Split feature is turned on:

```
rtrv-srvsel
```

```
tekelecstp 12-01-12 15:24:04 EST EAGLE5 44.0.0
```

```
GTII TT NP NAI SSN SNP SNAI SERV RQDTBLNOP GTTRQD
4 1 e164 sub 2 e164 sub gflex uds off
DFLTACT=fallback GTTSELID=none
4 2 e164 sub 3 e164 sub gflex gtt off
DFLTACT=fallback GTTSELID=none
4 2 e164 sub 4 e164 sub gflex disc off
DFLTACT=fallback GTTSELID=none
4 2 e164 sub 5 e164 sub gflex uds off
DFLTACT=fallback GTTSELID=none
4 5 e164 sub 2 e164 sub mnp uds off
DFLTACT=fallback GTTSELID=none
4 5 e164 sub 3 e164 sub mnp disc off
DFLTACT=fallback GTTSELID=none
4 5 e164 sub 4 e164 sub mnp gtt off
DFLTACT=fallback GTTSELID=none
4 5 e164 sub 5 e164 sub mnp uds off
DFLTACT=fallback GTTSELID=none
4 6 e164 sub 2 e164 sub smsmr uds off
DFLTACT=fallback GTTSELID=none
4 6 e164 sub 3 e164 sub smsmr disc off
DFLTACT=fallback GTTSELID=none
4 6 e164 sub 4 e164 sub smsmr gtt off
DFLTACT=fallback GTTSELID=none
4 6 e164 sub 5 e164 sub smsmr uds off
```

```

DFLTACT=fallback GTTSELID=none
4      7      e164      sub  2  ----  -----  eir  udts  ---
DFLTACT=----- GTTSELID=-----
4      7      e164      sub  3  ----  -----  eir  disc  ---
DFLTACT=----- GTTSELID=-----
4      7      e164      sub  5  ----  -----  eir  udts  ---
DFLTACT=----- GTTSELID=-----
4      9      e164      sub  2  ----  -----  idps udts  ---
DFLTACT=----- GTTSELID=-----
4      9      e164      sub  3  ----  -----  idps disc  ---
DFLTACT=----- GTTSELID=-----
4      9      e164      sub  4  ----  -----  idps gtt   ---
DFLTACT=----- GTTSELID=-----
4      9      e164      sub  5  ----  -----  idps udts  ---
DFLTACT=----- GTTSELID=-----
4      10     e164      sub  2  e164  sub  mnp  udts  off
DFLTACT=fallback GTTSELID=none
4      10     e164      sub  3  e164  sub  mnp  disc  off
DFLTACT=fallback GTTSELID=none
4      10     e164      sub  4  e164  sub  mnp  gtt   off
DFLTACT=fallback GTTSELID=none
4      10     e164      sub  5  e164  sub  mnp  udts  off
DFLTACT=fallback GTTSELID=none
4      11     e164      sub  2  e164  sub  tati gtt   ---
DFLTACT=----- GTTSELID=-----
4      11     e164      sub  3  e164  sub  tati disc  ---
DFLTACT=----- GTTSELID=-----
4      11     e164      sub  4  e164  sub  tati gtt   ---
DFLTACT=----- GTTSELID=-----
4      11     e164      sub  5  e164  sub  tati udts  ---
DFLTACT=----- GTTSELID=-----

GTIN   TT   NP       NAI   SSN   SNP   SNAI   SERV   RQDTBLNOP
GTRQD
2      3   --       ----  2     ----  -----  inpq  udts  ---
DFLTACT=----- GTTSELID=-----
2      4   --       ----  2     e164  sub  inpmr udts  off
DFLTACT=fallback GTTSELID=none
2      4   --       ----  3     ----  -----  inpq  disc  ---
DFLTACT=----- GTTSELID=-----
2      4   --       ----  4     e164  sub  inpmr gtt   off
DFLTACT=fallback GTTSELID=none
2      4   --       ----  5     ----  -----  inpq  udts  ---
DFLTACT=----- GTTSELID=-----

```

SRV SELECTOR table is (32 of 20992) 1 % full

;

Legend

- **GTI/GTIA/GTII/GTIN/GTIN24**—Global title indicator
- **TT**—Translation type
- **NP**—Numbering plan

- **NAI**—Nature of address indicator
- **NPV**—Numbering plan value.
- **NAIV**—Nature of address indicator value
- **SSN**—Subsystem number
- **SNP**—Service numbering plan
- **SNAI**—Service nature of address indicator
- **SERV**—Service Module card service
- **GTTRQD**—GTT Required Indicator
- **GTTSELID**—Selector ID
- **DFLTACT**—Default action ID
- **RQDTBLNOP**—Required table not present

Related Topics

- [chg-srvsel](#)
- [dlt-srvsel](#)
- [ent-srvsel](#)

4.1.586 rtrv-ss-appl

Use this command to retrieve information for all provisioned subsystem applications from the database. The command displays the application type, subsystem number, and application status.

Parameters

This command has no parameters.

Example

```
rtrv-ss-appl
```

Dependencies

The ANSI41 AIQ, EIR, LNP, or V-Flex feature must be enabled, or the AINPQ or INP feature must be turned on before this command can be entered.

4188 E4188 Cmd Rej: Must have LNP/EIR/VFLEX/AIQ/ATINP enabled or INP/AINPQ ON

The SS-APPL table is corrupt or cannot be found.

3638 E3638 Cmd Rej: Failed Reading SS Appl table

The LNP feature must be turned on before the WNP or PLNP feature can be turned on and before LNP information or measurements can be reported on.

3009 E3009 Cmd Rej: LNP feature must be ON

A severe system fault has occurred and the command was rejected.

2601 E2601 Cmd Rej: Command aborted due to system error

The LNP TT SS-APPL table is corrupt or cannot be found.

3124 E3124 Cmd Rej: Failed Reading LNP SS Appl table

Notes

None

Output

```
rtrv-ss-appl
```

```
tekelecstp 09-12-03 14:42:38 EST EAGLE 42.0.0
APPL  SSN  STAT
AIQ   12  online
ATINPQ 10  online
```

```
SS-APPL TABLE IS 33% FULL (2 OF 6)
```

```
;
```

This example shows the output when the EPAP Data Split feature is turned on:

```
rtrv-ss-appl
```

```
tekelecstp 12-01-12 15:08:04 EST EAGLE 45.0.0
```

```
APPL      SSN  STAT      RQDTBLNOP
INP       11  offline  disc
AIQ       12  online   udts
```

```
SS-APPL table is (2 of 6) 33% full.
```

```
;
```

Legend

- **APPL**—Application type
- **SSN**—Subsystem number
- **STAT**—Status:online or offline
- **RQDTBLNOP**—Required table not present

Related Topics

- [chg-ss-appl](#)
- [dlt-ss-appl](#)
- [ent-ss-appl](#)

4.1.587 rtrv-ss7opts

This command retrieves the current values of the SS7 option indicators maintained in the STP options table. SS7 options can modify normal handling of SS7 traffic.

Parameters

This command has no parameters.

Example

```
rtrv-ss7opts
```

Dependencies

None

N/A N/A

Notes

None

Output

```
rtrv-ss7opts
```

```
tekelecstp 09-05-10 03:59:31 EST EAGLE 41.0.0
```

```
SS7 OPTIONS
```

```
-----  
LSRESTRICT      off  
DISCARDTFCI     off  
DISCARDTFCN     off  
SLSREPLACE      yes  
DDBAUDTIMER     10  
MSGPRI2ITUI     3  
MSGPRI2ITUN     0
```

```
;
```

Related Topics

- [chg-ss7opts](#)

4.1.588 rtrv-stp

Use this command to retrieve information related to the STP at which the command is entered.

The command can retrieve frame and card power consumption and threshold values (in Amps or milliamps and Watts) for all provisioned frames or for a specified frame. (See the `ent-frm-pwr` command.)

The command can retrieve hardware configuration information (card location, board part number, revision, serial number, card type, card memory, APPL, and GPL version):

- For all provisioned STP frames and shelves
- For a specific provisioned frame
- For a specific provisioned shelf

- For a specific equipped card
- For all cards of the specified card type
- For all cards that contain the specified Board Part Number
- For all cards that are running the specified GPL or GPL version.

Parameters

display (optional)

Display the power consumption and power threshold value for all provisioned frames or for one specific provisioned frame.

This parameter must be specified when the `frm` parameter is specified, to display the power information for one frame.

Range:

power

Display frame power information in the command output.

frm (optional)

Frame ID. Displays information for the specified provisioned frame.

Range:

cf00

Control Frame identifier

ef00

Identifier for the first Extension Frame

ef01

Identifier for the second Extension Frame

ef02

Identifier for the third Extension Frame

ef03

Identifier for the fourth Extension Frame

ef04

Identifier for the fifth Extension Frame

gp1 (optional)

Generic program load. Displays hardware configuration information for all card locations equipped with cards that are running the specified GPL.

Note:

This parameter must be specified with the `ver` parameter to display information for a specific version of the GPL.

Range:

xyyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters. Valid GPLs are:

- atmhc*—Used by E5-ATM-B cards to allow the card to support up to 3 signaling links
- blixp*—Flash GPL containing a tar image with all code required on E5-IPSM, E5-TSM, and E5-SM4G cards
- blmcap*—Flash GPL containing a tar image with all code required on E5-MCAP, E5-E1T1-B, E5-MCPM-B, E5-ATM-B, E5-ENET-B, and E5-SM8G-B cards
- deirhc*— Used by E5-SM8G-B cards to support the S13/S13' EIR feature
- enumhc*— Used by E5-SM8G-B cards to support the ENUM Mobile Number Portability and Tier One Address Resolution application
- erthc*—Used by E5-ENET-B cards when the card acts as an STC card (E5-STC card) for EAGLE 5 Integrated Monitoring Support functions
- glshc*—Used by E5-TSM cards to download gateway screening to LIM and SCCP cards
- hipr2*—Communication software used on the High Speed IMT Packet Router (HIPR2) card
- ipghc*—Used by E5-ENET-B cards to support point-to-multipoint IP connectivity for ANSI and ITU point codes
- iplhc*—Used by E5-ENET-B cards for point-to-point IP connectivity for ANSI and ITU point codes
- ipsg*—Used by E5-ENET-B and SLIC cards to support the combined functionality of IPLIMx M2PA and IPGWx M3UA
- ipsg32*—Used by SLIC cards to support IPSPG application with 64-bit addressing either with GTT functionality or without it.
- ipshc*—Used by E5-IPSM and E5-ENET-B cards to support the IPS application
- mcphc*—Used by E5-MCPM-B cards for the Measurements Platform feature
- oamhc*—Used by E5-MCAP cards for enhanced OAM functions
- sccphc*—Used by E5-SM4G and E5-SM8G-B cards to support EPAP-based features and the LNP ELAP Configuration feature. If no EPAP-based or LNP ELAP Configuration feature is turned on, and an E5-SM4G or E5-SM8G-B card is present, then the GPL processes normal GTT traffic.
- siphc*— Used by E5-SM8G-B Cards to support the SIP application
- ss7hc*—Used by , and E5-E1T1-B cards. Allows the card to support up to 64 (E5-E1T1-B) signaling links for E1 and T1 functions.

partnum (optional)

Display the hardware configuration for all card locations that contain a card with the specified Board Part Number.

Range:

ZZZ-ZZZZ-ZZ or *ZZZZZZZ*

Specify the Board Part Number in the format xxx-xxxx-xx. See the Hardware Baseline in *Release Notes* for a list of Board Part Numbers that are supported for the release.

shelf (optional)

Display the hardware configuration information for all card locations in the specified EAGLE shelf.

Range:

1100

1200

1300

2100

2200

2300

3100

3200

3300

4100

4200

4300

5100

5200

5300

6100

6200

6300

type (optional)

Display the hardware configuration information for all card locations that contain cards of the specified card type.

Range:

dcm

dsm

e5appb

enet

enetb

ipsm

limatm

lime1

lime1atm

limt1

mcpm

slic

stc

telco

tsm

ver (optional)

Display the hardware configuration information for all the card locations that have cards with the specified GPL Type and the specified GPL Version. The version format is *major-minor-fix*.

Range:

major-minor-fix

major—Range 0-255

minor—Range 0-255

fix—Range 0-255

Example

Retrieve the frame power information for all provisioned frames of the STP.

```
rtrv-stp:display=power
```

Retrieve the card level power information for the control frame in the STP.

```
rtrv-stp:display=power:frm=cf00
```

Retrieve the hardware configuration information for the STP control shelf (shelf 1100).

```
rtrv-stp:shelf=1100
```

Retrieve the hardware configuration information for all cards equipped in the STP that have the specified Board Part Number.

```
rtrv-stp:partnum=870-1275-01
```

Retrieve the hardware configuration information for all provisioned E5-TSM cards in the STP.

```
rtrv-stp:type=tsm
```

Retrieve the hardware configuration information for all cards in the STP that are running the IMT communication GPL with GPL version 126-039-043.

```
rtrv-stp:gpl=imt:ver=126-039-043
```

Retrieve the hardware configuration information for all provisioned frames in the STP.

```
rtrv-stp
```

Retrieve the hardware configuration information for all cards in the STP that are running the ATMHC GPL.

```
rtrv-stp:gpl=atmhc
```

Retrieve the hardware configuration information for all provisioned E5-APP-B cards in the STP.

```
rtrv-stp:type=e5appb
```

Retrieve the hardware configuration information for all provisioned Telco Switches in the STP.

```
rtrv-stp:type=telco
```

Retrieve the hardware configuration information for all cards in the STP that are running the SIPHC GPL.

```
rtrv-stp:gpl=siphc
```

Retrieve the hardware configuration information for all cards in the STP that are running the DEIRHC GPL.

```
rtrv-stp:gpl=deirhc
```

Dependencies

A valid value must be specified for the `display` parameter.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

A valid value must be specified for the `frm` parameter.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

A valid value must be specified for the `shelf` parameter.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

The `partnum` parameter value must contain no more than 12 characters.

2039 E2039 Cmd Rej: <parm_desc> too long, min <min>, max <max> - <parm>

A valid value must be specified for the `type` parameter.

2044 E2044 Cmd Rej: <parm_desc> value is undefined - <parm>

The `gpl` parameter value must contain no more than 8 characters.

2039 E2039 Cmd Rej: <parm_desc> too long, min <min>, max <max> - <parm>

Valid values must be specified for the `ver` parameter subfields (format *major-minor-fix*).

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

The `display` parameter must be specified when the `frm` parameter is specified.

4583 E4583 Cmd Rej: DISPLAY parameter is mandatory with FRM parameter

The `gpl` parameter must be specified when the `ver` parameter is specified.

2236 E2236 Cmd Rej: Must specify GPL name and version

Only one optional parameter can be specified in the command, except for the following parameter combinations:

- The `display` parameter must be specified when the `frm` parameter is specified.
- The `gpl` parameter must be specified when the `ver` parameter is specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The `frm` parameter value must specify a provisioned frame.

4541 E4541 Cmd Rej: Entered Frame must be a provisioned frame

The Assembly Power table must be available.

4540 E4540 Cmd Rej: Failed reading Assembly Power table

The value specified for the `gpl` parameter must be supported. See the `gpl` definition for a list of supported GPLs.

2238 E2238 Cmd Rej: The GPL type entered is not currently supported

Notes

When the power threshold value has not been provisioned for a provisioned frame, the default frame power threshold value is displayed and prefixed with a plus sign (+).

For an un-provisioned card that is present in the frame, the card power consumption value is displayed prefixed with a plus sign (+).

For the E5-TDM and E5-MDAL cards in the Control Frame, "E5-TDM" and "E5-MDAL" are displayed as the Part Number of the card.

If a MUX card is not present, then "Empty" is displayed.

If the Board Part Number received in the BIP response from a card is not present in the Assembly Power table, then the Part Number for the card is displayed with a prefix of a plus sign (+).

If the Card power value is not present in the BIP data and the Assembly Power table, then the default card power value of *1563 milliamps* is displayed for the card.

If board information is not available from a card,

- *BIP Data inv* is displayed as the Part number for the card.
- The default card power value of 1563 milliamps is displayed for the card.

If a card location is empty (no card is present in that slot),

- *Empty* is displayed as the Part Number for the card
- A card power value of 0 is assumed and displayed.

For Standby E5-MASP cards, "Unavailable" is displayed as the Part Number if the card is absent. In this case, the card power of the Active E5-MASP card is shown for the card power of the standby card.

If a flash or communication GPL is specified with the `rtv-stp` command, then the GPL output displays the version of the application GPL that is running on the card and not the version of the specified flash or communication GPL.

An unequipped MUX location does not have any type of MUX card in the slot. If a MUX card is present in the slot, then the location is equipped. When a location is unequipped, "EMPTY" is displayed for the slots, and an error message is generated. Locations 1109 and 1110, which support the control shelf, must contain MUX cards before the EAGLE is considered to be fully operational.

This command can be used to display the power consumption of MUX cards within a frame. The power consumption displays 0 for an unequipped MUX location. The Part Number, Revision, and Power Consumption obtained from the BIP data associated with the MUX card are displayed.

Because E5-APP-B cards provisioned using the `ent-card` command (type=e5appb) do not connect to the IMT bus and do not have a BIP record, the part number for these cards will be displayed as "870-3096-XX".

Output

If a flash or communication GPL is specified, then the output displays the GPL version of the application GPL running on the card instead of the GPL version of the specified flash or communication GPL.

The power consumption values that are displayed in the `rtrv-stp:display=power` or the `rtrv-stp:display=power:frm=` commands indicate the maximum calculated power for the frame. The calculation is based on the cards that are populated in the system, and includes a fan tray assembly for every shelf (the system cannot detect the presence or absence of a fan tray, and assumes presence for the calculation). These values are typically much higher than the actual power being drawn; the values cannot be used as a gauge of the actual power consumption of the EAGLE.

Abbreviated output is indicated by 3 vertical dots:

.
.
.

This example shows the output for a specific shelf containing a HIPR2 card at location 1109:

```
rtrv-stp:shelf=1100

tekelecstp 12-03-15 11:07:17 EST EAGLE 45.0.0
  Card Part Number Rev Serial Number Type DB APPL GPL
Version
  ---- -
-----
  1101 870-1275-01 W 10245689323 DSM 4096M VSCCP
027-010-000
  1102 Empty
  1103 870-1788-03 A 10234658345 TSM 128M GLSHC
027-010-000
  1104 Empty
  1105 870-1339-06 A 10274568974 LIMATM - ATMANSI
027-010-000
  1106 Empty
  1107 Empty
  1108 870-1456-05 A 10204764378 DCM 512M SS7IPGW
027-010-000
  1109 870-2872-01 A 10207185554 HIPR2 - HIPR2
129-001-000
  1110 MUX BPHMUX
027-345-000
  1111 870-1788-05 A 10205734657 MCPM 4096M MCP
027-010-000
  1112 Empty
  1113 870-2360-01 A 10346357678 GPSM 1024M EOAM
025-340-000
  1114 TDM
  1115 Unavailable GPSM EOAM
  1116 Unavailable
  1117 MDAL
  1118 Empty
Command Completed.

;
```

This example shows the output for the frame power information for all provisioned frames in the STP:

```
rtrv-stp:display=power
```

```
tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0
```

Frame	Power Threshold		Power Consumption	
	(Amps)	(Watts)	(Amps)	(Watts)
CF00	45	2160	37.71	1810
EF00	40	1920	33.99	1631
EF01	35	1680	10.00	480
EF04	+30	+1440	14.06	675

```
Command Completed.
```

```
;
```

This example shows the output for the frame and card power information for the control frame in the system. The frame contains HIPR cards at location1109 and 1110, HMUX card at location 1209, and HIPR2 cards at location 1309 and 1310. MUX location 1210 is unequipped.

```
rtrv-stp:display=power:frm=cf00
```

```
tekelecstp 09-06-30 11:07:17 EST EAGLE 5 41.1.0
```

Frame	Power Threshold		Power Consumption	
	(Amps)	(Watts)	(Amps)	(Watts)
CF00	45	2160	34.58	1795

Card	Part Number	Revision	Power Consumption	
			(MilliAmps)	(Watts)
1101	850-0484-01	E	313	15
1102	870-2372-01	J	521	25
1103	870-1289-04	K	313	15
1104	+ 870-2198-01	M	+ 1563	+ 75
1105	870-1984-05	M	+ 646	+ 31
1106	870-2372-01	J	521	25
1107	870-2061-01	K	542	26
1108	870-2061-01	K	+ 542	+ 26
1109	MUX		313	15
1110	MUX		313	15
1111	870-2061-01	B	542	26
1112	850-0419-03	C	521	25
1113	870-2360-01	B	625	30
1114	TDM		333	16
1115	Unavailable		625	30
1116	Unavailable		333	16
1117	MDAL		333	16
1118	Empty		0	0
1201	870-2061-01	A	542	26
1202	870-2061-01	A	542	26
1203	850-0549-01	A	313	15
1204	+ 870-2198-01	M	1563	75
1205	850-0549-01	A	313	15
1206	+ 870-2198-01	M	1563	75

30	1207	870-2371-02	E	625	
25	1208	870-1293-02	B	521	
15	1209	MUX		313	
0	1210	Empty		0	
26	1211	870-2061-01	D	542	
15	1212	850-0549-01	A	313	
15	1213	850-0549-01	A	313	
15	1214	850-0549-01	A	313	
26	1215	870-2061-01	C	542	
31	1216	870-1945-03	D	646	
0	1217	Empty		0	
26	1218	870-2061-01	K	542	
31	1301	870-1984-05	M	646	
15	1302	850-0549-01	A	313	
75	1303	+ 870-2198-01	M	1563	
30	1304	870-2371-02	E	625	
30	1305	870-2371-02	E	625	
25	1306	850-0419-03	C	521	
	1307				
26	1308	870-2061-01	K	542	
15	1309	870-2872-01	A	313	
15	1310	870-2872-01	A	313	
15	1311	850-0484-01	E	313	
75	1312	+ 870-2198-01	M	+ 1563	+
75	1313	BIP Data inv		+ 1563	+
75	1314	BIP Data inv		1563	
0	1315	Empty		0	
0	1316	Empty		0	

```

1317      Empty                0                0
1318      850-0419-03          C                521             25

FAN ASSYs Power Consumption          7812             375
Command Completed.

```

;

This example shows the output for the hardware configuration information for all equipped SM cards that contain the specified Board Part Number:

```
rtrv-stp:partnum=870-2990-01
```

```

tekelecstp 13-07-27 14:31:06 EST EAGLE 45.0.0
rtrv-stp:partnum=870-2990-01
Command entered at terminal #18.

```

;

```

Command Accepted - Processing
tekelecstp 13-07-27 14:31:06 EST EAGLE 45.0.0
Card Part Number Rev Serial Number Type DB APPL GPL
Version
---- -
1101 870-2990-01 A 10208087123 DSM 4096M SIPHC 134-070-000
1105 870-2990-01 B 10209135229 DSM 4096M SCCPHC 134-067-000
Command Completed

```

;

This example shows the output for the hardware configuration information for all cards of the specified card type:

```
rtrv-stp:type=tsm
```

```

tekelecstp 08-10-10 11:07:17 EST EAGLE 40.0.0
Card Part Number Rev Serial Number Type DB APPL GPL
Version
---- -
1103 870-1788-03 A 10234658345 TSM 128M GLSHC
027-010-000
1212 870-1788-03 A 10234632455 TSM 128M GLSHC
027-010-000
2105 TSM GLSHC
2217 870-2943-03 A 10229185653 TSM 512M GLSHC
030-005-000
Command Completed.

```

;

This example shows the output for the hardware configuration information for all cards that are running the specified GPL:

```

rtrv-stp:gpl=ss7ansi

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0
Card Part Number Rev Serial Number Type DB APPL
GPL Version
-----
1301 870-2671-02 C 10145689323 LIMT1 512M SS7ANSI
126-033-000
1303 870-1873-01 C 10345689323 LIMT1 512M SS7ANSI
126-033-000
Command Completed.
;

```

This example shows the output for the hardware configuration information for all cards that are running the specified GPL:

```

rtrv-stp:gpl=siphc

tekelecstp 13-07-27 14:31:06 EST EAGLE 45.0.0
rtrv-stp:gpl=siphc
Command entered at terminal #4.
Card Part Number Rev Serial Number Type DB APPL
GPL Version
-----
1101 870-2990-01 A 10208087123 DSM 4096M SIPHC
134-067-000
Command Completed.
;

```

This example shows the output for the hardware configuration information for all cards that are running the specified version of the specified GPL:

```

rtrv-stp:gpl=ss7ansi:ver=126-033-000

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0
Card Part Number Rev Serial Number Type DB APPL
GPL Version
-----
1301 870-2671-02 C 10145689323 LIMT1 512M SS7ANSI
126-033-000
1303 870-1873-01 C 10345689323 LIMT1 512M SS7ANS
126-033-000
Command Completed.
;

```

```

rtrv-stp:gpl=siphc:ver=134-067-000

tekelecstp 13-07-27 14:31:06 EST EAGLE 45.0.0
rtrv-stp:gpl=siphc:ver=134-067-000

```



```

Command entered at terminal #18.
;

Command Accepted - Processing
tekelecstp 13-07-27 14:31:06 EST EAGLE 45.0.0
Card Part Number Rev Serial Number Type DB APPL GPL
Version
-----
1101 870-2990-01 A 10208087123 DSM 4096M SIPHC
134-067-000
Command Completed.
;

```

This example shows the output for the hardware configuration information for all cards that are running the specified GPL:

```
rtrv-stp:gpl=deirhc
```

```

tekelecstp 13-03-20 11:07:17 EST EAGLE 45.1.0

Card Part Number Rev Serial Number Type DB APPL GPL
Version
-----
1101 870-2990-01 A 10302135627 DSM 8192M DEIRHC
134-056-000
1103 870-2990-02 A 10502135627 DSM 8192M DEIRHC
134-056-000
Command Completed.
;

```

This example shows output for the hardware configuration information for all frames of the STP, without specifying any optional parameters in the command. This example includes EPM-B and SLIC cards and shows abbreviated output.

```

rtrv-stp

stpc9070501 16-06-22 15:39:29 EDT EAGLE5 46.4.0
Card Part Number Rev Serial Number Type DB APPL GPL
Version
-----
1101 870-2212-03 E 10207435071 ENET 512M IPSPG
009-003-000
1102 870-2212-03 E 10207425102 ENET 512M IPSPG
009-003-000
1103 870-2212-03 E 10207425103 ENET 512M IPSPG
009-003-000
1104 870-2212-03 E 10207425104 ENET 512M IPSPG
009-003-000
1105 870-2212-03 E 10207425107 ENET 512M IPSPG

```

009-003-000							
1106	870-2212-03	E	10207425106	ENET	512M	IPSG	
009-003-000							
1107	870-2212-03	E	10207425108	ENET	512M	IPSG	
009-003-000							
1108	870-2212-03	E	10207425109	ENET	512M	IPSG	
009-003-000							
1109	870-2872-01	B	10209135026				HIPR2
009-003-000							
1110	870-2872-01	B	10209125156				HIPR2
009-003-000							
1111	870-2971-01	C	10210245182	ENETB	2048M	IPSG	
009-003-000							
1112	870-2212-03	E	10207425093	ENET	512M	IPSG	
009-003-000							
1113	870-2903-01	C	10208245108	E5MCAP	4096M	OAMHC	
009-003-000							
1114	TDM						
1115	870-2903-01	H	10209287087	E5MCAP	4096M	OAMHC	
009-003-000							
1116	TDM						
1117	MDAL						
1118	Empty						
1201	870-2212-03	F	10208337195	DCM	512M	IPGHC	
009-003-000							
1202	870-2212-03	E	10207425094	DCM	512M	IPGHC	
009-003-000							
1203	870-2212-03	E	10207425060	DCM	512M	IPGHC	
009-003-000							
1204	870-2212-03	E	10207425071	DCM	512M	IPGHC	
009-003-000							
1205	870-2212-03	F	10208337194	DCM	512M	IPGHC	
009-003-000							
1206	870-2212-03	E	10207425070	DCM	512M	IPGHC	
009-003-000							
1207	870-2212-03	E	10207435090	DCM	512M	IPGHC	
009-003-000							
1208	870-2212-03	E	10207425101	DCM	512M	IPGHC	
009-003-000							
1209	MUX						HIPR
009-003-000							
1210	870-2872-01	B	10209135079				HIPR2
009-003-000							
1211	870-2212-03	E	10207295241	ENET	512M	IPSG	
009-003-000							
1212	870-2212-03	E	10207425090	ENET	512M	IPSG	
009-003-000							
1213	870-2212-03	E	10207425025	ENET	512M	IPSG	
009-003-000							
1214	870-2212-03	E	10207435016	ENET	512M	IPSG	
009-003-000							
1215	870-2212-03	E	10207435089	ENET	512M	IPSG	
009-003-000							
1216	870-2212-03	E	10208047109	ENET	512M	IPSG	
009-003-000							

009-003-000	1217	870-2212-05	D	10209177197	STC	512M	ERTHC
009-003-000	1218	870-2372-08	D	10206215361	STC	-	EROUTE
009-003-000	1301	870-2212-03	E	10207435020	ENET	512M	IPSG
009-003-000	1302	870-2212-03	E	10207435019	ENET	512M	IPSG
009-003-000	1303	870-2212-02	A	10206135605	ENET	512M	IPSG
009-003-000	1304	870-2212-03	E	10207425105	ENET	512M	IPSG
009-003-000	1305	870-2212-03	E	10207435018	ENET	512M	IPSG
009-003-000	1306	870-2212-03	E	10207435023	ENET	512M	IPSG
009-003-000	1307	870-2212-03	E	10207435024	ENET	512M	IPSG
009-003-000	1308	870-2212-03	E	10207425033	ENET	512M	IPSG
009-003-000	1309	870-2872-01	B	10209125033			HIPR2
009-003-000	1310	870-2872-01	B	10209065053			HIPR2
009-003-000	1311	870-2212-03	E	10207435025	ENET	512M	IPSG
009-003-000	1312	870-2212-05	D	10209517269	ENET	512M	IPSG
009-003-000	1313	870-2212-03	F	10208337191	ENET	512M	IPSG
009-003-000	1314	870-2212-03	E	10207425012	ENET	512M	IPSG
009-003-000	1315	870-2212-02	A	10206125247	ENET	512M	IPSG
009-003-000	1316	870-2212-05	D	10209517134	ENET	512M	IPSG
009-003-000	1317	870-2212-02	E	10206305256	ENET	512M	IPSG
009-003-000	1318	870-2212-05	D	10209327104	ENET	512M	IPSG
134-000-056	2101	870-2990-02	A	10502135627	DSM	8192M	DEIRHC
139-003-000	2102	870-2212-02	A	10206385232	SLIC	8192M	IPSG
	2103	Empty					
	2104	Empty					
	2105	Empty					
	2106	Empty					
	2107	Empty					
	2108	Empty					
	2109	Empty					
	2110	Empty					
	2111	Empty					
	2112	Empty					
	2113	Empty					

```

2114 Empty
2115 Empty
2116 Empty
2117 Empty
2118 Empty
3101 870-2990-01 A 10208087123 DSM 4096M SIPHC
139-003-000
.
.
.
6101 Empty
6102 Empty
6103 Empty
6104 Empty
6105 Empty
6106 Empty
6107 Empty
6108 Empty
6109 Empty
6110 Empty
6111 Empty
6112 Empty
6113 Empty
6114 Empty
6115 Empty
6116 Empty
6117 Empty
6118 Empty

```

Command Completed.

;

This example shows the output for the hardware configuration information for cards, including an E5-STC card. This example displays abridged output.

```
rtrv-stp
```

```

tekelecstp 12-03-14 13:19:14 GMT EAGLE 45.0.0
Card Part Number Rev Serial Number Type DB APPL GPL
Version
----
-----
1101 870-1289-04 K 10206035030 TSM 256M GLSHC
128-018-000
1102 Empty
1104 Empty
1105 Empty
1106 Empty
1107 Empty
1109 MUX HIPR
128-016-000
1110 MUX HIPR
128-016-000
1111 870-2212-02 A 10206275736 STC 512M EROUTE

```

```

028-018-000
  1112 870-2372-08 D 10206125537 STC - EROUTE
028-018-000
  1113 870-2360-06 C 10206255064 GPSM 1024M EOAM
128-018-000
  1114 TDM
  1115 870-2360-06 C 10206255165 GPSM 1024M EOAM
128-018-000
  1116 TDM
  1117 MDAL
  1118 Empty
  1201 Empty
  1202 Empty
  1203 Empty
  1204 Empty
  1205 Empty
  1206 Empty
  1207 Empty
  1209 MUX HIPR
128-016-000
  1210 MUX HIPR
128-016-000
  1211 Empty
  1212 Empty
  1213 Empty
  1214 Empty

```

This example shows the output for the hardware configuration information for E5APPB cards and Telco Switches. This example displays abridged output.

```
rtrv-stp
```

```

tekelecstp 13-09-06 15:43:40 EST 45.0.0
rtrv-stp
Command entered at terminal #4.
Card Part Number Rev Serial Number Type DB APPL GPL Version
---- -
1101 870-3096-01 E5APPB - EPAP 255-255-255
1102 Empty
1103 Empty
1104 Empty
1105 Empty
1106 Empty
1107 Empty
1108 Empty
1109 Empty BPHMUX 000-000-000
1110 Empty BPHMUX 000-000-000
1111 Empty
1112 Empty
1113 Unavailable GPSM - EOAM 255-255-255
1114 Unavailable
1115 Unavailable GPSM - EOAM 255-255-255
1116 Unavailable
6201 870-2904-01 TELCO - SWITCH 255-255-255
6202 870-2904-01 TELCO - SWITCH 255-255-255

```

Command Completed.
;

This example shows the output when the `rtrv-stp` command is issued with the `partnum` parameter.

```
rtrv-stp:partnum=870-2990-02

tekelecstp 13-03-25 14:31:06 EST EAGLE 45.1.0
  rtrv-stp:partnum=870-2990-02
  Command entered at terminal #18.
;
```

```
Command Accepted - Processing
  tekelecstp 13-03-25 14:31:06 EST EAGLE 45.0.0
```

Card Version	Part Number	Rev	Serial Number	Type	DB	APPL	GPL
1103 134-000-056	870-2990-02	A	10502135627	DSM	8192M	DEIRHC	

Command Completed.

This example shows the output when the `rtrv-stp` command is issued with mix of part number formats:

```
rtrv-stp

tekelecstp 16-12-12 05:03:42 MST EAGLE 46.5.0.0.0-70.12.0
  rtrv-stp
  Command entered at terminal #17.
;
```

```
Command Accepted - Processing
```

```
  tekelecstp 16-12-12 05:03:42 MST EAGLE 46.5.0.0.0-70.12.0
```

Card Version	Part Number	Rev	Serial Number	Type	DB	APPL	GPL
1101 007-012-000	870-2990-01	H	10213365171	DSM	8192M	SCCP64	
1102 Empty							
1103 007-012-000	870-2990-01	HC	10215352166	DSM	8192M	SCCP64	
1104							

```

Empty
  1105 BIP Data inv          SLIC      16384M IPSPG64
007-012-000
  1106 870-3089-01 A    10211257038  MCPM     4096M MCPHC
007-012-000
  1107 870-2990-01 HC  10215352206  DSM      8192M SCCP64
007-012-000
  1108
Empty
  1109 870-2872-02 F    10214372022          HIPR2
140-011-000
  1110 870-2872-02 F    10214372009          HIPR2
140-011-000
  1111 870-2877-01 C    10207195432  IPSPM    2048M IPSPHC
007-012-000
  1112 7094646      16 10216302182  SLIC     16384M
IPSPG
  1113 870-2903-01 N    10210377102  E5MCPAP  4096M OAMHC
140-011-000
  1114
TDM
  1115 870-2903-01 C    10208245087  E5MCPAP  4096M OAMHC
140-011-000
  1116
TDM
  1117
E5MDAL
  1118 Empty

```

This example shows the output for the hardware configuration information for all cards that are running the specified GPL:

```

rtrv-stp:gpl=ipsg32

tekelecstp 16-09-01 14:31:06 EST EAGLE 46.5.0.0.0-70.4.0
rtrv-stp:gpl=ipsg32
Command entered at terminal #4.
Card Part Number Rev Serial Number Type DB APPL GPL
Version
-----
-----
  1103 720-2990-01 A    10208056582  SLIC     16384M IPSPG
140-012-000

Command Completed.
;

```

Legend

- **Frame**—Frame ID for the control shelf or an extension shelf
- **Power Threshold**—Power threshold (in Amps or Milliamps and Watts) at which an alarm is generated to indicate that power consumption is approaching a maximum allowed level. (See the `ent-frm-pwr` command.)

- **Power Consumption**—Current calculated power consumption (Amps or Milliamps and Watts) of the frame or card
- **Card**—Card Location
- **Part Number**—Board Part Number
- **Rev**—Board Part Number revision
- **Serial Number**—Card serial number
- **Type**—Card type
- **DB**—Daughterboard memory
- **APPL**—Application that has been provisioned on the card
- **GPL Version**—GPL version of the Application GPL being used by the card

Related Topics

- [chg-frm-pwr](#)
- [dlt-frm-pwr](#)
- [ent-frm-pwr](#)
- [rtrv-frm-pwr](#)

4.1.589 rtrv-stpopts

Use this command to retrieve the current value of the system's node-level processing option indicators maintained in the system's options table.

Parameters

This command has no parameters.

Example

```
rtrv-stpopts
```

Dependencies

The MAS Configuration table must be available.

2145 E2145 Cmd Rej: Failed reading MAS configuration table

The STP Options table must be available.

2852 E2852 Cmd Rej: Failed reading STP Options table

None

N/A N/A

Notes

The timer output for this command is in milliseconds, even though the timer could have been entered in seconds on the `chg-stpopts` command.

Output

The following example displays MTP STP options with no affecting features on. Certain features that are shown in other examples control changes and additional options in this option list:

```
rtrv-stpopts
```

```
Command Accepted - Processing
```

```
tekelecstp 18-01-21 13:22:52 EST EAGLE 47.0.0.0-78.5.0
```

```
STP OPTIONS
```

```
-----
MTPT31CTL                1
MTPLTI                   yes
MTPLTCTDPCQ              3
MTPLTST                  10000
MTPDPCQ                  2000
TFATFRPR                 1000
MTPLPRST                 yes
MTPT10ALT                30000
UIMRD                   no
SLSCNV                   off
CRITALMINH              no
DISPACTALMS             no
NPCFMTI                  14-00-00-00
DEFCC                    none
DEFNDC                   none
DSMAUD                   off
RPTLNPMRSS              yes
RANDSLS                  off
RSTRDEV                  off
SECMPMATE                off
SECMTPSID                off
SECMTPSNM                off
SECSCCPSCMG             off
ANSIGFLEX                no
ARCHBLDID               off
MFC                      on
PCT                      off
PCN16FMT                 745
UITHROTTLE              0
GBSUSNMINM              off
GDPCA                    -----
EPAP240M                off
EPAPX                   off
VISUALIZATION           off
LNPTN756M               off
```

```
;
```

The following example displays all MTP STP options. The following list indicates which options appear in the output when the associated features are on:

 **Note:**

All options will not appear in actual output, because all features that cause these options to appear cannot be on in the system at the same time.

- Cluster Routing and Management Diversity (CRMD) feature—MTPXLQ, MTPXLET, MTPXLOT
- MTP Restart (MTPRS or ITUMTPRS) feature—MTPRSI, MTPRSIT
- 6000, 7000, or 8000 Routesets feature—MTPDPCQ=6000 or 7000 or 8000
- GSM MAP Screening (GSMSCRN) feature—GSMDFLT, GSMDECERR
- GSM Mobile Number Portability (G-Port), IS41 to GSM Migration (IGM), Prepaid SMS Intercept (PPSMS) Ph1, Voice Mail Router (V-Flex), Prepaid IDP Query Relay (IDPR), ANSI-41 Mobile Number Portability (A-Port), or any TIF feature is enabled **OR** INAP Number Portability (INP) or GSM Flexible Numbering (G-Flex) feature is ON—DEFCC, DEFNDC
- ATINP feature is enabled—DEFCC
- EPAP-based features or LNP ELAP Configuration feature—DSMAUD
- GSM Flexible Numbering (G-Flex) feature—ANSIGFLEX
- Network Security (NSE) feature—SECMTPMATE, SECMTPSID, SECMTPSNM, SECSCCPSCMG
- ANSI-ITU-China SCCP Conversion (SCCP Conversion) feature is enabled—CNVCGDA, CNVCGDI, CNVCGDN, CNVCGDN24, GTCNVDFLT
- PC & CIC Translation feature—PCT
- VISUALIZATION—MSG

```
rtrv-stpopts
```

```
rlghncxa03w 11-03-17 16:02:05 EST EAGLE 46.7.0.0.0-74.5.0
STP OPTIONS
-----
MTPT31CTL          1
MTPLTI             yes
MTPLTCTDPCQ       3
MTPLTST           10000
MTPXLQ             500
MTPXLET            0100
MTPXLOT            90%
MTPDPCQ            8000
TFATFRPR           1000
MTPRSI             yes
MTPRSIT            5000
MTPLPRST           yes
MTPT10ALT          30000
UIMRD              yes
SLSCNV              perl
CRITALMINH         yes
DISPACTALMS        no
NPCFMTI            14-0-0-0
```

GSMDFLT	PASS
GSMDECERR	PASS
DEFCC	49
DEFNDC	177
DSMAUD	no
RPTLNPMRSS	yes
RANDSLS	all
RSTRDEV	on
SECMPMATE	off
SECMTPSID	off
SECMTPSNM	notify
SECSCCPSCMG	notify
CNVCGDA	yes
CNVCGDI	yes
CNVCGDN	yes
CNVCGDN24	yes
GTCNVDFLT	yes
ANSIGFLEX	yes
HSCLKSRC	RS422
HSCLKLL	LONGHAUL
ARCHBLDID	off
MFC	on
PCT	on
UITHROTTL	0
GDCP	004-004-004
EPAP240M	off
EPAPX	on
VISUALIZATION	msg
LNPTN756M	on

;

Legend

- **MTPT31CTL**—MTP T31 congestion trigger level. The signaling link congestion level at which the system starts the level 3 t31 timer. When the level 3 t31 timer expires, the associated signaling link is removed from service for realignment.
- **MTPLTI**—MTP loop test indicator. Specifies whether the MTP loop detection procedures are enabled or disabled at the system.
- **MTPLTCTDPCQ**—MTP loop test congestion trigger DPC quantity. The number of most frequently occurring DPCs to which the MTP loop test messages are to be sent when the MTP loop test is triggered by congestion.
- **MTPLTST**—MTP loop test supervision timer. The amount of time, in milliseconds, that the MTP loop test detection procedures run when started.
- **MTPXLQ**—MTP x-list quantity. The number of dynamic status exception list (x-list) entries the system maintains.
- **MTPXLET**—MTP x-list expiration time. The maximum amount of time the system maintains an unreferenced dynamic status exception list (x-list) entry.
- **MTPXLOT**—MTP x-list occupancy threshold. The dynamic status exception list (x-list) occupancy threshold at which the system raises a minor alarm. The threshold is expressed as a percentage of space available.

- **MTPDPCQ**—MTP destination point code quantity. The maximum number of DPCs that can be provisioned in the system.
- **TFATFRPR**—TFA/TFR pacing rate. The amount of time, in milliseconds, between partial broadcasts of up to 20 percent increments of the number of TFAs/TCAs or TFRs/TCRs to be broadcast by the STP when an affected destination becomes accessible using its primary route rather than an alternate route. The STP uses this pacing to prevent congestion on the newly-recovered linksets.
- **MTPRSIT**—MTP Restart isolation timer. The minimum duration of node isolation, in milliseconds, before the MTP Restart procedure is deemed necessary.
- **MTPRSI**—MTP Restart indicator. Specifies whether ANSI or ITU MTP Restart procedures are enabled or disabled at the STP.
- **MTPLPRST**—MTP low priority route set test. Specifies whether low priority route set polling is enabled or disabled at the STP.
- **MTPPT10ALT**—MTP T10 alternate timer. Specifies the interval at which the STP performs a route set test on low priority routes.
- **SLSCNV**—Per node SLS conversion indicator. Specifies whether SLS conversion is on, off, or performed per linkset (perls).
- **UIMRD**—Unsolicited Information Message (UIM) redirect. Specifies whether specific UIMs are redirected to this output group.
- **CRITALMINH**—Indicates whether the option that allows the inhibiting of critical alarms is enabled (yes) or disabled (no).
- **DISPACTALMS**—Indicates whether to display active or total alarms in the alarm status area of the VT320 screen.
- **NPCFMTI**—Defines how the ITU national point code is entered into the database and how it is displayed in any outputs from the system.
- **GSMDFLT**—Indicates whether the GSM MAP screening default action is set to pass or discard.
- **GSMDECERR**—Indicates whether the GSM MAP screening decode error action is set to pass or discard.
- **DEFCC**—Defines the default country code.
- **DEFNDC**—Defines the default network destination code.
- **DSMAUD**—Indicates whether the DSM audit is running (on) or disabled (off).
- **RANDSLS**—Displays the Random SLS setting.
- **RTPLNPMRSS**—Displays the setting for reporting or suppressing UIM 1049 for LNP MR with missing subsystems.
- **RSTRDEV**—Allow or disable restoration of device states when an `init-sys` command is executed, an OAM role changes, or a card reload occurs.
- **SECMTPMATE**—Indicates Network Security screening for MTP messages received by an STP on a non-C-Link, with an OPC equal to the SID (True, Adjacent, or Capability) point code of its mate.
- **SECMTPSID**—Indicates Network Security screening for MTP messages received at MTP3 containing an OPC equal to its own SID (OPC that is the True, Secondary, or Capability point code entered in the `chg-sid` command) that is not a route-set-congestion-message. The EAGLE should not receive a message with

its own OPC unless the message is a result of a circular route test or is an SLTM when the far end is in loopback. (SLTM messages are not checked).

- **SECMTPSNM**—Indicates Network Security screening for MTP SNM messages. The EAGLE should not receive an MTP network management message unless:
 - The OPC is an adjacent point code. (For all link types, this rule does not apply to UPU, TFC, and RCT messages.)
 - The EAGLE has a route to the OPC of the MTP network management message on the linkset which the message was received.
 - The EAGLE has a route to the destination field in the message (if applicable to the concerned message) on the linkset which the message was received. (For all link types, this rule is not applicable to RST messages.)
- **SECSCCPSCMG**—Indicates Network Security screening for SCCP SCMG messages. This value applies only to SSP and SOR messages. SSA, SST, SOG, SBR, SNR and SRT messages are not affected. The EAGLE should not receive an SCCP network management message unless:
 - The EAGLE has a route to the OPC of the SCMG message on the linkset on which the message was received.
 - The EAGLE has a route to the Affected Point Code (also called the Concerned Point Code in EAGLE) in the message on the linkset on which the message was received.
- **CNVCGDA**—Indicates whether or not to discard the CGPA PC in SCCP messages if the destination network type is ANSI, and the PC or ALIAS PC of the destination network type is not defined.
- **CNVCGDI**—Indicates whether or not to discard the CGPA PC in SCCP messages if the destination network type is ITU-I, and the PC or ALIAS PC of the destination network type is not defined.
- **CNVCGDN**—Indicates whether or not to discard the CGPA PC in SCCP messages if the destination network type is ITU-N, and the PC or ALIAS PC of the destination network type is not defined.
- **CNVCGDN24**—Indicates whether or not to discard the CGPA PC in SCCP messages if the destination network type is 24-bit ITU-N, and the PC or ALIAS PC of the destination network type is not defined.
- **ANSIGFLEX**—Indicates enable or disable of ANSI G-Flex to execute at 1700 TPS per DSM card
- **GTCNVDFLT**—Indicates enable or disable of routing of SCCP messages using system defaults when an appropriate entry is not found in the Default GT Conversion table.
- **HSCLKLL**—High speed master clock line length option (SHORTHAUL, LONGHAUL)
- **HSCLKSRC**—High speed master clock source
- **ARCHBLDID**—Archive build ID
- **MFC**—Indicates that the system is using Message Flow Control (MFC).
- **PCT**—Indicates whether PCT is applied to MSUs
- **GDPC**—MSU duplicated by GWS DUP Stop Action will be routed to the point code configured in GDPC.
- **UITHROTTLE**—Indicates the speed at which output is sent to the terminal. Zero represents the most throttling, or the slowest output. Nine represents the least throttling, or the fastest output.

- **EPAP240M**—Indicates that the E5-SM8G-B card can download the maximum 240M DN/IMSI RTDB data from EPAP.
- **EPAPX**— Indicates that the SLIC cards running 64-bits flash SCCP gpls can download 480M individual DN entries, 600M individual IMSI entries or 600M individual IMEI entries from EPAP.
- **VISUALIZATION**— Indicates that whether system wide visualization feature is disable or specific visualization (UIM/MSG/BOTH) is enable.
- **LNPTN756M**— Indicates that the SLIC cards running SCCP gpls can download 756M TN from ELAP.

Related Topics

- [chg-stpopts](#)

4.1.590 rtrv-subnetid

Use this command to retrieve a list of Subnet ID entries from the SUBNETID table, for the ISUP NP with EPAP feature.

Parameters

subnetnum (optional)

Subnet Number

Range:

1 - 5

Example

```
rtrv-subnetid  
rtrv-subnetid:subnetnum=1
```

Dependencies

The SUBNETID table is corrupt or cannot be found by the system.

4353 E4353 Cmd Rej: Failed reading SUBNETID table

The ISUP NP with EPAP feature must be enabled before this command can be entered.

4356 E4356 Cmd Rej: ISUP NP with EPAP feature must be enabled

Notes

None.

Output

This example shows output when the command is entered with no parameter. Subnet IDs for Subnet number 1 are listed in numerical order, followed by the Subnet IDs for Subnet number 2 in numerical order, etc.

```
rtrv-subnetid
```

```
tekelecstp 04-09-21 16:11:21 EST EAGLE 31.11.0
      Subnet
ID      Number
-----
886932      1
886936      1
886935      2
886938      2
886939      2

Subnetidlen = 6

SUBNETID table is (5 of 50) 3% full
```

```
;
```

This example shows output when a Subnet number is specified. Subnet IDs for the specified Subnet number are listed in numerical order. The table capacity line shows the total number of entries in use, not just the number of entries displayed.

```
rtrv-subnetid:subnetnum=2
```

```
tekelecstp 04-09-21 16:13:54 EST EAGLE 31.11.0
      Subnet
ID      Number
-----
886935      2
886938      2
886939      2

Subnetidlen = 6

SUBNETID table is (5 of 50) 3% full
```

```
;
```

Related Topics

- [dlt-subnetid](#)
- [ent-subnetid](#)

4.1.591 rtrv-t1

Use this command to retrieve information for a specified T1 interface or for all T1 interfaces that have been defined by the `ent-t1` command for an E5-E1T1-B card that is used as a T1 or ST-HSL-A card.

Parameters

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

Default:

all T1 card locations are listed

t1port (optional)

T1 port number. The value must be a T1 port that has already been configured with a T1 interface on the specified T1 card (loc parameter).

Range:

1 - 8

Default:

If not specified, all T1 ports are listed.

Example

```
rtrv-t1  
rtrv-t1:loc=1307:t1port=2  
rtrv-t1:loc=1311:t1port=1
```

Dependencies

The loc and t1port parameters must be specified together, if any parameters are specified for the command.

4215 E4215 Cmd Rej: LOC and T1PORT parameter combination must be specified

The T1 interface of the T1 card specified by the loc parameter must already be defined before this command can be entered.

2739 E2739 Cmd Rej: T1 card location is unequipped

The card specified by the loc parameter must be a LIMT1 card type.

2212 E2212 Cmd Rej: Invalid card type for this command

The Card (IMT) table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

The E1/T1 table must be accessible.

4059 E4059 Cmd Rej: Failed reading the E1/T1 table

The port specified by the `t1port` parameter on the card specified by the `loc` parameter must be already equipped with a T1 interface.

2737 E2737 Cmd Rej: The T1PORT at the specified location is not equipped

The following card locations (`loc` parameter) are not valid for this command: 1113 - 1118 and all `xy09` and `xy10` locations (where `x` is the frame and `y` is the shelf).

2154 E2154 Cmd Rej: Card slot reserved by system

Notes

None.

Output

Legend

- **LOC**—T1card location in the shelf
- **T1PORT**—T1 port number on a T1 card
- **ENCODE**—Indicator for use of B8ZS or AMI encoding/decoding
- **FRAMING**—Framing format (SF or ESF)
- **LL**—Line length; T1 cable length in feet between the EAGLE and the connecting node
- **MINSURATE**—Minimum number of signaling units present on a link uniformly distributed. A value appears in this field only when the LINKCLASS field value is UNCHAN.
- **TSx**—Timeslot

Related Topics

- [chg-t1](#)
- [dlt-t1](#)
- [ent-t1](#)
- [tst-t1](#)

4.1.592 rtrv-tatr-msg

Use this command to display the configured Triggerless ANSI TCAP Relay message parameter values.

Parameters

msgn (optional)

Message number. The number of the TATR message.

Range:
1 - 10

Example

```
rtrv-tatr-msg:msgn=1
```

Dependencies

The TSTMSG table is corrupt or could not be found.

4819 E4819 Cmd Rej: Failure reading TSTMSG Table

None.

N/A N/A

Notes

None.

Output

```
rtrv-tatr-msg:msgn=1
```

```
tekelecstp 09-06-26 13:46:01 EST 41.1.0
rtrv-tatr-msg:msgn=1
Command entered at terminal #4.
MSG = 1          ACTIVE = NO
    TRIGTYPE = h'25

    CGPA_GT = 2
    CGPA_GT_NAI = 4      CGPA = 0123456789abcde

    CDPA_GT = 2
    CDPA_GT_NAI = 4      CDPA = 0123456789abcde

    CGPN_NAI = 1         CGPN = 01234567890abcdef
    CDPN_NAI = 1         CDPN = 01234567890abcdef

;
```

Related Topics

- [chg-tatr-msg](#)
- [tst-msg](#)

4.1.593 rtrv-tatropts

Use this command to display all of the Triggerless ANSI TCAP Relay options that are configured in the database.

Parameters

This command has no parameters.

Example

```
rtrv-tatropts
```

Dependencies

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

None.

N/A N/A

Notes

None.

Output

```
rtrv-tatropts
```

```
tekelecstp 09-08-26 15:15:20 EST EAGLE 41.1.0
```

```
TATR OPTIONS
```

```
-----  
CDNPTYPE      = rnspl  
CGNPTYPE      = rnspl  
CGPACCCCK     = nonintl  
SPORTTYPE     = none  
DFLTRN        = none
```

```
;
```

Related Topics

- [chg-tatropts](#)

4.1.594 rtrv-tbl-capacity

Use this command to retrieve table use capacity summary information. For each table listed, the number of table entry elements in use and the total allowed number of table elements is presented, along with a percent (%) full value.

Parameters

This command has no parameters.

Example

```
rtrv-tbl-capacity
```

Dependencies

None

N/A N/A

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

XLIST table information is shown only if the CRMD feature is ON.

Secondary Point Code (SPC) table information is shown only if the MPC feature is ON.

If the EGTT feature is ON then table name is GTA instead of GTT.

Additional information for each listed table can be displayed using the commands listed in [Retrieve Commands for Additional Table Information](#).

Though the ASP table entries are now part of the IPAPSOCK table, command entry and output still appear as though they are separate tables. The `rtrv-tbl-capacity` command shows the number of ASPs in the 4000-entry IPAPSOCK table.

Table 4-55 Retrieve Commands for Additional Table Information

Command	Table name	Description of table
<code>rept-stat-xlist</code>	XLIST	Destination - Routeset Extension
<code>rtrv-appl-rtkey</code>	IPRTKEY	IP Routing Key
<code>rtrv-as</code>	AS	Application Server
<code>rtrv-assoc</code>	IPAPSOCK	IP Socket/Association
<code>rtrv-dstn</code>	DSTN	Destination Routeset, Exception Routeset
<code>rtrv-gta</code>	GTA	Global Title Address
<code>rtrv-gtt</code>	GTT	Global Title Translation
<code>rtrv-ip-host</code>	IP-HOST	IP Host
<code>rtrv-ip-lnk</code>	IP-LNK	Internet Process Link
<code>rtrv-ls</code>	LS	Link Set
<code>rtrv-map</code>	MAP	Mated Application
<code>rtrv-mrn</code>	MRN	Mated Relay Node
<code>rtrv-npp-as</code>	NPP-AS	Numbering Plan Processor
<code>rtrv-npp-srs</code>	NPP-SRS	Numbering Plan Processor
<code>rtrv-scrset</code>	SCRSET	Gateway Screening Screen Set
<code>rtrv-slk</code>	SLK	Signal Link
<code>rtrv-spc</code>	SPC	Secondary Point Code
<code>rtrv-vflx-cd</code>	VFLXCD	V-Flex Call Decision
<code>rtrv-vflx-rn</code>	VFLXRN	V-Flex Routing Number
<code>rtrv-vflx-vmsid</code>	VFLXVID	V-Flex VMSID
<code>rtrv-gttact</code>	GTT-ACT	GTT Action
<code>rtrv-gttaset</code>	GTT-ASET	GTT Action Set

Table 4-55 (Cont.) Retrieve Commands for Additional Table Information

Command	Table name	Description of table
rtrv-gttapath	GTT-PATH	GTT Action Path
rtrv-gtmod	GTMOD	GT Modification

The MRN table capacity value is adjusted to subtract any point code values allocated to support the SCCP-SERV reroute service.

V-Flex Call Decision (VFLXCD), Routing Number (VFLXRN) and VMSID (VFLXVID) table information is shown only if the V-Flex feature is enabled.

Output

This example shows the output for the minimum table sizes in the system when CRMD, MPC, EGTT and VFLEX features are off:

```
rtrv-tbl-capacity

tekelecstp 010-03-06 13:57:06 EST  EAGLE 42.0.0

DSTN      table is (      8 of      2000)  1% full
LS        table is (      6 of     1024)  1% full
SLK       table is (     12 of     1200)  1% full
IP-LNK    table is (      0 of      512)  0% full
IP-HOST   table is (      2 of     2048)  1% full
MAP       table is (      8 of     1024)  1% full
MRN       table is (      0 of     3000)  0% full
SCCPSRV   table is (      0 of      384)  0% full
GTT       table is (      0 of    269999)  0% full
GTT-SET   table is (     21 of     2000)  2% full
SSNSELID  table is (      0 of   100000)  0% full
SCRSET    table is (      0 of      255)  0% full
RTEKEY    table is (      0 of     1000)  0% full
APPLSOCK  table is (      0 of     4000)  0% full
AS        table is (      0 of      250)  0% full
NPP-AS    table is (      0 of     1024)  0% full
NPP-SRS   table is (      0 of     8192)  0% full
GTMOD     table is (      1 of   100000)  1% full

;
```

This example shows the output for the maximum table sizes in the system. For the DSTN, SLK, GTT, and MAP tables, maximum values depend on the enabled feature quantity value applicable to the table in the system. GTT, MPC, CRMD, VFLEX and FGTTLS features are turned on.

```
rtrv-tbl-capacity

rlghncxa03w 10-08-17 08:29:15 EST  EAGLE 43.0.0
```

```

DSTN      table is (      600 of    10000)  6% full
XLIST     table is (        0 of     500)  0% full
SPC       table is (        0 of     40)   0% full
LS        table is (      512 of    1024)  50% full
SLK       table is (    1501 of    2800)  54% full
IP-LNK    table is (        0 of     512)  0% full
IP-HOST   table is (        0 of    2048)  0% full
MAP       table is (    1500 of   36000)  5% full
MRN       table is (        0 of     3000)  0% full
SCCPSRV   table is (        0 of     384)  0% full
GTA       table is (        0 of  269999)  0% full
GTT-SET   table is (      10 of    2000)  1% full
SSNSELID  table is (        0 of  100000)  0% full
SCRSET    table is (      25 of     255)  10% full
RTEKEY    table is (        0 of    1000)  0% full
APPLSOCK  table is (        0 of    4000)  0% full
AS        table is (        0 of     250)  0% full
VFLXCD    table is (        1 of    4950)  1% full
VFLXRN    table is (        1 of   10000)  1% full
VFLXVID   table is (        1 of    1000)  1% full
NPP-AS    table is (        0 of    1024)  0% full
NPP-SRS   table is (        0 of    8192)  0% full
GTT-ACT   table is (        0 of    2000)  0% full
GTT-ASET  table is (        0 of   20000)  0% full
GTMOD     table is (        1 of  100000)  1% full
GTT-PATH  table is (        3 of    10000)  1% full

```

;

This example shows the output when the MRN table limit is 3000 entries and 12 entries are used for SCCP-SERV reroute:

```
rtrv-tbl-capacity
```

```

tklcl090701 10-03-06 13:57:06 EST EAGLE 42.0.0
DSTN      table is (    5940 of    6000)  99% full
XLIST     table is (        0 of     500)  0% full
SPC       table is (        4 of     40)  10% full
LS        table is (    738 of    1024)  72% full
SLK       table is (    360 of    2000)  18% full
IP-LNK    table is (        6 of     512)  1% full
IP-HOST   table is (     58 of    2048)  3% full
MAP       table is (    336 of    1024)  33% full
MRN       table is (    768 of    2988)  26% full
SCCPSRV   table is (     12 of      96)  13% full
GTA       table is (  269999 of  269999) 100% full
GTT-SET   table is (     10 of    2000)  1% full
SSNSELID  table is (        0 of   10000)  0% full
SCRSET    table is (     40 of     255)  16% full
RTEKEY    table is (        0 of    1000)  0% full
APPLSOCK  table is (        0 of    4000)  0% full
AS        table is (        0 of     250)  0% full
VFLXRN    table is (        1 of   10000)  1% full
VFLXCD    table is (        1 of    4950)  1% full

```

```
VFLXVID table is (      1 of      1000) 1% full
NPP-AS table is (      6 of      1024) 1% full
NPP-SRS table is (     0 of     8192) 0% full
GTT-ACT table is (     0 of      2000) 0% full
GTT-ASET table is (     0 of     20000) 0% full
GTMOD table is (      1 of    100000) 1% full
GTT-PATH table is (     3 of     10000) 1% full
```

;

Related Topics

- [rept-stat-xlist](#)
- [rtrv-appl-rtkey](#)
- [rtrv-as](#)
- [rtrv-assoc](#)
- [rtrv-dstn](#)
- [rtrv-gta](#)
- [rtrv-gtmod](#)
- [rtrv-gtt](#)
- [rtrv-gttact](#)
- [rtrv-gttapath](#)
- [rtrv-gttaset](#)
- [rtrv-ip-host](#)
- [rtrv-ip-lnk](#)
- [rtrv-ls](#)
- [rtrv-map](#)
- [rtrv-scrset](#)
- [rtrv-slk](#)
- [rtrv-spc](#)
- [rtrv-vflx-cd](#)
- [rtrv-vflx-rn](#)
- [rtrv-vflx-vmsid](#)

4.1.595 rtrv-th-alm

Use this command to retrieve the alarm thresholds and associated values. For additional information on these values, refer to the *Database Administration Manual - SS7* in your EAGLE documentation set.

Parameters

This command has no parameters.

Example

```
rtrv-th-alm
```

Dependencies

None

N/A N/A

Notes

None

Output

```
rtrv-th-alm
```

```
tekelecstp 13-03-19 13:14:44 EST EAGLE 45.1.0
Thermal Alarm Level 1:                92%
Thermal Alarm Level 2:                100%
SCCP TPS Threshold:                   80%
SCCP Calculation Method:               N
LNP TN DB Alarm Level 1:              80%
LNP TN DB Alarm Level 2:              95%
GTT SCCP Service Alarm Level 1:       10%
GTT SCCP Service Alarm Level 2:       20%
Non-GTT SCCP Service Alarm Level 1:   10%
Non-GTT SCCP Service Alarm Level 2:   20%
SCCP Service Alarm Level 1 Interval:   0
SCCP Service Alarm Level 2 Interval:   0
IMT Bus Combined Utilization Alarm Level 1: 70%
IMT Bus Combined Utilization Alarm Level 2: 80%
IMT Bus Congestion Alarm Level 1:     70%
IMT Bus Congestion Alarm Level 2:     80%
DEIR Congestion Alarm Level 1:        40%
DEIR Congestion Alarm Level 2:        80%
SFTHROT Threshold:                    80%
RTRV-TH-ALM: MASP A - COMPLTD.
```

```
;
```

Related Topics

- [chg-th-alm](#)
- [rept-stat-sccp](#)

4.1.596 rtrv-tifopts

Use this command to retrieve the current values of the TIF option indicators from the TIFOPTS table.

Parameters

This command has no parameters.

Example

```
rtrv-tifopts
```

Dependencies

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

None

N/A N/A

Notes

The NSADDLDATA and NSPUBLIC options are displayed only when the TIF Number Substitution feature is enabled.

Output

```
rtrv-tifopts
```

```
tekelecstp 09-06-10 12:32:21 EST  EAGLE 41.1.0  
Command entered at terminal #4.
```

```
TIF OPTIONS
```

```
-----  
IAMCGPN          = dn  
NPFLAG           = none  
RCAUSENP         = 0  
RCAUSEPFX        = 0  
NPTYPEPLS        = sprn  
NPTYPEPLY        = sprn  
NPTYPEPCGPN      = sprn  
SPLITIAM         = none  
CONDCGPN         = none  
CRPREL           = 31  
RNRQD            = yes  
DFLTRN           = none  
DLMA             = none  
DLMB             = none  
DLMC             = none  
SNSCGPNDFLT     = none  
MATCHSEQ         = dn  
SPORTRLS        = all  
SPORTRELAY       = gsm  
SPFILL           = on  
RLCOPC           = off  
NSADDLDATA       = yes  
NSPUBLIC         = 5
```

```
;
```

Related Topics

- [chg-tifopts](#)

4.1.597 rtrv-tps

Use this command to display the total provisioned system TPS for IPSP and E5-ATM-B cards. The total of these four values, and the maximum allowed system TPS value, are also displayed.

Parameters

This command has no parameters.

Example

```
rtrv-tps
```

Dependencies

The Linkset table is corrupt or cannot be found.

2122 E2122 Cmd Rej: Failed reading linkset table

The Signaling Link table is corrupt or cannot be found.

2103 E2103 Cmd Rej: Failed reading the link table

None

N/A N/A

Notes

The maximum total provisioned System TPS is based on whether the HIPR2 High Rate Mode feature is turned on. The maximum total provisioned System TPS is 500,000 if the HIPR2 High Rate Mode feature is turned off, 750,000 if the HIPR2 High Rate Mode feature is turned on, and 1,000,000 if both the HIPR2 High Rate Mode and 1M System TPS features are turned on.

MAX TPS calculations

The provisioned (max) system TPS calculation is calculated by summing the SIGTRAN TPS values (values for the IPSP linksets TPS usage) and the ATM links TPS values. The total provisioned system TPS is calculated by using the following:

- Sum all TPS values for IPSP linksets using the (num_ipsp_links * the value of the maxslktps parameter (see the ent/chg-ls commands)).
- Sum all ATM over T1 links ((ATM ANSI links) * per ATM ANSI links TPS (1630))
- Sum all ATM over E1 links ((ATM ITU links) * per ATM ITU links TPS (2038))

RSVD TPS Calculations

The reserved TPS calculation is calculated by summing the SIGTRAN TPS values (values for the and IPSP linksets TPS usage) and the ATM links TPS values. The total provisioned system TPS is calculated by using the following:

- Sum all TPS values for IPSP linksets using the (num_ipsp_links * the value of the slktps or rsvdslktps parameter (see the ent/chg-ls commands)).

- Sum all ATM over T1 links ((ATM ANSI links) * per ATM ANSI links TPS (1630))
- Sum all ATM over E1 links ((ATM ITU links) * per ATM ITU links TPS (2038))

Output

This example shows the output when the HIPR2 High Rate Mode feature is turned off:

```
rtrv-tps
```

```
rlghncxa03w 10-02-10 16:20:46 EST EAGLE 42.0.0
```

CARD TYPE	NUM CARDS	NUM LINKS	RSVD TPS	MAX TPS
IPGW	9	8	32000	40000
IPSG	100	16	80000	80000
ATM	0	0	0	0

```
Total provisioned System TPS (120000 of 500000) 24%
```

```
Command Completed.
```

```
;
```

This example shows the output when the HIPR2 High Rate Mode feature is turned on:

```
rtrv-tps
```

```
rlghncxa03w 10-02-10 16:20:46 EST EAGLE 42.0.0
```

CARD TYPE	NUM CARDS	NUM LINKS	RSVD TPS	MAX TPS
IPGW	9	8	32000	40000
IPSG	100	16	80000	80000
ATM	0	0	0	0

```
Total provisioned System TPS (120000 of 750000) 16%
```

```
Command Completed.
```

```
;
```

Related Topics

- [chg-ctrl-feat](#)
- [chg-ls](#)
- [ent-ls](#)
- [rept-stat-iptps](#)
- [rtrv-ctrl-feat](#)
- [rtrv-ls](#)

4.1.598 rtrv-trbl

Use this command to display detailed information for one or more troubles that are currently logged into the system.

Parameters

loc (mandatory)

The address of the card that is running the OAM from which logged trouble reports are to be displayed.

Range:

1113, 1115

mode (optional)

Display mode

Range:

c

Continuous mode; shows troubles already logged and new troubles as they occur.

m

Manual mode; shows troubles on demand only

Default:

c

num (optional)

Indicates how many troubles to display.

Range:

1 - 1023

Default:

99

Example

```
rtrv-trbl:loc=1113:num=2
```

Dependencies

At least one trouble must be in the trouble log, or the command is rejected.

2389 E2389 Cmd Rej: No troubles to Display

Only one `rtrv-trbl` or `rtrv-obit` command can be in progress at a time.

2368 E2368 Cmd Rej: System busy - try again later

If the `mode` parameter is specified without the `num` parameter, the entire log is displayed.

2392 E2392 Cmd Rej: Received wrong display mode

The card specified by the `loc` parameter must be 1113 or 1115.

2376 E2376 Cmd Rej: Specified LOC is invalid

If the `loc` parameter specifies the card that is running the standby OAM, that card must be available.

2398 E2398 Cmd Rej: Standby MASP is unavailable

The `num` parameter must be between 1 - 1023.

2394 E2394 Cmd Rej: Number out of range

Notes

When a trouble is generated in the system, it is logged into the RAM storage area of the active OAM. Each OAM can store up to 1023 troubles in a queue. If the OAM resets, logged troubles are lost.

Output

The output from this command should be reviewed with a member of the Customer Care Center. See the "My Oracle Support (MOS)" section in Chapter 1 of this reference guide.

```
rtrv-trbl:loc=1113:num=2
```

```
rlghncxa03w 03-03-07 08:47:43 EST EAGLE 31.3.0
Card 1113 Module 0000 Mod_loc 0 Class 0000 Severity 0
Report Date:00-00-00 Time:00:00:00

rlghncxa03w 03-03-07 08:47:43 EST EAGLE 31.3.0
Card 1108 Module 8001 Mod_loc 6 Class 100A Severity 1
Report Date:03-03-04 Time:09:19:59
```

```
;
```

Related Topics

- [act-alm-trns](#)
- [dact-alm-trns](#)
- [rept-stat-alm](#)
- [rept-stat-clk](#)
- [rept-stat-trbl](#)
- [rls-alm](#)
- [rtrv-obit](#)

4.1.599 rtrv-trbltx

Use this command to retrieve Alarm and UIM message information including MRN (message reference number), level (for Alarms), Output Group, and text.

The default report displays all Alarms (in numerical order) and then all UIMs.

The optional parameters can be used to:

- Display a range of Alarms or UIMs (ranges spanning both Alarms and UIMs are not supported)
- Search for Alarms, UIMs, or both message types matching a specific Output Group
- Sort all entries by Output Group

Parameters

enum (optional)

The ending Message Reference Number (MRN) when specifying a range.

Range:

1 - 1999

1-999-UAMs

1000-1999 -UIMs

Default:

If *snum* is specified, the *enum* value defaults to the specified *snum* value.

If *snum* is not specified and *type=all*, *type=uim*, or *type* is not specified, the *enum* value defaults to 1999

If *snum* is not specified and *type=alarm*, the *enum* value defaults to 999.

outgrp (optional)

The Output Group to sort or filter the Alarm/UIMs on.

Range:

appserv

Application Server

appss

Application Subsystem

card

Card

clk

Clock

db

Database

dbg

Debug

gtt

GTT Maintenance

gws

GWS Maintenance

link

Link Maintenance

meas

Measurements Maintenance

mon

Monitoring (Sentinel or IMF) Maintenance

mps

MPS Maintenance

pu

Program Update

sa

System Administration

seas

SEAS (Sentinel or IMF)

sys

System Maintenance

traf

Traffic

all

Retrieve information for all Output Groups

Default:

No sorting or filtering is done on Output Groups.

snum (optional)

A single Message Reference Number (MRN), or the starting MRN when specifying a range.

Range:

1 - 1999

1-999 —UAMs

1000-1999—UIMs

Default:

All message entries for the specified type are displayed.

For `type=all`, `type=alarm`, or `type` not specified the `snum` value defaults to 1.For `type=uim`, the `snum` value defaults to 1000.**type (optional)**

The type of trouble text entry to display.

Range:**all**

Both types are displayed

alarm

Only Alarm entries are displayed

uim

Only UIM entries are displayed

Default:

all

Example

```
rtrv-trbltx
rtrv-trbltx:type=alarm
rtrv-trbltx:outgrp=sys
rtrv-trbltx:type=alarm:outgrp=all
rtrv-trbltx:snum=1002
```

Dependencies

If the `enum` parameter is specified, then the `snum` parameter must be specified.

4203 E4203 Cmd Rej: ENUM requires an SNUM as its mate parameter.

The value specified for the `enum` parameter must be greater than or equal to the value specified for the `snum` parameter.

4204 E4204 Cmd Rej: ENUM must be greater or equal to mate parameter SNUM.

The specified `enum` value must be in the same range as the specified `snum` value (1-999 for Alarms and 1000-1999 for UIMs). The range cannot span both types.

4205 E4205 Cmd Rej: ENUM range does not match SNUM: 1-999 or 1000-1999.

The values specified for the `snum` and `enum` parameters must be in the range of the specified `type` (1-999 for Alarms and 1000-1999 for UIMs).

4210 E4210 Cmd Rej: TYPE and SNUM/ENUM combination invalid.

If the `outgrp` parameter is specified, then the `snum` and `enum` parameters cannot be specified.

4209 E4209 Cmd Rej: OUTGRP and SNUM/ENUM combination invalid.

If the `snum` parameter is specified, the `snum` parameter specified is out of range.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

If the `enum` parameter is specified, the `enum` parameter specified is out of range.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

To display a single Alarm or UIM, enter the Alarm or UIM MRN as the value of the `snum` parameter. Either do not specify the `enum` parameter or specify the `enum` parameter with the same value as the `snum` value.

If an unused MRN is specified as an `snum` parameter value, the header information is displayed without any Output Group header or MRN information.

If an `snum/enum` range is specified, and there are unused MRNs within that range, only the used MRNs are displayed.

Output

This example shows the output when the command has no parameters. All entries are not shown; the list is long.

```
rtrv-trbltx
```

```
ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0

Alarm Report
      MRN   LEVEL  OUTPUT GROUP   TEXT
-----
          0001  MAJR   SYS           Card has reset
          0002  MINR   SYS           Card is not running approved GPL
          0003  NONE   SYS           Alarm cleared for GPL
          .
          .
          .
          0912  NONE   SYS           Dynamic database is now consistent
UIM Report
      MRN           OUTPUT GROUP   TEXT
-----
          1000           SYS           MTP rcvd UPU - user part is not
SCCP
          1001           SYS           MTP rcvd Transfer Controlled (TFC)
          1002           SYS           MTP rcvd invalid TFC - status 0
          .
          .
          .
          1999           SYS           Invalid MRN detected

END OF RTRV-TRBLTX REPORT.
;
```

This example shows output with `type=alarm`. All entries are not shown.

```
rtrv-trbltx:type=alarm
```

```
ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0
Alarm Report
      MRN   LEVEL  OUTPUT GROUP   TEXT
-----
          0001  MAJR   SYS           Card has reset
          0002  MINR   SYS           Card is not running approved GPL
```

```

          0003  NONE  SYS           Alarm cleared for GPL
          .
          .
          .
          0912  NONE  SYS           Dynamic database is now
consistent
      END OF RTRV-TRBLTX REPORT.
;

```

This example shows the output with `type=uim`. All entries are not shown.

```
rtrv-trbltx:type=uim
```

```

ncralstp00001 03-07-16 10:15:29 EST  EAGLE 31.3.0

UIM Report

          MRN           OUTPUT GROUP   TEXT
-----
--
not SCCP      1000           SYS           MTP rcvd UPU - user part is
(TFC)         1001           SYS           MTP rcvd Transfer Controlled
status 0      1002           SYS           MTP rcvd invalid TFC -
          .
          .
          .
          1999           SYS           Invalid MRN detected
      END OF RTRV-TRBLTX REPORT.
;

```

This example shows the output with `outgrp=all`. All entries are not shown; examples from each type and several Output Groups are shown.



Note:

The output for `outgrp=all:type=alarm` includes all Output Groups in the Alarm Report only; the output for `outgrp=all:type=uim` includes all Output Groups in the UIM Report only.

```
rtrv-trbltx:outgrp=all
```

```

rlghncxa03w 06-05-27 08:15:10 EST  EAGLE 35.0.0

Alarm Report
          MRN    LEVEL  OUTPUT GROUP   TEXT

```

```

-----
Output Group - SYS
  0001  MAJR  SYS          Card has reset
  0002  MINR  SYS          Card is not running approved GPL
.
.
.
  0912  NONE  SYS          Dynamic database is now consistent
.
.
.
Output Group - LINK
      :
  0479  NONE  LINK         Link not Monitored
UIM Report
  MRN           OUTPUT GROUP  TEXT
-----

Output Group - SYS
SCCP  1000           SYS          MTP rcvd UPU - user part is not
      1001           SYS          MTP rcvd Transfer Controlled (TFC)
.
.
.
      1999           SYS          Invalid MRN detected
.
.
.
Output Group - LINK
      13nn           LINK         Example text

END OF RTRV-TRBLTX REPORT.
;

```

This example shows the output for `outgrp=sys`. All entries are not shown.

```
rtrv-trbltx:type=alarm:outgrp=sys
```

```

ncralstp00001 03-07-16 10:15:29 EST  EAGLE 31.3.0
Alarm Report
      MRN    LEVEL  OUTPUT GROUP  TEXT

```

```

-----
Output Group - SYS
  0001  MAJR  SYS          Card has reset
  0002  MINR  SYS          Card is not running approved GPL
.
.
.

```

```

          0912  NONE  SYS           Dynamic database is now
consistent

```

```

      END OF RTRV-TRBLTX REPORT.
;

```

This example shows the output for Alarm MRN 3:

```
rtrv-trbltx:snum=3
```

```
ncralstp00001 03-07-16 10:15:29 EST  EAGLE 31.3.0
```

```
Card 1113; SYS REL= 31.3.0; STP CLLI= ncralstp00001; Timezone= EST
```

```
Alarm Report
```

```
      MRN      LEVEL  OUTPUT GROUP      TEXT
```

```

-----
--
          0003  NONE  SYS           Alarm cleared for GPL

      END OF RTRV-TRBLTX REPORT.
;

```

This example shows the output for UIM MRN 1002:

```
rtrv-trbltx:snum=1002
```

```
ncralstp00001 03-07-16 10:15:29 EST  EAGLE 31.3.0
```

```
UIM Report
```

```
      MRN      OUTPUT GROUP      TEXT
```

```

-----
--
          1002      SYS           MTP rcvd invalid TFC -
status 0

      END OF RTRV-TRBLTX REPORT.
;

```

4.1.600 rtrv-trm

Use this command to show the port configuration for all TDM terminals or a specified terminal. These ports are used to connect modems, printers, and terminals to the system. This command displays the following information: device type, data transmission rate, parity, type of flow control used, number of stop bits, number of data bits, and the type of unsolicited messages to be received.

Parameters

trm (optional)

The ID number of the terminal whose characteristics are to be retrieved and displayed.

Range:

1 - 40

Default:

Display all

Example

```
rtrv-trm
```

```
rtrv-trm:trm=17
```

Dependencies

The IP User Interface feature must be enabled and turned on, and at least one IPSM card must be equipped, before `telnet` or `emsalm` type terminals with IDs 17 - 40 can be specified.

2364 E2364 Cmd Rej: TELNET cannot be specified unless the IPSM card is equipped

The specified terminal must be equipped.

2393 E2393 Cmd Rej: Terminal is not equipped

If a value of `telnet`, `seas`, or `emsalm` was specified for the `type` parameter (see the `chg-trm` command) and a Telnet terminal is specified by the `trm` parameter (IDs 17-40), then an IPSM card must be equipped in the system.

2329 E2329 Cmd Rej: IPSM card not equipped

Notes

None

Output

This example shows the output for 16 terminal ports (no IPSM cards are equipped):

```
rtrv-trm
```

```

rlghncxa03w 10-03-11 16:02:08 EST EAGLE 42.0.0
TRM  TYPE      COMM          FC      TMOUT  MXINV  DURAL
1    VT320     9600-7-E-1 SW    60     5      99:59:59
2    VT320     9600-7-E-1 SW    60     5      INDEF
3    KSR      9600-7-E-1 SW    60     0      00:00:00
4    NONE     9600-7-E-1 SW    60     5      00:30:00
5    NONE     9600-7-E-1 SW    60     5      00:00:30
6    NONE     9600-7-E-1 SW    60     5      00:30:00
7    VT320     9600-7-E-1 SW    60     5      99:59:59
8    VT320     9600-7-E-1 SW    60     5      INDEF
9    VT320     9600-7-E-1 SW    60     0      00:00:00
10   VT320     9600-7-E-1 SW    60     5      00:30:00

```

```

11 VT320 9600-7-E-1 NONE 60 5 00:00:30
12 NONE 19200-7-E-1 SW 0 5 INDEF
13 VT320 9600-7-E-1 SW 60 5 99:59:59
14 VT320 9600-7-E-1 SW 60 5 INDEF
15 VT320 9600-7-E-1 SW 60 0 00:00:00
16 VT320 9600-7-E-1 SW 60 5 00:30:00

```

```

TRM TRAF LINK SA SYS PU DB UIMRD
1 YES YES YES YES YES YES YES YES
2 YES YES YES YES YES YES YES YES
3 YES YES YES YES YES YES YES YES
4 YES YES YES YES NO YES YES
5 YES YES YES YES YES YES YES YES
6 NO YES YES YES YES YES YES YES
7 NO YES YES YES YES YES YES YES
8 YES YES YES YES YES YES YES YES
9 YES YES YES YES YES YES YES YES
10 NO NO NO NO NO NO NO NO
11 NO NO NO NO NO NO NO NO
12 NO NO NO NO NO NO NO NO
13 NO NO NO NO NO NO NO NO
14 NO NO NO NO NO NO NO NO
15 NO NO NO NO NO NO NO NO
16 NO NO NO NO NO NO NO NO

```

```

APP APP
TRM SERV SS CARD CLK DBG GTT GWS MEAS MON MPS SEAS
1 YES YES YES YES YES YES YES YES YES YES YES NO
2 YES YES YES YES YES YES YES YES YES YES YES NO
3 YES YES YES YES YES YES YES YES YES YES YES NO
4 YES YES YES YES YES YES NO YES YES YES YES NO
5 YES YES YES YES YES YES YES YES YES YES YES NO
6 YES YES YES YES YES YES YES YES YES YES YES NO
7 NO YES YES YES YES YES YES YES YES YES YES YES NO
8 YES YES YES YES YES YES YES YES YES YES YES YES
9 YES YES YES YES YES YES YES YES YES YES YES YES
10 NO NO NO NO NO NO NO NO NO NO NO NO
11 NO NO NO NO NO NO NO NO NO NO NO NO
12 NO NO NO NO NO NO NO NO NO NO NO NO
13 NO NO NO NO NO NO NO NO NO NO NO NO
14 NO NO NO NO NO NO NO NO NO NO NO NO
15 NO NO NO NO NO NO NO NO NO NO NO NO
16 NO NO NO NO NO NO NO NO NO NO NO NO

```

;

This example shows the output with the IP User Interface feature enabled and three IPSM cards equipped:

```
rtrv-trm
```

```

rlghncxa03w 09-01-11 16:02:08 EST EAGLE 40.1.0
TRM TYPE COMM FC TMOUT MXINV DURAL
1 VT320 9600 -7-E-1 SW 0 5 00:01:00
2 VT320 9600 -7-E-1 SW 0 5 00:01:00

```

3	VT320	9600	-7-E-1 SW	0	5	00:01:00
4	KSR	9600	-7-E-1 SW	0	5	00:01:00
5	NONE	9600	-7-E-1 SW	30	5	00:01:00
6	NONE	9600	-7-E-1 SW	30	5	00:01:00
7	NONE	9600	-7-E-1 SW	30	5	00:01:00
8	NONE	9600	-7-E-1 SW	30	5	00:01:00
9	VT320	9600	-7-E-1 SW	0	5	00:01:00
10	VT320	9600	-7-E-1 SW	0	5	00:01:00
11	VT320	9600	-7-E-1 SW	0	5	00:01:00
12	KSR	9600	-7-E-1 SW	0	5	00:01:00
13	NONE	9600	-7-E-1 SW	30	5	00:01:00
14	NONE	9600	-7-E-1 SW	30	5	00:01:00
15	NONE	9600	-7-E-1 SW	30	5	00:01:00
16	NONE	9600	-7-E-1 SW	30	5	00:01:00

TRM	TYPE	LOC	TMOUT	MXINV	DURAL
17	TELNET	1201	60	5	00:30:00
18	TELNET	1201	60	5	00:30:00
19	TELNET	1201	60	5	00:30:00
20	TELNET	1201	60	5	00:30:00
21	TELNET	1201	60	5	00:30:00
22	TELNET	1201	60	5	00:30:00
23	TELNET	1201	60	5	00:30:00
24	TELNET	1201	60	5	00:30:00
25	TELNET	1203	60	5	00:30:00
26	TELNET	1203	60	5	00:30:00
27	TELNET	1203	60	5	00:30:00
28	TELNET	1203	60	5	00:30:00
29	TELNET	1203	60	5	00:30:00
30	TELNET	1203	60	5	00:30:00
31	TELNET	1203	60	5	00:30:00
32	TELNET	1203	60	5	00:30:00
33	TELNET	1208	60	5	00:30:00
34	TELNET	1208	60	5	00:30:00
35	TELNET	1208	60	5	00:30:00
36	TELNET	1208	60	5	00:30:00
37	TELNET	1208	60	5	00:30:00
38	TELNET	1208	60	5	00:30:00
39	TELNET	1208	60	5	00:30:00
40	TELNET	1208	60	5	00:30:00

TRM	LOGINTMR (sec)	LOGOUTTMR (sec)	PNGTIMEINT (msec)	PNGFAILCNT
17	none	none	none	1
18	none	none	none	1
19	none	none	none	1
20	none	none	none	1
21	none	none	none	1
22	none	none	none	1
23	none	none	none	1
24	none	none	none	1
25	none	none	none	1
26	none	none	none	1
27	none	none	none	1
28	none	none	none	1

29	none	none	none	1
30	none	none	none	1
31	none	none	none	1
32	none	none	none	1
33	none	none	none	1
34	none	none	none	1
35	none	none	none	1
36	none	none	none	1
37	none	none	none	1
38	none	none	none	1
39	none	none	none	1
40	none	none	none	1

TRM	TRAF	LINK	SA	SYS	PU	DB	UIMRD
1	YES	YES	YES	YES	YES	YES	YES
2	YES	YES	YES	YES	YES	YES	YES
3	YES	YES	YES	YES	YES	YES	YES
4	YES	YES	YES	YES	NO	YES	YES
5	YES	YES	YES	YES	YES	YES	YES
6	NO	YES	YES	YES	YES	YES	YES
7	NO	YES	YES	YES	YES	YES	YES
8	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO
25	NO	NO	NO	NO	NO	NO	NO
26	NO	NO	NO	NO	NO	NO	NO
27	NO	NO	NO	NO	NO	NO	NO
28	NO	NO	NO	NO	NO	NO	NO
29	NO	NO	NO	NO	NO	NO	NO
30	NO	NO	NO	NO	NO	NO	NO
31	NO	NO	NO	NO	NO	NO	NO
32	NO	NO	NO	NO	NO	NO	NO
33	NO	NO	NO	NO	NO	NO	NO
34	NO	NO	NO	NO	NO	NO	NO
35	NO	NO	NO	NO	NO	NO	NO
36	NO	NO	NO	NO	NO	NO	NO
37	NO	NO	NO	NO	NO	NO	NO
38	NO	NO	NO	NO	NO	NO	NO
39	NO	NO	NO	NO	NO	NO	NO
40	NO	NO	NO	NO	NO	NO	NO

TRM	SERV	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
4	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
25	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
26	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
27	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
28	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
29	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
30	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
31	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
32	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
33	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
34	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
35	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
36	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
37	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
38	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
39	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
40	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

;

This example shows the output for Telnet terminal 30:

```
rtrv-trm:trm=30
```

```
rlghncxa03w 08-05-01 16:02:08 EST EAGLE 39.0.0
TRM TYPE LOC TMOUT MXINV DURAL
30 TELNET 1204 60 0 00:00:00

TRM LOGINTMR LOGOUTTMR PNGTIMEINT PNGFAILCNT
(sec) (sec) (msec)
```

```

30  none      none      none      1

TRM  TRAF LINK SA  SYS PU  DB  UIMRD
30   YES  YES  YES YES YES YES YES YES

      APP  APP
TRM  SERV SS  CARD CLK  DBG  GTT  GWS  MEAS  MON  MPS  SEAS
30   YES  YES  YES  YES YES YES YES YES YES  YES YES NO
;

```

This example shows the output with the IP User Interface feature enabled, one IPSM card equipped, and the OA&M IP Security Enhancements feature or the parameter SSH in SECUDFLT table is turned off:

```
rtrv-trm
```

```

rlghncxa03w 09-01-11 16:02:08 EST  EAGLE 40.1.0
TRM  TYPE      COMM          FC      TMOUT  MXINV  DURAL
1    VT320     9600 -7-E-1 SW    0      5      00:01:00
2    VT320     9600 -7-E-1 SW    0      5      00:01:00
3    VT320     9600 -7-E-1 SW    0      5      00:01:00
4    KSR       9600 -7-E-1 SW    0      5      00:01:00
5    NONE      9600 -7-E-1 SW    30     5      00:01:00
6    NONE      9600 -7-E-1 SW    30     5      00:01:00
7    NONE      9600 -7-E-1 SW    30     5      00:01:00
8    NONE      9600 -7-E-1 SW    30     5      00:01:00
9    VT320     9600 -7-E-1 SW    0      5      00:01:00
10   VT320     9600 -7-E-1 SW    0      5      00:01:00
11   VT320     9600 -7-E-1 SW    0      5      00:01:00
12   KSR       9600 -7-E-1 SW    0      5      00:01:00
13   NONE      9600 -7-E-1 SW    30     5      00:01:00
14   NONE      9600 -7-E-1 SW    30     5      00:01:00
15   NONE      9600 -7-E-1 SW    30     5      00:01:00
16   NONE      9600 -7-E-1 SW    30     5      00:01:00

TRM  TYPE      LOC          TMOUT  MXINV  DURAL      SECURE
17   TELNET    1201         60     5      00:30:00   no
18   TELNET    1201         60     5      00:30:00   no
19   TELNET    1201         60     5      00:30:00   no
20   TELNET    1201         60     5      00:30:00   no
21   TELNET    1201         60     5      00:30:00   no
22   TELNET    1201         60     5      00:30:00   no
23   TELNET    1201         60     5      00:30:00   no
24   TELNET    1201         60     5      00:30:00   no

TRM  LOGINTMR  LOGOUTTMR  PNGTIMEINT  PNGFAILCNT
      (sec)    (sec)      (msec)
17   none     none       none        1
18   none     none       none        1
19   none     none       none        1
20   none     none       none        1
21   none     none       none        1
22   none     none       none        1
23   none     none       none        1

```

24 none none none 1

TRM	TRAF	LINK	SA	SYS	PU	DB	UIMRD
1	YES	YES	YES	YES	YES	YES	YES
2	YES	YES	YES	YES	YES	YES	YES
3	YES	YES	YES	YES	YES	YES	YES
4	YES	YES	YES	YES	NO	YES	YES
5	YES	YES	YES	YES	YES	YES	YES
6	NO	YES	YES	YES	YES	YES	YES
7	NO	YES	YES	YES	YES	YES	YES
8	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO

TRM	SERV	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
4	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

;

This example shows the output for a SEAS terminal.

```
rtrv-trm:trm=30
```

```
tekelecstp 07-12-16 22:37:01 IST EAGLE 37.5.0
TRM  TYPE    LOC          TMOUT MXINV DURAL    SECURE
30   SEAS    1102          30    5     00:01:00 no

TRM  TRAF LINK SA  SYS PU  DB  UIMRD
30   NO   NO   NO  NO  NO  NO  NO

APP  APP
TRM  SERV SS  CARD CLK DBG GTT GWS MEAS MON MPS SEAS
30   NO   NO  NO   NO NO  NO  NO  NO  NO  NO  YES
```

;

This example shows the output with the IP User Interface feature enabled, one IPSM card equipped, and the OA&M IP Security Enhancements feature and the parameter SSH in SECUDFLT table are turned on.

- Terminals 17,18 and 19 are of type TELNET.
- Terminals 20,21 and 22 are of type EMSALM.
- Terminal 23 is of type NONE.
- Terminal 24 is of type SEAS.

The *LOGINTMR* and *LOGOUTTMR* fields apply to terminals 17 - 19. The *PNGTIMEINT* and *PNGFAILCNT* fields apply to terminals 17 - 22. None of the fields apply to terminals 23 and 24.

```
rtrv-trm
```

```
tekelecstp 08-06-16 00:17:30 IST EAGLE 39.0.0
TRM  TYPE    COMM          FC    TMOUT MXINV DURAL
1    VT320    9600 -7-E-1 SW    30    5     00:01:00
2    VT320    9600 -7-E-1 SW    30    5     00:01:00
3    VT320    9600 -7-E-1 SW    30    5     00:01:00
4    VT320    9600 -7-E-1 SW    30    5     00:01:00
5    VT320    9600 -7-E-1 SW    30    5     00:01:00
6    VT320    9600 -7-E-1 SW    30    5     00:01:00
7    VT320    9600 -7-E-1 SW    30    5     00:01:00
8    VT320    9600 -7-E-1 SW    30    5     00:01:00
9    VT320    9600 -7-E-1 SW    30    5     00:01:00
10   VT320    9600 -7-E-1 SW    30    5     00:01:00
11   VT320    9600 -7-E-1 SW    30    5     00:01:00
12   VT320    9600 -7-E-1 SW    30    5     00:01:00
13   VT320    9600 -7-E-1 SW    30    5     00:01:00
14   VT320    9600 -7-E-1 SW    30    5     00:01:00
15   VT320    9600 -7-E-1 SW    30    5     00:01:00
16   VT320    9600 -7-E-1 SW    30    5     00:01:00
```

TRM	TYPE	LOC	TMOUT	MXINV	DURAL	SECURE
17	TELNET	1111	30	5	00:01:00	yes
18	TELNET	1111	30	5	00:01:00	yes
19	TELNET	1111	30	5	00:01:00	yes
20	EMSALM	1111	30	5	00:01:00	yes
21	EMSALM	1111	30	5	00:01:00	yes
22	EMSALM	1111	30	5	00:01:00	yes
23	NONE	1111	30	5	00:01:00	yes
24	SEAS	1111	30	5	00:01:00	yes

TRM	LOGINTMR (sec)	LOGOUTTMR (sec)	PNGTIMEINT (msec)	PNGFAILCNT
17	15	15	none	1
18	15	none	none	1
19	15	none	none	1
20	----	----	none	1
21	----	----	none	1
22	----	----	none	1

TRM	TRAF	LINK	SA	SYS	PU	DB	UIMRD
1	YES	YES	YES	YES	YES	YES	YES
2	YES	YES	YES	YES	YES	YES	YES
3	YES	YES	YES	YES	YES	YES	YES
4	YES	YES	YES	YES	YES	YES	YES
5	NO	NO	NO	NO	NO	NO	NO
6	NO	NO	NO	NO	NO	NO	NO
7	NO	NO	NO	NO	NO	NO	NO
8	NO	NO	NO	NO	NO	NO	NO
9	NO	NO	NO	NO	NO	NO	NO
10	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO
17	YES	YES	YES	YES	YES	YES	YES
18	YES	YES	YES	YES	YES	YES	YES
19	YES	YES	YES	YES	YES	YES	YES
20	YES	YES	YES	YES	YES	YES	YES
21	YES	YES	YES	YES	YES	YES	YES
22	YES	YES	YES	YES	YES	YES	YES
23	YES	YES	YES	YES	YES	YES	YES
24	YES	YES	YES	YES	YES	YES	YES

TRM	SERV	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
4	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
5	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
6	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
7	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

```

8   NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO
9   NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO
10  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO
11  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO
12  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO
13  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO
14  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO
15  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO
16  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO  NO
17  YES YES YES YES YES YES YES YES YES YES YES YES
18  YES YES YES YES YES YES YES YES YES YES YES YES
19  YES YES YES YES YES YES YES YES YES YES YES YES
20  YES YES YES YES YES YES YES YES YES YES YES YES
21  YES YES YES YES YES YES YES YES YES YES YES YES
22  YES YES YES YES YES YES YES YES YES YES YES YES
23  YES YES YES YES YES YES YES YES YES YES YES YES
24  YES YES YES YES YES YES YES YES YES YES YES YES

```

;

This example shows the output for an EMSALM terminal on an IPSM card:

```
rtrv-trm:trm=22
```

```

tekelecstp 08-06-16 01:29:28 EST  EAGLE 39.0.0
TRM  TYPE    LOC                TMOUT MXINV DURAL    SECURE
22   EMSALM  1111                30    5    00:01:00  yes

TRM  PNGTIMEINT PNGFAILCNT
      (msec)
22   none      1

TRM  TRAF LINK SA  SYS PU  DB  UIMRD
22   YES  YES  YES YES YES YES YES YES

      APP  APP
TRM  SERV SS  CARD CLK DBG GTT GWS MEAS MON MPS SEAS
22   YES  YES YES  YES YES YES YES YES YES YES YES

```

;

This example shows the output for a NONE terminal on an IPSM card:

```
rtrv-trm:trm=23
```

```

tekelecstp 08-06-16 01:28:03 EST  EAGLE 39.0.0
TRM  TYPE    LOC                TMOUT MXINV DURAL    SECURE
23   NONE    1111                30    5    00:01:00  yes

TRM  TRAF LINK SA  SYS PU  DB  UIMRD
23   YES  YES  YES YES YES YES YES YES

      APP  APP

```

```

TRM  SERV  SS   CARD  CLK  DBG  GTT  GWS  MEAS  MON  MPS  SEAS
23   YES   YES  YES   YES  YES  YES  YES  YES   YES  YES  YES
;

```

Legend

Part one of the report contains these fields:

- **TRM**—TDM terminal port number associated with the output device
- **TYPE**—Type of output device that is connected
- **COMM**—This field consists of four communication attributes in the format *baud-dbts-prty-sb*. The parts are:
 - **BAUD**—Serial port baud rate of the output device
 - **DBTS**—Number of data bits used by the output device
 - **PRTY**—Parity of the output device
 - **SB**—Number of stop bits used in communications with the output device
- **FC**—Type of protocol used between the system and the output devices
- **TMOUT**—Maximum amount of time (in minutes) that a login session can remain idle
- **MXINV**—Login/unlock failure threshold
- **DURAL**—Length of time (in seconds, minutes, and hours) the terminal is disabled after each failed login/unlock attempt in excess of the threshold configured with the `mxinv` parameter
- **SECURE**—Shows whether the OA&M IP Security Enhancements feature and the parameter `SSH` in the `SECUDFLT` table are turned on or off for Telnet terminals

Part two of the report contains these fields:

- **LOGINTMR**—Maximum time for logging on to the telnet terminal after selecting the terminal
- **LOGOUTTMR**—Maximum time the telnet session remains open after the user manually or automatically logs out
- **PNGTIMEINT**—Time period after which IPSM card initiates new ping cycle
- **PNGFAILCNT**—Number of consecutive ping fails waited before dropping the telnet connection

Part three of the `rtrv-trm` report contains these fields:

- **TRM**—TDM terminal associated with the output device
- **TRAF**—Shows whether traffic-related unsolicited messages are received by the output device
- **LINK**—Shows whether link-related unsolicited messages are received by the output device
- **SA**—Shows whether security administration-related unsolicited messages are received by the output device
- **SYS**—Shows whether system maintenance-related unsolicited messages are received by the output device

- **PU**—Shows whether program update-related unsolicited messages are received by the output device
- **DB**—Shows whether database-related unsolicited messages are received by the output device
- **UIMRD**—Shows whether Unsolicited Information Messages (UIMs) specific to the group are received by the output device

Part four of the `rtrv-trm` report contains these fields:

- **APP SERV**—Shows whether Application Server unsolicited messages are received by the output device
- **APP SS**—Shows whether Application Subsystem unsolicited messages are received by the output device
- **CARD**—Shows whether Card unsolicited messages are received by the output device
- **CLK**—Shows whether Clock unsolicited messages are received by the output device
- **DBG**—Shows whether Debug unsolicited messages are received by the output device
- **GTT**—Shows whether GTT unsolicited messages are received by the output device
- **GWS**—Shows whether GWS unsolicited messages are received by the output device
- **MEAS**—Shows whether Measurements Maintenance unsolicited messages are received by the output device
- **MON**—Shows whether Monitor unsolicited messages are received by the output device
- **MPS**—Shows whether MPS unsolicited messages are received by the output device
- **SEAS**—Shows whether SEAS Maintenance unsolicited messages are received by the output device

Related Topics

- [act-echo](#)
- [canc-echo](#)
- [chg-trm](#)
- [dact-echo](#)
- [inh-trm](#)
- [rept-stat-trm](#)
- [rmv-trm](#)
- [rst-trm](#)

4.1.601 rtrv-tt

Use this command to show the translation types that are currently defined in the system database for global title translations.

Note:

If the EGTT feature is turned on, then the GTT Selector (`ent/chg/dlt/rtrvgtttsel`), GTT Set (`ent/dlt/rtrv-gttset`), and GTA (`ent/chg/dlt/rtrvgta`) commands replace the Translation Type (`ent/dlt/rtrv-tt`) and Global Title Translation (`ent/chg/dlt/rtrv-gtt`) commands. It is not recommended to run `ent/dlt/rtrv-tt & ent/chg/dlt/rtrv-gtt` commands as it may cause the advance GTA fields of GTT entry to be reset to the default values.

Parameters

alias (optional)

The alias of the global title translation type

Range:

0 - 255

Default:

Display all

ovrlapd (optional)

Overlapped GTT Selectors.

Range:

yes

Default:

none

ttn (optional)

Translation type name.

Range:

ayyyyyyy

1 alphabetic character followed by up to 8 alphanumeric characters

Default:

Display all

type/typea/typei/typen/typen24/typeis/typens (optional)

Translation type. The translation type and network type. This parameter is the decimal representation of the 1-byte field used in SS7.

The `type` and `typea` parameters specify an ANSI network.

The `typei` parameter specifies an ITU-international network.

The `typen` parameter specifies an ITU-national network.

The `typen24` parameter specifies a 24-bit ITU-national network.
 The `typeis` parameter specifies an ITU-international spare network.
 The `typens` parameter specifies an ITU-national spare network.
 A translation type numeric value may be entered as an ANSI type (`type` or `typea`) and as an ITU type (`typei/typen/typen24/typeis/typens`). However, they are separate entities.
 The point code domain translation types for GTT are handled by the EAGLE protocol processing as ANSI or ITU. ITU applies to ITU-I, ITU-I spare, ITU-N, ITU-N spare, and ITU-N24.

Range:

0 - 255

Default:

No translation type is specified

Example

```
rtrv-tt
rtrv-tt:type=230
rtrv-tt:ttn=lidb
rtrv-tt:type=230:ttn=lidb
rtrv-tt:type=230:ttn=lidb:alias=012
rtrv-tt:typeis=2
rtrv-tt:overlap=yes
```

Dependencies

If a translation type is specified, it must already exist in the database for the network type and cannot be an alias.

2466 E2466 Cmd Rej: Translation Type specified does not exist

If both translation type and translation type name are specified, the translation type name must correspond to the specified translation type.

2473 E2473 Cmd Rej: TTN and TYPE do not correspond to each other

If an alias is specified with a translation type and/or translation type name, the alias must exist in the database for the specified network type, and it cannot be a translation type.

2463 E2463 Cmd Rej: Alias not assigned to translation type

If an alias is specified without a translation type or translation type name, the alias must exist in the database for at least one of the network types. If it exists, the entries and the mapped translation type entries that exist in the database for all network types are displayed.

2324 E2324 Cmd Rej: Alias not defined

The value specified for the `alias` parameter must be associated with the value specified for the `type/typea/typei/typen/typen24/typeis/typens` parameter and cannot be the value of an existing translation type.

2460 E2460 Cmd Rej: Alias defined as translation type

The value specified for the `type/typea/typei/typen/typen24/typeis/typens` parameter cannot be an alias value.

2465 E2465 Cmd Rej: Translation TYPE defined as an alias

The value specified for the `ttn` parameter must already exist in the database.

2468 E2468 Cmd Rej: TTN specified does not exist

The value specified for the `ttn` parameter must correspond to the value specified for the `alias` parameter.

2461 E2461 Cmd Rej: Alias not assigned to translation name

The GTTSET associated with the translation type specified by the `ttn` parameter must have a set type of `cdgta` (see the `ent-gttset` command).

4997 E4997 Cmd Rej: SETTYPE of specified GTTSET must be CdGTA

The `ttn=none` parameter cannot be specified.

3565 E3565 Cmd Rej: Set name must not be specified as NONE

The network domain of the translation type specified by the `ttn` parameter cannot be CROSS (see the `ent-gttset` command).

5371 E5371 Cmd Rej: Network domain of corresponding ttn must not be CROSS

The Overlapped TT must exist with the specified filter criteria.

N/A N/A

Notes

If a translation type, translation type name, or both, are specified, the translation type entry and all aliases mapped to that translation type are displayed.

This command retrieves only selector entries that were provisioned by GTT Selector commands, have a GTI value of 2, and a set type of CdGTA.

If the EGTT feature is turned on, the following occurs for the `rtv-tt` command:

- For ANSI, if any selector for an entry made by TT commands is deleted using the `dlt-gttset` command, that entry cannot be retrieved.
- For ITU, if the GTT set name of a true selector (GTI=2 or GTI=4) is deleted using the `dlt-gttset` command, then that entry cannot be retrieved.
- If the GTT set name of a true selector is changed using the `chg-gttset` command or if a selector is deleted using the `dlt-gttset` command, none of the selector aliases can be retrieved.
- Any entry where the `selid`, `lsn`, `cgssn`, or `eaglegen` is provisioned for the GTT selector cannot be retrieved.

Output

rtrv-tt

tekelecstp 10-05-03 09:03:09 EST EAGLE 42.0.0

TYPEA	TTN	NDGT
130	lidb	5
180	ansi180	9

ALIAS	TYPEA
1	130
7	130
10	180

TYPEI	TTN	NDGT
105	intlabc	15
119	intl119	18

ALIAS	TYPEI
29	119
33	105

TYPEN	TTN	NDGT
204	natlxyz	8
210	natl210	21

ALIAS	TYPEN
7	204

TYPEN24	TTN	NDGT
---------	-----	------

ALIAS	TYPEN24
-------	---------

TYPEIS	TTN	NDGT
5	-----	6

ALIAS	TYPEIS
-------	--------

TYPENS	TTN	NDGT
--------	-----	------

ALIAS	TYPENS
-------	--------

;

rtrv-tt:type=130:ttn=LIDB

tekelecstp 03-11-02 09:06:38 EST EAGLE 30.0.0

TYPEA	TTN	NDGT
130	lidb	5

ALIAS	TYPEA
1	130

```
7          130

;

rtrv-tt:ttn=intlabc

tekelecstp 03-11-02 09:19:34 EST  EAGLE 30.0.0
TYPEI      TTN          NDGT
105        intlabc     15

ALIAS      TYPEI
33         105

;

rtrv-tt:alias=7

tekelecstp 03-11-02 09:19:34 EST  EAGLE 30.0.0
ALIAS      TYPEA
7          130

ALIAS      TYPEN
7          204

;

rtrv-tt

tekelecstp 10-03-10 09:19:34 EST  EAGLE 42.0.0
TYPEA      TTN          NDGT

TYPEI      TTN          NDGT

TYPEN      TTN          NDGT

TYPEN24    TTN          NDGT
2          set24n002    6
4          first       6

;

rtrv-tt:typens=5

tekelecstp 10-05-03 16:58:03 EST  EAGLE 42.0.0
TYPENS     TTN          NDGT
5          abcde       6

ALIAS      TYPENS
```

;

This example shows the output for overlapped GTT selectors. If a translation type name is specified by more than one entry, the entries specifying that translation type will be preceded by an asterisk (to indicate overlap).

```
rtrv-tt:ovrlap=yes
```

```
tekelecstp 10-05-03 17:11:36 EST Eagle 42.0.0
```

```
TYPEA      TTN          NDGT
```

```
ALIAS      TYPEA
```

```
TYPEI      TTN          NDGT
```

```
*1         set1         6
```

```
*2         set2         6
```

```
ALIAS      TYPEI
```

```
TYPEN      TTN          NDGT
```

```
*3         set1         6
```

```
*4         set2         6
```

```
ALIAS      TYPEN
```

```
TYPEN24    TTN          NDGT
```

```
*5         set1         6
```

```
*6         set2         6
```

```
ALIAS      TYPEN24
```

```
TYPEIS     TTN          NDGT
```

```
ALIAS      TYPEIS
```

```
TYPENS     TTN          NDGT
```

```
ALIAS      TYPENS
```

;

Legend

- **TYPEA/TYPEI/TYPEN/TYPEN24/TYPEIS/TYPENS**—Global title translation type
- **TTN**—Name of the global title translation type
- **NDGT**—Number of digits in the global title translation type
- **ALIAS**—Alias global title translation type

Related Topics

- [dlt-tt](#)
- [ent-tt](#)

4.1.602 rtrv-ttmap

Use this command to display a mapped SS7 message translation type (TT) for a given gateway linkset name. This command can be used to display the identification of the type of allowed global title translation in the SS7 message before and after translation type mapping, see which linkset the mapping applies to, and see whether the mapping applies to incoming or outgoing messages.

Parameters

ett (optional)

Translation type before mapping. The identification of the type of allowed global title translation in the SS7 message *prior to* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range:

0 - 255

Default:

Display all types allowed

io (optional)

Incoming or outgoing. The system uses this parameter to indicate whether the translation type mapping data provisioned for the gateway linkset is for SS7 messages *received* or *sent* on the linkset.

Range:

i
incoming

o
outgoing

Default:

Both incoming and outgoing

lsn (optional)

Linkset name

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Default:

Display all

Example

```
rtrv-ttmap
```

```
rtrv-ttmap:lsn=nc001
```

```
rtrv-ttmap:lsn=nc001:io=i:ett=128
```

```
rtrv-ttmap:io=i:ett=128
```

```
rtrv-ttmap:ett=128
```

```
rtrv-ttmap:ett=40
```

Dependencies

The linkset must be defined.

2929 E2929 Cmd Rej: The linkset specified does not exist in the linkset table

The Linkset table must be accessible.

2122 E2122 Cmd Rej: Failed reading linkset table

The Translation Type Mapping table must be accessible.

2840 E2840 Cmd Rej: Failed reading tt map table

The memory space accounting report (MSAR) is not produced if the `io` or `ett` parameter is specified, because the statistics presented may be misleading.

N/A N/A

Notes

The order of display is by linkset index + I/O + ETT.

Output

```
rtrv-ttmap
```

```
rlghncxa03w 03-11-22 11:39:44 EST EAGLE 30.0.0
```

```
LSN      IO  ETT  MTT
```

```
nc001    I   047 032
```

```
nc001    I   128 055
```

```
nc001    I   238 128
```

```
nc001    I   254 016
```

```
nc001    O   016 254
```

```
nc001    O   128 238
```

```
TTMAP table for nc001 is (6 of 64) 9% full
```

```
nc002    I   128 055
```

```
nc002    I   238 128
```

```
nc002    O   128 238
```

```
TTMAP table for nc002 is (3 of 64) 5% full
```

```
lsi1     I    001 142
```

```
lsi1     O    142 001
```

```
TTMAP table for lsi1 is (2 of 64) 3% full
```

```
lsi2     I   238 128
```

```
TTMAP table for lsi2 is (1 of 64) 2% full
```

```
lsi3     I   254 016
```

```
TTMAP table for lsi3 is (1 of 64) 2% full
```



```
lsn1      0  016 254
lsn1      0  128 238
TTMAP table for lsn1 is (2 of 64) 3% full

lsn2      I  128 055
lsn2      I  238 128
lsn2      O  128 238
TTMAP table for lsn2 is (3 of 64) 5% full
;

rtrv-ttmap:lsn=nc001

rlghncxa03w 03-11-22 12:02:36 EST  EAGLE 30.0.0
LSN        IO  ETT  MTT
nc001      I   047 032
nc001      I   128 055
nc001      I   238 128
nc001      I   254 016
nc001      O   016 254
nc001      O   128 238
TTMAP table for nc001 is (6 of 64) 9% full
;

rtrv-ttmap:lsn=nc001:io=i:ett=128

rlghncxa03w 03-11-22 12:04:21 EST  EAGLE 30.0.0
LSN        IO  ETT  MTT
nc001      I   128 055
;

rtrv-ttmap:io=i:ett=128

rlghncxa03w 03-11-22 12:06:13 EST  EAGLE 30.0.0
LSN        IO  ETT  MTT
nc001      I   128 055
nc002      I   128 055
lsn2       I   128 055
;

rtrv-ttmap:ett=128

rlghncxa03w 03-11-22 12:41:21 EST  EAGLE 30.0.0
LSN        IO  ETT  MTT
nc001      I   128 055
nc001      O   128 238
nc002      I   128 055
nc002      O   128 238
lsn1       O   128 238
```

```

lsn2          I   128  055
lsn2          O   128  238
;

rtrv-ttmap:ett=40

rlghncxa03w 03-11-07 16:12:38 EST  EAGLE 30.0.0
LSN          IO  ETT  MTT
No mapped translation types defined for ETT specified.
;

```

Legend

- **LSN**—Linkset name
- **IO**—Incoming or outgoing linkset
- **ETT**—Translation type before mapping
- **MTT**—Mapped translation type

Related Topics

- [chg-ttmap](#)
- [dlt-ttmap](#)
- [ent-ttmap](#)

4.1.603 rtrv-ttr-msg

Use this command to display the configured Triggerless TCAP Relay message parameter values.

Parameters**msgn (mandatory)**

Message number. This parameter specifies the number of the TTR message.

Range:

1 - 10

Default:

The values for all TTR messages are displayed.

Example

```
rtrv-ttr-msg:msgn=1
```

Dependencies

The Prepaid IDP Query Relay feature must be enabled before this command is entered.

4498 E4498 Cmd Rej: The Prepaid IDP Query Relay feature must be enabled

The TSTMSG table is corrupt or could not be found.

4819 E4819 Cmd Rej: Failure reading TSTMSG Table

Output

```
rtrv-ttr-msg:msgn=1
```

```
tekelecstp 08-05-05 17:36:25 EST EAGLE 39.0.0
MSG = 1          TCAP_TYPE = CAP          ACTIVE = YES
SK = 00006b00   BCSM = 02

CGPA_GT = 2
CGPA_GT_NAI = 4      CGPA = 0123456789abcde

CDPA_GT = 2
CDPA_GT_NAI = 8      CDPA = 12457896

CGPN_NAI = 4          CGPN = 01234567890abcdef
CDPN_NAI = 9          CDPN = 8764321

LAC = abcdef
```

```
rtrv-ttr-msg:msgn=2
```

```
tekelecstp 11-10-05 11:43:13 EST EAGLE 44.0.0

MSG = 2          TCAP_TYPE = INAP        ACTIVE = YES
SK = 00006b00   BCSM = 02

CGPA_GT = 2
CGPA_GT_NAI = 4      CGPA = 1234567abcde

CDPA_GT = 2
CDPA_GT_NAI = 4      CDPA = 1234567

CGPN_NAI = 4          CGPN = none
CDPN_NAI = 4          CDPN = 9876543

LAC = abcdef
```

Related Topics

- [chg-ttr-msg](#)
- [tst-msg](#)

4.1.604 rtrv-ttropts

Use this command to display all of the Triggerless TCAP Relay options that are configured in the database.

Parameters

This command has no parameters.

Example

```
rtrv-ttropts
```

Dependencies

The EGLEOPTS table is corrupt or cannot be found.

4820 E4820 Cmd Rej: Failure reading EGLEOPTS table

The Prepaid IDP Query Relay feature must be enabled before this command can be entered.

4498 E4498 Cmd Rej: The Prepaid IDP Query Relay feature must be enabled

Notes

None

Output

This output example displays the default mapping values for NAI2TON MAP and TON2NAI MAP.

```
rtrv-ttropts
```

```
tekelecstp 21-10-20 17:50:09 EST EAGLE 47.0.0
```

```
Command entered at terminal #4.
```

```
TTR OPTIONS
```

```
-----
CDPN DETAILS          CGPN DETAILS
NPTYPE  rnspl         CGNPTYPE  rnspl
SNAI    incoming     CGSNAI    incoming

CGPACCK      nonintl
DLMA         NONE
DLMB         NONE
DLMC         NONE
DFLTRN       NONE
SPORTTYPE    none
SPFILL       off
RNSPFILL     off
CGPNSKRTG    no
DRAFRMT      grn
DRANAI       3
CDRNRSP      connect
CDSRSP       relay
CDNOENTITYRSP continue
CDDNNOTFNDRSP release
CDDRA        rndn
CDDRANAI     natl
CDDRANP      e164
CDRELCAUSE   31
CDCNP        off
CGRNRSP      connect
```

```

CGSPRSP          relay
CGNOENTITYRSP   continue
CGDNNOTFNDRSP   release
CGDRA            rndn
CGDRANAI         natl
CGDRANP         e164
CGRELCAUSE       31
CGCNP           off
MERGE_IN         off

```

NAI2TON MAP

NAI	TON	NAI	TON	NAI	TON	NAI	TON	NAI	TON	NAI	TON	NAI	TON
0	0	1	0	2	0	3	2	4	1	5	0	6	0
8	0	9	0	10	0	11	0	12	0	13	0	14	0
16	0	17	0	18	0	19	0	20	0	21	0	22	0
24	0	25	0	26	0	27	0	28	0	29	0	30	0
32	0	33	0	34	0	35	0	36	0	37	0	38	0
40	0	41	0	42	0	43	0	44	0	45	0	46	0
48	0	49	0	50	0	51	0	52	0	53	0	54	0
56	0	57	0	58	0	59	0	60	0	61	0	62	0
64	0	65	0	66	0	67	0	68	0	69	0	70	0
72	0	73	0	74	0	75	0	76	0	77	0	78	0
80	0	81	0	82	0	83	0	84	0	85	0	86	0
88	0	89	0	90	0	91	0	92	0	93	0	94	0
96	0	97	0	98	0	99	0	100	0	101	0	102	0
104	0	105	0	106	0	107	0	108	0	109	0	110	0
112	0	113	0	114	0	115	0	116	0	117	0	118	0
120	0	121	0	122	0	123	0	124	0	125	0	126	0

TON2NAI MAP

TON	NAI
0	2
1	4
2	3
3	2
4	2
5	2
6	2
7	2

;

Related Topics

- [chg-ttropts](#)

4.1.605 rtrv-uaps

Use this command to retrieve one UA parameter set or all UA parameter sets.

Parameters**set (optional)**

The UA parameter set to be displayed.

Range:

1 - 10

Default:

Display all

Example

```
rtrv-uaps
```

```
rtrv-uaps:set=1
```

Dependencies

None

N/A N/A

Notes

This command can be canceled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

Output

```
rtrv-uaps:set=1
```

```

eagle2 15-03-15 23:29:52 MST EAGLE5 46.2.0-65.42.0
5425.1472 CARD 1102 INFO Prolonged SCTP congestion
Restart
assoc
```

```

Report Date:15-03-15 Time:23:29:52
SET  TIMER      TVALUE  PARM      PVALUE
 10    1           0        1          3
 10    2          3000     2          0
 10    3         10000    3          0
 10    4           5000     4          0
 10    5            0        5          0
 10    6            0        6          0
 10    7            0        7          0
 10    8            0        8          0
 10    9            0        9          0
 10   10            0       10          0
```

TIMER 2: False IP Connection Congestion Timer, max time an association can be congested before failing due to false congestion. SS7IPGW and IPGWI applications enforce 0-30000(ms). Not supported on IPSP application.

TVALUE : Valid range = 32-bits

TIMER 3: UA HeartBeat Period Timer T(beat), time (ms) between

sending of BEAT msgs by NE. IPSP, SS7IPGW and IPGWI applications enforce 100(ms)-60000(ms).

TVALUE : Valid range = 32-bits

TIMER 4: UA HeartBeat Received Timer T(beat ack), timeout period for response BEAT ACK msgs by NE. IPSP, SS7IPGW and IPGWI applications enforce 100(ms)-10000(ms).

TVALUE : Valid range = 32-bits

TIMER 5: Timeout period for SCTP TX buffer full and stuck condition during SCTP congestion enforce 200(ms)-15000(ms).

TVALUE : Valid range = 32-bits

PARM 1: ASP SNM options. Each bit is used as an enabled/disabled flag for a particular ASP SNM option. Not supported on IPSP application.

PVALUE : Valid range = 32-bits

BIT	BIT VALUE
0=Broadcast	0=Disabled, 1=Enabled
1=Response Method	0=Disabled, 1=Enabled
2-5=Reserved	
6=Broadcast Congestion Status Change	0=Disabled, 1=Enabled
7-31=Reserved	

PARM 2: ASP/AS Notification options. Each bit is used as an enabled/disabled flag for a particular ASP/AS Notification option. Not supported on IPSP application.

PVALUE : Valid range = 32-bits

BIT	BIT VALUE
0=ASP Active Notifications	0=Disabled, 1=Enabled
1=ASP Inactive Notifications	0=Disabled, 1=Enabled
2=ASP AS State Query	0=Disabled, 1=Enabled
3-31=Reserved	

PARM 3: UA Serviceability Options. Each bit is used as an enabled/disabled flag for a particular UA Serviceability option. Supported on IPSP, SS7IPGW, and IPGWI applications. UA Graceful Shutdown supported on IPSP for M3UA only.

PVALUE : Valid range = 32-bits

BIT	BIT VALUE
0=UA Heartbeats	0=Disabled, 1=Enabled
1=UA Graceful Shutdown	0=Disabled, 1=Enabled
2-31=Reserved	

PARM 4: SCTP Payload Protocol Indicator byte order option. Bit indicates PPI value is RCV/TX in Big Endian or Little Endian byte format.

Supported on IPSP-M2PA associations only.

PVALUE : Valid range = 32-bits

BIT	BIT VALUE
0=Payload Protocol Indicator	0=Big Endian, 1=Little Endian
1-31=Reserved	

Related Topics

- [chg-uaps](#)

4.1.606 rtrv-uim-acthresh

Use this command to query the UIM number, limit, and interval period parameters that are used to report the thresholding of UIM messages.

Parameters**uimn (optional)**

The UIM number.

Range:

1000 - 1999

Default:

Display all

Example

Display UIM number 1333 threshold:

```
rtrv-uim-acthresh:uimn=1333
```

Display the threshold for all UIMs that have been set:

```
rtrv-uim-acthresh
```

Dependencies

A valid value must be specified for the `uimn` parameter.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

The value specified for the `uimn` parameter must already exist in the system Trouble Text Table.

3635 E3635 Cmd Rej: UIM number does not exist in STP Trouble Text Table

Notes

None

Output

```
rtrv-uim-acthresh:uimn=1333
```

```
rlghncxa03w 03-11-01 08:50:12 EST EAGLE 31.3.0
UIMN    LIMIT    INTRVL
1333    100        5
The UIM Threshold Table is (1 of 499) 1% full.
```



```
rtrv-uim-acthresh
```

```
rlghncxa03w 03-11-01 08:50:12 EST EAGLE 31.3.0
UIMN      LIMIT      INTRVL
1333      100         5
1444      200         15
1155      50          30
The UIM Threshold Table is (3 of 499) 1% full.
```

Related Topics

- [dlt-uim-acthresh](#)
- [set-uim-acthresh](#)

4.1.607 rtrv-upgrade-config

Use this command to retrieve provisioned data used by the upgrade software during an upgrade of an in-service EAGLE from a source release to the target release.

Parameters

display (optional)

Display Indicator. This parameter indicates what type of output is to be displayed.

Range:

tblcnv

Displays a list of DMS tables that will be converted during the next upgrade. These tables are selected for conversion using the `chg-upgrade-config` command.

prtnstat

This parameter is not implemented at this time.

all

Display all upgrade configuration data.

Default:

all

Example

Display a list of DMS tables that will be converted during the next upgrade.

```
rtrv-upgrade-config:display=tblcnv
```

```
rtrv-upgrade-config
```

Dependencies

None

N/A N/A

Output

```
rtrv-upgrade-config:display=tblcnv
```

```
rlghncxa03w 07-03-13 08:15:45 EST EAGLE 37.5.0
```

```
The following tables will be converted:
```

```
FEAT_CTRL Table, ID=327
```

```
Command Completed.
```

```
;
```

```
rtrv-upgrade-config
```

```
rlghncxa03w 10-02-13 08:15:45 EST EAGLE 42.0.0
```

```
Software Access Key no longer required for this system
```

```
Configured Upgrade Threshold Type: SET
```

```
Command Completed.
```

```
;
```

Related Topics

- [act-upgrade](#)
- [chg-upgrade-config](#)

4.1.608 rtrv-user

Use this command to show the information about the user currently logged on to the terminal from which this command was entered.

Parameters

This command has no parameters.

Example

```
rtrv-user
```

Dependencies

The CCCNAMES table must be accessible.

```
2598 E2598 Cmd Rej: Cccnames table must be accessible
```

```
None
```

```
N/A N/A
```

Notes

The password is not shown.

This command shows the command class privileges for the user logged onto the system. No other users are shown.

All users have access to this command.

Output

This example shows the output when the Command Class Management feature is turned on:

```
rtrv-user

rlghncxca03w 09-01-07 09:50:17 EST EAGLE 40.1.0
user id      age page uout rev link sa  sys pu  db  dbg
manny       36  60   60  NO  YES YES YES YES YES YES YES
           u01 u02 u03 u04 u05 u06 u07 u08 u09 u10 u11 u12 u13 u14 u15 u16
           NO NO NO NO YES YES YES YES YES YES YES YES YES YES YES YES YES
           u17 u18 u19 u20 u21 u22 u23 u24 u25 u26 u27 u28 u29 u30 u31 u32
           YES YES YES YES YES YES YES YES YES YES YES YES NO NO NO NO YES
;
```

This example shows the output when the Command Class Management feature is not turned on:

```
rtrv-user

rlghncxca03w 09-01-07 09:50:17 EST EAGLE 40.1.0
USER ID      LINK SA SYS  PU  DB DBG
eagle       YES YES YES YES YES YES

USER ID      AGE PAGE UOUT REV
eagle       750 0   0   NO
;
```

Legend

- **USER ID**—Name of the user
- **AGE**—Current age, in days, of the password associated with this user ID. If the password age is greater than 999 days, then 999 is displayed.
- **PAGE**—Maximum password age established for this user ID. When AGE becomes greater than PAGE, the system forces the user to change the password at the next login. An asterisk (*) displayed after the value indicates that the system-wide default page parameter value, (see the `chg-secu-dflt` command), is in effect for the user ID.
- **UOUT**—User ID aging interval, in days. If the user ID is not used (that is, no successful login) for longer than this interval, the system does not allow a login. An asterisk (*) displayed after the value indicates that the system-wide default `uout` parameter value, (see the `chg-secu-dflt` command), is in effect for the user ID.
- **REV**—Shows whether the user ID is denied login (revoked). YES indicates that the user ID is revoked, NO indicates that the user ID is not revoked.
- **LINK**—Shows whether the user has access to all commands in the Link Maintenance command class

- **SA**—Shows whether the user has access to all commands in the Security Administration command class
- **SYS**—Shows whether the user has access to all commands in the System Maintenance command class
- **PU**—Shows whether the user has access to all commands in the Program Update command class
- **DB**—Shows whether the user has access to all commands in the Database Administration command class
- **DBG**—Shows whether the user has access to all commands in the Debug command class

If the Command Class Management feature is enabled and turned on, the following fields are displayed:

- **U01 - U32**—Default configurable command class names. If user-defined names have been provisioned, they will appear instead of the default names.

Related Topics

- [act-user](#)
- [chg-pid](#)
- [chg-user](#)
- [dact-user](#)
- [dlt-user](#)
- [ent-user](#)
- [login](#)
- [logout](#)
- [rept-stat-user](#)
- [rtrv-secu-user](#)

4.1.609 rtrv-vendid

Use this command to retrieve a list of Vendor ID entries from the VENDID table, for the GSM MAP SRI Redirect to Serving HLR feature.

Parameters

num (optional)

Number of Vendor ID entries to be retrieved.

Range:

1 - 500

Default:

500

vendnum (optional)

Vendor Number

Range:
1 - 128

Example

```
rtrv-vendid
rtrv-vendid:vendnum=15
rtrv-vendid:num=100
```

Dependencies

The VENDID table is corrupt or cannot be found by the system.

4317 E4317 Cmd Rej: Failed reading VENDID table

The GSM MAP SRI Redirect feature must be enabled before this command can be entered.

4320 E4320 Cmd Rej: SRI Redirect Feature must be enabled

Notes

None.

Output

This example shows output when the command is entered with no parameter. Vendor Types are listed in numerical order. Vendor Numbers for each Vendor Type are listed in numerical order, followed by the Vendor ID for each Vendor Number.

```
rtrv-vendid

tekelecstp 14-09-21 16:11:21 EST  EAGLE 46.1.0
Vendor   Vendor   Vendor
Type     Number   ID
-----
1         1         123123123456789
1         1         1234567890abcde
1         2         112233445566778
1         2         214365870912543
2         3         098765432112345
2         3         098767890143251
15        1         098888869321111
32        32        098888811899721

VENDID table is (8 of 500) 2% full

Vendor ID Length = 15

;
```

This example shows output when a Vendor number is specified. Vendor Type and Vendor IDs for the specified Vendor number are listed in numerical order. The table capacity line shows the total number of entries in use, not just the number of entries displayed.

```
rtrv-vendid:vendnum=32

tekelecstp 14-05-30 17:41:50 EST  EAGLE 46.1.0
Vendor   Vendor   Vendor
Type     Number  ID
-----
32       32       899721

VENDID table is (37 of 500) 7% full

Vendor ID Length = 6
;
```

This example shows the output when the number of Vendor IDs to be retrieved is specified with the `num` parameter.

```
rtrv-vendid:num=5

tekelecstp 14-07-14 14:46:47 EST  EAGLE 46.1.0
Vendor   Vendor   Vendor
Type     Number  ID
-----
1        1        886932
2        1        816932
2        1        886942
3        1        811932
3        3        886989

VENDID table is (38 of 500) 8% full

Vendor ID Length = 6
;
```

Related Topics

- [dlt-vendid](#)
- [ent-vendid](#)

4.1.610 rtrv-vflx-cd

Use this command to retrieve call decision information.

Parameters

cdn (optional)

Call decision name. The name of the call decision entry.

Range:

ayyy

1 alphabetic character followed by 3 alphanumeric characters

vmdig (optional)

Voice mail number or voice mail prefix digits. The voice mail number or voice mail digits associated with the call decision entry.

Range:

1 - 15 digits

Valid digits are 0-9, A-F, a-f

Example

This command retrieves all entries from the Call Decision table.

```
rtrv-vflx-cd
```

This command retrieves a specific Call Decision entry.

```
rtrv-vflx-cd:cdn=cdn1
```

This command retrieves all call decision entries with a specified voice mail number or voice mail prefix digits.

```
rtrv-vflx-cd:vmdig=123456789abcd2
```

DependenciesThe `cdn` and `vmdig` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The value specified for the `cdn` parameter cannot be a reserved word, such as *none*.

3040 E3040 Cmd Rej: <string> cannot be used in this command

The Call Decision table is corrupt or cannot be found by the system.

4095 E4095 Cmd Rej: Failed reading Call Decision table

The value specified for the `cdn` parameter must already exist in the Call Decision table.

4338 E4338 Cmd Rej: CDN does not exist in the database

The V-Flex feature must be enabled before this command can be entered.

4641 E4641 Cmd Rej: VFLEX feature must be enabled

NotesThis command can be cancelled using the **F9** function key or the `canc-cmd` command.**Output**

```
rtrv-vflx-cd
```

```
tekelecstp 08-05-01 09:36:55 EST EAGLE 39.0.0
```

TDI	DN Status	BCAP	VM Number/Prefix	VMRN Index	CD Name
---	-----	----	-----	-----	-----

```

DIR      NFND      0      1      9      c100
DIR      NFND      0      12     9      c101
DIR      NFND      0      123    9      c102
DIR      NFND      0      1234   9      c103
DIR      FND       0      1      9      c200
DIR      *         1      123    9      c201
DIR      *         2      2345678 9      c203
DIR      *         3      456789a 9      c204
DIR      *         4      56789ab 9      c205
REDIR    *         1      123456789abcdef 9      c202

```

VFLEX Call Decision table is (10 of 4950) 1% full.

;

```
rtrv-vflx-cd:cdn=c100
```

```

tekelecstp 08-05-31 17:04:25 EST EAGLE 39.0.0
RDI      DN Status  BCAP  VM Number/Prefix  VMRN Index  CD Name
---      -
DIR      NFND      0      1      9      c100

```

VFLEX Call Decision table is (7 of 4950) 1% full.

;

This example shows how all Call Decision Table entries whose digits match the starting digits of the specified VMDIG will be displayed.

```
rtrv-vflx-cd:vmdig=123456789abcdef
```

```

tekelecstp 08-05-31 17:05:49 EST EAGLE 39.0.0
RDI      DN Status  BCAP  VM Number/Prefix  VMRN Index  CD Name
---      -
DIR      NFND      0      1      9      c100
DIR      NFND      0      12     9      c101
DIR      NFND      0      123    9      c102
DIR      NFND      0      1234   9      c103
DIR      FND       0      1      9      c200
DIR      *         1      123    9      c201
REDIR    *         1      123456789abcdef 9      c202

```

VFLEX Call Decision table is (7 of 4950) 1% full.

;

Legend

- **RDI**—Redirection Indicator - whether the call has been redirected or not (0 - Not redirected: VM retrieval or direct dial VM deposit, 1 - Redirected: VM deposit)
- **DN Status**—Status of the DN lookup in the RTDB - found in the RTDB, not found in the RTDB, don't care whether found in the RTDB or not

- **BCAP**—INAP/CAP Bearer Capabilities
- **VM Number/Prefix**—Voice Mail Number or Voice Mail Prefix associated with a Call Decision entry
- **VMRN Index**—Index into the list of Routing Numbers associated with a specific VMSID entry
- **CD Name**—Name of the Call Decision entry

Related Topics

- [chg-vflx-cd](#)
- [dlt-vflx-cd](#)
- [ent-vflx-cd](#)

4.1.611 rtrv-vflx-opts

Use this command to retrieve the data that is used for number conditioning.

Parameters

This command has no parameters.

Example

This command displays V-Flex Options Table data.

```
rtrv-vflx-opts
```

Dependencies

The V-Flex feature must be enabled before this command can be specified.

```
4641 E4641 Cmd Rej: VFLEX feature must be enabled
```

Notes

If no DRANAIV value or DRANAIV value has been provisioned, the command output displays the DRANAIV default value of 0.

Output

This example shows the output with default V-Flex Options:

```
rtrv-vflx-opts
```

```
tekelecstp 08-05-04 07:53:46 EST EAGLE 39.0.0
```

```
VFLEX OPTIONS
```

```
-----  
DRANPV      = 0  
DRANAIV     = 0  
DRA         = RN  
NEQUERYONLY = OFF  
NETYPE      = VMSID
```

```
;
```

This example shows the output with some V-Flex Options provisioned:

```
rtrv-vflx-opts

tekelecstp 08-05-04 07:55:30 EST EAGLE 39.0.0

VFLEX OPTIONS
-----
DRANP      = E164
DRANAI     = SUB
DRA        = RN
NEQUERYONLY = ON
NETYPE     = GRN
;
```

Legend

- **DRANP**—Numbering plan for the destination routing address
- **DRANAI**—Nature of address indicator for the destination routing address
- **DRA**—Format of the destination routing address
- **NEQUERYONLY**—Network Entity Query Only option
- **NETYPE**—Network Entity Type for the NEQUERYONLY option

Related Topics

- [chg-vflx-opts](#)

4.1.612 rtrv-vflx-rn

Use this command to retrieve voice mail routing numbers and routing number names and to view the associated reference count. The V-Flex feature must be enabled before this command can be entered.

Parameters

refcnt (optional)

Reference count. This parameter specifies whether to display the reference count.

Range:

yes
display the reference count

rn (optional)

Routing number. A voice mail routing number.

Range:

1-15 digits
Valid digits are 0-9, A-F, a-f.

rnname (optional)

Routing number name. The name associated with a voice mail routing number.

Range:

ayyyyyyy

1 alphabetic character followed by 7 alphanumeric characters.

Example

```
rtrv-vflx-rn:rnname=rn01
rtrv-vflx-rn:rn=123456789ABC
rtrv-vflx-rn
rtrv-vflx-rn:rnname=rn01:refcnt=yes
rtrv-vflx-rn:rn=123456789ABC:refcnt=yes
```

Dependencies

The V-Flex feature must be enabled before this command can be entered.

4641 E4641 Cmd Rej: VFLEX feature must be enabled

The Routing Number table is corrupt or cannot be found by the system.

4642 E4642 Cmd Rej: Unable to read Routing Number table

The value specified for the `rnname` parameter must already exist in the Routing Number table.

4646 E4646 Cmd Rej: RNNAME doesn't exist in the database

The `rn` and `rnname` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The value specified for the `rnname` parameter cannot be a reserved word, such as *none*.

3040 E3040 Cmd Rej: <string> cannot be used in this command

The value specified for the `rn` parameter must already exist in the Routing Number table.

4647 E4647 Cmd Rej: RN doesn't exist in the database

Notes

This command can be cancelled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

Output

This command shows the output for a routing number name:

```
rtrv-vflx-rn:rnname=rn01

tekelecstp 08-05-29 15:07:01 EST  EAGLE 39.0.0

RN Name      Routing Number
-----      -
rn01         123456789abcdef
```

```
VFLEX Routing Number table is (2 of 10000) 1% full.
```

```
;
```

This command shows all of the entries in the Routing Number table:

```
rtrv-vflx-rn
```

```
tekelecstp 08-05-29 15:07:01 EST EAGLE 39.0.0
```

RN Name	Routing Number
-----	-----
rn01	123456789abcd01
rn02	123456789abcd02
rn03	123456789abcd03
rn04	123456789abcd04
rn05	123456789abcd05
rn06	123456789abcd06
rn07	123456789abcd07
rn08	123456789abcd08
rn09	123456789abcd09
rn10	123456789abcd0A
rn11	123456789abcd0B
rn12	123456789abcd0C
rn13	123456789abcd0D
rn14	123456789abcd0E
rn15	123456789abcd0F
.	.
.	.
.	.
.	.
rn10000	100000000abcdef

```
VFLEX Routing Number table is (10000 of 10000) 100% full.
```

```
;
```

This command shows the reference count for a specified routing number name:

```
rtrv-vflx-rn:rname=rn01:refcnt=yes
```

```
tekelecstp 08-05-29 15:07:01 EST EAGLE 39.0.0
```

RN Name	Routing Number	Ref Count
-----	-----	-----
rn01	123456789abcdef	2

```
VFLEX Routing Number table is (2 of 10000) 1% full.
```

```
;
```

This command shows the reference count for a specified routing number:

```
rtrv-vflx-rn:rn=123456789ABC:refcnt=yes

tekelecstp 08-05-29 15:07:01 EST EAGLE 39.0.0

RN Name      Routing Number  Ref Count
-----      -
rn02         123456789abc   3

VFLEX Routing Number table is (2 of 10000) 1% full.

;
```

Legend

- **RN Name**—Voice mail routing number name
- **Routing Number**—Voice mail routing number digits
- **Ref Count**—Number of VMSID table entries that refer to an routing number entry

Related Topics

- [chg-vflx-rn](#)
- [dlt-vflx-rn](#)
- [ent-vflx-rn](#)

4.1.613 rtrv-vflx-vmsid

Use this command to retrieve information for voice mail server IDs.

Parameters

id (optional)

The voice mail server ID.

Range:

1-15 digits, *dflt*

Valid digits are 0-9, A-F, a-f.

dflt —a default set of routing numbers used when a query is received with an invalid MSISDN or an MSISDN that is not found in the RTDB

rname (optional)

A routing number name associated with the voice mail server ID.

Range:

ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters.

Example

```
rtrv-vflx-vmsid
rtrv-vflx-vmsid:id=123456789012345
rtrv-vflx-vmsid:rname=rn90
```

Dependencies

The value specified for the `rname` parameter cannot be a reserved word, such as `none`.

3040 E3040 Cmd Rej: <string> cannot be used in this command

The V-Flex feature must be enabled before this command can be entered.

4641 E4641 Cmd Rej: VFLEX feature must be enabled

The value specified for the `rname` parameter must already exist in the Routing Number table.

4665 E4665 Cmd Rej: <Specified RN Name> does not exist in the Routing Number table

The value specified for the `id` parameter must already exist in the VMSID table.

4661 E4661 Cmd Rej: VMS ID does not exist in the database

The GTT DBMM table is corrupt or cannot be found by the system.

3120 E3120 Cmd Rej: Failed Reading GTT DBMM table

The VMSID table is corrupt or cannot be found by the system.

4663 E4663 Cmd Rej: Failed reading VMSID table

The `rname` and `id` parameters cannot be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The Routing Number table is corrupt or cannot be found by the system.

4642 E4642 Cmd Rej: Unable to read Routing Number table

Notes

This command can be cancelled using the **F9** function key or the `canc-cmd` command. See `canc-cmd` for more information.

Output

This command shows the output for all the entries from the VMSID table:

```
rtrv-vflx-vmsid
```

```

rlghncxa03w 08-05-07 11:11:28 EST  EAGLE 39.0.0
VMS ID          IDX0          IDX1          IDX2          IDX3          IDX4
IDX5
-----
-----
123456789abcdef RN000000  RN000001  RN000002  RN000003  RN000004
RN000005
          IDX6          IDX7          IDX8          IDX9
          -----
          RN000006  RN000007  RN000008  RN000009

```

```

VMS ID          IDX0          IDX1          IDX2          IDX3          IDX4          IDX5
-----
-----
123456789012abc RN000010  RN000011  RN000012  RN000013  RN000014
RN000015

      IDX6          IDX7          IDX8          IDX9
      -----
      -----
      RN000016  RN000017  RN000018  RN000019

VMS ID          IDX0          IDX1          IDX2          IDX3          IDX4          IDX5
-----
-----
a23456789012abc RN000020  RN000021  RN000022  RN000023  RN000024
RN000025

      IDX6          IDX7          IDX8          IDX9
      -----
      -----
      RN000026  RN000027  RN000028  RN000029

VFLEX VMSID table is (3 of 1000) 1% full.
;

```

This command shows the output for an entry with the default voice mail server ID:

```

rtrv-vflx-vmsid:id=dflt

tekelecstp 08-05-29 15:07:01 EST  EAGLE 39.0.0
VMS ID          IDX0          IDX1          IDX2          IDX3          IDX4          IDX5
-----
-----
dflt            RN000040  RN000041  RN000042  RN000043  RN000044
RN000045

      IDX6          IDX7          IDX8          IDX9
      -----
      -----
      RN000046  RN000047  RN000048  RN000049
VFLEX VMSID table is (3 of 1000) 1% full.
;

```

Legend

- **VMS ID**—Voice Mail Server ID.
- **IDX0**—Routing Number Name for index 0
- **IDX1**—Routing Number Name for index 1
- **IDX2**—Routing Number Name for index 2
- **IDX3**—Routing Number Name for index 3
- **IDX4**—Routing Number Name for index 4
- **IDX5**—Routing Number Name for index 5
- **IDX6**—Routing Number Name for index 6
- **IDX7**—Routing Number Name for index 7

- **IDX8**—Routing Number Name for index 8
- **IDX9**—Routing Number Name for index 9

Related Topics

- [chg-vflx-vmsid](#)
- [dlt-vflx-vmsid](#)
- [ent-vflx-vmsid](#)

4.1.614 rtrv-vlr-prof

Use this command to display entries from the Visitor Location Register (VLR) Profile table.

Parameters**v1r (mandatory)**

VLR Number: Hexadecimal digit GT Number with variable length (1 to 16).

Range:

Hexadecimal digit string 1 to 16 digits

filter (optional)

Determines the category in which the number falls into.

Range:

whitelist

blacklist

graylist

Default:

graylist

num (optional)

Number of entries in the VLR table which user wants to view.

Range:

1-50000

v1rtbl (optional)

Selects either the static or dynamic table the user wants to view.

Range:

static

dynamic

Default:

static

Example

```
rtrv-vlr-prof
```



```
rtrv-vlr-prof:num=2
rtrv-vlr-prof:filter=blacklist
rtrv-vlr-prof:vlrtbl=static
```

Dependencies

VLR_PROF table must be accessible.

3604 E3604 Failure reading VLR Profile Table

VLR parameter length must be in the range 1 to 5 digits as per current restriction.

3603 E3603 VLR length is out of range . Range: 1....5

VLR parameter and NUM parameter both cannot be specified together.

3047 E3047 Cmd Rej: Parameter combination invalid

Output

```
rtrv-vlr-prof
```

```
tekelecstp 17-11-23 14:21:51 MST EAGLE 46.5.1.5.0-73.2.0
  rtrv-vlr-prof:num=50000
  Command entered at terminal #17.
```

```
;
```

Command Accepted - Processing

```
tekelecstp 17-11-23 14:21:51 MST EAGLE 46.5.1.5.0-73.2.0
```

VLRIDX	VLRNb	FILTER	AGEOFLOC	LASTUEACTIVITY	REFCNT
1	1234	whitelist	no	no	1
2	56545	whitelist	no	no	1
3	4234	blacklist	no	no	0
4	9234	whitelist	no	yes	0

VLR-PROF table is (4 of 500) 1% full.

```
;
```

```
rtrv-vlr-prof:num=2
```

```
tekelecstp 17-11-23 14:23:35 MST EAGLE 46.5.1.5.0-73.2.0
  rtrv-vlr-prof:num=2
  Command entered at terminal #17.
```

```
;
```

Command Accepted - Processing

```
tekelecstp 17-11-23 14:23:35 MST EAGLE 46.5.1.5.0-73.2.0
```

VLRIDX	VLRNb	FILTER	AGEOFLOC	LASTUEACTIVITY	REFCNT
--------	-------	--------	----------	----------------	--------

```
      1      1234      whitelist  no
no              1

      2      56545      whitelist  no
no              1
```

VLR-PROF table is (4 of 500) 1% full.

;

rtrv-vlr-prof:filter=blacklist

```
tekelecstp 17-11-23 14:23:23 MST  EAGLE 46.5.1.5.0-73.2.0
  rtrv-vlr-prof:filter=blacklist
  Command entered at terminal #17.
```

;

Command Accepted - Processing

```
tekelecstp 17-11-23 14:23:23 MST  EAGLE 46.5.1.5.0-73.2.0
```

```
      VLRIDX  VLRNb      FILTER      AGEOFLOC      LASTUEACTIVITY
REFCNT
      3      4234      blacklist  no
no              0
```

VLR-PROF table is (4 of 500) 1% full.

;

rtrv-vlr-prof:filter=whitelist:num=1

```
tekelecstp 17-10-12 18:11:44 EST  EAGLE 46.5.1.5.0-73.2.0
  rtrv-vlr-prof:filter=whitelist:num=1
  Command entered at terminal #23.
```

;

Command Accepted - Processing

```
tekelecstp 17-10-12 18:11:44 EST  EAGLE 46.5.1.5.0-73.2.0
```

```
      VLRIDX  VLRNb      FILTER      AGEOFLOC
LASTUEACTIVITY  REFCNT
      1      17071      whitelist  no
no              1
```

VLR-PROF table is (2 of 50000) 1% full.

;

Command Executed

```
rtrv-vlr-prof:vlr=1707

tekelecstp 17-10-12 18:11:00 EST EAGLE 46.5.1.5.0-73.2.0
  rtrv-vlr-prof:vlr=1707
  Command entered at terminal #23.
;

Command Accepted - Processing
  tekelecstp 17-10-12 18:11:00 EST EAGLE 46.5.1.5.0-73.2.0

  VLRIDX  VLRNb          FILTER      AGEOFLOC   LASTUEACTIVITY
REFCNT
  2        1707          whitelist   no         no           1

  VLR-PROF table is (2 of 50000) 1% full.

;
Command Executed

rtrv-vlr-prof:vlr=100

Command Accepted - Processing

  tekelecstp 17-11-27 14:43:15 MST EAGLE 46.5.1.5.0-73.2.0
  rtrv-vlr-prof:vlr=100
  Command entered at terminal #2.
;

  tekelecstp 17-11-27 14:43:15 MST EAGLE 46.5.1.5.0-73.2.0

  VLRIDX  VLRNb          FILTER      AGEOFLOC   LASTUEACTIVITY
REFCNT

  No VLR Profiles matching the specified criteria were found.

  VLR-PROF table is (3 of 500) 1% full.

;

rtrv-vlr-prof:vlrtbl=static

tklc1110801 18-09-25 16:25:44 EST EAGLE 46.7.0.0.0-75.14.0
  rtrv-vlr-prof:vlrtbl=static
  Command entered at terminal #2.
;

tklc1110801 18-09-25 16:25:44 EST EAGLE 46.7.0.0.0-75.14.0

  VLRIDX  VLRNb          FILTER      AGEOFLOC   IMEIRTRV  REFCNT
  1        ab123          whitelist   no         yes        1
  2        ab456          whitelist   no         yes        1
  3        bb123          whitelist   no         yes        1
  4        bb456          whitelist   no         yes        1
```

5	cd123	whitelist	no	yes	1
6	cd456	whitelist	no	yes	1
7	cc123	whitelist	no	yes	1
8	cc456	whitelist	no	yes	1
9	ab789	whitelist	no	yes	0
10	ab987	whitelist	no	yes	0
11	bb789	whitelist	no	yes	0
12	bb987	whitelist	no	yes	0
13	cd789	whitelist	no	yes	0
14	cd987	whitelist	no	yes	0
15	cc789	whitelist	no	yes	0
16	cc987	whitelist	no	yes	0
17	ff789	whitelist	no	yes	0
18	ee789	whitelist	no	yes	0
19	dd789	whitelist	no	yes	0
20	12345	graylist	yes	yes	1

VLR-PROF table is (100 of 50000) 1% full.

Legend

- **VLRIDX** - Index of entry in VLR table.
- **VLRNb** - VLR Number
- **FILTER** - Flag to findout whether the number is whitelisted, blacklisted, or graylisted.
- **GEOFLOC** - Whether age of location is supported or not.
- **LASTUEACTIVITY** - Whether the last use activity is supported or not.
- **REFCNT** - Number of times this entry is referred in VLR_ROAM table.

Related Topics

- [chg-vlr-prof](#)
- [dlt-vlr-prof](#)
- [ent-vlr-prof](#)

4.1.615 rtrv-vlr-roaming

Use this command to display entries from the Visitor Location Register (VLR) Profile table.

Parameters

oldv1r (optional)

VLR Number from which mobile subscriber has moved, hexadecimal digit GT number with variable length (1 to 16).

Range:

Hexadecimal digit string 1 to 16 digits

newv1r (optional)

VLR Number to which mobile subscriber has moved, hexadecimal digit GT number with variable length (1 to 16).

Range:

Hexadecimal digit string 1 to 16 digits

num (optional)

Number of entries in the VLR table which user wants to view.

Range:

1-50000

v1rtbl (optional)

Selects either the static or dynamic table the user wants to view.

Range:

static

dynamic

Default:

static

Example

```
rtrv-vlr-roaming
rtrv-vlr-roaming:num=2
rtrv-vlr-roaming: newv1r=12345:oldv1r=56780
rtrv-vlr-roaming:v1rtbl=static
```

Dependencies

VLR_ROAM table must be accessible.

3602 E3602 Failure reading VLR Roaming Table

Both OLDVLR and NEWVLR must be specified

3559 E3559 OLD and NEW VLR both are required

OLDVLR or NEWVLR parameter must be existing in VLR-PROF table

3607 E3607 No entry found for entered VLR in VLR profile tbl

The entry should be existing in VLR_ROAM table

3601 E3601 OLD and NEW VLR combination does not exist.

OLDVLR and NEWVLR parameter length must be in the range 1 to 5 digits as per current restriction.

3603 E3603 VLR length is out of range. Range: 1...5

Output

```
rtrv-vlr-roaming

tekelecstp 17-11-23 17:37:44 MST EAGLE 46.5.1.5.0-73.2.0
rtrv-vlr-roaming
Command entered at terminal #17.
;

Command Accepted - Processing
tekelecstp 17-11-23 17:37:44 MST EAGLE 46.5.1.5.0-73.2.0

OLD_VLR          NEW_VLR          TIME
1234             56545           20

VLR-ROAMING table is (1 of 1000) 1% full.

;

rtrv-vlr-roaming:num=1

tekelecstp 17-11-23 17:37:44 MST EAGLE 46.5.1.5.0-73.2.0
rtrv-vlr-roaming:num=1
Command entered at terminal #17.
;

Command Accepted - Processing
tekelecstp 17-11-23 17:37:44 MST EAGLE 46.5.1.5.0-73.2.0

OLD_VLR          NEW_VLR          TIME
1234             56545           20

VLR-ROAMING table is (1 of 1000) 1% full.

;

rtrv-vlr-roaming:oldvlr=1234:newvlr=56545

tekelecstp 17-11-23 17:39:12 MST EAGLE 46.5.1.5.0-73.2.0
rtrv-vlr-roaming:oldvlr=1234:newvlr=56545
Command entered at terminal #17.
;

Command Accepted - Processing
tekelecstp 17-11-23 17:39:12 MST EAGLE 46.5.1.5.0-73.2.0

OLD_VLR          NEW_VLR          TIME
1234             56545           20

VLR-ROAMING table is (1 of 1000) 1% full.

;
```

```

rtrv-vlr-roaming:vlrtbl=static

tklc1110801 18-09-25 16:23:19 EST EAGLE 46.7.0.0.0-75.14.0
rtrv-vlr-roaming:vlrtbl=static
Command entered at terminal #2.
;

tklc1110801 18-09-25 16:23:19 EST EAGLE 46.7.0.0.0-75.14.0

OLD_VLR          NEW_VLR          TIME
ab123            35100            240
ab456            35100            240
bb123            35100            240
bb456            35100            240
cd123            35100            240
cd456            35100            240
cc123            35100            240
cc456            35100            240
12345            35100            500
67890            35100            500
54321            35100            500
22222            35100            500
33333            35100            500
44444            35100            500
7444444455      6444444455      1440
77bbf23636      99eea09439       150
77bbf22222      99eea09439       300
77bbf29393      99eea42222       16
77bbf28765      99eea09393       60
88776655        887766554433    120

VLR-ROAMING table is (26 of 1000000) 1% full.

```

Related Topics

- [chg-vlr-roaming](#)
- [dlt-vlr-roaming](#)
- [ent-vlr-roaming](#)

4.1.616 set-date

Use this command to set the date in the system.

Parameters**date (mandatory)**

The system date, to be reflected on all reports and output messages.

Range:

000101 - 991231

(in the form *yymmdd*, where *yy*=year, *mm*=month, *dd*=day)

Example

```
set-date:date = 010307
```

Dependencies

The system date day value (the *dd* in the *yymmdd* format) must accurately reflect the number of days in the specified month and year. For example, February never has 30 days. The value *050230* is not valid (February 30, 2005).

2252 E2252 Cmd Rej: Day out of range

None

N/A N/A

The system date month value (the *mm* in the *yymmdd* format) must be in the range 01-12.

2255 E2255 Cmd Rej: Month out of range

Notes

None

Output

```
set-date:date = 010307
```

```
rlghncxa03w 03-11-07 11:11:28 EST EAGLE 31.3.0
Date set complete.
;
```

Related Topics

- [set-time](#)

4.1.617 set-gtwy-acthresh

Use this command to set or change the level of activity thresholds to be used when reporting gateway screening activity. The STP reports screening activity only if the threshold is set and only if the threshold is reached. The thresholds are set on a linkset basis.

Parameters**intrvl (mandatory)**

Monitor interval. The examination period, in minutes, during which the gateway screening activity thresholds are to be tested.

Range:

5, 10, 15, 20, 30

System Default:

0 -Indicates that thresholds are not set

lsn (mandatory)

Linkset name

Range:

ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

rcv (optional)

Received message threshold. The threshold for MSUs received on the gateway linkset.

Range:

0 - 999999

Default:

The current value

System Default:

0

rej (optional)

Reject threshold. The threshold for MSUs rejected on the gateway linkset because of screening.

Range:

0 - 999999

Default:

The current value

System Default:

0

Example

This example shows how to set the linkset WY644368 rejection threshold to 100, with a 15 minute interval.

```
set-gtwy-acthresh:lsn=wy644368:rej=100:intrvl=15
```

This example shows how to set the linkset WY644368 message threshold to 1000 and the rejection threshold to 300, with an interval of 20 minutes.

```
set-gtwy-acthresh:lsn=wy644368:intrv=20:rej=300:rcv=1000
```

This example shows how to set the linkset WY644368 so that no activity messages are produced.

```
set-gtwy-acthresh:lsn=wy644368:intrv=5:rej=0:rcv=0
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The Linkset table must be accessible.

2122 E2122 Cmd Rej: Failed reading linkset table

The linkset specified must exist in the gateway linkset entity set of the requesting system.

2928 E2928 Cmd Rej: The linkset specified is not a Gateway Linkset
The Extended Linkset table must be accessible.

2942 E2942 Cmd Rej: Failed reading/writing Extended Linkset Table
The linkset specified must exist in the active database.

2346 E2346 Cmd Rej: Linkset not defined
A valid value must be specified for the `intrvl` parameter.

2944 E2944 Cmd Rej: Invalid INTRVL value specified

Notes

None

Output

```
set-gtwy-acthresh:lsn=wy644368:rej=100:intrvl=15
```

```
rlghncxa03w 03-11-18 08:50:12 EST EAGLE 31.3.0  
SET-GTWY-TRSHLD: MASP A - COMPLTD  
;
```

Related Topics

- [rtv-gtwy-acthresh](#)

4.1.618 set-scrrej-prmtrs

Use this command to change the STP values that limit the display of MSUs rejected because of gateway screening notification messages that could become excessive. The new values overwrite the existing values.

Parameters

intrvl (mandatory)

Monitor interval. The examination period, in minutes, during which the gateway screening activity thresholds are to be tested.

Range:

5, 10, 15, 20, 30

System Default:

5

limit (mandatory)

Threshold not to be exceeded.

Range:

0 - 9999

System Default:

9999

Example

```
set-scrrej-prmtrs:limit=200:intrvl=10
```

Dependencies

The Extended STP Options table must be accessible.

2943 E2943 Cmd Rej: Failed reading/writing Extended STP Options Table

A valid value must be specified for the `intrvl` parameter.

2944 E2944 Cmd Rej: Invalid INTRVL value specified

Notes

None

Output

```
set-scrrej-prmtrs:limit=200:intrvl=10
```

```
rlghncxa03w 03-11-18 08:50:12 EST EAGLE 31.3.0
SET-SCRREJ-PRMTRS: MASP A - COMPLTD
;
```

Related Topics

- [rtrv-gtwy-acthresh](#)
- [rtrv-gtwy-prmtrs](#)
- [set-gtwy-acthresh](#)

4.1.619 set-time

Use this command to set the system clock. The clock is used to determine when measurements collection takes place as well as several other time-driven events.

Parameters**time (mandatory)**

The system time that is to be reflected on all reports and output messages.

Range:

0000 - 2359

hhmm where hh = 00-23 (hour) and mm =00-59(minute)

tz (optional)

The time zone

Range:

est, edt, cst, cdt, mst, mdt, pst, pdt, hst, hdt, ast, adt, gmt, wet, west, utc, bst, cet, cest, met, mest, fwt, fst, eet, eest, sast, msk, msd, ist, idt, cct, awst, awdt, rok, acst, acdt, aest, aedt, nzst, nzdt, akst, akdt, nst, ndt, bra

The time zones are described in [Table 4-56](#).

Default:

Current value

Abbreviation	Time Zone	Abbreviation	Time Zone
est	Eastern Standard Time	edt	Eastern Daylight Time
cst	Central Standard Time	cdt	Central Daylight Time
mst	Mountain Standard Time	mdt	Mountain Daylight Time
pst	Pacific Standard Time	pdt	Pacific Daylight Time
hst	Hawaiian Standard Time	hdt	Hawaiian Daylight Time
ast	Atlantic Standard Time	adt	Atlantic Daylight Time
gmt	Greenwich Mean Time	wet	Western European Time
west	Western European Summer Time	utc	Universal Time Coordinated
bst	British Summer Time	cet	Central European Time
cest	Central European Summer Time	met	Middle European Time
mest	Middle European Summer Time	fwt	French Winter Time
fst	French Summer Time	eet	Eastern European Time
eest	Eastern European Summer Time	sast	South African Standard Time
msk	Moscow Time	msd	Moscow Summer Time
ist	India Standard Time	idt	India Daylight Time
cct	China Coast Time	awst	Australian Western Standard Time

Abbreviation	Time Zone	Abbreviation	Time Zone
awdt	Australian Western Daylight Time	rok	Republic of Korea
acst	Australian Central Standard Time	acdt	Australian Central Daylight Time
aest	Australian Eastern Standard Time	aedt	Australian Eastern Daylight Time
nzst	New Zealand Standard Time	nzdt	New Zealand Daylight Time
akst	Alaska Standard Time	akdt	Alaska Daylight Time
nst	Newfoundland Standard Time	ndt	Newfoundland Daylight Time
bra	Brazil Standard Time		

Example

```
set-time:time=1432:tz=est
```

Dependencies

None

N/A N/A

The system time minutes value (the *mm* in the *hmmss* format) must be in the range 00-59.

2254 E2254 Cmd Rej: Minutes out of range

Notes

None

Output

```
set-time:time=1432:tz=est
```

```
rlghncxa03w 02-11-07 14:32:28 EST EAGLE 30.0.0
Time set complete.
```

```
;
```

Related Topics

- [set-date](#)

4.1.620 set-uim-acthresh

Use this command to set or change the level-of-activity threshold for reporting UIM messages. The system suppresses the generation of UIM messages when message

generation exceeds the threshold that was defined for the interval period. The values are set within five seconds after the command was entered. Any previous count is cleared and the new or changed threshold and limit is enforced. Refer to the *Database Administration Manual – System Management* for additional information.

Parameters

intrvl (mandatory)

The monitor interval in minutes.

Range:

5, 10, 15, 20, 25, 30

Default:

No change to the current value

uimn (mandatory)

The UIM number.

Range:

1000 - 1999

force (optional)

Required to set the `limit` parameter to 0 for a given interval.

 **Caution:**

Setting the limit to 0 turns off all occurrences of the specified UIM. Use this manner of creating thresholds only if you are certain you have specified the correct UIM.

Range:

yes

no

Default:

none

limit (optional)

The message threshold.

▲ Caution:

Setting the `limit` to 0 turns off all occurrences of the specified UIM. This can be dangerous if the wrong UIM number is specified by mistake. It is highly recommended that thresholds for UIMs are not set in this manner, but the ability is provided for certain extreme cases. The `force` parameter must be specified to specify `limit=0`, and an additional scroll area message is issued.

Range:

0 - 9999

Default:

No change to the current value

Example

This example sets UIM number 1333 threshold to 100 in a 5-minute interval:

```
set-uim-acthresh:uimn=1333:limit=100:intrvl=5
```

This example sets UIM number 1444 threshold to 200 in a 15-minute interval:

```
set-uim-acthresh:uimn=1444:limit=200:intrvl=15
```

Dependencies

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

A valid value must be specified for the `uimn` parameter.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

A valid value must be specified for the `limit` parameter.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

A valid value must be specified for the `intrvl` parameter.

2944 E2944 Cmd Rej: Invalid INTRVL value specified

The `force=yes` parameter must be specified before the `limit=0` parameter can be specified for a given interval. Specifying `limit=0` turns off all occurrences of the specified UIM. See the cautions under the `force` and `limit` parameters.

2371 E2371 Cmd Rej: Force parameter required

When creating a new UIM threshold, the `limit` and `intrvl` parameters must be specified.

3717 E3717 Cmd Rej: Both LIMIT and INTRVL must be specified

The specified `uimn` parameter value must exist in the system Trouble Text table.

3635 E3635 Cmd Rej: UIM number does not exist in STP Trouble Text Table

The UIM Threshold table is corrupt or cannot be found by the system.

3774 E3774 Cmd Rej: Failed reading the UIM Treshold Table

The system Trouble Text table is corrupt or cannot be found by the system.

3297 E3297 Cmd Rej: Failed reading trouble text table

Notes

None

Output

```
set-uim-acthresh:uimn=1333:limit=100:intrvl=5
```

```
rlghncxa03w 03-11-01 08:50:12 EST EAGLE 31.3.0
SET-UIM-ACTHRESH: MASP A - COMPLTD
```

```
;
```

Related Topics

- [dlt-uim-acthresh](#)
- [rtrv-uim-acthresh](#)

4.1.621 tst-bip

Use this command to test each byte of the specified board identification PROM (BIP) by reading and writing to the PROM. The test is performed for the main assembly.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118, 1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110, 1113, 1115

Example

```
tst-bip:loc=1211
```

Dependencies

The card location, frame, shelf, or slot must be within the allowed range.

2016 E2016 Cmd Rej: <parm_desc> is out of range - <parm>

The card location must be valid for the command.

2212 E2212 Cmd Rej: Invalid card type for this command

The card specified by the `loc` parameter must be equipped in the database.

2242 E2242 Cmd Rej: Destination card invalid

The card specified by the `loc` parameter must be in the OOS-MT-DSBLD state prior to BIP testing.

2603 E2603 Cmd Rej: Card must be inhibited before executing this command

Notes

The specified card must be inhibited.

This command verifies that the PROM is good by writing and reading to the PROM. The `rtrv-bip` command show the level of the BIP, as well as the board part number, the revision number, and the serial number. If the `rtrv-bip` command fails, this indicates that communications to the card has failed, and the card should be replaced.

Output

```
tst-bip:loc=1211
```

```
tekelecstp 10-02-20 17:10:32 CST EAGLE 42.0.0
Test Board Identification PROM Location: 1211 - MBD Packet: 1
-----
BIP Passed
```

```
;
```

Related Topics

- [chg-bip-fld](#)
- [chg-bip-rec](#)
- [rtrv-bip](#)

4.1.622 tst-disk

Use this command prior to an upgrade, or as a diagnostic tool, to test the integrity of an EAGLE fixed drive or removable media drive, at the specified location. The test is non-intrusive and non-destructive to the disk. A read-only test is executed for all logical blocks (LBAs) used on the specified target disk and a report identifying any bad or questionable LBAs is output.

Parameters

loc (mandatory)

The location of the disk to be tested.

Range:

1114
TDM

1116
TDM

1113

Latched USB port

1115

Latched USB port

disk (optional)

The disk that is being tested

Range:***remove***

The removable drive

fixed

The fixed drive

usb

The flush-mounted (not-latched) USB port on the MASP card.

partition (optional)

Portion of disk to be tested. This parameter specifies the individual physical disk partition (1, 2, 3, or 4) or all defined partitions for a given disk size up to a maximum of 4 partitions.

Range:

1, 2, 3, 4 —Tests the specified existing partition on the disk. Only the number or numbers for the partition or partitions that exist on the disk are valid. (For example, if the disk size allows only 2 partitions, *partition=3* and *partition=4* are invalid for that disk.)

all —Tests all existing partitions on the fixed disk or removable drive

Default:*all***Example**

```
tst-disk:loc=1116
```

Dependencies

The card in the specified location (*loc*) must be an E5-TDM or E5-MCAP card.

2025 E2025 Cmd Rej: Invalid card location

The disk to be tested must be in service.

N/A N/A

If a TDM location is specified, the TDM cannot be reserved (as when a copy-disk command is running).

N/A N/A

The target drive must have low level format.

N/A N/A

This command can be run simultaneously on both TDMs, if entered from different terminals.

N/A N/A

The removable drive can be tested simultaneously with the standby TDM but not with the active TDM.

N/A N/A

To test the Removable drive when `loc=1113/1115:disk=remove/usb`, the removable media must be inserted in the corresponding removable drive.

2165 E2165 Cmd Rej: Removable drive not inserted

The `partition=3` and `partition=4` values are invalid for a 4GB fixed drive. The only valid value for the 2.3 GB and 4.1 GB removable disks is `partition=1`

An error message will be generated for a disk that has been Formatted (`format-disk` command) but does not yet contain a DOS directory structure (created with the `copy-disk` command) when the `partition=` parameter is specified.

2369 E2369 Cmd Rej: Partition specified invalid for target disk

This command cannot be entered when other database commands are running.

3200 E3200 Cmd Rej: TST-DISK command prevented

If an E5-TDM card is installed, then the `disk=fixed` parameter cannot be specified.

3202 E3202 Cmd Rej: TST-DISK not allowed on Active TDM

The disk to be tested must be available.

4652 E4652 Cmd Rej: Error while reserving disk

4653 E4653 Cmd Rej: Could not reserve disk

4654 E4654 Cmd Rej: Error issuing TST-DISK request

Notes

A physical fixed disk (TDM) or removable drive is formatted and given a DOS directory structure to define the number of physical partitions that the disk size can accommodate. (The logical partitions that contain database, backup, GPL, and measurements files are placed in these physical partitions, with no correlation between the physical numbers and the logical contents.)

For a fixed TDM disk, the `partition` parameter specifies the individual partition (1, 2, 3, or 4) or all existing partitions to be tested.

- One partition = 2 GB.
- The 4 GB drive contains two 2 GB partitions.
- The 9 GB drive and the 18 GB drive each contain four 2 GB partitions.
- The 9 GB drive contains four 2 GB partitions.
- Any disk space beyond the four 2 GB partitions is unused disk space (and always has been due to EAGLE DISK FAT structure used).

The `partition=all` parameter implies that testing starts with the first partition, then second, and so on, until the last existing disk partition is detected without skipping any non-existing or defined partitions.

Table 4-57 outlines execution time estimates based on disk capacity.

Table 4-57 Test Disk Execution Times

Capacity	Nominal Execution Time	Maximum Execution Time for 100% Errors
4.0 GB	40 minutes	27.5 hours
9.0 GB	1 hour 45 minutes	(Not determined)
18 GB	30 minutes (partition=1) 5 hours (partition=disk) depending on amount of disk tested and EAGLE provisioning/activity	(Not determined)
507 MB	5 minutes	3.4 hours
2.0 GB	20 minutes	13.5 hours
4.0 GB	40 minutes	27.5 hours
Removable Drive	30 seconds	Less than 1 minute

Nominal times for `tst-disk` command execution depend on the capacity of the disk being tested and assume that few or no errors are found. Maximum execution times are based on disk capacity, retry count, and retry delay. Each read error and retry may cause a delay of up to three seconds. If a TDM has 100% error sectors, the MASP will likely reset, terminating the disk test. A termination and reset will not occur, however, when testing the removable media.

Because of the intense, sustained disk activity created when `tst-disk` is executed, concurrently performing other disk-based activities, such as prolonged LNP command entry or database backups, will result in performance degradation up to twice the usual execution time.

Because of the extended processing time required for large disks, a progress message is displayed every five minutes providing the current LBA and the total LBA count for the partition.

Specific errors are reported for the first 10 error occurrences. Thereafter, only the error count is tracked and summary results are reported upon completion.

Output

```
tst-disk:loc=1116
```

```

rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
TST-DISK of all partitions initiated for TDM 1116
;

rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
TST-DISK: TDM 1116 in progress 868680 of 4124735 LBA read
;

rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
TST-DISK Error: TDM 1116 LBA range 4124706 - 4124960
```

```

Check Condition: DISK_NOT_READY
TST-DISK results for TDM 1116
Total LBAs = 4124735    LBA size = 512
Retries    = 1    Errors    = 1
Command Completed
;

tst-disk:loc=1116:partition=2

rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
TST-DISK on Partition 2 initiated for TDM 1116
;

rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
TST-DISK: TDM 1116 in progress 1234567 of 4194304 LBA read
;

rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
TST-DISK Error: TDM 1116 LBA range 4194304 - 4194558
                (NOTE: w/i 2nd disk partition)
    Check Condition: DISK_NOT_READY
TST-DISK results for TDM 1116
Total LBAs = 4194304    LBA size = 512
Retries    = 1    Errors    = 1
Command Completed
;

```

Related Topics

- [copy-disk](#)

4.1.623 tst-dlk

Use this command to test the specified TCP/IP data link. The TCP/IP data link is tested with an ethernet test that is an echo test type called ping.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

type (mandatory)

The type of test to run.

Range:*ping***ipaddr (optional)**

The IP address of the remote host. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is *192.126.100.5*, where *192.126.100* is the network number and *5* is the machine's host number.

Range:*1-223, 0-255*

4 numbers separated by dots

1-223-first number*0-255*-the other 3 numbers**Default:**

Host IP

rc (optional)

The number of times the test is repeated.

Range:*1 - 15***Default:***1***Example**

```
tst-dlk: loc=1206:type=ping
```

Dependencies

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The shelf and card must be equipped.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The specified card must have a TCP/IP data link assigned to it.

2373 E2373 Cmd Rej: Link is unequipped in the database

If a test repeat count (*rc*) is not entered, the test is not repeated.

N/A N/A

If a data link test is in progress, another data link test cannot be started.

N/A N/A

The card location, frame, shelf, or slot must be within the allowed range.

2016 E2016 Cmd Rej: <parm_desc> is out of range - <parm>

A card location that is valid and defined in the database must be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

The `ipaddr` parameter must specify a valid IP address.

2704 E2704 Cmd Rej: Invalid IPADDR

Notes

None

Output

```
tst-dlk:loc=1206:type=ping
```

```
rlghncxa03w 03-11-27 17:00:36 EST EAGLE 31.3.0  
Command Accepted: Test Link message is sent.
```

```
rlghncxa03w 03-11-27 17:00:36 EST EAGLE 31.3.0  
Command Completed.
```

```
rlghncxa03w 03-11-27 17:00:36 EST EAGLE 31.3.0  
1310.1132 CARD 1206 INFO DLK ping test completed  
TESTS REQUESTED= 1 PASSED COUNT= 1 FAILED COUNT= 0  
AVR RND TRIP= 10 MAX RND TRIP=10 MIN RND TRIP=10  
HOST IPADDR=198.089.040.069
```

;

Related Topics

- [act-dlk](#)
- [canc-dlk](#)
- [dlt-dlk](#)
- [ent-dlk](#)
- [rept-stat-dlk](#)
- [rtrv-dlk](#)

4.1.624 tst-e1

Use this command to test E1 ports. The command is rejected if a loopback test is not compatible with the port type. This command can be used with E5-E1T1-B cards.

Parameters

e1port (mandatory)

E1 port number. The value must be an E1 port that has already been configured with an E1 interface on the specified card.

Range:

1 - 8

loc (mandatory)

Card location. The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

action (optional)

Indicator of command action to stop or start a test.

Range:

start

stop

Default:

start

loopback (optional)

Select loopback test type.

Range:

line

lxvr

local transceiver

payload

Default:

lxvr

Example

```
tst-e1:elport=1:loc=1203:loopback=lxvr
```

```
tst-e1:elport=1:loc=1203:action=stop
```

Dependencies

This command cannot be entered during upgrade.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

The value specified for the `loc` parameter must indicate an E5-E1T1-B card with card type LIME1.

2212 E2212 Cmd Rej: Invalid card type for this command

The card in the specified card location (`loc` parameter) must be equipped.

4076 E4076 Cmd Rej: E1 card location is unequipped

The card in the specified card location (`loc` parameter) must be in service.

2387 E2387 Cmd Rej: Card is not in service

The specified E1 port (`e1port` parameter) on the card (`loc` parameter) must have a defined E1 interface.

4055 E4055 Cmd Rej: The E1PORT at the specified location is not equipped

All signaling links that provide timeslots serviced by E1 interfaces on the specified card must be deactivated before this command can be entered. None of the signaling links can be running link diagnostic tests (`tst-slk` and `act-cdl`) when this command is entered.

4048 E4048 Cmd Rej: All signaling links serviced by the E1 must be deactivated

Only one port test can be running on an E1 port (`e1port` parameter) at one time.

3534 E3534 Cmd Rej: E1 Port test command in progress

When the `action=stop` parameter is specified, the `loopback` parameter cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

The E1/T1 table must be accessible.

4059 E4059 Cmd Rej: Failed reading the E1/T1 table

The `action=stop` parameter can be specified only when a port test is running.

3535 E3535 Cmd Rej: E1 Port test command not in progress

Notes

Only one port test can be performed at a time on an E1 port. When a port test is in progress on an E1 port, subsequent test requests are rejected.

Output

```
tst-e1:e1port=1:loc=1203:loopback=lxvr
```

```

rlghncxa03w 05-01-07 16:19:08 EST  EAGLE5 33.0.0
Command Accepted: Test Port message is sent.
;
rlghncxa03w 05-01-07 16:19:08 EST  EAGLE5 33.0.0
Command Completed.
;

```

```
tst-e1:e1port=1:loc=1203:action=stop
```

```

rlghncxa03w 05-01-07 16:19:08 EST  EAGLE5 33.0.0
Command Accepted: Stop Port test message is sent.
;
rlghncxa03w 05-01-07 16:19:08 EST  EAGLE5 33.0.0
Command Completed.
;

```

Related Topics

- [chg-e1](#)

- [dlt-e1](#)
- [ent-e1](#)
- [rtrv-e1](#)

4.1.625 tst-imt

Use this command to:

- Perform a Fault Isolation test to determine the location of faults on a failed or abnormal IMT bus. The Alternate Bus must be in the IS-NR state. The Target Bus must be in the OOS-MT-DSBLD state.
- Perform an Extended Bit Error Rate Test (BERT) on all IMT Buses. The Target Bus must be in the IS-NR or IS-ANR state. The Alternate Bus must be in the IS-NR state.
- Cancel an Extended BERT

Note:

At least one card must be populated in each EAGLE extension shelf provisioned as ent-shlf:type=EXT to allow the command to successfully execute a Fault Isolation Test. See the "Notes" section for this command for more information about executing the command.

Note:

No physical status change can be made to the IMT Bus (e.g., unplugging MUX cards) while an Extended BERT is running.

Parameters

type (mandatory)

The type of test to perform.

Range:

faulttest

perform a Fault Isolation test

extbert

perform an Extended BERT on all MUX cards on an IMT Bus

action (optional)

Indicator of command action to stop or start a test.

Currently, only the cancellation of an Extended BERT is supported by this parameter.

Range:

start

stop**Default:***start***bus (optional)**

IMT bus to test.

Range:*a**b***maxerr (optional)**

The number of errors allowed for the period during which an Extended BERT is being performed.

**Note:**

This value is the Bit error threshold.

Range:*0 - 1000***Default:***20***time (optional)**

The time, in minutes, for which an Extended BERT runs in order to determine success or failure.

Range:*1 - 60***Example**

```
tst-imt:bus=a:type=faulttest
tst-imt:bus=b:type=extbert:time=50
tst-imt:bus=b:type=extbert:time=50:maxerr=30
tst-imt:bus=a:type=extbert:action=stop
```

Dependencies

Valid IMT bus entries are "A" or "B".

2247 E2247 Cmd Rej: Bus parameter invalid

A related IMT command cannot be in progress. Only one Fault Isolation Test or Extended BERT can be active at a time.

An Extended BERT cannot be performed if the `init-sys`, `act-upgrade`, `init-flash`, `act-flash`, `init-network`, `flash-card`, or `init-card` (when initializing multiple cards using the `appl` parameter) commands are running.

2368 E2368 Cmd Rej: System busy - try again later

This command cannot be entered if the alternate bus is other than in-service normal (IS-NR).

3045 E3045 Cmd Rej: Alternate bus must be IS-NR

The target bus must be in the out of service - maintenance disabled (OOS-MT-DSBLD) state before this command can be entered for a Fault Isolation test.

3046 E3046 Cmd Rej: Target bus must be inhibited

This command cannot be entered during the IMT statistics collection period following an hourly boundary (IMT performance monitoring).

3052 E3052 Cmd Rej: IMT statistics collection in progress - Repeat later

The target bus must be in the in-service normal (IS-NR) or in-service abnormal (IS-ANR) state before this command can be entered for an Extended BERT.

5188 E5188 Cmd Rej: Target bus must be IS-NR or IS-ANR

If the `type=extbert` parameter is specified, then the `time` parameter must be specified.

5189 E5189 Cmd Rej: TIME parameter is required

If the `type=faultttest` parameter is specified, then the `time`, `maxerr`, and `action` parameters cannot be specified.

If the `action=stop` parameter is specified for an extended BERT, then the `time` and `maxerr` parameters cannot be specified.

3047 E3047 Cmd Rej: Parameter combination invalid

This command cannot be entered for an Extended BERT, if the target bus contains HMUX or HIPR cards.

4765 E4765 Cmd Rej: Obsolete MUX cards detected in the system

The `action=stop` parameter cannot be specified until an Extended BERT acknowledgment from a MUX card is received.

5252 E5252 Cmd Rej: Waiting for Extended BERT to start - retry later

If an Extended BERT is about to complete, then the `action=stop` parameter cannot be specified.

5253 E5253 Cmd Rej: Extended BERT is completing, can not be stopped

If an Extended BERT is not in progress, then the `action=stop` parameter cannot be specified.

5254 E5254 Cmd Rej: Extended BERT is not in progress

Notes

Fault Isolation Test

Probable causes are listed in order of most probable to least probable. The listed components should be replaced in order listed by the output of this command.

Multiple, masking points of failure can occur in the same bus segment. Such faults are reported as a single bus segment fault. Because running this command on a system with no IMT bus faults prints an indication that no faults were found, you can iteratively replace components and run this test until all components in the segment are ruled out.

A detection of an IMT address mismatch indicates a faulty backplane or card.

A detection of an inconsistency with a particular card's IMT card list indicates an error of unknown origin, probably due to one or more lost messages.

When this command completes, either through normal termination of the command or because the command was ended for another reason, you must administratively enable the target bus. If all faults have meanwhile been isolated and corrected, the target bus becomes operational.

When a fault is detected, the possible error sources are listed in order from the most likely to the least likely. This ordering is based on operational experience.

At least one card must be populated in each EAGLE extension shelf provisioned as `ent-shlf:type=EXT` to allow this command to execute successfully. The card does not need to be a provisioned card; the card must be in IS-NR state on both IMT busses before this command is entered. If an empty shelf that is provisioned as `ent-shlf:type = EXT` or an un-provisioned shelf that is IMT enabled does exist, the following text is displayed when this command is entered:

Notice: IMT Fault test terminated.

Non-Standard cabling or IMT Bus-X state change detected.

Extended BERT

This command for an Extended BERT allows a BERT to be executed for a longer period of time during installation to verify there are no signal integrity issues. The standard BERT is used as a basic sanity test during bring-up of the ring.

When an Extended BERT is started, the target bus is inhibited. The bus is allowed when the test completes either through normal termination of the command or because the command was ended for another reason.

When the Extended BERT completes, the output is generated as a maintenance report indicating the test passed or failed. An error rate less than or equal to 1 error in 10E12 bits determines whether the test passed.

The `maxerr` parameter allows the Extended BERT to be performed for the longer duration even if the test fails for any of the MUX cards.

An on-going Extended BERT can be cancelled with the `action=stop` parameter.

Hourly report generation is not allowed if the request comes during an Extended BERT. Notification of the hourly boundary is multicast to all IMT processors to age out the least-recent error bucket and advance the current error bucket. The following notice is displayed if the Hourly report is bypassed during Extended BERT:

Extended BERT: Hourly Report is bypassed

One of the following notices is displayed if an Extended BERT terminates prematurely:

- *Extended BERT: Test aborted, Loss of Heartbeat*—Failure observed for the Extended BERT Heartbeat communication maintained between the Active OAM and the Control shelf MUX card.

- *Extended BERT: Test aborted, Alternate IMT Bus [A|B] abnormal*—Alternate IMT Bus becomes abnormal.
- *Extended BERT: Test terminated, Command cancelled*—Test is cancelled using `tst-imt` command with `action=stop`.
- *Extended BERT: Error in results retrieval, HIPR2 card(s) failure*—Extended BERT results are not displayed if an error is encountered during results retrieval from HIPR2 card.
- *Extended BERT: Active MASP failed to disconnect on IMT Bus [A|B]*—Active MASP did not disconnect on the IMT Bus undergoing Extended BERT.
- *Extended BERT: Active MASP failed to reconnect on IMT Bus [A|B]*—Active MASP did not reconnect on the IMT Bus undergoing Extended BERT.
- *Extended BERT: ACK for Extended BERT not received from IMT Bus [A|B]*—The acknowledgement for an Extended BERT is not received from MUX card.
- *Extended BERT: Test aborted, Card failure detected at X location*—Failure detected on a card due to both IMT Buses becoming unavailable.

Output

This example shows the output when the Connectivity test fails for the Fault Isolation test:

```
tst-imt:bus=a:type=faultttest

rlghncxa03w 09-12-07 12:47:07 EST EAGLE 42.0.0
IMT Fault Isolation Bus A
Fault Location    Probable Cause  Failure(s)
Bus 1218-1301    HIPR2 1209
                   HIPR2 1309
                   Card 1218
                   Card 1301
                   Cable connecting Shelves 1200 and 1300 on Bus A
                   Backplane 1200
                   Backplane 1300
                                     Connectivity Test Failed
Bus 1304-1305    HIPR2 1309
                   Card 1304
                   Card 1305
                   Backplane 1300
                                     Connectivity Test Failed
;
```

This example shows the output when the Pass-through test fails for the Fault Isolation test:

```
tst-imt:bus=a:type=faultttest

rlghncxa03w 09-12-07 12:47:07 EST EAGLE 42.0.0
IMT Fault Isolation Bus B
Fault Location    Probable Cause  Failure(s)
Card 1201         Card 1201
```

```

Card 1301          Card 1301          Pass-through Test Failed
Card 1301          Card 1301          Pass-through Test Failed
;

```

This example shows the output when all tests pass for Fault Isolation test:

```

tst-imt:bus=b:type=faultttest

rlghncxa03w 09-12-07 12:47:07 EST  EAGLE 42.0.0
IMT Fault Isolation Bus B
Fault Location    Probable Cause  Failure(s)
No Faults Found

All Tests Passed.
;

```

This example shows the output when the Extended BERT fails for the HIPR2 cards at locations 1109 and 1309: however, the test continues for 20 minutes because none of the HIPR2 cards exceed the threshold:

```

tst-imt:bus=a:type=extbert:time=20:maxerr=20

rlghncxa03w 09-12-09 12:47:07 EST  EAGLE 42.0.0
Extended Bit Error Rate Test Bus A
MAX ERROR = 20    TIME = 00:20:00    START TIME = 11:10:34
TEST STATUS = FAIL

CARD  TYPE      SERIAL_NUMBER  BERT_STATUS  BIT_ERROR  ERRORED_SEC
DURATION
1109  HIPR2      10208345027   FAIL         5          2
00:20:00
1209  HIPR2      10208345047   PASS         2          8
00:20:00
1309  HIPR2      10208345053   FAIL         19         15
00:20:00
;

```

This example shows the output when the test passes for all HIPR2 cards but the BERT terminates prematurely because the HIPR2 card at 1109 reaches the error threshold:

```

tst-imt:bus=a:type=extbert:time=20:maxerr=1

rlghncxa03w 09-12-09 12:47:07 EST  EAGLE 42.0.0
Extended Bit Error Rate Test Bus A
MAX ERROR = 1    TIME = 00:20:00    START TIME = 11:10:34
TEST STATUS = PASS

CARD  TYPE      SERIAL_NUMBER  BERT_STATUS  BIT_ERROR  ERRORED_SEC
DURATION
1109  HIPR2      10208345027   PASS         2          1
00:10:00

```

```

    1209 HIPR2      10208345047    PASS      1        1
00:10:01
    1309 HIPR2      10208345053    PASS      0        0
00:10:01
;

```

This example shows the output when the BERT passes for all HIPR2 cards:

```
tst-imt:bus=b:type=extbert:time=60:maxerr=30
```

```

rlghncxa03w 09-12-09 12:47:07 EST  EAGLE 42.0.0
Extended Bit Error Rate Test Bus B
MAX ERROR = 30    TIME = 01:00:00    START TIME = 12:10:30
TEST STATUS = PASS

```

	CARD	TYPE	SERIAL_NUMBER	BERT_STATUS	BIT_ERROR	ERRORED_SEC
DURATION						
01:00:00	1110	HIPR2	10208345012	PASS	3	2
01:00:00	1210	HIPR2	10208345031	PASS	2	1
01:00:00	1310	HIPR2	10208345052	PASS	5	3

```

;

```

This example shows the output when the Extended BERT is cancelled for Bus A:

```
tst-imt:bus=a:type=extbert:action=stop
```

```

rlghncxa03w 09-12-09 16:02:05 EST  EAGLE5 42.0.0
Extended BERT: Test terminated, Command cancelled

```

```
;
```

Legend

- **MAX ERROR**—Bit error threshold. The number of errors allowed for the specific time period during which the BERT is being performed. If this threshold is exceeded in the specified time period, the Extended BERT is prematurely terminated.
- **TIME**—Specified length of time (*hr:min:sec*) to run the test in order to determine success or failure
- **START TIME**—Time at which the test was started (*hr:min:sec*)
- **TEST STATUS**—PASS if the BERT Status is PASS for all the MUX cards, FAIL otherwise
- **CARD**—MUX Card location that contains the BERT being tested
- **TYPE**—MUX Card type
- **SERIAL_NUMBER**—Serial number of the main assembly board of the MUX card obtained from board identification PROM (BIP) data
- **BERT_STATUS**—Extended BERT PASS/FAIL status

- **BIT_ERROR**—Number of bit errors observed during the test
- **ERRORED_SEC**—Number of seconds that contained bit errors during the test. Bit errors are sampled once per second; each sample that contains bit errors adds one second to this count.
- **DURATION**—Length of time (*hr:min:sec*) that the test runs for the BERT. For a successful test, the TIME and DURATION should be the same. If a test runs for less than the specified amount of time, the DURATION is less than the TIME.

Related Topics

- [clr-imt-stats](#)
- [init-imt-gpl](#)
- [rept-imt-lvl1](#)
- [rept-imt-lvl2](#)

4.1.626 tst-j1

Use this command to test J1 ports. The command is rejected if a loopback test is not compatible with the port type.



Note:

This command can be entered for E5-E1T1-B cards.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Default:

All T1 card locations having J1 interfaces configured are listed.

action (optional)

Indicator of command action to stop or start a test.

Range:

start

stop

Default:

start

loopback (optional)

Select loopback test type.

Range:

line

lxvr

local transceiver

payload

feline

far end line

far end payload

far end payload

Default:

line

j1port (optional)

J1 port number. The value must be a J1 port that has already been configured with a J1 interface on the specified card.

Range:

1-8

Example

```
tst-j1:j1port=1:loc=1102:action=stop
```

Dependencies

This command cannot be entered during upgrade.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

The value specified for the `loc` parameter must indicate an E5-E1T1-B card with card type LIMT1.

2212 E2212 Cmd Rej: Invalid card type for this command

The card in the location specified by the `loc` parameter must be equipped.

3136 E3136 Cmd Rej: J1 card location is unequipped

The card in the location specified by the `loc` parameter must be in service.

2387 E2387 Cmd Rej: Card is not in service

The J1 port specified by the `j1port` parameter must have a defined J1 interface.

3128 E3128 Cmd Rej: The J1PORT at the specified location is not equipped

All signaling links that provide timeslots serviced by J1 interfaces on the specified card must be deactivated before this command can be entered. None of the signaling links can be running link diagnostic tests (`tst-slk` and `act-cdl` commands) when this command is entered.

3151 E3151 Cmd Rej: All signaling links serviced by the J1 must be deactivated

Only one port test can be running on the J1 port specified by the j1port parameter at one time.

3144 E3144 Cmd Rej: J1 Port test command in progress

The J1 table must be accessible.

3164 E3164 Cmd Rej: Failed reading the J1 table

The action=stop parameter can be specified only when a port test is running.

3141 E3141 Cmd Rej: J1 Port test command not in progress

If the action=stop parameter is specified, a value of feline or fepayload must be specified for the loopback parameter.

2908 E2908 Cmd Rej: LOOPBACK param needed for FELINE or FEPAYLOAD exclusively

If the action=stop parameter is specified, and a value of feline or fepayload is specified for the loopback parameter, then there cannot be an active loopback for the T1 span, or the active loopback must be the one specified in the tst-t1:action=stop command.

2913 E2913 Cmd Rej: STOP Loopback type must match active loopback

Notes

Only one port test can be performed at a time on a J1 port. When a port test is in progress on a J1 port, subsequent test requests are rejected.

If a loopback type of feline or fepayload is specified, then the loopback requests are sent to the far end. No response is given from the far end indicate if the request was acted upon or received. The local card which hosts the J1 span in the EAGLE does not instrument the loopback locally but maintains a knowledge of the far end loopback request. If the local card boots, this knowledge is lost by the card.

To maintain the far end loopback states, if the J1 card with an active feline or fepayload test boots, the card loses any knowledge of the Far End loopback request, but the OAM retains that knowledge. If the OAM boots, the J1 card updates the OAM with its last known loopback state. If both the J1 card and the active OAM card boots while a Far End Loopback is active, then there is no way of determining the J1 state; however, a `tst-j1:action=stop:action=(feline or fepayload)` command can still be sent.

Output

```
tst-j1:j1port=1:loc=1102:action=stop
```

```
tekelecstp 13-12-19 19:02:51 EST 46.0.0-65.3.0
Command Accepted: Stop Port test message is sent.
;
tekelecstp 13-12-19 19:02:51 EST 46.0.0-65.3.0
Command Completed.
;
```

Related Topics

- [chg-j1](#)
- [dlt-j1](#)

- ent-j1
- rtrv-j1

4.1.627 tst-msg

Use this command to invoke the Test Tool to test the feature call flow for the specified test message from the TESTMSG table.

The command sends the specified message from the TESTMSG table to an EAGLE feature. The test message that is sent does not create a new raw MSU. The test message is used only to modify the internal data structures of the Feature to study the call flow behavior when a message with the specified parameters is injected into the call path. The test message is never sent out to the network.

Parameters

feat (mandatory)

Feature. The Service Feature where the message is processed on the network card.

Range:

ttr

Service Feature for processing Prepaid IDP Query Relay test messages

tif

Service Feature for processing ISUP test messages when the provisioned Gateway Screening Stop Action is TIF.

tif2

Service Feature for processing ISUP test messages when the provisioned Gateway Screening Stop Action is TIF2.

tif3

Service Feature for processing ISUP test messages when the provisioned Gateway Screening Stop Action is TIF3.

mosmsnpp

Service Feature for processing MO SMS NPP test messages

gtt

Service feature for processing GTT test messages.

iar

Service Feature for processing IAR test messages

loc (mandatory)

Card location. The location of the network card where the message is to be sent.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

msgn (mandatory)

Message number. The message number of the test message to be sent for feature service processing.

Range:

1 - 10

prot (mandatory)

Protocol. The protocol of the test message that is sent to the feature for processing.

Range:

ttr

isup

is41

gsm

sccp

tatr

mode (optional)

Output mode. The mode in which output is shown while processing is performed on the specified test message.

**Note:**

The most complete and accurate test results are obtained when `mode=debug` is used.

Range:

brief

summary format

full

full format

debug

debug format

Default:

brief

Example

```
tst-msg:loc=1103:prot=is41:feat=mosmsnpp:msgn=1:mode=full
```

```
tst-msg:loc=1103:prot=ttr:feat=ttr:msgn=1:mode=full
```

```
tst-msg:loc=1103:prot=gsm:feat=mosmsnpp:msgn=1:mode=debug
```

```
tst-msg:msgn=1:prot=isup:loc=1215:feat=tif:mode=debug
```

```
tst-msg:loc=1103:prot=sccp:feat=gtt:msgn=1
```

Dependencies

The Prepaid IDP Query Relay feature must be enabled before the `feat=ttr` parameter can be specified.

4498 E4498 Cmd Rej: The Prepaid IDP Query Relay feature must be enabled

The card in the location that is specified in the `loc` parameter must be equipped in the system.

2101 E2101 Cmd Rej: Card location is unequipped

The value specified for the `loc` parameter must indicate a Service Module card running the VSCCP application.

4258 E4258 Cmd Rej: Target card is not a DSM card with VSCCP appl

The card in the location specified in the `loc` parameter must be in the Active state.

4259 E4259 Cmd Rej: Target card is not in Active state

The values specified for the `prot` and `feat` parameters must be compatible as shown:

- `feat=ttr` — `prot=ttr`
- `feat=iar` — `prot=tatr`
- `feat=tif, tif2, tif3` — `prot=isup`
- `feat=mosmsnpp` — `prot=gsm, is41`
- `feat=gtt` — `prot=sccp`

4949 E4949 Cmd Rej: TESTMSG protocol does not match with the FEAT specified

If the specified test message is defined with `ACTIVE=YES` (see the `chg-isup-msg` command), then the message is sent to the specified network card for test processing. (Test messages are never sent out to the live network.)

4952 E4952 Cmd Rej: Only msg with `ACTIVE=YES` shall be sent to the Feature

The TSTMSG table is corrupt or cannot be found.

4819 E4819 Cmd Rej: Failure reading TSTMSG Table

The MO SMS ASD, MO SMS GRN, MO SMS IS41-to-GSM Migration, or MO-based IS1 SMS NP feature must be enabled before the `feat=mosmsnpp` and `prot=is41` parameters can be specified.

5002 E5002 Cmd Rej: MOSMS IS41 features must be enabled

The MO SMS ASD, MO SMS GRN, Prepaid SMS Intercept Ph1, MO-based GSM SMS NP, or Portability Check for MO SMS feature must be enabled before the `feat=mosmsnpp` and `prot=gsm` parameters can be specified.

5003 E5003 Cmd Rej: MOSMS GSM features must be enabled

At least one TIF feature must be enabled before a value of `tif, tif2, or tif3` can be specified for the `feat` parameter.

4982 E4982 Cmd Rej: At least one TIF feature must be enabled

For an ANSI message, the CDPA GTI must be 2 and the CGPA GTI must be 0 or 2 (see the `chg-sccp-msg` command). For an ITU message, the CDPA GTI must be 2 or 4 and the CGPA GTI must be 0, 2, or 4.

3553 E3553 Cmd Rej: GTI(A)=4, and GTI(x)=1 and 3 are not supported

The linkset specified by the `lsn` parameter must already exist.

2346 E2346 Cmd Rej: Linkset not defined

The network domain of the values specified for the OPC, CGPA PC, CDPA PC and DPC must match.

5147 E5147 Cmd Rej: OPC/CGPC/CDPC/DPC Network Domain must match

The IAR Base feature must be enabled before the `feat=iar` parameter can be specified.

5150 E5150 Cmd Rej: Info Analyzed Relay Base feature must be enabled

Notes

The `tst-msg` output for `feat=gtt` with `mode=full` and `debug` will be the same.

Output

When the `mode=full` or `mode=debug` parameter is specified, the `FORMAT` field indicates whether formatting actions are executed. If formatting actions are not executed, then the `OUTG DIGITS` field displays a value of `UNMODIFIED`. If any digit string is blank, then the associated field displays a value of `EMPTY`.

This example shows the output in brief format:

```
tst-msg:feat=ttr:prot=ttr:msgn=1:mode=brief
```

```
tekelecstp 09-08-05 18:20:46 EST EAGLE 41.1.0
tst-msg:feat=ttr:prot=ttr:msgn=1:mode=brief
Command Accepted: Test message is sent.
;
```

```
TST-MSG-RESULT
=====
MSG = 1          TCAP_TYPE = INAP

SCCP
CGPA_GT = 2
CGPA_GT_NAI = 4      CGPA = 9111111111
CDPA_GT = 2
CDPA_GT_NAI = 4      CDPA = 9818555001

TCAP
SK = 6balb1c1      BCSM = 02
CGPN_NAI = 4      CGPN = 919818000005
CDPN_NAI = 4      CDPN = 919818000001

CDPN NPP PROCESSING
```

```

SERVICE NAME = idprcdpn SERVICE STATUS = ON
  INC DIGITS = 919818000001
  NAI = 4 FNAI = intl FDL = 12

MATCHING RULE
  FNAI = intl FDL = * FPFX = *
  ACTION SET NAME = cdpnintl

CONDITIONING RESULT
  INC DIGITS = 919818000001
  COND DIGITS = 919818000001

FORMATING RESULT
  OUTG DIGITS = 00910123459818000001
  OUTG FNAI = intl
;

tekelecstp 09-08-05 18:20:46 EST EAGLE 41.1.0

CGPN NPP PROCESSING

SERVICE NAME = idprcgpn SERVICE STATUS = ON
  INC DIGITS = 919818000005
  NAI = 4 FNAI = intl FDL = 12

MATCHING RULE
  FNAI = intl FDL = 12 FPFX = *
  ACTION SET NAME = cgpn1

CONDITIONING RESULT
  INC DIGITS = 919818000005
  COND DIGITS = 919818000005

FORMATING RESULT
  OUTG DIGITS = 00915432109818000005
  OUTG FNAI = intl
;

```

This example shows the output in full format:

```

tst-msg:feat=ttr:prot=ttr:msgn=1:mode=full

tekelecstp 09-08-05 18:20:46 EST EAGLE 41.1.0
tst-msg:feat=ttr:prot=ttr:msgn=1:mode=full
Command Accepted: Test message is sent.
;

TST-MSG-RESULT
=====

MSG = 1          TCAP_TYPE = INAP

SCCP
CGPA_GT = 2

```



```
CGPA_GT_NAI = 4      CGPA = 9111111111
CDPA_GT = 2
CDPA_GT_NAI = 4      CDPA = 9818555001
```

TCAP

```
SK = 6ba1b1c1      BCSM = 02
CGPN_NAI = 4        CGPN = 919818000005
CDPN_NAI = 4        CDPN = 919818000001
```

CDPN NPP PROCESSING

```
SERVICE NAME = idprcdpn SERVICE STATUS = ON
INC DIGITS = 919818000001
NAI = 4 FNAI = intl FDL = 12
```

MATCHING RULE

```
FNAI = intl FDL = * FPFX = *
ACTION SET NAME = cdpnintl
```

CONDITIONING RESULT

```
CA1 = cc2          EXECUTED = Y RESULT = PASS
CA2 = ac2          EXECUTED = Y RESULT = PASS
CA3 = snx          EXECUTED = Y RESULT = PASS
INC DIGITS = 919818000001
COND DIGITS = 919818000001
```

SERVICE APPLICATION

```
SA1 = ccncchk     EXECUTED = Y FORMAT = Y
SA2 = cdpnp       EXECUTED = Y FORMAT = Y
SA3 = cgpnpqrqd  EXECUTED = Y FORMAT = Y
```

FORMATING RESULT

```
FA1 = dlma        EXECUTED = Y RESULT = PASS
FA2 = cc          EXECUTED = Y RESULT = PASS
FA3 = rn          EXECUTED = Y RESULT = PASS
FA4 = ac          EXECUTED = Y RESULT = PASS
FA5 = sn          EXECUTED = Y RESULT = PASS
OUTG DIGITS = 00910123459818000001
OUTG FNAI = intl
```

;

```
tekelecstp 09-08-05 18:20:46 EST EAGLE 41.1.0
```

CGPN NPP PROCESSING

```
SERVICE NAME = idprcgp SERVICE STATUS = ON
INC DIGITS = 919818000005
NAI = 4 FNAI = intl FDL = 12
```

MATCHING RULE

```
FNAI = intl FDL = 12 FPFX = *
ACTION SET NAME = cgpn1
```

CONDITIONING RESULT

```
CA1 = cc2          EXECUTED = Y RESULT = PASS
```

```

CA2 = ac2          EXECUTED = Y RESULT = PASS
CA3 = sn8          EXECUTED = Y RESULT = PASS
INC DIGITS = 919818000005
COND DIGITS = 919818000005

```

SERVICE APPLICATION

```
SA1 = cgpnp      EXECUTED = Y FORMAT = Y
```

FORMATING RESULT

```

FA1 = dlma      EXECUTED = Y RESULT = PASS
FA2 = cc        EXECUTED = Y RESULT = PASS
FA3 = rn        EXECUTED = Y RESULT = PASS
FA4 = ac        EXECUTED = Y RESULT = PASS
FA5 = sn        EXECUTED = Y RESULT = PASS
OUTG DIGITS = 00915432109818000005
OUTG FNAI = intl

```

;

This example shows the output in debug format for the TTR protocol:

```
tst-msg:feat=ttr:prot=ttr:msgn=1:mode=debug
```

```

tekelecstp 09-08-05 18:20:46 EST  EAGLE 41.1.0
tst-msg:feat=ttr:prot=ttr:msgn=1:mode=debug
Command Accepted: Test message is sent.

```

;

TST-MSG-RESULT

```
=====
```

```
MSG = 2          TCAP_TYPE = INAP
```

SCCP

```

CGPA_GT = 4
CGPA_GT_NAI = 4      CGPA = 9111111111
CDPA_GT = 4
CDPA_GT_NAI = 4      CDPA = 9818555001

```

TCAP

```

SK = 6ba1b1c1      BCSM = 02
CGPN_NAI = 4       CGPN = 919818000005
CDPN_NAI = 4       CDPN = 009090919818000001

```

CDPN NPP PROCESSING

```

SERVICE NAME = idprcdpn SERVICE STATUS = ON
INC DIGITS = 009090919818000001
NAI = 4 FNAI = intl FDL = 18

```

MATCHING RULE

```

FNAI = intl FDL = 18 FPFX = 00
ACTION SET NAME = cdpn6

```

CONDITIONING RESULT

```
CA1 = fpfx      EXECUTED = Y RESULT = PASS
```

```
CA2 = pfxa4      EXECUTED = Y RESULT = PASS
CA3 = cc2        EXECUTED = Y RESULT = PASS
CA4 = ac2        EXECUTED = Y RESULT = PASS
CA5 = sn8        EXECUTED = Y RESULT = PASS
INC DIGITS = 009090919818000001
COND DIGITS = 919818000001
```

SERVICE APPLICATION

```
SA1 = ccncchk    EXECUTED = Y FORMAT = Y
CCNC Check Passed
SA2 = cdpnp      EXECUTED = Y FORMAT = Y
RTDB LKPSUCC Entity=1 Cdpn=919818000001
SA3 = lacck      EXECUTED = Y FORMAT = Y
PPFX & PFXA FAs set to None
SA4 = cgpnp      EXECUTED = Y FORMAT = Y
```

FORMATING RESULT

```
FA1 = fpx       EXECUTED = Y RESULT = PASS
FA2 = pfxa      EXECUTED = Y RESULT = PASS
FA3 = dlma      EXECUTED = Y RESULT = PASS
FA4 = cc        EXECUTED = Y RESULT = PASS
FA5 = rn        EXECUTED = Y RESULT = PASS
FA6 = ac        EXECUTED = Y RESULT = PASS
FA7 = sn        EXECUTED = Y RESULT = PASS
OUTG DIGITS = 00910123459818000001
OUTG FNAI = intl
```

;

tekelecstp 09-08-05 18:20:46 EST EAGLE 41.1.0

CGPN NPP PROCESSING

```
SERVICE NAME = idprcgp SERVICE STATUS = ON
INC DIGITS = 919818000005
NAI = 4 FNAI = intl FDL = 12
```

MATCHING RULE

```
FNAI = intl FDL = 12 PPFX = *
ACTION SET NAME = cgpn1
```

CONDITIONING RESULT

```
CA1 = cc2      EXECUTED = Y RESULT = PASS
CA2 = ac2      EXECUTED = Y RESULT = PASS
CA3 = sn8      EXECUTED = Y RESULT = PASS
INC DIGITS = 919818000005
COND DIGITS = 919818000005
```

SERVICE APPLICATION

```
SA1 = cgpnp     EXECUTED = Y FORMAT = Y
RTDB LKPSUCC Entity=1 Cgpn=919818000005
```

FORMATING RESULT

```
FA1 = dlma     EXECUTED = Y RESULT = PASS
FA2 = cc       EXECUTED = Y RESULT = PASS
```

;

This example shows the output in debug format when the ISUP protocol is used:

```
tst-msg:msgn=1:loc=2217:prot=isup:feat=tif3:mode=debug
```

```
tklc1191001 09-08-08 08:06:03 EST EAGLE5 41.1.0

SERVICE NAME = tif3 SERVICE STATUS = ON
  INC DIGITS = 1970442001
  NAI = 4 FNAI = intl FDL = 10

MATCHING RULE
  FNAI = intl FDL = * FPFX = 1970
  ACTION SET NAME = temp3

CONDITIONING RESULT
  CA1 = cc1          EXECUTED = Y RESULT = PASS
  CA2 = dnx          EXECUTED = Y RESULT = PASS
  INC DIGITS = 1970442001
  COND DIGITS = 1970442001

SERVICE APPLICATION
  SA1 = nprls        EXECUTED = Y FORMAT = Y
  INDIV RLS redir=1 cause=np(0) RN=ffffff SP=dd02001

FORMATING RESULT
  FA1 = rn           EXECUTED = Y RESULT = PASS
  FA2 = cc           EXECUTED = Y RESULT = PASS
  OUTG DIGITS = fffffff1
  OUTG FNAI = intl
```

;

This example shows the output in brief format when the MO SMS NPP IS41 protocol is used:

```
tst-msg:feat=mosmsnpp:loc=1101:prot=is41:msgn=1:mode=brief
```

```
tekelecstp 09-08-02 10:46:51 EST EAGLE 41.1.0
tst-msg:feat=mosmsnpp:loc=1101:prot=is41:msgn=1:mode=brief
Command Accepted: Test message is sent.
```

;

```
TST-MSG-RESULT
=====
MSG = 1

CGPA_GT = 4
CGPA_GT_NAI = 4    CGPA = 0123456789abcde
```

```
CDPA_GT = 4
CDPA_GT_NAI = 4      CDPA = 0123456789abcde

CGPN_NAI = 1        CGPN_NP = 2
CGPN_ES = 1         CGPN = 919899999901

CDPN_NAI = 1        CDPN_NP = 2
CDPN_ES = 1         CDPN = 919918000004

MOSMSICGPN NPP PROCESSING

SERVICE NAME = mosmsicgpn SERVICE STATUS = ON
INC DIGITS = 919899999901
NAI = 1 FNAI = intl FDL = 12

MATCHING RULE
FNAI = intl FDL = * FPFX = *
ACTION SET NAME = asdgrn1

CONDITIONING RESULT
INC DIGITS = 919899999901
COND DIGITS = 919899999901

FORMATING RESULT
OUTG DIGITS = 919899999901
OUTG FNAI = intl
;

eagle1 09-08-02 08:45:05 EST EAGLE 41.1.0

MOSMSICDPN NPP PROCESSING

SERVICE NAME = mosmsicdpn SERVICE STATUS = ON
INC DIGITS = 919918000004
NAI = 1 FNAI = intl FDL = 12

MATCHING RULE
FNAI = intl FDL = 12 FPFX = *
ACTION SET NAME = cgpnasd1

CONDITIONING RESULT
INC DIGITS = 919918000004
COND DIGITS = 919918000004

FORMATING RESULT
OUTG DIGITS = 917777444409918000004
OUTG FNAI = intl
;
```

This example shows the output in full format when the MO SMS NPP IS41 protocol is used:

```
tst-msg:feat=mosmsnpp:loc=1101:prot=is41:msgn=1:mode=full
```

```
tekelecstp 09-08-02 10:51:51 EST EAGLE 41.1.0
```

```
tst-msg:feat=mosmsnpp:loc=1101:prot=is41:msgn=1:mode=full
Command Accepted: Test message is sent.
;

TST-MSG-RESULT
=====
MSG = 1

CGPA_GT = 4
CGPA_GT_NAI = 4      CGPA = 0123456789abcde

CDPA_GT = 4
CDPA_GT_NAI = 4      CDPA = 0123456789abcde

CGPN_NAI = 1         CGPN_NP = 2
CGPN_ES = 1          CGPN = 919899999901

CDPN_NAI = 1         CDPN_NP = 2
CDPN_ES = 1          CDPN = 919918000004

MOSMSICGPN NPP PROCESSING

SERVICE NAME = mosmsicgpn SERVICE STATUS = ON
  INC DIGITS = 919899999901
  NAI = 1 FNAI = intl FDL = 12

MATCHING RULE
  FNAI = intl FDL = * FPFX = *
  ACTION SET NAME = asdgrn1

CONDITIONING RESULT
  CA1 = cc2          EXECUTED = Y RESULT = PASS
  CA2 = dnx          EXECUTED = Y RESULT = PASS
  INC DIGITS = 919899999901
  COND DIGITS = 919899999901

SERVICE APPLICATION
  SA1 = asdlkup      EXECUTED = Y FORMAT IND = N
  SA2 = grnlkup      EXECUTED = Y FORMAT IND = N

FORMATING RESULT
  FA1 = orig         EXECUTED = Y RESULT = PASS
  OUTG DIGITS = 919899999901
  OUTG FNAI = intl
;

eagle1 09-08-02 08:45:26 EST  EAGLE 41.1.0

MOSMSICDPN NPP PROCESSING

SERVICE NAME = mosmsicdpn SERVICE STATUS = ON
  INC DIGITS = 919918000004
  NAI = 1 FNAI = intl FDL = 12

MATCHING RULE
  FNAI = intl FDL = 12 FPFX = *
```

```

ACTION SET NAME = cgpnasd1

CONDITIONING RESULT
CA1 = cc2          EXECUTED = Y RESULT = PASS
CA2 = dn10        EXECUTED = Y RESULT = PASS
INC DIGITS = 919918000004
COND DIGITS = 919918000004

SERVICE APPLICATION
SA1 = migrate     EXECUTED = Y FORMAT IND = N
SA2 = cdpnp       EXECUTED = Y FORMAT IND = N
SA3 = cgpnasdrqd EXECUTED = Y FORMAT IND = N
SA4 = cgpngrnrqd EXECUTED = Y FORMAT IND = N

FORMATING RESULT
FA1 = cc          EXECUTED = Y RESULT = PASS
FA2 = rn          EXECUTED = Y RESULT = PASS
FA3 = asd         EXECUTED = Y RESULT = PASS
FA4 = grn         EXECUTED = Y RESULT = PASS
FA5 = dn          EXECUTED = Y RESULT = PASS
OUTG DIGITS = 917777444409918000004
OUTG FNAI = intl
;

```

This example shows the output in brief format when the MO SMS NPP GSM protocol is used:

```
tst-msg:feat=mosmsnpp:loc=1101:prot=gsm:msgn=1:mode=brief
```

```

tekelecstp 09-08-03 09:23:01 EST EAGLE 41.1.0
tst-msg:feat=mosmsnpp:loc=1101:prot=gsm:msgn=1:mode=brief
Command Accepted: Test message is sent.
;

```

```

TST-MSG-RESULT
=====
MSG = 1
CGPA_GT = 4
CGPA_GT_NAI = 4          CGPA = 0123456789abcde

CDPA_GT = 4
CDPA_GT_NAI = 4          CDPA = 123456789

CGPN_NAI = 1
CGPN_NP = 1              CGPN = 919899999901

CDPN_NAI = 1
CDPN_NP = 1              CDPN = 919918000004

MOSMSGCGPN NPP PROCESSING

SERVICE NAME = mosmsgcgpn SERVICE STATUS = ON
INC DIGITS = 919899999901
NAI = 1 FNAI = intl FDL = 12

```

```

MATCHING RULE
  FNAI = intl FDL = * FPFX = *
  ACTION SET NAME = gcgpn1

CONDITIONING RESULT
  INC DIGITS = 919899999901
  COND DIGITS = 919899999901

FORMATING RESULT
  OUTG DIGITS =
  OUTG FNAI = unkn
;
tekelecstp 09-08-03 09:23:01 EST EAGLE 41.1.0

MOSMSGCDPN NPP PROCESSING

SERVICE NAME = mosmsgcdpn SERVICE STATUS = ON
  INC DIGITS = 919918000004
  NAI = 1 FNAI = intl FDL = 12

MATCHING RULE
  FNAI = intl FDL = * FPFX = *
  ACTION SET NAME = gcdpn1

CONDITIONING RESULT
  INC DIGITS = 919918000004
  COND DIGITS = 919918000004

FORMATING RESULT
  OUTG DIGITS = 91777744409918000004
  OUTG FNAI = intl
;

```

This example shows the output in full format when the MO SMS NPP GSM protocol is used:

```
tst-msg:feat=mosmsnpp:loc=1101:prot=gsm:msgn=1:mode=full
```

```

tekelecstp 09-08-03 09:50:01 EST EAGLE 41.1.0
tst-msg:feat=mosmsnpp:loc=1101:prot=gsm:msgn=1:mode=full
Command Accepted: Test message is sent.
;

```

```

TST-MSG-RESULT
=====
MSG = 1
CGPA_GT = 4
CGPA_GT_NAI = 4          CGPA = 0123456789abcde

CDPA_GT = 4
CDPA_GT_NAI = 4          CDPA = 123456789

CGPN_NAI = 1
CGPN_NP = 1             CGPN = 919899999901

```


CDPN_NAI = 1
CDPN_NP = 1 CDPN = 919918000004

MOSMSGCGPN NPP PROCESSING

SERVICE NAME = mosmsgcgpn SERVICE STATUS = ON
INC DIGITS = 919899999901
NAI = 1 FNAI = intl FDL = 12

MATCHING RULE

FNAI = intl FDL = * FPFX = *
ACTION SET NAME = gcgpn1

CONDITIONING RESULT

CA1 = cc2 EXECUTED = Y RESULT = PASS
CA2 = dnx EXECUTED = Y RESULT = PASS
INC DIGITS = 919899999901
COND DIGITS = 919899999901

SERVICE APPLICATION

SA1 = fraudchk EXECUTED = Y FORMAT IND = N
SA2 = pprelay EXECUTED = Y FORMAT IND = Y
SA3 = asdlkup EXECUTED = Y FORMAT IND = N
SA4 = grnlkup EXECUTED = Y FORMAT IND = N

FORMATING RESULT

OUTG DIGITS =
OUTG FNAI = unkn

;

tekelecstp 09-08-03 09:50:01 EST EAGLE 41.1.0

MOSMSGCDPN NPP PROCESSING

SERVICE NAME = mosmsgcdpn SERVICE STATUS = ON
INC DIGITS = 919918000004
NAI = 1 FNAI = intl FDL = 12

MATCHING RULE

FNAI = intl FDL = * FPFX = *
ACTION SET NAME = gcdpn1

CONDITIONING RESULT

CA1 = cc2 EXECUTED = Y RESULT = PASS
CA2 = dnx EXECUTED = Y RESULT = PASS
INC DIGITS = 919918000004
COND DIGITS = 919918000004

SERVICE APPLICATION

SA1 = pprelay EXECUTED = Y FORMAT IND = N
SA2 = cdpnpn EXECUTED = Y FORMAT IND = N
SA3 = cgpnasdrqd EXECUTED = Y FORMAT IND = N

SA4 = cgpngrnrqd EXECUTED = Y FORMAT IND = N

FORMATING RESULT

```

FA1 = cc          EXECUTED = Y RESULT = PASS
FA2 = rn          EXECUTED = Y RESULT = PASS
FA3 = asd         EXECUTED = Y RESULT = PASS
FA4 = grn         EXECUTED = Y RESULT = PASS
FA5 = dn          EXECUTED = Y RESULT = PASS
OUTG DIGITS = 91777744409918000004
OUTG FNAI = intl
;

```

This example shows the output in debug format when the MO SMS NPP IS41 protocol is used:

```
tst-msg:feat=mosmsnpp:loc=1101:prot=is41:msgn=1:mode=debug
```

```

tekelecstp 09-08-02 10:46:51 EST EAGLE 41.1.0
tst-msg:feat=mosmsnpp:loc=1101:prot=is41:msgn=1:mode=debug
Command Accepted: Test message is sent.
;
tekelecstp 09-08-02 10:46:51 EST EAGLE 41.1.0
TST-MSG-RESULT
=====
MSG = 1

CGPA_GT = 4
CGPA_GT_NAI = 4    CGPA = 0123456789abcde

CDPA_GT = 4
CDPA_GT_NAI = 4    CDPA = 0123456789abcde

CGPN_NAI = 1      CGPN_NP = 2
CGPN_ES = 1      CGPN = 919899999901

CDPN_NAI = 1      CDPN_NP = 2
CDPN_ES = 1      CDPN = 919918000004

MOSMSICGPN NPP PROCESSING

SERVICE NAME = mosmsicgpn SERVICE STATUS = ON
  INC DIGITS = 919899999901
  NAI = 1 FNAI = intl FDL = 12

MATCHING RULE
  FNAI = intl FDL = * FPFX = *
  ACTION SET NAME = asdgrn1

CONDITIONING RESULT
  CA1 = cc2      EXECUTED = Y RESULT = PASS
  CA2 = dnx      EXECUTED = Y RESULT = PASS
  INC DIGITS = 919899999901
  COND DIGITS = 919899999901

SERVICE APPLICATION
  SA1 = asdlkup  EXECUTED = Y FORMAT IND = N
  ASDLKUP: ASD Data Copied to NPPSTATE:ASD

```

```
RTDB LKPSUCC DN=91989999901
PT   =5                ASD   =444
SP   =NONE             SRFIMSI=NONE
RN   =3000            SRFIMSI=NONE
VMSID=NONE            SRFIMSI=NONE
GRN  =40              SRFIMSI=NONE
SA2 = grnlkup        EXECUTED = Y FORMAT IND = N
GRN Data Copied to NPPSTATE:GRN
```

```
FORMATING RESULT
FA1 = orig           EXECUTED = Y RESULT = PASS
OUTG DIGITS = 91989999901
OUTG FNAI = intl
```

;

```
tekelecstp 09-08-02 10:46:51 EST EAGLE 41.1.0
```

```
MOSMSICDPN NPP PROCESSING
```

```
SERVICE NAME = mosmsicdpn SERVICE STATUS = ON
INC DIGITS = 919918000004
NAI = 1 FNAI = intl FDL = 12
```

```
MATCHING RULE
FNAI = intl FDL = 12 PPFX = *
ACTION SET NAME = cgpnasd1
```

```
CONDITIONING RESULT
CA1 = cc2            EXECUTED = Y RESULT = PASS
CA2 = dn10          EXECUTED = Y RESULT = PASS
INC DIGITS = 919918000004
COND DIGITS = 919918000004
```

```
SERVICE APPLICATION
SA1 = migrate        EXECUTED = Y FORMAT IND = N
I2GM:Subscriber is not migrated
RTDB LKPSUCC DN=919918000004
PT   = 255          ASD   =56
SP   =NONE          SRFIMSI=NONE
RN   =7777          SRFIMSI=98989
VMSID=NONE          SRFIMSI=NONE
GRN  =40            SRFIMSI=NONE
SA2 = cdpnpn        EXECUTED = Y FORMAT IND = N
SMS NP:Validation Passed: NPPSTATE:RN=7777.
SA3 = cgpnasdrqd    EXECUTED = Y FORMAT IND = N
CGPNASDRQD:CgPN ASD Data Copied to NPPSTATE:ASD
SA4 = cgpngrnrqd    EXECUTED = Y FORMAT IND = N
CGPNGRNRQD:CgPN GRN Data Copied to NPPSTATE:GRN
```

```
FORMATING RESULT
FA1 = cc            EXECUTED = Y RESULT = PASS
FA2 = rn            EXECUTED = Y RESULT = PASS
FA3 = asd           EXECUTED = Y RESULT = PASS
FA4 = grn           EXECUTED = Y RESULT = PASS
FA5 = dn            EXECUTED = Y RESULT = PASS
```

```
OUTG DIGITS = 917777444409918000004
OUTG FNAI = intl
;
```

This example shows the output in debug format when the MO SMS NPP GSM protocol is used:

```
tst-msg:feat=mosmsnpp:loc=1101:prot=gsm:msgn=1:mode=debug
```

```
tekelecstp 09-08-02 10:46:51 EST EAGLE 41.1.0
tst-msg:feat=mosmsnpp:loc=1101:prot=gsm:msgn=1:mode=debug
Command Accepted: Test message is sent.
;
tekelecstp 09-08-02 10:46:51 EST EAGLE 41.1.0

TST-MSG-RESULT
=====
MSG = 1
CGPA_GT = 4
CGPA_GT_NAI = 4          CGPA = 0123456789abcde

CDPA_GT = 4
CDPA_GT_NAI = 4          CDPA = 123456789

CGPN_NAI = 1
CGPN_NP = 1              CGPN = 919899999901

CDPN_NAI = 1
CDPN_NP = 1              CDPN = 919918000004

MOSMSGCGPN NPP PROCESSING

SERVICE NAME = mosmsgcgnp SERVICE STATUS = ON
  INC DIGITS = 919899999901
  NAI = 1 FNAI = intl FDL = 12

MATCHING RULE
  FNAI = intl FDL = * FPFX = *
  ACTION SET NAME = gcgpn1

CONDITIONING RESULT
  CA1 = cc2          EXECUTED = Y RESULT = PASS
  CA2 = dnx          EXECUTED = Y RESULT = PASS
  INC DIGITS = 919899999901
  COND DIGITS = 919899999901

SERVICE APPLICATION
  SA1 = fraudchk    EXECUTED = Y FORMAT IND = N
  FRAUDCHK:CgPN is not Ported/Migrated
  RTDB LKPSUCC DN=919899999901
  PT   =5           ASD   =44
  SP   =NONE        SRFIMSI=NONE
  RN   =3000        SRFIMSI=NONE
  VMSID=NONE        SRFIMSI=NONE
```

```
GRN =40          SRFIMSI=NONE
SA2 = pprelay    EXECUTED = Y FORMAT IND = Y
PPRELAY:DN is Prepaid
SA3 = asdlkup    EXECUTED = Y FORMAT IND = N
ASDLKUP: ASD Data Copied to NPPSTATE:ASD
SA4 = grnlkup    EXECUTED = Y FORMAT IND = N
GRN Data Copied to NPPSTATE:GRN
```

```
FORMATING RESULT
OUTG DIGITS =
OUTG FNAI = unkn
```

;

```
tekelecstp 09-08-02 10:46:51 EST EAGLE 41.1.0
```

```
MOSMSGCDPN NPP PROCESSING
```

```
SERVICE NAME = mosmsgcdpn SERVICE STATUS = ON
INC DIGITS = 919918000004
NAI = 1 FNAI = intl FDL = 12
```

```
MATCHING RULE
FNAI = intl FDL = * FPFX = *
ACTION SET NAME = gcdpn1
```

```
CONDITIONING RESULT
CA1 = cc2        EXECUTED = Y RESULT = PASS
CA2 = dnx        EXECUTED = Y RESULT = PASS
INC DIGITS = 919918000004
COND DIGITS = 919918000004
```

```
SERVICE APPLICATION
SA1 = pprelay    EXECUTED = Y FORMAT IND = N
PPRELAY:CgPN is Prepaid, Do not check CdPN prepaid status
SA2 = cdpnpn    EXECUTED = Y FORMAT IND = N
SMS NP:Validation Passed: NPPSTATE:RN=7777.
RTDB LKPSUCC DN=919918000004
PT = 40          ASD =56
SP =NONE        SRFIMSI=NONE
RN =7777        SRFIMSI=98989
VMSID=NONE     SRFIMSI=NONE
GRN =40         SRFIMSI=NONE
SA3 = cgpnasdrqd EXECUTED = Y FORMAT IND = N
CGPNASDRQD:CgPN ASD Data Copied to NPPSTATE:ASD
SA4 = cgpngrnrqd EXECUTED = Y FORMAT IND = N
CGPNGRNRQD:CgPN GRN Data Copied to NPPSTATE:GRN
```

```
FORMATING RESULT
FA1 = cc        EXECUTED = Y RESULT = PASS
FA2 = rn        EXECUTED = Y RESULT = PASS
FA3 = asd       EXECUTED = Y RESULT = PASS
FA4 = grn       EXECUTED = Y RESULT = PASS
FA5 = dn        EXECUTED = Y RESULT = PASS
OUTG DIGITS = 91777744409918000004
```

```
        OUTG FNAI = intl  
;
```

This example shows the output in debug mode for TIF Number Substitution:

```
tst-msg:msgn=1:prot=isup:loc=1215:feat=tif:mode=debug
```

```
tifstp 09-08-06 19:54:03 GMT EAGLE 41.1.0  
  
SERVICE NAME = tif SERVICE STATUS = ON  
  INC DIGITS = 88123456  
  NAI = 4 FNAI = intl FDL = 8  
  
MATCHING RULE  
  FNAI = intl FDL = 8 PPFX = 88  
  ACTION SET NAME = set1  
  
CONDITIONING RESULT  
  CA1 = cc2          EXECUTED = Y RESULT = PASS  
  CA2 = ac1          EXECUTED = Y RESULT = PASS  
  CA3 = snx          EXECUTED = Y RESULT = PASS  
  INC DIGITS = 88123456  
  COND DIGITS = 88123456  
  
SERVICE APPLICATION  
  SA1 = nscdpn       EXECUTED = Y FORMAT = Y  
  INDIV CC=91 AC=5  SN=46789  
  SA2 = nscgpn       EXECUTED = Y FORMAT = Y  
  INDIV InCat=244  InDN=91123456  
  OutCat=4         OutDN=741852  
  
FORMATING RESULT  
  FA1 = cc          EXECUTED = Y RESULT = PASS  
  FA2 = ac          EXECUTED = Y RESULT = PASS  
  FA3 = sn          EXECUTED = Y RESULT = PASS  
  OUTG DIGITS = 91546789  
  OUTG FNAI = intl  
;
```

This example shows the output in debug mode for TIF Number Substitution:

```
tst-msg:msgn=2:prot=isup:loc=1215:feat=tif:mode=debug
```

```
tklc1071001 09-08-05 10:13:22 EDT EAGLE 41.1.0  
  
SERVICE NAME = tif SERVICE STATUS = ON  
  INC DIGITS = 2345678197001  
  NAI = 4 FNAI = intl FDL = 20  
  
MATCHING RULE  
  FNAI = intl FDL = 20 PPFX = 2345  
  ACTION SET NAME = tifasn1
```

```
CONDITIONING RESULT
  CA1 = ign3          EXECUTED = Y RESULT = PASS
  CA2 = znx           EXECUTED = Y RESULT = PASS
  INC DIGITS = 2345678197001
  COND DIGITS = 5678197001

SERVICE APPLICATION
  SA1 = nscdpn        EXECUTED = Y FORMAT = Y
  INDIV ZN=8474657346
  SA2 = nscgpn        EXECUTED = Y FORMAT = Y
  INDIV InCat=5       InDN=7463467238
                       OutCat=7   OutDN=4736475834

FORMATING RESULT
  OUTG DIGITS = 8474657346
  OUTG FNAI = intl
;
```

This example shows the output in debug mode for TIF Number Substitution when the Formatting Action for the outgoing CgPN is RN (`tifopts:iamcgpn=rn`):

```
tst-msg:mgn=3:prot=isup:loc=1103:feat=tif:mode=debug
```

```
tifstp 09-08-06 19:52:42 GMT EAGLE 41.1.0

SERVICE NAME = tif SERVICE STATUS = ON
  INC DIGITS = 88123456
  NAI = 4 FNAI = intl FDL = 8

MATCHING RULE
  FNAI = intl FDL = 8 FPFX = 88
  ACTION SET NAME = set1

CONDITIONING RESULT
  CA1 = cc2          EXECUTED = Y RESULT = PASS
  CA2 = ac1          EXECUTED = Y RESULT = PASS
  CA3 = snx          EXECUTED = Y RESULT = PASS
  INC DIGITS = 88123456
  COND DIGITS = 88123456

SERVICE APPLICATION
  SA1 = nscdpn        EXECUTED = Y FORMAT = Y
  INDIV CC=91 AC=5   SN=46789
  SA2 = nscgpn        EXECUTED = Y FORMAT = Y
  No operation for IAMCGPN=RN

FORMATING RESULT
  FA1 = cc           EXECUTED = Y RESULT = PASS
  FA2 = ac           EXECUTED = Y RESULT = PASS
  FA3 = sn           EXECUTED = Y RESULT = PASS
  OUTG DIGITS = 91546789
```

```
        OUTG FNAI = intl  
;
```

This example shows the output in debug mode for TIF Number Substitution when no CgPN is present in the IAM message:

```
tst-msg:msgn=4:prot=isup:loc=1215:feat=tif:mode=debug
```

```
tifstp 09-08-06 19:50:08 GMT  EAGLE 41.1.0  
  
SERVICE NAME = tif SERVICE STATUS = ON  
  INC DIGITS = 88123456  
  NAI = 4 FNAI = intl FDL = 8  
  
MATCHING RULE  
  FNAI = intl FDL = 8 FPFX = 88  
  ACTION SET NAME = set1  
  
CONDITIONING RESULT  
  CA1 = cc2          EXECUTED = Y RESULT = PASS  
  CA2 = ac1          EXECUTED = Y RESULT = PASS  
  CA3 = snx          EXECUTED = Y RESULT = PASS  
  INC DIGITS = 88123456  
  COND DIGITS = 88123456  
  
SERVICE APPLICATION  
  SA1 = nscdpn      EXECUTED = Y FORMAT = Y  
  INDIV CC=91 AC=5 SN=46789  
  SA2 = nscgpn      EXECUTED = Y FORMAT = Y  
  no cgpn  
  
FORMATING RESULT  
  FA1 = cc          EXECUTED = Y RESULT = PASS  
  FA2 = ac          EXECUTED = Y RESULT = PASS  
  FA3 = sn          EXECUTED = Y RESULT = PASS  
  OUTG DIGITS = 91546789  
  OUTG FNAI = intl  
;
```

This example shows the output in debug mode for TIF Number Substitution when the incoming Calling Party's Category value is the same as the TIFOPTS `nspublic` option value and the TIFOPTS `nsaddldata` option value is yes :

```
tst-msg:msgn=5:prot=isup:loc=1103:feat=tif:mode=debug
```

```
tifstp 09-08-06 20:16:09 GMT  EAGLE 41.1.0  
  
SERVICE NAME = tif SERVICE STATUS = ON  
  INC DIGITS = 88123456  
  NAI = 4 FNAI = intl FDL = 8  
  
MATCHING RULE
```



```
FNAI = intl FDL = 8 FPFX = 88
ACTION SET NAME = set1
```

CONDITIONING RESULT

```
CA1 = cc2          EXECUTED = Y RESULT = PASS
CA2 = ac1          EXECUTED = Y RESULT = PASS
CA3 = snx          EXECUTED = Y RESULT = PASS
INC DIGITS = 88123456
COND DIGITS = 88123456
```

SERVICE APPLICATION

```
SA1 = nscdpn       EXECUTED = Y FORMAT = Y
INDIV CC=91 AC=5 SN=46789
SA2 = nscgpn       EXECUTED = Y FORMAT = Y
Incoming CgPN category is NSPublic
```

FORMATING RESULT

```
FA1 = cc           EXECUTED = Y RESULT = PASS
FA2 = ac           EXECUTED = Y RESULT = PASS
FA3 = sn           EXECUTED = Y RESULT = PASS
OUTG DIGITS = 91546789
OUTG FNAI = intl
```

;

This example shows the output when the GTT feature is turned on for `mode=full` or `mode=debug`:

```
tst-msg:msgn=1:prot=sccp:feat=gtt:loc=1105:mode=full
```

```
tekelecstp 16-10-04 10:10:38 MST EAGLE 46.5.0.0.0-70.5.0
```

GTT Trace Tool:

```
Input:
EAGLE-Generated? No
OPCI   = 3-003-2
LSN    = 1s332
DPCI   = 1-001-1
SelId  = -----
```

```
CDPA:  GTI=2
        TT=20
        SSN=6
        PCI=1-001-1
        ADDR=123456
```

```
CGPA:  GTI=2
        TT=10
        SSN=8
        PCI=3-003-2
        ADDR=121212
```

GTT Search Results:

```
Search Hierarchy: FLOBR CDPA CGPA
```

```

                                CgPA/CdPA
GTT Set Name      Set Type  SELID TestMode FallBack Found Matching
Key
set1              CDPA GTA   ----- OFF   Dft      Y    123456
set3              CGPA GTA   ----- OFF   Dft      Y    121212

```

```

Search Depth = 2
Loop Detected = No

```

```

Translation Results:
Translation Found: Yes [GTT Set Name = set3]
DPCI = 2-002-2
RI = GT
GTMOD = gt1
Action Set = set

```

```

Actid   Action  DPC          RI   SSN  MAPSET/  ErrCode
UIMREQD
                                MRNSET
dup1    DUP     3-003-2     GT   ---  -----  ----
-
dup2    DUP     3-003-2     GT   ---  -----  ----
-
dup3    DUP     3-003-2     GT   ---  -----  ----
-
dup4    DUP     3-003-2     GT   ---  -----  ----
-
dup5    DUP     3-003-2     GT   ---  -----  ----
-
fwd1    FWD     3-003-2     GT   ---  -----  ----
-

```

```

Command Complete

```

```

;
```

This example shows the output when the GTT feature is turned on for mode=brief:

```
tst-msg:msgn=1:prot=sccp:feat=gtt:loc=1105:mode=brief
```

```
tekelecstp 16-10-04 10:12:33 MST EAGLE 46.5.0.0.0-70.5.0
```

```
GTT Trace Tool:
```

```
Input:
```

```
EAGLE-Generated? No
OPCI   = 3-003-2
LSN    = 1s332
DPCI   = 1-001-1
SelId  = -----

CDPA:  GTI=2
       TT=20
       SSN=6
       PCI=1-001-1
       ADDR=123456

CGPA:  GTI=2
       TT=10
       SSN=8
       PCI=3-003-2
       ADDR=121212

GTT Search Results:

Search Hierarchy:  FLOBR CDPA CGPA

GTT Set Name(s):  set1,set3

Search Depth = 2
Loop Detected = No

Translation Results:
Translation Found: Yes [GTT Set Name = set3]
DPCI = 2-002-2
RI   = GT
GTMOD = gt1
Action Set = set

Actid(s):  dup1,dup2,dup3,dup4,dup5,fwd1

Command Complete
```

;

This example shows the output with `scpval`, `sftthrot` and `sflag gttactions`.

```
tst-msg:msgn=1:loc=1103:prot=sccp:feat=gtt
```

```
GTT Trace Tool:

Input:
EAGLE-Generated? No
OPC    = 004-005-006
LSN    = 1s456
DPC    = 001-001-001
SelId  = -----

CDPA:  GTI=2
```

```

TT=10
SSN=6
PC=010-010-010
ADDR=1234567890

CGPA: GTI=2
      TT=0
      SSN=8
      PC=020-020-020
      ADDR=1234567890
Family=none

Family2=notpresent

Family3=notpresent

Opcode=0

Opcode2=notpresent

Opcode3=notpresent

Pkgtype=bgn (0x62)

Acn= none

MAP Parameters Present in Test Message:
-- No Param

GTT Search Results:

Search Hierarchy: FLOBR CDPA

                                CgPA/CdPA
GTT Set Name      Set Type  SELID TestMode FallBack Found Matching
Key
set1              OPCODE   ----- OFF   Dft      Y   pkg=bgn
(0x62)

                                acn=any
                                op =0, prio =1024
                                op2=notpresent,
prio2=notpresent

                                op3=notpresent,
prio3=notpresent

Search Depth = 1
Loop Detected = No

Translation Results:
Translation Found: Yes [GTT Set Name = set1]
DPC = 004-005-006
RI = GT
GTMOD = -----
Action Set = actset1

```

```

GTT user action: Discard MSU

Actid      Action  DPC          RI  SSN  MAPSET/  ErrCode  UIMREQD
           Action  DPC          RI  SSN  MRNSET
           Action  DPC          RI  SSN  MRNSET

sfthrot1   SFTHROT  ----         ---  ---  -----  ----     -
dup1       DUP      004-005-008  GT   ---  -----  ----     -
sflog1     SFLOG    ----         ---  ---  -----  ----     -
scpval1    SCPVAL   ----         ---  ---  -----  ----     N
disc1      DISC     ----         ---  ---  -----  ----     N

Command Complete

```

This example shows the output in brief mode for the Info Analyzed Relay Base feature:

```
tst-msg:loc=1101:prot=tatr:feat=iar:msgn=1:mode=brief
```

```

tekelecstp 09-07-24 18:20:46 EST  EAGLE 41.1.0
tst-msg:feat=iar:prot=tatr:msgn=1:mode=brief
Command Accepted: Test message is sent.

```

```
;
```

```

TST-MSG-RESULT
=====
IAR Decoding Successfull., (0)
TTR Preprocessing successful.
TTR CgPN Encoded

MSG = 1

SCCP
CGPA_GTI = 2
CGPA_GT_NAI = 4          CGPA = 9194605500
CDPA_GTI = 2
CDPA_GT_NAI = 3          CDPA = 404009246139988

TCAP
TRIG = 26
CGPN_NAI = 48           CGPN = 9246138610
CDPN_NAI = 48           CDPN = 9246138700

CDPN NPP PROCESSING
SERVICE NAME = iarcdpn SERVICE STATUS = ON
INC DIGITS = 9246138700
NAI = 48 FNAI = intl FDIGLEN = 10

MATCHING RULE
FNAI = intl FDIGLEN = 0 FPFX = *
ACTION SET NAME = DSET1

```

```

CONDITIONING RESULT
  INC DIGITS = 9246138700
  COND DIGITS = 19246138700

FORMATING RESULT
  OUTG DIGITS = 198769246138700
  OUTG FNAI = intl

CGPN NPP PROCESSING
SERVICE NAME = iarogpn SERVICE STATUS = ON
  INC DIGITS = 9246138610
  NAI = 49 FNAI = natl FDIGLEN = 10

MATCHING RULE
  FNAI = natl FDIGLEN = 0 FPFX = *
  ACTION SET NAME = DSET2

CONDITIONING RESULT
  INC DIGITS = 9246138610
  COND DIGITS = 19246138610

FORMATING RESULT
  OUTG DIGITS = 15555924613861044443333
  OUTG FNAI = intl

```

This example shows the output in full mode for the Info Analyzed Relay Base feature:

```
tst-msg:loc=1101:prot=tatr:feat=iar:msgn=1:mode=full
```

```

tekelecstp 09-07-24 18:20:46 EST EAGLE 41.1.0
tst-msg:feat=iar:prot=tatr:msgn=1:mode=full
Command Accepted: Test message is sent.

```

```
;
```

```

TST-MSG-RESULT
=====
IAR Decoding Successfull., (0)
TTR Preprocessing successful.
TTR CgPN Encoded

MSG = 1

SCCP
  CGPA_GTI = 2
  CGPA_GT_NAI = 4          CGPA = 9194605500
  CDPA_GTI = 2
  CDPA_GT_NAI = 3          CDPA = 404009246139988

TCAP
  TRIG = 26
  CGPN_NAI = 48           CGPN = 9246138610
  CDPN_NAI = 48           CDPN = 9246138700

CDPN NPP PROCESSING

```

```
SERVICE NAME = iarcdpn SERVICE STATUS = ON
  INC DIGITS = 9246138700
  NAI = 48 FNAI = intl FDIGLEN = 10

MATCHING RULE
  FNAI = intl FDIGLEN = 0 FPFX = *
  ACTION SET NAME = DSET1

CONDITIONING RESULT
  CA1 = ccdef      EXECUTED = Y RESULT = PASS
  CA2 = dnx        EXECUTED = Y RESULT = PASS
  INC DIGITS = 9246138700
  COND DIGITS = 19246138700

SERVICE APPLICATION
  SA1 = cdpnp      EXECUTED = Y FORMAT = Y
  SA2 = cgpnasdrqd EXECUTED = Y FORMAT = Y
  SA3 = cgpngrnrqd EXECUTED = Y FORMAT = Y

FORMATING RESULT
  FA1 = cc          EXECUTED = Y RESULT = PASS
  FA2 = rn          EXECUTED = Y RESULT = PASS
  FA3 = sp          EXECUTED = Y RESULT = PASS
  FA4 = srfimsi     EXECUTED = Y RESULT = PASS
  FA5 = dn          EXECUTED = Y RESULT = PASS
  FA6 = asd         EXECUTED = Y RESULT = PASS
  FA7 = grn         EXECUTED = Y RESULT = PASS
  OUTG DIGITS = 198769246138700
  OUTG FNAI = intl

CGPN NPP PROCESSING

SERVICE NAME = iarccgpn SERVICE STATUS = ON
  INC DIGITS = 9246138610
  NAI = 49 FNAI = natl FDIGLEN = 10

MATCHING RULE
  FNAI = natl FDIGLEN = 0 FPFX = *
  ACTION SET NAME = DSET2

CONDITIONING RESULT
  CA1 = ccdef      EXECUTED = Y RESULT = PASS
  CA2 = dnx        EXECUTED = Y RESULT = PASS
  INC DIGITS = 9246138610
  COND DIGITS = 19246138610

SERVICE APPLICATION
  SA1 = cgpnp      EXECUTED = Y FORMAT = Y
  SA2 = asdlkup    EXECUTED = Y FORMAT = Y
  SA3 = grnlkup    EXECUTED = Y FORMAT = Y

FORMATING RESULT
  FA1 = cc          EXECUTED = Y RESULT = PASS
  FA2 = rn          EXECUTED = Y RESULT = PASS
  FA3 = sp          EXECUTED = Y RESULT = PASS
```

```
FA4 = srfimsi      EXECUTED = Y RESULT = PASS
FA5 = dn           EXECUTED = Y RESULT = PASS
FA6 = asd          EXECUTED = Y RESULT = PASS
FA7 = grn          EXECUTED = Y RESULT = PASS
OUTG DIGITS = 15555924613861044443333
OUTG FNAI = intl
```

This example shows the output in debug mode for the Info Analyzed Relay Base feature:

```
tst-msg:loc=1101:prot=tatr:feat=iar:msgn=2:mode=debug
```

```
tekelecstp 09-07-24 18:20:46 EST EAGLE 41.1.0
tst-msg:feat=iar:prot=tatr:msgn=2:mode=debug
Command Accepted: Test message is sent.
```

;

```
TST-MSG-RESULT
```

```
=====
```

```
IAR DEST NUM decode error., (0)
```

```
TTR Preprocessing successful.
```

```
TTR CgPN Encoded
```

```
MSG = 2
```

```
SCCP
```

```
CGPA_GTI = 2
```

```
CGPA_GT_NAI = 4          CGPA = 9194605500
```

```
CDPA_GTI = 2
```

```
CDPA_GT_NAI = 3          CDPA = 404009246139988
```

```
TCAP
```

```
TRIG = 26
```

```
CGPN_NAI = 48           CGPN = 9876543210
```

```
CDPN_NAI = 49           CDPN = 135792468011223344
```

```
CDPN NPP PROCESSING
```

```
SERVICE NAME = iarcdpn SERVICE STATUS = ON
```

```
INC DIGITS = 135792468011223344
```

```
NAI = 48 FNAI = intl FDIGLEN = 18
```

```
MATCHING RULE
```

```
FNAI = intl FDIGLEN = 0 FPFX = *
```

```
ACTION SET NAME = DSET1
```

```
CONDITIONING RESULT
```

```
CA1 = ccdef            EXECUTED = Y RESULT = PASS
```

```
CA2 = dnx              EXECUTED = Y RESULT = PASS
```

```
INC DIGITS = 135792468011223344
```

```
COND DIGITS = 1135792468011223344
```

```
SERVICE APPLICATION
```

```
SA1 = cdppnp          EXECUTED = Y FORMAT = Y
```

```
ENTITY = RN - SPORT APPLIED, RESULT = SUCCESS
```

```
SA2 = cgpnasdrqd
```



```
EXECUTED = Y FORMAT = Y
CgPN ASD will be made available during CdpN FAE.
SA3 = cgpngrnrqd EXECUTED = Y FORMAT = Y
CgPN GRN will be made available during CdpN FAE.
```

FORMATING RESULT

```
FA1 = cc          EXECUTED = Y RESULT = PASS
FA2 = rn          EXECUTED = Y RESULT = PASS
FA3 = sp          EXECUTED = Y RESULT = PASS
FA4 = srfimsi     EXECUTED = Y RESULT = PASS
FA5 = dn          EXECUTED = Y RESULT = PASS
FA6 = asd         EXECUTED = Y RESULT = PASS
FA7 = grn         EXECUTED = Y RESULT = PASS
OUTG DIGITS = 19876135792468011223344
OUTG FNAI = natl
```

CGPN NPP PROCESSING

```
SERVICE NAME = iarcgpn SERVICE STATUS = ON
INC DIGITS = 9876543210
NAI = 48 FNAI = intl FDIGLEN = 10
```

MATCHING RULE

```
FNAI = intl FDIGLEN = 0 PPFX = *
ACTION SET NAME = DSET2
```

CONDITIONING RESULT

```
CA1 = ccdef      EXECUTED = Y RESULT = PASS
CA2 = dnx        EXECUTED = Y RESULT = PASS
INC DIGITS = 9876543210
COND DIGITS = 19876543210
```

SERVICE APPLICATION

```
SA1 = cgpnp     EXECUTED = Y FORMAT = Y
ENTITY = SP, RESULT = SUCCESS
```

```
SA2 = asdlkup   EXECUTED = Y FORMAT = Y
ASD lkup done
SA3 = grnlkup   EXECUTED = Y FORMAT = Y
GRN lkup done
```

FORMATING RESULT

```
FA1 = cc          EXECUTED = Y RESULT = PASS
FA2 = rn          EXECUTED = Y RESULT = PASS
FA3 = sp          EXECUTED = Y RESULT = PASS
FA4 = srfimsi     EXECUTED = Y RESULT = PASS
FA5 = dn          EXECUTED = Y RESULT = PASS
FA6 = asd         EXECUTED = Y RESULT = PASS
FA7 = grn         EXECUTED = Y RESULT = PASS
OUTG DIGITS = 15555987654321044443333
OUTG FNAI = intl
```

This example shows the output in brief mode with TIF processing that invokes the TIFCGPN service:

```
tst-msg:loc=1105:prot=isup:feat=tif:msgn=8:mode=brief
```

```
tekelecstp 11-02-16 13:54:10 EAGLE EST 44.0.0
SERVICE NAME = tif SERVICE STATUS = ON
  INC DIGITS = 5001234567890
  NAI = 4 FNAI = intl FDL = 13
```

```
MATCHING RULE
  FNAI = intl FDL = 13 PPFX = 500
  ACTION SET NAME = as90
  INVOKE SERVICE = tificgpn
```

```
CONDITIONING RESULT
  INC DIGITS = 5001234567890
  COND DIGITS = 5001234567890
```

```
FORMATING RESULT
  OUTG DIGITS = 1234567890
  OUTG FNAI = intl
```

```
;
```

```
tekelecstp 11-02-16 13:54:10 EAGLE EST 44.0.0
```

```
SERVICE NAME = tificgpn SERVICE STATUS = ON
  INC DIGITS = 5701234567
  NAI = 4 FNAI = intl FDL = 10
```

```
MATCHING RULE
  FNAI = intl FDL = 10 PPFX = 570
  ACTION SET NAME = as130
  INVOKE SERVICE = none
```

```
CONDITIONING RESULT
  INC DIGITS = 5701234567
  COND DIGITS = 5701234567
```

```
FORMATING RESULT
  OUTG DIGITS = UNMODIFIED
  OUTG FNAI = UNMODIFIED
```

```
;
```

```
tekelecstp 11-02-16 13:54:10 EAGLE EST 44.0.0
```

```
TIF SERVICE
  REL will be sent without redirection number
```

```
;
```

This example shows the output in Full mode shows TIF processing that invokes the TIFCGPN service:

```
tst-msg:loc=1105:prot=isup:feat=tif:msgn=8:mode=full
```

```
tekelecstp 11-02-16 13:52:44 EAGLE EST 44.0.0
```

```
SERVICE NAME = tif SERVICE STATUS = ON
  INC DIGITS = 5001234567890
  NAI = 4 FNAI = intl FDL = 13

MATCHING RULE
  FNAI = intl FDL = 13 PPFX = 500
  ACTION SET NAME = as90
  INVOKE SERVICE = tificgpn

CONDITIONING RESULT
  CA1 = cc3          EXECUTED = Y RESULT = PASS
  CA2 = dnx          EXECUTED = Y RESULT = PASS
  INC DIGITS = 5001234567890
  COND DIGITS = 5001234567890

SERVICE APPLICATION
  SA1 = cdial        EXECUTED = Y FORMAT = Y

FORMATING RESULT
  FA1 = dn           EXECUTED = Y RESULT = PASS
  OUTG DIGITS = 1234567890
  OUTG FNAI = intl
;

tekelecstp 11-02-16 13:52:44 EAGLE EST 44.0.0

SERVICE NAME = tificgpn SERVICE STATUS = ON
  INC DIGITS = 5701234567
  NAI = 4 FNAI = intl FDL = 10

MATCHING RULE
  FNAI = intl FDL = 10 PPFX = 570
  ACTION SET NAME = as130
  INVOKE SERVICE = none

CONDITIONING RESULT
  CA1 = cc3          EXECUTED = Y RESULT = PASS
  CA2 = ac3          EXECUTED = Y RESULT = PASS
  CA3 = snx          EXECUTED = Y RESULT = PASS
  INC DIGITS = 5701234567
  COND DIGITS = 5701234567

SERVICE APPLICATION
  SA1 = fpxrls       EXECUTED = Y FORMAT = N

FORMATING RESULT
  OUTG DIGITS = UNMODIFIED
  OUTG FNAI = UNMODIFIED
;

tekelecstp 11-02-16 13:52:44 EAGLE EST 44.0.0

TIF SERVICE
  REL will be sent without redirection number
;
```

This example shows the output in DEBUG mode with TIF processing that invokes the TIFCGPN service:

```
tst-msg:loc=1105:prot=isup:feat=tif:msgn=8:mode=debug
```

```
tekelecstp 11-02-16 13:55:39 EAGLE EST 44.0.0
```

```
SERVICE NAME = tif SERVICE STATUS = ON  
  INC DIGITS = 5001234567890  
  NAI = 4 FNAI = intl FDL = 13
```

```
MATCHING RULE  
  FNAI = intl FDL = 13 PPFX = 500  
  ACTION SET NAME = as90  
  INVOKE SERVICE = tificgpn
```

```
CONDITIONING RESULT  
  CA1 = cc3 EXECUTED = Y RESULT = PASS  
  CA2 = dnx EXECUTED = Y RESULT = PASS  
  INC DIGITS = 5001234567890  
  COND DIGITS = 5001234567890
```

```
SERVICE APPLICATION  
  SA1 = cdial EXECUTED = Y FORMAT = Y  
  Set FASKIP to FALSE, previous value was FALSE.
```

```
FORMATING RESULT  
  FA1 = dn EXECUTED = Y RESULT = PASS  
  OUTG DIGITS = 1234567890  
  OUTG FNAI = intl
```

```
;
```

```
tekelecstp 11-02-16 13:55:39 EAGLE EST 44.0.0
```

```
SERVICE NAME = tificgpn SERVICE STATUS = ON  
  INC DIGITS = 5701234567  
  NAI = 4 FNAI = intl FDL = 10
```

```
MATCHING RULE  
  FNAI = intl FDL = 10 PPFX = 570  
  ACTION SET NAME = as130  
  INVOKE SERVICE = none
```

```
CONDITIONING RESULT  
  CA1 = cc3 EXECUTED = Y RESULT = PASS  
  CA2 = ac3 EXECUTED = Y RESULT = PASS  
  CA3 = snx EXECUTED = Y RESULT = PASS  
  INC DIGITS = 5701234567  
  COND DIGITS = 5701234567
```

```
SERVICE APPLICATION  
  SA1 = fpxrls EXECUTED = Y FORMAT = N  
  SAVAL1 (ANSI ISUP)=54 SAVAL2 (ITU ISUP)=43  
  NOT SEARCHED, RLS cause=FPFXRLS(4)
```

```
FORMATING RESULT
  OUTG DIGITS = UNMODIFIED
  OUTG FNAI = UNMODIFIED
;
tekelecstp 11-02-16 13:55:39 EAGLE EST 44.0.0

TIF SERVICE
  REL will be sent without redirection number
;
```

This example displays the command output in debug format for the IDPRCDPN2 service when the INPRTG Service Action generates a connect response and the DRA digits are formatted by NPP.

```
tst-msg:feat=ttr:prot=ttr:msgn=1:mode=debug

tekelecstp 12-02-31 18:20:46 EST EAGLE 45.0.0
tst-msg:feat=ttr:prot=ttr:msgn=1:mode=debug
Command Accepted: Test message is sent.
;
TST-MSG-RESULT
=====

MSG = 1          TCAP_TYPE = INAP

SCCP
  CGPA_GT = 2
  CGPA_GT_NAI = 4      CGPA = 0123456789abcde
  CDPA_GT = 2
  CDPA_GT_NAI = 4      CDPA = 9912345

TCAP
  SK = 00000003      BCSM = 02
  CGPN_NAI = 4      CGPN = 81123457
  CDPN_NAI = 4      CDPN = 91123457

CDPN NPP PROCESSING

SERVICE NAME = idprcdpn3 SERVICE STATUS = ON
  INC DIGITS = 91123457
  NAI = 4 FNAI = intl FDL = 8

MATCHING RULE
  FNAI = intl FDL = 8 FPFX = 91
  ACTION SET NAME = cdset5

CONDITIONING RESULT
  CA1 = cc2          EXECUTED = Y RESULT = PASS
  CA2 = dn6          EXECUTED = Y RESULT = PASS
  INC DIGITS = 91123457
  COND DIGITS = 91123457

SERVICE APPLICATION
  SA1 = inprtg      EXECUTED = Y FORMAT = N
  INPRTG SA executed from IDPRCDPN3 NPP service
```

```
INDIV Action=INPRTG CONNECT Tokens: RN=a12
SA2 = cdpnpn      EXECUTED = Y FORMAT = N
CDPNNP SA processing bypassed if INPRTG SA
generating a response
SA3 = cgpnsvcrqd EXECUTED = Y FORMAT = N
SA4 = skgtartg   EXECUTED = Y FORMAT = N
SA5 = grnlkup    EXECUTED = Y FORMAT = N
Entity = 3 GRN = c12
SA6 = asdlkup    EXECUTED = Y FORMAT = N
ASD = d12
```

```
FORMATING RESULT
OUTG DIGITS = UNMODIFIED
OUTG FNAI = UNMODIFIED
```

;

```
CGPN NPP PROCESSING
```

```
SERVICE NAME = idprcgpn SERVICE STATUS = ON
INC DIGITS = 81123457
NAI = 4 FNAI = intl FDL = 8
```

```
MATCHING RULE
FNAI = intl FDL = 8 FPFX = 81
ACTION SET NAME = cgset2
```

```
CONDITIONING RESULT
CA1 = cc2      EXECUTED = Y RESULT = PASS
CA2 = ac2      EXECUTED = Y RESULT = PASS
CA3 = sn4      EXECUTED = Y RESULT = PASS
INC DIGITS = 81123457
COND DIGITS = 81123457
```

```
SERVICE APPLICATION
SA1 = inprtg   EXECUTED = Y FORMAT = Y
INPRTG SA execution bypassed for IDPRCGPN NPP service
since it has already executed in IDPRCDPN3 NPP service
SA2 = cgpnpn   EXECUTED = Y FORMAT = Y
CGPNNP SA processing bypassed if INPRTG SA
generating a response
SA3 = asdlkup  EXECUTED = Y FORMAT = Y
ASD = ddd1
SA4 = grnlkup  EXECUTED = Y FORMAT = Y
Entity = 3 GRN = ccc1
```

```
FORMATING RESULT
FA1 = asd      EXECUTED = Y RESULT = PASS
FA2 = grn      EXECUTED = Y RESULT = PASS
OUTG DIGITS = ddd1ccc1
OUTG FNAI = intl
```

;

```
INPRTG CONNECT RESPONSE DRA FORMATING RESULT
ACTION SET NAME = cdset5
FA LIST = FARN
```

```
FA1 = cc          EXECUTED = Y RESULT = PASS
FA2 = grn         EXECUTED = Y RESULT = PASS
FA3 = rn          EXECUTED = Y RESULT = PASS
FA4 = dn          EXECUTED = Y RESULT = PASS
OUTG DIGITS = 91c12a12123457
```

;

This example shows the output in debug mode for TIF Linkset Based Blacklisting:

```
tst-msg:loc=1107:prot=isup:msgn=1:feat=tif:mode=debug
```

```
tklcl1131101 20-09-15 12:38:37 EST EAGLE 46.9.1.0.0
```

```
SERVICE NAME = tif SERVICE STATUS = ON
INC DIGITS = 111111
NAI = 4 FNAI = intl FDL = 6
```

```
NO MATCHING FILTER FOUND
```

;

```
tklcl1131101 20-09-15 12:38:37 EST EAGLE 46.9.1.0.0
```

```
SERVICE NAME = tificgpn SERVICE STATUS = ON
INC DIGITS = 9711990201
NAI = 4 FNAI = intl FDL = 10
```

```
MATCHING RULE
```

```
FNAI = intl FDL = * FPFX = *
ACTION SET NAME = tificgpn
INVOKE SERVICE = none
```

```
CONDITIONING RESULT
```

```
CA1 = znx          EXECUTED = Y RESULT = PASS
INC DIGITS = 9711990201
COND DIGITS = 9711990201
```

```
SERVICE APPLICATION
```

```
SA1 = tiflsbl     EXECUTED = Y FORMAT = N
INDIV Continue with IAM
```

```
FORMATING RESULT
```

```
OUTG DIGITS = UNMODIFIED
OUTG FNAI = unkn
```

;

```
tklcl1131101 20-09-15 12:38:37 EST EAGLE 46.9.1.0.0
```

```
TIF SERVICE
```

```
REL will be sent without redirection number
```

;

This example shows the output in debug mode for TIF Redirecting Number Based Blacklisting:

```
tst-msg:loc=1107:prot=isup:msgn=1:feat=tif:mode=debug
```

```
tklc1131101 20-09-15 13:38:53 EST EAGLE 46.9.1.0.0
```

```
    SERVICE NAME = tif SERVICE STATUS = ON
      INC DIGITS = 111111
      NAI = 4 FNAI = intl FDL = 6
```

```
    MATCHING RULE
      FNAI = intl FDL = * FPFX = *
      ACTION SET NAME = tifcdpn
      INVOKE SERVICE = none
```

```
    CONDITIONING RESULT
      CA1 = znx EXECUTED = Y RESULT = PASS
      INC DIGITS = 111111
      COND DIGITS = 111111
```

```
    SERVICE APPLICATION
      SA1 = tifrdbl EXECUTED = Y FORMAT = Y
      INDIV CGPN = 21212121ASD = 12345
```

```
    FORMATING RESULT
      FA1 = asd EXECUTED = Y RESULT = PASS
      OUTG DIGITS = 12345
      OUTG FNAI = intl
```

```
;
```

```
tklc1131101 20-09-15 13:38:54 EST EAGLE 46.9.1.0.0
```

```
    SERVICE NAME = tificgpn SERVICE STATUS = ON
      INC DIGITS = 9876543210
      NAI = 4 FNAI = intl FDL = 10
```

```
    NO MATCHING FILTER FOUND
```

```
;
```

This example shows the output in debug mode for TIF Generic Name Based Blacklisting:

```
tst-msg:loc=1107:prot=isup:msgn=1:feat=tif:mode=debug
```

```
tklc1131101 20-09-15 15:49:31 EST EAGLE 46.9.1.0.0
```

```
    SERVICE NAME = tif SERVICE STATUS = ON
      INC DIGITS = 111111
      NAI = 4 FNAI = intl FDL = 6
```

```
    NO MATCHING FILTER FOUND
```

```
;
```

```
tklc1131101 20-09-15 15:49:31 EST EAGLE 46.9.1.0.0
```

```
    SERVICE NAME = tificgpn SERVICE STATUS = ON
      INC DIGITS = 9876543210
```



```
NAI = 4 FNAI = intl FDL = 10

MATCHING RULE
  FNAI = intl FDL = * FPFX = *
  ACTION SET NAME = tifcgpn
  INVOKE SERVICE = none

CONDITIONING RESULT
  CAI = znx          EXECUTED = Y RESULT = PASS
  INC DIGITS = 9876543210
  COND DIGITS = 9876543210

SERVICE APPLICATION
  SAI = tifgnbl     EXECUTED = Y FORMAT = Y
  INDIV Continue with IAM

FORMATING RESULT
  FAI = orig        EXECUTED = Y RESULT = PASS
  OUTG DIGITS = 9876543210
  OUTG FNAI = intl
;

tklcl1131101 20-09-15 15:49:31 EST EAGLE 46.9.1.0.0

TIF SERVICE
  IAM will be relayed with original CdPN digits
;
```

This example shows the output in debug mode for TIF Generic Name Based Blacklisting:

```
tst-msg:loc=1103:prot=isup:msgn=2:feat=tif:mode=debug:
```

```
tekelecstp 21-11-25 01:40:58 MST EAGLE 47.0

SERVICE NAME = tif SERVICE STATUS = ON
  INC DIGITS = 01234567890abcdef
  NAI = 3 FNAI = natl FDL = 17

MATCHING RULE
  FNAI = natl FDL = * FPFX = *
  ACTION SET NAME = tifcdpn1
  INVOKE SERVICE = tifcgpn

CONDITIONING RESULT
  CAI = znx          EXECUTED = Y RESULT = PASS
  INC DIGITS = 01234567890abcdef
  COND DIGITS = 01234567890abcdef

SERVICE APPLICATION
  SAI = nocgnrls    EXECUTED = Y FORMAT = Y
  NOT SEARCHED, Continue with IAM

FORMATING RESULT
```

```
FAI = orig          EXECUTED = Y RESULT = PASS
OUTG DIGITS = 01234567890abcdef
OUTG FNAI = natl
;

tekelecstp 21-11-25 01:40:58 MST EAGLE 47.0

SERVICE NAME = tificgpn SERVICE STATUS = ON
INC DIGITS = 01234567890abcdef
NAI = 3 FNAI = natl FDL = 17

MATCHING RULE
FNAI = natl FDL = * FPFX = *
ACTION SET NAME = tificgpn1
INVOKE SERVICE = none

CONDITIONING RESULT
CAI = znx          EXECUTED = Y RESULT = PASS
INC DIGITS = 01234567890abcdef
COND DIGITS = 01234567890abcdef

SERVICE APPLICATION
SAI = tificgnbl   EXECUTED = Y FORMAT = Y
INDIV Continue with IAM

FORMATING RESULT
FAI = orig          EXECUTED = Y RESULT = PASS
OUTG DIGITS = 01234567890abcdef
OUTG FNAI = natl
;
```

Related Topics

- [chg-gsm-msg](#)
- [chg-is41-msg](#)
- [chg-isup-msg](#)
- [chg-sccp-msg](#)
- [chg-tatr-msg](#)
- [chg-ttr-msg](#)
- [rtrv-gsm-msg](#)
- [rtrv-is41-msg](#)
- [rtrv-isup-msg](#)
- [rtrv-sccp-msg](#)
- [rtrv-tatr-msg](#)
- [rtrv-ttr-msg](#)

4.1.628 tst-npp-msg

Use this command to provision and test the NPP provided service, NPPT. The NPP Test Service allows customers to provision NPP Action Sets and Rules associated with the NPPT Service Rule Set. Customers can inject test messages to a provisioned NPPT Service Rule to verify proper digit string processing.

Parameters

digs (mandatory)

Digits. The incoming digit string for NPP to process.

Range:

1 - 32

loc (mandatory)

The Service Module card to which the test message is issued.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

nai (mandatory)

Incoming digit string Nature of Address Indicator (NAI) mapping value.

Range:

0 - 255

mode (optional)

The output format.

Range:

brief

summary format

full

full format

debug

debug format

Default:

brief

Example

```
tst-npp-msg:loc=1101:mode=full:digs=0ab4041234567:nai=3
```

Dependencies

None.

N/A N/A

Output

When the `mode=full` or `mode=debug` parameter is specified, the `FORMAT` field indicates whether formatting actions are executed. If formatting actions are not executed, then the `OUTG DIGITS` field displays a value of `UNMODIFIED`. If any digit string is blank, then the associated field displays a value of `EMPTY`.

The numbers shown to identify Conditioning Actions, Service Actions, and Formatting Actions are the individual parameter numbers or the position of the value in the parameter list when the command was entered. For example, `CA2` identifies either the value for the `ca2` parameter or the second `CA` value in the `ca` parameter list in the command (such as `ac3` in the `ca=cc2, ac3` parameter).

```
tst-npp-msg:loc=1101:digs=9090920292252645:nai=7:mode=full
```

```
SERVICE NAME = nppt SERVICE STATUS = ON
  INC DIGITS = 9090920292252645
  NAI = 7 FNAI = intl FDL = 16

MATCHING RULE
  FNAI = intl FDL = 16 FPFX = 9090
  ACTION SET NAME = set1

CONDITIONING RESULT
  CA1 = ign4      EXECUTED = Y RESULT = PASS
  CA2 = cc2       EXECUTED = Y RESULT = PASS
  CA3 = dn10      EXECUTED = Y RESULT = PASS
  INC DIGITS = 9090920292252645
  COND DIGITS = 920292252645

SERVICE APPLICATION
  SA1 = rtdbtrn   EXECUTED = Y FORMAT = Y

FORMATING RESULT
  FA1 = cc        EXECUTED = Y RESULT = PASS
  FA2 = rn        EXECUTED = Y RESULT = PASS
  FA3 = dn        EXECUTED = Y RESULT = PASS
  OUTG DIGITS = 92abcd0292252645
  OUTG FNAI = intl
```

```
tst-npp-msg:loc=1101:digs=0609192252645:nai=5:mode=full
```

```
SERVICE NAME = nppt SERVICE STATUS = ON
  INC DIGITS = 0609192252645
  NAI = 5 FNAI = natl FDL = 13

MATCHING RULE
  FNAI = natl FDL = 13 FPFX = 060
  ACTION SET NAME = set2

CONDITIONING RESULT
```

```

CA1 = ccdef          EXECUTED = Y RESULT = PASS
CA2 = ign3          EXECUTED = Y RESULT = PASS
CA3 = dn7           EXECUTED = Y RESULT = PASS
INC DIGITS = 0609192252645
COND DIGITS = 989192252

SERVICE APPLICATION
SA1 = rtdbtrnsp    EXECUTED = Y FORMAT = Y

FORMATING RESULT
FA1 = rn           EXECUTED = Y RESULT = PASS
FA2 = sp           EXECUTED = Y RESULT = PASS
FA3 = orig         EXECUTED = Y RESULT = PASS
OUTG DIGITS = 1bce0609192252645
OUTG FNAI = natl

```

4.1.629 tst-slk

Use this command for testing signaling links.

- The loopback parameter on the `tst-slk` command provides the ability to select from among the following loopback tests: local transceiver (`lxvr`), oam, line, payload, and either low-speed signaling links or ATM high-speed signaling links (`sltc`).
- The command is not valid on E5-ENET-B cards with SS7IPGW and IPGWI links.
- For low-speed links, LXVR and SLTC tests are allowed.
- For E5-ATM-B cards, the LXVR, SLTC, PAYLOAD, LINE, and OAM tests are allowed.
- For E5-ENET-B cards with IPLHC links, the SLTC test is allowed.
- For E5-E1T1-B cards, only the SLTC test is allowed.
- For E5-ENET-B or SLIC cards running the IPSP application, the command is only supported for IPSP-M2PA signaling links, and the SLTC test is allowed.

See [Summary of Loopback Testing Commands and Functions](#) in Appendix A.

Parameters

link (mandatory)

The signaling link on the card specified in the `loc` parameter. The links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all link parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have a location specified in the `loc` parameter.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

action (optional)

Indicator of command action to stop or start a test.

Range:

start

stop

Default:

start

force (optional)**Range:**

yes

no

Default:

no

loopback (optional)

The type of loopback test to run

Range:***line***

This test is similar to the payload loopback test, but the data transmitted to the remote system is received by the remote system's ATM driver.

lxvr

Loopback at the local transceiver without involving the remote STP. For the ADS0, AINF, AOCU, and AV35 appliques, the MTP-2 protocol stack and ISCC hardware are tested. For AATM applique and DS1 interface, the AATM hardware, ATM level 2 protocol stack, and AAL5CP portion of ATM driver are tested,

oam

Messages are passed between local and remote systems to guarantee that the ATMM portion of ATM driver is functioning.

payload

This test is similar to the local transceiver loopback test. The wire is also tested because the loopback is at the remote's DS1 interface instead of the local's DS1 interface.

sltc

This test can be run on either the low-speed signaling links or the ATM high-speed signaling links. This is the only test that is supported for *m2pa* links on IPLHC cards.

Default:

sltc

time (optional)

The time duration for testing the link.

Range:

1 - 240000

hhmmss

hh=hours (00-24)

mm=minutes (00-59)

ss=seconds (00-59)

For example, *time=1* or *time=000001* is one second; *time=240000* is 24 hours;

time=200 or *time=000200* is 2 minutes.

Default:

1

Example

```
tst-slk:loc=1203:link=a
```

```
tst-slk:loc=1203:link=a:loopback=lxvr
```

```
tst-slk:loc=1205:link=b:time=000200:force=yes:action=start
```

```
tst-slk:loc=1205:link=b:action=stop
```

```
tst-slk:loc=1205:link=b:time=200
```

Dependencies

The card in the location indicated by the *loc* parameter must already be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

A card location that is valid and defined in the database must be specified.

- A card location equipped with an E5-APP-B card cannot be specified.
- A card location equipped with a Telco Switch cannot be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

If the signaling link is an ATM HSL signaling link, only the *link=a* parameter can be specified.

N/A N/A

This command is not supported for cards running the IPGHC application.

3837 E3837 Cmd Rej: Command not valid for IPGHC

The *payload* and *line* values are not valid for the *loopback* parameter when the card is an E1 ATM.

2788 E2788 Cmd Rej: Invalid Loopback selection for LIME1ATM

Only the SLTC test can be run on card types LIME1 and LIMT1.

2740 E2740 Cmd Rej: The specified LOC only supports SLTC loopbacks

The card must contain the specified signaling link.

N/A N/A

The specified signaling link must be provisioned in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

The specified signaling link must be an SS7 signaling link.

2917 E2917 Cmd Rej: Link must be SS7 to execute command

The signaling link that is used for LFS (Link Fault Sectionalization) testing cannot be active.

2916 E2916 Cmd Rej: Link must not be active to execute command

A previously entered command for a link test must be accepted before another link test command can be entered.

2905 E2905 Cmd Rej: LFS command in progress

This command cannot be entered if the LFS test is running on the specified link.

2921 E2921 Cmd Rej: LFS must not be running on requested link

The specified link cannot be in Command Driven Loopback (CDL) when this command is entered. The link must be removed from CDL before this command can be entered for the link. (See the `act/dact-cdl` commands).

4242 E4242 Cmd Rej: Requested link must not be in command driven loopback

The `force=yes` parameter must be specified to start a test when 256 or more tests are already running in the system.

3799 E3799 Cmd Rej: FORCE=YES must be specified

This command cannot be entered if the maximum number of LFS or link tests are already running in the system. At least one active test must complete before the command can be entered again.

2923 E2923 Cmd Rej: Maximum number of link tests already in progress

Only one link test can be running on a signaling link at one time.

4243 E4243 Cmd Rej: Link test command in progress

The `action=stop` parameter cannot be specified when there is no active link test running on the specified link.

4244 E4244 Cmd Rej: Link test command not in progress

When the `action=stop` parameter is specified, the `loopback`, `time`, and `force` parameters cannot be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If an IPSPG-M3UA signaling link is used, then this command cannot be entered.

4813 E4813 Cmd Rej: Command not valid for IPSPG-M3UA

If an IPSPG-M2PA signaling link is used, the `loopback=sltc` parameter must be specified.

4077 E4077 Cmd Rej: Parameters incompatible with adapter type

The card must be equipped and in service, and must be one of the following cards:

- E5-E1T1-B card running the SS7ANSI or CCS7ITU application
- E5-ATM-B card running the ATMANSI or ATMITU application
- E5-ENET-B card running the IPLHC or IPSPG application
- SLIC card running the IPSPG application

2212 E2212 Cmd Rej: Invalid card type for this command

Notes

The `lxvr` and `sltc` loopback tests can be run on low-speed signaling links. All the loopback tests can be run on the ATM high-speed signaling links.

Output

If the card is inhibited (not in service), this message appears when a link test is attempted:

```
tst-slk:loc=1203:link=a
```

```
rlghncxa03w 03-11-07 16:19:08 EST EAGLE 31.3.0  
Command Rejected : Card is not in service.
```

```
;
```

```
tst-slk:loc=1205:link=b:time=000200:force=yes:action=start
```

```
tekelecstp 03-11-27 16:15:20 EST EAGLE 31.3.0  
tst-slk:loc=1205:link=b:time=000200:force=yes:action=start  
Command Accepted: Test Link message is sent.
```

```
;
```

```
tekelecstp 03-11-27 16:15:22 EST EAGLE 31.3.0  
Command Completed.
```

```
;
```

```
tekelecstp 03-11-27 16:22:25 EST EAGLE 31.3.0  
LOC = 1205 Link = B LSN = ls12345678 Start time = 16:22:25  
LOOPBACK = SLTC TIME = 00:02:00  
TEST STATUS = Loopback success
```

```
;
```

```
tst-slk:loc=1205:link=b:action=stop
```

```
tekelecstp 03-11-27 16:15:20 EST EAGLE 31.3.0  
tst-slk:loc=1205:link=b:action=stop  
Command Accepted: Stop Test Link message is sent.
```

```
;
```

```

tekelecstp 03-11-27 16:15:22 EST  EAGLE 31.3.0
Command Completed.
;

tekelecstp 03-11-27 16:22:25 EST  EAGLE 31.3.0
LOC = 1205   = B  LSN = ls12345678  Start time = 16:22:25
LOOPBACK = LXVR      TIME = 00:01:00
TEST STATUS = Loopback cleared
;

tst-slk:loc=1205:link=b:time=200

tekelecstp 03-11-27 16:15:20 EST  EAGLE 31.3.0
tst-slk:loc=1205:link=b:time=200
Command Accepted: Stop Test Link message is sent.
;

tekelecstp 03-11-27 16:15:22 EST  EAGLE 31.3.0
Command Completed.
;

tekelecstp 03-11-27 16:22:25 EST  EAGLE 31.3.0
LOC = 1205  Link = B  LSN = ls12345678  Start time = 16:22:25
LOOPBACK = SLTC      TIME = 00:00:53
TEST STATUS = Loopback failed
;

```

Legend

- **LOC**—Card location that contains the signaling being tested
- **Link**—Signaling link being tested on the card
- **LSN**—Name of the linkset that contains the link being tested
- **Start time**—Time that the test started
- **LOOPBACK**—Type of loopback test being run
- **TIME**—Length of time that the test ran. This value can exceed the value specified in the `time` parameter if the test requires more than the specified time to complete.
- **TEST STATUS**—
 - If the `action=start` (specified or default) is specified, any of the following *TEST STATUS* values can appear:
 - * Loopback success
 - * Loopback failed
 - * Loopback aborted
 - * Loopback in-progress
 - * Loopback prevented
 - * Loopback invalid

- If the `action=stop` parameter is specified, any of the following *TEST STATUS* values can appear:
 - * Loopback cleared
 - * Loopback could not be cleared

Related Topics

- [act-lpo](#)
- [act-slk](#)
- [blk-slk](#)
- [canc-lpo](#)
- [canc-slk](#)
- [dact-slk](#)
- [inh-slk](#)
- [rept-stat-tstslk](#)
- [rtrv-slk](#)
- [ublk-slk](#)
- [unhb-slk](#)

4.1.630 tst-t1

Use this command to test T1 ports. The command is rejected if a loopback test is not compatible with the port type.



Note:

This command can be entered for E5-E1T1-B cards.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

t1port (mandatory)

T1 port number. The value must be a T1 port that has already been configured with a T1 interface on the specified card.

Range:

1 - 8

action (optional)

Indicator of command action to stop or start a test.

Range:

start

stop

Default:

start

loopback (optional)

Select loopback test type.

Range:

line

lxvr

local transceiver

payload

feline

far end line

fepayload

far end payload

Default:

lxvr

Example

```
tst-t1:t1port=1:loc=1203:loopback=lxvr
```

```
tst-t1:t1port=1:loc=1203:action=stop
```

Dependencies

This command cannot be entered during upgrade.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

The value specified for the `loc` parameter must indicate an E5-E1T1-B card with card type LIMT1.

2212 E2212 Cmd Rej: Invalid card type for this command

The card in the location specified by the `loc` parameter must be equipped.

2739 E2739 Cmd Rej: T1 card location is unequipped

The card in the location specified by the `loc` parameter must be in service.

2387 E2387 Cmd Rej: Card is not in service

The T1 port specified by the `t1port` parameter must have a defined T1 interface.

2737 E2737 Cmd Rej: The T1PORT at the specified location is not equipped

All signaling links that provide timeslots serviced by T1 interfaces on the specified card must be deactivated before this command can be entered. None of the signaling links can be running link diagnostic tests (`tst-slk` and `act-cdl` commands) when this command is entered.

2736 E2736 Cmd Rej: All signaling links serviced by the T1 must be deactivated

Only one port test can be running on the T1 port specified by the `t1port` parameter at one time.

3615 E3615 Cmd Rej: T1 Port test command in progress

The E1/T1 Port table must be accessible.

4059 E4059 Cmd Rej: Failed reading the E1/T1 table

The `action=stop` parameter can be specified only when a port test is running.

4013 E4013 Cmd Rej: T1 Port test command not in progress

If the `action=stop` parameter is specified, a value of *feline* or *fepayload* must be specified for the `loopback` parameter.

2908 E2908 Cmd Rej: LOOPBACK param needed for FELINE or FEPAYLOAD exclusively

If the `action=stop` parameter is specified, and a value of *feline* or *fepayload* is specified for the `loopback` parameter, then there cannot be an active loopback for the T1 span, or the active loopback must be the one specified in the `tst-t1:action=stop` command.

2913 E2913 Cmd Rej: STOP Loopback type must match active loopback

Notes

Only one port test can be performed at a time on a T1 port. When a port test is in progress on a T1 port, subsequent test requests are rejected.

If a loopback type of *feline* or *fepayload* is specified, then the loopback requests are sent to the far end. No response is given from the far end to indicate if the request was acted upon or received. The local card which hosts the T1 span in the EAGLE does not instrument the loopback locally but maintains knowledge of the far end loopback request. If the local card boots, this knowledge is lost by the card.

To maintain the far end loopback states, if the T1 card with an active *feline* or *fepayload* test boots, the card loses any knowledge of the Far End loopback request, but the OAM retains that knowledge. If the OAM boots, the T1 card updates the OAM with its last known loopback state. If both the T1 card and the active OAM card boot while a Far End Loopback is active, then there is no way of determining the T1 state; however, a `tst-t1:action=stop:action=(feline or fepayload)` command can still be sent.

Output

```
tst-t1:t1port=1:loc=1203:loopback=lxvr

rlghncxa03w 05-01-07 16:19:08 EST  EAGLE5 33.0.0
Command Accepted: Test Port message is sent.
;
rlghncxa03w 05-01-07 16:19:08 EST  EAGLE5 33.0.0
```

```

Command Completed.
;

tst-t1:tlport=1:loc=1203:action=stop

rlghncxa03w 05-01-07 16:19:08 EST EAGLE5 33.0.0
Command Accepted: Stop Port test message is sent.
;

tekelecstp 03-12-16 14:31:23 EST EAGLE5 33.0.0
Command Completed.
;

```

Related Topics

- [chg-t1](#)
- [dlt-t1](#)
- [ent-t1](#)
- [rtrv-t1](#)

4.1.631 ublk-slk

Use this command to cancel a local processor outage (LPO) and restore the link to its previous state. Link status signal units (LSSU) with status of processor outage are stopped, and the link begins sending MSUs again. IPSPG-M3UA signaling links are allowed to enter service by allowing received AS-ACTIVE messages to be accepted.



Note:

The blocked status of the signaling link is not preserved across a LIM reboot.

Parameters

link (mandatory)

The signaling link on the card specified in the `loc` parameter. The signaling links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all link parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have a location specified in the `loc` parameter.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
ublk-slks:loc=2311:link=b
```

Dependencies

A card location that is valid and defined in the database must be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The value specified for the `loc` parameter must refer to one of the following cards, and the referenced card must be equipped:

- E5-ATM-B card running the ATMANSI or ATMITU application
- E5-ENET-B card running the IPLHC or IPSG application
- E5-E1T1, or E5-E1T1-B card running the SS7ANSI or CCS7ITU application
- SLIC card running the IPSG application

2101 E2101 Cmd Rej: Card location is unequipped

This command is not valid for E5-ENET-B cards with IPGHC or TCP/IP links.

3837 E3837 Cmd Rej: Command not valid for IPGHC

The card must contain signaling links.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

The signaling link must be equipped in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

The card in the specified card location cannot be an E5-TDM card, an E5-MDAL card, a MUX card, or the cards running the OAM application.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

This command is not valid for links belonging to proxy linksets.

4693 E4693 Cmd Rej: Command not allowed for proxy links

An appropriate value must be specified for the `link` parameter when an ATM card is used:

- *a-a1, b*—E5-ATM-B card running the ATMANSI or ATMITU application

2972 E2972 Cmd Rej: Specified Link is not valid for Card and Appl Type

This command is not supported for links associated with J7 APCs.

2810 E2810 Cmd Rej: Command is not valid for ITU-N16 links

Notes

Unblocking a signaling link removes a Level 2 failure resulting from a `blk-slk` of an ATM high-speed signaling link.

The function of this command is the same as the `canc-lpo` command.

Installation Guide provides an illustration of card locations.

Output

```
ublk-slk:loc=2311:link=b
```

```
rlghncxa03w 03-03-07 11:11:28 EST EAGLE 31.3.0  
Local processor outage being cleared.  
;
```

```
ublk-slk:loc=1113:link=a
```

```
rlghncxa03w 03-03-07 11:11:28 EST EAGLE 31.3.0  
Command Rejected : Location is not valid for command.  
;
```

Related Topics

- [act-lpo](#)
- [blk-slk](#)
- [canc-lpo](#)

4.1.632 unhb-alm

Use this command to restore the reporting of alarms for the given device.

Parameters

 **Note:**

See [Point Code Formats and Conversion](#) for a detailed description of point code formats, rules for specification, and examples.

dev (mandatory)

Device. The device where the reporting of alarms is to be restored.

Range:

applsock

IP gateway application socket

as
IP gateway application. Application Server

card
Cards in the database

cdt
Customer defined troubles

clock
System clock

dlk
IP ports on the VSCCP, EROUTE, MCPM, and FC-capable cards

e1port
E1 port on E5-E1T1-B cards

ls
Linksets

lsmsconn
Communication link between the LSMS and the EMS

route
Route

slk
Signaling links

t1port
T1 port on E5-E1T1-B cards

trm
Terminals

rtx
Exception Route

enet
Ethernet

tps
TPS subsystem

asname (optional)

Gateway Application Server name. When used with the `dev=as` parameter, this parameter can be used to uninhibit alarms for the named Application Server.

Range:

aaaaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

cic (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the `ecic` parameter to define the CIC range, which is used as an exception routing criterion for the specified exception route.

Range:

0 - 16383

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:*dpca***Range:***p-, 000-255, **

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

Destination point code for inhibiting alarms for routes.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:*s-, p-, ps-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**zone—0-7**area—000-255**id—0-7*

The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:*s-, p-, ps-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-, p-, ps**nnnnn—0-16383*

gc—aa-zz
m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000—255

ssa—000—255

sp—000—255

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*. The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix---p

un---000---127

sna---000---15

mna---000---31

e1port (optional)

Port ID. The E1 port on the specified E5-E1T1-B card. This parameter is mandatory if the `dev=e1port` parameter is specified.

Range:

1 - 8

ecic (optional)

Ending Circuit Identification Code. This parameter is used with the `cic` parameter to define the CIC range, which is used as an exception routing criterion for the specified exception route.

Range:

0 - 16383

id (optional)

Customer Defined Trouble (CDT) ID. Customer Defined Trouble IDs 1 through 4 are generated critical alarms. Because critical alarms cannot be turned off, Customer Defined Trouble IDs 1 through 4 cannot be specified as values for the `id` parameter. This parameter is mandatory if the `dev=cdt` parameter is specified.

Range:

5 - 16

ilsn (optional)

Incoming Link Set Name. The name of the originating linkset. This value is used as part of the exception routing criteria for the specified exception route.

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

link (optional)

Signaling link on the card specified in the *loc* parameter.

Synonym:*port***Range:***a, b, a1 - a31, b1 - b31**a1, a2, b1, b2* — dev=lsmsconn*a, b, a1-a31, b1-b31* — dev=slk for an E5-E1T1-B card*a1, b1* — dev=dlk for an FC-capable card*a, b* — dev=enet for an E5-ENET-B card**loc (optional)**

The card location as stenciled on the shelf of the system.

Range:

1101 - 1113, 1115, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318, 3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118

lsn (optional)

Linkset name. The name of the linkset containing the device where alarm reporting is to be restored.

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

opc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:*opca***Range:**

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006–255`.
The point code `000-000-000` is not a valid point code.

opc/opca/opci/opcn/opcn24/opcn16 (optional)

Origination point code

opci (optional)

ITU international origination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p-*, *ps-*, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*, *p-*, *ps*

zone—0-7

area—000-255

id—0-7

The point code `0-000-0` is not a valid point code.

opcn (optional)

ITU national origination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p-*, *ps-*, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*, *p-*, *ps*

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

opcn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p*

msa—000–255

ssa—000–255

sp—000–255

opcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*). The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:*p--*, *000---127*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix--p**un---000---127**sna---000---15**mna---000---31***si (optional)**

Service Indicator. This parameter is used as the exception routing criterion for the specified exception route.

Range:*0 - 15***sname (optional)**

Gateway application socket. When used with the `dev=applsock` parameter, this parameter can be used to uninhibit alarms for the named IP7 application socket.

Range:*aaaaaaaaaaaaaaaa*

1 to 15 alphanumeric characters

t1port (optional)

Port ID. T1 port on the specified E5-E1T1-B card. This parameter is mandatory if the `dev=t1port` parameter is specified.

Range:*1 - 8***trm (optional)**

Terminal ID. The ID number of the terminal whose alarms are to be uninhibited.

Range:*1 - 40***Default:**

Report displays on the terminal where the command was issued.

Example`unhb-alm:dev=route:dpc=1-1-1``unhb-alm:dpc=1-101-1:opc=4-4-4:dev=rtx``unhb-alm:loc=1102:dev=dlk:port=a1``unhb-alm:dpcn16=121-10-15:opc16=121-10-15:dev=rtx`**Dependencies**

This command is not allowed in the upgrade mode.

3276 E3276 Cmd Rej: Command not allowed while in upgrade mode

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

When the `dev=card` parameter is specified, the `loc` parameter must be specified.

2366 E2366 Cmd Rej: LOC must be specified

When the `dev=dlk` parameter is specified, the `loc` parameter must be specified.

2366 E2366 Cmd Rej: LOC must be specified

When the `dev=slk` parameter is specified, the `loc` and `link` parameters must be specified.

2903 E2903 Cmd Rej: LOC and PORT parameter combination must be specified

When the `dev=e1port` parameter is specified, the `loc` and `e1port` parameters must be specified.

4214 E4214 Cmd Rej: LOC and E1PORT parameter combination must be specified

When the `dev=t1port` parameter is specified, the `loc` and `t1port` parameters must be specified.

4215 E4215 Cmd Rej: LOC and T1PORT parameter combination must be specified

When the `dev=ls` parameter is specified, the `lsn` parameter must be specified.

2951 E2951 Cmd Rej: LSN must be specified

When the `dev=trm` parameter is specified, the `trm` parameter must be specified.

2966 E2966 Cmd Rej: TRM must be specified

When the `dev=cdt` parameter is specified, the `id` parameter must be specified.

2953 E2953 Cmd Rej: ID must be specified

When the `dev=lsmsconn` parameter is specified, the `link` parameter must be specified.

2952 E2952 Cmd Rej: PORT must be specified

When the `dev=route` parameter is specified, a `dpc/dpca/dpci/dpcn/dpcn24/dpcn16` parameter must be specified.

3433 E3433 Cmd Rej: DPC parameter must be specified

When the `dev=applsock` parameter is specified, the `sname` parameter must be specified.

2949 E2949 Cmd Rej: SNAME must be specified

When the `dev=as` parameter is specified, the `asname` parameter must be specified.

4068 E4068 Cmd Rej: Must specify ASNAME

The linkset specified by the `lsn` parameter must be equipped in the database.

2384 E2384 Cmd Rej: Link set is not equipped

If the `dev=slk` or `dev=dlk` parameter is specified, the specified `link` must exist in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

The STP Options table must be accessible.

2852 E2852 Cmd Rej: Failed reading STP Options table

The Device Alarm Inhibit table must be accessible.

3437 E3437 Cmd Rej: Device alarm inhibit table not accessible

The parameters that can be specified with the `dev` parameter vary, depending on the value specified for the `dev` parameter as shown:

- `dev= (any value)`— `dur` or `lvl`
- `dev=asname` — `as`
- `dev=dpc/dpca/dpci/dpcn/dpcn24/dpcn16` — `route`
- `dev=id` — `cdt`
- `dev=loc` — `card`, `dlk`, `elport`, `slk`, `tlport`, `enet`
- `dev=lsn` — `ls`
- `dev=elport` — `elport`
- `dev=link (link=a, b)`— `dlk`, `slk`, `enet`
- `dev=link (link=a1, b1)`— `dlk` (For FC-capable cards)
- `dev=link (link=a, b, a1, a2, b1, b2, a3, b3)`— `slk`
- `dev=link (link=a1, a2, b1, b2)`— `lsmsconn`
- `dev=sname` — `applsock`
- `dev=tlport` — `tlport`
- `dev=trm` — `trm`

2965 E2965 Cmd Rej: Too many parameters entered

If the `sname` parameter is specified, the socket name must exist in the IPAPSOCK table.

3767 E3767 Cmd Rej: Socket Name not defined

If a point code parameter is specified, the point code must exist in the Routing table.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

The card location that is specified in the `loc` parameter must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The specified device type must be supported by the card in the specified card location.

4366 E4366 Cmd Rej: Dev parameter is not supported by the specified location

The Origin-Based MTP Routing feature must be turned on before specifying the `dev=rtx` parameter.

4584 E4584 Cmd Rej: MTP Origin Based Routing Feature must be ON

The `link` parameter must be valid for the selected device type.

2950 E2950 Cmd Rej: PORT parameter invalid for DEV selected

The card specified by the `loc` parameter must have an IPS, MCP, EROUTE, VSCCP, IPSTG, IPLIMI, SS7IPGW, or IPGWI application.

2131 E2131 Cmd Rej: Parameters not valid for card type

The J7 Support feature must be enabled before the `opc16/dpc16` parameters can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

Output

```
unhb-alm:dev=route:dpc=1-1-1

    rlghncxa03w 03-03-23 13:20:59 EST  EAGLE 31.3.0
    Alarms are inhibited.

    rlghncxa03w 03-03-23 13:20:59 EST  EAGLE 31.3.0
    Command Completed.
;

unhb-alm:dpc=1-101-1:opc=4-4-4:dev=rtx

    stdcfg2b 06-05-27 20:22:02 EST  EAGLE 35.0.0
    Alarms are enabled
    Command Completed.
;
```

Related Topics

- [inh-alm](#)
- [rept-stat-alm](#)
- [rept-stat-card](#)
- [rept-stat-cdt](#)
- [rept-stat-dlk](#)
- [rept-stat-dstn](#)
- [rept-stat-ls](#)
- [rept-stat-rte](#)
- [rept-stat-rtx](#)
- [rept-stat-seas](#)
- [rept-stat-slk](#)

- [rept-stat-sys](#)
- [rept-stat-trbl](#)
- [rept-stat-trm](#)
- [rtrv-log](#)

4.1.633 unhb-slk

Use this command to return an inhibited signaling link to service. If the link was aligned when it was inhibited, a changeover occurred. This command causes a changeback on the specified link. MSUs are transmitted on the link after the changeback is issued.



Note:

The inhibited status of the signaling link is not preserved across a LIM reboot.

Parameters

link (mandatory)

The signaling link on the card specified in the `loc` parameter. The signaling links can be specified in any sequence or pattern.

Synonym:

port

Range:

a, b, a1 - a63, b1 - b63

Not all card types support all link parameter values.

See [Table A-1](#) for valid link parameter range values for each type of card that can have a location specified in the `loc` parameter.

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

Example

```
unhb-slk:loc=1301:link=a
```

Dependencies

A card location that is valid and defined in the database must be specified.

2376 E2376 Cmd Rej: Specified LOC is invalid

No other action command can be in progress when this command is entered.

2368 E2368 Cmd Rej: System busy - try again later

The value specified for the `loc` parameter must refer to one of the following cards, and the referenced card must be equipped:

- E5-E1T1-B card running the SS7ANSI or CCS7ITU application
- E5-ATM-B card running the ATMANSI or ATMITU application
- E5-ENET-B card running the IPLIMI, or IPSP application
- SLIC card running the IPSP application

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The card must contain signaling links.

2292 E2292 Cmd Rej: Card does not exist or is not a LIM (LOC)

The signaling link must be equipped in the database.

2373 E2373 Cmd Rej: Link is unequipped in the database

The inhibit and uninhibit actions are valid for links on E5-ENET-B cards running the IPLIMx application.

3449 E3449 Cmd Rej: Command not supported with current IPLIML2 setting

The card in the specified card location cannot be an E5-TDM card, an E5-MDAL card, a MUX card, or the cards running the OAM application.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

This command is not valid on E5-ENET-B cards with SS7IPGW, IPGWI, or IPSP-M3UA links. IPLIMI links can be uninhibited.

3754 E3754 Cmd Rej: Command is not supported for IPGW(x) links

If an IPSP-M3UA signaling link is used, then this command cannot be entered.

4077 E4077 Cmd Rej: Parameters incompatible with adapter type

An appropriate value must be specified for the `link` parameter when an ATM card is used:

- *a-a1, b*—E5-ATM-B card running the ATMANSI or ATMITU application

2972 E2972 Cmd Rej: Specified Link is not valid for Card and Appl Type

This command is not supported for links associated with J7 APCs.

2810 E2810 Cmd Rej: Command is not valid for ITU-N16 links

Notes

The function of this command is the same as the `canc-lpo` command.

Installation Guide provides an illustration of card locations.

Output

```
unhb-slk:loc=1301:link=a
```

```
rlghncxa03w 03-03-23 13:20:59 EST EAGLE 31.3.0
```

```
Allow Link message sent to card  
;
```

Related Topics

- [act-slk](#)
- [blk-slk](#)
- [dact-slk](#)
- [dlt-slk](#)
- [ent-slk](#)
- [inh-slk](#)
- [rept-stat-slk](#)
- [rtrv-slk](#)
- [tst-slk](#)
- [ublk-slk](#)

4.1.634 unlock

Use this command to unlock a previously locked terminal keyboard. Anyone attempting to use the keyboard is prompted to enter the password of the currently logged-in user.

Parameters

This command has no parameters.

Example

```
unlock
```

Dependencies

You must enter the password of the logged in user to unlock the keyboard.

2765 E2765 Cmd Rej: Invalid password. Keyboard is locked. Enter UNLOCK command

This command is valid only if the keyboard is locked.

2767 E2767 Cmd Rej: Keyboard is not locked

The port must not be in an unlock disabled state because of excessive successive unlock failures.

2770 E2770 Cmd Rej: Terminal temporarily disabled. Excessive UNLOCK failures

Notes

None

Output

unlock

```
Enter LOGIN password to unlock keyboard :
```

Related Topics

- [lock](#)

5

Debug Commands

This chapter contains information about debug commands used in troubleshooting and debugging the system. These commands are intended only for [#unique_731](#) personnel and authorized engineering personnel in the operating companies. The use of these commands is restricted to personnel who have access to the command class Debug.

CAUTION: These commands are to be used precisely as they are described in this chapter, and only under the direction of Customer Care Center personnel. Any other use of these commands can result in a system failure.

This chapter contains the debug commands in alphabetical order.

5.1.1 act-gedti

Use this command to activate a GEDTI Hub for Eagle Eyes. The state of the GEDTI Hub is changed from DACT(Deactivated) to ACT(Active).



Note:

The GEDTI hub must be Deactivated on the specified card before the command can be executed. If the card boots, then the status of the GEDTI Hub will be reset to DACT.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
act-gedti:loc=1102
```

Dependencies

The value specified for the `loc` parameter must refer to an equipped card location.

2101 E2101 Cmd Rej: Card location is unequipped.

The card at the specified location must be configured as GEDTI Hub.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

Activating the state of GEDTI Hub that is already activated has no effect.

3827 E3827 Cmd Rej: No change requested

The card at the specified location must not be a reserved location.

2154 E2154 Cmd Rej: Card slot reserved by system

Notes

None.

Output

```
act-gedti:loc=1101
```

```
Command Accepted - Processing
```

```
tekelecstp 11-08-16 18:35:44 MST EAGLE 46.0.0 act-gedti:loc=1101  
Command entered at terminal #1.;
```

```
tekelecstp 11-08-16 18:35:44 MST  
UNKNOWN EAGLE 46.0.0 Activate GEDTI Hub message sent to card.;
```

```
tekelecstp 11-08-16 18:35:44 MST EAGLE 46.0.0  
Command Completed.;
```

Related Topics

- [chg-gedti-card](#)
- [dact-gedti](#)
- [rept-stat-gedti](#)

5.1.2 act-ip-lnk

Use this command to activate an IP link and put the link into service. The state of the link is changed from OOS-MT-DSBLD (Out-Of-Service-Maintenance-Disabled) to OOS-MT (Out-Of-Service-Maintenance), IS-ANR (In-Service-Abnormal) or IS-NR (In-Service-Normal).

Note:

The specified card must be Active before the command can be executed. If the card boots, then the status of the IP link will be reset.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118, 1113, 1115

port (mandatory)

Ethernet interface Port ID.

Range:**a**

IP Port A

b

IP Port B

c

IP Port C

d

IP Port D

fca

Fast Copy Port A

fcb

Fast Copy Port B

Example

```
act-ip-lnk:loc=1102:port=a
act-ip-lnk:loc=1203:port=fca
act-ip-lnk:loc=1103:port=c
act-ip-lnk:loc=1202:port=d
```

Dependencies

The value specified for the `loc` parameter must refer to one of the following cards, and the referenced card must be equipped:

- E5-ENET-B card running the EROUTE, IPGWx, IPLIMx, or IPSG application
- IPSM card
- E5-SM4G or E5-SM8G-B card running the VSCCP application
- E5-OAM card running the OAMHC application
- E5-MCPM-B
- SLIC card

A valid value must be specified for the `loc` parameter.

2376 E2376 Cmd Rej: Specified LOC is invalid

The value specified for the `port` parameter must be supported by the card:

- port A - E5-OAM card running OAMHC application, IPSM card, E5-MCPM-B card
- port A, B - E5-ENET-B card running the EROUTE or IPLIMx application, E5-SM4G or E5-SM8G-B card running the VSCCP application
- port A, B, FCA, FCB - E5-ENET-B card running the IPGWx or IPSG application
- port A, B, C and D are valid for SIP/ENUM/DEIR application running on SLIC card.

2975 E2975 Cmd Rej: Specified Port is not supported

The card at the specified location must be configured.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The card in the specified location must be Active before this command can be executed.

2387 E2387 Cmd Rej: Card is not in service

Notes

The `act-ip-lnk/dact-ip-lnk` commands were created as debug means - aids to turn off or disable the IP interface to troubleshoot network problems, specifically to allow the operator to troubleshoot IP network flooding issues that can cause EAGLE cards to boot repeatedly while trying to come up. These commands should NOT be used for general maintenance actions since they have not been rigorously tested and their usage should be limited to situations like described above.

Interface A/D is used for ExAP connectivity and interface B/C is used for the signaling network on the SLIC card running the SIP/ENUM/DEIR application.

Output

```
act-ip-lnk:loc=1101:port=a
```

```
Command Accepted - Processing
```

```
tekelecstp 11-08-16 19:52:01 MST EAGLE 44.0.0
act-ip-lnk:loc=1101:port=a
Command entered at terminal #1.
```

```
;
```

```
tekelecstp 11-08-16 19:52:01 MST EAGLE 44.0.0
Activate IP link message sent to card.
```

```
;
```

```
tekelecstp 11-08-16 19:52:01 MST EAGLE 44.0.0
Command Completed.
```

```
;
```

```
act-ip-lnk:loc=1103:port=c
```

```
Command Accepted - Processing
```

```
tekelecstp 16-05-25 03:48:33 MST EAGLE 46.4.0.0.0-69.1.0
act-ip-lnk:loc=1103:port=c
```

```

Command entered at terminal #18.
;

tekelecstp 16-05-25 03:48:33 MST  EAGLE 46.4.0.0.0-69.1.1.0
Activate IP link message sent to card.
;

tekelecstp 16-05-25 03:48:33 MST  EAGLE 46.4.0.0.0-69.1.1.0
Command Completed.
;

```

Related Topics

- [rtrv-ip-lnk](#)

5.1.3 act-upgrade

Use this command to perform a software upgrade from a source release to the target release on an in-service system.

▲ Caution:

It is strongly recommended that this command be used only in conjunction with the system Upgrade Procedure for your target release. The Upgrade Procedure provides step-by-step information on performing an upgrade.

Parameters

action (mandatory)

The action to be performed for the upgrade process.

▲ Caution:

The `converttoam` and `netcomplete` actions should be used only under the direction of My Oracle Support (MOS).

Range:

yyyyyyyyyy

Up to 10 alphabetic characters. Valid actions are:

- `chkrel`—Validates the stored upgrade target release on the physical disk as specified by the `src` parameter.
- `converttoam`—Converts the standby OAM database.
- `convertstp`—Performs all OAM and network conversions necessary for an upgrade. This command transitions through all of the upgrade phases to upgrade completion. If measurement collection is turned on, this command automatically inhibits measurements during the upgrade. Upon completion of the upgrade, this command

returns the MASPs to full-function mode with measurement collection turned back on.

- *createsets*—Assigns network cards to upgrade-grouping sets.
- *dbstatus*—Reports the status of all database partitions on the TDM fixed disks and the removable drive(s) (similar to the `rept-stat-db:display=version` command).
- *displaysets*—Reports the upgrade-grouping sets of network cards.
- *getrel*—Retrieves the upgrade target release file from either the EAGLE software release distribution server or the plug-in flash drive. It then expands the data on the inactive partition group of the hard disks.
- *netcomplete*—Indicates upgrade completion and places the system in a fully functional mode.
- *oamcomplete*—Sets the upgrade phase number to 3, and enables the beginning of controlled card loading.
- *refreshsets*—Not yet supported.
- *verifysets*—Verifies that the card set list is consistent with the current EAGLE configuration and displays detailed information on any inconsistencies found.

force (optional)

Allows the user to override Card Set List verification and perform upgrade when only minor inconsistencies are present.

Range:

yes

Override the Card Set List verification and perform the upgrade.

release (optional)

The name of the software release file to be downloaded.

This file contains the upgrade target release on the software release distribution server or plug-in flash drive.

Range:

xxxxxxxxxxxxxxxxxxxxxxxxxxxx

1 alphabetic character followed by up to 29 alphanumeric characters. One or more periods can be used.



Note:

The value must be at least 11 characters in length and must contain a hyphen (-). The format of the value must be `xx.xx.xx-yy.yy.yy`, where `xx.xx.xx` is the release number, and `yy.yy.yy` is the engineering build number.

src (optional)

The physical disk that contains the upgrade target release.

Range:**fixed**

The upgrade target release is on the fixed disk

usb

The upgrade target release is on the removable media inserted in the flush-mount USB port

server

The upgrade target release is on the remote server

thres (optional)

Network Threshold value. The percentage of signaling links that is to remain in service (IS) during the network conversion phase. This enables SCCP thresholding and flashing on non-provisioned cards during the upgrade.

Range:

50 - 90

Default:

Network cards are updated serially

Example

```
act-upgrade:action=convertstp
act-upgrade:action=dbstatus
act-upgrade:action=convertstp:thres=75
act-upgrade:action=getrel:release="46.7.0.0.0-74.2.0.tar.gz":src=usb
act-upgrade:action=chkrel:src=fixed
```

Dependencies

The value specified for the `action` parameter must correspond to a specific upgrade phase:

- `action=converttoam`—upgrade phase=0 and 1
- `action=oamcomplete`—upgrade phase=2
- `action=convertnet`—upgrade phase=3
- `action=netcomplete`—upgrade phase=3
- `action=convertstp`—upgrade phase=0-3

2172 E2172 Cmd Rej: Command action is out of phase with expected procedure

The Measurements Collection function must be turned off (`chg-meas:collect=off`) or the Measurements Platform feature must be turned on (`chg-measopts:platformenable=on`) before a value of `converttoam`, `oamcomplete`, or `netcomplete` can be specified for the `action` parameter.

2160 E2160 Cmd Rej: Measurements collect must be off

A valid upgrade release must reside on the plug-in flash drive or the inactive partition of the fixed disk.

2962 E2962 Cmd Rej: <Device> is <condition>

The standby OAM database must be the source release.

2180 E2180 Cmd Rej: Current stdby OAM db is not supported for this upgrade

The current OAM database must be the source release.

2179 E2179 Cmd Rej: Current actv OAM db is not supported for this upgrade

The database partition must be coherent.

2967 E2967 Cmd Rej: Active OAM database is incoherent

The database partition must be in the correct functional mode.

2172 E2172 Cmd Rej: Command action is out of phase with expected procedure

The `action=convertstp` and `thres` parameters must be specified together in the command.

3443 E3443 Cmd Rej: THRES parm and action=CONVERTSTP must be specified together

Upgrade conversion cannot be initiated from a telnet-type terminal (terminal IDs 17-40).

4283 E4283 Cmd Rej: Command cannot be executed on a Telnet terminal

The DCM cards are obsolete for SS7IPGW, IPGWI, IPLIM, and IPLIMI applications.

2105 E2105 Cmd Rej: Invalid card TYPE and APPL load type combination

The `action=getrel` and `release` parameters must be specified together in the command.

2155 E2155 Cmd Rej: Invalid parameter combination specified

An IPSM card must be provisioned and in service before a value of `getrel` or `chkrel` can be specified for the `action` parameter.

2387 E2387 Cmd Rej: Card is not in service

The `ent-ftp-serv:app=dist` command must be entered before a value of `getrel` or `chkrel` can be specified for the `action` parameter.

2774 E2774 Cmd Rej: FTP Server table entry not found for this APP/IPADDR

The `act-upgrade:action=convertstp` cannot be issued with any removable media inserted in any of the USB ports.

4851 E4851 Cmd Rej: Removable media can not be inserted

Invalid hardware configuration alarms are set or an HMUX alarm must be addressed.

3908 E3908 Cmd Rej: Invalid OAM HW config or an HMUX card is out of service

All cards that are in the auto-inhibited state must be removed before this command can be entered.

3444 E3444 Cmd Rej: Upgrade prevented due to auto-inhibited card

Cards that prevent the IMT buses from being inhibited during the upgrade cannot exist in the system.

2738 E2738 Cmd Rej: Can not inhibit IMT bus - alternate bus is in abnormal state

The specified source drive must be at the correct database version for the upgrade to proceed.

2945 E2945 Cmd Rej: Source database version is not compatible

The plug-in flash drive cannot contain an EAGLE backup image.

3725 E3725 Cmd Rej: Removable drive database level is not compatible

If the `src=usb` parameter is selected, then the plug-in flash drive upgrade media must be inserted in the Active OAM's flush-mounted USB port.

4918 E4918 Cmd Rej: Could not access USB disk

The internal RAM disk must be available for the plug-in flash drive's upgrade image to be unpackaged.

4919 E4919 Cmd Rej: Could not access RAM disk

The disk that contains the upgrade target release must be in a known upgrade mode.

3441 E3441 Cmd Rej: Target Release source disk in unknown upgrade mode

If the `src=usb` or `src=server` parameter is specified, then the `action=getrel` parameter must be specified. If the `src=fixed` parameter is specified, then the `action=getrel` parameter cannot be specified.

2157 E2157 Cmd Rej: Source parameter invalid for upgrade action

The EAGLE PVN address in the source database cannot be identical to the EAGLE FCNA or FCNB network address in the target database.

5013 E5013 Cmd Rej: PVN, FCNA and FCNB must not be identical

The `icdpnunknx` and `icdpnunknX` and the `gcdpnunknx` and `gcdpnunknX` NPP Action Sets cannot co-exist in the source release.

5149 E5149 Cmd Rej: Invalid table entry, can not be repaired by conversion code

The value specified for the `release` parameter must be at least 11 characters in length and contain a hyphen (-). The format of the value must be `xx.xx.xx-yy.yy.yy`, where `xx.xx.xx` is the release number, and `yy.yy.yy` is the engineering build number.

2314 E2314 Cmd Rej: Invalid filename entered

The card must have sufficient DRAM memory to perform the GTMOD table Health Check.

5383 E5383 Cmd Rej: Not enough memory on card

The AMGTT data in the GTT table cannot exceed the capacity of the GTMOD table (100 K).

5283 E5283 Cmd Rej: GTMOD table is full

Unable to access GTT table from source drive.

3119 E3119 Cmd Rej: Failed Reading GTT TRANS table

The MFC feature must be ON prior to upgrading to release 46.2 or later.

3248 E3248 Cmd Rej: MFC Off, upgrade aborted

The `action=refreshsets` and `action=verifysets` parameters are not supported.

5480 E5480 Cmd Rej: This upgrade action is unavailable in this release

The `thres` parameter cannot be specified if the threshold type (`threstype`) has been changed to `set`.

5481 E5481 Cmd Rej: THRES parameter not valid when using `threstype = SET`

When issuing the `act-upgrade` command with the `threstype` assigned to card sets, the list of card sets needs to be created and valid.

3241 E3241 Cmd Rej: The Card Set List is not valid, verify or create

When issuing the `act-upgrade` command with the `threstype` assigned to Card Set, the card set list must be consistent with the current EAGLE configuration, unless **force=yes** is allowed and specified. Details of any such inconsistencies and recovery instructions will be reported in a similar manner as `act-upgrade:action=verifysets`.

3503 E3503 Cmd Rej: Card Configuration is inconsistent with Card Set List

Security log purging must be stopped (`CHG-ATTR-SECULOG: PURGEPERIOD=0`) when the `act-upgrade` command is executed.

E3667 Cmd Rej: Change `PURGEPERIOD` to 0

Notes

The `act-upgrade:action=convertstp` command executes all four upgrade phases consecutively.

If the `act-upgrade:action=convertstp` command is entered following a command abort, the upgrade processing determines the last upgrade phase that was successfully completed. The upgrade processing then attempts to restart from that point to successful completion. Re-entering the `act-upgrade:action=convertstp` command following a command abort is the recommended method for recovery.

The TDMs and plug-in flash drives have upgrade phase indicators. The upgrade command expects the disks to be in certain phases before executing a specific action. If the disks are not in the correct phases, an error is generated.

The `act-upgrade:action=dbstatus` command generates output similar to that provided by the `rept-stat-db:display=version` command.

The `thres` parameter is used to:

- Allow multiple cards to be upgraded together, as long as the specified percentage of links remains in service. The value is applied to groups of links based upon the link-supporting group or the entire system. The grouping is set by the `chg-upgrade-config:threstype=` command.
- Enable SCCP thresholding, which allows multiple Service Module cards to be upgraded together. The specified `thres` parameter value is not used to determine the number of Service Module cards to upgrade. The peak SCCP load since the last OAM boot is used to determine the number of cards that must remain in service (at least half of the cards must remain in service).
- Enable the non-provisioned flash function, which flash-downloads any boot-prom type card if the card is in the system but not provisioned.

The `act-upgrade:action=getrel` action defaults to getting the release from the provisioned IPSM card using the provisioned FTP Server. If the `src=usb` parameter is

specified, then the release is obtained from the plug-in USB flash drive upgrade media.

Output

 **Note:**

The `act-upgrade:action=convertstp` command performs the OAM conversion and the network conversion. During the conversion, this command broadcasts the current activity in the scroll area. Refer to Appendix B of the EAGLE Release Software Upgrade Procedure for a sample of message output.

The action `dbstatus` reports the current database status.

`act-upgrade:action=dbstatus`

```
eaglestp 15-02-13 11:45:51 MST EAGLE5 45.0.1-64.70.35 Upg Phase 0
  DATABASE STATUS: >> OK <<
                TDM 1114 ( STDBY)                        TDM 1116 ( ACTV )
                C   LEVEL      TIME LAST BACKUP        C   LEVEL      TIME LAST BACKUP
                -   - - - - - - - - - - - - - - - - - - - - - -
-----
  FD BKUP Y      210      -      -                      Y      210      -      -
  FD CRNT Y      210
                MCAP 1113                                MCAP 1115
                -   - - - - - - - - - - - - - - - - - - - - - -
  RD BKUP -      -      -      -                      -      -      -      -
  USB BKP -      -      -      -                      -      -      -      -

  CARD/APPL LOC  C  T  LEVEL      TIME LAST UPDATE  VERSION STATUS
  -----
  OAM-RMV   1113 -  -   -          -          -          -
  TDM-CRNT  1114 Y  N  210     15-01-16 12:22:02  135-000-000  NORMAL
  TDM-BKUP  1114 Y  -  210     15-01-16 12:22:02  135-000-000  NORMAL
  OAM-RMV   1115 -  -   -          -          -          -
  OAM-USB   1115 -  -   -          -          -          -
  TDM-CRNT  1116 Y  N  210     15-01-16 12:22:02  135-000-000  NORMAL
  TDM-BKUP  1116 Y  -  210     15-01-16 12:22:02  135-000-000  NORMAL

  INACTIVE PARTITION GROUP
  CARD/APPL LOC  C  T  LEVEL      TIME LAST UPDATE  VERSION STATUS
  -----
  TDM-CRNT  1114 N  -  1          00-00-00 00:00:00  136-000-000  NORMAL
  TDM-BKUP  1114 N  -  1          00-00-00 00:00:00  136-000-000  NORMAL
  TDM-CRNT  1116 Y  -  1          00-00-00 00:00:00  136-000-000  NORMAL
  TDM-BKUP  1116 Y  -  1          00-00-00 00:00:00  136-000-000  NORMAL
;

```

Related Topics

- [rept-stat-db](#)

Range:

1101 - 1112, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318,
3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318,
5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118, 6202 - 6212, 6302 - 6312

init (optional)

This parameter initializes the contents of a PROM to contain only the record specified in the `data` parameter, if that record is a board identification record.

Range:**yes**

The contents of the PROM are initialized.

no

The contents of the PROM are not initialized.

Default:

no

typed (optional)

Type of board.

Range:***mbd***

main assembly

Example

This example initializes the contents of a main assembly BIP to contain only the record specified in the `data` parameter:

```
chg-bip-rec:loc=1105:data=xxxx:init=yes
```

This example displays the programming of the DCM Ethernet Addresses for Port A (ENT01):

```
chg-bip-rec:loc=1102:data="ENT01,AD00001704000D,cs104"
```

Dependencies

The value of the `loc` parameter cannot specify a location for a fixed disk or removable drive.

2242 E2242 Cmd Rej: Destination card invalid

If the `init=yes` parameter is specified, then the value of the `data` parameter must be a Board IDentification (BID) record.

2244 E2244 Cmd Rej: INIT=YES only valid with BID record

Notes

The card in the specified location must be inhibited.

Output

```
chg-bip-rec:loc=1107:data=xxx:init=yes
```

```
tekelecstp 10-04-01 12:05:44 IST EAGLE 42.0.0  
Board ID Prom updated.  
;
```

Related Topics

- [chg-bip-fld](#)
- [disp-bip](#)
- [rtrv-bip](#)
- [tst-bip](#)

5.1.6 chg-ee-card

Use this command to enter/modify Eagle Eyes Network card data in the Eagle Eyes Card (EE CARD) table. The EE CARD entry consists of Card location and Eagle Eyes specific data.

Parameters

loc (mandatory)

Eagle Eyes Card location.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

action (optional)

Action to be performed on the specified filter ID for the card.

Range:

attach

detach

Default:

No change to the current value.

System Default:

0

fltId (optional)

A comma-separated Eagle Eyes Filter ID list to be associated or disassociated with the card. Up to 8 FLT IDs can be specified in the list.

Range:

1-200

Default:

No change to the current value.

System Default:

0

kb1im (optional)

Sets the file size limit of the capture file created, in kilobytes.

Range:

1-4000000

Default:

No change to the current value.

System Default:

none

pkt1im (optional)

Sets the limit on the number of Ethernet frames to send.

Range:

1-10000000

none

Default:

No change to the current value.

System Default:

none

sec1im (optional)

Sets the limit on the amount of time to perform the trace, in seconds.

Range:

1-5644800

none

Default:

No change to the current value.

System Default:

none

thr (optional)

Sets the sending rate of the Eagle Eyes throttle task in IMT packets per second. The packets will not be captured unless this parameter is set to a non-zero value for the particular card.

Range:

1000--10000

Default:

No change to the current value.

System Default:

0

Example

```
chg-ee-card:loc=1101:fltId=12:action=attach:thr=2000:pktlim=5000
```

```
chg-ee-card:loc=1102:kblim=40000:seclim=3000000
```

```
chg-ee-card:loc=1101:fltId=13:action=detach:pktlim=none
```

Dependencies

If the `fltId` parameter is specified, then the action parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

The EE CARD table cannot contain more than 256 entries.

2862 E2862 Cmd Rej: EE Card table is full

The EE CARD table must be accessible.

2867 E2867 Cmd Rej: Unable to read EE Card table

At least one optional parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `fltId` specified should not be already associated with the card.

2889 E2889 Cmd Rej: Duplicate filter on card is not allowed.

The value specified for the `fltId` parameter must already exist in the EE FLT table.

2827 E2827 Cmd Rej: Filter not present

Maximum of 16 include filters can be attached to a card.

2970 E2970 Cmd Rej: Max limit of INC/EXC Filters reached on card

Maximum of 16 exclude filters can be attached to a card.

2970 E2970 Cmd Rej: Max limit of INC/EXC Filters reached on card.

The value specified for the `loc` parameter must not be a system reserved location.

2154 E2154 Cmd Rej: Card slot reserved by system

The IMT table must be accessible.

2102 E2102 Cmd Rej: Failed reading the IMT table

The card in the location specified by the `loc` parameter must have Eagle Eyes service capability.

2144 E2144: Location invalid for hardware configuration

The card `loc` specified to detach a filter must have Eagle Eyes configured.

4916 E4916 Command invalid for hardware configuration

The card at the specified location must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The Filter appl and card appl should be same.

2812 E2812 Cmd Rej: EE Filter does not match card appl type

Notes

The value specified for the loc parameter must refer to a card running one of the following GPLs, and the referenced card must be equipped:

- IPSTG, IPLHC, IPGHC
- ATMHC
- SS7HC
- SIPHC
- DEIRHC

Output

```
chg-ee-  
card:loc=1101:fltld=12:action=attach:thr=2000:pktlim=5000
```

```
tekelecstp 10-03-08 14:43:31 EST EAGLE 46.0.0
```

```
EE CARD table is (2 of 256) 1% full
```

```
CHG-EE-CARD: MASP A - COMPLTD
```

Related Topics

- [dact-ee](#)
- [rept-stat-ee](#)
- [rtrv-ee-card](#)

5.1.7 chg-gedti-card

Use this command to configure GEDTI Hub for Eagle Eyes traffic capture.

Parameters

loc (mandatory)

IPSM Card location to be configured as GEDTI Hub.

Range:

*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118*

port (mandatory)

GEDTI Port to be set.

Range:

1025 - 65354

Example

```
chg-gedti-card:loc=1211:port=1124
```

Dependencies

The value specified for the loc parameter must correspond to the location of an IPSM card.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The value specified for the port parameter must not be configured on any other IPSM card.

2975 E2975 Cmd Rej: Specified Port is not supported

If the GEDTI Hub is in ACTIVE state then port cannot be changed.

3726 E3726 Cmd Rej: Active device state does not permit database change

The EE Card table must be accessible.

2867 E2867 Cmd Rej: Unable to read EE Card table

Notes

None.

Output

```
chg-gedti-card:loc=1211:port=1245
```

```
tekelecstp 10-03-08 14:43:31 EST EAGLE 46.0.0  
EE CARD table is (2 of 256) 1% full  
CHG-GEDTI-CARD:MASP A - COMPLTD ;
```

Related Topics

- [act-gedti](#)
- [dact-gedti](#)
- [rept-stat-gedti](#)

5.1.8 chg-tbl

Use this command to create, rename, or reset any table on a fixed disk or removable drive.

▲ Caution:

Before entering the `chg-tbl` command, contact My Oracle Support.

Parameters

action (mandatory)

The desired action to perform on the table.

Range:

create

Creates a DOS entry in the FAT table and updates the DOS directory table.

rename

Changes the name of an existing system table to a new DOS file name (does not update the *dms.cfg* file).

reset

Initializes an existing table to the value designated by the `resetchar` parameter.

disk (mandatory)

Target disk. The disk that contains the file.

Range:

remove

Removable drive

fixed

Fixed disk

usb

The flush-mounted (not-latched) USB port on the MASP card.

ext (optional)

Extension. The three character DOS filename extension.

Range:

azz

0–3 ASCII characters

filelength (optional)

The amount of space the file occupies on the disk.

Range:

1 - 32505856

id (optional)

Table identification number.

Range:

0 - 499

name (optional)

Name of the file.

Range:
 azzzzzzz
 1–8 ASCII characters

prtnggrp (optional)

Partition group. The disk partition group to be changed.

Range:
active
inactive

Default:
active

resetchar (optional)

Reset character. The table reset character that is written to every byte of the table.

Range:
 0 - 255

Example

```
chg-
tbl:action=create:disk=remove:name=test:ext=sys:filelength=150000

chg-tbl:action=reset:disk=remove:id=0

chg-tbl:action=rename:disk=remove:id=0:name=dms:ext=old
```

Dependencies

If the `action=create/rename` parameter is specified, then the `name` parameter must be specified.

2314 E2314 Cmd Rej: Invalid filename entered

If the `action=create` parameter is specified, then the `name`, `ext`, and `filelength` parameters must be specified.

2712 E2712 Cmd Rej: RESETCHAR not valid with ACTION=CREATE

If the file type is a directory, the `filelength` parameter is not required. The directory entry file length is always 1 cluster in length.

N/A N/A

The attributes used during file creation are current date and time of the active MASP. Readable/writable files are allocated contiguously from the last free FAT cluster.

N/A N/A

If the `action=reset` parameter is specified, then the `id` parameter must be specified.

2713 E2713 Cmd Rej: FILELENGTH not valid with ACTION=RESET

If the `action=rename` parameter is specified, then the `id`, `name`, and `ext` parameters must be specified.

2716 E2716 Cmd Rej: RESETCHAR not valid with ACTION=RENAME

This command cannot be used to modify the security log.

3003 E3003 Cmd Rej: Modification of security log not allowed

Notes

None

Output

```
chg-  
tbl:action=create:disk=remove:name=test:ext=sys:filelength=1500  
00
```

```
chg-tbl: CREATE OK : filename = test.sys, byte length = 150000  
chg-tbl: command complete  
;
```

```
chg-tbl:action=reset:disk=remove:id=0
```

```
chg-tbl: RESET OK : Table 0, DMS.CFG  
chg-tbl: command complete  
;
```

```
chg-tbl:action=rename:disk=remove:id=0:name=dms:ext=old
```

```
chg-tbl: RENAME OK : Table 0, DMS.CFG to DMS.OLD  
chg-tbl: command complete  
;
```

Related Topics

- [disp-disk-dir](#)

5.1.9 chg-upgrade-config

Use this command to configure data used by the upgrade software during an upgrade of an in-service EAGLE from a source release to the target release.

Note:

This command stores data that will be used during the software upgrade. The command does not start the software upgrade.

Parameters

addtblcnv (optional)

This parameter sets the flag of the corresponding entry in the Table Conversion Definition table that forces the table to be converted during a software upgrade.

Caution:

The `addtblcnv` parameter should be used only under the direction of My Oracle Support (MOS).

Range:

0 - 1023

assignset (optional)

Assigned Set. The card specified by the `loc` parameter is assigned to the upgrade-grouping set specified by this parameter.

Range:

0

removes the card from the set list

2 - 10

assigns the card to that particular set list for the group corresponding to the card type

deltblcnv (optional)

This parameter clears the flag of the corresponding entry in the Table Conversion Definition table that forces the table to be converted during a software upgrade.

Caution:

The `deltblcnv` parameter should be used only under the direction of My Oracle Support (MOS).

Range:

0 - 1023

limsets (optional)

LIM Sets. This parameter sets the number of sets for link cards.

Range:

2 - 10

loc (optional)

Location. The location of a network card to be assigned to a set specified by the `assignset` parameter.

Range:

1101 - 1113, 1115, 1201 - 1218, 1301 - 1318, 2101 - 2118, 2201 - 2218, 2301 - 2318, 3101 - 3118, 3201 - 3218, 3301 - 3318, 4101 - 4118, 4201 - 4218, 4301 - 4318, 5101 - 5118, 5201 - 5218, 5301 - 5318, 6101 - 6118

src (optional)

Source. The disk that physically contains the upgrade target release.

Range:***fixed***

The upgrade target release is on the fixed disk

remove

The upgrade target release is on the removable drive

srvsets (optional)

Service Sets. This parameter sets the number of sets for service cards.

Range:

2 - 10

threstype (optional)

Threshold type. The type of thresholding to be used during the upgrade.

Range:***set***

Network conversion is based on the defined sets of cards

Example

```
chg-upgrade-config:addtblcnv=327
```

```
chg-upgrade-config:deltblcnv=327
```

```
chg-upgrade-config:sak=vbjyapdpbtejb:src=fixed
```

```
chg-upgrade-config:threstype=set:srvsets=2:limsets=4
```

Dependencies

The `addtblcnv` and `deltblcnv` parameters cannot be specified together in the command.

4904 E4904 Cmd Rej: ADDTBLCNV and DELTBLCNV cannot be specified together.

One of the optional parameters must be specified in the command.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `srvsets` and `limsets` parameters cannot be specified unless the `threstype` is being changed to or has been changed to `set`.

5482 E5482 Cmd Rej: SRVSETS or LIMSETS not valid unless threstype = SET

The `loc` parameter is required when the `assignset` parameter is specified.

5483 E5483 Cmd Rej: LOC must be specified with ASSIGNSET

The value specified for the `assignset` parameter cannot be greater than the current value of `srvsets` or `limsets` for the specified card.

5484 E5484 Cmd Rej: ASSIGNSET value out of range for card group

The `chg-upgrade-config` command cannot be issued when SFAPP(P)->OAM sync is ON.

3637 E3637 Cmd Rej: Turn OFF SFAPP(P)->OAM sync before this command

This command cannot be entered when CAT2 IPSM to OAM syncing is in progress.

3652 E3652 Cmd Rej: IPSM to OAM SYNC in progress

Output

```
chg-upgrade-config:adtblcnv=327
```

```
rlghncxa03w 07-03-13 08:15:45 EST EAGLE 37.5.0  
Command Completed.
```

```
;
```

Related Topics

- [act-upgrade](#)
- [rtrv-upgrade-config](#)

5.1.10 clr-disk-stats

Use this command to clear the disk performance statistics. All associated disk statistics are zeroed.

Parameters

loc (mandatory)

Location. The location of the card.

Range:

1113, 1115

Default:

none

Example

```
clr-disk-stats:loc=1113
```

Dependencies

The specified card location must contain a card that is running an OAM (1113 or 1115).

3291 E3291 Cmd Rej: Card location specified must be an OAM card

A related command must not be in progress.

2368 E2368 Cmd Rej: System busy - try again later

Notes

None

Output

```
clr-disk-stats:loc=1113

      rlgncxa03w 01-03-01 14:14:05 EST  Rel 28.1.0
      Disk performance statistics cleared.
;
```

Related Topics

- [disp-disk-stats](#)

5.1.11 copy-tbl

Use this command to copy a single table from one source to another. A table can be copied to any verifiable location in the system; however, the source and destination tables must have identical configurations (same number of entries, same entry size, both 1- dimensional and 2-dimensional).

**Note:**

A table cannot be copied onto itself.

Parameters**dloc (mandatory)**

Destination location. The location of the destination table.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

1114

TDM

1116

TDM

1113

Latched USB port

1115

Latched USB port

sloc (mandatory)

Source location. The location of the source table.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

1114

TDM

1116

TDM

1113

Latched USB port

1115

Latched USB port

stb1 (mandatory)

Source table. The identifying number of the source table.

Range:

0 - 1023

ddrv (optional)

Destination drive. The identification of the disk to which the table is copied.

Range:**fixed**

The fixed disk

remove

The removable drive

usb

The flush-mounted (not-latched) USB port on the MASP card.

Default:*fixed***dprtnggrp (optional)**

Disk partition group. The disk partition group of the destination table.

Range:**active****inactive**

Default:
active

dtbl (optional)

Destination table. The identifying number of the destination table.

Range:
0 - 1023

Default:
The *stbl* parameter value

sdrv (optional)

Source drive. The identification of the disk from which the table is copied.

Range:

fixed
The fixed disk

remove
The removable drive

usb
The flush-mounted (not-latched) USB port on the MASP card.

Default:
fixed

sprtnggrp (optional)

Source partition group. The disk partition group of the source table.

Range:

active

inactive

Default:
active

Example

```
copy-tbl:stbl=25:dtbl=24:sloc=1114:dloc=1116:sdrv=fixed
```

Dependencies

Only one table copy command can be executed at a time.

2368 E2368 Cmd Rej: System busy - try again later

The source and destination tables must exist and be compatible.

N/A N/A

This command cannot be used to modify the security log.

3003 E3003 Cmd Rej: Modification of security log not allowed

The same value cannot be specified for the `sloc` and `dloc` or the `stbl` and `dtbl` parameters.

4920 E4920 Cmd Rej: Cannot copy table onto itself

If a value of *fixed* is specified for the `sdrv` or `ddrv` parameter, then a value of 1114 or 1116 must be specified for the `sloc` or `dloc` parameter.

4912 E4912 Cmd Rej: Disk invalid for specified Location

This command cannot be entered when CAT2 IPSM to OAM syncing is in progress.

3652 E3652 Cmd Rej: IPSM to OAM SYNC in progress

Notes

None

Output

```
copy-tbl:stbl=25:dtbl=24:sloc=1114:dloc=1116:sdrv=fixed
```

```
rlghncxa03w 01-03-04 16:11:53 EST Rel 28.1.0
Table copy command complete.
```

```
;
```

5.1.12 dact-ee

Use this command to deactivate an Eagle Eyes Card and stop capturing traffic on it. The state of the card is changed from ACT (Active) to DACT (Deactivated).

Note:

If the card boots, then the status of the card would be reset to DACT. This will clear the EE configuration from the card.

Parameters

loc (mandatory)

The Eagle Eyes card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
dact-ee:loc=1203
```

Dependencies

The card at the specified location must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The card should be configured as an Eagle Eyes card.

2984 E2984 Cmd Rej: Eagle Eyes not configured on the card

Notes

The value specified for the loc parameter must refer to a card running one of the following GPLs, and the referenced card must be equipped:

- IPHG, IPLHC, IPGHC
- ATMHC
- SS7HC
- SIPHC
- DEIRHC
- ERTHC

Output

```
dact-ee:loc=1101
```

```
Command Accepted - Processing
```

```
tekelecstp 11-08-16 18:35:44 MST EAGLE 46.0.0
```

```
dact-ee:loc=1101
```

```
Command entered at terminal #1.
```

```
;
```

```
tekelecstp 11-08-16 18:35:44 MST UNKNOWN EAGLE 46.0.0
```

```
Deactivate EE message sent to card.
```

```
;
```

```
tekelecstp 11-08-16 18:35:44 MST EAGLE 46.0.0
```

```
Command Completed.
```

```
;
```

Related Topics

- [chg-ee-card](#)
- [rept-stat-ee](#)
- [rtrv-ee-card](#)

5.1.13 dact-gedti

Use this command to deactivate a GEDTI Hub. The state of the GEDTI Hub is changed from ACT (Active) to DACT (Deactivated).

Note:

The specified card must be Active before the command can be executed. If the card boots, then the status of the GEDTI Hub will be reset to DACT.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118, 1113, 1115

Example

```
dact-gedti:loc=1102
```

Dependencies

The value specified for the `loc` parameter must refer to an equipped card location.

2101 E2101 Cmd Rej: Card location is unequipped

A valid value must be specified for the `loc` parameter.

2376 E2376 Cmd Rej: Specified LOC is invalid

The card at the specified location must be configured as a GEDTI Hub.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

Deactivating the state of a GEDTI Hub that is already deactivated has no effect.

3827 E3827 Cmd Rej: No change requested

Notes

None.

Output

```
dact-gedti:loc=1101

Command Accepted - Processing

tekelecstp 11-08-16 18:35:44 MST EAGLE 46.0.0
dact-gedti:loc=1101
Command entered at terminal #1.
;

tekelecstp 11-08-16 18:35:44 MST UNKNOWN EAGLE 46.0.0
Deactivate GEDTI Hub message sent to card.
;

tekelecstp 11-08-16 18:35:44 MST EAGLE 46.0.0
Command Completed.;
```

Related Topics

- [act-gedti](#)
- [chg-gedti-card](#)
- [rept-stat-gedti](#)

5.1.14 dact-ip-lnk

Use this command to deactivate an IP link and put the link out of service. The state of the link is changed from IS-NR (In-Service-Normal), IS-ANR (In-Service-Abnormal), or OOS-MT (Out-Of-Service-Maintenance), to OOS-MT-DSBLD (Out-Of-Service-Maintenance-Disabled).



Note:

The specified card must be Active before the command can be executed. If the card boots, then the status of the IP link will be reset.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118, 1113, 1115

port (mandatory)

Ethernet interface Port ID.

Range:**a**

IP Port A

b

IP Port B

c

IP Port C

d

IP Port D

fca

Fast Copy Port A

fcb

Fast Copy Port B

Example

```
dact-ip-lnk:loc=1102:port=a
```

```
dact-ip-lnk:loc=1203:port=fca
```

```
dact-ip-lnk:loc=1103:port=c
```

```
dact-ip-lnk:loc=1202:port=d
```

Dependencies

The value specified for the `loc` parameter must refer to one of the following cards, and the referenced card must be equipped:

- E5-ENET-B card running the EROUTE, IPGWx, IPLIMx, or IPSG application
- IPSM card
- E5-SM4G or E5-SM8G-B card running the VSCCP application
- E5-OAM card running the OAMHC application
- E5-MCPM-B card
- SLIC card

4916 E4916 Command invalid for hardware configuration

A valid value must be specified for the `loc` parameter.

2376 E2376 Cmd Rej: Specified LOC is invalid

The value specified for the `port` parameter must be supported by the card:

- port A-E5-OAM card running OAMHC application, IPSM card, E5-MCPM-B card
- port A, B- E5-ENET-B card running the EROUTE or IPLIMx application, E5-SM4G or E5-SM8G-B card running the VSCCP application

- port A, B, FCA, FCB- E5-ENET-B card running the IPGWx or IPSG application
- ports A, B, C and D are valid for DEIR/SIP/ENUM applications running on SLIC card

2975 E2975 Cmd Rej: Specified Port is not supported

The card at the specified location must be configured.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The card in the specified location must be Active before this command can be executed.

2387 E2387 Cmd Rej: Card is not in service

Notes

The act-ip-lnk/dact-ip-lnk commands were created as debug means - aids to turn off or disable the IP interface to troubleshoot network problems, specifically to allow the operator to troubleshoot IP network flooding issues that can cause EAGLE cards to boot repeatedly while trying to come up. These commands should NOT be used for general maintenance actions since they have not been rigorously tested and their usage should be limited to situations like described above.

Interface A/D is used for ExAP connectivity and interface B/C is used for the signaling network on the SLIC card running DEIR/SIP/ENUM applications.

Output

```
dact-ip-lnk:loc=1101:port=a
```

```
Command Accepted - Processing
```

```
tekelecstp 11-08-16 18:35:44 MST EAGLE 44.0.0
```

```
dact-ip-lnk:loc=1101:port=a
```

```
Command entered at terminal #1.
```

```
;
```

```
tekelecstp 11-08-16 18:35:44 MST UNKNOWN EAGLE 44.0.0
```

```
Deactivate IP link message sent to card.
```

```
;
```

```
tekelecstp 11-08-16 18:35:44 MST EAGLE 44.0.0
```

```
Command Completed.
```

```
;
```

```
dact-ip-lnk:loc=1103:port=c
```

```
Command Accepted - Processing
```

```
tekelecstp 16-05-25 03:51:03 MST EAGLE 46.4.0.0.0-69.1.0
```

```
dact-ip-lnk:loc=1103:port=c
```

```
Command entered at terminal #18.
```

```
;
```

```
tekelecstp 16-05-25 03:51:03 MST EAGLE 46.4.0.0.0-69.1.0
```

```
Deactivate IP link message sent to card.  
;  
  
tekelecstp 16-05-25 03:51:03 MST EAGLE 46.4.0.0-69.1.0  
Command Completed.  
;
```

Related Topics

- [rtrv-ip-lnk](#)

5.1.15 dbg-ddb

Use this command to display the checksum, statistics, and wild write audit (WWA) updates of dynamic database (DDB) table entries, audit a specific table, and reset the DDB statistics on the cards.

Parameters

action (mandatory)

The action taken by the command.

Range:

stats

display dynamic database statistics

aud

audit a specific table

disp

display a table entry

wwa

display any entries updated by WWA task

rststat

reset following DDB audit statistics:

- Number of DDB updates
- Number of consecutive DDB update in progress
- Maximum DDB updates in 100 msec
- Idle period
- Maximum and minimum idle period

audtype (optional)

Audit type. This parameter specifies whether a unicast or multicast audit is performed.

Range:

mc

multicast

uc
unicast

Default:
mc

dpc (optional)

The destination point code value. The Route table entry corresponding to the DPC value is displayed.

Range:

p-, *000-255*, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

dpc/dpca/dpci/dpcn/dpcn24/dpcn16 (optional)

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, *p*-, *ps*-, *0-255*, *none*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p*-, *ps*

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

Enter *none* to delete the point code.

dpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (*members*) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, *p*-, *ps*-, *0-16383*, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, *p*-, *ps*

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

dpcn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p

msa—000—255

ssa—000—255

sp—000—255

Default:

No change to current value.

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number sub number area main number area (un-sna-mna)*. The *prefix* subfield indicates a private point code (*prefix-un-sna-mna*).

Range:

p--, 000--127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix--p

un---000---127

sna---000---15

mna---000---31

Default:

No change to the current value.

link (optional)

The entry in the Link table that corresponds to the specified link value.

Range:

a, b, a1 -a31, b1 - b31

loc (optional)

The location of the MTP card that is being debugged.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

lsn (optional)

Linkset name. The entry in the Linkset table that corresponds to the specified linkset name.

Range:
ayyyyyyy

rloc (optional)

Reference card location. This parameter audits the table where the reference card is located.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118

tbl (optional)

The table used as the source of the audit data.

Range:

lnk
Link table

ls
Linkset table

rte
Route table

tidx (optional)

Table index. This parameter displays the corresponding table entry.

Range:
0 - 16000

System Default:
0

Example

This command displays the 126th entry in the Link table.

```
dbg-ddb:loc=1105:tbl=lnk:action=disp:tidx=126
```

This command displays the entry in the Link table corresponding to link=a and rloc=1107.

```
dbg-ddb:loc=1105:tbl=lnk:action=disp:rloc=1107:link=a
```

This command audits the Link table in multicast mode.

```
dbg-ddb:loc=1105:tbl=lnk:action=aud:audtype=mc
```

This command audits the Link table in unicast mode.

```
dbg-ddb:loc=1105:tbl=lnk:action=aud:audtype=uc
```

This command audits the Link table at the card location 1105 using the reference card 1107.

```
dbg-ddb:loc=1105:tbl=lnk:action=aud:audtype=uc:rloc=1107
```

This command displays the statistics of a specified card.

```
dbg-ddb:loc=1201:action=stats
```

This command displays the WWA entries on a specified card.

```
dbg-ddb:action=wwa:loc=1201
```

This command resets the statistics of a specified card.

```
dbg-ddb:action=rststat:loc=2100
```

This command resets the statistics of all active MTP cards.

```
dbg-ddb:action=rststat
```

Dependencies

The `dpc`, `tidx`, `lsn`, and `rloc` parameters cannot be specified together in the command.

The `dpc`, `tidx`, `lsn`, and `link` parameters cannot be specified together in the command.

The `action=disp` and `tbl=rte` parameters must be specified before the `dpc` parameter can be specified.

The `action=disp` and `tbl=ls` parameters must be specified before the `lsn` parameter can be specified.

The `action=disp` and `tbl=lnk` parameters must be specified before the `link` parameter can be specified.

The `action=disp` parameter must be specified before the `tidx` parameter can be specified.

The `action= aud` parameter must be specified before the `audtype` parameter can be specified.

The `action=disp` and `tbl=lnk` parameters or the `action=aud` and `audtype=uc` parameters must be specified before the `rloc` parameter can be specified.

If the `action` parameter has a value of `wwa`, `stats`, or `rststat`, then the `loc` parameter is the only other parameter that can be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified

If the `action=disp` and `tbl=lnk` parameters are specified, then the `rloc` and `link` parameters must be specified together in the command.

4785 E4785 Cmd Rej: RLOC and LINK parameter combination must be specified

The card location specified by the `loc` or `rloc` parameter must be equipped.

2101 E2101 Cmd Rej: Card location is unequipped

The value specified for the `loc` or `rloc` parameter must indicate an MTP card.

2212 E2212 Cmd Rej: Invalid card type for this command

The status of the card at the location specified by the `loc` or `rloc` parameter must be active.

4259 E4259 Cmd Rej: Target card is not in Active state

The linkset specified by the `lsn` parameter must already exist in the Linkset table.

2303 E2303 Cmd Rej: Unknown LSN

The link specified by the `link` parameter must already be equipped.

2373 E2373 Cmd Rej: Link is unequipped in the database

The value specified for the `dpc` parameter must already exist in the Route table.

2417 E2417 Cmd Rej: Point code does not exist in the routing table

The Link table is corrupt or cannot be found.

2103 E2103 Cmd Rej: Failed reading the link table

The value specified for the `dpc` parameter must be a full point code, network point code, or a cluster point code.

2886 E2886 Cmd Rej: DSTN address must be a full, network or cluster PC

Values of 1113 - 1118 cannot be specified for the `loc` or `rloc` parameters.

2154 E2154 Cmd Rej: Card slot reserved by system

If the `action` parameter has a value of `disp`, `aud`, `stats`, or `wwa`, then the `loc` parameter must be specified.

If the `action=aud` parameter and the `rloc` parameter are specified, then the `audtype` parameter must be specified.

If the `action` parameter has a value of `disp` or `aud`, then the `tbl` parameter must be specified.

2379 E2379 Cmd Rej: Missing parameter

The J7 support feature must be enabled before the `opc16/dpc16` parameters can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

Notes

For a multicast audit, the card that receives the message sends the audit request to all other MTP cards simultaneously. For a unicast audit, the card that receives the message sends the audit request to another MTP card, which sends the request to next MTP card, etc. This process continues until the last MTP card in the system receives the request.

A maximum of the last 10 entries of WWA updates are displayed.

Output

A maximum of 20 entries with mismatched card values can be displayed as necessary.

If mismatched card entries occur, the `SeqNo` field can be used to correlate the entries between two cards (e.g. `SeqNo: 1` of card 1 can be compared against `SeqNo: 1` of card 2.)

```
dbg-ddb:loc=1104:action=disp:tbl=ls:tidx=1
```

```
tekelecstp 09-10-15 12:37:37 EST EAGLE5 41.1.0
dbg-ddb:loc=1104:action=disp:tbl=ls:tidx=1
Command entered at terminal #4.
```

```
;

tekelecstp 09-10-15 12:37:37 EST EAGLE5 41.1.0
User Message sent to location 1104.

;

tekelecstp 09-10-15 12:37:37 EST EAGLE5 41.1.0
[SeqNo: 0] [1104] [Linkset:1] Chksum h'1624 at h'28e84a (138 bytes)
Assign:1 Avail:0 APC: 001-001-002 ITUNVar:0

;

dbg-ddb:loc=1104:action=disp:tbl=lnk:tidx=1

tekelecstp 09-10-15 12:37:37 GMT EAGLE5 41.1.0
dbg-ddb:loc=1104:action=disp:tbl=lnk:tidx=1
Command entered at terminal #4.

;

tekelecstp 09-10-15 12:37:37 GMT EAGLE5 41.1.0
User Message sent to location 1104.

;

tekelecstp 09-10-15 12:37:37 GMT EAGLE5 41.1.0
[SeqNo: 0] [1104] [Link:x1] Chksum h'da8d at h'2877ce (14 bytes)
PortId:h'1e6 (Card:1104 Link h'0)
Slc:0 Stat:h'2 LsId:h'0 Class:0
Status:Fail

;

dbg-ddb:loc=1104:action=aud:tbl=lnk:audtype=mc

tekelecstp 09-10-15 13:40:38 GMT EAGLE5 41.1.0
dbg-ddb:loc=1104:action=aud:tbl=lnk:audtype=mc
Command entered at terminal #4.

;

tekelecstp 09-10-15 13:40:38 GMT EAGLE5 41.1.0
User Message sent to location 1104.

;

tekelecstp 09-10-15 13:40:38 GMT EAGLE5 41.1.0
[1104] Bcast:Card->Sys (Tbl 0) MTPCards:h'2 Reply:h'2 Mismatch:h'0

;

dbg-ddb:loc=1104:action=aud:tbl=lnk:audtype=uc

tekelecstp 09-10-15 16:37:11 GMT EAGLE5 41.1.0
dbg-ddb:loc=1104:action=aud:tbl=lnk:audtype=uc
Command entered at terminal #4.

;
```

```

tekelecstp 09-10-15 16:37:11 GMT EAGLE5 41.1.0
User Message sent to location 1104.
;

tekelecstp 09-10-15 16:37:11 GMT EAGLE5 41.1.0
[1104]Card->System (Tbl:0) Successful System Audit Completed
;

```

This example shows the output when multiple mismatch entries occur between two cards:

```
dbg-ddb:loc=1205:rloc=1207:action=aud:tbl=rte:audtype=uc
```

```

tekelecstp 10-01-28 16:37:11 GMT EAGLE5 42.0.0
dbg-ddb:loc=1205:rloc=1207:action=aud:tbl=rte:audtype=uc
Command entered at terminal #4.
;

tekelecstp 10-01-28 16:37:11 GMT EAGLE5 42.0.0
User Message sent to location 1205.
;

tekelecstp 10-01-28 16:37:11 GMT EAGLE5 42.0.0
Card[1205]->card[1207] (Tbl:0) TblAuditDone:TotalMisses:h'2
FirstMiss:h'0
;

tekelecstp 10-01-28 16:37:11 GMT EAGLE5 42.0.0
[SeqNo: 1] [1205] [Route:h'0] Chksum h'320b at h'8fc3b0 (75 bytes)
PC: 001-001-001 LstRt:0 CmbRt:6 Dyn:h'1 TFC:0
Xlst:0 MOBR:0 NAdj:1 3 3 3 3 3 NmTFR:0 PrevSt:1
;

tekelecstp 10-01-28 16:37:11 GMT EAGLE5 42.0.0
[SeqNo: 1] [1205] nway: 0 cost_grp(0-5): c7 c6 c6 c6 c6 c6
rte_used(0-5): c0 36 36 36 36 36
curr_cost_grp: 0 prev_cost_grp 0
SRT:h'88079c (28 bytes) AKT:h'8bb43c (12 bytes)
;

tekelecstp 10-01-28 16:37:11 GMT EAGLE5 42.0.0
[SeqNo: 2] [1205] [Route:h'1] Chksum h'c96e at h'8fc3fb (75 bytes)
PC: 001-001-002 LstRt:0 CmbRt:6 Dyn:h'1 TFC:0
Xlst:0 MOBR:0 NAdj:1 3 3 3 3 3 NmTFR:0 PrevSt:1
;

tekelecstp 10-01-28 16:37:11 GMT EAGLE5 42.0.0
[SeqNo: 2] [1205] nway: 0 cost_grp(0-5): c7 c6 c6 c6 c6 c6
rte_used(0-5): c0 36 36 36 36 36
curr_cost_grp: 0 prev_cost_grp 0
SRT:h'8807b8 (28 bytes) AKT:h'8bb448 (12 bytes)
;

```

```
tekelecstp 10-01-28 16:37:11 GMT EAGLE5 42.0.0
[SeqNo: 1] [1207] [Route:h'0] Chksum h'cecc at h'9688ea0 (243 bytes)
PC: 001-001-001 LstRt:0 CmbRt:6 Dyn:h'1 TFC:0
Xlst:0 MOBR:0 NAdj:1 3 3 3 3 3 NmTFR:0 PrevSt:1
;

tekelecstp 10-01-28 16:37:11 GMT EAGLE5 42.0.0
[SeqNo: 1] [1207] nway: 0 cost_grp(0-5): c8 c6 c6 c6 c6 c6
rte_used(0-5): c0 46 36 36 36 36
curr_cost_grp: 0 prev_cost_grp 0
SRT:h'95148e0 (28 bytes) AKT:h'9575980 (12 bytes)
;

tekelecstp 10-01-28 16:37:11 GMT EAGLE5 42.0.0
[SeqNo: 2] [1207] [Route:h'1] Chksum h'662f at h'9688f93 (243 bytes)
PC: 001-001-002 LstRt:0 CmbRt:6 Dyn:h'1 TFC:0
Xlst:0 MOBR:0 NAdj:1 3 3 3 3 3 NmTFR:0 PrevSt:1
;

tekelecstp 10-01-28 16:37:11 GMT EAGLE5 42.0.0
[SeqNo: 2] [1207] nway: 0 cost_grp(0-5): c8 c6 c6 c6 c6 c6
rte_used(0-5): c0 46 36 36 36 36
curr_cost_grp: 0 prev_cost_grp 0
SRT:h'95148fc (28 bytes) AKT:h'957598c (12 bytes)
;

dbg-ddb:action=wwa:loc=1301

tekelecstp 09-10-12 17:37:11 GMT EAGLE5 41.1.0
dbg-ddb:action=wwa:loc=1301
Command entered at terminal #10.
;

tekelecstp 09-10-12 17:37:11 GMT EAGLE5 41.1.0
User Message sent to location 1301.
;

tekelecstp 09-10-12 17:37:11 GMT EAGLE5 41.1.0
DDB WWA REPORT (LOC = 1301)
      WILD WRITE AUDIT UPDATED (1) ENTRIES:
      TIME STAMP          TABLE      ENTRY_IDX  ORIG CHKSUM  UPD
CHKSUM
      1. 09-10-12 17:35:02:586 RTE          0          H'41880000
H'00000000
;

dbg-ddb:action=stats:loc=1201

tekelecstp 09-10-03 17:37:11 GMT EAGLE5 41.1.0
dbg-ddb:action=stats:loc=1201
Command entered at terminal #10.
;
```



```

tekelecstp 09-10-03 17:37:11 GMT EAGLE5 41.1.0
User Message sent to location 1201.
;

tekelecstp 09-10-03 17:37:11 GMT EAGLE5 41.1.0
DDB STATISTICS
LOC                                : 1201
CARD STATUS      (DDL)             : [CROSSLOADED]
                                (DDB)             : [INITIALIZED]
IN UPDATE STATUS (DDB CHECKSUM)    : [FALSE]
                                (TSRC)            : [IDLE]
SUCCESIVE TIMES CARD REPORTED (IN UPDATE) : 0
DDB UPDATES                               : 2000
MAXIMUM UPDATES PER 100ms                 : 900
DDB IDLE PERIOD:                          :
03:12:30:20:50
MAXIMUM IDLE PERIOD                       : 02:12:30:20:50
MINIMUM IDLE PERIOD                       : 01:04:40:10:80
NUMBER OF WWA UPDATED ENTRIES             : 4
;

dbg-ddb:action=wwa:loc=1201

tekelecstp 09-10-21 17:37:11 GMT EAGLE5 41.1.0
dbg-ddb:action=wwa:loc=1201
Command entered at terminal #10.
;

tekelecstp 09-10-21 17:37:11 GMT EAGLE5 41.1.0
User Message sent to location 1201.
;

tekelecstp 09-10-21 17:37:11 GMT EAGLE5 41.1.0
DDB WWA REPORT (LOC = 1201)
      WILD WRITE AUDIT UPDATED (NO) ENTRIES:
;

```

Legend

- **WWA**—Wild Write Audit
- **DDB**—Dynamic Database
- **Time stamp**—Card time stamp when the checksum was detected and updated by wild write audit. The time stamp is in *YY-MM-DD hh:mm:ss:msec* format.
- **TABLE**—Table where the checksum is being performed
- **Entry Idx**—Index of entry that is updated by wild write audit
- **Orig Chksum**—Original Checksum
- **Upd Chksum**—Checksum after update by wild write audit
- **Idle Period**—Time elapsed, in milliseconds, since the last DDB update was received by this card. All idle periods are displayed in *ind:hh:mm:ss:msec* format.

- **Number of WWA Updated Entries**—Number of entries updated by the WWA

Related Topics

- [rept-stat-ddb](#)

5.1.16 disp-bip

Use this command to display the Board Identification PROM (BIP) hex and ASCII data for the specified card type and location. The PROM data consists of the board ID, part number, revision, date of manufacture, power, serial number, software match ID, and check sums.

Parameters

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1113, 1115, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118, 1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110

type (optional)

The board type to be displayed.

Range:

mbd

Displays the main assembly.

Example

This example displays the BIP data for the main assembly of the specified card location.

```
disp-bip:loc=1105
```

Dependencies

The value of the `loc` parameter cannot specify the location of a fixed disk or removable drive.

```
2242 E2242 Cmd Rej: Destination card invalid
```

Notes

None.

Output

This example displays the BIP data for the main assembly:

disp-bip:loc=1105

tekelecstp 10-03-30 20:24:41 IST EAGLE 42.0.0
Board Identification PROM Dump Location: 1105 - MDB Packet: 1

--
0000 42 49 44 30 31 2c 50 4e 38 37 30 2d 32 32 31 32
BID01,PN870-2212
0010 2d 30 33 2e 45 2c 53 4d 45 47 2e 30 30 31 2c 44
-03.E,SMEG.001,D
0020 53 32 30 30 38 2e 31 34 2e 43 2e 31 30 32 30 38
S2008.14.C.10208
0030 31 34 37 30 39 39 2c 50 57 36 34 36 2c 43 53 32
147099,PW646,CS2
0040 32 35 00 00 01 26 07 ff 01 00 26 00 80 14 21 ff
25...&....&...!.
0050 ff ff 01 00 00 00 00 00 00 00 00 00 00 00 00 00
00
0060 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00
0070 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00
;

tekelecstp 10-03-30 20:24:41 IST EAGLE 42.0.0
Board Identification PROM Dump Location: 1105 - MDB Packet: 2

--
0000 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
ff
0010 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
ff
0020 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
ff
0030 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
ff
0040 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
ff
0050 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
ff
0060 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
ff
0070 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
ff
;

tekelecstp 10-03-30 20:24:41 IST EAGLE 42.0.0
Board Identification PROM Dump Location: 1105 - MDB Packet: 3

--
0000 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff

```

ff .....
0010 ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
0020 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
0030 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
0040 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
0050 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
0060 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
0070 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
;

```

```

tekelecstp 10-03-30 20:24:41 IST EAGLE 42.0.0
Board Identification PROM Dump Location: 1105 - MDB Packet: 4
-----

```

```

0000 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
0010 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
0020 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
0030 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
0040 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
0050 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
0060 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
0070 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff .....
;

```

Related Topics

- [chg-bip-fld](#)
- [chg-bip-rec](#)
- [rtrv-bip](#)
- [tst-bip](#)

5.1.17 disp-bp

Use this command to display currently active breakpoints in the communication and application processors.

Parameters

card (optional)

This parameter specifies the card location, in the form of *GPLID-Subsystem ID*.

Range: *GPLID-Subsystem ID*

GPLID

atmhc, deirhc, erthc, glshc, hipr2, ipghc, iplhc, ipsg, ipshc, mcphc, oamhc, pktgen, sccphc, siphc, ss7hc, utility

Subsystem ID

a, b, act, stb, all

The *oamhc* GPL can be specified with any of the subsystem IDs. For all other GPLs, only the *all* subsystem ID is valid.

imt (optional)

The IMT address of the card.

Range:

0 - 254

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318,
2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318,
3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318,
4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318,
5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318,
6101 - 6108, 6111 - 6118, 1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209,
2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210,
4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110, 1113, 1115

proc (optional)

This parameter specifies the processor type.

Range:***appl***

Application processor

com

Communication processor

Default:

appl

ueng (optional)

The microengine number.

This parameter is valid only on IXP-based cards. If this parameter is not specified for IXP-based cards, then the command is assumed to be intended for the ARM processor in the IXP chip.

Range:

0 - 5

Example

```
disp-bp:loc=1109:ueng=3
```

Dependencies

The `loc`, `imt`, or `card` parameter must be specified.

2214 E2214 Cmd Rej: Missing parameter - CARD, LOC, or IMT

Only one of the `loc`, `imt`, and `card` parameters can be specified in the command.

2217 E2217 Cmd Rej: More than one of CARD, LOC, and IMT specified

The `imt` parameter allows this command to be entered for a card that has not been configured in the system.

N/A N/A

The `ueng` parameter can be specified only for IXP-based cards.

4151 E4151 Cmd Rej: UENG parameter is invalid for this card

The `oamhc` GPLID accepts all subsystem values; all other GPLIDs accept only the `all` subsystem value.

N/A N/A

The card location specified by the `loc` parameter must be in the database.

2101 E2101 Cmd Rej: Card location is unequipped

Values of 1114, 1116, 1117, and 1118 cannot be specified for the `loc` parameter.

2212 E2212 Cmd Rej: Invalid card type for this command

Notes

None

Output

These examples are for x86-based cards:

```
disp-bp:card=ss7ansi-all
```

```
rlghncxa03w 01-03-22 21:14:58 EST EAGLE5 31.3.0
SDS Installed Breakpoint Report from IMT Address H'00f4
Brkpoint-Addr Memory-Dump-Addr Condition-1 Condition-2 Repeat-Count
-----
H'003a-H'0001 ANY ANY 0
```

```
rlghncxa03w 01-03-22 21:14:58 EST EAGLE5 31.3.0
SDS Installed Breakpoint Report from IMT Address H'000a
BP Address Memory-Dump Address Conditions Rpt Ct Ind
-----
H'0000a974 H'000c030c 1- ANY 3 1
Code Breakpoint 2- ANY
H'0000a975 1- ANY PERM 0
Data Write - WORD 2- ANY
H'0000a976 1- ANY 15 0
Any Access - DWORD 2- ANY
H'0000a977 1- ANY PERM 0
Data Read - BYTE 2- ANY
```

```
rlghncxa03w 01-03-22 21:14:58 EST EAGLE5 31.3.0
80386/80486 Debug Registers in Use: DR0 DR2 DR3
```

;

```
disp-bp:card=vsccp-all:
```

```
rlghncxa03w 01-03-22 21:14:58 EST EAGLE5 31.3.0
SDS Installed Breakpoint Report from IMT Address H'0005
```

```

BP Address Memory-Dump Address      Conditions      Rpt Ct Ind
-----
H'0000a974                               1- ANY          1      0
Code Breakpoint                          2- ANY
;

```

These examples are for IXP-based cards:

```
disp-bp:loc=1109
```

```
tekelecstp 05-01-10 13:58:45 GMT EAGLE5 33.0.0
SDS Installed Breakpoint Report from IMT Address H'00ff
```

```

BP Address Memory-Dump Address Conditions      Rep  Ind CPU
-----
-----
H'000401000 R11+H'0000ffff      1- R15 > H'ffffffff      2   0   ARM
Any Access -                    2- R0 <= H'0000ffff
Data value: H'00000000 Data Mask: H'ffffffff

```

```
disp-bp:loc=1109:ueng=3
```

```
tekelecstp 05-01-10 13:58:45 GMT EAGLE 33.0.0
SDS Installed Breakpoint Report from IMT Address H'00ff
```

```

BP Address Memory-Dump Address Conditions      Rep  Ind CPU
-----
-----
H'00235000 H'00020044          1- ANY          PERM 1  UENG
3
CODESW Breakpoint              2- ANY          CTX
2
;

```

Related Topics

- [dlt-bp](#)
- [ent-bp](#)

5.1.18 disp-disk-dir

Use this command to display the DOS directory on the specified disk. This command can display the creation date for each file or for selected files and applies to fixed disks and removable drives.

Note:

This command can be used to verify that the correct version of a file is on the disk.

Parameters**file (optional)**

The name of the file to be displayed.

Range:

ZZZZZZZZZZZZ

1–12 ASCII characters

Default:

All files are displayed

loc (optional)

The card location in the system.

Range:

1114

TDM

1116

TDM

1117

Removable cartridge drive

1113

Latched USB port

1115

Latched USB port

prtnggrp (optional)

Partition group. The disk partition group to be displayed.

Range:

active

inactive

Default:

active

src (optional)

Source. The identification of the disk containing the files to be displayed.

Range:

fixed

The fixed disk

remove

The removable drive in the latched USB port of the E5-MCAP

usb

The plug-in USB flash drive in the flush-mounted USB port of the E5-MCAP

Default:

The fixed disk

Example

```
disp-disk-dir:loc=1117:file="dms.cfg"
```

```
disp-disk-dir:src=remove:file="fta"
```

```
disp-disk-dir:src=remove:file="*.*"
```

Dependencies

Valid filenames must be in the format *filename.extension* with the following requirements:

- File name—1–8 ASCII Characters
- Extension—0–3 ASCII Characters

2314 E2314 Cmd Rej: Invalid filename entered

Wildcards (asterisks) are allowed when the wildcard pattern is enclosed in parentheses.

- *—Matches all characters in either filename or extension
- ?—Matches one character in either filename or extension
- file="*.*"—Matches all files on disk
- file="*.tbl"—Matches all files on disk with *.tbl* as the extension

2314 E2314 Cmd Rej: Invalid filename entered

The `src` parameter must be specified.

4913 E4913 Cmd Rej: Disk parameter required for specified location

The 1113 and 1115 locations are used by E5-MCAP cards. The 1114 and 1116 locations are used by E5-TDM cards.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

A removable drive must be inserted in the slot indicated by the value specified for the `loc` or `src` parameter.

2165 E2165 Cmd Rej: Removable drive not inserted

The card specified by the `loc` parameter must be connected to at least one IMT bus.

2269 E2269 Cmd Rej: Unable to communicate with card at location

Notes

None

Output

```
disp-disk-dir
```

```
lnpstp 01-03-30 15:52:04 EST Rel 28.1.0
DISP-DISK-DIR, Loc=1116, Device = FIXED, Dir = :\  
Filename Ext          Length  Last Modified      Cluster      LBA  
DMS      CFG            16384  00-08-01 18:45        2            573  
:
```

```
File(s) : 175  Bytes : 457956761  
Volume : FIXED DISK  
Bytes free : 73654887  
Disk Size (MB) : 2014
```

```
;
```

```
disp-disk-dir:loc=1117
```

```
lnpstp 01-03-30 15:52:46 EST Rel 28.1.0
```

```
disk-disk-dir:loc=1117:file="dms1024.cfg"
```

```
DISP-DISK-DIR, Loc=1117, Device = REMOVE, Dir = :\  
Filename Ext          Length  Last Modified      Cluster      LBA  
DMS1024  CFG            16384  00-08-01 15:48        2            339  
:
```

```
File(s) : 72  Bytes : 192883124  
Volume : SYSTEM DISK  
Bytes free : 956339788  
Disk Size (MB) : 1096
```

```
;
```

```
disp-disk-dir:file=ttserv.tbl
```

```
lnpstp 01-03-30 15:53:09 EST Rel 28.1.0  
DISP-DISK-DIR, Loc=1116, Device = FIXED, Dir = :\  
Filename Ext          Length  Last Modified      Cluster      LBA  
TTSERV   TBL             8192  00-08-01 18:45       2731         44237
```

```
File(s) : 1  Bytes : 8192  
Volume : FIXED DISK  
Bytes free : 73654887  
Disk Size (MB): 2014
```

```
;
```

```
disp-disk-dir:loc=1116
```

```

eaglestp 10-03-06 15:53:09 EST TTTT PPP EAGLE 42.0.0
DISP-DISK-DIR, Loc=1116, Device = FIXED, Dir = :\
Filename Ext Length Last Modified
Cluster LBA
2 DMS CFG 16384 08-07-97 11:00
OAM ELF 3145728 08-07-97 11:00
4 TOAM ELF 3145728 08-07-97 11:00 388
6749 SS7 ELF 1048576 08-07-97 11:00 772
12893 TSS7 ELF 1048576 08-07-97 11:00 900
14941 CCS7ITU ELF 1048576 08-07-97 11:00 1284
21085
.
.
.
LNP_LRN BKP 3072096 08-07-97 11:00 38963
623949 LNP_MR BKP 1679392 08-07-97 11:00 39339
629965 LNP_NPA BKP 5120096 08-07-97 11:00 39545
633261 LNP_4DIG BKP 128000064 08-07-97 11:00 40171
643277 ACG_MIC BKP 187712 08-07-97 11:00 55797
893293 LNP_CHCK BKP 197378 08-07-97 11:00 55820
893661 LNP_DBMM BKP 801600 08-07-97 11:00 55845
894061 TRBLTX BKP 63980 08-07-97 11:00 55943
895629 MTT BKP 384000 08-07-97 11:00 55951
895757 2201800 REL 2048 08-07-97 11:00 55998
896509

```

```

File(s) : 175 Bytes : 457956761
Volume : FIXED DISK
Bytes free : 73654887
Disk Size (MB) : 507
Largest Free Space : 73654887

```

```
;
```

This example shows the output when an E5-MCAP card is used:

```
disp-disk-dir:loc=1113:src=remove
```

```
e5oam 09-01-20 22:24:12 EST EAGLE 40.1.0
DISP-DISK-DIR Loc=1113 Dev = REMOVE
Filename Ext Length
DMS1024 CFG 32768
TATMANSI ELF 3145728
TATMHC ELF 5242880
TATMITU ELF 3145728
TBLBEPM ELF 3145728
TBLBIOS ELF 3145728
TBLBSMG ELF 3145728
TBLCPLD ELF 3145728
TBLDIAG ELF 3145728
TBLDIAG6 ELF 3145728
...
SMEAS_ST SYS 12228
UIMLOG SYS 11263947
SYSREL SYS 949
MTT BKP 384000
TRBLTX BKP 96000
FEATCTRL BKP 128000
ASSYPWR BKP 8016
TS30100 REL 5120
BLMCAP TAR 13721600
File(s) : 178 Bytes : 437596655 Disk Size (MB) : 1972;
```

Legend

- **Filename**—Name of the file in the directory
- **Ext**—Extension of the file name (for example, for the file MFC.BIN, MFC is the file name and BIN is the extension of the file name)
- **Length**—Amount of space, in bytes, the file occupies on the disk
- **Last Modified**—Date and time the file was changed
- **Cluster**—A 2-byte, 16-digit binary number that represents the first section of the disk occupied by the file
- **LBA**—Starting logical block address that corresponds to the cluster
- **File(s)**—Number of files on the disk that match the search criteria
- **Bytes**—Amount of space, in bytes, the displayed files occupy on the disk
- **Volume**—11-character name for the disk
- **Bytes free**—Number of bytes that are available on the disk for file storage
- **Disk Size**—Total capacity of the specified disk

Related Topics

- [act-gpl](#)
- [chg-db](#)
- [chg-gpl](#)

- [copy-gpl](#)
- [copy-meas](#)
- [init-sys](#)
- [rept-stat-db](#)

5.1.19 disp-disk-stats

Use this command to display the disk performance statistics.

Note:

The OAMs maintain disk read/writer access times as well as per table and per application statistics on the number of disk accesses and cache accesses. Per application and per table statistics that have zero values are not displayed if an application ID or table ID is not specified; only nonzero statistics are displayed in the default report.

Parameters

loc (mandatory)

The card location in the system.

Range:

1113, 1115

applid (optional)

Application ID. The application IDs used to define tasks.

Range:

0 - 255

Default:

all

tblid (optional)

Table ID. The table IDs used to define tables.

Range:

0 - 1023

Default:

all

Example

```
disp-disk-stats:loc=1113:applid=29
```

```
disp-disk-stats:loc=1113:applid=93
```

```
disp-disk-stats:loc=1113
```

Dependencies

The specified card location must contain a card that is running an OAM (1113 or 1115).

3291 E3291 Cmd Rej: Card location specified must be an OAM card

GPSM-II and E5-MCAP cards cannot co-exist in the system.

3084 E3084 Cmd Rej: Both OAM cards must be of the same type

Notes

None

Output

```
disp-disk-stats:loc=1113:applid=29
```

```
rlghncxa03w 01-03-01 14:14:05 EST Rel 28.1.0
```

```
Disk Performance Statistics Report:
```

Appl Id	Cache Read Hits	Disk Read Accesses	Cache Write Hits	Disk Write Accesses
-----	-----	-----	-----	-----
29	113	23	25	40

Command Completed.

```
disp-disk-stats:loc=1113:applid=93
```

```
tekelecstp 01-06-01 14:14:05 EST Rel 28.1.0
```

```
Disk Performance Statistics Report:
```

Appl Id	Cache Read Hits	Disk Read Accesses	Cache Write Hits	Disk Write Accesses
-----	-----	-----	-----	-----
93	0	0	0	0

Command Completed.

```
;
```

```
disp-disk-stat:loc=1113
```

```
rlghncxa03w 01-03-01 14:14:05 EST Rel 28.1.0
```

```
Disk Performance Statistics Report:
```

Appl Id	Cache Read Hits	Disk Read Accesses	Cache Write Hits	Disk Write Accesses
-----	-----	-----	-----	-----
29	113	23	25	40

	120	12	223	225	361
Table Id	Cache Read Hits	Disk Read Accesses	Cache Write Hits	Disk Write Accesses	
-----	-----	-----	-----	-----	-----
185	12	223	225	361	
201	113	23	25	40	
	Total Cache Read Hits	Total Disk Reads	Total Cache Write Hits	Total Disk Writes	
	-----	-----	-----	-----	
	125	246	250	401	
	Disk Access Times (microseconds)				
	Minimum	Maximum	Average	Access Type	
	-----	-----	-----	-----	
	1260	31121	6380	Read	
	1215	31090	6350	Write	

Command Completed.

;

Related Topics

- [clr-disk-stats](#)

5.1.20 disp-mem

Use this command to display memory in communication and application processors. This display is in byte format.

Parameters

addr (optional)

The address in the form of *segment–offset*.

Range:

segment–offset

segment— h'00-h'ffff

offset— h'00-h'ffff

bc (optional)

Byte count. The number of data bytes to display.

Range:

1 - 65535

Default:

96

card (optional)

Card location. The card location in the form of *GPLID–Subsystem ID*.

Range:*GPLID-Subsystem ID**GPLID— atmhc, deirhc, erthc, glshc, hipr2, ipghc, iplhc, ipsg, ipshc, mcphc, oamhc, pktgen, sccphc, siphc, ss7hc, utility**Subsystem ID— a, b, act, stb, all***dformat (optional)**

The memory dump format.

Range:*byte**word**dword***Default:***byte***imt (optional)**

The IMT address.

Range:*0 - 254***loc (optional)**

The card location as stenciled on the shelf of the system.

Range:*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118, 1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110, 1113, 1115***paddr (optional)**

The physical offset of the memory address.

Range:*h'00-h'ffffff***proc (optional)**

The processor type.

Range:*appl*

Application processor

com

Communication processor

Default:
apl

Example

```
disp-mem:loc=1204:paddr=h'103abc:bc=8:dformat=word
disp-mem:loc=1204:paddr=h'103abc:bc=8:dformat=dword
disp-mem:card=ss7ansi-all:addr=h'03a-h'001:bc=8
```

Dependencies

The `loc`, `imt`, or `card` parameter must be specified.

2214 E2214 Cmd Rej: Missing parameter - CARD, LOC, or IMT

Only one of the `loc`, `imt`, and `card` parameters can be specified in the command.

2217 E2217 Cmd Rej: More than one of CARD, LOC, and IMT specified

The `card` location specified by the `loc` parameter must be in the database.

2101 E2101 Cmd Rej: Card location is unequipped

All of the subsystem values can be specified with the *oamhc* GPLID. The other GPLID values can be specified only with the *all* subsystem value.

2208 E2208 Cmd Rej: ALL only qualifier allowed with given card type

Card locations 1114, 1116, 1117, and 1118 are not valid for memory commands.

2212 E2212 Cmd Rej: Invalid card type for this command

The GPL specified in the `card` parameter must be supported.

2212 E2212 Cmd Rej: Invalid card type for this command

The `addr` and `paddr` parameters cannot be specified together in the command.

2694 E2694 Cmd Rej: Invalid combination of ADDR and PADDR specified

Notes

The `imt` parameter allows this command to be entered for a card that has not been configured in the system.

Output

```
disp-mem:loc=1204:paddr=h'103abc:bc=8:dformat=word
```

```
rlghncxa03w 01-03-22 21:13:50 EST Rel 28.1.0
SDS Memory Dump from IMT Address H'000a
Source-Address = H'00103abc      Length = 8 bytes
0000 ffff 00ff 00ff 0000          .....
;
```

```

disp-mem:card=psm-a:addr=h'03a-h'001:bc=8

    rlgncxa03w 01-03-22 21:13:50 EST Rel 28.1.0
    SDS Memory Dump from IMT Address H'00f6
    Source-Address = H'003a0001      Length = 8 bytes
    0000 04 0d 3d 1c 04 0d 3d 1c      ..=...=.
;

```

Related Topics

- [set-mem](#)

5.1.21 disp-trace

Use this command to display trace entries.

Parameters

traceid (optional)

Trace ID. The trace entry to be displayed.

Range:

1 - 10

Example

```

disp-trace
disp-trace:traceid=5

```

Dependencies

A valid value must be specified for the `traceid` parameter.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

None

N/A N/A

Output

```

disp-trace

    stdcfg2b 07-10-05 12:55:32 EST  EAGLE 37.5.0
    Trace Request 1:
    CARD=          SS7ANSI      OPC=          001-001-001
    TRACE DISPLAY COMPLETE.
;

```

Related Topics

- [dlt-trace](#)
- [ent-trace](#)

5.1.22 dlt-bp

Use this command to delete breakpoints in the communication or application processors.

Parameters

addr (optional)

The address in the form of *segment–offset*.

Range:

segment–offset
segment— h'00–h'ffff
offset— h'00–h'ffff

card (optional)

The card location in the form of *GPLID–Subsystem ID*.

Range:

GPLID-Subsystem ID
GPLID— atmhc, deirhc, erthc, glshc, hipr2, ipghc, iplhc, ipsg, ipshc, mcphc, oamhc, pktgen, sccphc, siphc, ss7hc, utility
Subsystem ID— a, b, act, stb, all
 The OAMHC GPL can be specified with any of the subsystem IDs. For all other GPLs, only the *all* subsystem ID is valid.

imt (optional)

The IMT address of the card.

Range:

0 - 254

loc (optional)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118, 1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110, 1113, 1115

paddr (optional)

The physical offset of the memory address.

Range:

h'00–h'ffffff

proc (optional)

The processor type.

Range:

appl
Application processor

com
Communication processor

Default:

appl

ueng (optional)

The microengine number.

 **Note:**

This parameter is valid only on IXP-based cards. If this parameter is not specified for IXP-based cards, then the command is assumed to be intended for the ARM processor in the IXP chip.

Range:

0 - 5

Example

```
dlt-bp:loc=1209:ueng=2
```

```
dlt-bp:card=hipr2-all
```

```
dlt-bp:loc=6312
```

Dependencies

The `loc`, `imt`, or `card` parameter must be specified.

2214 E2214 Cmd Rej: Missing parameter - CARD, LOC, or IMT

Only one of the `loc`, `imt`, and `card` parameters can be specified in the command.

2217 E2217 Cmd Rej: More than one of CARD, LOC, and IMT specified

The `ueng` parameter can be specified only for IXP-based cards.

4151 E4151 Cmd Rej: UENG parameter is invalid for this card

The card location specified by the `loc` parameter must be in the database.

2101 E2101 Cmd Rej: Card location is unequipped

Values of 1114, 1116, 1117, and 1118 cannot be specified for the `loc` parameter.

2212 E2212 Cmd Rej: Invalid card type for this command

All of the subsystem values can be specified with the `oamhc` GPLID. The other GPLID values can be specified only with the `all` subsystem value.

2208 E2208 Cmd Rej: ALL only qualifier allowed with given card type

The `addr` and `paddr` parameters cannot be specified together in the command.

2694 E2694 Cmd Rej: Invalid combination of ADDR and PADDR specified

Notes

The `imt` parameter allows this command to be entered for a card that has not been configured in the system.

Output

```
dlt-bp:card=oam-all:proc=com
```

```
Command Accepted - Processing
```

```
tekelecstp 97-01-20 19:21:10 EST Rel 37.0.0
```

```
dlt-bp:card=oam-all:proc=com
```

```
Command entered at terminal #1.
```

```
;
```

Related Topics

- [disp-bp](#)
- [ent-bp](#)

5.1.23 dlt-ee-flt

Use this command to delete an Eagle Eyes Filter from the Eagle Eyes Filter (EE FLT) table. The EE FLT entry consists of a Filter ID and Filter specific data. It can be used to delete a filter only when it is not associated with any card.

Parameters

fltid (mandatory)

Eagle Eyes Filter ID.

Range:

1-200

Example

```
dlt-ee-flt:fltid=20
```

Dependencies

The specified Filter ID must exist in the EE FLT table.

2827 E2827 Cmd Rej: Filter not present

The Eagle Eyes Filter table must be available.

2813 E2813 Cmd Rej: Unable to read EE Filter table

The specified filter should not be associated with any network card.

2858 E2858 Cmd Rej: EE Filter associated to network card

Notes

None.

Output

```
dlt-ee-flt:fltId=3

      tekelecstp 10-03-08 14:43:31 EST  EAGLE 46.0.0
      EE FLT table is (2 of 200) 1% full
      DLT-EE-FLT: MASP A - COMPLTD
;

```

Related Topics

- [ent-ee-flt](#)
- [rtrv-ee-flt](#)

5.1.24 dlt-trace

Use this command to delete provisioned MSU tracing criteria from the database.

Parameters**traceid (optional)**

Trace ID. Identifier of the trace entry to be deleted.

Range:

1 - 10

Example

```
dlt-trace:traceid=5
dlt-trace

```

Dependencies

Only values between 1 and 10 are valid for the `traceid` parameter.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

None

N/A N/A

Output

```
dlt-trace:traceid=1

      stdcfg2b 07-10-05 13:03:29 EST  EAGLE 37.5.0
      dlt-trace:traceid=1
      Command entered at terminal #4.

```

;

Related Topics

- [disp-trace](#)
- [ent-trace](#)

5.1.25 ent-bp

Use this command to add breakpoints in communications and application processors in the system.

Parameters**access (optional)**

The access type, in the form of *access type-format*.

Use the `data` parameter to set the format on IXP-based cards.

Range:

access type-format

access type—*r*, *w*, *rw* (read, write, read-write)

format—*byte*, *word*, *dword*, *any*

Default:

For x86-based cards—*rw-byte*

For IXP-based cards—*rw-any*

addr (optional)

The memory location in the form of *segment-offset*.

Range:

segment-offset

segment—*h'00–h'ffff*

offset—*h'00–h'ffff*

bc (optional)

The number of data bytes to display.

For IXP-based cards, `bc` represents the number of bytes of memory. The number of bytes of stack to be displayed is $255 - bc$. For example, if `bc=128`, then 128 bytes of memory and 127 bytes of stack are displayed. If `bc=0`, then 0 bytes of memory and 255 bytes of stack are displayed. The exception to this rule is that 1 byte of stack is never displayed.

Range:

0 - 255

For x86-based cards, the maximum number of bytes is 96.

For IXP-based cards, the maximum number of bytes is 255.

ca (optional)

Condition “a” in the form of *register-condition-integer*.

The value *register* is the CPU internal register.

The value *condition* is the comparison condition (equal, not equal, greater than, less than, greater than or equal, less than or equal).

The value *integer* is the value for comparison.

Range:

register-condition-integer

register—*sp, bp, ds, ss, es, cs, fl, ax, ah, al, bx, bh, bl, cx, ch, cl, dx, dh, dl, di, si, ip, fs, gs, esi, edi, ebp, esp, eip, efl, eax, ebx, ecx, edx, lr, pc, r1-r15*

condition—*eq, neq, gt, lt, gte, lte*

integer—*h'00–h'ffffff*

card (optional)

The card location, in the form of *GPLID–Subsystem ID*.

Range:

GPLID–Subsystem ID

GPLID—*atmhc, deirhc, erthc, glshc, hipr2, ipghc, iplhc, ipsg, ipshc, mcphc, oamhc, pktgen, sccphc, siphc, ss7hc, utility*

Subsystem ID—*a, b, act, stb, all*

The OAMHC GPL can be specified with any of the subsystem IDs.

For all other GPLs, only the *all* subsystem ID is valid.

cb (optional)

Condition *b* in the form of *register–condition–integer*.

The value *register* is the CPU internal register.

The value *condition* is the comparison condition (equal, not equal, greater than, less than, greater than or equal, less than or equal).

The value *integer* is the value for comparison.

Range:

register-condition-integer

register—*sp, bp, ds, ss, es, cs, fl, ax, ah, al, bx, bh, bl, cx, ch, cl, dx, dh, dl, di, si, ip, fs, gs, esi, edi, ebp, esp, eip, efl, eax, ebx, ecx, edx, lr, pc, r0-r15*

condition—*eq, neq, gt, lt, gte, lte*

integer—*h'00–h'ffffff*

ctx (optional)

The bit-mapped microengine context mask.

Range:

1 - 15

da (optional)

The dump address, in the form of *segment–offset*.

Range:

segment–offset

segment—*h'00–h'fff*

offset—*h'00–h'fff*

data (optional)

This parameter instructs a data breakpoint to qualify on a match of the data.

 **Note:**

This parameter is valid only on IXP-based cards.

Range:

value-mask

value—0-0xFFFFFFFF

mask—0-0xFFFFFFFF

Default:

0

dformat (optional)

Memory dump format (byte, doubleword, word).

Range:

byte

dword

word

Default:

byte

dpaddr (optional)

Memory dump address (physical offset).

Range:

h'00-h'ffffff

dr (optional)

The data register indirect memory dump, in the form *register-register-integer*.

The *register-register* value is the CPU internal register.

The *integer* value is the offset value.

Range:

register-register-integer

register—*sp, bp, ss, ds, es, cs, fl, ax, ah, al, bx, bh, bl, cx, ch, cl, dx, dh, dl, di, si, ip, fs, gs, esi, edi, ebp, esp, eip, efl, eax, ebx, ecx, edx*

register—*sp, bp, ds, ss, es, cs, fl, ax, ah, al, bx, bh, bl, cx, ch, cl, dx, dh, dl, di, si, ip, fs, gs, esi, edi, ebp, esp, eip, efl, eax, ebx, ecx, edx*

integer— *h'00-h'ffffff*

drarm (optional)

ARM register indirect memory dump.

Range:

ARM register-integer

arm register- r0-r15, sp, lr, pc

mask- 0-65535

The value *ARM register* is the CPU internal register.

The value *integer* is the offset value.

Default:*0***dur (optional)**

Breakpoint duration.

Range:*temp**perm***Default:***temp***imt (optional)**

IMT address of the card.

Range:*0 - 254***ind (optional)**

Indirection count.

Range:*0 - 3***Default:***0***loc (optional)**

The card location as stenciled on the shelf of the system.

Range:*1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118, 1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110, 1113, 1115***paddr (optional)**

The physical offset of the memory address.

Range:*h'00-h'ffffff***proc (optional)**

Processor type.

Range:*appl*

Application processor

com
Communication processor

Default:
appl

rep (optional)
Repetitions for this breakpoint.

Range:
0 - 255

Default:
0

type (optional)
Breakpoint type in the form of processor type-breakpoint type

Range:
processor type-breakpoint type
processor type—p186, p286, p486, arm, ixp
breakpoint type—code, codehw, codesw, data

Default:
For x86-based cards—*p486-code*
For IXP-based cards—*arm-codesw*

ueng (optional)
Microengine number. This parameter is valid only on IXP-based cards.

 **Note:**

If this parameter is not specified for an IPX-based card, then the command is assumed to be intended for the ARM processor in the IXP chip.

Range:
0 - 5

Example

```
ent-bp:loc=1204:paddr=h'27c3c:type=p486-data:access=rw-word
```

```
ent-bp:loc=1109:paddr=h'401000:type=arm-codesw:access=rw-  
any:ca=r7-eq-0
```

```
ent-bp:loc=1209:paddr=h'402000:type=arm-data:access=w-  
any:data=h'1111-h'ff
```

```
ent-bp:loc=1309:paddr=h'403000:type=ixp-codesw:ueng=2:ctx=1
```

```
ent-bp:card=hipr2-all:paddr=h'404000:type=arm-  
codehw:drarm=r3-0:bc=64
```

```
ent-bp:loc=1113:addr=h'03a-0001
```

Dependencies

All of the subsystem values can be specified with the OAMHC GPLID. The other GPLID values can be specified only with the *all* subsystem value.

2101 E2101 Cmd Rej: Card location is unequipped

Values of 1114, 1116, 1117, and 1118 cannot be specified for the `loc` parameter.

2212 E2212 Cmd Rej: Invalid card type for this command

The `loc`, `imt`, or `card` parameter must be specified.

2214 E2214 Cmd Rej: Missing parameter - CARD, LOC, or IMT

Only one of the `loc`, `imt`, and `card` parameters can be specified in the command.

2217 E2217 Cmd Rej: More than one of CARD, LOC, and IMT specified

The `dr` parameter and the `da` parameter cannot be specified together in the command.

2209 E2209 Cmd Rej: Both DR and DA parameters cannot be entered

The `dur=perm` parameter and the `rep` parameter cannot be specified together in the command.

2696 E2696 Cmd Rej: REP cannot be specified when DUR=PERM

The `dur=perm` parameter cannot be specified when the value of the processor type portion of the `type` parameter is *p186* or *p286*.

2698 E2698 Cmd Rej: DUR=PERM cannot be specified with P186 or P286

When the `da`, `dr`, or `drarm` parameter is specified, the `dpaddr` parameter cannot be specified.

2695 E2695 Cmd Rej: DPADDR cannot be entered with DR/DRARM/DA

For the `type` parameter (which is in the form of *processor type-breakpoint type*), a breakpoint type of *data* cannot be specified in combination with a processor type of *P186*, *P286*, or *IXP*.

2699 E2699 Cmd Rej: DATA cannot be specified with TYPE = P186, P286, or IXP

When the `paddr` parameter and the `bc` parameter are specified, either the `dpaddr` or `dr` parameter must be specified in the command.

2703 E2703 Cmd Rej: Missing parameter - DPADDR or DR

The `access` parameter can be specified only when the `type` parameter value is *p486-data* or *arm-data*.

2700 E2700 Cmd Rej: ACCESS can only be specified with TYPE=P486-DATA or ARM-DATA

The `bc` parameter value cannot be greater than 96 for x86-based cards.

2219 E2219 Cmd Rej: Specified BC exceeds max allowed (96)

The `ind` parameter value cannot be greater than 3.

2697 E2697 Cmd Rej: IND cannot be greater than 3

The specified card must be in use.

2101 E2101 Cmd Rej: Card location is unequipped

For 80286 processors, registers for 80386 processors cannot be specified.

2720 E2720 Cmd Rej: 386/486 register cannot be specified

For 80286 processors, `integer` values for registers and conditions must be less than 65535.

2721 E2721 Cmd Rej: Integer value must be less than 65535

The `ueng` parameter is valid only on IXP-based cards (the value `ixp` is specified for the processor type portion of the `type` parameter).

4151 E4151 Cmd Rej: UENG parameter is invalid for this card

The `cts` parameter is valid only on IXP-based cards (the value `ixp` is specified for the processor type portion of the `type` parameter).

4146 E4146 Cmd Rej: CTX parameter is invalid for this card

The `data` parameter is valid only on IXP-based cards.

4148 E4148 Cmd Rej: DATA parameter is invalid for this card

The `data` parameter is valid only when the value is `data` for the breakpoint type portion of the `type` parameter.

4152 E4152 Cmd Rej: Invalid combination of TYPE and DATA parameters

The register values `sp`, `lr`, `pc`, and `r0-r15` for the `ca` or `cb` parameters are valid only on IXP-based (ARM processor) cards.

4153 E4153 Cmd Rej: CA or CB register value is invalid for this card

The `ca` and `cb` parameters cannot be specified when the value `ixp` is specified for the processor type portion of the `type` parameter.

4150 E4150 Cmd Rej: CA/CB parameters are invalid for this processor

The `drarm` parameter can be specified only on IXP-based cards.

4156 E4156 Cmd Rej: DRARM parameter is invalid for this card

The `drarm` parameter can be specified only when the value `arm` is specified for the processor type portion of the `type` parameter.

4154 E4154 Cmd Rej: DRARM parameter is invalid for this processor

The `dr` parameter cannot be specified for IXP-based cards.

4155 E4155 Cmd Rej: DR parameter is invalid for this card

The `data` and `codesw` values for the breakpoint type portion of the `type` parameter cannot be specified when the value `ixp` is specified for the processor type portion of the `type` parameter.

4145 E4145 Cmd Rej: TYPE parameter value is invalid for this processor

The `arm` and `ixp` values for the processor type portion of the `type` parameter are valid only on IXP-based cards.

4159 E4159 Cmd Rej: TYPE parameter value is invalid for this card

The value *any* for the format portion of the `access` parameter can be specified only on IXP-based cards. The format value must be set to *any* on IXP-based cards.

4160 E4160 Cmd Rej: ACCESS parameter value is invalid for this card

When the value *ixp* is specified for the processor type portion of the `type` parameter, the `ueng` and `cts` parameters must be specified.

4147 E4147 Cmd Rej: Invalid combination of TYPE, UENG, and CTX parameters

The `addr` parameter can be specified only when the `proc=com` parameter is specified for DS0 cards with PROM-based COM processors (such as TSMs).

4158 E4158 Cmd Rej: ADDR parameter is invalid for this card

When the `ca`, `cb`, and `dr` parameters are used with 80186 and 80286 processors, the register values *ip*, *fs*, *gs*, *esi*, *edi*, *ebp*, *esp*, *eip*, *efl*, *eax*, *ebx*, *ecx*, and *edx* cannot be specified. These registers can be used only with 80486 processors. The integer values for these parameters when used with 80186 and 80286 processors must be less than *h'ffff* (65535).

N/A N/A

The `data` value for the breakpoint type portion of the `type` parameter cannot be specified with the values *p186*, *p286*, and *ixp* for the processor type portion of the `type` parameter.

4152 E4152 Cmd Rej: Invalid combination of TYPE and DATA parameters

The `da` parameter cannot be specified for IXP-based cards.

4157 E4157 Cmd Rej: DA parameter is invalid for this card

An ARM register value must be specified for an IXP-based card with an ARM processor.

4149 E4149 Cmd Rej: ARM register must be specified

The `addr` or `paddr` parameter must be specified in the command. Both parameters cannot be specified in the command.

2694 E2694 Cmd Rej: Invalid combination of ADDR and PADDR specified

Notes

The `imt` parameter allows this command to be entered for a card that has not been configured in the system.

Output

```
ent-bp:loc=1113:addr=h'03a-0001
```

```
rlghncxa03w 04-08-22 21:14:41 EST EAGLE 33.0.0
SDS Response Code 22 from IMT Address H'00f6 - command complete.
```

```
rlghncxa03w 04-08-22 21:14:41 EST EAGLE 33.0.0
SDS Response from IMT Address H'000a - command complete.
```

```
;
```

```
ent-bp:loc=6205:paddr=h'03a002
```

```
rlghncxa03w 12-05-22 21:14:41 EST EAGLE 45.0.0  
SDS Response Code 22 from IMT Address H'00fd - command complete.  
;
```

Related Topics

- [disp-bp](#)
- [dlt-bp](#)

5.1.26 ent-ee-flt

Use this command to enter Eagle Eyes Filter data in the Eagle Eyes Filter (EE FLT) table. The EE FLT entry consists of a Filter ID and Filter specific data. After the FLT ID is provisioned, it can be used in the `dlt-ee-flt` and `chg-ee-card` commands.

Parameters

type (mandatory)

Eagle Eyes Filter Type.

Range:

inc

exl

app1 (mandatory)

Card Application Type

Range:

atm

ip

e1t1

ipprot (optional)

Filter based on IP sub-protocol

Range:

sctp

tcp

udp

ipsrc (optional)

Filter based on IP source address

Range:

4 numbers separated by dots, with each number in the range of 0-255

ipdst (optional)

Filter based on IP destination address

Range:

4 numbers separated by dots, with each number in the range of 0-255

ssport (optional)

Filter based on SCTP source port

Range:

0-65535

sdport (optional)

Filter based on SCTP destination port.

Range:

0-65535

stype (optional)

Filter based on SCTP chunk type

Range:

abrt

data

err

hbak

htbt

inak

init

sack

sctppld (optional)

Filter based on SCTP data payload identifier.

Range:

diam

m2pa

m3ua

sua

unspec

sctpstr (optional)

Filter based on SCTP data stream identifier

Range:
0-65535

sscopsu (optional)

Filter based on SSCOP sub-protocol or SU type.

Range:
all

ctrl

data

mtp3si (optional)

Filter MTP3 user.

Range:
bicc

isup

sccp

snm

tup

port (optional)

Filter based on port.

Range:
a-b

a1-a31

b1-b31

all

sutype (optional)

Filter based on SU type.

Range:
allsu

lsu

msu

Example

```
ent-ee-  
flt:appl=ip:type=inc:ipprot=sctp:ssport=2048:stype=data:sctpstr  
=100
```

```
ent-ee-flt:appl=atm:type=exl:port=a:sscopsu=data:mtp3si=sccp
```

```
ent-ee-flt:appl=eltl:type=exl:port=a1:sutype=msu:mtp3si=tup
```

Dependencies

If the `appl=ip` then `ipprot`, `ipsrc` or `ipdst` parameters must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

If the `ssport`, `sdport` or `stype` parameters are specified, then the `ipprot=sctp` parameter must be specified.

2136 E2136 Cmd Rej: At least one optional parameter (`ipprot` or `port`) is required

At least one optional parameter (`ipprot` or `port`) must be specified.

2136 E2136 Cmd Rej: At least one optional parameter is required

If the `sctppld` parameter is specified, then the `stype=data` and `ipprot=sctp` parameters must be specified.

2379 E2379 Cmd Rej: Missing parameter

If the `sctpstr` parameter is specified, then the `stype=data` and `ipprot=sctp` parameters must be specified.

2379 E2379 Cmd Rej: Missing parameter

The Eagle Eyes Filter table cannot contain more than 200 entries.

2811 E2811 Cmd Rej: EE Filter table is full

The Eagle Eyes Filter table must be available.

2813 E2813 Cmd Rej: Unable to read EE Filter table

If the `appl=ip` parameter is specified, then the `appl=atm` and `appl=e1t1` parameters must not be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified.

If the `appl=atm` parameter is specified, then the `appl=ip` and `appl=e1t1` parameters must not be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified.

If the `appl=e1t1` parameter is specified, then the `appl=atm` and `appl=ip` parameters must not be specified.

2155 E2155 Cmd Rej: Invalid parameter combination specified.

If the `appl=atm` parameter is specified, then the `port` parameter can only be either `a`, `b` or `a1`.

2155 E2155 Cmd Rej: Invalid parameter combination specified.

Notes

IP7 parameters:

- `ipprot`, `ipsrc`, `ipdst`, `ssport`, `sdport`, `style`, `sctppld`, `sctpstr`

ATM parameters:

- `sscopsu`, `mtp3si`, `port`

E1T1 parameters:

- *sutype, mtp3si, port*

Output

```
ent-ee-flt:appl=atm:type=inc:port=a:sscopsu=data
```

```
tekelecstp 10-03-08 14:43:31 EST EAGLE 46.0.0
EE FLT table is (1 of 200) 1% full
ENT-EE-FLT: MASP A - COMPLTD
;
```

Related Topics

- [dlt-ee-flt](#)
- [rtrv-ee-flt](#)

5.1.27 ent-trace

Use this debug command to trace MSUs sent to Service Module cards or to LIM cards running the SS7ANSI, CCS7ITU, VSCCP, ATMITU, ATMANSI, IPLIMI, SS7IPGW, IPGWI, or IPSPG applications.

The EAGLE traps MSUs that meet the provisioned tracing criteria, and the MSU remains in the trapped state for the life span of that MSU. The life span varies depending on the type of MSU. For MTP-Routed or GTT MSUs, the life span lasts until the MSU travels out of the EAGLE or is discarded. For LNP MSUs, the life span lasts until the request is processed. The response is not part of the LNP MSU. Trapping a response requires the provisioning of another MSU trace.

This command uses different parameters depending on the card type sending the MSU as shown:

- Service Module— *error, gt, lrn, tn, ssp/sspa/sspi/sspn/sspn24/sspn16, dn, entityid, imei, and imsi*
- LIM card running ANSI applications— *error, ssp/sspa, opc/opca, dpc/dpca, tlnpisuptype, and gt*
- LIM card running ITU applications— *error, sspi/sspn/sspn24/sspn16, opci/opcn/opcn24/opcn16, dpci/dpcn/dpcn24/dpcn16, and gt*

The *lrn, tn, dn, entityid, imsi, imei, and error* parameters are mutually exclusive.

The following parameters can be used once in a single MSU trace request with ONE of the mutually exclusive parameters specified above: *opc, dpc, ilsn, si, gt, ssp, h0h1, cpc, or cic/ecic*.

The *cic/ecic* parameters can be used only for ISUP traffic. The *ecic* parameter must be specified with the *cic* parameter.

For all cards supported by this command, the *error* parameter can be provisioned as the only optional parameter or in addition to any other optional parameter to trace any

messages that fail verification or processing. If the `error` parameter not specified, the default value is `error=no`.

▲ Caution:

If the system configuration approaches the maximum number of provisioned Service Module cards, then entering this command might cause an OAM to reset because of the amount of information that may be returned.

Parameters

card (mandatory)

The card location in the form of *APPL CLASS-Subsystem ID*.

Range:

APPL CLASS-Subsystem ID

APPL CLASS— atmansi, atmitu, ccs7itu, iplimi, ss7ansi, ss7ipgw, ipgwi, ipsg, vscpp
Subsystem ID— all

brief (optional)

This parameter specifies whether all information is provided for each MSU as it moves through the EAGLE.

Range:

no

All information, including data sections for the MSU, is displayed.

yes

The data sections for the MSU are not displayed.

cic (optional)

The beginning value for a CIC range.

Range:

0 - 16383

cpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym:

cpc

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, *ni = 000* is not valid.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is not valid if *ni = 001–005*.

When `chg-sid:pctype=ansi` is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

cpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

cpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmt1` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnngc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnngc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-*

nnnnn—0-16383

gc—*aa-zz*

m1-m2-m3-m4—0-14 for each member; values must sum to 14

cpcn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

cpcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

dn (optional)

Directory Number. This parameter is used for the ANSI41 AIQ, ATINP, G-Flex, G-Port, INP, PPSMS, or V-Flex features.

The *tn* parameter is used as the directory number for LNP.

Range:

5-15 digits

Valid digits are 0-9, a-f, A-F.

dpc (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*

Synonym:

dpca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

dpci (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

dpcn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfmti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s*-

nnnnn—*0-16383*

gc—*aa-zz*

m1-m2-m3-m4—*0-14* for each member; values must sum to 14

dpcn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—*000-255*

ssa—*000-255*

sp—*000-255*

dpcn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

ecic (optional)

The end value for a CIC range.

Range:

0 - 16383

entityid (optional)

The entity ID.

Range:

1-15 digits

Valid digits are *0-9, a-f, A-F*

error (optional)

This parameter specifies whether to perform a trace on any message verification error and message processing error

Range:

yes

no

Default:

no

gt (optional)

Global title. The CdPA global title digits.

Range:

1-21 digits

Valid digits are *0-9, a-f, A-F*

h0h1 (optional)

A combination of values contained in some MSUs. The *h0* value is the code for a message group, and the *h1* value is the code for a message within that group.

Range:

0 - 255

ilsn (optional)

The incoming linkset name.

Range:

ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters.

imei (optional)

The International Equipment Identifier.

Range:

Exactly 14 digits; valid digits are *0-9, a-f, A-F*

imsi (optional)

The International Mobile Station Identifier.

Range:

5-15 digits

Valid digits are *0-9, a-f, A-F*

loc (optional)

The card location of the card as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

lrn (optional)

The local routing number.

Range:

Exactly 14 digits: Valid digits are *0-9*.

mode (optional)

The type of output displayed.

Range:**default**

The default value of this parameter.

detail

Detailed information is displayed when an MSU matches the request.

debug

Complete information is displayed when an MSU matches the request.

opc (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym:

opca

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001-005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006-255*.

The point code *000-000-000* is not a valid point code.

opci (optional)

ITU international origination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps

zone—0-7

area—000-255

id—0-7

The point code *0-000-0* is not a valid point code.

opcni (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the *chg-stpopts:npcfnti* flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnngc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnngc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range:*s*-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*prefix—s-**nnnnn—0-16383**gc—aa-zz**m1-m2-m3-m4—0-14* for each member; values must sum to 14**opc_n24 (optional)**24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.**Range:**

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*msa—000–255**ssa—000–255**sp—000–255***opc_n16 (optional)**16-bit ITU national point code with subfields *unit number-sub number area-main number area (un-sna-mna)*.**Range:**

000---127

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

*un---000--127**sna--000---15**mna---000--31***rep (optional)**

The number of MSUs to trap.

Range:

0 - 255

service (optional)

The service offered by the EAGLE.

Range:*gflex**gport**inpmr**inpq*

smsmr

mnpsms

eir

idpr

idps

tif

tif2

tif3

tobr

aiq

si (optional)

Service indicator.

Range:

0 - 15

s1s (optional)

Signaling link selector.

Range:

0 - 255

ssp (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym

sspa

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When *chg-sid:pctype=ansi* is specified, *ni = 000* is not valid.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is not valid if *ni = 001–005*.

When *chg-sid:pctype=ansi* is specified, *nc = 000* is valid if *ni = 006–255*.

The point code *000-000-000* is not a valid point code.

sspi (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range:

s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s
zone—0-7
area—000-255
id—0-7

The point code 0-000-0 is not a valid point code.

sspn (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnngc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnngc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

s-, 0-16383, *aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-
nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

sspn24 (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range:

000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

sspn16 (optional)

16-bit ITU national point code with subfields *unit number-sub number area-main number area* (*un-sna-mna*).

Range:

000---127

Specify a valid value for each subfield of the point code, and the separate the subfields with a dash (-).

un---000---127

sna---000---15

mna---000---31

tlnpisuptype (optional)

The ISUP message type.

Range:
0 - 255

tn (optional)
The directory number.

Range:
Exactly 10 digits. Valid digits are 0-9

Example

```
ent-trace:opc=1-1-1:card=SS7ANSI-ALL:rep=2
ent-trace:tlnpisuptype=01:card=SS7ANSI-ALL
ent-trace:dn=12345:card=VSCCP-ALL
ent-trace:imsi=c122d:card=VSCCP-ALL
ent-trace:card=ccs7itu-all:dpc=2-7-5:error=no
ent-trace:card=vscpp-all:error=yes
ent-trace:card=ccs7itu-
all:sspn24=10-11-12:opc24=10-10-10:dpcn24=10-101-11
ent-trace:imei=123456789101234:card=VSCCP-ALL
ent-trace:entityid=c123:card=VSCCP-ALL
ent-trace:loc=1305:si=5:brief=yes
ent-trace:dn=98912345:loc=1105
ent-trace:card=ccs7itu-
all:sspn16=121-10-12:opc16=121-10-13:dpcn16=121-10-14
```

Dependencies

The `card` parameter or the `loc` parameter must be specified.

2214 E2214 Cmd Rej: Missing parameter - CARD, LOC, or IMT

At least one optional parameter must be specified. The `error` parameter can be specified as the only optional parameter or with any of the other optional parameters in the command.

2136 E2136 Cmd Rej: At least one optional parameter is required

The `gt`, `entityid`, `dn`, `imei`, and `imsi` parameters cannot have a value of *none*.

3502 E3502 Cmd Rej: The NONE value is not allowed in this case

A valid value must be specified for the `card` parameter.

2212 E2212 Cmd Rej: Invalid card type for this command

The only qualifier allowed for the `card` parameter is *all*.

2208 E2208 Cmd Rej: ALL only qualifier allowed with given card type

The `gt`, `entityid`, `dn`, `imei`, `imsi`, `lrn`, and `tn` parameters are invalid for LIM cards running the SS7ANSI, ATMANSI, or SS7IPGW applications.

3425 E3425 Cmd Rej: Invalid parameter for SS7ANSI, ATMANSI, or SS7IPGW

The `opci/opcn/opcn24/opcn16`, `dpci/dpcn/dpcn24/dpcn16`, and `sspi/sspn/sspn24/sspn16` ITU point code parameters are invalid for LIM cards running the SS7ANSI, ATMANSI, or SS7IPGW applications.

3427 E3427 Cmd Rej: ITU PC parameters are invalid for ANSI cards

The `gt`, `entityid`, `dn`, `imei`, `imsi`, `lrn`, `tn`, and `tlnpisuptype` parameters are invalid for LIM cards running the ATMITU or IPLIMI applications.

3428 E3428 Cmd Rej: Invalid parameter for CCS7ITU or IPLIMI

The `opc/opca`, `dpc/dpca`, and `ssp/sspa` ANSI point code parameters are invalid for LIM cards running the IPLIMI application.

3426 E3426 Cmd Rej: ANSI PC parameters are invalid for ITU cards

The `opc`, `dpc`, and `tlnpisuptype` parameters cannot be specified for Service Module cards.

3429 E3429 Cmd Rej: Invalid parameter for VSCCP

The G-Flex feature or the Equipment Identity Register feature must be turned on before the `imsi` parameter can be specified.

4192 E4192 Cmd Rej: GFLEX or EIR feature must be ON

If the ITUDUPPC feature is turned on, the ITU national point code must be specified as a full point code.

3921 E3921 Cmd Rej: ITU National Point Code must be full point code

The EIR feature must be turned on before the `imei` parameter can be specified.

3699 E3699 Cmd Rej: EIR feature must be ON

The AINPQ, G-Flex, G-Port, IDP Relay, INP, PPSMS, or V-Flex feature must be turned on or the ANSI41 AIQ or ATINP feature must be enabled before the `dn` parameter can be specified.

The G-Flex, G-Port, INP, or V-Flex feature must be turned on or the ATINP, IDP Relay or any TIF feature must be enabled before the `entityid` parameter can be specified.

3342 E3342 Cmd Rej: GFLEX/INP/AINPQ/GPORT/PPSMS/VFLEX OFF or ATINP/AIQ not enbl

The `loc` and `card` parameters are mutually exclusive.

Only one of the `lrn`, `tn`, `dn`, `entityid`, `imsi`, `imei`, or `error` parameters can be specified in a single MSU trace request.

2155 E2155 Cmd Rej: Invalid parameter combination specified

A maximum of 10 traces can be entered in the system at a time.

4980 E4980 Cmd Rej: Maximum number of traces already entered

Values 1113 - 1118 cannot be specified for the `loc` parameter.

2025 E2025 Cmd Rej: Invalid card location

The J7 Support feature must be enabled before the `sspn16/opcn16/dpcn16` parameters can be specified.

2691 E2691 Cmd Rej: J7 Support Feature must be enabled.

Output

This example shows the output for an MTP trace:

```
ent-trace:loc=1101:dpc=7-1-0
```

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'00e1: Card=1101 RX - Link B0
Trace Condition:
LOC=          1101
DPC=          007-001-000
```

```
MSU info:
TOTAL MSU SIZE= 12 Bytes
MSU DATA SIZE = 4 Bytes
```

```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP:  85 00 01 07 01 65 01 16
```

```
DATA: 00 00 09 00
TRACE OUTPUT COMPLETE.
```

;

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'00e1: Card=1101 Use RTE: 007-001-000:H'0001
Trace Condition:
LOC=          1101
DPC=          007-001-000
```

```
MSU info:
TOTAL MSU SIZE= 12 Bytes
MSU DATA SIZE = 4 Bytes
```

```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP:  85 00 01 07 01 65 01 16
```

```
DATA: 00 00 09 00
TRACE OUTPUT COMPLETE.
```

;

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'00e1: Card=1101 Sending to 1103:B1
Trace Condition:
LOC=          1101
DPC=          007-001-000
```

```
MSU info:
TOTAL MSU SIZE= 12 Bytes
MSU DATA SIZE = 4 Bytes
```

```

          0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP: 85 00 01 07 01 65 01 0b

DATA: 00 00 09 00
TRACE OUTPUT COMPLETE.
;

stdcfg1b 07-08-10 15:51:33 EST  EAGLE 37.5.0
MSU TRACE H'00e1:  Card=1103  MSU Received from 1101
Trace Condition:
LOC=          1101
DPC=          007-001-000

MSU info:
TOTAL MSU SIZE= 12 Bytes
MSU DATA SIZE = 4 Bytes

          0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP: 85 00 01 07 01 65 01 0b

DATA: 00 00 09 00
TRACE OUTPUT COMPLETE.
;

stdcfg1b 07-08-10 15:51:33 EST  EAGLE 37.5.0
MSU TRACE H'00e1:  Card=1103  MSU sent to L2 - B1
Trace Condition:
LOC=          1101
DPC=          007-001-000

MSU info:
TOTAL MSU SIZE= 12 Bytes
MSU DATA SIZE = 4 Bytes

          0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP: 85 00 01 07 01 65 01 0b

DATA: 00 00 09 00
TRACE OUTPUT COMPLETE.
;

```

This example shows the output for an SCCP trace:

```
ent-trace:loc=1101:gt=9194605500
```

```

stdcfg1b 07-08-10 15:51:33 EST  EAGLE 37.5.0
MSU TRACE H'00e2:  Card=1101  RX - Link B0
Trace Condition:
LOC=          1101
GT=          9194605500

MSU info:
TOTAL MSU SIZE= 90 Bytes
MSU DATA SIZE = 82 Bytes

```



```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP:  83 00 01 01 01 65 01 02

SCCP: 09 80 03 0e 13 0b 8b 8c 28 04 01 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00
TRACE OUTPUT COMPLETE.
```

;

```
stdcfg1b 07-08-10 15:51:33 EST  EAGLE 37.5.0
MSU TRACE H'00e2:  Card=1101  TVG: Sending to SCCP 1107
Trace Condition:
LOC=          1101
GT=           9194605500
```

```
MSU info:
TOTAL MSU SIZE=  90 Bytes
MSU DATA SIZE =  82 Bytes
```

```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP:  83 00 01 01 01 65 01 02

SCCP: 09 80 03 0e 13 0b 8b 8c 28 04 01 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00
TRACE OUTPUT COMPLETE.
```

;

```
stdcfg1b 07-08-10 15:51:33 EST  EAGLE 37.5.0
MSU TRACE H'00e2:  Card=1107  MSU Received from 1101
Trace Condition:
LOC=          1101
GT=           9194605500
```

```
MSU info:
TOTAL MSU SIZE=  90 Bytes
MSU DATA SIZE =  82 Bytes
```

```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP:  83 00 01 01 01 65 01 02

SCCP: 09 80 03 0e 13 0b 8b 8c 28 04 01 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00
TRACE OUTPUT COMPLETE.
```

```
;  
  
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0  
MSU TRACE H'00e2: Card=1107 SCCP: Before SS7 Trans Encod  
Trace Condition:  
LOC= 1101  
GT= 9194605500  
  
MSU info:  
TOTAL MSU SIZE= 97 Bytes  
MSU DATA SIZE = 89 Bytes  
  
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9  
MTP: 83 00 01 01 01 65 01 02  
  
SCCP: 09 80 03 0e 13 0b 8b 8c 28 04 01 0a 19 49 06 55 00 05 c3 0a  
04 05 06  
  
TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01  
f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11  
0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02  
08 01 65 01 00 04  
TRACE OUTPUT COMPLETE.
```

```
;  
  
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0  
MSU TRACE H'00e2: Card=1107 SCCP: After SS7 Trans Encode  
Trace Condition:  
LOC= 1101  
GT= 9194605500  
  
MSU info:  
TOTAL MSU SIZE= 97 Bytes  
MSU DATA SIZE = 89 Bytes  
  
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9  
MTP: 83 00 01 07 00 01 01 02  
  
SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a  
04 05 06  
  
TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01  
f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11  
0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02  
08 01 65 01 00 04  
TRACE OUTPUT COMPLETE.
```

```
;  
  
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0  
MSU TRACE H'00e2: Card=1107 Use RTE 007-001-000:H'0009  
Trace Condition:  
LOC= 1101  
GT= 9194605500  
  
MSU info:
```

```
TOTAL MSU SIZE= 97 Bytes
MSU DATA SIZE = 89 Bytes
```

```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP: 83 00 01 07 00 01 01 02
```

```
SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a
      04 05 06
```

```
TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02
      08 01 65 01 00 04
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'00e2: Card=1107 Sending to 1103:B1
```

```
Trace Condition:
```

```
LOC=          1101
GT=           9194605500
```

```
MSU info:
```

```
TOTAL MSU SIZE= 97 Bytes
MSU DATA SIZE = 89 Bytes
```

```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP: 83 00 01 07 00 01 01 01
```

```
SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a
      04 05 06
```

```
TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02
      08 01 65 01 00 04
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'0000: Card=1103 MSU Received from 1107
```

```
Trace Condition:
```

```
LOC=          1101
GT=           9194605500
```

```
MSU info:
```

```
TOTAL MSU SIZE= 97 Bytes
MSU DATA SIZE = 89 Bytes
```

```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP: 83 00 01 07 00 01 01 01
```

```
SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a
      04 05 06
```

```

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02
      08 01 65 01 00 04
TRACE OUTPUT COMPLETE.

```

;

```

stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'0000: Card=1103 MSU sent to L2 - B1
Trace Condition:
LOC=          1101
GT=           9194605500

```

```

MSU info:
TOTAL MSU SIZE= 90 Bytes
MSU DATA SIZE = 82 Bytes

```

```

      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP: 83 00 01 07 00 01 01 01

SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a
      04 05 06

```

```

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00
TRACE OUTPUT COMPLETE.

```

;

This example shows the output for a trace when truncated output is requested. Only the filters that are specified in the command are displayed.

```

ent-
trace:loc=1305:si=0:hoh1=20:sls=255:cpc=001-002-003:mode=debug:brief
=yes

```

```

tk1c1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0

```

;

```

tk1c1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
MSU TRACE H'0081: Card=1305
Trace ID 1 Condition:
LOC=          1305
SI=           0
H0H1=         20
SLS=          255
CPC=          001-002-003
MODE=         DEBUG

```

```

Info: RX - Link A0

```

```

TRACE OUTPUT COMPLETE.

```

;

```
tklcl071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
MSU TRACE H'0081: Card=1305
Trace ID 1 Condition:
LOC=          1305
SI=           0
H0H1=        20
SLS=         255
CPC=         001-002-003
MODE=        DEBUG
```

Info: TIF Stop Action: OK

TRACE OUTPUT COMPLETE.

;

```
tklcl071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
MSU TRACE H'0081: Card=1305
Trace ID 1 Condition:
LOC=          1305
SI=           0
H0H1=        20
SLS=         255
CPC=         001-002-003
MODE=        DEBUG
```

Info: TVG: Sending to SCCP 1317

TRACE OUTPUT COMPLETE.

;

```
tklcl071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
MSU TRACE H'0081: Card=1317
Trace ID 1 Condition:
LOC=          1305
SI=           0
H0H1=        20
SLS=         255
CPC=         001-002-003
MODE=        DEBUG
```

Info: SCCP: MSU RX from 1305

TRACE OUTPUT COMPLETE.

;

```
tklcl071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
MSU TRACE H'0081: Card=1317
Trace ID 1 Condition:
LOC=          1305
SI=           0
H0H1=        20
SLS=         255
CPC=         001-002-003
MODE=        DEBUG
```

Info: TIF Process Msg: Ruleset TIF1

TRACE OUTPUT COMPLETE.

;

tklc1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0

MSU TRACE H'0081: Card=1317

Trace ID 1 Condition:

LOC= 1305
SI= 0
H0H1= 20
SLS= 255
CPC= 001-002-003
MODE= DEBUG

Info: TIF: No Error CdPN:111111119703819111100

TRACE OUTPUT COMPLETE.

;

tklc1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0

MSU TRACE H'0081: Card=1305

Trace ID 1 Condition:

LOC= 1305
SI= 0
H0H1= 20
SLS= 255
CPC= 001-002-003
MODE= DEBUG

Info: Use RTE (16) DPCa: 023-172-011, OPCa: 013-159-005

TRACE OUTPUT COMPLETE.

;

tklc1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0

MSU TRACE H'0081: Card=1305

Trace ID 1 Condition:

LOC= 1305
SI= 0
H0H1= 20
SLS= 255
CPC= 001-002-003
MODE= DEBUG

Info: Sending to 2311:B3

TRACE OUTPUT COMPLETE.

;

tklc1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0

MSU TRACE H'0081: Card=2311

Trace ID 1 Condition:

LOC= 1305
SI= 0
H0H1= 20

```
SLS=          255
CPC=          001-002-003
MODE=         DEBUG
```

```
Info: MSU Received from 1305
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
tklc1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
```

```
MSU TRACE H'0081: Card=2311
```

```
Trace ID 1 Condition:
```

```
LOC=          1305
SI=           0
H0H1=         20
SLS=          255
CPC=          001-002-003
MODE=         DEBUG
```

```
Info: MSU sent to L2 - B3: DPCa= 023-172-011, OPCa= 013-159-005
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
tklc1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
```

```
MSU TRACE H'0081: Card=2311
```

```
Trace ID 1 Condition:
```

```
LOC=          1305
SI=           0
H0H1=         20
SLS=          255
CPC=          001-002-003
MODE=         DEBUG
```

```
Info: Transmitted and ACK'd on B3
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

This example shows the output for an MTP trace:

```
ent-trace:loc=1101:dpcn16=7-1-0
```

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
```

```
MSU TRACE H'00e1: Card=1101 RX - Link B0
```

```
Trace Condition:
```

```
LOC=          1101
DPC=          007-001-000
```

```
MSU info:
```

```
TOTAL MSU SIZE= 12 Bytes
```

```
MSU DATA SIZE = 4 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 85 00 01 07 01 65 01 16
```

```
DATA: 00 00 09 00  
TRACE OUTPUT COMPLETE.
```

;

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0  
MSU TRACE H'00e1: Card=1101 Use RTE: 007-001-000:H'0001  
Trace Condition:  
LOC= 1101  
DPC= 007-001-000
```

```
MSU info:  
TOTAL MSU SIZE= 12 Bytes  
MSU DATA SIZE = 4 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9  
MTP: 85 00 01 07 01 65 01 16
```

```
DATA: 00 00 09 00  
TRACE OUTPUT COMPLETE.
```

;

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0  
MSU TRACE H'00e1: Card=1101 Sending to 1103:B1  
Trace Condition:  
LOC= 1101  
DPC= 007-001-000
```

```
MSU info:  
TOTAL MSU SIZE= 12 Bytes  
MSU DATA SIZE = 4 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9  
MTP: 85 00 01 07 01 65 01 0b
```

```
DATA: 00 00 09 00  
TRACE OUTPUT COMPLETE.
```

;

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0  
MSU TRACE H'00e1: Card=1103 MSU Received from 1101  
Trace Condition:  
LOC= 1101  
DPC= 007-001-000
```

```
MSU info:  
TOTAL MSU SIZE= 12 Bytes  
MSU DATA SIZE = 4 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9  
MTP: 85 00 01 07 01 65 01 0b
```

```
DATA: 00 00 09 00  
TRACE OUTPUT COMPLETE.
```



```

;

stdcfg1b 07-08-10 15:51:33 EST  EAGLE 37.5.0
MSU TRACE H'00e1:  Card=1103  MSU sent to L2 - B1
Trace Condition:
LOC=          1101
DPC=          007-001-000

MSU info:
TOTAL MSU SIZE=  12 Bytes
MSU DATA SIZE =  4 Bytes

      0  1  2  3  4  5  6  7  8  9  0  1  2  3  4  5  6  7  8  9
MTP:  85 00 01 07 01 65 01 0b

DATA: 00 00 09 00
TRACE OUTPUT COMPLETE.
;

```

This example shows the output for an SCCP trace:

```
ent-trace:loc=1101:gt=9194605500
```

```

stdcfg1b 07-08-10 15:51:33 EST  EAGLE 37.5.0
MSU TRACE H'00e2:  Card=1101  RX - Link B0
Trace Condition:
LOC=          1101
GT=          9194605500

MSU info:
TOTAL MSU SIZE=  90 Bytes
MSU DATA SIZE =  82 Bytes

      0  1  2  3  4  5  6  7  8  9  0  1  2  3  4  5  6  7  8  9
MTP:  83 00 01 01 01 65 01 02

SCCP: 09 80 03 0e 13 0b 8b 8c 28 04 01 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00
TRACE OUTPUT COMPLETE.
;

```

```

stdcfg1b 07-08-10 15:51:33 EST  EAGLE 37.5.0
MSU TRACE H'00e2:  Card=1101  TVG: Sending to SCCP 1107
Trace Condition:
LOC=          1101
GT=          9194605500

MSU info:
TOTAL MSU SIZE=  90 Bytes
MSU DATA SIZE =  82 Bytes

```

```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP:  83 00 01 01 01 65 01 02

SCCP: 09 80 03 0e 13 0b 8b 8c 28 04 01 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00
TRACE OUTPUT COMPLETE.
```

;

```
stdcfg1b 07-08-10 15:51:33 EST  EAGLE 37.5.0
MSU TRACE H'00e2:  Card=1107  MSU Received from 1101
Trace Condition:
LOC=          1101
GT=          9194605500
```

```
MSU info:
TOTAL MSU SIZE=  90 Bytes
MSU DATA SIZE =  82 Bytes
```

```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP:  83 00 01 01 01 65 01 02

SCCP: 09 80 03 0e 13 0b 8b 8c 28 04 01 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00
TRACE OUTPUT COMPLETE.
```

;

```
stdcfg1b 07-08-10 15:51:33 EST  EAGLE 37.5.0
MSU TRACE H'00e2:  Card=1107  SCCP: Before SS7 Trans Encod
Trace Condition:
LOC=          1101
GT=          9194605500
```

```
MSU info:
TOTAL MSU SIZE=  97 Bytes
MSU DATA SIZE =  89 Bytes
```

```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP:  83 00 01 01 01 65 01 02

SCCP: 09 80 03 0e 13 0b 8b 8c 28 04 01 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02
      08 01 65 01 00 04
```

TRACE OUTPUT COMPLETE.

;

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'00e2: Card=1107 SCCP: After SS7 Trans Encode
Trace Condition:
LOC=          1101
GT=           9194605500
```

```
MSU info:
TOTAL MSU SIZE= 97 Bytes
MSU DATA SIZE = 89 Bytes
```

```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP: 83 00 01 07 00 01 01 02
```

```
SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a
      04 05 06
```

```
TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02
      08 01 65 01 00 04
```

TRACE OUTPUT COMPLETE.

;

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'00e2: Card=1107 Use RTE 007-001-000:H'0009
Trace Condition:
LOC=          1101
GT=           9194605500
```

```
MSU info:
TOTAL MSU SIZE= 97 Bytes
MSU DATA SIZE = 89 Bytes
```

```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP: 83 00 01 07 00 01 01 02
```

```
SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a
      04 05 06
```

```
TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02
      08 01 65 01 00 04
```

TRACE OUTPUT COMPLETE.

;

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'00e2: Card=1107 Sending to 1103:B1
Trace Condition:
LOC=          1101
GT=           9194605500
```

```
MSU info:
TOTAL MSU SIZE= 97 Bytes
MSU DATA SIZE = 89 Bytes

      0  1  2  3  4  5  6  7  8  9  0  1  2  3  4  5  6  7  8  9
MTP:  83 00 01 07 00 01 01 01

SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02
      08 01 65 01 00 04

TRACE OUTPUT COMPLETE.
```

;

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'0000: Card=1103 MSU Received from 1107
Trace Condition:
LOC=          1101
GT=           9194605500
```

```
MSU info:
TOTAL MSU SIZE= 97 Bytes
MSU DATA SIZE = 89 Bytes

      0  1  2  3  4  5  6  7  8  9  0  1  2  3  4  5  6  7  8  9
MTP:  83 00 01 07 00 01 01 01

SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02
      08 01 65 01 00 04

TRACE OUTPUT COMPLETE.
```

;

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'0000: Card=1103 MSU sent to L2 - B1
Trace Condition:
LOC=          1101
GT=           9194605500
```

```
MSU info:
TOTAL MSU SIZE= 90 Bytes
MSU DATA SIZE = 82 Bytes

      0  1  2  3  4  5  6  7  8  9  0  1  2  3  4  5  6  7  8  9
MTP:  83 00 01 07 00 01 01 01

SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a
      04 05 06
```

```
TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00
TRACE OUTPUT COMPLETE.
```

```
;
```

This example shows the output to display the selected highest priority component in a TCAP message:

```
ent-trace:loc=1103:si=3:mode=debug
```

```
tekelecstp 17-03-22 11:30:07 MST EAGLE 46.5.0.0-70.26.0
MSU TRACE H'0021: Card=1103
Trace ID 1 Condition: (brief=Y, MSU size=145)
LOC=          1103
SI=           3
MODE=         debug

Info: SCCP: service selector not found

MSU info:
TOTAL MSU SIZE= 145 Bytes
MSU DATA SIZE = 140 Bytes

      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9

MTP: 03 3f 78 0c 0c

SCCP: 09 80 03 0c 16 09 0b 31 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
      f2 89 67 45 23 01

TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
      12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
      49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
      80 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
      10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
      01 00 02 01 08 30 07 80 05 89 67 45 23 01
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
tekelecstp 17-03-22 11:30:07 MST EAGLE 46.5.0.0-70.26.0
1660.0309 SYSTEM Node is no longer isolated
```

```
;
```

```
tekelecstp 17-03-22 11:30:07 MST EAGLE 46.5.0.0-70.26.0
MSU TRACE H'0021: Card=1103
Trace ID 1 Condition: (brief=Y, MSU size=145)
LOC=          1103
SI=           3
MODE=         debug
```

```
Info: TOBR:Msg=Begin Opcode=2,22,8 ACN(hex)= 0
```

```
MSU info:
```

```
TOTAL MSU SIZE= 145 Bytes
MSU DATA SIZE = 140 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 03 3f 78 0c 0c
```

```
SCCP: 09 80 03 0c 16 09 0b 31 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
      f2 89 67 45 23 01
```

```
TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
      12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
      49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
      80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
      10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
      01 00 02 01 08 30 07 80 05 89 67 45 23 01
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
tekelecstp 17-03-22 11:30:08 MST EAGLE 46.5.0.0.0-70.26.0
```

```
MSU TRACE H'0021: Card=1103
```

```
Trace ID 1 Condition: (brief=Y, MSU size=145)
```

```
LOC= 1103
```

```
SI= 3
```

```
MODE= debug
```

```
Info: GTT Mode=FD-FG,GTIi=2/2,TT11/242,SS10/242,NP-/-,NAI-/-,SelID=NONE
```

```
MSU info:
```

```
TOTAL MSU SIZE= 145 Bytes
```

```
MSU DATA SIZE = 140 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 03 3f 78 0c 0c
```

```
SCCP: 09 80 03 0c 16 09 0b 31 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
      f2 89 67 45 23 01
```

```
TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
      12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
      49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
      80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
      10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
      01 00 02 01 08 30 07 80 05 89 67 45 23 01
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
tekelecstp 17-03-22 11:30:08 MST EAGLE 46.5.0.0.0-70.26.0
```

```
MSU TRACE H'0021: Card=1103
```

```
Trace ID 1 Condition: (brief=Y, MSU size=145)
```

```
LOC= 1103
```

```
SI= 3
```

```
MODE= debug
```

Info: LS: ls661

MSU info:

TOTAL MSU SIZE= 145 Bytes

MSU DATA SIZE = 140 Bytes

0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9

MTP: 03 3f 78 0c 0c

SCCP: 09 80 03 0c 16 09 0b 31 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
f2 89 67 45 23 01

TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
01 00 02 01 08 30 07 80 05 89 67 45 23 01

TRACE OUTPUT COMPLETE.

;

tekelecstp 17-03-22 11:30:09 MST EAGLE 46.5.0.0.0-70.26.0

MSU TRACE H'0021: Card=1103

Trace ID 1 Condition: (brief=Y, MSU size=145)

LOC= 1103

SI= 3

MODE= debug

Info: dGT=22222210,gGT=9876543210,gPC=7-080-1,

OPCi=6-006-1,DPCi=7-007-7

MSU info:

TOTAL MSU SIZE= 145 Bytes

MSU DATA SIZE = 140 Bytes

0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9

MTP: 03 3f 78 0c 0c

SCCP: 09 80 03 0c 16 09 0b 31 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
f2 89 67 45 23 01

TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
01 00 02 01 08 30 07 80 05 89 67 45 23 01

TRACE OUTPUT COMPLETE.

;

tekelecstp 17-03-22 11:30:10 MST EAGLE 46.5.0.0.0-70.26.0

MSU TRACE H'0021: Card=1103

Trace ID 1 Condition: (brief=Y, MSU size=145)

```
LOC=          1103
SI=           3
MODE=         debug
```

```
Info: Opcode 8 from component#3 selected for translation
```

```
MSU info:
```

```
TOTAL MSU SIZE= 145 Bytes
MSU DATA SIZE = 140 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 03 3f 78 0c 0c
```

```
SCCP: 09 80 03 0c 16 09 0b 31 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
      f2 89 67 45 23 01
```

```
TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
      12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
      49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
      80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
      10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
      01 00 02 01 08 30 07 80 05 89 67 45 23 01
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
tekelecstp 17-03-22 11:30:10 MST EAGLE 46.5.0.0.0-70.26.0
```

```
MSU TRACE H'0021: Card=1103
```

```
Trace ID 1 Condition: (brief=Y, MSU size=145)
```

```
LOC=          1103
SI=           3
MODE=         debug
```

```
Info: Opcode 2 from component#1 selected for translation
```

```
MSU info:
```

```
TOTAL MSU SIZE= 145 Bytes
MSU DATA SIZE = 140 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 03 3f 78 0c 0c
```

```
SCCP: 09 80 03 0c 16 09 0b 31 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
      f2 89 67 45 23 01
```

```
TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
      12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
      49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
      80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
      10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
      01 00 02 01 08 30 07 80 05 89 67 45 23 01
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```



```
tekelecstp 17-03-22 11:30:11 MST EAGLE 46.5.0.0.0-70.26.0
MSU TRACE H'0021: Card=1103
Trace ID 1 Condition: (brief=Y, MSU size=145)
LOC=          1103
SI=           3
MODE=        debug
```

```
Info: SET=FD-cdl-amituopcd-cg1-ZITUOPCD
```

```
MSU info:
```

```
TOTAL MSU SIZE= 145 Bytes
```

```
MSU DATA SIZE = 140 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 03 3f 78 0c 0c
```

```
SCCP: 09 80 03 0c 16 09 0b 31 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
      f2 89 67 45 23 01
```

```
TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
      12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
      49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
      80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
      10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
      01 00 02 01 08 30 07 80 05 89 67 45 23 01
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
tekelecstp 17-03-22 11:30:11 MST EAGLE 46.5.0.0.0-70.26.0
MSU TRACE H'0021: Card=1103
Trace ID 1 Condition: (brief=Y, MSU size=145)
LOC=          1103
SI=           3
MODE=        debug
```

```
Info: xlatPCi=6-008-1,SS=0,RI=0,GTMODID=-,CGPACT=DFLT,ACTSN=-
```

```
MSU info:
```

```
TOTAL MSU SIZE= 145 Bytes
```

```
MSU DATA SIZE = 140 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 03 3f 78 0c 0c
```

```
SCCP: 09 80 03 0c 16 09 0b 31 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
      f2 89 67 45 23 01
```

```
TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
      12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
      49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
      80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
      10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
      01 00 02 01 08 30 07 80 05 89 67 45 23 01
```

```
TRACE OUTPUT COMPLETE.
;
tekelecstp 17-03-22 11:30:12 MST EAGLE 46.5.0.0.0-70.26.0
MSU TRACE H'0021: Card=1103
Trace ID 1 Condition: (brief=Y, MSU size=145)
LOC=          1103
SI=           3
MODE=         debug

Info: SCCP - Before Encode :old, GTT perfd

MSU info:
TOTAL MSU SIZE= 145 Bytes
MSU DATA SIZE = 140 Bytes

      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP:  03 3f 78 0c 0c

SCCP: 09 80 03 0c 16 09 0b 31 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
      f2 89 67 45 23 01

TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
      12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
      49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
      80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
      10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
      01 00 02 01 08 30 07 80 05 89 67 45 23 01

TRACE OUTPUT COMPLETE.
;
tekelecstp 17-03-22 11:30:12 MST EAGLE 46.5.0.0.0-70.26.0
MSU TRACE H'0021: Card=1103
Trace ID 1 Condition: (brief=Y, MSU size=145)
LOC=          1103
SI=           3
MODE=         debug

Info: After Encd:OPCi=7-007-7,DPCi:6-008-1,CgPC=7-080-1

MSU info:
TOTAL MSU SIZE= 145 Bytes
MSU DATA SIZE = 140 Bytes

      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP:  03 41 f0 0f 0e

SCCP: 09 80 03 0c 16 09 0b 41 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
      f2 89 67 45 23 01

TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
      12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
      49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
```

```
80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
01 00 02 01 08 30 07 80 05 89 67 45 23 01
```

TRACE OUTPUT COMPLETE.

;

tekelecstp 17-03-22 11:30:13 MST EAGLE 46.5.0.0.0-70.26.0

MSU TRACE H'0021: Card=1103

Trace ID 1 Condition: (brief=Y, MSU size=145)

LOC= 1103

SI= 3

MODE= debug

Info: route_message_hp:DPCi=6-008-1,OPC=7-007-7>route_msg_on_rtidx

MSU info:

TOTAL MSU SIZE= 145 Bytes

MSU DATA SIZE = 140 Bytes

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

MTP: 03 41 f0 0f 0e

```
SCCP: 09 80 03 0c 16 09 0b 41 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
f2 89 67 45 23 01
```

```
TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
01 00 02 01 08 30 07 80 05 89 67 45 23 01
```

TRACE OUTPUT COMPLETE.

;

tekelecstp 17-03-22 11:30:13 MST EAGLE 46.5.0.0.0-70.26.0

MSU TRACE H'0021: Card=1103

Trace ID 1 Condition: (brief=Y, MSU size=145)

LOC= 1103

SI= 3

MODE= debug

Info: Use RTE (5) DPCi: 6-008-1, OPCi: 7-007-7

MSU info:

TOTAL MSU SIZE= 145 Bytes

MSU DATA SIZE = 140 Bytes

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

MTP: 03 41 f0 0f 0e

```
SCCP: 09 80 03 0c 16 09 0b 41 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
f2 89 67 45 23 01
```

```
TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
      12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
      49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
      80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
      10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
      01 00 02 01 08 30 07 80 05 89 67 45 23 01
```

TRACE OUTPUT COMPLETE.

;

```
tekelecstp 17-03-22 11:30:14 MST EAGLE 46.5.0.0.0-70.26.0
```

```
MSU TRACE H'0021: Card=1103
```

```
Trace ID 1 Condition: (brief=Y, MSU size=145)
```

```
LOC=          1103
```

```
SI=           3
```

```
MODE=         debug
```

```
Info: Rotated SLS = H'0000
```

```
MSU info:
```

```
TOTAL MSU SIZE= 145 Bytes
```

```
MSU DATA SIZE = 140 Bytes
```

```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 03 41 f0 0f 0e
```

```
SCCP: 09 80 03 0c 16 09 0b 41 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
      f2 89 67 45 23 01
```

```
TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
      12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
      49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
      80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
      10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
      01 00 02 01 08 30 07 80 05 89 67 45 23 01
```

TRACE OUTPUT COMPLETE.

;

```
tekelecstp 17-03-22 11:30:14 MST EAGLE 46.5.0.0.0-70.26.0
```

```
MSU TRACE H'0021: Card=1103
```

```
Trace ID 1 Condition: (brief=Y, MSU size=145)
```

```
LOC=          1103
```

```
SI=           3
```

```
MODE=         debug
```

```
Info: Sending to 1102:A1
```

```
MSU info:
```

```
TOTAL MSU SIZE= 145 Bytes
```

```
MSU DATA SIZE = 140 Bytes
```

```
      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 03 41 f0 0f 0e
```

```
SCCP: 09 80 03 0c 16 09 0b 41 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
      f2 89 67 45 23 01
```

```
TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
      12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
      49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
      80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
      10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
      01 00 02 01 08 30 07 80 05 89 67 45 23 01
```

TRACE OUTPUT COMPLETE.

;

```
tekelecstp 17-03-22 11:30:15 MST EAGLE 46.5.0.0.0-70.26.0
```

```
MSU TRACE H'0021: Card=1102
```

```
Trace ID 1 Condition: (brief=Y, MSU size=145)
```

```
LOC=          1103
```

```
SI=           3
```

```
MODE=         debug
```

```
Info: MSU Received from 1103
```

```
MSU info:
```

```
TOTAL MSU SIZE= 145 Bytes
```

```
MSU DATA SIZE = 140 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 03 41 f0 0f 0e
```

```
SCCP: 09 80 03 0c 16 09 0b 41 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
      f2 89 67 45 23 01
```

```
TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
      12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
      49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
      80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
      10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
      01 00 02 01 08 30 07 80 05 89 67 45 23 01
```

TRACE OUTPUT COMPLETE.

;

```
tekelecstp 17-03-22 11:30:15 MST EAGLE 46.5.0.0.0-70.26.0
```

```
MSU TRACE H'0021: Card=1102
```

```
Trace ID 1 Condition: (brief=Y, MSU size=145)
```

```
LOC=          1103
```

```
SI=           3
```

```
MODE=         debug
```

```
Info: MSU sent to L2: A1: DPCi=6-008-1,OPCi=7-007-7,NI=0
```

```
MSU info:
```

```
TOTAL MSU SIZE= 145 Bytes
```

```
MSU DATA SIZE = 140 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```

MTP: 03 41 f0 0f 0e

SCCP: 09 80 03 0c 16 09 0b 41 30 0a 0b 22 22 22 01 0a 4b 81 3a f2
      f2 89 67 45 23 01

TCAP: 71 62 6f 48 01 00 6b 1f 28 1d 06 07 00 11 86 05 01 01 01 a0
      12 60 10 80 01 00 a1 03 06 01 00 be 06 28 04 a0 02 00 00 6c
      49 a1 24 02 01 00 02 01 02 30 1c 04 05 79 58 45 28 93 80 0b
      80 00 00 00 00 00 00 00 00 00 00 04 06 91 22 33 44 55 66 a1
      10 02 01 00 02 01 16 30 08 80 06 91 21 43 65 87 09 a1 0f 02
      01 00 02 01 08 30 07 80 05 89 67 45 23 01

```

TRACE OUTPUT COMPLETE.

;

This example shows the output for mode=debug:

```
ent-trace:loc=1107:si=12:mode=debug
```

```
tekelecstp 17-03-03 10:23:27 EST EAGLE 46.5.0.0.0-70.21.0
```

```

MSU TRACE H'00c1: Card=1107
Trace ID 1 Condition: (brief=N, MSU size=101)
LOC=          1107
SI=           12
MODE=         debug

```

```
Info: RX:SLK A0,DPCi=1-001-3,APCi=1-001-2,TSPCi=1-001-1,SAPC =
```

MSU info:

```

TOTAL MSU SIZE= 101 Bytes
MSU DATA SIZE = 096 Bytes

```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 0c 0b 48 02 c2
```

```

DATA: 09 08 00 01 6e f9 de 91 b8 81 f6 00 0c 00 00 0e 00 10 00 12
      00 14 00 16 00 18 00 1a 00 1c 00 1e 00 20 00 22 00 24 00 26
      00 28 00 2a 00 2c 00 2e 00 30 00 32 00 34 00 36 00 38 00 3a
      00 3c 00 3e 00 40 00 42 00 44 00 46 00 48 00 4a 00 4c 00 4e
      00 50 00 52 00 54 00 56 00 58 00 5a 00 5c 00 5e

```

TRACE OUTPUT COMPLETE.

;

```
tekelecstp 17-03-03 10:23:27 EST EAGLE 46.5.0.0.0-70.21.0
```

```

MSU TRACE H'00c1: Card=1107
Trace ID 1 Condition: (brief=N, MSU size=101)
LOC=          1107
SI=           12
MODE=         debug

```

```
Info: SS7_HMDC:4thisPC=N,TRUE_PCi=1-001-3 =>sccp=No
```

MSU info:

```
TOTAL MSU SIZE= 101 Bytes
MSU DATA SIZE = 096 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 0c 0b 48 02 c2
```

```
DATA: 09 08 00 01 6e f9 de 91 b8 81 f6 00 0c 00 00 0e 00 10 00 12
      00 14 00 16 00 18 00 1a 00 1c 00 1e 00 20 00 22 00 24 00 26
      00 28 00 2a 00 2c 00 2e 00 30 00 32 00 34 00 36 00 38 00 3a
      00 3c 00 3e 00 40 00 42 00 44 00 46 00 48 00 4a 00 4c 00 4e
      00 50 00 52 00 54 00 56 00 58 00 5a 00 5c 00 5e
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
tekelecstp 17-03-03 10:23:27 EST EAGLE 46.5.0.0.0-70.21.0
```

```
MSU TRACE H'00c1: Card=1107
```

```
Trace ID 1 Condition: (brief=N, MSU size=101)
```

```
LOC= 1107
```

```
SI= 12
```

```
MODE= debug
```

```
Info: HMDC MTP-routes MSU: call route_message_hp
```

```
MSU info:
```

```
TOTAL MSU SIZE= 101 Bytes
```

```
MSU DATA SIZE = 096 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 0c 0b 48 02 c2
```

```
DATA: 09 08 00 01 6e f9 de 91 b8 81 f6 00 0c 00 00 0e 00 10 00 12
      00 14 00 16 00 18 00 1a 00 1c 00 1e 00 20 00 22 00 24 00 26
      00 28 00 2a 00 2c 00 2e 00 30 00 32 00 34 00 36 00 38 00 3a
      00 3c 00 3e 00 40 00 42 00 44 00 46 00 48 00 4a 00 4c 00 4e
      00 50 00 52 00 54 00 56 00 58 00 5a 00 5c 00 5e
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
tekelecstp 17-03-03 10:23:28 EST EAGLE 46.5.0.0.0-70.21.0
```

```
MSU TRACE H'00c1: Card=1107
```

```
Trace ID 1 Condition: (brief=N, MSU size=101)
```

```
LOC= 1107
```

```
SI= 12
```

```
MODE= debug
```

```
Info: route_message_hp:DPCi=1-001-3,OPC=1-001-1>route_msg_on_rtidx
```

```
MSU info:
```

```
TOTAL MSU SIZE= 101 Bytes
```

```
MSU DATA SIZE = 096 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 0c 0b 48 02 c2

DATA: 09 08 00 01 6e f9 de 91 b8 81 f6 00 0c 00 00 0e 00 10 00 12
      00 14 00 16 00 18 00 1a 00 1c 00 1e 00 20 00 22 00 24 00 26
      00 28 00 2a 00 2c 00 2e 00 30 00 32 00 34 00 36 00 38 00 3a
      00 3c 00 3e 00 40 00 42 00 44 00 46 00 48 00 4a 00 4c 00 4e
      00 50 00 52 00 54 00 56 00 58 00 5a 00 5c 00 5e
```

TRACE OUTPUT COMPLETE.

;

```
tekelecstp 17-03-03 10:23:28 EST EAGLE 46.5.0.0.0-70.21.0
MSU TRACE H'00c1: Card=1107
Trace ID 1 Condition: (brief=N, MSU size=101)
LOC=          1107
SI=           12
MODE=         debug
```

Info: Use RTE (5) DPCi: 1-001-3, OPCi: 1-001-1

MSU info:

```
TOTAL MSU SIZE= 101 Bytes
MSU DATA SIZE = 096 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 0c 0b 48 02 c2

DATA: 09 08 00 01 6e f9 de 91 b8 81 f6 00 0c 00 00 0e 00 10 00 12
      00 14 00 16 00 18 00 1a 00 1c 00 1e 00 20 00 22 00 24 00 26
      00 28 00 2a 00 2c 00 2e 00 30 00 32 00 34 00 36 00 38 00 3a
      00 3c 00 3e 00 40 00 42 00 44 00 46 00 48 00 4a 00 4c 00 4e
      00 50 00 52 00 54 00 56 00 58 00 5a 00 5c 00 5e
```

TRACE OUTPUT COMPLETE.

;

```
tekelecstp 17-03-03 10:23:29 EST EAGLE 46.5.0.0.0-70.21.0
MSU TRACE H'00c1: Card=1107
Trace ID 1 Condition: (brief=N, MSU size=101)
LOC=          1107
SI=           12
MODE=         debug
```

Info: Rotated SLS = H'000c

MSU info:

```
TOTAL MSU SIZE= 101 Bytes
MSU DATA SIZE = 096 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 0c 0b 48 02 c2

DATA: 09 08 00 01 6e f9 de 91 b8 81 f6 00 0c 00 00 0e 00 10 00 12
      00 14 00 16 00 18 00 1a 00 1c 00 1e 00 20 00 22 00 24 00 26
      00 28 00 2a 00 2c 00 2e 00 30 00 32 00 34 00 36 00 38 00 3a
```



```
00 3c 00 3e 00 40 00 42 00 44 00 46 00 48 00 4a 00 4c 00 4e
00 50 00 52 00 54 00 56 00 58 00 5a 00 5c 00 5e
```

TRACE OUTPUT COMPLETE.

;

```
tekelecstp 17-03-03 10:23:29 EST EAGLE 46.5.0.0.0-70.21.0
```

```
MSU TRACE H'00c1: Card=1107
```

```
Trace ID 1 Condition: (brief=N, MSU size=101)
```

```
LOC=          1107
```

```
SI=           12
```

```
MODE=         debug
```

```
Info: Sending to 1108:A0
```

```
MSU info:
```

```
TOTAL MSU SIZE= 101 Bytes
```

```
MSU DATA SIZE = 096 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 0c 0b 48 02 c2
```

```
DATA: 09 08 00 01 6e f9 de 91 b8 81 f6 00 0c 00 00 0e 00 10 00 12
00 14 00 16 00 18 00 1a 00 1c 00 1e 00 20 00 22 00 24 00 26
00 28 00 2a 00 2c 00 2e 00 30 00 32 00 34 00 36 00 38 00 3a
00 3c 00 3e 00 40 00 42 00 44 00 46 00 48 00 4a 00 4c 00 4e
00 50 00 52 00 54 00 56 00 58 00 5a 00 5c 00 5e
```

TRACE OUTPUT COMPLETE.

;

```
tekelecstp 17-03-03 10:23:29 EST EAGLE 46.5.0.0.0-70.21.0
```

```
MSU TRACE H'00c1: Card=1108
```

```
Trace ID 1 Condition: (brief=N, MSU size=101)
```

```
LOC=          1107
```

```
SI=           12
```

```
MODE=         debug
```

```
Info: MSU Received from 1107
```

```
MSU info:
```

```
TOTAL MSU SIZE= 101 Bytes
```

```
MSU DATA SIZE = 096 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 0c 0b 48 02 c2
```

```
DATA: 09 08 00 01 6e f9 de 91 b8 81 f6 00 0c 00 00 0e 00 10 00 12
00 14 00 16 00 18 00 1a 00 1c 00 1e 00 20 00 22 00 24 00 26
00 28 00 2a 00 2c 00 2e 00 30 00 32 00 34 00 36 00 38 00 3a
00 3c 00 3e 00 40 00 42 00 44 00 46 00 48 00 4a 00 4c 00 4e
00 50 00 52 00 54 00 56 00 58 00 5a 00 5c 00 5e
```

TRACE OUTPUT COMPLETE.

;

This example shows the output for mode=debug and brief=yes:

```
ent-trace:loc=1107:si=12:mode=debug:brief=yes
```

```
tekelecstp 17-03-03 10:23:40 EST EAGLE 46.5.0.0.0-70.21.0
MSU TRACE H'00c1: Card=1107
Trace ID 1 Condition: (brief=Y, MSU size=101)
LOC=          1107
SI=           12
MODE=         debug

Info: RX:SLK A0,DPCi=1-001-3,APCi=1-001-2,TSPCi=1-001-1,SAPC =

TRACE OUTPUT COMPLETE.
;
tekelecstp 17-03-03 10:23:40 EST EAGLE 46.5.0.0.0-70.21.0
MSU TRACE H'00c1: Card=1107
Trace ID 1 Condition: (brief=Y, MSU size=101)
LOC=          1107
SI=           12
MODE=         debug

Info: SS7_HMDC:4thisPC=N,TRUE_PCi=1-001-3 =>sccp=No

TRACE OUTPUT COMPLETE.
;
tekelecstp 17-03-03 10:23:40 EST EAGLE 46.5.0.0.0-70.21.0
MSU TRACE H'00c1: Card=1107
Trace ID 1 Condition: (brief=Y, MSU size=101)
LOC=          1107
SI=           12
MODE=         debug

Info: HMDC MTP-routes MSU: call route_message_hp

TRACE OUTPUT COMPLETE.
;
tekelecstp 17-03-03 10:23:40 EST EAGLE 46.5.0.0.0-70.21.0
MSU TRACE H'00c1: Card=1107
Trace ID 1 Condition: (brief=Y, MSU size=101)
LOC=          1107
SI=           12
MODE=         debug

Info: route_message_hp:DPCi=1-001-3,OPC=1-001-1>route_msg_on_rtidx

TRACE OUTPUT COMPLETE.
;
tekelecstp 17-03-03 10:23:41 EST EAGLE 46.5.0.0.0-70.21.0
MSU TRACE H'00c1: Card=1107
Trace ID 1 Condition: (brief=Y, MSU size=101)
LOC=          1107
SI=           12
MODE=         debug
```

```

Info: Use RTE (5) DPCi: 1-001-3, OPCi: 1-001-1

TRACE OUTPUT COMPLETE.
;
tekelecstp 17-03-03 10:23:41 EST EAGLE 46.5.0.0.0-70.21.0
MSU TRACE H'00c1: Card=1107
Trace ID 1 Condition: (brief=Y, MSU size=101)
LOC=          1107
SI=           12
MODE=         debug

Info: Rotated SLS = H'0000

TRACE OUTPUT COMPLETE.
;
tekelecstp 17-03-03 10:23:41 EST EAGLE 46.5.0.0.0-70.21.0
MSU TRACE H'00c1: Card=1107
Trace ID 1 Condition: (brief=Y, MSU size=101)
LOC=          1107
SI=           12
MODE=         debug

Info: Sending to 1108:A0

TRACE OUTPUT COMPLETE.
;
tekelecstp 17-03-03 10:23:41 EST EAGLE 46.5.0.0.0-70.21.0
MSU TRACE H'00c1: Card=1108
Trace ID 1 Condition: (brief=Y, MSU size=101)
LOC=          1107
SI=           12
MODE=         debug

Info: MSU Received from 1107

TRACE OUTPUT COMPLETE.
;

```

This example shows the output for when the mode is not defined:

```
ent-trace:loc=1107:si=12
```

```

tekelecstp 17-03-03 10:23:49 EST EAGLE 46.5.0.0.0-70.21.0
MSU TRACE H'00c2: Card=1107
Trace ID 2 Condition: (brief=N, MSU size=101)
LOC=          1107
SI=           12

Info: RX:SLK A0,DPCi=1-001-3,APCi=1-001-2,TSPCi=1-001-1,SAPC =

MSU info:
TOTAL MSU SIZE= 101 Bytes
MSU DATA SIZE = 096 Bytes

```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 0c 0b 48 02 52

DATA: 09 08 00 01 81 97 2f 93 bd 83 f6 00 05 00 00 0e 00 10 00 12
      00 14 00 16 00 18 00 1a 00 1c 00 1e 00 20 00 22 00 24 00 26
      00 28 00 2a 00 2c 00 2e 00 30 00 32 00 34 00 36 00 38 00 3a
      00 3c 00 3e 00 40 00 42 00 44 00 46 00 48 00 4a 00 4c 00 4e
      00 50 00 52 00 54 00 56 00 58 00 5a 00 5c 00 5e
```

TRACE OUTPUT COMPLETE.

;

```
tekelecstp 17-03-03 10:23:49 EST EAGLE 46.5.0.0.0-70.21.0
MSU TRACE H'00c2: Card=1107
Trace ID 2 Condition: (brief=N, MSU size=101)
LOC=          1107
SI=           12
```

Info: SS7_HMDC:4thisPC=N,TRUE_PCi=1-001-3 =>sccp=No

MSU info:

```
TOTAL MSU SIZE= 101 Bytes
MSU DATA SIZE = 096 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 0c 0b 48 02 52
```

```
DATA: 09 08 00 01 81 97 2f 93 bd 83 f6 00 05 00 00 0e 00 10 00 12
      00 14 00 16 00 18 00 1a 00 1c 00 1e 00 20 00 22 00 24 00 26
      00 28 00 2a 00 2c 00 2e 00 30 00 32 00 34 00 36 00 38 00 3a
      00 3c 00 3e 00 40 00 42 00 44 00 46 00 48 00 4a 00 4c 00 4e
      00 50 00 52 00 54 00 56 00 58 00 5a 00 5c 00 5e
```

TRACE OUTPUT COMPLETE.

;

```
tekelecstp 17-03-03 10:23:50 EST EAGLE 46.5.0.0.0-70.21.0
MSU TRACE H'00c2: Card=1107
Trace ID 2 Condition: (brief=N, MSU size=101)
LOC=          1107
SI=           12
```

Info: Use RTE (5) DPCi: 1-001-3, OPCi: 1-001-1

MSU info:

```
TOTAL MSU SIZE= 101 Bytes
MSU DATA SIZE = 096 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 0c 0b 48 02 52
```

```
DATA: 09 08 00 01 81 97 2f 93 bd 83 f6 00 05 00 00 0e 00 10 00 12
      00 14 00 16 00 18 00 1a 00 1c 00 1e 00 20 00 22 00 24 00 26
      00 28 00 2a 00 2c 00 2e 00 30 00 32 00 34 00 36 00 38 00 3a
      00 3c 00 3e 00 40 00 42 00 44 00 46 00 48 00 4a 00 4c 00 4e
```

```
00 50 00 52 00 54 00 56 00 58 00 5a 00 5c 00 5e
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
tekelecstp 17-03-03 10:23:51 EST EAGLE 46.5.0.0.0-70.21.0
```

```
MSU TRACE H'00c2: Card=1107
```

```
Trace ID 2 Condition: (brief=N, MSU size=101)
```

```
LOC= 1107
```

```
SI= 12
```

```
Info: Sending to 1107:A0
```

```
MSU info:
```

```
TOTAL MSU SIZE= 101 Bytes
```

```
MSU DATA SIZE = 096 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 0c 0b 48 02 52
```

```
DATA: 09 08 00 01 81 97 2f 93 bd 83 f6 00 05 00 00 0e 00 10 00 12  
00 14 00 16 00 18 00 1a 00 1c 00 1e 00 20 00 22 00 24 00 26  
00 28 00 2a 00 2c 00 2e 00 30 00 32 00 34 00 36 00 38 00 3a  
00 3c 00 3e 00 40 00 42 00 44 00 46 00 48 00 4a 00 4c 00 4e  
00 50 00 52 00 54 00 56 00 58 00 5a 00 5c 00 5e
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
tekelecstp 17-03-03 10:23:51 EST EAGLE 46.5.0.0.0-70.21.0
```

```
MSU TRACE H'00c2: Card=1107
```

```
Trace ID 2 Condition: (brief=N, MSU size=101)
```

```
LOC= 1107
```

```
SI= 12
```

```
Info: MSU Received from 1107
```

```
MSU info:
```

```
TOTAL MSU SIZE= 101 Bytes
```

```
MSU DATA SIZE = 096 Bytes
```

```
0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
```

```
MTP: 0c 0b 48 02 52
```

```
DATA: 09 08 00 01 81 97 2f 93 bd 83 f6 00 05 00 00 0e 00 10 00 12  
00 14 00 16 00 18 00 1a 00 1c 00 1e 00 20 00 22 00 24 00 26  
00 28 00 2a 00 2c 00 2e 00 30 00 32 00 34 00 36 00 38 00 3a  
00 3c 00 3e 00 40 00 42 00 44 00 46 00 48 00 4a 00 4c 00 4e  
00 50 00 52 00 54 00 56 00 58 00 5a 00 5c 00 5e
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
tekelecstp 17-03-03 10:23:51 EST EAGLE 46.5.0.0.0-70.21.0
```

```
MSU TRACE H'00c2: Card=1107
```

```
Trace ID 2 Condition: (brief=N, MSU size=101)
```

```

LOC=          1107
SI=           12

Info: MSU sent to L2: A0: DPCi=1-001-3,OPCi=1-001-1,NI=0

MSU info:
TOTAL MSU SIZE= 101 Bytes
MSU DATA SIZE = 096 Bytes

      0  1  2  3  4  5  6  7  8  9  0  1  2  3  4  5  6  7  8  9

MTP:  0c 0b 48 02 52

DATA: 09 08 00 01 81 97 2f 93 bd 83 f6 00 05 00 00 0e 00 10 00 12
      00 14 00 16 00 18 00 1a 00 1c 00 1e 00 20 00 22 00 24 00 26
      00 28 00 2a 00 2c 00 2e 00 30 00 32 00 34 00 36 00 38 00 3a
      00 3c 00 3e 00 40 00 42 00 44 00 46 00 48 00 4a 00 4c 00 4e
      00 50 00 52 00 54 00 56 00 58 00 5a 00 5c 00 5e

TRACE OUTPUT COMPLETE.
;

```

5.1.28 rept-stat-ee

Use this command to generate the status report of Eagle Eyes on network cards.

Parameters

loc (optional)

Eagle Eyes Card location.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```

rept-stat-ee
rept-stat-ee:loc=1102

```

Dependencies

The card location specified in the 'loc' parameter must be configured to use Eagle Eyes.

2984 E2984 Cmd Rej: Eagle Eyes not configured on the card

The shelf and card must be equipped.

2144 E2144 Cmd Rej: Location invalid for hardware configuration

The specified card location must not be a reserved card location.

2376 E2376 Cmd Rej: Specified LOC is invalid

Notes

This command can be canceled using the F9 function key or the `canc-cmd` command. See `canc-cmd` for more information

Output

This example generates the Eagle Eyes status report for the specified Network Card.

```
rept-stat-ee:loc=1101
```

```
tekelecstp 10-03-08 14:43:31 EST  EAGLE 46.0.0
LOC          STATE
-----
1101         ACTIVE
```

```
Command Completed.
```

This example generates the Eagle Eyes status report for all the EE configured Network Cards.

```
rept-stat-ee
```

```
tekelecstp 10-03-08 14:43:31 EST  EAGLE 46.0.0
LOC          STATE
-----
1101         ACTIVE
1103         INACTIVE
Command Completed.
```

Related Topics

- [chg-ee-card](#)
- [dact-ee](#)
- [rtrv-ee-card](#)

5.1.29 rept-stat-gedti

Use this command to generate a report of the GEDTI Hub's status.

Parameters

loc (optional)

GEDTI Hub Card location.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
rept-stat-gedti
rept-stat-gedti:loc=1111
```

Dependencies

The value specified for the loc parameter must correspond to the location of an IPSM card which is configured as a GEDTI Hub.

2025 E2025 Cmd Rej: Invalid card location

Notes

This command can be canceled using the F9 function key or the `canc-cmd` command. See `canc-cmd` for more information.

Output

This example generates the report of all the IPSM cards configured as GEDTI Hubs.

```
rept-stat-gedti

tekelecstp 08-01-29 10:41:52 EST  EAGLE 46.0.0

LOC          PORT          STATE
-----
1101         4567          ACTIVE

SID  SOCK  FD  APPL  CARD  APPL  SUBSYS  APPL  ID  PC  STATE  APPL  STATE
-----
0    -1    0    0     0     0     0     0     0     0     0
1    -1    0    0     0     0     0     0     0     0     0
2    -1    0    0     0     0     0     0     0     0     0
3    -1    0    0     0     0     0     0     0     0     0
4    -1    0    0     0     0     0     0     0     0     0
5    -1    0    0     0     0     0     0     0     0     0
6    -1    0    0     0     0     0     0     0     0     0
7    -1    0    0     0     0     0     0     0     0     0

LOC          PORT          STATE
-----
1112         4568          INACTIVE

SID  SOCK  FD  APPL  CARD  APPL  SUBSYS  APPL  ID  PC  STATE  APPL  STATE
-----
0    0    0    0     0     0     0     0     0     0     0
```


Command Completed.

This example generates the report of the specified IPSM card configured as a GEDTI Hub.

```
rept-stat-gedti:loc=1101
```

```
tekelecstp 08-01-29 10:41:54 EST EAGLE 46.0.0
```

```

      LOC      PORT      STATE
-----
--
      1101      4567      ACTIVE

      SID  SOCK FD  APPL CARD  APPL SUBSYS  APPL ID  PC STATE
APPL STATE
-----
--
      0    -1      0          0          0          0          0
      1    -1      0          0          0          0          0
      2    -1      0          0          0          0          0
      3    -1      0          0          0          0          0
      4    -1      0          0          0          0          0
      5    -1      0          0          0          0          0
      6    -1      0          0          0          0          0
      7    -1      0          0          0          0          0
Command Completed.
```

Related Topics

- [act-gedti](#)
- [chg-gedti-card](#)
- [dact-gedti](#)

5.1.30 rtrv-ee-card

Use this command to display Eagle Eyes Card Configuration data from the Eagle Eyes Card (EE CARD) table. The EE CARD entry consists of a Card Loc and Eagle Eyes Card specific data.

Parameters

loc (optional)

Eagle Eyes Card location.

Range:

1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

Example

```
rtrv-ee-card
rtrv-ee-card:loc=1102
```

Dependencies

The EE CARD table must be available.

2867 E2867 Cmd Rej: Unable to read EE Card table

The card location specified in the 'loc' parameter must be configured to use Eagle Eyes.

2984 E2984 Cmd Rej: Eagle Eyes not configured on the card

The Eagle Eyes Filter table must be available.

2813 E2813 Cmd Rej: Unable to read EE FLT table

Notes

None.

Output

This example displays the Eagle Eyes parameters for all the EE configured network cards.

```
rtrv-ee-card

tekelecstp 10-03-08 14:43:31 EST  EAGLE 46.0.0
LOC  THR   SECLIM  PKTLIM   KBLIM
-----
1101 10000 5644800 10000000 4000000
1201 1000  464400  NONE      2000000

EE CARD table is (2 of 254) 1% full

RTRV-EE-CARD: MASP A - COMPLTD
;
```

This example displays the Eagle Eyes parameters for the specified EE configured network card.

```
rtrv-ee-card:loc=1201

tekelecstp 10-03-08 14:43:31 EST  EAGLE 46.0.0
```

```

EE OAM Card Configuration
-----
LOC  THR   SECLIM  PKTLIM  KBLIM  PORT
-----

1201 1000  2000    2000    3000   -

ATM FILTERS
-----
ID   TYPE  PORT  SSCOPSU  MTP3SI
-----
71   INC  a     ctrl    -
13   INC  a     -        -
5    EXC  b     -        -

EE CARD table is (2 of 254) 1% full

RTRV-EE-CARD: MASP A - COMPLTD
;

```

Legend

- **LOC---** Card location as stenciled on the shelf of the system.
- **THR---** The sending rate of the Eagle Eyes throttle task in IMT packets per second.
- **SECLIM---** The limit on the amount of time to perform the trace, in seconds.
- **PKTLIM---** The limit on the number of Ethernet frames to send.
- **KBLIM---** The file size limit of the capture file created, in kilobytes.
- **PORT---** Port being filtered.
- **ID---** Eagle Eyes Filter ID.
- **TYPE---** Eagle Eyes Filter Type.
- **SSCOPSU---** SSCOP sub-protocol or SU type filter.
- **MTP3SI---** MTP3 user filter.

Related Topics

- [chg-ee-card](#)
- [dact-ee](#)
- [rept-stat-ee](#)

5.1.31 rtrv-ee-flt

Use this command to retrieve Eagle Eyes Filter data from the Eagle Eyes Filter (EE FLT) table. The EE-FLT entry consists of a Filter ID and Filter specific data. It can be used to obtain the Filter ID of the filter to be associated to a card using the CHG-EE-CARD command.

Parameters**app1 (optional)**

Card Application Type

Range:*ATM**IP**E1T1***fltId (optional)**

Eagle Eyes Filter ID

Range:*1-200***Example**

```
rtrv-ee-flt:appl=ip
```

```
rtrv-ee-flt:fltId=16
```

Dependencies

The Eagle Eyes Filter table must be available.

2813 E2813 Cmd Rej: Unable to read EE Filter table

The specified Filter ID must exist in the EE FLT table.

2827 E2827 Cmd Rej: Filter not present

The Filter ID and APPL are mutually exclusive parameters.

2155 E2155 Cmd Rej: Invalid parameter combination specified.

Notes

None.

Output

This example displays the Filter parameters for the specified Filter ID.

```
rtrv-ee-flt:fltId=85
```

```
tekelecstp 10-03-08 14:43:31 EST  EAGLE 46.0.0
  EE OAM Filter Configuration
  IP FILTERS
```

```
-----
  ID  TYPE IP   IP           IP           SCTP  SCTP  SCTP  SCTP
SCTP                                     SRC   DST   TYPE  DATA
DATA
```

```

          ADDR          ADDR          PORT  PORT
PLD  STR
-----
---
      85  INC  sctp  -          -          -          -          data
sua  -
      EE Filter table is (83 of 200) 42% full.

;
Command Executed

```

This example displays the Filter parameters for the ATM Application Type.

```
rtrv-ee-flt:appl=atm
```

```

tekelecstp 10-03-08 14:43:31 EST  EAGLE 46.0.0
EE OAM Filter Configuration
ATM FILTERS
-----
ID  TYPE  PORT  SSCOPSU  MTP3SI
-----
5   EXC  b    -        -
13  INC  a    -        -
67  INC  a    -        -
68  INC  a1   -        -
71  INC  a    ctrl    -
77  INC  all  -        -

      EE Filter table is (83 of 200) 42% full.

;
Command Executed

```

This example displays the Filter parameters for the IP Application Type.

```
rtrv-ee-flt:appl=ip
```

```

tekelecstp 10-03-08 14:43:31 EST  EAGLE 46.0.0
EE OAM Filter Configuration
IP FILTERS
-----
-----
      ID  TYPE  IP   IP           IP           SCTP  SCTP  SCTP
SCTP  SCTP
          PROT SRC           DST           SRC   DST   TYPE
DATA  DATA
          ADDR          ADDR          PORT  PORT
PLD  STR
-----
-----

```

```

3    INC tcp    -          -          -          -          -          -
8    EXC -      -          3.3.3.3    -          -          -          -
9    EXC -      -          5.5.50.5   -          -          -          -
18   INC sctp  10.248.13.9 -          -          1234      -          -          -
19   INC sctp  10.248.13.9 -          -          -          1234      -          -
32   INC sctp  10.248.13.9 -          -          1234      -          data m2pa  -
34   INC sctp  111.248.131.119 111.111.111.111 1234 2345 data m2pa  -
37   EXC sctp  111.248.131.119 111.111.111.111 1234 2345 data m2pa  -
38   EXC sctp  111.248.131.119 111.111.111.111 1234 2345 data -      -
46   EXC sctp  10.248.13.9    -          -          1234      -          data m2pa  -
50   EXC sctp  10.248.13.9    -          -          1234      -          data m2pa  -
85   INC sctp  -              -          -          -          -          data sua   -

```

EE Filter table is (83 of 200) 42% full.

```

;
Command Executed

```

This example displays the Filter parameters for the E1T1 Application Type.

```
rtrv-ee-flt:appl=elt1
```

```

tekelecstp 10-03-08 14:43:31 EST EAGLE 46.0.0
EE OAM Filter Configuration
E1T1 FILTERS
-----
ID  TYPE PORT SUTYPE  MTP3SI
-----
6   INC a21  -      -
7   INC a22  -      -
12  INC a     -      -
69  INC a31  -      -
70  INC b31  -      -
72  INC a     lsu   -
EE Filter table is (83 of 200) 42% full.

```

```

;
Command Executed

```

This example displays the Filter parameters for all the configured Filters.

```
rtrv-ee-flt
```

```

tekelecstp 10-03-08 14:43:31 EST EAGLE 46.0.0
EE Filter Configuration
IP Filters
ID  TYPE IP      IP          IP          SS      SD      STYPE SCTP
SCTP
          PROT SRC      DST          PORT     PORT          PLD     STR
          ADDR ADDR          ADDR
-----
-----

```

```

1  INC  SCTP 10.248.13.10  10.25.80.191  65535 10000 DATA
M2PA 65535
47 EXC  SCTP 101.248.131.191 102.251.118.111 65432 10245 HTBT
-
-
ATM Filters
ID  TYPE  PORT  SSCOPSU  MTP3SI
-----
100 INC  A    DATA    SCCP
105 EXC  B    CTRL     -
E1T1 Filters
ID  TYPE  PORT  SUTYPE  MTP3SI
-----
2   INC  A1   MSU     SCCP
EE FLT table is (5 of 200) 2% full
;
Command Executed

```

Related Topics

- [dlt-ee-flt](#)
- [ent-ee-flt](#)

5.1.32 rtrv-upgrade-config

Use this command to retrieve provisioned data used by the upgrade software during an upgrade of an in-service EAGLE from a source release to the target release.

Parameters

display (optional)

Display Indicator. This parameter indicates what type of output is to be displayed.

Range:

tblcnv

Displays a list of DMS tables that will be converted during the next upgrade. These tables are selected for conversion using the `chg-upgrade-config` command.

prtnstat

This parameter is not implemented at this time.

all

Display all upgrade configuration data.

Default:

all

Example

Display a list of DMS tables that will be converted during the next upgrade.

```
rtrv-upgrade-config:display=tblcnv
```

```
rtrv-upgrade-config
```

Dependencies

None

N/A N/A

Output

```
rtrv-upgrade-config:display=tblcnv
```

```
rlghncxa03w 07-03-13 08:15:45 EST EAGLE 37.5.0
```

```
The following tables will be converted:
```

```
FEAT_CTRL Table, ID=327
```

```
Command Completed.
```

;

```
rtrv-upgrade-config
```

```
rlghncxa03w 10-02-13 08:15:45 EST EAGLE 42.0.0
```

```
Software Access Key no longer required for this system
```

```
Configured Upgrade Threshold Type: SET
```

```
Command Completed.
```

;

Related Topics

- [act-upgrade](#)
- [chg-upgrade-config](#)

5.1.33 send-msg

Use this command to manually simulate a system generated message from a user terminal. The parameters (not entered by the user) are defaulted to:

- Origination subsystem = *cam_active*
- Destination subsystem = *orig application ID=appl_ID_ui*
- Violation= *no report*
- Bus = *imt choice*
- Message length = *computed*

Parameters**da (mandatory)**

The destination application ID.

Range:

0 - 255

ds (mandatory)

The destination subsystem.

Range:

0 - 255

f (mandatory)

The function ID.

Range:

0 - 255

loc (mandatory)

The card location as stenciled on the shelf of the system.

Range:

1101 - 1108, 1111 - 1113, 1115, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118

alt (optional)

This parameter specifies whether to use the alternate bus bit.

Range:

on

off

Default:

on

bus (optional)

The IMT bus.

Range:

a

b

Default:

a

d0 (optional)

The application data.

Range:

0 - 255

d1 (optional)

The application data.

Range:
0 - 255

d2 (optional)
The application data.

Range:
0 - 255

d3 (optional)
The application data.

Range:
0 - 255

d4 (optional)
The application data.

Range:
0 - 255

d5 (optional)
The application data.

Range:
0 - 255

d6 (optional)
The application data.

Range:
0 - 255

d7 (optional)
The application data.

Range:
0 - 255

d8 (optional)
The application data.

Range:
0 - 255

d9 (optional)
The application data.

Range:
0 - 255

len (optional)
The message length in bytes.

Range:
0 - 65535

Default:
Calculated

oa (optional)
The originating application ID.

Range:
0 - 255

Default:
2

os (optional)
The originating subsystem.

Range:
0 - 255

Default:
0

si (optional)
This parameter allows the service ID field in the violation indicator to be set.

Range:
0 - 31

Default:
0

sut (optional)
The signal unit type.

Range:
0 - 9

Default:
2

Example

```
send-msg:loc=1113:os=2:oa=h'28:ds=2:da=h'28:f=7  
send-msg:loc=1113:ds=2:oa=h'17:da=h'30:f=11  
send-msg:loc=1116:ds=2:oa=h'17::da=h'30:f=12  
send-msg:loc=1101:ds=1:da=65:f=27:d0=78:si=3  
send-msg:loc=6212:ds=2:oa=h'17:da=h'30:f=11  
send-msg:loc=6312:ds=1:da=64:f=171
```

Dependencies

The value of the `da` parameter must be valid.

2205 E2205 Cmd Rej: Invalid destination application ID

The destination location must be equipped to receive messages.

2207 E2207 Cmd Rej: Location type cannot receive messages

Card locations xy09 and xy10 cannot be used with bus *b* and bus *a*, respectively.

2247 E2247 Cmd Rej: Bus parameter invalid

The value of the `ds` parameter must be valid.

2206 E2206 Cmd Rej: Invalid originating application ID

Notes

The `bus` and `sut` parameters must be used when sending a message to a MUX card.

If the `bus` parameter is not specified with a MUX card location on imt B (such as xy10), the bus *b* value is used instead of the bus *a* value.

Output

```
send-msg:loc=1113:os=2:oa=h'28:ds=2:da=h'28:f=7
```

```
rlghncxa03w 01-03-13 15:01:02 EST
0061.0019   CARD 1113 PSM   ADMIN   PSM became active
;
```

```
send-msg:loc=1113:ds=2:oa=h'17:da=h'30:f=11
```

```
rlghncxa03w 01-03-13 15:02:34 EST
System Buffer sent has following attributes :
  Msg Length = H'0006
  Dest Card = H'00f4
  Orig Subsys = H'0002           Dest Subsys = H'0002
  Orig Appl ID = H'0017         Dest Appl ID = H'0030
  Func ID = H'000b             Bus/Alt/SUT = H'000b
  Violation Ind = H'0000
User Message sent to location 1113.
;
```

```
send-msg:sut=7:loc=1110:ds=0:da=h'40:f=h'a3:d0=0:bus=b
```

```
tekelecstp 06-01-11 11:39:15 EST  EAGLE 35.1.0
System Buffer sent has following attributes :
  Msg Length = H'0010
  Dest Card = H'00ff
  Orig Subsys = H'0001           Dest Subsys = H'0000
  Orig Appl ID = H'0030         Dest Appl ID = H'0040
  Func ID = H'00a3             Bus/Ret/Sut = H'0087
  Violation Ind = H'0000
User Message sent to location 1110.
;
```

```

send-msg:loc=6212:ds=2:oa=h'17:da=h'30:f=11

tekelecstp 12-05-11 11:39:15 EST EAGLE 45.0.0
System Buffer sent has following attributes :
  Msg Length = H'0006
  Dest Card = H'00f4
  Orig Subsys = H'0002          Dest Subsys = H'0002
  Orig Appl ID = H'0017        Dest Appl ID = H'0030
  Func ID = H'000b            Bus/Alt/SUT = H'000b
  Violation Ind = H'0000
User Message sent to location 6212.
;

```

5.1.34 set-mem

Use this command to set values in memory in the communication and application processors. If a card is reloaded, these memory changes are lost.

Parameters

addr (optional)

The address, in the form of *segment–offset*.

Range:

segment–offset
segment—h'00–h'ffff
offset—h'00–h'ffff

byte (optional)

The byte value to write to the specified memory location(s).

Range:

0–h'00–h'ff

card (optional)

The card location, in the form of *GPLID–Subsystem ID*.

Range:

GPLID–Subsystem ID
GPLID— atmhc, deirhc, erthc, glshc, hipr2, ipghc, iplhc, ipsq, ipshc, mcphc, oamhc, pktgen, sccphc, siphc, ss7hc, utility
Subsystem ID— a, b, act, stb, all

The OAMHC GPL can be specified with any of the subsystem IDs. For all other GPLs, only the *all* subsystem ID is valid.

dword (optional)

A double word value to write to the specified memory location(s).

Range:

0–h'00–h'ffffff

fill (optional)

The number of times that the value is to be written to successive addresses.

Range:
0 - 65535

Default:
1

imt (optional)

The IMT address.

Range:
0 - 254

loc (optional)

Location. The card location as stenciled on the shelf of the system.

Range:
1101 - 1108, 1111 - 1112, 1201 - 1208, 1211 - 1218, 1301 - 1308, 1311 - 1318, 2101 - 2108, 2111 - 2118, 2201 - 2208, 2211 - 2218, 2301 - 2308, 2311 - 2318, 3101 - 3108, 3111 - 3118, 3201 - 3208, 3211 - 3218, 3301 - 3308, 3311 - 3318, 4101 - 4108, 4111 - 4118, 4201 - 4208, 4211 - 4218, 4301 - 4308, 4311 - 4318, 5101 - 5108, 5111 - 5118, 5201 - 5208, 5211 - 5218, 5301 - 5308, 5311 - 5318, 6101 - 6108, 6111 - 6118, 1109, 1110, 1209, 1210, 1309, 1310, 2109, 2110, 2209, 2210, 2309, 2310, 3109, 3110, 3209, 3210, 3309, 3310, 4109, 4110, 4209, 4210, 4309, 4310, 5109, 5110, 5209, 5210, 5309, 5310, 6109, 6110, 1113, 1115

mask (optional)

The mask that selects the bits that are to be included in the operation (op).

Range:
0-0xFFFFFFFF

Default:
0xFFFFFFFF

op (optional)

Operation. The operation performed in order to arrive at the final value in the memory location.

Range:

replace

and

or

x

Default:
replace

paddr (optional)

The physical offset of the memory address.

Range:
h'00-h'ffffff

proc (optional)

The processor type.

Range:***appl***

Application processor

com

Communication processor

Default:

appl

word (optional)

A word value to write to the specified memory location(s).

Range:

h'00–h'ffff

Example

```
set-mem:loc=1109:paddr=h'201000:byte=0:fill=1024
```

```
set-mem:card=hipr2-
```

```
all:paddr=h'202000:word=h'2a:op=and:mask=h'fff
```

Dependencies

The `loc`, `imt`, or `card` parameter must be specified.

2214 E2214 Cmd Rej: Missing parameter - CARD, LOC, or IMT

Only one of the `loc`, `imt`, and `card` parameters can be specified in the command.

2217 E2217 Cmd Rej: More than one of CARD, LOC, and IMT specified

The `card` location specified by the `loc` parameter must be in the database.

2101 E2101 Cmd Rej: Card location is unequipped

All of the subsystem values can be specified with the OAMHC GPLID. The other GPLID values can be specified only with the `all` subsystem value.

2208 E2208 Cmd Rej: ALL only qualifier allowed with given card type

Values of 1114, 1116, 1117, and 1118 cannot be specified for the `loc` parameter.

2212 E2212 Cmd Rej: Invalid card type for this command

The `byte`, `word`, or `dword` parameter must be specified.

2210 E2210 Cmd Rej: Byte, WORD or DWORD must be entered

Only one of the `byte`, `word`, and `dword` parameters can be specified in the command.

2218 E2218 Cmd Rej: Only one of BYTE, WORD or DWORD may be entered

The `paddr` parameter cannot be specified for an SS7 LIM card.

N/A N/A

Memory Type of FWORD is NOT supported at this time.

2693 E2693 Cmd Rej: FWORD is not supported at this time

The `addr` and `paddr` parameters cannot be specified together in the command.

2694 E2694 Cmd Rej: Invalid combination of ADDR and PADDR specified

The value specified for the `fill` parameter cannot exceed 65535.

2017 E2017 Cmd Rej: <parm_desc> is out of range, <min>..<max> - <parm>

Notes

The `imt` parameter allows this command to be entered for a card that has not been configured in the system.

Output

```
set-mem:loc=6205:paddr=h'0345fe:byte=2
```

```
rlghncxa03w 12-05-22 21:14:03 EST Rel 45.0.0
SDS Response Code 22 from IMT Address H'00fd - command complete.
;
```

Related Topics

- [disp-mem](#)

6

Pass-Through Commands

This chapter introduces the pass-through commands and describes the command conventions. The pass-through commands are listed in alphabetical order.

These commands are intended for use by My Oracle Support (MOS) personnel and authorized engineering personnel in the operating companies. Documentation might not include all options and/or definitions of these commands.

▲ Caution:

These commands are to be used precisely as they are described in this chapter, and only under the direction of My Oracle Support (MOS) personnel. Any other use of these commands can result in a system failure.

6.1.1 Command Conventions

Pass-through commands are passed through the OAM and sent to individual cards for processing.

An example of a pass command is:

```
pass:loc=1201:cmd="connmgr -c"
```

The `cmd` parameter contains the pass-through command (`connmgr -c`) within the double quotes.

Pass-through commands consist of two types of tokens: command name and command options. Tokens are whitespace-delimited and null-terminated. The generalized format of a pass-through command is:

```
command_name option1 option2....option n-1.... option n
```

In the example, the *command_name* is `connmgr` and the option is `-c`.

Options and option parameters are made up of a specific character string or a variable. The variable is to be replaced with a value selected from a range of values. Option variables and option parameter variables are underlined. For example, the `arp` command option `-d` has the parameter variable IPaddress. Specify the IP address as in the command `arp -d 192.9.200.44`. Do not enter the underlined text; enter a value instead.

Help information for each pass-through command can be obtained by using the option `-h` on any command.

6.1.2 arp

This command is used to display and modify the internet to ethernet address translation tables used by the address resolution protocol.

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `arp` command option `-d` has the parameter *IP address*. The IP address must be specified for which an ARP entry will be deleted, as in the command `arp -d 192.9.200.44`. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

`-a`

This option displays all entries in the ARP table.

`-d IP address`

This option deletes an ARP entry for the specified IP address.

The IP address is a TCP/IP address expressed in standard “dot notation.” IP addresses consist of the system’s network number and the machine’s unique host number. An example IP address is *192.9.200.44*, where *192.9.200* is the network number and *44* is the machine’s host number.

Range:

4 numbers separated by dots, with each number in the range of 0-255.

`-f`

This option flushes all entries from the ARP table.

`-h`

This option displays help (usage) information for the command.

`-s IP addressMAC address`

This option creates an ARP entry for the specified IP address and ethernet address.

Range:

4 numbers separated by dots, with each number in the range of 0-255.

The IP address is a TCP/IP address expressed in standard “dot notation.” IP addresses consist of the system’s network number and the machine’s unique host number. For example, *192.9.200.44*, where *192.9.200* is the network number and *44* is the machine’s host number.

Range:

6 hexadecimal numbers separated by colons; each number in the range 0 - FF. The MAC (media access control) address is an ethernet address with the format *x:x:x:x:x:x*, where *x* is a hexadecimal integer from 0 to FF. For example, *08:00:20:1b:0f:f2*.

Example

```
arp -a
arp -s 192.9.200.44 08:00:20:1b:0f:f2
arp -d 192.9.200.44
arp -f
```

Dependencies

Only one of the options can be specified at a time.

The `arp` command with no options displays all of the current ARP cache entries.

Notes

The `arp` command is executed through the `pass` command.

Output

```
pass:loc=1105:cmd="arp" or
pass:loc=1105:cmd="arp -h"

Command Accepted - Processing

rlghncxa03w 04-07-27 08:10:00 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="arp"
Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:10:00 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:10:00 EST  EAGLE5 31.6.0

Usage: arp [-a] [-d ipaddr] [-f] [-h] [-s ipaddr enetaddr]

Options:
  -a          Display All entries in ARP table
  -d          Delete specified entry (ipaddr) from ARP table
  -f          Flush all entries from ARP table
  -h          Displays this message
  -s          Set ARP table entry to associate ipaddr with enetaddr
enetaddr    x:x:x:x:x:x
ipaddr      d.d.d.d
;

rlghncxa03w 04-07-27 08:10:01 EST  EAGLE5 31.6.0

ARP command complete
;

pass:loc=1105:cmd="arp -s 192.168.100.234 11:22:33:44:55:66"

Command Accepted - Processing

rlghncxa03w 04-07-27 08:11:08 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="arp -s 192.168.100.234 11:22:33:44:55:66"
Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:11:08 EST  EAGLE5 31.6.0
```

```

    PASS: Command sent to card
;
    rlghncxa03w 04-07-27 08:11:08 EST  EAGLE5 31.6.0

    ARP: 192.168.100.234 (11:22:33:44:55:66) added
;
    rlghncxa03w 04-07-27 08:11:09 EST  EAGLE5 31.6.0

    ARP command complete
;

```

Output for 32-bit GPLs:

```
pass:loc=1105:cmd="arp -a"
```

```
Command Accepted - Processing
```

```

    rlghncxa03w 04-07-27 08:11:18 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="arp -a"
    Command entered at terminal #1.
;
    rlghncxa03w 04-07-27 08:11:18 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    RLGHNCA03WRLGHNCXA03W 04-07-27 08:11:18 EST  EAGLE5 31.6.0

    LINK LEVEL ARP TABLE
    destination      gateway          flags  Refcnt  Use
Interface
-----
--
    192.168.55.250   00:e0:16:9b:0d:86   405    1      0
seeq1
    192.168.100.234 11:22:33:44:55:66   c05    0      0
seeq0
-----
--
;
    rlghncxa03w 04-07-27 08:11:19 EST  EAGLE5 31.6.0
    ARP command complete
;

```

Output for 64-bit GPLs:

```
pass:loc=1105:cmd="arp -a"
```

```

tklc9010801 17-06-19 07:29:45 EST  EAGLE 46.5.0.0.0-70.35.0
    pass:loc=1217:cmd="arp -a"
    Command entered at terminal #20.
;

```

```
tklc9010801 17-06-19 07:29:51 EST EAGLE 46.5.0.0.0-70.35.0
PASS: Command sent to card
;
Command Accepted - Processing
tklc9010801 17-06-19 07:29:54 EST EAGLE 46.5.0.0.0-70.35.0

ARP command complete

;
Command Executed
-> arpShow
192.168.120.255 at ff:ff:ff:ff:ff:ff on gei4
192.168.121.3 at 00:00:17:0f:55:45 permanent published on gei5
192.168.120.3 at 00:00:17:0f:55:44 permanent published on gei4
192.168.121.255 at ff:ff:ff:ff:ff:ff on gei5
192.168.121.200 at 00:00:00:00:00:00 on gei5
192.168.121.100 at 00:00:17:0e:a6:9b on gei5
192.168.120.200 at 00:00:00:00:00:00 on gei4
192.168.120.100 at 00:00:17:0e:a6:9c on gei4
value = 0 = 0x0

;

pass:loc=1105:cmd="arp -f"

Command Accepted - Processing

rlghncxa03w 04-07-27 08:11:38 EST EAGLE5 31.6.0
pass:loc=1105:cmd="arp -f"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:11:38 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:11:38 EST EAGLE5 31.6.0
ARP: ARP table flushed
;
rlghncxa03w 04-07-27 08:11:38 EST EAGLE5 31.6.0

ARP command complete
;

pass:loc=1105:cmd="arp -d 192.111.111.222"

E3780 Cmd Rej: Syntax Error Found

rlghncxa03w 04-07-27 08:26:37 EST EAGLE5 31.6.0
pass:loc=1105:cmd="arp -d 192.111.111.222"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:26:37 EST EAGLE5 31.6.0
```

```

    PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:26:37 EST  EAGLE5 31.6.0
ARP: entry not deleted
;
rlghncxa03w 04-07-27 08:26:37 EST  EAGLE5 31.6.0

ARP command complete

```

6.1.3 aslog

This command is used to display the state changes for a specified Application Server (AS).

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `aslog` command has the parameter `asname`. The Application Server name must be specified for which the log will be displayed, as in the command `aslog as1`. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

`asname`

This option specifies the Association Server name for the display.

`-h`

This option displays help (usage) information for the command.

Example

```
aslog as1
```

Dependencies

None

Notes

None

Output

```
pass:loc=1105:cmd="aslog as1"
```

```
Command Accepted - Processing
```

```

    rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="aslog as1"
    Command entered at terminal #3.
;
rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0

```

```

ASLOG command in progress
;
rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0

ASLOG: AS history log

ASLOG: AS state history log

Date          Time          AS Event
-----
65-05-31  22:27:29.075  Transition to AS-Down
65-05-31  22:27:29.080  Transition to AS-Active Override
65-05-31  22:38:24.050  Transition to AS-Active Override

ASLOG command complete
;

```

6.1.4 assocrtt

This command is used to display the SCTP round trip times for a specified association. Minimum, maximum, and average times are kept for each open association. The Retransmission Mode (RFC or LIN) and the configured Minimum and Maximum Retransmission Timeout limits are also displayed.

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `assocrtt` command has the parameter `aname`. The association name must be specified for which the information will be displayed, as in the command `assocrtt c7000`. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

`aname`

This option specifies the association name for the display.

`-r`

This option resets all statistics for the specified association name.

Example

```

assocrtt c7000
assocrtt c7000 -r

```

Dependencies

None

Notes

This command does not indicate whether or not the socket is congested.

Output

```

pass:loc=1105:cmd="assocrtt" 0R

```

```
pass:loc=1105:cmd="assocrtt -h"
```

```
Command entered at terminal #1.
;
rlghncxa03w 00-01-27 08:10:00 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 00-01-27 08:10:00 EST EAGLE5 31.6.0

Usage: ASOCR TT sockname [-r] [-h]
Options:
    -r          Resets rtt data for specified association
    -h          Displays this message
;
rlghncxa03w 00-01-27 08:10:00 EST EAGLE5 31.6.0
ASSocrtt command complete
;
```

```
pass:loc=1105:cmd="assocrtt c7000"
```

```
Command Accepted - Processing
rlghncxa03w 00-01-27 08:10:00 EST EAGLE5 31.6.0
pass:loc=1105:cmd="assocrtt c7000"
Command entered at terminal #1.
;
rlghncxa03w 00-01-27 08:10:00 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 00-01-27 08:10:00 EST EAGLE5 31.6.0
ASSOCR TT: Association round trip time report (in milliseconds)

Retransmission Configuration
Retransmission Mode          : LIN
Minimum RTO      : 120
Maximum RTO      : 800

Traffic Round-Trip Times

Minimum round-trip time      : 5
Maximum round-trip time      : 120
Weighted Average round-trip time : 10
Last recorded round-trip time : 10
;
Measured Congested Traffic Round-Trip Times

Minimum round-trip time      : 0
Maximum round-trip time      : 0
Weighted Average round-trip time : 0
Last recorded round-trip time : 0
;
rlghncxa03w 00-01-27 08:10:01 EST EAGLE5 31.6.0
```



```
ASSOCRtt command complete
;

pass:loc=1105:cmd="assocrtt c7000 -r"

Command entered at terminal #1.
;
rlghncxa03w 00-01-27 08:10:01 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 00-01-27 08:10:01 EST EAGLE5 31.6.0

ASSocrtt: Association round-trip time report (in milliseconds)

Retransmission Configuration
Retransmission Mode          : RFC
Minimum RTO      : 120
Maximum RTO      : 800

Traffic Round-Trip Times

Minimum round-trip time      : 5
Maximum round-trip time      : 120
Weighted Average round-trip time : 10
Last recorded round-trip time   : 10

Measured Congested Traffic Round-Trip Times

Minimum round-trip time      : 0
Maximum round-trip time      : 0
Weighted Average round-trip time : 0
Last recorded round-trip time   : 0
;
rlghncxa03w 00-01-27 08:10:01 EST EAGLE5 31.6.0
ASSocrtt command complete
;
```

6.1.5 connmgr

This command is used to generate reports about the status of the connection manager.

Options

-d

This option displays a connection manager data summary. For IPSPG cards, this report contains summary information and does not contain information for individual signaling links.

-h

This option displays help (usage) information for the command.

-i

This option displays SCTP instance and association data.

-l
This option displays the connection manager event log.

-n
This option displays the SCTP notification log.

-r
This option resets the connection manager event log.

Example

```
connmgr -r
connmgr -c
connmgr -s
```

Dependencies

Only one of the options can be specified at a time.

If no options are specified, usage information is displayed.

Notes

The `connmgr` command is executed through the `pass` command.

Output

```
pass:loc=1107:cmd="connmgr" or
pass:loc=1304:cmd="connmgr -h"
```

```
Command Accepted - Processing
```

```

    rlghncxa03w 08-01-21 15:29:46 EST  EAGLE5 38.0.0
    pass:loc=1304:cmd="connmgr -h"
    Command entered at terminal #1.
;
    rlghncxa03w 08-01-21 15:29:46 EST  EAGLE5 38.0.0
    PASS: Command sent to card
;
    rlghncxa03w 04-07-02 15:29:46 EST  EAGLE5 31.6.0
    Usage: CONNMGR [-d] [-h] [-i] [-l] [-n] [-r]
    Options:
        -d  Display connection manager data summary
        -h  Displays this message
        -i  Displays instance data
        -l  Display the connection manager event log
        -n  Display the SCTP notification log
        -r  Reset the connection manager event log
;

```

```
pass:loc=1107:cmd="connmgr -d"
```

The Connection Manager Data Summary displays all provisioned signaling link ports.

In this example, signaling link port (slk) B is valid only for IPLIMx cards:

```
Command Accepted - Processing

    rlghncxa03w 04-07-02 15:37:12 EST  EAGLE5 31.6.0
    pass:loc=1107:cmd="connmgr -d"
    Command entered at terminal #1.
;
    rlghncxa03w 04-07-02 15:37:12 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlghncxa03w 04-07-02 15:37:12 EST  EAGLE5 31.6.0
    CONNMGR: command being processed
;
    rlghncxa03w 04-07-02 15:37:12 EST  EAGLE5 31.6.0
    CONNMGR: Connection Manager Data Summary
    slk link state  srv  cli  opn sock  inst  opn assoc
    ---  -
    A  active      1   0      1   0      0
    B  active      0   0      0   1      1

    CONNMGR command complete
;
```

In this example, a summary data report is requested for an IPSG card:

```
pass:loc=1304:cmd="connmgr -d"

Command Accepted - Processing

    eagle10110 08-01-15 16:09:24 EST  EAGLE 38.0.0
    pass:loc=1304:cmd="connmgr -d"
    Command entered at terminal #3.
;

    eagle10110 08-01-15 16:09:24 EST  EAGLE 38.0.0
    PASS: Command sent to card
;

    eagle10110 08-01-15 16:09:24 EST  EAGLE 38.0.0
    CONNMGR: Connection Manager Data Summary

    num_instances:                1
    num_assocs:                    1
    num_established_assocs:        0
    num_cli_assocs:                0
    num_established_cli_assocs:    0
    num_assocs_with_tx_data:       0
    num_full_assocs:              0
    num_assoc_with_rcv_data:       0
    num_times_tx_q_full:          0
    num_assoc_down_notif:         0
    num_assoc_aborted_notif:      0
    num_assoc_restart_notif:      0
```

```
num_intf_up_notif:          0
num_intf_down_notif:        0
num_hb_resp_notif:          0
num_dg_fail_notif:          0
num_rd_errors:              0
num_wt_errors:              0
num_wt_shutdown:            0
num_wt_empty:               0

CONNMGR: command complete

;

eagle10110 08-01-15 16:09:24 EST EAGLE 38.0.0

;

pass:loc=1301:cmd="connmgr -i"

Command Accepted - Processing

eagle10213 04-07-22 08:49:37 GMT EAGLE5 31.6.0
pass:loc=1301:cmd="connmgr -i"
Command entered at terminal #4.

;

eagle10213 04-07-22 08:49:37 GMT EAGLE5 31.6.0
PASS: Command sent to card

;

eagle10213 04-07-22 08:49:37 GMT EAGLE5 31.6.0

CONNMGR command being processed

;

eagle10213 04-07-22 08:49:37 GMT EAGLE5 31.6.0
CONNMGR: Connection Manager Instance Data
inst id  lport  cfg  est  tot grntd  tot rfsd
-----  -
021B7880  1301    2    2           0           0

CONNMGR command complete

;

pass:loc=1107:cmd="connmgr -l"

Command Accepted - Processing

rlghncxa03w 04-07-02 15:35:28 EST EAGLE5 31.6.0
pass:loc=1107:cmd="connmgr -l"
Command entered at terminal #1.
```

```

;
rlghncxa03w 04-07-02 15:35:28 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:35:28 EST EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:35:28 EST EAGLE5 31.6.0
CONNMGR: Connection Manager Event Log
04-07-03 13:17:40.730 conn-rcvd 5005 from 192.168.100.174:5005
04-07-03 13:17:40.735 conn-rfsd lnk-not-actv 5005 192.168.100.174
04-07-03 13:17:40.850 conn-rcvd 5006 from 192.168.100.174:5006
04-07-03 13:17:40.855 conn-rfsd lnk-not-actv 5006 192.168.100.174
04-07-03 13:17:40.910 conn-rcvd 5002 from 192.168.100.174:5002
04-07-03 13:17:40.915 conn-rfsd lnk-not-actv 5002 192.168.100.174
04-07-03 13:17:40.950 conn-rcvd 5004 from 192.168.100.174:5004
04-07-03 13:17:40.955 conn-rfsd lnk-not-actv 5004 192.168.100.174

CONNMGR command complete
;

pass:loc=1103:cmd="connmgr -l"

```

Command Accepted - Processing

```

rlghncxa03w 04-07-02 15:35:28 EST EAGLE5 31.6.0
pass:loc=1103:cmd="connmgr -l"
Command entered at terminal #4.
;
rlghncxa03w 04-07-02 15:35:28 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:35:28 EST EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:35:28 EST EAGLE5 31.6.0
CONNMGR: Connection Manager Event Log
00-01-13 13:17:40.170 sock-add ipl1103
00-01-13 13:17:40.885 lnk-act Port A
00-01-13 13:17:40.080 conn-made ipl1101

CONNMGR command complete
;

```

This example shows output when a remote host mismatch occurs:

```

pass:loc=1107:cmd="connmgr -l"

Command Accepted - Processing

eagle10110 09-05-15 16:09:24 EST EAGLE 41.0.0
pass:loc=1304:cmd="connmgr -l"
Command entered at terminal #3.

```

```

;

eagle10110 09-05-15 16:09:24 EST EAGLE 41.0.0
PASS: Command sent to card
;

eagle10110 09-05-15 16:09:24 EST EAGLE 41.0.0
CONNMGR: Connection Manager Event Log

07-05-03 13:17:40.730 conn-rcvd 5005 from 192.168.100.174:5005
07-05-03 13:17:40.735 conn-rfsd lnk-not-actv 5005
192.168.100.174
07-05-03 13:17:40.950 conn-rcvd 5004 from 192.168.100.174:5004
07-05-03 13:17:40.955 conn-rfsd host-unreslvd 5004
192.168.100.174
07-05-03 13:17:40.960 conn-rcvd 5003 from 192.168.100.174:5003
07-05-03 13:17:40.965 conn-rfsd host-mismatch 5003
192.168.100.174

CONNMGR: command complete

```

Event descriptions for `connmgr -l`

- `Ink-act`-The signaling link (slk) was activated.
- `Ink-deact`-The signaling link (SLK) was deactivated.
- `adptr-clc`-An association was closed.
- `admin-open`-An association was opened via admin and available for connection.
- `admin-clc`-An association was closed via admin and not available for connection.
- `conn-rcvd`-A connection request has been received from a client.
- `conn-rfsd`-Connection request was refused by the server.
- `conn-grnt`-Connection was granted by the server.
- `conn-fail`-Connection request made by the client has failed.
- `conn-made`-A connection has been made between the client and server.
- `pause-rcv`-A connection received a pause event.
- `resume-rcv`-A connection received a resume event.
- `conn-cnsgd`-An association has become congested.
- `conn-uncng`-An association is no longer congested.
- `host-unreslvd`-A remote host is unresolved.
- `undef-evnt`-An undefined event has come in.

Event reasons for `connmgr -l`

- `Ink-not-actv`-The SLK (signaling link) is not active.
- `no-sock-avail`-No association is available.
- `unknown-sock`-Unknown association.
- `addr-in-use`-Address is in use.

- net-unreach-The network is unreachable.
- net-reset-Network dropped connection on reset.
- sw-abort-Software caused connection abort.
- conn-reset-The connection was reset by the peer.
- no-buffers-No buffer space available.
- is-connected-Association is already connected.
- not-connected-Association not connected.
- shutdown-Can't send after association shutdown.
- too-many-refs-Too many references : can't splice.
- timed-out-Connection timed out.
- refused-connection refused.
- net-down-The network is down.
- txt-busy-Text file is busy.
- loop-Too many levels of symbolic links.
- host-unreachb-Host unreachable.
- not-blk-Block device required.
- host-down-Host is down.
- host-unreslvd-Host is unresolved.
- host-mismatch-Remote Host validation rule fails.
- undef-reason-Undefined reason.

```
pass:loc=1301:cmd="connmgr -n"
```

```
Command Accepted - Processing
```

```

eagle10213 04-07-22 08:50:04 GMT EAGLE5 31.6.0
pass:loc=1301:cmd="connmgr -n"
Command entered at terminal #4.
;

eagle10213 04-07-22 08:50:04 GMT EAGLE5 31.6.0
PASS: Command sent to card
;

eagle10213 04-07-22 08:50:04 GMT EAGLE5 31.6.0

CONNMGR command being processed

;

eagle10213 04-07-22 08:50:04 GMT EAGLE5 31.6.0
CONNMGR: Connection Manager SCTP Notification Log
04-07-21 18:06:34.860 assoc-up   ipl1301a from 192.168.110.17:1301
04-07-21 18:06:49.620 assoc-up   ipl1301b from 192.168.110.18:1303
04-07-21 18:07:54.185 assoc-down ipl1301b from 192.168.110.18:1303
```

```

04-07-21 18:09:21.990 assoc-up   ip11301b from 192.168.110.18:1303

CONNMGR command complete
;

```

Notification descriptions for `connmgr -n`

- `init-recvd`-An INIT chunk was received to start an association.
- `assoc-up`-An association is up.
- `assoc-down`-An association is taken out of service.
- `intf-down`-Interface on an association is down and out of consideration for selection.
- `intf-up`-Interface on an association is up and now back in consideration for selection.
- `dg-fail`-The given datagram can not be delivered to the peer.
- `sdata-err`-A datagram was sent on a non-open stream.
- `assoc-abrt`-An association has been taken down ungracefully.
- `peer-strm`-Peer opened stream notification.
- `strm-ok`-Notification that the stream opened ok.
- `assoc-rst`-A Notification was received that an association was restarted.
- `hb-resp`-A response to a heartbeat request.
- `data-msg`-A DATA message has arrived. An SCTP packet includes user data encapsulated within SCTP DATA chunks.
- `host-mismatch`-Remote Host validation rule fails.
- `host-unreslvd`-Host is unresolved.
- `rem-unreslvd`-Remote host is unresolved.
- `invalid`-Invalid/Unknown event.

```
pass:loc=1107:cmd="connmgr -r"
```

Command Accepted - Processing

```

rlghncxa03w 04-07-02 15:36:18 EST  EAGLE5 31.6.0
pass:loc=1107:cmd="connmgr -r"
Command entered at terminal #1.
;
rlghncxa03w 04-07-02 15:36:18 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:36:18 EST  EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:36:18 EST  EAGLE5 31.6.0
CONNMGR command complete
;

```



```
pass:loc=1107:cmd="connmgr -s"
```

```
Command Accepted - Processing
```

```
rlghncxa03w 04-07-02 15:39:54 EST EAGLE5 31.6.0  
pass:loc=1107:cmd="connmgr -s"  
Command entered at terminal #1.
```

```
;
```

```
rlghncxa03w 04-07-02 15:39:54 EST EAGLE5 31.6.0  
PASS: Command sent to card
```

```
;
```

```
rlghncxa03w 04-07-02 15:40:02 EST EAGLE5 31.6.0  
CONNMGR: command being processed
```

```
;
```

```
rlghncxa03w 04-07-02 15:40:03 EST EAGLE5 31.6.0  
CONNMGR: Connection Manager Server Data  
task_id server state lport cfg opn cn_grntd cn_rfsd  
-----  
0114FEE8 listening 5001 1 1 2 546  
0114ED40 listening 5002 1 1 2 434  
0114DB98 listening 5003 1 1 2 539  
0114C9F0 listening 5004 1 1 2 542  
0114B848 listening 5005 1 1 2 539  
0114A6A0 listening 5006 1 1 2 549  
011494F8 listening 5007 1 0 0 548  
01148350 listening 5008 1 1 2 560  
011471A8 listening 5009 1 1 2 523  
01146000 listening 5010 1 1 2 532  
01144E58 listening 5011 1 1 2 534  
01143CB0 listening 5012 1 1 2 481  
01142B08 listening 5013 1 1 2 474  
01141960 listening 5014 1 1 2 521  
011407B8 listening 5015 1 0 2 515  
0113F610 listening 5016 5 0 14 2741  
0113E468 listening 5017 5 0 11 2723
```

```
CONNMGR command complete
```

```
;
```

```
pass:loc=1103:cmd="connmgr -s"
```

```
Command Accepted - Processing
```

```
rlghncxa03w 04-07-02 15:39:54 EST EAGLE5 31.6.0  
pass:loc=1103:cmd="connmgr -s"  
Command entered at terminal #4.
```

```
;
```

```
rlghncxa03w 04-07-02 15:39:54 EST EAGLE5 31.6.0  
PASS: Command sent to card
```

```
;
```

```
rlghncxa03w 04-07-02 15:40:02 EST EAGLE5 31.6.0  
CONNMGR: command being processed
```

```

;
rlghncxa03w 04-07-02 15:40:03 EST  EAGLE5 31.6.0
CONNMGR: Connection Manager Server Data
task_id  server state slk lport cfg opn cn_grntd cn_rfsd
-----
CONNMGR command complete
;

```

6.1.6 ftptest

Use this command to send a test file to a configured FTP server that is used for the Measurements Platform feature

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `ftptest` command option `-a` has the parameter `appl`. The FTP registered application to be tested can be specified, as in the command `ftptest -a meas`. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

`-h`

This option provides help information for the command.

`-a appl`

This option specifies the FTP registered application to be tested.

Range:

meas

The Measurements Platform application

Example

```

ftptest
ftptest -h

ftptest -a meas

```

Dependencies

None

Notes

The `ftptest` command is executed through the `pass` command.

The specified card location must have an IP port configured to an FTP server using the `ent-ftp-serv` command, and the card must have its IP port configured using the `chg-ip-lnk` command.

Output

```

pass:loc=1105:cmd="ftptest-h"
or

```

```
pass:loc=1105:cmd="ftptest"

Command Accepted - Processing

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
    pass:loc=1215:cmd="ftptest -h"
    Command entered at terminal #3.
;

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

Usage: ftptest -a appl [-h]

Options:
    -a appl  FTP client application name
    -h      Displays this message
;

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

FTPTEST: Command Complete
;

pass:loc=1105:cmd="ftptest -a meas"

    PASS: Command sent to card
;

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

FTPTEST: Command In Progress
;

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
    FTP Interface Test
    Test Results: PASS
    Server IP:    10.25.61.71
    FTP Error:   0
    File Error:  0
    Segment:     190004a2
    Diag Msg:

    FTPTEST: Command Complete
;
```

This example shows the output if the wrong password is specified in the `ent-ftp-serv` command for the application specified in the `ftptest` command:

```
pass:loc=1215:cmd="ftptest -a meas"

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

FTPTEST: Command In Progress

;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
FTP Interface Test
  Test Results: FAIL
  Server IP:    0.0.0.0
  FTP Error:   530
  Segment:     190004dd
  Diag Msg:    Server Connection Error

FTPTEST: Command Complete

;
```

6.1.7 linkinfo

This command is used to display the state of a signaling link and to retrieve/clear a specified event log for a signaling link. The signaling link is any valid signaling link provisioned for the card. For IPLIMx cards, the *a:a7 - b:b7* signaling links are supported. For IPSP ENET cards, the *a:a15 - b:b15* signaling links are supported. For IPSP SLIC cards, the *a:a63 - b:b63* signaling links are supported.

For E5-E1T1-B cards, the *a:a31 - b:b31* signaling links are supported. For E5-ATM-B cards, the *a, a1, b* links are supported. E5-E1T1-B and E5-ATM-B cards only support the `-c` option, the output will display the buffer information and congestion levels information.

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `linkinfo` command option `-i` has the parameter *event*. The event to be included in the report can be specified, as in the command `linkinfo a -a -i m2pa`. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

**Note:**

For E5-E1T1-B and E5-ATM-B cards, `-c` and `-h` are the only valid options.

`-h`

This option provides help information for the command.

`port`

This option specifies the signaling link port.

Range:

a, A1: A63-B, B1:B63

`-a`

This option displays the adapter layer interface (ALI) log for the specified signaling link. For M3UA associations the `link -a` option is used to display the UA event log. This command logs information on an association basis. The **link** parameter is used to obtain this report on IPSPG instead of the association name. This information is currently provided by the `ualog` command on IPGWx cards.

`-c`

This option displays congestion tuning parameters for M3UA and M2PA links. The report is enhanced to include card level congestion thresholds and the high-water mark for IPSPG cards.

This option also displays congestion levels for E5-E1T1-B and E5-ATM-B cards.

`-i event`

This option includes (does not filter) a link event in the log. For IPSPG cards, this option may be used to include or exclude events for the `ali` and `link` logs. Valid events for the ALI event log are `ua` and `service`.

Range:

ali, all, data, l2l3, l3l2, m2pa, state, ua, service
all-include all events

`-m`

This option displays acknowledgment times on an M2PA connection (minimum, maximum, weighted average, last recorded). For IPSPG cards, this measurement is supported for only IPSPG-M2PA links.

`-r`

This option resets (clears) the event log for the specified signaling link. This option is valid only with the `-a` option or `-l` option.

`-s`

This option displays the state information for the specified signaling link. For the IPSPG cards, this option is enhanced to display M3UA signaling link status.

`-v`

This option displays the link event filter configuration.

`-x event`

This option excludes (filters) a link event in the log. For IPSPG cards, this option may be used to include or exclude events for the `ali` and `link` logs. Valid events for the ALI event log are `ua` and `service`.

Range:

ali, all, data, l2l3, l3l2, m2pa, state, ua, service
all-exclude all events

Example

Provide help information for the command.

```
pass:loc=1301:cmd="linkinfo -h"
```

Set the filter to include ua events in the ua log report.

```
pass:loc=1304:cmd="linkinfo a -i ua"
```

Set the filter to include service events in the ua log report.

```
pass:loc=1304:cmd="linkinfo a -i service"
```

Display the ua log report for signaling link a.

```
pass:loc=1304:cmd="linkinfo a -a"
```

Display the ALI event log for signaling link a1.

```
pass:loc=1301:cmd="linkinfo a1 -a"
```

Reset/clear the link event log for signaling link a1.

```
pass:loc=1301:cmd="linkinfo a1 -l -r"
```

Clear the ua log report for signaling link a.

```
pass:loc=1304:cmd="linkinfo a -a -r"
```

Display the state information for signaling link a1.

```
pass:loc=1301:cmd="linkinfo a1 -s"
```

Display acknowledgement times for an M2PA connection on signaling link b1.

```
pass:loc=3315:cmd="linkinfo b1 -m"
```

Display congestion tuning information for an IPSPG-M3UA signaling link and Display congestion levels and buffer information for signaling links on E5-E1T1-B and E5-ATM-B cards.

```
pass:loc=1301:cmd="linkinfo a -c "
```

Dependencies

None

Notes

None

Output

This example shows the output for the help command on IPSPG cards:

```
pass:loc=1301:cmd="linkinfo" or
```

```
pass:loc=1301:cmd="linkinfo -h"
```

```
tekelecstp 16-05-25 12:38:16 EST EAGLE5 46.4.0.0.0-69.3.1
```

```
PASS: Command sent to card
```

```
;
```

```
tekelecstp 16-05-25 12:38:16 EST EAGLE5 46.4.0.0-69.3.1
```

```
Usage: LINKINFO port [-a [-r]] [-h] [-l [-r]]
      [-m [-r]] [-s] [-v] [-x event]
```

Options:

```
link      Signaling link port: a, b, a1, b1,.....a63, b63
-a        Display the ALI event log for a signaling link
-c        Display Congestion Tuning Information for a signaling link
-h        Displays this message
-i event  Include (do not filter) a link event type in the log
-l        Displays the event log for a signaling link
-m        Display Link Measurements
-r        Resets the specified event log for a signaling link
-s        Displays the state information for a signaling link
-v        View the link event filter configuration
-x event  Exclude (filter) a link event type from the log
```

```
Valid 'event' for link event log is ali, all, data, 1213, 1312, m2pa,
state
```

```
;
```

```
rlghncxa03w 04-07-29 11:31:09 EST EAGLE5 31.6.0
```

```
LINKINFO command complete
```

```
;
```

This example shows the output for the help command on E5-E1T1-B and E5-ATM-B cards:

```
pass:loc=1101:cmd="linkinfo" or
```

```
pass:loc=1101:cmd="linkinfo -h"
```

```
tekelecstp 02-01-25 05:31:18 MST 46.0.0-65.11.0
```

```
PASS: Command sent to card
```

```
;
```

```
Command Accepted - Processing
```

```
tekelecstp 02-01-25 05:31:19 MST 46.0.0-65.11.0
```

```
LINKINFO: command complete
```

```
;
```

```
Command Executed
```

```
tekelecstp 02-01-25 05:31:18 MST 46.0.0-65.11.0
```

```
Usage: LINKINFO link [-c ]
```

Options:

```
link      Signaling link: a, b, a1..a31, b1..b31
-c        Display Congestion Tuning Information,RTB,TB and L3-L2
buffer counts for a signaling link
```

```
;
```

This example resets/clears the link event log for signaling link A1:

```
pass:loc=1301:cmd="linkinfo a1 -l -r"

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

    LINKINFO command being processed

;

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
    LINKINFO command complete

;
```

This example shows acknowledgment times for an IPLIMx M2PA connection on signaling link B1:

```
pass:loc=1301:cmd="linkinfo b1 -m"

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

    LINKINFO: Command In Progress

;

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
    IPLIMx M2PA Measurements Information for Port B1

    Measured M2PA Traffic Acknowledgement Times

        Minimum acknowledge time      : 14
        Maximum acknowledge time      : 35
        Weighted Average acknowledge time: 17
        Last recorded acknowledge time : 20

    end of report

;

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
;
```

This example shows state information for signaling link A1:


```

pass:loc=1301:cmd="linkinfo a1 -s"

rlghncxa03w 03-07-29 11:31:09 EST  EAGLE5 30.0.0
PASS: Command sent to card
;

rlghncxa03w 03-07-29 11:31:09 EST  EAGLE5 30.0.0

LINKINFO command being processed
;

rlghncxa03w 03-07-29 11:31:09 EST  EAGLE5 30.0.0
SLK      LINKINFO STATE
1301,A1  OOS      CONNECTING

end of report
;

rlghncxa03w 03-07-29 11:31:09 EST  EAGLE5 30.0.0
LINKINFO command complete
;

```

Output for IPSP Card

This example shows the signaling link event log for an IPSP-M3UA link:

```

pass:loc=1304:cmd="linkinfo a -1"

Command Accepted - Processing

eagle10110 08-01-16 16:52:59 EST  EAGLE 38.0.0
pass:loc=1304:cmd="linkinfo a -1"
Command entered at terminal #3.
;

eagle10110 08-01-16 16:52:59 EST  EAGLE 38.0.0
PASS: Command sent to card
;

eagle10110 08-01-16 16:52:59 EST  EAGLE 38.0.0

IP7 Layer 2 Link Events for Link A

08-01-16 15:03:37.080 LINK_STATE_INHIBITED
08-01-16 15:05:23.510 L3_L2_EMERGENCY_Cease
08-01-16 15:05:23.510 L3_L2_START
08-01-16 15:05:23.510 LINK_STATE_NOT_ALIGNED
08-01-16 15:53:02.660 ASP_UP
08-01-16 15:53:02.660 LINK_STATE_ALIGNED_READY
08-01-16 16:19:45.755 ASP_ACTIVE
08-01-16 16:19:45.755 LINK_STATE_INS
08-01-16 16:19:45.755 L2_L3_IN_SERVICE
08-01-16 16:19:45.780 L3_L2_LINKSET_ALLOWED

```

end of report

;

This example shows the signaling link event for an IPSPG-M2PA link:

```
pass:loc=1314:cmd="linkinfo b2 -1"
```

```
eagle10110 08-01-16 16:46:05 EST EAGLE 38.0.0
```

```
IP7 Layer 2 Link Events for Link B2
```

```
08-01-16 16:45:26.050 L3_L2_START
08-01-16 16:45:26.050 L2_L3_OUT_OF_SERVICE
08-01-16 16:45:26.060 RETRIEVAL_COMPLETE
08-01-16 16:45:26.860 L3_L2_EMERGENCY
08-01-16 16:45:26.860 L3_L2_START
08-01-16 16:45:26.860 L2_L3_OUT_OF_SERVICE
08-01-16 16:45:26.870 RETRIEVAL_COMPLETE
08-01-16 16:45:27.215 IP_CONN_OPENED
08-01-16 16:45:27.215 LINK_STATE_CONNECTING
08-01-16 16:45:27.215 IP_CONN_ALLOWED
08-01-16 16:45:27.225 IP_CONN_CONNECTED
08-01-16 16:45:27.225 M2PA_LSO_TRANSMITTED
08-01-16 16:45:27.225 LINK_STATE_CONNECTED
08-01-16 16:45:27.230 M2PA_LSO_RECEIVED
08-01-16 16:45:27.670 L3_L2_EMERGENCY
08-01-16 16:45:27.670 L3_L2_START
08-01-16 16:45:27.670 M2PA_LSA_TRANSMITTED
08-01-16 16:45:27.670 LINK_STATE_NOT_ALIGNED
08-01-16 16:45:27.680 M2PA_LSA_RECEIVED
08-01-16 16:45:27.680 M2PA_LSPE_TRANSMITTED
08-01-16 16:45:27.680 LINK_STATE_ALIGNED
08-01-16 16:45:27.685 M2PA_LSPE_RECEIVED
08-01-16 16:45:27.685 LINK_STATE_PROVING
08-01-16 16:45:27.890 M2PA_T16_EXPIRED
08-01-16 16:45:28.085 M2PA_T16_EXPIRED
08-01-16 16:45:28.185 M2PA_T4_EXPIRED
08-01-16 16:45:28.185 M2PA_LSR_TRANSMITTED
08-01-16 16:45:28.185 LINK_STATE_ALIGNED_READY
08-01-16 16:45:28.195 M2PA_LSR_RECEIVED
08-01-16 16:45:28.195 L2_L3_IN_SERVICE
08-01-16 16:45:28.195 M2PA_LSR_TRANSMITTED
08-01-16 16:45:28.195 LINK_STATE_INS
08-01-16 16:45:28.200 M2PA_LSR_RECEIVED
```

end of report

;

```
eagle10110 08-01-16 16:46:05 EST EAGLE 38.0.0
```

```
LINKINFO: Command Complete
```

```
;
```

This example shows sets the filter to include UA events in the UA log report for signaling link A:

```
pass:loc=1304:cmd="linkinfo a -i ua"
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
Link event type (ua) is logged for link A
```

```
end of report
```

```
;
```

This example sets the filter to include service events in the UA log report for signaling link A:

```
pass:loc=1304:cmd="linkinfo a -i service"
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
Link event type (service) is logged for link A
```

```
end of report
```

```
;
```

This example shows the UA log report for signaling link A:

```
pass:loc=1304:cmd="linkinfo a -a"
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
Adapter Layer Events for Link A
```

```
UALOG: UA event history log
       UA Version: 01
       ASP ID: undefined
       User Adapter Implemented: M3UA RFC
       Current settings: -i service ua
```

Date	Time	Event
08-01-16	15:51:45.890	IP Conn Established
08-01-16	15:51:45.890	Transition to SERVER_DOWN (RC=0000000004)
08-01-16	15:53:02.660	ASPUP PDU Received (ASP ID=undefined)
08-01-16	15:53:02.660	Transition to SERVER_INACTIVE (RC=0000000004)
08-01-16	15:53:02.660	ASP to SLK Up
08-01-16	15:53:02.660	Link Activated
08-01-16	15:53:02.660	ASPUPACK PDU Transmitted

```
08-01-16 15:53:02.660 AS INACTIVE NTFY PDU Transmitted
(RC=0000000004)
08-01-16 16:19:45.755 ASPACTIVE PDU Received (RC=none)
08-01-16 16:19:45.755 ASPACTIVEACK PDU Transmitted
(RC=0000000004)
08-01-16 16:19:45.755 Transition to SERVER_ACTIVE LOADSHARE
(RC=0000000004)
08-01-16 16:19:45.755 ASP to SLK Active
08-01-16 16:19:45.780 AS Active
08-01-16 16:19:45.780 AS ACTIVE NTFY PDU Transmitted
(RC=0000000004)
```

end of report

;

This example clears the UA log report for signaling link A:

```
pass:loc=1304:cmd="linkinfo a -a -r"
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
LINKINFO: Command Complete
```

;

This example shows link measurement information for an IPSPG-M2PA signaling link:

```
pass:loc=1301:cmd="linkinfo b2 -m "
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE5 38.0.0
```

```
M2PA Measurements Information for Link B2
```

```
Measured M2PA Traffic Acknowledgement Times
```

```
Minimum acknowledge time      : 16
Maximum acknowledge time      : 44
Weighted Average acknowledge time: 16
Last recorded acknowledge time : 16
```

end of report

;

This example shows state information for an IPSPG-M3UA signaling link:

```
pass:loc=1301:cmd="linkinfo a -s "
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
IP7 Layer 2 Link State Information for Link A
```

```
LINK_STATE_ALIGNED          ASP_STATE_SERVER_DOWN
```

```
end of report
```

```
;
```

This example shows state information for an IPSPG-M2PA signaling link:

```
pass:loc=1314:cmd="linkinfo b2 -s"
```

```
rlghncxa03w 08-01-29 11:31:09 EST  EAGLE 38.0.0
```

```
IP7 Layer 2 Link State Information for Link B2
```

```
LINK_STATE_INS              IP_CONN_STATE_ESTABLISHED
```

```
end of report
```

```
;
```

This example shows congestion tuning information for an IPSPG-M3UA signaling link:

```
pass:loc=1301:cmd="linkinfo a -c "
```

```
rlghncxa03w 08-01-29 11:31:09 EST  EAGLE 38.0.0
```

```
Congestion Tuning Information for Link A
```

```
High-Water Mark             : 0
```

```
High-Water Mark Date & Time : 00-00-00 00:00:00.000
```

```
HMCG SLK Congestion Threshold Values
```

```
Danger of Congestion Onset : 240
Abatement Level-1          : 241
Onset Level-1               : 480
Abatement Level-2          : 481
Discard Level-1            : 600
Onset Level-2              : 605
Abatement Level-3          : 606
Discard Level-2            : 720
Onset Level-3              : 725
Discard Level-3            : 840
Maximum Buffers for L2     : 960
```

```
HMCG Card-Level Congestion Threshold Values
```

```
Danger of Congestion Onset : 2500
```

```
Abatement Level-1      : 2501
Onset Level-1          : 5000
Abatement Level-2      : 5001
Discard Level-1        : 7601
Onset Level-2          : 6251
Abatement Level-3      : 6252
Discard Level-2        : 7601
Onset Level-3          : 7501
Discard Level-3        : 7601
Maximum Buffers for L2 : 10000
High Water Mark        : 0
```

end of report

;

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
LINKINFO: Command Complete
```

;

This example shows congestion tuning information for an IPSPG-M2PA signaling link:

```
pass:loc=1301:cmd="linkinfo b2 -c "
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
  Congestion Tuning Information for Link B2
```

```
RETX Queue Depth threshold : 240
```

```
High-Water Mark            : 0
```

```
High-Water Mark Date & Time : 00-00-00 00:00:00.000
```

```
HMCG SLK Congestion Threshold Values
```

```
Danger of Congestion Onset : 120
Abatement Level-1          : 121
Onset Level-1              : 240
Abatement Level-2          : 241
Discard Level-1            : 300
Onset Level-2              : 305
Abatement Level-3          : 306
Discard Level-2            : 360
Onset Level-3              : 365
Discard Level-3            : 420
Maximum Buffers for L2     : 480
```

```
HMCG Card-Level Congestion Threshold Values
```

```
Danger of Congestion Onset : 2500
Abatement Level-1         : 2501
Onset Level-1              : 5000
Abatement Level-2         : 5001
Discard Level-1           : 7601
Onset Level-2             : 6251
Abatement Level-3        : 6252
Discard Level-2           : 7601
Onset Level-3            : 7501
Discard Level-3          : 7601
Maximum Buffers for L2    : 10000
High Water Mark           : 2
```

```
end of report
```

```
;
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
LINKINFO: Command Complete
```

```
;
```

This example shows congestion levels for signaling links on E5-E1T1-B and E5-ATM-B cards:
For SS7HC:

```
Command Executed
```

```
tekelecstp 02-01-24 00:38:06 MST 46.0.0-65.11.0
```

```
Congestion Tuning Information for Link A
```

```
HMCG SLK Congestion Threshold Values
```

```
Danger of Congestion Onset : 59
Abatement Level-1         : 60
Onset Level-1             : 80
Discard Level-1           : 99
Abatement Level-2         : 81
Onset Level-2             : 101
Discard Level-2           : 109
Abatement Level-3        : 102
Onset Level-3            : 111
Discard Level-3          : 120
Maximum Buffers for L2    : 130
```

```
TB count                  : 0
```

```
RTB count                  : 0
```

```
L3 L2 MSU count           : 0
```

```
;
```

```
tekelecstp 02-01-24 00:38:06 MST 46.0.0-65.11.0
```

```
LINKINFO: Command Complete
```

For ATMHC:

```

Command Executed
tekelecstp 02-01-24 00:36:45 MST 46.0.0-65.11.0
Congestion Tuning Information for Link A
HMCG SLK Congestion Threshold Values
  Danger of Congestion Onset : 885
  Abatement Level-1         : 900
  Onset Level-1             : 1200
  Discard Level-1           : 1800
  Abatement Level-2         : 1215
  Onset Level-2             : 1515
  Discard Level-2           : 1800
  Abatement Level-3         : 1530
  Onset Level-3             : 1665
  Discard Level-3           : 1800
  Maximum Buffers for L2    : 1950

TB count                    : 0

RTB count                   : 10

L3 L2 MSU count             : 0
;
tekelecstp 02-01-24 00:36:45 MST 46.0.0-65.11.0
LINKINFO: Command Complete

```

This example shows state information when graceful shutdown has occurred:

```
pass:loc=1305:cmd="linkinfo -a a"
```

```

rlghncxa03w 09-04-29 11:31:09 EST EAGLE 41.0.0

Adapter Layer Events for Link A

UALOG: UA event history log
       UA Version: 01
       ASP ID: undefined
       User Adapter Implemented: M3UA RFC
       Current settings: -i ua
                       -x service

Date      Time          Event
-----
08-10-08 09:29:15.705  Management IP Conn Close
08-10-08 09:29:15.705  Transition to SERVER_SHUTDOWN
                       (RC=0000000002)
08-10-08 09:29:15.705  ASP to SLK Down
08-10-08 09:29:15.705  Link Not Aligned
08-10-08 09:29:15.705  UA Graceful Shutdown
08-10-08 09:29:15.710  UA Shutdown Complete
08-10-08 09:29:15.710  Transition to IDLE
                       (RC=0000000002)

```


end of report

6.1.8 msucount

This command is used to report the count of SS7 MSUs and bytes that pass through links, routing keys, and IP connections. These counts can be reported and reset at the same time to get accurate counts for longer periods of time. In addition to MSUs transmitted and received, the command also reports statistics on packets related to MTP Primitives and on discarded transmit and receive data.

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `msucount` command option `-l` has the parameter port. The link for which counts will be displayed can be specified, as in the command `msucount -l a1`. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

`-a`

This option is used to display IP connection statistics for a specific association. When `-a aname` is specified on the same line as `-k rtkey`, the output is assumed to be routing key output. When `-a aname` is specified on the command line without `-k rtkey`, association statistics output is generated.

For IPSPG cards, this option is enhanced to include receive and transmit counts for M3UA SSNMs (DAUD messages and M3UA SSNM PDUs) and replicated M3UA PDUs.

`-b`

This option is used to display signaling link bytes statistics. The signaling link bytes report displays data for measurements on a per-signaling-link basis for both the transmit and receive directions. The report can display link statistics for a specified signaling link number. If a link is not specified, the report displays link statistics for signaling link A for IPGWx cards and for all equipped signaling links for IPLIMx and IPSPG cards. If a signaling link is valid for the card and application type, but is unequipped, then the report displays all zeros.

`-h`

This option is used to provide help information for the command.

`-f`

This option is used to display a full report (IPGWx application only).

`-k rtkey`

This option is used to specify the routing key for which the counts will be displayed. The routing key is specified as a single parameter with up to five colon-separated fields. The subsystem is not specified when SI is not equal to 3.

This option is not supported for the IPSPG cards.

The `-p` modifier can be specified to identify the point code type of the routing key that follows the `-k` option in the command.

The `-p` modifier is not supported for IPLIMx and IPSPG cards.

The rtkey variable is optional when used with `-t default`, and mandatory for all other cases.

The following formats are valid for the routing key that follows the `-k` option in the command:

- n-c-m:s:n-For DPC, SI, SSN type routing keys. The network, cluster and member (*n-c-m*) are in the range 0-255. The service indicator (*s*) is 3 or *sccp*. The subsystem (*n*) is in the range 0-255.
- n-c-m:s-For DPC, SI, type routing keys. The network, cluster and member (*n-c-m*) are in the range 0-255. The service indicator (*s*) is in the range 0-2, 4, or 6-15. There is no subsystem. As a default, counts for all routing keys within the option combination are displayed.
- n-c-m:s:no-co-mo:cs:ce-For DPC, SI, CIC type routing keys. The DPC network, cluster and member (*n-c-m*) are in the range 0-255. The service indicator (*s*) is 5 or *isup*. There is no subsystem. The OPC network, cluster and member (*no-co-mo*) are in the range 0-255. The starting circuit identification code (*cs*) and ending circuit identification code (*ce*) are in the range 0 to 16363.

-l

For IPSPG cards, this option displays the link report for all equipped signaling links on the card.

-l link

This option is used to display counts for links. The link report optionally allows display of link statistics for a specified port.

The link report contains data, per link, for MSUs (tx/rcv), MSU bytes (tx/rcv), MGMT msgs (tx/rcv), and discarded data (tx/rcv).

For the IPSPG card, the M2PA link report is the same as the IPLIMx M2PA report. The M3UA link report contains an additional detail line for non-discard pegs for SS7 SNM and Replicated M3UA PDU counts.

Range:

a, b, a1, b1, a2, b2, a3, b3a:a63-b:b63

If a port is not specified, `msucount` displays link statistics for port *a* for IPGWx links, and port *a* and port *b* for IPLIMx links.

The `msucount` link statistics report contains all zeros for a port that is valid for the card and application type but is unequipped.

The range *a:a15-b:b15* is valid for IPSPG ENET cards.

The range *a:a63-b:b63* is valid for IPSPG ENET cards.

-l

link -f

This option displays the full link report. For IPSPG-M2PA links, this option displays the same report as the `-l <link>` option. For IPSPG-M3UA links the report includes the data from the `-l <link>` report and includes an additional detail line displaying tx/rcv discards counts and discard data.

-p point code type

This option modifier can be specified along with the `-k` option to identify the point code type (ANSI, ITU international, ITU-national, 24-bit ITU national, 16-bit ITU national, ITU international spare, and ITU national spare) in the routing key that follows the `-k` option in the command.

Range:

ansi, itui, itun, itun24, itun16, ituis, ituns

-r

This option is used with other options to reset counts at the same time of reporting them.

`-t keytype`

This option is used to display the routing key type (IPGWx only).

`-x`

The routing context is an index that uniquely defines a routing key associated with an SUA or M3UA AS. For the IPGS card, the option displays a link report for all signaling links on the card that are members of the linkset that contains the specified routing context value (equivalent to the **msucount -l** report. The `-x` option is used as an alternative to the `-k` option to identify the routing key by specifying its routing context in the command line.



Note:

The `-x rc` option can only be used to specify routing keys containing M3UA/SUA associations.

Example

Link counts only. Displays brief count for signaling link a for IPGWx. Displays counts for all equipped signaling links for IPLIMx.

```
msucount -l
```

Link counts only, for signaling link port a1.

```
msucount -l a1
```

Full/detail report for signaling link a for IPGWx.

```
msucount -l -f
```

Counts for the specified association only.

```
msucount -a association name
```

Counts for first matching routing key

```
msucount -k 10-10-10:3:16
```

Counts for the routing key report using the routing context.

```
msucount -x 5
```

Counts for first matching routing key and an associated association.

```
msucount -a association name -k rtkey
```

Counts for the default routing key

```
msucount -k -t default
```

Counts for a matching partial routing key.

```
msucount -k 3-3-3 -t partial
```

Counts for counts for link only. Displays brief report for signaling link a for IPGWx. Displays counts for all equipped signaling links for IPLIMx.

```
msucount
```

Resets the signaling link count measurements.

```
msucount -r
```

Brief version of help text.

```
msucount -h
```

Full version of help text.

```
msucount -h full
```

Counts for link and first matching routing key

```
msucount -b
```

Byte report for signaling link A for IPGWx cards. Byte report for all equipped signaling links for IPLIMx cards.

```
msucount -b -link
```

Byte report for specified signaling link.

```
msucount -l -k 10-10-10:3:16
```

Use with other parameters to display and reset counts. Valid with the above combinations.

```
msucount -l -r
```

```
msucount -r
```

```
msucount -x 5 -r
```

Examples showing the correct syntax to specify partial or default keys, or to specify a key by routing context:

```
pass:loc=1105:cmd="msucount -k 5-5-1:5:6-6-6 -t partial
```

```
pass:loc=1105:cmd="msucount -k 5-5-1:5 -t partial"
```

```
pass:loc=1105:cmd="msucount -p ITUI -t partial -k 1-235-1"
```

```
pass:loc=1105:cmd="msucount -p ITUN -t partial -k 2351"
```

```
pass:loc=1105:cmd="msucount -p ITUN -t partial -k 2351-gr
```

```
pass:loc=1105:cmd="msucount -t partial -k :2 "
```

```
pass:loc=1105:cmd="msucount -k -t default"
```

```
pass:loc=1105:cmd="msucount -p ITUN24 -t partial -k 10-235-1"
```

```
pass:loc=1105:cmd="msucount -p ITUN24 -t partial -k 10-235-1"
```

```
pass:loc=1105:cmd="msucount -p ITUN16 -t partial -k 1-2-1"
```

Examples of other valid routing key inputs:

```
pass:loc=1105:cmd="msucount -r -k 5-5-6:5:5-5-7:1:1000"
```

```
pass:loc=1105:cmd="msucount -r -p ITUI -k 5-5-6:4:5-5-7:1:1000"
```

```
pass:loc=1105:cmd="msucount -k 5-5-1:3:5 -a assoc1"
```

```
pass:loc=1105:cmd="msucount -r -p ITUN24 -k
15-105-16:5:15-105-17:1:1000"
```

Dependencies

At least one option must be specified.

Notes

The `msucount` command is executed through the `pass` command.

Combinations of the `-l`, `-a`, `-k`, `-t`, `-x` and `-b` options provide count information based on the entered combination.

If no parameters are specified, then the `-l` brief report is output.

Multiple reports are not supported with the IP Signaling Serviceability feature.

For the SS7IPGW and IPGWI GPLs, 4 types of reports can be generated: the link report, the routing key report, the IP connection statistics report, and the signaling link bytes report. For the IPLIMI card, the routing key report is not supported.

The 4 reports are:

1. The link report (`-l` option) contains statistics per link about MSUs (transmit/receive), MSU bytes (transmit/receive), MGMT messages (transmit/receive), and discarded data (transmit/receive).
2. The routing key report (`-k` option) contains statistics for a specific routing key about MSUs (transmit), MSU bytes (transmit), and discards on the transmit path for the routing key.

A list of one or more IP connections associated with the routing key, with the MSU and MSU bytes counts for each connection, is also displayed. If `-a aaname` is in the same input command with `-k rtkey`, only the connection association data for the specified connection is displayed. If `-a aaname` is not specified with `-k rtkey`, all connection associations are listed. If `-x rc` is specified, only the connection association data for the specified routing context is displayed.

The `-p` (point code type) modifier option can be used with the `-k` option to specify the point code type of the routing key that follows the `-k` option in the command.

For the `-k` options, the routing key must be an exact match of a routing key that exists in the static Routing Key table.

3. The IP connection statistic report (`-a aaname` option) contains statistics for a specified IP connection about MSUs (transmit/receive), MSU bytes (transmit/receive), and discarded data (transmit/receive).

When the `-a aaname` option is specified in the command with the `-k` option, the output type is assumed to be routing key output.

When the `-a aaname` option is specified in the command without the `-k` option, association statistics output is generated.

4. The signaling link bytes report (`-b` option) provides the following information for both IPGWx and IPLIMx cards: bytes/sec for the last second, average MSU size during the last second, and maximum one-second average MSU size since card load time or reset. For the IPLIMx cards, the report also provides the following information: sum of bytes/sec for the last second for all signaling link, average MSU size for last second for all signaling links, maximum average MSU size since load time or reset for all signaling links, and maximum MSU size since load time or reset for all signaling links.

The link report, routing key report, and IP connection statistics report (IPGWx only) can display individual transmit MSUs that were discarded at layer 2. The first 32 bytes of the MSU transmit data that is discarded is stored beginning at the SIO bytes. If the MSU is not 32 bytes long, the remaining bytes are set to 0.

The signaling link bytes report optionally allows display of link statistics for a specified signaling link number. If a link is not specified for the bytes report, the `msucount` command displays link statistics for signaling link A for IPGWx cards and for all equipped signaling links for IPLIMx cards.

The signaling link bytes report contains all zeros for a signaling link that is valid for the card and application type but that is unequipped.

The link and IP connection statistics reports can display individual receive packets that were discarded at layer 2. If the storage space is larger than the service data, the extra bytes are set to 0.

The reset option (`-r`) resets the specified measurements. This option can be added to any command.

Output

In these examples, the hexadecimal output for discarded *transmit* data represents data stored beginning at the SIO bytes through the first 32 bytes of the MSU. If the MSU was less than 32 bytes, the remaining bytes are represented by zeros.

Stored *receive* data takes the following format:

- Bytes 13-x = Service data. If the storage space is greater than the size of the service data, the remaining bytes are zeroed.

Output Specific to SS7IPGW and IPGWI

Either brief or full help reports can be displayed. A full help report is generated by adding the `full` (`-f`) option to the command line.

This example shows a brief help report:

```
pass:loc=1105:cmd="msucount -h"

tekelecstp 10-09-10 11:50:34 EST EAGLE 43.0.0

Usage: msucount [ [-l [link]] | [-b [link]] ] |
               [ [-a aname] ] |
               [ [-x rc] | [-k [rtkey] [-p pctype] [-t keytype]] ]
               [-f] [-r] [-h [full]]

Options: -l display signaling link report
         -b display signaling link bytes report
         -a display association report
         -x routing key report using routing context
         -k routing key report using MTP3 parameters
            rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
         -p pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUN16, ITUIS,
ITUNS)
         -t routing key type
            keytype :: (<full>, partial, default)
         -f display full report
         -r resets the specified counts
         -h display command help (brief or full)

tekelecstp 10-09-10 11:50:34 EST EAGLE 43.0.0
MSUCOUNT command complete

;
```

This example shows a full help report:

```
pass:loc=1105:cmd="msucount -h full"
```

```
tekelecstp 10-09-10 11:50:34 EST EAGLE 43.0.0
```

```
Usage: msucount [ [-l [link]] | [-b [link]] ] |
               [ [-a aname] ] |
               [ [-x rc] | [-k [rtkey] [-p pctype] [-t keytype]] ]
               [-f] [-r] [-h [full]]
```

```
Options: -l display signaling link report
         -b display signaling link bytes report
         -a display association report
         -x routing key report using routing context
         -k routing key report using MTP3 parameters
           rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
         -p pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUN16, ITUIS, ITUNS)
         -t routing key type
           keytype :: (<full>, partial, default)
         -f display full report
         -r resets the specified counts
         -h display command help (brief or full)
```

-k option details:

Use the -p option along with -k to specify the SS7 network domain and point code format for the network. The SS7IPGW default pctype is ANSI. The IPGWI default pctype is ITUI.

Network	PC Format	Notes
ANSI	N-C-M	
ITUN	N	Non-Spare ITU National, no group code
ITUN	N-GC	Non-Spare ITU National with group code
ITUI	Z-A-I	Non-Spare ITU International
ITUN24	N-C-M	Non-Spare ITU National, 24-bits
ITUN16	U-S-M	Non-Spare ITU National, 16-bits
ITUNS	N	Spare ITU National, no group code
ITUNS	N-GC	Spare ITU National with group code
ITUIS	Z-A-I	Spare ITU International

Use the -t option along with -k to specify certain MTP3 and user part MSU fields as wildcards for the routing key.

SS7 Traffic Partition	RTKEY Parameter	Example
Any User Part to DPC 1-1-1	-k 1-1-1	-t partial
SCCP to DPC 1-1-1	-k 1-1-1:3	-t partial
ISUP to DPC 1-1-1	-k 1-1-1:5	-t partial
TUP to DPC 1-1-1	-k 1-1-1:4	-t partial
QBICC to DPC 1-1-1	-k 1-1-1:13	-t partial
SI [0-2,6-12,14,15] to DPC 1-1-1	-k 1-1-1:SI	
SCCP SSN 5 to DPC 1-1-1	-k 1-1-1:3:5	
ISUP to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:5:2-2-2	-t partial
TUP to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:4:2-2-2	-t partial

```

QBICC to DPC 1-1-1 from OPC 2-2-2 -k 1-1-1:13:2-2-2 -t partial
ISUP CIC 1 to 1-1-1 from 2-2-2 -k 1-1-1:5:2-2-2:1
TUP CIC 1 to 1-1-1 from 2-2-2 -k 1-1-1:4:2-2-2:1
QBICC CIC 1 to 1-1-1 from 2-2-2 -k 1-1-1:13:2-2-2:1
ISUP CIC 0-5 to 1-1-1 from 2-2-2 -k 1-1-1:5:2-2-2:0:5
TUP CIC 0-5 to 1-1-1 from 2-2-2 -k 1-1-1:4:2-2-2:0:5
QBICC CIC 0-5 to 1-1-1 from 2-2-2 -k 1-1-1:13:2-2-2:0:5
Default Routing Key -k -t
default

tekelecstp 10-09-10 11:50:34 EST EAGLE 43.0.0
MSUCOUNT command complete

```

A brief version for the link measurement report can be specified for IPGWx. If no parameters are specified for a link measurements report, then a brief report is displayed. The brief report does not display the transmit/receive discard counts.

This example shows a brief link measurements report:

```

pass:loc=1305:cmd="msucount"
or
pass:loc=1305:cmd="msucount -l"

tekelecstp 10-08-17 11:50:34 EST EAGLE 42.0.0

MSUCOUNT: MSU Count Report

-----
Link Measurements (Link A)
-----

Transmit Counts                                Receive Counts
-----
rate  msus      bytes          rate  msus      bytes
-----
2000  4294967295  4294967295   2000  4294967295  4294967295

MTP Primitive (MTPP) counts                    Reroute Counts
-----
sent pdus  rcvd pdus  dscrd pdus  sent msus  rcvd msus
-----
4294967295 4294967295 4294967295 4294967295 4294967295

MSUCOUNT: command complete
;

```

This example shows a full link measurements report:

```

pass:loc=1305:cmd="msucount -f"
or

```



```
pass:loc=1305:cmd="msucount -l -f"
```

```
tekelecstp 10-08-17 11:50:34 EST EAGLE 42.0.0
```

```
MSUCOUNT: MSU Count Report
```

```
-----  
Link Measurements (Link A)  
-----
```

```
Transmit Counts
```

```
-----  
rate  msus      bytes  
-----  
2000  4294967295  4294967295
```

```
Receive Counts
```

```
-----  
rate  msus      bytes  
-----  
2000  4294967295  4294967295
```

```
MTP Primitive (MTPP) Counts
```

```
-----  
sent pdus  rcvd pdus  dscrd pdus  
-----  
4294967295 4294967295 4294967295
```

```
Reroute Counts
```

```
-----  
sent msus  rcvd msus  
-----  
4294967295 4294967295
```

```
Transmit Discard Counts
```

```
-----  
reason                                     count  
-----  
no ss7 rtbl entry                         4294967295  
no ss7 rtkey                              4294967295  
no conn avail to pc                       4294967295  
no conn avail to rtkey                    4294967295  
congested connection                      4294967295  
sccp msg type                             4294967295  
sccp class                                4294967295  
circular rte                              4294967295  
normalization error                       4294967295  
invalid traffic type                      4294967295  
M3UA conversion error                     4294967295  
SUA conversion error                      4294967295  
AS-Pending overflow                       4294967295  
AS timer Tr expiry                        4294967295  
reroute failure                           4294967295  
unexpected for APC                         4294967295  
lrg MSU not supported                     4294967295
```

```
Receive Discard Counts
```

```
-----  
reason                                     count  
-----  
link state                                4294967295  
sccp msg type                             4294967295  
sccp class                                4294967295  
sccp called party                         4294967295  
sccp calling party                        4294967295  
isup sio                                  4294967295  
normalization error                       4294967295  
error in XSRV packet                      4294967295  
M3UA PDU error                            4294967295  
SUA PDU error                              4294967295  
invalid rcontext                           4294967295  
management blocking                       4294967295  
lrg MSU not supported                     4294967295
```

```
Stored Transmit Discard Data
```

```
-----  
83 01 05 05 0a 01 03 bf 09 80 03 08 0d 05 c3 07  
01 05 05 05 c3 07 0a 01 03 08 e2 06 c7 04 13 10
```

```

Stored Receive Discard Data
-----
53 41 53 49 73 63 63 70 1a 00 09 01 03 08 0d 05
c3 05 0a 01 03 05 c3 05 01 05 05 08 e2 06 c7 04

MSUCOUNT: command complete
;

```

This example shows an output report when all counts are zero:

```

pass:loc=1305:cmd="msucount -f"
or
pass:loc=1305:cmd="msucount -l -f"

```

```

MSUCOUNT: MSU Count Report
-----
Link Measurements (Link A)
-----

Transmit Counts                                Receive Counts
-----
rate  msus      bytes          rate  msus      bytes
-----
00000 00000      00000          00000 00000      00000

MTP Primitive (MTPP) Counts                    Reroute Counts
-----
sent pdu   rcvd pdu   dscrd pdu   sent msus   rcvd msus
-----
00000      00000      00000          00000      00000

Transmit Discard Counts                        Receive Discard Counts
-----
reason          count          reason
count
-----
no transmit discard counts                    no receive discard counts

Stored Transmit Discard Data
-----
no stored transmit discard data

Stored Receive Discard Data
-----
no stored receive discard data

```

```
MSUCOUNT: command complete
```

Routing Key Report Output Examples

The routing key report contains data about MSUs (tx), MSU bytes (tx), and discards on the transmit path for the routing key. A list of one or more connections associated with the routing key, with the MSU and MSU bytes counts for each connection, is also presented. If `-a aname` is in the same input command with `-k rtkey`, only the connection association data for the specified connection is displayed. If `-a aname` is not specified with `-k rtkey`, all connection associations are listed. If `-x rc` is specified, only the connection association data for the specified routing context is displayed.



Note:

For IPGWx, `-k rtkey` is optional when used with `-t default`, and mandatory for all other cases.

The report output itself does not display the routing key that was entered, other than an exact copy of the command line being generated as part of the output.

Partial routing keys (where some fields in the MSU are ignored with respect to finding a routing key to use for the MSU) and default keys can be specified in the command. The output does not change for these key types; the only difference is the routing key syntax (`-p`) that must be processed as part of identifying the partial and default keys. (See the Example section of this command description for syntax examples).

This example shows a routing key report for an ANSI routing key that specifies the Routing Key table:

```
pass:loc=1105:cmd="msucount -k 5-5-1:3: -t partial"
```

```
tekelecstp 10-09-10 11:50:34 EST EAGLE 43.0.0
```

```
MSUCOUNT: MSU Count Report
```

```
-----  
Routing Key Measurements for Static Routing Key  
-----
```

```
Transmit Counts
```

```
-----  
tx bytes                4294967295  
tx msus                 4294967295
```

```
Transmit Discard Counts
```

```
-----  
sccp msg type          4294967295  
sccp class             4294967295  
normalization error    4294967295  
invalid traffic type   4294967295
```

```
Associated IP Connection      tx bytes      tx msus
```

```

-----
c7000                                4294967295
4294967295
c7050                                4294967295
4294967295
c7052                                4294967295
4294967295
c7054                                4294967295
4294967295

```

Stored Transmit Discard Data

```

-----
83 01 05 05 0a 01 03 94 09 01 03 08 0d 05 c3 05
01 05 05 05 c3 05 0a 01 03 08 e2 06 c7 04 28 10

```

MSUCOUNT: command complete

;

This example shows an ITU-I routing key report (only 1 specific association is displayed):

```
pass:loc=1105:cmd="msucount -p ITUI -k 5-5-1:3:5 -a c7000"
```

```
tekelecstp 10-09-10 11:50:34 EST EAGLE 43.0.0
```

MSUCOUNT: MSU Count Report

Routing Key Measurements for Static Routing Key

Transmit Counts

```

-----
tx bytes:                            4294967295
tx msus:                              4294967295

```

Transmit Discard Counts

```

-----
sccp msg type                        4294967295
sccp class                           4294967295
normalization error                  4294967295
invalid traffic type                 4294967295

```

```

Associated IP Connection              tx bytes      tx msus
-----
c7000                                4294967295
4294967295

```

Stored Transmit Discard Data

```

-----
83 01 05 05 0a 01 03 94 09 01 03 08 0d 05 c3 05
01 05 05 05 c3 05 0a 01 03 08 e2 06 c7 04 28 10

```

```
MSUCOUNT: command complete
;
```

This example shows a routing key report when the routing context =5 (because a table is not specified, the key is searched for in the Static table):

```
pass:loc=1105:cmd="msucount -x 5"
```

```
tekelecstp 10-09-10 11:50:34 EST EAGLE 43.0.0
```

```
MSUCOUNT: MSU Count Report
```

```
-----
Routing Key Measurements for Static Routing Key
-----
```

```
Transmit Counts
```

```
-----
```

```
tx bytes          4294967295
tx msus           4294967295
```

```
Transmit Discard Counts
```

```
-----
```

```
sccp msg type    4294967295
sccp class       4294967295
normalization error 4294967295
invalid traffic type 4294967295
```

Associated IP Connection	tx bytes	tx msus
-----	-----	-----
c7000	4294967295	4294967295
c7050	4294967295	4294967295
c7052	4294967295	4294967295
c7054	4294967295	4294967295

```
Stored Transmit Discard Data
```

```
-----
```

```
83 01 05 05 0a 01 03 94 09 01 03 08 0d 05 c3 05
01 05 05 05 c3 05 0a 01 03 08 e2 06 c7 04 28 10
```

```
MSUCOUNT: command complete
```

IP Connection Report

This example shows an IP Connection report for an association:

```
pass:loc=1105:cmd="msucount -a c7050"
```

```
tekelecstp 10-09-10 11:50:34 EST EAGLE 43.0.0
```

```
MSUCOUNT: MSU Count Report
```

```
-----
IP Connection Measurements
```

```

-----
Receive Counts                               Transmit Counts
-----
msus          bytes                          msus          bytes
-----
4294967295    4294967295                                4294967295    4294967295

Receive Discard Counts                       Transmit Discard
Counts                                       Counts
-----
reason          count                          reason
count
-----
link state      4294967295    sccp msg type
4294967295
sccp msg type  4294967295    sccp class
4294967295
sccp class     4294967295    normalization error
4294967295
sccp called party 4294967295    invalid traffic type
4294967295
sccp calling party 4294967295    M3UA conversion error
4294967295
isup sio       4294967295    SUA conversion error
4294967295
normalization error 4294967295    management blocking
4294967295
error in XSRV packet 4294967295    transmit queue full
4294967295
M3UA PDU error  4294967295
SUA PDU error   4294967295
invalid rcontext 4294967295

Stored Transmit Discard Data
-----
no stored transmit discard data

Stored Receive Discard Data
-----
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

MSUCOUNT: command complete

```

;

The transmit queue full reason under Transmit Discard Counts section of this report refers to the count of the messages which are discarded due to connection manager transmit queue full. This count is incremented only for M3UA messages which are discardable.

Signaling Link Bytes Report

This example shows a signaling link bytes report for an IPGWx card:

```
pass:loc=1305:cmd=msucount -b"
or
pass:loc=1305:cmd=msucount -b a
```

```
MSUCOUNT: MSU Count Report
```

```
-----
Link Byte Measurements (Link A)
-----
```

SLK Transmit counts				SLK Receive counts			
bytes/ sec	avg msu	max avg msu	max msu	bytes/ sec	avg msu	max avg msu	max msu
444400	2020	2020	2020	444400	2020	2020	2020

```
MSUCOUNT: command complete
```

Output Specific to IPLIMI

Note:

The routing key report is not supported for IPLIMx applications. The -k, -t, -p, -x options are not supported because the IPLIMx card does not use routing keys.

Note:

The IPLIMx reports include all equipped signaling links instead of just ports A and B. These reports include the transmit/receive counts alongside each other for the link case.

This example shows help for using the command:

```
pass:loc=1103:cmd="msucount -h" or
pass:loc=1103:cmd="msucount"

tekelecstp 10-09-10 11:50:34 EST EAGLE 43.0.0

Usage: msucount [ [-l [link]] | [-b [link]] ] |
               [ [-a aname] ]
               [-r] [-h]

Options: -l display signaling link report
         -b display signaling link bytes report
```

```

-a display association report
-r resets the specified counts
-h display command help

tekelecstp 10-09-10 11:50:34 EST EAGLE 43.0.0
MSUCOUNT command complete

;
```

This example shows a link report for an IPLIMx card with 2 M2PA links.

The report does not contain MTPP or RGRP MGMT statistics, because those capabilities are not supported on the IPLIMx applications. The report also does not contain tx/rcv discard data, because there are no discards performed at layer 2 of the IPLIMx applications. The IPLIMx card can also contain 2 links per card; the output contains link data for each link.

```
pass:loc=1301:cmd="msucount"
or
```

```
pass:loc=1301:cmd="msucount -l"
```

```
MSUCOUNT: Command In Progress
```

```

;
MSUCOUNT: MSU Count Report
```

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A	2000	4294967295	4294967295	2000	4294967295	4294967295
B	2000	4294967295	4294967295	2000	4294967295	4294967295
A1	2000	4294967295	4294967295	2000	4294967295	4294967295
B1	2000	4294967295	4294967295	2000	4294967295	4294967295
A2	0000	0000000000	0000000000	0000	0000000000	0000000000

```
MSUCOUNT: command complete
```

This example shows signaling link A1 on an IPLIMx card:

```
pass:loc=1103:cmd="msucount -l a1"
```

```
MSUCOUNT: MSU Count Report
```

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A1	2000	4294967295	4294967295	2000	4294967295	4294967295

```

;
MSUCOUNT: command complete
```


This example shows an IP connection statistics report. The IPLIMx IP connection report does not contain `tx/rcv` discard data, because there are no discards performed at layer 2 of the IPLIMx applications.

```
pass:loc=1105:cmd="msucount -a c7050"
```

```
tekelecstp 10-09-10 11:50:34 EST EAGLE 43.0.0
```

```
MSUCOUNT: MSU Count Report
```

```
-----  
IP Connection Measurements  
-----
```

Transmit Counts		Receive Counts	
msus	bytes	msus	bytes
4294967295	4294967295	4294967295	4294967295

```
MSUCOUNT: command complete
```

```
;
```

Signaling Link Bytes Report

This example shows a signaling link bytes report for an IPLIMx card:

```
pass:loc=1303:cmd="msucount -b"
```

```
MSUCOUNT: SLK Bytes Report
```

SLK Transmit					SLK Receive				
slk	bytes/sec	avg msu	avg msu	max msu	slk	bytes/sec	avg msu	avg msu	max msu
A	35000	140	273	273	A	35000	140	273	273
B	35000	140	273	273	B	35000	140	273	273
A1	35000	140	578	578	A1	35000	140	578	578
B1	35000	140	273	273	B1	35000	140	273	273
A2	35000	140	140	140	A2	35000	140	140	140
B2	35000	140	169	169	B2	35000	140	169	169
A3	35000	2048	2048	2048	A3	35000	2048	2048	2048
B3	35000	140	166	166	B3	35000	140	166	166
-----					-----				
280000					280000				

```
MSUCOUNT: command complete
```

This example shows a signaling link bytes report for a specified link on an IPLIMx card:

```
pass:loc=1303:cmd="msucount -b a"
```

```
MSUCOUNT: SLK Bytes Report
```

SLK Transmit					SLK Receive				
-----					-----				
		max					max		
slk	bytes/sec	avg	avg	max	slk	bytes/sec	avg	avg	max
-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
A	35000	140	273	273	A	35000	140	273	

273

```
MSUCOUNT: command complete
```

Enhanced Reset Option

The reset option resets the specified measurements without displaying `msucount` output. The default is to reset the link measurements report.

This example shows resetting link measurements:

```
pass:loc=1305:cmd="msucount -l -r"
```

or

```
pass:loc=1305:cmd="msucount -r"
```

```
eagle10212 06-06-01 08:50:47 EST EAGLE 35.0.0
```

```
MSUCOUNT: MSU Count Report
```

```
Link measurements have been reset.
```

```
MSUCOUNT: command complete
```

This example shows resetting Routing Key measurements:

```
pass:loc=1305:cmd="msucount -x -5 -r"
```

```
eagle10212 06-01-05 08:50:47 EST EAGLE 35.0.0
```

```
MSUCOUNT: MSU Count Report
```

```
Routing Key measurements have been reset.
```

```
MSUCOUNT: command complete
```

Output specific to IPSP Cards

The option to display a full help report is not supported for IPSP cards.

```
pass:loc=1304:cmd="msucount -h"
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
Usage: msucount [ [-l [link]] | [-b [link]] | [-l link -f] ] |
               [ [-a aname] ]
               [ [-x rc] ]
               [-r] [-h]
```

```
Options: -l display signaling link report
         -b display signaling link bytes report
         -a display association report
         -x display routing context report
         -f display full report
         -r resets the specified counts
         -h display command help
```

;

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
MSUCOUNT: command complete
```

For link reports on IPSPG signaling links, if a specific link is not requested, then counts for all equipped signaling links on the card are displayed. The report includes counts for up to 32 links per card. The `-l <link>` report adds counts for *Replicated M3UA PDU sent*, *Replicated M3UA PDU rcvd*, and *SS7 SNM Counts sent* for M3UA links.

This example shows a brief measurements report:

```
pass:loc=1303:cmd="msucount -l"
```

```
tekelecstp 16-05-25 12:38:16 EST EAGLE5 46.4.0.0.0-69.3.1
```

```
pass:loc=1303:cmd="msucount -l"
```

```
MSUCOUNT: MSU Count Report
```

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A	0	3	72	0	0	0
B	0	62	1916	0	62	1916
A41	0	2	48	0	0	0
A2	0	1	24	0	0	0
A3	0	0	0	0	0	0
A54	0	0	0	0	0	0
	0	68	2060	0	62	1916

```
MSUCOUNT: command complete
```

This example shows a measurement report for an IPSPG-M3UA signaling link:

```
pass:loc=1303:cmd="msucount -l a"
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report
```

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A	0	3	72	0	0	0

Replicated M3UA PDU counts		SS7 SNM counts
sent	rcvd	sent
0	0	3

This example shows a measurement report for an IPSP-M2PA signaling link:

```
pass:loc=1303:cmd="msucount -l b"
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report
```

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
B	0	62	1916	0	62	1916

```
MSUCOUNT: command complete
```

The `msucount -l <link> -f` report displays the same information as the brief report (`msucount -l <link>`) for IPSP-M2PA links. For IPSP-M3UA links, the `msucount -l <link> -f` report displays both the information from the brief report and the *discarded tx due to M3UA Conversion Error*, *discarded rcv due to M3UA PDU Error*, *discarded rcv due to Management Blocking*, and *discarded rcv due to Lrg BICC not supported* discard counts.

This example shows a full report for an IPSP-M3UA signaling link when discard counts are not received:

```
pass:loc=1303:cmd=msucount -l a -f
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report
```

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes

```
A      0      3      72      0      0      0
```

```
Replicated M3UA PDU counts
```

```
-----
```

```
sent      rcvd
```

```
-----
```

```
0          0
```

```
SS7 SNM counts
```

```
-----
```

```
sent
```

```
-----
```

```
3
```

```
Transmit Discard Counts
```

```
-----
```

```
reason          count
```

```
-----
```

```
M3UA conversion error 2
```

```
Receive Discard Counts
```

```
-----
```

```
reason          count
```

```
-----
```

```
no receive discard counts
```

```
Stored Transmit Discard Data
```

```
-----
```

```
b0 04 04 04 00 d4 01 1b 61 00 00 bb a9 02 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
b0 04 04 04 00 d4 01 16 61 00 00 27 b8 02 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
Stored Receive Discard Data
```

```
-----
```

```
no stored receive discard data
```

```
MSUCOUNT: command complete
```

This example shows a full report for an IPSP-M3UA signaling link when discard counts are received:

```
pass:loc=1304:cmd="msucount -l a -f"
```

```
Command Accepted - Processing
```

```
rlghncxa03w 10-03-09 11:31:09 EST EAGLE 42.0.0
```

```
MSUCOUNT: MSU Count Report
```

```
SLK Transmit counts
```

```
-----
```

```
slk rate  msus      bytes
```

```
-----
```

```
A      0      58      3380
```

```
SLK Receive counts
```

```
-----
```

```
rate  msus      bytes
```

```
-----
```

```
0      5      292
```

```

Replicated M3UA PDU counts          SS7 SNM counts
-----
sent          rcvd                  sent
-----
1             1                     13

Transmit Discard Counts            Receive Discard Counts
-----
reason          count                reason          count
-----
M3UA conversion error 3           M3UA PDU Error      1
management blocking 1            lrg MSU not supported 1

Stored Transmit Discard Data
-----
b0 04 04 04 00 6e 01 18 51 01 00 0f 49 02 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

80 04 04 04 00 d2 01 00 23 05 05 05 02 1f 61 02
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

80 04 04 04 00 d2 01 00 13 20 19 02 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Stored Receive Discard Data
-----
01 00 04 01 00 00 00 18 00 0b 00 08 02 00 00 00
00 06 00 08 00 00 00 04 00 00 00 00 00 00 00

01 00 01 01 00 00 00 3c 00 06 00 08 00 00 00 04
02 10 00 2b 00 04 04 04 00 05 05 05 0d 02 00 96

01 00 00 10 00 00 00 1c 00 0c 00 08 00 00 00 06
00 07 00 0c 01 00 02 02 00 00 00 18 00 00 00 00

MSUCOUNT: command complete
;

```

This example shows a link report for an IPSPG-M2PA signaling link:

```
pass:loc=1303:cmd="msucount -l b"
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report
```

```
SLK Transmit counts          SLK Receive counts
```

```

-----
slk  rate  msus      bytes      rate  msus      bytes
---  -
B    0     62       1916       0     62       1916
-----

```

MSUCOUNT: command complete

This example shows a full link report for an IPSPG-M3UA link where discard counts are not received:

```
pass:loc=1303:cmd=msucount -l a -f
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report
```

```

SLK Transmit counts
-----
slk  rate  msus      bytes
---  -
A    0     3         72

SLK Receive counts
-----
rate  msus      bytes
----  -
0     0         0

```

```

Replicated M3UA PDU counts
-----
sent      rcvd
-----
0         0

SS7 SNM counts
-----
sent
-----
3

```

```

Transmit Discard Counts
-----
reason          count
-----
M3UA conversion error 2

Receive Discard Counts
-----
reason          count
-----
no receive discard counts

```

```

Stored Transmit Discard Data
-----
b0 04 04 04 00 d4 01 1b 61 00 00 bb a9 02 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

b0 04 04 04 00 d4 01 16 61 00 00 27 b8 02 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

```

```

Stored Receive Discard Data
-----
no stored receive discard data

```

MSUCOUNT: command complete

This example shows a full link report that contains discard counts for an IPSP-M3UA link:

```
pass:loc=1304:cmd="msucount -l a -f"
```

Command Accepted - Processing

rlghncxa03w 10-03-09 11:31:09 EST EAGLE 42.0.0

MSUCOUNT: MSU Count Report

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A	0	58	3380	0	5	292

Replicated M3UA PDU counts

sent	rcvd
1	1

SS7 SNM counts

sent
13

Transmit Discard Counts

reason	count
M3UA conversion error	3

Receive Discard Counts

reason	count
M3UA PDU Error	1
management blocking	1
lrg MSU not supported	1

Stored Transmit Discard Data

```

b0 04 04 04 00 6e 01 18 51 01 00 0f 49 02 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

80 04 04 04 00 d2 01 00 23 05 05 05 02 1f 61 02
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

80 04 04 04 00 d2 01 00 13 20 19 02 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

```


Stored Receive Discard Data

```
-----
01 00 04 01 00 00 00 18 00 0b 00 08 02 00 00 00
00 06 00 08 00 00 00 04 00 00 00 00 00 00 00 00
```

```
01 00 01 01 00 00 00 3c 00 06 00 08 00 00 00 04
02 10 00 2b 00 04 04 04 00 05 05 05 0d 02 00 96
```

```
01 00 00 10 00 00 00 1c 00 0c 00 08 00 00 00 06
00 07 00 0c 01 00 02 02 00 00 00 18 00 00 00 00
```

```
MSUCOUNT: command complete
```

```
;
```

Signaling Link Bytes Report

The IPSP signaling link bytes report is the same as the IPLIMx link bytes report.

This example shows a signaling link bytes report for an IPSP card:

```
pass:loc=1303:cmd="msucount -b"
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report
```

SLK Transmit counts					SLK Receive counts			
slk	bytes/ sec	avg msu	max avg msu	max msu	bytes/ sec	avg msu	max avg msu	max msu
A	0	0	24	24	0	0	0	0
B	62	31	31	31	62	31	31	31
A1	0	0	24	24	0	0	0	0
A2	0	0	24	24	0	0	0	0
A3	0	0	0	0	0	0	0	0
A4	0	0	0	0	0	0	0	0
-----					-----			
	62	31	31	31	62	31	31	31
-----					-----			

This example shows the B link report:

```
pass:loc=1305:cmd="msucount -b a"
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report
```

SLK Transmit counts					SLK Receive counts			
slk	bytes/ sec	avg msu	max avg msu	max msu	bytes/ sec	avg msu	max avg msu	max msu

```

-----
-----
A      0      0      24      24      0      0
0      0
-----
-----
0      0      0      24      24      0      0
-----
-----

```

MSUCOUNT: MSU Count Report

Routing Context Report

The `msucount -x <routing context>` report for an IPSPG card displays the equivalent of the `msucount -l` report for all signaling links on the card that are members of the linkset containing the specified routing context.

This example shows a routing context report:

```
pass:loc=1303:cmd="msucount -x 74565"
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report
```

```
-----
Routing Context Measurements
-----
```

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A	0	3	72	0	0	0
	0	3	72	0	0	0

MSUCOUNT: command complete

;

IP Connection Report

The IP connection statistic report for an IPSPG card contains data regarding MSUs (tx/rcv), MSU bytes (tx/rcv), and discarded data (tx/rcv) for a specific socket or an association. The `-a <aname>` report for M3UA links adds the *Replicated M3UA PDU*

sent, Replicated M3UA PDU rcvd, SS7 SNM sent, Discarded rcv due to SS7 SNM not supported, and Discarded rcv due to no SS7 SNM capacity.

The existing *Discarded rcv due to M3UA PDU error* and *Invalid rcontext counts* are also supported.

This example shows an aname report:

```
pass:loc=1303:cmd="msucount -a a1303a"
```

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
MSUCOUNT: MSU Count Report
```

```
-----  
IP Association Measurements  
-----
```

Transmit PDUs		Receive PDUs	
pdus	bytes	pdus	bytes
3	72	0	0

```
SS7 SNM counts  
-----  
sent      rcvd  
-----  
0         0
```

```
Receive Discard Counts  
-----  
reason          count  
-----  
M3UA PDU error      3
```

```
Stored Receive Discard Data  
-----  
01 00 00 00 00 00 00 1c 00 0c 00 08 00 00 00 06  
00 07 00 0c 01 00 02 02 00 00 00 18 00 00 00 00  
  
01 00 00 00 00 00 00 1c 00 0c 00 08 00 00 00 06  
00 07 00 0c 01 00 02 02 00 00 00 18 00 00 00 00  
  
01 00 00 00 00 00 00 1c 00 0c 00 08 00 00 00 06  
00 07 00 0c 01 00 02 02 00 00 00 18 00 00 00 00
```

```

MSUCOUNT: command complete
;

pass:loc=1304:cmd="msucount -a a1304m3ua1"

Command Accepted - Processing

rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0

MSUCOUNT: MSU Count Report

-----
IP Association Measurements
-----

Transmit PDUs                                Receive PDUs
-----
pdu      bytes                                pdu      bytes
-----
58        3380                                5         292

SS7 SNM counts
-----
sent      rcvd
-----
8         7

Receive Discard Counts
-----
reason          count
-----
SS7 SNM not supported  1
SS7 SNM no capacity    1
M3UA PDU error        13
invalid rcontext      5

Stored Receive Discard Data
-----
01 00 01 01 00 00 00 3c 00 06 00 08 00 00 00 01
02 10 00 2b 00 04 04 04 00 05 05 05 05 00 00 9a

01 00 03 01 00 00 00 08 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

01 00 01 01 00 00 00 3c 00 06 00 08 00 00 00 04
02 10 00 2b 00 04 04 04 00 05 05 05 85 02 00 9a

01 00 01 01 00 00 00 3c 00 06 00 08 00 00 00 04
02 10 00 2b 00 04 04 04 00 05 05 05 85 02 00 9a

```

```
01 00 04 01 00 00 00 18 00 0b 00 08 02 00 00 00
00 06 00 08 00 00 00 04 00 00 00 00 00 00 00 00
```

```
01 00 01 01 00 00 00 3c 00 06 00 08 00 00 00 04
02 10 00 2b 00 04 04 04 00 05 05 05 85 02 00 9a
```

```
01 00 01 01 00 00 00 3c 00 06 00 08 00 00 00 04
02 10 00 2b 00 04 04 04 00 05 05 05 85 02 00 9a
```

```
01 00 01 01 00 00 0a fc 00 06 00 08 00 00 00 0a
02 10 0a eb 00 04 32 01 00 04 32 01 0d 02 00 99
```

```
01 00 01 01 00 00 00 08 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
01 00 07 01 00 00 00 70 00 06 00 08 00 00 00 02
01 15 00 08 00 00 00 80 01 02 00 18 00 02 00 03
```

```
MSUCOUNT: command complete
```

```
;
```

Output Specific to High-Speed Link (HSL) cards (SS7HC and ATMHC - non-IP7 GPLs)

Note:

The `-a`, `-x`, `-k`, `-p`, and `-t` options are not supported for HSL cards.

Note:

The option to display a full help report is not supported for HSL cards.

```
pass:loc=1103:cmd="msucount -h"
```

```
tekelecstp 10-01-19 11:50:34 EST EAGLE 41.1.0
```

```
Usage: msucount  [[-l [link]] | [-f]]|
                [-r] [-h]]
```

```
Options:  -l display signaling link report
          -f display full report
          -r resets the specified counts
          -h display command help
          -l link r resets the counts for specified link
```

```
tekelecstp 10-01-19 11:50:34 EST EAGLE 41.1.0
MSUCOUNT command complete
```

Link Reports

The link report contains the statistics of the equipped links (TDM/ATM) on the SS7HC/ATMHC cards collected on a per link basis.

An SS7HC/ATMHC generic link report is reported if the MSUCOUNT command is entered without any parameters. The output contains data regarding MSU bytes (tx/rcv), %bandwidth used (tx/rcv), MSUs (tx/rcv) collected during the last full second per link. Total MSU counts (tx/rcv) per link since the card load time or the last reset are also displayed.

```
pass:loc=1301:cmd="msucount"
```

```
tekelecstp 10-01-19 11:50:34 EST EAGLE 41.1.0
MSUCOUNT: Command In Progress
```

```
;
MSUCOUNT: MSU Count Report
```

SLK	Last Transmit Counts/Total MSUs				Last Receive Counts/			
Total MSUs								
---	-----							

slk	bytes	%bw	msus	total msus	bytes	%bw	msus	total msus
total msus								
---	-----	-----	-----	-----	-----	-----	-----	-----

A	51200	20%	700	1234567890	26700	10%	400	1234567890
B	256000	100%	5000	1234567890	256000	100%	5000	1234567890
---	-----	-----	-----	-----	-----	-----	-----	-----

TOTAL	307200		5700	2469135780	282700		5400	2469135780

```
tekelecstp 10-01-19 11:50:34 EST EAGLE 41.1.0
MSUCOUNT: command complete
```

```
;
```

The full link report includes the generic information, the maximum amount seen for each MSU, and the percent bandwidth tracked for the full one second period since the card load time or the last reset.

```
pass:loc=1301:comd="msucount -f"
```

```
tekelecstp 10-01-19 11:50:34 EST EAGLE 41.1.0
MSUCOUNT: Command In Progress
```

```
;
```

MSUCOUNT: MSU Count Report

SLK	Last Second/MAX Transmit Counts					Last Second/MAX Receive Counts				
---	-----					-----				
slk	bytes	%bw	%max	msus	mmax	bytes	%bw	%max	msus	
mmax	---	-----	-----	-----	-----	-----	-----	-----	-----	
A	51200	20%	40%	700	1385	26700	10%	20%	400	
730										
B	256000	100%	100%	5000	5000	256000	100%	100%	5000	
5000	---	-----	-----	-----	-----	-----	-----	-----	-----	
TOTAL	307200			5700		282700			5400	

tekelecstp 10-01-19 11:50:34 EST EAGLE 41.1.0
MSUCOUNT: command complete

;

If the `-l slk` option is specified, then the statistics for the specified link is shown (if the link is equipped).

On cards running SS7HC GPL, in addition to the information shown in the Generic and Full reports, data is collected for the error counts (MSUs and SUs) and retransmits pegged during the last full second. Averages for the MSUs, percent bandwidth, bytes transmitted and received for the last rolling sampling period, and the maximum of these averages since the card was loaded or the data was reset is also displayed.

pass:loc=1301:cmd="msucount -l a"

tekelecstp 10-01-19 11:50:34 EST EAGLE 41.1.0
MSUCOUNT: Command In Progress

;

MSUCOUNT: MSU Count Report

	Last	Avg	Avg Max	Max	Total
	-----	-----	-----	-----	-----
TX Bandwidth:	98%	61%	80%	98%	
RX Bandwidth:	98%	61%	80%	98%	
Bytes TXed:	7840	4900	6370	7840	1248056004
Bytes RXed:	7840	4900	6370	7840	1024579036
MSUs TXed:	160	100	130	160	45937854
MSUs RXed:	160	100	130	160	41495837
Errored SUs:	1			10	103
Errored MSUs:	4			4	21
Retransmits:	10			23	353
Forced PCR:	20			50	189

```
tekelecstp 10-01-19 11:50:34 EST EAGLE 41.1.0
MSUCOUNT: command complete
```

```
;
```

On cards running ATMHC GPL, the `-l_slk` option, in addition to the information shown in the Generic and Full reports, data is collected for the different types of error counts during the last full second. Averages for the MSUs, percent bandwidth used, bytes transmitted and received for the last rolling sampling period and the maximum of these averages since the card was loaded or the data was reset is displayed. The total number of MSUs and bytes and errors since the card was loaded or the data was reset is also displayed.

```
pass:loc=1301:cmd="msucount -l a"
```

```
tekelecstp 10-01-19 11:50:34 EST EAGLE 41.1.0
MSUCOUNT: Command In Progress
```

```
;
```

```
MSUCOUNT: MSU Count Report
```

	Last	Avg	Avg Max	Max	Total
	-----	-----	-----	-----	

TX Bandwidth:	98%	61%	80%	98%	
RX Bandwidth:	98%	61%	80%	98%	
Bytes TXed:	7840	4900	6370	7840	
1248056004					
Bytes RXed:	7840	4900	6370	7840	
1024579036					
MSUs TXed:	160	100	130	160	
45937854					
MSUs RXed:	160	100	130	160	
41495837					
Errored SUs:	1				
10 103					
Errored MSUs:	4				
4 21					
Retransmits:	10				
23 353					
Forced PCR:	20				
50 189					

```
tekelecstp 10-01-19 11:50:34 EST EAGLE 41.1.0
MSUCOUNT: command complete
```

```
;
```


6.1.9 msuroute

This command is used to provide a list of all routing keys currently configured on an SS7IPGW/IPGWI card that could be used to route a particular MSU. With 3 types of routing keys (fully specified, partial and default) the complexity associated with figuring out how a particular MSU would be routed at any point in time is not trivial. This command provides output to help determine how MSUs will be routed based on current conditions.

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `msuroute` command option `-k` has the parameter `rtkey`. The full routing key must be specified for the MSU for which the summary will be displayed, as in the command `msuroute -k 5-5-5:5:6-6-6:1100`. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

`-h`

This option is used to provide help information for the command.

`-k rtkey`

This option is mandatory in the command to specify the full routing key for the MSU for which the summary will be displayed. The routing key is specified as a single parameter with up to five colon-separated fields. The subsystem is not specified when SI is not equal to 3.

The `-p point code type` modifier is used to identify the format of the routing key that follows the `-k` option in the command.

The following are valid formats for the routing key that follows the `-k` option in the command:

- `n-c-m:s:n`—For DPC, SI, SSN type routing keys. The network, cluster and member (n-c-m) are in the range 0-255. The service indicator (s) is 3 or *sccp*. The subsystem (n) is in the range 0-255.
- `n-c-m:s`—For DPC, SI, type routing keys. The network, cluster and member (n-c-m) are in the range 0-255. The service indicator (s) is in the range 0-2, 4, or 6-15. There is no subsystem.
- `n-c-m:s:no-co-mo:cs:ce`—For DPC, SI, CIC type routing keys. The DPC network, cluster and member (n-c-m) are in the range 0-255. The service indicator (s) is 5 or *isup*. There is no subsystem. The OPC network, cluster and member (no-co-mo) are in the range 0-255. The starting circuit identification code (cs) and ending circuit identification code (ce) are in the range 0 to 16363.

`-p point code type`

This option modifier is used to identify the point code type (ANSI, ITU international, ITU national, 24-bit ITU national, 16-bit ITU national, ITU international spare, ITU national spare) in the routing key that follows the `-k` option in the command.

Range:

ansi, itui, itun, itun24, itun16, ituis, ituns

Default:

ansi

`-x routing context`

This option modifier is used to display the routing key report using routing context.

Example

```
msuroute -h
msuroute -p ansi -k 5-5-5:5:6-6-6:1100

msuroute -p ansi -k 5-5-5:5:6-6-6:1100:1100

msuroute -k 5-5-5:5:6-6-6:1100

msuroute -k 5-5-5:5:6-6-6:1100:1100

msuroute -p ansi -k 5-5-5:8

msuroute -p itun -k 345:5:678:100:200

msuroute -p itun -k 345-gr:5:678-gr:100:200

msuroute -p itun24 -k 10-200-10:5:10-200-1:1:100

msuroute -p itun16 -k 1-2-1:5:1-2-1:1:100
```

Dependencies

The `-k` option must be specified in the command, and must specify a full routing key.

This command is not supported for IPLIM/IPLIMI cards.

Notes

The `msuroute` command is executed through the pass command.

The `-ppoint_code_type` modifier option can be used with the `-k` option to specify the format of the routing key that follows the `-k` option in the command.

Output

The output for each `msuroute` command consists of a list of all of the routing keys that exist on the IPGWx card that could be used to route the MSU. The list of routing keys is presented in the hierarchical search order in which the keys would be used. The list of routing keys indicates keys that have IP connections available for traffic, and indicates which routing key would currently be used to route the MSU (marked with ***).

For the routing key that is selected to route the MSU, the list of IP connections associated with the key is also displayed.

 **Note:**

Most of the following output examples show command entries for ANSI MSUs. Because, other than echoing the input command back to the screen, there is nothing in the output that contains specific fields from any configured keys. The output would not be different if the user entered ITUI MSUs instead of ANSI MSUs.

Either brief or full help reports can be displayed. A full help report is generated by adding the `-h full` option to the command line.

This example shows a brief help report:

```
pass:loc=1105:cmd="msuroute -h"
```

```
Command Accepted - Processing
```

```
Usage: msuroute [ [-x rc] | [-k [rtkey] [-p pctype] ] ]
        [-h [full]]
```

```
Options: -x routing key report using routing context
        -k routing key report using MTP3 parameters
           rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
        -p pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUN16, ITUIS, ITUNS)
        -h display command help (brief or full)
```

```
;
```

This example shows a full help report:

```
pass:loc=1305:cmd="msuroute -h full"
```

```
0          1          2          3          4          5          6          7
1234567890123456789012345678901234567890123456789012345678901234567
8
```

```
Usage: msuroute [ [-x rc] | [-k [rtkey] [-p pctype] ] ]
        [-h [full]]
```

```
Options: -x routing key report using routing context
        -k routing key report using MTP3 parameters
           rtkey :: dpc:si:opc:cics:cice | dpc:si:ssn | dpc:si
        -p pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUN16, ITUIS, ITUNS)
        -h display command help (brief or full)
```

-k option details:

Use the -p option along with -k to specify the SS7 network domain and point code format for the network. The SS7IPGW default pctype is ANSI. The IPGWI default pctype is ITUI.

Network	PC Format	Notes
ANSI	N-C-M	
ITUN	N	Non-Spare ITU National, no group code
ITUN	N-GC	Non-Spare ITU National with group code
ITUI	Z-A-I	Non-Spare ITU International
ITUN24	N-C-M	Non-Spare ITU National, 24-bits
ITUN16	U-S-M	Non-Spare ITU National, 16-bits
ITUNS	N	Spare ITU National, no group code
ITUNS	N-GC	Spare ITU National with group code
ITUIS	Z-A-I	Spare ITU International

SS7 Traffic Partition

RTKEY Parameter Example

```

      SSCP SSN 5 to DPC 1-1-1          -k 1-1-1:3:5
      ISUP CIC 1 to 1-1-1 from 2-2-2   -k 1-1-1:5:2-2-2:1
      TUP CIC 1 to 1-1-1 from 2-2-2   -k 1-1-1:4:2-2-2:1
      QBICC CIC 1 to 1-1-1 from 2-2-2  -k 1-1-1:13:2-2-2:1
      ISUP CIC 0-5 to 1-1-1 from 2-2-2 -k 1-1-1:5:2-2-2:0:5
      TUP CIC 0-5 to 1-1-1 from 2-2-2  -k 1-1-1:4:2-2-2:0:5
      QBICC CIC 0-5 to 1-1-1 from 2-2-2 -k 1-1-1:13:2-2-2:0:5
;
eagle10212 06-06-01 12:56:46 EST  EAGLE 35.0.0
MSURROUTE command complete

```

This example shows output for an ANSI CIC-based MSU, showing at least 1 routing key of every key type in the search hierarchy configured on the 1105 card. Only key types that are configured on the card will be listed in the display.

```
pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:5:6-6-6:1100"
```

Command Accepted - Processing

```

      rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
      pass:loc=1105:cmd="msuroute -x ANSI -k 5-5-5:5:6-6-6:1100"
      Command entered at terminal #1.
;

      rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
      PASS: Command sent to card
;

      rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
      MSURROUTE command in progress
;

      rlghncxa03w 04-04-29 11:31:09 EST  EAGLE5 31.6.0

TABLE   KEYTYPE                               #ConnCfgd  #ConnAvail  RTKEY
USED
DYN     FULL                                  1           0           no
DYN     PARTIAL: IGNORE-CIC                  2           0           no
DYN     PARTIAL: IGNORE-CIC+OPC              1           0           no
DYN     PARTIAL: DPC-SI ONLY                  3           3           yes
DYN     PARTIAL: DPC ONLY                     2           2           no
DYN     PARTIAL: SI ONLY                     4           0           no
DYN     DEFAULT                              4           4           no
STATIC  FULL                                  12          4           no
STATIC  PARTIAL: IGNORE-CIC                  3           0           no
STATIC  PARTIAL: IGNORE-CIC+OPC              2           0           no
STATIC  PARTIAL: DPC-SI ONLY                  3           2           no
STATIC  PARTIAL: DPC ONLY                     2           2           no
STATIC  PARTIAL: SI ONLY                     1           0           no
STATIC  DEFAULT                              2           0           no

IP Connections Associated with the RTKEY USED
Name                                     Avail?

```

```
Vox1          yes
Mgc2          yes
Mgc24        yes
```

```
MSURROUTE command complete
```

This example shows output for an ANSI SCCP MSU. Several key types in the search hierarchy are not configured on the 1105 card, and therefore are not part of the output (for example, static full key or static partial SI only). Only key types that are configured on the card will be listed in the display.

```
pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:3:34"
```

```
Command Accepted - Processing
```

```
rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:3:34"
Command entered at terminal #1.
```

```
rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
PASS: Command sent to card
```

```
rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
MSURROUTE command in progress
```

```
rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
TABLE  KEYTYPE                #ConnCfgd  #ConnAvail  RTKEY USED
DYN     PARTIAL: DPC-SI ONLY    3           2            yes
DYN     PARTIAL: DPC ONLY       2           2            no
DYN     DEFAULT                 4           4            no
STATIC  PARTIAL: DPC-SI ONLY    3           2            no
STATIC  PARTIAL: DPC ONLY       2           2            no
STATIC  DEFAULT                 2           0            no
```

```
IP Connections Associated with the RTKEY USED
```

```
Name                Avail?
Scpsandiego         no
scpdenver           yes
scpkansascity       yes
```

```
MSURROUTE command complete
```

This example shows output for an ANSI MSU with SI=8:

```
pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:8"
```

```
Command Accepted - Processing
```

```

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:8"
Command entered at terminal #1.
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
PASS: Command sent to card
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
MSURROUTE command in progress
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0

TABLE      KEYTYPE                #ConnCfgd  #ConnAvail  RTKEY
USED
DYN        FULL                    7           0           no
DYN        PARTIAL: DPC ONLY        2           2           yes
DYN        PARTIAL: SI ONLY        2           0           no
DYN        DEFAULT                 4           4           no
STATIC     FULL                    11          0           no
STATIC     PARTIAL: DPC ONLY        2           2           no
STATIC     PARTIAL: SI ONLY        1           0           no
STATIC     DEFAULT                 2           0           no

IP Connections Associated with the RTKEY USED
Name                    Avail?
SI8sock1                yes
SI8sock2                yes

MSURROUTE command complete
;

```

These examples show output for an ITUN and an ITUN24 MSU with SI=5. The output format is the same for all four commands.

The ITUDUPPC feature is OFF (default):

```
pass:loc=1105:cmd="msuroute -p itun -k 345:5:678:100:200"
```

The ITUDUPPC feature is ON (the 2-letter group code must be specified with the DPC and OPC)

```
pass:loc=1105:cmd="msuroute -p itun -k 345-gr:5:678-gr:100:200"
```

An ITUN24 MSU with SI=5:

```
pass:loc=1105:cmd="msuroute -p itun24 -k
10-200-10:5:10-200-1:1:100"
```

An ITU-I Spare MSU with SI=5:

```
msuroute -p ituis -k 3-11-1:5:4-11-1:5:5
```

Command Accepted - Processing

```

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
pass:loc=1105:cmd="msuroute -p ITUN -k 345:678:100:200"
Command entered at terminal #1.
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
PASS: Command sent to card
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
MSUROUTE command in progress
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
TABLE  KEYTYPE                #ConnCfgd  #ConnAvail  RTKEY USED
DYN     FULL                    1           0           no
DYN     PARTIAL: IGNORE CIC     2           0           no
DYN     PARTIAL: IGNORE CIC+OPC 1           0           no
DYN     PARTIAL: DPC-SI ONLY    3           3           yes
DYN     PARTIAL: DPC ONLY       2           2           no
DYN     PARTIAL: SI ONLY        4           0           no
DYN     DEFAULT                 4           4           no
STATIC  FULL                    12          4           no
STATIC  PARTIAL: IGNORE-CIC     3           0           no
STATIC  PARTIAL: IGNORE-CIC+OPC 2           0           no
STATIC  PARTIAL: DPC-SI ONLY    3           2           no
STATIC  PARTIAL: DPC ONLY       2           2           no
STATIC  PARTIAL: SI ONLY        1           0           no
STATIC  DEFAULT                 2           0           no

IP Connections Associated with the RTKEY USED
Name                               Avail?
Vox1                               yes
Mgc2                               yes
Mgc24                              yes

MSUROUTE command complete
;

```

6.1.10 msutrace

This command provides filter and trace capability for MSUs passing through the IP7 GPLs. This command provides a view of MSU data as it exists in the PSTN network and its corresponding format as it exists in the IP network.

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `msutrace` command option `-a` has the parameter action. The action that the command is to take can be specified, as in the command `msutrace -a acttrace`. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

`-a action`

Action option.

Range:

acttrace

Activate (turn on) MSU tracing

clrtrace

Clear all data from trace buffers

dacttrace

Deactivate (turn off) MSU tracing

chgfilter

Change filter used to indicate which MSUs are placed in the trace buffers

-g get_option

Get option.

Range:

config

Displays the current command settings: trace ON/OFF status, filter settings, and trace buffers used/available

trace

Displays contents of trace buffers containing captured MSU data

-h help

This option displays help information about the command.

Range:

full

If *full* is specified, the detailed version of the help information is displayed.

If *full* is not specified (just -h), the simple version of the help information is displayed.

-m mode

This option specifies which MSUs are captured.

Range:

normerr

trace only MSUs with normalization errors

all

trace all MSUs regardless of MSU contents

-p point_code_type

This option specifies which type of point code is contained in the filter key, when the key contains a DPC or OPC.

Range:

ansi, itui, itun, itun24, itun16, ituis, ituns

Default:

ansi

-k filter_key

The `-k`, `-c`, and `-p` options are used to specify the filter key used to determine which MSUs will have data placed in the trace buffers.

Range:

`-k filter key [-p] [-c pcType]`

The syntax for the filter key portion of the `-k filter key` option is specified as a single string parameter with up to five colon-separated fields. The filter key can contain one or more of the following fields:

- *n-c-m*—ANSI DPC in the format *network-cluster-member*
- *no-co-mo*—ANSI OPC in the format *network-cluster-member*
- *z-a-i*—ITU-I DPC in the format *zone-area-id*
- *zo-ao-io*—ITU-I OPC in the format *zone-area-id*
- *un-sna-mna---*16-bit ITU-N DPC in the format *unit number-sub number area-main number area*
- *msa-ssa-sp*—24-bit ITU-N DPC in the format *main signaling area-sub signaling area-signaling point*
- *nnnnn*—ITU-N DPC
- *nnnnn-gc*—ITU-N DPC with Group Code when the Duplicate Point Code feature is ON
- *no*—ITU-N OPC
- *no-gc*—ITU-N OPC with Group Code when the Duplicate Point Code feature is ON
- *s*—SI (Service Indicator)
- *cs*—CIC Start value (start of the CIC range)
- *ce*—CIC End value (end of the CIC range)
- *n*—SSN (Subsystem Number)

These examples show valid formats:

- *n-c-m:s:n*—For DPC, SI, SSN type routing keys. The network, cluster and member (*n-c-m*) are in the range 0-255. The service indicator (*s*) is 3 or *sccp*. The subsystem (*n*) is in the range 0-255.
- *n-c-m:s*—For DPC, SI type routing keys. The network, cluster and member (*n-c-m*) are in the range 0-255. The service indicator (*s*) is in the range 0-2, 4, or 6-15. There is no subsystem number. As a default, counts for all routing keys within the option combination are displayed.
- *n-c-m:s:no-co-mo:cs:ce*—For DPC, SI, CIC type routing keys. The DPC network, cluster and member (*n-c-m*) are in the range 0-255. The service indicator (*s*) is 5 or *isup*. There is no subsystem. The OPC network, cluster and member (*no-co-mo*) are in the range 0-255. The starting circuit identification code (*cs*) and ending circuit identification code (*ce*) are in the range 0 - 16363.
- *z-a-i*—For DPCN and DPCI routing keys, the zone, area and ID (*z-a-i*) are in the range of 000-007 (zone and ID) and 000-255 (area).
- *msa-ssa-sp*—For 24-bit DPCN routing keys, the main signaling area, sub signaling area and signaling point (*msa-ssa-sp*) are in the range of 000-255.
- *un-sna-mna---*—For 16-bit DPCN routing keys, the unit number, sub number area and main number area (*un-sna-mna*) are in the range of 0-127, 0-15, 0-31 respectively.

-t

This option specifies the routing key type (IPGWx only).

-x rc

This option generates a routing key report using routing context.

Example

```
pass:loc=1105:cmd="msutrace -h"
pass:loc=1105:cmd="msutrace -h full"

pass:loc=1105:cmd="msutrace -g config"
pass:loc=1315:cmd="msutrace -g trace"
pass:loc=1105:cmd="msutrace -a clrtrace"
pass:loc=1105:cmd="msutrace -a acttrace"

pass:loc=1105:cmd="msutrace -a chgfilter -p ansi -k
3-3-3:5:4-4-4:10:1000"

pass:loc=1105:cmd="msutrace -a chgfilter -p itui -t partial -k
1-3-3:5:2-4-4"

pass:loc=1105:cmd="msutrace -a chgfilter -p itun -t partial -k
1536:5"

pass:loc=1105:cmd="msutrace -a chgfilter -m normerr"
pass:loc=1105:cmd="msutrace -a chgfilter -m all"

pass:loc=1105:cmd="msutrace -a chgfilter -p ansi -k
1-1-1:5:2-2-2:10:1000"
```

Dependencies

If no options are specified, the simple version of the help information is displayed.

The point code type defaults to ANSI when the `-p` option is not specified.

The `-p` option is allowed only on key types that contain a DPC or OPC.

Notes

The `msutrace` command is executed through the `pass` command.

The `mustrace` command captures the data portion of the PSTN packet, starting at the SIO bytes.

The `msutrace` command captures the entire M3UA or SUA packet. This includes the M3UA or SUA header and additional data stored inside system buffer chain elements. The `msutrace` command currently does not support the trace and capture of M3UA / SUA SSNM (Class 2) messages.

The `msutrace` command captures data in trace buffers. If the set of trace buffers becomes full with captured MSU data after MSU tracing is activated, no more data capturing will take place. The `-aclrtrace` option must be specified to reset (clear) the content of the trace buffers. After the trace buffers are empty again, `msutrace` will restart capturing qualified MSUs.

If MSU tracing is activated with the `-a acttrace` option before a properly formatted filter key is entered, the `msutrace` command will not capture any data due to lack of a proper filter. When the `-a chgfilter` option is specified to enter a properly formatted filter, the `msutrace` command will start capturing qualified MSUs.

Output

Note:

The `msutrace pass` command exists on the IPLIMI cards as a debug-only pass command. All command syntax and output are identical to the `SS7IPGW` and `IPGWI` commands described in this section.

Both brief and full versions of IPGW reports can be requested. A full report is requested by including the `-f` in the command line.

This example shows a brief help report:

```
pass:loc=1305:cmd="msutrace -h"
```

```
Usage: msutrace [-a action_cmd] [-g get_cmd]
           [ [-x rc] | [-k [rtkey] [-p pctype] [-t keytype]] ]
           [-m mode] [-h [full]]

Options:
  -a  action_cmd: an Action Command
  -g  get_cmd: a Get Command
  -x  routing key report using routing context
  -k  routing key report using MTP3 parameters
      rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
  -p  pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUN16, ITUIS, ITUNS)
      routing key type
  -t  routing key type
      keytype :: (<full>, partial, default)
  -m  mode: mode for qualifying MSUs captured=[normerr | all]
  -h  displays this message (brief or full)

get_cmd:      [config | trace]
  config      config
  trace       trace

action_cmd:   [acttrace | chgfilter | clrtrace | dacttrace]
  acttrace    acttrace
  chgfilter   chgfilter [<fltrkey>] | [-m mode] (at least 1 required)
              (valid fltrkey should be present either before
              specifying mode or in the same command)
  clrtrace    clrtrace
  dacttrace   dacttrace

<fltrkey>:   [ [-x rc] | [-k [rtkey] [-p pctype] [-t keytype]] ]
              (see 'msutrace -h full' for complete description)
```

```
MSUTRACE command complete
```

```
;
```

This example shows a full help report:

```
pass:loc=1305:cmd="msutrace -h full"
```

```
Usage: msutrace [-a action_cmd] [-g get_cmd]
          [ [-x rc] | [-k [rtkey] [-p pctype] [-t keytype]] ]
          [-m mode] [-h [full]]

Options:
  -a  action_cmd: an Action Command
  -g  get_cmd: a Get Command
  -x  routing key report using routing context
  -k  routing key report using MTP3 parameters
      rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
  -p  pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUN16, ITUIS,
ITUNS)
  -t  routing key type
      keytype :: (<full>, partial, default)
  -m  mode: mode for qualifying MSUs captured = [normerr | all]
  -h  displays this message (brief or full)

get_cmd:      [config | trace]
  config      Display the current MSUTRACE settings:
              trace On/Off status, filter settings, and
              trace buffers used/available.
              ex: msutrace -g config
  trace       Display content of trace buffers containing
captured      MSU data
              ex: msutrace -g trace

action_cmd:   [acttrace | chgfilter | clrtrace | dacttrace ]
  acttrace    Activate (turn-on) MSU-tracing.
              ex: msutrace -a acttrace
  chgfilter   chgfilter [<fltrkey>] | [-m mode] (at least 1
required)
              (valid fltrkey should be present either
before
              specifying mode or in the same command)
              Change filter used to qualify which MSUs are
placed in
              trace buffers:
              Flow of command should be
              Either entering filter key before specifying mode :
              ex: To trace MSUs based on MSU content:
                  msutrace -a chgfilter <fltrkey>
              ex: To only trace MSUs with Normalization errors:
                  msutrace -a chgfilter -m normerr
              ex: To trace all MSUs regardless of error
conditions:
              msutrace -a chgfilter -m all
              Or entering filter key along with mode:
              ex: To trace MSUs based on MSU content
                  with Normalization errors:
```

```

msutrace -a chgfilter <fltrkey> -m normerr
ex: To trace MSUs based on MSU content
    regardless of error conditions:
msutrace -a chgfilter <fltrkey> -m all

```

```

clrtrace    Clear all data from trace buffers.
ex: msutrace -a clrtrace

```

```

dacttrace  Deactivate (turn-off) MSU-tracing.
ex: msutrace -a dacttrace

```

-k option details:

Use the -p option along with -k to specify the SS7 network domain and point code format for the network. The SS7IPGW default pctype is ANSI. The IPGWI and IPLIMI default pctype is ITUI.

For IPSPG both ANSI and ITU network point code formats are eligible for trace when the default filter or an SI only filter is specified. The IPSPG default pctype is ANSI when the filter contains OPC or DPC and the -p option is not specified.

Network	PC Format	Notes
ANSI	N-C-M	
ITUN	N	Non-Spare ITU National, no group code
ITUN	N-GC	Non-Spare ITU National with group code
ITUI	Z-A-I	Non-Spare ITU International
ITUN24	N-C-M	Non-Spare ITU National, 24-bits
ITUN16	U-S-M	Non-Spare ITU National, 16-bits
ITUNS	N	Spare ITU National, no group code
ITUNS	N-GC	Spare ITU National with group code
ITUIS	Z-A-I	Spare ITU International

Use the -t option along with -k to specify certain MTP3 and user part MSU fields as wildcards for the routing key or LS.

SS7 Traffic Partition	RTKEY/MTP3	Parameter	Example
Any User Part to DPC 1-1-1	-k 1-1-1	-t partial	
SCCP to DPC 1-1-1	-k 1-1-1:3	-t partial	
ISUP to DPC 1-1-1	-k 1-1-1:5	-t partial	
TUP to DPC 1-1-1	-k 1-1-1:4	-t partial	
QBICC to DPC 1-1-1	-k 1-1-1:13	-t partial	
SI [0-2,6-12,14,15] to DPC 1-1-1	-k 1-1-1:SI		
SCCP SSN 5 to DPC 1-1-1	-k 1-1-1:3:5		
ISUP to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:5:2-2-2	-t partial	
TUP to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:4:2-2-2	-t partial	
QBICC to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:13:2-2-2	-t partial	
ISUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:1		
TUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:1		
QBICC CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:1		
ISUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:0:5		
TUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:0:5		

```

        QBICC CIC 0-5 to 1-1-1 from 2-2-2 -k 1-1-1:13:2-2-2:0:5
        Default Routing Key                -k                    -t
default
        Any User Part to DPC=LS APC        -x LS RCONTEXT        (IPSG
Only)

;

tekelecstp 10-03-06 19:41:33 EST  EAGLE5 42.0.9

MSUTRACE command complete

;

```

This example shows the current settings of the `msutrace` command options: trace ON/OFF status, filter settings, and trace buffers that are used and available:

```
pass:loc=1105:cmd="msutrace -g config"
```

```

Command Accepted - Processing
  eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
  pass:loc=1105:cmd="msutrace -g config"
  Command entered at terminal #1.
;
  eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
  PASS: Command sent to card
;
  eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
  MSUTRACE command in progress
;
  eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
  MSUTRACE configurations

Trace = On

Trace buffers: 2 of 3 contain captured MSU data

MSUTRACE: filter settings
DPCA      SI SSN OPCA      CICS      CICE      MODE
055-055-055 13 *** 016-006-006 1234567890 1234567890 normerr
;
  eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
  MSUTRACE command complete
;

```

This example shows the current settings of the `msutrace` command options: trace ON/OFF status, filter settings, and trace buffers that are used and available, when the filter key specifies an ITU-I spare point code:

```

pass:loc=1105:cmd="msutrace -g config"

Command Accepted - Processing
  eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
  pass:loc=1105:cmd="msutrace -g config"
  Command entered at terminal #1.
;
  eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
  PASS: Command sent to card
;
  eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
  MSUTRACE command in progress
;
  eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
  MSUTRACE configurations

Trace = On

Trace buffers: 3 of 3 USED

MSUTRACE: filter settings
  DPCI      SI SSN      OPCI      CICS      CICE      MODE
s-2-011-1   2  ***      ****      ****      ****      all
;
  eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
  MSUTRACE command complete
;

```

This example shows the current settings of the `msutrace` command when an IPSP card is used:

```

pass:loc=1304:cmd="msutrace -g config"

  rlgncxa03w 08-01-29 11:31:09 EST  EAGLE 38.0.0

MSUTRACE: Configurations

MSU Tracing is off

Trace buffers: 0 of 3 USED

MSUTRACE: filter settings

  DPCA      SI SSN      OPCA      CICS      CICE      MODE
004-004-004 ** ***      ****      ****      ****      all
;

```

This example shows a trace with a DPC-only filter key specified via the `-x <rcontext>option:`

```

pass:loc=1304:cmd="msutrace -a acttrace"

    rlgncxa03w 08-01-29 11:31:09 EST  EAGLE 38.0.0

    MSUTRACE command complete
;

```

This example shows the captured trace buffer for an IPSG card:

```

pass:loc=1304:cmd="msutrace -g trace"

    rlgncxa03w 08-01-29 11:31:09 EST  EAGLE 38.0.0

    -----
    BUFFER:  0
    -----
    Filter used:

            DPCA          SI SSN      OPCA          CICS          CICE          MODE
            004-004-004  ** ***  ****          ****          ****          all

    Timestamp:  08-01-21  16:06:17.420
    Direction:  Tx
    Error Code:  0

    PSTN DATA
    -----
    85 04 04 04 05 05 05 00 00 00 00 6e 01 00 f9
e3  .....n....
    33 c7 00 00 1d 00 00 00 00 10 00 12 00 14 00 16
3.....
    00 18 00 1a 00 1c 00 1e 00          .....

    IP DATA
    -----
    01 00 01 01 00 00 00 44 00 06 00 08 00 00 00
04  .....D.....
    02 10 00 31 00 05 05 05 00 04 04 04 05 02 00
00  ...1.....
    00 00 00 6e 01 00 f9 e3 33 c7 00 00 1d 00 00
00  ...n....3.....
    00 10 00 12 00 14 00 16 00 18 00 1a 00 1c 00
1e  .....
    00 00 00 00          ....

    MSUTRACE command complete
;

```

This example retrieves contents of the trace buffers. The example contains 1 stored trace buffer for a transmitted M3UA PDU.


```

pass:loc=1303:cmd="msutrace -g trace"

Command Accepted - Processing
  eagle10202 01-01-19 10:20:56 GMT  EAGLE5 31.6.0
  pass:loc=1303:cmd="msutrace -g trace"
  Command entered at terminal #4.
;

  eagle10202 01-01-19 10:20:56 GMT  EAGLE5 31.6.0
  PASS: Command sent to card
;

  eagle10202 01-01-19 10:20:56 GMT  EAGLE5 31.6.0

MSUTRACE command in progress
;

  eagle10202 01-01-19 10:20:56 GMT  EAGLE5 31.6.0

-----
BUFFER:  0
-----
Filter used:

DPCA      SI SSN OPCA      CICS      CICE      MODE
001-001-001 5  *** 001-001-002 0          100      all

Timestamp: 02-06-07 08:40:29.435
Direction: Tx
Error Code: 0

PSTN DATA
-----
85 01 01 01 02 01 01 b2 00 00 01 00 00 00 03 .....
05 00 02 80 80 0d 00 00 21 43 65 87 09 21 43 65 .....!Ce..!Ce
87 09 01 .....

IP DATA
-----
01 00 01 01 00 00 00 3c 02 00 00 08 00 00 00 01 .....<.....
02 10 00 2b 00 01 01 02 00 01 01 01 05 02 00 b2 ...+.....
00 00 01 00 00 00 00 03 05 00 02 80 80 0d 00 00 .....
21 43 65 87 09 21 43 65 87 09 01 00 !Ce..!Ce....

MSUTRACE command complete
;

```

This example retrieves contents of the trace buffers with ITU-I spare point codes. The example contains 3 stored trace buffers.

```
pass:loc=1317:cmd="msutrace -g trace"
```

```
Command Accepted - Processing
```

```
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
```

```
pass:loc=1317:cmd="msutrace -g trace"
```

```
Command entered at terminal #4.
```

```
;
```

```
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
```

```
PASS: Command sent to card
```

```
;
```

```
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
```

```
MSUTRACE command in progress
```

```
;
```

```
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
```

```
-----  
BUFFER: 0  
-----
```

```
Filter used:
```

DPCI	SI	SSN	OPCI	CICS	CICE	MODE
s-2-011-1	2	***	****	****	****	all

```
Timestamp: 05-01-26 10:33:14.330
```

```
Direction: Tx
```

```
Error Code: 0
```

```
PSTN DATA
```

```
-----  
02 59 50 16 a2 80 03 83 ce 46 0a 00 00 00 .YP.....F....
```

```
IP DATA
```

```
-----  
54 41 4c 49 6d 74 70 33 0e 00 02 59 50 16 a2 80  
TALImtp3...YP...  
03 83 ce 46 0a 00 00 00 ...F....
```

```
-----  
BUFFER: 1  
-----
```

```
Filter used:
```

DPCI	SI	SSN	OPCI	CICS	CICE	MODE
s-2-011-1	2	***	****	****	****	all

```
Timestamp: 05-01-26 10:33:14.335
```

```
Direction: Tx
```

```
Error Code: 0
```

```

PSTN DATA
-----
02 59 50 16 a2 80 84 04 c8 46 0a 00 00 00      .YP.....F....

IP DATA
-----
54 41 4c 49 6d 74 70 33 0e 00 02 59 50 16 a2 80  TALImtp3...YP...
84 04 c8 46 0a 00 00 00                          ...F....

-----
BUFFER: 2
-----
Filter used:

      DPCI      SI SSN      OPCI      CICS      CICE      MODE
s-2-011-1      2 ***      ****      ****      ****      all

Timestamp: 05-01-26 10:33:14.340
Direction: Tx
Error Code: 0

PSTN DATA
-----
02 59 50 16 f2 80 01 81 c1 46 0f 00 00 00      .YP.....F....

IP DATA
-----
54 41 4c 49 6d 74 70 33 0e 00 02 59 50 16 f2 80  TALImtp3...YP...
01 81 c1 46 0f 00 00 00                          ...F....

MSUTRACE command complete

```

;

This example clears the contents of the trace buffers:

```
pass:loc=1105:cmd="msutrace -a clrtrace"
```

Command Accepted - Processing

```

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
pass:loc=1105:cmd="msutrace -a clrtrace"
Command entered at terminal #1.
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
PASS: Command sent to card
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command in progress
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0

```

```

    MSUTRACE command completed
;

```

This example activates MSU tracing:

```
pass:loc=1105:cmd="msutrace -a acttrace"
```

Command Accepted - Processing

```

    eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="msutrace -a acttrace"
    Command entered at terminal #1.
;
    eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
    MSUTRACE command in progress
;
    eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
    MSUTRACE command completed
;

```

This example deactivates MSU tracing:

```
pass:loc=1105:cmd="msutrace -a dacttrace"
```

Command Accepted - Processing

```

    eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="msutrace -a dacttrace"
    Command entered at terminal #1.
;
    eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
    MSUTRACE command in progress
;
    4.0.0
    eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
    MSUTRACE command completed
;

```

Examples for Entering a Filter Key

The output shown at the end of these command examples is the same for each example, except for the echo of the entered command.

Command with the `-a chgfilter` option to insert a fully specified ANSI PC CIC filter key.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 3-3-3 (ANSI)

- SI = 5
- OPC = 4-4-4 (ANSI)
- CIC = [10..1000]

```
pass:loc=1105:cmd="msutrace -a chgfilter -p ansi -k  
3-3-3:5:4-4-4:10:1000"
```

Command with the `-a chgfilter` option to insert a fully specified ANSI SCCP filter.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 3-3-3 (ANSI)
- SI = 3
- SSN = 230

```
pass:loc=1105:cmd="msutrace -a chgfilter -k 3-3-3:3:230"
```

Command with the `-a chgfilter` option to insert a fully specified ANSI DPC SI filter key.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 3-3-3 (ANSI)
- SI = 6

```
pass:loc=1105:cmd="msutrace -a chgfilter -k 3-3-3:6"
```

Command with the `-a chgfilter` option to insert a fully specified ITUN24 PC CIC filter key.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 13-103-3 (ITUN24)
- SI = 5
- OPC = 14-104-4 (ITUN24)
- CIC = [10..1000]

```
pass:loc=1105:cmd="msutrace -a chgfilter -p itun24 -k  
13-103-3:5:14-104-4:10:1000"
```

Command with the `-a chgfilter` option to insert a partial ITUI DPC SI OPC filter key.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 1-3-3 (ITUI)
- SI = 5
- OPC = 2-4-4 (ITUI)

```
pass:loc=1105:cmd="msutrace -a chgfilter -p itui -k 1-3-3:5:2-4-4"
```

Command with the `-a chgfilter` option to insert a partial DPC SI ITUN PC filter key, with the Duplicate Point Code feature turned off:

This filter key qualifies for capture MSUs with the following properties:

- DPC = 1536 (ITUN)
- SI = 5

```
pass:loc=1105:cmd="msutrace -a chgfilter -p itun -k 1536:5"
```

Command with the `-a chgfilter` option to insert a partial DPC SI ITUN PC filter key, with the Duplicate Point Code feature turned on:

This filter key qualifies for capture MSUs with the following properties:

- DPC = 1536-bb (ITUN)
- SI = 5

```
pass:loc=1105:cmd="msutrace -a chgfilter -p itun -k 1536-bb:5"
Command with the -a chgfilter option to insert a partial ANSI DPC filter key.
```

This filter key qualifies for capture MSUs with the following properties:

- DPC = 3-3-3 (ANSI)

```
pass:loc=1105:cmd="msutrace -a chgfilter -k 3-3-3"
Command with the -a chgfilter option to insert a partial SI filter key. Because no DPC
or OPC field is specified, point code type does not have to be indicated.
```

This filter key qualifies for capture MSUs with the following properties:

- SI = 5

This filter key qualifies for capture MSUs with the following properties:

- DPC = 13-113-3 (ITUN24)

```
pass:loc=1105:cmd="msutrace -a chgfilter -p itun24 -k 13-113-3"
```

Command Accepted - Processing

```

eagle20003 06-06-01 10:16:57 EST EAGLE5 35.0.0
pass:loc=1105:cmd="msutrace -a chgfilter -p ansi -k
3-3-3:5:4-4-4:10:1000"
Command entered at terminal #1.
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
PASS: Command sent to card
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command in progress
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command completed
;
```

These commands include the -m *mode* option to change the trace capture mode.

Mode to have a 'capture-on-normalization error' property such that only MSUs with normalization processing errors are traced:

```
pass:loc=1105:cmd="msutrace -a chgfilter -m normerr"
```

Set a default filter key and the filter's mode at the same time:

```
pass:loc=1105:cmd="msutrace -a chgfilter -k -t default -m all"
```

Command Accepted - Processing

```

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
pass:loc=1105:cmd="msutrace -a chgfilter -k -t default -m all"
Command entered at terminal #1.
;
```

```

eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
MSUTRACE command in progress
;
eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
MSUTRACE command completed
;

```

These commands insert a partial DPC-SI filter key with ITU-I spare point code and show the `msutracegetfilter` command output with the filter key after the `chgfilter` command is processed to completion.

This filter key will qualify MSUs with at least the following properties:

- DPCI = (ITU-I Spare) 2-11-1
- SI=5

```
pass:loc=1317:cmd="msutrace -a chgfilter -p ituis -k 2-11-1:5"
```

Command Accepted - Processing

```

eagle20003 06-06-01 10:16:03 EST  EAGLE5 35.5.0
pass:loc=1317:cmd="msutrace -a chgfilter -p ituis -k 2-11-1:5"
Command entered at terminal #1.
;
eagle20003 06-06-01 10:16:03 EST  EAGLE5 35.5.0
PASS: Command sent to card
;
eagle20003 06-06-01 10:16:03 EST  EAGLE5 35.5.0
MSUTRACE command in progress
;
eagle20003 06-06-01 10:16:03 EST  EAGLE5 35.5.0
MSUTRACE command completed
;

```

```
pass:loc=1317:cmd="msutrace -g config"
```

Command Accepted - Processing

```

eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
pass:loc=1317:cmd="msutrace -g config"
;
eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
PASS: Command sent to card
;
eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
MSUTRACE command in progress
;
eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
MSUTRACE configurations

```

```

Trace = On

Trace buffers: 3 of 3 USED

MSUTRACE: filter settings
   DPCI      SI SSN   OPCI      CICS      CICE      MODE
s-2-011-1    5   ***     ****     ****     ****     all
;
eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
MSUTRACE command complete
;

```

These commands insert a full DPC-SI-OPC filter key with an ITU-N spare point code when the Duplicate Point Code feature is on, and show the `msutracegetfilter` command output with the filter key after the `chgfilter` command is processed to completion.

This filter key will qualify MSUs with at least the following properties:

- DPC = (ITU-N Spare) 6234-aa
- SI=5
- OPC=(ITU-N Spare) 6233-aa
- CICS=1
- CICE=200

```
pass:loc=1315:cmd="msutrace -a chgfilter -p ITUNS -k 6234-aa:5:6233-aa:1:200"
```

Command Accepted - Processing

```

eagle20003 06-06-01 10:16:03 EST  EAGLE5 35.0.0
pass:loc=1315:cmd="msutrace -a chgfilter -p ITUNS -k
6234-aa:5:6233-aa:1:200"
Command entered at terminal #1.
;
eagle20003 06-06-01 10:16:03 EST  EAGLE5 35.0.0
PASS: Command sent to card
;
eagle20003 06-06-01 10:16:03 EST  EAGLE5 35.0.0
MSUTRACE command in progress
;
eagle20003 06-06-01 10:16:03 EST  EAGLE5 35.0.0
MSUTRACE command completed
;

```

```
pass:loc=1317:cmd="msutrace -g config"
```

Command Accepted - Processing


```

eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
pass:loc=1317:cmd="msutrace -g config"
Command entered at terminal #1.
;
eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
PASS: Command sent to card
;
eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
MSUTRACE command in progress
;
eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
MSUTRACE configurations

Trace = On

Trace buffers: 0 of 3 USED

MSUTRACE: filter settings
      DPCN      SI SSN      OPCI      CICS      CICE      MODE
s-6234-aa      5   ***      s-6233-aa      ****      ****      all
;
eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
MSUTRACE command complete
;

```

6.1.11 netstat

This command is used to display network statistics from the TCP/IP stack. This command allows troubleshooting of network interface and routing configuration problems within the private EPAP-Service Module IP network.

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `netstat` command option `-m` has the parameter buffer pool. The pool for which information will be displayed can be specified, as in the command `netstat -m sys`. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

`-a`

This option displays socket information for all protocols.

`-d`

This option displays driver measurement data.

The `-m` modifier displays multicast information. The `-p` modifier displays PHY registers. The `-z` modifier clears driver measurements. The `-h` modifier displays history measurements for the past 24 hours or the measurements collected a user defined hour ago. The `-f` modifier displays driver measurement data in full format (for GPLs that are loaded on E5-based cards only).

The `-m`, `-p`, and `-h` modifiers are not supported for GPLs that are loaded on E5-based cards.

`-e`

This option displays DPL driver measurement data. This option is supported only for GPLs that are loaded on E5-based cards.

-f, -h

These options provide help information for the command.

-i

This option displays interface information for all interfaces.

-m buffer_pool

This option displays buffer pool information for the specified pool.

Range:

data

SENS protocol stack data buffer pool

sys

system buffer pool

dd

Ethernet device driver buffer pool

Default:

All three buffer pools are displayed.

-p protocol

This option displays information for the specified protocol.

Rnage:

tcp

transmission control protocol

udp

user datagram protocol

ip

internet protocol

icmp

internet control message protocol

sctp

stream control transmission protocol

Default:

None

-r

This option displays the Route table.

Example

```
pass:cmd="netstat -i":loc=1105
```

```
pass:cmd="netstat -a":loc=1111
```

```
pass:cmd="netstat -p tcp":loc=1111
```

```
pass:cmd="netstat -m data":loc=1105
```

```
pass:cmd="netstat -r":loc=1105
```

```
pass:cmd="netstat -e":loc=1111
pass:cmd="netstat -d 0 -f":loc=1111
```

Dependencies

Only one of the options can be specified at a time.

Notes

The `netstat` command is executed through the `pass` command.

The options `{-m,-p,-h}` are not supported for GPLs that are loaded on E5-based cards.

Output for GPLs that are NOT loaded on E5-based cards

```
pass:loc=1107:cmd="netstat"
or
pass:loc=1107:cmd="netstat -h"

      Command Accepted - Processing

tekelecstp 08-02-02 12:16:34 EST  EAGLE 38.0.0
PASS: Command sent to card

Usage: netstat [-a] [-h] [-m data|sys|dd] [-p icmp|igmp|ip|sctp|tcp|udp]
           [-i] [-r] [-d 0|1] [-m] [-p] [-z] [-h 1..24]]

Options:
  -a      display socket information for all protocols
  -h      Displays this message
  -m      display buffer pool information for 1 of the system pools
  -p      display socket information for 1 of the protocols
  -i      display interface information for all interfaces
  -r      display the route table information
  -d      display driver measurement data

;
tekelecstp 08-02-02 12:16:34 EST  EAGLE 38.0.0

NETSTAT command complete

;

pass:loc=1105:cmd="netstat -a"

      Command Accepted - Processing

tekelecstp 08-02-07 07:59:12 EST  EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-02-07 07:59:12 EST  EAGLE 38.0.0

Active Internet connections (including servers)
```

```

                                Local Address
PCB      Proto Recv-Q Send-Q  Foreign Address  (state)
-----
11df510  TCP      0      0      0.0.0.0.111     LISTEN
                                0.0.0.0.0
11df384  UDP      0      0      0.0.0.0.1008
                                0.0.0.0.0
11df48c  UDP      0      0      0.0.0.0.111
                                0.0.0.0.0
;

tekelecstp 08-02-07 07:59:12 EST  EAGLE 38.0.0

NETSTAT command complete

```

The interfaces listed in the `netstat -i` output correspond to the card's ports as follows:

- `seeq 0` = IP interface A
- `seeq 1` = IP interface B
- `DPLend` = pseudo-IP interface used only by network cards for STC-style Integrated Monitoring
- `LO` = local loopback interface

```

pass:loc=1105:cmd="netstat -i"

tekelecstp 11-01-07 07:59:20 EST  EAGLE 43.0.0
pass: loc=1105: cmd="netstat -i"
Command entered at terminal #1.
;

tekelecstp 11-01-07 07:59:20 EST  EAGLE 43.0.0
PASS: Command sent to card
;

tekelecstp 11-01-07 07:59:20 EST  EAGLE 43.0.0
DPLend (unit number 0):
  Flags: (0x63) UP BROADCAST ARP RUNNING 10MB HDX DIX
  Type: ETHERNET_CSMACD
  Internet address: 172.20.48.25
  Broadcast address: 172.20.51.255
  Netmask 0xffff0000 Subnetmask 0xfffffc00
  Ethernet address is 00:00:00:00:00:00
  Metric is 0
  Maximum Transfer Unit size is 485
  1 packets received; 1 packets sent
  0 multicast packets received
  0 multicast packets sent
  0 input errors; 0 output errors
  0 collisions; 0 dropped
seeq (unit number 1):
  Flags: (0x63) UP BROADCAST ARP RUNNING 10MB HDX DIX
  Type: ETHERNET_CSMACD
  Internet address: 192.168.55.112

```

```
Broadcast address: 192.168.55.255
Netmask 0xffffffff Subnetmask 0xffffffff
Ethernet address is 00:00:17:04:00:62
Metric is 0
Maximum Transfer Unit size is 1500
28 packets received; 16 packets sent
13 multicast packets received
0 multicast packets sent
0 input errors; 0 output errors
0 collisions; 0 dropped
lo (unit number 0):
Flags: (0x8069) UP LOOPBACK MULTICAST ARP RUNNING 10MB HDX DIX
Type: SOFTWARE_LOOPBACK
Internet address: 127.0.0.1
Netmask 0xff000000 Subnetmask 0xff000000
Metric is 0
Maximum Transfer Unit size is 32768
6 packets received; 6 packets sent
0 multicast packets received
0 multicast packets sent
0 input errors; 0 output errors
0 collisions; 0 dropped
seeq (unit number 0):
Flags: (0x63) UP BROADCAST ARP RUNNING 10MB HDX DIX
Type: ETHERNET_CSMACD
Internet address: 192.168.100.112
Broadcast address: 192.168.100.255
Netmask 0xffffffff Subnetmask 0xffffffff
Ethernet address is 00:00:17:04:00:61
Metric is 0
Maximum Transfer Unit size is 1500
5 packets received; 1 packets sent
5 multicast packets received
0 multicast packets sent
0 input errors; 0 output errors
0 collisions; 0 dropped

;

tekelecstp 11-01-07 07:59:20 EST EAGLE 43.0.0

NETSTAT command complete

pass:loc=1105:cmd="netstat -m data"

Command Accepted - Processing

tekelecstp 08-02-07 07:59:56 EST EAGLE 38.0.0
PASS: Command sent to card

;

eagle20004 08-02-07 07:59:56 EST EAGLE 38.0.0
type          number
-----
-----
```

```
FREE      :    9553
DATA      :         0
HEADER    :         0
SOCKET    :         0
PCB       :         0
RTABLE    :         0
HTABLE    :         0
ATABLE    :         0
SONAME    :         0
ZOMBIE    :         0
SOOPTS    :         0
FTABLE    :         0
RIGHTS    :         0
IFADDR    :         0
CONTROL   :         0
OOBDATA   :         0
IPMOPTS   :         0
IPMADDR   :         0
IFMADDR   :         0
MRTABLE   :         0
TOTAL     :    9553
number of mbufs: 9553
number of times failed to find space: 0
number of times waited for space: 0
number of times drained protocols for space: 0
-----
CLUSTER POOL TABLE
-----
size      clusters  free      usage
-----
64        1000        1000      41
128       1250        1250      848
256       1250        1250      0
512       200         200       0
1024     100         100       0
2048     20         20        0
-----

;

tekelecstp 08-02-07 07:59:56 EST  EAGLE 38.0.0

NETSTAT command complete

pass:loc=1105:cmd="netstat -m sys"

Command Accepted - Processing

tekelecstp 08-02-07 08:00:14 EST  EAGLE 38.0.0
PASS: Command sent to card

;

eagle20004 08-02-07 08:00:14 EST  EAGLE 38.0.0
type      number
```

```
-----
FREE      :    3069
DATA      :         0
HEADER    :         0
SOCKET    :         3
PCB       :         4
RTABLE    :        17
HTABLE    :         0
ATABLE    :         0
SONAME    :         0
ZOMBIE    :         0
SOOPTS    :         0
FTABLE    :         0
RIGHTS    :         0
IFADDR    :         6
CONTROL   :         0
OOBDATA   :         0
IPMOPTS   :         0
IPMADDR   :         1
IFMADDR   :         0
MRTABLE   :         0
TOTAL     :    3100
number of mbufs: 3100
number of times failed to find space: 0
number of times waited for space: 0
number of times drained protocols for space: 0
-----
CLUSTER POOL TABLE
-----
size      clusters  free      usage
-----
64        650         640       12
128       200         188       33
256       500         494        6
512       200         197       24
-----
;

tekelecstp 08-02-07 08:00:14 EST  EAGLE 38.0.0

NETSTAT command complete

pass:loc=1105:cmd="netstat -m dd"

Command Accepted - Processing

tekelecstp 08-02-07 08:00:24 EST  EAGLE 38.0.0
PASS: Command sent to card
;

tekelecstp 08-02-07 08:00:24 EST  EAGLE 38.0.0

END-0 Buffer Pool
-----
```

```
CLUSTER POOL TABLE
-----
size      clusters  free      usage
-----
1528      80         77        10
-----

END-1 Buffer Pool
-----
CLUSTER POOL TABLE
-----
size      clusters  free      usage
-----
1528      80         72        58
-----

;

tekelecstp 08-02-07 08:00:24 EST  EAGLE 38.0.0

NETSTAT command complete

pass:loc=1105:cmd="netstat -p icmp"

Command Accepted - Processing

;

tekelecstp 08-02-07 08:00:29 EST  EAGLE 38.0.0
0966.1083   SYSTEM      INFO      REPT COND: system alive
           Report Date:08-02-27  Time:08:00:29

;

tekelecstp 08-02-27 08:00:29 EST  EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-02-27 08:00:29 EST  EAGLE 38.0.0
ICMP:
  1 call to icmp_error
  0 error not generated because old message was icmp
Output histogram:
  destination unreachable: 1
  0 message with bad code fields
  0 message < minimum length
  0 bad checksum
  0 message with bad length
Input histogram:
  echo reply: 6
  destination unreachable: 1
  0 message response generated

;

tekelecstp 08-02-07 08:00:29 EST  EAGLE 38.0.0
```



```
NETSTAT command complete
```

```
pass:loc=1105:cmd="netstat -p ip"
```

```
Command Accepted - Processing
```

```
tekelecstp 08-02-07 08:00:44 EST EAGLE 38.0.0  
PASS: Command sent to card
```

```
;
```

```
tekelecstp 08-02-07 08:00:44 EST EAGLE 38.0.0  
IP:
```

```
    48 total  
    0 badsum  
    0 tooshort  
    0 toosmall  
    0 badhlen  
    0 badlen  
    0 infragments  
    0 fragdropped  
    0 fragtimeout  
    0 forward  
   14 cantforward  
    0 redirectsent  
    1 unknownprotocol  
    0 nobuffers  
    0 reassembled  
    0 outfragments  
    0 noroute
```

```
;
```

```
tekelecstp 08-02-07 08:00:44 EST EAGLE 38.0.0
```

```
NETSTAT command complete
```

```
pass:loc=1105:cmd="netstat -p tcp"
```

```
Command Accepted - Processing
```

```
tekelecstp 08-02-07 08:00:54 EST EAGLE 38.0.0  
PASS: Command sent to card
```

```
;
```

```
tekelecstp 08-02-07 08:00:54 EST EAGLE 38.0.0  
TCP:
```

```
    0 packet sent  
      0 data packet (0 byte)  
      0 data packet (0 byte) retransmitted  
      0 ack-only packet (0 delayed)  
      0 URG only packet  
      0 window probe packet  
      0 window update packet
```

```

    0 control packet
0 packet received
    0 ack (for 0 byte)
    0 duplicate ack
    0 ack for unsent data
    0 packet (0 byte) received in-sequence
    0 completely duplicate packet (0 byte)
    0 packet with some dup. data (0 byte duped)
    0 out-of-order packet (0 byte)
    0 packet (0 byte) of data after window
    0 window probe
    0 window update packet
    0 packet received after close
    0 discarded for bad checksum
    0 discarded for bad header offset field
    0 discarded because packet too short
0 connection request
0 connection accept
0 connection established (including accepts)
0 connection closed (including 0 drop)
0 embryonic connection dropped
0 segment updated rtt (of 0 attempt)
0 retransmit timeout
    0 connection dropped by rexmit timeout
0 persist timeout
0 keepalive timeout
    0 keepalive probe sent
    0 connection dropped by keepalive
0 pcb cache lookup failed

;

tekelecstp 08-01-07 08:00:54 EST  EAGLE 38.0.0

NETSTAT command complete

pass:loc=1305:cmd="netstat -p sctp"

Command Accepted - Processing

tekelecstp 08-01-25 11:20:41 EST  EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-25 11:20:41 EST  EAGLE 38.0.0
ip packets sent..... 1474882
  ip packets sent with data chunk..... 306354
  control chunks (excluding retransmissions)..... 1172759
  ordered data chunks (excluding retransmissions).. 1534350
  unordered data chunks (excluding retransmissions) 0
  user messages fragmented due to MTU..... 0
  retransmit data chunks sent..... 4
  sacks sent..... 496302
  send failed..... 0
```

```
ip packets received..... 1816035
  ip packets received with data chunk..... 989957
  control chunks (excluding duplicates)..... 833141
  ordered data chunks (excluding duplicates)..... 989968
  unordered data chunks (excluding duplicates)..... 0
  user messages reassembled..... 0
  data chunks read..... 988601
  duplicate tsns received..... 0
  sacks received..... 153763
  gap ack blocks received..... 0
  out of the blue..... 4
  with invalid checksum..... 0
connections established..... 2954
  by upper layer..... 0
  by remote endpoint..... 2958
connections terminated..... 4
  ungracefully..... 2952
  gracefully..... 0
associations dropped due to retransmits..... 0
consecutive retransmit timeouts..... 4
retransmit timer count..... 6
fast retransmit count..... 0
heartbeat requests received..... 330275
heartbeat acks received..... 340239
heartbeat requests sent..... 340258
associations supported..... 50
milliseconds cookie life at 4-way start-up handshake. 5000
retransmission attempts allowed at start-up phase.... 8
```

;

```
tekelecstp 08-01-25 11:20:41 EST EAGLE 38.0.0
```

```
NETSTAT command complete
```

```
pass:loc=1105:cmd="netstat -p udp"
```

```
Command Accepted - Processing
```

```
tekelecstp 08-02-10 08:01:05 EST EAGLE 38.0.0
```

```
PASS: Command sent to card
```

;

```
tekelecstp 08-02-10 08:01:05 EST EAGLE 38.0.0
```

```
UDP:
```

```
 42 total packets
 29 input packets
 13 output packets
  0 incomplete header
  0 bad data length field
  0 bad checksum
 16 broadcasts received with no ports
  0 full socket
 13 pcb cache lookups failed
```

```
1 pcb hash lookup failed

;

tekelecstp 08-02-10 08:01:05 EST EAGLE 38.0.0

NETSTAT command complete

pass:loc=1105:cmd="netstat -r"

Command Accepted - Processing

tekelecstp 08-02-07 08:01:14 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-02-07 08:01:14 EST EAGLE 38.0.0

ROUTE NET TABLE
destination      gateway          flags  Refcnt  Use
Interface
-----
-----
0.0.0.0          192.168.55.250  3      0      14
seeq1
192.168.55.0     192.168.55.112  101    0      0
seeq1
192.168.100.0   192.168.100.112 101    0      0
seeq0
-----
-----

ROUTE HOST TABLE
destination      gateway          flags  Refcnt  Use
Interface
-----
-----
127.0.0.1        127.0.0.1        5      1      6
lo0
-----
-----

;

tekelecstp 08-02-07 08:01:14 EST EAGLE 38.0.0

NETSTAT command complete
```

```
pass:loc=1107:cmd="netstat -d 0"
```

```
Command Accepted - Processing
```

```
tekelecstp 08-01-30 09:49:57 EST EAGLE 38.0.0
6734.1083 SYSTEM INFO REPT COND: system alive
Report Date:08-01-30 Time:09:49:57
```

```
;
```

```
tekelecstp 08-01-30 09:49:57 EST EAGLE 38.0.0
PASS: Command sent to card
```

```
;
```

```
tekelecstp 08-01-30 09:49:57 EST EAGLE 38.0.0
Report Time = 05-11-30 09:50:01.435
Card Load Time = 05-11-29 16:46:49.775
Last Reset Time = 05-11-29 16:46:49.775
```

```
overflow = 0 excess coll. = 0 align. error = 0
crc = 0 underflow = 0 rx collision = 0
dribble = 0 late coll. = 0 very long = 0
short fr = 0 coll. = 0 exc defer = 0
oversize = 0 cs error = 0 rxerror = 132
rxabort = 0 tx bytes = 60 rx broadcast = 104853
read err = 0 tx frames = 1 tx broadcast = 1
rx bytes = 6385476 tx multicast = 0
rx frames = 104856
bit bucket = 0
term count = 0
runts = 0
```

```
;
```

```
pass:loc=1107:cmd="netstat -d 0 -m"
```

```
Command Accepted - Processing
```

```
tekelecstp 08-02-02 10:34:59 EST EAGLE 38.0.0
6734.1083 SYSTEM INFO REPT COND: system alive
Report Date:08-02-02 Time:10:34:59
```

```
;
```

```
tekelecstp 08-02-02 10:34:59 EST EAGLE 38.0.0
PASS: Command sent to card
```

```
;
```

```
tekelecstp 08-02-02 10:34:59 EST EAGLE 38.0.0
```

```
Report Time = 05-12-02 10:35:01.755
Card Load Time = 05-11-30 16:14:26.590
Last Reset Time = 05-11-30 16:14:26.590
```

```
IP Multicast Reference Table
```

```
Bit 0 1 2 3 4 5 6 7
```

```
Byte-0 0 0 0 0 0 0 0 0
Byte-1 0 0 0 0 0 0 0 0
Byte-2 0 0 0 0 0 0 0 0
Byte-3 0 0 0 0 0 0 0 0
Byte-4 0 0 0 0 0 0 0 0
Byte-5 0 0 0 0 0 0 0 0
Byte-6 0 0 0 0 0 0 1 0
Byte-7 0 0 0 0 0 0 0 0
```

Multicast MAC Address List

MAC Addr	Ref-Cnt	Byte	Bit
01:00:5e:00:00:01	01	6	6

Hardware Multicast Filter Register (unit=0)

```
00 00 00 00 00 00 40 00
```

;

```
tekelecstp 08-02-02 10:34:59 EST EAGLE 38.0.0
```

```
NETSTAT command complete
```

;

```
pass:loc=1107:cmd="netstat -d 1 -m"
```

```
Command Accepted - Processing
```

```
tekelecstp 08-01-30 09:51:07 EST EAGLE 38.0.0
```

```
PASS: Command sent to card
```

;

```
tekelecstp 08-01-30 09:51:07 EST EAGLE 38.0.0
```

```
Report Time      = 05-11-30 09:51:07.745
```

```
Card Load Time   = 05-11-29 16:46:49.775
```

```
Last Reset Time  = 05-11-30 09:50:43.510
```

```
Multicast is NOT enabled for unit=1
```

;

```
tekelecstp 08-01-30 09:51:07 EST EAGLE 38.0.0
```

```
NETSTAT command complete
```

;

```
pass:loc=1107:cmd="netstat -d 0 -p"
```

```
Command Accepted - Processing
```

```
tekelecstp 08-01-30 09:50:55 EST EAGLE 38.0.0
```

```
PASS: Command sent to card
```

;

```
tekelecstp 08-01-30 09:50:55 EST EAGLE 38.0.0

Register          Value
-----
Control           = 0x2100
Status            = 0x7809
PHY ID #1         = 0x0016
PHY ID #2         = 0xf831
AN Adv.           = 0x01e1
AN REC            = 0x0000
Config #1         = 0x0022
Config #2         = 0xff00
Status Output     = 0x02c0
Mask              = 0xffff

;

tekelecstp 08-01-30 09:50:55 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:loc=1107:cmd="netstat -d 0 -z"

Command Accepted - Processing

tekelecstp 08-01-30 09:50:43 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-30 09:50:43 EST EAGLE 38.0.0
Report Time       = 05-11-30 09:50:43.510
Card Load Time   = 05-11-29 16:46:49.775
Last Reset Time  = 05-11-30 09:50:43.510

overflow = 0          excess coll. = 0          align. error = 0
crc = 0              underflow = 0          rx collision = 0
dribble = 0          late coll. = 0         very long = 0
short fr = 0         coll. = 0              exc defer = 0
oversize = 0         cs error = 0           rxerror = 0
rxabort = 0          tx bytes = 0           rx broadcast = 0
read err = 0         tx frames = 0          tx broadcast = 0
rx bytes = 0
rx frames = 0
bit bucket = 0
term count = 0
runts = 0
tx multicast = 0

Driver measurements for unit=0 cleared

;

tekelecstp 08-01-30 09:50:43 EST EAGLE 38.0.0
```

```
NETSTAT command complete

;

pass:loc=1107:cmd="netstat -d 0 -h"

Command Accepted - Processing

tekelecstp 08-01-30 09:50:12 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-30 09:50:12 EST EAGLE 38.0.0
Report Time      = 05-11-30 09:50:12.500
Card Load Time   = 05-11-29 16:46:49.775
Last Reset Time  = 05-11-29 16:46:49.775

Hours Ago      Tx Frames    Tx Errors    Rx Frames    Rx Errors
1              0            0            6298         0
2              0            0            6295         0
3              0            0            6295         0
4              0            0            6295         0
5              0            0            6295         0
6              0            0            6295         0
7              0            0            6296         0
8              0            0            6296         0
9              0            0            6294         0
10             0            0            6294         0
11             0            0            6295         0
12             0            0            6296         0
13             0            0            6294         0
14             0            0            6295         0
15             0            0            6294         0
16             0            0            5248         0
17             1            0            4852         0
18             --            --            --            --
19             --            --            --            --
20             --            --            --            --
21             --            --            --            --
22             --            --            --            --
23             --            --            --            --
24             --            --            --            --

;

tekelecstp 08-01-30 09:50:12 EST EAGLE 38.0.0

NETSTAT command complete

;
```



```
pass:loc=1107:cmd="netstat -d 0 -h 18"

Command Accepted - Processing

tekelecstp 08-01-30 10:20:57 EST EAGLE 38.0.0
PASS: Command sent to card
;

tekelecstp 08-01-30 10:20:57 EST EAGLE 38.0.0

Report Time      = 05-11-30 10:20:57.735
Card Load Time   = 05-11-29 16:46:49.775
Last Reset Time  = 05-11-30 09:51:22.480

NETSTAT: Invalid hour number, cannot display 18 hour(s) ago.
          Stats have only been saved for 17 hour(s).
;

tekelecstp 08-01-30 10:20:57 EST EAGLE 38.0.0

NETSTAT command complete
;

pass:loc=1107:cmd="netstat -d 0 -h 15"

Command Accepted - Processing
;

tekelecstp 08-01-30 09:50:24 EST EAGLE 38.0.0
PASS: Command sent to card
;

tekelecstp 08-01-30 09:50:24 EST EAGLE 38.0.0

Report Time      = 05-11-30 09:50:24.080
Card Load Time   = 05-11-29 16:46:49.775
Last Reset Time  = 05-11-29 16:46:49.775

overflow = 0          excess coll. = 0          align. error = 0
crc = 0              underflow = 0          rx collision = 0
dribble = 0          late coll. = 0         very long = 0
short fr = 0         coll. = 0              exc defer = 0
oversize = 0         cs error = 0           rxerror = 0
rxabort = 0          tx bytes = 0           rx broadcast = 6296
read err = 0         tx frames = 0          tx broadcast = 0
rx bytes = 383160
rx frames = 6294
bit bucket = 0
term count = 0
runts = 0

;


```

```
tekelecstp 08-01-30 09:50:24 EST EAGLE 38.0.0
```

```
NETSTAT command complete
```

```
;
```

Output for GPLs on E5-based Cards

```
pass:cmd="netstat":loc=1111
```

```
Or
```

```
pass:cmd="netstat -h":loc=1111
```

```
Command Accepted - Processing
```

```
tekelecstp 08-01-19 04:43:47 EST EAGLE 38.0.0
```

```
PASS: Command sent to card
```

```
;
```

```
tekelecstp 08-01-19 04:43:47 EST EAGLE 38.0.0
```

```
Usage: netstat [-a] [-e] [-h] [-m data|sys|dd] [-p icmp|igmp|ip|  
sctp|tcp|udp]
```

```
[-i] [-r] [-d 0|1] [-m] [-p] [-z] [-h 1..24] [-f]]
```

```
Options:
```

```
-a      display socket information for all protocols  
-e      display DPL driver measurement data  
-d      display Ethernet driver measurement data  
-h      display this message  
-m      display buffer pool information for 1 of the system
```

```
pools
```

```
-p      display socket information for 1 of the protocols  
-i      display interface information for all interfaces  
-r      display the route table information
```

```
;
```

```
tekelecstp 08-01-19 04:43:47 IST EAGLE 38.0.0
```

```
NETSTAT command complete
```

```
;
```

```
pass:cmd="netstat -a":loc=1111
```

```
Command Accepted - Processing
```

```
tekelecstp 08-06-21 16:26:30 IST EAGLE5 39.0.0
```

```
pass:cmd="netstat -a":loc=1105
```

```
Command entered at terminal #3.
```

```
;
```

```
tekelecstp 08-06-21 16:26:30 IST EAGLE5 39.0.0
```

```
PASS: Command sent to card
```

```
;  
  
tekelecstp 08-06-21 16:26:30 IST EAGLE5 39.0.0  
SDS Shell Output  
  
-> tklc_inetstatShow  
PCB      Proto Recv-Q      Send-Q      Local Address      (state)  
Foreign Address  
-----  
2354720  TCP          0          0  0.0.0.0.23        LISTEN  
0.0.0.0.0  
232cd60  UDP    16921935          0  0.0.0.0.161  
0.0.0.0.0  
232cc20  UDP          0          0  127.0.0.1.1026  
127.0.0.1.17185  
232cae0  UDP    16921930          0  0.0.0.0.17185  
0.0.0.0.0  
232c9a0  UDP    16921922          0  0.0.0.0.68  
0.0.0.0.0  
232c5e0  UDP    16921912          0  127.0.0.1.1024  
0.0.0.0.0  
232c220  UDP          0          0  127.0.0.1.1025  
127.0.0.1.1024  
  
value = 1 = 0x1  
  
;  
  
tekelecstp 08-06-21 16:26:30 IST EAGLE5 39.0.0  
  
;  
  
tekelecstp 08-06-21 16:26:30 IST EAGLE5 39.0.0  
  
NETSTAT command complete  
  
;  
  
pass:cmd="netstat -e":loc=1111  
  
Command Accepted - Processing  
  
tekelecstp 08-01-19 04:45:51 EST EAGLE 38.0.0  
PASS: Command sent to card  
  
;  
  
tekelecstp 08-01-19 04:45:51 EST EAGLE 38.0.0  
  
Dual Port Link Statistics  
In Ucast Octets = 0          In Ucast Pkts = 0  
Out Ucast Octet = 0         Out Ucast Pkts = 0  
Out Bcast Octets = 0       Out Bcast Pkts = 0  
Out Ucast Octets Err = 0   Out Ucast Pkts Err = 0  
Out Bcast Octet Err = 0   Out Bcast Pkts Err = 0  
Invalied copy lenth = 0    IP Frame too big = 0
```

```

No Mbufs Avail = 0
TVG Func Err = 0
Inbound too big = 0

No System bufs Avail = 0
System buf Err = 0

;

tekelecstp 08-01-19 04:45:51 EST EAGLE 38.0.0

NETSTAT command complete

;

```

Output for the `netstat -i` command varies based on the card type. The GEI interfaces are the ports that carry signaling and monitoring traffic external to the EAGLE. The number of these ports varies with the IP connection. Information for all 4 GEI interfaces is displayed on only FC Capable cards as shown below.

The interfaces listed in the `netstat -i` output correspond to a card's ports as follows:

- For Signaling GPLs (IPSG, IPLIMx, IPGWx):
- `gei 2` = IP signaling interface A
- `gei 0` = IP signaling interface B
- `gei 3` = Fast Copy interface A
- `gei 1` = Fast Copy interface B
- `DPLend` = pseudo-IP interface used only by network cards for STC-style Integrated Monitoring
- `LO` = local loopback interface

For SCCPx GPLs:

- `gei 0` = IP interface A
- `gei 1` = IP interface B
- `DPLend` = pseudo-IP interface used only by network cards for STC-style Integrated Monitoring
- `LO` = local loopback interface
- `BOND` = interface formed by bonding the two IP interfaces

```

pass:cmd="netstat -i":loc=1111

e1030703 09-12-13 19:15:31 EST EAGLE 42.0.0
pass:loc=1111:cmd="netstat -i"
Command entered at terminal #17.

;

e1030703 09-12-13 19:15:31 EST EAGLE 42.0.0
PASS: Command sent to card

;
Command Accepted - Processing
e1030703 09-12-13 19:15:38 EST EAGLE 42.0.0

NETSTAT command complete

```

```
;  
Command Executed  
e1030703 09-12-13 19:15:31 EST EAGLE 42.0.0  
SDS Shell Output  
  
-> tklc_ifShow  
lo (unit number 0):  
  Flags: (0x48049) UP LOOPBACK MULTICAST TRAILERS ARP RUNNING INET_UP  
  Type: SOFTWARE_LOOPBACK  
  inet: 127.0.0.1  
  Netmask 0xff000000 Subnetmask 0xff000000  
  Metric is 0  
  Maximum Transfer Unit size is 1536  
  0 packets received; 1 packets sent  
  0 multicast packets received  
  0 multicast packets sent  
  0 input errors; 0 output errors  
  0 collisions; 0 dropped  
  0 output queue drops  
DPLend (unit number 0):  
  Flags: (0x60043) UP BROADCAST ARP RUNNING INET_UP  
  Type: ETHERNET_CSMACD  
  inet: 172.20.48.249  
  Broadcast address: 172.20.51.255  
  Netmask 0xffff0000 Subnetmask 0xfffffc00  
  Ethernet address is 00:00:00:00:00:f9  
  Metric is 0  
  Maximum Transfer Unit size is 485  
  84 octets received  
  56 octets sent  
  2 unicast packets received  
  2 unicast packets sent  
  0 non-unicast packets received  
  0 non-unicast packets sent  
  0 incoming packets discarded  
  0 outgoing packets discarded  
  0 incoming errors  
  0 outgoing errors  
  0 unknown protos  
  0 collisions; 0 dropped  
  0 output queue drops  
gei (unit number 2):  
  Flags: (0x70043) UP BROADCAST ARP RUNNING INET_UP  
  PHY Flags: (0x12212) AUTONEG 100MB FDX DIX  
  Type: ETHERNET_CSMACD  
  inet: 192.168.54.117  
  Broadcast address: 192.168.54.255  
  Netmask 0xffffffff00 Subnetmask 0xffffffff00  
  Ethernet address is 00:00:17:0d:46:bc  
  Metric is 0  
  Maximum Transfer Unit size is 1500  
  320 octets received  
  128 octets sent  
  0 unicast packets received
```

```
0 unicast packets sent
0 multicast packets received
0 multicast packets sent
5 broadcast packets received
2 broadcast packets sent
0 incoming packets discarded
0 outgoing packets discarded
0 incoming errors
0 outgoing errors
0 unknown protos
0 collisions; 0 dropped
0 output queue drops
gei (unit number 0):
Flags: (0x30002) DOWN BROADCAST ARP
PHY Flags: (0x2221) AUTONEG DIX
Type: ETHERNET_CSMACD
inet: 192.168.51.42
Broadcast address: 192.168.51.255
Netmask 0xffffffff Subnetmask 0xffffffff00
Ethernet address is 00:00:17:0d:48:64
Metric is 0
Maximum Transfer Unit size is 1500
0 octets received
64 octets sent
0 unicast packets received
0 unicast packets sent
0 multicast packets received
0 multicast packets sent
0 broadcast packets received
1 broadcast packets sent
0 incoming packets discarded
0 outgoing packets discarded
0 incoming errors
0 outgoing errors
0 unknown protos
0 collisions; 0 dropped
0 output queue drops
gei (unit number 3):
Flags: (0x78042) DOWN BROADCAST MULTICAST ARP RUNNING INET_UP
PHY Flags: (0x2224) AUTONEG DIX
Type: ETHERNET_CSMACD
inet: 172.21.48.249
Broadcast address: 172.21.49.255
Netmask 0xffff0000 Subnetmask 0xfffffe00
Ethernet address is 00:00:17:0d:46:bd
Metric is 0
Maximum Transfer Unit size is 2000
0 octets received
0 octets sent
0 unicast packets received
0 unicast packets sent
0 multicast packets received
0 multicast packets sent
0 broadcast packets received
0 broadcast packets sent
```

```

    0 incoming packets discarded
    0 outgoing packets discarded
    0 incoming errors
    0 outgoing errors
    0 unknown protos
    0 collisions; 0 dropped
    0 output queue drops
gei (unit number 1):
  Flags: (0x78042) DOWN BROADCAST MULTICAST ARP RUNNING INET_UP
  PHY Flags: (0x2221) AUTONEG DIX
  Type: ETHERNET_CSMACD
  inet: 172.22.48.249
  Broadcast address: 172.22.49.255
  Netmask 0xffff0000 Subnetmask 0xfffffe00
  Ethernet address is 00:00:17:0d:48:65
  Metric is 0
  Maximum Transfer Unit size is 2000
  0 octets received
  0 octets sent
  0 unicast packets received
  0 unicast packets sent
  0 multicast packets received
  0 multicast packets sent
  0 broadcast packets received
  0 broadcast packets sent
  0 incoming packets discarded
  0 outgoing packets discarded
  0 incoming errors
  0 outgoing errors
  0 unknown protos
  0 collisions; 0 dropped
  0 output queue drops
value = 26 = 0x1a
;
e1030703 09-10-13 19:15:38 EST  EAGLE 42.0.0
;
e1030703 09-10-13 19:15:38 EST  EAGLE 42.0.0

NETSTAT command complete
;

```

This example displays BOND and GEI interfaces. Bond interfaces are supported by only E5-SM4G and E5-SM8G-B cards.

```

pass:cmd="netstat -i":loc=1111

e1030703 09-12-13 19:15:31 EST  EAGLE 42.0.0
pass:loc=1111:cmd="netstat -i"
Command entered at terminal #17.
;

e1030703 09-12-13 19:15:31 EST  EAGLE 42.0.0

```

```
PASS: Command sent to card
;
Command Accepted - Processing
e1030703 09-12-13 19:15:38 EST EAGLE 42.0.0

NETSTAT command complete

;
Command Executed
e1030703 09-12-13 19:15:31 EST EAGLE 42.0.0
SDS Shell Output

-> tklc_ifShow
lo (unit number 0):
  Flags: (0x48049) UP LOOPBACK MULTICAST TRAILERS ARP RUNNING
INET_UP
  Type: SOFTWARE_LOOPBACK
  inet: 127.0.0.1
  Netmask 0xff000000 Subnetmask 0xff000000
  Metric is 0
  Maximum Transfer Unit size is 1536
  0 packets received; 1 packets sent
  0 multicast packets received
  0 multicast packets sent
  0 input errors; 0 output errors
  0 collisions; 0 dropped
  0 output queue drops
DPLend (unit number 0):
  Flags: (0x20043) UP BROADCAST ARP RUNNING
  Type: ETHERNET_CSMACD
  Ethernet address is 00:00:00:00:00:00
  Metric is 0
  Maximum Transfer Unit size is 485
  0 octets received
  0 octets sent
  0 unicast packets received
  0 unicast packets sent
  0 non-unicast packets received
  0 non-unicast packets sent
  0 incoming packets discarded
  0 outgoing packets discarded
  0 incoming errors
  0 outgoing errors
  0 unknown protos
  0 collisions; 0 dropped
  0 output queue drops
gei (unit number 0):
  Flags: (0x78042) DOWN BROADCAST MULTICAST ARP RUNNING INET_UP
  PHY Flags (0x2022) 100MB HDX DIX
  Type: ETHERNET_CSMACD
  inet: 192.168.122.4
  Broadcast address: 192.168.122.255
  Netmask 0xffffffff00 Subnetmask 0xffffffff00
  Ethernet address is 00:00:17:0d:0f:3a
  Metric is 0
```



```
Maximum Transfer Unit size is 1500
0 octets received
0 octets sent
0 unicast packets received
0 unicast packets sent
0 multicast packets received
0 multicast packets sent
0 broadcast packets received
0 broadcast packets sent
0 incoming packets discarded
0 outgoing packets discarded
0 incoming errors
0 outgoing errors
0 unknown protos
0 collisions; 0 dropped
0 output queue drops
gei (unit number 1):
Flags: (0x78042) DOWN BROADCAST MULTICAST ARP RUNNING INET_UP
PHY Flags (0x2021) 10MB HDX DIX
Type: ETHERNET_CSMACD
inet: 192.168.121.4
Broadcast address: 192.168.121.255
Netmask 0xffffffff00 Subnetmask 0xffffffff00
Ethernet address is 00:00:17:0d:0f:3b
Metric is 0
Maximum Transfer Unit size is 1500
0 octets received
0 octets sent
0 unicast packets received
0 unicast packets sent
0 multicast packets received
0 multicast packets sent
0 broadcast packets received
0 broadcast packets sent
0 incoming packets discarded
0 outgoing packets discarded
0 incoming errors
0 outgoing errors
0 unknown protos
0 collisions; 0 dropped
0 output queue drops
Bond (unit number 0):
Flags: (0x60043) UP BROADCAST ARP RUNNING INET_UP
Type: ETHERNET_CSMACD
inet: 192.168.123.4
Broadcast address: 192.168.123.255
Netmask 0xffffffff00 Subnetmask 0xffffffff00
Ethernet address is 00:00:00:00:00:00
Metric is 0
Maximum Transfer Unit size is 485
0 octets received
0 octets sent
0 unicast packets received
0 unicast packets sent
0 non-unicast packets received
```

```
0 non-unicast packets sent
0 incoming packets discarded
0 outgoing packets discarded
0 incoming errors
0 outgoing errors
0 unknown protos
0 collisions; 0 dropped
0 output queue drops
value = 26 = 0x1a

;

e1030703 09-12-13 19:15:38 EST  EAGLE 42.0.0
;

e1030703 09-12-13 19:15:38 EST  EAGLE 42.0.0

NETSTAT command complete

;

pass:cmd="netstat -m data":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:46:24 EST  EAGLE5 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:46:24 EST  EAGLE5 38.0.0
SDS Shell Output
-> netStackDataPoolShow
type          number
-----
FREE          :    37587
DATA          :      23
HEADER       :      22
SOCKET       :       0
PCB          :       0
RTABLE       :       0
HTABLE       :       0
ATABLE       :       0
SONAME       :       0
ZOMBIE       :       0
SOOPTS       :       0
FTABLE       :       0
RIGHTS       :       0
IFADDR       :       0
CONTROL      :       0
OOBDATA      :       0
IPMOPTS      :       0
IPMADDR      :       0
IFMADDR      :       0
MRTABLE      :       0
```

```

TAG      :      0
TOTAL    :    37632
number of mbufs: 37632
number of times failed to find space: 0
number of times waited for space: 0
number of times drained protocols for space: 0

```

CLUSTER POOL TABLE

size	clusters	free	usage	minsize	maxsize	avgsz
64	6336	6336	33	4	56	13
128	6336	6313	712952418	128	128	1
256	6336	6336	0	0	0	0
512	10240	10218	712654339	293	293	3
1024	1024	1024	0	0	0	0
2048	1024	1024	0	0	0	0

```
value = 80 = 0x50 = 'P'
```

```
;
```

```
tekelecstp 08-01-19 04:46:24 EST EAGLE5 38.0.0
```

```
NETSTAT command complete
```

```
;
```

```
pass:cmd="netstat -m sys":loc=1111
```

```
Command Accepted - Processing
```

```
tekelecstp 08-01-19 04:46:44 EST EAGLE 38.0.0
```

```
PASS: Command sent to card
```

```
;
```

```
tekelecstp 08-01-19 04:46:44 EST EAGLE 38.0.0
```

```
SDS Shell Output
```

```
-> netStackSysPoolShow
```

```
type          number
```

```

-----
FREE      :    3696
DATA      :         4
HEADER    :         0
SOCKET    :         0
PCB       :         0
RTABLE    :         0
HTABLE    :         0
ATABLE    :         0
SONAME    :         0
ZOMBIE    :         0

```

```

SOOPTS : 0
FTABLE : 0
RIGHTS : 0
IFADDR : 0
CONTROL : 0
OOBDATA : 0
IPMOPTS : 0
IPMADDR : 0
IFMADDR : 0
MRTABLE : 0
TAG : 0
TOTAL : 3700
number of mbufs: 3700
number of times failed to find space: 0
number of times waited for space: 0
number of times drained protocols for space: 0

```

CLUSTER POOL TABLE

size	clusters	free	usage	minsize	maxsize	avgsz
20	500	477	28	8	20	16
44	500	495	5	24	32	35
96	500	487	13	48	96	65
172	500	490	10	116	160	150
292	500	487	1059	176	256	0
664	500	486	1064	384	592	1
1144	100	95	5	1144	1144	228

```

-----
value = 80 = 0x50 = 'P'
;

tekelecstp 08-01-19 04:46:47 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -m dd":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:47:03 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:47:03 EST EAGLE 38.0.0
END-0 Buffer Pool

```

```
-----
CLUSTER POOL TABLE
-----
size clusters  free      usage
-----
1536 800      480      0
-----

END-1 Buffer Pool
-----
CLUSTER POOL TABLE
-----
size clusters  free      usage
-----
1536 800      640      0
-----

;

tekelecstp 08-01-19 04:47:05 EST  EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -p icmp":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:47:13 EST  EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:47:13 EST  EAGLE 38.0.0
SDS Shell Output

-> icmpstatShow
ICMP:
  0 call to icmp_error
  0 error not generated because old message was icmp
Output histogram:
  echo: 1042
  0 message with bad code fields
  0 message < minimum length
  0 bad checksum
  0 message with bad length
Input histogram:
  echo reply: 1042
  0 message response generated
value = 30 = 0x1e

;

tekelecstp 08-01-19 04:47:13 EST  EAGLE 38.0.0
```

```
NETSTAT command complete

;

pass:cmd="netstat -p igmp":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:47:31 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:47:31 EST EAGLE 38.0.0
SDS Shell Output

-> igmpstatShow
IGMP:
    0 invalid queries received
    0 invalid reports received
    0 bad checksums received
    0 reports for local groups received
    0 membership queries received
    0 membership reports received
    0 short packets received
    0 total messages received
    0 membership reports sent
value = 27 = 0x1b

;

tekelecstp 08-01-19 04:47:31 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -p ip":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:47:50 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:47:50 EST EAGLE 38.0.0
SDS Shell Output

-> ipstatShow
      total 392695394
      badsum          0
      tooshort        0
      toosmall        0
      badhlen         0
```

```
        badlen          0
    infragments        0
    fragdropped        0
    fragtimeout        0
        forward        0
    fastforward        0
    cantforward        0
    redirectsent       0
    unknownprotocol    0
        delivered      392695394
        localout       712875071
    nobuffers          0
    reassembled        0
    fragmented         0
    outfragments       0
    cantfrag           0
    badoptions         0
        noroute        0
        badvers        0
        rawout         0
        toolong        0
    notmember          0
        nogif          0
        badaddr        0

value = 1 = 0x1

;

tekelecstp 08-01-19 04:47:50 EST  EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -p tcp":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:48:10 EST  EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:48:10 EST  EAGLE 38.0.0
SDS Shell Output

-> tcpstatShow
TCP:
    712802525 packets sent
        712802521 data packets (-1599247397 bytes)
        0 data packet (0 byte) retransmitted
        2 ack-only packets (0 delayed)
        0 URG only packet
        0 window probe packet
```

```

        0 window update packet
        3 control packets
392101363 packets received
        392101363 acks (for -1599247397 bytes)
        0 duplicate ack
        0 ack for unsent data
        0 packet (0 byte) received in-sequence
        0 completely duplicate packet (0 byte)
        0 packet with some dup. data (0 byte duped)
        0 out-of-order packet (0 byte)
        0 packet (0 byte) of data after window
        0 window probe
        0 window update packet
        0 packet received after close
        0 discarded for bad checksum
        0 discarded for bad header offset field
        0 discarded because packet too short
    3 connection requests
    0 connection accept
    1 connection established (including accepts)
    2 connections closed (including 0 drop)
    0 embryonic connection dropped
    392101363 segments updated rtt (of 44575243 attempts)
    1 retransmit timeout
        0 connection dropped by rexmit timeout
    0 persist timeout
    7 keepalive timeouts
        0 keepalive probe sent
        0 connection dropped by keepalive
    0 pcb cache lookup failed
value = 27 = 0x1b
;

tekelecstp 08-01-19 04:48:10 EST  EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -p sctp":loc=1106

Command Accepted - Processing

tekelecstp 08-01-24 05:41:04 EST  EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-24 05:41:04 EST  EAGLE 38.0.0
ip packets sent..... 214
    ip packets sent with data chunk..... 8
    control chunks (excluding retransmissions)..... 211
    ordered data chunks (excluding retransmissions).. 8
    unordered data chunks (excluding retransmissions) 0
    user messages fragmented due to MTU..... 0

```



```
retransmit data chunks sent..... 0
sacks sent..... 9
send failed..... 0
ip packets received..... 215
  ip packets received with data chunk..... 8
  control chunks (excluding duplicates)..... 211
  ordered data chunks (excluding duplicates)..... 8
  unordered data chunks (excluding duplicates)..... 0
  user messages reassembled..... 0
  data chunks read..... 8
  duplicate tsns received..... 0
  sacks received..... 9
  gap ack blocks received..... 0
  out of the blue..... 0
  with invalid checksum..... 0
connections established..... 1
  by upper layer..... 0
  by remote endpoint..... 1
connections terminated..... 0
  ungracefully..... 0
  gracefully..... 0
associations dropped due to retransmits..... 0
consecutive retransmit timeouts..... 0
retransmit timer count..... 0
fast retransmit count..... 0
heartbeat requests received..... 99
heartbeat acks received..... 99
heartbeat requests sent..... 99
associations supported..... 16
milliseconds cookie life at 4-way start-up handshake. 5000
retransmission attempts allowed at start-up phase.... 10

;

tekelecstp 08-01-24 05:41:04 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -p udp":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:48:40 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:48:40 EST EAGLE 38.0.0
SDS Shell Output

-> udpstatShow
UDP:
    714029 total packets
```

```
        612012 input packets
        102017 output packets
        0 incomplete header
        0 bad data length field
        0 bad checksum
        510042 broadcasts received with no ports
        0 full socket
        0 pcb cache lookup failed
        0 pcb hash lookup failed
value = 26 = 0x1a
;

tekelecstp 08-01-19 04:48:40 EST  EAGLE 38.0.0

NETSTAT command complete
;

pass:cmd="netstat -r":loc=1112

Command Accepted - Processing

tekelecstp 08-02-19 05:58:13 EST  EAGLE 38.0.0
PASS: Command sent to card
;

tekelecstp 08-02-19 05:58:13 EST  EAGLE 38.0.0
SDS Shell Output

-> tklc_routeShow

ROUTE NET TABLE
destination      gateway          flags  Refcnt  Use
Interface
-----
-
    172.20.48.0    172.20.48.250   33554689  0      0
DPLend0
    192.168.55.0   192.168.55.252  33554689  2      0
gei2
-----
-

ROUTE HOST TABLE
destination      gateway          flags  Refcnt  Use
Interface
-----
-
    127.0.0.1      127.0.0.1       35651589  3      15
lo0
```

```
192.168.99.100 192.168.55.211 33554439 0 0 gei2
-----
value = 0 = 0x0

;

tekelecstp 08-02-19 05:58:13 EST EAGLE 38.0.0

NETSTAT command

pass:cmd="netstat -d 0":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:49:16 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:49:16 EST EAGLE 38.0.0

Report Time      = 00-00-00 00:00:59.001
Card Load Time   = 00-00-00 00:00:09.905
Last Reset Time  = 00-00-00 00:00:09.905

crc err = 0          align err = 0          symbol err = 0
rx err = 0          missed pkt = 0        sequence err = 0
cr ex er = 0       rx len err = 0       rx no buf = 0
rx total = 243721  rx undersz = 0       rx frag = 0
good pkt rx= 243721 rx bcast = 11652     rx mcast = 0
rx oversz = 0       rx jabber = 0        collision = 0
tx total = 381079  late coln = 0       tx underun = 0
good pkt tx= 381079 tx bcast = 0          tx mcast = 0
defer count = 0          tx no crs = 0
good octets rx = 16988038 total octets rx = 16988038
good octets tx = 137538057 total octets tx = 137538057

;

tekelecstp 08-01-19 04:49:16 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -d 0 -z":loc=1111

tekelecstp 08-01-19 04:50:07 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:50:07 EST EAGLE 38.0.0

Driver measurements for unit 0 cleared

;
```

```
tekelecstp 08-01-19 04:50:07 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -d 0 -f":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:50:22 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:50:22 EST EAGLE 38.0.0

Report Time          = 00-00-00 00:01:01.335
Card Load Time       = 00-00-00 00:00:09.905
Last Reset Time      = 00-00-00 00:00:46.665

crc err = 0          align err = 0          symbol err = 0
rx err = 0          missed pkt = 0        sequence err = 0
cr ex er = 0       rx len err = 0       rx no buf = 0
rx total = 13562   rx undersz = 0       rx frag = 0
good pkt rx= 13562 rx bcast = 149       rx mcast = 0
rx oversz = 0      rx jabber = 0        collision = 0
tx total = 22019   late coln = 0        tx underun = 0
good pkt tx= 22019 tx bcast = 0          tx mcast = 0
single col = 0     excess coln = 0      multi colsn = 0
pkt rx 64 = 179   pkt rx 127 = 13383   pkt rx 255 = 0
pkt rx 511 = 0    pkt rx 1023 = 0      pkt rx 1522 = 0
pkt tx 64 = 30    pkt tx 127 = 0       pkt tx 255 = 0
pkt tx 511 = 21989 pkt tx 1023 = 0      pkt tx 1522 = 0
tcp cxt tx = 0    rx FIFO head = 0x00000caf rx FIFO tail =
0x00000caf
rx FIFO pc = 0    rx FIFO hs = 0x00000caf rx FIFO ts =
0x00000caf
tcp tx fc = 0    tx FIFO head = 0x00001f30 tx FIFO tail =
0x00001f30
tx FIFO pc = 0    tx FIFO hs = 0x00001f30 tx FIFO ts =
0x00001f30
XON rcv = 0      XON xmit = 0         XOFF rcv = 0
XOFF tx = 0      unsupport FC = 0
defer count = 0  tx no crs = 0
good octets rx = 948266 total octets rx = 948266
good octets tx = 7983927 total octets tx = 7983927

;

tekelecstp 08-01-19 04:50:22 EST EAGLE 38.0.0
5463.1083 SYSTEM INFO REPT COND: system alive
Report Date:02-01-19 Time:04:50:24
```

```
;
tekelecstp 08-01-19 04:50:22 EST EAGLE 38.0.0
NETSTAT command complete
;
```

6.1.12 nslookup

This command returns the IP address for a given hostname, or returns a hostname for a given IP address.

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `nslookup` command has the option destination. An IP address or hostname can be specified for the destination, as in the commands `nslookup 192.168.100.3` and `nslookup dcm1107a`. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

destination

The destination can be either an IP address or hostname.

IP address

The IP address is a TCP/IP address expressed in standard “dot notation.” IP addresses consist of the system’s network number and the machine’s unique host number. An example IP address is `192.9.200.44`, where `192.9.200` is the network number and `44` is the machine’s host number.

Range:

4 numbers separated by dots, with each number in the range of 0-255.

hostname

Hostname. The logical name assigned to the device with the IP address indicated.

Range:

`a-z, A-Z, 0-9, -, .`

(any string of characters beginning with a letter and comprising up to 60 characters in length)

`-h`

This option provides help information for the command.

Example

```
nslookup 192.9.200.44
```

```
nslookup nc.tekelec.com
```

```
nslookup 2005:1a3c:2a3e:12ef:9064:8b6c:567a:78fd
```

Dependencies

The actual `nslookup` text string must be followed by a destination (either a hostname or IP address).

Whether a host is found depends on the configuration of the host table and domain name servers.

Notes

The `nslookup` command is executed through the `pass` command.

Output

```
pass:loc=1105:cmd="nslookup"
or
pass:loc=1105:cmd="nslookup -h"

Command Accepted - Processing
  rlghncxa03w 04-07-27 08:43:21 EST  EAGLE5 31.6.0
  pass:loc=1105:cmd="nslookup"
  Command entered at terminal #1.
;
  rlghncxa03w 04-07-27 08:43:21 EST  EAGLE5 31.6.0
  PASS: Command sent to card
;
  rlghncxa03w 04-07-27 08:43:21 EST  EAGLE5 31.6.0

Usage: nslookup [hostname|ipaddr]

Options:
  hostname  String name
  ipaddr    d.d.d.d
;
  rlghncxa03w 04-07-27 08:43:22 EST  EAGLE5 31.6.0
  NSLOOKUP command complete

pass:loc=1105:cmd="nslookup dcm1107a"

Command Accepted - Processing
  rlghncxa03w 04-07-27 08:43:46 EST  EAGLE5 31.6.0
  pass:loc=1105:cmd="nslookup dcm1107a"
  Command entered at terminal #1.
;
  rlghncxa03w 04-07-27 08:43:46 EST  EAGLE5 31.6.0
  PASS: Command sent to card
;
  rlghncxa03w 04-07-27 08:43:46 EST  EAGLE5 31.6.0

  NSLOOKUP command in progress
;
  rlghncxa03w 04-07-27 08:43:46 EST  EAGLE5 31.6.0

  Configured Domain Name Data
```

```
DNNSA = 192.168.100.3
DNNSB = 0.0.0.0
Domain Name = nc.tekelec.com
Search Order = LOCAL First

Resolving host name - dcm1107a

Host Table entry
    dcm1107a - 192.168.100.113
DNS Server - No entry exists

Currently using Host Table entry

NSLOOKUP command complete
;

pass:loc=1105:cmd="nslookup 198.89.40.60"

Command Accepted - Processing

    rlghncxa03w 04-07-27 13:21:49 EST EAGLE5 31.6.0
pass: loc=1105: cmd="nslookup 198.89.40.60"
Command entered at terminal #1.
;

    rlghncxa03w 04-07-27 13:21:49 EST EAGLE5 31.6.0
PASS: Command sent to card
;

    rlghncxa03w 04-07-27 13:21:49 EST EAGLE5 31.6.0

NSLOOKUP command in progress

;

    rlghncxa03w 04-07-27 13:21:49 EST EAGLE5 31.6.0

Configured Domain Name Data

DNNSA = 198.89.40.60
DNNSB = 0.0.0.0
Domain Name = nc.tekelec.com
Search Order = LOCAL First

Resolving IP address - 198.89.40.60

Host Table - No entry exists
DNS Server
    tekral.nc.tekelec.com - 198.89.40.60

Currently using DNS Server entry
```

NSLOOKUP command complete

6.1.13 pct

This command is used to maintain per-translation statistics and to test Point Code and CIC Translation (PCT) functionality. The command can use Stats mode to reset or display per-translation statistics or Test mode to test PCT behavior.

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-h

This option is used to provide help information for the command.

The following options are common to both Stats mode and Test mode:

-p pctype

Point Code Type. This option applies to all point codes in the option list.

Range:

ansi, itui, itun

Default

ansi

The following options apply to only Stats mode:

-a realpc

Real Point Code

-c cicr

CIC range. This option can be specified only if SI is 4, 5, or 13.

Range:

The option can be in one of these forms:

- wildcard(*)
- *ecics-ecice:rcics-rcice*, e.g., *5-10:15-20*
- *ecics:rcics* (e.g., *5:6*, which is equivalent to *5-5:6-6*)

-e epc

Emulated Point Code

-f fpc

Filter Point Code. This option can be a wildcard (*).

-l

List the stats for the selected rules. The -e or -a option must be supplied. Both of these options can be specified.

-r

Resets the stats for selected rules. If no other options are specified, then this option resets stats on all rules. If other options are specified, then the `-e` or `-a` option must be specified.

`-s si`

Range:

0, 3, 4, 5, 13, or wildcard (*)

`-u ssn`

Subsystem Number. The `si=3` option must be specified before this option can be specified. This option can be a wildcard (*)

The following options apply only to Test mode.

`-c cic`

CIC in simulated MSU. If a value of 4, 5, or 13 is specified for the `si` option, then the `-c` must be specified.

`-d dpc`

Destination Point Code in simulated MSU.

`-o opc`

Originating Point Code in simulated MSU.

`-s si`

SI in simulated MSU.

`-u ssn`

Subsystem number in CgPA and CdPA in simulated MSU. The `si=3` option must be specified before the `-u` option can be specified. If the `-u` is not specified, and the `si=3` is specified, then the route on SSN is off.

```
pass:loc=1201:cmd="pct -h"
```

```
pass:loc=1201:cmd="pct -m stats -r -e 4-3-1"
```

```
pass:loc=1201:cmd="pct -m test -d 4-3-1 -o 7-2-30 -s 3 -u 26"
```

Dependencies

None

Notes

None

Output

This example shows a help report:

```
pass:loc=1201:cmd="pct -h"
```

```
Command Accepted - Processing
```

```
Usage:
```

```
pct -m stats [-l | -r] [-p pctype] [-e epc] [-f fpc] [-a realpc] [-s  
si] [-u ssn] [-c cicr]
```

```
pct -m test [-p pctype] -d dpc -o opc -s si [-c cic] [-u ssn]
```

```
pct -h
```

```
Modes:
```

```

stats - reset or display per-rule stats
test  - test PCT behavior for a message with the specified field
values
Common Options:
-p    pctype is ANSI, ITUI, or ITUN
stats Mode Options:
-r    reset the stats for selected rules
      with no other options, resets stats on all rules
      if other options present, -e or -a must be supplied
-l    list the stats for selected rules (default)
      the -e or -a option must be supplied
      both -e and -a may be supplied
-e    emulated point code
-a    real point code
-c    cicr is in these forms:
      * (see Note 1)
      ecics-ecice:rcics-rcice, e.g., 5-10:15-20
      ecics:rcics, e.g., 5:6 which is equiv to 5-5:6-6
      allowed only if SI is 4, 5, or 13
-f    filter pc; may be * (see Note 1)
-s    si; can be 0, 3, 4, 5, 13, or * (see Note 1)
-u    ssn; may be * (see Note 1)
      allowed only if SI is 3
test Mode Options:
-d    DPC in simulated MSU
-o    OPC in simulated MSU
-s    SI in simulated MSU
-u    SSN in CgPA and CdPA in simulated MSU;
      if absent and si is 3, indicates that route on SSN is off;
      allowed only if SI is 3
-c    CIC in simulated MSU;
      required if SI is 4, 5, or 13
Notes:
1. an explicit * will match only with rule containing a
wildcard; to match
      on wildcard or a specific value, do not specify the
associated option

```

Stats Mode

With the `-l` option, all matching translations are displayed along with the following three statistics for each translation:

- DPCLKP – Number of successful translations of the DPC and/or CIC of a message (the number of successful DPC lookups).
- OPCLKP – Number of successful translations of the OPC and/or CIC of a message (the number of successful OPC lookups).
- MSUDISC – Number of messages discarded after successfully translating the DPC of a message from an emulated point code to a real point code, but where the real point code is unreachable.

The IDX (index) column is the unique row number of the entry in the PCT table. The index for a particular translation is the same across all cards.

The output for a single translation consists of two or three lines.

For translations with an SI of 4, 5, or 13, the CIC range field is displayed only for translations with a specific value for the CIC range.

This example lists all translations with an EPC of 4-3-1 (ANSI):

```
pass:loc=1201:cmd="pct -m stats -l -e 4-3-1"
```

Command Accepted - Processing

idx	epc	rpc	fpc	si	ssn
6	004-003-001	007-003-001	007-002-030	3	24
	dpclkp: 0	opclkp: 0	msudisc: 0		
7	004-003-001	007-003-002	007-002-030	3	26
	dpclkp: 0	opclkp: 0	msudisc: 0		
8	004-003-001	007-003-006	007-002-030	5	---
	ecic: 100-105	rcic: 200-205			
	dpclkp: 0	opclkp: 0	msudisc: 0		
9	004-003-001	007-003-011	007-002-*	3	24
	dpclkp: 0	opclkp: 0	msudisc: 0		
10	004-003-001	007-003-016	007-*-*	3	24
	dpclkp: 0	opclkp: 0	msudisc: 0		
11	004-003-001	007-003-021	007-002-030	3	*
	dpclkp: 0	opclkp: 0	msudisc: 0		
12	004-003-001	007-003-026	007-002-030	5	---
	dpclkp: 0	opclkp: 0	msudisc: 0		
13	004-003-001	007-003-031	007-002-*	3	*
	dpclkp: 0	opclkp: 0	msudisc: 0		
14	004-003-001	007-003-036	007-003-*	3	*
	dpclkp: 0	opclkp: 0	msudisc: 0		
15	004-003-001	007-003-041	007-*-*	3	*
	dpclkp: 0	opclkp: 0	msudisc: 0		
16	004-003-001	007-003-046	008-*-*	3	*
	dpclkp: 0	opclkp: 0	msudisc: 0		
17	004-003-001	007-003-051	007-002-029	*	---
	dpclkp: 0	opclkp: 0	msudisc: 0		
18	004-003-001	007-003-056	007-002-030	*	---
	dpclkp: 0	opclkp: 0	msudisc: 0		
19	004-003-001	007-003-061	007-002-*	*	---
	dpclkp: 0	opclkp: 0	msudisc: 0		
20	004-003-001	007-003-066	007-*-*	*	---
	dpclkp: 0	opclkp: 0	msudisc: 0		
21	004-003-001	007-003-071	-----	3	24
	dpclkp: 0	opclkp: 0	msudisc: 0		
22	004-003-001	007-003-076	-----	5	---
	ecic: 100-105	rcic: 200-205			
	dpclkp: 0	opclkp: 0	msudisc: 0		
23	004-003-001	007-003-081	-----	3	*
	dpclkp: 0	opclkp: 0	msudisc: 0		
24	004-003-001	007-003-086	-----	5	---
	dpclkp: 0	opclkp: 0	msudisc: 0		
25	004-003-001	007-003-091	-----	*	---
	dpclkp: 0	opclkp: 0	msudisc: 0		

This example resets counters for all translations with an EPC of 4-3-1 (ANSI):

```
pass:loc=1201:cmd="pct -m stats -r -e 4-3-1"
```

```
Command Accepted - Processing
```

```
Stats reset on 20 rules
```

Test Mode

Test mode allows determination of whether an incoming message with the specified field values would result in a match on an entry in the PCT table. Output includes the content of the message, as specified on the command line, the lookup result, and the matching entry if a match exists.

This example shows a match on the DPC lookup:

```
pass:loc=1201:cmd="pct -m test -d 4-3-1 -o 7-2-30 -s 3 -u 26"
```

```
Command Accepted - Processing
```

```
Point Code and CIC Translation Lookup Test
```

```
MSU content:
```

```
OPC:    007-002-030
DPC:    004-003-001
SI:      3
SSN:    26
```

```
Lookup result:
```

```
Match on DPC was found
```

```
Matching entry:
```

idx	epc	rpc	fpc	si	ssn
7	004-003-001	007-003-002	007-002-030	3	26

This example shows a match on the OPC lookup:

```
pass:loc=1201:cmd="pct -m test -d 7-2-30 -o 7-3-2 -s 3 -u 26"
```

```
Command Accepted - Processing
```

```
Point Code and CIC Translation Lookup Test
```

```
MSU content:
```

```
OPC:    007-003-002
DPC:    007-002-030
SI:      3
SSN:    26
```

```
Lookup result:
```

```
Match on OPC was found
```

```
Matching entry:
```

idx	epc	rpc	fpc	si	ssn
7	004-003-001	007-003-002	007-002-030	3	26

This example shows a match on a DPC lookup where the matching translation has a wildcard Filter PC and a wildcard SI:

```
pass:loc=1201:cmd="pct -m test -d 4-3-1 -o 9-9-9 -s 4 -c 106"
```

```
Command Accepted - Processing
```

```
Point Code and CIC Translation Lookup Test
MSU content:
  OPC:    009-009-009
  DPC:    004-003-001
  SI:      4
  CIC:      106
Lookup result:
  Match on DPC was found
Matching entry:
idx      epc      rpc      fpc si ssn
25      004-003-001  007-003-091 ----- * ---
```

6.1.14 ping

This command is used to test for the presence of hosts on the network. This command is invoked with a destination (either a hostname or IP address).

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `ping` command has the option destination. An IP address or hostname can be specified for the destination, as in the commands `ping 192.9.200.44` and `ping nc.tekelec.com`. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

destination

The destination can be either an IP address or hostname.

IP address

The IP address is a TCP/IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number. An example IP address is `192.9.200.44`, where `192.9.200` is the network number and `44` is the machine's host number.

Range:

4 numbers separated by dots, with each number in the range of 0-255.

hostname

Hostname. The logical name assigned to the device with the IP address indicated.

Range:

any string of characters beginning with a letter and comprising (a..z, A..Z, 0..9, '-', or '.') up to 120 characters in length.

-i

The number of ping requests to send.

Range:
1 - 5

Default:
3

-n
The size of message to use in test.

Range:
12 - 2048

Default:
64

-h
This option provides help information for the command.

-f
This option sets the DF (Don't Fragment) bit in the IP header of ICMP packet.

-v
Virtual Router Table.

Range:
0, 1

Default:
0

Example

```
ping 192.9.200.44
ping nc.tekelec.com

ping 192.9.200.44 -i 5 -n 2048
ping 10.254.111.21 -f -n 1480
ping 10.254.103.13 -v 1
```

Dependencies

The actual `ping` text string must be followed by a destination (either a hostname or IP address) prior to the options.

Notes

The `ping` command is executed through the `pass` command.

The `-v` option in the `ping` command is mainly used for IPSG (SLIC card) to select the Virtual Router table to ping remote end, when there are multiple IP interfaces.

Port A and B pings remote end via Virtual Router 0

```
pass:loc=1111:cmd="ping 10.254.103.12 -v 0"
```

Port C and D pings remote end via Virtual Router 1

```
pass:loc=1111:cmd="ping 10.254.103.31 -v 1"
```

Output

```
pass:loc=1105:cmd="ping" or
pass:loc=1105:cmd="ping -h"
```

Command Accepted - Processing

```
rlghncxa03w 04-07-27 08:29:35 EST EAGLE5 31.6.0
pass:loc=1105:cmd="ping"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:29:35 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:29:35 EST EAGLE5 31.6.0

Usage: ping <hostname | ipaddr> [-h] [-i size] [-n count]
Options:
  -f          Sets the DF (Don't Fragment) bit in IP header of ICMP
packet.
  -h          Displays this message
  -i count    Number of pings to send. Range=1..5. Default=3.
  -n size     Sets size of ICMP echo packet. Range=12..2048. Default=64.
hostname     Name of machine to ping
ipaddr       IP Address of machine to ping (d.d.d.d)
;
rlghncxa03w 04-07-27 08:29:36 EST EAGLE5 31.6.0

PING command complete
;
```

```
pass:loc=1105:cmd="ping tekral"
```

Command Accepted - Processing

```
rlghncxa03w 04-07-27 08:30:16 EST EAGLE5 31.6.0
pass:loc=1105:cmd="ping tekral"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:30:16 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:30:16 EST EAGLE5 31.6.0
PING command in progress
;
rlghncxa03w 04-07-27 08:30:18 EST EAGLE5 31.6.0
PING tekral (192.168.100.3): 56 data bytes
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=0.time=5. ms
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=1.time=0. ms
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=2.time=0. ms
----tekral PING Statistics----
```

```
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 0/1/5
```

```
PING command complete
```

```
;
```

```
pass:loc=1105:cmd="ping 192.168.100.3"
```

```
Command Accepted - Processing
```

```
rlghncxa03w 04-07-27 08:30:44 EST  EAGLE5 31.6.0
```

```
pass:loc=1105:cmd="ping 192.168.100.3"
```

```
Command entered at terminal #1.
```

```
;
```

```
rlghncxa03w 04-07-27 08:30:44 EST  EAGLE5 31.6.0
```

```
PASS: Command sent to card
```

```
;
```

```
rlghncxa03w 04-07-27 08:30:44 EST  EAGLE5 31.6.0
```

```
PING command in progress
```

```
;
```

```
rlghncxa03w 04-07-27 08:30:46 EST  EAGLE5 31.6.0
```

```
PING 192.168.100.3: 56 data bytes
```

```
64 bytes from tekral.nc.tekelec.com
```

```
(192.168.100.3):icmp_seq=0.time=5. ms
```

```
64 bytes from tekral.nc.tekelec.com
```

```
(192.168.100.3):icmp_seq=1.time=0. ms
```

```
64 bytes from tekral.nc.tekelec.com
```

```
(192.168.100.3):icmp_seq=2.time=0. ms
```

```
----192.168.100.3 PING Statistics----
```

```
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 0/1/5
```

```
PING command complete
```

```
;
```

```
pass:loc=1105:cmd="ping tekral -i 2"
```

```
Command Accepted - Processing
```

```
rlghncxa03w 04-07-27 08:31:46 EST  EAGLE5 31.6.0
```

```
pass:loc=1105:cmd="ping tekral -i 2"
```

```
Command entered at terminal #1.
```

```
;
```

```
rlghncxa03w 04-07-27 08:31:46 EST  EAGLE5 31.6.0
```

```
PASS: Command sent to card
```

```
;
```

```
rlghncxa03w 04-07-27 08:31:46 EST  EAGLE5 31.6.0
```

```
PING command in progress
```

```
;
```

```
rlghncxa03w 04-07-27 08:31:47 EST  EAGLE5 31.6.0
```

```
PING tekral (192.168.100.3): 56 data bytes
```



```
64 bytes from tekral.nc.tekelec.com(192.168.100.3):icmp_seq=0.time=10. ms
64 bytes from tekral.nc.tekelec.com(192.168.100.3):icmp_seq=1.time=0. ms
----tekral PING Statistics----
2 packets transmitted, 2 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 0/5/10

PING command complete
;

pass:loc=1105:cmd="ping tekral -i 2 -n 200"

rlghncxa03w 04-07-27 08:32:09 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="ping tekral -i 2 -n 200"
Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:09 EST  EAGLE5 31.6.0

PING command in progress
;

rlghncxa03w 04-07-27 08:32:10 EST  EAGLE5 31.6.0
PING tekral (192.168.100.3): 192 data bytes
200 bytes from tekral.nc.tekelec.com(192.168.100.3):icmp_seq=0.time=5. ms
200 bytes from tekral.nc.tekelec.com(192.168.100.3):icmp_seq=1.time=0. ms
----tekral PING Statistics----
2 packets transmitted, 2 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 0/2/5

PING command complete
;

pass:loc=1107:cmd="ping meat18a -v 1"

Command Accepted - Processing

tklcl1161001 20-08-30 21:52:34 MST  EAGLE 46.9.0.0.0-76.28.0
pass:loc=1107:cmd="ping meat18a -v 1"
Command entered at terminal #1.
;

tklcl1161001 20-08-30 21:52:34 MST  EAGLE 46.9.0.0.0-76.28.0
PASS: Command sent to card
;

tklcl1161001 20-08-30 21:52:34 MST  EAGLE 46.9.0.0.0-76.28.0
PING command in progress
;

tklcl1161001 20-08-30 21:52:34 MST  EAGLE 46.9.0.0.0-76.28.0
;

tklcl1161001 20-08-30 21:52:36 MST  EAGLE 46.9.0.0.0-76.28.0
PING meat18a (10.254.103.78): 56 data bytes
64 bytes from meat18a (10.254.103.78): icmp_seq=0. time=0. ms
64 bytes from meat18a (10.254.103.78): icmp_seq=1. time=0. ms
```

```
64 bytes from meat18a (10.254.103.78): icmp_seq=2. time=0. ms
----meat18a PING Statistics----
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 0/0/0
```

```
PING command complete
```

```
;
```



Note:

In this example, the response shows eight bytes less than the entry (192 as opposed to 200) because the `ping` command may use eight bytes automatically.

```
pass:loc=1308:cmd="ping 10.254.111.21 -f -n 1480"
```

```
Command Accepted - Processing
```

```
eagle10212 12-06-19 10:07:42 EST EAGLE5 44.0.0-64.33.0
```

```
pass:loc=1380:cmd="ping 10.254.111.21 -f - n 1480"
```

```
Command entered at terminal #5.
```

```
eagle10212 12-06-19 10:07:42 EST EAGLE5 44.0.0-64.33.0
```

```
PING command in progress
```

```
;
```

```
eagle10212 12-06-16 10:07:42 EST EAGLE5 44.0.0-64.33.0
```

```
PING 10.254.111.21: 1472 data bytes
```

```
DF bit set. Fragmentation Needed
```

```
PING: no answer from 10.254.111.21
```

```
PING command complete
```

```
;
```

```
pass:loc=1308:cmd="ping 10.254.111.21 -f -n 1380"
```

```
Command Accepted -Processing
```

```
eagle10212 12-06-19 10:06:58 EST EAGLE5 44.0.0-64.33.0
```

```
pass:loc=1308:cmd="ping 10.254.111.21 -f -n 1380"
```

```
Command entered at terminal #5.
```

```
eagle10212 12-06-19 10:06:58 EST EAGLE5 44.0.0-64.33.0
```

```
PING command in progress
```

```
;
```

```
eagle10212 12-06-19 10:06:58 EST EAGLE5 44.0.0-64.33.0
```

```
;
```

```
eagle10212 12-06-19 10:07:00 EST EAGLE5 44.0.0-64.33.0
```

```

PING 10.254.111.21: 1372 data bytes
1380 bytes from e1021301.1308a (10.254.111.21): icmp_seq=0. time=329319.
ms
1380 bytes from e1021301.1308a (10.254.111.21): icmp_seq=1. time=330319.
ms
1380 bytes from e1021301.1308a (10.254.111.21): icmp_seq=2. time=331319.
ms
----10.254.111.21 PING Statistics----
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 329319/330319/331319

PING command complete

;
```

6.1.15 sctp

This command is used to provide a view of SCTP instance and association information.

Options

`-a aname`

This option is used to retrieve the measurements and information for a specific association.

`-l`

This option is used to display logging details for associations. The logging details are independent of the association state (close or open).

`-p <port>`

This option is used to retrieve the measurements for a specified SCTP port.

`-r`

This option is used to reset specified measurements. The associated report is not displayed.

`-h`

This option is used to display help information for the command. Either brief or full help reports can be generated.

`-m`

This option is used to display SCTP incoming/outgoing (IO) header audit reports for common and dedicated IO header pools. The IO header is a transmission sequence number (TSN) control block used in processing SCTP chunks. The report shows total, currently available, and minimum IO header counts for the IO header pool shared by all associations (common pool) and the IO header pool for each association (dedicated pool).

Example

```

pass:cmd="sctp -a aname":loc=1307
pass:cmd="sctp -l":loc=1307

pass:cmd="sctp -l aname":loc=1307

pass:cmd="sctp -p port":loc=1307

pass:cmd="sctp -r -a aname":loc=1307

pass:cmd="sctp -r -l aname":loc=1307
```

```
pass:cmd="sctp -m"
```

```
pass:cmd="sctp"
```

Dependencies

The `-r` option can be specified in the same command as the `-a`, `-p`, or `-l` option. Otherwise, only one option can be specified at a time.

Notes

None

Output

Either brief or full help reports can be displayed. A full help report is generated by adding the `-h full` option to the command line.

This example shows a brief help report:

```
pass:loc=1305:cmd="sctp -h"
```

```
Usage: [ [[[-a aname] | [-p port] | [-l [aname]]] [-r [-s]]] | [-m] | [-h [full]] ]
```

Options:

(no parameters)	display list of SCTP ports
-a aname	display association report
-p port	display SCTP port report
-r	reset specified SCTP measurements
-m	display IO header usage report
-l aname	display association event log
-l	display all event logs
-r -l	reset all SCTP event logs
-r -s	reset all SCTP measurements and pegs
-h	displays command help (brief or full)

```
;
```

```
rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0
```

```
SCTP command complete
```

```
;
```

This example shows a full help report:

```
pass:loc=1307:cmd="sctp -h full"
```

```
Usage: sctp [[[-a aname] | [-p port] | [-l [aname]]] [-r [-s]]] | [-m] | [-h [full]]]
```

Options:

(no parameters)	display list of SCTP ports
-a aname	display association report

```

-p port          display Sctp port report
-r              reset specified Sctp measurements
-m             display IO header usage report
-l aname       display association event log
-l            display all event logs
-r -l         reset all Sctp event logs
-r -s        reset all Sctp measurements and pegs
-h           displays command help (brief or full)

```

no parameters option

Summary list of all Sctp instances. To list all the Sctp ports issue the following command:

```
sctp
```

-a aname option details

Retrieves detailed information and measurements for a specific association. For example the following Sctp command will get the measurements and detailed information for the association with association name = assoc1.

```
sctp -a assoc1
```

In remote address field of output configured RHOST or ARHOST or both

IP

address will be displayed based on the presence in association

remote network

```
array
```

-p port option details

Retrieves detailed information for a specified Sctp port. For example the following Sctp command will get the detailed information for the Sctp port with a local port of 200.

```
sctp -p 200
```

In remote address field of output configured RHOST or ARHOST or both

IP

address will be displayed based on the presence in association

remote network

```
array
```

-r option details

Resets specified Sctp Measurements. See examples below.

Resets measurements for specified association:

```
sctp -r -a assoc
```

Resets measurements for all associations on port 2000:

```
sctp -r -p 2000
```

Resets measurements and event logs for all ports/associations:

```
sctp -r
```

Resets event logs for specified association:

```
sctp -r -l assoc
```

Resets event logs for all associations:

```
sctp -r -l
```

Resets measurements for all associations:

```
sctp -r -s
```

-m

This option displays Sctp IO header audit report for common and dedicated IO header pools. The report shows total, currently

available and minimum (low water mark) IO header counts for common and each association's dedicated pool. IO header is a TSN control block used in processing SCTP chunks.

Common pool is IO header pool shared by all associations. Dedicated pool is a per-association IO header pool.
sctp -m;

-l option details

This option displays logging details for associations. The logging details are independent of the association state (close or open).

See examples below:

The following SCTP command will get the logging details for all associations on the specified card.

```
sctp -l
```

The following SCTP command will get the logging details for the association with association name = assoc1.

```
sctp -l assoc1
```

```
;
rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0

SCTP command complete
```

```
;
```

This example shows a summary list of all SCTP ports. All SCTP ports and number of associations associated with each port is displayed.

```
pass:loc=1307:cmd="sctp"
```

```
rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0
Local   Local IP      Num of
Port    Address        Assoc
7001    192.168.110.35    1
2222    192.168.110.12 3
        192.168.112.12
```

```
;
```

```
rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0

SCTP command complete
```

```
;
```

This example shows specific SCTP association information and measurements:

```
pass:loc=1307:cmd="sctp -a assoc1"
```

```
e1090203 10-11-01 12:52:56 EST EAGLE 43.0.0
Aname      Local      Local  Remote
           Address   Port   Address  Port     Remote
assoc1     192.168.110.12 2222  192.168.112.4 5555
           192.168.112.12      192.168.110.2
```

```
Configuration                               State
Retransmission Mode = LIN                   State = OPEN
Min. Retransmission Timeout = 10000         ULP association id = 18
Max. Retransmission Timeout = 800000       Number of nets = 2
Max. Number of Retries = 10                 Inbound Streams = 1
Min. Congestion Window = 3000              Outbound Streams = 2
Inbound Streams = 2
Outbound Streams = 2
Checksum Algorithm = crc32c
Send/Rcv Buffer Size = 204800
```

Nets Data

```
IP Address 192.168.112.4      State Reachable
Port       5555                       Primary YES
MTU        1500                       cwnd  16384
ssthresh   16384                     RTO   120
IP Address 192.168.112.5      State Reachable
Port       5555                       Primary NO
MTU        1500                       cwnd  16384
ssthresh   16384                     RTO   120
IP Address 192.168.110.2     State Reachable
Port       5555                       Primary NO
MTU        1500                       cwnd  16384
ssthresh   16384                     RTO   120
```

```
Last Net Sent To = 192.168.112.4
Last Net Rcvd From = 192.168.112.4
Over All Error Count = 0
Peers Rwnd = 13880
My Rwnd = 16384
Max Window = 16384
Initial Seq Number = 24130
Next Sending Seq Number = 124686
Last Acked Seq Number = 124669
Maximum Outbound Char Count = 16384
Current Outbound Char Count = 2112
Number Unsent Char Count = 0
Outbound Data Chunk Count = 16
Number Unsent = 0
Number To Retransmit = 0
```

```
ip datagrams rcvd = 155402
ip datagrams with data chunks rcvd = 120844
data chunks rcvd = 367908
data chunks read = 367900
```

```

                dup tsns rcvd = 8
                sacks rcvd = 38734
            gap ack blocks rcvd = 3
        heartbeat requests rcvd = 135
            heartbeat acks rcvd = 52
        heartbeat requests sent = 52
            ip datagrams sent = 129254
        ip datagrams with data chunks sent = 73084
            data chunks sent = 396330
        retransmit data chunks sent = 135
            sacks sent = 64872
            send failed = 0
        retransmit timer count = 0
        consecutive retransmit timeouts = 0
        RTO between RMIN and RMAX inclusive = 6
        RTT greater than RMAX = 0
        fast retransmit count = 135
            recv timer count = 0
        heartbeat timer count = 244
            none left tosend = 0
            none left rwnd gate = 5
            none left cwnd gate = 8
            UNKNOWN = 0
;

e1090203 10-11-01 12:52:56 EST  EAGLE 43.0.0

SCTP command complete

;

```

Field Descriptions for `sctp -a` Output

- Local Address-IP Address of the near end. The address that the local SCTP endpoint should bind.
- Local Port-SCTP port number, if ULP wants it to be specified.
- Remote Address-IP Address of the far end/destination. Destination address for transporting DATA.
- Remote Port-Port number of the destination.

Configuration:[Following rows are SCTP configured values]

- Retransmission Mode-Configured retransmission mode. Values are "LIN" or "RFC".
- Min. Retransmission Timeout-Minimum Retransmission Timeout value configured.
- Max. Number of Retries-Configured maximum number of retries.
- Min. Congestion Window-Minimum and initial congestion window.
- Inbound Streams-The maximum number of inbound streams this association allows the peer end to create. The value can not be 0.
- Outbound Streams-The maximum number of outbound streams this association allows the peer end to create. The value can not be 0.

State: [Following rows are association state values]

- State-State of the association.
- ULP association id-Upper Layer Protocol association id.
- Number of nets-Number of networks.
- Inbound Streams-Number of Inbound streams the far end can support.
Min(requested,offered)
- Outbound Streams-Number of Outbound streams the far end can support.
Min(requested,offered)
- Checksum Algorithm-32 bit checksum field that is included in the SCTP common header. The CRC32c checksum should be set by the sender of each SCTP packet to provide additional protection against data corruption in the network.
- Send/Rcv Buffer Size-The maximum size of data to be transmitted/received in bytes.
- Nets Data-All of the available remote IP addresses and if they are reachable or not.
- Last Net Sent To-IP address of the last network sent on.
- Last Net Rcvd From-IP address of the last network received on.
- Over All Error Count-Total error count on the association.
- Peers Rwnd-The peers receive window.
- My Rwnd-My receive window.
- Max Window-Maximum receive window (the peers receive window is set to this value until it is learned).
- Initial Seq Number-Initial sequence number started at.
- Next Sending Seq Number-Next Sending sequence number.
- Last Acked Seq Number-Highest consecutive TSN that has been Acked.
- Maximum Outbound Char Count-Maximum outbound byte count (high water mark).
- Current Outbound Char Count-Current outbound byte count.
- Number Unsent Char Count-Number of unsent bytes.
- Outbound Data Chunk Count-Number of data chunks that were sent.
- ip datagrams rcvd-Number of IP packets received.
- ip datagrams with data chunks rcvd-Number of IP packets containing SCTP data chunks received.
- data chunks rcvd-Number of SCTP data chunks received.
- data chunks read-Number of SCTP data chunks read.
- dup tsns rcvd-Number of duplicate data chunks received.
- sacks rcvd-Number of selective acknowledgements received.
- gap ack blocks rcvd-Indicates the number of GAP Ack Blocks included in a SACK. This value informs the peer endpoint of gaps in the received sequences of DATA chunks as represented by their TSNS.
- heartbeat requests rcvd-Number of heartbeat requests received.
- heartbeat acks rcvd-Number of heartbeat acknowledges received.

- heartbeat requests sent-Number of heartbeat requests sent.
- ip datagrams sent-Number of IP packets transmitted.
- ip datagrams with data chunks sent-Number of IP packets containing SCTP data transmitted.
- data chunks sent-Number of data chunks sent.
- retransmit data chunks sent-Number of retransmitted data chunks for this association.
- sacks sent-Number of selective acknowledgements sent.
- send failed-Number of selective acknowledgements failed.
- retransmit timer count-Reports the retransmit timer count. Number of times the transmit timer has expired.
- consecutive retransmit timeouts-Count of the number of times consecutive timeouts occurred.
- RTO between RMIN and RMAX inclusive-If the calculated RTO is between the configured RMIN value and the RMAX value inclusively, then increment this peg count. This peg serves as an indication that the RMIN value may be configured incorrectly and will possibly cause frequent retransmits to occur due to RTO fluctuations.
- RTT greater than RMAX-If the calculated RTT is above the configured RMAX value, then increment this peg count. This peg serves as an indication that the RMAX value is configured incorrectly and will possibly cause frequent retransmits to occur due to RTO fluctuations.
- fast retransmit count-Number of retransmits due to fast retransmit.
- rcv timer count-Number of times the receive timer has expired.
- heartbeat timer count-Number of times the heartbeat timer has expired.
- none left tosend-Number of times a transmit is attempted and there is no data chunks to send.
- none left rwnd gate-Number of times a transmit is denied due to no receive window space at peer.
- none left cwnd gate-Number of times a transmit is denied due to exceeding the local congestion window.
- UNKNOWN-Number of retransmit Datagrams for this assoc for error monitoring.

This example shows SCTP port measurements:

```
pass:loc=1307:cmd="sctp -p 2222"
```

```
rlghncxa03w 09-05-01 08:32:09 EST EAGLE5 41.0.0
Local   Local IP      Num of
Port    Address       Assoc
 2222   192.168.110.12 3
        192.168.112.12

Assoc   Local          Local   Remote        Remote
ID      IP Address     Port    Address       Port
   1    192.168.110.12 2222   192.168.112.4 5555
        192.168.112.12          192.168.110.2
```

```

2 192.168.110.12 2222 192.168.112.4 5555
  192.168.112.12      192.168.110.3
3 192.168.110.12 2222 192.168.112.4 7777
  192.168.112.12      192.168.110.4

```

```

no.of inqueued msgs = 0
max mtu = 1500
max init times = 8
max size reassembly = 1048576
default rwnd value = 16384
pre-open streams = 1
ip datagram counter = 2781

```

```

Timer Values:      seconds      millisecs
INIT                1                0
RECV                0                200
SEND                1                0
SHUTDOWN            0                300
HEARTBEAT           0                500
PMTU                600              0

```

;

```
rlghncxa03w 09-05-01 08:32:09 EST EAGLE5 41.0.0
```

```
SCTP command complete
```

;

This example shows all event logs for an association:

```
pass:loc=1307:cmd="sctp -l assoc1"
```

```
rlghncxa03w 08-02-01 08:32:09 EST EAGLE 38.0.0
```

```

SCTP Event Log
Time          Event          Reason          Ripaddr
Rport
-----
01:19:04.165 SACK send fail    None            192.168.63.235
10001
01:19:04.175 Ck echo ack snd fail None            192.168.63.235
10001
01:19:04.180 Assoc UP          Unknown         192.168.63.235
10001
01:19:04.180 Assoc Down        Shutdown Rcv    192.168.63.235
10001
01:19:04.180 Shutdown ack send  None            192.168.63.235
10001
01:19:06.425 INIT Rcv          None            192.168.63.142
10002
01:19:06.425 Datagram Ignored  No Assoc Found 192.168.63.142
10002
01:19:16.500 INIT tmr expr     None            192.168.63.235
10001

```

```

    01:19:16.500 SACK send fail      None
192.168.63.235 10001
    01:19:17.500 INIT tmr expr      None
192.168.63.235 10001
    01:19:17.500 SACK send fail      None
192.168.63.235 10001

    SCTP: command complete
;

    rlghncxa03w 08-02-01 08:32:09 EST  EAGLE 38.0.0

    SCTP command complete
;

```

This example shows event logs for all associations on a given card location:

```
pass:loc=1307:cmd="sctp -l"
```

```

    rlghncxa03w 08-02-01 08:32:09 EST  EAGLE 38.0.0

    SCTP Event Log
    Time          Event          Reason
    Ripaddr      Rport
-----
-----
    01:19:04.165 SACK send fail      None
192.168.63.235 10001
    01:19:04.175 Ck echo ack snd fail None
192.168.63.235 10001
    01:19:04.180 Assoc UP          Unknown
192.168.63.235 10001
    01:19:04.180 Assoc Down        Shutdown Rcv
192.168.63.235 10001
    01:19:04.180 Shutdown ack send  None
192.168.63.235 10001
    01:19:06.425 INIT Rcv         None
192.168.63.142 10002
    01:19:06.425 Datagram Ignored  No Assoc Found
192.168.63.142 10002
    01:19:16.500 INIT tmr expr      None
192.168.63.235 10001
    01:19:16.500 SACK send fail      None
192.168.63.235 10001
    01:19:17.500 INIT tmr expr      None
192.168.63.235 10001
    01:19:17.500 SACK send fail      None
192.168.63.235 10001

    SCTP: command complete
;

```

Event descriptions for the `sctp -l` command

- `Shutdwn ACK tmr expr`-No shutdown complete was received in response to the shutdown acknowledgement within the timer's limits.
- `PathMTU tmr expr`-Indicates the PathMTU daemon timer has expired. At the expiration of this timer, path MTU for each path of each association that is not at the default of 1500 bytes is marked for retesting by raising that path's MTU. The MTU will be adjusted accordingly when the next frame that exceeds the updated MTU occurs, thereby allowing the path MTU to reflect dynamic network conditions.
- `INIT tmr expr`-If the T1-initialized timer expires, the endpoint must retransmit INIT and restart the T1-init timer without changing state.
- `RECV tmr expr`-If the receive timer expires, then a stand alone SACK is sent to the peer and this timer is moved back to idle.
- `Send tmr expr`-This retransmission timer will expire when outstanding data sent to an address has not been acknowledged.
- `Shutdwn tmr expr`-No shutdown acknowledgement was received in response to the transmitted shutdown within the timer's limits.
- `HB tmr expr`-No heartbeat acknowledgement was received in response to the transmitted heartbeat within the timer's limits.
- `Cookie tmr expr`-No cookie acknowledgement was received in response to the transmitted cookie echo within the timer's limits.
- `New Cookie tmr expr`-When this occurs, time to schedule another timer for the cookie change.
- `Tx CHK tmr expr`-Transmit check timer expired.
- `Unknwn tmr expr`-An unknown timer expired.
- `INIT Rcv`-An INIT was received for an association.
- `Datagram Ignored`-When an unrecognized chunk time is encountered.
- `Assoc Down`-An association is taken out of service.
- `INTF Down`-Interface on an association is down and out of consideration for selection.
- `INTF Up`-Interface on an association is up and now back in consideration for selection.
- `Datagram Send Fail`-IP Packet failed to send.
- `Ignore Cookie`-Happens when the cookie is not received first.
- `Ignore INIT`-If the INIT message is not received first, is not the only chunk, is received with a non-zero Verification tag, if the T bit value is 1 or if mandatory parameters are missing then the INIT message is discarded/ignored.
- `Ignore INIT ACK`-If the INIT ACK is not first, not the only chunk or too small (missing mandatory parameters), then the INIT ACK chunk is ignored.
- `Ignore Shutdwn ACK`-The SHUTDOWN Complete MUST be the only chunk, otherwise the packet is ignored.
- `Ignore HB ACK`-The received HB acknowledgement was ignored due to asymmetric routing (HBA not received on the same interface the original HB was transmitted on).
- `Op Error Rcv`-Occurs when the peer notifies that we are using an invalid stream or we received a Stale cookie.
- `Assoc UP`-Association up notification was generated for the upper layer.

- Assoc Restart-Association restart notification was generated for the upper layer.
- Shutdn ack send fail-Attempt to transmit a shutdown acknowledgement chunk failed.
- Shutdown ack send-A shutdown acknowledgement chunk was transmitted to the far end.
- Cookie ack send fail-An attempt to send a Cookie ACK to a specified address failed.
- Cookie ack send-A Cookie ACK was sent to a specified address.
- Stale Cookie send fail-Attempt to send a stale cookie error to the far end failed.
- Stale Cookie send-A stale cookie error was sent to the far end.
- HB req send fail-Attempt to send a HB to the far end failed.
- HB resp send fail-Attempt to send a HB acknowledgement to the far end failed.
- Shutdown send fail-The Shutdown chunk sent to a specified association failed.
- Shutdown send-A Shutdown chunk was sent to a specified association.
- Abort send fail-The Abort chunk sent to a specified association failed.
- Abort send-An Abort chunk was sent to a specified association.
- Abt W cause snd fail-The Abort chunk sent with the Cause parameter to a specified association failed.
- Abort wth cause send-An Abort chunk was sent to a specified association with the Cause parameter.
- SACK send fail-Attempt to send a SACK to the far end failed.
- Initiate send fail-An INIT chunk is used to initiate a SCTP association between two endpoints. This event occurs when an INIT send has failed.
- Initiate send-An INIT chunk is used to initiate a SCTP association between two endpoints. This event occurs when an INIT was successfully sent.
- OprErr send-An endpoint sends this chunk to its peer endpoint to notify it of certain error conditions. It contains one or more error causes. This event occurs when the OPPErr was successfully sent.
- OprErr send Fail-This event occurs when the OPPErr send failed.
- Init ack send fail-This event occurs when an INIT ACK send has failed.
- Init ack sent-This event occurs when an INIT ACK was successfully sent.
- Ck echo ack snd fail-An attempt to send a Cookie-Echo has failed.
- Cookie echo ack send-A cookie echo was sent to the far end in response to an accepted init-ack.
- Chunks send fail-This event occurs when a chunk that was sent has failed.
- Chunks send-This event occurs when a chunk has been successfully sent.
- Cookie send fail-Attempt to transmit a cookie to the far end during the four-way handshake failed.
- Init ack rcv-Init acknowledgement chunk was received.
- Shutdown ack rcv-Shutdown ack chunk was received.

- Shutdown ack sent-Shutdown ack chunk was transmitted to the far end in response to a received shutdown chunk.
- Abort sent-An Abort message was sent to ungracefully shutdown an association.
- Shutdn complete sent-Shutdown complete chunk was transmitted to the far end.

This example clears the logged events for an association:

```
pass:loc=1307:cmd="sctp -r -l assoc1"

Command Accepted - Processing

rlghncxa03w 08-02-01 08:32:09 EST EAGLE 38.0.0

All event logs for specified association have been reset.

;

rlghncxa03w 08-02-01 08:32:09 EST EAGLE 38.0.0

SCTP command complete

;
```

This example resets association measurements:

```
pass:loc=1307:cmd="sctp -r -a assoc1"

rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0
PASS: Command sent to card

Association measurements have been reset.

SCTP command complete
```

This example resets port measurements:

```
pass:loc=1307:cmd="sctp -r -p 4001"

rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0
PASS: Command sent to card

Port measurements have been reset.

SCTP command complete
```

This example resets all measurements and event logs:

```
pass:loc=1307:cmd="sctp -r"

rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0
PASS: Command sent to card
```

```
All measurements and logs have been reset.
```

```
SCTP command complete
```

This example resets measurements for all ports/associations:

```
pass:loc=1307:cmd="sctp -r -s"
```

```
Command Accepted - Processing
```

```
rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0
```

```
All measurements have been reset.
```

```
;
```

```
rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0
```

```
SCTP command complete
```

```
;
```

This example shows an IO header audit report:

```
sctp -m
```

```
rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0
```

```
IO Headers in Common Pool (Total/CurrentFree/Min):
20494/20494/20494
```

Inst ID	Sock Idx	Assoc ID	IO Headers (Total/CurrentFree/Min)
2	0	1	400/400/398

```
;
```

6.1.16 sockrtt

This command is used to report and reset the round-trip time statistics for application sockets. Minimum, maximum, and average times are kept for each open socket. The Retransmission Mode (BSD, FIXED, or MOD) and the Fixed Round Trip Time are also displayed.

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `sockrtt` command has the option socket_name. The socket name must be specified for which statistics will be displayed, as in the command `sockrtt socyellow`. Do not enter the underlined

option or parameter; enter a value for the information represented by the underlined option or parameter.

socket_name

This option is **mandatory** and specifies the socket name for which statistics are to be displayed.

Range:

up to 15 alphanumeric characters.

-r

This option resets all statistics for the given socket name.

-h

This option provides help information for the command.

Example

```
sockrtt
sockrtt -h

sockrtt socyellow

sockrtt socyellow -r
```

Dependencies

None

Notes

The `sockrtt` command is executed through the `pass` command.

Output

```
pass:loc=1105:cmd="sockrtt" or
pass:loc=1105:cmd="sockrtt -h"
```

```
Command Accepted - Processing
```

```
    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    Usage: SOCKRTT sockname [-r] [-h]
    Options:
        -r          Resets rtt data for specified socket
        -h          Displays this message
;
    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

    SOCKRTT command complete
;
```

```
pass:loc=1105:cmd="sockrtt c7000"
```

```
Command Accepted - Processing
```

```
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0  
PASS: Command sent to card
```

```
;
```

```
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
```

```
SOCKRTT: Socket round-trip time report (in milliseconds)
```

```
Configured Traffic Round-Trip Time
```

```
Retransmission Mode          : FIXED  
Fixed Round Trip Time       : 250
```

```
Measured Normal Traffic Round-Trip Times
```

```
Minimum round-trip time      : 5  
Maximum round-trip time      : 195  
Weighted Average round-trip time : 10  
Last recorded round-trip time : 10
```

```
Measured Congested Traffic Round-Trip Times
```

```
Minimum round-trip time      : 0  
Maximum round-trip time      : 0  
Weighted Average round-trip time : 0  
Last recorded round-trip time : 0
```

```
;
```

```
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0  
SOCKRTT command complete
```

```
;
```

```
pass:loc=1105:cmd="sockrtt c7000 -r"
```

```
Command Accepted - Processing
```

```
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0  
pass:loc=1105:cmd="sockrtt c7000 -r"  
Command entered at terminal #1.
```

```
;
```

```
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0  
PASS: Command sent to card
```

```
;
```

```
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
```

```
SOCKRTT: Socket round-trip time report (in milliseconds)
```

```
Configured Traffic Round-Trip Time
```

```
Retransmission Mode          : FIXED  
Fixed Round Trip Time       : 250
```

```
Measured Normal Traffic Round-Trip Times
```

```

        Minimum round-trip time           : 0
        Maximum round-trip time           : 0
        Weighted Average round-trip time  : 0
        Last recorded round-trip time     : 0

    Measured Congested Traffic Round-Trip Times
        Minimum round-trip time           : 0
        Maximum round-trip time           : 0
        Weighted Average round-trip time  : 0
        Last recorded round-trip time     : 0
;
    rlgncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    SOCKRRT command complete
;

```

6.1.17 soipdata

This command is used to display the SOIP operational data captured for the last 24 hours.

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter.

-f

This option displays full operational data (all counts).

-s

This option displays the number of errors received with error type Bad Source.

-d

This option displays the number of of errors received with error type Bad Destination.

-v

This option displays the number of errors received with error type Bad Version.

-g

This option displays the number of Good Day messages received.

-e

This option displays the number of error messages sent (Sum of Bad Version, Bad Source and Bad Destination).

-u

This option displays the number of UPL messages received.

-t

This option displays the number of UPL messages transmitted.

-r

This option resets the specified error count.

-h

This option displays help for the command.

Example

```
soipdata -h
```

```
soipdata -f
soipdata -r
soipdata -u
```

Dependencies

None

Notes

None

Output

```
pass:loc=1305:cmd= "soipdata -h"
```

```
Usage: soipdata [[-f ] | [[-s] [-d] [-v] [-g] [-e] [-u] [-t] [-r] [-h]]
```

Options:

```
-f Display Full Operational data (all the counts)
-s Display number of SR-5129 Messages received with Bad Source
-d Display number of SR-5129 Messages received with Bad
```

Destination

```
-v Display number of SR-5129 Messages received with Bad Version
-g Display number of Good Day Messages Received.
-e Display number of error messages sent (Sum of BadVersion,
BadSource and BadDestination)
-u Display number of Number of UPL messages received
-t Display number of Number of UPL messages transmitted.
-r Reset the Specified Error Count
-h display command help
```

```
pass:loc=1305:cmd=" soipdata -f"
```

```
SOIPDATA: SR-5129 Operational Data Report
```

```
Operational Data
```

```
reason
count
```

```
-----
-----
Message Received with Bad Source                1
Message Received with Bad Destination           2
Message Received with Bad Version               0
Number of Goodday Messages Received            1
Number of Error Messages Sent                  10
```

```

Number of UPL Messages Received          12000
Number of UPL Messages Sent              19000

```

```
pass:loc=1105:cmd=pass:loc=1305:cmd="soipdata -r"
```

```
SOIPDATA : All SOIP Operational data has been reset
```

```
pass:loc=1305:cmd="soipdata -r -u"
```

```
SOIPDATA: Number of UPL Messages Received has been reset.
```

```
pass:loc=1305:cmd="soipdata -u"
```

```
SOIP Operational Data
```

```

reason                                     count
-----
Number of UPL Messages Received          0

```

6.1.18 soiplog

This command is used to display the logs for the SR-5129 messages for a particular SEAS terminal.

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter.

-l

This option enables and disables logging.

-d

This option displays live message logs

-n X

This option displays the last X number of messages.

-h

This option displays the help for this command.

Example

```
soiplog -h
soiplog -l enable":loc=XXXX
```

Dependencies

None

Notes

With two active connections to the CCS MR, logging must be enabled on each IPSM card that has an active SEAS terminal in order to properly log all SR-5129 communication data.

Assuming a message size of 500 bytes, each IPSM card can log approximately 2000 messages.

If an attempt is made to enable logging on a terminal when logging is already enabled on a different terminal, then the following warning message appears in the previously enabled terminal.

"Warning: SOIP Logging Enabled from Terminal: <New logging enabled terminal>"

If an attempt is made to disable logging on a terminal when logging is already enabled on a different terminal, then the following warning message appears in the previously enabled terminal

"Warning: SOIP Logging disabled from Terminal: <New logging enabled terminal>"

If an attempt is made to turn on logging on a terminal when it is already enabled on a different terminal, then the following warning message appears in the previously enabled terminal.

"Warning: SOIPLLOG Started on Terminal: <New logging enabled terminal>"

Output

```
pass:loc=1305:cmd= "soiplog -h"
```

```
Usage: SOIPLLOG [[-l option] |
                    [-d] [-n] [-h]]
```

Options:

```
-l <enable/disable>    Enable/Disable the logs
-d                      Display live message
```

logs

```
-n <num>                Display last <num> number of
messages. Range=1..2000
-h                      Display Command Help
```

To Enable Real time logging and display, the following commands must be entered one after the other:

```
pass:cmd="soiplog -l enable":loc=XXXX
pass:cmd="soiplog -d":loc=XXXX
```

To enable logging and to display the last N number of logged messages, the following commands must be entered one after the other:

```
pass:cmd="soiplog -l enable":loc=XXXX
pass:cmd="soiplog -n N":loc=XXXX
```

```
[mm/dd/yy:hour:min:sec ] Message Received.

0353 SR5129 Rcvd 064 bytes, trm=17
7E 7E 7E 7E 00 00 00 38 02 01 01 02 01 50 04 0A *~~~~ 8 P
*
41 42 43 44 45 46 47 48 49 50 04 0B 53 45 41 53 *ABCDEFGHJIJ
SEAS*
4E 4A 43 43 53 4D 31 04 11 50 49 53 43 4E 4A 53 *NJCCSM1
PISCNJS*
4E 44 38 31 58 49 46 30 31 41 02 01 00 02 01 01 *ND81XIF01A
*

[mm/dd/yy:hour:min:sec ] Message Received.

0354 SR5129 Rcvd 133 bytes, trm=17
7E 7E 7E 7E 00 00 00 7D 02 01 01 02 01 50 04 0A
*~~~~ } P *
41 42 43 44 45 46 47 48 49 50 04 0B 53 45 41 53 *ABCDEFGHJIJ
SEAS*
4E 4A 43 43 53 4D 31 04 11 50 49 53 43 4E 4A 53 *NJCCSM1 PISCNJS*
4E 44 38 31 58 49 46 30 31 41 02 01 00 02 01 13
*ND81XIF01A *
04 43 03 41 41 42 44 45 46 47 48 49 50 51 53 45 *
ABCDEFGHIJKSE *
41 53 4E 4A 43 43 53 4D 31 00 56 52 46 00 2A 56 *ASNJCCSM1 VFY
*V*
46 59 2D 47 54 54 3A 3A 30 31 30 2C 2A 2A 2D 2A *FY-
GTT::010, **-**
2A 2D 2A 2A 2C 2A 2A 3A 31 32 33 34 35 36 3A 35 **-
**, **:123456:5 *
30 2C 56 52
46
*0,VRF *
```

6.1.19 traceroute

This command is used to determine the path taken by a UDP message to a specified remote host. The command can be invoked with either a hostname or IP address.

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `traceroute` command has the option `destination`. The IP address can be specified for the remote host to which the UDP message is sent, as in the command `traceroute 208.55.20.177`. Do not enter the

underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

IP address

The IP address is a TCP/IP address expressed in standard “dot notation.” IP addresses consist of the system’s network number and the machine’s unique host number. An example IP address is *192.9.200.44*, where *192.9.200* is the network number and *44* is the machine’s host number.

Range:

4 numbers separated by dots, with each number in the range of 0-255.

hostname

Hostname. The logical name assigned to the device with the IP address indicated.

Range:

String of characters, beginning with a letter, up to 120 characters in length. Valid characters are *a-z*, *A-Z*, *0-9*, - (hyphen), . (period)

-h

This option provides help information for the command.

-m maximum hops

This option specifies the maximum number of hops before the trace is terminated.

Range:

1-30

Default:

10

-n

This option specifies that only the IP Address of each host will be displayed (not the hostname).

-p port

This option provides the user port number.

Range:

1-65535

Default:

33434

Example

```
traceroute
```

```
traceroute www.remotedest.com
```

```
traceroute www.remotedest.com -m 20
```

```
traceroute www.remotedest.com -m 20 -n
```

```
traceroute 208.55.20.177
```

```
traceroute 208.55.20.177 -m 20 -p 40000
```


Dependencies

If a Domain Name is specified, the Domain Name must exist in the IP Host table or the Domain Name Server A or B must be provisioned.

Notes

The `traceroute` command is executed through the `pass` command.

Output

This example shows the help information for the command:

```

pass:loc=1103:cmd="traceroute" or
pass:loc=1103:cmd="traceroute -h"

    Command entered at terminal #1.
;

    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;

    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

Usage: traceroute <hostname | ipaddr> [-h] [-m maxhops] [-n] [-p port]
Options:
    -h          Displays this message
    -m maxhops  Maximum number of hops to destination.  Range=1..30.
Default= 10.
    -n names    Inhibits the display of intermediate host names
    -p port     Port number. Range=1..65535. Default=33434.
hostname      Name of machine to trace
ipaddr        ipaddr
Errors:
    *          Timeout
    !N         Unreachable Network
    !H         Unreachable Host
    !?nn      Unknown Failure (nn = ICMP Code)
;

    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command complete

```

This example shows output for a request to host *www.remotedest.com*. A maximum of 20 hops has been specified. Three packets are sent to each hop, with the time for each sample displayed. Intermediate host names are also displayed.

```

pass:loc=1103:cmd="traceroute www.remotedest.com -m 20"

    Command entered at terminal #1.
;

    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

```

```

PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
TRACEROUTE command in progress
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
  20 hops max, 100 byte packets
  1   5ms   5ms   5ms 216-187-242-57.ded.btitelecom.net
(216.187.242.57)
  2  25ms  25ms  85ms 216-187-251-74.ded.btitelecom.net
(216.187.251.74)
  3  25ms  25ms  25ms bti-rdu-c1-rtr.btitelecom.net
(208.216.228.254)
  4  30ms  25ms  25ms Serial4-1-0.GW2.RDU1.ALTER.NET
(157.130.34.93)
  5  35ms  35ms  40ms 178.ATM2-0.XR1.DCA1.ALTER.NET
(146.188.162.50)
  6  40ms  40ms  35ms 195.at-2-0-0.XR1.DCA6.ALTER.NET
(152.63.33.22)
  7  40ms  40ms  40ms 0.so-1-3-0.XL1.DCA6.ALTER.NET
(152.63.35.114)
  8  40ms  40ms  40ms POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
  9  40ms  40ms  40ms a3-0.uunet.mclnva02.us.bb.verio.net
(204.255.169.90)
 10 75ms  75ms  75ms p16-0-0-0.r00.atlnga03.us.bb.verio.net
(129.250.2.49)
 11 95ms  95ms  95ms p4-0-2-0.r01.bcrtf101.us.bb.verio.net
(129.250.4.54)
 12 95ms  95ms  95ms ge-1-1.r01.border.boca.verio.net
(129.250.28.52)
 13 95ms  95ms  95ms ge-8-1.r01.edge.boca.verio.net
(208.55.254.9)
 14 95ms  95ms  95ms www.remotedest.com (208.55.20.177)

TRACEROUTE command complete
;

```

This example shows a request to host *www.remotedest.com*. No maximum number of hops has been specified. Intermediate host names are displayed. The display terminates after 10 hops.

```
pass:loc=1103:cmd="traceroute www.remotedest.com"
```

```

Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

```

```

PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
  10 hops max, 100 byte packets
  1    5ms    5ms    5ms 216-187-242-57.ded.btitelecom.net
(216.187.242.57)
  2   25ms   25ms   25ms 216-187-251-74.ded.btitelecom.net
(216.187.251.74)
  3   25ms   25ms   25ms bti-rdu-c1-rtr.btitelecom.net (208.216.228.254)
  4   25ms   25ms   25ms 157.130.34.93 (157.130.34.93)
  5   35ms   40ms   40ms 178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
  6   40ms   35ms   45ms 195.at-2-0-0.XR1.DCA6.ALTER.NET (152.63.33.22)
  7   45ms   40ms   40ms 0.so-1-3-0.XL1.DCA6.ALTER.NET (152.63.35.114)
  8   40ms   35ms   35ms POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
  9   40ms   40ms   40ms a3-0.uunet.mclnva02.us.bb.verio.net
(204.255.169.90)
 10   75ms   75ms   80ms p16-0-0-0.r00.atlnga03.us.bb.verio.net
(129.250.2.49)

Maximum number of hops reached

TRACEROUTE command complete
;

```

This example shows a request to host IP address *208.55.20.177*. No maximum number of hops has been specified. Intermediate host names are displayed. The display terminates after 10 hops.

```
pass:loc=1103:cmd="traceroute 208.55.20.177"
```

```

Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress
;

```

```

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
    10 hops max, 100 byte packets
 1    5ms    5ms    5ms 216-187-242-57.ded.btitelecom.net
(216.187.242.57)
 2   55ms   260ms  300ms 216-187-251-74.ded.btitelecom.net
(216.187.251.74)
 3   25ms   25ms   25ms bti-rdu-c1-rtr.btitelecom.net
(208.216.228.254)
 4   25ms   25ms   25ms Serial4-1-0.GW2.RDU1.ALTER.NET
(157.130.34.93)
 5   40ms   35ms   35ms 178.ATM2-0.XR1.DCA1.ALTER.NET
(146.188.162.50)
 6   40ms   35ms   40ms 195.at-2-0-0.XR1.DCA6.ALTER.NET
(152.63.33.22)
 7   35ms   40ms   40ms 0.so-1-3-0.XL1.DCA6.ALTER.NET
(152.63.35.114)
 8   40ms   35ms   40ms POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
 9   40ms   40ms   40ms a3-0.uunet.mclnva02.us.bb.verio.net
(204.255.169.90)
10   75ms   75ms   75ms p16-0-0-0.r00.atlnga03.us.bb.verio.net
(129.250.2.49)
Maximum number of hops reached

TRACEROUTE command complete
;

```

This example shows a request to host IP address *208.55.20.177*. A maximum of 20 hops has been specified. Intermediate host names are displayed.

```
pass:loc=1103:cmd="traceroute 208.55.20.177 -m 20"
```

```

Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0

TRACEROUTE command in progress
;

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
;

rlghncxa03w 05-07-27 08:32:34 EST EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
    20 hops max, 100 byte packets
 1    5ms    5ms    5ms 216-187-242-57.ded.btitelecom.net
(216.187.242.57)
 2   25ms   25ms   25ms 216-187-251-74.ded.btitelecom.net

```

```
(216.187.251.74)
 3  25ms  25ms  25ms bti-rdu-cl-rtr.btitelecom.net (208.216.228.254)
 4  25ms  25ms  25ms Serial4-1-0.GW2.RDU1.ALTER.NET (157.130.34.93)
 5  35ms  35ms  35ms 178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
 6  35ms  40ms  35ms 195.at-2-0-0.XR1.DCA6.ALTER.NET (152.63.33.22)
 7  35ms  35ms  35ms 0.so-1-3-0.XL1.DCA6.ALTER.NET (152.63.35.114)
 8  40ms  35ms  35ms POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
 9  40ms  40ms  40ms a3-0.uunet.mclnva02.us.bb.verio.net
(204.255.169.90)
10  75ms  75ms  75ms
p16-0-0-0.r00.atlga03.us.bb.verio.net (129.250.2.49)
11  95ms  95ms  95ms p4-0-2-0.r01.bcrtf101.us.bb.verio.net
(129.250.4.54)
12  95ms  95ms  95ms ge-1-1.r01.border.boca.verio.net (129.250.28.52)
13  95ms  95ms  95ms ge-8-1.r01.edge.boca.verio.net (208.55.254.9)
14  95ms  95ms  95ms www.remotedest.com (208.55.20.177)
```

TRACEROUTE command complete

;

This example shows a request to host IP address **208.55.20.177**. A maximum of 20 hops has been specified. Intermediate host names are not displayed because the `-n` option is specified.

```
pass:loc=1103:cmd="traceroute 208.55.20.177 -m 20 -n"
```

Command entered at terminal #1.

;

```
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
PASS: Command sent to card
```

;

```
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
```

TRACEROUTE command in progress

;

```
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
```

;

```
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
 20 hops max, 100 byte packets
```

```
 1   5ms   5ms   5ms 216.187.242.57
 2  25ms  25ms  25ms 216.187.251.74
 3  25ms  25ms  25ms 208.216.228.254
 4  30ms  30ms  30ms 157.130.34.93
 5  35ms  40ms  40ms 146.188.162.50
 6  40ms  40ms  40ms 152.63.33.22
 7  40ms  45ms  40ms 152.63.35.114
 8  40ms  40ms  35ms 152.63.38.117
 9  40ms  40ms  40ms 204.255.169.90
10  75ms  75ms  75ms 129.250.2.49
```

```

11  95ms  95ms  95ms 129.250.4.54
12  95ms  95ms  95ms 129.250.28.52
13  95ms  95ms  95ms 208.55.254.9
14 110ms 100ms  95ms 208.55.20.177

```

```
TRACEROUTE command complete
```

```
;
```

This example shows a request to host IP address *www.remotedest.com*. A maximum of 20 hops has been specified. Intermediate host names are not displayed because the `-n` option is specified.

```
pass:loc=1103:cmd="traceroute www.remotedest.com -m 20 -n"
```

```
Command entered at terminal #1.
```

```
;
```

```
rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
```

```
;
```

```
rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
```

```
TRACEROUTE command in progress
```

```
;
```

```
rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
```

```
;
```

```
rlghncxa03w 05-07-27 08:32:34 EST  EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
      20 hops max, 100 byte packets
```

```

1   5ms   5ms   5ms 216.187.242.57
2  25ms  25ms  25ms 216.187.251.74
3  25ms  25ms  25ms 208.216.228.254
4  30ms  30ms  30ms 157.130.34.93
5  35ms  40ms  40ms 146.188.162.50
6  40ms  40ms  40ms 152.63.33.22
7  40ms  45ms  40ms 152.63.35.114
8  40ms  40ms  35ms 152.63.38.117
9  40ms  40ms  40ms 204.255.169.90
10 75ms  75ms  75ms 129.250.2.49
11 95ms  95ms  95ms 129.250.4.54
12 95ms  95ms  95ms 129.250.28.52
13 95ms  95ms  95ms 208.55.254.9
14 110ms 100ms  95ms 208.55.20.177

```

```
TRACEROUTE command complete
```

```
;
```

This example shows a request to host IP address *208.55.20.177*. A maximum of 20 hops has been specified. Intermediate host names are displayed. Application Port 40000 is used.

```
pass:loc=1103:cmd="traceroute 208.55.20.177 -m 20 -p 40000"
```

```
Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0

TRACEROUTE command in progress
;

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
;

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
    20 hops max, 100 byte packets
  1    5ms    5ms    5ms 216-187-242-57.ded.btitelecom.net
(216.187.242.57)
  2   25ms   25ms   25ms 216-187-251-74.ded.btitelecom.net
(216.187.251.74)
  3   25ms   25ms   25ms 208.216.228.254 (208.216.228.254)
  4   25ms   25ms   25ms 157.130.34.93 (157.130.34.93)
  5   35ms   40ms   40ms 178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
  6   45ms   35ms   40ms 195.at-2-0-0.XR1.DCA6.ALTER.NET (152.63.33.22)
  7   35ms   40ms   40ms 0.so-1-3-0.XL1.DCA6.ALTER.NET (152.63.35.114)
  8   40ms   35ms   40ms POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
  9   40ms   40ms   40ms a3-0.uunet.mclnva02.us.bb.verio.net
(204.255.169.90)
 10   75ms   75ms   75ms
p16-0-0-0.r00.atlnga03.us.bb.verio.net (129.250.2.49)
 11   95ms   95ms   95ms p4-0-2-0.r01.bcrtf101.us.bb.verio.net
(129.250.4.54)
 12   95ms   95ms   95ms ge-1-1.r01.border.boca.verio.net (129.250.28.52)
 13   95ms   95ms   95ms ge-8-1.r01.edge.boca.verio.net (208.55.254.9)
 14   95ms   95ms   95ms www.remotedest.com (208.55.20.177)

TRACEROUTE command complete
;
```

This example shows a request to host IP address 204.202.136.31. A maximum of 20 hops has been specified. Intermediate host names are displayed. Several timeouts occur. An ICMP error is received (in this case, an unknown response with an ICMP code = 13), and the command is terminated immediately.

```
pass:loc=1103:cmd="traceroute 204.202.136.31 -m 20"
```

```
Command entered at terminal #1.
;
```

```

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
TRACEROUTE command in progress
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE 31.6.0
Traceroute to 204.202.136.31 (204.202.136.31),
  20 hops max, 100 byte packets
  1   5ms   5ms   5ms 216-187-242-57.ded.btitelecom.net
(216.187.242.57)
  2  25ms  25ms  25ms 216-187-251-74.ded.btitelecom.net
(216.187.251.74)
  3  25ms  25ms  25ms bti-rdu-c1-rtr.btitelecom.net
(208.216.228.254)
  4  25ms  25ms  25ms Serial4-1-0.GW2.RDU1.ALTER.NET
(157.130.34.93)
  5  35ms  40ms  35ms 178.ATM2-0.XR1.DCA1.ALTER.NET
(146.188.162.50)
  6  40ms  35ms  35ms 195.at-1-0-0.TR1.DCA6.ALTER.NET
(152.63.33.206)
  7 110ms 115ms 115ms 121.at-1-1-0.TR1.SEA1.ALTER.NET
(146.188.140.74)
  8 110ms 115ms 115ms 299.ATM7-0.XR1.SEA1.ALTER.NET
(146.188.200.109)
  9 115ms 115ms 115ms 195.ATM5-0.GW5.SEA1.ALTER.NET
(146.188.201.57)
 10 110ms 110ms 110ms waltdisney1-OC12-
gw.customer.alter.net(157.130.182.30)
 11 110ms 115ms 110ms 204.202.138.71 (204.202.138.71)
 12 *      *      *      Request timed out
 13 !?13          Unreachable

TRACEROUTE command complete
;

```

6.1.20 ualog

Use this command to report on the user adapter (UA) state machine history for a specified association name. State machine history is kept in a circular buffer in memory. The `-i` and `-x` options are used to include or exclude groups of events from the state machine history.

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `ualog` command has the parameter `aname`. The association name must be specified for which the user adapter

log will be displayed, as in the command `ualog s7000`. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

aname

This option specifies the association name for the display.

-h

This option displays help (usage) information for the command.

-i event_group

This option includes groups of events in the state machine history.

Range:

service

ua

-xevent_group

This option excludes groups of events from the state machine history.

Range:

service

ua

Example

```
pass:loc=1105:cmd="ualog s7000"
```

Dependencies

None

Notes

None

Output

```
pass:loc=1105:cmd="ualog s7000"
```

```
rlghncxa03w 05-07-27 08:10:00 EST  EAGLE5 34.0.0
PASS: Command sent to card
;
rlghncxa03w 05-07-27 08:10:00 EST  EAGLE5 34.0.0
UALOG command in progress
;
rlghncxa03w 05-07-27 08:10:00 EST  EAGLE5 34.0.0

UALOG: User Adapter state history log
      UA Version: 01
      ASP ID:0x00000002
      User Adapter Implemented: M3UA RFC
      Current settings: -i service ua
```

Date	Time	ASP Event
05-07-27	17:17:46.940	Management Socket Open
05-07-27	17:17:46.940	Transition to Connecting
05-07-27	17:17:47.500	Socket Allowed for Traffic
05-07-27	17:17:49.375	Socket Connection Established
05-07-27	17:17:49.375	Transition to ASP-DOWN
05-07-27	17:17:49.390	ASPUP PDU Received (ASP ID = 0x00000002)
05-07-27	17:17:49.390	ASPUPACK PDU Transmitted
05-07-27	17:17:49.390	Transition to ASP-INACTIVE LOADSHARE
(RC=none)		
05-07-27	17:17:49.390	AS INACTIVE NTFY PDU Transmitted (RC=none)
05-07-27	17:17:49.405	ASPACTIVE PDU Received (RC=none)
05-07-27	17:17:49.405	ASPACTIVEACK PDU Transmitted (RC=none)
05-07-27	17:17:49.405	Transition to ASP-ACTIVE LOADSHARE
(RC=none)		
05-07-27	17:17:49.405	AS ACTIVE NTFY PDU Transmitted (RC=none)
05-07-27	17:17:50.405	ASP INACT NTFY PDU Transmitted (ASP ID = 0x00000005)
05-07-27	17:17:50.405	ASP ACT NTFY PDU Transmitted (ASP ID = 0x00000005)
05-07-27	17:17:52.730	ASP FAILURE NTFY PDU Transmitted (ASP ID = 0x00000003)

UALOG command complete

;

pass:loc=1105:cmd="ualog s7000"

Command Accepted - Processing

rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0

pass:loc=1105:cmd="ualog s7000"

;

rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0

PASS: Command sent to card

;

rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0

UALOG command in progress

;

rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0

UALOG: User Adapter state history log

UA Version: 01

ASP ID: 0x00000007

User Adapter Implemented: SUA RFC

Current settings: -i service ua

Date	Time	Event

```

05-07-27 19:45:33.265 CLDT PDU Transmitted(RC=0000000001)
05-07-27 19:48:07.490 ASPINACTIVE PDU Received(RC=none)
05-07-27 19:48:07.490 ASPINACTIVEACK PDU Transmitted(RC=0000000002)
05-07-27 19:48:07.490 Transition to ASP-INACTIVE
LOADSHARE(RC=0000000002)
05-07-27 19:48:07.490 AS PENDING NTFY PDU Transmitted(RC=0000000002)
05-07-27 19:48:07.500 AS INACTIVE NTFY PDU Transmitted(RC=0000000002)
05-07-27 19:48:19.730 ASPACTIVE PDU Received(RC=0000000001)
05-07-27 19:48:19.730 ASPACTIVEACK PDU Transmitted(RC=0000000001)
05-07-27 19:48:19.730 Transition to ASP-ACTIVE
LOADSHARE(RC=0000000001)
05-07-27 19:48:19.730 AS ACTIVE NTFY PDU Transmitted(RC=0000000001)

UALOG: command complete
;

```

When a M3UA or SUA PDU is received that contains one or more errors, a response error message is transmitted containing an error code. Error codes are recorded to and displayed in the UALOG only when the UA peer-to-peer message logging option is enabled (*-i ua*), as shown.

```
pass:loc=1315:cmd="ualog assoc1315a1"
```

```

Command Accepted - Processing
  rlghncxa03w 05-07-27 08:10:00 EST  EAGLE5 34.0.0
  pass:loc=1315:cmd="ualog assoc1315a1"
  Command entered at terminal #3.
;

  rlghncxa03w 05-07-27 08:10:00 EST  EAGLE5 34.0.0
  PASS: Command sent to card
;

  rlghncxa03w 05-07-27 08:10:00 EST  EAGLE5 34.0.0

  UALOG command in progress
;

rlghncxa03w 05-07-27 08:10:00 EST  EAGLE5 34.0.0

  UALOG: User Adapter state history log
        UA Version: 01
        ASP ID:undefined
        User Adapter Implemented: M3UA RFC
        Current settings: -i service ua

Date      Time          Socket Event
-----
05-07-27 17:17:46.940  Management Socket Open
05-07-27 17:17:46.940  Transition to Connecting
05-07-27 17:17:49.375  Socket Connection Established
05-07-27 17:17:49.375  Transition to ASP-DOWN
05-07-27 17:17:49.390  ASPUP PDU Received (ASP ID = undefined)
05-07-27 17:17:49.390  ASPUPACK PDU Transmitted

```

```

05-07-27 17:17:49.390 Transition to ASP-INACTIVE LOADSHARE
05-07-27 17:17:49.390 AS INACTIVE NTFY PDU Transmitted
05-07-27 17:17:49.405 ASPACTIVE PDU Received
05-07-27 17:17:49.405 ASPACTIVEACK PDU Transmitted
05-07-27 17:17:49.405 Transition to ASP-ACTIVE LOADSHARE
05-07-27 17:17:49.405 AS ACTIVE NTFY PDU Transmitted
05-07-27 17:17:49.450 DAUD PDU Received
05-07-27 17:17:49.480 ERR PDU Transmitted (0x00000015)

```

UALOG command complete

;

Error Codes



Note:

Error codes 0x02, 0x08, 0x1a, 0x1b, 0x1c, 0x10, 0x17, and 0x18 are not used in M3UA

Error codes that can appear in the error messages:

- **0x01**—Invalid Version
A message was received with an invalid or unsupported version. The error message contains the supported version in the Common Header.
- **0x03**—Unsupported Message Class
A message was received with an unexpected or unsupported Message Class.
- **0x04**—Unsupported Message Type
A message was received with an unexpected or unsupported Message Type.
- **0x05**—Unsupported Traffic Handling Mode
This error is sent by a Signaling Gateway Process (SGP) if an Application Server Process (ASP) sends an ASP Active message with an unsupported Traffic Mode Type or a Traffic Mode Type that is inconsistent with the currently configured mode for the Application Server (AS).
- **0x06**—Unexpected Message
This error message can be sent if a defined and recognized message is received that is not expected in the current state. In some cases the ASP might silently discard the message and not send an error message. Silent discard is used by an ASP if it received a DATA message from a signaling point while the ASP is in the ASP-INACTIVE state. If the unexpected message contains Routing Context, the Routing Context can be included in the error message.
- **0x07**—Protocol Error
This error message is sent for any protocol anomaly, such as reception of a parameter that is syntactically correct but unexpected in the current situation.
- **0x09**—Invalid Stream Identifier
A message is received on an unexpected SCTP stream (for example, a Management message was received on a stream other than 0).
- **0x0d**—Refused - Management Blocking
An ASP Up or ASP Active message is received and the request is refused for management reasons (such as management lockout). If this error is in response to

an ASP Active message, the Routing Context in the ASP Active message can be included in the error message.

- **0x0e**—ASP Identifier Required
This error message is sent by an SGP in response to an ASP Up message that does not contain an ASP Identifier parameter when the SGP requires one. The ASP should resend the ASP Up message with an ASP Identifier.
- **0x0f**—Invalid ASP Identifier
This error message is sent by an SGP in response to an ASP Up message with an invalid (for example, non-unique) ASP Identifier
- **0x11**—Invalid Parameter Value
A message is received with an invalid parameter value (for example, a DUPU message was received with a Mask value other than 0).
- **0x12**—Parameter Field Error
A message is received with a parameter that has a wrong length field.
- **0x13**—Unexpected Parameter
A message contains an invalid parameter.
- **0x14**—Destination Status Unknown
This error message can be sent if a DAUD is received at a Signaling Gateway (SG) asking for the availability/congestion status of a destination, and the SG does not provide the status (as in the case when the sender is not authorized to know the status). For this error, each invalid or unauthorized Point Code is included along with the Network Appearance and/or Routing Context associated with the Point Code.
- **0x15**—Invalid Network Appearance
This error message is sent by an SGP if an ASP sends a message with an invalid (unconfigured) Network Appearance value. For this error, the invalid (unconfigured) Network Appearance is included in the Network Appearance parameter.
- **0x16**—Missing Parameter
A message is received, and a mandatory parameter is not included in the message.
- **0x19**—Invalid Routing Context
A message is received from a peer with an invalid (unconfigured) Routing Context value. The invalid Routing Context is included in the error message.
- **0x1a**—No Configured AS for ASP
A message is received from a peer without a Routing Context parameter, and it is not known by configuration data which Application Servers are referenced.

A

Reference Information

This Appendix contains information that is used by multiple commands.

A.1 Summary of Range Values for :link Parameter

[Table A-1](#) lists the valid *link* parameter range values for signaling links assigned to each type of card for which a location can be specified in the command's `loc` parameter. The commands that use these values refer to this table in their *link* parameter description.



Note:

The *port* parameter is a synonym for the *link* parameter in signaling link definitions for EAGLE commands. The *port* parameter will be removed in a future EAGLE release.

Table A-1 Summary of Ranges for *link* Parameter

Card	Link	Supported Application
E5-E1T1-B	A-A31, B-B31	SS7ANSI or CCS7ITU application.
E5-E1T1-B for SE-HSL	A, B	SS7ANSI or CCS7ITU application. The card can support a maximum of 2 SE-HSL links.
E5-E1T1-B for ST-HSL-A	A, B	SS7ANSI application. The card can support a maximum of 2 ST-HSL-A links.
E5-ATM-B	A, A1, B	ATMANSI or ATMITU application. The card can support up to 3 signaling links.
E5-ENET/E5-ENET-B	A-A7, B-B7	IPLIMI application with sockets, M2PA/SCTP associations, or M3UA/SCTP associations.
E5-ENET/E5-ENET-B	A-A15, B-B15	IPSG application.
SLIC	A-A63, B-B63	IPSG application, SLIC card running IPSG application can support up to 128 links.

A.2 Commands Listed by Class

A.2.1 Basic Commands

- act-echo
- act-user
- cancel-echo
- cancel-echo
- cancel-user
- change-pid
- deactivate-user
- delete-sccp-serv
- lock
- login
- logout
- report-stat-user
- retrieve-cmd
- retrieve-cmdclass
- retrieve-sccp-serv
- retrieve-user
- unlock

A.2.2 Database Administration Commands

- act-ftp-trns
- act-lbp
- change-acg-mic
- change-acg-noc
- change-ainpopts
- change-aiqopts
- change-appl-rtkey
- change-as
- change-assoc
- change-atinpopts
- change-atm-lps
- change-card
- change-clkopts
- change-csl

- chg-ctrl-feat
- chg-dstn
- chg-e1
- chg-feat
- chg-frm-pwr
- chg-ftp-serv
- chg-gsm-msg
- chg-gsmmap-scrn
- chg-gsmopts
- chg-gsms-opcode
- chg-gsmsmsopts
- chg-gta
- chg-gtcnv
- chg-gtmod
- chg-gtt
- chg-gttact
- chg-gttapath
- chg-gttaset
- chg-gttset
- chg-gttset
- chg-gtw-stp
- chg-gws-actset
- chg-gws-redirect
- chg-inpopts
- chg-ip-card
- chg-ip-conn
- chg-ip-lnk
- chg-is41-msg
- chg-is41opts
- chg-is41smsopts
- chg-isup-msg
- chg-l2t
- chg-l3t
- chg-lbp
- chg-lnp-serv
- chg-lnpopts
- chg-loopset

- chg-ls
- chg-lsopts
- chg-m2pa-tset
- chg-map
- chg-mrn
- chg-netopts
- chg-npp-as
- chg-npp-serv
- chg-npp-srs
- chg-ppsopts
- chg-prefix
- chg-rte
- chg-rtx
- chg-sccp-msg
- chg-sccp-serv
- chg-sccpopts
- chg-scr-aftpc
- chg-scr-blkdpc
- chg-scr-blkopc
- chg-scr-cdpa
- chg-scr-cgpa
- chg-scr-destfld
- chg-scr-dpc
- chg-scr-isup
- chg-scr-opc
- chg-scr-sio
- chg-scr-tt
- chg-scrset
- chg-sg-opts
- chg-shlf
- chg-sid
- chg-sip-npp
- chg-sipopts
- chg-slt
- chg-snmp-host
- chg-snmppopts
- chg-srvsel

- chg-ss-appl
- chg-ss7opts
- chg-stpopts
- chg-t1
- chg-tatr-msg
- chg-tatropts
- chg-th-alm
- chg-tifopts
- chg-trm
- chg-ttmap
- chg-ttr-msg
- chg-ttropts
- chg-uaps
- chg-vflx-cd
- chg-vflx-opts
- chg-vflx-rn
- chg-vflx-vmsid
- chk-unref-ent
- dlt-acg-mic
- dlt-acg-noc
- dlt-appl-rtkey
- dlt-as
- dlt-assoc
- dlt-card
- dlt-csl
- dlt-cspc
- dlt-dlk
- dlt-dstn
- dlt-e1
- dlt-frm-pwr
- dlt-ftp-serv
- dlt-gserv-data
- dlt-gsmmap-scrn
- dlt-gsms-opcode
- dlt-gsmssn-scrn
- dlt-gta
- dlt-gtcnv

- dlt-gtmod
- dlt-gtt
- dlt-gttact
- dlt-gttapath
- dlt-gttaset
- dlt-gttset
- dlt-gttset
- dlt-gws-redirect
- dlt-home-smsc
- dlt-homern
- dlt-ip-conn
- dlt-ip-host
- dlt-ip-node
- dlt-ip-rte
- dlt-lbp
- dlt-lnp-serv
- dlt-loopset
- dlt-ls
- dlt-map
- dlt-mrn
- dlt-na
- dlt-npp-as
- dlt-npp-srs
- dlt-pct
- dlt-prefix
- dlt-rmt-appl
- dlt-rte
- dlt-rtx
- dlt-scr-aftp
- dlt-scr-blkdpc
- dlt-scr-blkopc
- dlt-scr-cdpa
- dlt-scr-cgpa
- dlt-scr-destfld
- dlt-scr-dpc
- dlt-scr-isup
- dlt-scr-opc

- dlt-scr-sio
- dlt-scr-tt
- dlt-scrset
- dlt-shlf
- dlt-sip-npp
- dlt-slk
- dlt-snmp-host
- dlt-spc
- dlt-srvsel
- dlt-ss-appl
- dlt-subnetid
- dlt-t1
- dlt-tt
- dlt-ttmap
- dlt-uim-acthresh
- dlt-vendid
- dlt-vflx-cd
- dlt-vflx-rn
- dlt-vflx-vmsid
- enable-ctrl-feat
- ent-acg-mic
- ent-acg-noc
- ent-appl-rtkey
- ent-as
- ent-assoc
- ent-card
- ent-csl
- ent-cspc
- ent-dlk
- ent-dstn
- ent-e1
- ent-frm-pwr
- ent-ftp-serv
- ent-gserv-data
- ent-gsmap-scrn
- ent-gsms-opcode
- ent-gsmssn-scrn

- ent-gta
- ent-gtcnv
- ent-gtmod
- ent-gtt
- ent-gttact
- ent-gttapath
- ent-gttaset
- ent-gttset
- ent-gttset
- ent-gws-redirect
- ent-home-smsc
- ent-homern
- ent-ip-conn
- ent-ip-host
- ent-ip-node
- ent-ip-rte
- ent-lbp
- ent-lnp-serv
- ent-loopset
- ent-ls
- ent-map
- ent-mrn
- ent-na
- ent-npp-as
- ent-npp-srs
- ent-pct
- ent-rmt-appl
- ent-rte
- ent-rtx
- ent-scr-aftpc
- ent-scr-blkdpc
- ent-scr-blkopc
- ent-scr-cdpa
- ent-scr-cgpa
- ent-scr-destfld
- ent-scr-dpc
- ent-scr-isup

- ent-scr-opc
- ent-scr-sio
- ent-scr-tt
- ent-scrset
- ent-serial-num
- ent-shlf
- ent-sid
- ent-sip-npp
- ent-slk
- ent-snmp-host
- ent-spc
- ent-srvsel
- ent-ss-appl
- ent-subnetid
- ent-t1
- ent-scr-tt
- ent-ttmap
- ent-vendid
- ent-vflx-cd
- ent-vflx-rn
- ent-vflx-vmsid
- rept-stat-db
- rtrv-acg-mic
- rtrv-acg-noc
- rtrv-ainpopts
- rtrv-aiqopts
- rtrv-appl-rtkey
- rtrv-as
- rtrv-assoc
- rtrv-atinpopts
- rtrv-atm-lps
- rtrv-atm-prm
- rtrv-card
- rtrv-clkopts
- rtrv-csl
- rtrv-cspc
- rtrv-ctrl-feat

- rtrv-data-rtdb
- rtrv-dlk
- rtrv-dstn
- rtrv-e1
- rtrv-feat
- rtrv-frm-pwr
- rtrv-ftp-serv
- rtrv-gserv-data
- rtrv-gsm-msg
- rtrv-gsmmap-scrn
- rtrv-gsmopts
- rtrv-gsms-opcode
- rtrv-gsmsmsopts
- rtrv-gsmssn-scrn
- rtrv-gta
- rtrv-gtcnv
- rtrv-gtmod
- rtrv-gtt
- rtrv-gttact
- rtrv-gttapath
- rtrv-gttaset
- rtrv-gttset
- rtrv-gttset
- rtrv-gtw-stp
- rtrv-gtwy-acthresh
- rtrv-gtwy-prmtrs
- rtrv-gws-actset
- rtrv-gws-redirect
- rtrv-home-smsc
- rtrv-homern
- rtrv-inpopts
- rtrv-ip-card
- rtrv-ip-conn
- rtrv-ip-host
- rtrv-ip-lnk
- rtrv-ip-node
- rtrv-ip-rte

- rtrv-is41-msg
- rtrv-is41opts
- rtrv-is41smsopts
- rtrv-isup-msg
- rtrv-l2t
- rtrv-l3t
- rtrv-lbp
- rtrv-lnp-serv
- rtrv-lnpopts
- rtrv-loopset
- rtrv-ls
- rtrv-m2pa-tset
- rtrv-map
- rtrv-mrn
- rtrv-na
- rtrv-netopts
- rtrv-npp-as
- rtrv-npp-serv
- rtrv-npp-srs
- rtrv-pct
- rtrv-ppsopts
- rtrv-prefix
- rtrv-rmt-appl
- rtrv-rte
- rtrv-rtx
- rtrv-sccp-msg
- rtrv-sccpopts
- rtrv-scr-aftp
- rtrv-scr-blkdpc
- rtrv-scr-blkopc
- rtrv-scr-cdpa
- rtrv-scr-cgpa
- rtrv-scr-destfld
- rtrv-scr-dpc
- rtrv-scr-isup
- rtrv-scr-opc
- rtrv-scr-sio

- rtrv-scr-tt
- rtrv-scrset
- rtrv-seas-config
- rtrv-serial-num
- rtrv-sg-opts
- rtrv-shlf
- rtrv-sip-npp
- rtrv-sipopts
- rtrv-slk
- rtrv-slt
- rtrv-snmp-host
- rtrv-snmptests
- rtrv-spc
- rtrv-srvsel
- rtrv-ss7opts
- rtrv-ss-appl
- rtrv-stp
- rtrv-stpopts
- rtrv-subnetid
- rtrv-t1
- rtrv-tatr-msg
- rtrv-tatropts
- rtrv-tbl-capacity
- rtrv-th-alm
- rtrv-tifopts
- rtrv-tps
- rtrv-trbltx
- rtrv-trm
- rtrv-tt
- rtrv-ttmap
- rtrv-ttr-msg
- rtrv-ttropts
- rtrv-uaps
- rtrv-uim-actthresh
- rtrv-vendid
- rtrv-vflx-cd
- rtrv-vflx-opts

- rtrv-vflx-rn
- rtrv-vflx-vmsid
- set-gtwy-acthresh
- set-scrrej-prmtrs
- set-uim-acthresh
- tst-msg
- tst-npp-msg

A.2.3 System Maintenance Commands

- act-alm-trns
- act-file-trns
- act-flash
- alw-card
- alw-imt
- alw-map-ss
- alw-trm
- aud-data
- canc-alm-trns
- chg-db
- chg-seas-config
- clr-imt-stats
- conn-imt
- copy-disk
- copy-ext-stats
- copy-fta
- copy-gpl
- copy-meas
- dact-alm-trns
- dact-rstst
- disc-imt
- disp-fta-dir
- dlt-fta
- flash-card
- format-disk
- inh-alm
- inh-card
- inh-imt

- inh-map-ss
- inh-trm
- init-card
- init-ext-stats
- init-flash
- init-imt-gpl
- init-mux
- init-network
- init-sys
- pass
- rept-imt-info
- rept-imt-lvl1
- rept-imt-lvl2
- rept-stat-alm
- rept-stat-applsock
- rept-stat-as
- rept-stat-assoc
- rept-stat-card
- rept-stat-cdt
- rept-stat-clk
- rept-stat-cluster
- rept-stat-ddb
- rept-stat-dlk
- rept-stat-dstn
- rept-stat-e1
- rept-stat-enet
- rept-stat-imt
- rept-stat-ipconn
- rept-stat-iptps
- rept-stat-lnp
- rept-stat-ls
- rept-stat-meas
- rept-stat-mfc
- rept-stat-mon
- rept-stat-mps
- rept-stat-mux
- rept-stat-rtd

- rept-stat-rte
- rept-stat-rtkey
- rept-stat-rtx
- rept-stat-sccp
- rept-stat-seas
- rept-stat-sip
- #unique_441
- rept-stat-slk
- rept-stat-sys
- rept-stat-t1
- rept-stat-trbl
- rept-stat-trm
- rept-stat-xlist
- rls-alm
- rmv-card
- rmv-imt
- rmv-trm
- #unique_742
- rst-dstn
- rst-imt
- rst-trm
- rtrv-bip
- rtrv-log
- rtrv-obit
- rtrv-trbl
- tst-bip
- tst-disk
- tst-e1
- tst-imt
- tst-t1
- unhb-alm

A.2.4 Link Maintenance Commands

- act-cdl
- act-dlk
- act-lpo
- act-slk

- alw-slk
- blk-slk
- canc-dlk
- cancelpo
- cancel-slk
- chg-meas
- chg-measopts
- chg-mtc-measopts
- dact-cdl
- dact-lbp
- dact-slk
- inh-slk
- rept-ftp-meas
- rept-meas
- rept-stat-cdl
- rept-stat-lfs
- rept-stat-tstslk
- rtrv-meas-sched
- rtrv-measopts
- rtrv-mtc-measopts
- tst-dlk
- tst-slk
- ublk-slk
- unhb-slk

A.2.5 Program Update Commands

- act-gpl
- chg-gpl
- rept-stat-gpl
- rtrv-gpl

A.2.6 Security Administration Commands

- cancelcmd
- chg-attr-seculog
- chg-cmd
- chg-cmdclass
- chg-eisopts

- chg-secu-dflt
- chg-secu-trm
- chg-user
- copy-seculog
- dlt-user
- ent-user
- rept-stat-seculog
- rtrv-attr-seculog
- rtrv-eisopts
- rtrv-secu-dflt
- rtrv-secu-trm
- rtrv-secu-user
- rtrv-seculog
- rtrv-sid
- set-date
- set-time

A.2.7 Debug Commands

- act-ip-lnk
- act-upgrade
- chg-bip-fld
- chg-bip-rec
- chg-tbl
- chg-upgrade-config
- clr-disk-stats
- copy-tbl
- dact-ip-lnk
- dbg-ddb
- disp-bip
- disp-bp
- disp-disk-dir
- disp-disk-stats
- disp-mem
- disp-trace
- dlt-bp
- dlt-trace
- ent-bp

- ent-trace
- rtrv-upgrade-config
- send-msg
- set-mem

A.2.8 Pass-Through Commands

- arp
- aslog
- assoctt
- connmgr
- ftptest
- linkinfo
- msucount
- msuroute
- msutrace
- netstat
- nslookup
- pct
- ping
- sctp
- sockrtt
- soipdata
- soiplog
- traceroute
- ualog

A.3 Possible Values for PST/SST/AST

This section lists the possible values for the primary state (PST), secondary state (SST), and associated state (AST) shown in the output of the Report Status (rept-stat-) commands.

A.3.1 PST

Primary state possible values are the following:

IS-ANR

(IN SERVICE - ABNORMAL) The entity is in service but only able to perform a limited subset of its normal service functions.

IS-NR

(IN SERVICE - NORMAL) The entity is in service and handling all its normal service functions.

OOS-MA

(OUT OF SERVICE - MEMORY ADMINISTRATION) The entity is out of service because it has not been equipped.

OOS-MT

(OUT OF SERVICE - MAINTENANCE) The entity is out of service and is not available to perform its normal service function. The maintenance system is actively working to restore the entity to service.

OOS-MT-DSBLD

(OUT OF SERVICE - MAINTENANCE - DISABLED) The entity is out of service and the maintenance system is preventing the entity from performing its normal service function.

A.3.2 SST

Secondary state possible values are the following:

Active

(ACTIVE) The entity is currently in use and is handling its normal service function as the primary service provider. (MASTER) The entity is currently in a master state in relation to its redundant unit.

Allowed

(ALLOWED) The entity is handling its normal service function.

Avail

(AVAILABLE) Entity service is available to another entity.

Blocked

(BLOCKED) The entity has been manually prohibited from handling traffic.

Busy

(BUSY) The entity is handling the maximum traffic capacity and has no spare capacity for new service requests.

Conn

(CONNECT) The card's entity status is in connected state.

DDL Hunt

(DDL HUNTING) The entity is currently in a state where the DDL is hunting for crossload info.

DDL Inhib

(DDL INHIBITED) The entity is currently in a state where the DDL is inhibited from crossload.

DDL NoXld

(DDL Unable to XLOAD) The entity is currently in a state where the DDL is unable to crossload.

DDLunstab

(DDL UNSTABLE) The entity is currently in DDL unstable state.

Disc

(Disconnect) The card's entity status is in disconnected state.

Fault

(FAULT) The entity has failed.

Idle

(IDLE) The entity is in use and has spare capacity for service.

Inhibited

(INHIBITED) The entity has been manually prevented from performing its normal service function.

Isolated

(ISOLATED) The entity cannot be detected through software or hardware.

LPBK

(LOOPBACK) The entity is currently in the Loopback state.

Manual

(MANUAL) The entity has manually been removed from service and is not carrying any traffic.

MEA

(Maintenance Equipment Administration) The entity has been auto-inhibited and has been restricted from functioning because it has not met the minimum hardware requirements for the current configuration.

MPS Unavl

(MPS unavailable). MPS is required, but unavailable for the entity.

Ovflw-1

(OVERFLOW) One entity cannot provide service to another entity due to service denial.

Prohibit

(PROHIBITED) The entity is not handling traffic because of a failure in the network.

Proh-Blk

(PROHIBITED and BLOCKED) The entity has been prohibited and blocked from handling traffic.

Restart

(RESTART) The entity is in MTP Restart.

Restrict

(RESTRICTED) Normal operation for the entity is restricted. The normal capacity or configuration is not being used because of a failure in the network. The normal capacity, functionality or configuration of an entity may be restricted during loading or syncing of data. This can occur when the Measurements Platform has not yet been enabled.

Standby

(STANDBY) The entity is currently in use and is handling its normal service function as an alternate service provider if the primary service provider failed. (SLAVE) The entity is currently in a slave state in relation to its redundant unit.

Test

(TEST) The entity is currently in a test state.

Unavail

(UNAVAILABLE) Entity service is unavailable to another entity.

Ueq

(UNEQUIPPED) The entity is not equipped.

Unblocked

(UNBLOCKED) The entity is handling its normal service function.

A.3.3 AST

Associated state possible values are the following:

(BLANK) The field may be left blank.

ACCESS

(ACCESSIBLE) Traffic is being carried between the local entity and an adjacent, or remote, service provider. A full connection has been completed.

ALMINH

(ALARM INH) The alarms on the entity are inhibited.

BRDG MSTR

(MASTER) The E1/T1 channel bridge is in Master mode.

BRDG SLAVE

(SLAVE) The E1/T1 channel bridge is in Slave mode when the adjacent odd-numbered channel bridge is provisioned in Master mode.

CDL

(COMMAND DRIVEN LOOPBACK) The entity is in command driven loopback state.

DB DIFF

(DATABASE DIFFERENT) The entity has a database difference.

ENET FLT

(ETHERNET FAULT) An Ethernet fault exists.

EXT BERT

(EXTENDED BERT TEST) The entity is undergoing Extended BERT.

FE LINE

(FAR END LINE LOOPBACK) The entity is in far end line loopback.

FE PAYLD

(FAR END PAYLOAD LOOPBACK) The entity is in far end payload loopback.

FLT CHK

(FAULT ISOLATION TEST) The entity is undergoing a fault isolation test.

INACCESS

(INACCESSIBLE) Traffic is not being carried from the local entity to another service provider. A breakdown in a complete circuit has been detected.

LFS

(LINK FAULT SECTIONALIZATION) The entity is in Link Fault State.

LINE

(LINE LOOPBACK) The entity is in line loopback state.

LOCAL

(LOCAL) The entity has become locally isolated.

LXVR

(LXVR LOOPBACK) The entity is in local transceiver loopback state.

M BIP ERR

(MOTHERBOARD IDENTITY PROM) The entity has a motherboard prom error.

NOT BRDGD

(NOT BRIDGED) The E1/T1 port channel is not bridged.

OAM F5 FM

(OAM LOOPBACK) The entity is in OAM initiated loopback state.

PAYLOAD

(PAYLOAD LOOPBACK) The entity is in payload loopback state.

SLTM

(SPECIAL MAINTENANCE TEST MESSAGES) The entity is in SLTM testing state.

A.4 Point Code Formats and Conversion

Many of the commands used for database configuration use point codes. This section describes the point code formats that the system supports. If you need additional information or procedural information, refer to the *Database Administration Manual - SS7*.

The system supports four different point code formats:

- ANSI point codes
- ITU International point codes
- ITU National point codes
- ITU National 24-bit point codes

Each format is described in further detail in the following sections.

A.4.1 ANSI Point Codes

ANSI point codes are made up of three groups of digits called the network indicator (*ni*), network cluster (*nc*), and network cluster member (*ncm*). The values for ANSI point codes depend on the value of the `pctype` parameter of the `chg-sid` command, either *ansi* or *other*.

If the `pctype=ansi` command is entered, the range of values for an ANSI point code is as follows:

- `ni-001-255`
- `nc-001-255` (if `ni = 001-005`)
- `-000-255, *` (if `ni = 006-255`)
- `ncm-000-255`

The following rules apply to provisioning ANSI point codes if the `pctype=ansi` parameter is specified:

- An `ni` value of `0` is not allowed (e.g., `dpc=0-1-1` and `dpc=0-0-0` are not valid point codes).
- If the `ni` value is `1`, `2`, `3`, `4`, or `5`, then the `nc` value cannot be `0` (e.g., `dpc=5-0-1` is rejected).
- If the `ni` value is `1`, `2`, `3`, `4`, or `5`, then network routing point codes are not allowed (e.g., `dpc=4-*-*` is rejected).

If the `pctype=other` parameter is specified, the ANSI point codes do not meet ANSI standards. The range of values for these ANSI point codes is as follows:

- `ni-000-255`
- `nc-000-255, *`
- `ncm -000-255, *`

The following rules apply to provisioning ANSI point code if the `pctype=other` parameter is specified:

- An `ni` value of `0` is allowed, however `dpc=0-0-0` is rejected (e.g., `dpc=0-1-1` is accepted).
- The `nc` value can be `0` for all values of `ni` (e.g., `dpc=5-0-1` is accepted).
- Network routing point codes are allowed for all values of `ni` (e.g., `dpc=4-*-*` is accepted).

An ANSI point code containing all zeros (`0-0-0`) is not a valid point code and cannot be entered into the database.

ANSI point codes support the Private (Internal) Point Code subtype prefix (`p-`). The prefix can be specified before the point code subfield values to indicate a Private Point Code (i.e. `p-5-0-1`). See [Spare and Private Point Code Subtype Prefixes](#).

 **Note:**

Point codes specified by many commands, including those for site identification, routing keys, and LNP, are required to be full point codes. The asterisk values are not valid in the commands that specify these point codes. The command Dependencies sections identify the point codes that must be full point codes in the commands.

A range of values for a subfield is specified by separating the values that define the range by two ampersands (`&&`); for example, `ni=025&&100` specifies all network indicators for ANSI point codes from 25 - 100.

The asterisk (*) point code value indicates a single cluster address for a cluster point code (e.g., 20-2-*) or a network routing destination (20-*-*). If * is used for the *nc* subfield, then * must be also be used for the *ncm* subfield.

A double asterisk (**) and a triple asterisk (***) can also be used for the *nc* and *ncm* subfields of the ANSI point code, but only for the *rtrv-dstn*, *rept-stat-dstn*, *rtrv-rte*, and *rept-stat-rte* commands. If *, **, or *** is used for the *nc* subfield, then *, **, or *** must be used for the *ncm* field

For examples of all of these point code values, see the *rtrv-dstn* command output.

A.4.2 ITU International Point Codes

The ITU international point codes are made up of three groups of digits called *zone*, *area*, and *id*. The range of varnames for ITU International point codes are:

- *zone-0-7*
- *area-000-255*
- *id-0-7*

An ITU international point code containing all zeros (0-000-0) is not a valid point code and cannot be entered into the database.

ITU international point codes support the Spare Point Code subtype prefix (s-). The prefix can be specified before the point code subfield varnames to indicate a Spare Point Code (s-5-222-1, for example). See [Spare and Private Point Code Subtype Prefixes](#).

A.4.3 ITU National Point Codes

The ITU national point code is a 14-bit integer. The point codes can be a single number up to five digits, or two, three, or four numbers (members) separated by dashes.

If the ITU National Duplicate Point Code (ITUDUPPC) feature is on, ITU national point codes can have group codes assigned to them. The point code is a 1- to 5-digit number. The group code is a two-character field ranging from *aa* to *zz* that is entered as the last subfield of the point code and is separated by a dash from the rest of the point code. An example is *12345-az*.

If the flexible point codes option is enabled (see the *chg-stpopts* command, *:npcfmti* parameter), an ITU national point code format consists of 2, 3, or 4 numbers separated by dashes (formatted as *m1-m2-m3-m4*). When the ITUDUPPC feature is also on, the format is *m1-m2-m3-m4-gc* with a group code. If one of the *m1*, *m2*, *m3*, *m4* members is set to zero bits, no value is entered for that position in the point code. For example, if the *npcfmti* parameter value is set to 3-8-3-0, valid point codes would be *1-100-1-aa* with a group code, or *7-255-7* with no group code. See the tables in the *chg-stpopts* command description for valid member values and additional examples.

The following ranges of values are valid:

- *nnnnn016383*
- *nnnnn-gc0-16363*; group code is *aa-zz* (the ITUDUPPC feature must be on)

- *m1-m2-m3-m4* Each member represents the number of bits allowed in the corresponding position for a flexible ITU national point code. The range of each member is from 0 - 14. Each member must be specified; the member value of 0 indicates that the position is not specified in the flexible point code. The sum of the member values must equal 14.
- *m1-m2-m3-m4-gc* Each member represents the number of bits allowed in the corresponding position for a flexible ITU national point code. The range of each member is from 0 to 14. Each member must be specified; the member value of 0 indicates that the position is not specified in the flexible point code. The sum of the member values must equal 14. Group code is aa-zz (the ITUDUPPC feature must be on).

An asterisk value (*) is allowed only for the `rtrv-dstn` and `rtrv-rte` commands to retrieve ITU-N DPCs if the ITUDUPPC feature is on (for point codes with group codes). The node and group code cannot both be *. For example, `dpcn=12345-*` and `dpcn=**aa` are allowed, but `dpcn=**-*` is not allowed.

If flexible point codes are also used, all valid *m1*, *m2*, *m3*, and *m4* must all be either a number or an *. For example, `1-100-1-aa` and `*-**-aa` are allowed, but `1-**-aa` is not allowed.

ITU national point codes support the Spare Point Code subtype prefix (s-). The prefix can be specified before the point code subfield values to indicate a Spare Point Code (`s-12345` or `s-1-3-5-5-gc`, for example). See [Spare and Private Point Code Subtype Prefixes](#).

A.4.4 Converting ITU National Point Code Formats

Gateway screening only allows ITU national point codes to be provisioned in the database by the enter, delete, or change gateway screening commands, and displayed by the gateway screening retrieve commands as a single number. If a format other than a single number (14-0-0-0) for the ITU national point code has been defined by the `npcfnti` parameter of the `chg-stpopts` command, the ITU national point code must be converted into a single number so that it can be used by gateway screening.

For example, the format of the ITU national point code is 4-4-4-2 and you would like to add point code 7-7-7-1 into the allowed OPC screen. The point code 7-7-7-1 would have to be converted to a single number so that the point code can be added to the allowed OPC screen. To determine what multiple-part ITU national point code is represented by the single number ITU national point code in the gateway screening table, the single number point code must be converted to a multiple-part point code.

To convert a single number ITU national point code to a multiple-part point code, go to [Converting Single Number ITU National Point Codes](#).

To convert a multiple-part ITU national point code to a single number point code, go to [Converting Multiple-Part ITU National Point Codes](#).

For a definition of the different formats that can be used for ITU national point codes, see [ITU National Point Codes](#).

When the ITU national point codes are converted from single numbers to multiple-part point codes, the resulting value of the multiple-part point code depends on the point code format specified by the `npcfnti` parameter of the `chg-stpopts` command. When converting the single number point code 14781 to the point code format 3-8-3-0, the resulting point code value is 7-55-5. If point code 14781 is converted to the point code format 4-4-4-2, the resulting point code value is 14-6-15-1.

A.4.4.1 Converting Single Number ITU National Point Codes

To make this conversion, you will need to know the format of the ITU national point code. This can be verified in the `NPCFMTI` field of the `rtrv-stpopts` command output. For this example, the ITU national point codes 14781 and 695 are converted to point codes using the 3-8-3-0 format.

Convert a single number ITU national point code to a multiple-part ITU national point code as follows.

A.4.4.1.1 Converting a Single Number ITU national point code to a multiple-part ITU national point code

1. Convert the point code to a binary number. This can be done with most scientific calculators.

The number **14781** converts to the binary number 11100110111101.

The number **695** converts to the binary number 1010110111.

 **Note:**

Make sure the binary number contains 14 digits. If it does not, add leading zeros to the binary number to bring the total number of digits in the number to 14.

In this example, the binary equivalent for the decimal number 695 (1010110111) contains 10 digits; four zeros must be added to the beginning of the binary number. The resulting binary number is now 00001010110111.

2. Divide the binary number into the number of parts required by the format of the ITU national point code. For this example, the format is 3-8-3-0. Because the last part of the point code format is 0, the point code format contains only three parts. Divide the point code into three parts, the first part of the point code contains the first three digits of the 14-digit binary number, the second part of the point code contains the next eight digits of the 14-digit binary number, and the third part of the point code contains the last three digits of the 14-digit binary number.

For this example, the binary numbers would be divided like this:

11100110111101 = 111 00110111 101

00001010110111 = 000 01010110 111

3. Convert each part of the point code into a decimal number using the same scientific calculator used in step 1 and separate each part of the point code with dashes. The results are as follows.

111 00110111 101 = **7-55-5**

000 01010110 111 = **0-86-7**

A.4.4.2 Converting Multiple-Part ITU National Point Codes

To make this conversion, you will need to know the format of the ITU national point code. This can be verified in the `npcfmti` field of the `rtrv-stpopts` command

output. For this example, the ITU national point codes 7-55-5 and 0-86-7, using the 3-8-3-0 point code format, are converted into a single number.

Convert multiple-part ITU national point codes to a single number as follows.

Converting Multiple-Part ITU National Point Codes to a Single Number

A.4.4.2.1 Converting Multiple-Part ITU National Point Codes to a Single Number

1. Convert each part of the point code into a binary number using a scientific calculator. The results are as follows.

7-55-5 = 111 00110111 101

0-86-7 = 000 01010110 111

2. Combine each part of the point code into a single binary number as follows.

111 00110111 101 = 11100110111101

000 01010110 111 = 00001010110111

Note:

If the binary number has any zeros at the beginning of the number, remove these zeros as they are not necessary.

In this example, the binary equivalent for the point code **0-86-7** (00001010110111) contains four zeros at the beginning of the binary number. When the leading zeros are removed from the binary number, the resulting binary number is now 1010110111.

3. Convert the binary number to a decimal number using the same scientific calculator used in step 1.

The binary number 11100110111101 converts to the decimal number 14781.

The binary number 1010110111 converts to the decimal number 695.

A.4.4.3 24-bit ITU-National Point Codes

The 24-bit ITU national point codes are made up of three groups of digits called *main signaling area*, *sub signaling area*, and *signaling point*. The valid values for 24-bit ITU national point codes are:

- *main signaling area-000-255*
- *sub signaling area-000-255*
- *signaling point-000-255*

24-bit ITU national point codes support the Private (Internal) Point Code subtype prefix (p-). The prefix can be specified before the point code field values to indicate a Private Point Code (p-2055-222-2011, for example). See [Spare and Private Point Code Subtype Prefixes](#).

A.4.4.4 Spare and Private Point Code Subtype Prefixes

The Spare Point Code Support feature and the Internal Point Code Support feature provide optional point code subtype prefixes. The Spare Point Code feature must be enabled before a point code subtype prefix can be specified for a point code.



Note:

The SEAS interface does not support point code subtype prefixes.

The values *p-*, *s-*, and *ps-* are valid point code subtype prefixes. The dash- separates the point code subtype prefix from the remainder of the point code. The prefixes are displayed in lower case. The syntax for the remainder of the point code remains the same.

The Spare Point Code prefix (*s-*) applies only to ITU-I and ITU-N point code domains (ITU-N24 point codes do not support the Spare Point Code prefix), to allow the EAGLE to fully support ITU National and International Spare Point Codes. [Table A-2](#) lists the commands that support the Spare Point Code subtype prefix.

The Private (Internal) Point Code prefix (*p-*) applies to all point code domain types (including ITU-N24 point codes), to allow messages destined to the End Office Node to be routed from the inbound LIM to the outbound IPGWx. [Table A-3](#) lists the commands that support the Private Point Code subtype prefix.

The subtype prefix *ps-* can be specified when the point code parameter supports both the spare and private point code prefixes.

Table A-2 Commands that support the Spare Point Code Prefix

Command	Description	Applicable Point Code Parameters
alm	Alarm	<i>dpci</i> and <i>dpcn</i>
appl-rtkey	Application Route Key	<i>dpci</i> and <i>dpcn</i> ; <i>opci</i> and <i>opcn</i>
cspc	Concerned Signaling Point Code	<i>pci</i> and <i>pcn</i>
dstn	Destination	<i>spci</i> and <i>spcn</i> ; <i>dpci</i> and <i>dpcn</i> ; and Alias combinations.
ent-trace	Enter Trace	<i>dpci</i> and <i>dpcn</i> ; <i>opci</i> and <i>opcn</i>
gsmmap-scrn	GSM MAP Screening	<i>npci</i> and <i>npcn</i>
gsmopts	GSM Options	<i>ppsmspci1</i> , <i>ppsmspci2</i> , <i>ppsmspcn1</i> , <i>ppsmspcn2</i>
gsm-s-opcode	GSM Short Message Services OP-Code	<i>pci</i> and <i>pcn</i>
gtt/gta	Global Title Translation/Global Title Address	<i>pci</i> and <i>pcn</i>
ls	Linkset	<i>apci</i> and <i>apcn</i>
map	Mated Application	<i>pci</i> and <i>pcn</i> ; <i>mpci</i> and <i>mpcn</i>
mrn	Mated Relay Node	<i>pci</i> and <i>pcn</i> ; <i>pci1</i> and <i>pcn1</i> ; <i>pci2</i> and <i>pcn2</i> ; <i>pci3</i> and <i>pcn3</i> ; <i>pci4</i> and <i>pcn4</i>
na	Network Appearance	<i>type=ituis</i> , <i>type=ituns</i>
pass	Pass Commands	Syntax for routing keys
rmt-appl	Remote Application	<i>ipci</i> and <i>ipcn</i>

Table A-2 (Cont.) Commands that support the Spare Point Code Prefix

Command	Description	Applicable Point Code Parameters
rte	Route	<i>dpci</i> and <i>dpcn</i>
scr-aftpc	Gateway Screening Allowed Affected Point Code	<i>pcst</i> and <i>pctype</i>
scr-blkdp	Gateway Screening Blocked Destination Point Code	<i>pcst</i> and <i>pctype</i>
scr-blkop	Gateway Screening Blocked Origination Point Code	<i>pcst</i> and <i>pctype</i>
scr-cdpc	Gateway Screening Called Party (CDPA PC Destination) Point Code	<i>pcst</i> and <i>pctype</i>
scr-cgpc	Gateway Screening Calling Party (Origination) Point Code	<i>pcst</i> and <i>pctype</i>
scr-destfld	Gateway Screening Affected Destination (Concerned) Point Code	<i>pcst</i> and <i>pctype</i>
scr-dpc	Gateway Screening Destination Point Code	<i>pcst</i> and <i>pctype</i>
scr-opc	Gateway Screening Origination Point Code	<i>pcst</i> and <i>pctype</i>
sid	Site ID	True <i>pci</i> and <i>pcn</i> ; <i>cpci</i> and <i>cpcn</i> ; <i>ncpci</i> and <i>ncpcn</i> .
spc	Secondary Point Code	<i>spci</i> and <i>spcn</i>

Table A-3 Commands that support the Private Point Code Prefix

Command	Description	Applicable Point Code Parameters
dstn	Destination	<i>spci</i> and <i>spcn</i> ; <i>dpc</i> , <i>dpca</i> , <i>dpci</i> , and <i>dpcn</i> Does not apply to Aliases
ls	Linkset	If <i>ipgwapc=yes</i> , <i>apc</i> , <i>apcn</i> , <i>apci</i> , and <i>apcn</i>
gtt/gta	Global Title Translation	<i>pc</i> , <i>pca</i> , <i>pci</i> , and <i>pcn</i>
inh/unhb-alm	Destination alarm inhibit	<i>dpc</i> , <i>dpca</i> , <i>dpci</i> , and <i>dpcn</i>
rept-stat-cluster	Report Cluster Status	<i>dpc</i> and <i>dpca</i>
rept-stat-dstn	Report Destination Status	<i>dpc</i> , <i>dpca</i> , <i>dpci</i> , and <i>dpcn</i>
rmt-appl	Remote Application	<i>ipc</i> , <i>ipca</i> , <i>ipci</i> , and <i>ipcn</i>
rst-dstn	Restore Destination	<i>dpc</i> and <i>dpca</i>
rte	Route	<i>dpc</i> , <i>dpca</i> , <i>dpci</i> , and <i>dpcn</i>

A.5 Valid CIC Ranges for SI and MSU Types in Routing Key Static Entries

Table A-4 lists the valid CIC ranges for use with SI and MSU types in Routing Key table static entries.

Table A-4 Valid CIC Ranges for SI and MSU Types

SI	MSU for ANSI DPC	MSU for ITU DPC	Comments
4 (TUP)	N/A	CIC is 12 bits. Range is 0-4095.	The TUP protocol is used only in ITU networks.
5 (ISUP)	CIC is 14 bits. Range is 0-16383.	CIC is 12 bits. Range is 0-4095.	
13 (QBICC)	CIC is 32 bits. Range is 0-4294967295.		

A.6 DRANAIV/DRANAI Mapping

Table A-5 shows the mapping between the *drainaiv* and *dranai* parameters.

Table A-5 DRANAIV/DRANAI Mapping

DRANAIV	DRANAI	Description
1	sub	Subscriber Number
2	unknown	Unknown
3	natl	National significant number
4	intl	International number
5	ntwk	Network

A.7 DRANPV/DRANP Mapping

Table A-6 shows the mapping between the *dranpv* and *dranp* parameters.

Table A-6 DRANPV/DRANP Mapping

DRANPV	DRANP	Description
1	E164	ISDN/telephony numbering plan
3	X121	Data numbering plan
4	F69	Telex Numbering Plan

A.8 NAIV/NAI Mapping

Table 58: NAIV/NAI Mapping shows the mapping between the *naiv* and the *nai* parameters.

Table A-7 NAIV/NAI Mapping

NAIV	NAI	Description
0	–	Unknown
1	Sub	Subscriber Number
2	Rsvd	Reserved for national use
3	Natl	National significant number
4	Intl	International number
5–127	–	Spare

A.9 NPV/NP Mapping

Table A-8 shows the mapping between the *npv* and the *np* parameters.

Table A-8 NPV/NP Mapping

NPV	NP	Description
0	–	Unknown
1	E164	ISDN/telephony numbering plan
2	Generic	Generic numbering plan
3	X121	Data numbering plan
4	F69	Telex numbering plan
5	E210	Maritime mobile numbering plan
6	E212	Land mobile numbering plan
7	E214	ISDN/mobile numbering plan
8	Private	Private network or network-specific numbering plan
9-15	-	Spare

A.10 Cards that use the ent-card Command

Table 60 contains information about cards that use the `ent-card` command for provisioning.

Table A-9 Valid Card Applications and Types

Card Name (as shown on card label)	Part Number	Card Type (:type)	Application Type (:appl)	Maximum Cards in the Database
E5-APP-B	870-3096-01	e5appb	epap elap	2 2

Table A-9 (Cont.) Valid Card Applications and Types

Card Name (as shown on card label)	Part Number	Card Type (:type)	Application Type (:appl)	Maximum Cards in the Database
E5-APP-B	870-3096-02	e5appb	lsms nas imf	2 1 255
E5-ATM-B	870-2972-01 (R)	limatm lime1atm	atmansi atmitu	180 if only one link is provisioned per card. A maximum of 180 links for either application can exist in the system.
E5-E1T1-B††	870-2970-01	lime1 limt1	ss7ansi ccs7itu	250 for each application
E5-ENET-B	870-2971-01 (R)	dcm enet enetb stc	ss7ipgw ipgwi iplimi eroute ips ipsg	125 for IPGWx 125 for IPLIMx 100 for ipsg 32 for eroute
E5-MCPM-B*	870-3089-01 (R)	mcpm	mcp	250
E5-SM4G***	870-2860-01 (R) 870-2860-02 (R)	dsm	vsccp	18 for use with ELAP 32 for use with EPAP
E5-SM8G-B***	870-2990-01 (R)	dsm	vsccp	18 for use with ELAP 32 for use with EPAP
E5-SM8G-B***	870-2990-01 (R)	dsm	siphc deirhc enumhc	16 of the E5- SM8G-B cards connected to ELAP or EPAP for siphc and deirhc 16 of the E5- SM8G-B cards connected to EPAP for enumhc
E5-TSM SLIC	870-2943-03 (R)	tsm slic	gls ipsg siphc deirhc enumhc vsccp sfapp	8 40 for use as GTT on IP SG 75 for use as GTT- disabled IP SG 40 for use as Service Module cards
TELCO	870-2904-01	telco	switch	136

Table A-9 (Cont.) Valid Card Applications and Types

Card Name (as shown on card label)	Part Number	Card Type (:type)	Application Type (:appl)	Maximum Cards in the Database
* Though the system allows 250 MCPM cards, practical usage is 2.				
*** If any MPS-based features are running in the system, up to 25 Service Modules are allowed in the system. If only GTT is running, up to 32 Service Modules can be used in the system with the 50,000 GTT feature.				
† † For the E1 or T1 interface, either SS7 application (SS7ANSI or CCS7ITU) can be assigned to these cards. For more information on the E1 or T1 interface go to Appendix A "E1 Interface" or Appendix B "T1 Interface" in the <i>Database Administration - SS7 User's Guide</i> .				
Part numbers followed by (R) are ROHS numbers. These numbers are equivalent to the non-ROHS numbers that they are paired with.				
***Connectivity to a TekServer 3 (T1200) with EPAP 13.0 or higher or connectivity to an E5-APP-B card with EPAP 15.0 or higher is required for more than 25 Service Module cards.				

A.11 Summary of Loopback Testing Commands and Functions

Table A-10 and Figure A-1 summarize the loopback testing commands and functions in the system.

The `tst-slk` command provides several methods for testing signaling links. The `loopback` parameter provides the ability to select *lxvr* (local transceiver), *oam*, *line*, *payload*, and *sltc* loopback tests. The command will be rejected if a loopback test is not compatible with the link type.

- For low-speed links, the *lxvr* and *sltc* tests are allowed.
- For high-speed links (ATM, E5-ATM-B), the *lxvr*, *oam*, *line*, *payload*, and *sltc* tests are allowed.
- For SS7IPGW and IPGWl DCMs, the `tst-slk` command is not supported.
- For LIME1 or LIMT1 cards, or for the E5-ENET-B cards running the IPSP application, only the `loopback=sltc` test is allowed.
- The E5-E1T1-B cards can function as either an E1 MIM card or a T1 MIM card, depending on how the card is provisioned. The `loopback=sltc` test is allowed.

The `act-lbp` command activates test on one or more loopback points for testing data signaling link elements in one CCS7 transmission path. The maximum number of loopback points is 32.

For a single loopback point test, the parameters can be entered on the command line. If the parameters are not entered at the command line, the LFS database is used. For multiple loopback point tests, the LFS database must be used.

The `ent-lbp` command is used to create the loopback points in the LFS database. The LBPs may be entered in any order.

See the command descriptions in this manual for details on entering parameters and using the commands.

Table A-10 Loopback Testing Commands and Functions

Command/Function	Card Supported	Testing limits
<p><i>act/dact-cdl NETWORK payload low-level loopback test.</i></p> <p>Link State-Down</p> <p>Equipment tested-All links on the T1 port</p> <p>Purpose-tests connectivity between 2 nodes at the T1 level with some isolation for the LIU and/or framer</p> <p>Description-Tests near-end card for line, lxr, and network payload loopback and far-end card for line and payload loopback.</p> <p>Typical use-Tests connectivity</p>	<ul style="list-style-type: none"> • E5-E1T1-B • E5-ATM-B 	1024 concurrent tests per system
<p><i>ent-lbp OAM Database for Multiple LFS points per LFS tests</i></p> <p>No impact on link behavior other than allowing multiple points</p>	<ul style="list-style-type: none"> • E5-E1T1-B (T1 mode) (channelized) 	32 points per card no limit on # of cards
<p><i>act/dact-lbp EAGLE initiated Level 1 DS0 LFS tests</i></p> <p>Link State-Down</p> <p>Equipment tested-Level 1 element(s) in a signaling path</p> <p>Purpose-Test the error rates of a signaling path</p> <p>Description-Sends loopback code to establish loopback, then performs BERT test for a specified period of timed</p> <p>Typical use-Validates signaling path has acceptable error rate</p>	<ul style="list-style-type: none"> • E5-E1T1-B (T1 mode) (channelized) 	1024 concurrent tests per system

Table A-10 (Cont.) Loopback Testing Commands and Functions

Command/Function	Card Supported	Testing limits
<p>Remote Loopback FAR END <i>initiated DS0 LFS Test</i> Link State-Up or down Equipment tested-Near end hardware up to level 2 and far end hardware level 1 interface Purpose-Auto-Loopback a BERT test to the far end Description-When receiving a loopback code, deactivate the link and go into loopback Typical use-Remotely tests the far end with standard DS0 BERT tests</p>	<ul style="list-style-type: none"> E5-E1T1-B (channelized) 	no limit on # of cards
<p><code>tst-slk</code> SLTC EAGLE <i>initiated Level 3 SS7 SLT</i> Link State-Up Equipment tested-Near and far end up to Level 3 Purpose-Test the entire path to the far end at Level 3 Description-Sends an SLTM out and expects an SLTA back Typical use-Validates connectivity of a signaling path</p>	<ul style="list-style-type: none"> E5-E1T1-B IPGW E5-ATM-B 	1024 concurrent link tests per system
<p><code>tst-slk</code> OAM EAGLE <i>initiated Level 1 ATM test</i> Link State-Down Equipment tested-Near and far end level 1 software and hardware including all hardware on the cards Purpose-Test the entire near and far end level 1 hardware by exchanging ATM cells Description-Sends OAM cells out to far end for 60 seconds if no errors, or 2 minutes if errors are received Typical use-Verifies ATM cells can be exchanged between 2 signaling points</p>	<ul style="list-style-type: none"> E5-ATM-B 	1024 concurrent link tests per system

Table A-10 (Cont.) Loopback Testing Commands and Functions

Command/Function	Card Supported	Testing limits
<p><code>tst-slk</code> LINE <i>EAGLE</i> <i>initiated Level 1-2 ATM test</i> Link State-Down Equipment tested-Near end hardware up to level 2 and far end hardware level 1 interface Purpose-Hardware continuity check between near and far end Description-The following steps occur:</p> <ol style="list-style-type: none"> 1. Device under test (DUT) sends T1 Payload bit-oriented code (BOC) to remote device 2. Remote device receives BOC and programs hardware 3. DUT attempts level 2 alignment 4. If link aligns (level 2), test passes, else test fails 5. DUT sends BOC to remote device to remove loopback 6. Remote device receives BOC and re-programs hardware 	<ul style="list-style-type: none"> • E5-ATM-B (T1 mode) 	1024 concurrent link tests per system


 **N**
o
t
e
:
 If
 t
 h
 e
 D
 U
 T
 b
 o
 o

Table A-10 (Cont.) Loopback Testing Commands and Functions

Command/Function	Card Supported	Testing limits
tsinthemiddleequence, activate order-activate the link, and		

Table A-10 (Cont.) Loopback Testing Commands and Functions

Command/Function	Card Supported	Testing limits
<p>the remote device returns status to the originating program.</p>		

Typical use-Checks continuity from the near end level 2 hardware to the level 1 interface at the far end for a link in line timing

Table A-10 (Cont.) Loopback Testing Commands and Functions

Command/Function	Card Supported	Testing limits
<p><code>tst-slk PAYLOAD EAGLE</code> <i>initiated Level 1-2 ATM test</i></p> <p>Link State-Down</p> <p>Equipment tested-Near end hardware up to level 2 and far end hardware level 1 interface</p> <p>Purpose-Hardware continuity check between near and far end</p> <p>Description-The following steps occur:</p> <ol style="list-style-type: none"> 1. Device under test (DUT) sends T1 Payload bit oriented code (BOC) to remote device 2. Remote device receives BOC and programs hardware 3. DUT attempts level 2 alignment 4. If link aligns (level 2), test passes, else test fails 5. DUT sends BOC to remote device to remove loopback 6. Remote device receives BOC and re-programs hardware 	<ul style="list-style-type: none"> • E5-ATM-B (T1 mode) 	<p>1024 concurrent link tests per system</p>


 **N**
o
t
e
:
I
f
t
h
e
D
U
T
b
o
o

Table A-10 (Cont.) Loopback Testing Commands and Functions

Command/Function	Card Supported	Testing limits
tsinthemiddles of sequence, activate the order - activate the link, and		

Table A-10 (Cont.) Loopback Testing Commands and Functions

Command/Function	Card Supported	Testing limits
t h e r e m o t e d e v i c e r e t u r n s t o t h e o r i g i n a l p r o g r a m m i n g . 		

Typical use-Checks continuity from the near end level 2 hardware to the level 1 interface at the far end for a link in master timing

Table A-10 (Cont.) Loopback Testing Commands and Functions

Command/Function	Card Supported	Testing limits
<p><code>tst-slk</code> LXVR (DS1 loop) <i>EAGLE initiated Level 1</i> <i>Internal card loopback</i></p> <p>Link State-Down Equipment tested-Local card Purpose-Test the near end card only Description-Test the near end card up through level 2. Typical use-Validates the card on the Eagle as good</p>	<ul style="list-style-type: none"> • E5-E1T1-B • E5-ATM-B 	1024 concurrent link tests per system
<p><code>tst-e1</code> LINE, LXVR (DS1 loop), <i>PAYLOAD EAGLE Initiated E1 Port test</i></p> <p>Link State-Down Equipment tested-All links on the E1 port Purpose-Tests connectivity between 2 nodes at the E1 level with some isolation for the LIU and/or framer Description-Tests near-end card for line, lxvr, and payload loopback Typical use-Tests connectivity</p>	<ul style="list-style-type: none"> • E5-E1T1-B 	1024 concurrent tests per system
<p><code>tst-t1</code> LINE, LXVR (DS1 loop), <i>PAYLOAD, FELINE, FEPAYLOAD EAGLE initiated T1 port test</i></p> <p>Link State-Down Equipment tested-All links on the T1 port Purpose-Tests connectivity between 2 nodes at the T1 level with some isolation for the LIU and/or framer Description-Tests near-end card for line, lxvr, and payload loopback and far end card for line and payload loopback Typical use-Tests connectivity</p>	<ul style="list-style-type: none"> • E5-E1T1-B (T1 mode) 	1024 concurrent tests per system

Figure A-1 ATM Loopback Tests

